


FlexGuard® 5853 Wireless Glassbreak Detector Installation Instructions


Refer to Supplemental Information (next page) for complete descriptions of these installation steps

5853 Glassbreak Detector Internal Parts

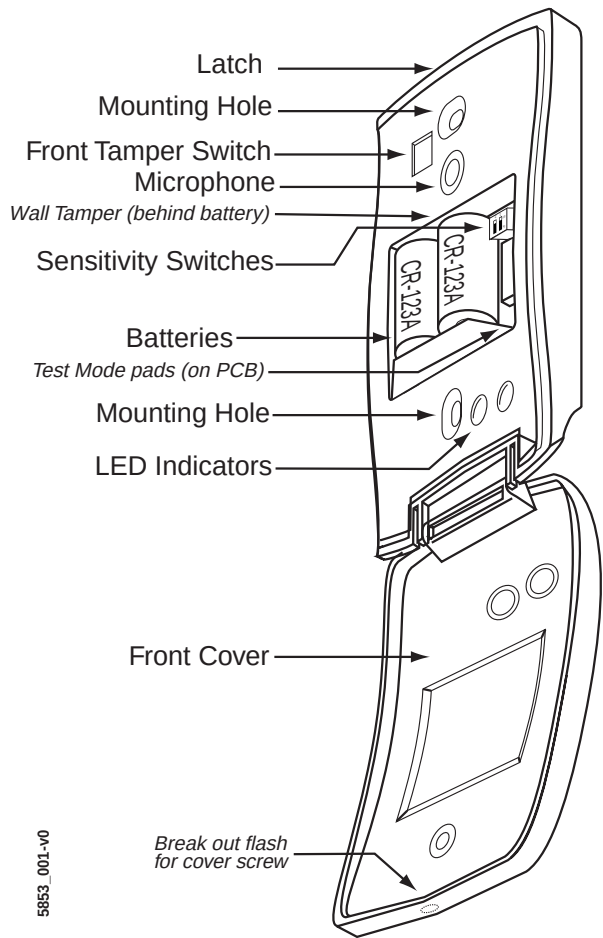


Connect Batteries


Remove pull tab to connect batteries

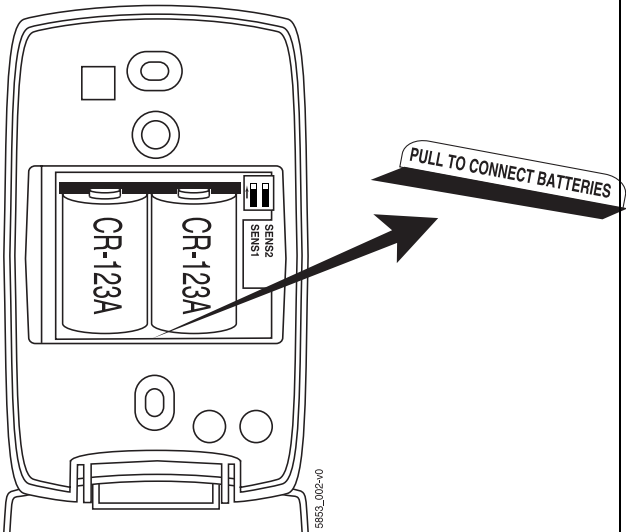

Select Mounting Location

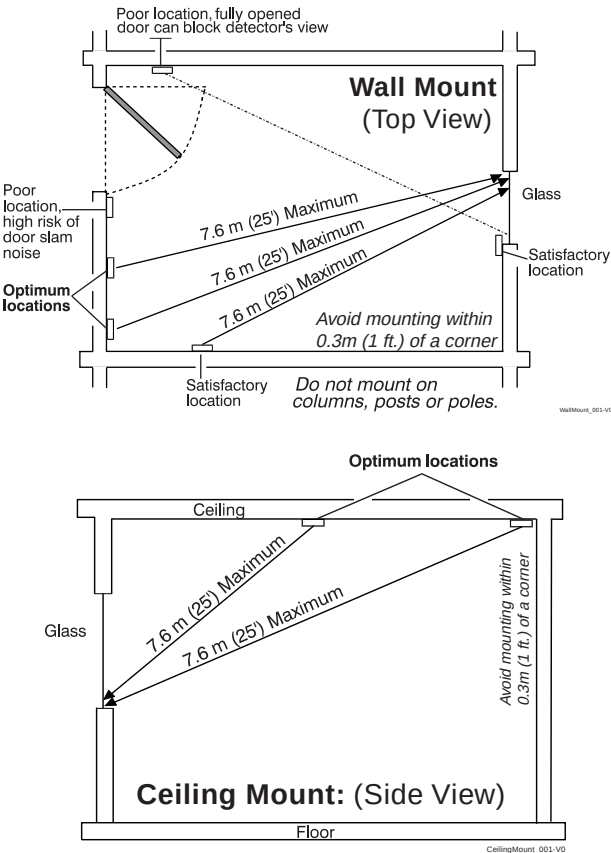

Set Sensitivity (Range)

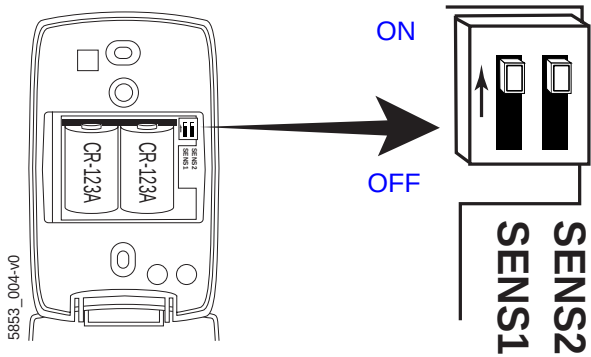

SENS1 & SENS2 configure sensitivity

SENSITIVITY	APPROXIMATE RANGE	SENS1	SENS2
MAX	25 ft (7.6m)	OFF	OFF
MEDIUM	15 ft (4.6m)	ON	OFF
LOW	10 ft (3m)	OFF	ON
LOWEST	5 ft (1.5m)	ON	ON

Enroll Detector


Refer to text and control panel's installation instructions.

When programming the transmitter, specify:

- Input Type = 3 (Supervised RF)
- Loop Number = 1


Mount Detector

- Use mounting holes as a template to mark mounting locations on ceiling or wall.
- If using the optional wall tamper**, remove the batteries, then mark the rear tamper location through its mounting hole.
- Mount detector using appropriate hardware.
- Close detector cover when finished.

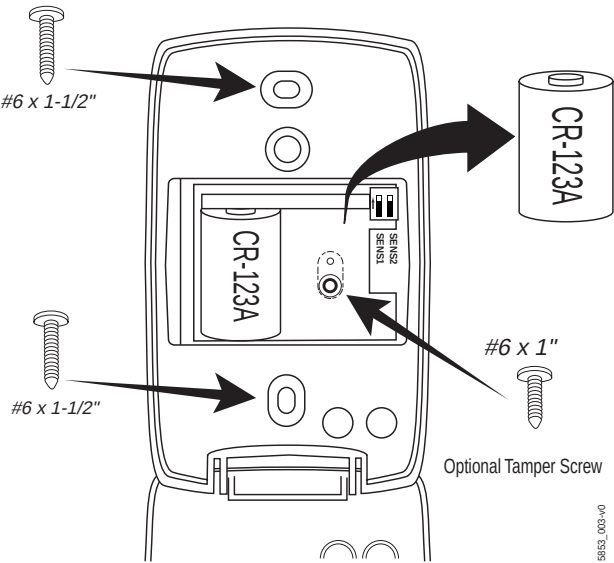

Test Detector Installation

Enter Test Mode using GBS-7 (see text). To enter Test Mode manually, short Test Mode pads (as below).

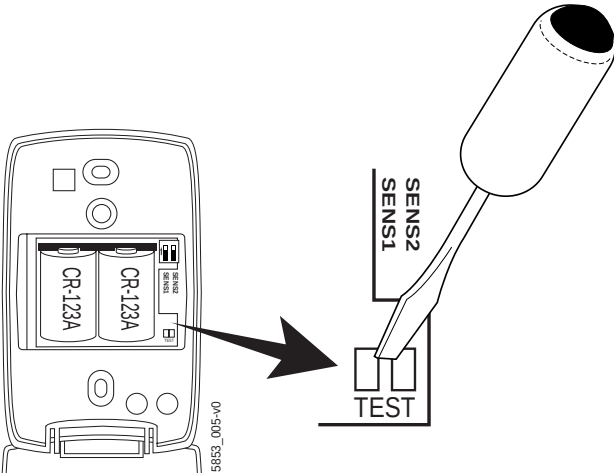

Install Cover Screw (optional)

