





User’s manual
DM521/DM521-2
Safe & Sound®
Digital Audio Monitor

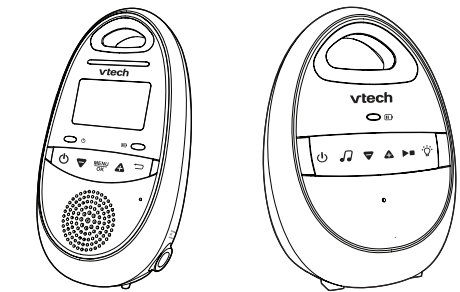

What’s in the box

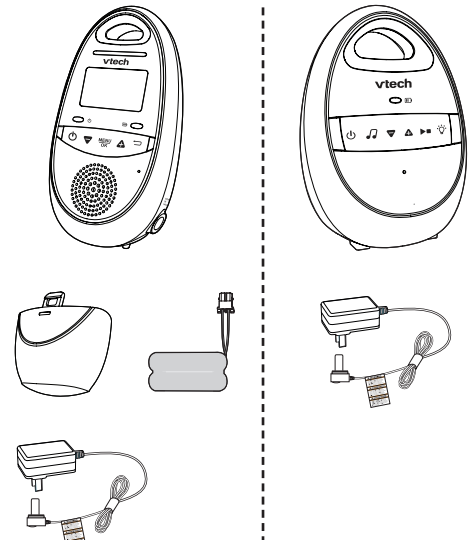

1 set for DM521;
2 sets for DM521-2

Install the battery

The parent unit runs on rechargeable battery or AC power. To continuously monitor your baby, make sure you use both battery and AC power at the same time. With the battery alone, the parent unit can cordlessly run for a short time only.

- NOTES**
- Use only the battery supplied with this product.
 - If the parent unit will not be used for a long time, disconnect and remove the battery to prevent possible leakage.
 - Without AC power charging, the battery gradually discharges, even when the parent unit is switched off.

Congratulations

on purchasing your new VTech product. Before using this product, please read **Important safety instructions**.

For support, shopping, and everything new at VTech, visit our website at www.vtechphones.com.


Register online to get an additional 3-month warranty!

Visit www.vtechphones.com.


Registration
Register your product online for enhanced warranty support.

Product news
Learn about the latest VTech products.

Install the battery as shown below.

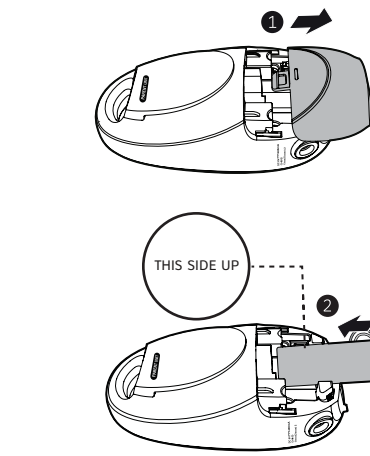

- NOTE**
- Make sure the supplied rechargeable battery with the label **THIS SIDE UP** facing up.

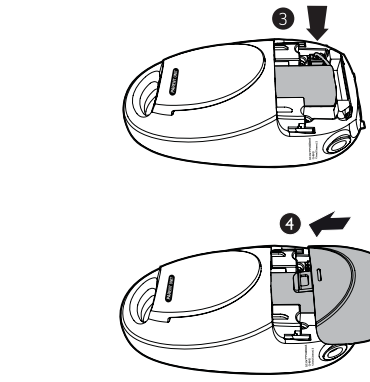


Replace the battery

To replace the battery, unplug the battery connector from the socket, and then pull the battery out of the battery compartment. Follow the steps above to install the battery.

Connect and charge the battery

- NOTES**
- Use only the power adapters supplied with this product.
 - Make sure the electrical outlets are not controlled by wall switches.
 - The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
 - Make sure the parent unit, the baby unit and the power adapter cords are out of reach of children.

Connect the baby monitor

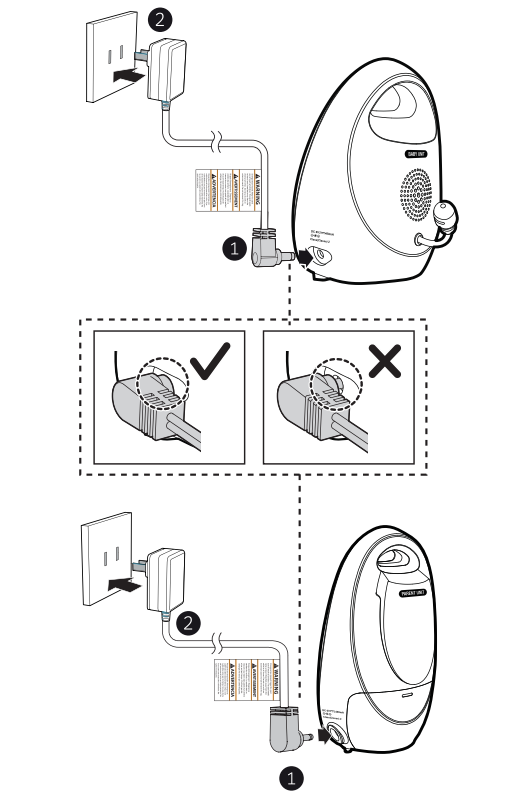

Charge the parent unit battery

Once you have connected the parent unit or installed its battery, it powers on automatically. The battery icon indicates the battery status (see the following table).

- NOTES**
- The parent unit battery is fully charged after 11 hours of continuous charging.
 - It takes longer to charge the battery when the parent unit is turned on. To shorten the charging time, turn the parent unit off while charging.
 - The standby time varies depending on the sensitivity level you set, your actual use and the age of the battery.

Battery indicators	Battery status	Action
The battery icon is off.	No battery is installed. The parent unit can be used only when it is connected to AC power.	Install the parent unit battery. Charge without interruption (at least 30 minutes).
LOW BATTERY and flash on the screen. The light flashes.	The battery has very little charge and may be used for only a short time.	Charge without interruption (about 30 minutes).
The battery icon becomes solid .	The battery is fully charged.	To keep the battery charged, connect it to AC power when not in use.


Before use

- NOTE**
- This baby monitor is intended as an aid. It is not a substitute for proper adult supervision, and should not be used as such.

Test your audio monitor

You may test the baby monitor before initial use, and at regular times thereafter.

- CAUTION**
- For hearing protection, make sure the parent unit is more than 2 meters (6.5 feet) away from both baby units. If you hear any high-pitched noise, move the parent unit further until the noise stops. You can also press on the parent unit to lower or mute the noise.

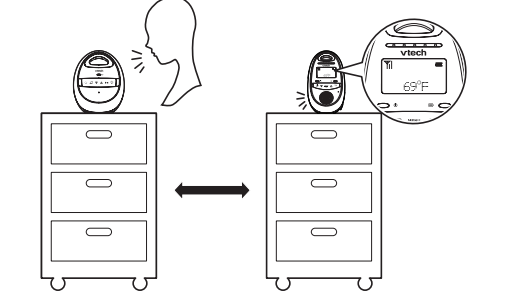


- Make sure your baby unit and parent unit are on.
 - If no connection between them, the parent unit displays **NOT LINKED** and flashes.
 - Move the parent unit closer to the baby unit to re-link.
- Speak towards the microphone of the baby unit.
 - You will hear the sound at the parent unit, and see the visual sound indicators light up.

- TIP**
- Increase the speaker volume of the parent unit if you cannot hear the sounds transmitted from the baby units.


Positioning the baby monitor

- CAUTIONS**
- Keep the baby unit out of the reach of the baby. Never place or mount the baby unit inside the baby’s crib or playpen.

- Place the baby unit more than 1 meter (3 feet) away from your baby.

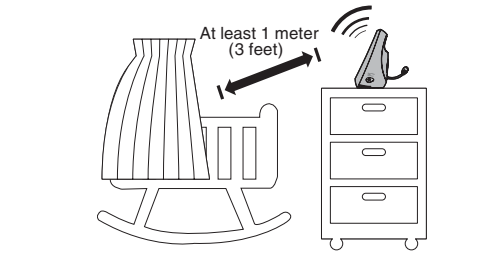

- Place the parent unit more than 2 meters (6.5 feet) away from the baby unit.

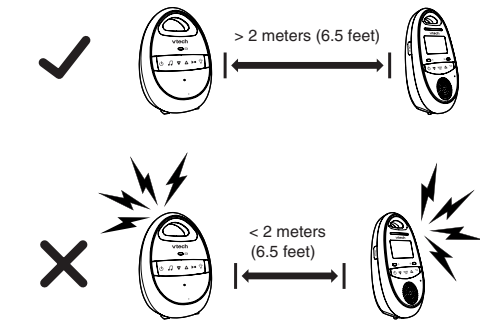


- CAUTION**
- The default volume of your parent unit is **VOLUME 3**. If you experience high-pitched screeching noise from your baby monitor while positioning:
 - Make sure your baby units and parent unit are more than 2 meters (6.5 feet) apart, OR
 - Turn down the volume of your parent unit.

Operating range

The operating range of the baby monitor is up to 300 meters (1,000 feet) outdoors or 50 meters (160 feet) indoors. The actual operating range may vary depending on the environmental conditions, and other interferences such as walls, doors, and other obstructions.


Overview

Baby unit overview

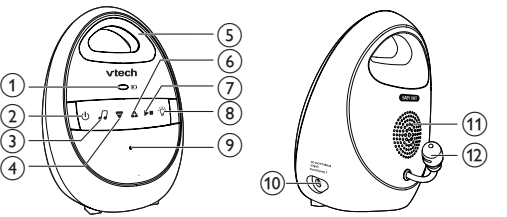

1	Power indicator Light on when the baby unit is turned on.
2	Power on/off Press and hold to power on or off.
3	Lullaby - Press to start playing the lullaby. - Press again to skip to the next lullaby.
4	Volume down Press to decrease the talkback volume transmitted from your parent unit.
5	Night light - On when night light is turned on manually or triggered by sound. - Off when night light is turned off manually or after 15 minutes of silence.
6	Volume up Press to increase the talkback volume transmitted from your parent unit.
7	Lullaby - Press to start playing the lullaby. - Press again to stop playing the lullaby.
8	Night light on/off Press to turn the night light on or off.
9	Microphone
10	Power jack
11	Speaker
12	Temperature sensor

Parent unit overview

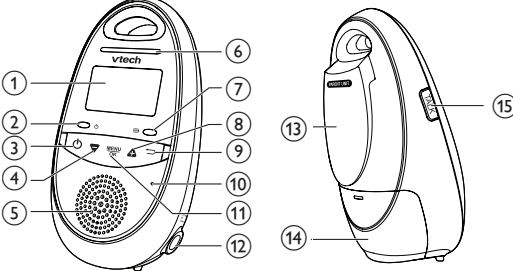

1	LCD display
2	Power indicator - Light on when the parent unit is powered on. - Light flashes when there is no link between baby unit and parent unit or parent unit is out of range from the baby unit.
3	Power on/off - Press and hold to power on or off. - While in a menu, press to return to idle screen.
4	Volume down - Press to decrease the speaker volume. - While in a menu, press to scroll down.
5	Speaker
6	Visual sound indicator ○ ○ ○ ○ ○ The visual sound indicator has two functions. One is to show the sound level detected by the baby unit. The other one is to show the volume level during speaker volume setting. Sound level detected by the baby unit ○ ○ ○ ○ ○ One to three green lights indicate a moderate sound level detected by the baby unit. ○ ○ ○ ○ ○ Additional red lights indicate a higher sound level detected by the baby unit (e.g. baby crying loudly). Speaker volume level ○ ○ ○ ○ ○ One to three green lights indicate Level 1 to Level 3 of the speaker volume setting. ○ ○ ○ ○ ○ Additional red lights indicate Level 4 to Level 5 of the speaker volume setting.

7	Battery level indicator - Light on when the battery is being charged. - Light flashes when the battery is low and needs charging. - Light off when no battery is installed.
8	Volume up - Press to increase the speaker volume. - While in a menu, press to scroll up.
9	Back - While in a menu, press to return to the previous screen. - Press to return to idle screen.
10	Microphone
11	MENU/OK - Press to enter the menu while idle. - While in a menu, press to choose an item, or save a setting.
12	Power jack
13	Belt clip
14	Battery compartment cover
15	TALK - Press and hold to talk to the baby unit; release to stop talking. - While in a menu, press to return to idle screen.

Parent unit display icons

	Connection status - displays when strong signal strength is detected between the baby unit and the parent unit. - displays when good signal strength is detected between the baby unit and the parent unit. - displays when moderate signal strength is detected between the baby unit and the parent unit. - displays when the weak signal strength is detected between the baby unit and the parent unit. - flashes when the link between the baby unit and the parent unit is lost.
	Lullaby Displays when the lullaby is playing
	Sound alert - Displays when the sound alert of the parent unit is turned on. - Flashes when there are loud sounds detected from the baby unit and the parent unit is in mute.
	Mute Displays when the volume is turned off.
	Night light Displays when the night light is
	Battery status - animates when the battery is charging. - displays solid when the battery is fully charged. - flashes when the battery is charged with AC adaptor, or charging failure. - flashes when the battery is in low level and needs charging. - No battery icon displays when there is no battery installed.


Parent unit display screen messages

LOW BATTERY	The parent unit uses only the rechargeable battery pack and it needs to be recharged.
NOT LINKED	The link between the parent unit and the baby unit is lost continuously for over 10 seconds.
SAVED	Your selection has been saved.
SEARCHING	The parent unit is out of range of the baby unit, or the baby unit is out of power.
TALK	The parent unit is talking to the baby unit.
TALKBACK	The other parent unit is talking to the baby unit.
HI TEMP	The temperature detected from the selected baby unit is above the set maximum temperature.
LOW TEMP	The temperature detected from the selected baby unit is below the set minimum temperature.
°F / °C	The real-time temperature detected by the baby unit in Celcius (°C) or Fahrenheit (°F) (e.g. 14°C or 57°F).

Using the baby monitor


Power on or off the baby unit

- Press and hold to power on the baby unit. The power indicator turns on.
- Press and hold again to power off the baby unit. The power indicator turns off.

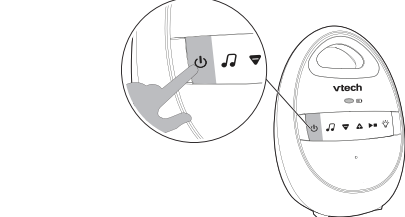

Power on or off the parent unit

- Press and hold to power on the parent unit. The power indicator and the screen turns on.
- Press and hold again to power off the parent unit. The power indicator and the screen turns off.

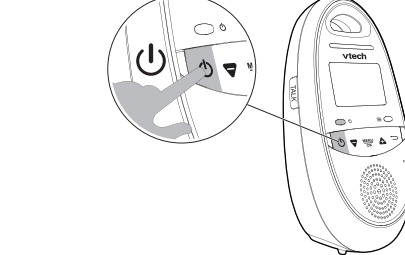

- NOTE**
- The parent unit powers on automatically once it is connected to AC power or battery installed. The baby unit also powers on automatically once connected to AC power.

Adjust the speaker volume for baby unit

- Press or on the baby unit at any time.

Adjust the speaker volume for parent unit

You can adjust the speaker volume from **VOLUME 1** to **VOLUME 5**, or turn it off. The speaker volume is preset to **VOLUME 3**.

- Press or when the parent unit is not in use.

When the speaker volume is set to off, the screen displays .

Adjust the sound sensitivity of the baby unit

You can choose to hear sounds from the baby unit all the time, or to hear sounds that exceed a certain level. You can use the parent unit to adjust the microphone sensitivity of your baby unit. The higher the sensitivity level, the more sensitive the baby unit is in detecting sounds for transmitting to the parent unit. The sound sensitivity is preset to **LEVEL 5**.

Display	Sensitivity	Description
Level 5	High sensitivity	High sensitivity level The parent unit speaker is constantly on, and you will hear all sounds (including background noises) from your baby’s room.
Level 4		Medium high sensitivity level The parent unit speaker turns on for soft babbling and louder sounds from your baby. It remains quiet when your baby sleeps soundly.
Level 3		Medium sensitivity level The parent unit speaker turns on for loud babbling and louder sounds from your baby. It remains quiet when your baby makes soft sounds.
Level 2		Medium low sensitivity level The parent unit speaker turns on for crying and louder sounds from your baby. It remains quiet when your baby makes soft sounds.
Level 1	Low sensitivity	Low sensitivity level The parent unit speaker turns on for loud crying or screeching sounds from your baby. It remains quiet when your baby makes soft sounds.

- Press **MENU** when the parent unit is not in use.
- Press **OK** to select **SENSITIVITY**.
- Press or to choose the sensitivity level.
- Press **OK** to confirm your selection. The screen displays **SAVED** and you hear a confirmation tone.

- NOTE**
- To enter the sensitivity menu of the parent unit, the baby unit must be turned on.

Language

You can select a language (English, French or Spanish) to be used in all screen displays. The language is preset to **ENGLISH**.

- Press **MENU** when the parent unit is not in use.
- Press or to choose **LANGUAGE**, then press **OK**.
- Press or to choose **ENGLISH, FRANCAIS or ESPANOL**.
- Press **OK** to confirm your selection. The screen displays **SAVED** and you hear a confirmation tone.

- NOTE**
- The language setting on each parent unit is independent.

Lullaby

You can select your desired lullaby to play on the baby unit. There are 5 lullabies for you to choose from.

- Press **MENU** when the parent unit is not in use.
- Press or to choose **LULLABY**, then press **OK**.
- Press or to choose your desired lullaby, the press **OK**.
- Press **OK** to select **PLAY** when the lullaby is not playing, or to select **STOP** when the lullaby is playing. The screen displays **SAVED** and you hear a confirmation tone.

Sound alert

Sound alert feature works only when the parent unit is in mute.

If you turn on the sound alert, the parent unit beeps when the baby unit detects sounds which light up four sound level indicators on the parent unit.

- When the sound alert of the parent unit is turned on, displays. The sound alert is preset to **OFF**.
- Press **MENU** when the parent unit is not in use.
 - Press or to choose **SOUND ALERT**, then press **OK**.
 - Press **OK** to select **ON?** when the current sound alert setting is **OFF**; or to select **OFF?** when the current sound alert setting is **ON**. The screen displays **SAVED** and you hear a confirmation tone.

- NOTE**
- The sound alert setting on each parent unit is independent.

Night light

You can turn on or off the night light by pressing the button manually on the baby unit. You can also use the parent unit to set the night light on the baby unit to automatically turn on when the baby unit detects a sound.

When the night light auto-on setting is turned on, displays. The default setting is preset to **OFF**.

- Press **MENU** when the parent unit is not in use.
- Press or to choose **NIGHTLIGHT**, then press **OK**.
- Press **OK** to select **ON?** when the current night light setting is **OFF**; or to select **OFF?** when the current night light setting is **ON**. The screen displays **SAVED** and you hear a confirmation tone.

- NOTES**
- To enter the night light menu of the parent unit, the baby unit must be turned on.
 - Night light will automatically turn off after 15 minutes of silence.

Temperature

Your baby unit measures the surrounding temperature. If the detected temperature falls beyond a desired temperature range, the parent unit will emit an alert tone. The screen will also display **HI TEMP** or **LOW TEMP**.

You can change the settings for the temperature format and range, or turn on or off the temperature alert.

Set the temperature format

You can set the temperature format to celsius (°C) or Fahrenheit (°F).

- Press **MENU** when the parent unit is not in use.
- Press or to choose **TEMPERATURE**, then press **OK**.
- Press **OK** to select **FORMAT**.
- Press **OK** to select **CELSIUS?** when the current temperature format is **FAHRENHEIT**; or to select **FAHRENHEIT?** when the current temperature format is **CELSIUS**. The screen displays **SAVED** and you hear a confirmation tone.

Set the temperature range

You can set the desired minimum and maximum room temperature of the baby unit, so that the parent unit will alert you when the temperature is too high or too low.

To set the minimum temperature:

- Press **MENU** when the parent unit is not in use.
- Press **▲** or **▼** to choose **TEMPERATURE**, then press **OK**.
- Press **▲** or **▼** to choose **MINIMUM**, then press **OK**.
- Press **▲** or **▼** to adjust the minimum temperature between **52 F** and **69 F** (**11 C** and **20 C**).
- Press **OK** to confirm your selection. The screen displays **Saved** and you hear a confirmation tone.

To set the maximum temperature:

- Press **MENU** when the parent unit is not in use.
- Press **▲** or **▼** to choose **TEMPERATURE**, then press **OK**.
- Press **▲** or **▼** to choose **MAXIMUM**, then press **OK**.
- Press **▲** or **▼** to adjust the maximum temperature between **70 F** and **86 F** (**21 C** and **30 C**).
- Press **OK** to confirm your selection. The screen displays **Saved** and you hear a confirmation tone.

Set the temperature alert

You can set whether the parent unit beeps whenever the temperature is out of the preset temperature range.

- Press **MENU** when the parent unit is not in use.
- Press **▲** or **▼** to choose **TEMPERATURE**, then press **OK**.
- Press **▲** or **▼** to choose **ALERT ON/OFF**, then press **OK**.
- Press **OK** to select **ON?** when the current temperature alert setting is **OFF**; or to select **OFF?** when the current temperature alert setting is **ON**. The screen displays **SAVED** and you hear a confirmation tone.

Reset to default

Use this feature to restore to the default settings. Restoring the default settings on one parent unit will also reset the shared settings for sensitivity and night light auto-on feature of the other parent unit.

- Press **MENU** when the parent unit is not in use.
- Press **▲** or **▼** to choose **RESET**, then press **OK**.
- When the parent unit displays **CONFIRM?**, press **OK**. The screen return to idle and you hear a confirmation tone.

Talk to the baby unit

You can broadcast messages from a parent unit to the baby unit and the other parent unit. If you have two parent units, you can use both of them at the same time to talk to the baby unit.

- Press and hold **TALK** on the side of the parent unit. The screen displays **TALK** when the voice connection to the baby unit is made. Speak towards the **Microphone** on the parent unit. Your voice is broadcast to the baby unit and the other parent unit.
-  **NOTE**
 - When a parent unit is talking to the baby unit, it is also broadcast to the other parent unit. However, sounds from the baby unit cannot be transmitted to the parent units at the moment.

General product care

To keep this product working well and looking good, follow these guidelines:

- Avoid putting it near heating appliances and devices that generate electrical noise (for example, motors or fluorescent lamps).
- DO NOT expose it to direct sunlight or moisture.
- Avoid dropping the product or treating it roughly.
- Clean with a soft cloth.
- DO NOT immerse the parent unit and the baby unit in water and do not clean them under the tap.
- DO NOT use cleaning spray or liquid cleaners.
- Make sure the baby unit and parent unit are dry before you connect them to the mains again.

Storage

When you are not going to use the baby monitor for some time, remove the rechargeable battery from the parent unit. Store the parent unit, the baby unit and the adapters in a cool and dry place.

Frequently asked questions

Below are the questions most frequently asked about the baby monitor. If you cannot find the answer to your question, visit our website at www.vtechphones.com or call 1 (800) 595-9511 for customer service.

Why does the baby monitor not respond normally?	Try the following (in the order listed) for common cure: 1. Disconnect the power to the baby unit and the parent units. 2. Remove the batteries in the parent units. Then, install the batteries again. 3. Wait a few minutes before connecting power back to the baby units and the parent unit. 4. Turn on the baby unit and the parent units. 5. Wait for the parent units to synchronize with the baby unit. Allow up to one minute for this to take place.
Why doesn't the screen of the parent unit go on when I switch on the unit?	Perhaps the rechargeable battery of the parent unit is empty and the parent unit is not connected to the power. Insert the appliance plug into the parent unit and put the adapter in a wall socket.
Why doesn't the POWER light of the baby unit go on when I switch on the unit?	Perhaps the baby unit is not connected to the power. Connect the baby unit to the power.
Why does the baby monitor produce a high-pitched noise?	The units may be too close to each other. - Move the parent unit away from the baby unit until the noise stops; OR - Turn down the volume of your parent unit.
Why does the parent unit react too quickly to other sounds?	The baby unit also detects other sounds than those of your baby. Adjust the sensitivity level to a lower level or adjust the speaker volume on the parent unit.

Why don't I hear a sound/ Why can't I hear my baby cry?	The volume of the parent unit may have set too low. Press ▲ to increase the volume level. You may have set a low sound sensitivity level. See Adjust the sound sensitivity of the baby unit to change the setting.
Why does the parent unit beep?	If the parent unit is in mute and the sound alert feature is on, there is sound detected from the baby unit. The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 6.5 feet). If the parent unit is powered by the provided battery, it may not have enough charge for the parent unit to perform normally. Charge the battery in the parent unit for up to 11 hours.
Why can't I establish a connection? Why is the connection lost every now and then? Why are there sound interruptions?	The baby units may be out of range. Move the parent unit closer to the baby units (but not less than 6.5 feet). Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible.

Important safety instructions

When using your equipment, basic safety precautions should always be followed to reduce the risk of fire, electric shock and injury, including the following:

- Follow all warnings and instructions marked on the product.
- Adult setup is required.
- This product is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.
- This product is not intended for use as a medical monitor.
- Do not use this product near water. For example, do not use it next to a bath tub, wash bowl, kitchen sink, laundry tub or swimming pool, or in a wet basement or shower.
- CAUTION:** Use only the batteries indicated in this manual. There may be a risk of explosion

If a wrong type of battery is used for the parent unit. Use only the supplied rechargeable battery or replacement battery pack (BT186692/ BT286692) for the parent unit. Do not dispose of batteries in a fire. They may explode. Dispose of used battery according to the information in **The RBRC® seal**.

- Use only the adapters included with this product. Incorrect adapter polarity or voltage can seriously damage the product. Baby unit power adapter: Input 100-120V AC 150mA 60Hz; Output: 6V DC 400mA; Parent unit power adapter: Input 100-120V AC 150mA 60Hz; Output: 6V DC 400mA.
- The power adapters are intended to be correctly oriented in a vertical or floor mount position. The prongs are not designed to hold the plug in place if it is plugged into a ceiling, under-the-table or cabinet outlet.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Unplug this product from the wall outlet before cleaning. Do not use liquid or aerosol cleaners. Use a damp cloth for cleaning.
- Unplug the power cords before replacing batteries.
- Do not cut off the power adapters to replace them with other plugs, as this causes a hazardous situation.
- Do not allow anything to rest on the power cords. Do not install this product where the cords may be walked on or crimped.
- This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply in your home, consult your dealer or local power company.
- Do not overload wall outlets or use an extension cord.
- Do not place this product on an unstable table, shelf, stand or other unstable surfaces.
- This product should not be placed in any area where proper ventilation is not provided. Slots and openings in the back or bottom of this product are provided for ventilation. To protect them from overheating, these openings must not be blocked by placing the product on a soft surface such as a bed, sofa or rug. This product should never be placed near or over a radiator or heat register.
- Never push objects of any kind into this product through the slots because they may touch dangerous voltage points or create a short circuit. Never spill liquid of any kind on the product.

- To reduce the risk of electric shock, do not disassemble this product, but take it to an authorized service facility. Opening or removing parts of the product other than specified access doors may expose you to dangerous voltages or other risks. Incorrect reassembling can cause electric shock when the product is subsequently used.
- You should test the sound reception every time you turn on the units or move one of the components.
- Periodically examine all components for damage.
- Be aware of possible loss of privacy while using public airwaves. Conversations may be picked up by other nursery monitors, cordless phones, scanners, etc.
- Children should be supervised to ensure that they do not play with the product.
- The product is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

SAVE THESE INSTRUCTIONS

Cautions

- Use and store the product at a temperature between 32°F and 104°F.
- Do not expose the product to extreme cold, heat or direct sunlight. Do not put the product close to a heating source.
- Batteries should not be exposed to excessive heat such as bright sunshine or fire.
- Make sure the baby unit(s) and the adapter cord(s) are always out of reach of the baby, at least 3 feet away from the baby or crib, to avoid a possible strangulation hazard.
- Never place the baby unit(s) inside the baby's crib or playpen. Never cover the baby unit(s) or parent unit with anything such as a towel or a blanket.
- Other electronic products may cause interference with your baby monitor. Try installing your baby monitor as far away from these electronic devices as possible: wireless routers, radios, cellular telephones, intercoms, room monitors, televisions, personal computers, kitchen appliances and cordless telephones.

Precautions for users of implanted cardiac pacemakers

Cardiac pacemakers (applies only to digital cordless devices):

Wireless Technology Research, LLC (WTR), an independent research entity, led a multidisciplinary evaluation of the interference between portable wireless devices and implanted cardiac pacemakers. Supported by the U.S. Food and Drug Administration, WTR recommends to physicians that:

Pacemaker patients

- Should keep wireless devices at least six inches from the pacemaker.
- Should NOT place wireless devices directly over the pacemaker, such as in a breast pocket, when it is turned ON.

WTR's evaluation did not identify any risk to bystanders with pacemakers from other persons using wireless devices.

Electromagnetic fields (EMF)

This VTech product complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user's manual, the product is safe to be used based on scientific evidence available today.

The RBRC® seal

The RBRC® seal on the nickel-metal battery indicates that VTech Communications, Inc. is voluntarily participating in an industry program to collect and recycle these batteries at the end of their useful lives, when taken out of service within the United States and Canada.

The RBRC® program provides a convenient alternative to placing used nickel-metal batteries into the trash or municipal waste, which may be illegal in your area.

VTech's participation in RBRC® makes it easy for you to drop off the spent battery at local retailers participating in the RBRC® program or at authorized VTech product service centers. Please call

1 (800) 8 BATTERY® for information on Ni-MH battery recycling and disposal bans/restrictions in your area. VTech's involvement in this program is part of its commitment to protecting our environment and conserving natural resources.



RBRC® and 1 (800) 8 BATTERY® are registered trademarks of Rechargeable Battery Recycling Corporation.

should not rely on any such modification.

State/Provincial Law Rights: This warranty gives you specific legal rights, and you may also have other rights, which vary from state to state or province to province.

Limitations: Implied warranties, including those of fitness for a particular purpose and merchantability (an unwritten warranty that the Product is fit for ordinary use) are limited to one year from the date of purchase. Some states/provinces do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. In no event shall VTech be liable for any indirect, special, incidental, consequential, or similar damages (including, but not limited to lost profits or revenue, inability to use the Product or other associated equipment, the cost of substitute equipment, and claims by third parties) resulting from the use of this Product. Some states/ provinces do not allow the exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you.

Please retain your original sales receipt as proof of purchase.

Except as provided by applicable law, you assume the risk of loss or damage during transit and transportation and are responsible for delivery or handling charges incurred in the transport of the Product(s) to the service location. VTech will return repaired or replaced Product under this limited warranty. Transportation, delivery or handling charges are prepaid. VTech assumes no risk for damage or loss of the Product in transit. If the Product failure is not covered by this limited warranty, or proof of purchase does not meet the terms of this limited warranty, VTech will notify you and will request that you authorize the cost of repair prior to any further repair activity. You must pay for the cost of repair and return shipping costs for the repair of Products that are not covered by this limited warranty.

What must you return with the Product to get warranty service?

- Return the entire original package and contents including the Product to the VTech service location along with a description of the malfunction or difficulty; and
- Include a "valid proof of purchase" (sales receipt) identifying the Product purchased (Product model) and the date of purchase or receipt; and
- Provide your name, complete and correct mailing address, and telephone number.

Other limitations

This warranty is the complete and exclusive agreement between you and VTech. It supersedes all other written or oral communications related to this Product. VTech provides no other warranties for this Product. The warranty exclusively describes all of VTech's responsibilities regarding the Product. There are no other express warranties. No one is authorized to make modifications to this limited warranty and you

number only signifies that the Industry Canada technical specifications were met. This product meets the applicable Industry Canada technical specifications.

RF radiation exposure statement

The baby unit complies with FCC RF radiation exposure limits set forth for an uncontrolled environment. The baby unit should be installed and operated with a minimum distance of 8 in (20 cm) between the baby unit and all persons' body. Use of other accessories may not ensure compliance with FCC RF exposure guidelines. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. This equipment complies also with Industry Canada RSS-102 with respect to Canada's Health Code 6 for Exposure of Humans to RF Fields.

California Energy Commission battery charging testing mode

This baby monitor meets the California Energy Commission (CEC) regulations for energy consumption. Your baby monitor is set up to comply with the energy-conserving standards right out of the box.

Follow the instructions to install and charge the battery. The CEC battery charging testing mode is activated while charging.

Even if the parent unit is paired to baby units, the CEC battery charging testing mode is activated while it is powered off and charging.

For cETL compliance only

Mesures de sécurité importantes

Lorsque vous utilisez votre appareil, vous devriez toujours suivre certaines mesures de précaution de base afin de réduire les risques d'incendie, d'électrocution et de blessures corporelles, dont ceux qui suivent:

- Observez toutes les instructions et mises en garde inscrites sur l'appareil.
- L'installation par un adulte est requise.
- Ce produit a été conçu pour être un dispositif d'appoint seulement. Il n'est pas le remplacement d'une supervision responsable et adéquate par un adulte et ne devrait pas être utilisé comme telle.
- Ce produit n'est pas conçu pour être utilisé en tant que moniteur médical.
- N'utilisez pas cet appareil près de l'eau ni de toute autre source d'humidité, par exemple, près d'une baignoire, cuve à lessive, évier de cuisine, dans un sous-sol humide ni près d'une piscine, dans un soussol humide ou une douche.

- MISE EN GARDE:** Il peut y avoir un risque d'explosion si vous utilisez le mauvais type de piles pour l'unité du parent. N'utilisez que le bloc-piles rechargeable inclus ou le bloc-piles de rechange (BT186692/BT286692). N'incinerez pas les piles. Celles-ci risqueraient d'exploser. Jetez les piles usées selon les renseignements suivant le **sceau du RBRC®**.
- N'utilisez que les adaptateurs inclus avec ce produit. L'utilisation d'un adaptateur dont la polarité ou la tension serait inadéquate risque d'endommager sérieusement le produit et mettre votre sécurité en péril. Adaptateur de l'unité du bébé: Entrée 100-120V CA 150 mA 60 Hz; Sortie : 6 V CC 400 mA. Adaptateur de l'unité du parent: Entrée 100-120V CA 150 mA 60 Hz; Sortie : 6 V CC 400 mA.
- Lorsqu'ils sont branchés dans une prise de courant, les adaptateurs secteur ont été conçus pour être orientés correctement, soit à la verticale ou au plancher. Les broches n'ont pas été conçues pour supporter le poids du bloc d'alimentation et le maintenir en place si celui-ci est branché dans une prise au plafond, sous une table ou dans un meuble.
- Pour les PRODUITS À BRANCHER À UNE PRISE DE COURANT, la prise de courant doit être installée près du produit, afin d'assurer une accessibilité sécuritaire à la prise de courant.
- Débranchez ce produit de la prise de courant avant de procéder au nettoyage. N'utilisez pas de nettoyeurs en aérosols. Utilisez un chiffon humide pour le nettoyer.
- Débranchez les cordons d'alimentation avant de remplacer le bloc-piles.
- Ne coupez pas les cordons d'alimentation pour remplacer les fiches, car ceci peut présenter un danger potentiel.
- Ne laissez aucun objet reposer ni appuyer sur le cordon d'alimentation. N'installez pas cet appareil dans un endroit où l'on risque d'écraser le cordon d'alimentation ou de le piétiner.
- Ne faites fonctionner cet appareil qu'avec le type d'alimentation indiqué sur l'étiquette. Si vous ne connaissez pas le type d'alimentation que vous possédez à votre domicile, consultez votre marchand ou votre compagnie locale d'électricité.
- Ne surchargez pas les prises de courant murales ni les rallonges électriques.
- Ne placez pas cet appareil sur un chariot, meuble, trépied, support de montage ni table chancelants.
- Les trous et ouvertures du boîtier, situés à l'arrière de l'appareil ou sous celui-ci, servent à aérer l'appareil. Pour l'empêcher de surchauffer, ne bloquez sous aucun prétexte ces ouvertures et

- n'empêchez pas l'aération adéquate de l'appareil en le plaçant sur un lit, divan, tapis ou toute autre surface similaire. De même, ne le positionnez pas à proximité ni au-dessus d'une source de chaleur ou d'un calorifère. De plus, ne placez pas l'appareil dans un endroit avant de vous assurer qu'il y ait une bonne circulation d'air.
- N'enfoncez jamais d'objets à travers les ouvertures de cet appareil, car ils pourraient entrer en contact avec des points de tension dangereux ou causer des courts-circuits qui peuvent dégénérer en incendies ou en risques d'électrocution. Ne renversez jamais de liquide dans ce produit.
- Afin de réduire les risques d'électrocution, ne démontez pas cet appareil, mais apportez-le dans un centre de service autorisé. L'ouverture du boîtier ou le retrait de toutes pièces que contient cet appareil, à l'exception de l'accès autorisé à certaines portes ou ouvertures, risque de vous exposer à des points de tension dangereux ou d'autres dangers. Un remontage incorrect peut par la suite présenter des risques d'électrocution.
- Vous devriez tester la réception chaque fois que vous mettez l'appareil en fonction.
- Examinez les composantes afin de vérifier si celles-ci ne sont pas endommagées.
- Soyez avisé de la perte de la confidentialité lorsque vous utilisez les ondes publiques. Les conversations peuvent être entendues par d'autres moniteurs de bébé, des téléphones sans fil, des scanners, etc.
- Les enfants devraient être supervisés afin de vous assurer qu'ils ne jouent pas avec l'appareil.
- Le produit n'est pas conçu pour être utilisé par des personnes (incluant des enfants) aux capacités physiques, sensorielles ou mentales réduites ou qui manquent d'expérience et de connaissances, à moins qu'on leur ait donné suffisamment de supervision ou d'instructions relativement à l'utilisation de l'appareil par une personne responsable de leur sécurité.

CONSERVEZ CES INSTRUCTIONS

Mises en garde

- Utilisez et entreposez le produit à une température entre 0° C (32° F) et 40° C (104° F).
- N'exposez pas cet appareil à des froids ou des chaleurs extrêmes, ainsi qu'à la lumière directe du soleil. Ne l'installez pas près d'une source de chauffage.
- Le bloc-piles ne doit pas être exposé à la chaleur excessive telle que la lumière du soleil ou au feu.



Specifications are subject to change without notice. © 2016 VTech Communications, Inc. All rights reserved. 02/16. DM521_CIB_V1.0

