




802.11ac/20MHz/MCS0/5720MHz/Ch144/Ant.1 (UNII-3)

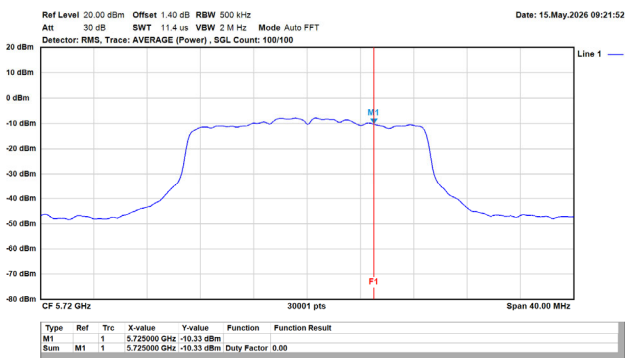


802.11ac/20MHz/MCS0/5745MHz/Ch149/Ant.1

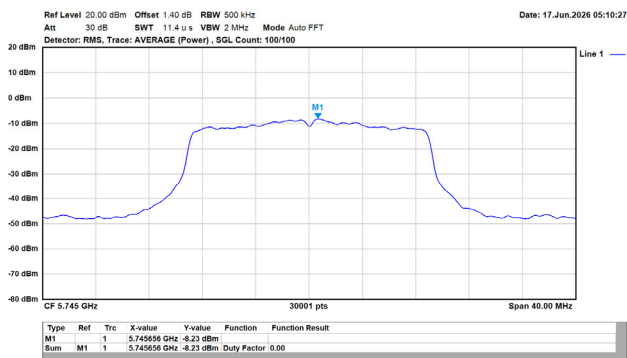


802.11ac/20MHz/MCS0/5785MHz/Ch157/Ant.1

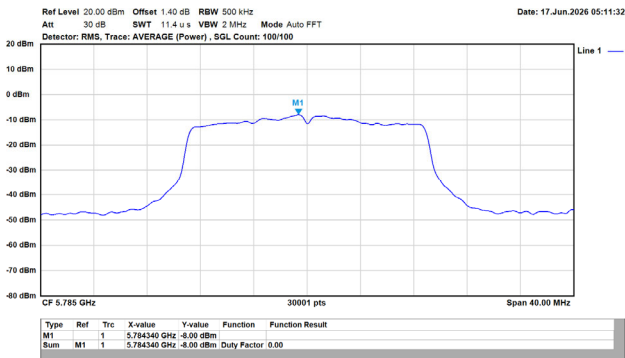


802.11ac/20MHz/MCS0/5825MHz/Ch165/Ant.1

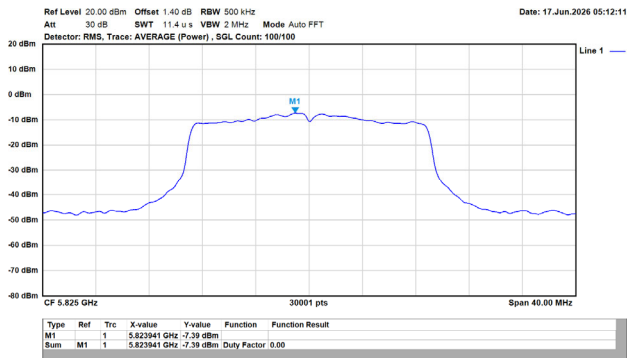


802.11ac/40MHz/MCS0/5710MHz/Ch142/Ant.1 (UNII-3)

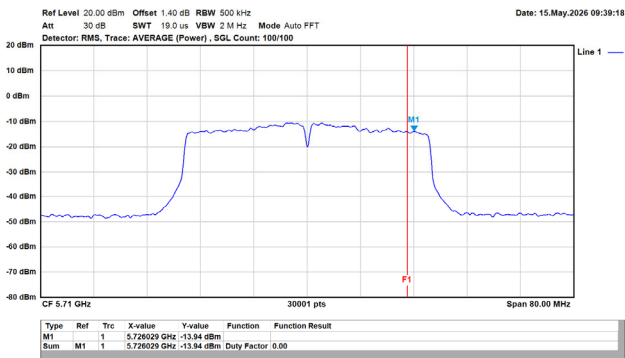


802.11ac/40MHz/MCS0/5755MHz/Ch151/Ant.1

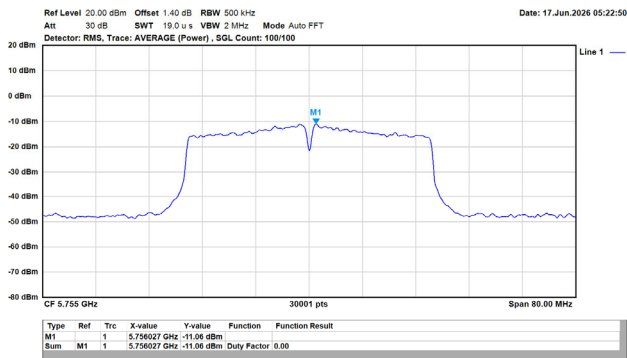


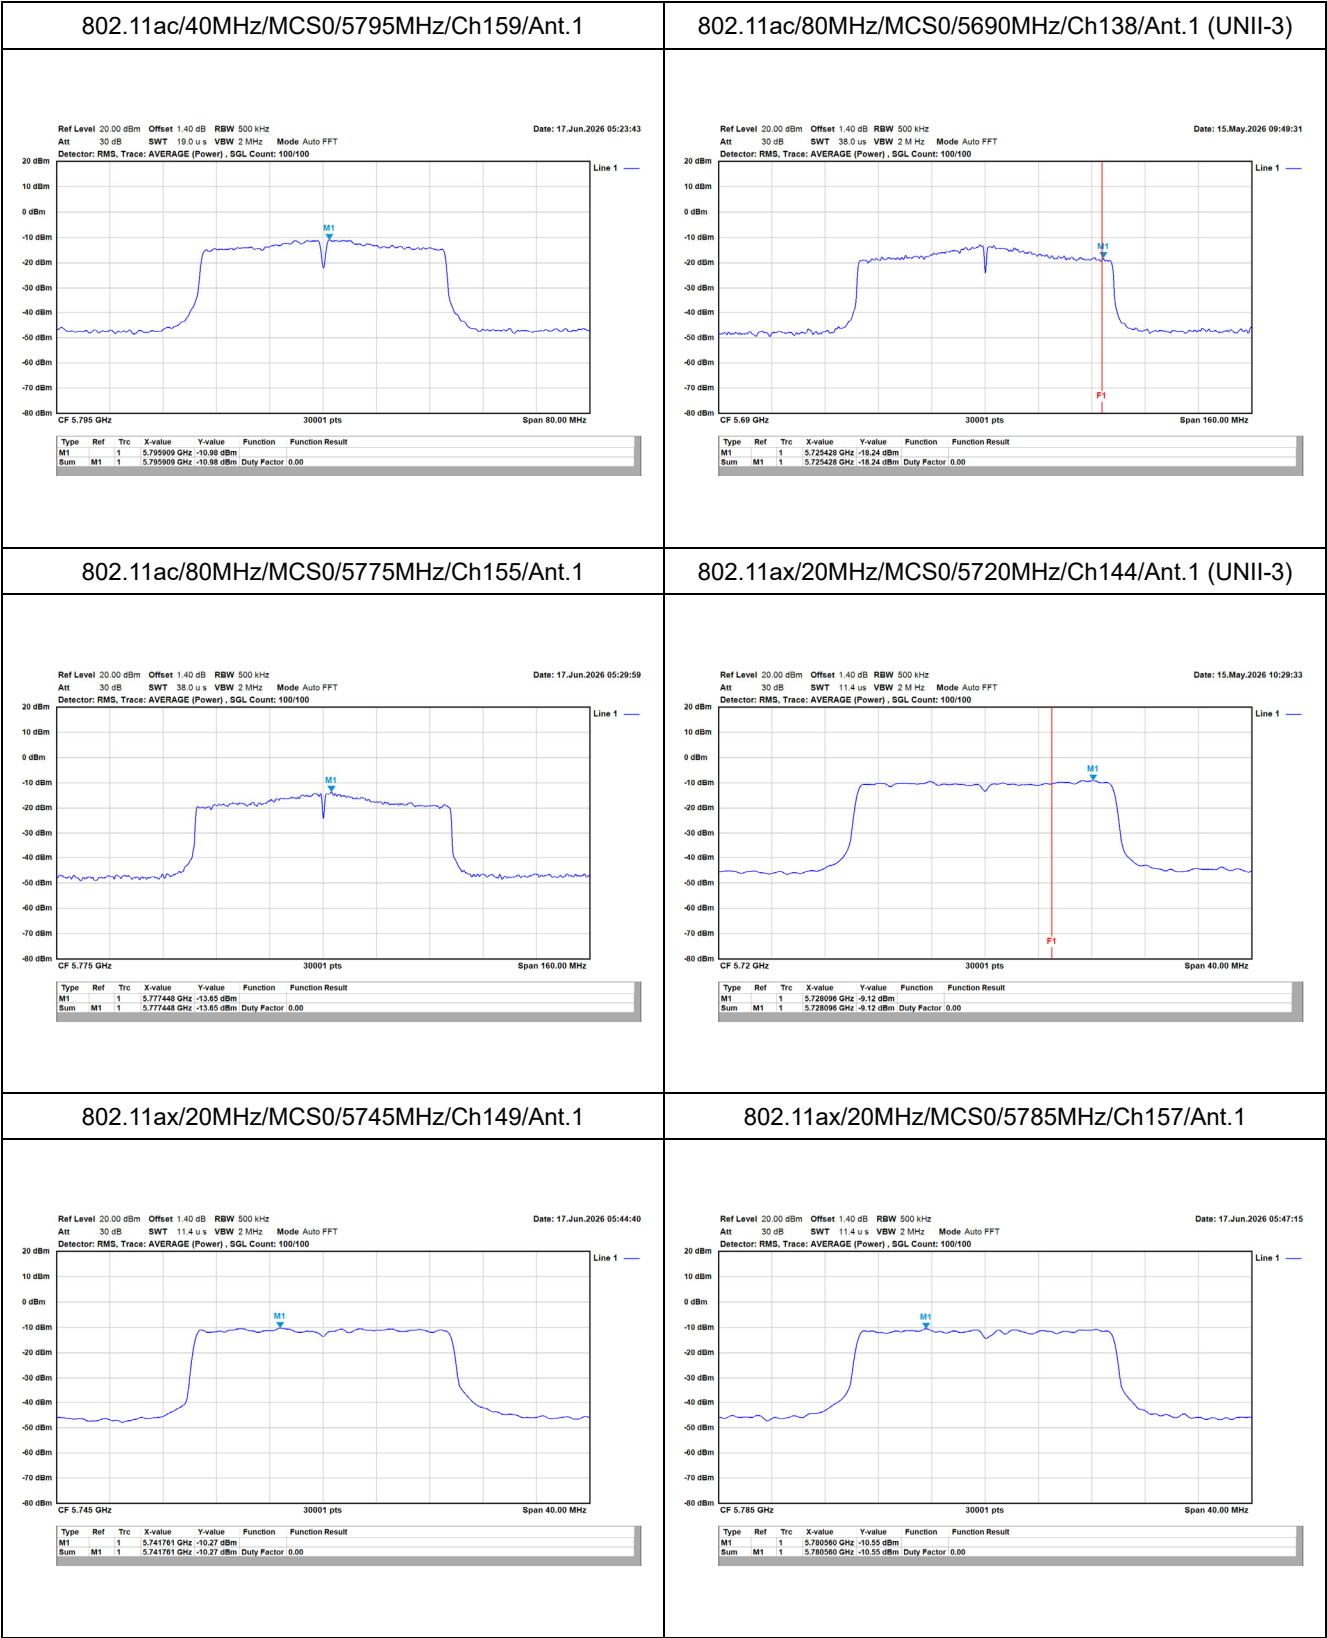


802.11ax/20MHz/MCS0/5825MHz/Ch165/Ant.1

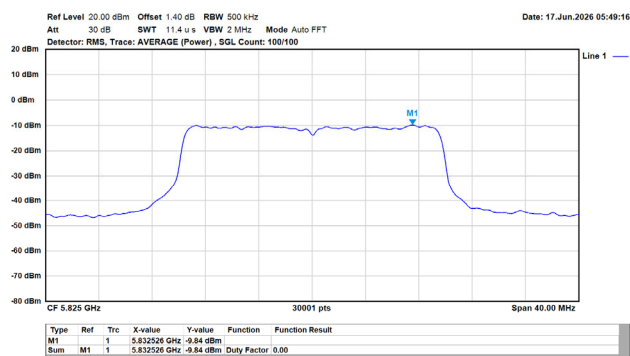


802.11ax/40MHz/MCS0/5710MHz/Ch142/Ant.1 (UNII-3)

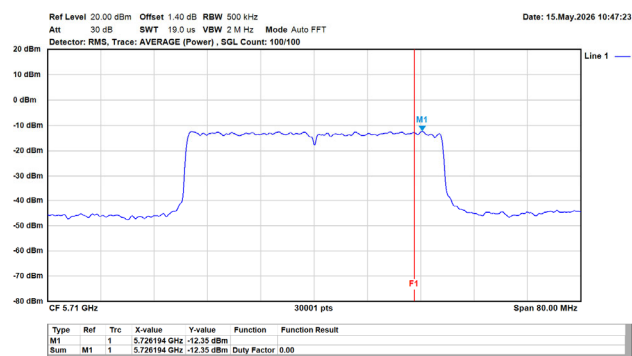


802.11ax/40MHz/MCS0/5755MHz/Ch151/Ant.1

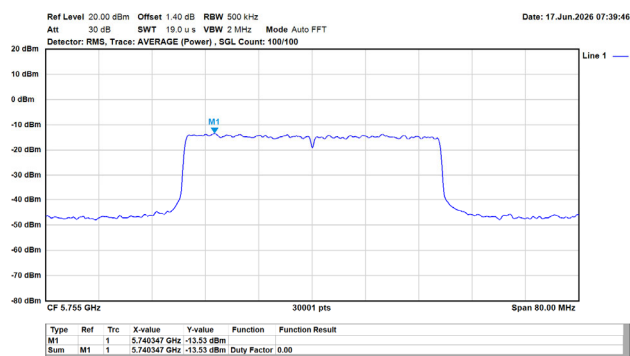


802.11ax/40MHz/MCS0/5795MHz/Ch159/Ant.1

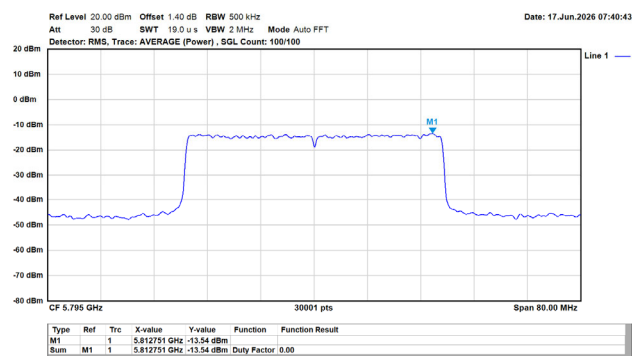

802.11ax/80MHz/MCS0/5690MHz/Ch138/Ant.1 (UNII-3)

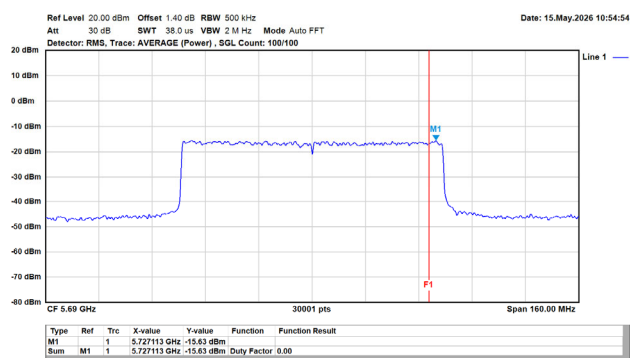


802.11ax/80MHz/MCS0/5775MHz/Ch155/Ant.1

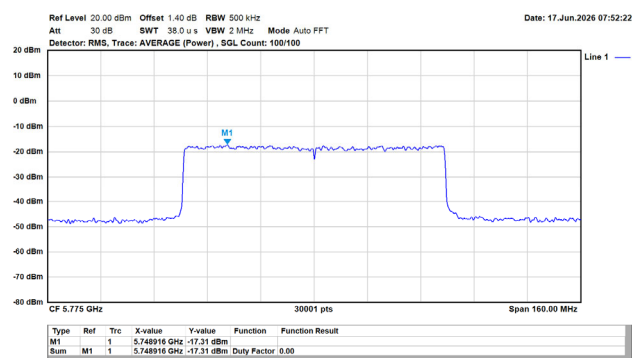

26-tone RU

Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/MHz)	Limit (dBm/MHz)	Result
802.11ax (20MHz)	5180	0.66	11.00	Pass
802.11ax (20MHz)	5320	0.99	11.00	Pass
	5500	1.46	11.00	Pass
	5700	0.16	11.00	Pass


Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/500kHz)	Limit (dBm/500kHz)	Result
802.11ax (20MHz)	5745	0.67	30.00	Pass
802.11ax (20MHz)	5825	0.89	30.00	Pass

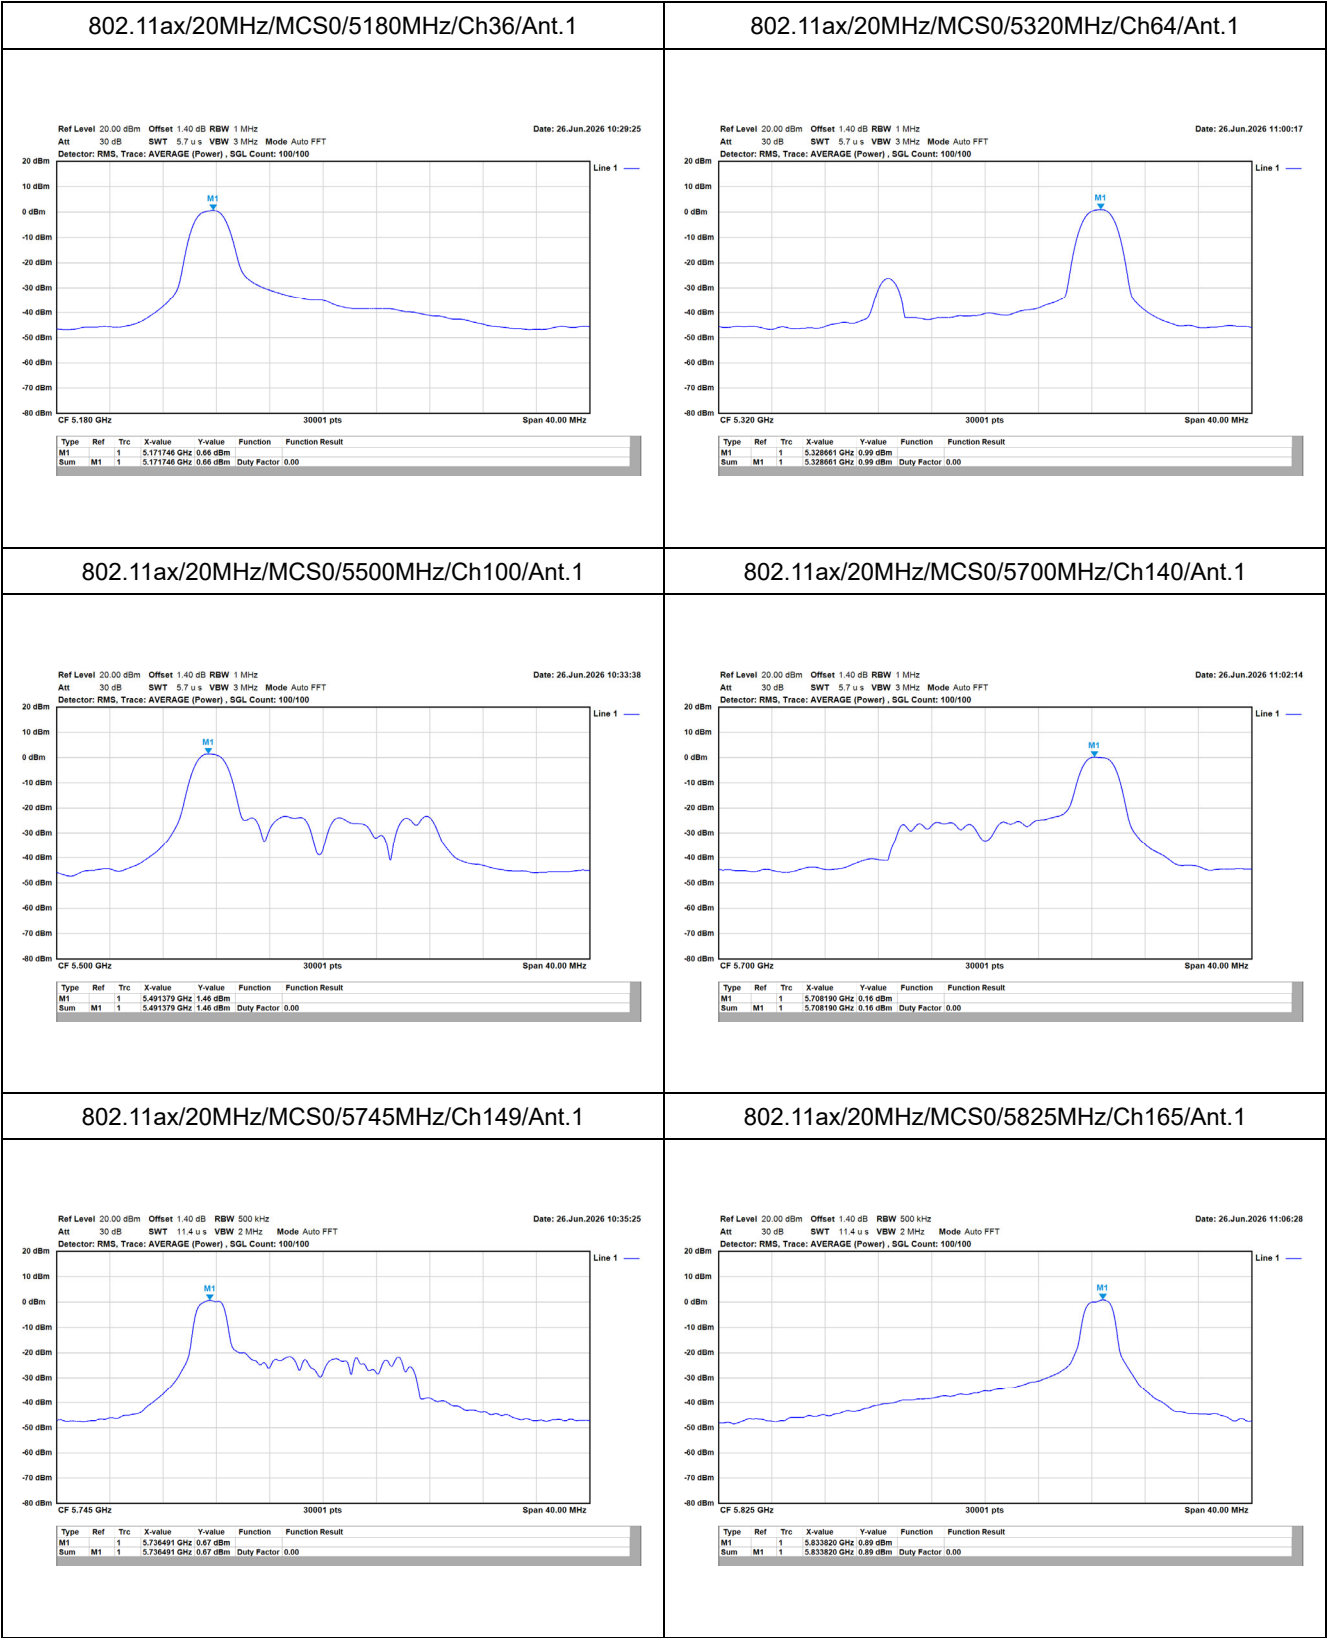

52-tone RU

Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/MHz)	Limit (dBm/MHz)	Result
802.11ax (20MHz)	5180	-2.96	11.00	Pass
802.11ax (20MHz)	5320	-3.50	11.00	Pass
	5500	-2.44	11.00	Pass
	5700	-1.37	11.00	Pass


Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/500kHz)	Limit (dBm/500kHz)	Result
802.11ax (20MHz)	5745	-2.76	30.00	Pass
802.11ax (20MHz)	5825	-4.04	30.00	Pass

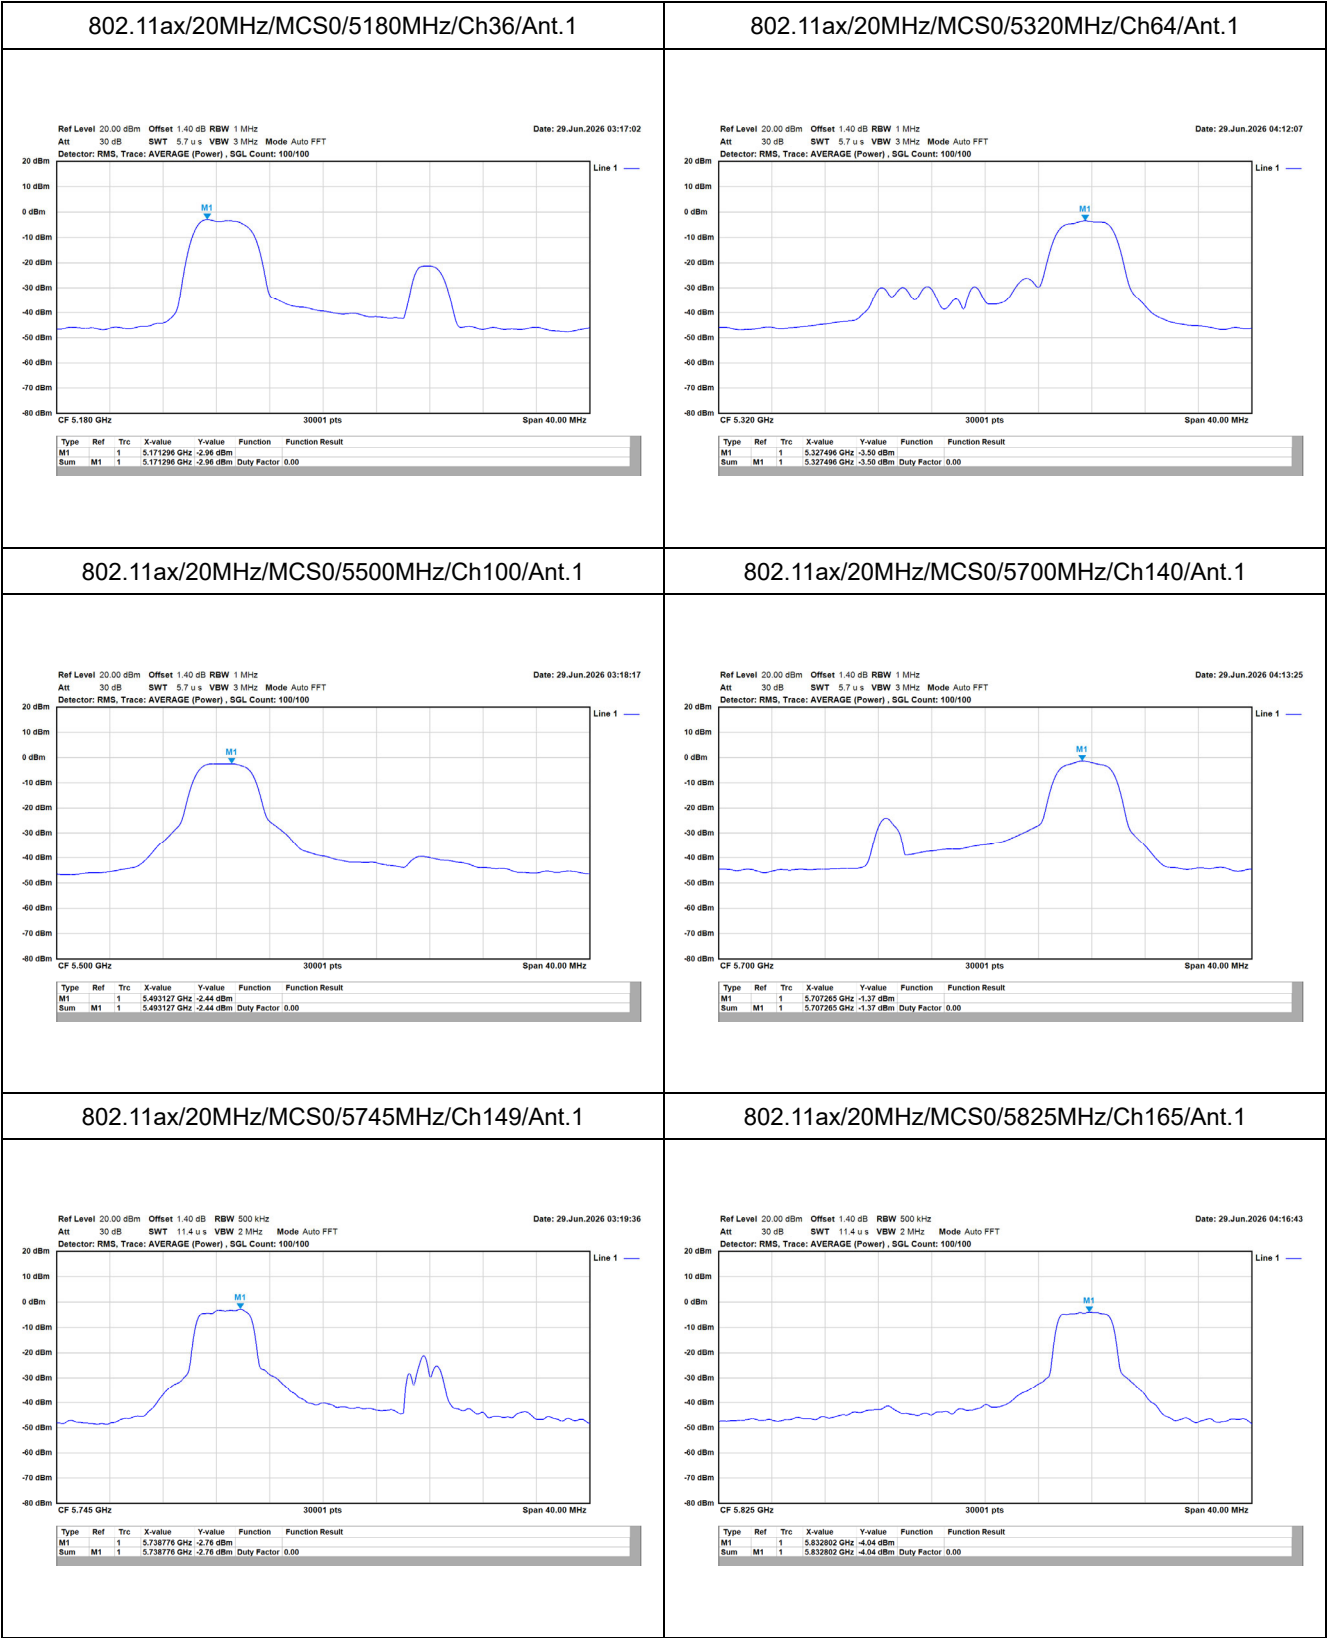


106-tone RU

Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/MHz)	Limit (dBm/MHz)	Result
802.11a (20MHz)	5180	-4.48	11.00	Pass
802.11a (20MHz)	5500	-3.05	11.00	Pass
802.11ax (20MHz)	5180	-4.72	11.00	Pass
	5320	-4.24	11.00	Pass
	5500	-2.86	11.00	Pass
	5700	-2.71	11.00	Pass


Modulation	Frequency (MHz)	Maximum Power Spectral Density (dBm/500kHz)	Limit (dBm/500kHz)	Result
802.11a (20MHz)	5745	-6.04	30.00	Pass
802.11ax (20MHz)	5745	-5.59	30.00	Pass
	5825	-5.65	30.00	Pass

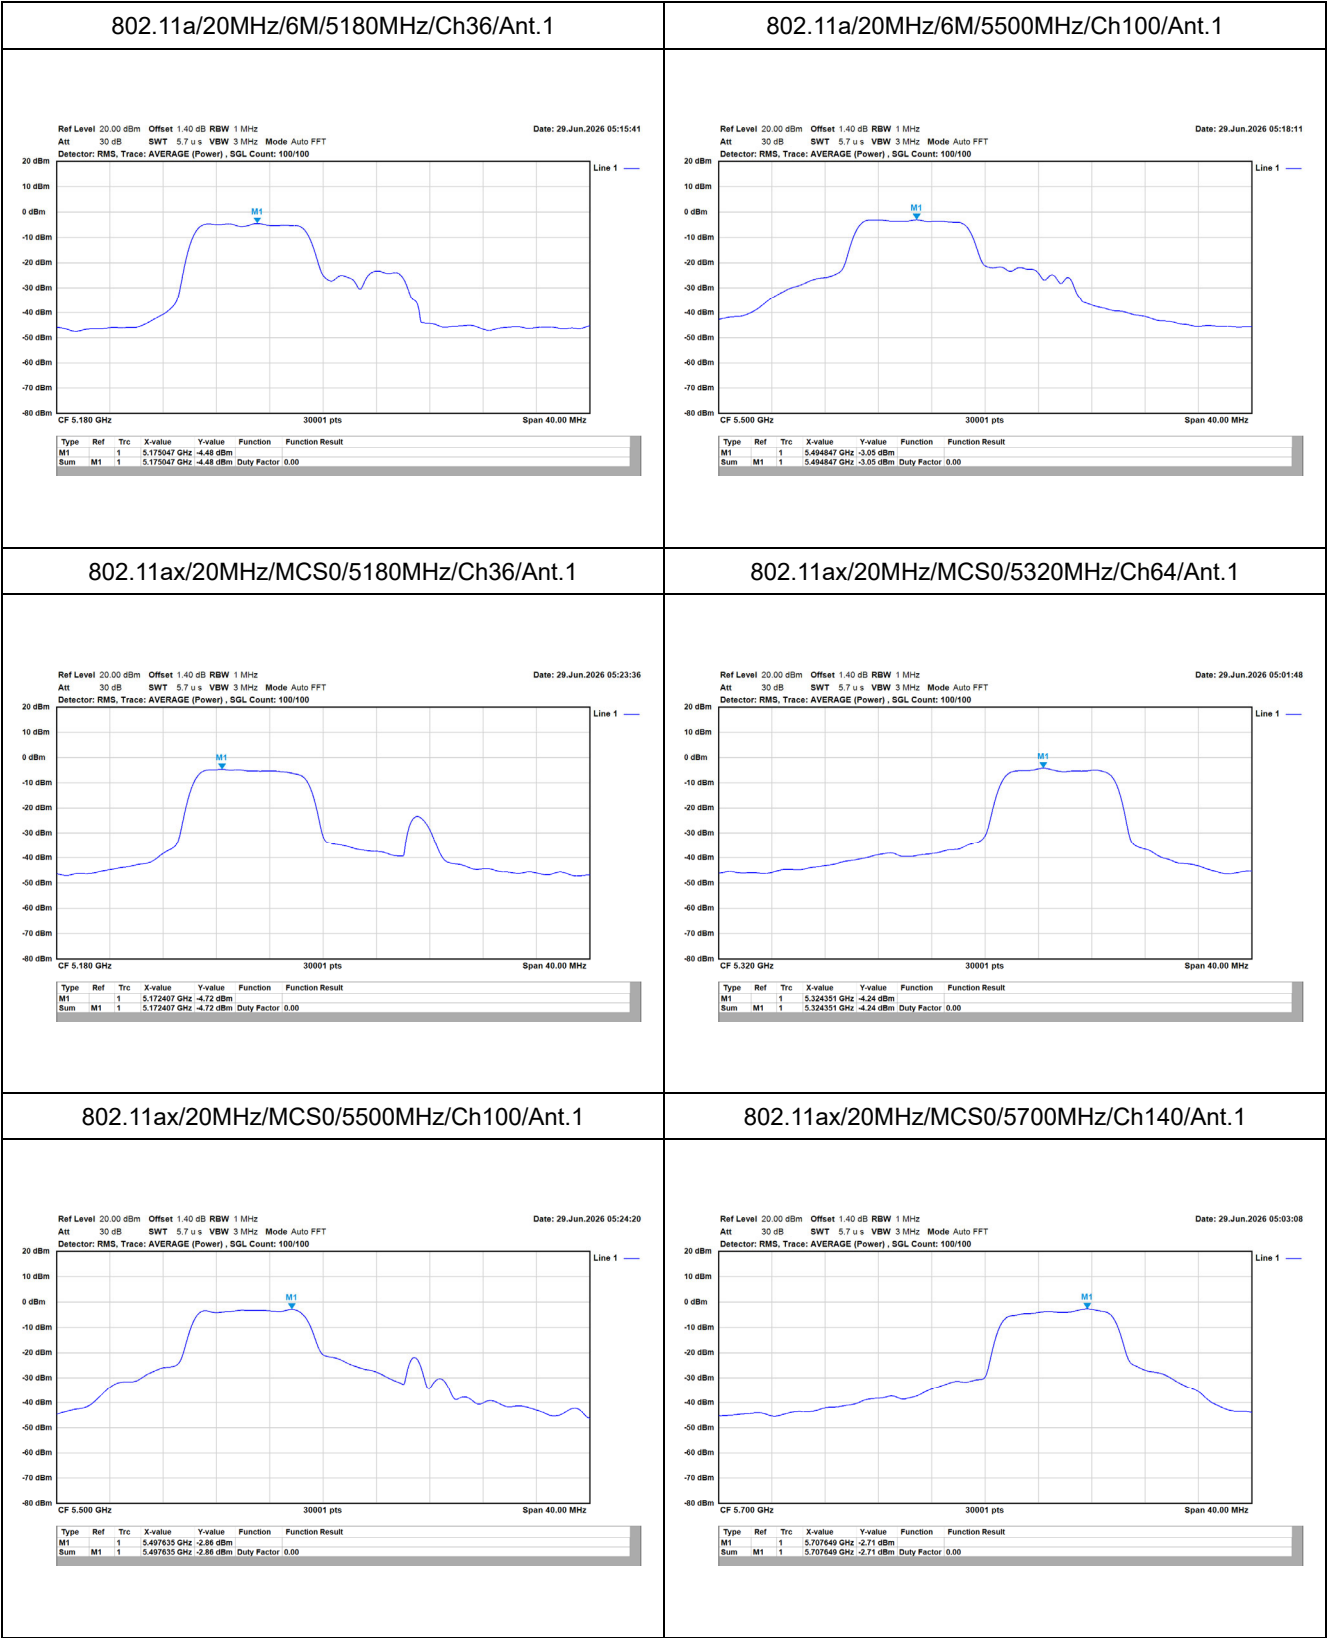


802.11a/20MHz/6M/5745MHz/Ch149/Ant.1

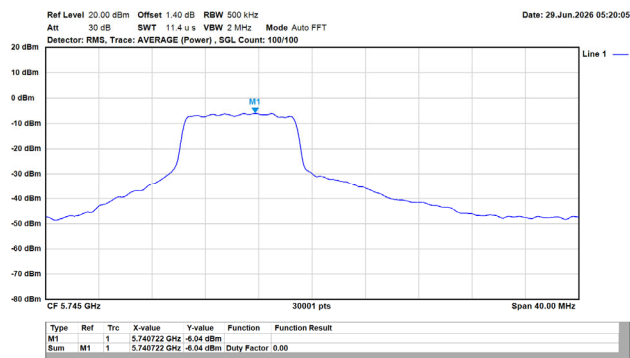





802.11ax/20MHz/MCS0/5745MHz/Ch149/Ant.1

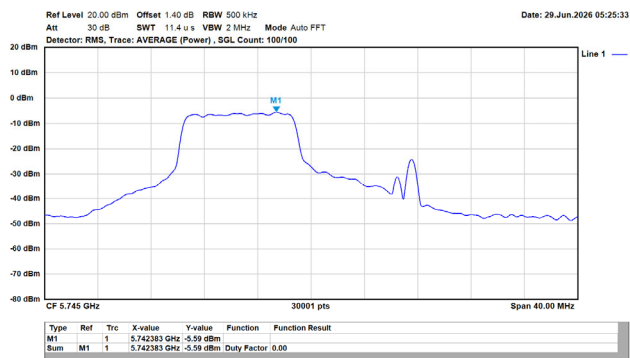

802.11ax/20MHz/MCS0/5825MHz/Ch165/Ant.1

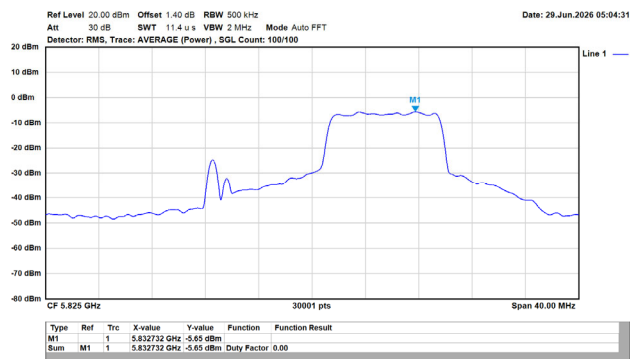


Appendix E. Test Result of Radiated Emission

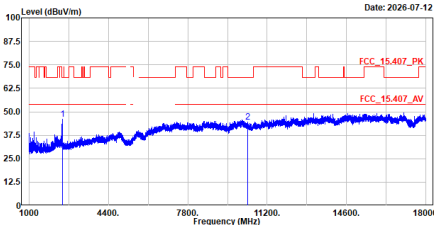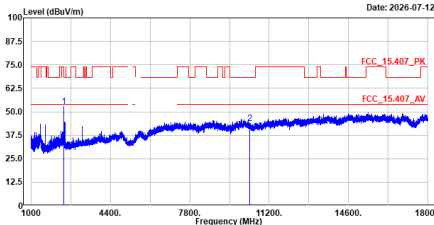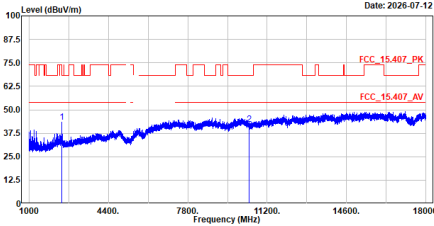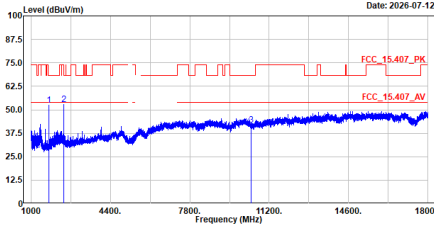TX_a_5180MHz_H Site :HY-CB03 Condition :3m ,Horizontal Mode :TX_a_5180MHz Test BY :Rock  No. Frequency Level Limit Over Read Factor Remark MHz dBuV/m dBuV/m dB dBuV dB/m 1 2428.000 45.95 68.22 -22.27 69.75 -23.80 Peak 2 10360.000 44.70 68.22 -23.52 49.45 -4.75 Peak Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.	TX_a_5180MHz_V Site :HY-CB03 Condition :3m ,Vertical Mode :TX_a_5180MHz Test BY :Rock  No. Frequency Level Limit Over Read Factor Remark MHz dBuV/m dBuV/m dB dBuV dB/m 1 2394.850 52.70 68.22 -15.52 76.46 -23.76 Peak 2 10360.000 43.88 68.22 -24.34 48.63 -4.75 Peak Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.
TX_a_5220MHz_H Site :HY-CB03 Condition :3m ,Horizontal Mode :TX_a_5220MHz Test BY :Rock  No. Frequency Level Limit Over Read Factor Remark MHz dBuV/m dBuV/m dB dBuV dB/m 1 2392.300 43.41 68.22 -24.81 67.16 -23.75 Peak 2 10440.000 42.43 68.22 -25.79 47.68 -5.25 Peak Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.	TX_a_5220MHz_V Site :HY-CB03 Condition :3m ,Vertical Mode :TX_a_5220MHz Test BY :Rock  No. Frequency Level Limit Over Read Factor Remark MHz dBuV/m dBuV/m dB dBuV dB/m 1 1744.600 52.55 68.22 -15.67 77.93 -25.38 Peak 2 2393.150 52.71 68.22 -15.51 76.47 -23.76 Peak 3 10440.000 42.00 68.22 -26.22 47.25 -5.25 Peak Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
Test BY :Rock

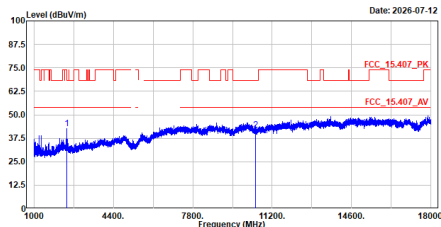


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2394.000	42.79	68.22	-25.43	66.55	-23.76	Peak
2	10480.000	41.71	68.22	-26.51	46.72	-5.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5240MHz
Test BY :Rock

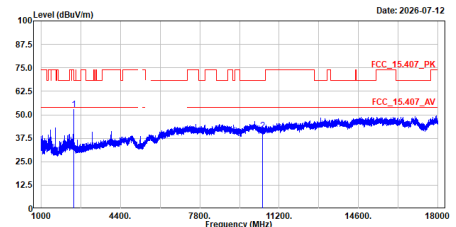


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2388.900	52.88	74.00	-21.12	76.62	-23.74	Peak
2	10480.000	41.56	68.22	-26.66	46.57	-5.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5260MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5260MHz
Test BY :Rock

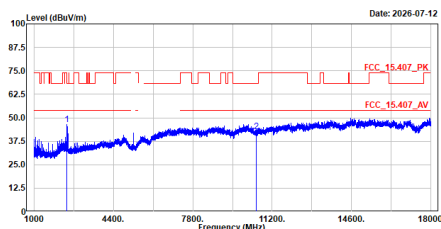


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2388.900	46.30	74.00	-27.70	70.04	-23.74	Peak
2	10520.000	42.48	68.22	-25.74	47.22	-4.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5260MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5260MHz
Test BY :Rock

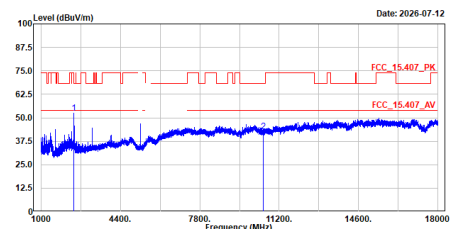


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2393.150	52.49	68.22	-15.73	76.25	-23.76	Peak
2	10520.000	42.67	68.22	-25.55	47.41	-4.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5300MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5300MHz
Test BY :Rock

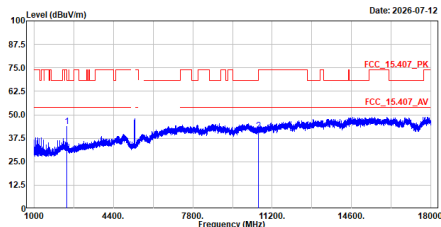


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2398.600	43.71	68.22	-24.51	67.46	-23.75	Peak
2	10600.000	41.46	74.00	-32.54	45.95	-4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5300MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5300MHz
Test BY :Rock

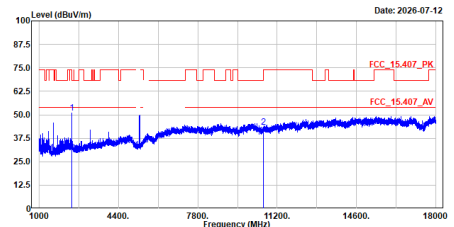


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2393.150	51.01	68.22	-17.21	74.77	-23.76	Peak
2	10600.000	43.57	74.00	-30.43	48.06	-4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5320MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Rock

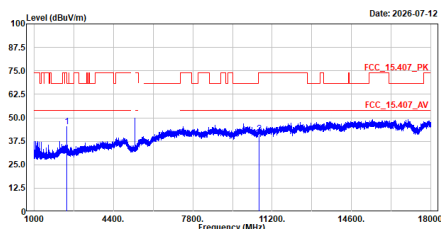


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2394.000	45.16	68.22	-23.06	68.92	-23.76	Peak
2	10640.000	41.46	74.00	-32.54	45.70	-4.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5320MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Rock

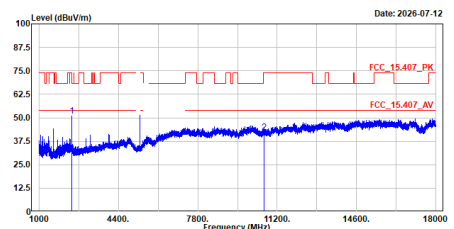


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2391.450	50.99	68.22	-17.23	74.74	-23.75	Peak
2	10640.000	42.20	74.00	-31.80	46.44	-4.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5500MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Rock

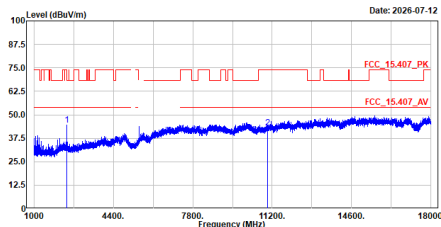


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2394.000	44.38	68.22	-23.84	68.14	-23.76	Peak
2	11000.000	42.85	74.00	-31.15	45.85	-3.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5500MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Rock

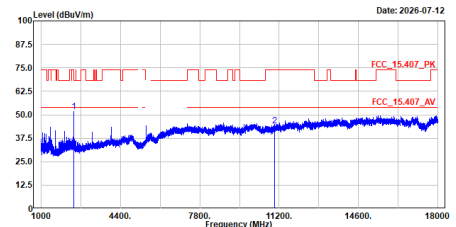


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2394.850	51.52	68.22	-16.70	75.28	-23.76	Peak
2	11000.000	44.03	74.00	-29.97	47.03	-3.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5580MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5580MHz
Test BY :Rock

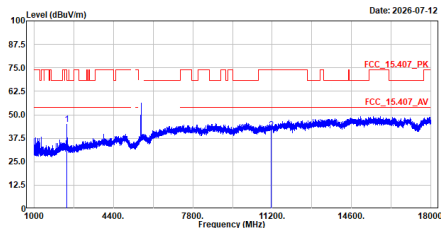


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2390.600	44.86	68.22	-23.36	68.61	-23.75	Peak
2	11160.000	41.78	74.00	-32.22	44.67	-2.89	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5580MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5580MHz
Test BY :Rock

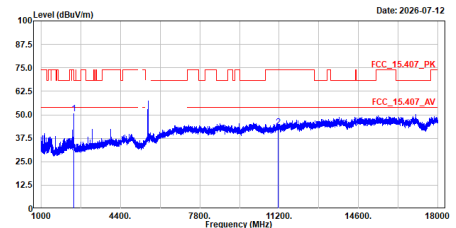


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2391.450	50.74	68.22	-17.48	74.49	-23.75	Peak
2	11160.000	43.58	74.00	-30.42	46.47	-2.89	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5700MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5700MHz
Test BY :Rock

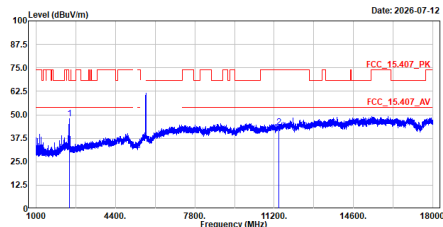


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2433.950	47.90	68.22	-20.32	71.75	-23.85	Peak
2	11400.000	43.45	74.00	-30.55	45.44	-1.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5700MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5700MHz
Test BY :Rock

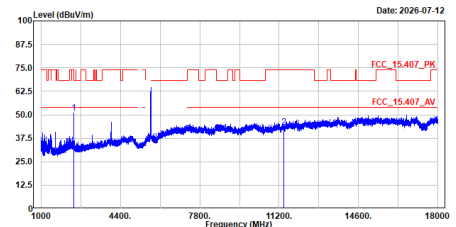


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2393.150	51.11	68.22	-17.11	74.87	-23.76	Peak
2	11400.000	43.53	74.00	-30.47	45.52	-1.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5720MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5720MHz
Test BY :Rock

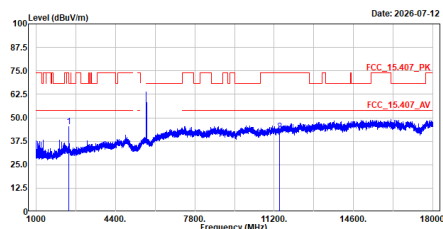


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2392.300	45.44	68.22	-22.78	69.19	-23.75	Peak
2	11440.000	42.50	74.00	-31.50	44.48	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5720MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5720MHz
Test BY :Rock

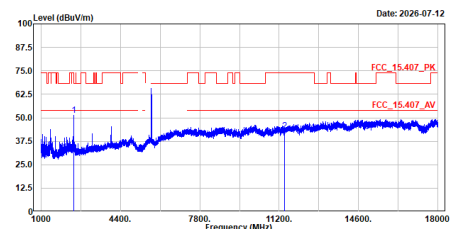


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2389.750	51.47	74.00	-22.53	75.22	-23.75	Peak
2	11440.000	43.05	74.00	-30.95	45.03	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
Test BY :Rock

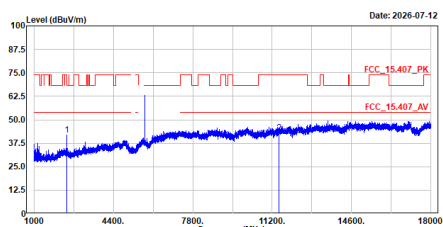


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2393.150	41.83	68.22	-26.39	65.59	-23.76	Peak
2	11490.000	43.14	74.00	-30.86	45.00	-1.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5745MHz
Test BY :Rock

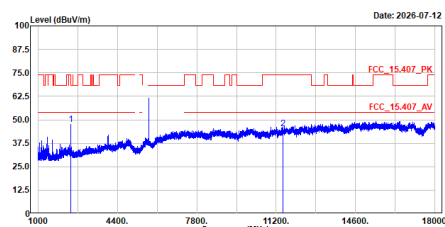


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	47.40	68.22	-20.82	71.15	-23.75	Peak
2	11490.000	45.13	74.00	-28.87	46.99	-1.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5785MHz
Test BY :Rock

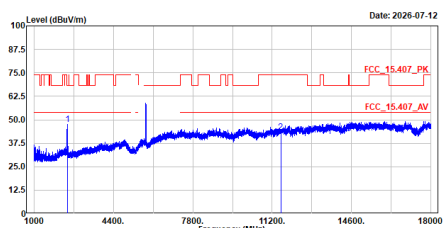


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2411.850	47.53	68.22	-20.69	71.39	-23.86	Peak
2	11570.000	43.33	74.00	-30.67	45.15	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5785MHz
Test BY :Rock

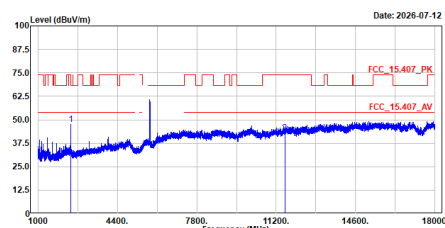


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2388.900	47.59	74.00	-26.41	71.33	-23.74	Peak
2	11570.000	42.95	74.00	-31.05	44.77	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5825MHz
Test BY :Rock

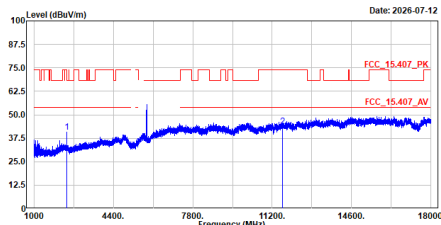


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2392.300	40.73	68.22	-27.49	64.48	-23.75	Peak
2	11650.000	43.74	74.00	-30.26	45.75	-2.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5825MHz
Test BY :Rock

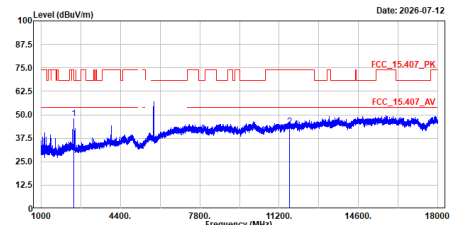


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2392.300	47.98	68.22	-20.24	71.73	-23.75	Peak
2	11650.000	43.84	74.00	-30.16	45.85	-2.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5180MHz
Test BY :Rock

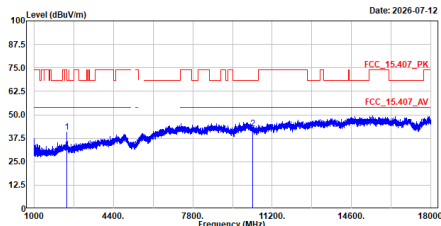


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2398.250	40.79	68.22	-27.43	64.55	-23.76	Peak
2	10360.000	42.50	68.22	-25.72	47.25	-4.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
Test BY :Rock

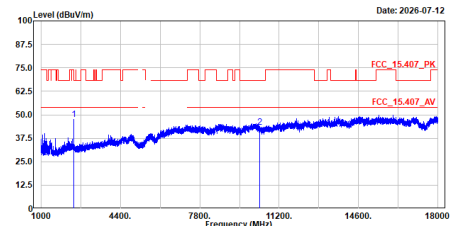


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.750	47.46	74.00	-26.54	71.21	-23.75	Peak
2	10360.000	43.36	68.22	-24.86	48.11	-4.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5220MHz
Test BY :Rock

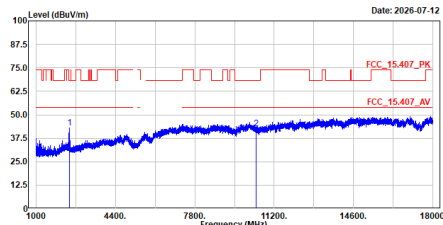


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2433.100	43.00	68.22	-25.22	66.84	-23.84	Peak
2	10440.000	42.71	68.22	-25.51	47.96	-5.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5220MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5220MHz
Test BY :Rock

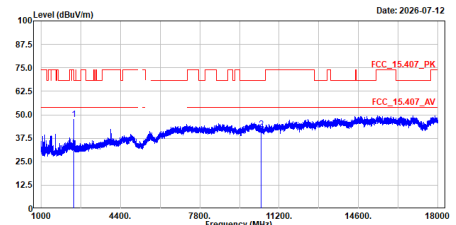


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	47.71	68.22	-20.51	71.46	-23.75	Peak
2	10440.000	42.19	68.22	-26.03	47.44	-5.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5240MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5240MHz
Test BY :Rock

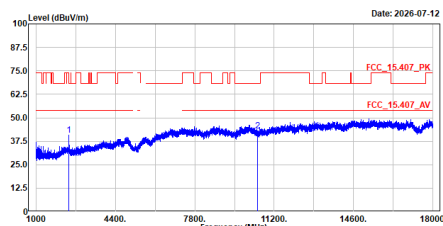


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	40.60	68.22	-27.62	64.35	-23.75	Peak
2	10480.000	42.85	68.22	-25.37	47.86	-5.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5240MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5240MHz
Test BY :Rock

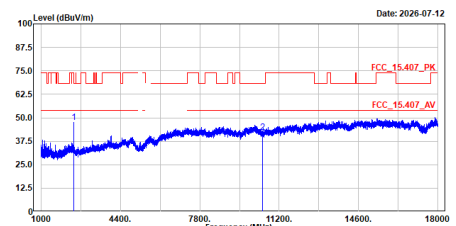


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2392.300	47.69	68.22	-20.53	71.44	-23.75	Peak
2	10480.000	42.21	68.22	-26.01	47.22	-5.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5260MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5260MHz
Test BY :Rock

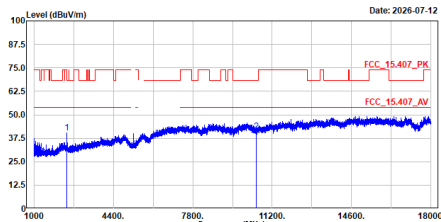


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2399.100	40.37	68.22	-27.85	64.13	-23.76	Peak
2	10520.000	41.27	68.22	-26.95	46.01	-4.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5260MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5260MHz
Test BY :Rock

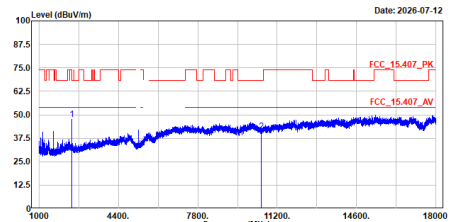


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.750	47.51	74.00	-26.49	71.26	-23.75	Peak
2	10520.000	41.25	68.22	-26.97	45.99	-4.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5300MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5300MHz
Test BY :Rock

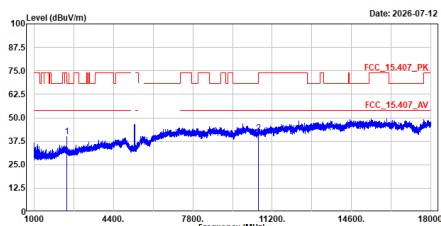


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	40.18	68.22	-28.04	63.93	-23.75	Peak
2	10600.000	41.71	74.00	-32.29	46.20	-4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5300MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5300MHz
Test BY :Rock

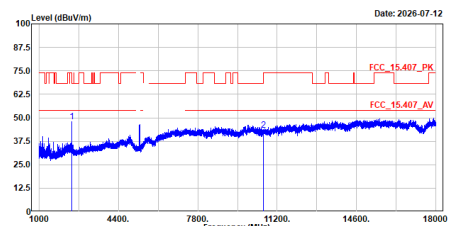


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	47.80	68.22	-20.42	71.55	-23.75	Peak
2	10600.000	43.35	74.00	-30.65	47.84	-4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5320MHz
Test BY :Rock

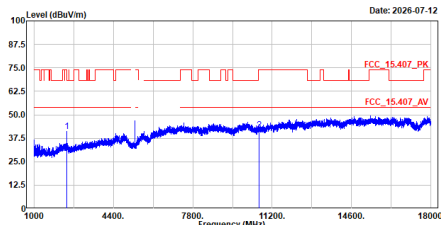


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2389.750	41.31	74.00	-32.69	65.06	-23.75	Peak
2	10640.000	41.95	74.00	-32.05	46.19	-4.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5320MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5320MHz
Test BY :Rock

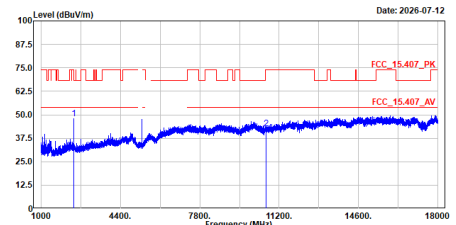


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2389.900	48.01	74.00	-25.99	71.75	-23.74	Peak
2	10640.000	42.68	74.00	-31.32	46.92	-4.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5500MHz
Test BY :Rock

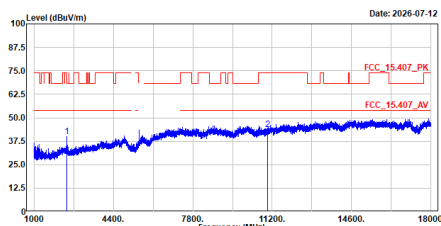


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2396.550	39.84	68.22	-28.38	63.60	-23.76	Peak
2	11000.000	43.67	74.00	-30.33	46.67	-3.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5500MHz
Test BY :Rock

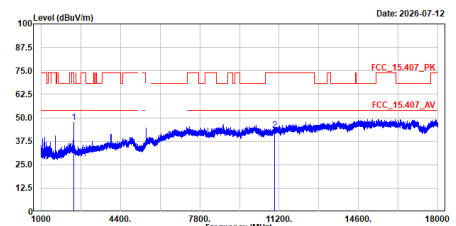


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2391.450	47.61	68.22	-20.61	71.36	-23.75	Peak
2	11000.000	43.51	74.00	-30.49	46.51	-3.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5580MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5580MHz
Test BY :Rock

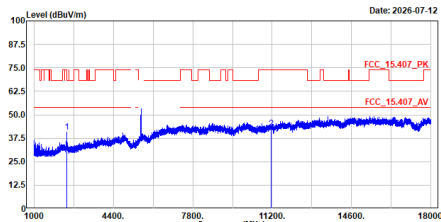


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2399.950	40.92	68.22	-27.30	64.69	-23.77	Peak
2	11160.000	42.55	74.00	-31.45	45.44	-2.89	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5580MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5580MHz
Test BY :Rock

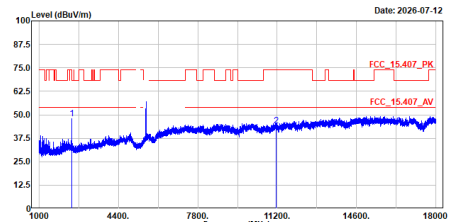


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2388.900	47.93	74.00	-26.07	71.67	-23.74	Peak
2	11160.000	44.20	74.00	-29.80	47.09	-2.89	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5700MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5700MHz
Test BY :Rock

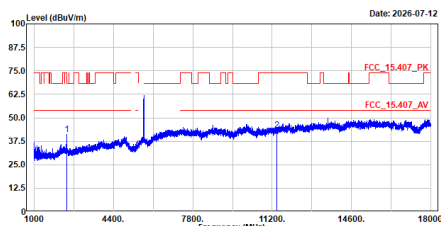


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2393.150	41.15	68.22	-27.07	64.91	-23.76	Peak
2	11400.000	43.31	74.00	-30.69	45.30	-1.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5700MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5700MHz
Test BY :Rock

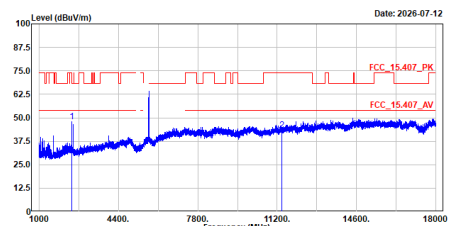


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2388.900	47.77	74.00	-26.23	71.51	-23.74	Peak
2	11400.000	43.38	74.00	-30.62	45.37	-1.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5720MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5720MHz
Test BY :Rock

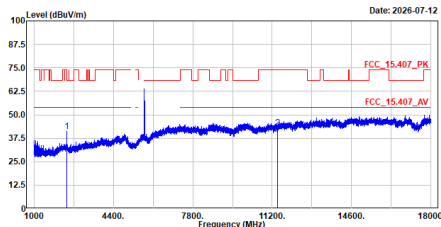


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2399.950	41.15	68.22	-27.07	64.92	-23.77	Peak
2	11440.000	42.93	74.00	-31.07	44.91	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5720MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5720MHz
Test BY :Rock

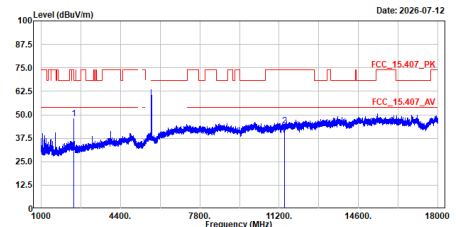


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2392.300	47.96	68.22	-20.26	71.71	-23.75	Peak
2	11440.000	44.05	74.00	-29.95	46.03	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5745MHz
Test BY :Rock

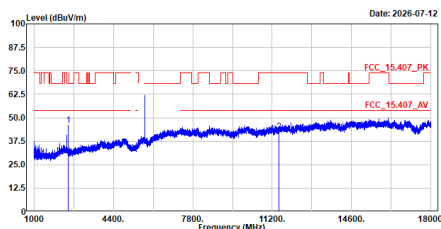


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2453.500	46.13	68.22	-22.09	70.02	-23.89	Peak
2	11490.000	42.68	74.00	-31.32	44.54	-1.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5745MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5745MHz
Test BY :Rock

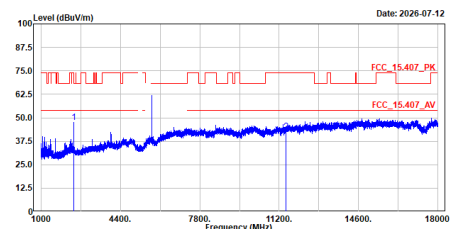


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2390.600	47.45	68.22	-20.77	71.20	-23.75	Peak
2	11490.000	42.74	74.00	-31.26	44.60	-1.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5785MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5785MHz
Test BY :Rock

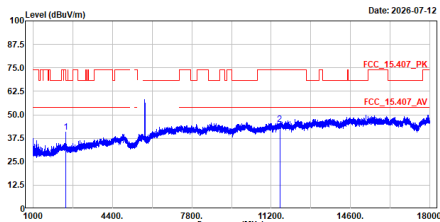


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2392.300	40.71	68.22	-27.51	64.46	-23.75	Peak
2	11570.000	45.04	74.00	-28.96	46.86	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5785MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5785MHz
Test BY :Rock

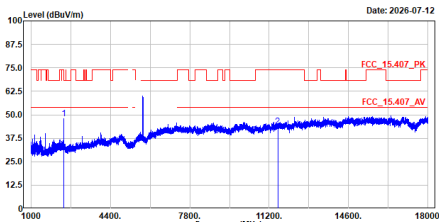


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2393.150	47.88	68.22	-20.34	71.64	-23.76	Peak
2	11570.000	43.77	74.00	-30.23	45.59	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5825MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5825MHz
Test BY :Rock

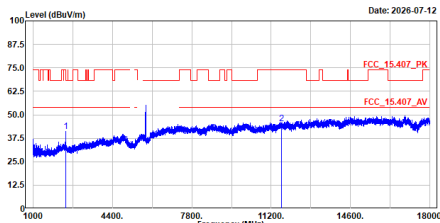


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2398.250	41.06	68.22	-27.16	64.82	-23.76	Peak
2	11650.000	45.12	74.00	-28.88	47.13	-2.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5825MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5825MHz
Test BY :Rock

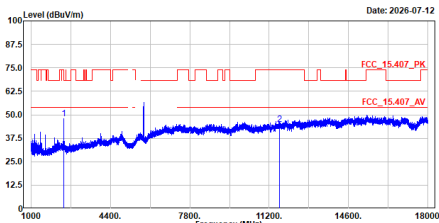


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2392.300	47.75	68.22	-20.47	71.50	-23.75	Peak
2	11650.000	45.03	74.00	-28.97	47.04	-2.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
Test BY :Rock

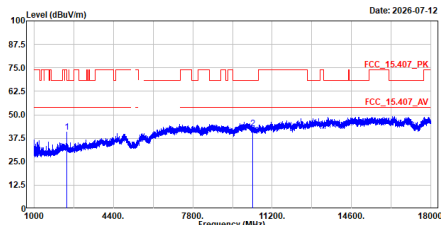


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.750	40.94	74.00	-33.06	64.69	-23.75	Peak
2	10380.000	42.76	68.22	-25.46	47.67	-4.91	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
Test BY :Rock

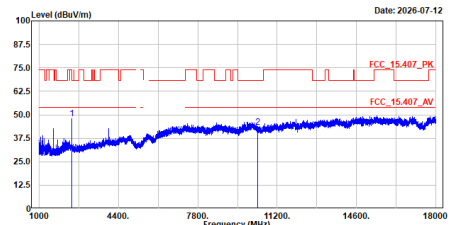


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2388.900	47.85	74.00	-26.15	71.59	-23.74	Peak
2	10380.000	43.40	68.22	-24.82	48.31	-4.91	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5230MHz
Test BY :Rock

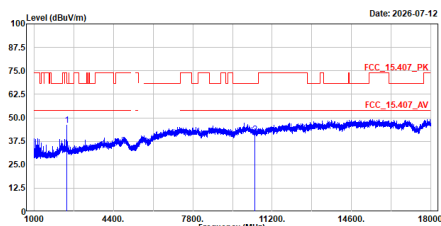


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	46.22	68.22	-22.00	69.97	-23.75	Peak
2	10460.000	41.25	68.22	-26.97	46.39	-5.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5230MHz
Test BY :Rock

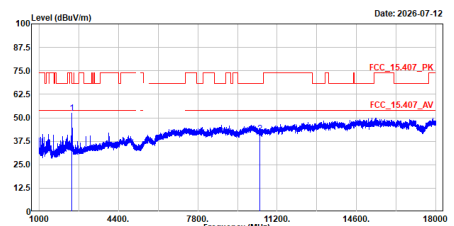


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	52.45	68.22	-15.77	76.20	-23.75	Peak
2	10460.000	41.55	68.22	-26.67	46.69	-5.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5270MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5270MHz
Test BY :Rock

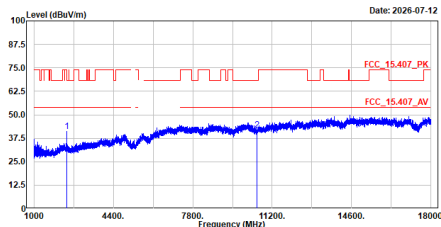


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2392.300	41.12	68.22	-27.10	64.87	-23.75	Peak
2	10540.000	41.91	68.22	-26.31	46.59	-4.68	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5270MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5270MHz
Test BY :Rock

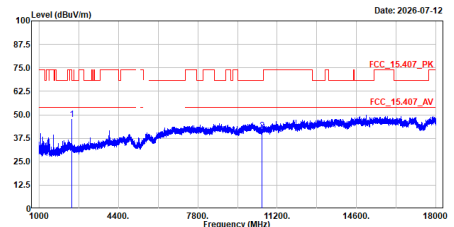


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2399.950	47.42	68.22	-20.80	71.19	-23.77	Peak
2	10540.000	41.49	68.22	-26.73	46.17	-4.68	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5310MHz
Test BY :Rock

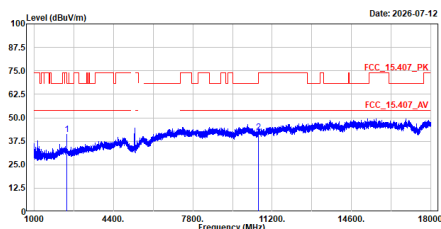


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2392.300	40.95	68.22	-27.27	64.70	-23.75	Peak
2	10620.000	42.26	74.00	-31.74	46.64	-4.38	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5310MHz
Test BY :Rock

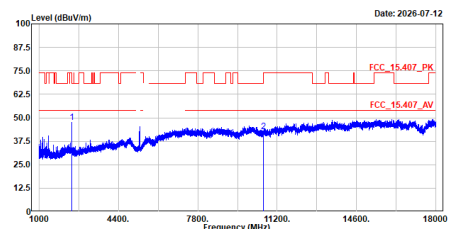


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2389.750	47.52	74.00	-26.48	71.27	-23.75	Peak
2	10620.000	42.55	74.00	-31.45	46.93	-4.38	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5510MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5510MHz
Test BY :Rock

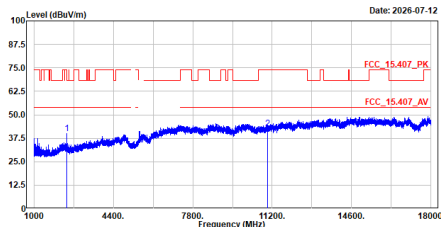


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2399.100	40.11	68.22	-28.11	63.87	-23.76	Peak
2	11020.000	42.78	74.00	-31.22	45.72	-2.94	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5510MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5510MHz
Test BY :Rock

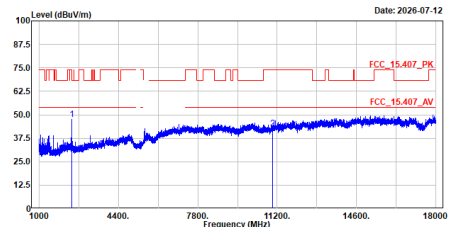


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2398.250	47.52	68.22	-20.70	71.28	-23.76	Peak
2	11020.000	42.83	74.00	-31.17	45.77	-2.94	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5550MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5550MHz
Test BY :Rock

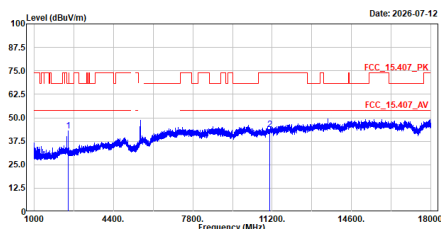


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2456.050	43.13	68.22	-25.09	67.00	-23.87	Peak
2	11100.000	43.95	74.00	-30.05	46.82	-2.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5550MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5550MHz
Test BY :Rock

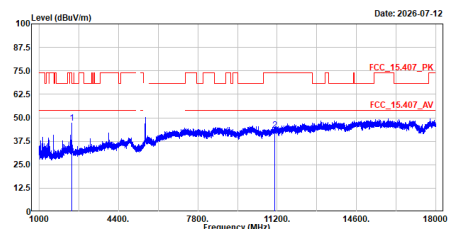


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2392.300	47.33	68.22	-20.89	71.08	-23.75	Peak
2	11100.000	43.39	74.00	-30.61	46.26	-2.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5670MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5670MHz
Test BY :Rock

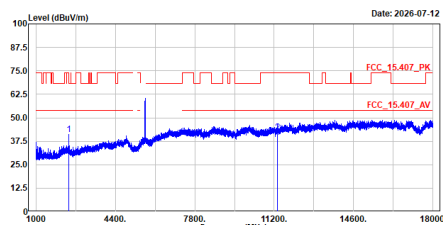


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2394.850	41.06	68.22	-27.16	64.82	-23.76	Peak
2	11340.000	42.17	74.00	-31.83	44.22	-2.05	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5670MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5670MHz
Test BY :Rock

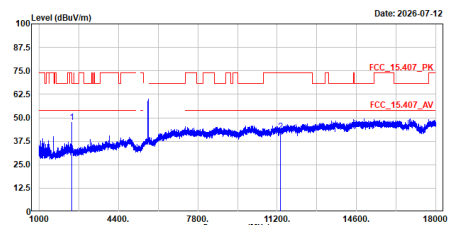


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2389.750	47.65	74.00	-26.35	71.48	-23.75	Peak
2	11340.000	42.74	74.00	-31.26	44.79	-2.05	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5710MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5710MHz
Test BY :Rock

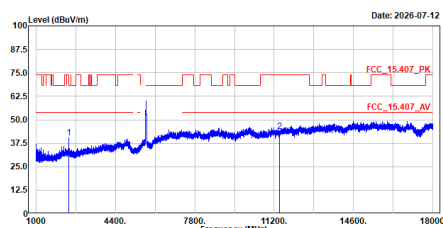


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2397.400	40.47	68.22	-27.75	64.23	-23.76	Peak
2	11420.000	43.84	74.00	-30.16	45.82	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5710MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5710MHz
Test BY :Rock

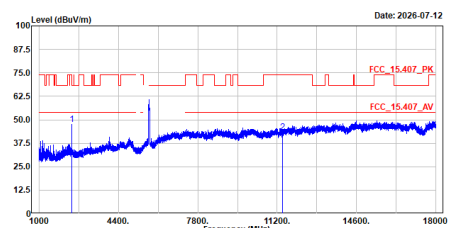


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2388.900	47.48	74.00	-26.52	71.22	-23.74	Peak
2	11420.000	43.27	74.00	-30.73	45.25	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5755MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5755MHz
Test BY :Rock

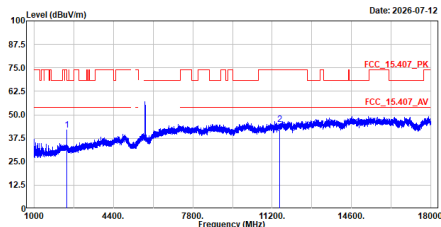


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2399.100	41.80	68.22	-26.42	65.56	-23.76	Peak
2	11510.000	44.83	74.00	-29.17	46.65	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5755MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5755MHz
Test BY :Rock

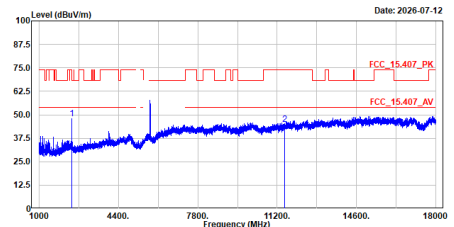


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2392.300	47.95	68.22	-20.27	71.78	-23.75	Peak
2	11510.000	44.96	74.00	-29.04	46.78	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5795MHz
Test BY :Rock

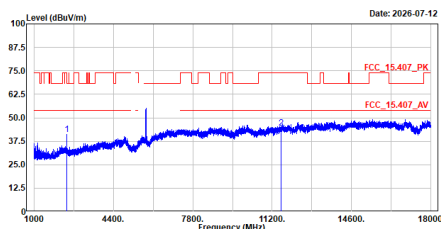


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2394.000	41.31	68.22	-26.91	65.07	-23.76	Peak
2	11590.000	44.64	74.00	-29.36	46.49	-1.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5795MHz
Test BY :Rock

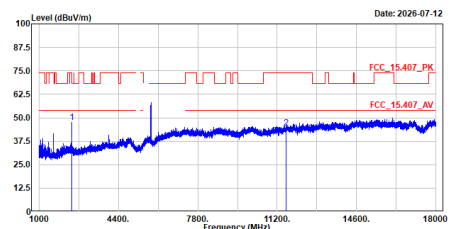


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2388.900	47.70	74.00	-26.30	71.44	-23.74	Peak
2	11590.000	44.67	74.00	-29.33	46.52	-1.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5210MHz
Test BY :Rock

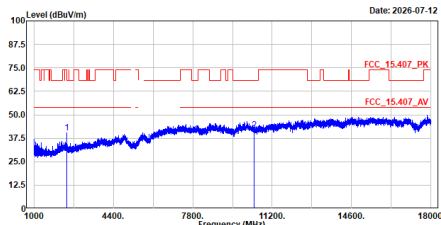


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.750	40.32	74.00	-33.68	64.87	-23.75	Peak
2	10420.000	41.93	68.22	-26.27	47.14	-5.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5210MHz
Test BY :Rock

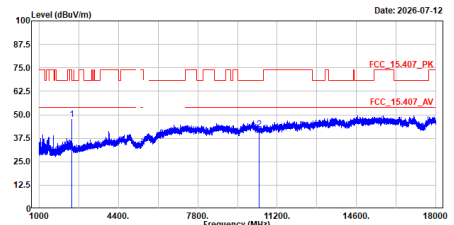


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2394.850	47.57	68.22	-20.65	71.33	-23.76	Peak
2	10420.000	42.26	68.22	-25.96	47.45	-5.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5290MHz
Test BY :Rock

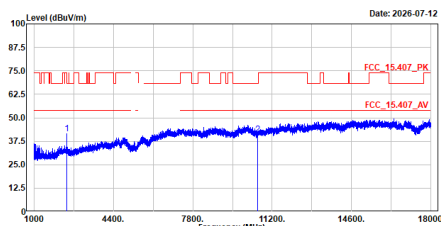


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2392.300	41.36	68.22	-26.86	65.11	-23.75	Peak
2	10580.000	41.12	68.22	-27.10	45.67	-4.55	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5290MHz
Test BY :Rock

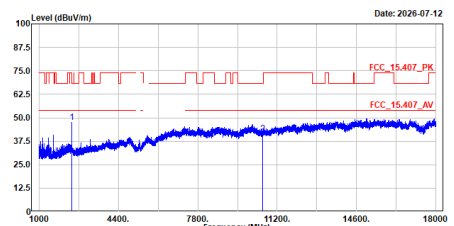


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	47.43	68.22	-20.79	71.18	-23.75	Peak
2	10580.000	41.37	68.22	-26.85	45.92	-4.55	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5530MHz
Test BY :Rock

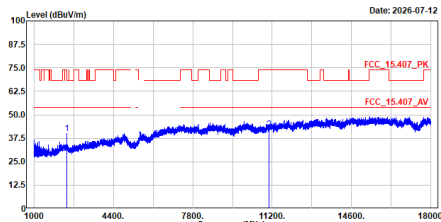


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2393.150	39.82	68.22	-28.40	63.58	-23.76	Peak
2	11060.000	42.38	74.00	-31.62	45.26	-2.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5530MHz
Test BY :Rock

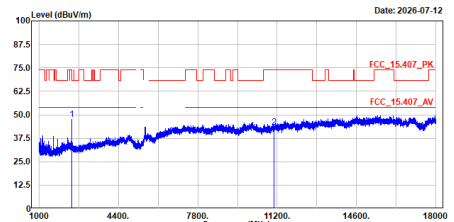


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2397.400	47.71	68.22	-20.51	71.47	-23.76	Peak
2	11060.000	43.34	74.00	-30.66	46.22	-2.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5610MHz
Test BY :Rock

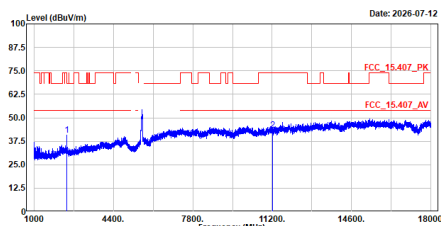


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2391.450	40.88	68.22	-27.34	64.63	-23.75	Peak
2	11220.000	43.26	74.00	-30.74	45.96	-2.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5610MHz
Test BY :Rock

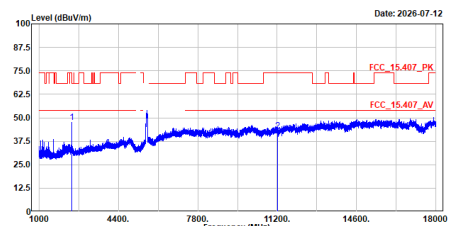


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2392.300	47.62	68.22	-20.60	71.37	-23.75	Peak
2	11220.000	42.98	74.00	-31.02	45.68	-2.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5690MHz
Test BY :Rock

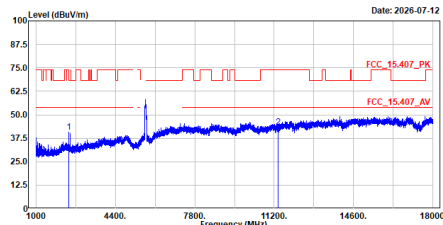


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2393.150	40.67	68.22	-27.55	64.43	-23.76	Peak
2	11380.000	43.29	74.00	-30.71	45.25	-1.96	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5690MHz
Test BY :Rock

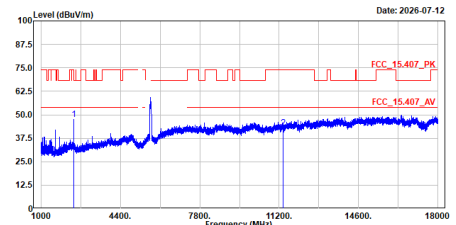


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	47.71	68.22	-20.51	71.46	-23.75	Peak
2	11380.000	42.98	74.00	-31.02	44.94	-1.96	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5775MHz
Test BY :Rock

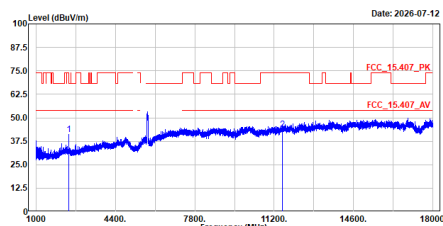


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2395.700	41.26	68.22	-26.96	65.02	-23.76	Peak
2	11550.000	43.75	74.00	-30.25	45.54	-1.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_V


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5775MHz
Test BY :Rock

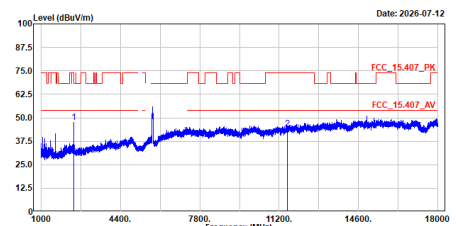


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2394.850	47.58	68.22	-20.64	71.34	-23.76	Peak
2	11550.000	44.01	74.00	-29.99	45.80	-1.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ax20_5180MHz_H

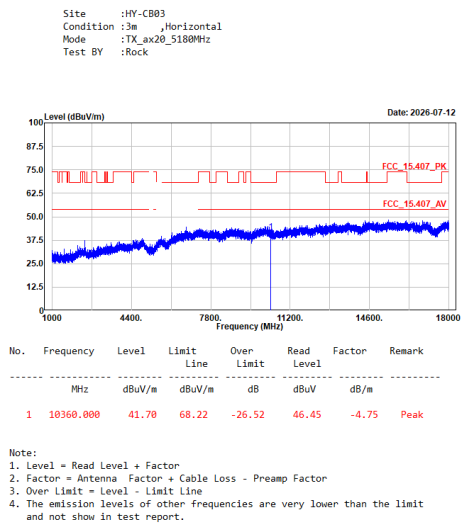


TX_ax20_5180MHz_V

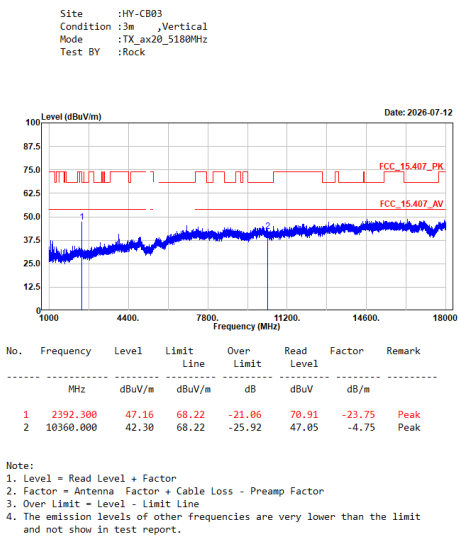

TX_ax20_5220MHz_H

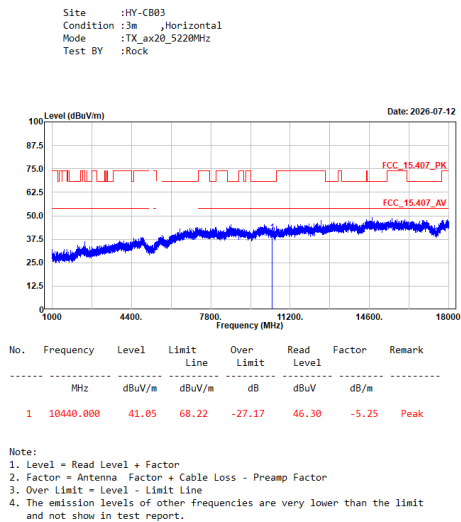


TX_ax20_5220MHz_V

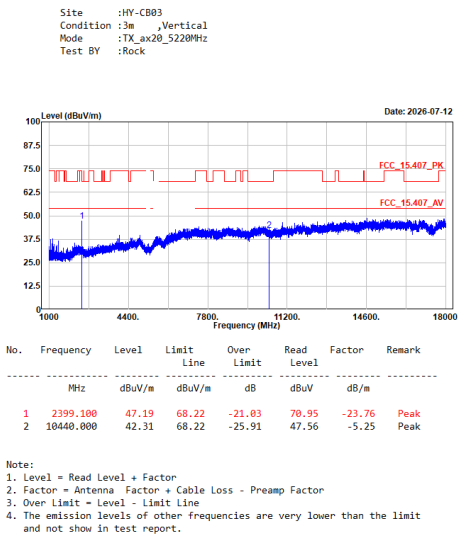

TX_ax20_5240MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5240MHz
Test BY :Rock

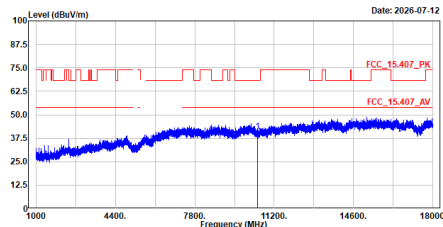


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	10480.000	41.26	68.22	-26.96	46.27	-5.01	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5240MHz
Test BY :Rock

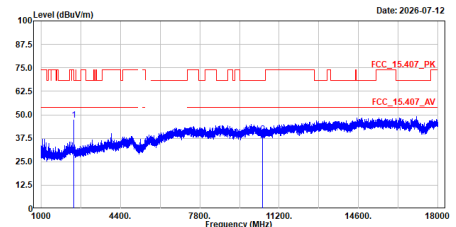


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2394.850	47.00	68.22	-21.22	70.76	-23.76	Peak
2	10480.000	39.73	68.22	-28.49	44.74	-5.01	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5260MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5260MHz
Test BY :Rock

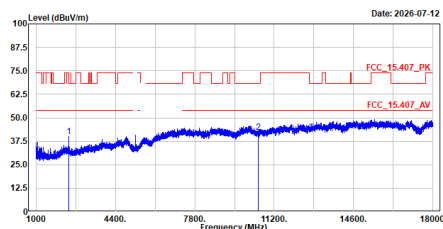


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2395.700	39.97	68.22	-28.25	63.73	-23.76	Peak
2	10520.000	42.13	68.22	-26.09	46.87	-4.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5260MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5260MHz
Test BY :Rock

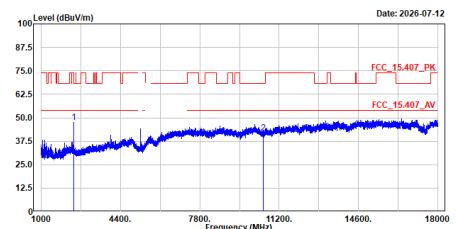


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2389.750	47.63	74.00	-26.37	71.38	-23.75	Peak
2	10520.000	41.84	68.22	-26.38	46.58	-4.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5300MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5300MHz
Test BY :Rock

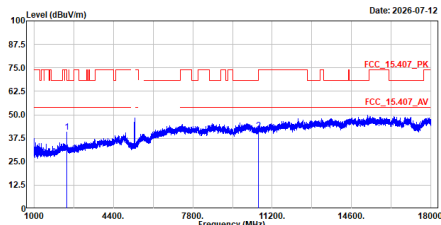


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2389.750	40.87	74.00	-33.13	64.62	-23.75	Peak
2	10600.000	41.52	74.00	-32.48	46.01	-4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5300MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5300MHz
Test BY :Rock

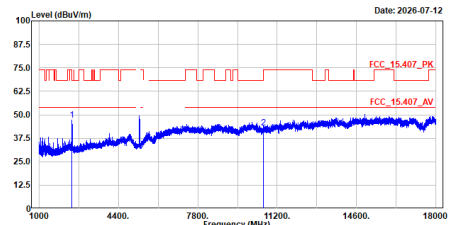


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2392.300	47.28	68.22	-20.94	71.83	-23.75	Peak
2	10600.000	43.20	74.00	-30.80	47.69	-4.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5320MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
Test BY :Rock

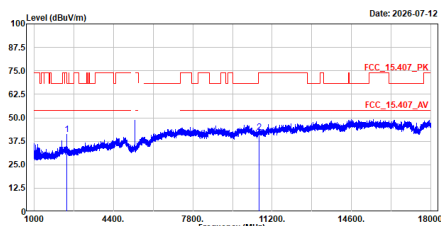


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2392.300	41.10	68.22	-27.12	64.85	-23.75	Peak
2	10640.000	42.15	74.00	-31.85	46.39	-4.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5320MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
Test BY :Rock

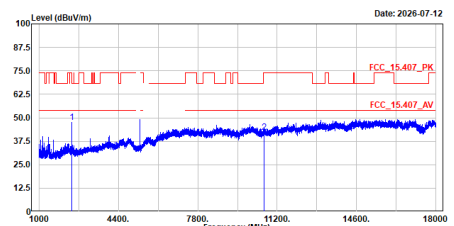


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2391.450	47.49	68.22	-20.73	71.24	-23.75	Peak
2	10640.000	42.27	74.00	-31.73	46.51	-4.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5500MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
Test BY :Rock

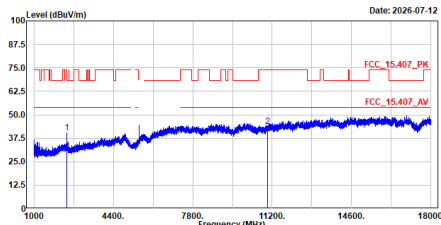


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2399.950	40.42	68.22	-27.80	64.19	-23.77	Peak
2	11800.000	43.77	74.00	-30.23	46.77	-3.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5500MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
Test BY :Rock

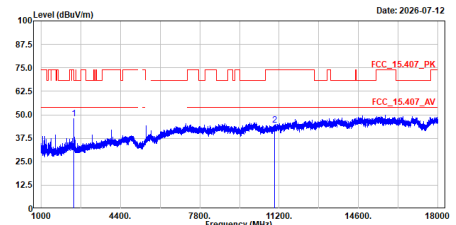


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2389.750	48.00	74.00	-26.00	71.75	-23.75	Peak
2	11800.000	44.49	74.00	-29.51	47.49	-3.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5580MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5580MHz
Test BY :Rock

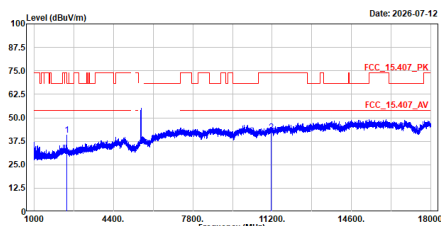


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2396.550	40.79	68.22	-27.43	64.55	-23.76	Peak
2	11160.000	42.16	74.00	-31.84	45.05	-2.89	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5580MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5580MHz
Test BY :Rock

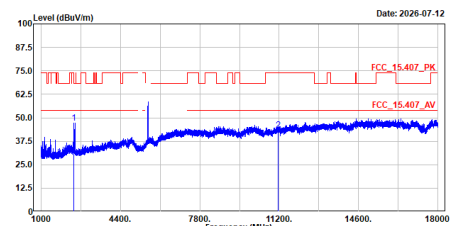


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2393.150	47.29	68.22	-20.93	71.05	-23.76	Peak
2	11160.000	43.28	74.00	-30.72	46.17	-2.89	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5700MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5700MHz
Test BY :Rock

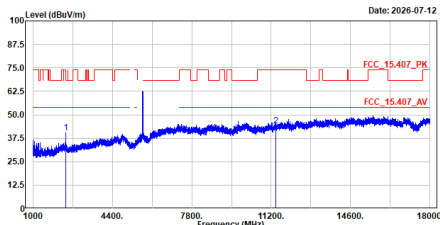


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2391.450	40.44	68.22	-27.78	64.19	-23.75	Peak
2	11400.000	43.97	74.00	-30.03	45.96	-1.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5700MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5700MHz
Test BY :Rock

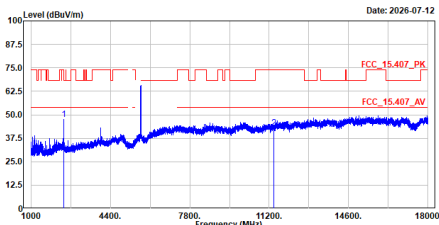


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2399.100	47.56	68.22	-20.66	71.32	-23.76	Peak
2	11400.000	42.97	74.00	-31.03	44.96	-1.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5720MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5720MHz
Test BY :Rock

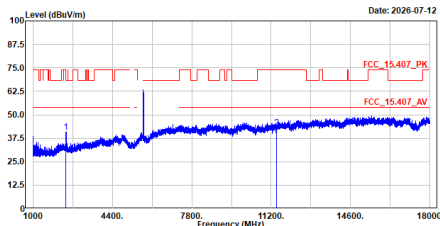


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2396.550	40.89	68.22	-27.33	64.65	-23.76	Peak
2	11440.000	43.10	74.00	-30.90	45.08	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5720MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5720MHz
Test BY :Rock

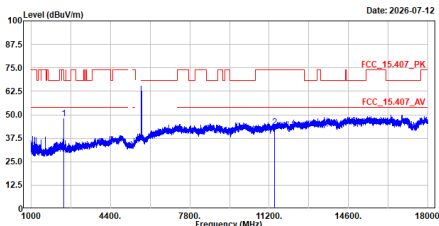


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.750	47.91	74.00	-26.09	71.66	-23.75	Peak
2	11440.000	43.32	74.00	-30.68	45.30	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5745MHz
Test BY :Rock

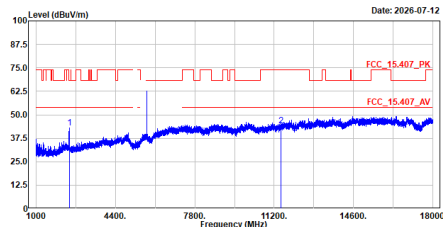


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2416.100	42.84	68.22	-25.38	66.67	-23.83	Peak
2	11490.000	44.19	74.00	-29.81	46.05	-1.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5745MHz
Test BY :Rock

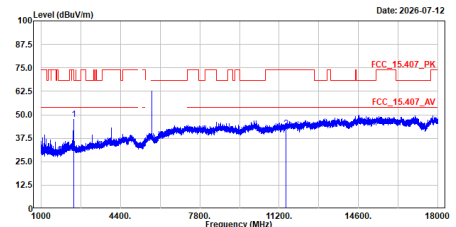


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2393.150	47.58	68.22	-20.64	71.34	-23.76	Peak
2	11490.000	42.73	74.00	-31.27	44.59	-1.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5785MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5785MHz
Test BY :Rock

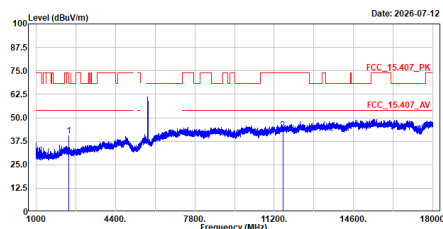


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	40.24	68.22	-27.98	63.99	-23.75	Peak
2	11570.000	43.48	74.00	-30.52	45.30	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5785MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5785MHz
Test BY :Rock

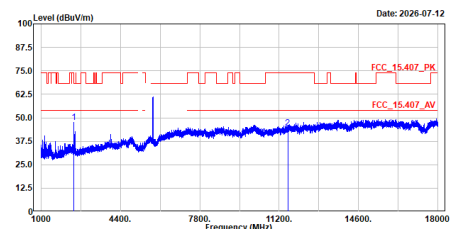


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.750	47.54	74.00	-26.46	71.29	-23.75	Peak
2	11570.000	44.51	74.00	-29.49	46.33	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5825MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax20_5825MHz
Test BY :Rock

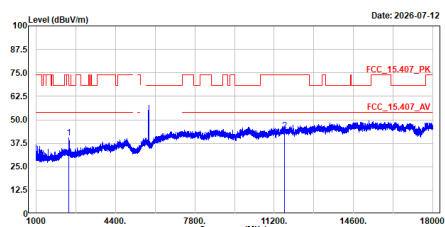


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2396.550	40.46	68.22	-27.76	64.22	-23.76	Peak
2	11650.000	44.00	74.00	-30.00	46.01	-2.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5825MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax20_5825MHz
Test BY :Rock

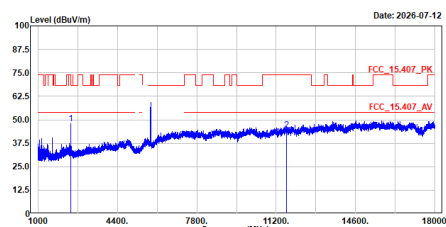


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.750	47.77	74.00	-26.23	71.52	-23.75	Peak
2	11650.000	44.46	74.00	-29.54	46.47	-2.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5190MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5190MHz
Test BY :Rock

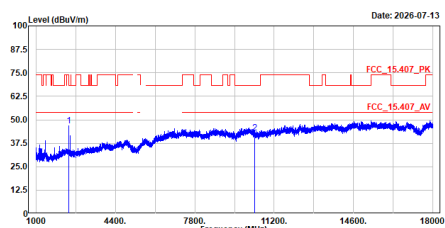


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2393.150	46.91	68.22	-21.31	70.67	-23.76	Peak
2	10380.000	42.90	68.22	-25.32	47.81	-4.91	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5190MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5190MHz
Test BY :Rock

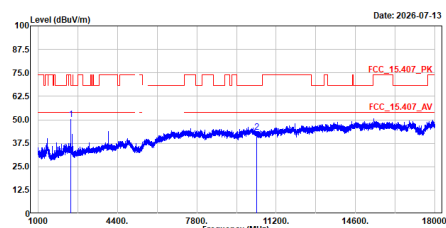


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2388.900	50.14	74.00	-23.86	73.88	-23.74	Peak
2	10380.000	43.42	68.22	-24.80	48.33	-4.91	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5230MHz
Test BY :Rock

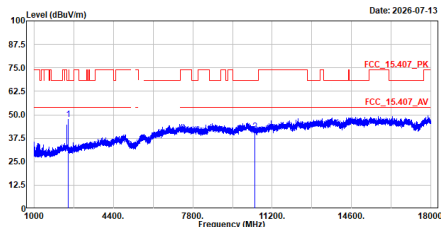


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2455.200	47.61	68.22	-20.61	71.49	-23.88	Peak
2	10460.000	41.28	68.22	-26.94	46.42	-5.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5230MHz
Test BY :Rock

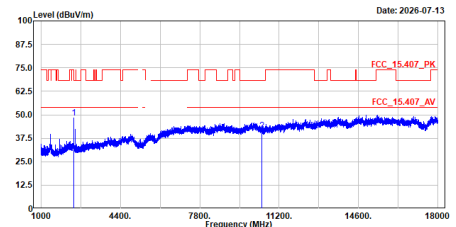


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2390.600	48.36	68.22	-19.86	72.11	-23.75	Peak
2	10460.000	41.56	68.22	-26.66	46.70	-5.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5270MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5270MHz
Test BY :Rock

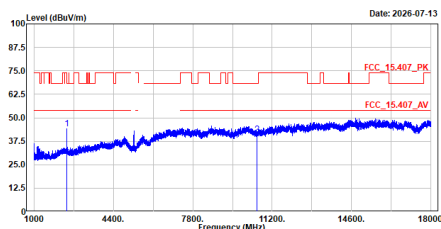


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2394.000	44.14	68.22	-24.08	67.90	-23.76	Peak
2	10540.000	41.17	68.22	-27.05	45.85	-4.68	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5270MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5270MHz
Test BY :Rock

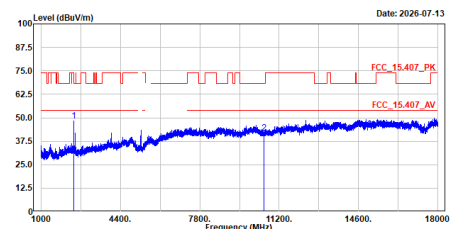


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2389.750	48.36	74.00	-25.64	72.11	-23.75	Peak
2	10540.000	41.81	68.22	-26.41	46.49	-4.68	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5310MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5310MHz
Test BY :Rock

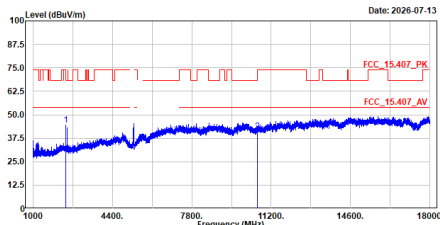


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	44.51	68.22	-23.71	68.26	-23.75	Peak
2	10620.000	41.07	74.00	-32.93	45.45	-4.38	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5310MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5310MHz
Test BY :Rock

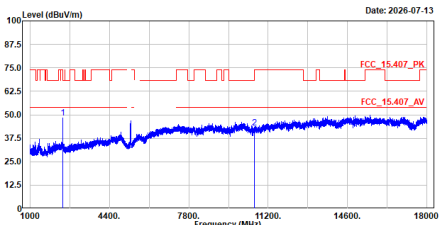


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	48.31	68.22	-19.91	72.06	-23.75	Peak
2	10620.000	42.93	74.00	-31.07	47.31	-4.38	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5510MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5510MHz
Test BY :Rock

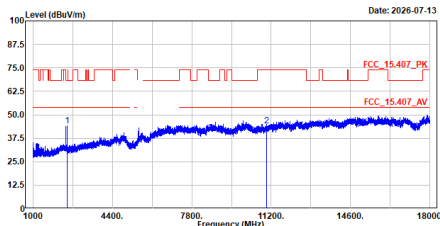


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2467.950	44.14	68.22	-24.08	67.98	-23.84	Peak
2	11020.000	44.11	74.00	-29.89	47.05	-2.94	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5510MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5510MHz
Test BY :Rock

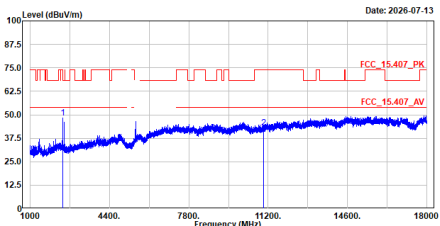


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2394.850	48.39	68.22	-19.83	72.15	-23.76	Peak
2	11020.000	42.90	74.00	-31.10	45.84	-2.94	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5550MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5550MHz
Test BY :Rock

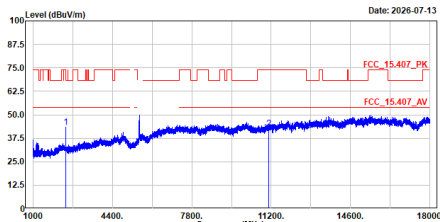


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2394.850	43.52	68.22	-24.70	67.28	-23.76	Peak
2	11100.000	42.65	74.00	-31.35	45.52	-2.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5550MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5550MHz
Test BY :Rock

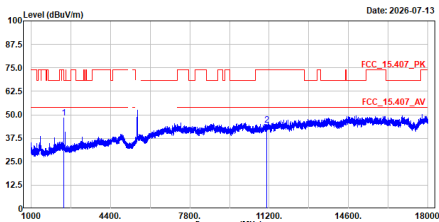


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2393.150	48.40	68.22	-19.82	72.16	-23.76	Peak
2	11100.000	44.57	74.00	-29.43	47.44	-2.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5670MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5670MHz
Test BY :Rock

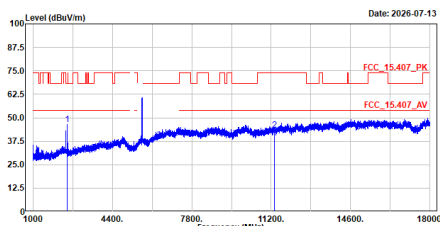


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2467.950	46.31	68.22	-21.91	70.15	-23.84	Peak
2	11340.000	43.29	74.00	-30.71	45.34	-2.05	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5670MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5670MHz
Test BY :Rock

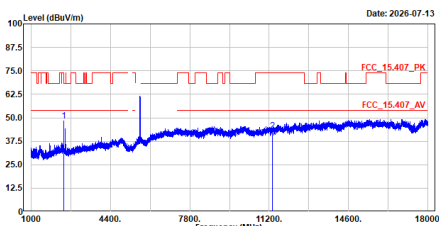


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2394.850	48.17	68.22	-20.05	71.93	-23.76	Peak
2	11340.000	43.19	74.00	-30.81	45.24	-2.05	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5710MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5710MHz
Test BY :Rock

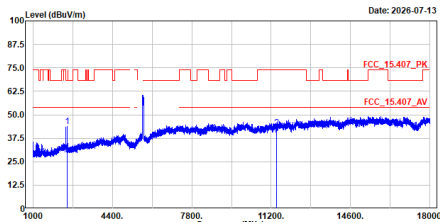


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2465.400	43.92	68.22	-24.30	67.76	-23.84	Peak
2	11420.000	43.07	74.00	-30.93	45.05	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5710MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5710MHz
Test BY :Rock

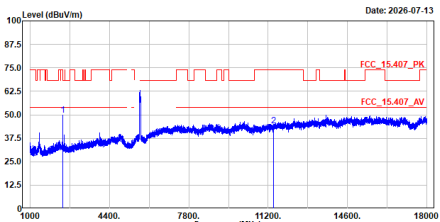


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2390.600	49.72	68.22	-18.50	73.47	-23.75	Peak
2	11420.000	44.20	74.00	-29.80	46.18	-1.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5755MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5755MHz
Test BY :Rock

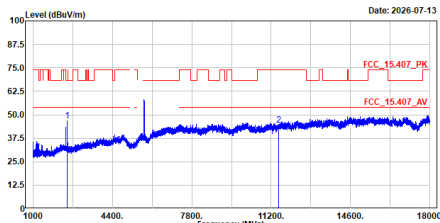


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2456.050	46.88	68.22	-21.34	70.75	-23.87	Peak
2	11510.000	44.43	74.00	-29.57	46.25	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5755MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5755MHz
Test BY :Rock

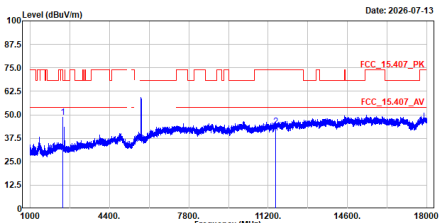


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2392.300	48.71	68.22	-19.51	72.46	-23.75	Peak
2	11510.000	43.78	74.00	-30.22	45.60	-1.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5795MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax40_5795MHz
Test BY :Rock

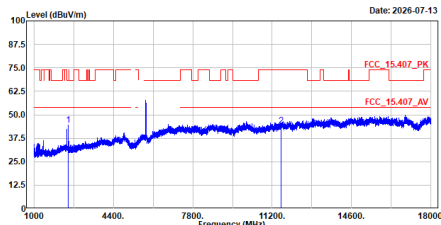


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2456.050	44.36	68.22	-23.86	68.23	-23.87	Peak
2	11590.000	44.15	74.00	-29.85	46.00	-1.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5795MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax40_5795MHz
Test BY :Rock

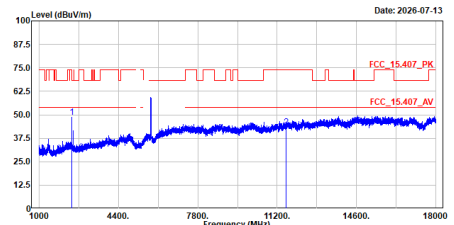


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2392.300	48.71	68.22	-19.51	72.46	-23.75	Peak
2	11590.000	43.28	74.00	-30.72	45.13	-1.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5210MHz
Test BY :Rock

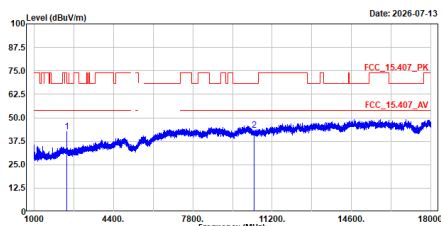


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2393.150	42.56	68.22	-25.66	66.32	-23.76	Peak
2	10420.000	43.34	68.22	-24.88	48.53	-5.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
Test BY :Rock

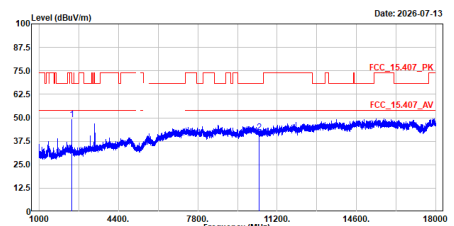


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2388.900	49.14	74.00	-24.86	72.88	-23.74	Peak
2	10420.000	42.10	68.22	-26.12	47.29	-5.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5290MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5290MHz
Test BY :Rock

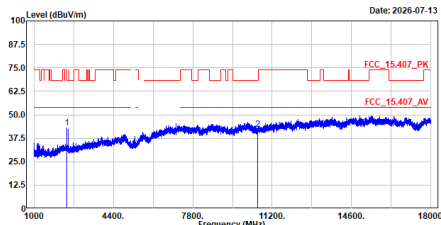


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2391.450	42.83	68.22	-25.39	66.58	-23.75	Peak
2	10580.000	42.11	68.22	-26.11	46.66	-4.55	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5290MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5290MHz
Test BY :Rock

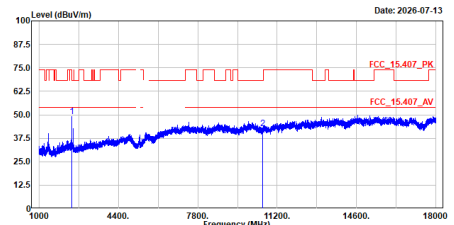


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2393.150	49.22	68.22	-19.00	72.98	-23.76	Peak
2	10580.000	42.47	68.22	-25.75	47.02	-4.55	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5530MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5530MHz
Test BY :Rock

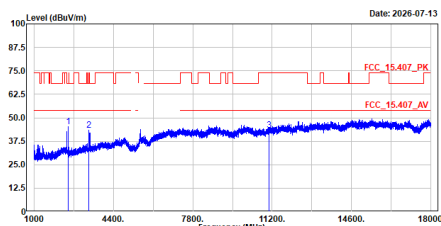


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2455.200	45.37	68.22	-22.85	69.25	-23.88	Peak
2	3351.950	43.46	74.00	-30.54	65.30	-21.04	Peak
3	11060.000	43.48	74.00	-30.52	46.36	-2.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5530MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5530MHz
Test BY :Rock

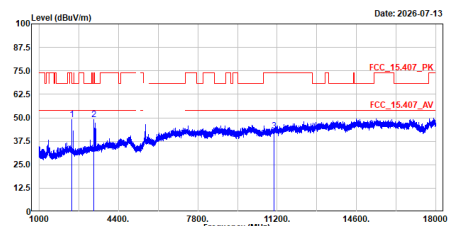


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2390.600	48.95	68.22	-19.27	72.70	-23.75	Peak
2	3344.300	49.23	68.22	-18.99	71.09	-21.06	Peak
3	11060.000	42.89	74.00	-31.11	45.77	-2.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5610MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5610MHz
Test BY :Rock

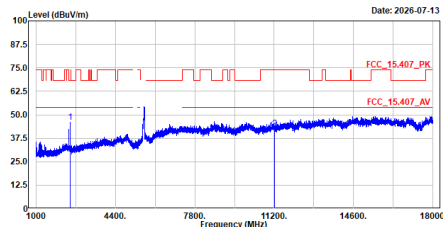


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2455.200	46.22	68.22	-22.00	70.10	-23.88	Peak
2	11220.000	42.78	74.00	-31.22	45.48	-2.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5610MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5610MHz
Test BY :Rock

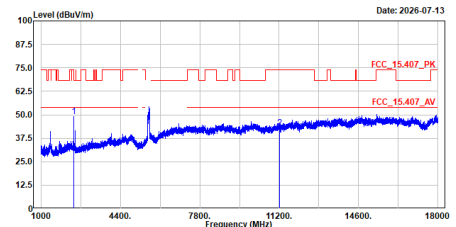


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2391.450	49.14	68.22	-19.08	72.89	-23.75	Peak
2	11220.000	43.18	74.00	-30.82	45.88	-2.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5690MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5690MHz
Test BY :Rock

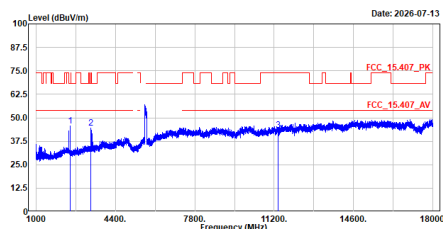


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2455.200	45.64	68.22	-22.58	69.52	-23.88	Peak
2	3346.850	44.65	74.00	-29.35	66.50	-21.85	Peak
3	11380.000	43.26	74.00	-30.74	45.22	-1.96	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5690MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5690MHz
Test BY :Rock

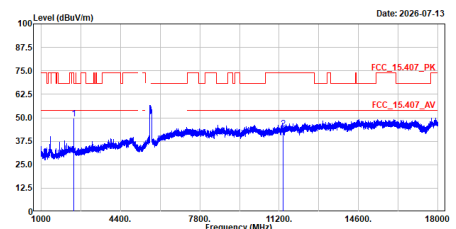


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	2389.750	49.43	74.00	-24.57	73.18	-23.75	Peak
2	11380.000	44.03	74.00	-29.97	45.99	-1.96	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5775MHz_H


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5775MHz
Test BY :Rock

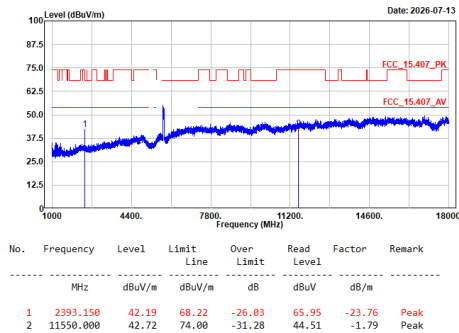

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5775MHz_V


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5775MHz
Test BY :Rock

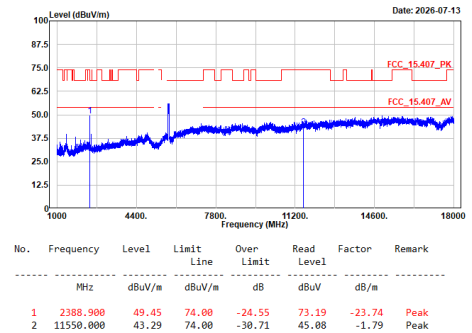

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_H


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5775MHz
Test BY :Ashton

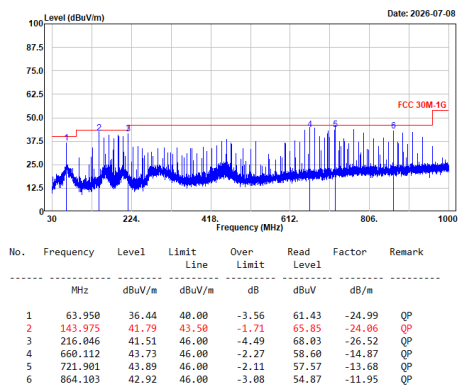

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_ac80_5775MHz_V


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5775MHz
Test BY :Ashton

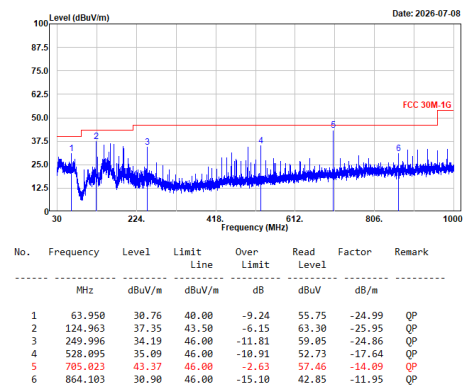

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_ax80_5775MHz_H

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ax80_5775MHz
Test BY :Ashton

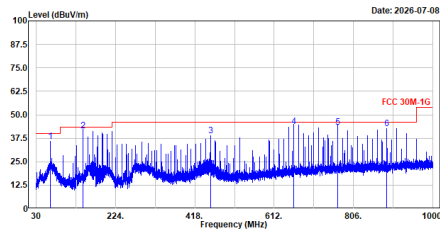


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	63.950	35.90	40.00	-4.10	60.89	-24.99	QP
2	143.975	41.43	43.50	-2.07	65.49	-24.06	QP
3	456.121	38.77	46.00	-7.23	57.68	-18.91	QP
4	660.112	43.90	46.00	-2.10	58.77	-14.87	QP
5	768.170	43.39	46.00	-2.61	56.28	-12.89	QP
6	888.159	42.67	46.00	-3.33	54.52	-11.85	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_ax80_5775MHz_V

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ax80_5775MHz
Test BY :Ashton

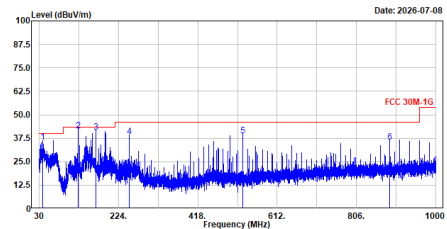


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	38.827	35.39	40.00	-4.61	59.61	-24.22	QP
2	124.963	41.52	43.50	-1.98	67.47	-25.95	QP
3	168.031	40.79	43.50	-2.71	65.06	-24.27	QP
4	249.996	38.55	46.00	-7.45	63.41	-24.86	QP
5	528.095	38.88	46.00	-7.12	56.52	-17.64	QP
6	888.159	35.66	46.00	-10.34	47.51	-11.85	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_a_5180MHz_H_Average

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Ashton

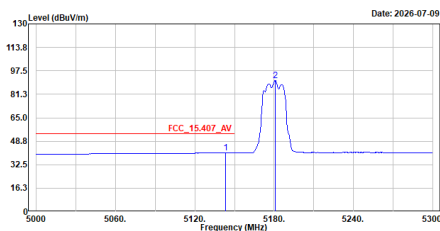


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5143.100	40.59	54.00	-13.41	24.73	15.86	Average
2	5180.900	90.64	-----	-----	74.64	16.00	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_H_Peak

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Ashton

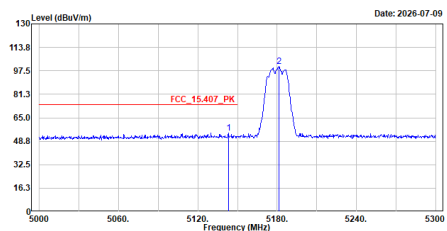


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5143.100	54.25	74.00	-19.75	38.39	15.86	Peak
2	5181.200	100.74	-----	-----	84.74	16.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_V_Average

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Ashton

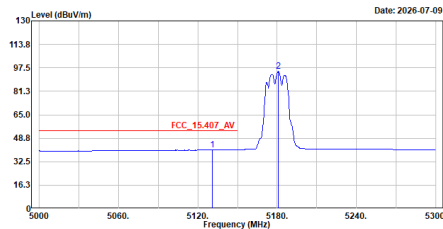


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5131.100	40.63	54.00	-13.37	24.77	15.86	Average
2	5180.900	94.94	-----	-----	78.94	16.00	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_V_Peak

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Ashton

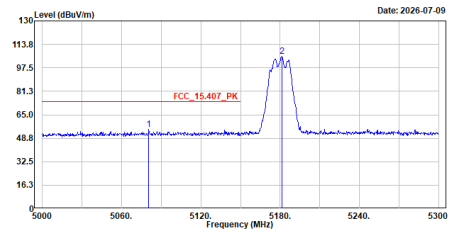


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5080.700	54.94	74.00	-19.06	39.02	15.92	Peak
2	5181.200	105.32	-----	-----	89.32	16.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5320MHz_H_Average

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Ashton

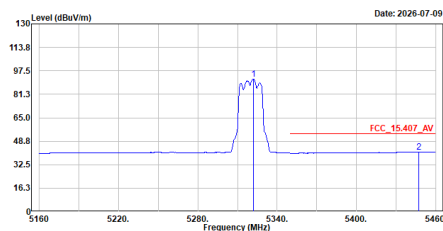


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5322.000	91.82	-----	-----	75.78	16.04	Average
2	5447.100	41.26	54.00	-12.74	25.02	16.24	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5320MHz_H_Peak

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Ashton

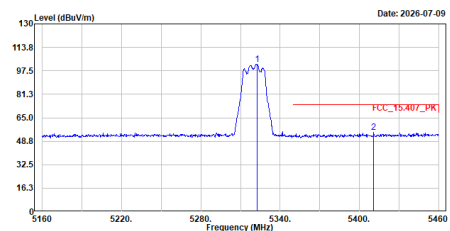


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5322.600	102.22	-----	-----	86.18	16.04	Peak
2	5410.800	54.75	74.00	-19.25	38.62	16.13	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5320MHz_V_Average

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Ashton

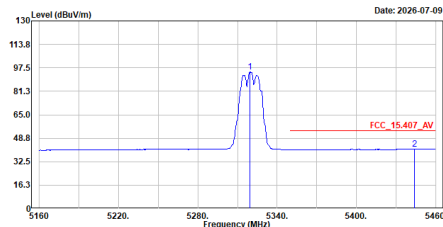


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5319.600	94.69	-----	-----	78.64	16.05	Average
2	5444.100	41.23	54.00	-12.75	25.01	16.24	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5320MHz_V_Peak

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Ashton

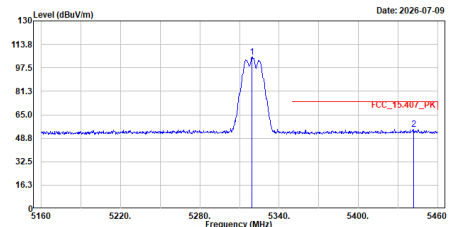


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5319.300	104.89	-----	-----	88.84	16.05	Peak
2	5442.000	55.14	74.00	-18.86	38.91	16.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5500MHz_H_Average

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Ashton

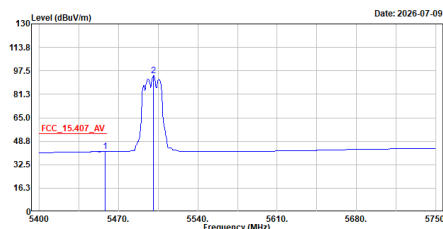


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5458.450	41.60	54.00	-12.40	25.34	16.26	Average
2	5500.800	94.05	-----	-----	77.73	16.32	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5500MHz_H_Peak

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Ashton

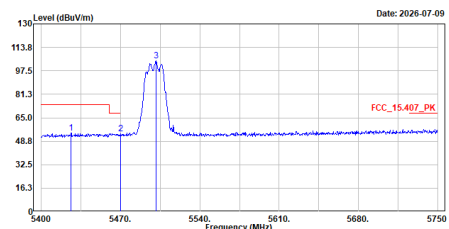

No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5426.250	54.31	74.00	-19.69	38.13	16.18	Peak
2	5470.000	54.13	68.22	-14.09	37.85	16.28	Peak
3	5501.150	104.26	-----	-----	87.93	16.33	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.