




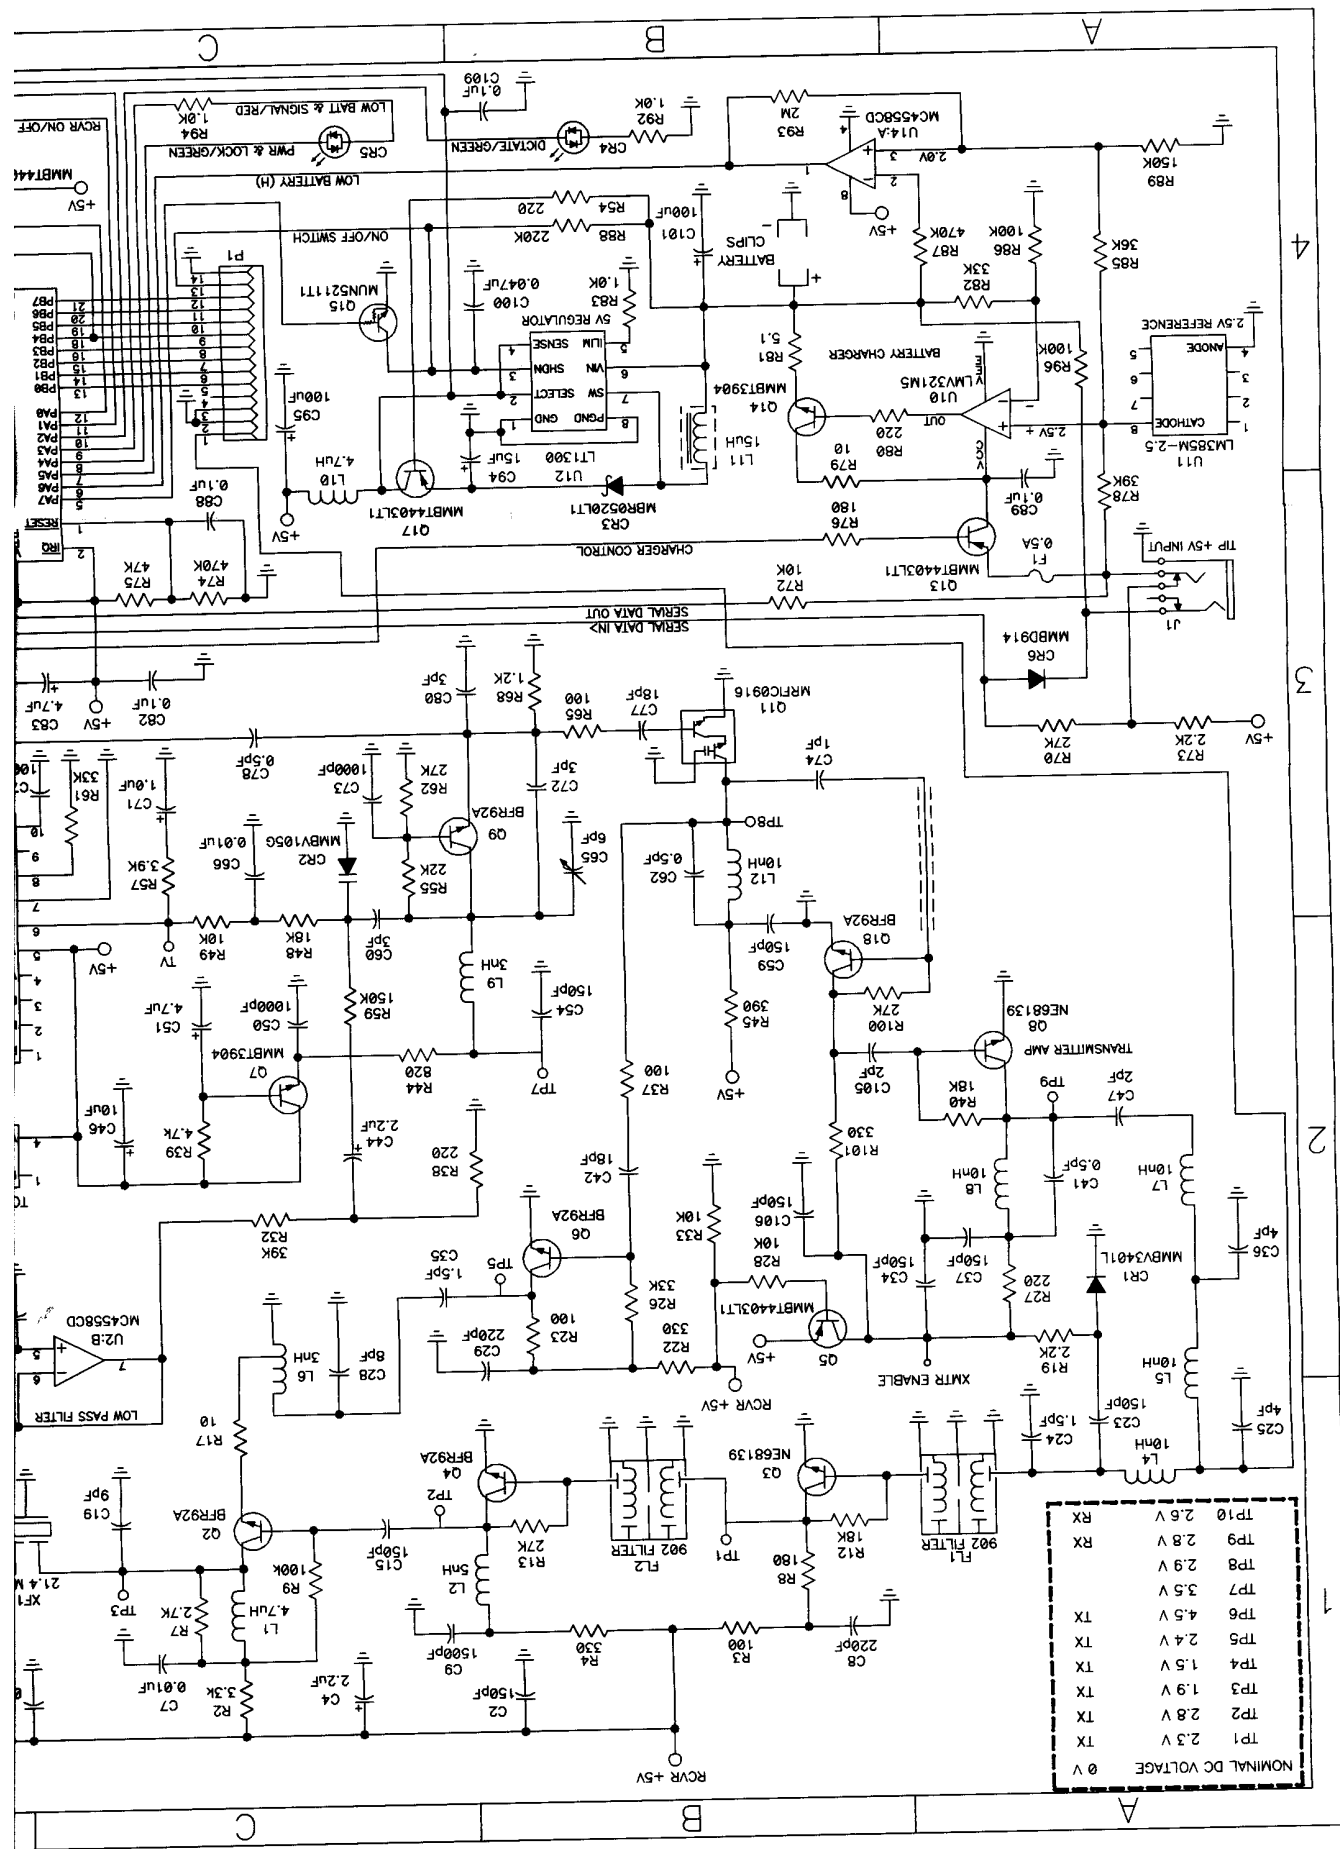

TP1	2.3 V	TX
TP2	2.8 V	TX
TP3	1.9 V	TX
TP4	1.5 V	TX
TP5	2.4 V	TX
TP6	4.5 V	TX
TP7	3.5 V	TX
TP8	2.9 V	RX
TP9	2.8 V	RX
TP10	2.6 V	RX

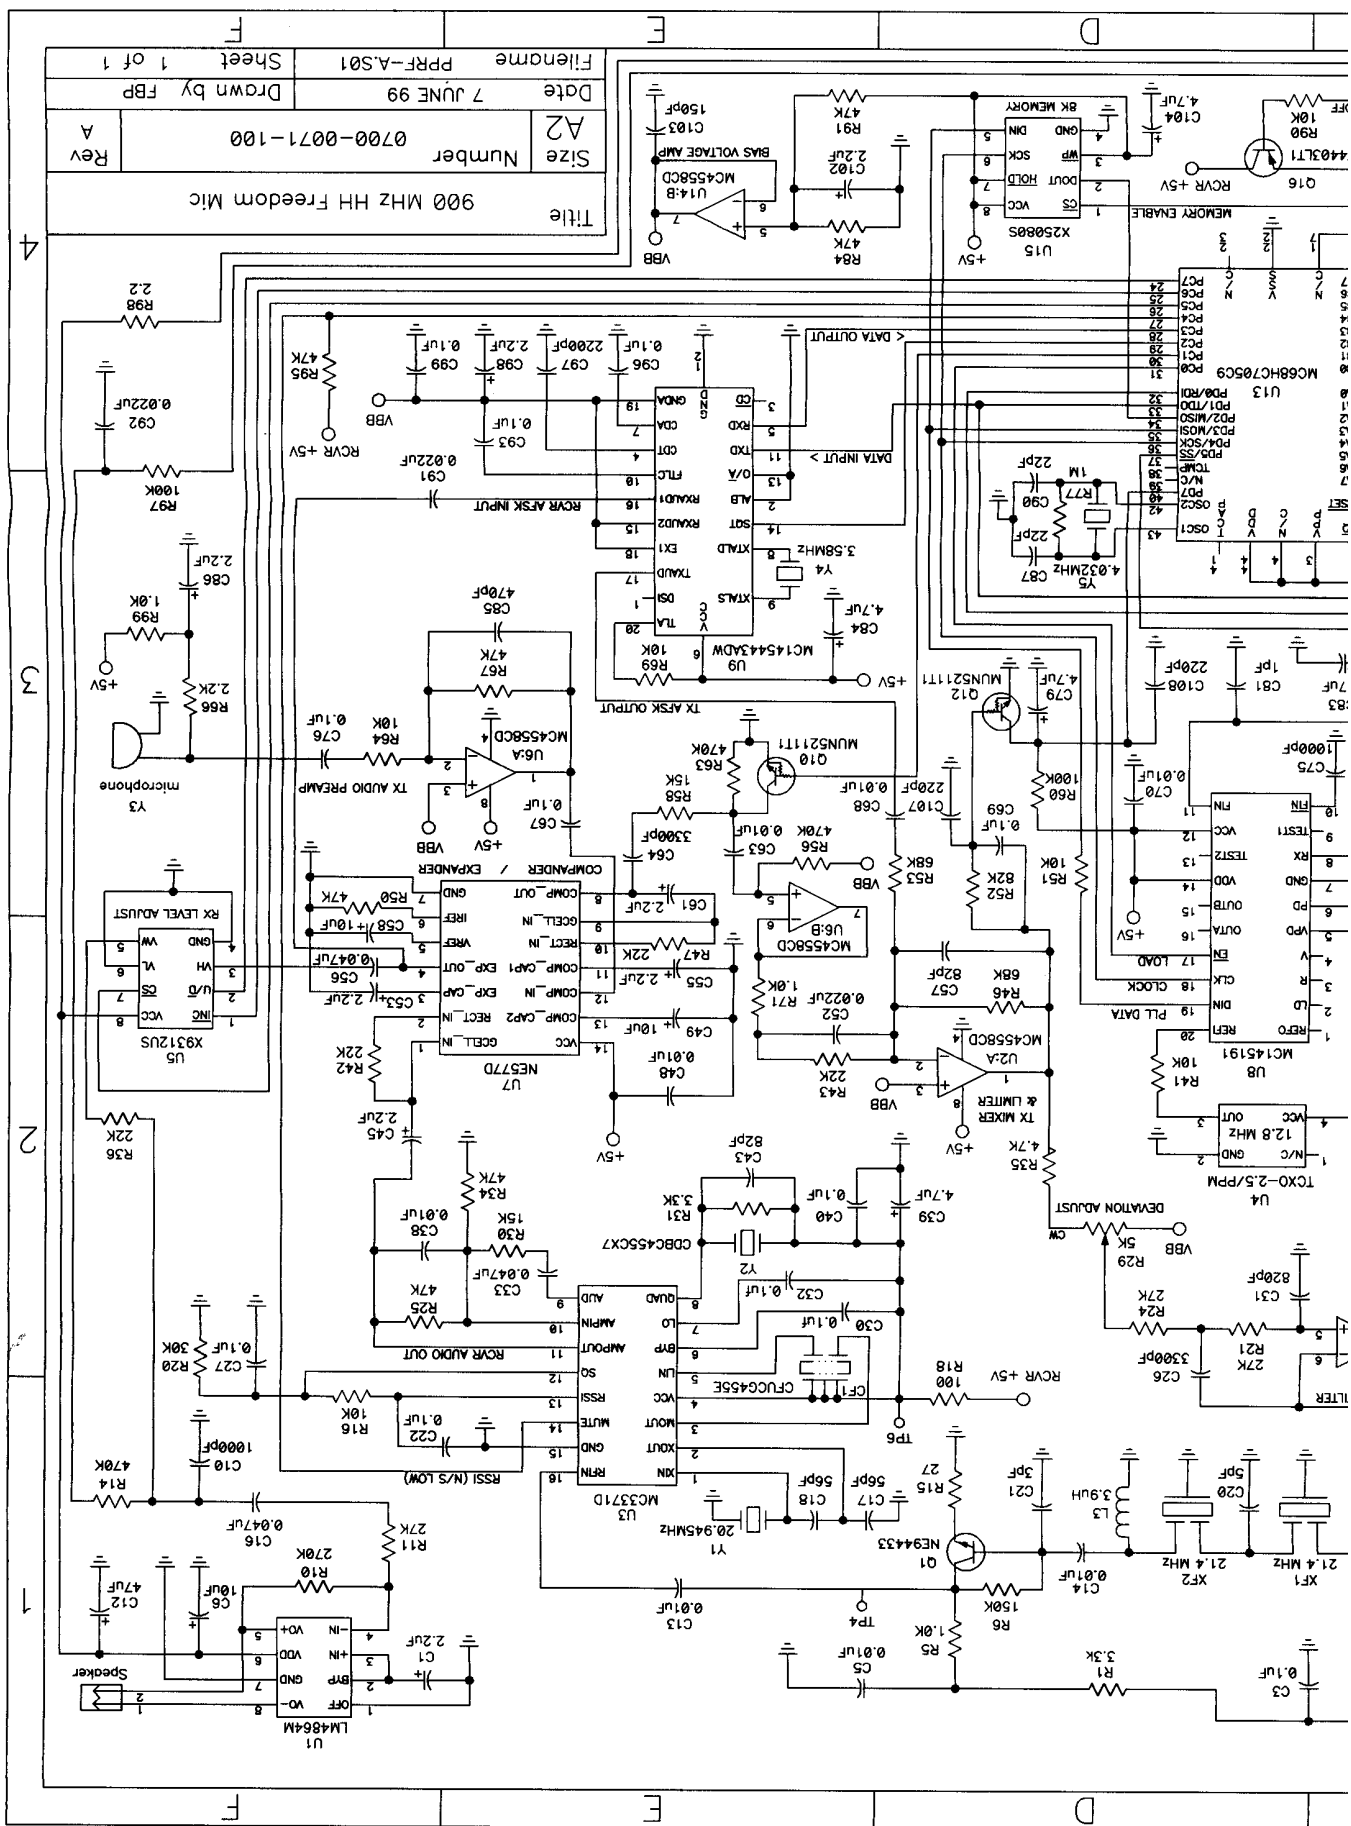

SCHE-00XX-000

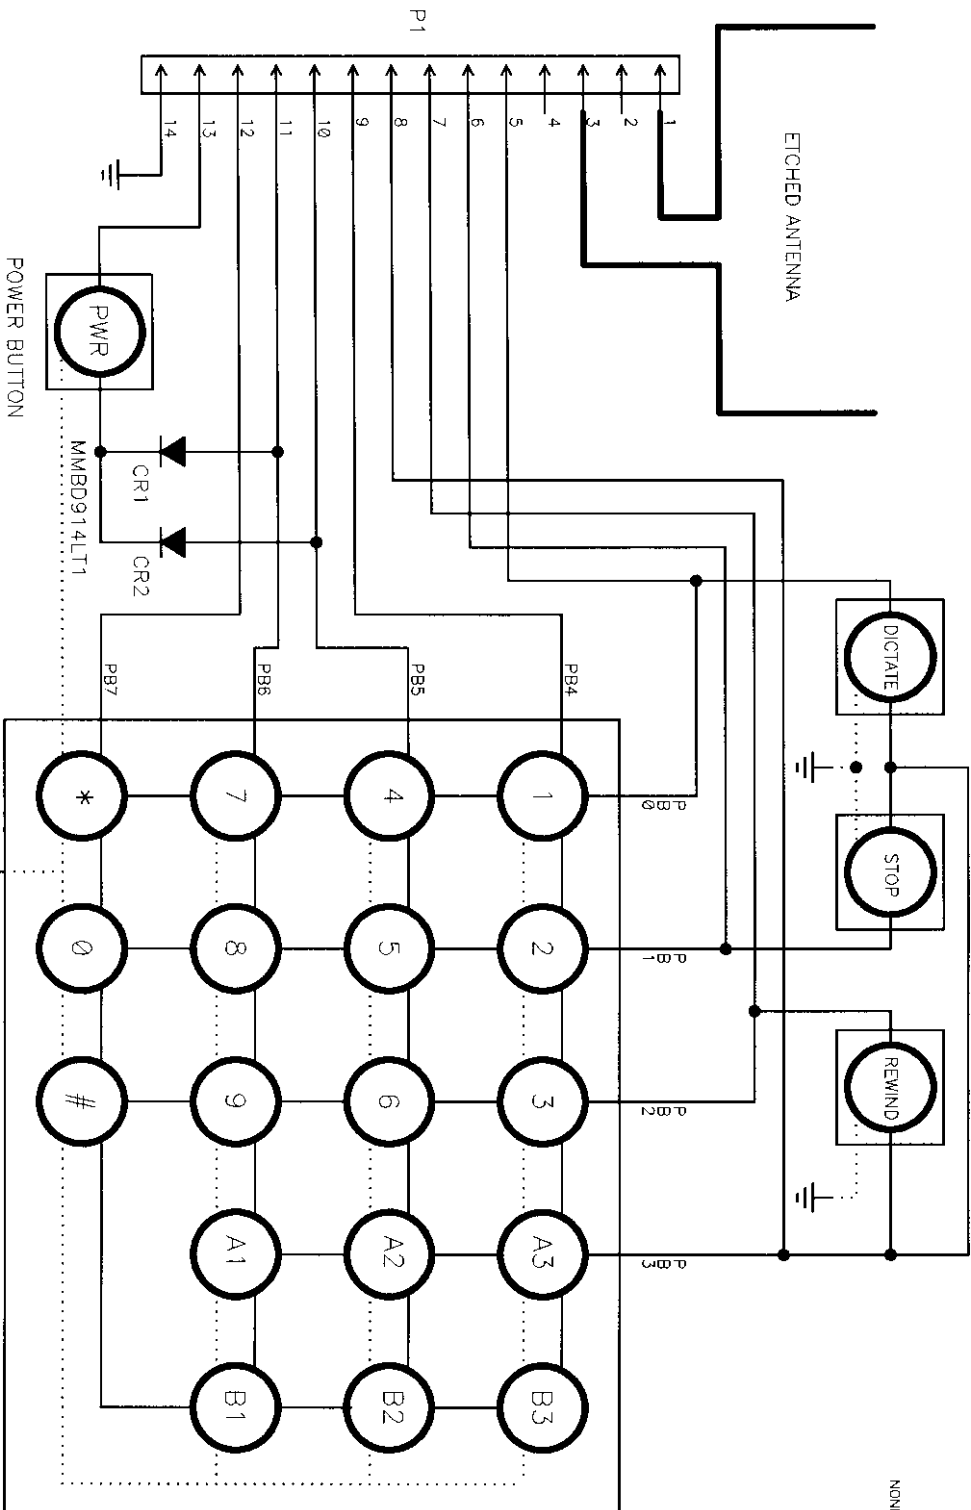

- NONE PRESSED 1111 1111
- DICTATE 0110 1111
- PLAY 1010 1111
- REWIND 1100 1111
- 1. 0111 0111
- 2. 1011 0111
- 3. 1101 0111
- 4. 0111 1011
- 5. 1011 1011
- 6. 1101 1011
- 7. 0111 1101
- 8. 1011 1101
- 9. 1101 1101
- *. 0111 1110
- 0. 1011 1110
- #. 1101 1110
- A1 1110 1101
- A2 1110 1011
- A3 1110 0111
- B1 1111 1100
- B2 1111 1010
- B3 1111 0110
- PWR 1111 1001

NOTE: BUTTON PRESS SHORTS ALL WIRES TOUCHING IT TOGETHER

Title FREEDOM MIC KEYPAD		
Size A	Number 0700-0069-005	Rev 5
Date 12/FEBRUARY/99	Drawn by FBP	
Filename FMKEYPAD.S01	Sheet 1	of 1