




Test Mode : 4TX 11be EHT20 CH100 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

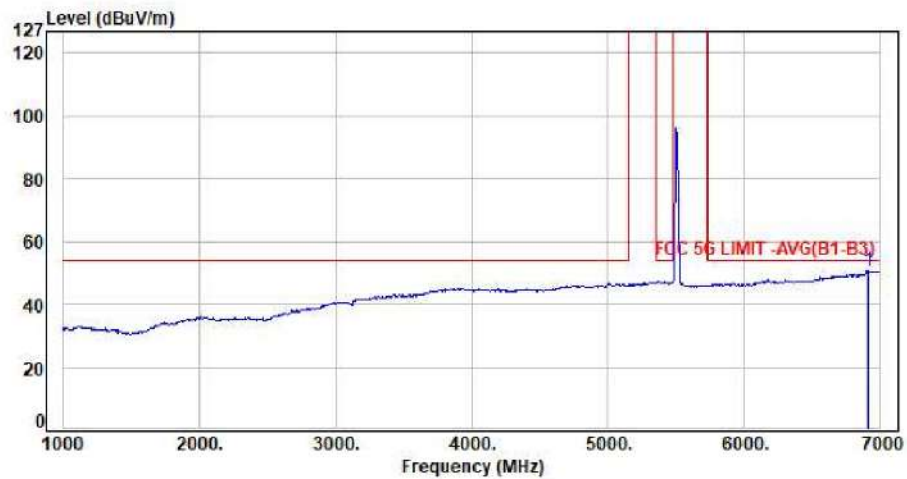


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6904.00	3.76	46.75	50.51	54.00	-3.49	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH100 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

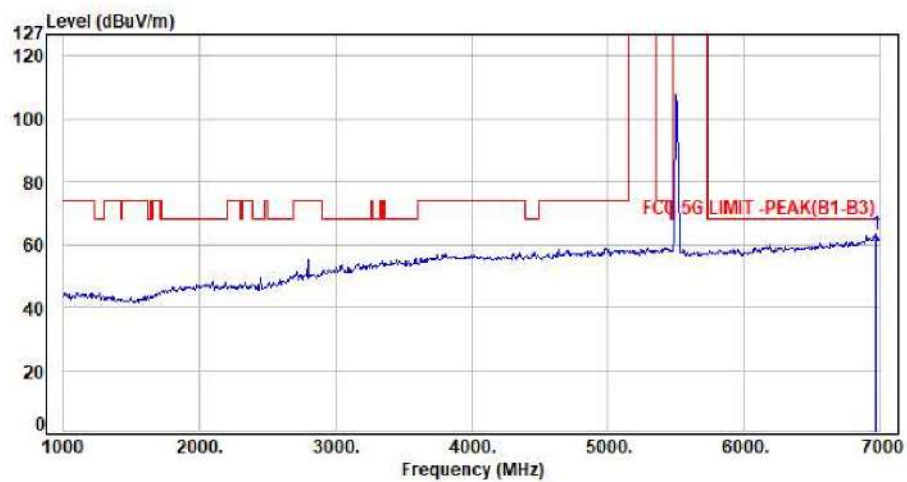


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5964.00	3.71	59.66	63.37	68.20	-4.83	Peak	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH120 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

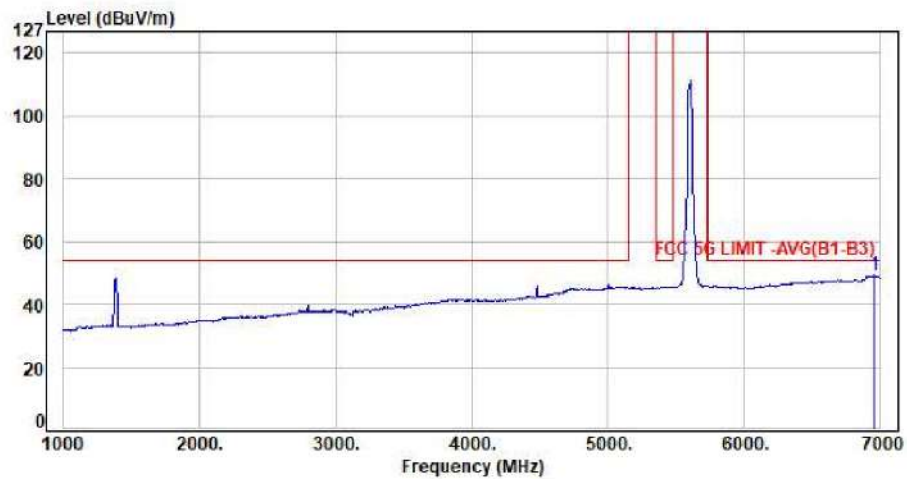


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6958.00	3.72	45.34	49.06	54.00	-4.94	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH120 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

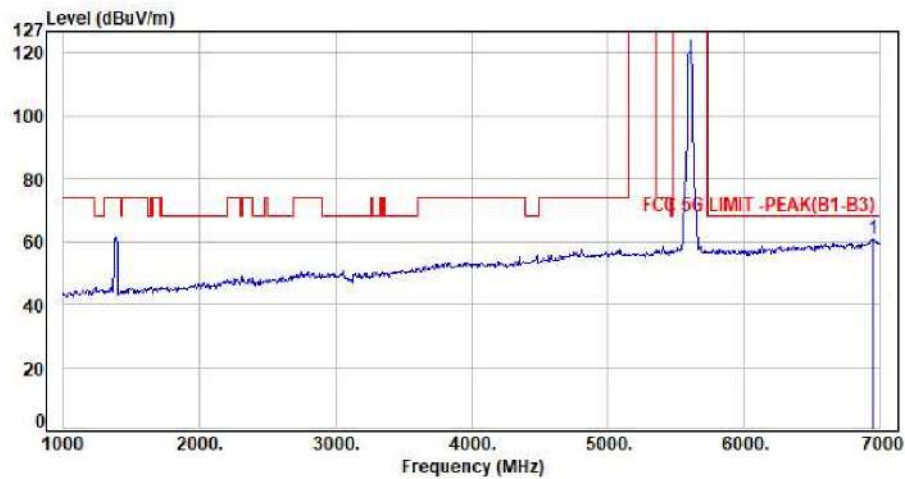


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5710.00	3.75	57.10	60.85	68.20	-7.35	Peak	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH120 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

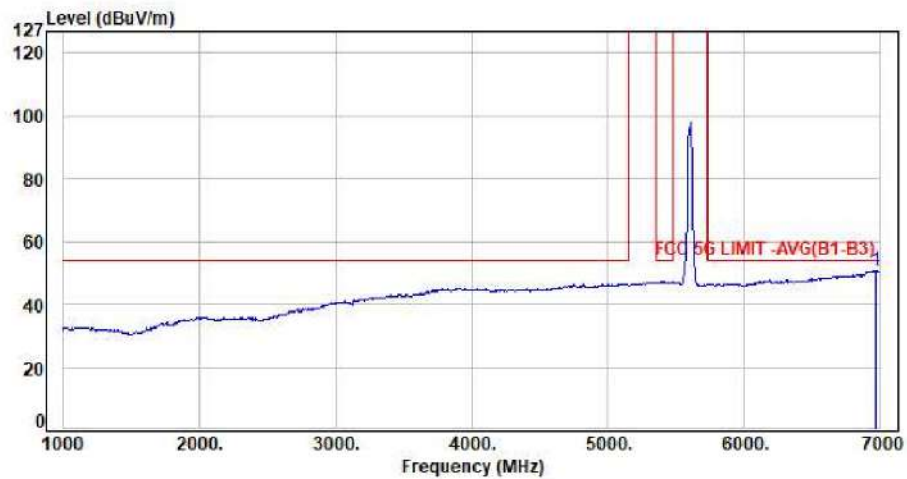


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6964.00	3.71	46.89	50.60	54.00	-3.40	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH120 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

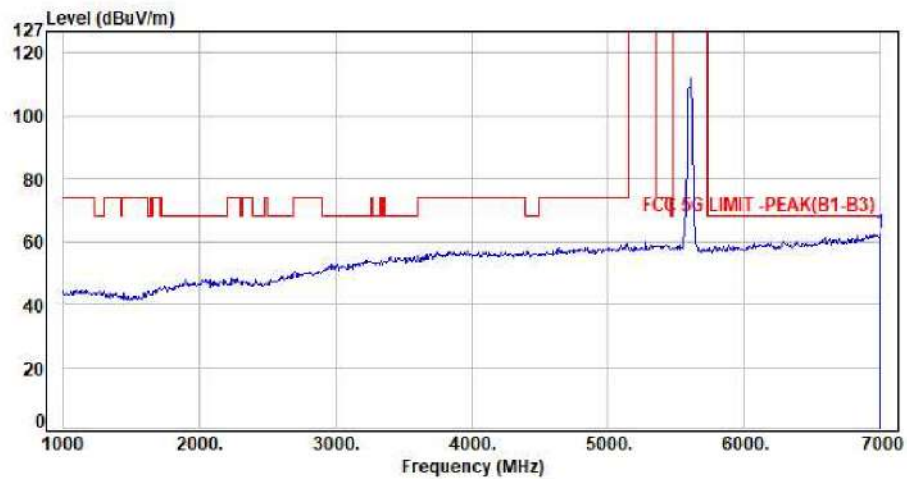


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	7000.00	3.63	59.07	62.70	68.20	-5.50	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH140 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

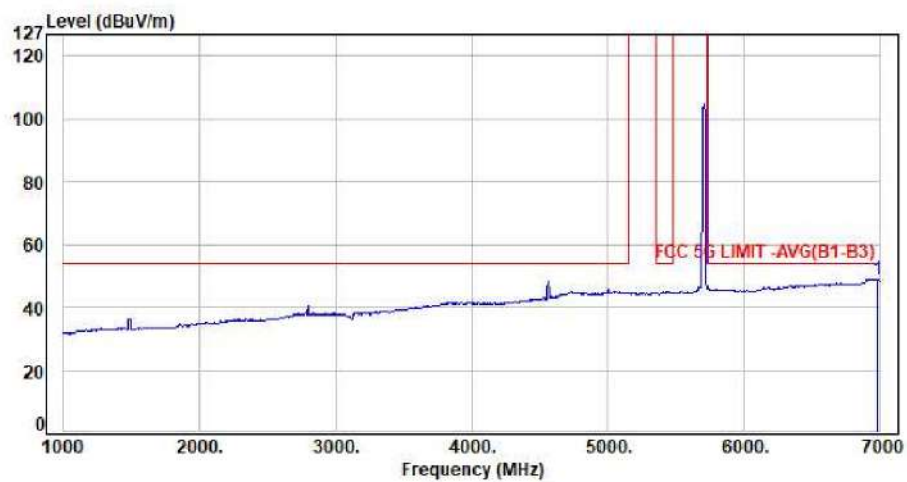


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6976.00	3.68	45.32	49.00	54.00	-5.00	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH140 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

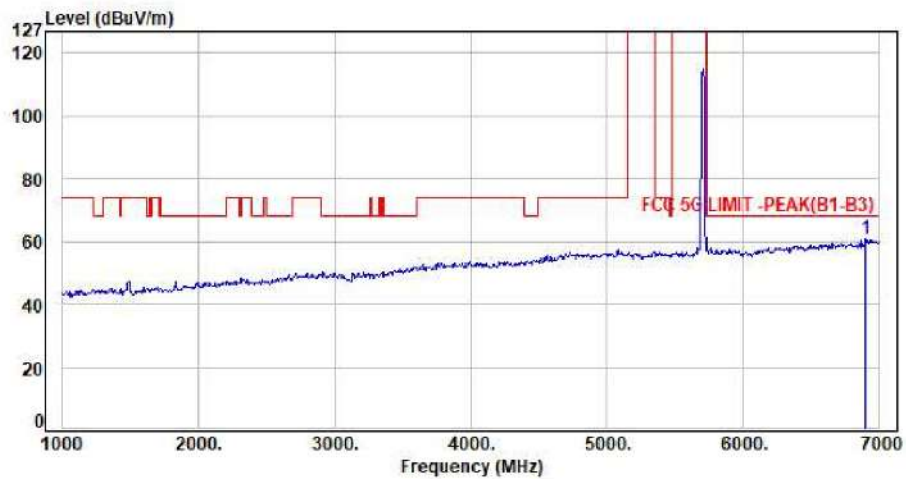


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6898.00	3.75	57.06	60.81	68.20	-7.39	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH140 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

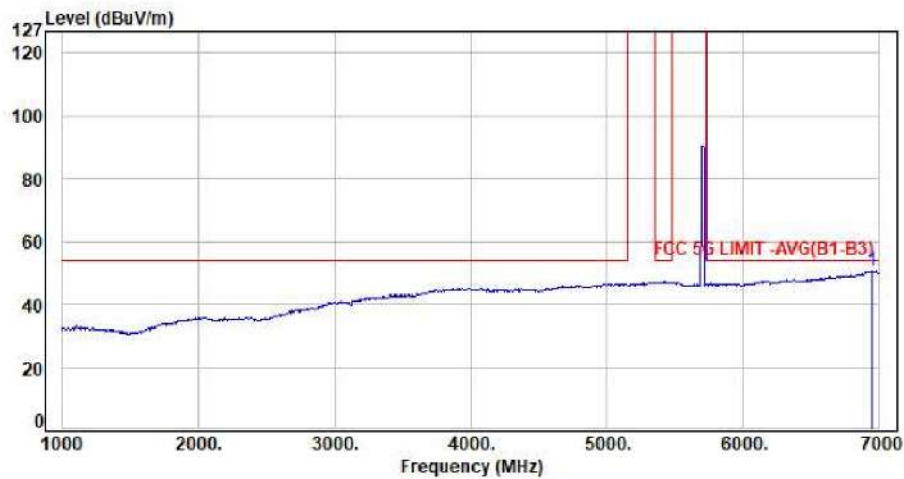


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6946.00	3.74	46.77	50.51	54.00	-3.49	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH140 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

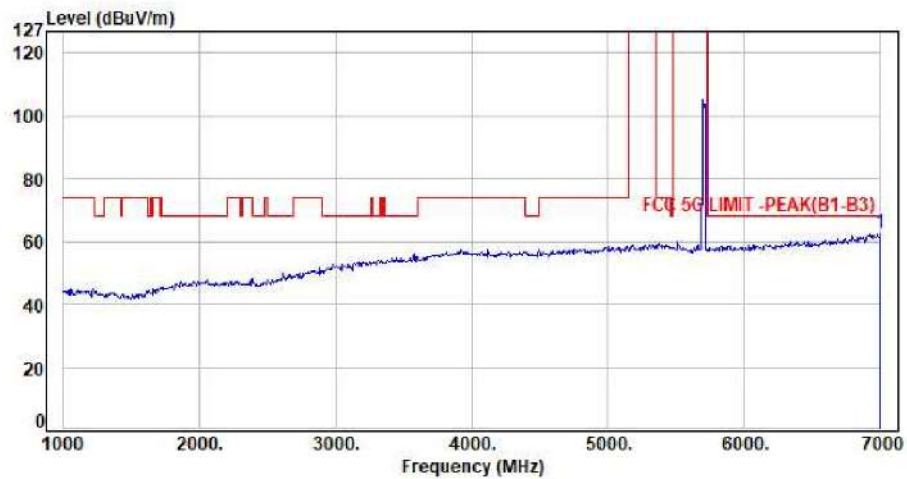


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	7000.00	3.63	59.14	62.77	68.20	-5.43	Peak	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH102 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

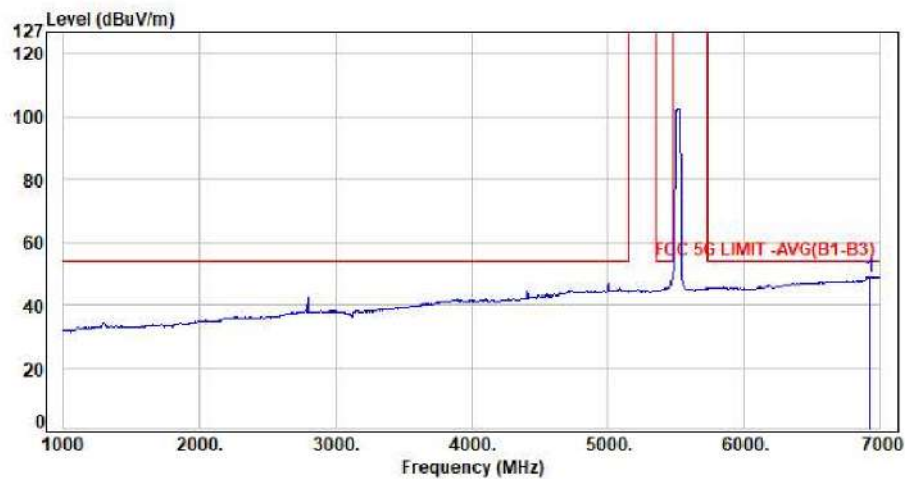


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6922.00	3.76	45.22	48.98	54.00	-5.02	Average	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH102 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

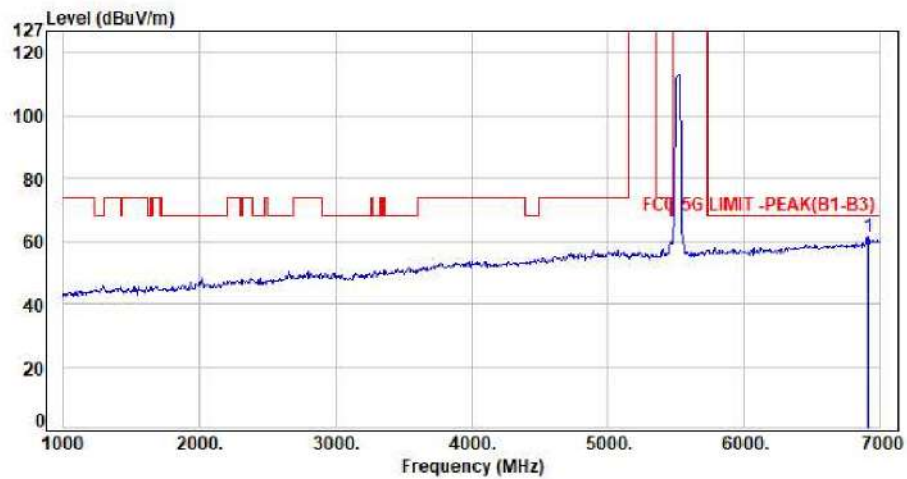


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6904.00	3.76	57.34	61.10	68.20	-7.10	Peak	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH102 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

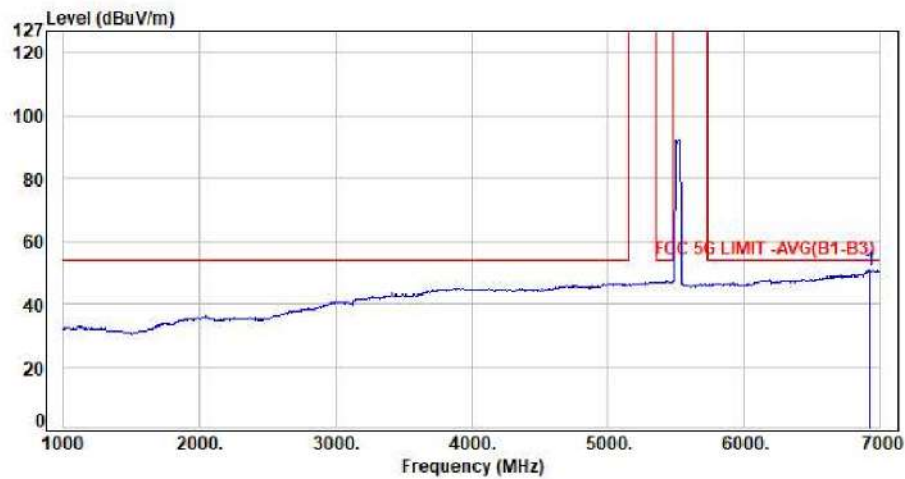


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	47.02	50.77	54.00	-3.23	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH102 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

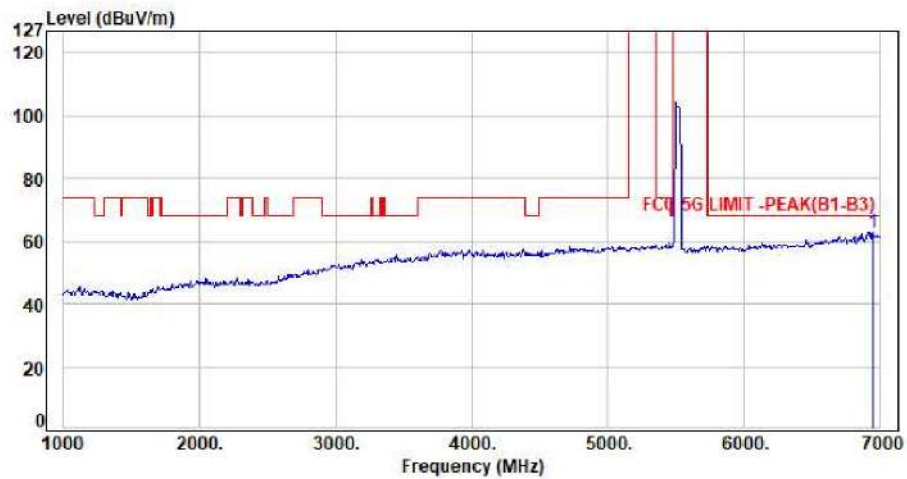


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	59.26	63.01	68.20	-5.19	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH118 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

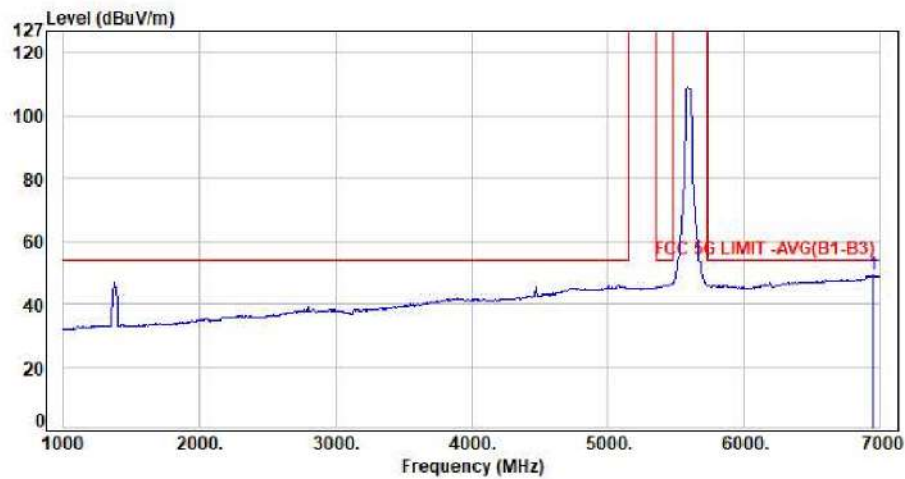


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	45.44	49.19	54.00	-4.81	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH118 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

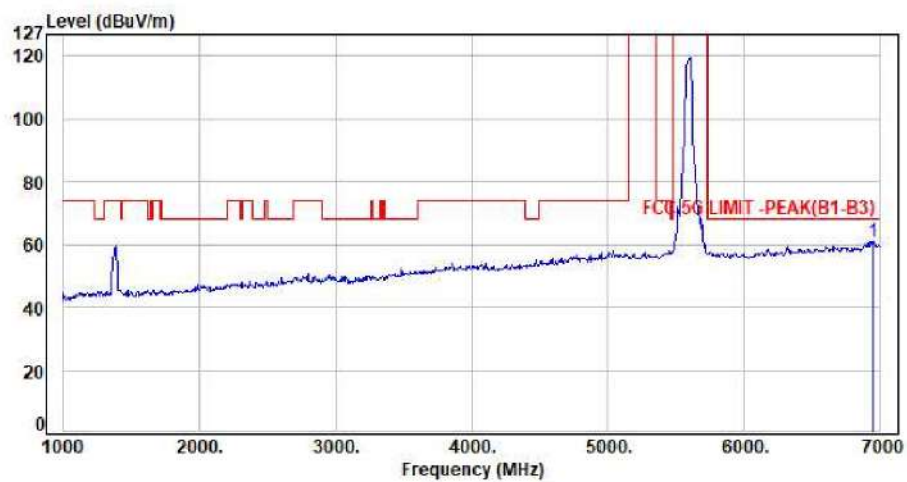


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	57.25	61.00	68.20	-7.20	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH118 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

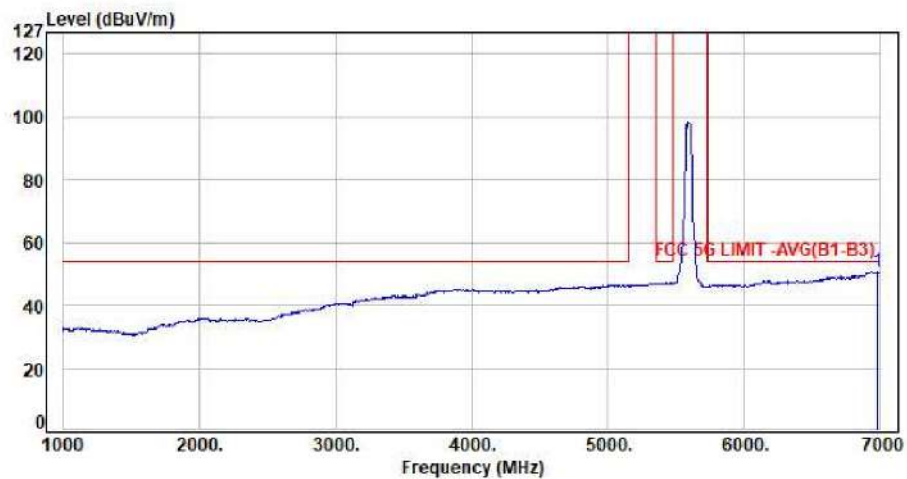


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6976.00	3.68	47.14	50.82	54.00	-3.18	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH118 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

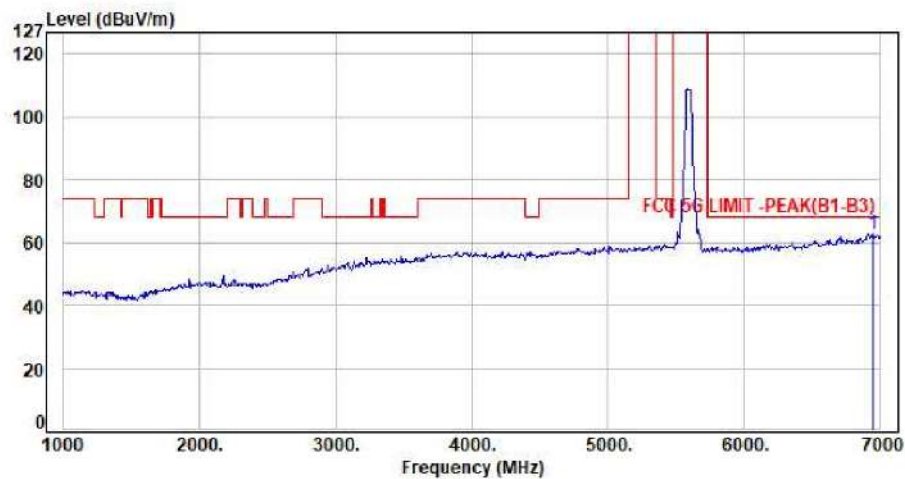


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	59.13	62.88	68.20	-5.32	Peak	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH134 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

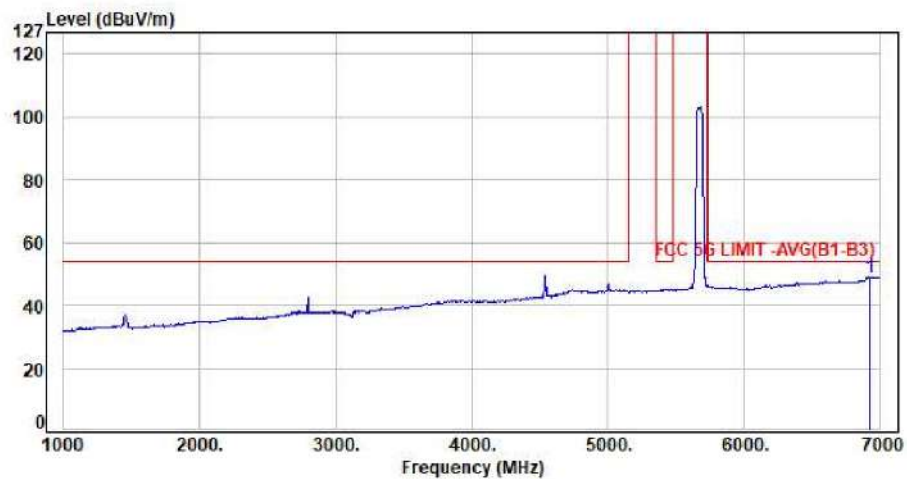


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	45.24	48.99	54.00	-5.01	Average	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH134 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

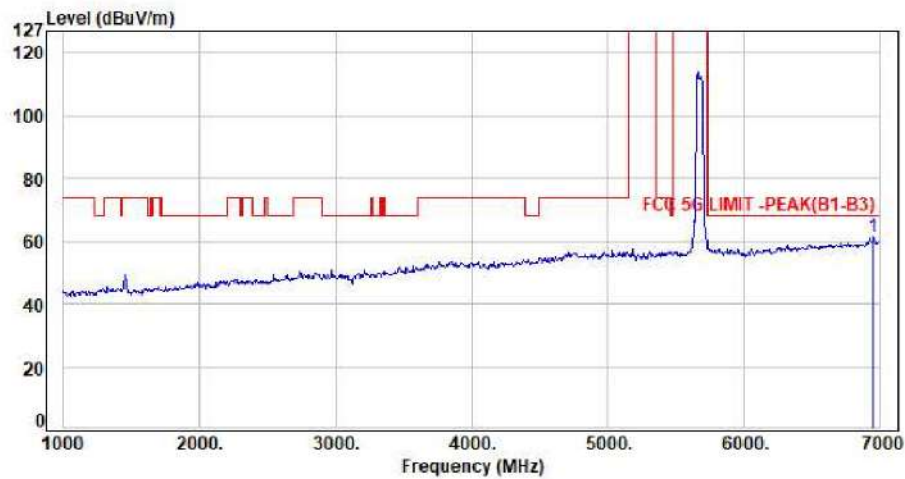


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6946.00	3.74	57.60	61.34	68.20	-6.86	Peak	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH134 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

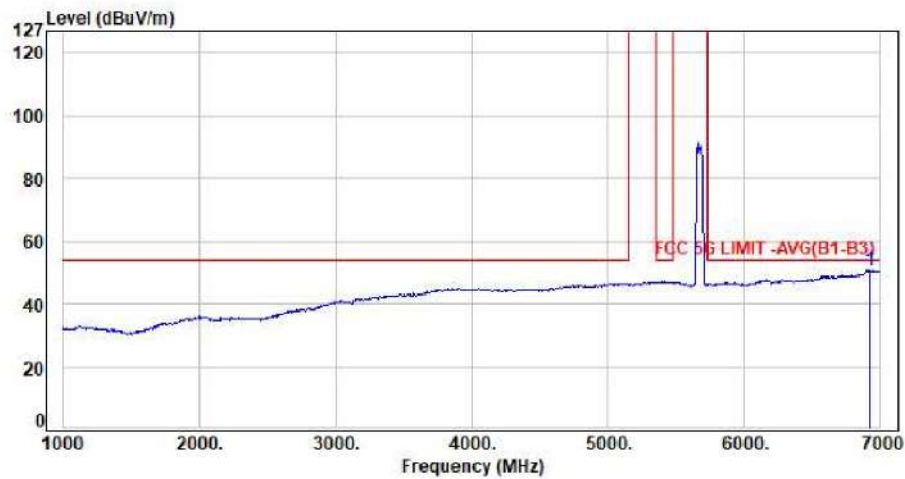


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	47.03	50.78	54.00	-3.22	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH134 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

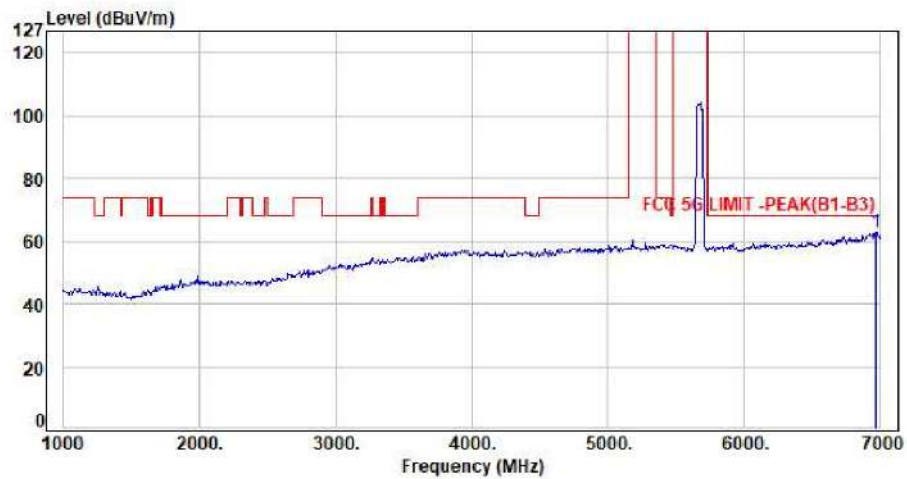


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6964.00	3.71	58.96	62.67	68.20	-5.53	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH106 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

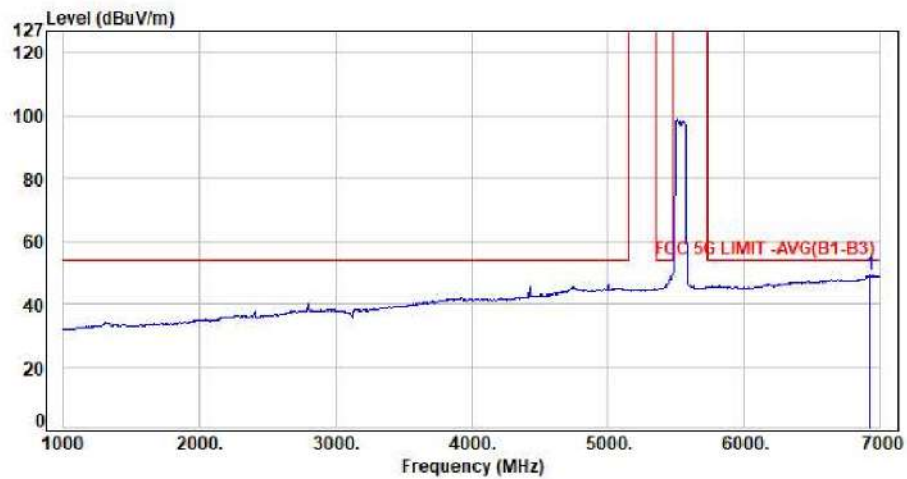


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	45.30	49.05	54.00	-4.95	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH106 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

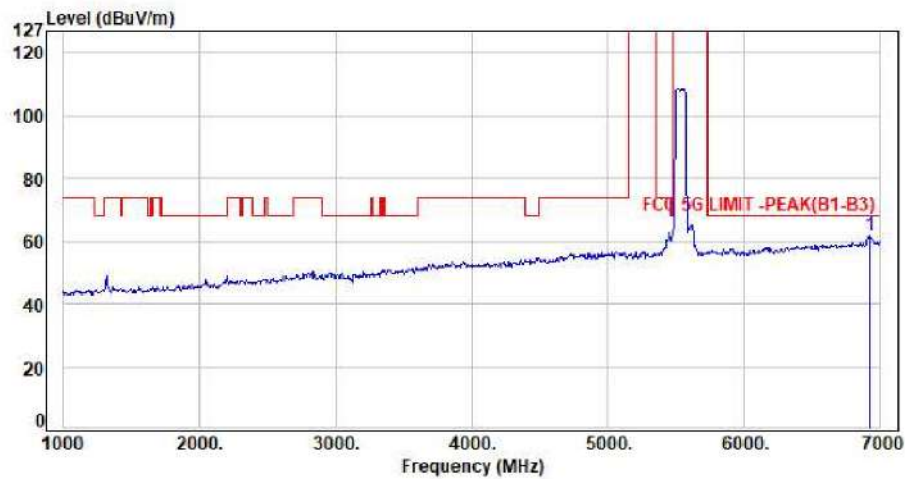


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	58.01	61.76	68.20	-6.44	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH106 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

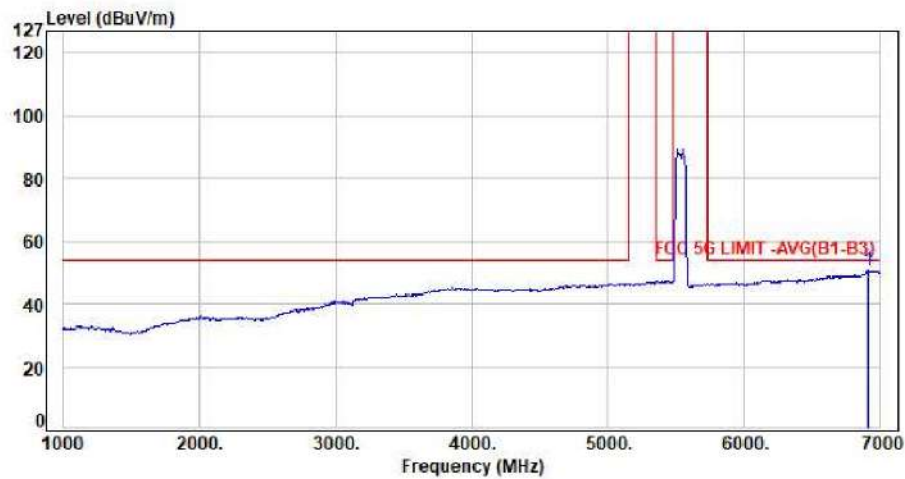


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6904.00	3.76	46.82	50.58	54.00	-3.42	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH106 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

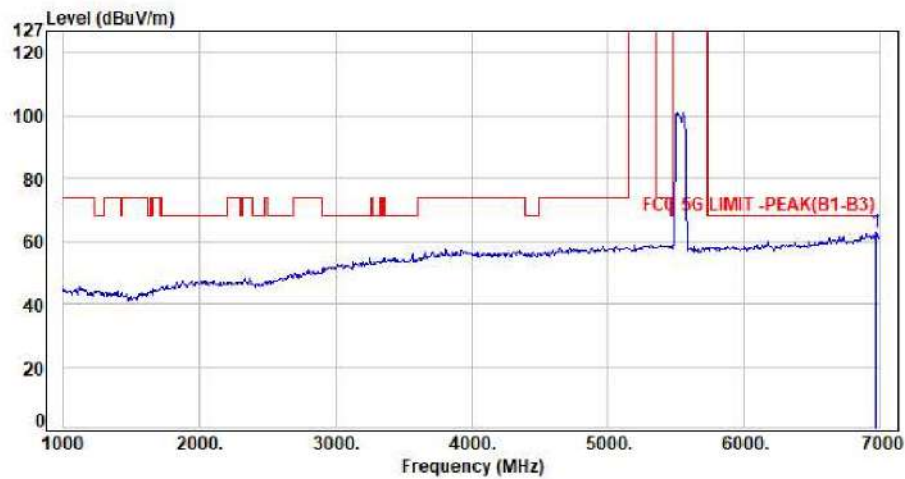


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6964.00	3.71	59.18	62.89	68.20	-5.31	Peak	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH122 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

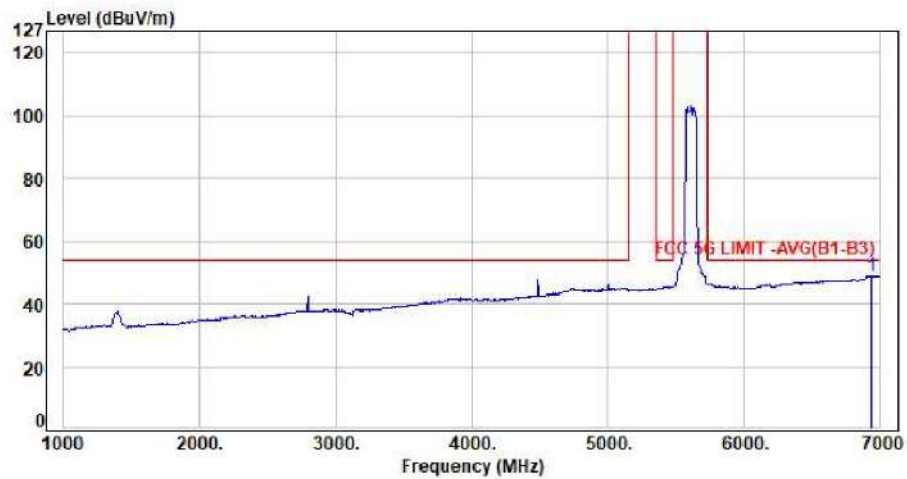


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6928.00	3.75	45.24	48.99	54.00	-5.01	Average	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH122 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

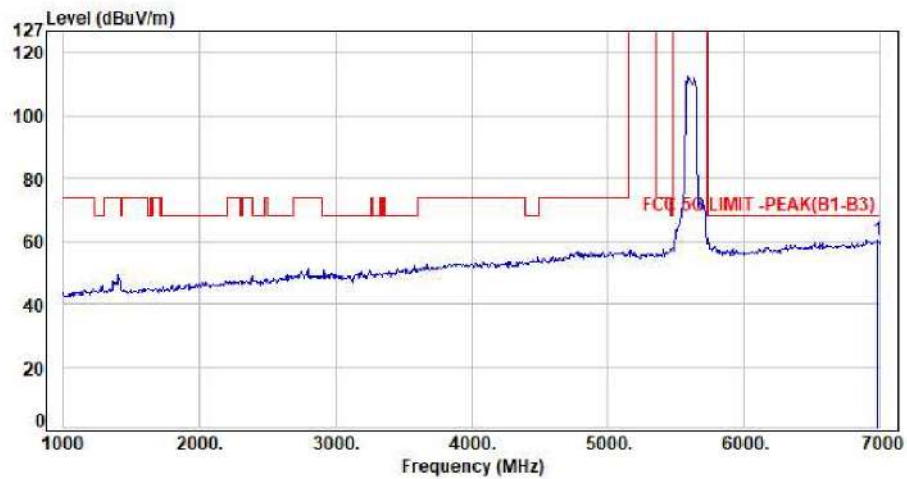


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6976.00	3.68	56.63	60.31	68.20	-7.89	Peak	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH122 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

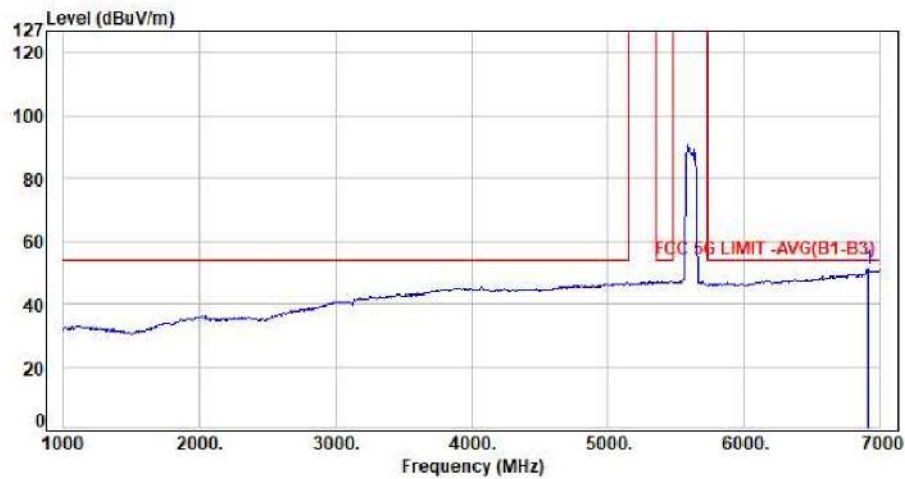


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6904.00	3.76	47.30	51.06	54.00	-2.94	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH122 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

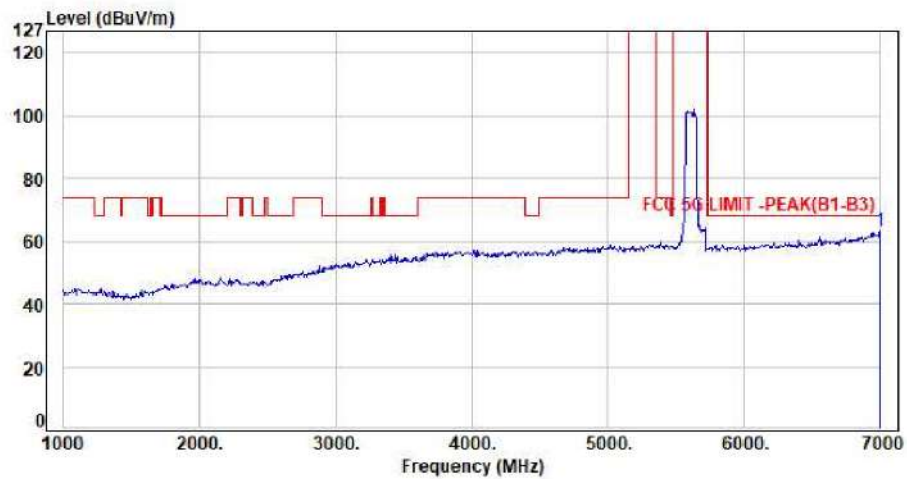


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5994.00	3.65	59.80	63.45	68.20	-4.75	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT160 CH114 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

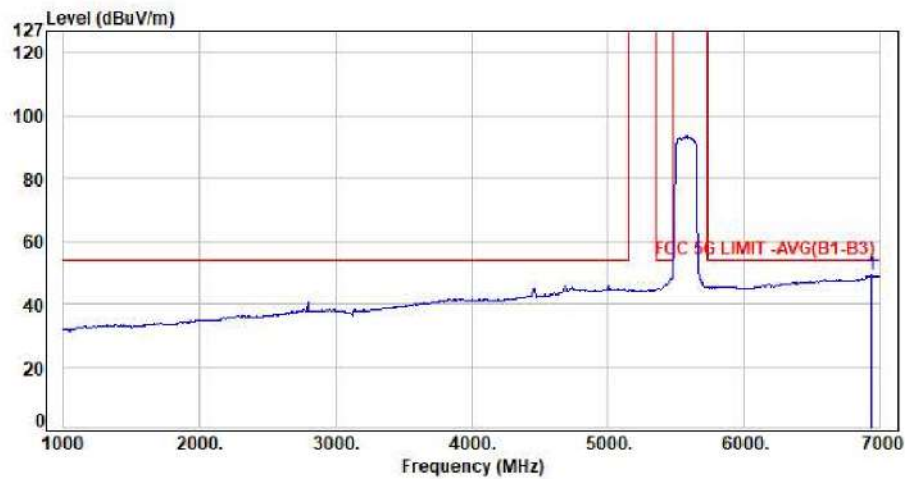


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6928.00	3.75	45.31	49.06	54.00	-4.94	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT160 CH114 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

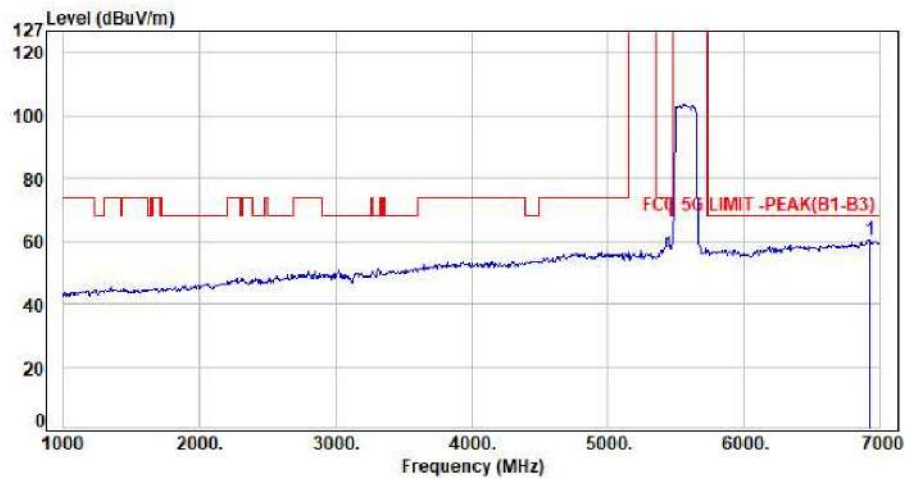


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	56.68	60.43	68.20	-7.77	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT160 CH114 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

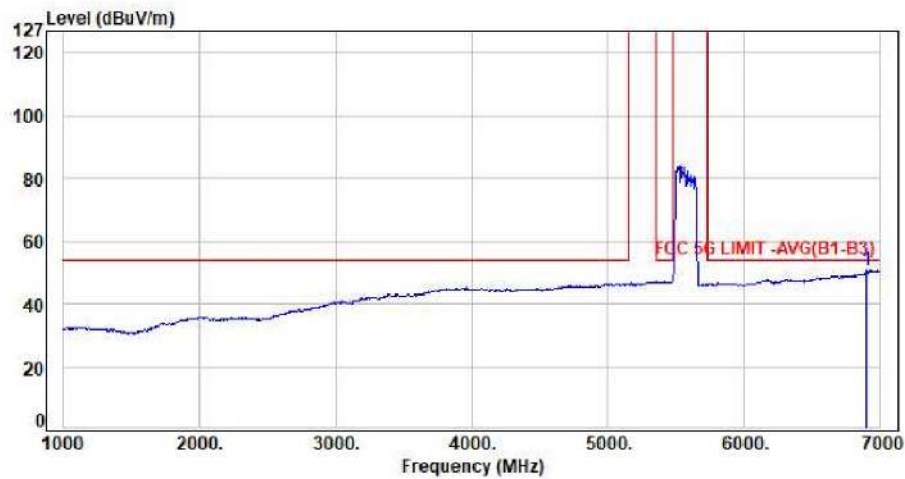


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6898.00	3.75	47.19	50.94	54.00	-3.06	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT160 CH114 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

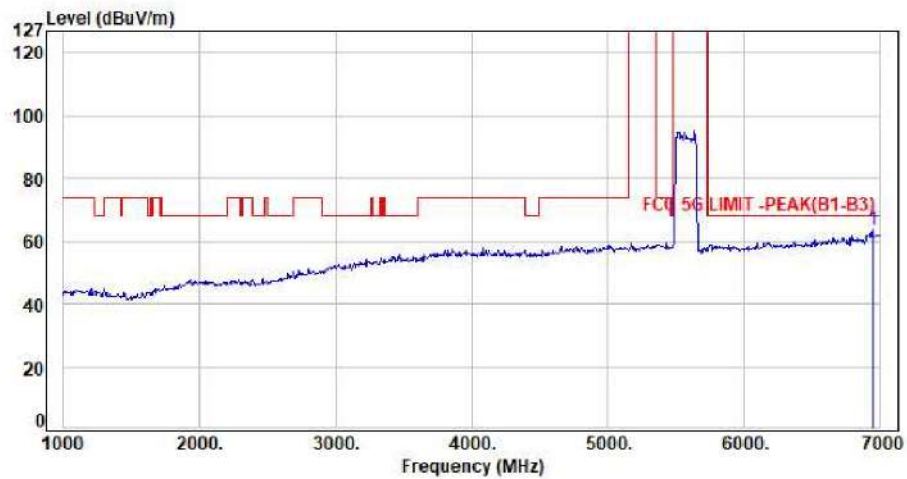


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	59.89	63.64	68.20	-4.56	Peak	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH144 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

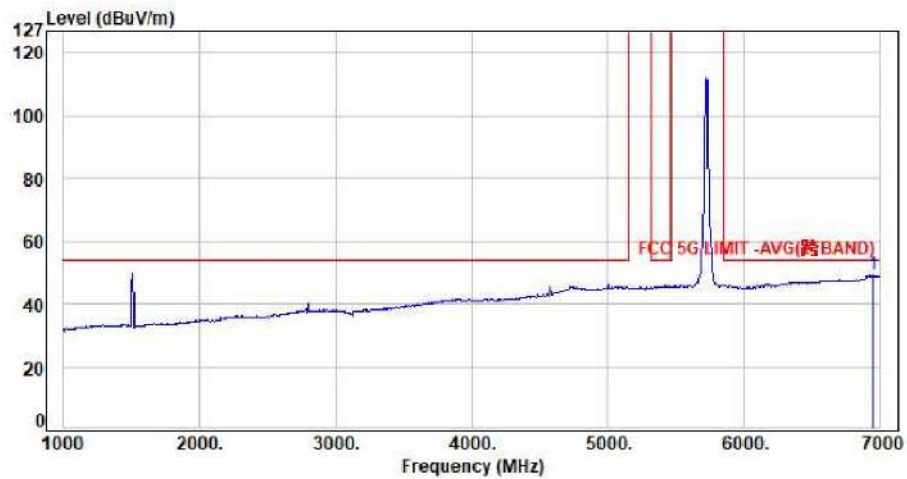


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	45.41	49.16	54.00	-4.84	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH144 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

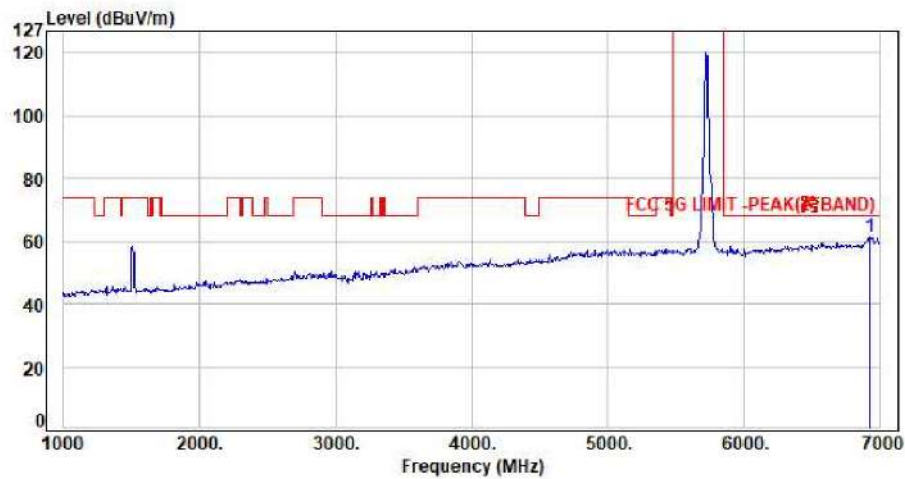


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5735.00	3.75	57.35	61.10	68.20	-7.10	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH144 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

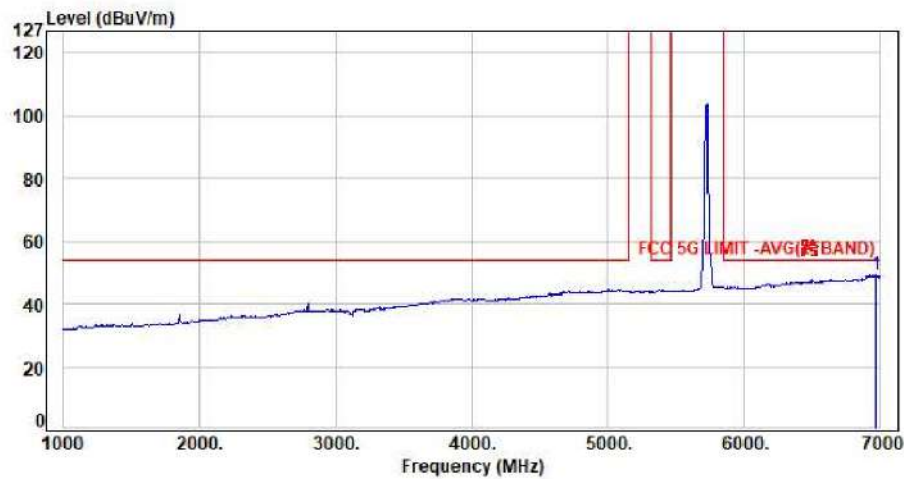


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6964.00	3.71	45.46	49.17	54.00	-4.83	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH144 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

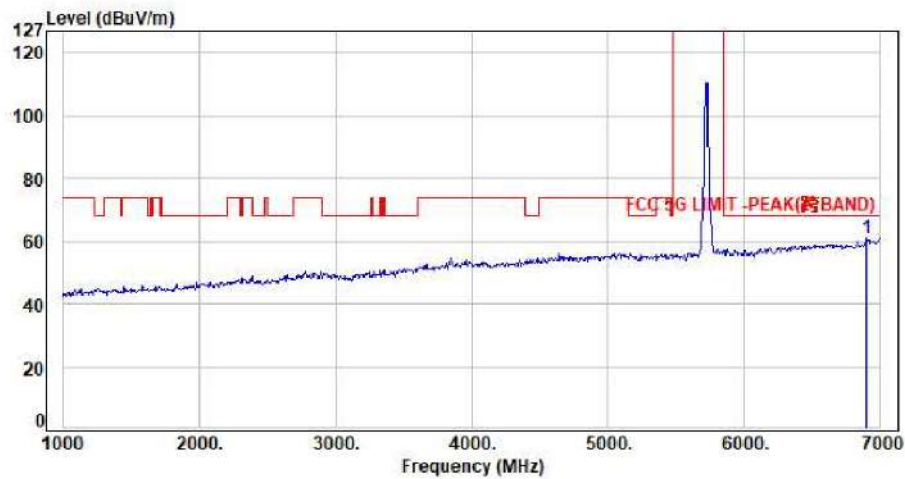


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6898.00	3.75	57.01	60.76	68.20	-7.44	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH144 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

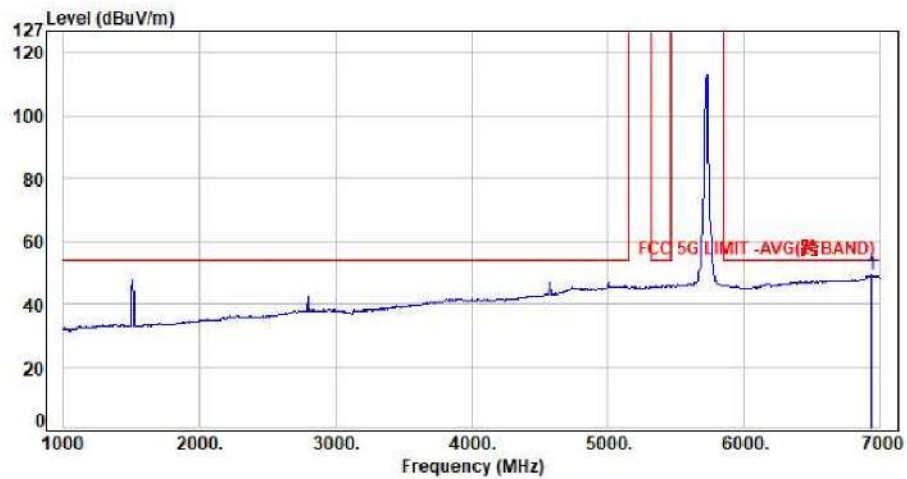


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6928.00	3.75	45.28	49.03	54.00	-4.97	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH144 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

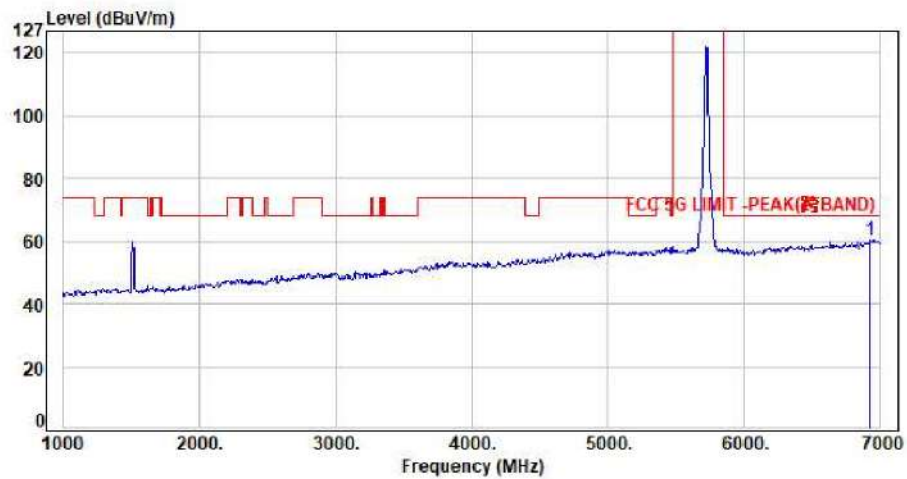


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6922.00	3.76	56.80	60.56	68.20	-7.64	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH144 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

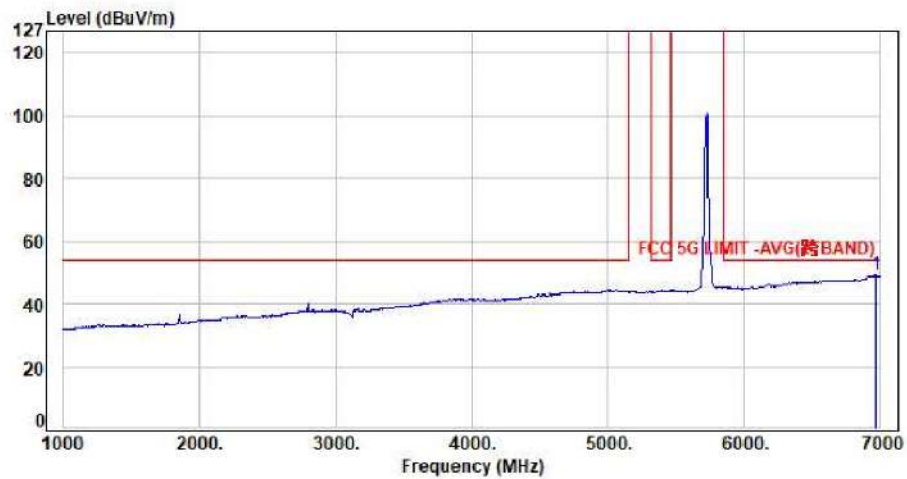


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6964.00	3.71	45.43	49.14	54.00	-4.86	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH144 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

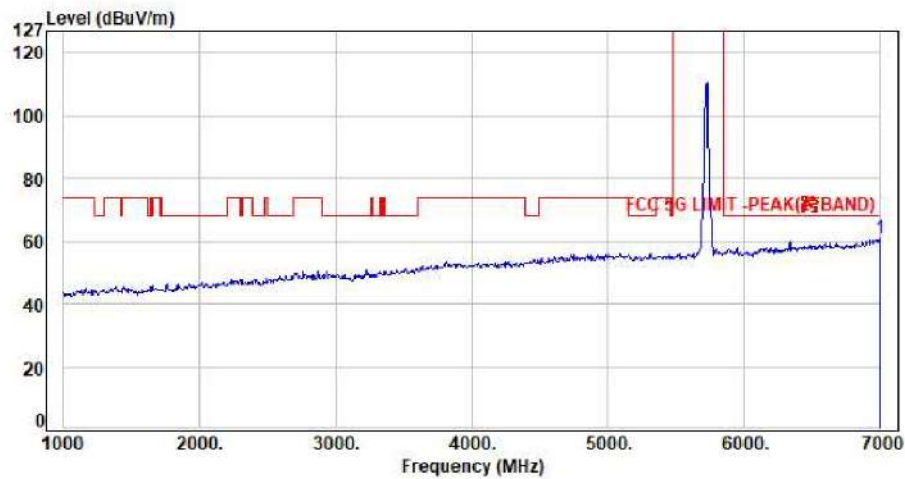


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6994.00	3.65	57.39	61.04	68.20	-7.16	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH142 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

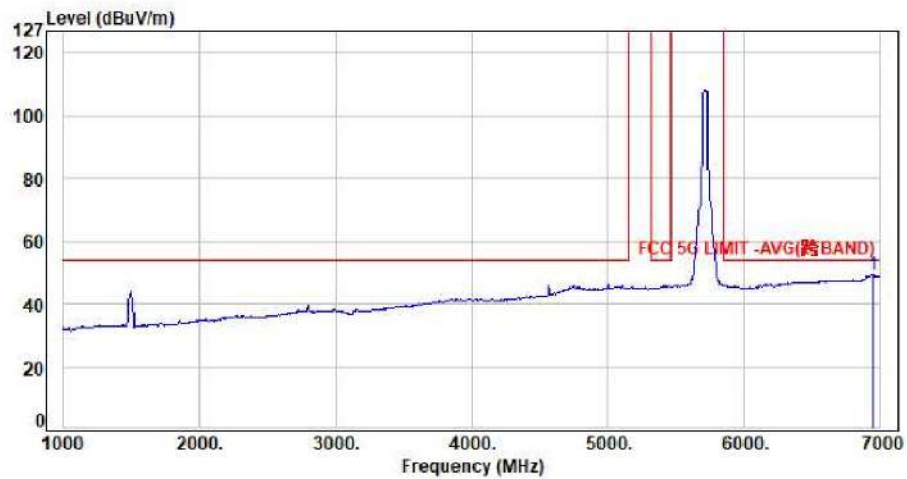


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	45.39	49.14	54.00	-4.86	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH142 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

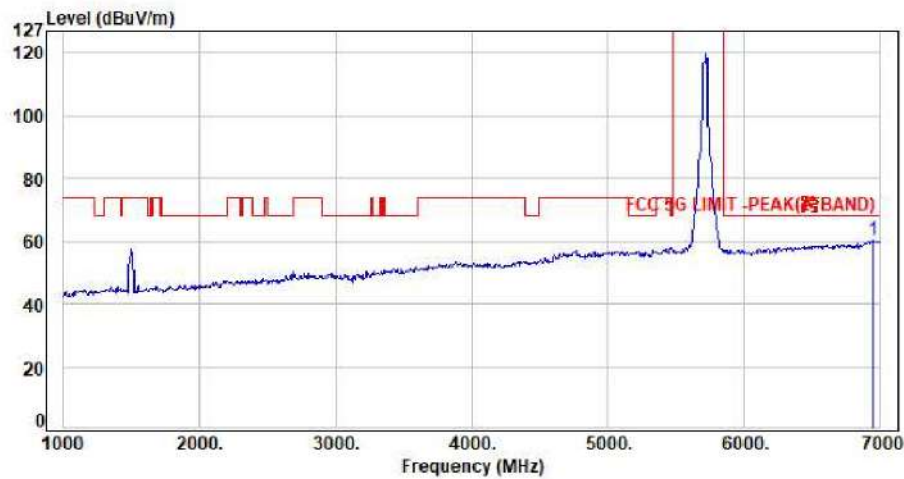


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6946.00	3.74	56.41	60.15	68.20	-8.05	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH142 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

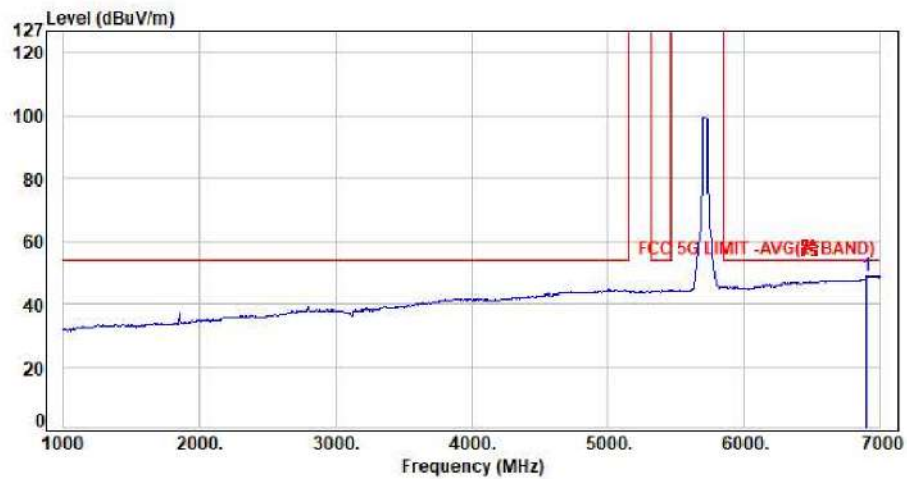


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6898.00	3.75	45.12	48.87	54.00	-5.13	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH142 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

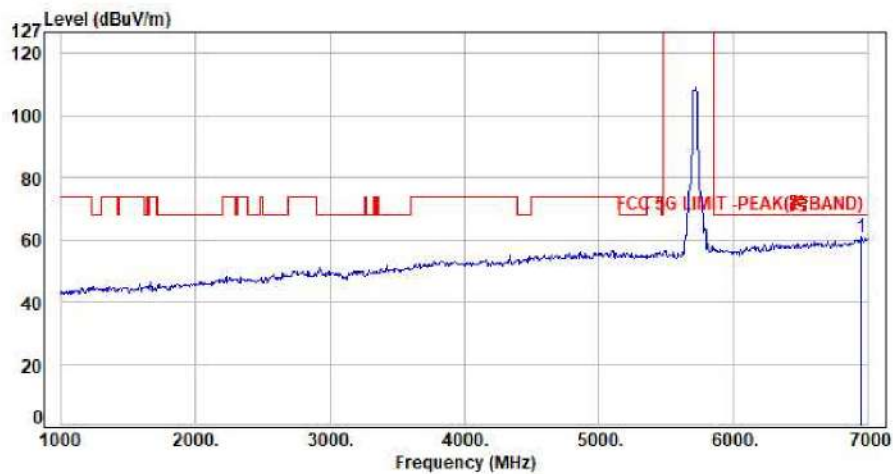

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6946.00	3.74	57.06	60.80	68.20	-7.40	Peak	100	360	P


Note: Level=Reading+Factor

Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH138 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

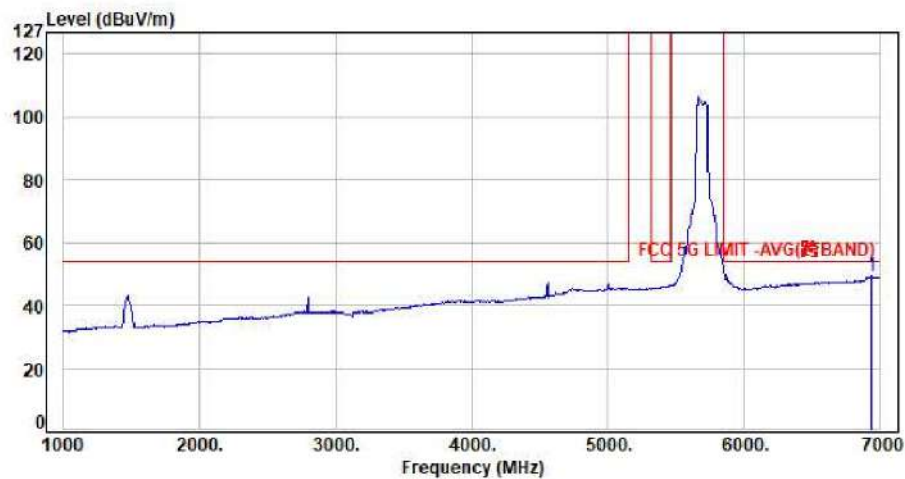


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6928.00	3.75	45.38	49.13	54.00	-4.87	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH138 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

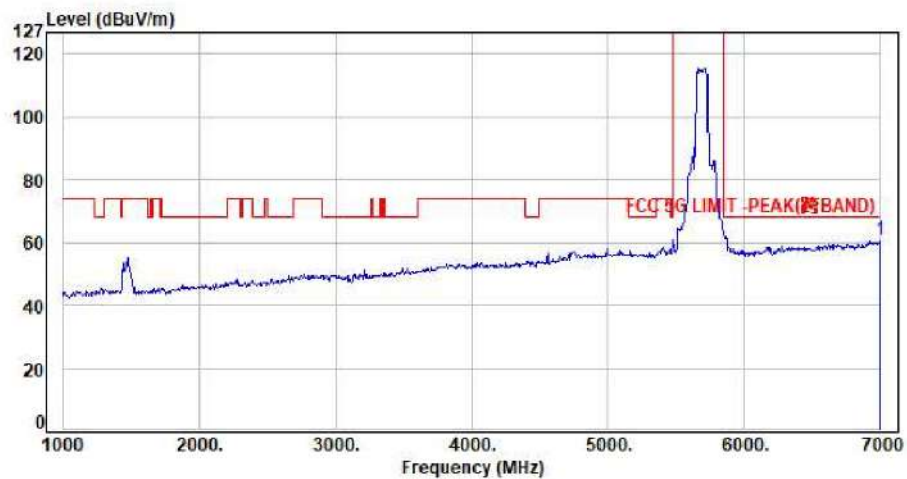


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	7000.00	3.63	57.02	60.65	68.20	-7.55	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH138 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

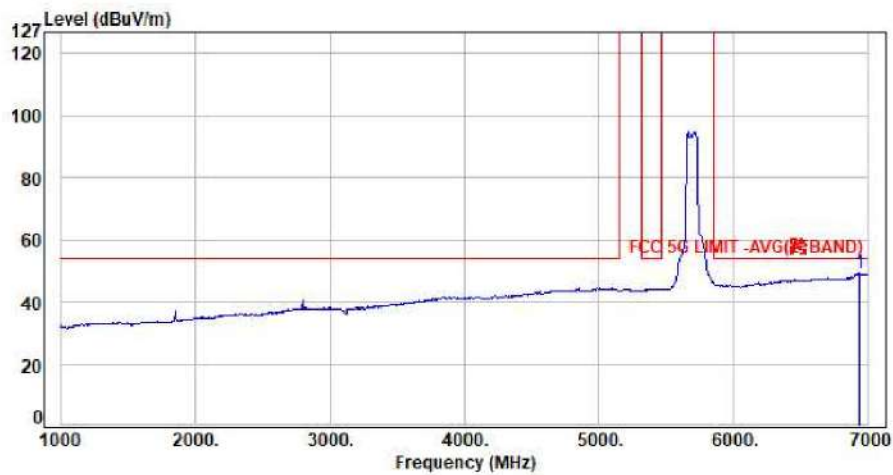


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6928.00	3.75	45.36	49.11	54.00	-4.89	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH138 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

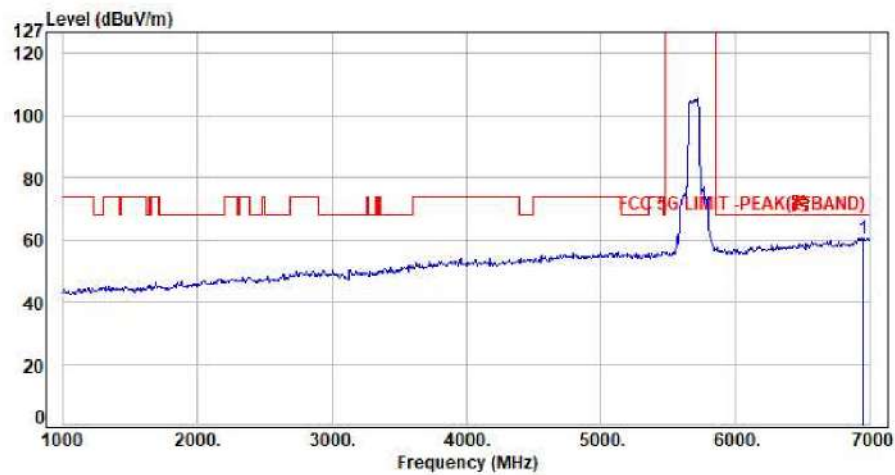


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6946.00	3.74	56.82	60.56	68.20	-7.64	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT160 CH50 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

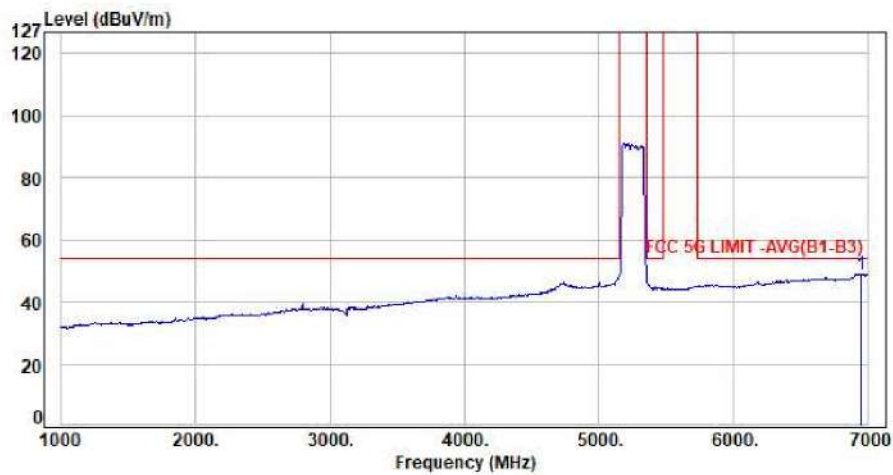


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	45.19	48.94	54.00	-5.06	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT160 CH50 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

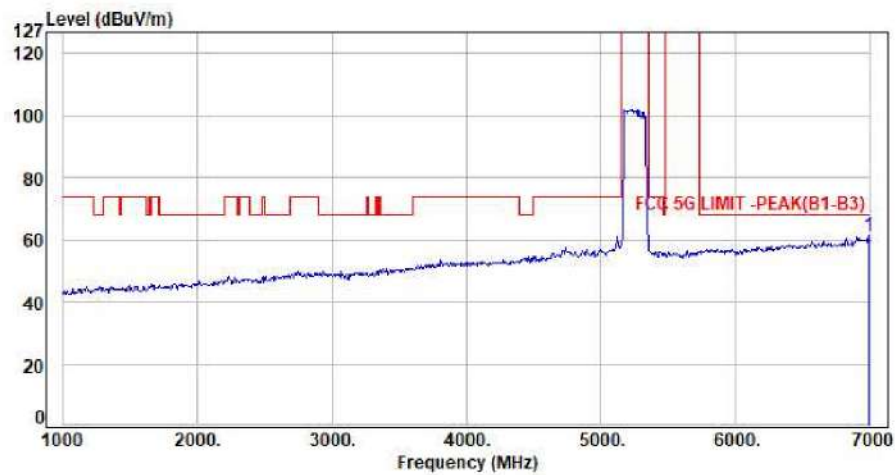


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6982.00	3.68	57.57	61.25	68.20	-6.95	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT160 CH50 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

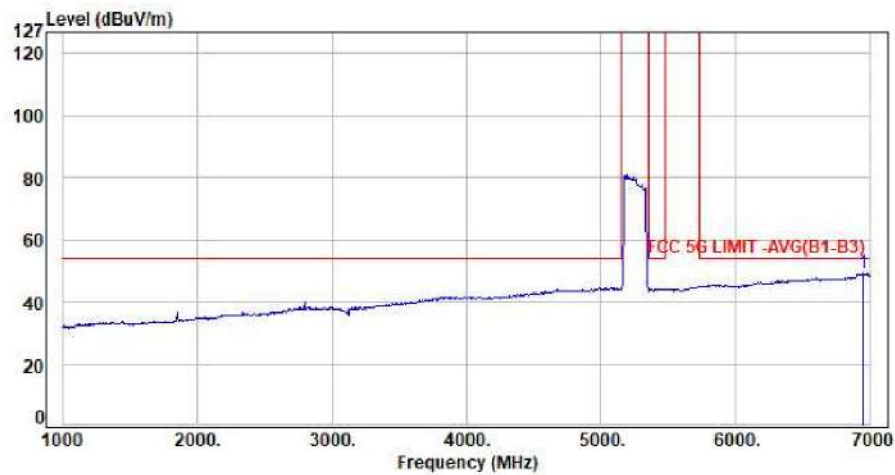


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6946.00	3.74	45.33	49.07	54.00	-4.93	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT160 CH50 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

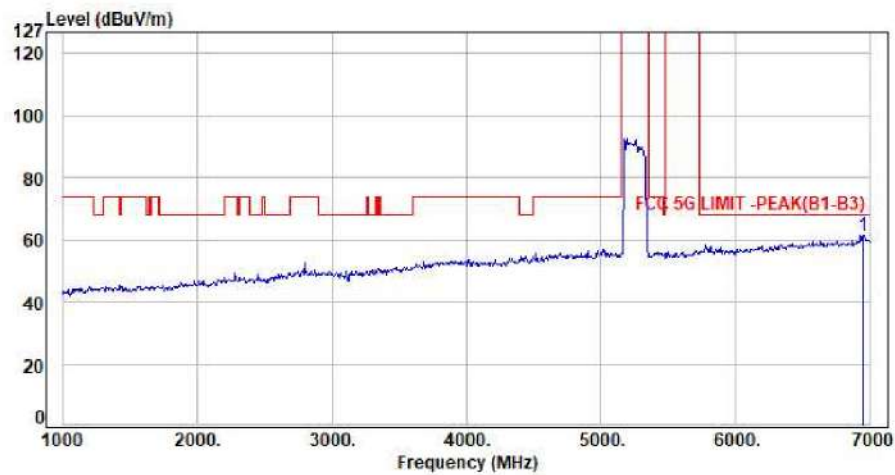


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6946.00	3.74	57.48	61.22	68.20	-6.98	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH149 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

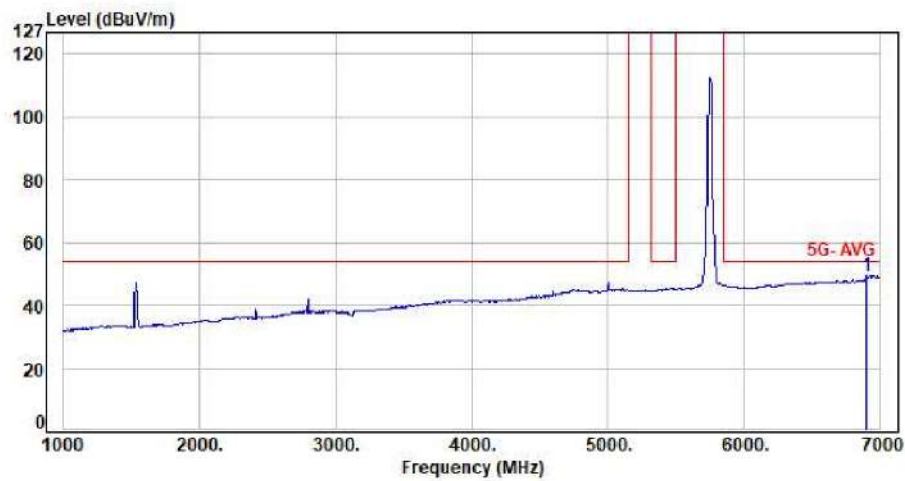


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6898.00	3.75	45.65	49.40	54.00	-4.60	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH149 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

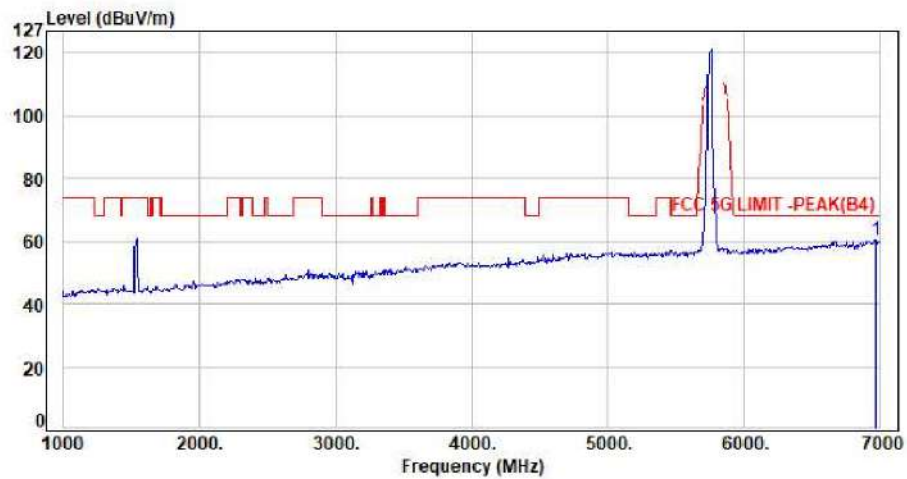


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6964.00	3.71	56.63	60.34	68.20	-7.86	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH149 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

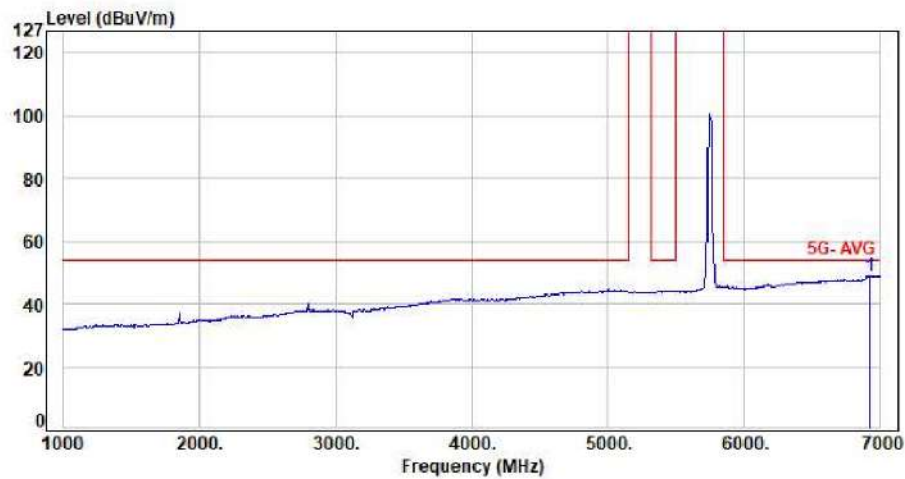


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6922.00	3.76	45.24	49.00	54.00	-5.00	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH149 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

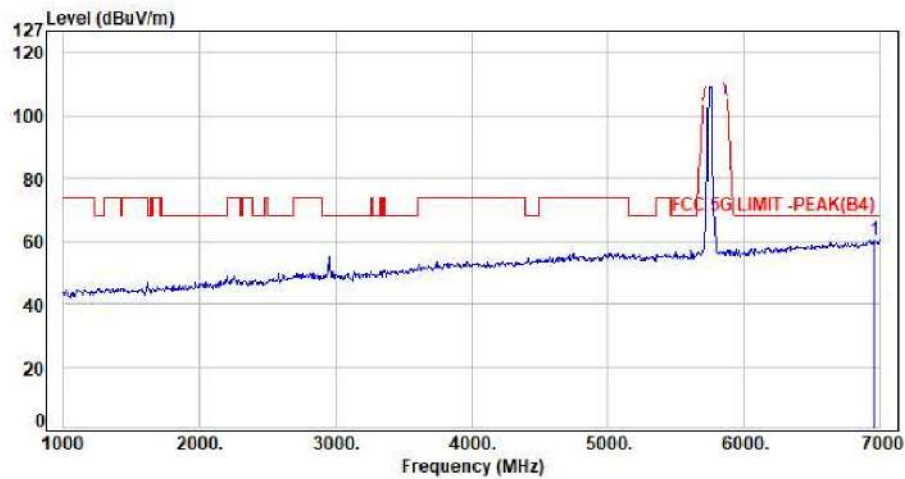


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6958.00	3.72	56.87	60.59	68.20	-7.61	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH157 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

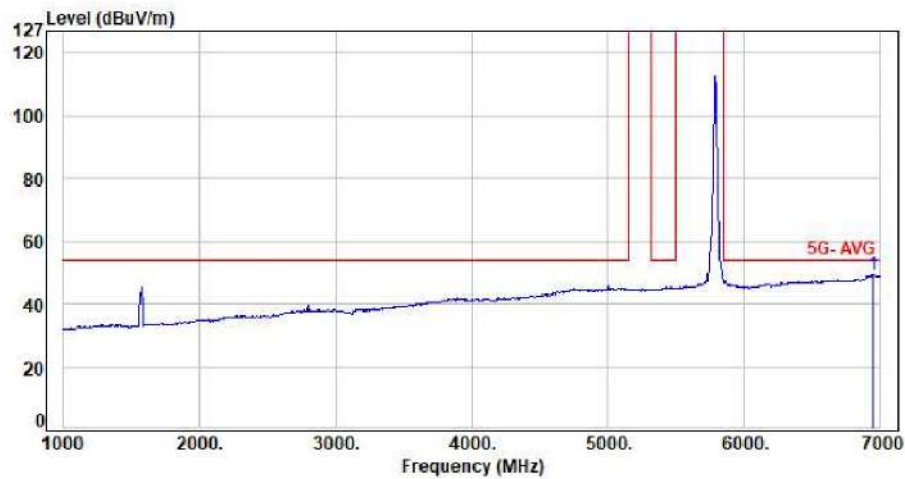


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5946.00	3.74	45.50	49.24	54.00	-4.76	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH157 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

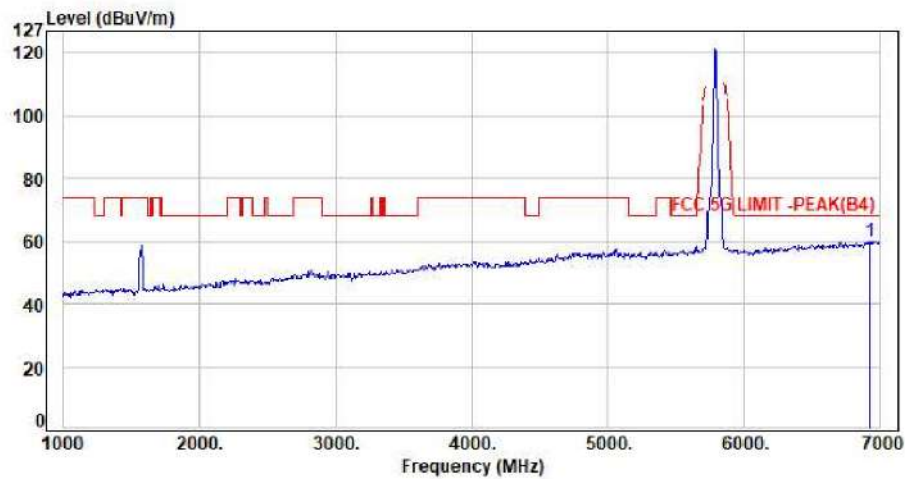


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	56.37	60.12	68.20	-8.08	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH157 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

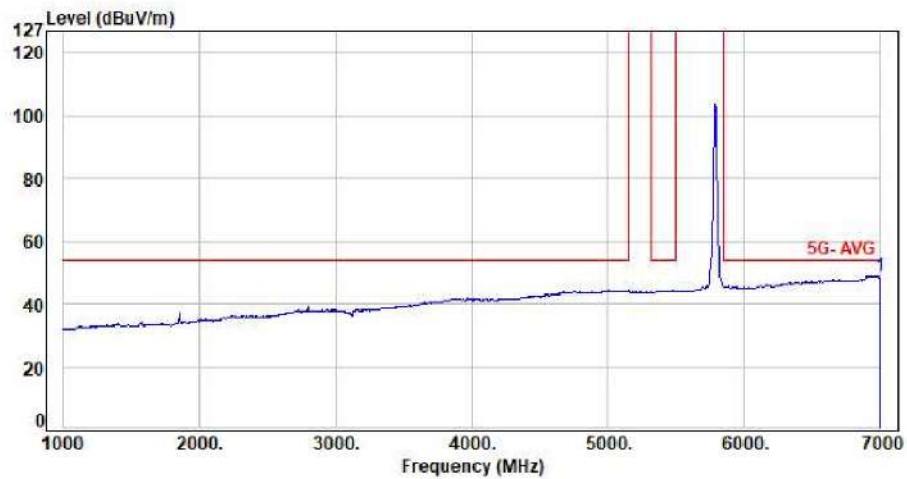


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6994.00	3.65	45.33	48.98	54.00	-5.02	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH157 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

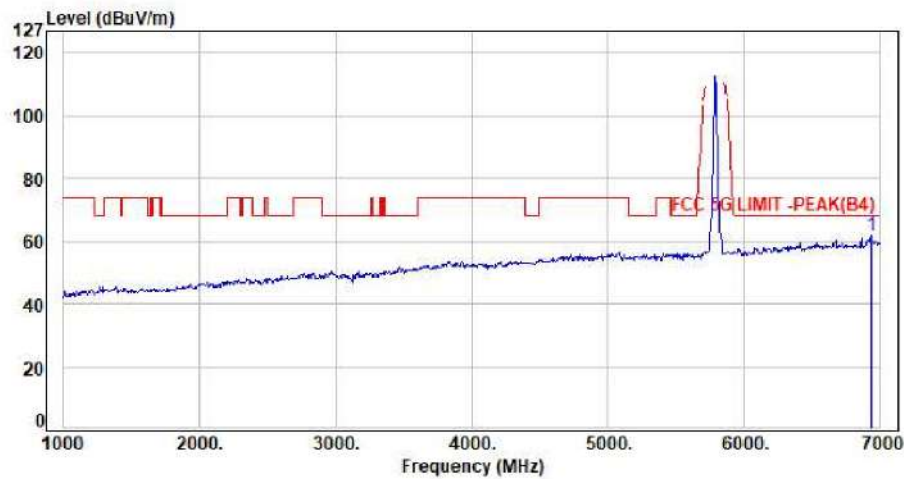


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6928.00	3.75	57.96	61.71	68.20	-6.49	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH165 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

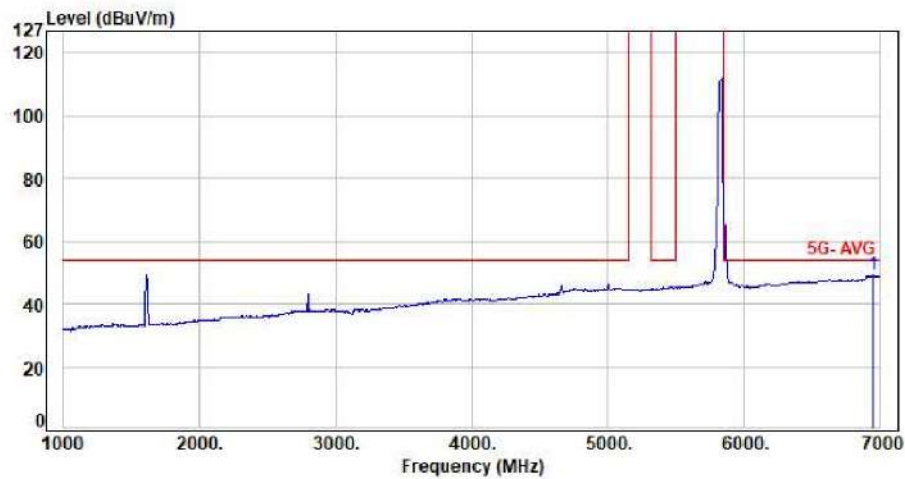


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	45.28	49.03	54.00	-4.97	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH165 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

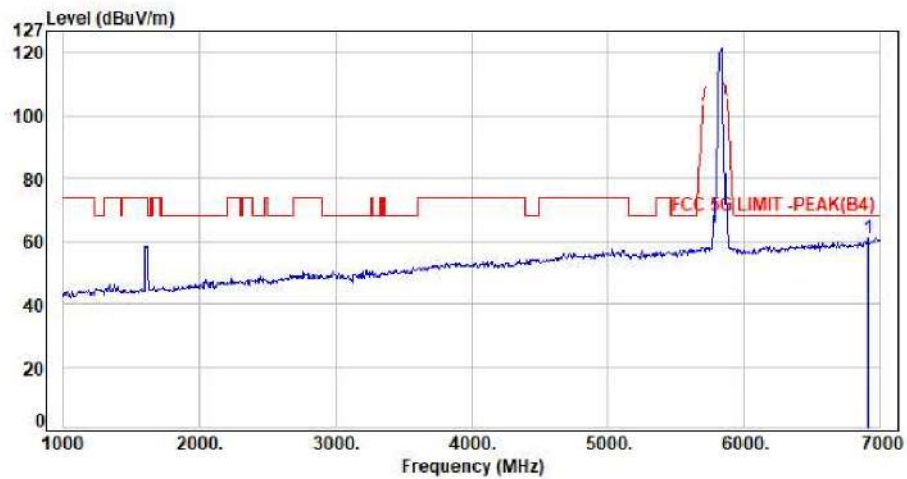


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5904.00	3.76	57.17	60.93	68.20	-7.27	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH165 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

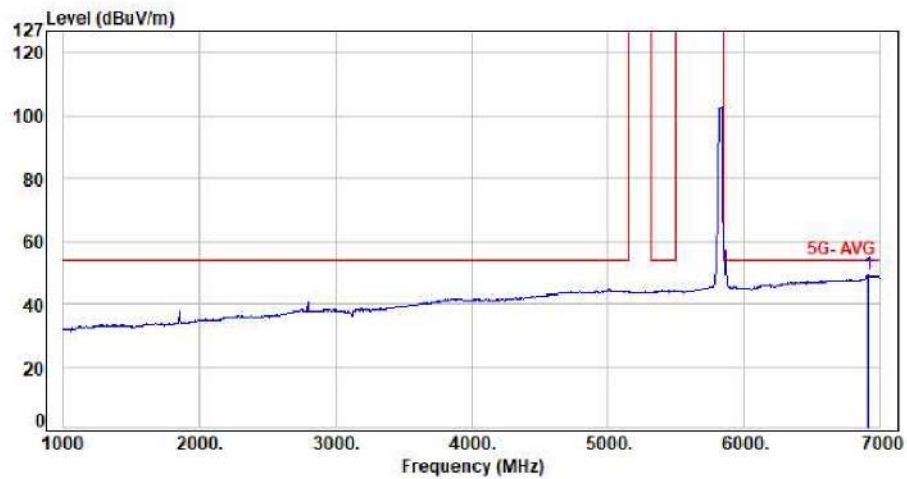


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5904.00	3.76	45.67	49.43	54.00	-4.57	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11a CH165 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

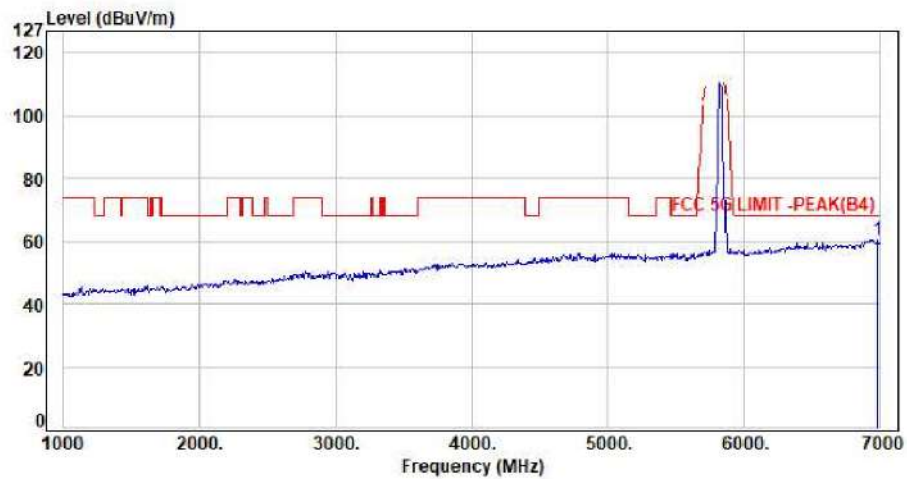


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6976.00	3.68	56.73	60.41	68.20	-7.79	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH149 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

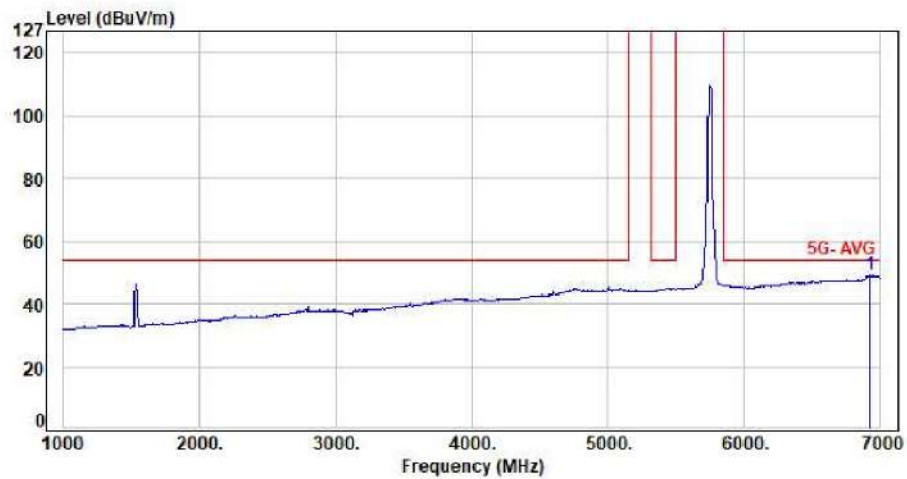


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	45.48	49.23	54.00	-4.77	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH149 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

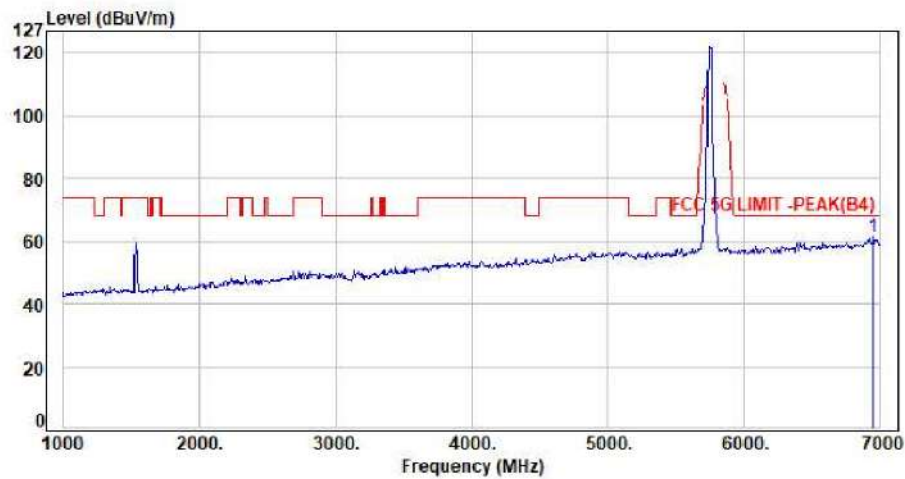


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5946.00	3.74	57.55	61.29	68.20	-6.91	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH149 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

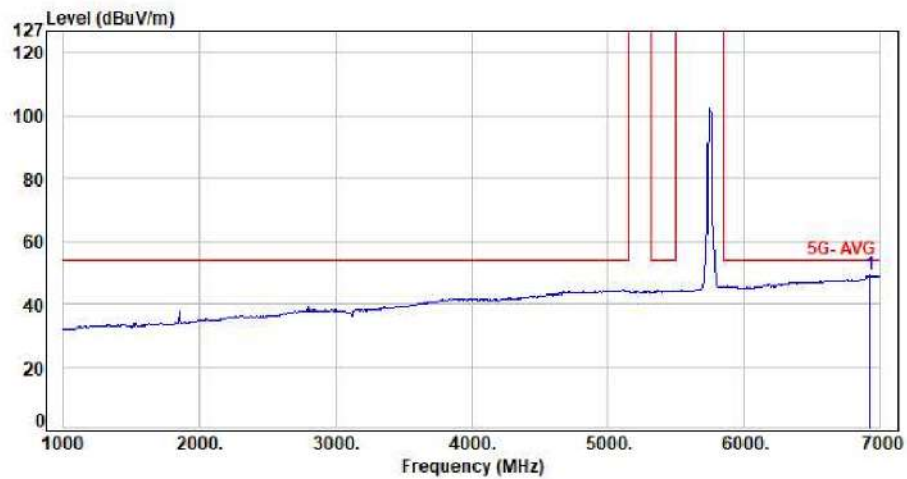


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6922.00	3.76	45.27	49.03	54.00	-4.97	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH149 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

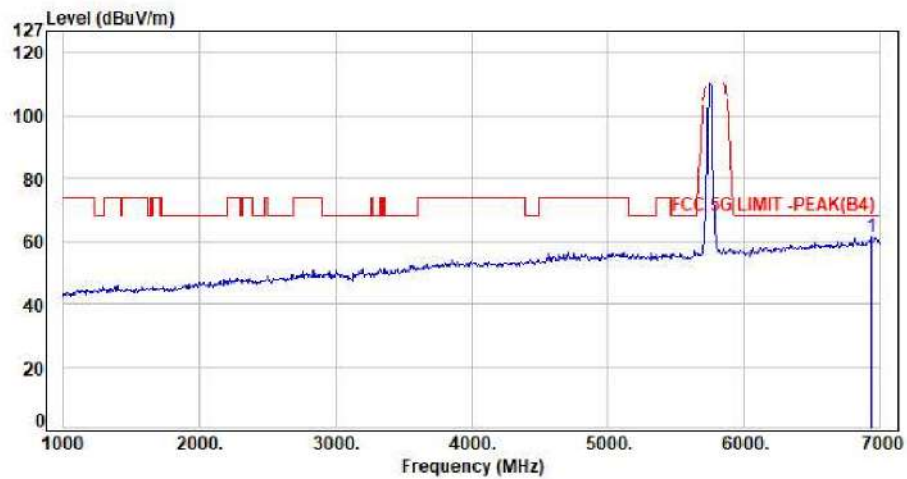


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5928.00	3.75	57.55	61.30	68.20	-6.90	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH157 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

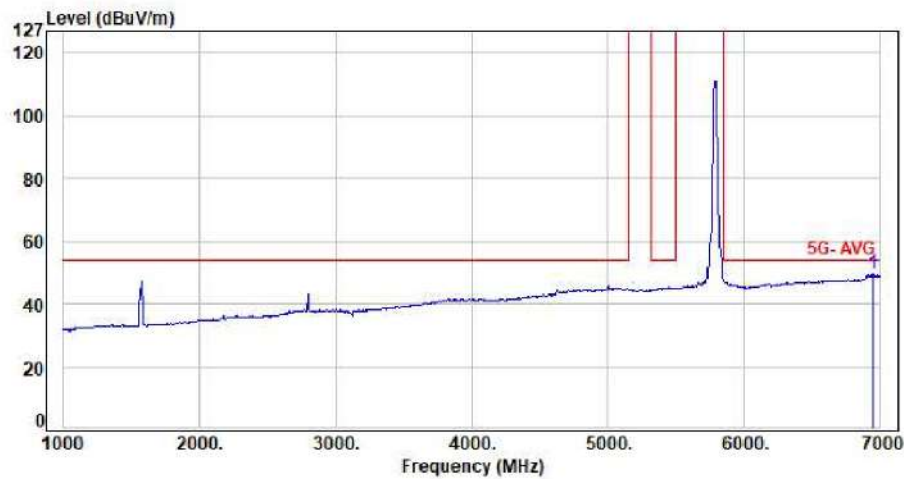


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5946.00	3.74	45.78	49.52	54.00	-4.48	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH157 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

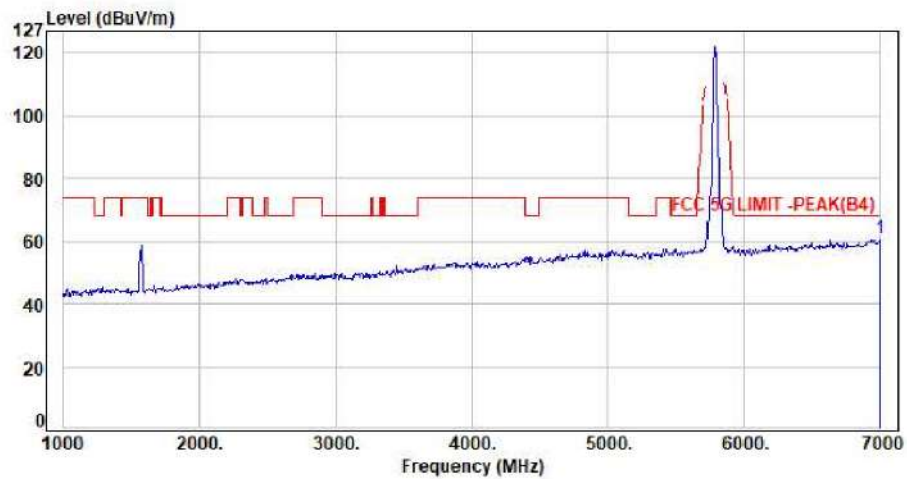


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	7000.00	3.63	57.05	60.68	68.20	-7.52	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH157 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

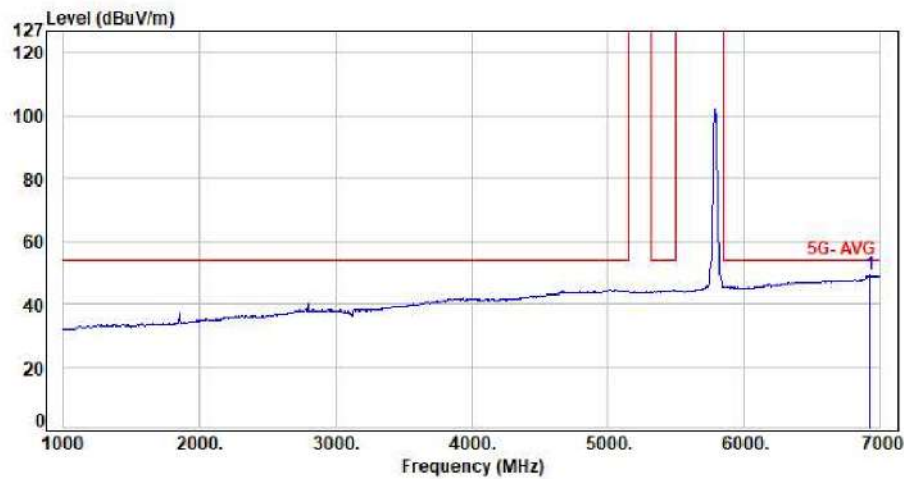


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	45.29	49.04	54.00	-4.96	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH157 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

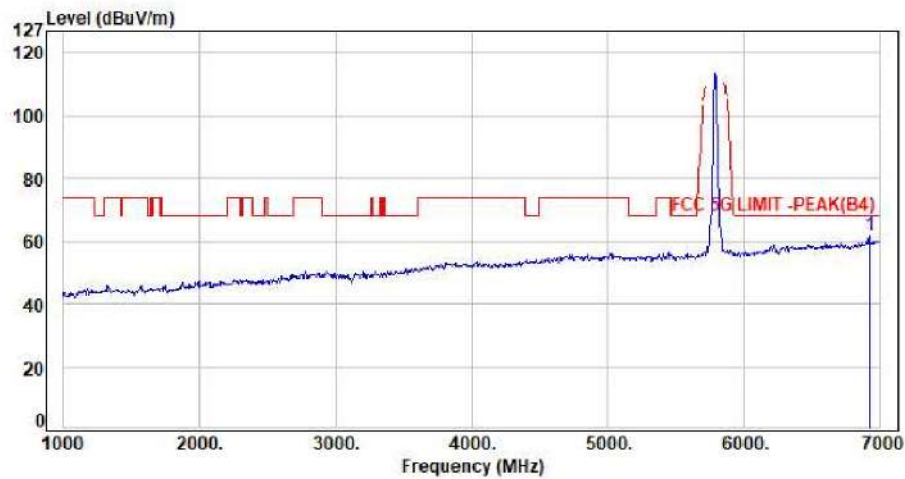


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	57.91	61.66	68.20	-6.54	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH16S NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

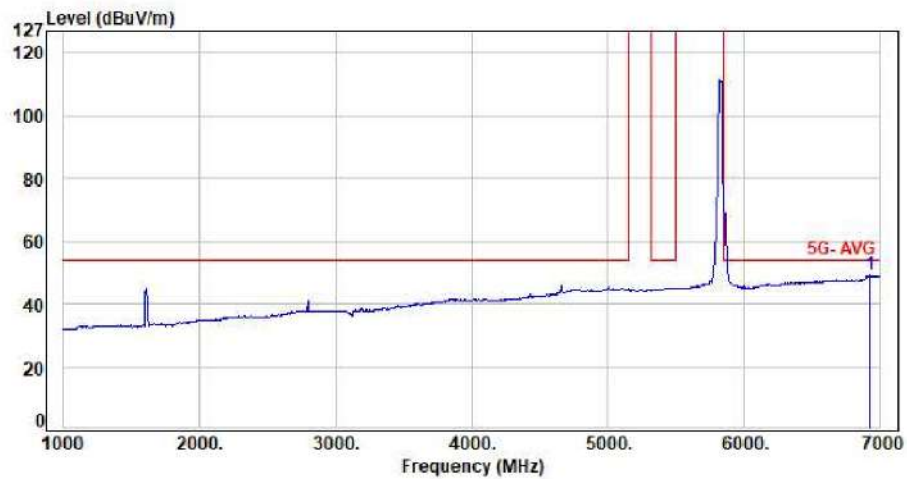


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5922.00	3.76	45.33	49.09	54.00	-4.91	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH16S NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

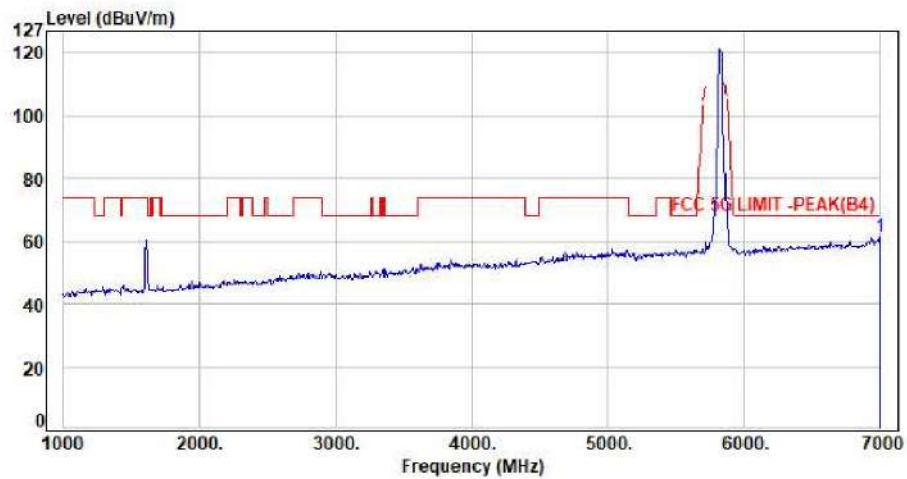


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6994.00	3.65	57.72	61.37	68.20	-6.83	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH165 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

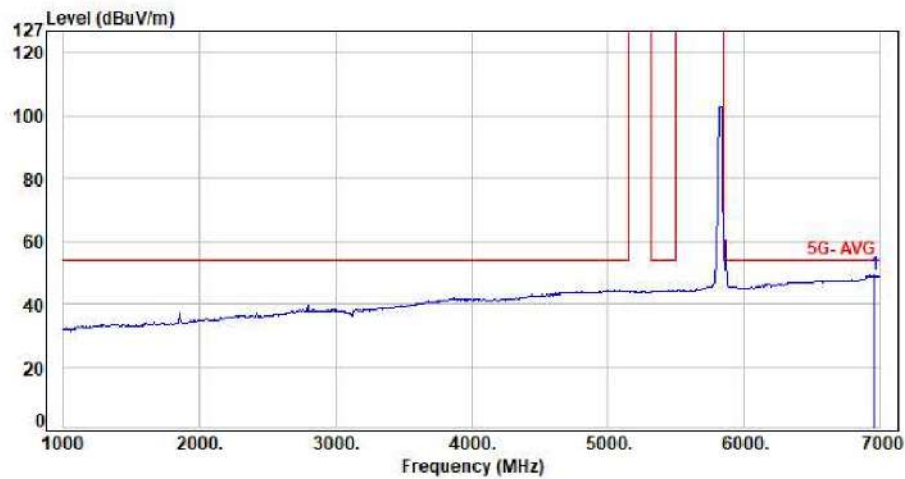


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6958.00	3.72	45.38	49.10	54.00	-4.90	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT20 CH16S NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

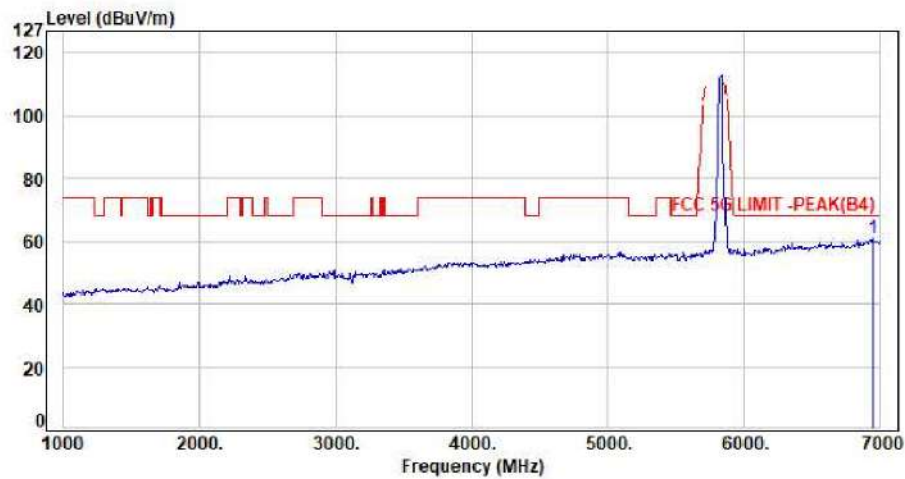


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	56.96	60.71	68.20	-7.49	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH151 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

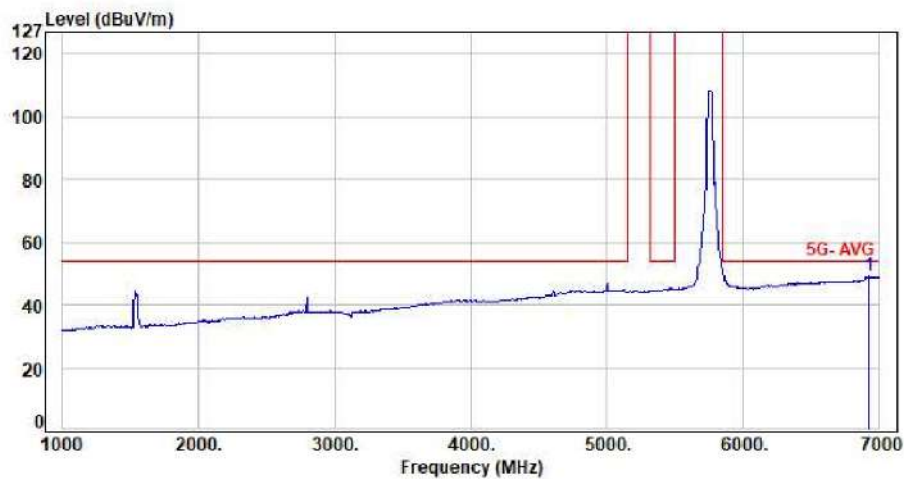


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6922.00	3.76	45.49	49.25	54.00	-4.75	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH151 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

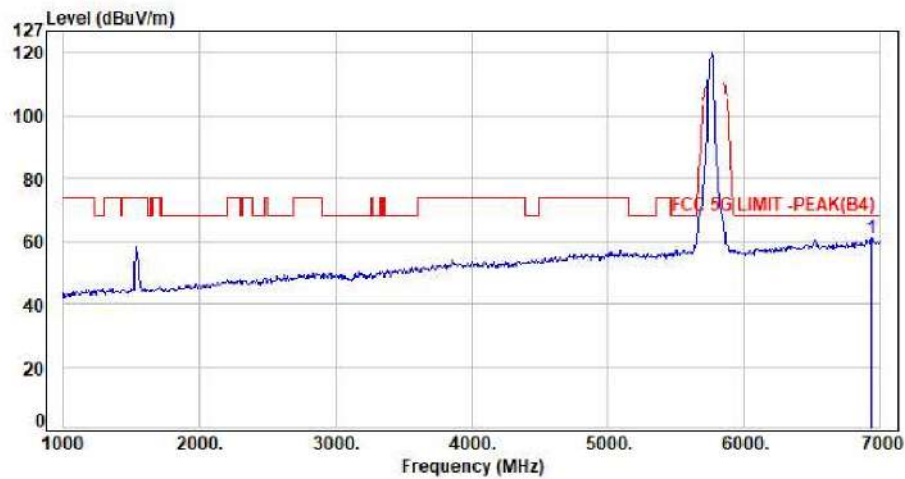

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5928.00	3.75	57.33	61.08	68.20	-7.12	Peak	100	360	P


Note: Level=Reading+Factor

Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH151 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

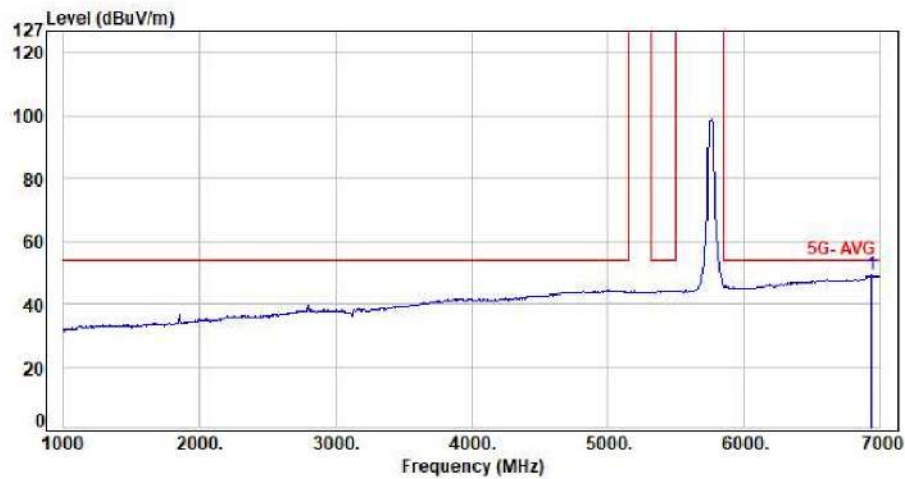


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5928.00	3.75	45.28	49.03	54.00	-4.97	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH151 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

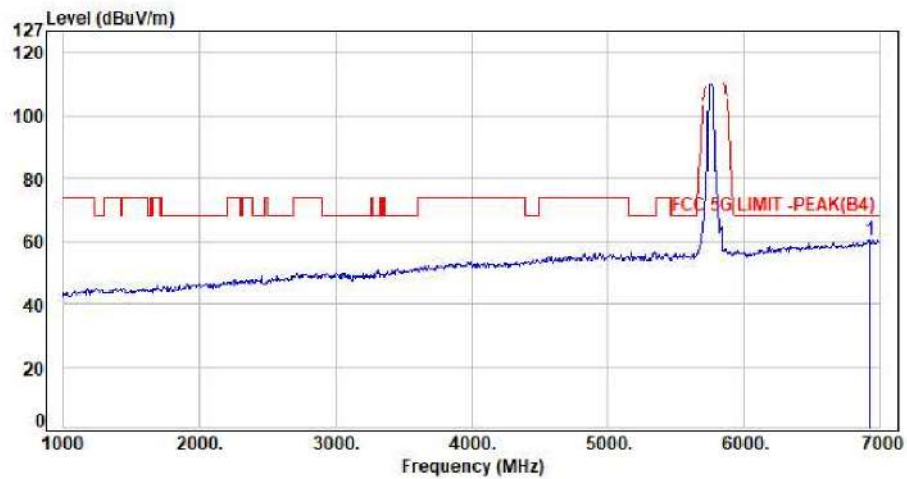


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6916.00	3.75	56.70	60.45	68.20	-7.75	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH159 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

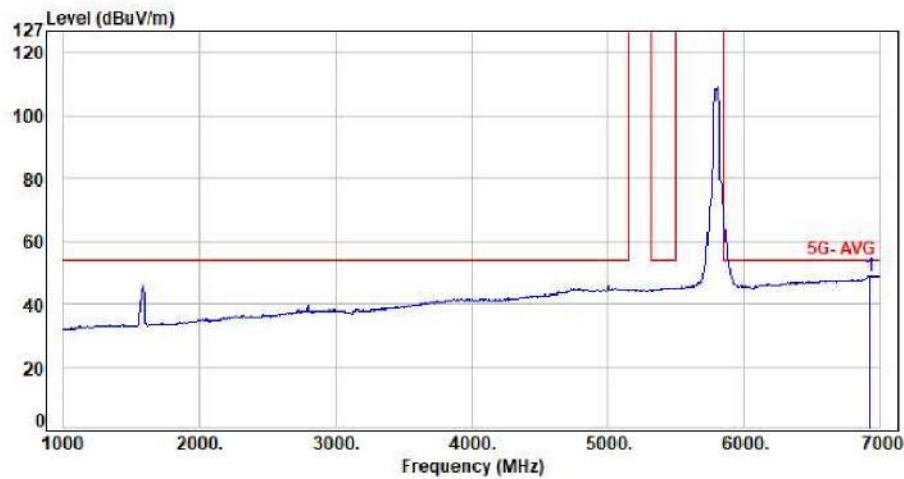


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6922.00	3.76	45.21	48.97	54.00	-5.03	Average	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH159 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

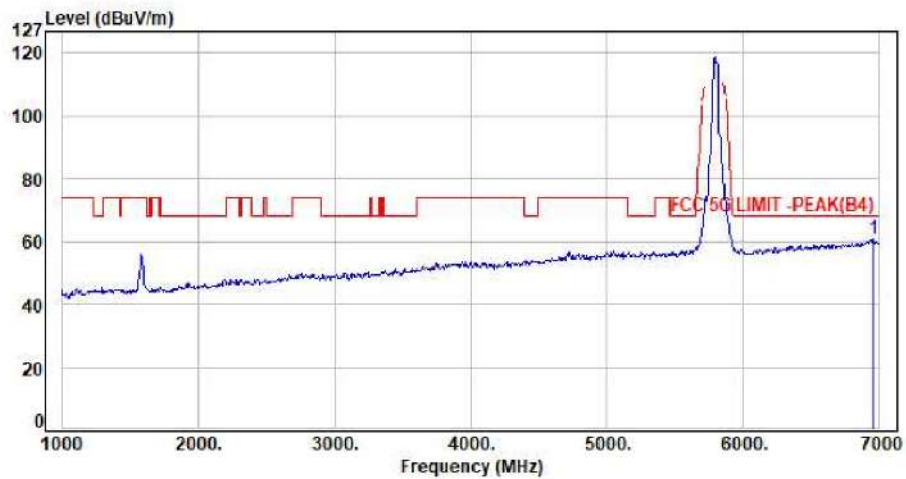


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6958.00	3.72	57.06	60.78	68.20	-7.42	Peak	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH159 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

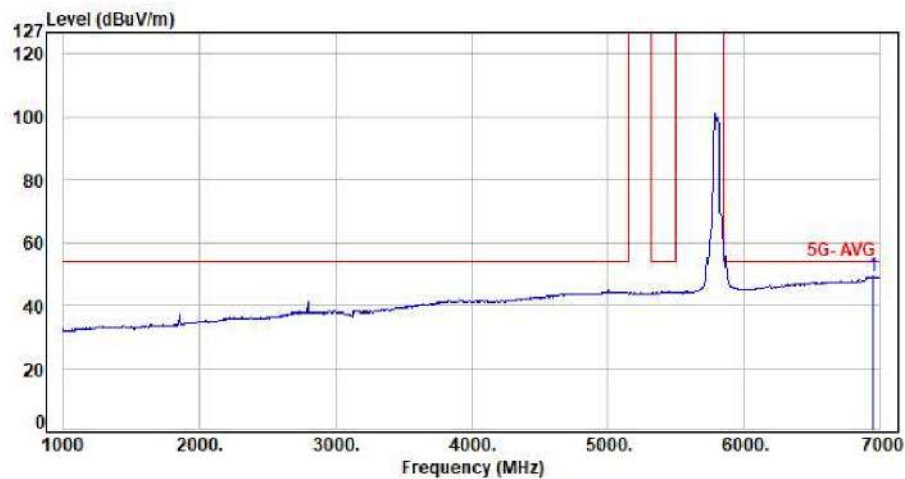


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6940.00	3.75	45.35	49.10	54.00	-4.90	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT40 CH159 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

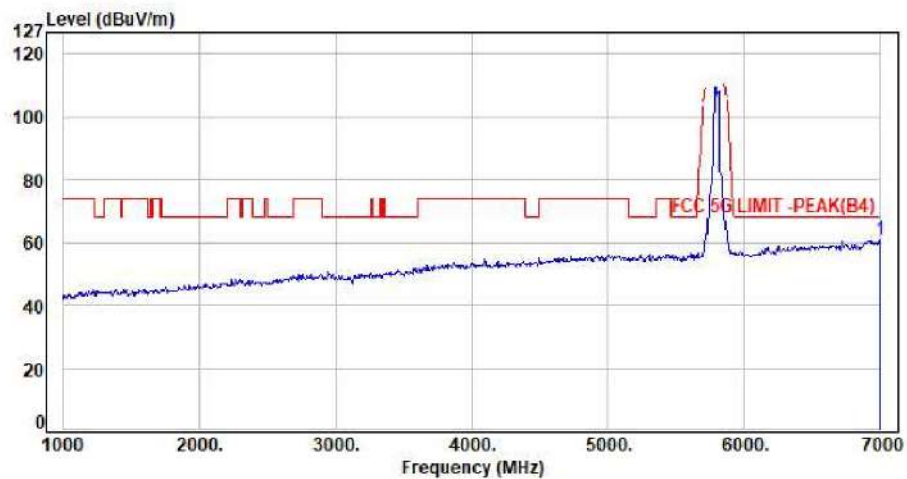


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6994.00	3.65	57.36	61.01	68.20	-7.19	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH155 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

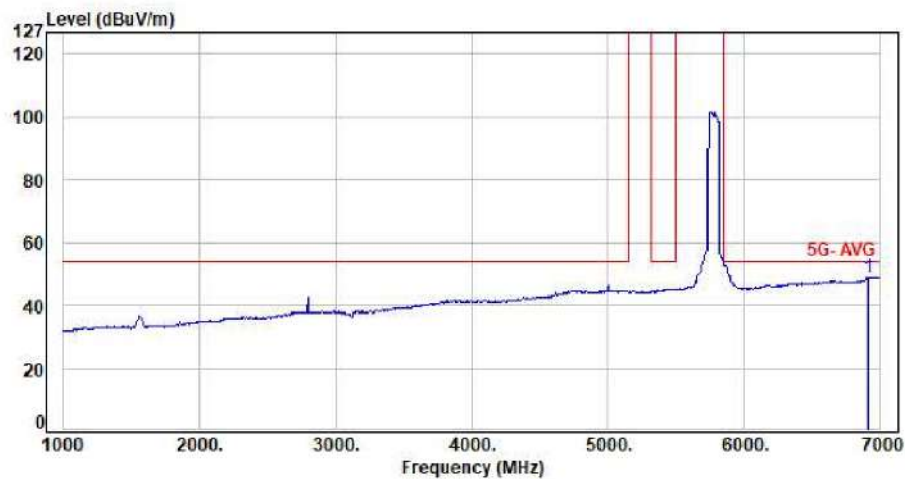


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6904.00	3.76	45.23	48.99	54.00	-5.01	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH155 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

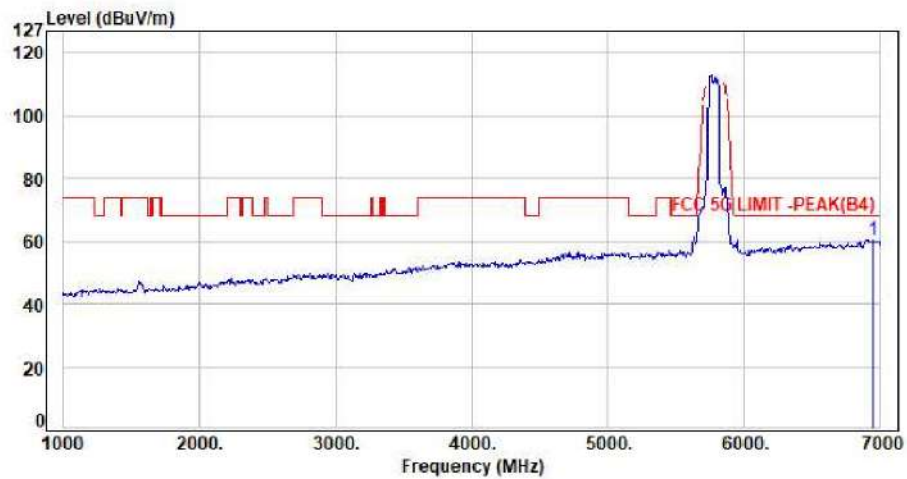


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6946.00	3.74	56.76	60.50	68.20	-7.70	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH155 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

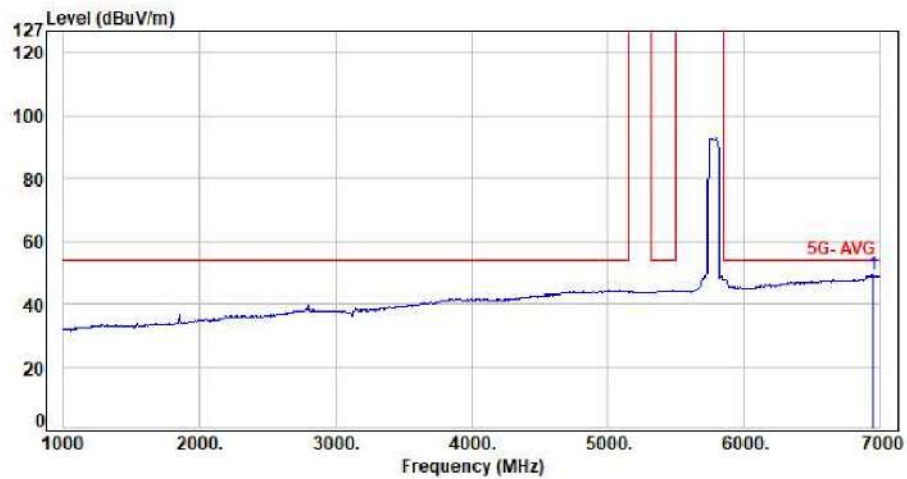


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	5940.00	3.75	45.30	49.05	54.00	-4.95	Average	100	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 4TX 11be EHT80 CH155 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

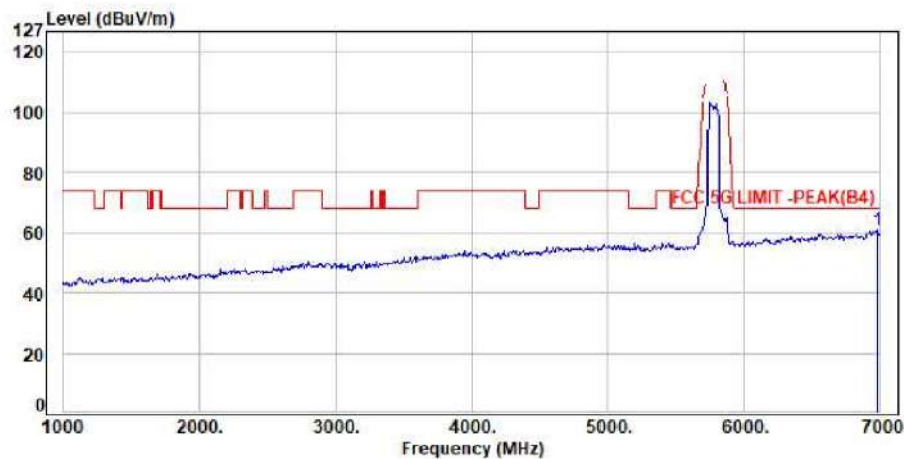

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	6976.00	3.68	57.01	60.69	68.20	-7.51	Peak	100	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor