



Appendix A. Test Result of AC Power Line Conducted Emission

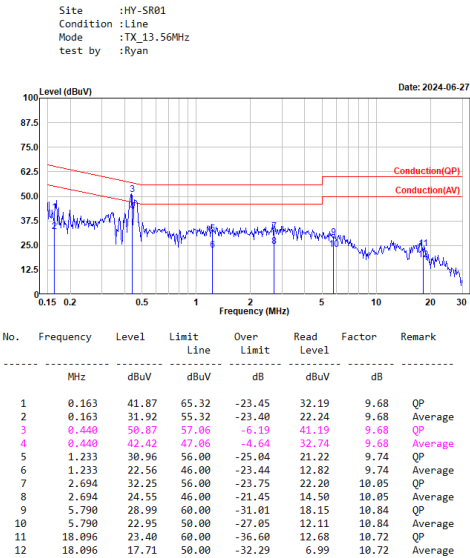

Note:
1. Level = Read Level + Factor
2. Factor = LISN insertion loss + Cable loss
3. Over Limit = Level - Limit Line

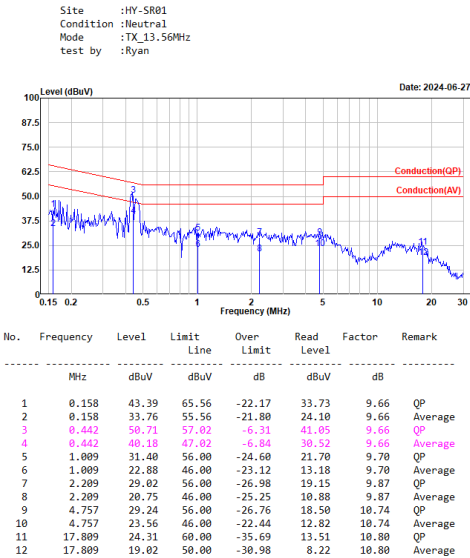


Note:
1. Level = Read Level + Factor
2. Factor = LISN insertion loss + Cable loss
3. Over Limit = Level - Limit Line

Appendix B. Test Result of Frequency Stability


Temperature (°C)	Voltage (V)	Observe Time	Declared Frequency (MHz)	Read Frequency (MHz)	Tolerance (%)	Limit (%)
20	120	start	13.56	13.55996	-0.000272	± 0.01 %
		2mins	13.56	13.55996	-0.000270	
		5mins	13.56	13.55996	-0.000273	
		10mins	13.56	13.55996	-0.000264	
20	138	start	13.56	13.55996	-0.000265	± 0.01 %
		2mins	13.56	13.55996	-0.000262	
		5mins	13.56	13.55996	-0.000260	
		10mins	13.56	13.55997	-0.000257	
20	102	start	13.56	13.55996	-0.000320	± 0.01 %
		2mins	13.56	13.55996	-0.000324	
		5mins	13.56	13.55996	-0.000317	
		10mins	13.56	13.55996	-0.000322	
50	120	start	13.56	13.55993	-0.000486	± 0.01 %
		2mins	13.56	13.55991	-0.000633	
		5mins	13.56	13.55993	-0.000552	
		10mins	13.56	13.55993	-0.000482	
40	120	start	13.56	13.55993	-0.000487	± 0.01 %
		2mins	13.56	13.55994	-0.000473	
		5mins	13.56	13.55994	-0.000475	
		10mins	13.56	13.55993	-0.000480	
30	120	start	13.56	13.55995	-0.000339	± 0.01 %
		2mins	13.56	13.55996	-0.000332	
		5mins	13.56	13.55995	-0.000334	
		10mins	13.56	13.55995	-0.000340	

10	120	start	13.56	13.55997	-0.000192	± 0.01 %
		2mins	13.56	13.55997	-0.000199	
		5mins	13.56	13.55998	-0.000170	
		10mins	13.56	13.55996	-0.000265	
0	120	start	13.56	13.55999	-0.000111	± 0.01 %
		2mins	13.56	13.55998	-0.000133	
		5mins	13.56	13.55998	-0.000155	
		10mins	13.56	13.55999	-0.000103	
-10	120	start	13.56	13.56002	0.000162	± 0.01 %
		2mins	13.56	13.56002	0.000155	
		5mins	13.56	13.56002	0.000170	
		10mins	13.56	13.56003	0.000229	
-20	120	start	13.56	13.56007	0.000483	± 0.01 %
		2mins	13.56	13.56007	0.000480	
		5mins	13.56	13.56007	0.000482	
		10mins	13.56	13.56007	0.000485	


Appendix C. Test Result of Field Strength of Fundamental Emissions and Spectrum Mask

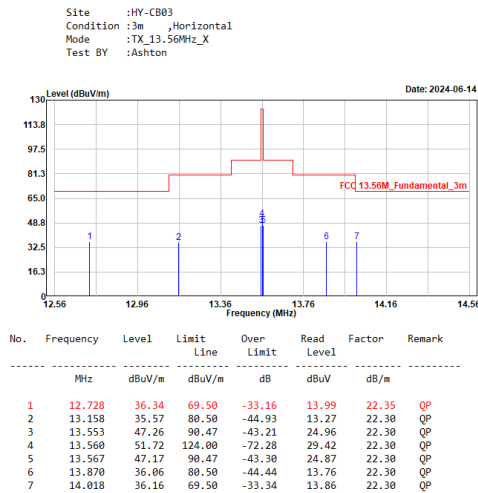


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

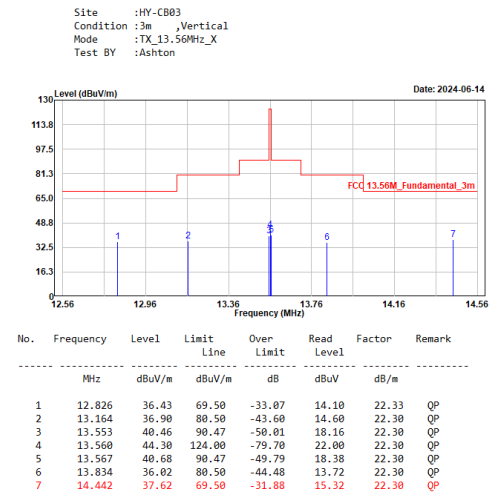


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

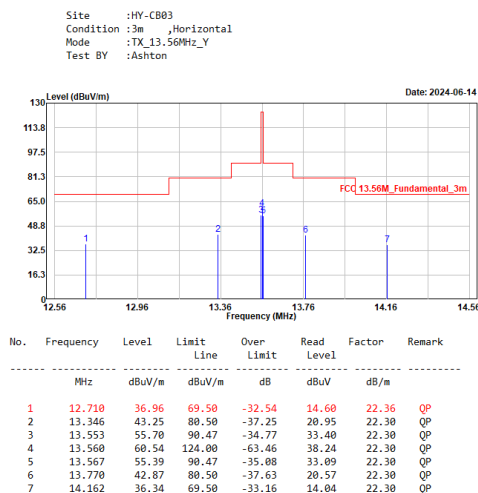

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

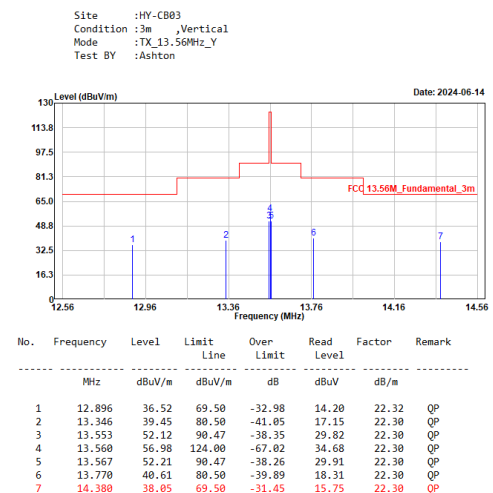


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

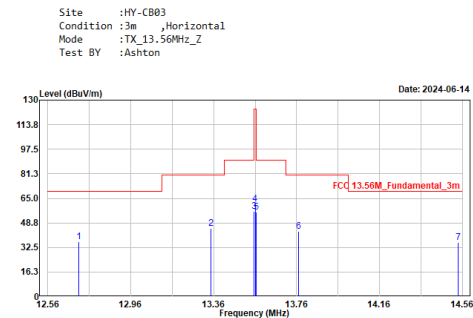

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	12.710	36.48	69.50	-33.02	14.12	22.36	QP
2	13.346	45.07	80.50	-35.43	22.77	22.30	QP
3	13.553	56.23	90.47	-34.24	33.93	22.30	QP
4	13.560	61.16	124.00	-62.84	38.86	22.30	QP
5	13.567	55.94	90.47	-34.53	33.64	22.30	QP
6	13.770	43.39	80.50	-37.11	21.09	22.30	QP
7	14.540	35.92	69.50	-33.58	13.62	22.30	QP


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

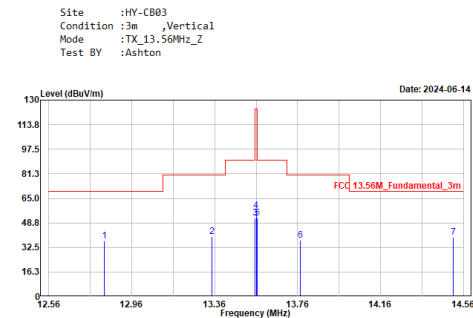


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	12.028	36.61	69.50	-32.89	14.28	22.33	QP
2	13.346	39.96	80.50	-40.54	17.66	22.30	QP
3	13.553	52.24	90.47	-38.23	29.94	22.30	QP
4	13.560	57.04	124.00	-66.96	34.74	22.30	QP
5	13.567	52.16	90.47	-38.31	29.86	22.30	QP
6	13.772	37.47	80.50	-43.03	15.17	22.30	QP
7	14.512	39.22	69.50	-30.28	16.92	22.30	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Appendix D. Test Result of Radiated Emission

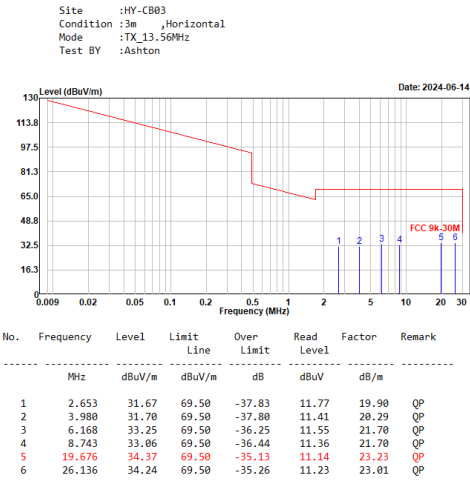


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

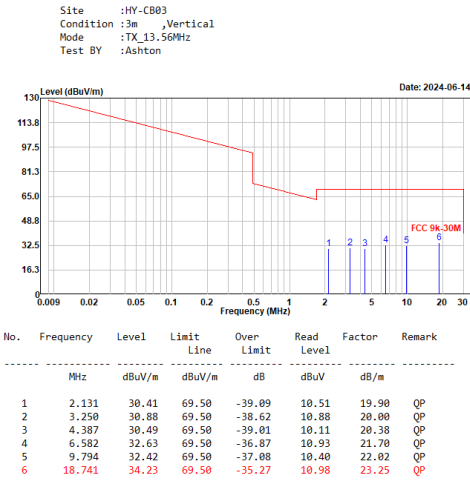

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

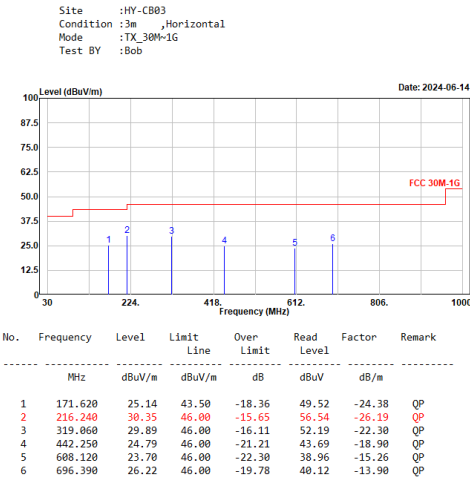

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

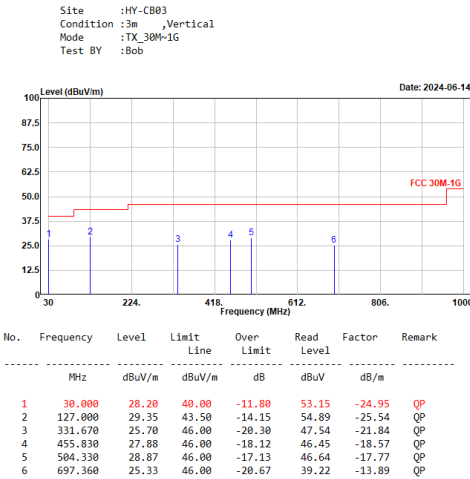

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line