






English	2
Deutsch	16
Español	17
Francais	18
Italiano	19
Mandarin	20

FCC Statement

This device complies with Part 15 of the FCC rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation.



English

Introduction 3

Preparing the handsfree 3

Using the handsfree 9

Troubleshooting 11

Additional Information 12

Declaration of Conformity 21

Ericsson HBH-20

First edition (June 2001)

This manual is published by Ericsson Mobile Communications AB, without any warranty. Improvements and changes to this manual necessitated by typographical errors, inaccuracies of current information, or improvements to programs and/or equipment, may be made by Ericsson Mobile Communications AB at any time and without notice. Such changes will, however, be incorporated into new editions of this manual.

All rights reserved.

©Ericsson Mobile Communications AB, 2001

Publication number: EN/LZT 108 5119 R1A

INNOVATRON PATENTS:

Some of the services in this manual are not supported by all networks. This also applies to the GSM International Emergency Number 112.

Contact your network operator or service provider if you are in doubt whether you can use a particular service or not.

The *BLUETOOTH* trademarks are owned by their proprietor and used by Ericsson under license.

Important Information

Caution! Changes or modifications not expressly approved by Ericsson will void the user's authority to operate the equipment.

Introduction

The *Bluetooth*™ handsfree HBH-20 is a portable handsfree solution based on *Bluetooth* wireless technology.

See “Guidelines for safe and efficient use” on page 12 and “Limited warranty” on page 14 before using your handsfree.

What is *Bluetooth* wireless technology?

The *Bluetooth* wireless technology makes it possible to connect any compatible portable and stationary communications device without using cables. The technology is based on a radio link that offers fast and reliable transmission of voice and data information. It does not require a line-of-sight connection in order to establish communication. *Bluetooth* wireless technology uses a globally available frequency range intended to ensure communication compatibility worldwide.

When can I use my handsfree?

You can connect your HBH-20 handsfree to your mobile phone or PC – or any device with *Bluetooth* wireless technology that supports the handsfree profile




– to keep your hands free for more important tasks when you are at the office or in the car. This user's guide focuses on how to use the handsfree with your mobile phone. When the handsfree is connected to your mobile phone, you can use voice control to make calls (if your phone supports this function). The phone can be tucked away in your pocket or in a bag. You can handle incoming and outgoing calls, and adjust the volume, using the buttons on the handsfree.

Preparing the handsfree

To be able to use the handsfree together with a mobile phone, you need to have a phone with built-in *Bluetooth* capability, or a phone with a *Bluetooth* adapter connected to it.

Overview

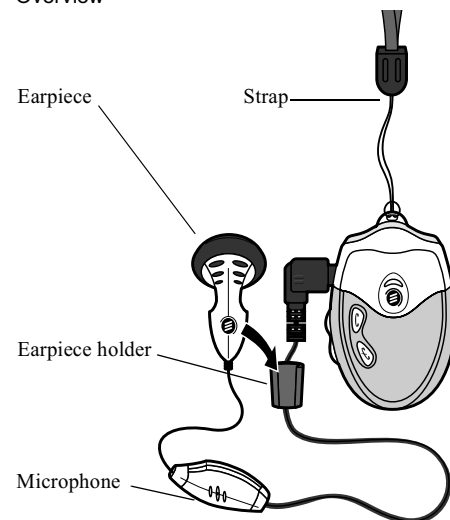

Handsfree connector

Charging connector

Indicator light

Volume buttons

Call handling buttons

Note: Always handle the handsfree with care!

Getting Started

Before you start using the handsfree with a phone or other device for the first time, you should:

- Charge the handsfree using an appropriate Ericsson charger.
- Pair the handsfree with a device, for example, a mobile phone.
- Make sure the handsfree is within range (up to 10 m/30 ft with no solid objects in between).

Charging

The handsfree comes with a built-in rechargeable battery. The battery is not fully charged when you buy the handsfree. We recommend that you charge the handsfree until the indicator light turns green before using it for the first time.

- To remind you that you will soon need to recharge the battery, the handsfree indicator light flashes red when the handsfree is on.
- It takes 1-1.5 hours to fully recharge the battery.
- During charging, the indicator light shows a steady red light when the handsfree is turned off, and flashes red when the handsfree is on.

- When the battery is fully charged, the indicator shows a steady green light if the handsfree is off, or a flashing green light if the handsfree is on.


Compatible chargers

You can attach the following charger to the HBH-20:

- Ericsson Travel Charger CTR-10


To charge the battery

1. Open the rubber plug at the top right of the handsfree. Hold the handsfree upside down.
2. Connect the charger to the handsfree and to the mains. The flash symbol on the plug must face upwards.

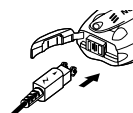

To disconnect the charger

1. Tilt the charger plug upwards to remove it.
2. Push the rubber plug back into place.



Instructions

Instructions in this user's guide are based on handsfree buttons and phone keys. For example, the  button or the **YES** key on the phone can be used to answer a call.

To turn the handsfree on

- Press and hold the  button until you hear a short low tone followed by a short high tone. The handsfree indicator light flashes green. If the battery is low, the light flashes red.

To turn the handsfree off

- Press and hold the  button until you hear a short high tone followed by a short low tone. The handsfree indicator light is switched off.

Pairing the handsfree

Before you start using the handsfree for the first time, you must pair the handsfree with the device you want to use it with, for example, a mobile phone. This section describes three ways of pairing the handsfree:

- With an Ericsson phone with built-in *Bluetooth* capability.

- With an Ericsson phone with a *Bluetooth* phone adapter attached.
- With another *Bluetooth* device or non-Ericsson phone.

Using an Ericsson phone with built-in *Bluetooth* capability

You pair the handsfree with your phone by adding it to a list of paired devices in the phone. They then recognize each other when they connect.

Note: *The first time the handsfree is turned on it will automatically be ready for pairing.*

To pair the handsfree with the phone

1. With the handsfree turned off, press and hold both the  and  buttons for up to 10 seconds until the indicator light on the handsfree flashes green and red.
2. In the phone, scroll to *Extras* or *Connect*, **YES**, *Bluetooth*, **YES**, *Paired devices*, **YES**, *Add device*, **YES**, *Phone initiates*, **YES**.
3. A list of device types that you can pair with your phone appears. Scroll to *Headset* and press **YES**. Make sure the handsfree and the phone are not too far apart.
4. *HBH-20* appears in the display. Press **YES**.

5. Enter the handsfree passkey (0000) and press **YES**. The phone pairing procedure starts.
6. You may now replace the given handsfree name with a personal name tag and then press **YES**. When pairing has been completed, the handsfree indicator light flashes green.

Note: *The handsfree passkey is 0000.*

Using an Ericsson phone with a *Bluetooth* adapter attached

You pair the handsfree with your phone adapter by adding it to a list of paired devices in the phone. They then recognize each other when they connect.

To pair the handsfree with the phone adapter

1. Attach the *Bluetooth* adapter to the phone and turn on the phone.
2. With the handsfree turned off, press and hold the **YES** and **NO** buttons for up to 10 seconds until the indicator light on the handsfree flashes green and red.
3. Scroll to *Extras* or *Connect*, **YES**, *Accessories*, **YES**, *DBA-10*, **YES**, *Paired devices*, **YES**, *Headset*, **YES**, *Add device?*. Make sure the handsfree and the phone are not too far apart.

4. Press **YES** on the phone. The pairing procedure starts.
5. *HBH-20. Add to paired devices?* appears. Press **YES**.
6. Enter the handsfree passkey (0000) and press **YES**. When pairing has been completed, the handsfree indicator light flashes green.

Using another device or a non-Ericsson phone
The device or phone must have *Bluetooth* capability and support the handsfree profile.

To pair the handsfree with another device

1. Activate the *Bluetooth* function in the other device if necessary. To do this, please refer to the user documentation for the device.
2. With the handsfree turned off, press and hold the **YES** and **NO** buttons for up to 10 seconds until the indicator light on the handsfree flashes green and red. Make sure the handsfree and the other device are not too far apart.
3. Initiate *Bluetooth* pairing in the other device to pair it with the handsfree. To do this, please refer to the user documentation for the device.
When asked, enter the handsfree passkey (0000) and press the accept key or its equivalent. When pairing has been completed, the handsfree indicator light flashes green.

Resetting the handsfree

You may want to reset the handsfree to its default settings, if, for example, you forget your handsfree passkey. This also clears all current pairings.

To reset the handsfree

1. With the handsfree turned off, press and hold the  and  buttons for up to 10 seconds until the indicator light on the handsfree flashes green and red. Then release the buttons.
2. Press and hold the  button until you hear two beeps, followed a moment later by a third beep. The handsfree is now turned off. Keep the handsfree off for at least 30 seconds. The handsfree has now been reset.

Adjusting the volume

Adjusting the earpiece volume

You can adjust the handsfree earpiece volume during a call.

To adjust the earpiece volume

- To increase the volume, press the  button.
- To decrease the volume, press the  button.

Adjusting the ring volume

You can adjust the handsfree ring volume when you are not engaged in a call.

To adjust the ring volume

- To increase the ring volume, press the  button.
- To decrease the ring volume, press the  button.

Note: *The handsfree uses increasing volume. For safety reasons, it starts with a low volume level before the maximum set level is reached.*


Wearing and positioning the handsfree

Once the handsfree and other device are set up:


- Place the earpiece in your ear.
- Clip the HBH-20 high up on your body, or attach it to the strap to wear around your neck.
- Make sure the microphone on the cable is pointing towards your mouth. It is now ready for use.

To change the cover

1. Make sure the handsfree is turned off. Squeeze the lower part of the handsfree cover.

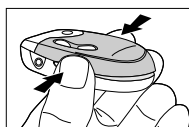


2. Gently remove the cover.

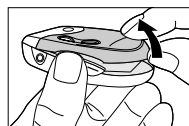

3. Slide the top of the replacement cover into position.



4. Gently press the replacement cover until it clicks into place.

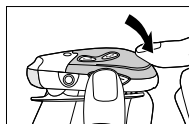

Using the handsfree

Once you have paired the handsfree with your phone, you can make and receive calls using the handsfree as long as it is turned on and within range of the phone (up to 10 m/30 ft with no solid objects in between).

If your phone supports voice dialling and it is activated, you can use this feature with the handsfree. Please refer to your phone's user documentation for more information on voice control.

The following instructions cover the use of the handsfree with an Ericsson phone with built-in *Bluetooth* capability, or a *Bluetooth* phone adapter from Ericsson and an Ericsson phone.

Making calls

Phone functionality is still available when the handsfree is connected. You can make a call with the phone or with the handsfree.

To make a call using voice dialling

1. Make sure the phone and the handsfree are on and within range of each other. Press and hold the  button.
2. After the beep, voice dial as you normally would.

If using the Bluetooth phone adapter: Say the voice command after the phone beep (not after the handsfree beep). To know when the phone beeps in relation to the handsfree beep, make a test call using voice dialling.

3. End the call by pressing the handsfree  button . You can also make a call using the phone's keypad or phone book (if, for example, your phone does not support voice dialling).

Answering calls

Please refer to the phone's user documentation for information on how to answer a call using voice control.

To answer a call using the button

1. When the handsfree rings, press the  button.
Note: *If the phone rings first, wait until the handsfree rings, then press the  button.*
2. End the call by pressing the  button.

To turn off the microphone

- During a call, press and hold both the  and  buttons to turn off the microphone. A beep is heard while the microphone is turned off.

- Press and hold both the  and  buttons again to resume the conversation.

To put a call on hold*

- Press the  button to put a call on hold, and  again to retrieve the call.

To handle a second call*

- Press the  button to answer a second call and  again to switch between the two calls.
- Press the  button to end the current call and answer the waiting call.

To reject a second call

- Press the  button to continue the current call and reject the waiting call.

** Ericsson phones R520, T39 and DBA-10 do not support these functions.*

Note: *Please refer to the phone's user documentation on how to handle more than one call simultaneously.*

Lost connection to handsfree

If the connection to the handsfree is lost during an ongoing call you must confirm the sound transfer to the phone by pressing the **YES** key on the phone, otherwise the call is disconnected after 30 seconds.

If the handsfree and the phone are within range, you can transfer the sound to the handsfree by pressing the  button.

Headset battery status

The handsfree comes with a built-in battery.

To check the battery status

1. Press and hold both  and  buttons.
2. The battery status is indicated by one of these three levels:
 - High - three green flashes
 - Medium - two green flashes
 - Low - one green flash

Troubleshooting

This section lists some problems that you might encounter while using your handsfree.

No sound contact between handsfree and other device

The handsfree and the device you are using with it have to be paired to recognize each other.

They also have to be within range of each other. During pairing it is recommended that the handsfree and the device you are using it with are no more than 1 m./3 ft. apart, with no solid objects in between.

The handsfree indicator light flashes red

This indicates that the handsfree has only limited talk and standby time left. Charge the handsfree battery for approximately 1 to 1.5 hours.

No indication of charging is shown

If you charge a handsfree battery that is empty, or has not been used for a long time, it may take several minutes before a light to indicate charging (a steady red light) appears.

Some handsfree functions do not work

If you notice that you cannot make use of all the features in the HBH-20 handsfree, please check with an Ericsson Service Partner, or visit the HBH-20 page

on <http://mobileinternet.ericsson.com> for more information.

Additional Information

Guidelines for safe and efficient use

Note: Read this information before using your Bluetooth Handsfree.

Changes or modifications to this Bluetooth Handsfree not expressly approved by Ericsson may void the user's authority to operate the equipment.

Please check for any exceptions, due to national requirements or limitations, in usage of Bluetooth equipment before using this product.

Attach this Bluetooth Handsfree to Ericsson equipment only.

Product care

Please note only Ericsson Certified Service Partners should remove or replace the battery.

- Do not expose your product to liquid or moisture or to humidity.
- Do not expose your product to extreme high or low temperatures.
- Do not expose your product to lit candles, cigarettes, or cigars, or to open flames etc.
- Do not drop, throw or try to bend the product as rough treatment could damage it.
- Do not use any other accessories than Ericsson originals. Use of non-Ericsson original accessories may result in loss of performance, damage to the product, fire, electric shock or injury. The warranty does not cover product failures which have been caused by use of non-Ericsson original accessories.
- Do not attempt to disassemble your product. The product does not contain consumer serviceable or replaceable components. Only Ericsson Certified Service Partners should perform service.
- Do not keep the product in an area prone to dust and dirt. Only use a soft damp cloth to clean your product.
- If you will not be using the product for a while, store it in a place that is dry, free from damp, dust and extreme temperatures.

Radio frequency exposure

Your Bluetooth Handsfree is a radio transmitter and receiver. When in operation, it communicates with a Bluetooth equipped mobile device by receiving and transmitting radio frequency (RF) electromagnetic fields (microwaves) in the frequency range 2400 to 2500 MHz. The output power of the radio transmitter is low, 0.001 watt.

Your Bluetooth Handsfree is designed to operate in compliance with the RF exposure guidelines and limits set by national authorities and international health agencies when used with any compatible Ericsson mobile phone.

Driving

Check the laws and regulations on the use of mobile phones and hands free equipment in the areas where you drive.

Always give full attention to driving and pull off the road and park before making or answering a call if driving conditions so require.

RF energy may affect some electronic systems in motor vehicles such as car stereo, safety equipment etc. Check with your vehicle manufacturer's representative to be sure that you mobile phone or Bluetooth Handsfree will not affect the electronic systems in your vehicle.

Electronic equipment

Most modern electronic equipment is shielded from RF energy. However, certain electronic equipment is not, therefore:

Do not use your Bluetooth Handsfree near medical equipment without requesting permission. If you are using any personal medical devices, e.g. a pacemaker or a hearing aid, please read in your mobile phone's User's Guide for further information.

Aircraft

Turn your Bluetooth Handsfree OFF before boarding any aircraft. To prevent interference with communication systems, you must not use your Bluetooth Handsfree while the plane is in the air.

Blasting areas

Turn off all your electronic devices when in a blasting area or in areas posted **turn off two-way radio** to avoid interfering with blasting operations. Construction crews often use remote control RF devices to set off explosives.

Potentially explosive atmospheres

Turn off your electronic device when in any area with a potentially explosive atmosphere. It is rare, but your electronic device could generate sparks. Sparks in such areas could cause an explosion or fire resulting in bodily injury or even death.

Areas with a potentially explosive atmosphere are often, but not always, clearly marked.

Power supply

Connect the AC power adapter only to designated power sources as marked on the product.

To reduce risk of damage to the electric cord, remove it from the outlet by holding onto the AC adapter rather than the cord.

Make sure the cord is positioned so that it will not be stepped on, tripped over or otherwise subjected to damage or stress.

To reduce risk of electric shock, unplug the unit from any power source before attempting to clean it.

The AC power adapter must not be used outdoors or in damp areas.

DANGER - Never alter the AC cord or plug. If the plug will not fit into the outlet, have a proper outlet installed by a qualified electrician.

Improper connection can result in risk of electric shock.

Children

Do not allow children to play with your Bluetooth Handsfree since it contains small parts that could become detached and create a choking hazard.

Emergency calls

IMPORTANT!

This Bluetooth Handsfree and the electronic device connected to the hands free operate using radio signals, cellular and landline networks as

well as user-programmed functions, which cannot guarantee connection under all conditions. Therefore you should never rely solely upon any electronic device for essential communications (e.g. medical emergencies). Remember, in order to make or receive calls, the hands free and the electronic device connected to the hands free must be switched on and in a service area with adequate cellular signal strength. Emergency calls may not be possible on all cellular phone networks or when certain network services and/or phone features are in use. Check with your local service provider.

Battery information

Please note that only Ericsson Certified Service Partners are able to remove or replace the battery in a proper way.

A rechargeable battery has a long service life if treated properly.

A new battery or one that has not been used for a long period of time could have reduced capacity the first few times it is used.

Use only Ericsson original accessories. Using non-original Ericsson accessories could be dangerous and the warranty does not cover product failures which have been caused by use of non-Ericsson original accessories.

Do not expose the battery to extreme temperatures, never above +55°C (+131°F). For maximum battery capacity, use the battery in room temperature. If the battery is used in low temperatures, the battery capacity will be reduced.

The battery can only be charged in temperatures between +10°C (+50°F) and +45°C (+113°F).

Recycling the battery in your Bluetooth handsfree

The battery in your Bluetooth Handsfree must be disposed of properly and should never be placed in municipal waste. The Ericsson Certified Service Partner removing or replacing the battery will dispose of it according to local regulations.

Limited warranty

Thank you for purchasing this Ericsson Product. To get maximum use of your new Product, we recommend that you follow a few simple steps:

Read the Guidelines for Safe and Efficient Use.

Read all the terms and conditions of your Ericsson Warranty.

Save your original receipt. You will need it for warranty repair claims.

Should your Ericsson Product need warranty service, please return it to the dealer from whom it was purchased, or contact your local Ericsson Certified Call Centre or visit www.ericsson.com/consumers to get further information.

Our warranty

Ericsson Mobile Communications AB, Torshamnsgatan 27, 164 80 Stockholm, Sweden, warrants this Product to be free from defects in material and workmanship at the time of its original purchase by a consumer, and for a subsequent period of one (1) year.

What we will do

If, during the warranty period, this Product fails to operate under normal use and service, due to improper materials or workmanship, Ericsson subsidiaries, authorised distributors or Certified Service Partners will, at their option, either repair or replace the Product in accordance with the terms and conditions stipulated herein.

Conditions

1. The warranty is valid only if the original receipt issued to the original purchaser by the dealer, specifying the date of purchase and serial number, is presented with the Product to be repaired or replaced. Ericsson reserves the right to refuse warranty service if this information has been removed or changed after the original purchase of the Product from the dealer.
2. If Ericsson repairs or replaces the Product, the repaired or replaced Product shall be warranted for the remaining time of the original warranty period or for ninety (90) days from the date of repair/replacement, whichever is longer. Repair or replacement may involve the use of functionally equivalent reconditioned units. Replaced faulty parts or components will become the property of Ericsson.

3. This warranty does not cover any failure of the Product due to normal wear and tear, or due to misuse, including but not limited to use in other than the normal and customary manner, in accordance with Ericsson's instructions for use and maintenance of the Product. Nor does this warranty cover any failure of the Product due to accident, modification or adjustment, acts of God, improper ventilation or damages resulting from liquid.
4. This warranty does not cover Product failures due to improper repair installations, modifications or service performed by a non-Ericsson Certified Service Partner or opening of the Product by non-Ericsson certified persons.
5. The warranty does not cover Product failures which have been caused by use of non-Ericsson original accessories.
6. Tampering with any of the seals on the Product will void the warranty.
7. THERE ARE NO EXPRESS WARRANTIES, WHETHER WRITTEN OR ORAL, OTHER THAN THIS PRINTED LIMITED WARRANTY. ALL IMPLIED WARRANTIES, INCLUDING WITHOUT LIMITATION THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED TO THE DURATION OF THIS LIMITED WARRANTY. IN NO EVENT SHALL ERICSSON BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES OF ANY NATURE WHATSOEVER, INCLUDING BUT NOT LIMITED TO LOST PROFITS OR COMMERCIAL LOSS, TO THE FULL EXTENT THOSE DAMAGES CAN BE DISCLAIMED BY LAW.

Some countries/states do not allow the exclusion or limitation of incidental or consequential damage, or limitation of the duration of implied warranties, so the preceding limitations or exclusions may not apply to you.

The warranty provided does not affect the consumer's statutory rights under national legislation in force, nor does it affect the consumer's rights against the dealer arising from their sales/purchase contract.

Supported Bluetooth functions




This product supports the headset profile.





HBH20.book Page 16 Friday, July 13, 2001 11:14 AM



Deutsch

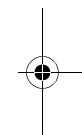
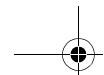
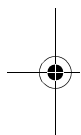


16 Deutsch





Español



Español

17








HBH20.book Page 18 Friday, July 13, 2001 11:14 AM



Francais



18 Francais








HBH20.book Page 19 Friday, July 13, 2001 11:14 AM



Italiano



Italiano

19








HBH20.book Page 20 Friday, July 13, 2001 11:14 AM




Mandarin



20

Mandarin



Declaration of Conformity

We, **Ericsson Mobile Communications AB** of
Torshamnsgatan 27
S-164 80 Stockholm, Sweden

declare under our sole responsibility that our product

Ericsson type 850 5002

to which this declaration relates is in conformity with
the appropriate standards ETS 300 328, ETS 300 342-
1, ETS 300 826 and EN 60950 following the
provisions of Radio Equipment and
Telecommunication Equipment directive **1995/5/EC**
with requirements covering EMC directive **89/336/**
EEC and Low voltage directive **73/23/EEC**.

Stockholm, June 2001

Place and date of issue


Anders Torstensson, President BU GSM

CE 068201