




SISO ANT A

Test Mode : 1TX 11g CH11 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

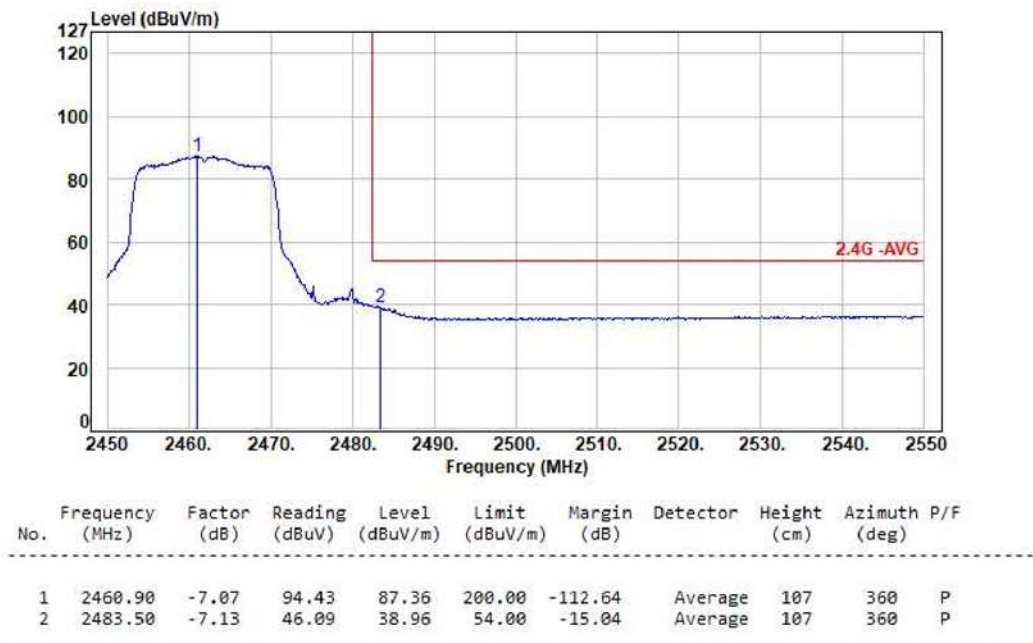


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH11 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

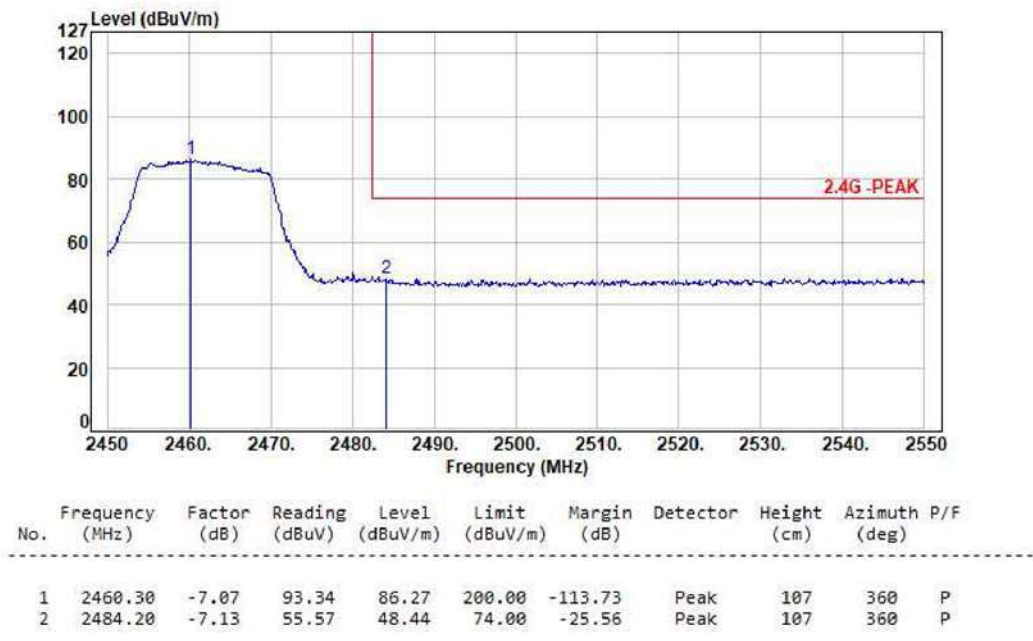


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH11 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

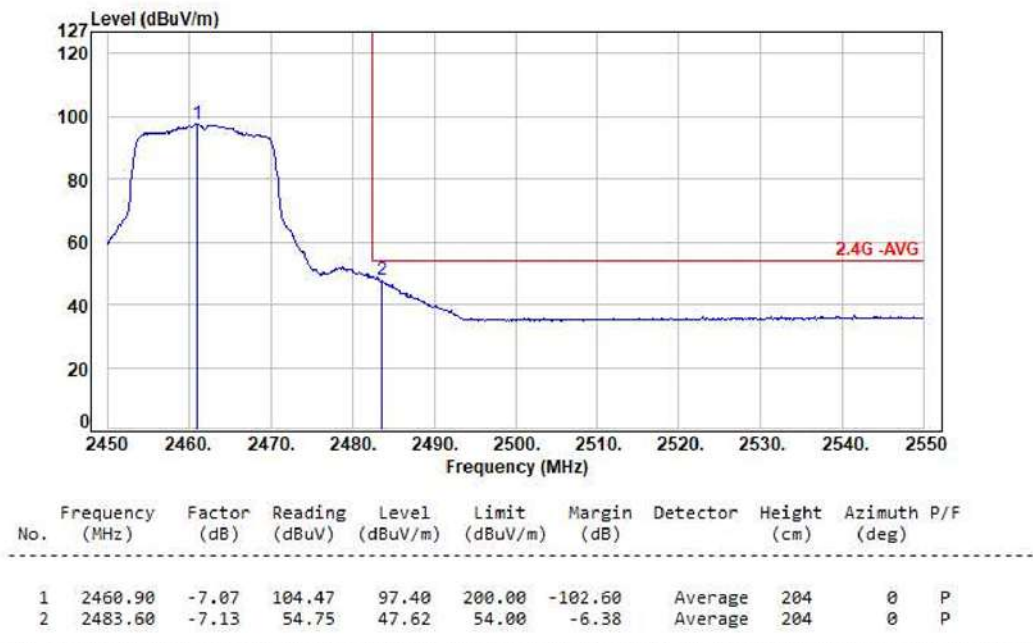


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH11 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

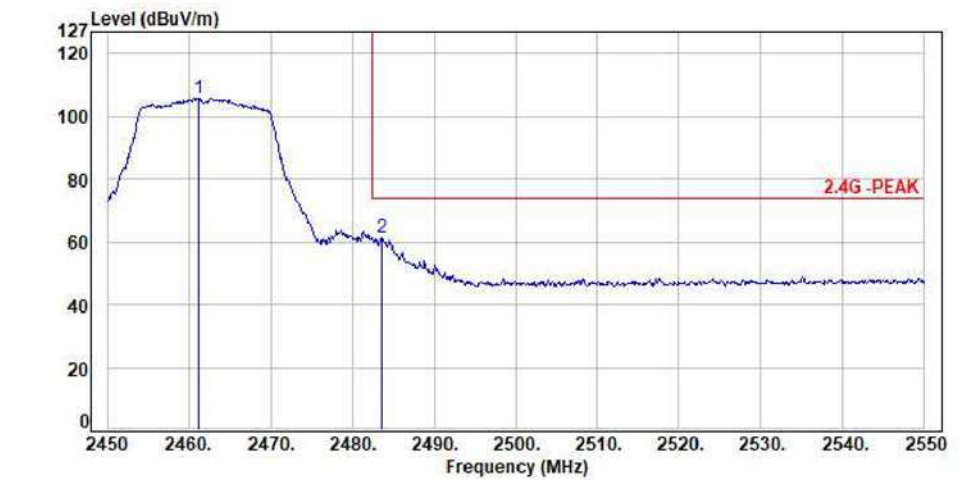

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	2461.20	-7.07	112.92	105.85	200.00	-94.15	Peak	204	0	P
2	2483.60	-7.13	68.67	61.54	74.00	-12.46	Peak	204	0	P

Note: Level=Reading+Factor

Margin=Level-Limit


Factor=Antenna Factor + cable loss - Amplifier Factor



6.7 Test Result and Data (1GHz ~ 3GHz)

For Validated data-MIMO

Test Mode : 2TX 11ax20 CH01 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

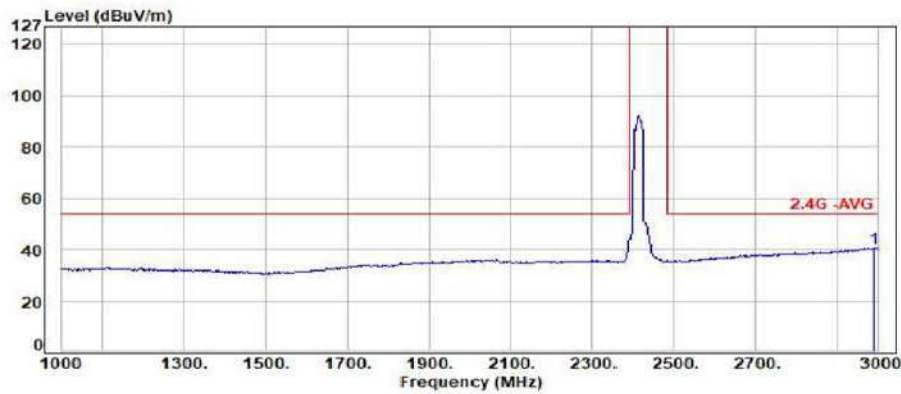

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	2988.00	-2.01	42.78	40.77	54.00	-13.23	Average	150	0	P


Note: Level=Reading+Factor

Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor




Test Mode : 2TX 11ax20 CH01 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

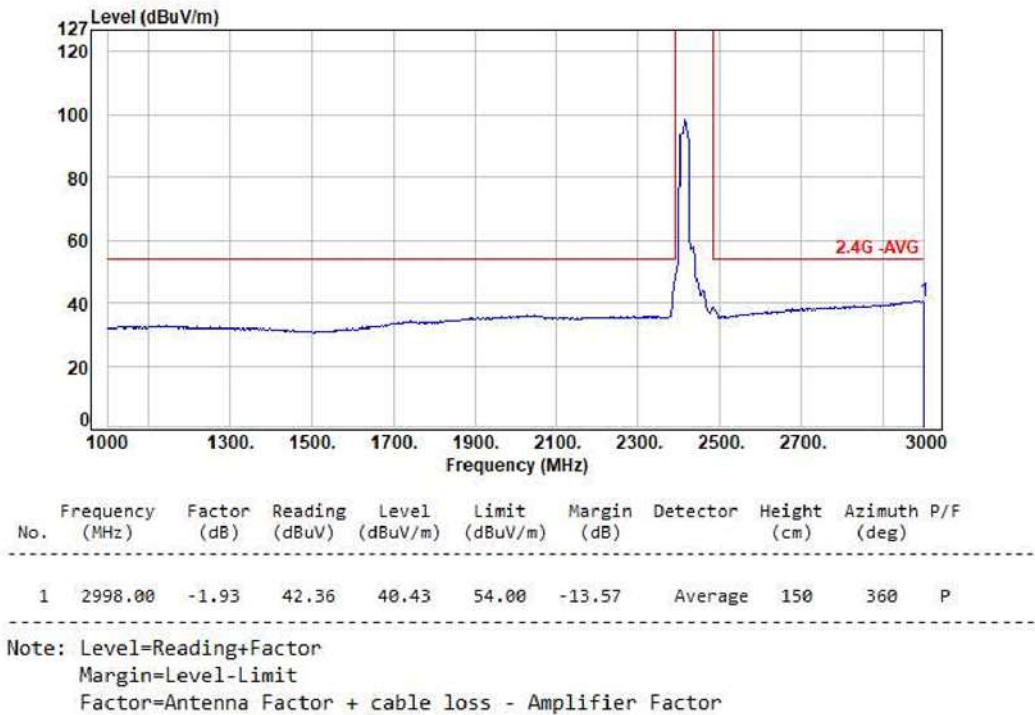



MIMO

Test Mode : 2TX 11ax20 CH01 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

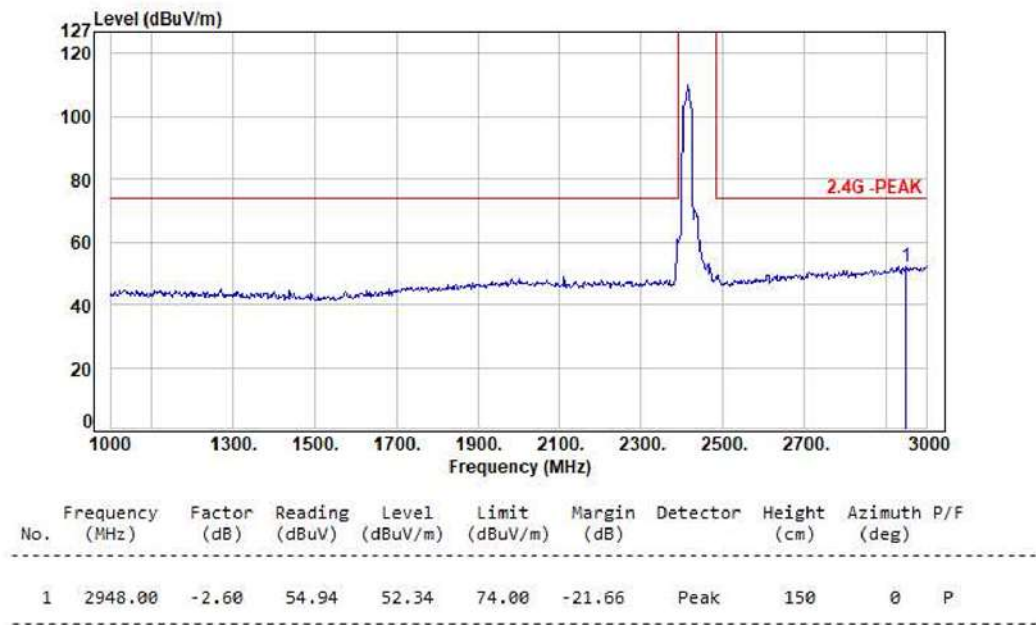


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax20 CH11 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

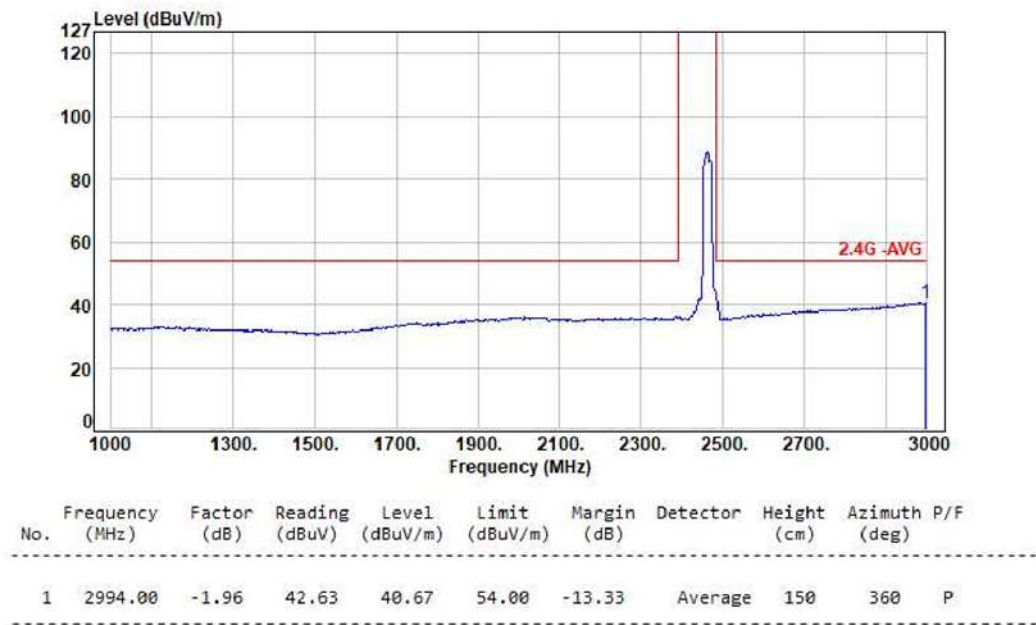


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax20 CH11 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

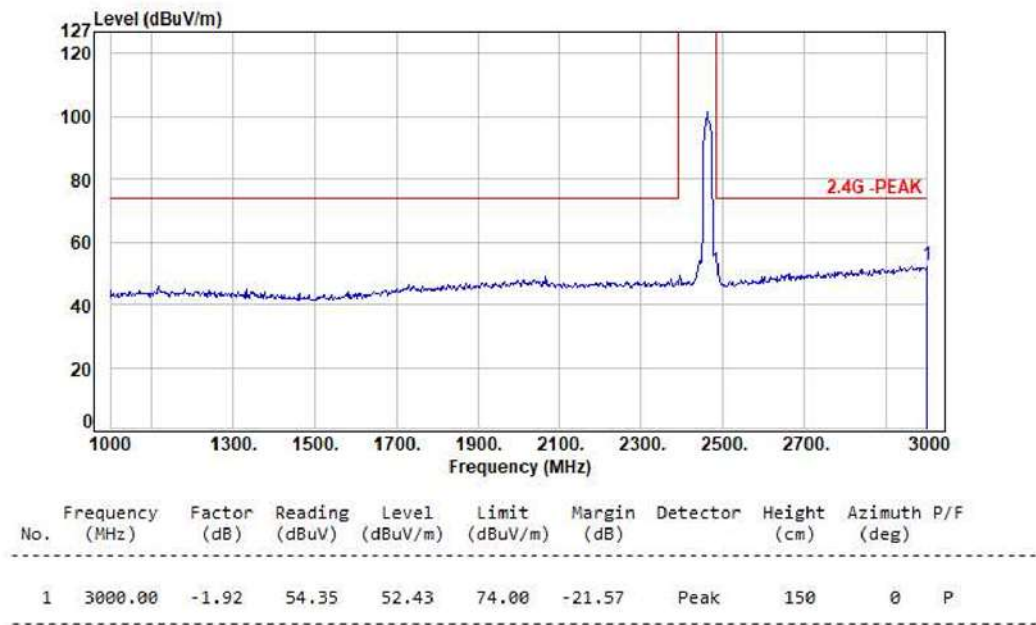


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax20 CH11 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

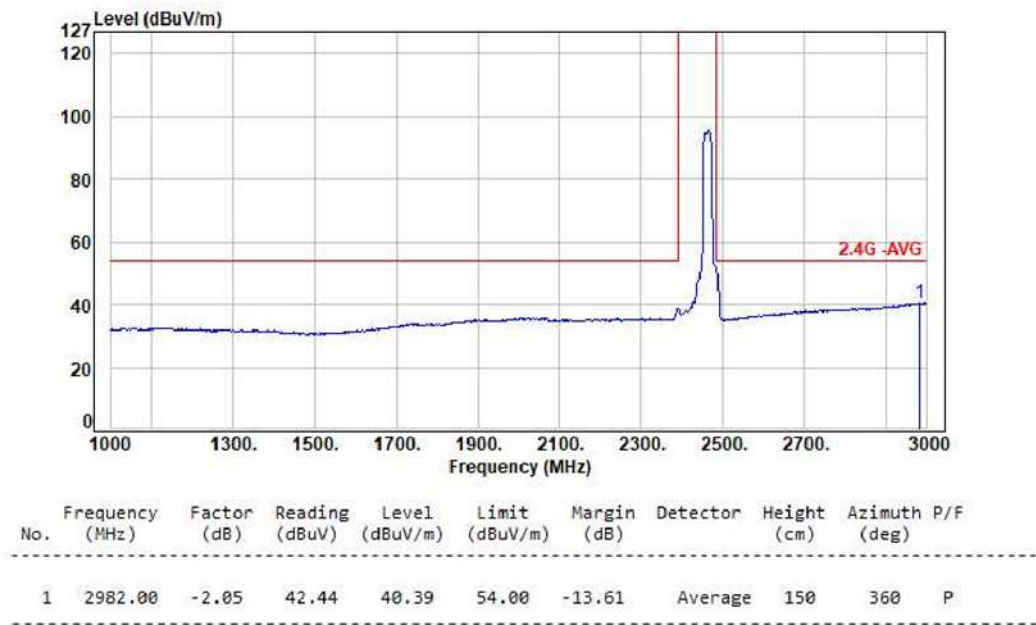


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11x20 CH11 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

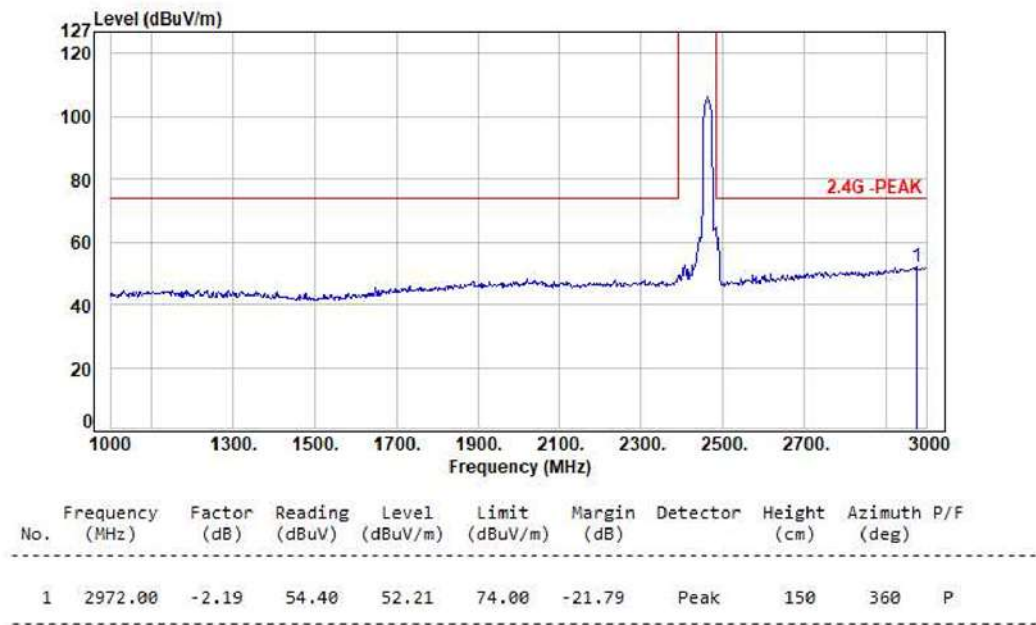


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax40 CH03 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

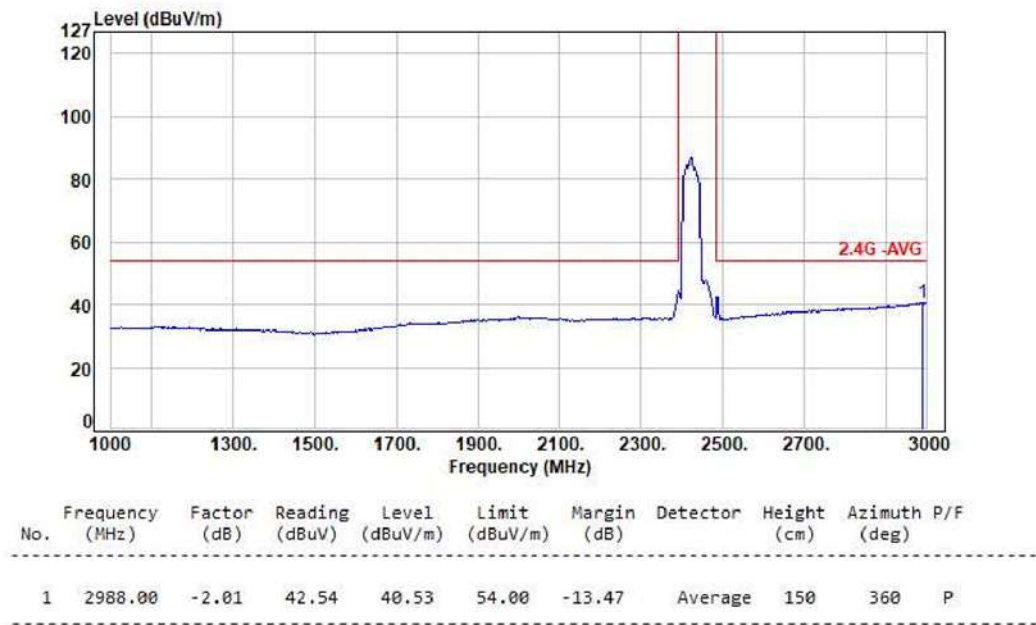


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO


Test Mode : 2TX 11ax40 CH03 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

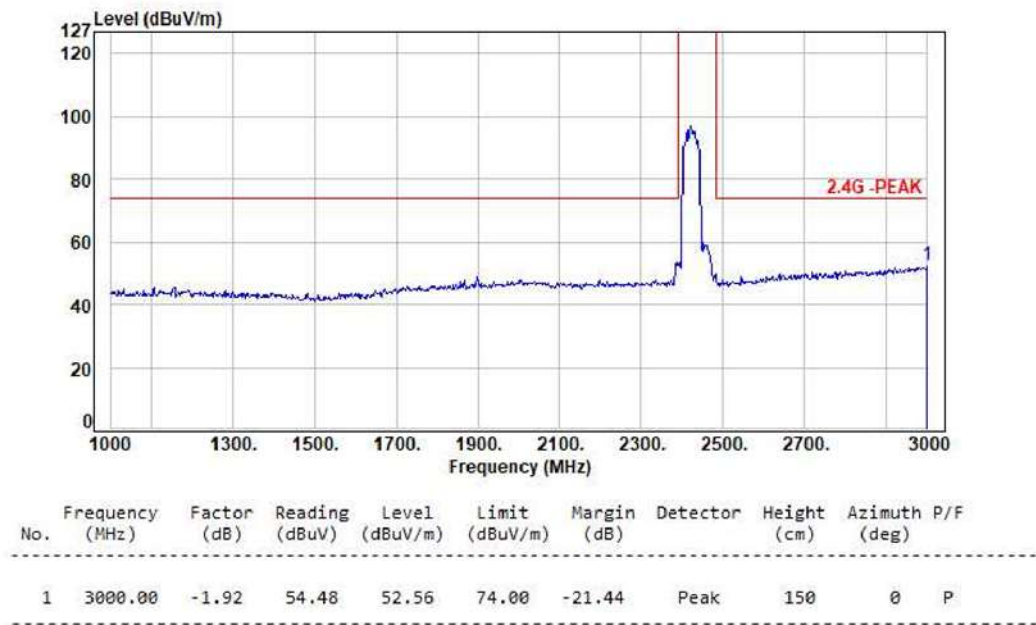

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 2TX 11ax40 CH03 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

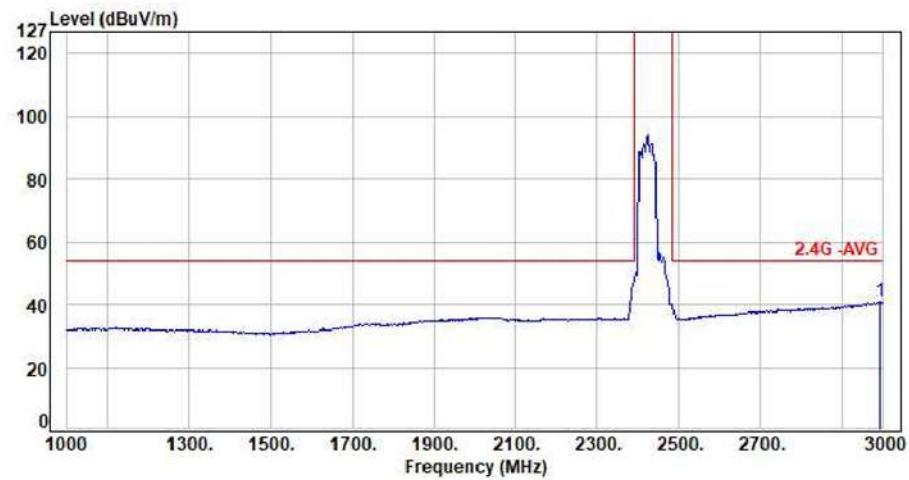


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	2992.00	-1.98	43.11	41.13	54.00	-12.87	Average	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO


Test Mode : 2TX 11ax40 CH03 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

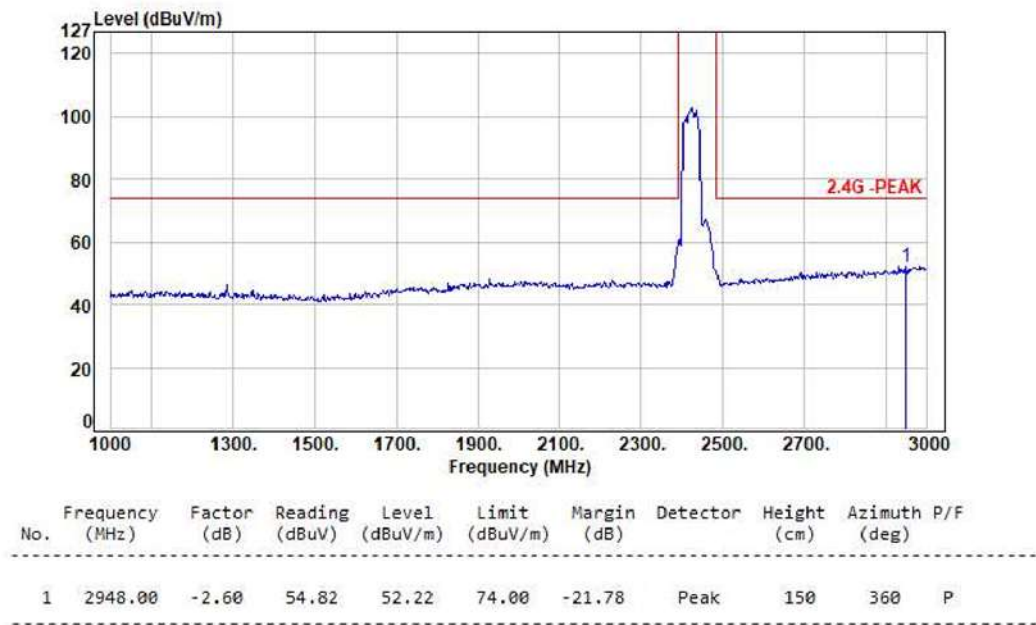

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 2TX 11ax40 CH09 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

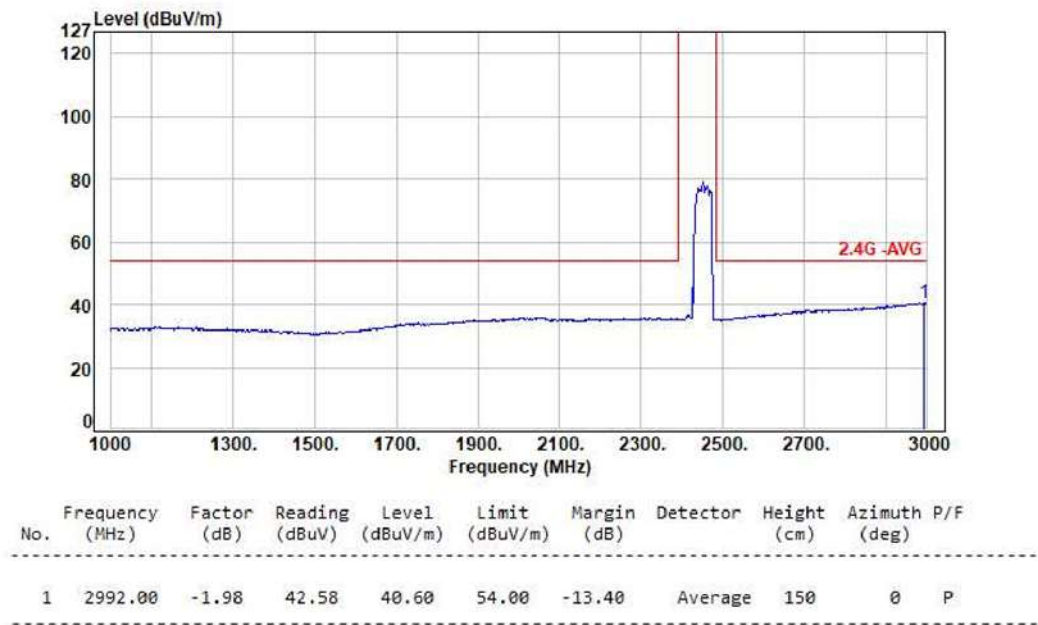


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO


Test Mode : 2TX 11ax40 CH09 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

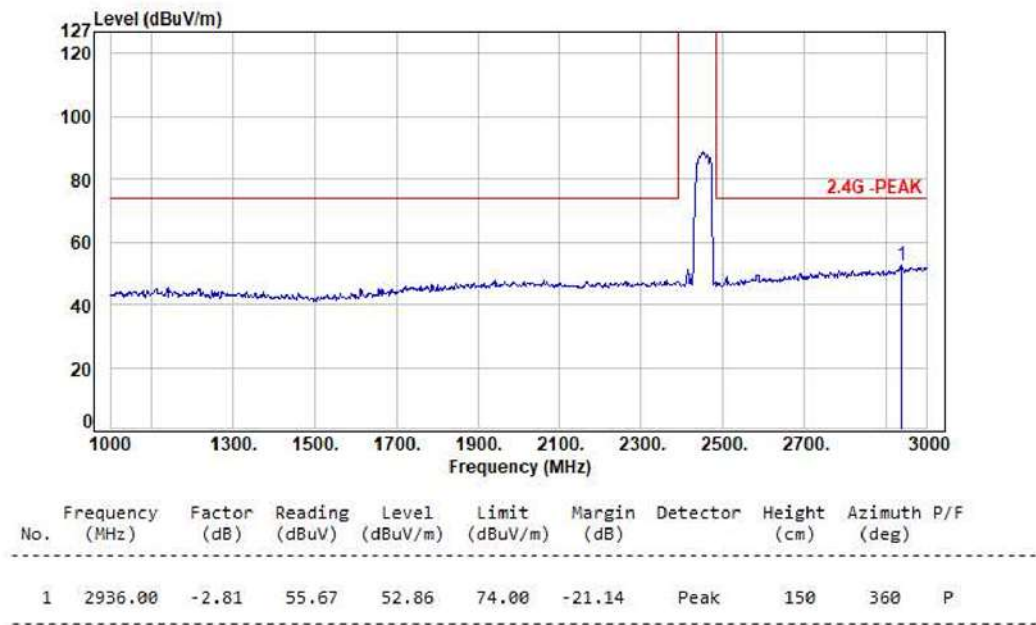

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 2TX 11ax40 CH09 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

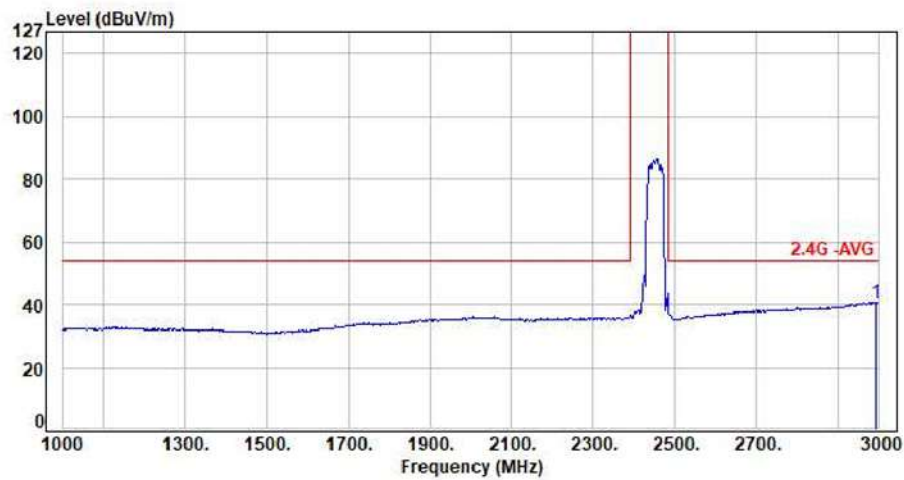


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	2992.00	-1.98	42.63	40.65	54.00	-13.35	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



Test Mode : 2TX 11ax40 CH09 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

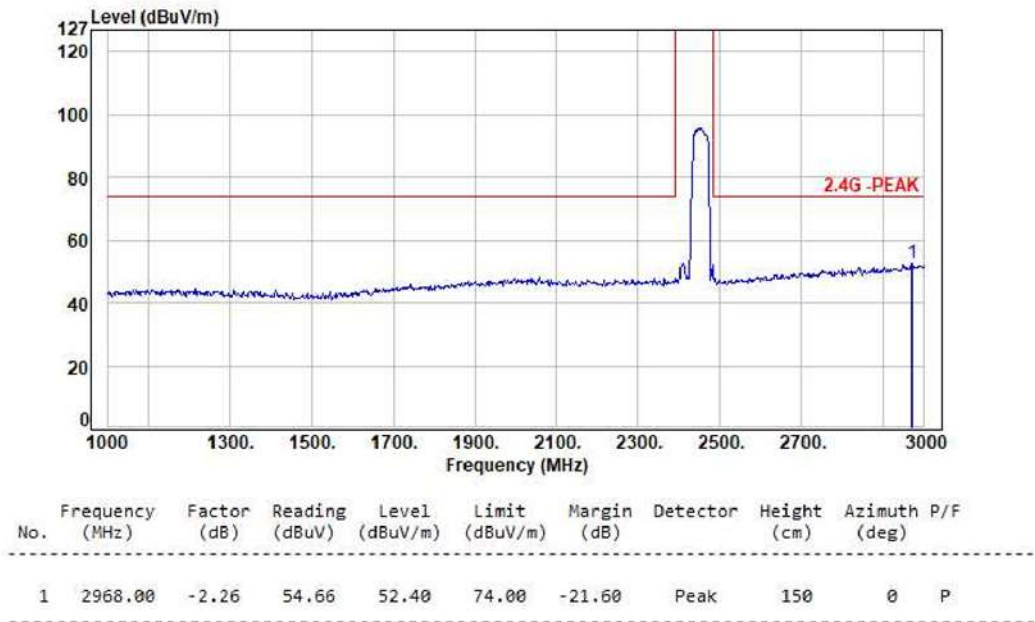


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



For Validated data-SISO ANT A

Test Mode : 1TX 11b CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

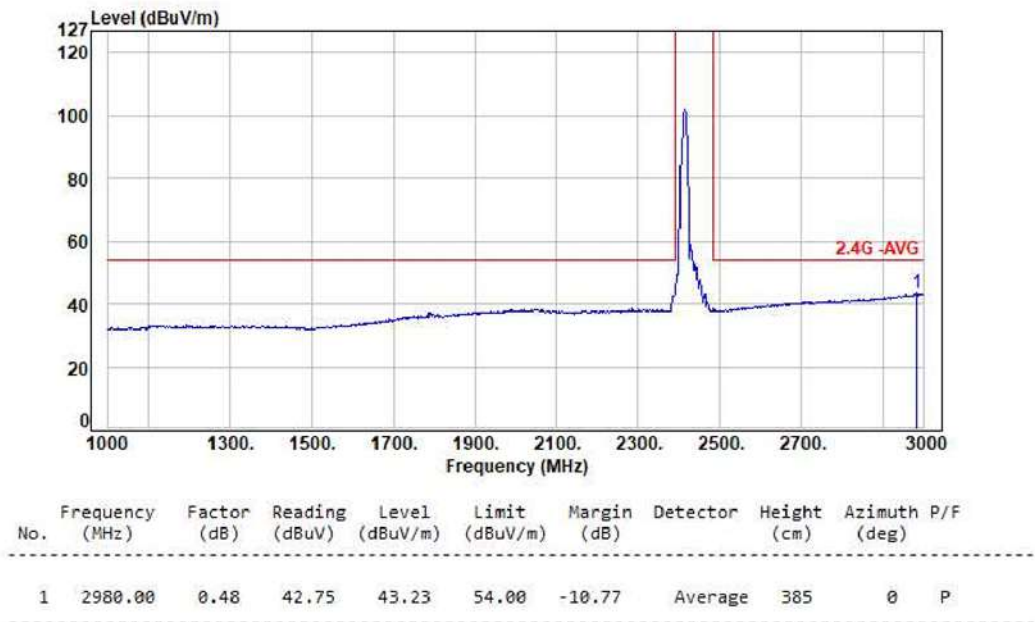


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

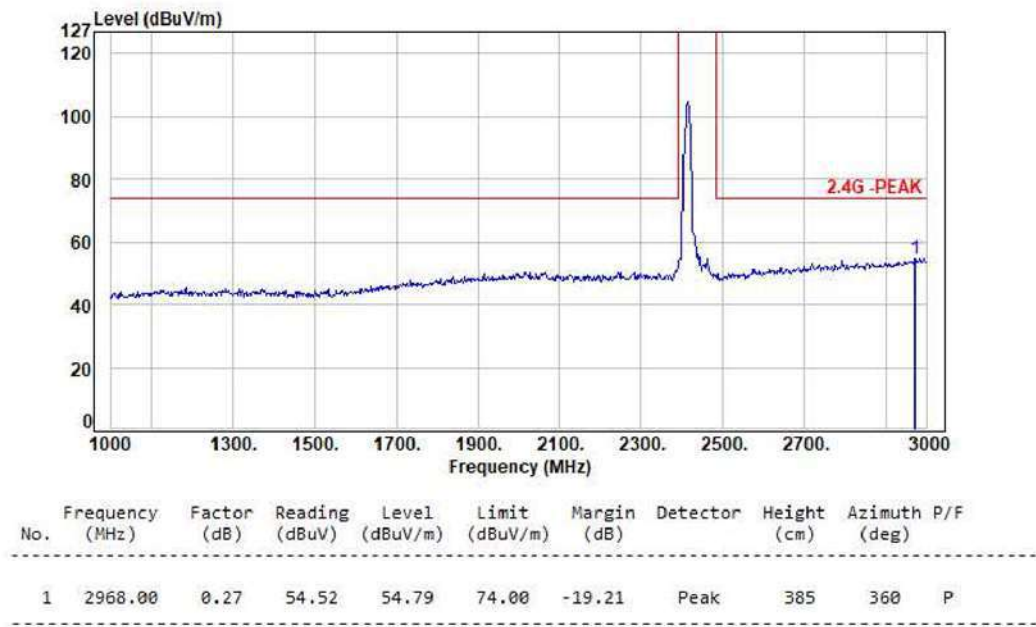


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

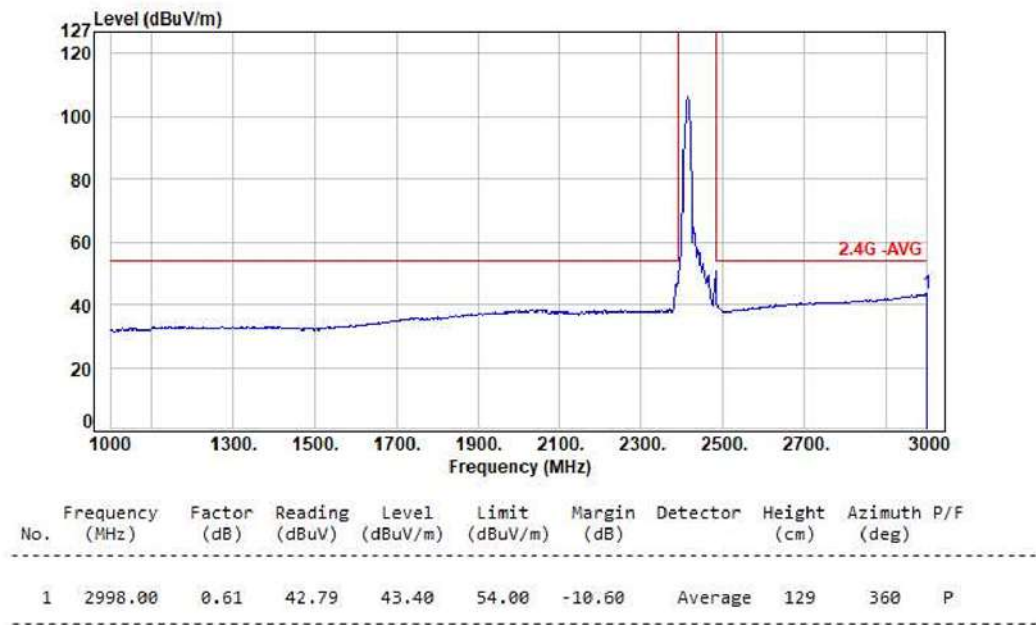


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

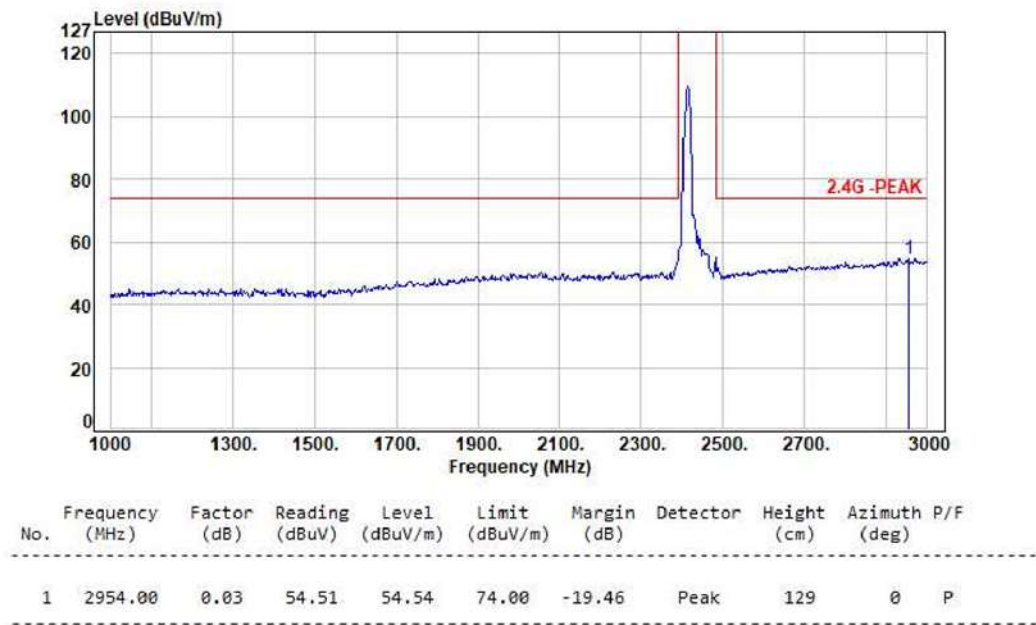


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

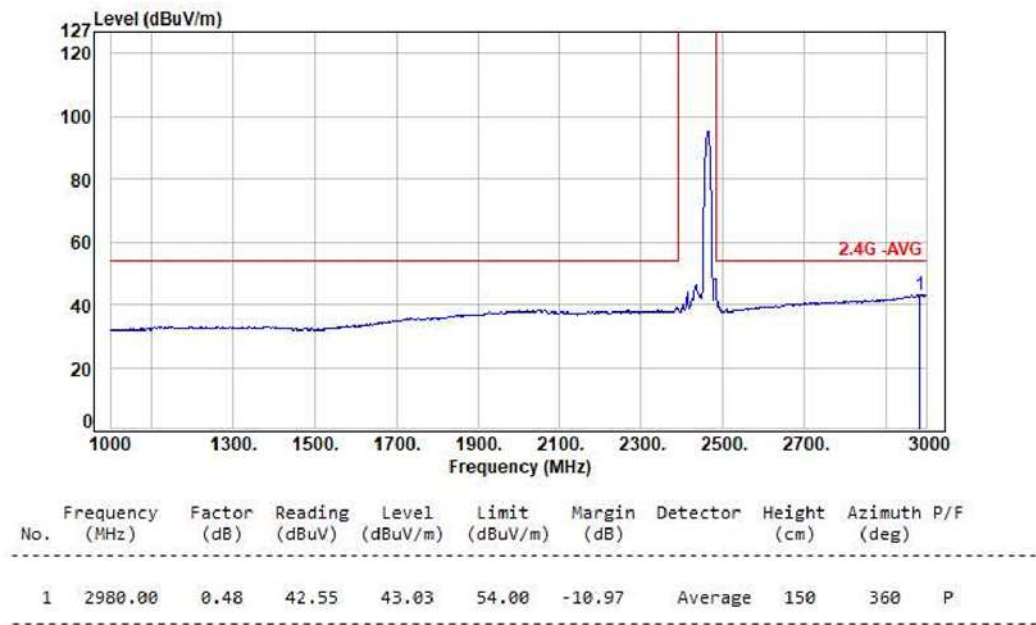


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

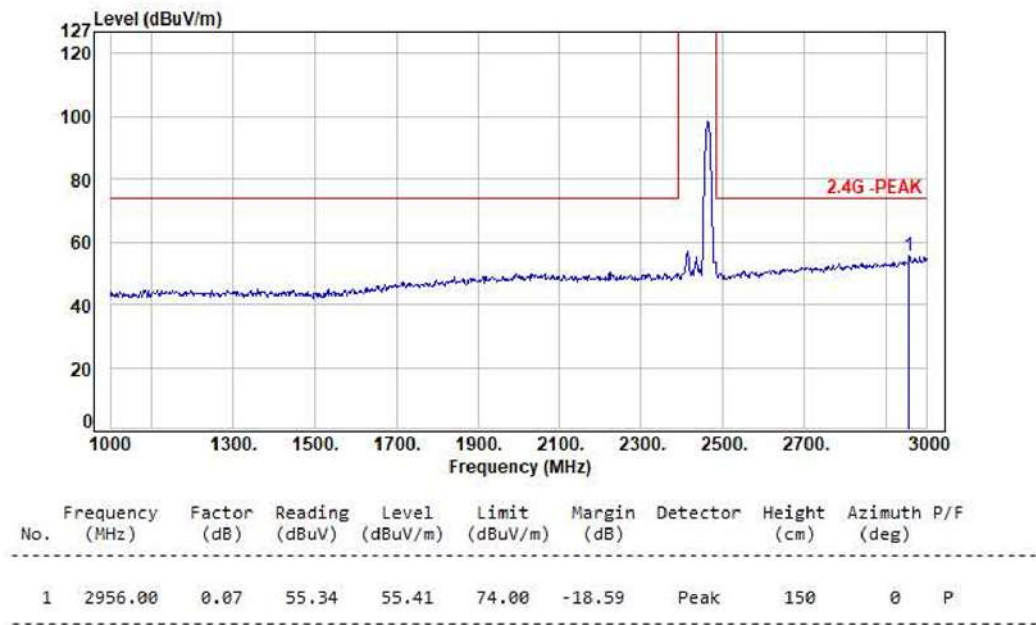


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

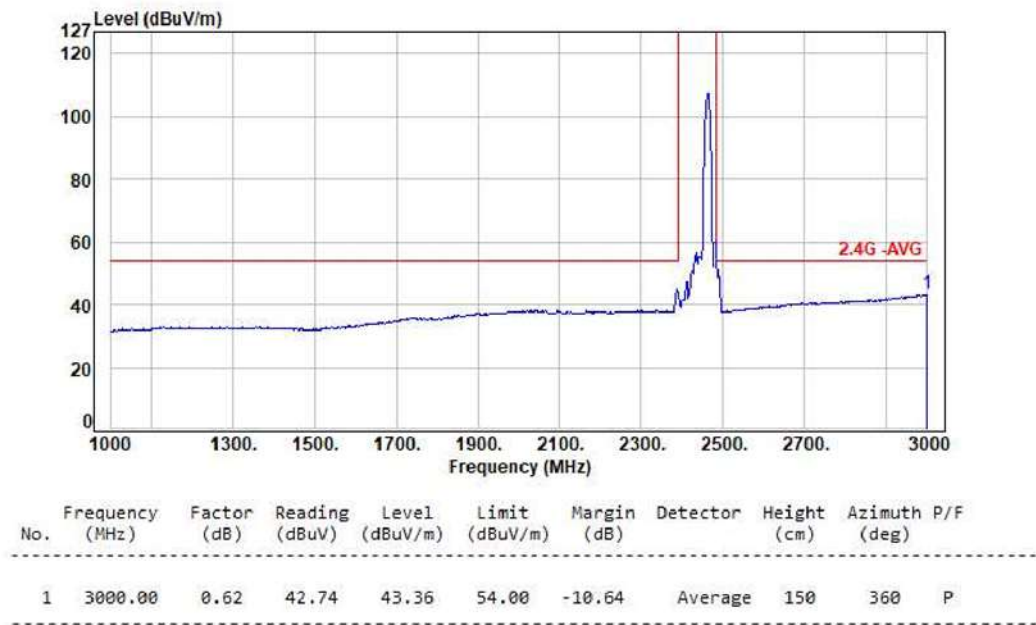


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

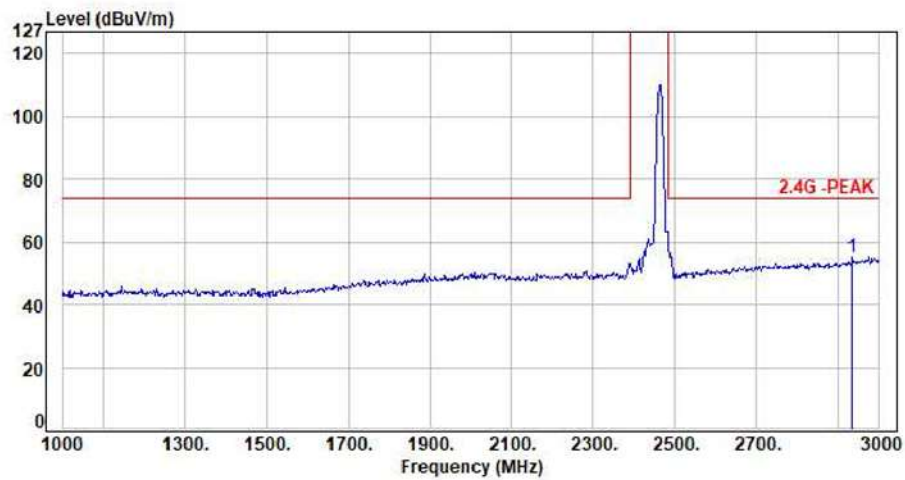


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	2934.00	-0.32	55.51	55.19	74.00	-18.81	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

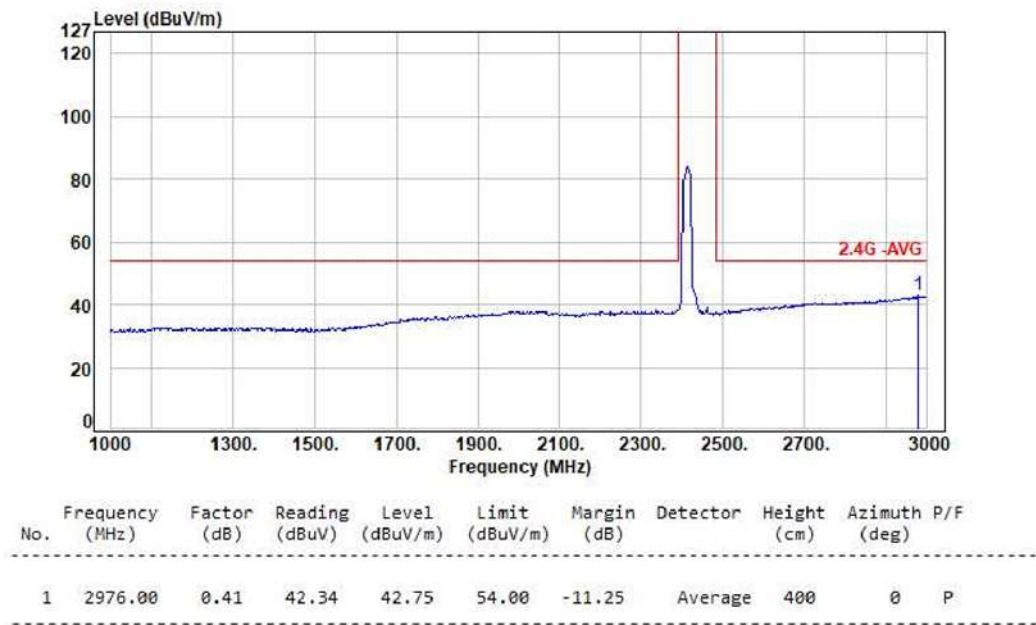


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

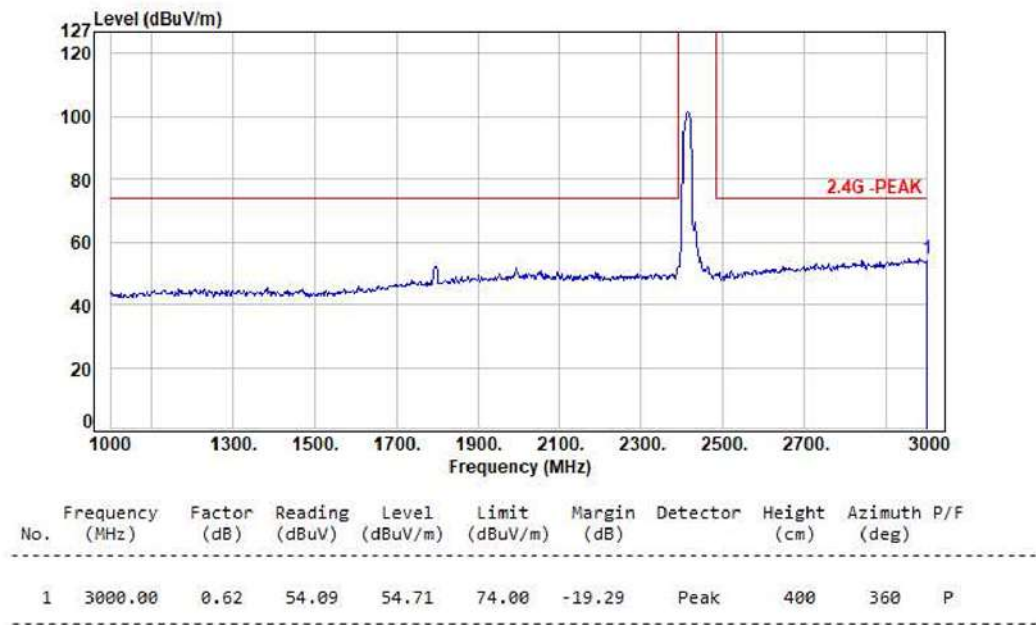


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

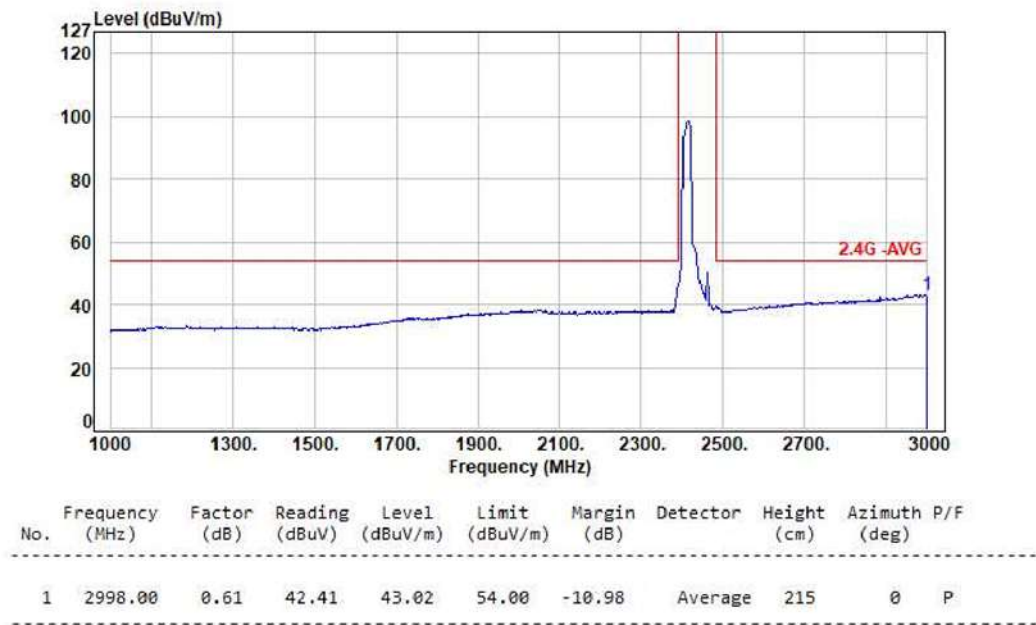


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

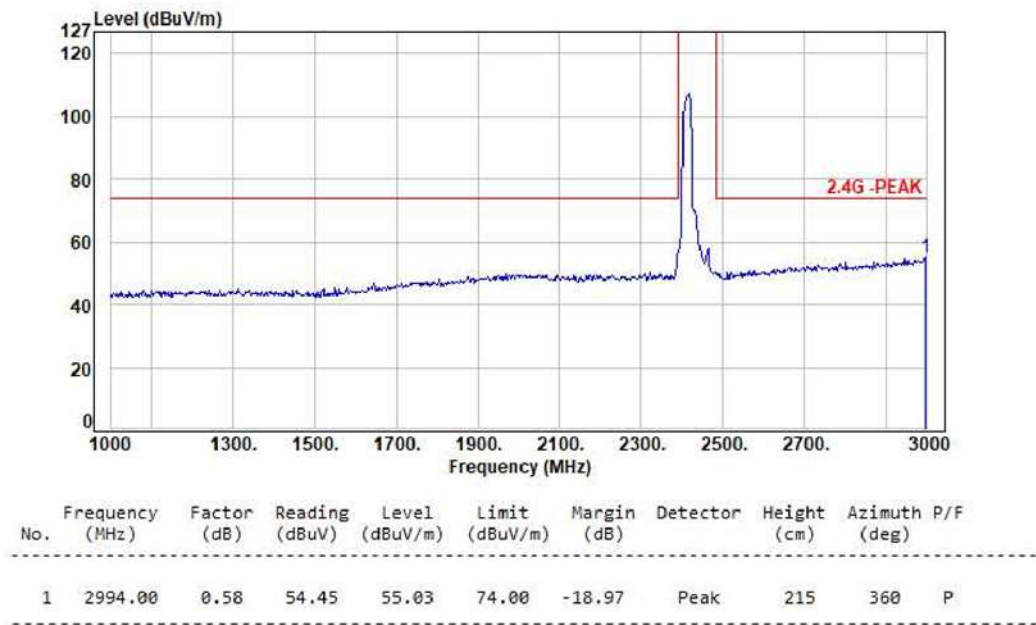


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH11 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

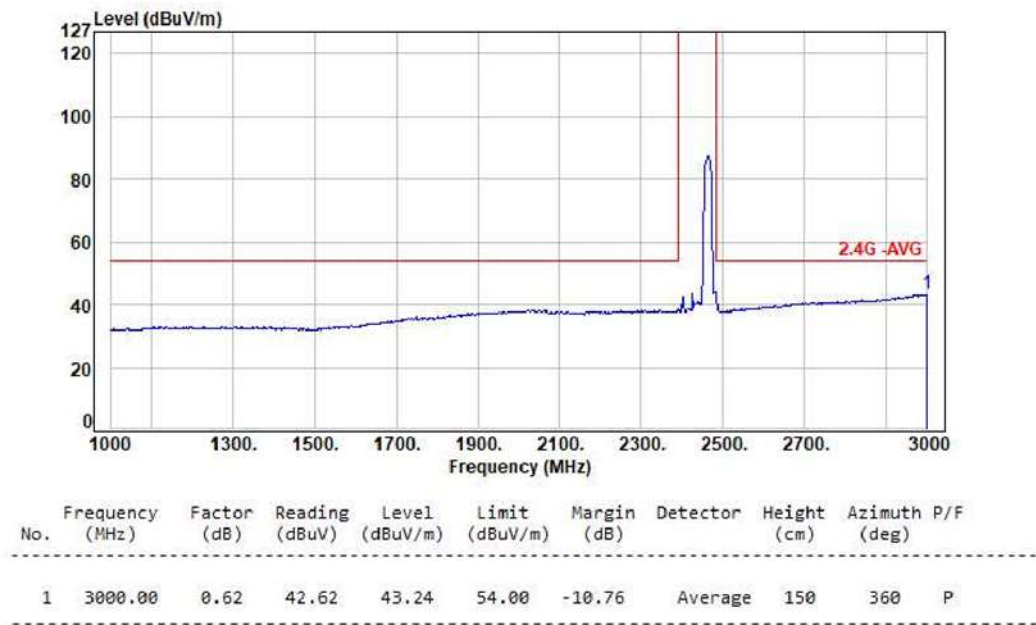


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH11 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

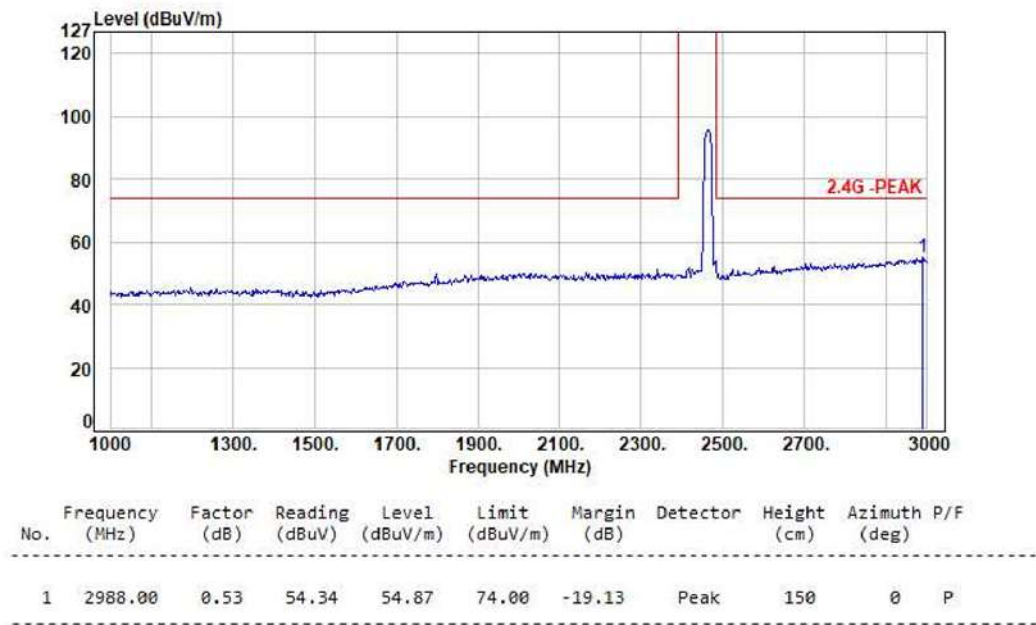


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

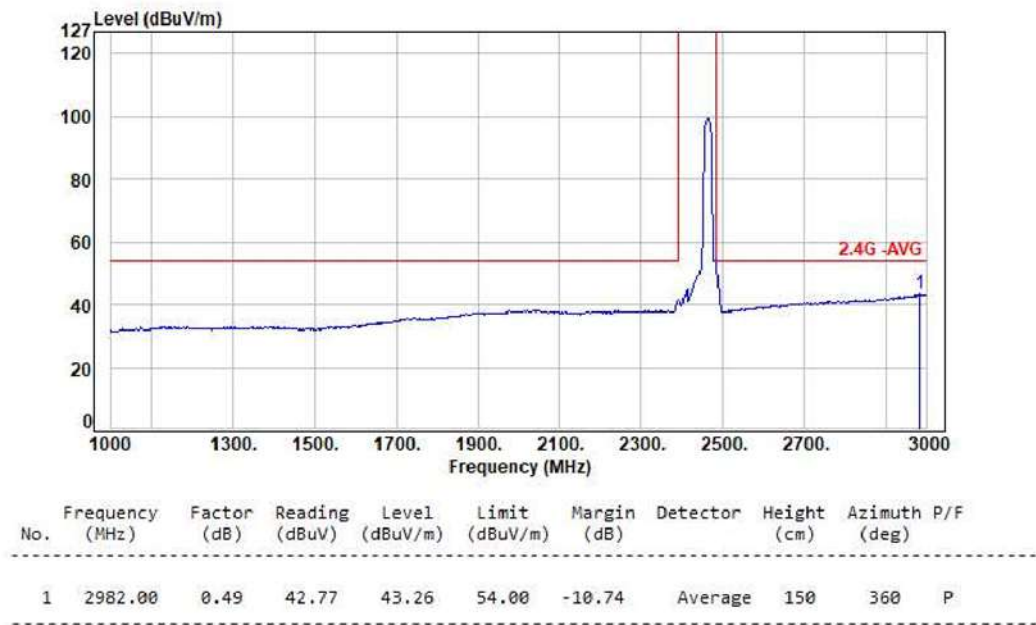


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

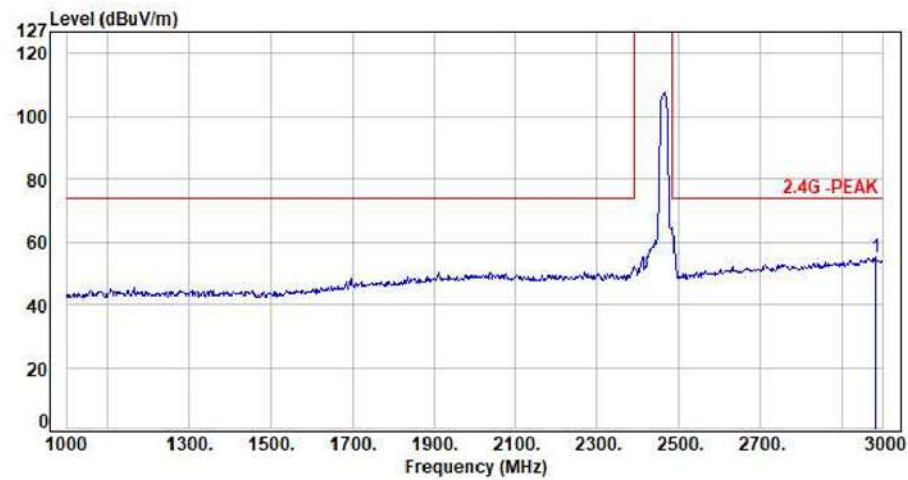

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	2480.00	0.48	54.66	55.14	74.00	-18.86	Peak	150	0	P


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



6.8 Test Result and Data (3GHz ~ 18GHz)

MIMO

Test Mode : 2TX 11ax20 CH01 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

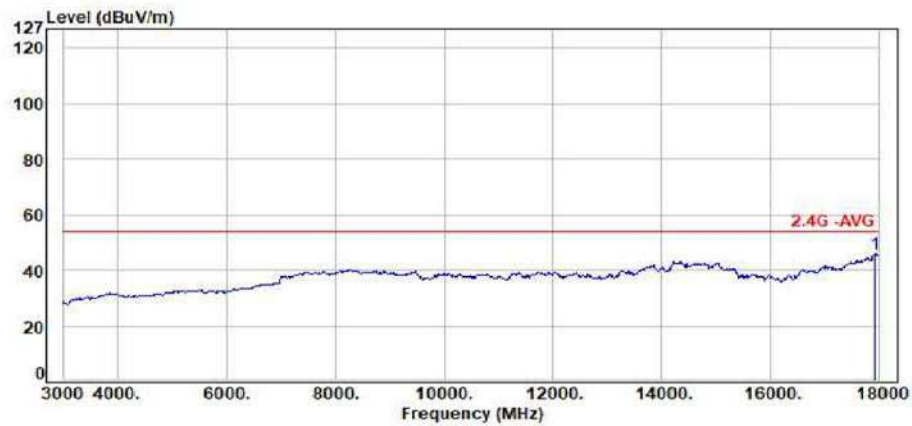

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	17910.00	13.51	32.50	46.01	54.00	-7.99	Average	150	0	P

Note: Level=Reading+Factor


Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax20 CH01 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

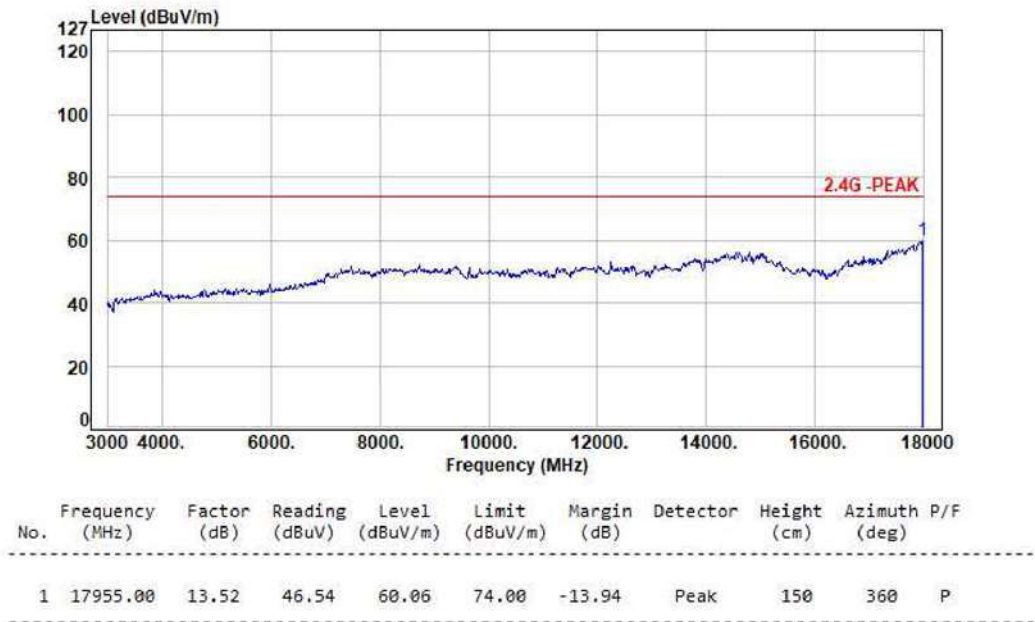

Note: Level=Reading+Factor


Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax20 CH01 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

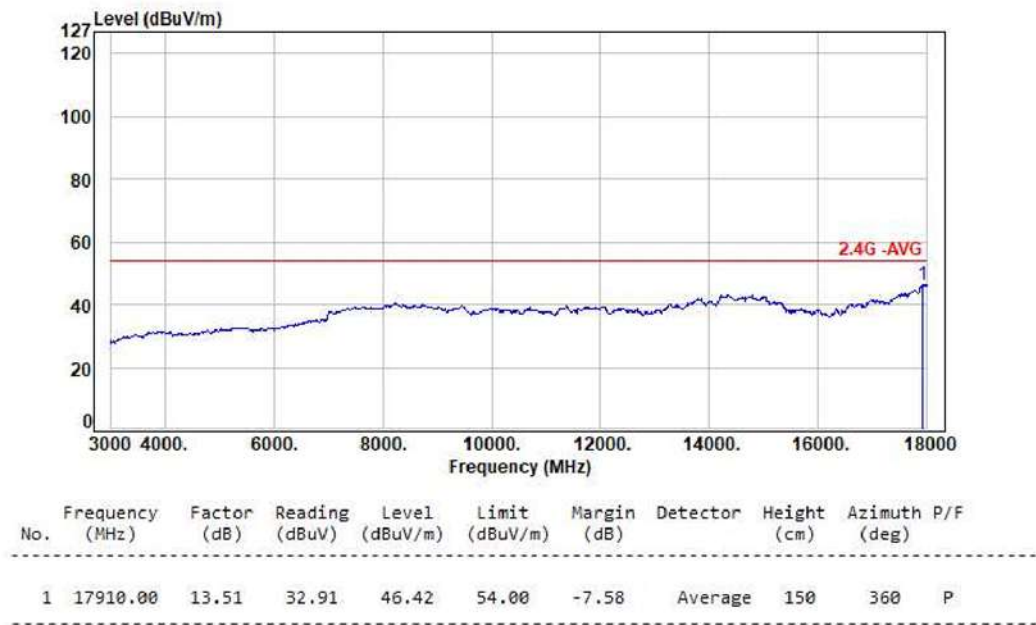


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11x20 CH01 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

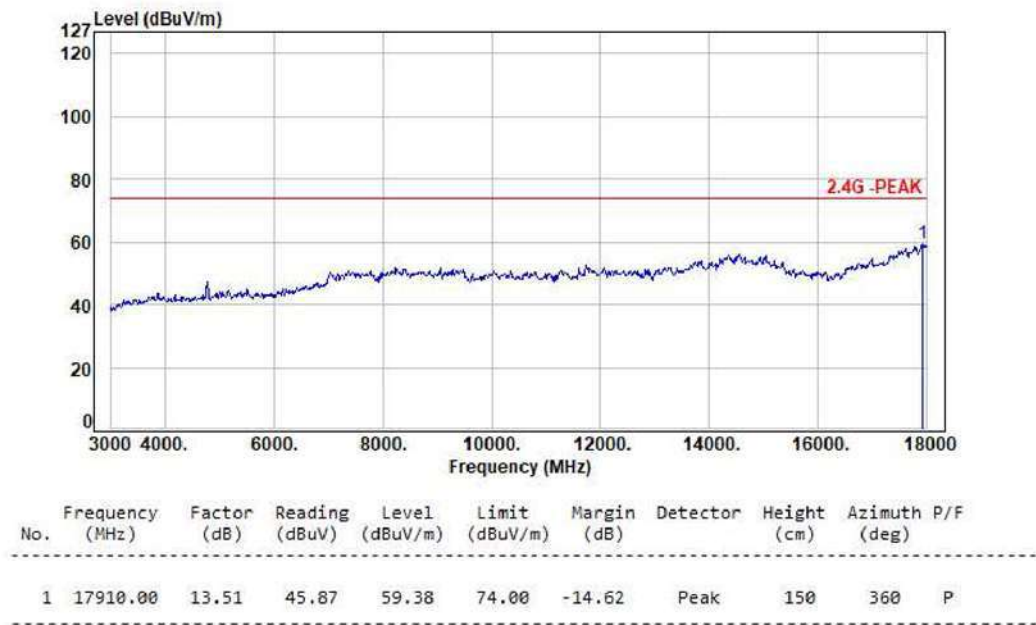


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax20 CH11 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

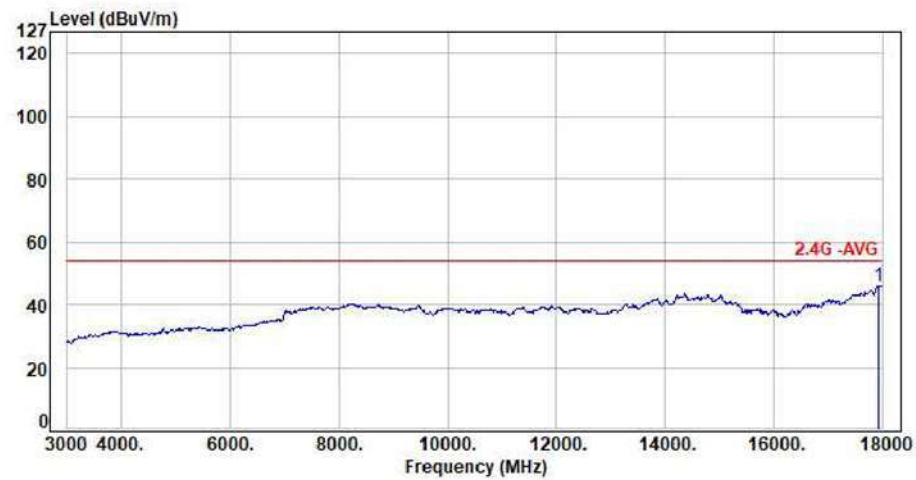


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	17910.00	13.51	32.39	45.90	54.00	-8.10	Average	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11x20 CH11 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

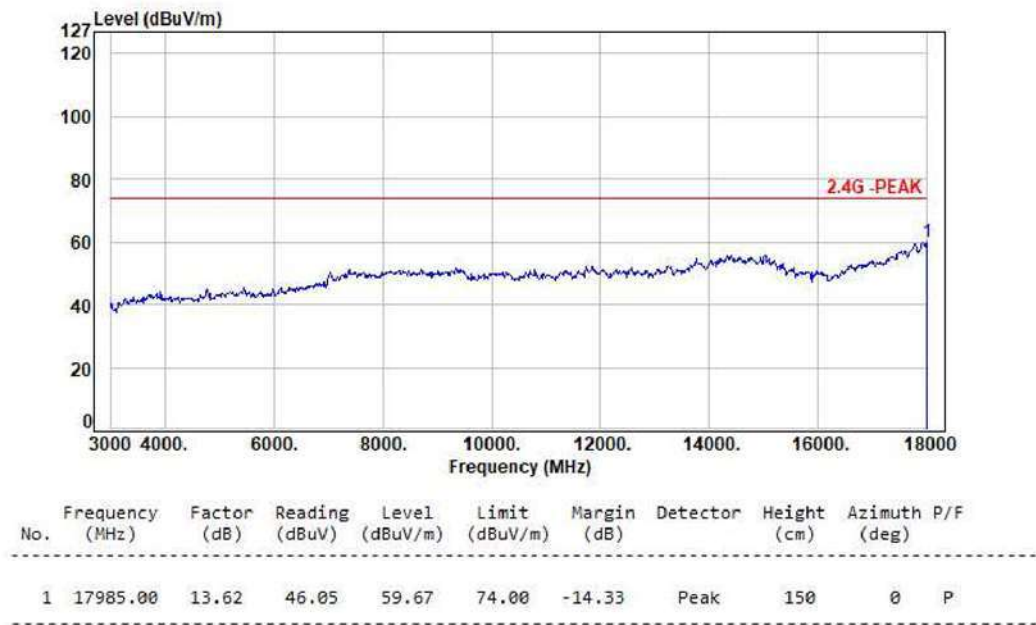


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax20 CH11 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

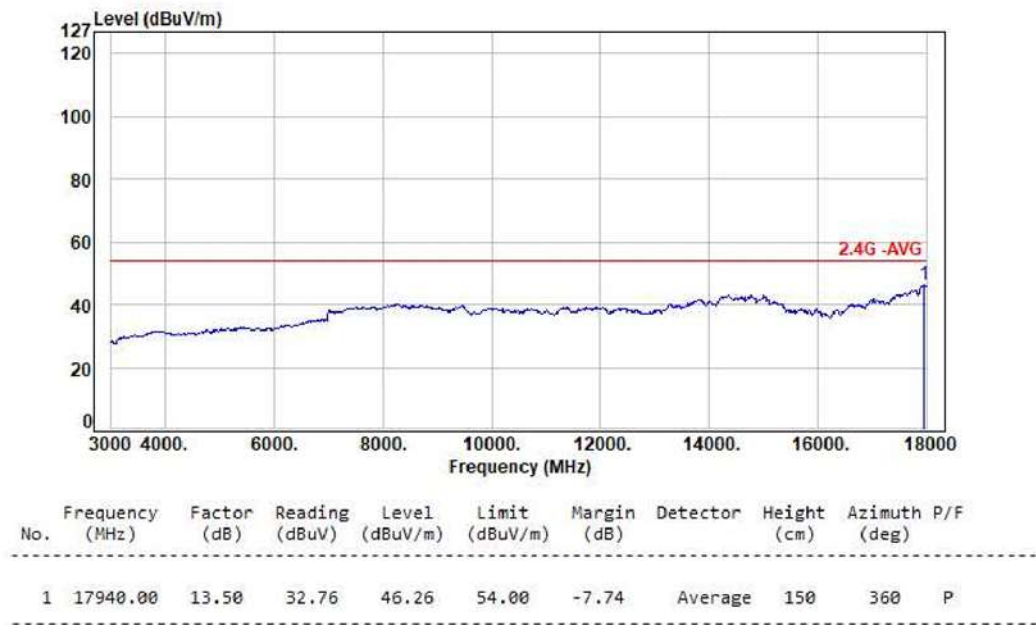


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO


Test Mode : 2TX 11ax20 CH11 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

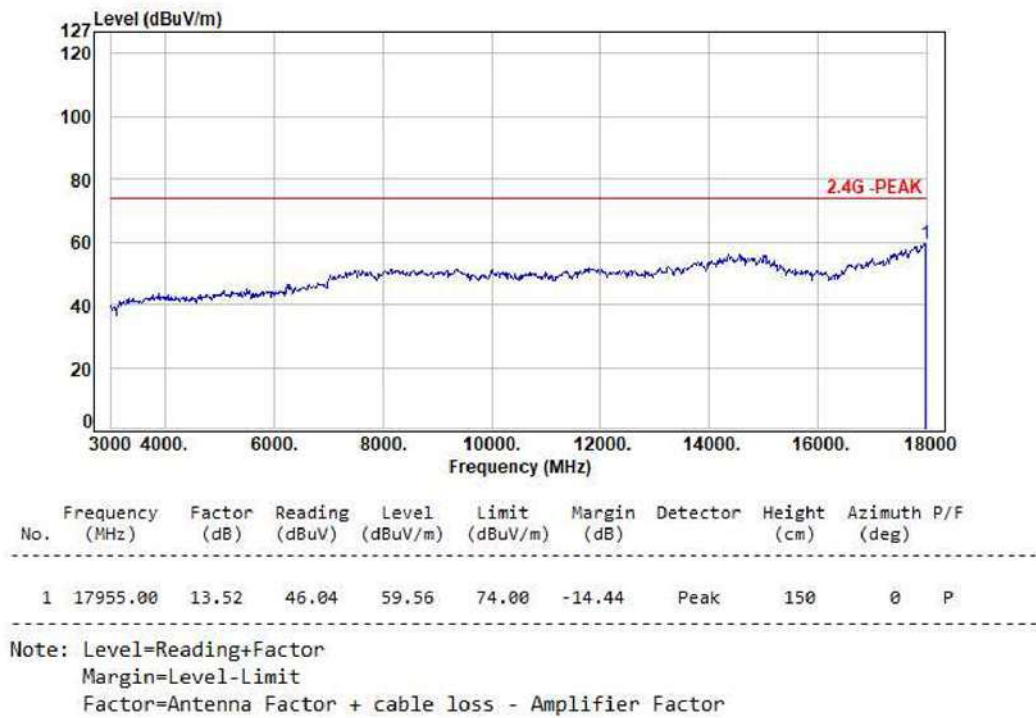



MIMO

Test Mode : 2TX 11ax40 CH03 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

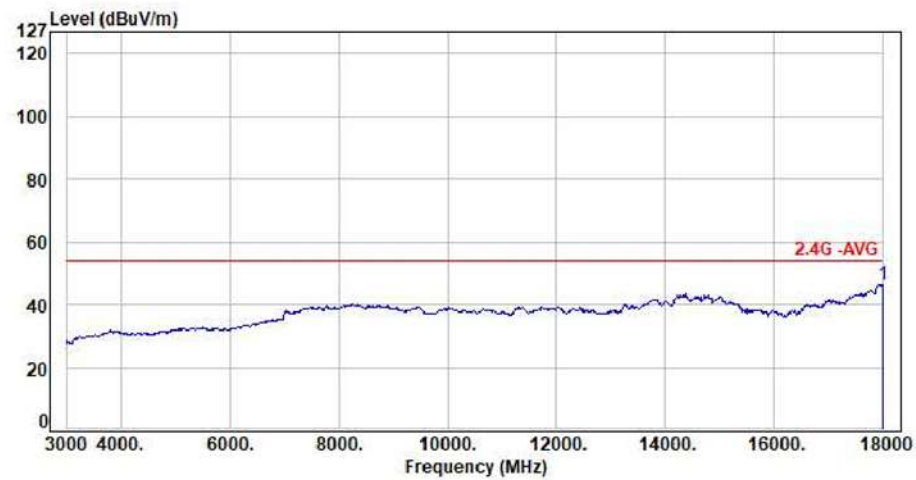


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	17985.00	13.62	32.71	46.33	54.00	-7.67	Average	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax40 CH03 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

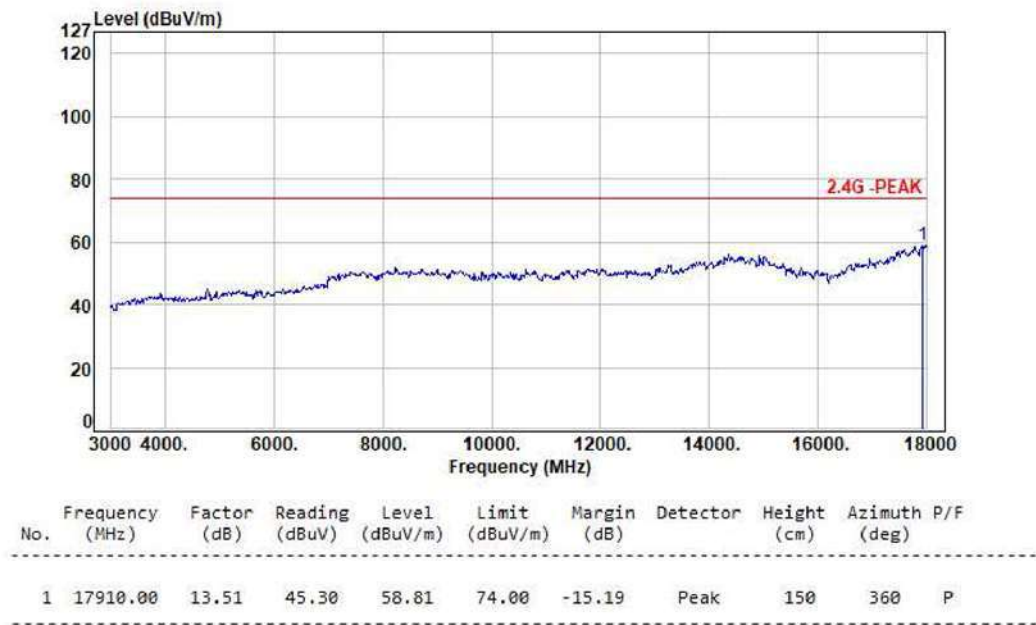


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax40 CH03 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

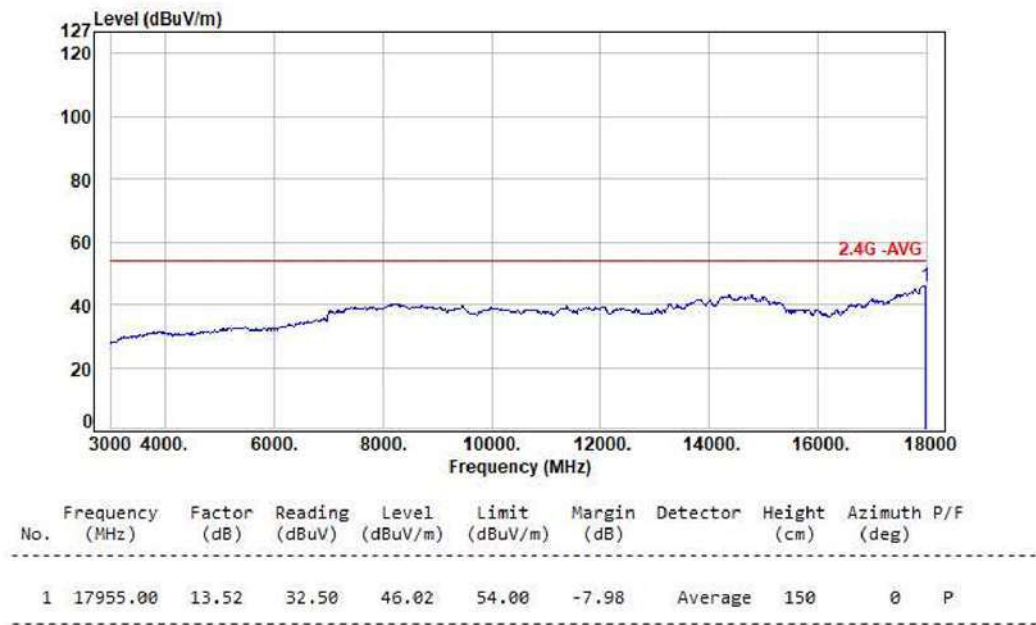


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11x40 CH03 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

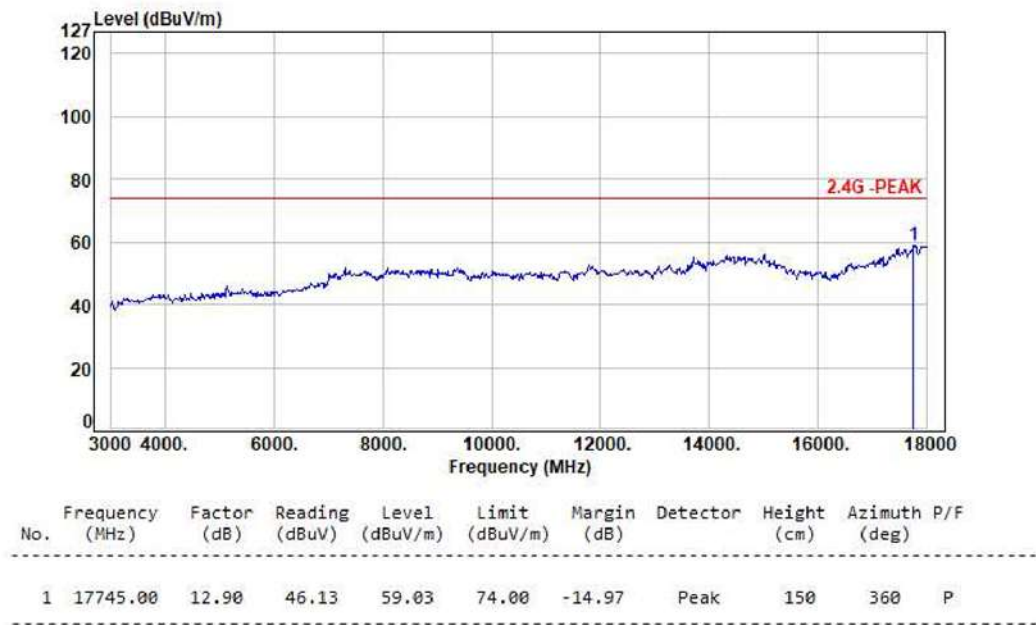


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax40 CH09 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

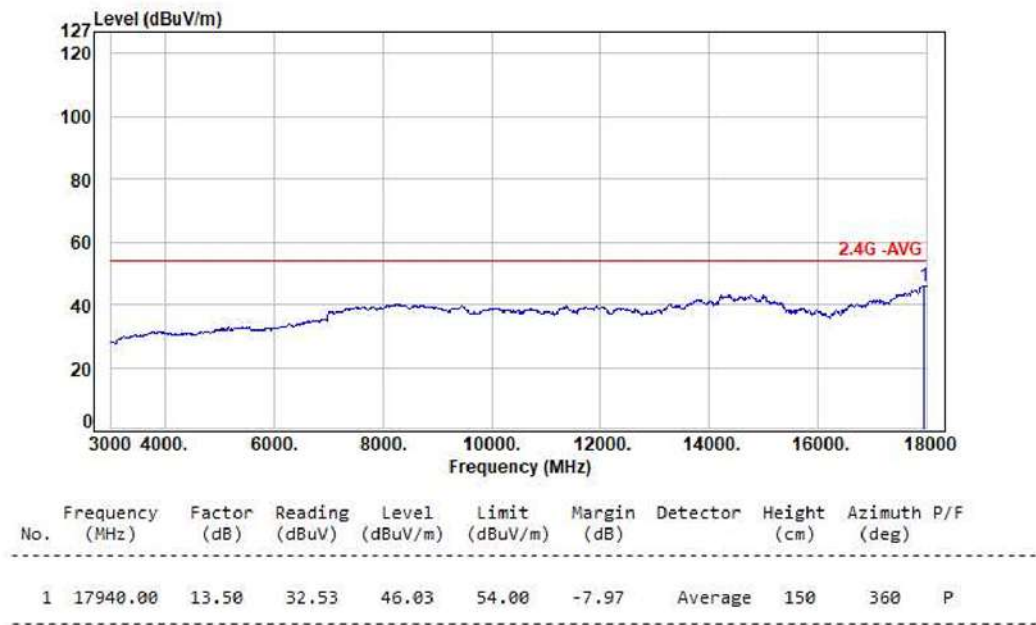


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax40 CH09 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

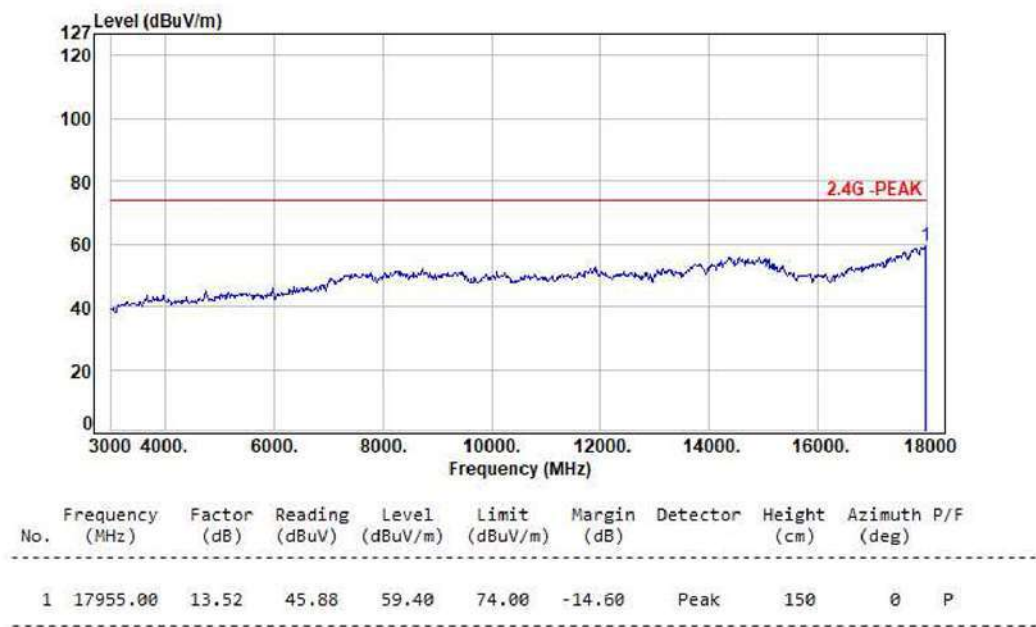

Note: Level=Reading+Factor


Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax40 CH09 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

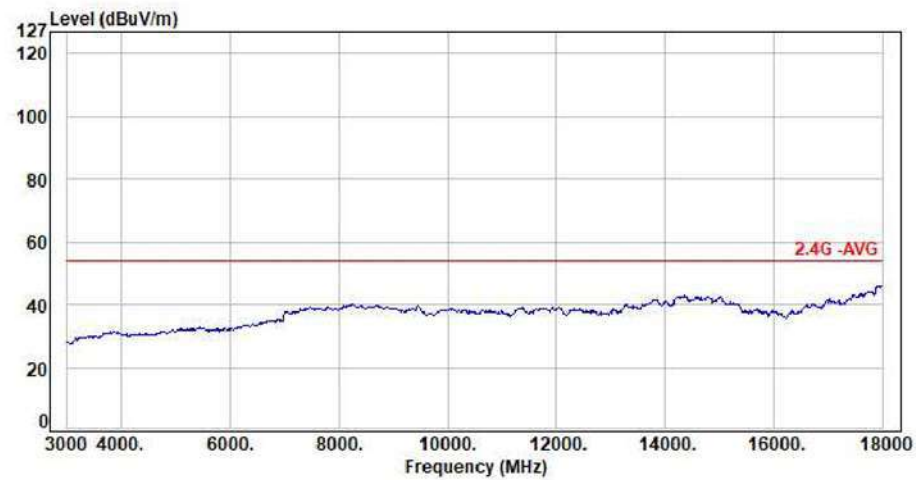


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	18000.00	13.68	32.36	46.04	54.00	-7.96	Average	150	360	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



MIMO

Test Mode : 2TX 11ax40 CH09 NSS1 MCS0
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

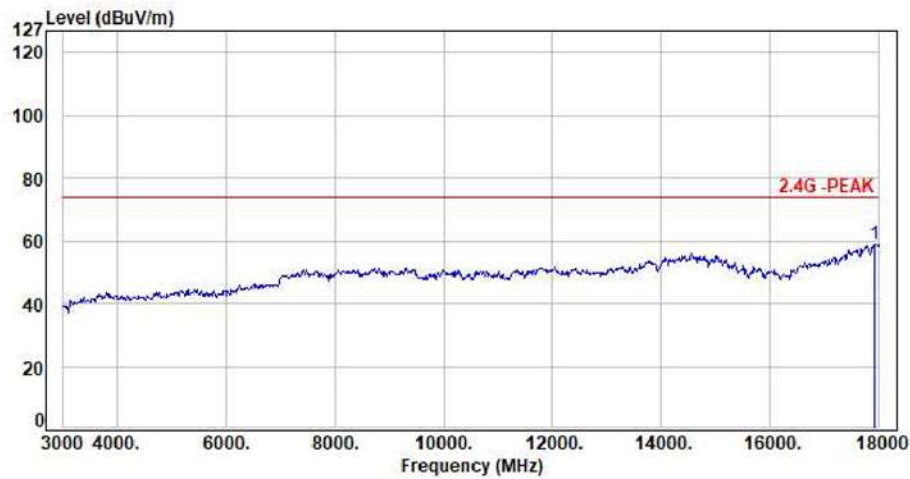


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	17910.00	13.51	45.58	59.09	74.00	-14.91	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



For Validated data-SISO ANT A

Test Mode : 1TX 11b CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

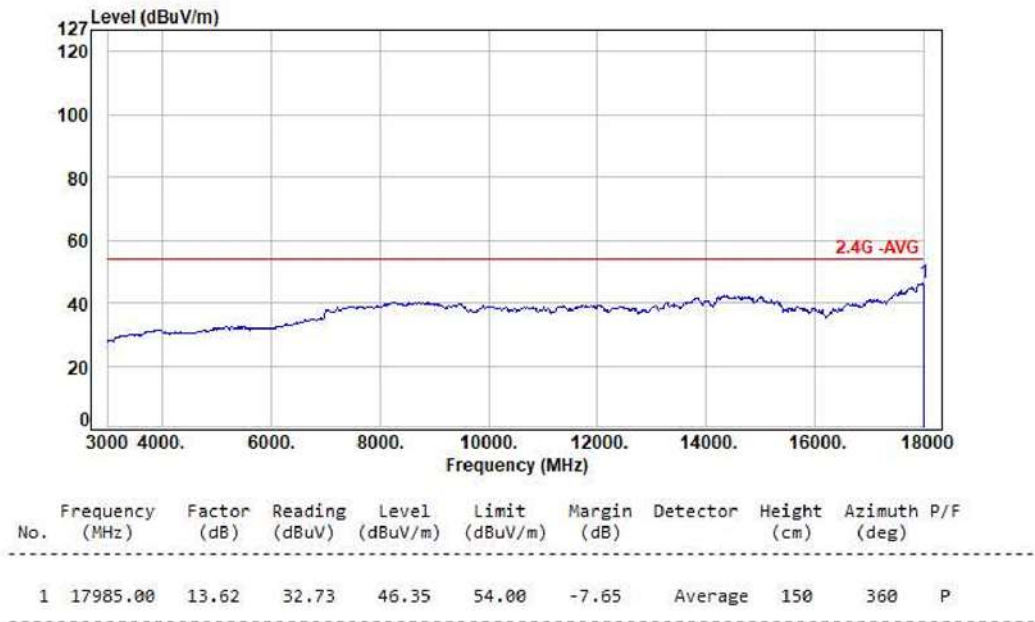


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

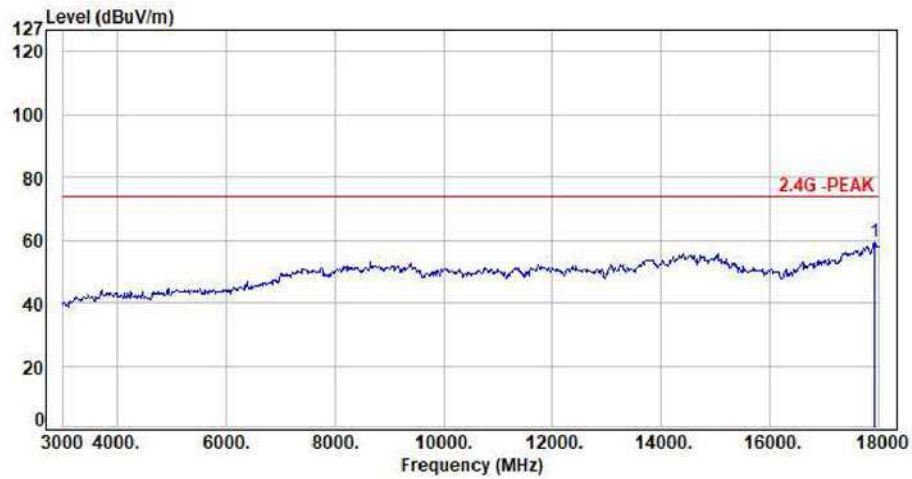


No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	17910.00	13.51	45.80	59.31	74.00	-14.69	Peak	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

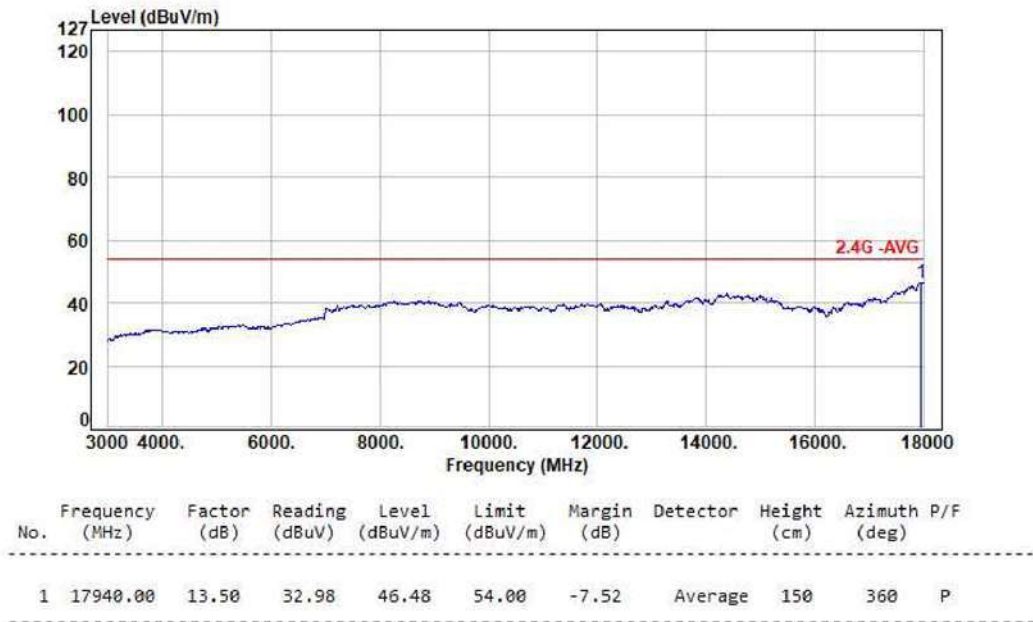


Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH01 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

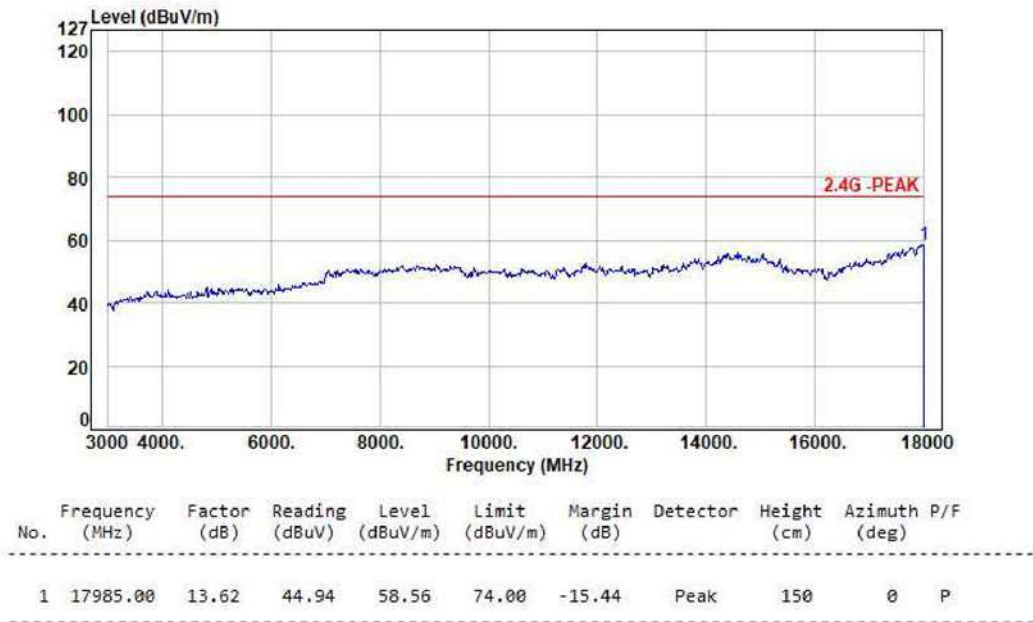

Note: Level=Reading+Factor


Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

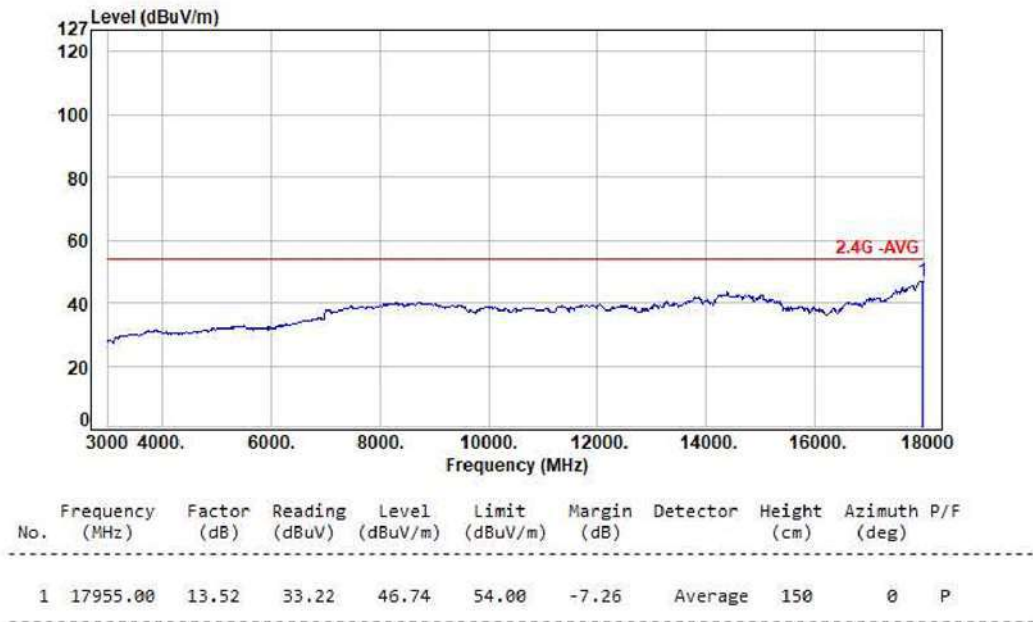

Note: Level=Reading+Factor


Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

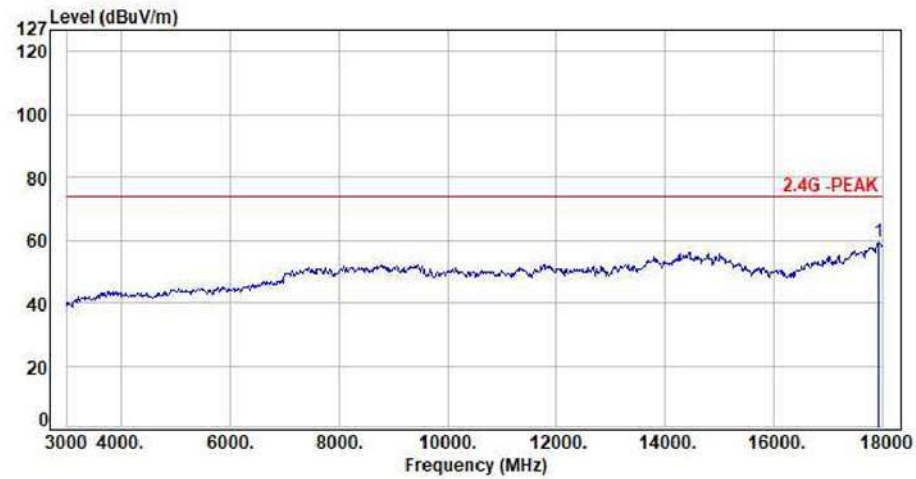

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	17910.00	13.51	45.68	59.19	74.00	-14.81	Peak	150	360	P

Note: Level=Reading+Factor


Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

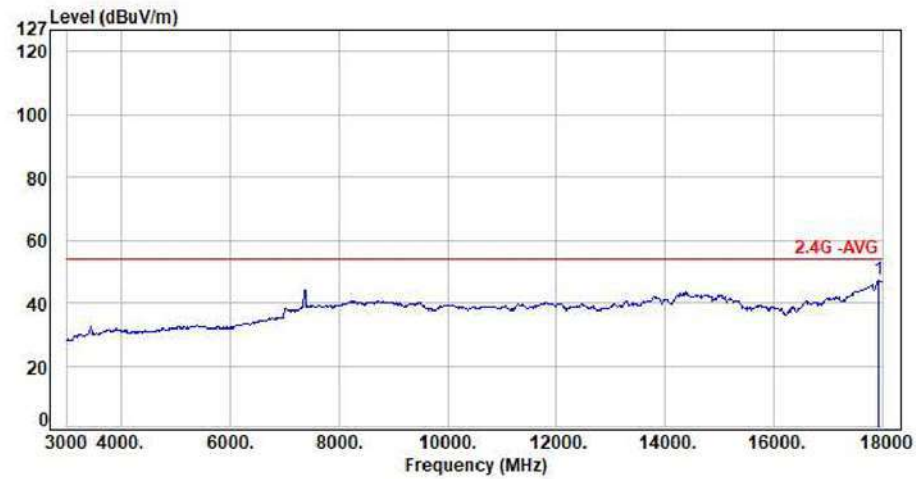

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	17910.00	13.51	33.64	47.15	54.00	-6.85	Average	150	360	P

Note: Level=Reading+Factor


Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11b CH11 1Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Horizontal

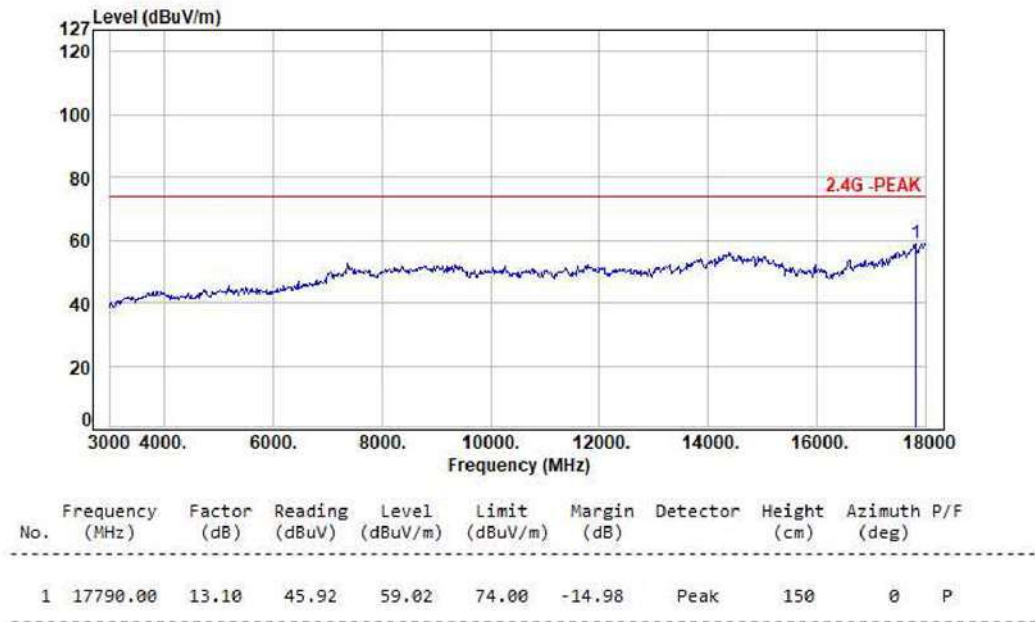

Note: Level=Reading+Factor


Margin=Level-Limit

Factor=Antenna Factor + cable loss - Amplifier Factor



SISO ANT A

Test Mode : 1TX 11g CH01 6Mbps
Voltage : From Adapter(AC120V/60Hz)
Pol : Vertical

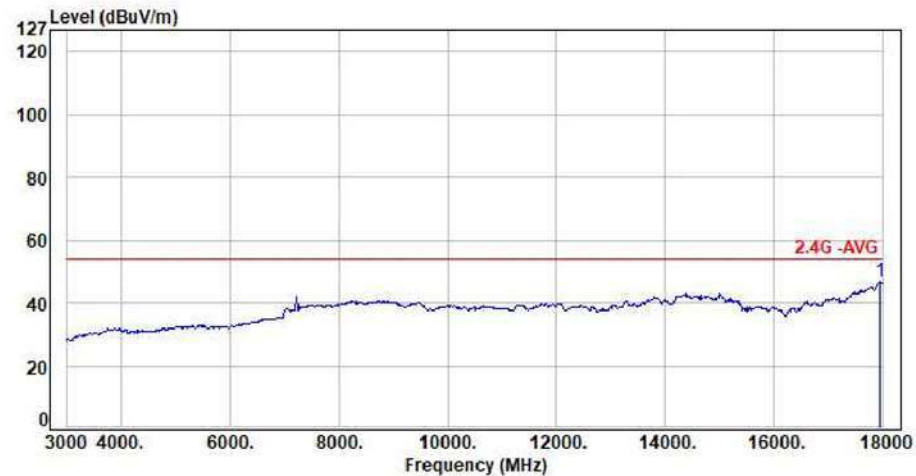

No.	Frequency (MHz)	Factor (dB)	Reading (dBuV)	Level (dBuV/m)	Limit (dBuV/m)	Margin (dB)	Detector	Height (cm)	Azimuth (deg)	P/F
1	17940.00	13.50	33.10	46.60	54.00	-7.40	Average	150	0	P

Note: Level=Reading+Factor
Margin=Level-Limit
Factor=Antenna Factor + cable loss - Amplifier Factor