



wireless accessory for
mimio

Setup Guide

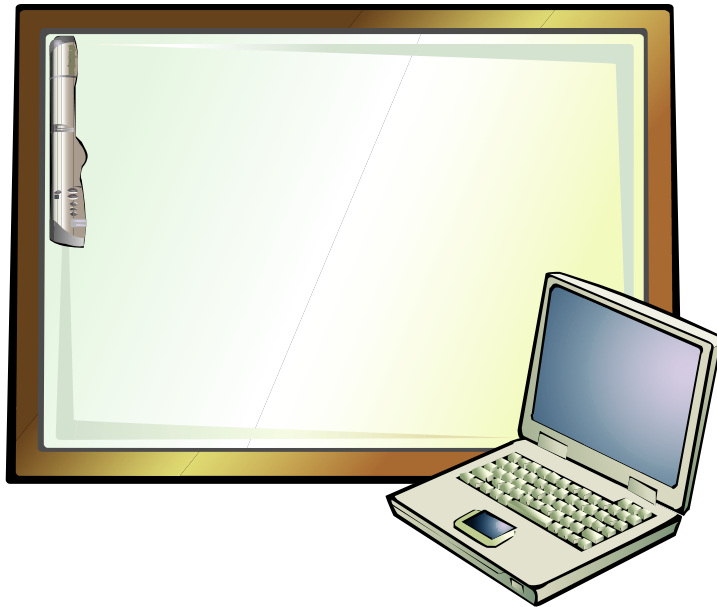

wireless module

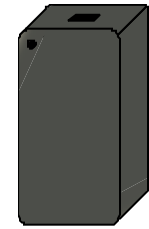


wireless receiver



mimio software CD



power supply (US ONLY)

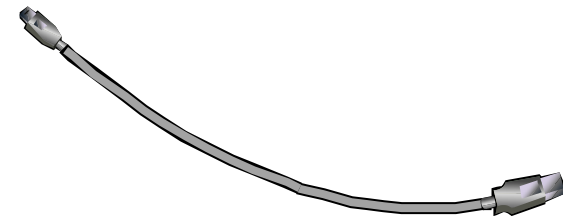


12" receiver USB cable


System Requirements

- Windows® Compatible PC with a Pentium II, 400 MHz processor minimum.
- Microsoft® Windows 98SE, Me, 2000 or XP operating system.
- 64 MB RAM minimum (128 MB RAM recommended).
- Available USB port.

Setup Process


- 1 Depress the release button to remove the linkUSB module from the mimio Xi capture bar.

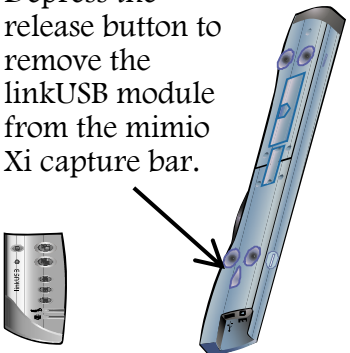
- 2 Insert/slide the wireless module into mimio Xi capture bar.



- 3 Install the mimio software if not already installed (requires v2.74 or higher).


- 4 Plug the wireless receiver into an available USB port.



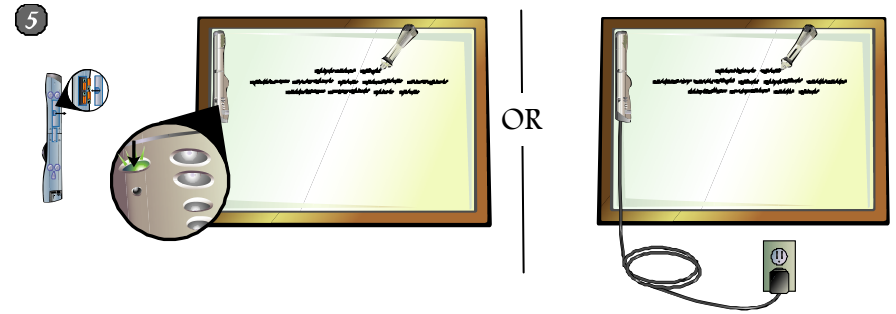

Power on the device. mimio Xi can be powered by 4AA batteries or by the included AC power supply (US ONLY).

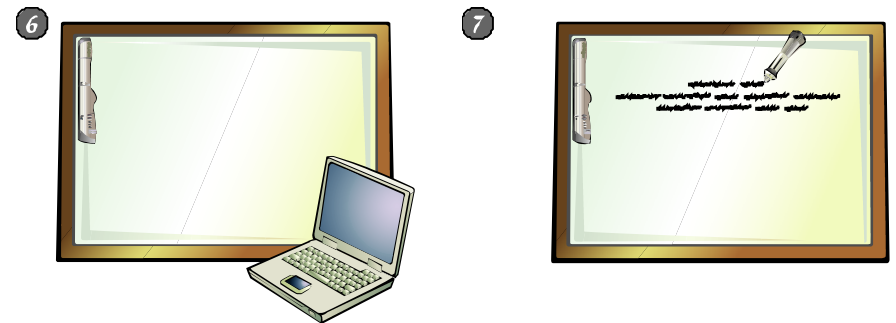


Open the mimio software (v2.74 or higher).

Begin writing with a mimio stylus pen to use your wireless mimio Xi.

Maximum wireless range is 30 feet in an open air environment.

User Interface

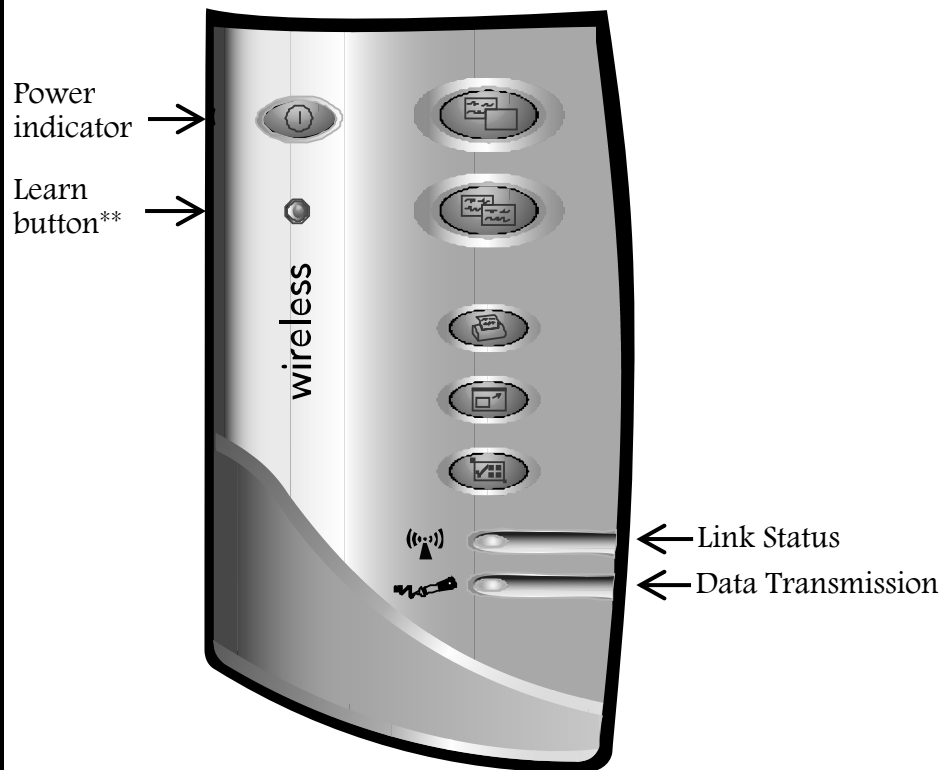

Link Status Indicator

Green: A wireless link is established between the unit and the PC.

Amber: There is no wireless link between the unit and the PC.

Flashing amber and green: Unit is in a learning process.

Data Transmission Indicator

Slow flashing green: System is idle.

Fast flashing green: Pen data is being communicated to the PC.


Off: No data is being communicated between the unit and the PC.

** Refer to the Troubleshooting section for more info on the Learn button.

Troubleshooting

The wireless mimio module and receiver are programmed at the factory and are packaged as a mated pair to work “out of the box” without any user intervention. They are an exclusive pair of components that will only communicate to one another. This allows for more than one wireless mimio system to co-exist in the same environment without causing confusion over which wireless module communicates to which wireless receiver.

Since the wireless module and wireless receiver are designed to work exclusively as a pair, you cannot casually interchange a wireless module from one wireless system with a wireless receiver from another wireless system and expect it to work; mixed components will not be able to communicate unless they have been programmed as a pair. A wireless module can *only* be paired with one wireless receiver at any given point in time; you *cannot* program one wireless module to work with multiple wireless receivers and vice versa. If you own multiple wireless mimio systems and mistakenly get the wireless module and receiver components mixed together, you can manually re-program any pair of wireless module and receiver components to work exclusively together through a learning process. The learning process is described in the steps listed below.

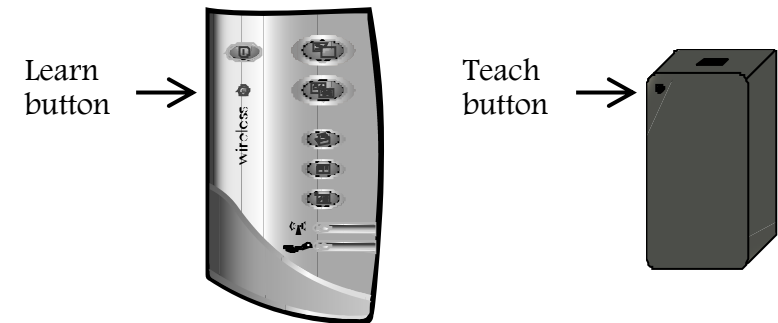

1. Power on the mimio Xi capture bar (with wireless module).
2. Plug the wireless receiver into an available USB port on your PC.
3. Using a paper clip, press the teach button on the wireless *receiver* to initiate the learning process.
4. Press the recessed learn button on the wireless *module* with the tip of a pen or the end of a paper clip to complete the learning process.
5. The Link Status LED  will start flashing amber and green while the learning process is underway. Once the wireless module and receiver are mated, the Link Status LED will turn to a solid green color to identify the 2 components have been paired and that a wireless connection is established.

Technical Support

All mimio products include free phone and e-mail support.

Email: techsupport@virtual-ink.com (United States and Canada) or techsupport.europe@virtual-ink.com (Europe)

Telephone: 1-877-846-3721 (United States and Canada) or +44 870 458 3366 (Europe)

Web Site: <http://www.mimio.com/support>

With all support inquiries, please provide us with the following information:

- mimio model number (located on the mimio serial number label)
- mimio software version number
- Operating system on computer
- Make and model of computer
- Description of problem

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference.
- (2) this device must accept any interference received, including interference that may cause undesired operation.

Caution: Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. Contact Virtual Ink Corporation, Brighton Landing East, 20 Guest Street – Suite 520, Boston, MA 02135. Technical Support: 877-846-3721.

© 1999-2004 Virtual Ink Corporation. All rights reserved. Virtual Ink and mimio are registered trademarks of Virtual Ink Corporation. mimio Xi and linkUSB are trademarks of Virtual Ink Corporation. Windows and Microsoft are registered trademarks of Microsoft Corporation.