



Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5240MHz
Test BY :Bob

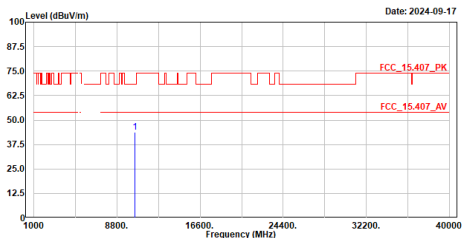

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	10488.000	43.85	68.22	-24.37	48.05	-4.20	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5240MHz
Test BY :Bob

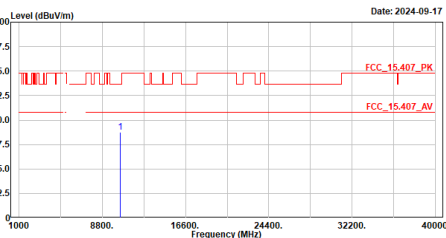

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	10488.000	43.71	68.22	-24.51	47.91	-4.20	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5260MHz
Test BY :Bob

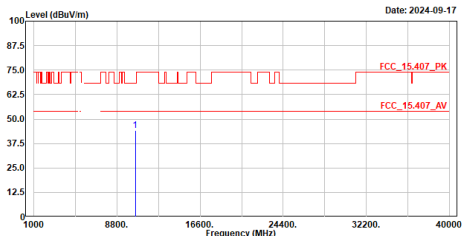

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	10520.000	44.02	68.22	-24.20	48.17	-4.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5260MHz
Test BY :Bob

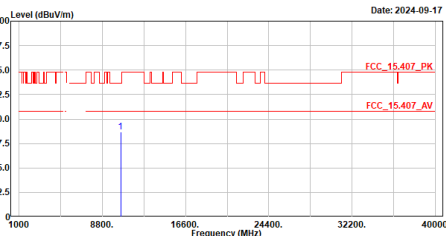

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	10520.000	43.21	68.22	-25.01	47.36	-4.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5300MHz
Test BY :Bob

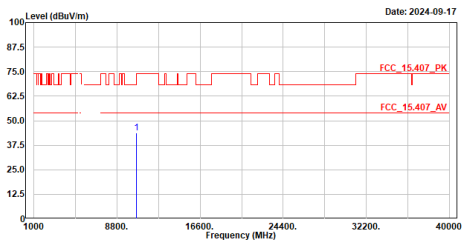

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10600.000	43.93	74.00	-30.07	47.59	-3.66	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5300MHz
Test BY :Bob

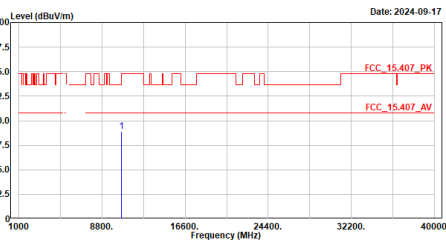

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10600.000	44.55	74.00	-29.45	48.21	-3.66	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5320MHz
Test BY :Bob

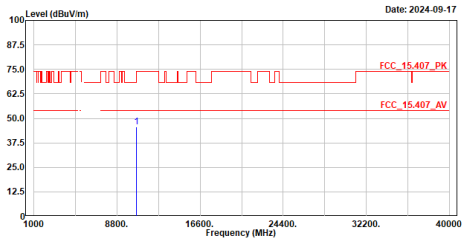

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10640.000	45.60	74.00	-28.40	49.14	-3.54	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5320MHz
Test BY :Bob

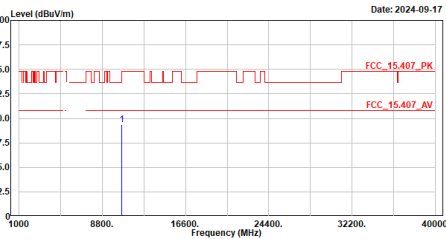

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10640.000	46.69	74.00	-27.31	50.23	-3.54	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5500MHz
Test BY :Bob

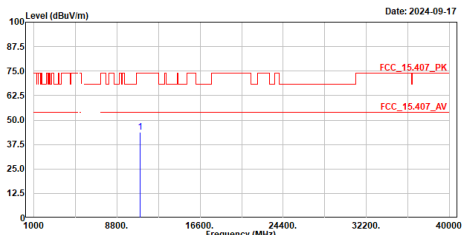

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	43.74	74.00	-30.26	46.73	-2.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5500MHz
Test BY :Bob

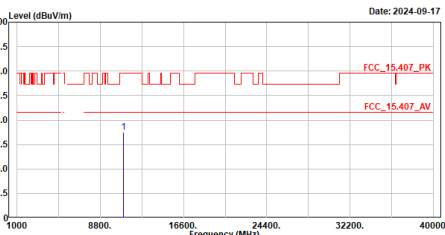

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	43.80	74.00	-30.20	46.79	-2.99	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5580MHz
Test BY :Bob

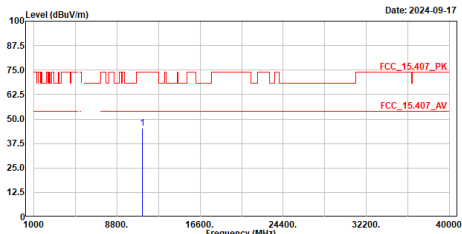

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	45.25	74.00	-28.75	47.46	-2.21	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5580MHz
Test BY :Bob

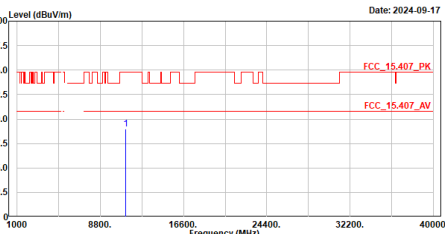

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	44.81	74.00	-29.19	47.02	-2.21	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Horizontal
Mode :TX_ac20_5700MHz
Test BY :Bob

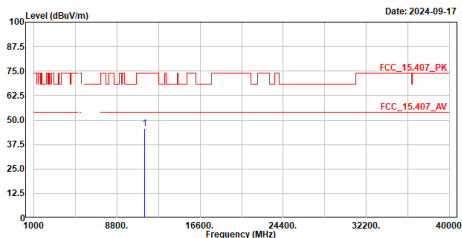

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	45.59	74.00	-28.41	47.16	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Vertical
Mode :TX_ac20_5700MHz
Test BY :Bob

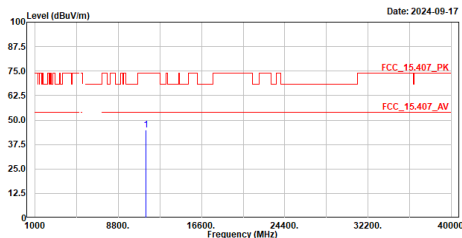

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	44.96	74.00	-29.04	46.53	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Horizontal
Mode :TX_ac20_5745MHz
Test BY :Bob

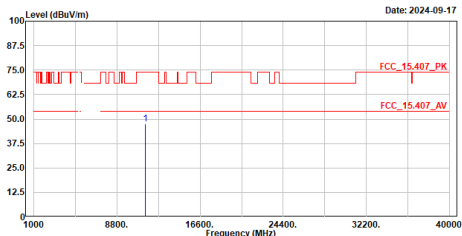

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	47.60	74.00	-26.40	48.86	-1.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Vertical
Mode :TX_ac20_5745MHz
Test BY :Bob

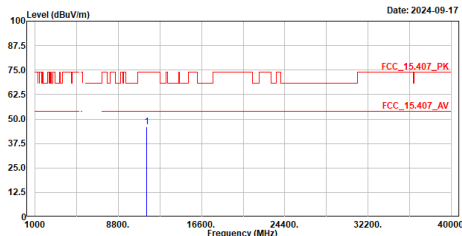

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	46.05	74.00	-27.95	47.31	-1.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Horizontal
Mode :TX_ac20_5785MHz
Test BY :Bob

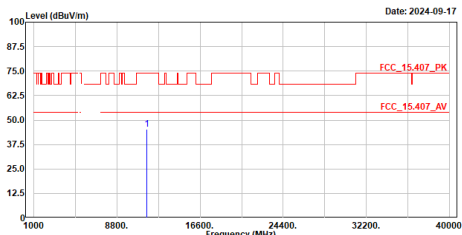

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	45.43	74.00	-28.57	46.57	-1.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Vertical
Mode :TX_ac20_5785MHz
Test BY :Bob

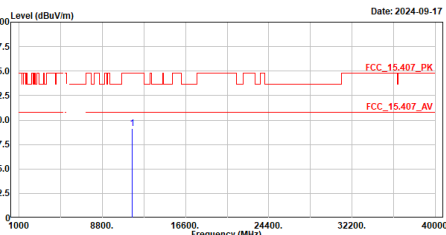

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	45.71	74.00	-28.29	46.85	-1.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Horizontal
Mode :TX_ac20_5825MHz
Test BY :Bob

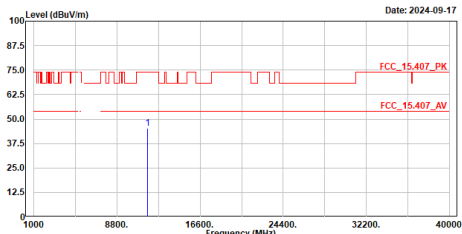

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	45.34	74.00	-28.66	46.50	-1.16	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Vertical
Mode :TX_ac20_5825MHz
Test BY :Bob

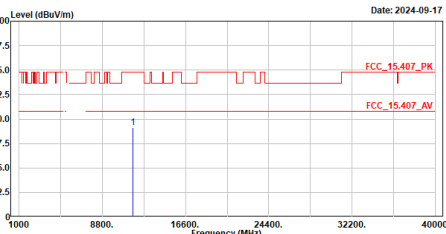

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	45.67	74.00	-28.33	46.83	-1.16	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-C803
Condition :3m Horizontal
Mode :TX_ac40_5190MHz
Test BY :Bob

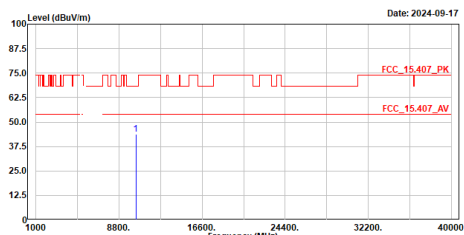


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	43.63	68.22	-24.59	47.91	-4.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-C803
Condition :3m Vertical
Mode :TX_ac40_5190MHz
Test BY :Bob

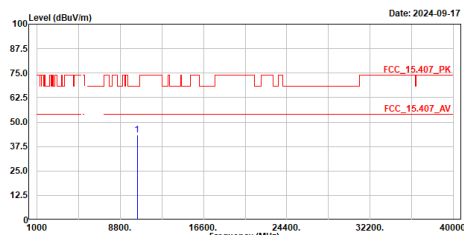


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	43.49	68.22	-24.73	47.77	-4.28	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-C803
Condition :3m Horizontal
Mode :TX_ac40_5230MHz
Test BY :Bob

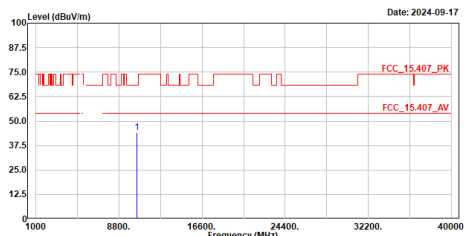


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	44.19	68.22	-24.03	48.43	-4.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-C803
Condition :3m Vertical
Mode :TX_ac40_5230MHz
Test BY :Bob

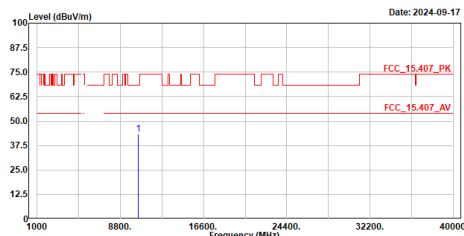


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	43.40	68.22	-24.82	47.64	-4.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5270MHz
Test BY :Bob

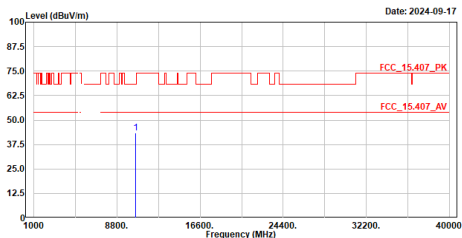

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	43.28	68.22	-24.94	47.30	-4.02	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5270MHz
Test BY :Bob

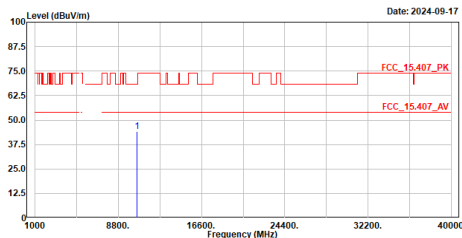

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	44.06	68.22	-24.16	48.08	-4.02	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5310MHz
Test BY :Bob

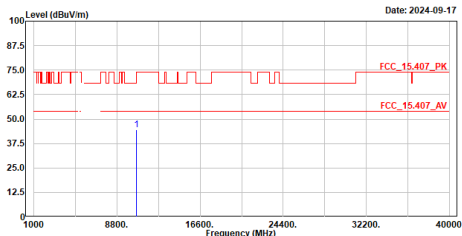

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10620.000	44.36	74.00	-29.64	47.96	-3.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5310MHz
Test BY :Bob

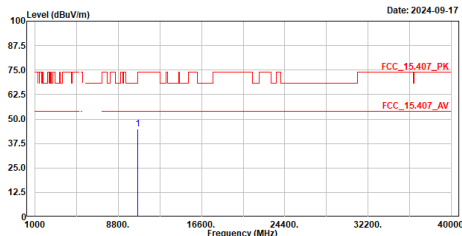

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10620.000	44.97	74.00	-29.03	48.57	-3.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5510MHz
Test BY :Bob

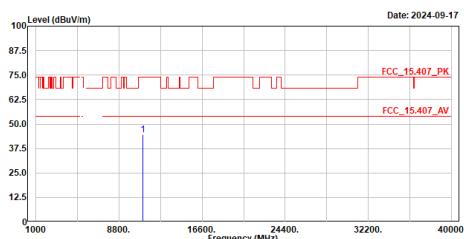


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11028.000	44.40	74.00	-29.60	47.24	-2.84	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5510MHz
Test BY :Bob

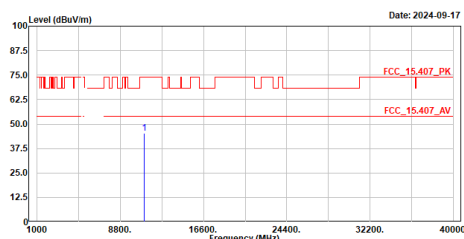


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11028.000	45.27	74.00	-28.73	48.11	-2.84	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5550MHz
Test BY :Bob

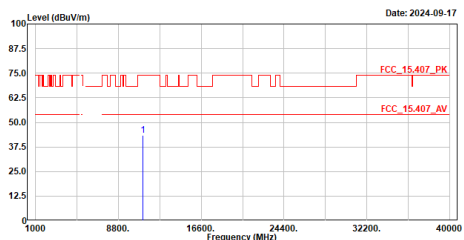


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	43.39	74.00	-30.61	45.84	-2.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5550MHz
Test BY :Bob

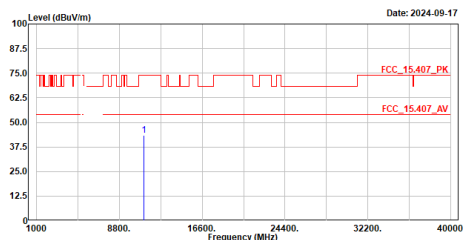


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	43.32	74.00	-30.68	45.77	-2.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5670MHz
Test BY :Bob

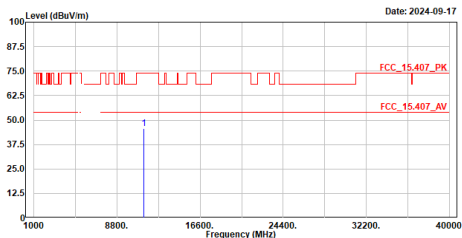

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	45.51	74.00	-28.49	47.08	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5670MHz
Test BY :Bob

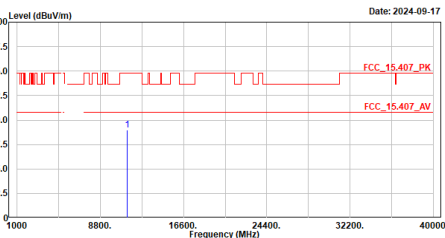

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	45.08	74.00	-28.92	46.65	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5755MHz
Test BY :Bob

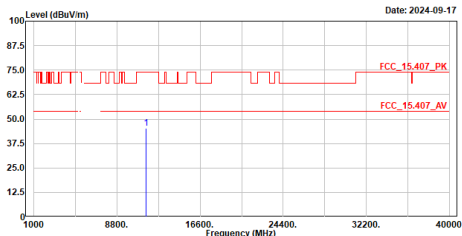

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	45.34	74.00	-28.66	46.55	-1.21	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5755MHz
Test BY :Bob

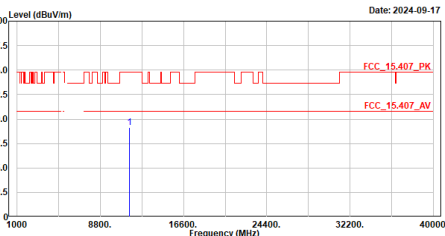

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	45.56	74.00	-28.44	46.77	-1.21	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5795MHz
Test BY :Bob

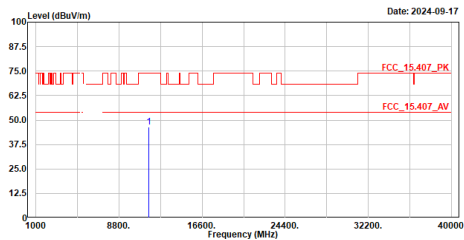


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	46.31	74.00	-27.69	47.48	-1.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5795MHz
Test BY :Bob

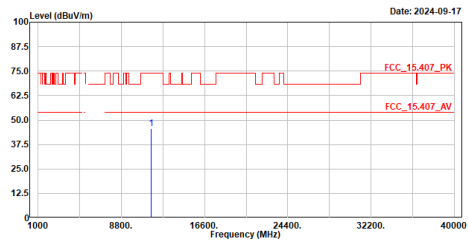


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	45.72	74.00	-28.28	46.89	-1.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5210MHz
Test BY :Ashton

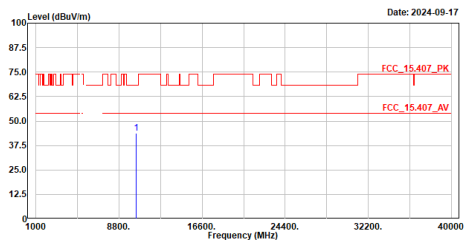


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	43.81	68.22	-24.41	48.04	-4.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5210MHz
Test BY :Ashton

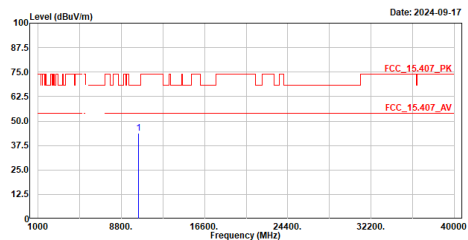


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	43.77	68.22	-24.45	48.00	-4.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5290MHz
Test BY :Ashton

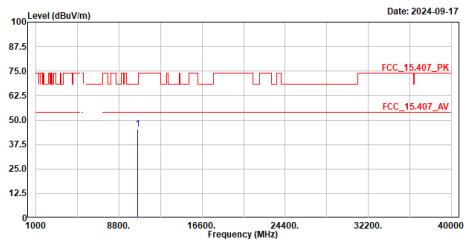


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	45.22	68.22	-23.00	49.00	-3.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5290MHz
Test BY :Ashton

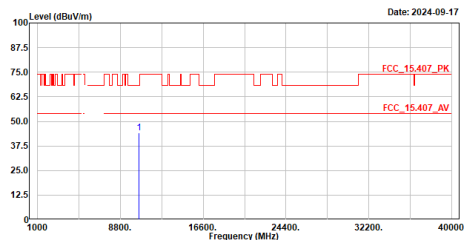


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	44.07	68.22	-24.15	47.85	-3.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5530MHz
Test BY :Ashton

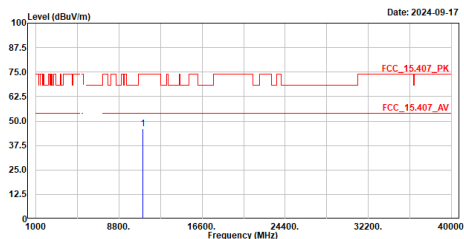


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	46.19	74.00	-27.81	48.82	-2.63	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5530MHz
Test BY :Ashton

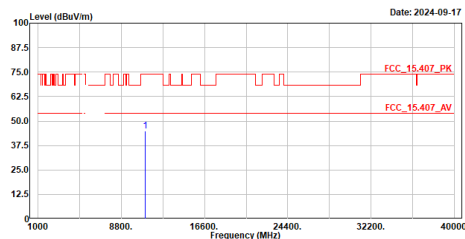


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	44.96	74.00	-29.04	47.59	-2.63	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5610MHz
Test BY :Ashton

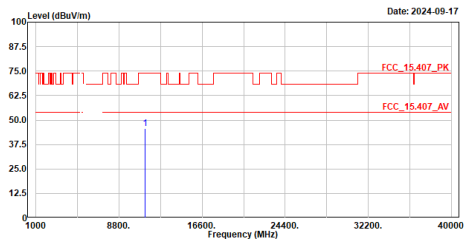


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11228.000	45.84	74.00	-28.16	47.66	-1.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5610MHz
Test BY :Ashton

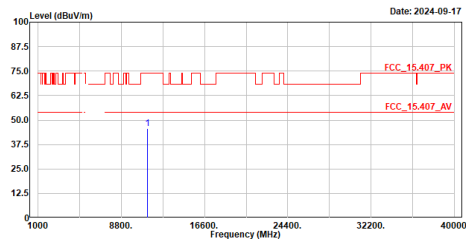


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11228.000	45.63	74.00	-28.37	47.45	-1.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5775MHz
Test BY :Ashton

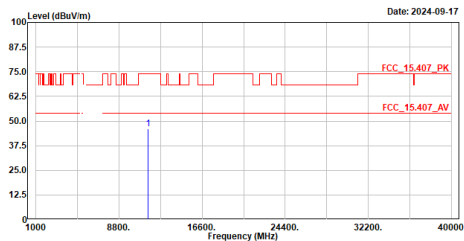


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11558.000	46.12	74.00	-27.88	47.22	-1.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5775MHz
Test BY :Ashton

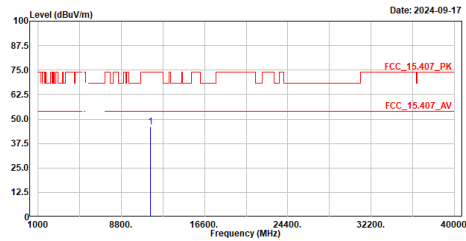


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11558.000	45.87	74.00	-28.13	46.97	-1.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac160_5570MHz
Test BY :Bob

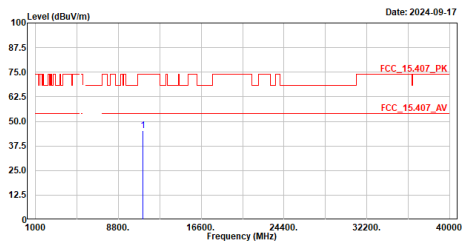


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11140.000	45.44	74.00	-28.56	47.76	-2.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac160_5570MHz
Test BY :Bob

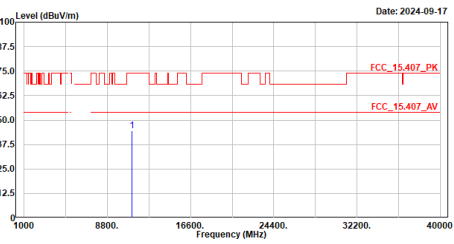


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11140.000	44.61	74.00	-29.39	46.93	-2.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5180MHz
Test BY :Bob

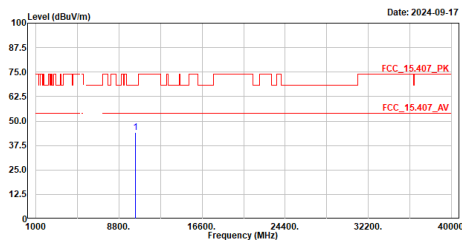


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10360.000	44.20	68.22	-24.02	48.50	-4.30	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5180MHz
Test BY :Bob

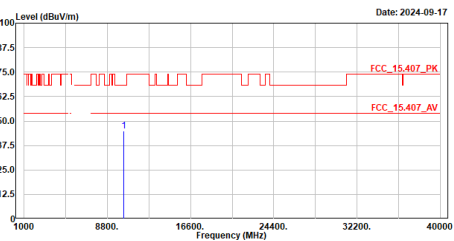


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10360.000	44.85	68.22	-23.37	49.15	-4.30	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5220MHz
Test BY :Bob

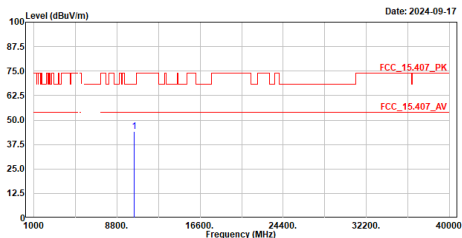

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10440.000	44.09	68.22	-24.13	48.32	-4.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5220MHz
Test BY :Bob

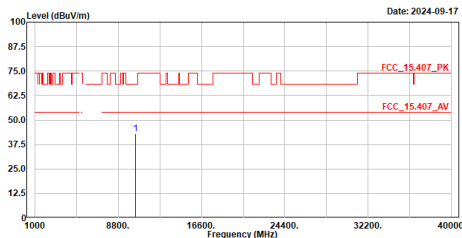

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10440.000	43.15	68.22	-25.07	47.38	-4.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5240MHz
Test BY :Bob

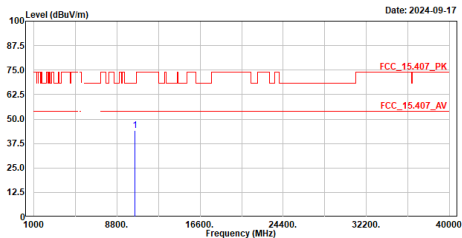

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10440.000	44.26	68.22	-23.96	48.46	-4.20	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5240MHz
Test BY :Bob

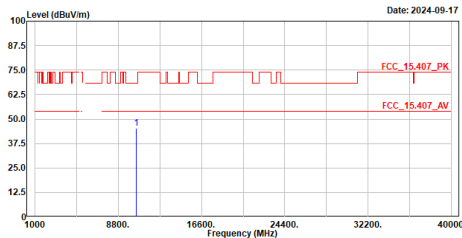

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10440.000	45.30	68.22	-22.92	49.50	-4.20	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5260MHz
Test BY :Bob

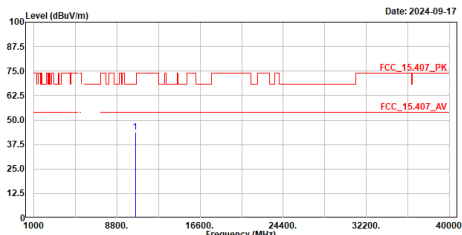

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10528.000	43.82	68.22	-24.40	47.97	-4.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5260MHz
Test BY :Bob

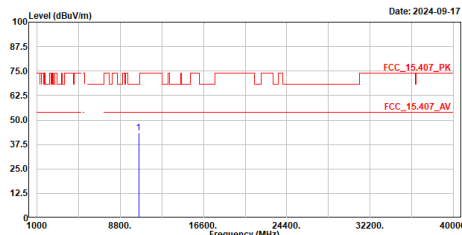

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10528.000	43.50	68.22	-24.72	47.65	-4.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5300MHz
Test BY :Bob

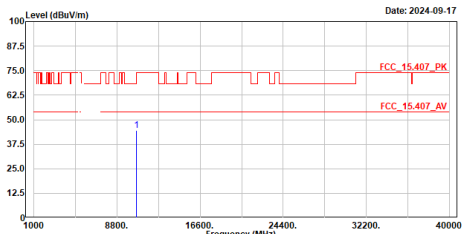

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	44.51	74.00	-29.49	48.17	-3.66	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5300MHz
Test BY :Bob

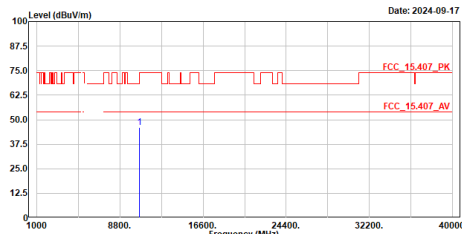

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	45.98	74.00	-28.02	49.64	-3.66	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5320MHz
Test BY :Bob

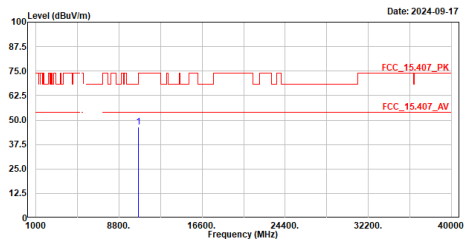


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	10640.000	46.35	74.00	-27.65	49.89	-3.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5320MHz
Test BY :Bob

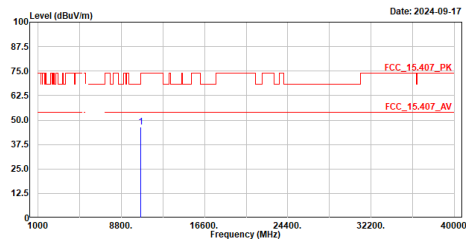


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	10640.000	46.25	74.00	-27.75	49.79	-3.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5500MHz
Test BY :Bob

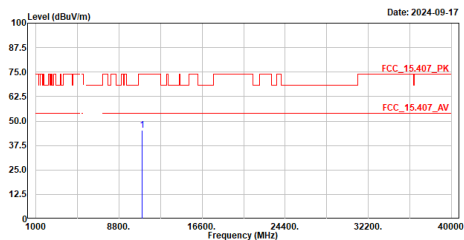


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	11000.000	45.19	74.00	-28.81	48.18	-2.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5500MHz
Test BY :Bob

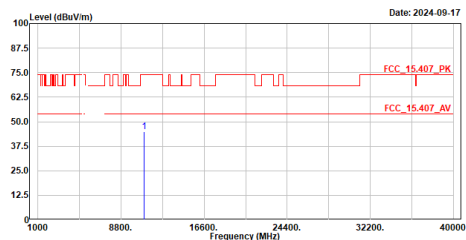


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	11000.000	44.78	74.00	-29.22	47.77	-2.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5580MHz
Test BY :Bob

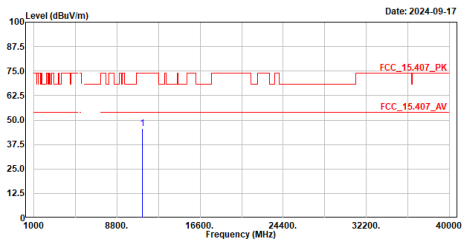

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	11160.000	45.53	74.00	-28.47	47.74	-2.21	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5580MHz
Test BY :Bob

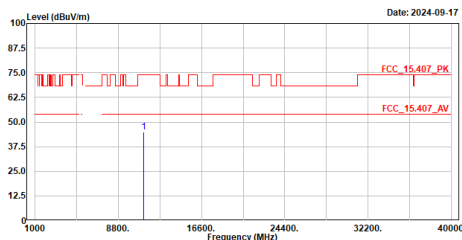

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	11160.000	44.86	74.00	-29.14	47.07	-2.21	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5700MHz
Test BY :Bob

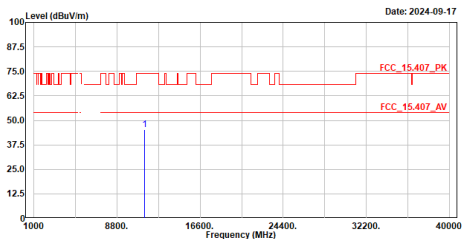

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	11400.000	45.23	74.00	-28.77	46.80	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5700MHz
Test BY :Bob

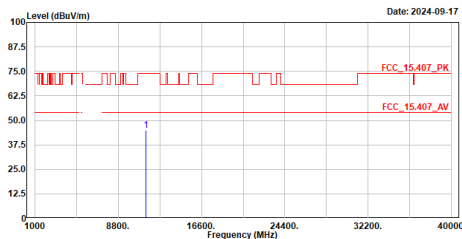

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB				
1	11400.000	44.79	74.00	-29.21	46.36	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5745MHz
Test BY :Bob

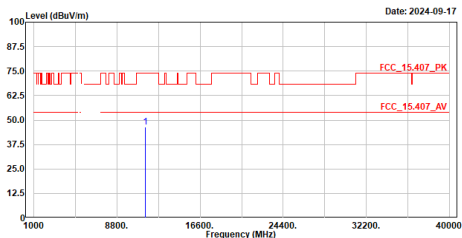

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	46.60	74.00	-27.40	47.86	-1.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5745MHz
Test BY :Bob

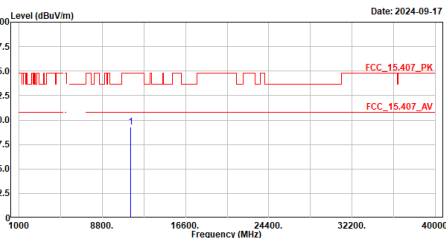

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	46.29	74.00	-27.71	47.55	-1.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5785MHz
Test BY :Bob

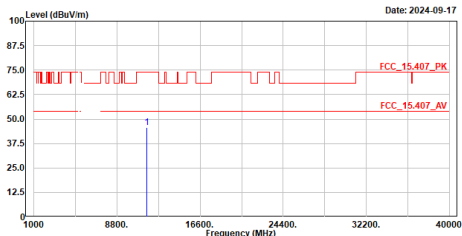

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	45.56	74.00	-28.44	46.70	-1.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5785MHz
Test BY :Bob

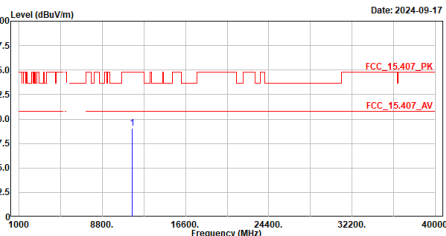

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	45.46	74.00	-28.54	46.60	-1.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Horizontal
Mode :TX_ax20_5825MHz
Test BY :Bob

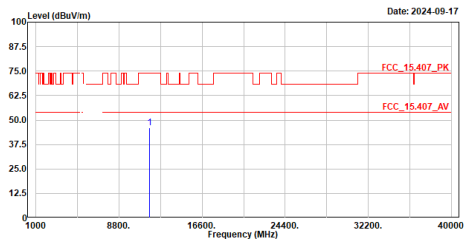

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	46.11	74.00	-27.89	47.27	-1.16	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Vertical
Mode :TX_ax20_5825MHz
Test BY :Bob

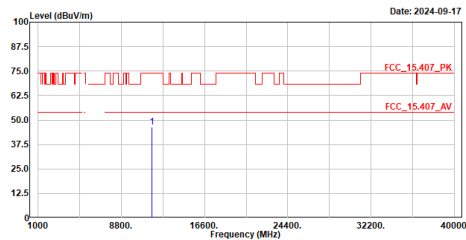

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	46.28	74.00	-27.72	47.44	-1.16	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Horizontal
Mode :TX_ax40_5190MHz
Test BY :Bob

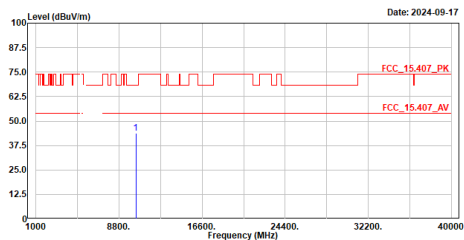

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10300.000	43.92	68.22	-24.30	48.20	-4.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-C803
Condition :3m Vertical
Mode :TX_ax40_5190MHz
Test BY :Bob

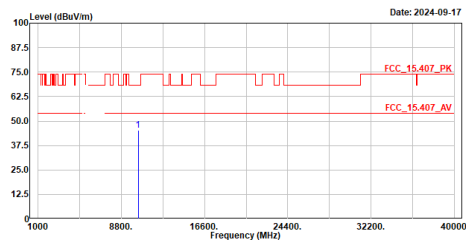

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10300.000	45.44	68.22	-22.78	49.72	-4.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5230MHz
Test BY :Bob

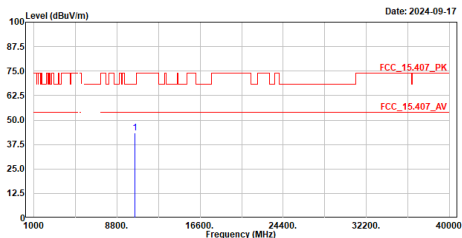

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	43.24	68.22	-24.98	47.48	-4.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5230MHz
Test BY :Bob

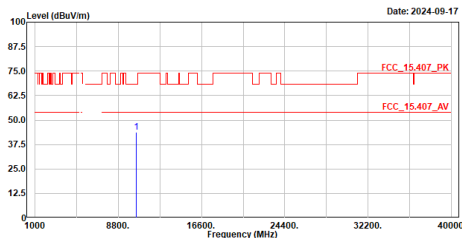

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	43.87	68.22	-24.35	48.11	-4.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5270MHz
Test BY :Bob

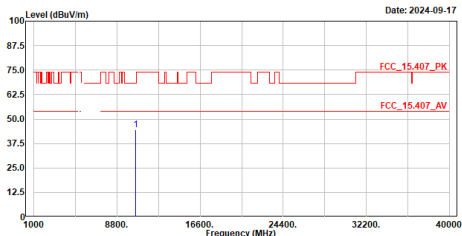

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	44.67	68.22	-23.55	48.69	-4.02	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5270MHz
Test BY :Bob

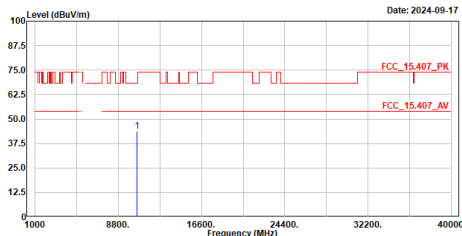

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	43.85	68.22	-24.37	47.87	-4.02	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5310MHz
Test BY :Bob

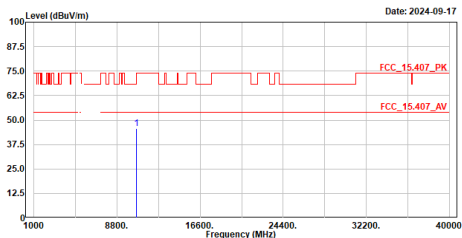

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10620.000	45.48	74.00	-28.52	49.08	-3.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5310MHz
Test BY :Bob

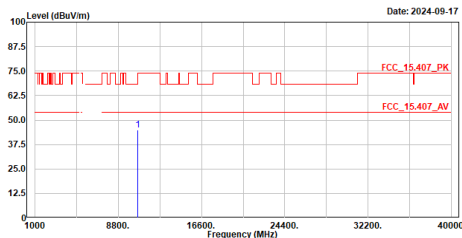

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10620.000	44.77	74.00	-29.23	48.37	-3.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5510MHz
Test BY :Bob

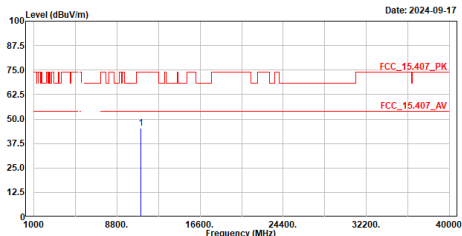

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	11020.000	45.20	74.00	-28.80	48.04	-2.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5510MHz
Test BY :Bob

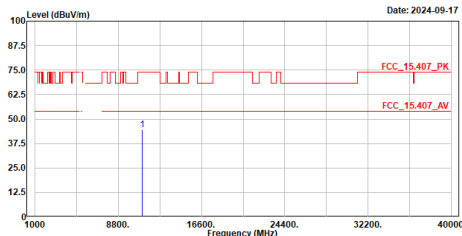

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	11020.000	44.37	74.00	-29.63	47.21	-2.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5550MHz
Test BY :Bob

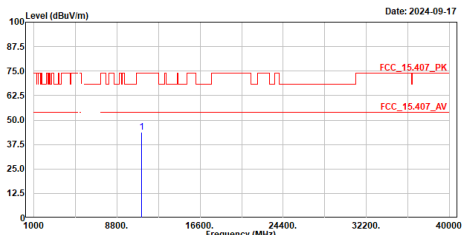

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	43.93	74.00	-30.07	46.38	-2.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5550MHz
Test BY :Bob

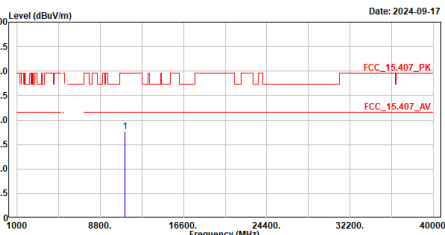

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	44.03	74.00	-29.97	46.48	-2.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5670MHz
Test BY :Bob

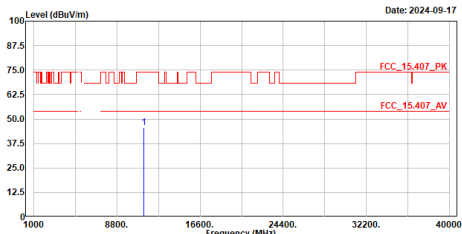

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	45.61	74.00	-28.39	47.18	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5670MHz
Test BY :Bob

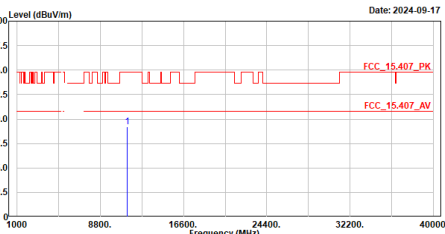

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	46.15	74.00	-27.85	47.72	-1.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5795MHz
Test BY :Bob

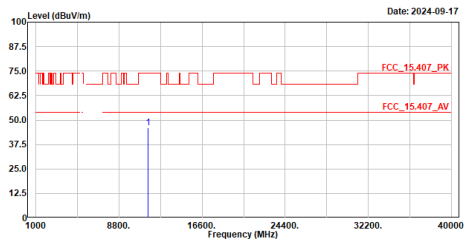


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	46.05	74.00	-27.95	47.26	-1.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5795MHz
Test BY :Bob

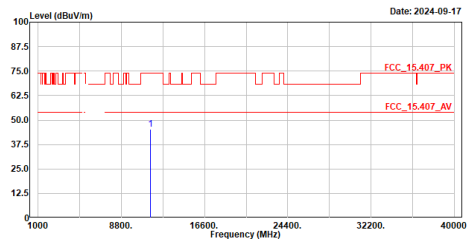


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	45.39	74.00	-28.61	46.60	-1.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5795MHz
Test BY :Bob

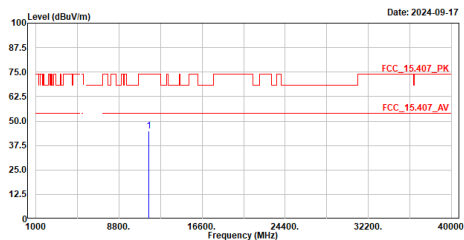


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	44.80	74.00	-29.20	45.97	-1.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5795MHz
Test BY :Bob

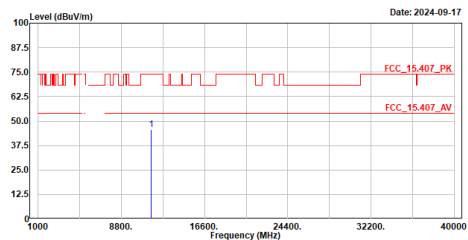


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	45.57	74.00	-28.43	46.74	-1.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5210MHz
Test BY :Ashton

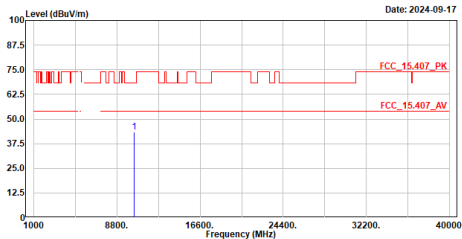


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	43.48	68.22	-24.74	47.71	-4.23	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5210MHz
Test BY :Ashton

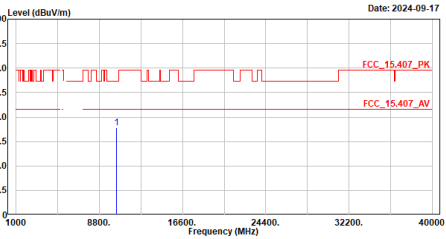


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	44.44	68.22	-23.78	48.67	-4.23	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5290MHz
Test BY :Ashton

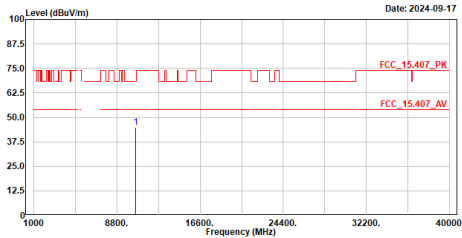


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	44.78	68.22	-23.44	48.56	-3.78	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5290MHz
Test BY :Ashton

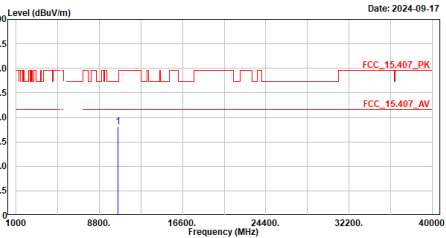


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	45.29	68.22	-22.93	49.07	-3.78	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5530MHz
Test BY :Ashton

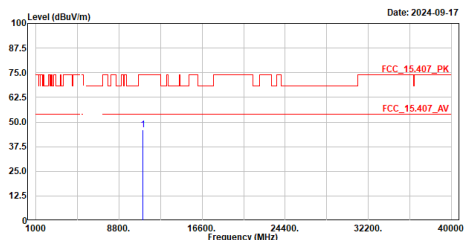


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11060.000	46.00	74.00	-28.00	48.63	-2.63	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5530MHz
Test BY :Ashton

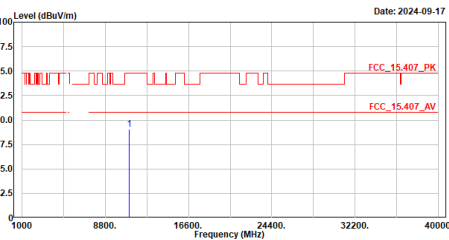


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11060.000	45.44	74.00	-28.56	48.07	-2.63	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5610MHz
Test BY :Ashton

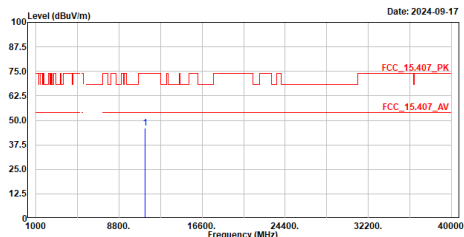


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11220.000	46.05	74.00	-27.95	47.87	-1.82	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5610MHz
Test BY :Ashton

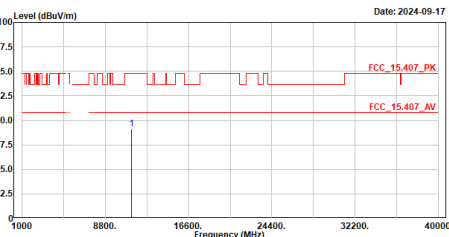


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11220.000	45.56	74.00	-28.44	47.38	-1.82	Peak

Note:

- Level = Read Level + Factor
- Factor = Antenna Factor + Cable Loss - Preamp Factor
- Over Limit = Level - Limit Line
- The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5775MHz
Test BY :Ashton

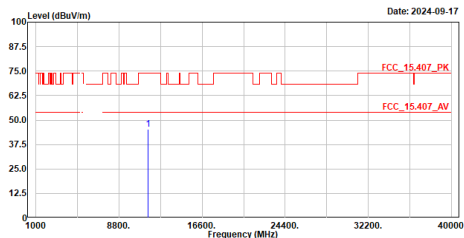

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5775MHz
Test BY :Ashton

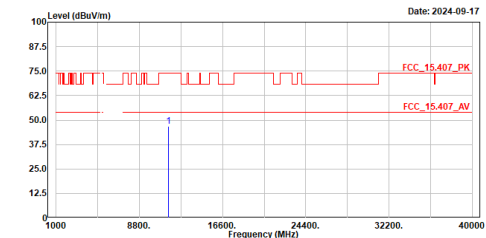

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax160_5570MHz
Test BY :Ashton

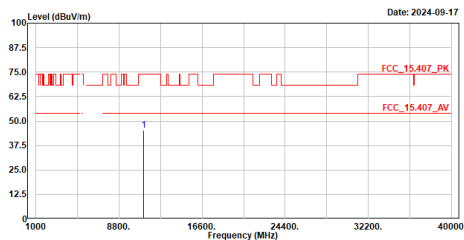

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax160_5570MHz
Test BY :Ashton

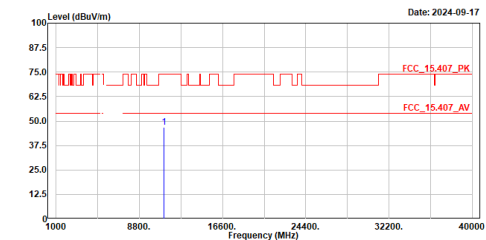

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_a_5180MHz
Test BY :Ashton

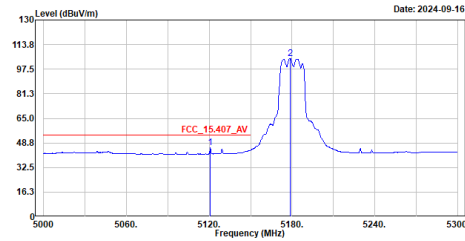


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5120.900	45.47	54.00	-8.53	29.73	15.74	Average
2	5178.800	104.63	-----	-----	88.84	15.79	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_a_5180MHz
Test BY :Ashton

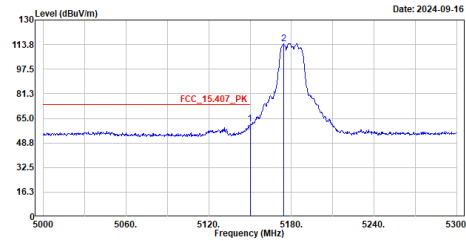


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	61.29	74.00	-12.71	45.56	15.73	Peak
2	5174.600	114.53	-----	-----	98.75	15.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_a_5180MHz
Test BY :Ashton

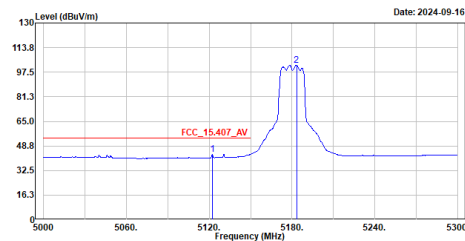


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5122.400	43.37	54.00	-10.63	27.63	15.74	Average
2	5183.300	101.90	-----	-----	86.09	15.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_a_5180MHz
Test BY :Ashton

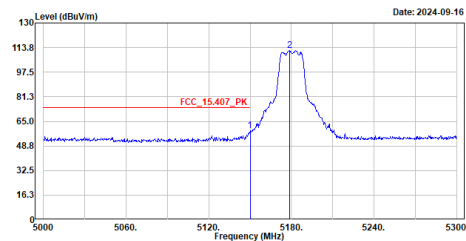


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	58.63	74.00	-15.37	42.90	15.73	Peak
2	5178.500	112.00	-----	-----	96.21	15.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_a_5320MHz
Test BY :Ashton

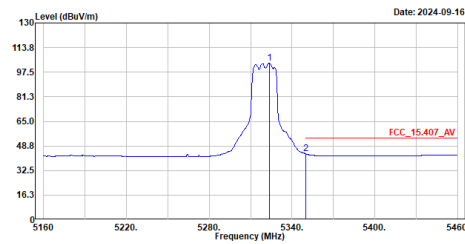


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5323.500	103.36	-----	-----	87.44	15.92	Average
2	5350.200	43.42	54.00	-10.58	27.36	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_a_5320MHz
Test BY :Ashton

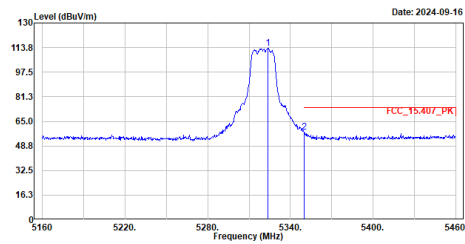


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5323.800	113.36	-----	-----	97.44	15.92	Peak
2	5350.200	58.08	74.00	-15.92	42.02	16.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_a_5320MHz
Test BY :Ashton

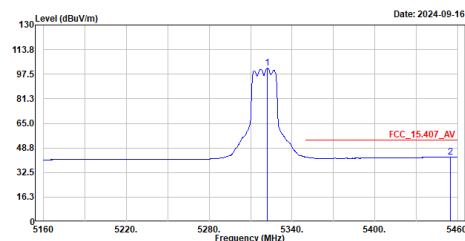


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5322.300	101.36	-----	-----	85.45	15.91	Average
2	5454.900	42.75	54.00	-11.25	26.31	16.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_a_5320MHz
Test BY :Ashton

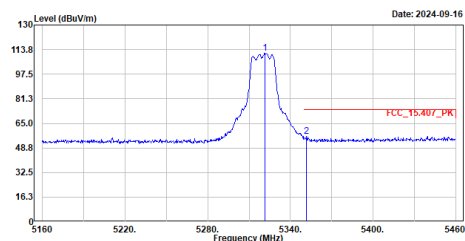


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5321.400	111.30	-----	-----	95.39	15.91	Peak
2	5351.700	56.42	74.00	-17.58	48.36	16.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_a_5500MHz
Test BY :Ashton

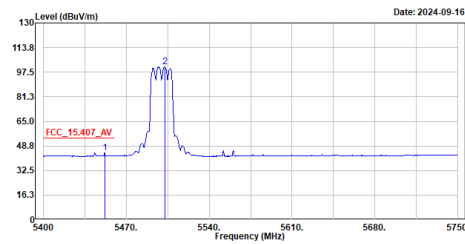


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5451.800	44.38	54.00	-9.62	27.94	16.44	Average
2	5502.550	101.08	-----	-----	84.63	16.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_a_5500MHz
Test BY :Ashton

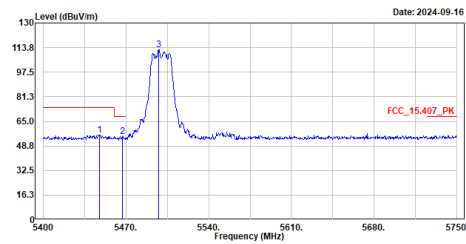


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5447.600	56.12	74.00	-17.88	39.68	16.44	Peak
2	5467.200	55.04	68.22	-13.18	38.60	16.44	Peak
3	5497.650	112.36	-----	-----	95.91	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_a_5500MHz
Test BY :Ashton

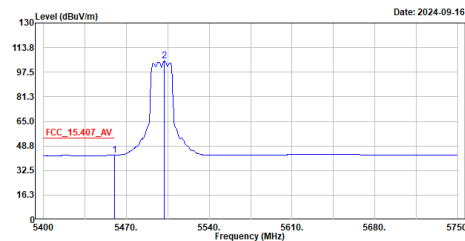


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	42.67	54.00	-11.33	26.23	16.44	Average
2	5502.200	104.80	-----	-----	88.35	16.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_a_5500MHz
Test BY :Ashton

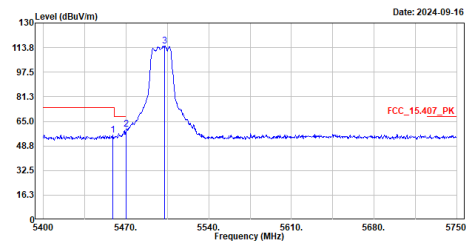


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.800	55.93	74.00	-18.07	39.49	16.44	Peak
2	5470.000	60.06	68.22	-8.16	43.61	16.45	Peak
3	5502.900	114.72	-----	-----	98.27	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_a_5700MHz
Test BY :Ashton

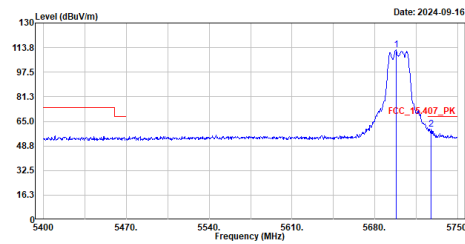


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5697.850	112.36	68.22	-8.28	94.90	17.46	Peak
2	5727.600	59.94	68.22	-8.28	42.26	17.68	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_a_5700MHz
Test BY :Ashton

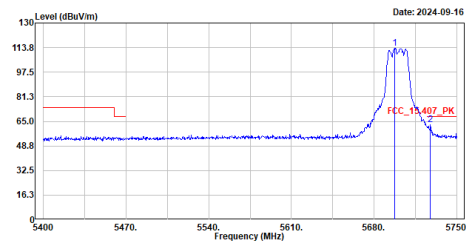


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5697.500	113.52	68.22	-5.46	96.07	17.45	Peak
2	5727.600	62.76	68.22	-5.46	45.08	17.68	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_a_5745MHz
Test BY :Ashton

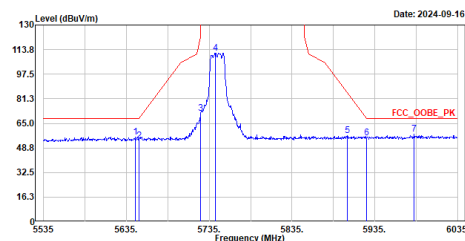


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5645.500	56.15	68.20	-12.05	38.97	17.18	Peak
2	5650.000	53.59	68.21	-14.62	36.40	17.19	Peak
3	5725.000	71.62	122.20	-50.58	53.96	17.66	Peak
4	5742.500	111.46	68.20	-43.24	93.69	17.77	Peak
5	5902.000	57.11	85.22	-28.11	39.22	17.89	Peak
6	5925.000	55.67	68.21	-12.54	37.75	17.92	Peak
7	5982.500	58.12	68.20	-10.08	40.10	18.02	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_a_5745MHz
Test BY :Ashton

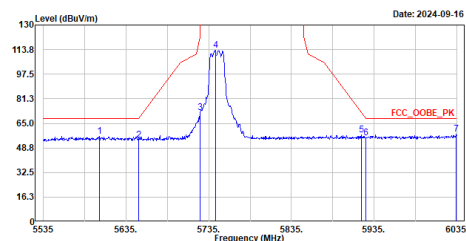


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5603.000	56.48	68.20	-11.72	39.39	17.09	Peak
2	5650.000	54.02	68.21	-14.19	36.83	17.19	Peak
3	5725.000	72.03	122.20	-50.17	54.37	17.66	Peak
4	5743.000	113.14	68.20	-44.94	95.36	17.78	Peak
5	5919.500	57.45	72.28	-14.83	39.53	17.92	Peak
6	5925.000	55.45	68.21	-12.76	37.53	17.92	Peak
7	6034.500	57.84	68.20	-10.36	39.70	18.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_a_5825MHz
Test BY :Ashton

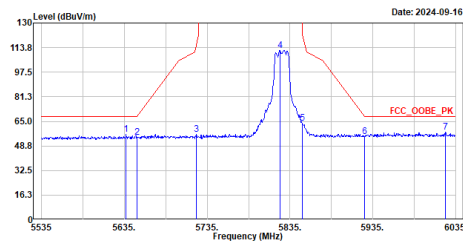


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5637.000	56.30	68.20	-11.90	39.13	17.17	Peak
2	5650.000	54.28	68.21	-13.93	37.09	17.19	Peak
3	5722.000	56.24	115.36	-59.12	38.61	17.63	Peak
4	5823.000	112.00	-----	-----	94.10	17.90	Peak
5	5850.000	63.83	122.20	-58.37	45.90	17.93	Peak
6	5925.000	55.03	68.21	-13.18	37.11	17.92	Peak
7	6023.000	57.88	68.20	-10.32	39.76	18.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_a_5825MHz
Test BY :Ashton

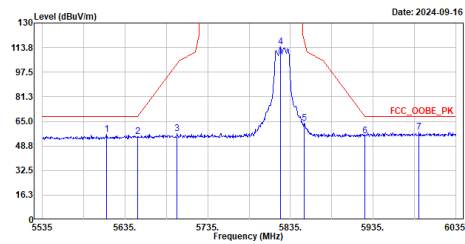


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5612.500	56.31	68.20	-11.89	39.20	17.11	Peak
2	5650.000	55.06	68.21	-13.15	37.87	17.19	Peak
3	5698.000	56.71	103.72	-47.01	39.25	17.46	Peak
4	5823.000	114.27	-----	-----	96.37	17.90	Peak
5	5851.500	63.62	118.78	-55.16	45.69	17.93	Peak
6	5925.000	55.26	68.21	-12.95	37.34	17.92	Peak
7	5990.500	57.73	68.20	-10.47	39.69	18.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5180MHz
Test BY :Bob

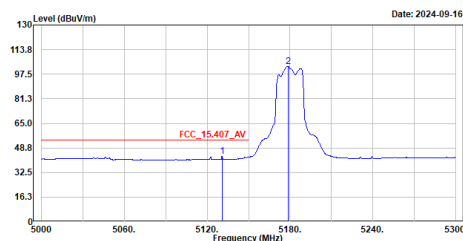


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5130.000	43.28	54.00	-10.72	27.54	15.74	Average
2	5178.500	102.61	-----	-----	86.82	15.79	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5180MHz
Test BY :Bob

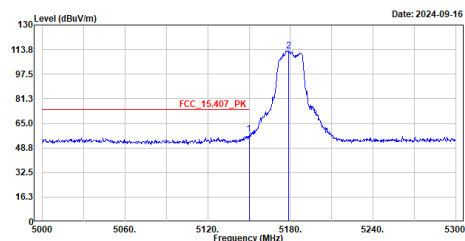


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	58.06	74.00	-15.94	42.33	15.73	Peak
2	5178.500	112.89	-----	-----	97.10	15.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5180MHz
Test BY :Bob

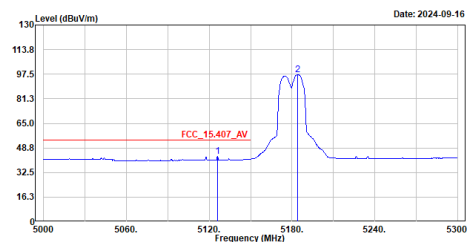


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5126.300	43.12	54.00	-10.88	27.38	15.74	Average
2	5184.200	97.27	-----	-----	81.46	15.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5180MHz
Test BY :Bob

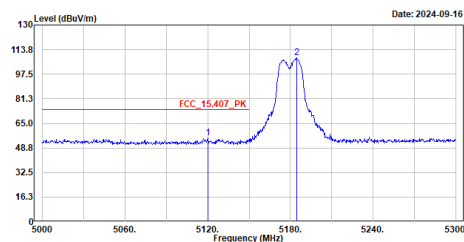


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5120.000	55.25	74.00	-18.75	39.51	15.74	Peak
2	5184.500	108.60	-----	-----	92.79	15.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5320MHz
Test BY :Bob

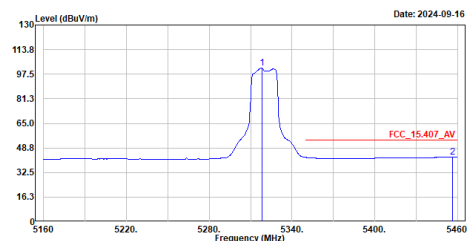


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5318.100	101.36	-----	-----	85.46	15.90	Average
2	5456.100	42.65	54.00	-11.35	26.21	16.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5320MHz
Test BY :Bob

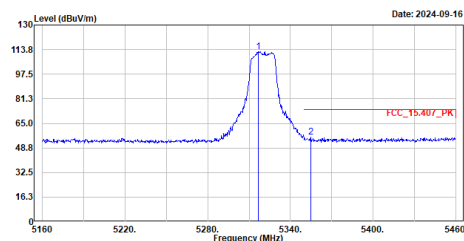


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5316.900	112.49	-----	-----	96.60	15.89	Peak
2	5355.000	56.11	74.00	-17.89	48.04	16.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5320MHz
Test BY :Bob

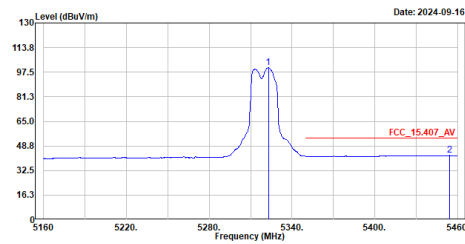


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.900	100.48	-----	-----	84.56	15.92	Average
2	5454.000	42.48	54.00	-11.52	26.03	16.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5320MHz
Test BY :Bob

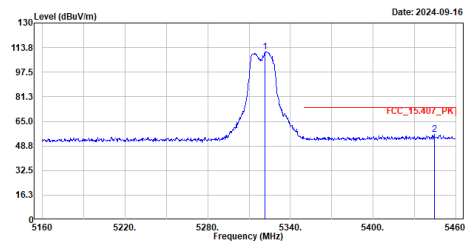


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5321.400	111.06	-----	-----	95.15	15.91	Peak
2	5444.400	56.27	74.00	-17.73	39.83	16.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5500MHz
Test BY :Bob

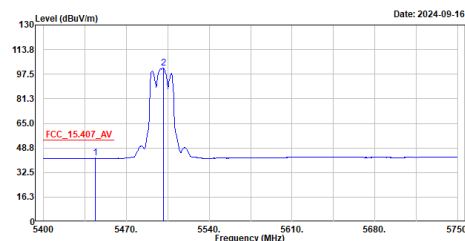


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5443.750	41.95	54.00	-12.05	25.52	16.43	Average
2	5501.150	101.60	-----	-----	85.16	16.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5500MHz
Test BY :Bob

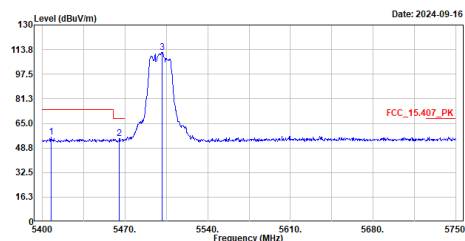


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5407.700	55.69	74.00	-18.31	39.43	16.26	Peak
2	5465.100	55.14	68.22	-13.08	38.70	16.44	Peak
3	5501.500	111.87	-----	-----	95.42	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5500MHz
Test BY :Bob

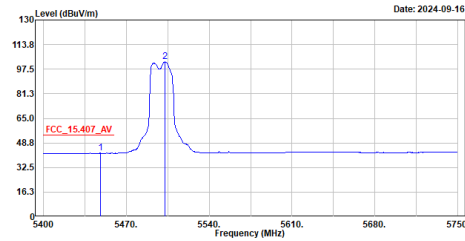


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5447.950	42.05	54.00	-11.95	25.62	16.43	Average
2	5502.550	102.34	-----	-----	85.89	16.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5500MHz
Test BY :Bob

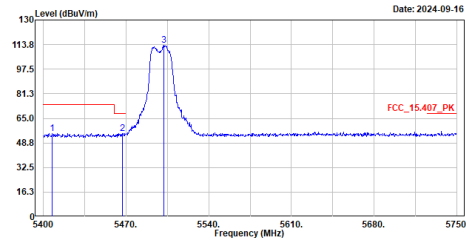


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5407.700	55.18	74.00	-18.82	38.92	16.26	Peak
2	5467.200	55.07	68.22	-13.15	38.63	16.44	Peak
3	5501.850	113.31	-----	-----	96.86	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5700MHz
Test BY :Bob

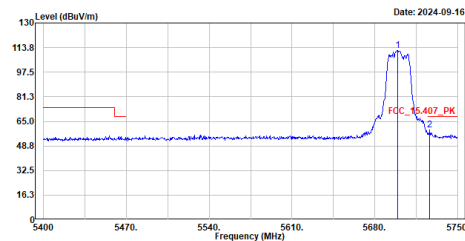


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5699.600	111.81	-----	-----	94.34	17.47	Peak
2	5726.550	59.13	68.22	-9.09	41.46	17.67	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5700MHz
Test BY :Bob

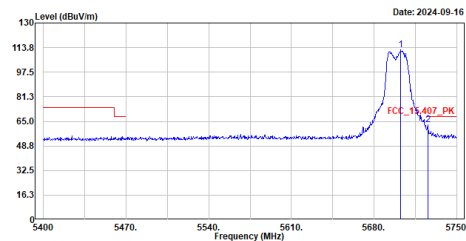


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5702.750	112.16	-----	-----	94.66	17.50	Peak
2	5725.500	62.69	68.22	-5.53	45.03	17.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5745MHz
Test BY :Bob

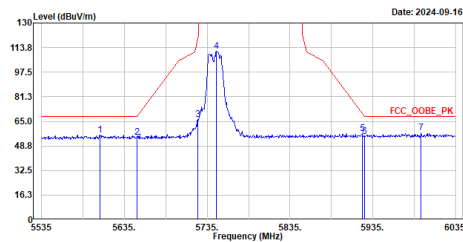


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5685.500	55.77	68.20	-12.43	38.67	17.10	Peak
2	5690.000	54.22	68.21	-13.99	37.03	17.19	Peak
3	5724.000	66.17	119.92	-53.75	48.52	17.65	Peak
4	5746.000	111.12	-----	-----	93.31	17.81	Peak
5	5922.000	56.92	70.43	-13.51	39.00	17.92	Peak
6	5925.000	55.08	68.21	-13.13	37.16	17.92	Peak
7	5993.500	57.27	68.20	-10.93	39.23	18.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5745MHz
Test BY :Bob

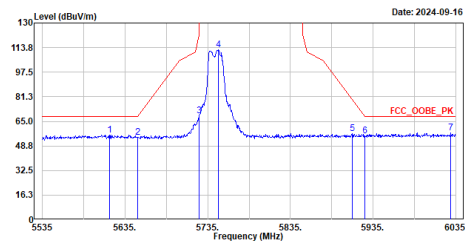


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5616.500	55.98	68.20	-12.22	38.86	17.12	Peak
2	5690.000	54.39	68.21	-13.82	37.20	17.19	Peak
3	5725.000	68.56	122.20	-53.64	50.90	17.66	Peak
4	5748.000	112.25	-----	-----	94.43	17.82	Peak
5	5910.000	56.89	79.31	-22.42	38.98	17.91	Peak
6	5925.000	55.21	68.21	-13.00	37.29	17.92	Peak
7	6029.000	57.36	68.20	-10.84	39.23	18.13	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac20_5825MHz
Test BY :Bob

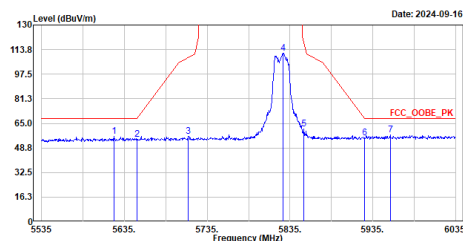


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5622.500	56.23	68.20	-11.97	39.10	17.13	Peak
2	5690.000	54.52	68.21	-13.69	37.33	17.19	Peak
3	5712.500	56.64	108.70	-52.06	39.07	17.57	Peak
4	5826.500	111.26	-----	-----	93.36	17.90	Peak
5	5852.000	61.40	117.64	-56.24	43.47	17.93	Peak
6	5925.000	55.20	68.21	-13.01	37.28	17.92	Peak
7	5956.000	57.41	68.20	-10.79	39.43	17.98	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac20_5825MHz
Test BY :Bob

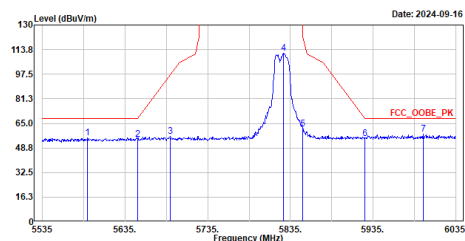


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5589.500	55.44	68.20	-12.76	38.38	17.06	Peak
2	5690.000	54.43	68.21	-13.78	37.24	17.19	Peak
3	5690.500	56.63	97.43	-40.80	39.23	17.40	Peak
4	5826.500	111.57	-----	-----	93.67	17.90	Peak
5	5850.000	61.41	122.20	-60.79	43.48	17.93	Peak
6	5925.000	55.12	68.21	-13.09	37.20	17.92	Peak
7	5996.000	57.93	68.20	-10.27	39.89	18.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5190MHz
Test BY :Bob

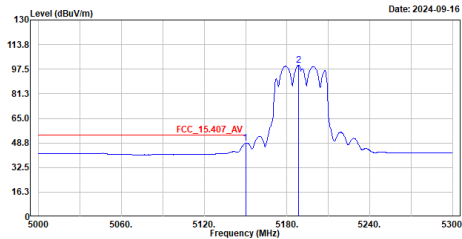

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	48.65	54.00	-5.35	32.92	15.73	Average
2	5188.400	100.04	-----	-----	84.22	15.82	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5190MHz
Test BY :Bob

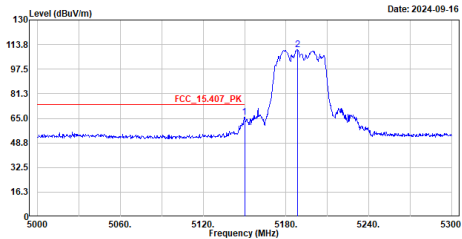

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	65.65	74.00	-8.35	49.92	15.73	Peak
2	5188.400	110.52	-----	-----	94.70	15.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5190MHz
Test BY :Bob

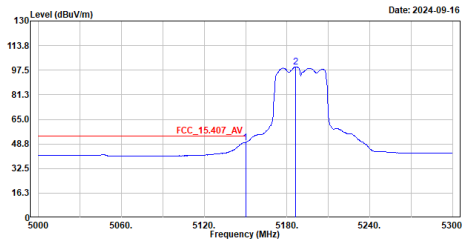

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	49.72	54.00	-4.28	33.99	15.73	Average
2	5186.300	99.73	-----	-----	83.92	15.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5190MHz
Test BY :Bob

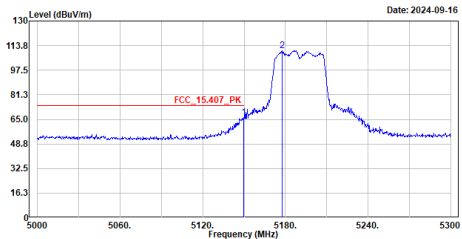

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.700	66.01	74.00	-7.99	50.28	15.73	Peak
2	5177.600	110.60	-----	-----	94.81	15.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5310MHz
Test BY :Bob

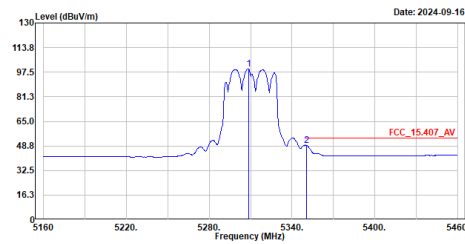


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5308.500	99.69	-----	-----	83.82	15.87	Average
2	5350.500	49.27	54.00	-4.73	33.21	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5310MHz
Test BY :Bob

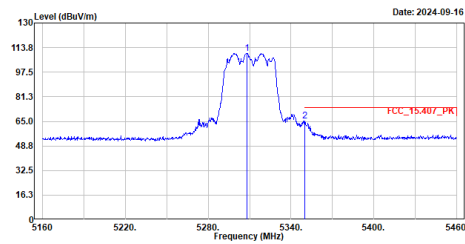


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5308.200	109.93	-----	-----	94.06	15.87	Peak
2	5350.200	65.20	74.00	-8.80	49.14	16.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5310MHz
Test BY :Bob

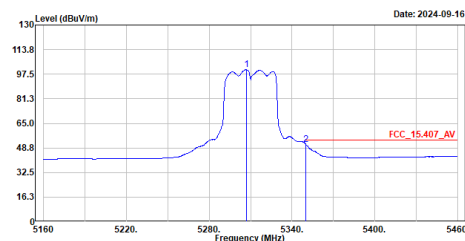


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5307.000	100.45	-----	-----	84.59	15.86	Average
2	5350.200	51.04	54.00	-2.96	34.98	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5310MHz
Test BY :Bob

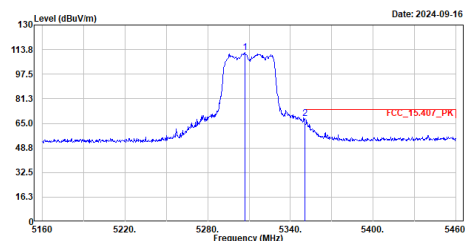


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5307.000	111.73	-----	-----	95.87	15.86	Peak
2	5350.500	68.26	74.00	-5.74	52.20	16.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5510MHz
Test BY :Bob

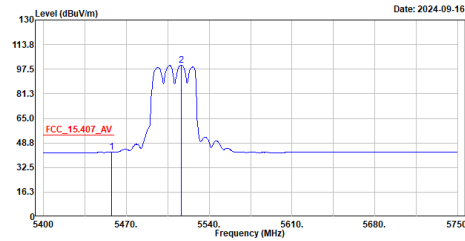


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.400	42.89	54.00	-11.11	26.45	16.44	Average
2	5516.200	100.22	-----	-----	83.70	16.52	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5510MHz
Test BY :Bob

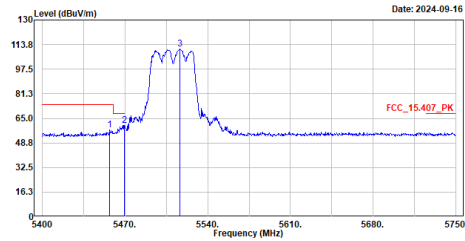


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.050	57.49	74.00	-16.51	41.05	16.44	Peak
2	5469.650	60.33	68.22	-7.89	43.88	16.45	Peak
3	5516.550	110.77	-----	-----	94.24	16.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5510MHz
Test BY :Bob

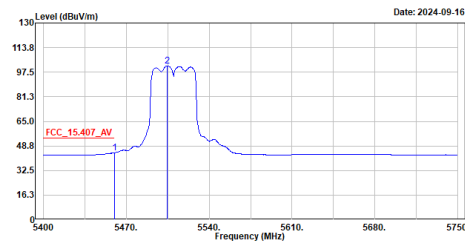


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	44.31	54.00	-9.69	27.87	16.44	Average
2	5504.300	101.67	-----	-----	85.22	16.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5510MHz
Test BY :Bob

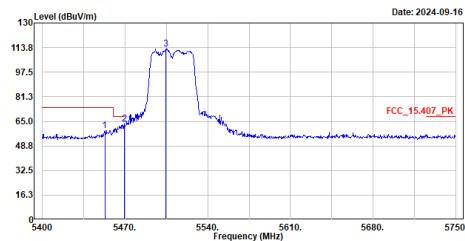


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5452.850	59.05	74.00	-14.95	42.60	16.45	Peak
2	5469.650	63.47	68.22	-4.75	47.02	16.45	Peak
3	5504.650	112.83	-----	-----	96.38	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5670MHz
Test BY :Bob

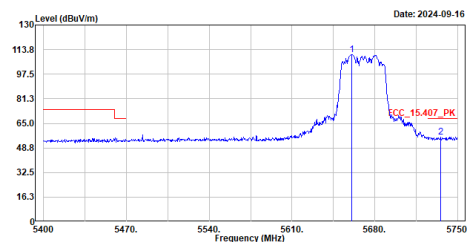


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5660.750	110.56	-----	-----	93.33	17.23	Peak
2	5735.650	56.08	68.22	-12.14	38.35	17.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5670MHz
Test BY :Bob

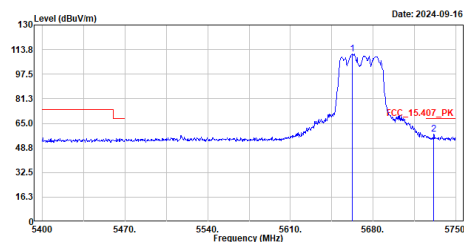


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5662.150	110.78	-----	-----	93.54	17.24	Peak
2	5731.450	57.96	68.22	-10.26	48.26	17.70	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5755MHz
Test BY :Bob

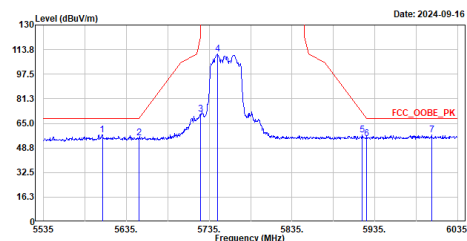


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5606.000	57.32	68.20	-10.88	40.22	17.10	Peak
2	5650.000	55.29	68.21	-12.92	38.10	17.19	Peak
3	5724.500	71.24	121.06	-49.82	53.58	17.66	Peak
4	5745.000	110.69	-----	-----	92.89	17.80	Peak
5	5919.500	57.35	72.28	-14.93	39.43	17.92	Peak
6	5925.000	54.97	68.21	-13.24	37.05	17.92	Peak
7	6003.500	57.37	68.20	-10.83	39.31	18.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5755MHz
Test BY :Bob

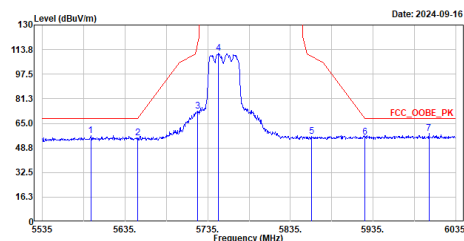


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5593.500	57.11	68.20	-11.09	40.05	17.06	Peak
2	5650.000	55.25	68.21	-12.96	38.06	17.19	Peak
3	5722.500	72.67	116.50	-43.63	55.23	17.64	Peak
4	5748.000	111.24	-----	-----	93.42	17.82	Peak
5	5861.000	56.31	109.12	-52.81	38.39	17.92	Peak
6	5925.000	55.96	68.21	-12.25	38.04	17.92	Peak
7	6002.500	58.20	68.20	-10.00	40.14	18.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac40_5795MHz
Test BY :Bob

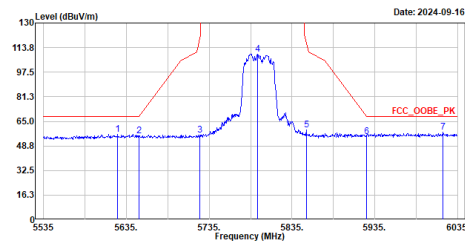


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5624.500	56.33	68.20	-11.87	39.19	17.14	Peak
2	5650.000	55.62	68.21	-12.59	38.43	17.19	Peak
3	5724.000	56.03	119.92	-63.89	38.38	17.65	Peak
4	5793.500	109.44	-----	-----	91.56	17.88	Peak
5	5852.500	59.35	116.50	-57.15	41.42	17.93	Peak
6	5925.000	55.08	68.21	-13.13	37.16	17.92	Peak
7	6017.000	57.67	68.20	-10.53	39.57	18.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac40_5795MHz
Test BY :Bob

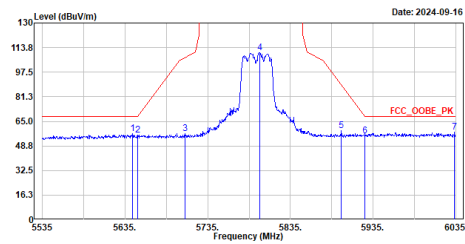


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5644.000	56.89	68.20	-11.31	39.70	17.19	Peak
2	5650.000	56.14	68.21	-12.07	38.95	17.19	Peak
3	5708.000	56.85	107.44	-50.59	39.32	17.53	Peak
4	5798.000	110.49	-----	-----	92.61	17.88	Peak
5	5896.500	59.04	89.29	-30.25	41.15	17.89	Peak
6	5925.000	55.23	68.21	-12.98	37.31	17.92	Peak
7	6033.500	57.81	68.20	-10.39	39.67	18.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5210MHz
Test BY :Bob

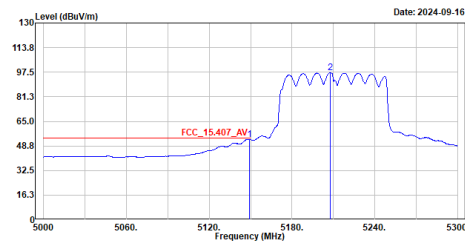


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.100	53.21	54.00	-0.79	37.48	15.73	Average
2	5207.900	97.25	-----	-----	81.39	15.86	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5210MHz
Test BY :Bob

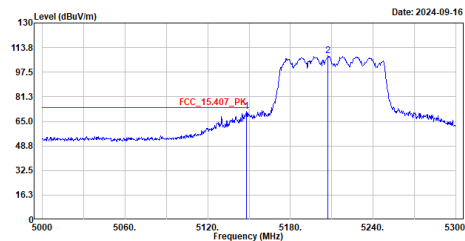


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.900	71.52	74.00	-2.48	55.79	15.73	Peak
2	5207.300	108.46	-----	-----	92.60	15.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5210MHz
Test BY :Bob

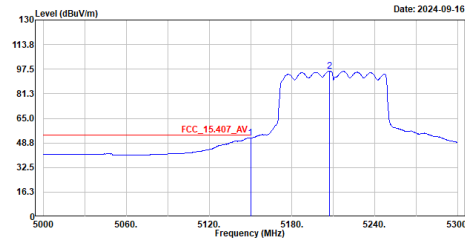


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	52.14	54.00	-1.86	36.41	15.73	Average
2	5207.000	96.20	-----	-----	80.34	15.86	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5210MHz
Test BY :Bob

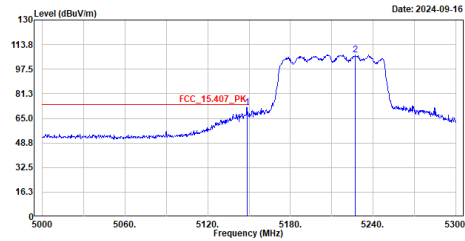


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5148.500	72.17	74.00	-1.83	56.44	15.73	Peak
2	5227.100	107.16	-----	-----	91.29	15.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5290MHz
Test BY :Bob

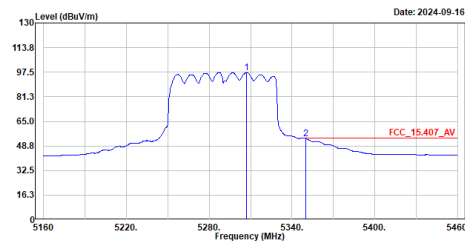


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5307.300	97.29	-----	-----	81.43	15.86	Average
2	5350.200	53.47	54.00	-0.53	37.41	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5290MHz
Test BY :Bob

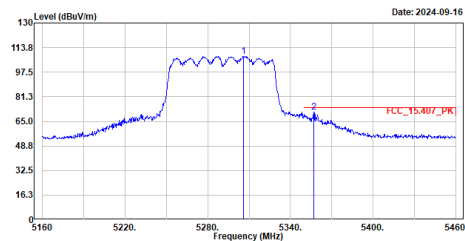


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5305.800	107.96	-----	-----	92.10	15.86	Peak
2	5356.800	71.07	74.00	-2.93	54.99	16.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5290MHz
Test BY :Bob

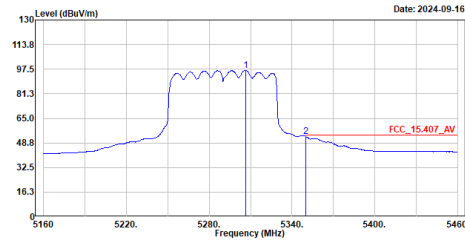


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5306.400	96.80	-----	-----	80.94	15.86	Average
2	5350.200	52.83	54.00	-1.17	36.77	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5290MHz
Test BY :Bob

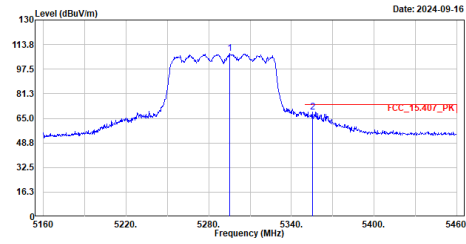


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5295.000	107.81	-----	-----	91.96	15.85	Peak
2	5355.300	69.36	74.00	-4.64	53.28	16.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5530MHz
Test BY :Bob

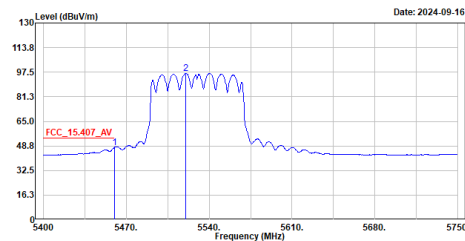


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	47.58	54.00	-6.42	31.14	16.44	Average
2	5520.400	96.75	-----	-----	80.18	16.57	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5530MHz
Test BY :Bob

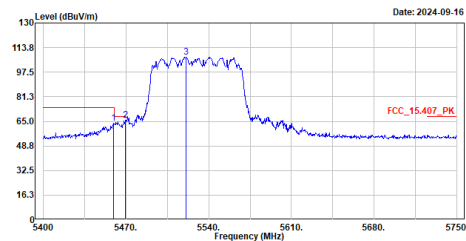


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.150	63.72	74.00	-10.28	47.28	16.44	Peak
2	5469.300	65.74	68.22	-2.48	49.29	16.45	Peak
3	5520.750	107.65	-----	-----	91.08	16.57	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5530MHz
Test BY :Bob

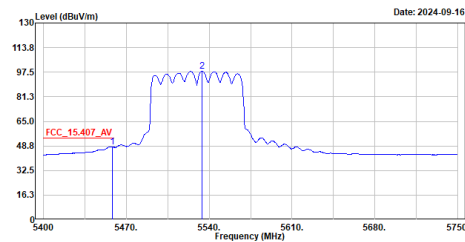


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.458	48.25	54.00	-5.75	31.81	16.44	Average
2	5534.050	98.05	-----	-----	81.38	16.67	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5530MHz
Test BY :Bob

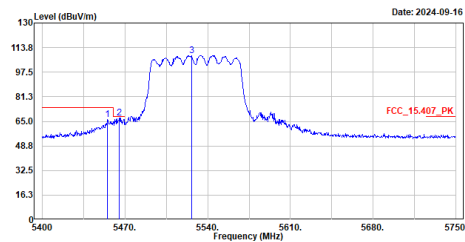


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5455.300	66.20	74.00	-7.80	49.76	16.44	Peak
2	5465.100	67.21	68.22	-1.01	50.77	16.44	Peak
3	5526.700	108.65	-----	-----	92.04	16.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5610MHz
Test BY :Bob

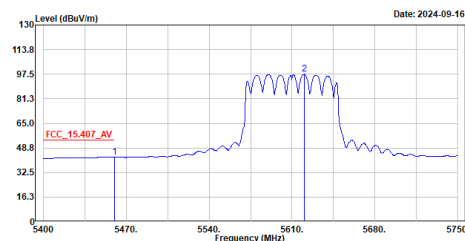


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	42.58	54.00	-11.42	26.14	16.44	Average
2	5620.150	97.39	-----	-----	80.26	17.13	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5610MHz
Test BY :Bob

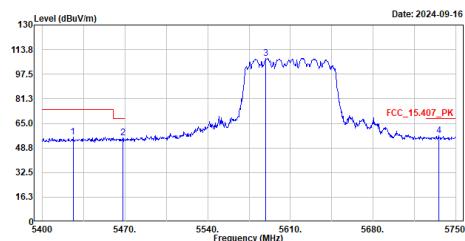


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5425.900	55.98	74.00	-18.02	39.59	16.39	Peak
2	5467.900	55.44	68.22	-12.78	39.00	16.44	Peak
3	5589.350	107.99	-----	-----	90.93	17.06	Peak
4	5735.650	56.90	68.22	-11.32	39.17	17.73	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5610MHz
Test BY :Bob

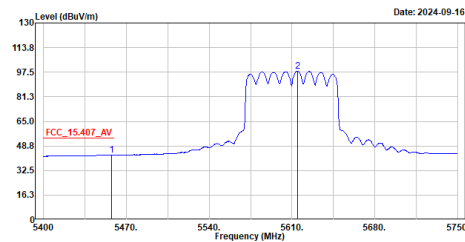


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.400	42.74	54.00	-11.26	26.30	16.44	Average
2	5614.550	98.27	-----	-----	81.15	17.12	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5610MHz
Test BY :Bob

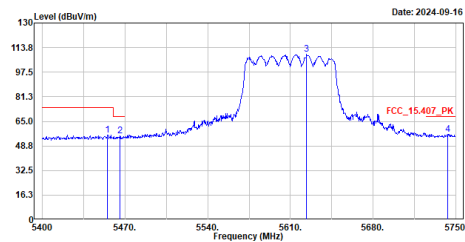


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5455.300	56.10	74.00	-17.90	39.66	16.44	Peak
2	5465.450	55.48	68.22	-12.74	39.04	16.44	Peak
3	5623.650	109.18	-----	-----	92.05	17.13	Peak
4	5743.350	56.65	68.22	-11.57	38.87	17.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac80_5775MHz
Test BY :Bob

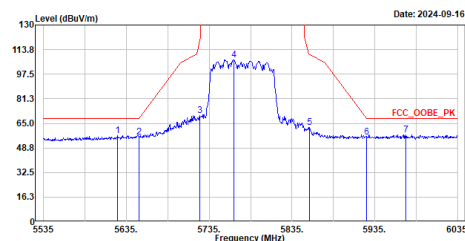


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5624.500	56.99	68.20	-11.21	39.85	17.14	Peak
2	5650.000	56.14	68.21	-12.07	38.95	17.19	Peak
3	5723.500	70.30	118.78	-48.48	52.65	17.65	Peak
4	5764.500	106.90	-----	-----	89.85	17.85	Peak
5	5856.000	62.31	110.52	-48.21	44.39	17.92	Peak
6	5925.000	55.79	68.21	-12.42	37.87	17.92	Peak
7	5972.500	57.58	68.20	-10.62	39.58	18.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac80_5775MHz
Test BY :Bob

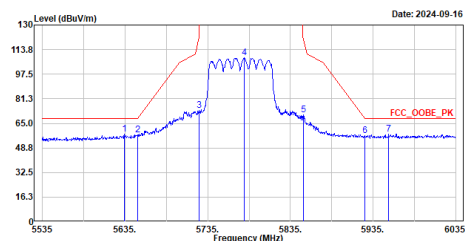


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5634.000	57.80	68.20	-10.40	40.64	17.16	Peak
2	5650.000	57.22	68.21	-10.99	40.03	17.19	Peak
3	5724.500	73.54	121.06	-47.52	55.08	17.66	Peak
4	5779.500	108.53	-----	-----	90.67	17.86	Peak
5	5851.000	70.44	119.92	-49.48	52.51	17.93	Peak
6	5925.000	56.77	68.21	-11.44	38.85	17.92	Peak
7	5954.000	57.93	68.20	-10.27	39.96	17.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac160_5570MHz
Test BY :Bob

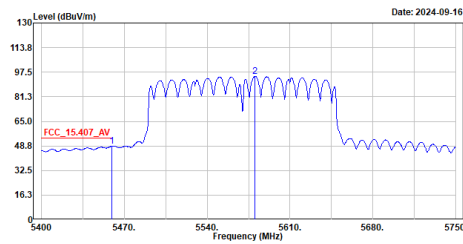


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.150	48.56	54.00	-5.44	32.12	16.44	Average
2	5580.600	94.62	-----	-----	77.63	16.99	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ac160_5570MHz
Test BY :Bob

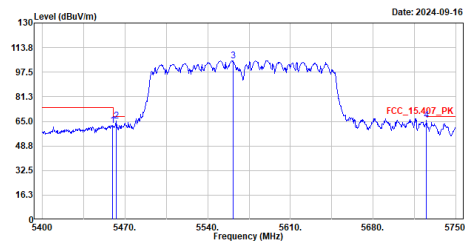


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.150	62.20	74.00	-11.80	45.76	16.44	Peak
2	5462.300	65.39	68.22	-2.83	48.95	16.44	Peak
3	5561.350	105.19	-----	-----	88.32	16.87	Peak
4	5725.150	65.94	68.22	-2.28	48.28	17.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac160_5570MHz
Test BY :Bob

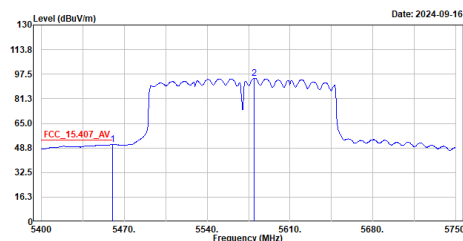


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	50.97	54.00	-3.03	34.53	16.44	Average
2	5579.900	94.87	-----	-----	77.88	16.99	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ac160_5570MHz
Test BY :Bob

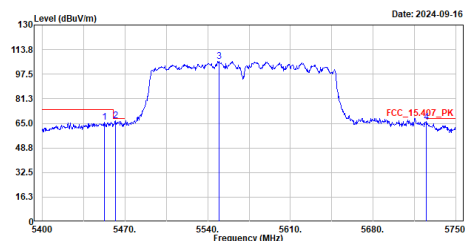


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5452.500	65.92	74.00	-8.08	49.48	16.44	Peak
2	5461.950	66.84	68.22	-1.38	50.40	16.44	Peak
3	5549.450	106.08	-----	-----	89.31	16.77	Peak
4	5725.000	65.61	68.22	-2.61	47.95	17.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5180MHz
Test BY :Bob

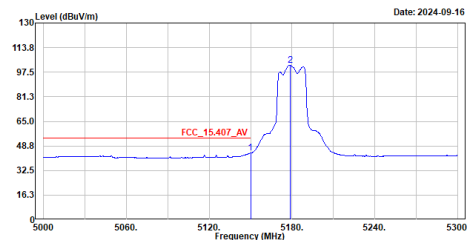

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	44.15	54.00	-9.85	28.42	15.73	Average
2	5178.500	102.21	-----	-----	86.42	15.79	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5180MHz
Test BY :Bob

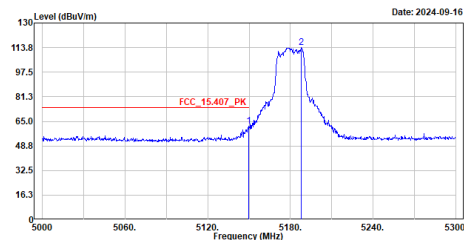

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.700	62.02	74.00	-11.98	46.29	15.73	Peak
2	5188.100	113.71	-----	-----	97.89	15.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5180MHz
Test BY :Bob

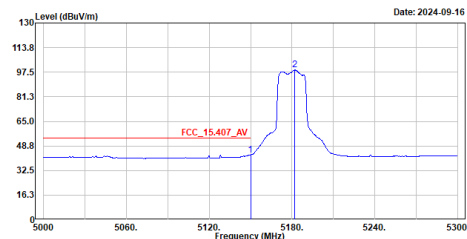

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	42.85	54.00	-11.15	27.12	15.73	Average
2	5181.800	98.89	-----	-----	83.08	15.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5180MHz
Test BY :Bob

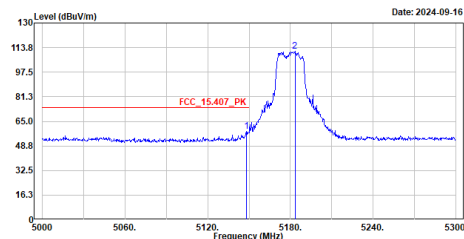

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.900	58.39	74.00	-15.61	42.66	15.73	Peak
2	5183.300	111.15	-----	-----	95.34	15.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5320MHz
Test BY :Bob

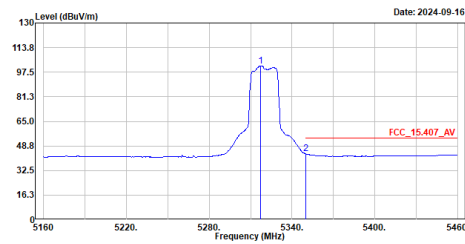


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5317.200	101.64	-----	-----	85.75	15.89	Average
2	5350.200	43.49	54.00	-10.51	27.43	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5320MHz
Test BY :Bob

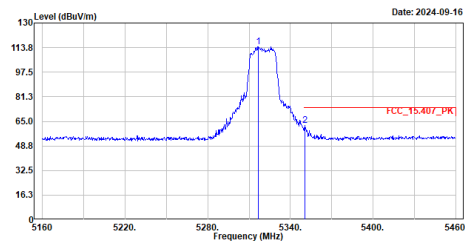


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5316.900	114.46	-----	-----	98.57	15.89	Peak
2	5350.500	62.06	74.00	-11.94	46.00	16.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5320MHz
Test BY :Bob

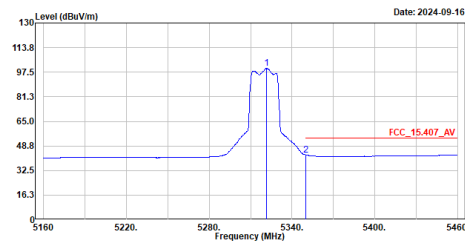


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5321.700	99.98	-----	-----	84.07	15.91	Average
2	5350.200	42.74	54.00	-11.26	26.68	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5320MHz
Test BY :Bob

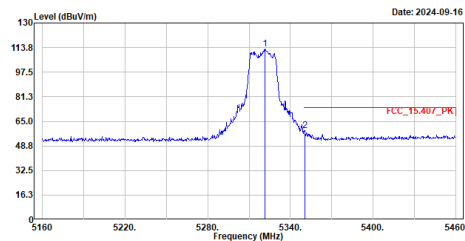


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5321.400	113.02	-----	-----	97.11	15.91	Peak
2	5350.500	58.84	74.00	-15.16	42.78	16.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5500MHz
Test BY :Bob

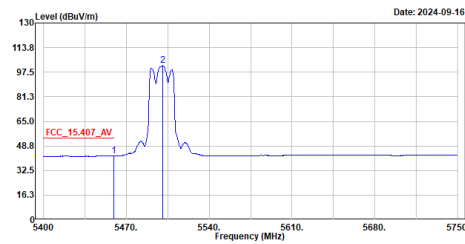


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
				dB	dBuV	dB/m	
1	5499.500	42.17	54.00	-11.83	25.73	16.44	Average
2	5500.800	101.80	-----	-----	85.36	16.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5500MHz
Test BY :Bob

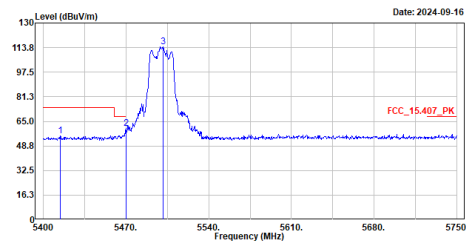


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
				dB	dBuV	dB/m	
1	5414.350	55.55	74.00	-18.45	39.22	16.33	Peak
2	5470.000	60.17	68.22	-8.05	43.72	16.45	Peak
3	5501.150	114.50	-----	-----	98.06	16.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5500MHz
Test BY :Bob

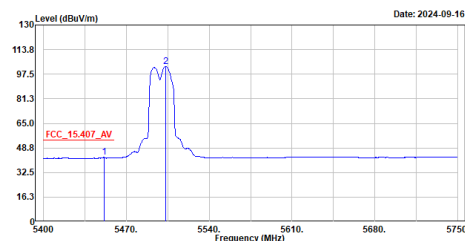


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
				dB	dBuV	dB/m	
1	5451.100	42.53	54.00	-11.47	26.10	16.43	Average
2	5503.250	102.44	-----	-----	85.99	16.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5500MHz
Test BY :Bob

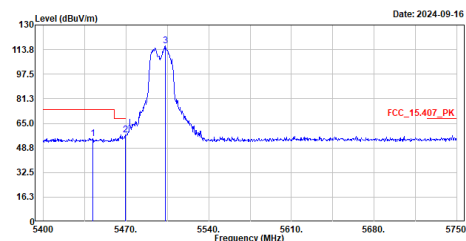


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
				dB	dBuV	dB/m	
1	5442.000	55.02	74.00	-18.98	38.60	16.42	Peak
2	5469.650	57.58	68.22	-10.64	41.13	16.45	Peak
3	5503.250	116.27	-----	-----	99.82	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5700MHz
Test BY :Bob

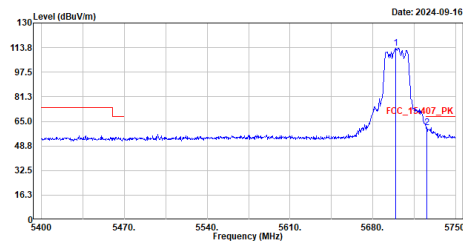


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5699.250	113.33	-----	-----	95.86	17.47	Peak
2	5725.850	60.91	68.22	-7.31	43.24	17.67	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5700MHz
Test BY :Bob

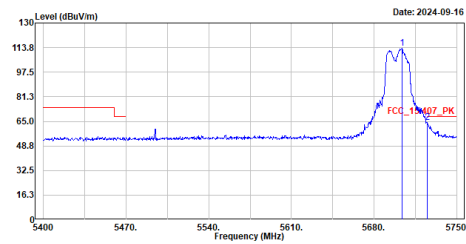


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5703.800	113.13	-----	-----	95.63	17.50	Peak
2	5725.150	64.06	68.22	-4.16	46.40	17.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5745MHz
Test BY :Bob

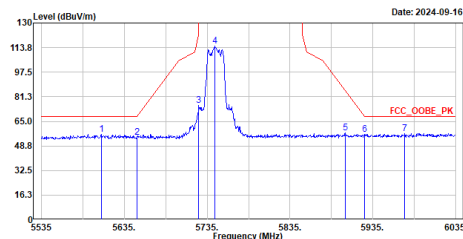


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5607.500	56.43	68.20	-11.77	39.33	17.10	Peak
2	5650.000	54.45	68.21	-13.76	37.26	17.19	Peak
3	5725.000	75.44	122.20	-46.76	57.78	17.66	Peak
4	5744.500	114.89	-----	-----	97.89	17.80	Peak
5	5901.500	57.19	85.59	-28.40	39.30	17.89	Peak
6	5925.000	56.44	68.21	-11.77	38.52	17.92	Peak
7	5973.500	57.15	68.20	-11.05	39.15	18.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5745MHz
Test BY :Bob

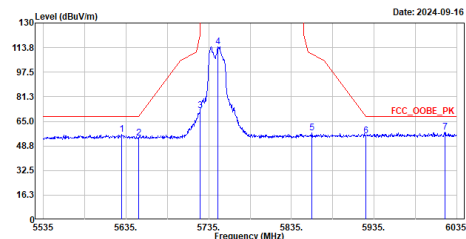


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5630.000	56.27	68.20	-11.93	39.12	17.15	Peak
2	5650.000	54.12	68.21	-14.09	36.93	17.19	Peak
3	5725.000	72.19	122.20	-50.01	54.53	17.66	Peak
4	5745.500	114.40	-----	-----	96.59	17.81	Peak
5	5860.000	57.60	109.40	-51.80	39.68	17.92	Peak
6	5925.000	55.67	68.21	-12.54	37.75	17.92	Peak
7	6020.500	57.84	68.20	-10.36	39.73	18.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax20_5825MHz
Test BY :Bob

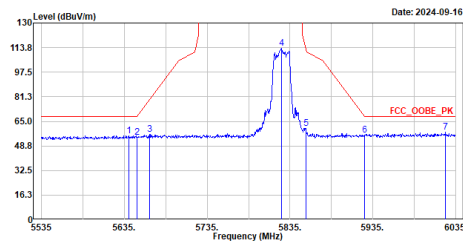


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5640.500	55.57	68.20	-12.63	38.40	17.17	Peak
2	5650.000	54.27	68.21	-13.94	37.08	17.19	Peak
3	5665.500	56.54	79.68	-23.14	39.29	17.25	Peak
4	5824.500	113.18	-----	-----	95.28	17.90	Peak
5	5854.000	60.53	113.08	-52.55	42.61	17.92	Peak
6	5925.000	55.79	68.21	-12.42	37.87	17.92	Peak
7	6023.000	57.78	68.20	-10.42	39.66	18.12	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax20_5825MHz
Test BY :Bob

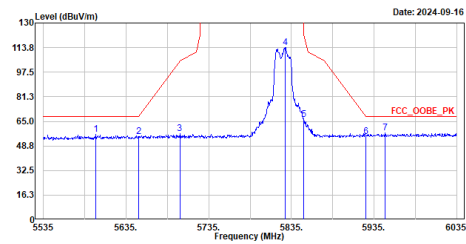


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5598.500	56.23	68.20	-11.97	39.15	17.08	Peak
2	5650.000	54.97	68.21	-13.24	37.78	17.19	Peak
3	5700.000	56.78	105.20	-48.42	39.31	17.47	Peak
4	5827.500	113.82	-----	-----	95.91	17.91	Peak
5	5850.000	66.15	122.20	-56.05	48.22	17.93	Peak
6	5925.000	54.98	68.21	-13.23	37.06	17.92	Peak
7	5948.500	57.36	68.20	-10.84	39.39	17.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5190MHz
Test BY :Ashton

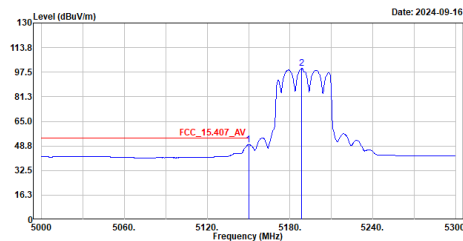


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	49.52	54.00	-4.48	33.79	15.73	Average
2	5188.400	99.86	-----	-----	84.04	15.82	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5190MHz
Test BY :Ashton

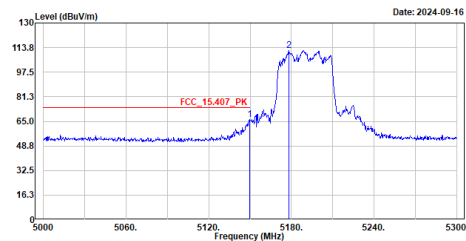


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.700	66.30	74.00	-7.70	50.57	15.73	Peak
2	5178.200	112.01	-----	-----	96.22	15.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5190MHz
Test BY :Ashton

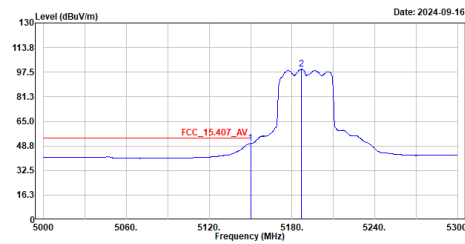


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5190.000	50.43	54.00	-3.57	34.70	15.73	Average
2	5186.900	99.36	-----	-----	83.55	15.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5190MHz
Test BY :Ashton

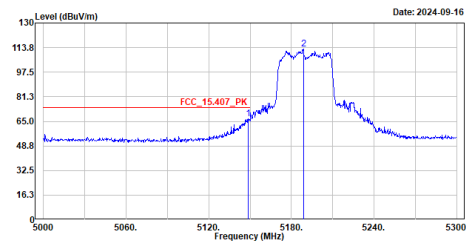


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5148.500	66.58	74.00	-7.42	50.85	15.73	Peak
2	5188.700	112.69	-----	-----	96.86	15.83	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5310MHz
Test BY :Ashton

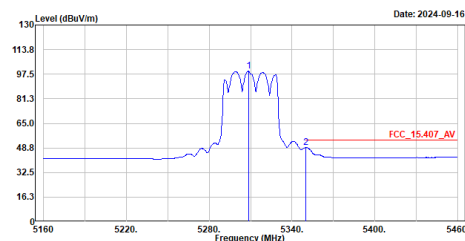


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5308.000	99.46	-----	-----	83.59	15.87	Average
2	5350.200	49.07	54.00	-4.93	33.01	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5310MHz
Test BY :Ashton

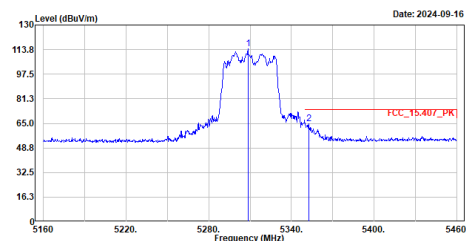


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5308.500	114.06	-----	-----	98.19	15.87	Peak
2	5352.600	64.80	74.00	-9.20	48.74	16.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5310MHz
Test BY :Ashton

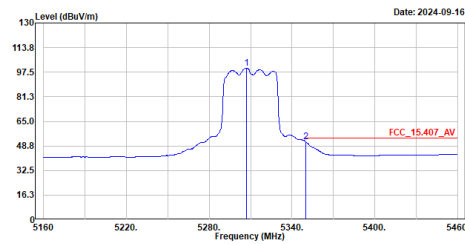


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5307.000	100.23	-----	-----	84.37	15.86	Average
2	5350.200	51.45	54.00	-2.55	35.39	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5310MHz
Test BY :Ashton

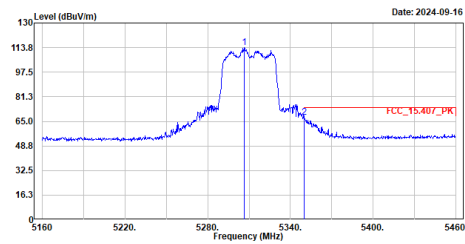


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5306.700	113.61	-----	-----	97.75	15.86	Peak
2	5350.200	67.81	74.00	-6.19	51.75	16.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5510MHz
Test BY :Ashton

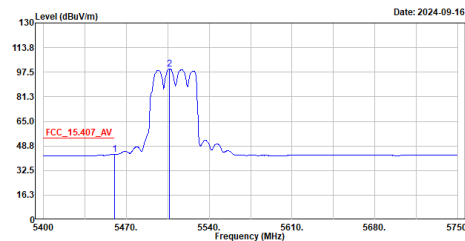


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	43.39	54.00	-10.61	26.95	16.44	Average
2	5506.400	99.83	-----	-----	83.37	16.46	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5510MHz
Test BY :Ashton

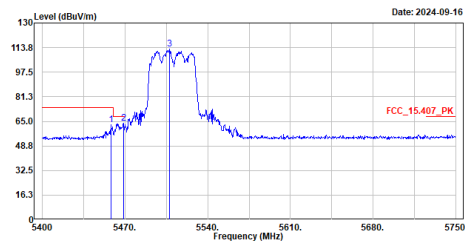


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.100	62.92	74.00	-11.08	46.48	16.44	Peak
2	5468.600	64.00	68.22	-4.22	47.56	16.44	Peak
3	5507.450	112.99	-----	-----	96.52	16.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5510MHz
Test BY :Ashton

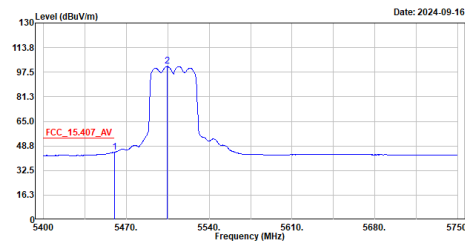


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	44.62	54.00	-9.38	28.18	16.44	Average
2	5504.300	101.31	-----	-----	84.86	16.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5510MHz
Test BY :Ashton

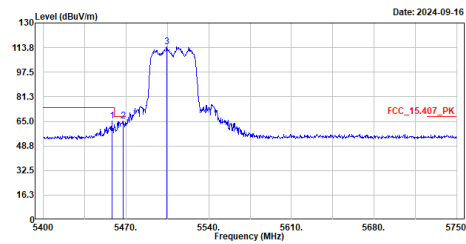


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.100	65.01	74.00	-8.99	48.57	16.44	Peak
2	5467.550	65.42	68.22	-2.80	48.98	16.44	Peak
3	5504.300	114.22	-----	-----	97.77	16.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5670MHz
Test BY :Ashton

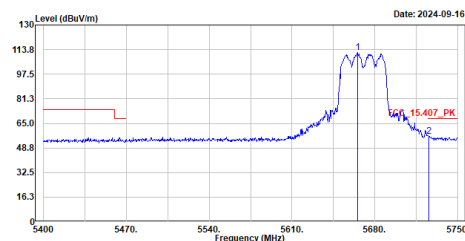


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5665.300	111.71	-----	-----	94.46	17.25	Peak
2	5725.500	56.53	68.22	-11.69	38.87	17.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5670MHz
Test BY :Ashton

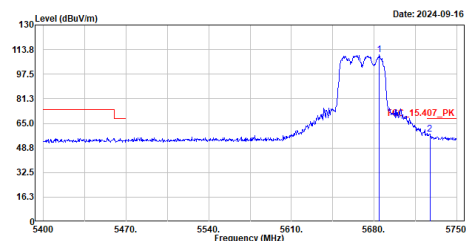


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5684.550	110.23	-----	-----	92.86	17.37	Peak
2	5727.250	58.07	68.22	-10.15	48.40	17.67	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5755MHz
Test BY :Ashton

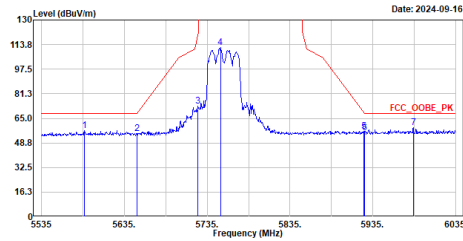


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5586.500	57.07	68.20	-11.13	48.03	17.04	Peak
2	5650.000	54.96	68.21	-13.25	37.77	17.19	Peak
3	5724.000	72.93	119.92	-46.99	55.28	17.65	Peak
4	5751.000	111.70	-----	-----	93.86	17.84	Peak
5	5924.000	56.50	68.95	-12.45	38.58	17.92	Peak
6	5925.000	55.29	68.21	-12.92	37.37	17.92	Peak
7	5984.000	58.64	68.20	-9.56	48.61	18.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5755MHz
Test BY :Ashton

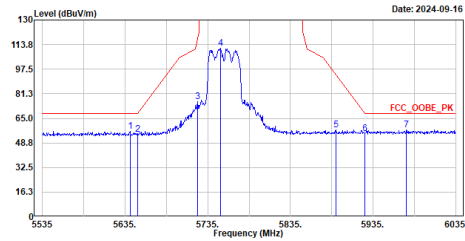


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5641.000	56.27	68.20	-11.93	39.10	17.17	Peak
2	5650.000	54.33	68.21	-13.88	37.14	17.19	Peak
3	5722.500	75.97	116.50	-40.53	58.33	17.64	Peak
4	5750.500	111.15	-----	-----	93.31	17.84	Peak
5	5890.000	57.45	94.10	-36.65	39.55	17.90	Peak
6	5925.000	55.04	68.21	-13.17	37.12	17.92	Peak
7	5975.500	57.49	68.20	-10.71	39.49	18.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax40_5795MHz
Test BY :Ashton

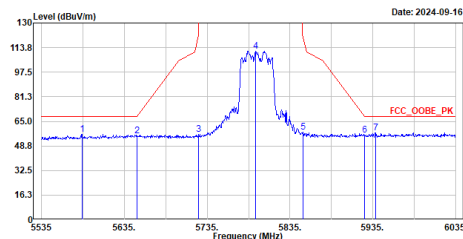


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5584.000	56.36	68.20	-11.84	39.34	17.02	Peak
2	5650.000	55.43	68.21	-12.78	38.24	17.19	Peak
3	5725.000	56.22	122.20	-65.98	38.56	17.66	Peak
4	5793.500	111.32	-----	-----	93.44	17.88	Peak
5	5850.500	57.75	121.06	-63.31	39.82	17.93	Peak
6	5925.000	55.82	68.21	-12.39	37.90	17.92	Peak
7	5938.500	57.35	68.20	-10.85	39.41	17.94	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax40_5795MHz
Test BY :Ashton

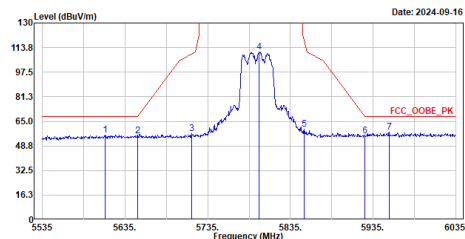


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5611.000	55.76	68.20	-12.44	38.65	17.11	Peak
2	5650.000	55.39	68.21	-12.82	38.20	17.19	Peak
3	5716.000	57.12	109.68	-52.56	39.52	17.60	Peak
4	5797.500	110.79	-----	-----	92.91	17.88	Peak
5	5851.500	59.67	118.78	-59.11	41.74	17.93	Peak
6	5925.000	55.53	68.21	-12.68	37.61	17.92	Peak
7	5954.500	57.70	68.20	-10.50	39.73	17.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5210MHz
Test BY :Bob

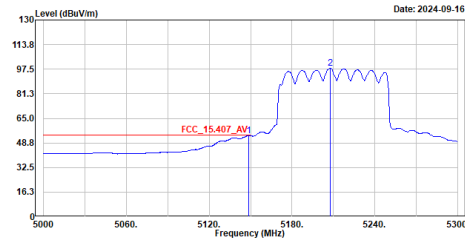


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5148.500	53.48	54.00	-0.52	37.75	15.73	Average
2	5207.900	98.07	-----	-----	82.21	15.86	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5210MHz
Test BY :Bob

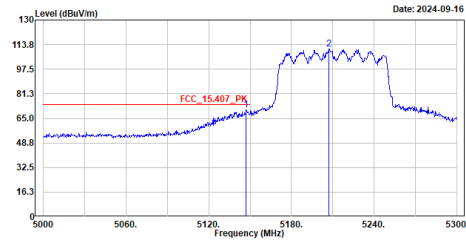


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5147.300	70.48	74.00	-3.52	54.74	15.74	Peak
2	5207.000	111.03	-----	-----	95.17	15.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5210MHz
Test BY :Bob

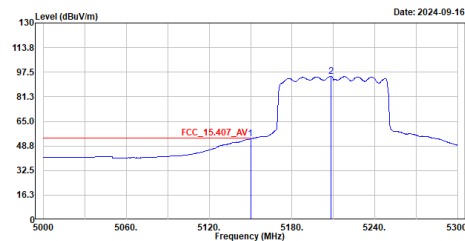


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	53.31	54.00	-0.69	37.58	15.73	Average
2	5208.200	94.61	-----	-----	78.75	15.86	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5210MHz
Test BY :Bob

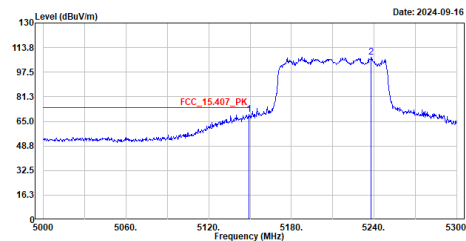


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5149.400	69.84	74.00	-4.16	54.11	15.73	Peak
2	5237.900	107.36	-----	-----	91.49	15.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5290MHz
Test BY :Bob

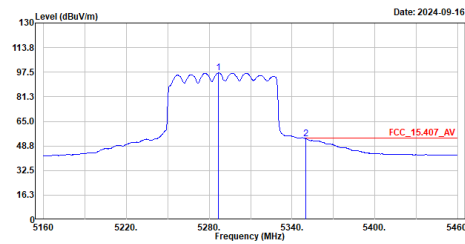


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5286.900	96.95	-----	-----	81.09	15.86	Average
2	5350.200	53.43	54.00	-0.57	37.37	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5290MHz
Test BY :Bob

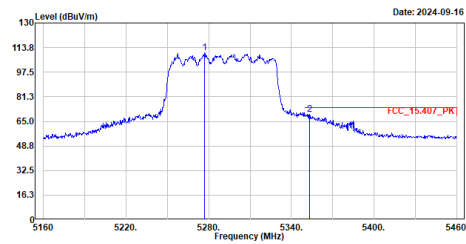


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5277.000	110.24	-----	-----	94.37	15.87	Peak
2	5353.200	69.76	74.00	-4.24	53.70	16.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5290MHz
Test BY :Bob

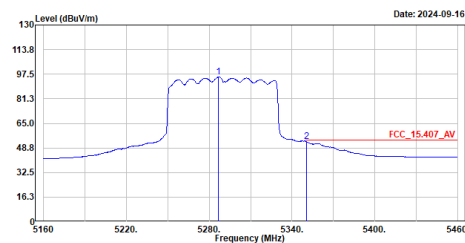


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5286.900	95.52	-----	-----	79.66	15.86	Average
2	5350.500	52.95	54.00	-1.05	36.89	16.06	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5290MHz
Test BY :Bob

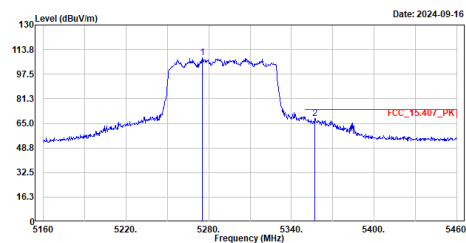


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5275.500	108.34	-----	-----	92.48	15.86	Peak
2	5357.100	67.96	74.00	-6.04	51.88	16.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5530MHz
Test BY :Bob

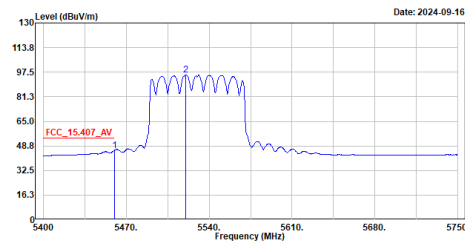


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	45.82	54.00	-8.18	29.38	16.44	Average
2	5520.050	95.75	-----	-----	79.19	16.56	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5530MHz
Test BY :Bob

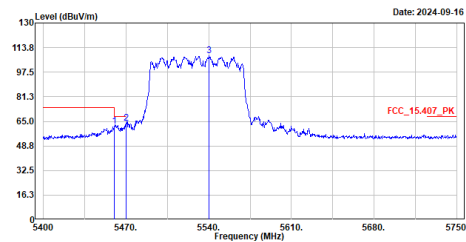


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	62.05	74.00	-11.95	45.61	16.44	Peak
2	5470.000	63.57	68.22	-4.65	47.12	16.45	Peak
3	5540.350	108.33	-----	-----	91.63	16.70	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5530MHz
Test BY :Bob

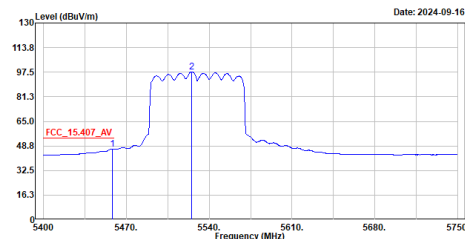


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.100	46.77	54.00	-7.23	30.33	16.44	Average
2	5525.300	97.68	-----	-----	81.08	16.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5530MHz
Test BY :Bob

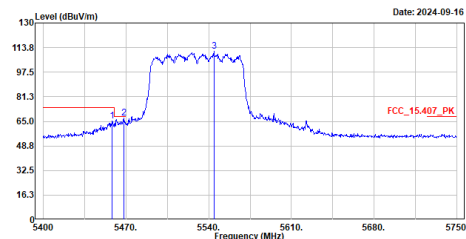


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.450	65.26	74.00	-8.74	48.82	16.44	Peak
2	5467.900	67.45	68.22	-0.77	51.01	16.44	Peak
3	5544.550	111.15	-----	-----	94.41	16.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5610MHz
Test BY :Bob

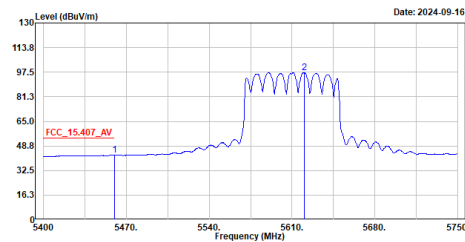


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	42.56	54.00	-11.44	26.12	16.44	Average
2	5620.500	97.15	-----	-----	80.02	17.13	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5610MHz
Test BY :Bob

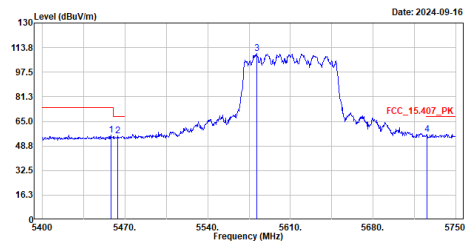


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.100	55.89	74.00	-18.11	39.45	16.44	Peak
2	5464.050	55.39	68.22	-12.83	38.94	16.45	Peak
3	5581.300	109.98	-----	-----	92.98	17.00	Peak
4	5725.500	56.39	68.22	-11.83	38.73	17.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5610MHz
Test BY :Bob

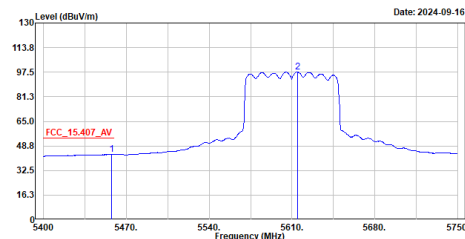


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.750	43.09	54.00	-10.91	26.65	16.44	Average
2	5614.900	97.61	-----	-----	80.49	17.12	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5610MHz
Test BY :Bob

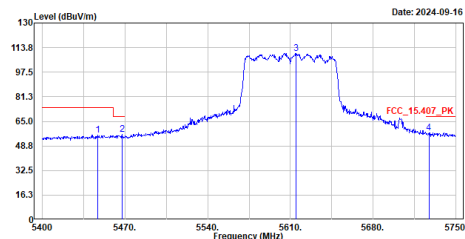


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5446.900	55.94	74.00	-18.06	39.50	16.44	Peak
2	5467.550	56.57	68.22	-11.65	40.13	16.44	Peak
3	5614.550	110.04	-----	-----	92.92	17.12	Peak
4	5727.250	57.59	68.22	-10.63	39.92	17.67	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5775MHz
Test BY :Bob

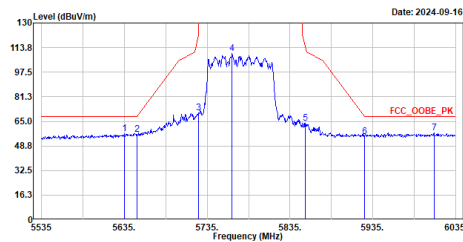


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5635.500	57.10	68.20	-11.10	39.94	17.16	Peak
2	5650.000	56.46	68.21	-11.75	39.27	17.19	Peak
3	5724.500	70.52	121.06	-50.54	52.86	17.66	Peak
4	5765.000	109.85	-----	-----	92.00	17.85	Peak
5	5853.500	63.90	114.22	-50.32	45.98	17.92	Peak
6	5925.000	55.05	68.21	-13.16	37.13	17.92	Peak
7	6009.000	57.19	68.20	-11.01	39.11	18.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5775MHz
Test BY :Bob

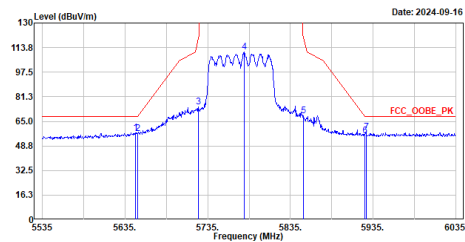


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5647.500	57.51	68.20	-10.69	40.32	17.19	Peak
2	5650.000	56.69	68.21	-11.52	39.50	17.19	Peak
3	5723.500	74.50	118.78	-44.28	56.85	17.65	Peak
4	5779.000	110.74	-----	-----	92.88	17.86	Peak
5	5850.500	68.75	121.06	-52.31	50.82	17.93	Peak
6	5925.000	55.40	68.21	-12.81	37.48	17.92	Peak
7	5926.500	57.87	68.20	-10.33	39.94	17.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax160_5570MHz
Test BY :Bob

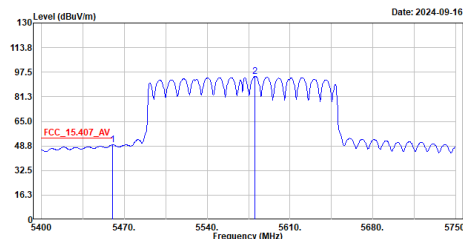


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.850	49.45	54.00	-4.55	33.01	16.44	Average
2	5580.600	94.76	-----	-----	77.77	16.99	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax160_5570MHz
Test BY :Bob

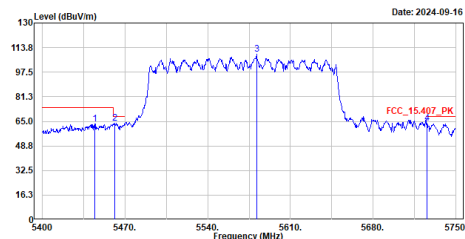


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5444.100	63.23	74.00	-10.77	46.79	16.44	Peak
2	5461.250	63.86	68.22	-4.36	47.42	16.44	Peak
3	5581.300	109.26	-----	-----	92.26	17.00	Peak
4	5725.850	63.87	68.22	-4.35	46.20	17.67	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax160_5570MHz
Test BY :Bob

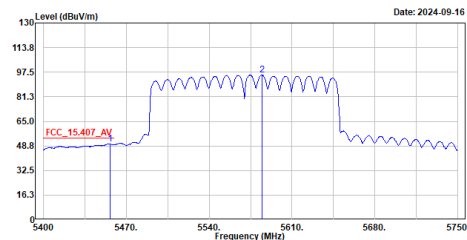


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.000	50.24	54.00	-3.76	33.80	16.44	Average
2	5584.800	95.54	-----	-----	78.52	17.02	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax160_5570MHz
Test BY :Bob

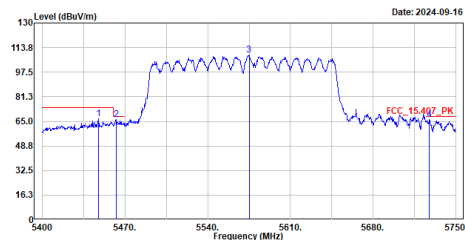


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5447.600	66.48	74.00	-7.52	50.04	16.44	Peak
2	5462.300	66.21	68.22	-2.01	49.77	16.44	Peak
3	5575.000	108.68	-----	-----	91.72	16.96	Peak
4	5727.600	65.99	68.22	-2.23	48.31	17.68	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Appendix F. Test Result of Radiated Emissions Co-location

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_ax80_5210MHz+bt1M_2402MHz_LTEB25_20M_QPSK_1R80_CH26365
Test BY :Bob

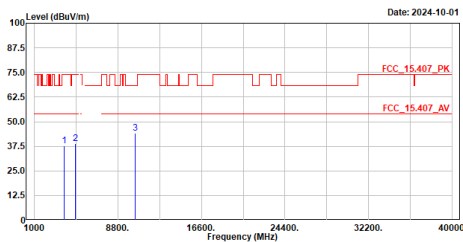


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	3765.000	37.66	74.00	-36.34	56.44	-18.78	Peak
2	4804.000	38.86	74.00	-35.14	53.08	-14.22	Peak
3	10420.000	44.18	68.22	-24.04	48.41	-4.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_ax80_5210MHz+bt1M_2402MHz_LTEB25_20M_QPSK_1R80_CH26365
Test BY :Bob

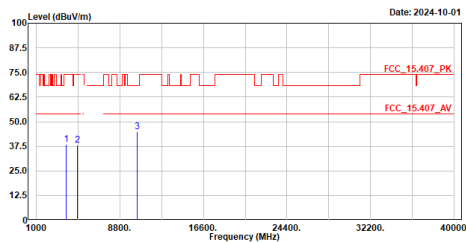


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	3765.000	38.37	74.00	-35.63	57.15	-18.78	Peak
2	4804.000	38.03	74.00	-35.97	52.25	-14.22	Peak
3	10420.000	44.93	68.22	-23.29	49.16	-4.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_g_2412MHz+bt1M_2402MHz_5GHR_n14_10M_CH152600
Test BY :Ashton

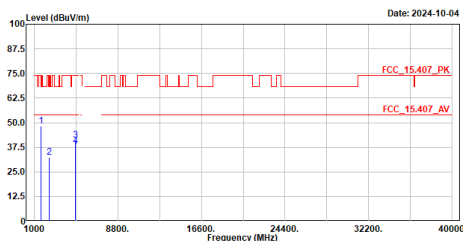


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	1586.000	48.22	74.00	-25.78	73.69	-25.47	Peak
2	2379.000	32.28	74.00	-41.72	55.59	-23.31	Peak
3	4804.000	41.31	74.00	-32.69	55.53	-14.22	Peak
4	4824.000	38.09	74.00	-35.91	52.16	-14.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_g_2412MHz+bt1M_2402MHz_5GHR_n14_10M_CH152600
Test BY :Ashton

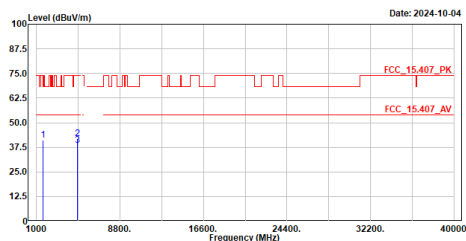


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	1586.000	41.05	74.00	-32.95	66.52	-25.47	Peak
2	4804.000	42.04	74.00	-31.96	56.26	-14.22	Peak
3	4824.000	38.46	74.00	-35.54	52.53	-14.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_g_2412MHz+bt1M_2402MHz_LTEB26_15M_QPSK_1RB0_CH26865
Test BY :Bob

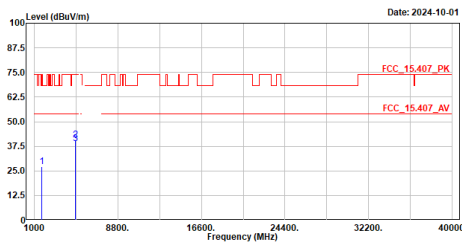


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	1663.000	27.36	74.00	-46.64	52.68	-25.32	Peak
2	4804.000	40.77	74.00	-33.23	54.99	-14.22	Peak
3	4824.000	38.79	74.00	-35.21	52.86	-14.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Vertical
Mode :TX_g_2412MHz+bt1M_2402MHz_LTEB26_15M_QPSK_1RB0_CH26865
Test BY :Bob

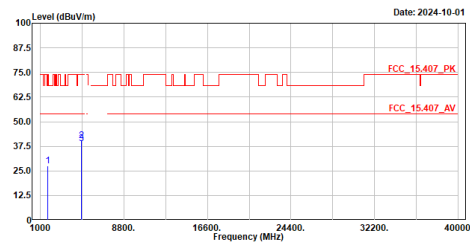


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	1663.000	27.46	74.00	-46.54	52.78	-25.32	Peak
2	4804.000	40.55	74.00	-33.45	54.77	-14.22	Peak
3	4824.000	38.97	74.00	-35.03	53.04	-14.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB03
Condition :3m Horizontal
Mode :TX_av80_5210MHz+bt1M_2402MHz_5GNR_n48_40M_CH641666
Test BY :Ashton

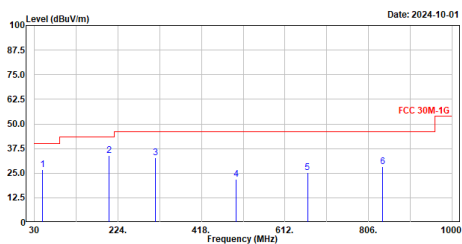


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	48.430	26.76	40.00	-13.24	49.95	-23.19	QP
2	202.660	33.89	43.50	-9.61	60.47	-26.58	QP
3	310.330	32.78	46.00	-13.22	55.38	-22.60	QP
4	498.510	22.00	46.00	-24.00	39.91	-17.91	QP
5	664.380	25.19	46.00	-20.81	39.72	-14.53	QP
6	838.980	28.27	46.00	-17.73	40.28	-12.01	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB03
Condition :3m Vertical
Mode :TX_av80_5210MHz+bt1M_2402MHz_5GNR_n48_40M_CH641666
Test BY :Ashton

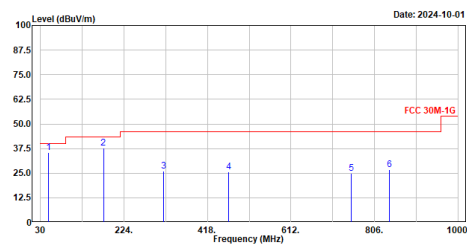


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	48.430	35.58	40.00	-4.42	58.77	-23.19	QP
2	176.470	37.59	43.50	-5.91	62.48	-24.89	QP
3	316.150	26.22	46.00	-19.78	48.59	-22.37	QP
4	467.470	25.70	46.00	-20.30	44.06	-18.36	QP
5	752.650	25.02	46.00	-20.98	38.01	-12.99	QP
6	840.920	26.78	46.00	-19.22	38.75	-11.97	QP

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

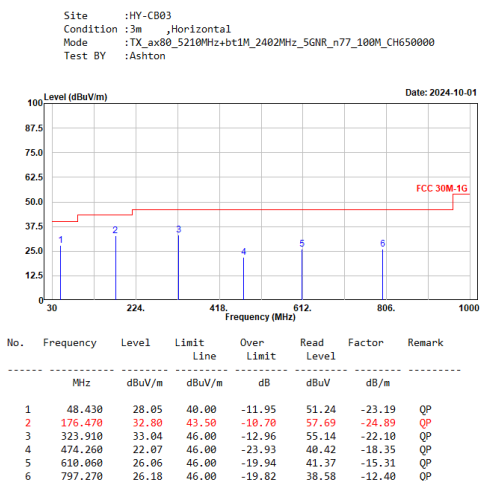


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

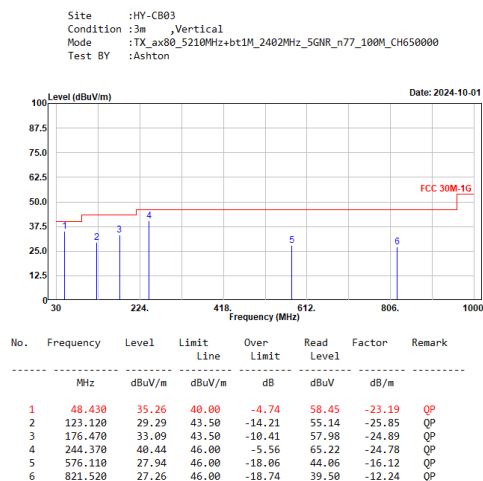


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

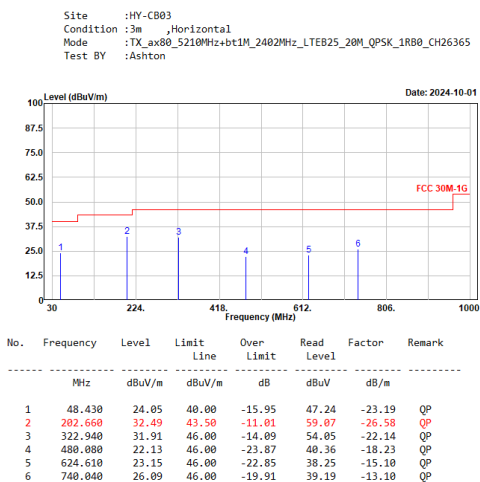


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

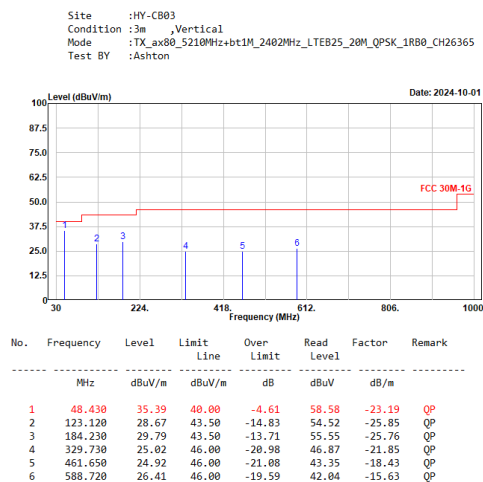


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

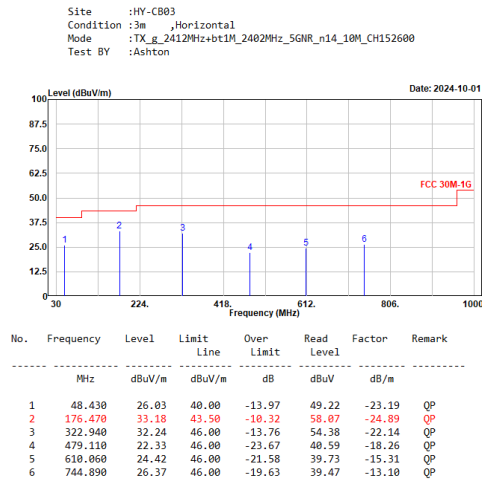


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

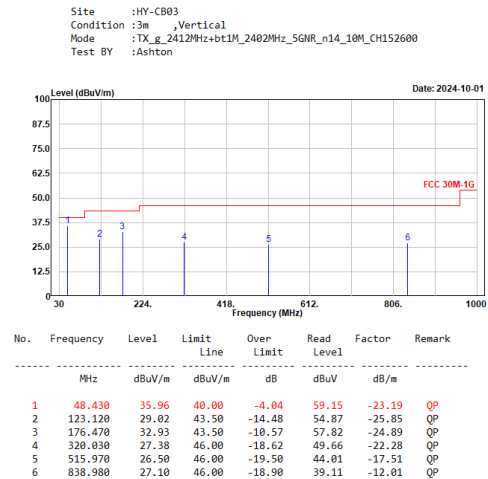

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

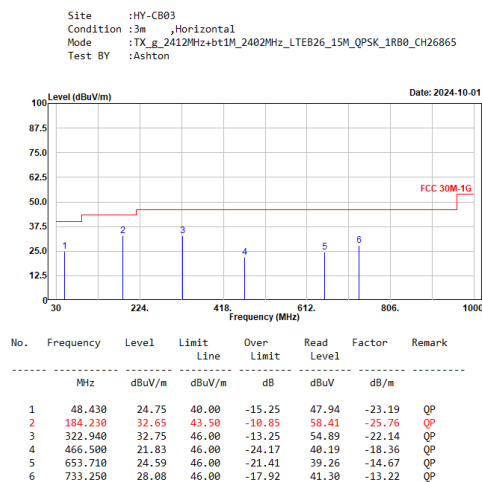

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

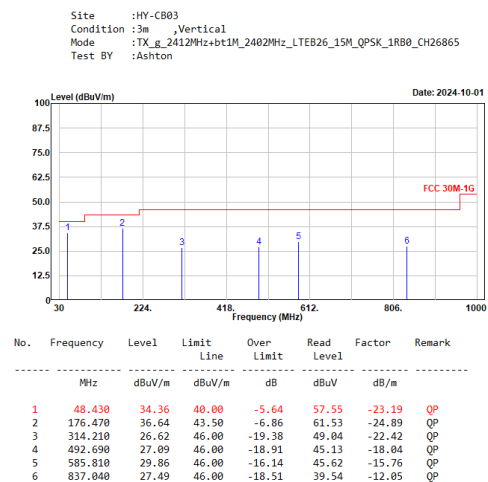

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.