



Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5500MHz
TEST BY :Peter

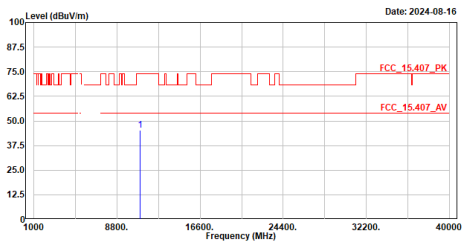

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11000.000	45.38	74.00	-28.62	53.85	-8.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5500MHz
TEST BY :Peter

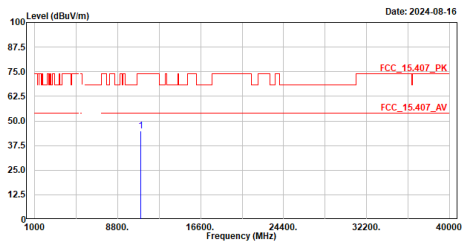

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11000.000	44.84	74.00	-29.16	53.31	-8.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5500MHz
TEST BY :Peter

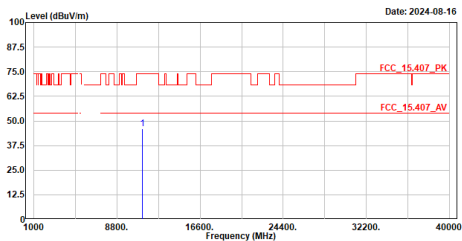

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11160.000	46.06	74.00	-27.94	53.85	-7.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5500MHz
TEST BY :Peter

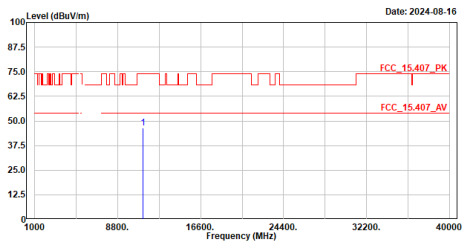

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11160.000	46.42	74.00	-27.58	54.21	-7.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5700MHz
TEST BY :Peter

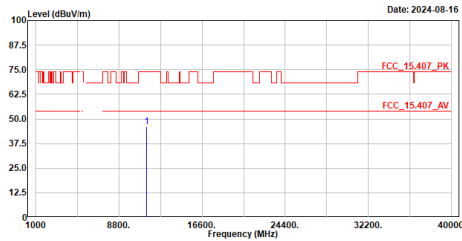


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	45.97	74.00	-28.03	53.18	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5700MHz
TEST BY :Peter

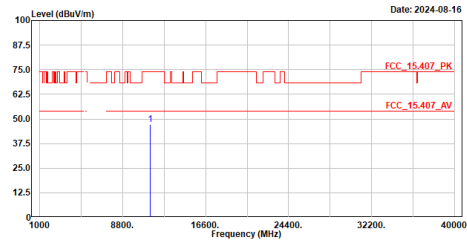


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	47.09	74.00	-26.91	54.30	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5720MHz
TEST BY :Peter

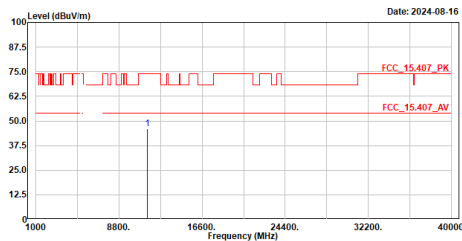


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11440.000	45.98	74.00	-28.02	53.12	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5720MHz
TEST BY :Peter

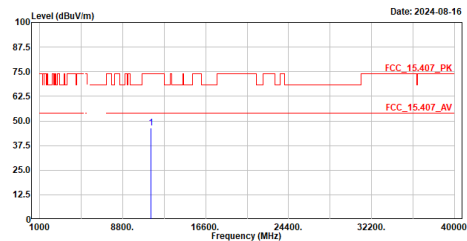


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11440.000	46.43	74.00	-27.57	53.57	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
TEST BY :Peter

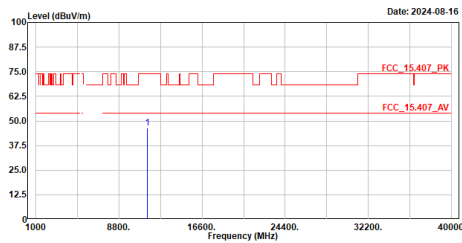


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	46.44	74.00	-27.56	53.54	-7.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
TEST BY :Peter

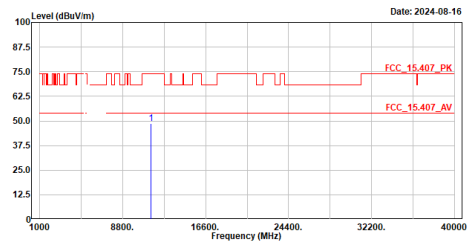


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	48.49	74.00	-25.51	55.59	-7.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5785MHz
TEST BY :Peter

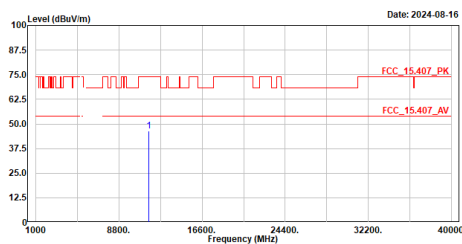


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	46.39	74.00	-27.61	53.58	-7.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5785MHz
TEST BY :Peter

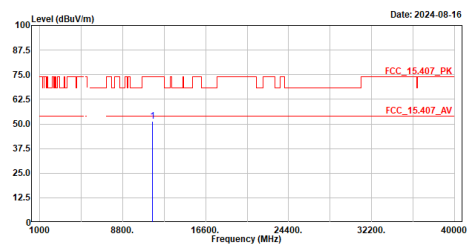


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	51.14	74.00	-22.86	58.33	-7.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5625MHz
TEST BY :Peter

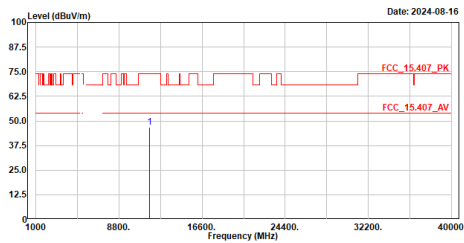


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	46.80	74.00	-27.20	53.98	-7.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5625MHz
TEST BY :Peter

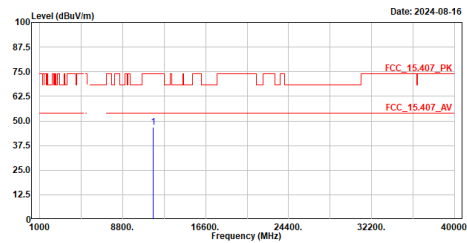


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	46.65	74.00	-27.35	53.83	-7.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz
TEST BY :Peter

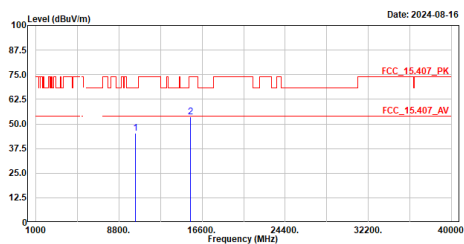


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10360.000	45.28	68.22	-22.94	54.52	-9.24	Peak
2	15540.000	53.64	74.00	-20.36	54.93	-1.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz
TEST BY :Peter

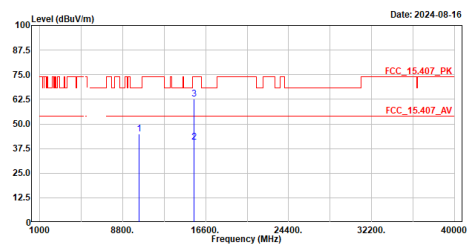


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10360.000	45.08	68.22	-23.14	54.32	-9.24	Peak
2	15540.000	40.92	54.00	-13.08	42.21	-1.29	Average
3	15540.000	62.49	74.00	-11.51	63.78	-1.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5220MHz
TEST BY :Peter

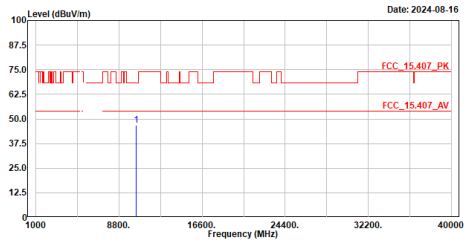


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10440.000	46.89	68.22	-21.33	56.26	-9.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5220MHz
TEST BY :Peter

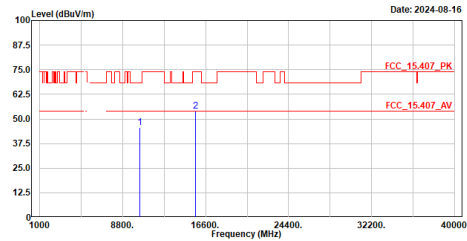


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10440.000	45.53	68.22	-22.69	54.90	-9.37	Peak
2	15660.000	53.84	74.00	-20.16	55.03	-1.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5240MHz
TEST BY :Peter

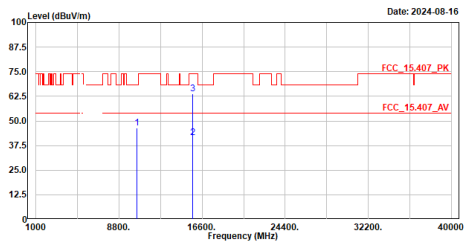


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10480.000	46.56	68.22	-21.66	55.89	-9.33	Peak
2	15720.000	41.55	54.00	-12.45	42.63	-1.08	Average
3	15720.000	63.80	74.00	-10.20	64.88	-1.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5240MHz
TEST BY :Peter

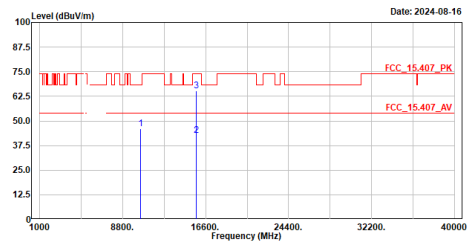


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10480.000	45.99	68.22	-22.23	55.32	-9.33	Peak
2	15720.000	42.55	54.00	-11.45	43.63	-1.08	Average
3	15720.000	65.20	74.00	-8.80	66.28	-1.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5260MHz
TEST BY :Peter

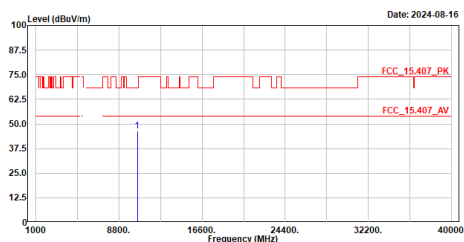


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	46.46	68.22	-21.76	55.71	-9.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5260MHz
TEST BY :Peter

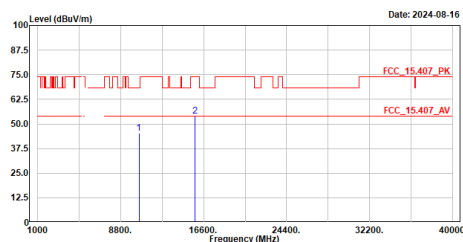


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	45.16	68.22	-23.06	54.41	-9.25	Peak
2	15780.000	53.93	74.00	-20.07	55.04	-1.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5300MHz
TEST BY :Peter

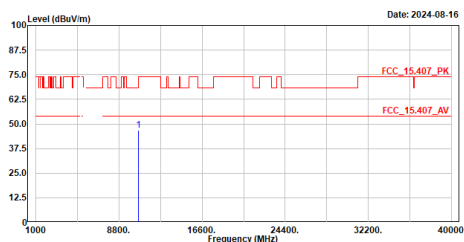


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	46.87	74.00	-27.13	55.69	-8.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5300MHz
TEST BY :Peter

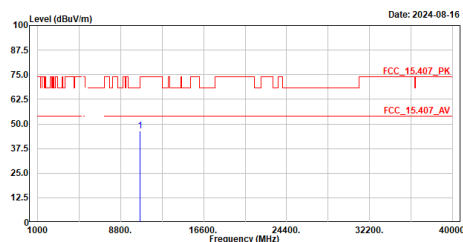


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	46.47	74.00	-27.53	55.29	-8.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz
TEST BY :Peter

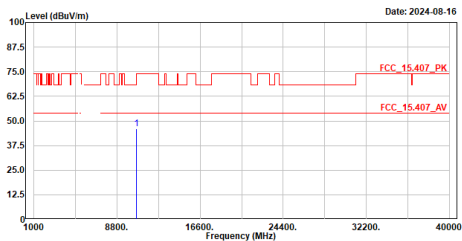

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	45.88	74.00	-28.12	54.78	-8.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz
TEST BY :Peter

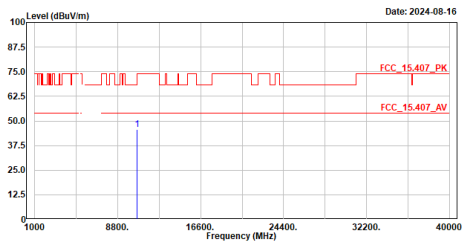

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	45.67	74.00	-28.33	54.57	-8.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz
TEST BY :Peter

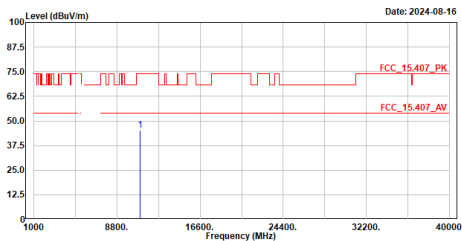

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	45.28	74.00	-28.72	53.75	-8.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz
TEST BY :Peter

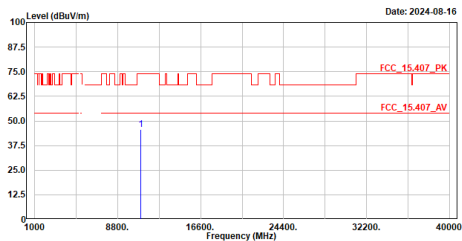

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	45.53	74.00	-28.47	54.00	-8.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5580MHz
TEST BY :Peter

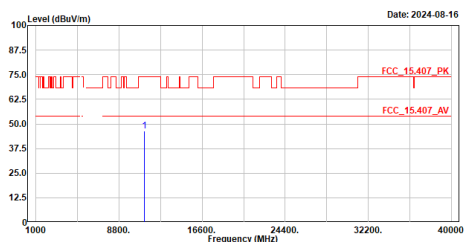


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	46.39	74.00	-27.61	54.18	-7.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5580MHz
TEST BY :Peter

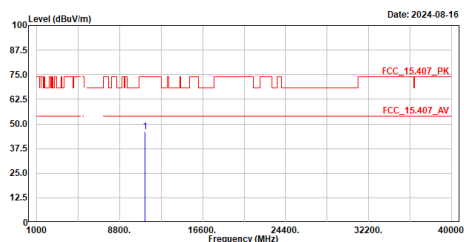


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	46.20	74.00	-27.80	53.99	-7.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz
TEST BY :Peter

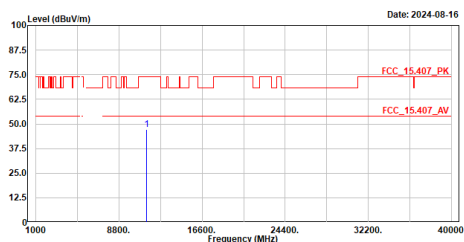


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	47.26	74.00	-26.74	54.47	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz
TEST BY :Peter

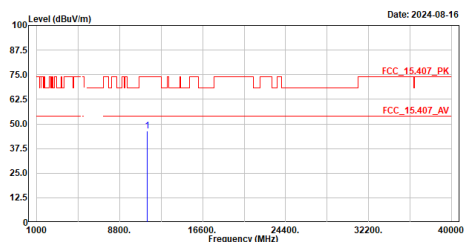


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	46.38	74.00	-27.62	53.59	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5720MHz
TEST BY :Peter

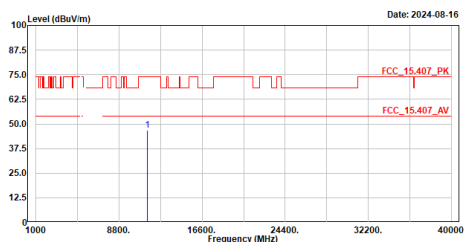


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11440.000	46.61	74.00	-27.39	53.75	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5720MHz
TEST BY :Peter

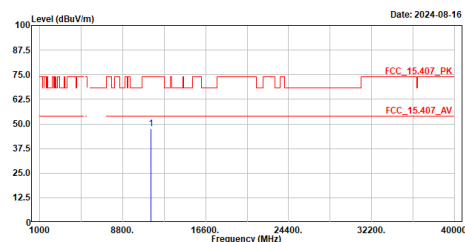


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11440.000	47.64	74.00	-26.36	54.78	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz
TEST BY :Peter

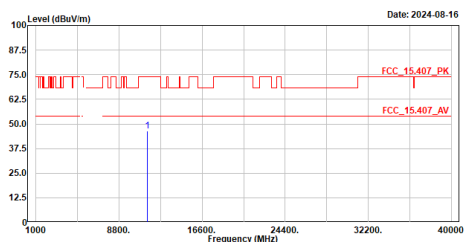


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	46.41	74.00	-27.59	53.51	-7.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz
TEST BY :Peter

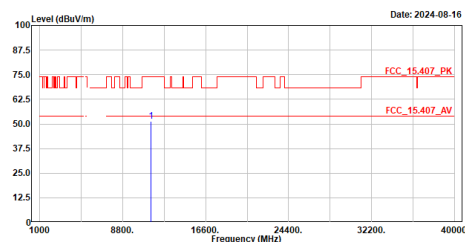


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	51.17	74.00	-22.83	58.27	-7.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5785MHz
TEST BY :Peter

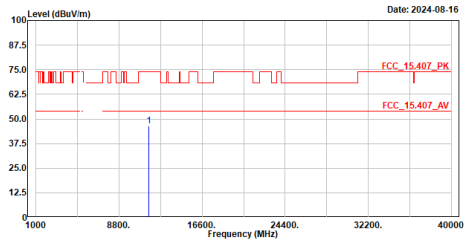


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	46.52	74.00	-27.48	53.71	-7.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5785MHz
TEST BY :Peter

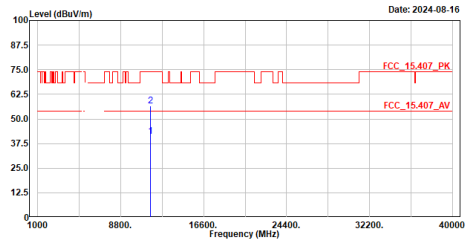


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	41.08	54.00	-12.92	48.27	-7.19	Average
2	11570.000	56.66	74.00	-17.34	63.85	-7.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5825MHz
TEST BY :Peter

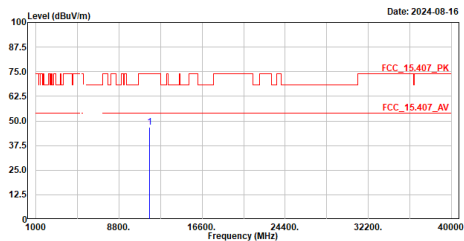


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	46.78	74.00	-27.22	53.96	-7.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5825MHz
TEST BY :Peter

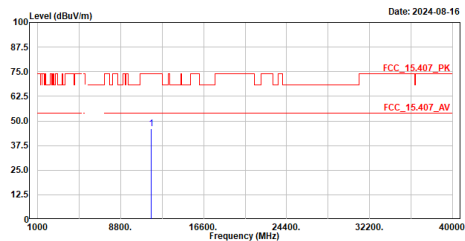


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	46.08	74.00	-27.92	53.26	-7.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Peter

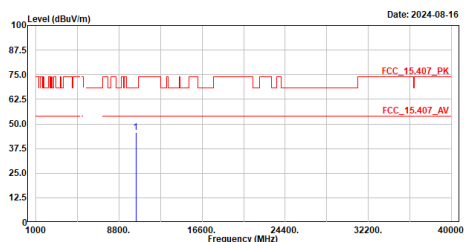


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	45.71	68.22	-22.51	55.03	-9.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Peter

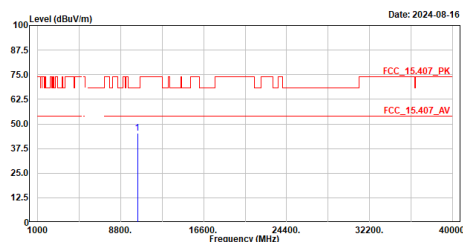


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	45.39	68.22	-22.83	54.71	-9.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz
TEST BY :Peter

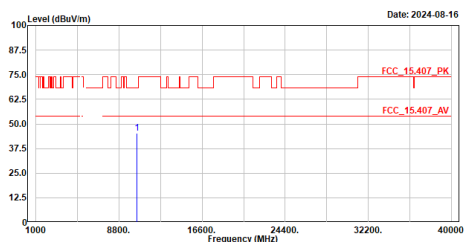


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	45.23	68.22	-22.99	54.58	-9.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5230MHz
TEST BY :Peter

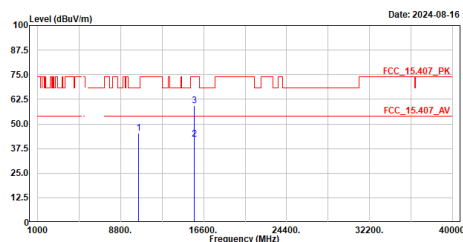


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	45.18	68.22	-23.04	54.53	-9.35	Peak
2	15690.000	42.16	54.00	-11.84	43.31	-1.15	Average
3	15690.000	59.27	74.00	-14.73	60.42	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5270MHz
TEST BY :Peter

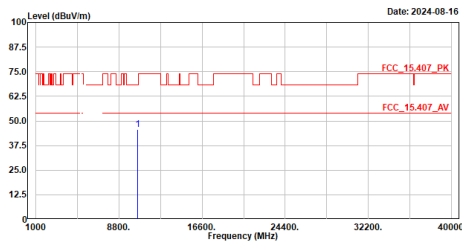


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	45.52	68.22	-22.70	54.66	-9.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5270MHz
TEST BY :Peter

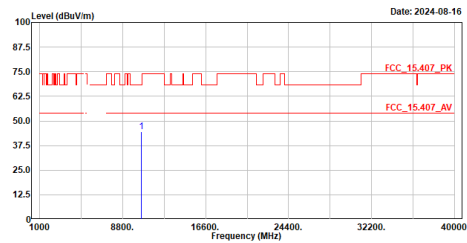


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10540.000	44.63	68.22	-23.59	53.77	-9.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz
TEST BY :Peter

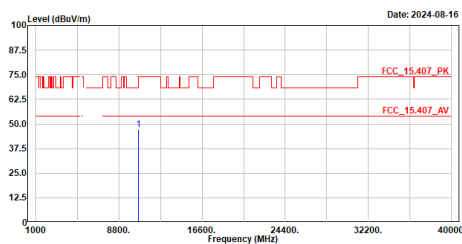


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10620.000	47.17	74.00	-26.83	56.02	-8.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz
TEST BY :Peter

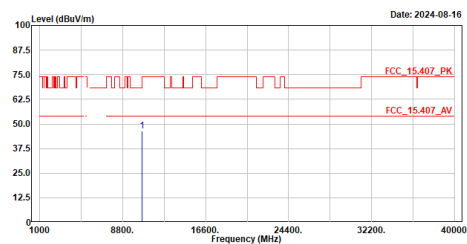


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10620.000	46.58	74.00	-27.42	55.43	-8.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Peter

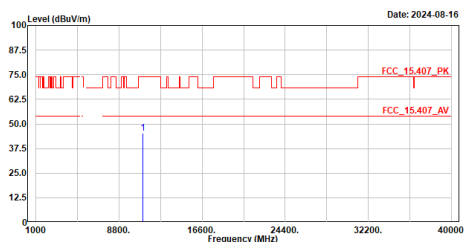


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	45.31	74.00	-28.69	53.67	-8.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Peter

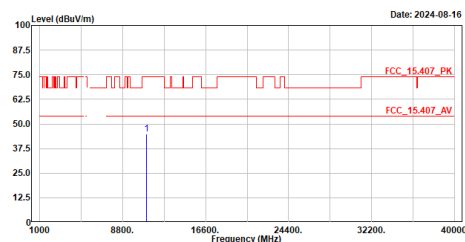


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	44.97	74.00	-29.03	53.33	-8.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5550MHz
TEST BY :Peter

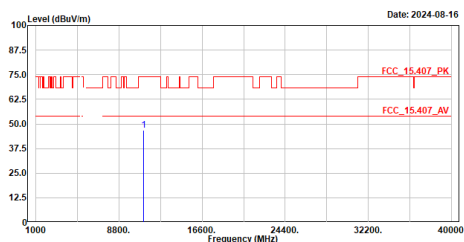


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	46.61	74.00	-27.39	54.60	-7.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5550MHz
TEST BY :Peter

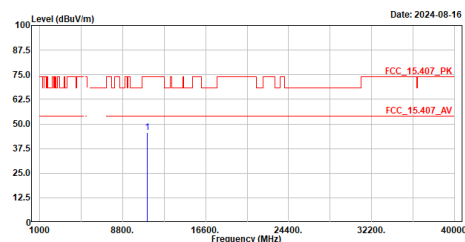


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	45.74	74.00	-28.26	53.73	-7.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5670MHz
TEST BY :Peter

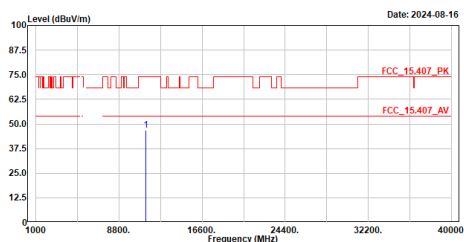


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	46.64	74.00	-27.36	54.00	-7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5670MHz
TEST BY :Peter

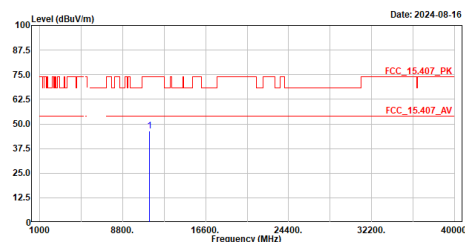


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	46.57	74.00	-27.43	53.93	-7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5710MHz
TEST BY :Peter

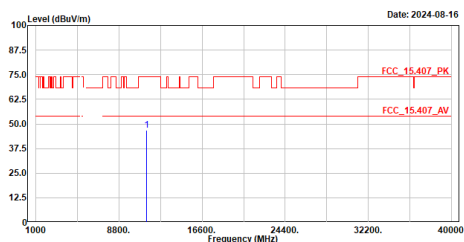


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11420.000	46.69	74.00	-27.31	53.86	-7.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5710MHz
TEST BY :Peter

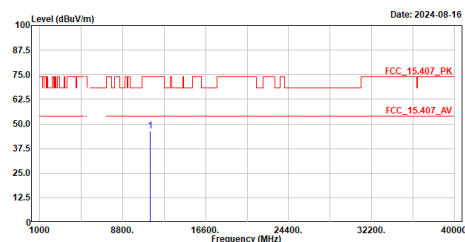


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11420.000	46.59	74.00	-27.41	53.76	-7.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5755MHz
TEST BY :Peter

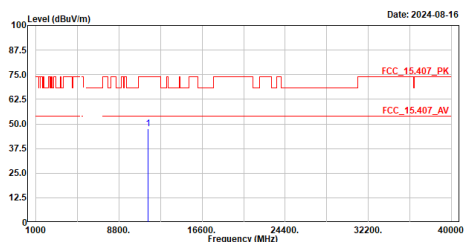


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	47.45	74.00	-26.55	54.56	-7.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5755MHz
TEST BY :Peter

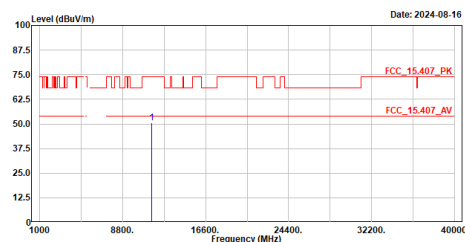


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	50.64	74.00	-23.36	57.75	-7.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5795MHz
TEST BY :Peter

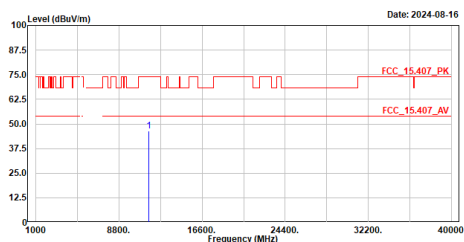


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	46.46	74.00	-27.54	53.70	-7.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5795MHz
TEST BY :Peter

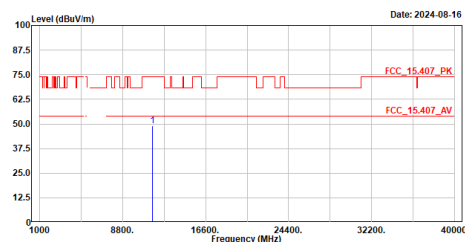


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	49.13	74.00	-24.87	56.37	-7.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

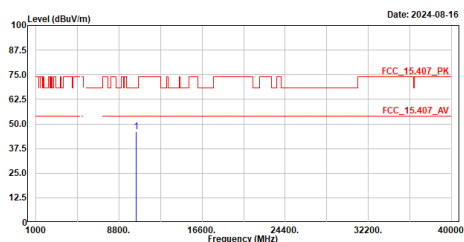


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	46.16	68.22	-22.06	55.54	-9.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

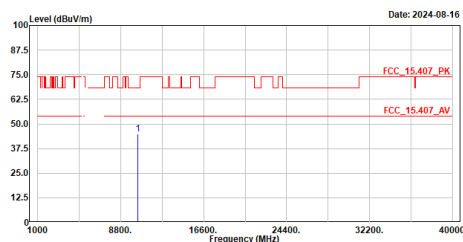


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10420.000	44.98	68.22	-23.24	54.36	-9.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

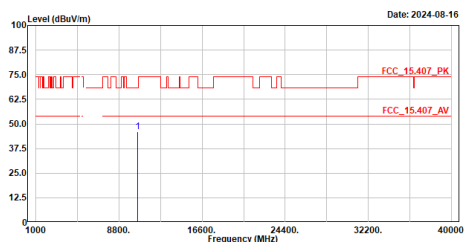


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	46.20	68.22	-22.02	55.13	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

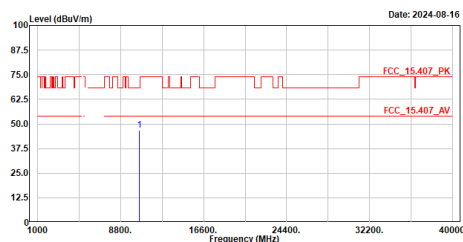


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	46.66	68.22	-21.56	55.59	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

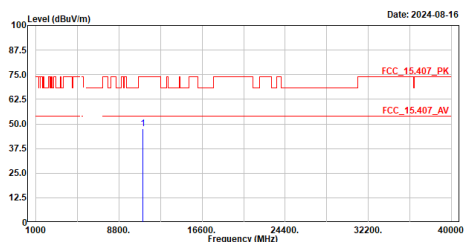


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	47.47	74.00	-26.53	55.62	-8.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

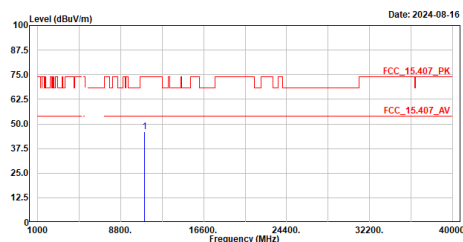


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	45.96	74.00	-28.04	54.11	-8.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5610MHz
TEST BY :Caster

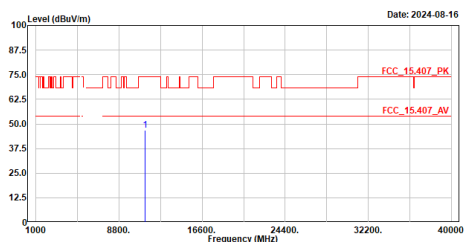


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	46.93	74.00	-27.07	54.46	-7.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5610MHz
TEST BY :Caster

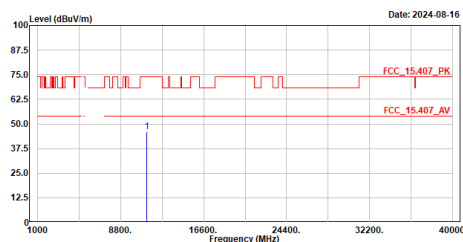


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	46.14	74.00	-27.86	53.67	-7.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5690MHz
TEST BY :Caster

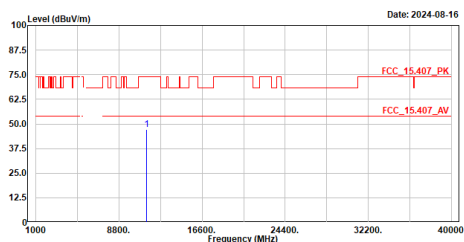


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	47.14	74.00	-26.86	54.40	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5690MHz
TEST BY :Caster

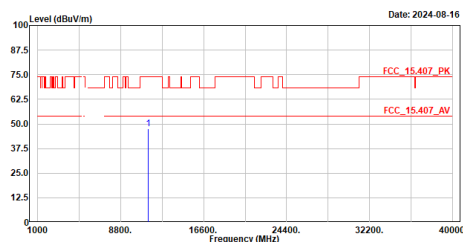


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	47.65	74.00	-26.35	54.91	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

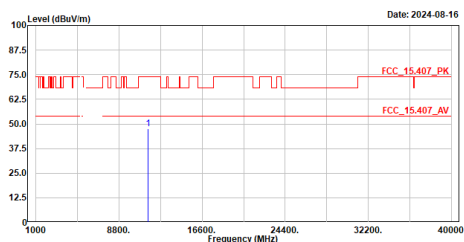


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	47.38	74.00	-26.62	54.52	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

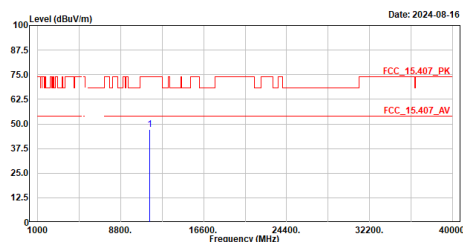


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	47.33	74.00	-26.67	54.47	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

DC Power Supply mode


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_au80_5775MHz
TEST BY :Caster

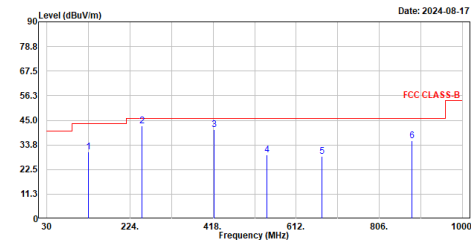

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	127.000	30.69	43.50	-12.81	56.28	-25.59	QP
2	252.130	42.53	46.00	-3.47	67.30	-24.77	QP
3	419.940	40.79	46.00	-5.21	60.68	-19.89	QP
4	543.130	29.23	46.00	-16.77	46.49	-17.26	QP
5	672.140	28.43	46.00	-17.57	43.09	-14.66	QP
6	881.660	35.68	46.00	-10.32	47.63	-11.95	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_au80_5775MHz
TEST BY :Caster

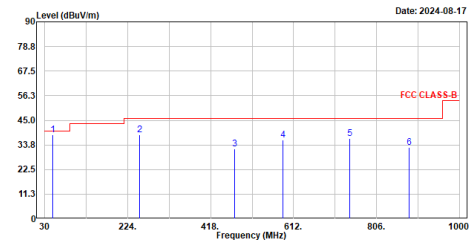


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	48.430	38.42	40.00	-1.58	61.66	-23.24	QP
2	252.130	38.42	46.00	-7.58	63.19	-24.77	QP
3	474.260	32.05	46.00	-13.95	50.47	-18.42	QP
4	587.750	35.83	46.00	-10.17	51.59	-15.76	QP
5	742.950	36.79	46.00	-9.21	49.97	-13.18	QP
6	881.660	32.64	46.00	-13.36	44.59	-11.95	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

PoE mode


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

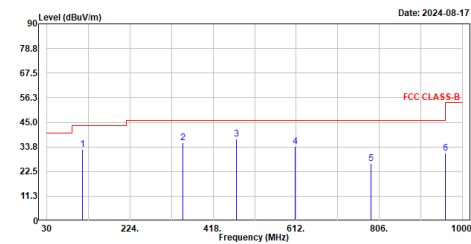

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	113.420	32.57	43.50	-10.93	59.27	-26.70	QP
2	348.160	35.65	46.00	-10.35	57.50	-21.85	QP
3	472.320	37.41	46.00	-8.59	55.83	-18.42	QP
4	609.090	33.87	46.00	-12.13	49.23	-15.36	QP
5	786.600	26.32	46.00	-19.68	38.92	-12.60	QP
6	960.230	30.82	54.00	-23.18	41.62	-10.80	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

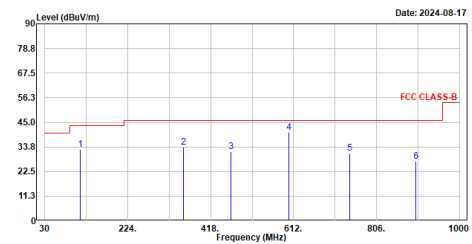

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	112.450	32.59	43.50	-10.91	59.33	-26.74	QP
2	354.950	33.57	46.00	-12.43	55.31	-21.74	QP
3	465.530	31.69	46.00	-14.31	50.11	-18.42	QP
4	600.360	40.43	46.00	-5.57	55.73	-15.30	QP
5	742.950	31.01	46.00	-14.99	44.19	-13.18	QP
6	898.150	27.08	46.00	-18.92	38.60	-11.52	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Caster

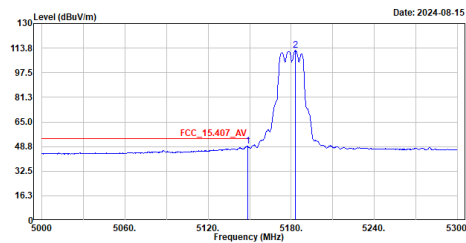

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5148.500	48.85	54.00	-5.15	34.45	14.40	Average
2	5183.000	112.11	-----	-----	97.64	14.47	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Caster

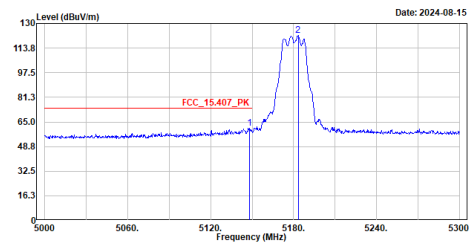

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.900	60.78	74.00	-13.22	46.38	14.40	Peak
2	5183.300	121.97	-----	-----	107.50	14.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Caster

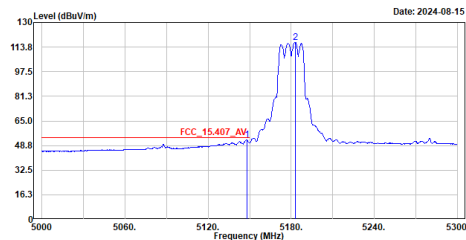

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.900	52.40	54.00	-1.60	38.00	14.40	Average
2	5183.000	116.91	-----	-----	102.44	14.47	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Caster

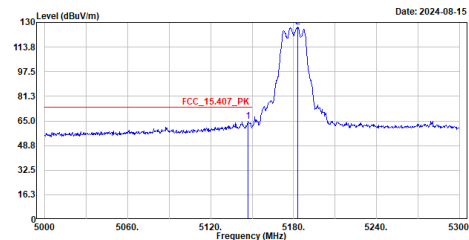

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.300	64.79	74.00	-9.21	50.39	14.40	Peak
2	5183.000	126.98	-----	-----	112.51	14.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

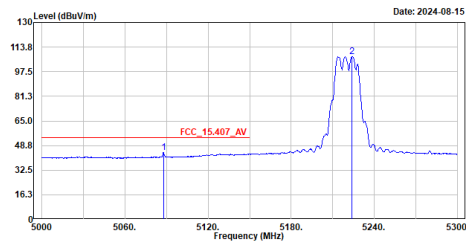


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5087.900	44.15	54.00	-9.85	29.83	14.32	Average
2	5224.100	107.29	-----	-----	92.79	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

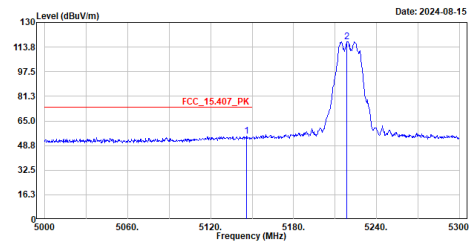


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5145.800	54.81	74.00	-19.19	40.41	14.40	Peak
2	5218.700	117.37	-----	-----	102.86	14.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

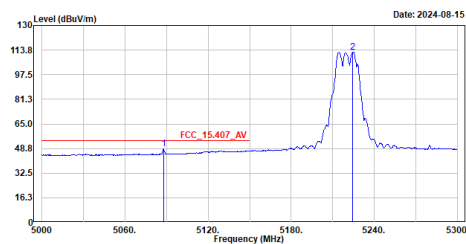


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5087.900	48.53	54.00	-5.47	34.21	14.32	Average
2	5224.400	112.45	-----	-----	97.95	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_Band1
TEST BY :Caster

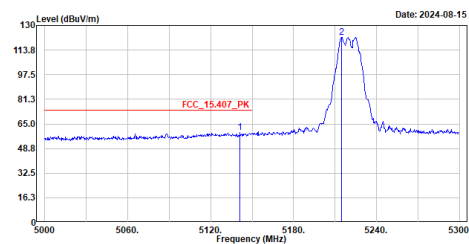


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5141.300	59.33	74.00	-14.67	44.94	14.39	Peak
2	5214.500	122.33	-----	-----	107.83	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

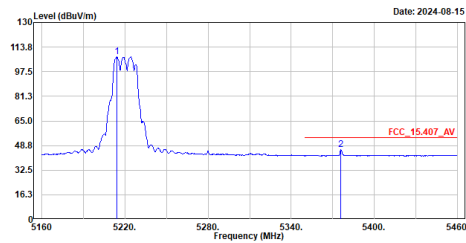


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5214.000	107.29	-----	-----	92.79	14.50	Average
2	5376.000	46.16	54.00	-7.84	31.56	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

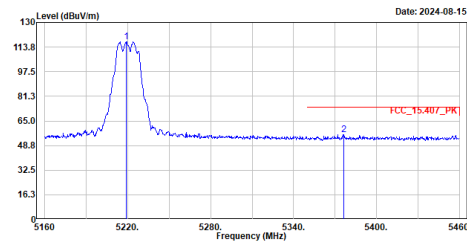


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5219.100	117.29	-----	-----	102.79	14.50	Peak
2	5376.300	55.87	74.00	-18.13	41.27	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

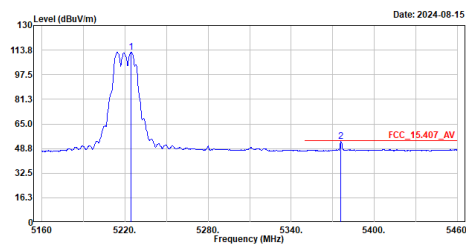


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5224.500	112.32	-----	-----	97.82	14.50	Average
2	5376.000	53.29	54.00	-0.71	38.69	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_Band2
TEST BY :Caster

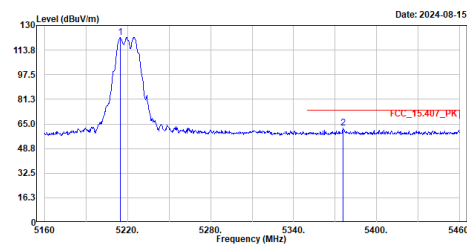


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5214.600	122.27	-----	-----	107.77	14.50	Peak
2	5376.000	62.30	74.00	-11.70	47.70	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Peter

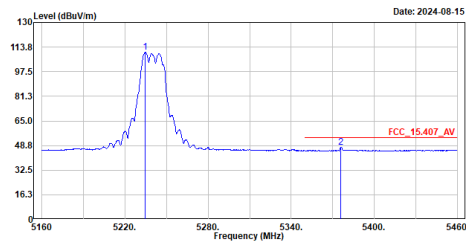


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5234.700	110.43	-----	-----	95.94	14.49	Average
2	5376.000	47.80	54.00	-6.20	33.20	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Peter

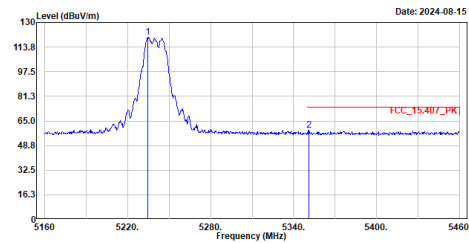


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5234.400	120.23	-----	-----	105.74	14.49	Peak
2	5351.100	58.77	74.00	-15.23	44.24	14.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Peter

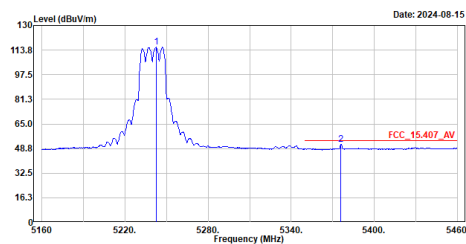


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5242.500	115.69	-----	-----	101.20	14.49	Average
2	5376.000	51.67	54.00	-2.33	37.07	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Peter

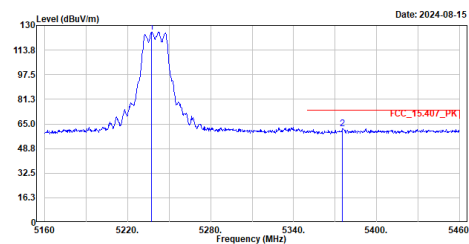


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5237.400	125.57	-----	-----	111.08	14.49	Peak
2	5375.400	61.91	74.00	-12.09	47.31	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5260MHz
TEST BY :Peter

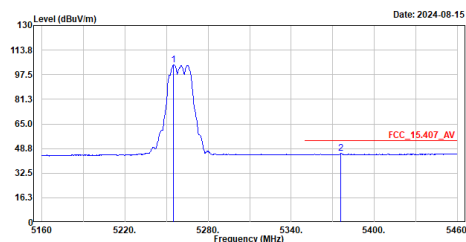


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5255.100	104.11	-----	-----	89.63	14.48	Average
2	5376.000	45.75	54.00	-8.25	31.15	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5260MHz
TEST BY :Peter

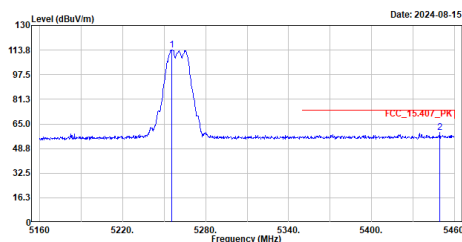


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5255.700	113.93	-----	-----	99.45	14.48	Peak
2	5449.200	59.18	74.00	-14.82	44.22	14.96	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5260MHz
TEST BY :Peter

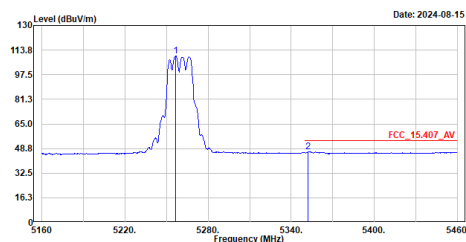


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5256.600	109.88	-----	-----	95.40	14.48	Average
2	5352.300	46.75	54.00	-7.25	32.22	14.53	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5260MHz
TEST BY :Peter

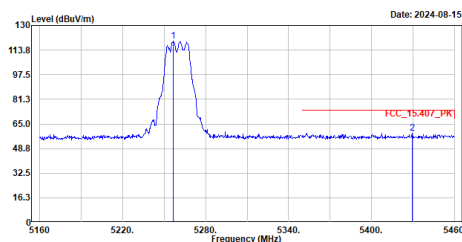


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5256.600	119.83	-----	-----	105.35	14.48	Peak
2	5429.400	59.10	74.00	-14.90	44.28	14.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5300MHz
TEST BY :Peter

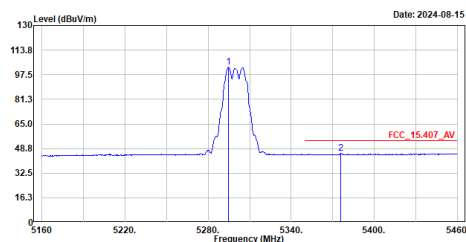


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5294.700	102.45	-----	-----	87.91	14.54	Average
2	5375.700	45.76	54.00	-8.24	31.16	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5300MHz
TEST BY :Peter

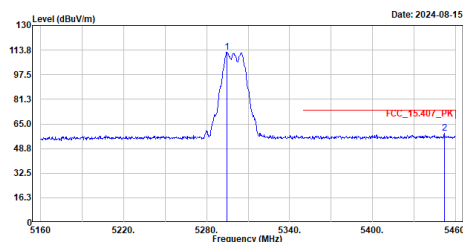


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5294.700	112.29	-----	-----	97.75	14.54	Peak
2	5451.900	58.71	74.00	-15.29	43.72	14.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5300MHz
TEST BY :Peter

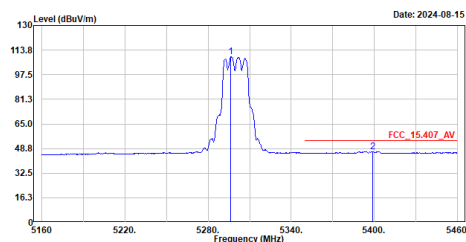


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5296.500	109.35	-----	-----	94.81	14.54	Average
2	5398.800	46.79	54.00	-7.21	32.14	14.65	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5300MHz
TEST BY :Peter

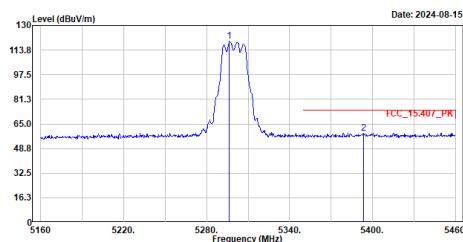


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5296.500	119.47	-----	-----	104.93	14.54	Peak
2	5393.700	59.04	74.00	-14.96	44.40	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
TEST BY :Peter

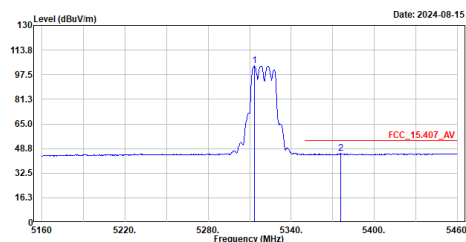


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5313.300	103.27	-----	-----	88.74	14.53	Average
2	5375.700	45.38	54.00	-8.62	30.78	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
TEST BY :Peter

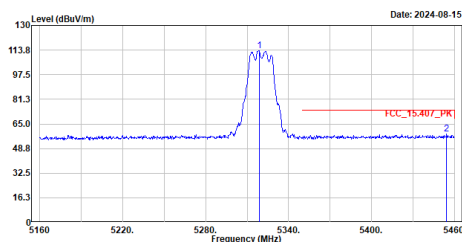


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5318.700	113.35	-----	-----	98.82	14.53	Peak
2	5454.300	58.15	74.00	-15.85	43.14	15.01	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5320MHz
TEST BY :Peter

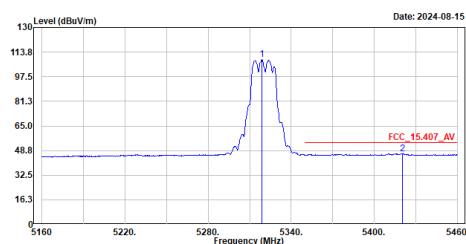


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5318.700	108.66	-----	-----	94.13	14.53	Average
2	5420.400	46.61	54.00	-7.39	31.86	14.75	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5320MHz
TEST BY :Peter

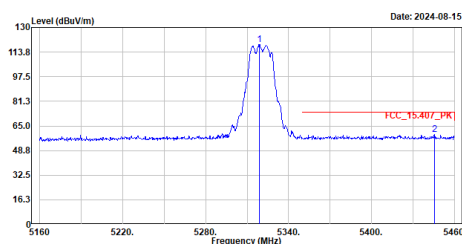


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5318.700	118.65	-----	-----	104.12	14.53	Peak
2	5445.600	59.39	74.00	-14.61	44.45	14.94	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
TEST BY :Peter

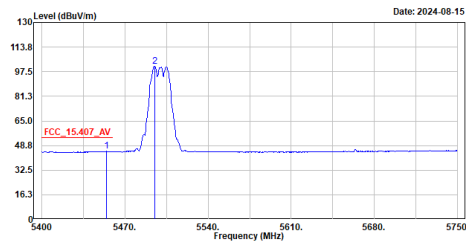

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5454.250	44.93	54.00	-9.07	29.92	15.01	Average
2	5494.850	101.21	-----	-----	85.83	15.38	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
TEST BY :Peter

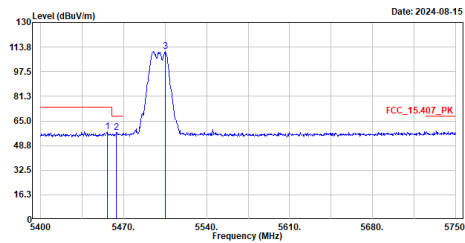

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.000	58.03	74.00	-15.97	43.01	15.02	Peak
2	5464.050	57.49	68.22	-10.73	42.39	15.10	Peak
3	5505.000	110.71	-----	-----	95.24	15.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5500MHz
TEST BY :Peter

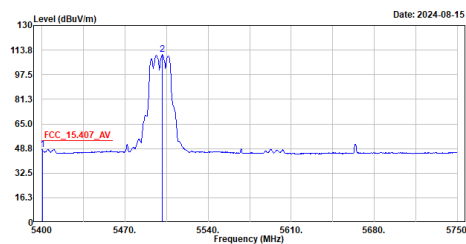

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5400.350	48.13	54.00	-5.87	33.47	14.66	Average
2	5501.500	110.66	-----	-----	95.21	15.45	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5500MHz
TEST BY :Peter

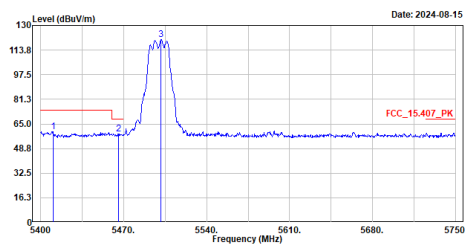

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5410.500	60.01	74.00	-13.99	45.30	14.71	Peak
2	5465.800	58.59	68.22	-9.63	43.48	15.11	Peak
3	5501.500	120.62	-----	-----	105.17	15.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5580MHz
TEST BY :Peter

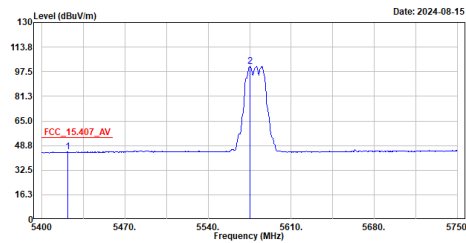

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5421.700	44.85	54.00	-9.15	30.09	14.76	Average
2	5575.350	100.91	-----	-----	85.57	15.34	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5580MHz
TEST BY :Peter

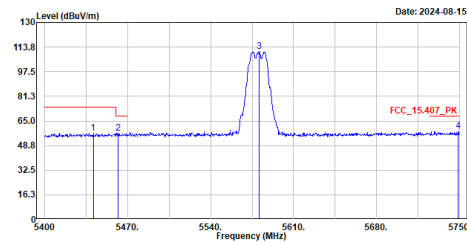

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5440.950	56.95	74.00	-17.05	42.05	14.90	Peak
2	5461.950	57.01	68.22	-11.21	41.93	15.08	Peak
3	5580.950	110.76	-----	-----	95.43	15.33	Peak
4	5748.950	58.46	68.22	-9.76	42.22	16.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5580MHz
TEST BY :Peter

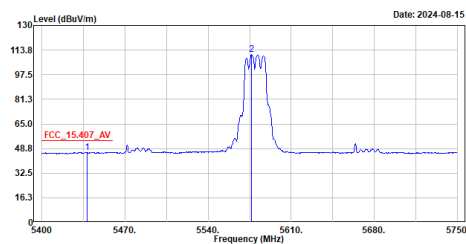

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5438.150	46.32	54.00	-7.68	31.44	14.88	Average
2	5576.400	110.81	-----	-----	95.47	15.34	Average


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5580MHz
TEST BY :Peter

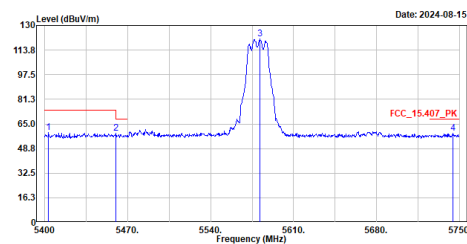


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5403.150	59.28	74.00	-14.72	44.60	14.68	Peak
2	5460.200	58.84	68.22	-9.38	43.78	15.06	Peak
3	5581.300	121.07	-----	-----	105.75	15.32	Peak
4	5744.750	58.94	68.22	-9.28	42.72	16.22	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

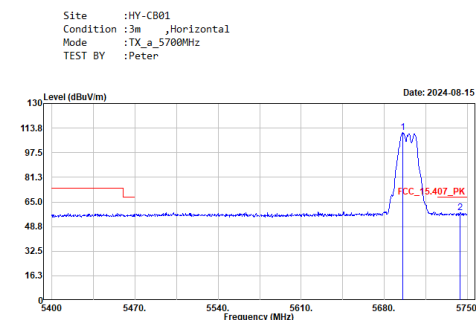


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5695.400	110.71	68.22	-10.11	41.89	15.97	Peak
2	5744.050	58.11	68.22	-10.11	41.89	16.22	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

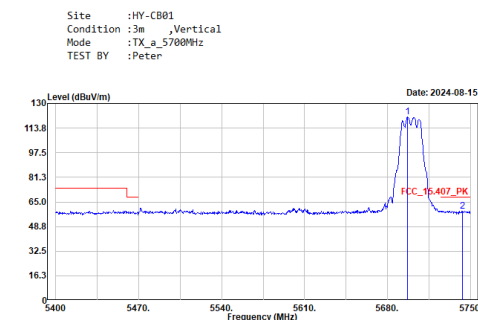


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5696.800	121.04	68.22	-9.13	42.88	15.98	Peak
2	5743.350	59.09	68.22	-9.13	42.88	16.21	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

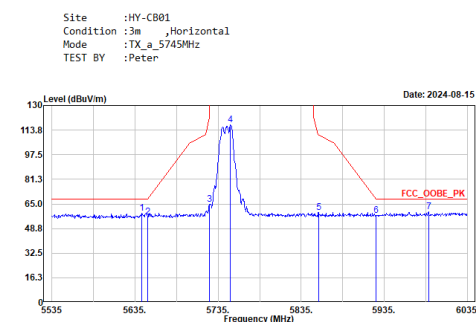


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5643.500	58.65	68.22	-9.57	43.03	15.62	Peak
2	5650.000	56.39	68.23	-11.84	40.73	15.66	Peak
3	5725.000	64.55	122.20	-57.65	48.43	16.12	Peak
4	5750.000	117.02	-----	-----	100.78	16.24	Peak
5	5856.000	59.29	110.52	-51.23	43.02	16.27	Peak
6	5925.000	57.58	68.23	-10.65	41.20	16.38	Peak
7	5988.500	59.66	68.22	-8.56	43.20	16.46	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

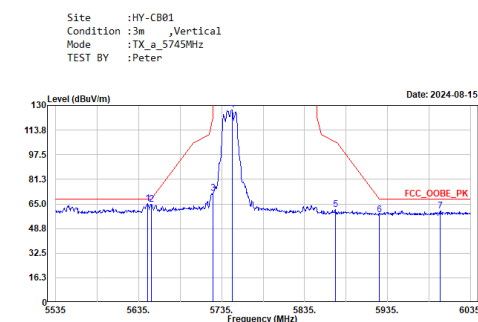

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5646.000	65.31	68.22	-2.91	49.67	15.64	Peak
2	5650.000	64.54	68.23	-3.69	48.88	15.66	Peak
3	5725.000	71.99	122.20	-50.21	55.87	16.12	Peak
4	5747.500	126.98	-----	-----	110.75	16.23	Peak
5	5872.000	61.17	106.04	-44.87	44.87	16.30	Peak
6	5925.000	58.08	68.23	-10.15	41.70	16.38	Peak
7	5998.500	60.31	68.22	-7.91	43.82	16.49	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

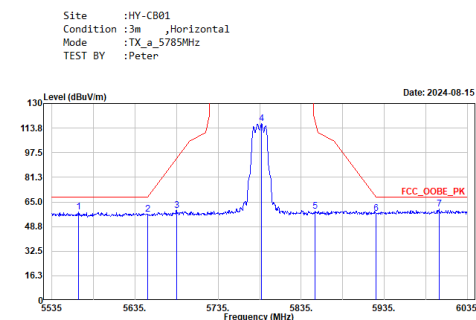

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5567.500	58.13	68.22	-10.09	42.77	15.36	Peak
2	5650.000	56.76	68.23	-11.47	41.10	15.66	Peak
3	5685.000	59.51	94.11	-34.60	43.61	15.90	Peak
4	5787.500	116.73	-----	-----	100.40	16.33	Peak
5	5852.000	59.08	117.64	-58.56	42.82	16.26	Peak
6	5925.000	57.49	68.23	-10.74	41.11	16.38	Peak
7	6001.000	60.46	68.22	-7.76	43.97	16.49	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

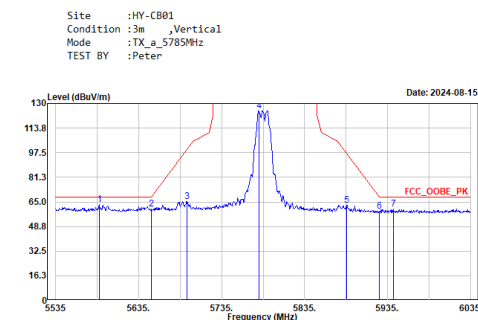

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5587.500	63.45	68.22	-4.77	48.14	15.31	Peak
2	5650.000	60.44	68.23	-7.79	44.78	15.66	Peak
3	5693.000	65.36	100.02	-34.66	49.41	15.95	Peak
4	5780.000	125.33	-----	-----	109.01	16.32	Peak
5	5886.000	62.82	97.07	-34.25	46.48	16.34	Peak
6	5925.000	58.74	68.23	-9.49	42.36	16.38	Peak
7	5942.500	60.38	68.22	-7.84	44.02	16.36	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

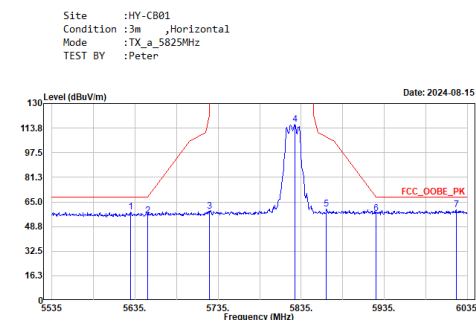

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5630.000	58.39	68.22	-9.83	42.86	15.53	Peak
2	5650.000	55.97	68.23	-12.26	40.31	15.66	Peak
3	5725.000	59.07	122.20	-63.13	42.95	16.12	Peak
4	5827.500	116.28	-----	-----	100.00	16.28	Peak
5	5865.500	60.22	107.86	-47.64	43.93	16.29	Peak
6	5925.000	57.49	68.23	-10.74	41.11	16.38	Peak
7	6021.500	59.79	68.22	-8.43	43.23	16.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

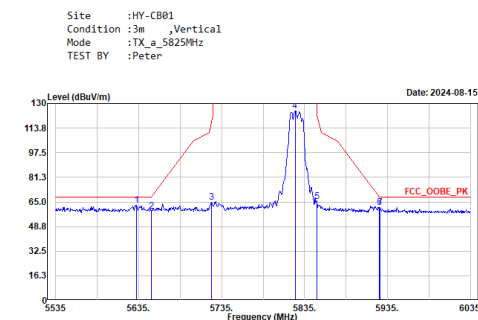


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5632.500	62.73	68.22	-5.49	47.18	15.55	Peak
2	5650.000	58.92	68.23	-9.31	43.26	15.66	Peak
3	5723.000	64.57	117.64	-53.07	48.46	16.11	Peak
4	5823.500	125.31	-----	-----	109.01	16.30	Peak
5	5860.000	65.17	122.20	-57.03	48.92	16.25	Peak
6	5925.000	61.42	68.23	-6.81	45.04	16.38	Peak
7	5926.000	61.45	68.22	-6.77	45.07	16.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Peter

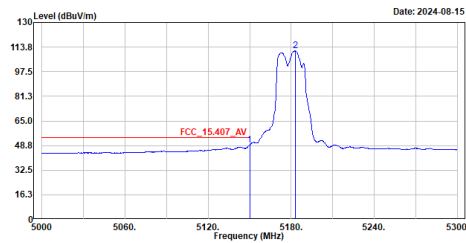


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5150.000	49.03	54.00	-4.97	34.63	14.40	Average
2	5183.000	111.22	-----	-----	96.75	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Peter

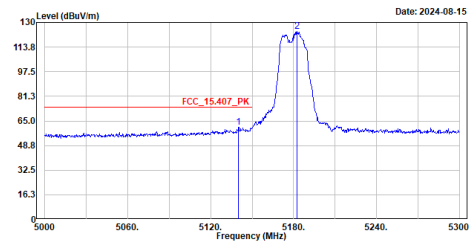


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5140.100	61.02	74.00	-12.98	46.63	14.39	Peak
2	5182.400	124.33	-----	-----	109.86	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
TEST BY :Peter

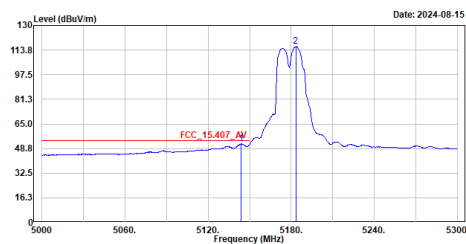


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5144.000	51.79	54.00	-2.21	37.40	14.39	Average
2	5183.300	116.08	-----	-----	101.61	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
TEST BY :Peter

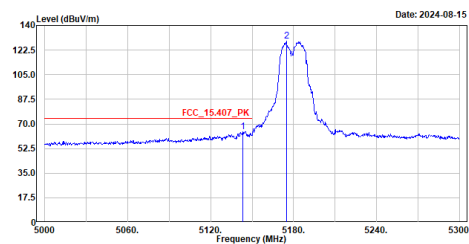


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5143.400	64.67	74.00	-9.33	50.28	14.39	Peak
2	5174.900	128.86	-----	-----	114.41	14.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_Band1
TEST BY :Peter

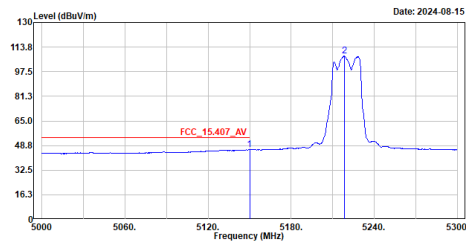


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	46.04	54.00	-7.96	31.64	14.40	Average
2	5218.400	107.83	-----	-----	93.32	14.51	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_Band1
TEST BY :Peter

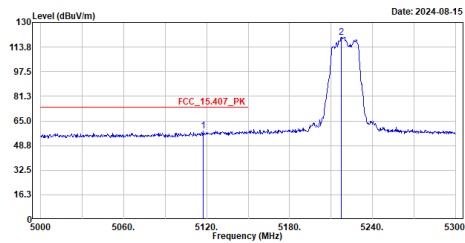


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5117.300	58.40	74.00	-15.60	44.05	14.35	Peak
2	5217.500	120.30	-----	-----	105.79	14.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_Band1
TEST BY :Peter

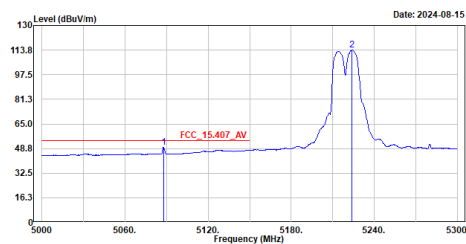


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5087.900	49.66	54.00	-4.34	35.34	14.32	Average
2	5224.100	113.59	-----	-----	99.09	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_Band1
TEST BY :Peter

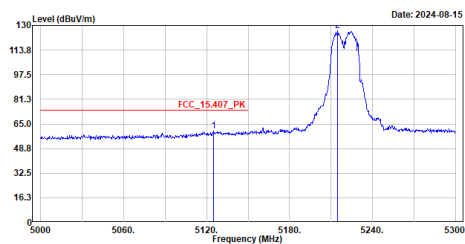


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5125.100	60.24	74.00	-13.76	45.87	14.37	Peak
2	5214.800	126.47	-----	-----	111.97	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_Band2
TEST BY :Peter

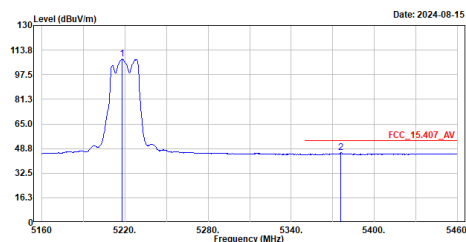


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5217.900	107.69	-----	-----	93.18	14.51	Average
2	5376.000	46.24	54.00	-7.76	31.64	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_Band2
TEST BY :Peter

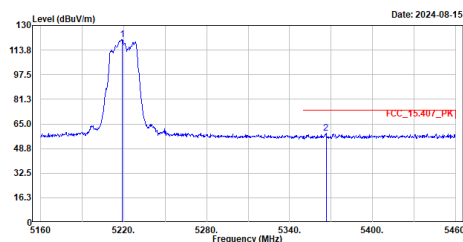


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5219.100	120.80	-----	-----	106.30	14.50	Peak
2	5366.400	58.71	74.00	-15.29	44.14	14.57	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_Band2
TEST BY :Peter

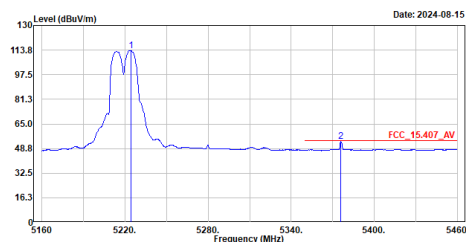


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5224.200	113.56	-----	-----	99.06	14.50	Average
2	5376.000	53.48	54.00	-0.52	38.88	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_Band2
TEST BY :Peter

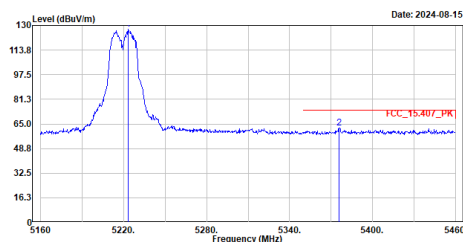


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5223.300	127.66	-----	-----	113.16	14.50	Peak
2	5376.000	62.37	74.00	-11.63	47.77	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5240MHz
TEST BY :Peter

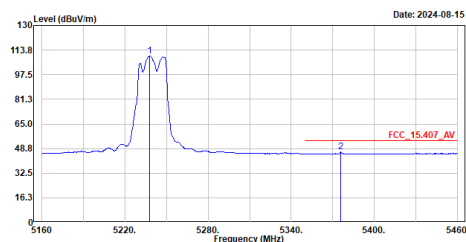


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5238.000	109.88	-----	-----	95.39	14.49	Average
2	5375.700	46.41	54.00	-7.59	31.81	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5240MHz
TEST BY :Peter

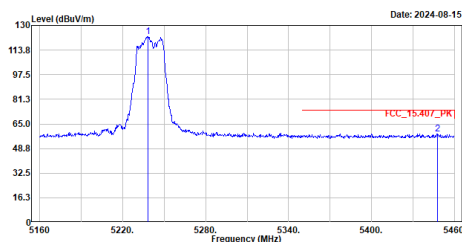


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5238.300	122.81	-----	-----	108.32	14.49	Peak
2	5447.700	58.57	74.00	-15.43	43.62	14.95	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5240MHz
TEST BY :Peter

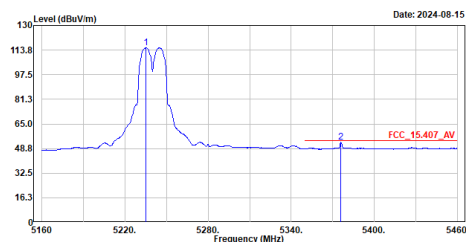


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5235.300	115.40	-----	-----	100.91	14.49	Average
2	5376.000	52.84	54.00	-1.16	38.24	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5240MHz
TEST BY :Peter

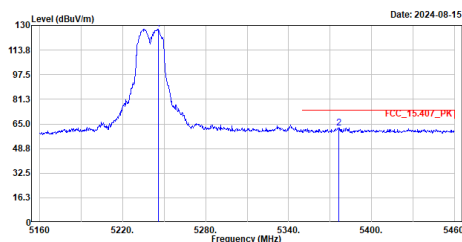


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5245.800	127.70	-----	-----	113.22	14.48	Peak
2	5376.300	62.43	74.00	-11.57	47.83	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5260MHz
TEST BY :Peter

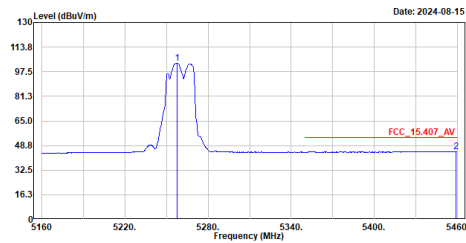


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5257.500	103.24	-----	-----	88.76	14.48	Average
2	5459.100	44.84	54.00	-9.16	29.79	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5260MHz
TEST BY :Peter

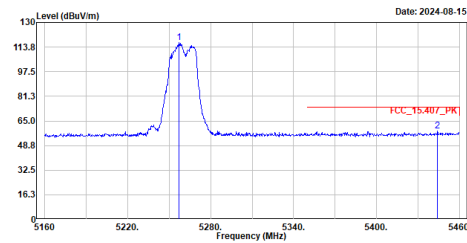


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5256.900	116.54	-----	-----	102.06	14.48	Peak
2	5444.100	58.16	74.00	-15.84	43.23	14.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5260MHz
TEST BY :Peter

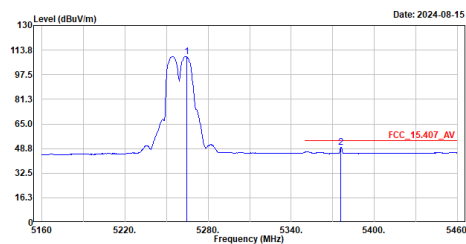


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5264.400	109.62	-----	-----	95.13	14.49	Average
2	5376.000	49.72	54.00	-4.28	35.12	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5260MHz
TEST BY :Peter

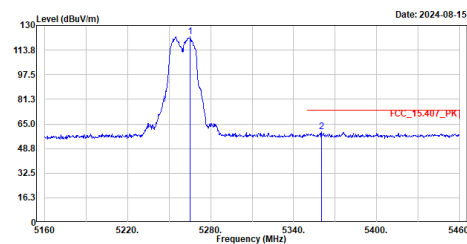


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5265.300	122.73	-----	-----	108.24	14.49	Peak
2	5360.100	59.93	74.00	-14.07	45.37	14.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5300MHz
TEST BY :Peter

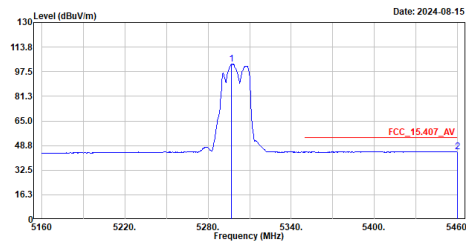


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5297.100	102.42	-----	-----	87.88	14.54	Average
2	5460.000	44.85	54.00	-9.15	29.80	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5300MHz
TEST BY :Peter

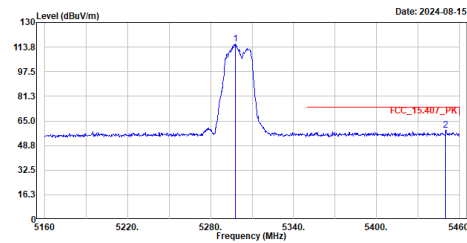


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5297.700	115.61	-----	-----	101.07	14.54	Peak
2	5450.100	59.03	74.00	-14.97	44.07	14.96	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5300MHz
TEST BY :Peter

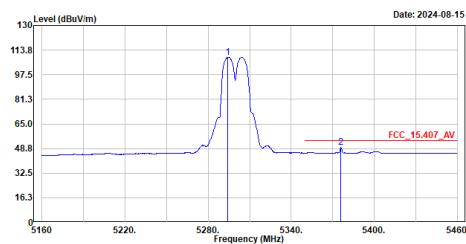


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5294.100	109.15	-----	-----	94.61	14.54	Average
2	5376.000	49.33	54.00	-4.67	34.73	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5300MHz
TEST BY :Peter

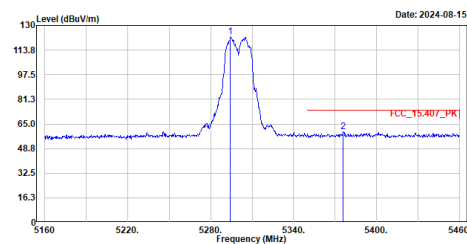


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5294.400	122.50	-----	-----	107.96	14.54	Peak
2	5376.000	59.82	74.00	-14.18	45.22	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
TEST BY :Peter

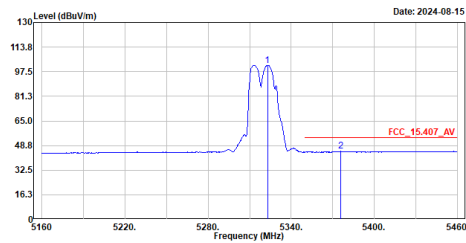


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.900	101.79	-----	-----	87.26	14.53	Average
2	5376.000	44.93	54.00	-9.07	30.33	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
TEST BY :Peter

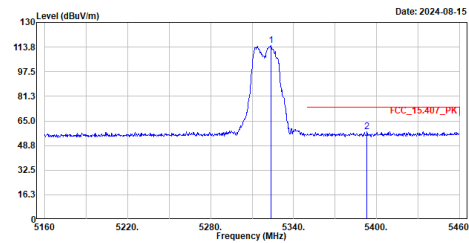


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5323.800	114.57	-----	-----	100.04	14.53	Peak
2	5393.100	57.70	74.00	-16.30	43.06	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
TEST BY :Peter

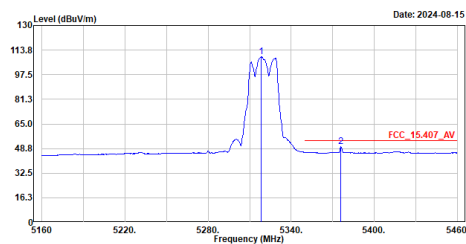


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5318.400	109.34	-----	-----	94.81	14.53	Average
2	5376.000	49.86	54.00	-4.14	35.26	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
TEST BY :Peter

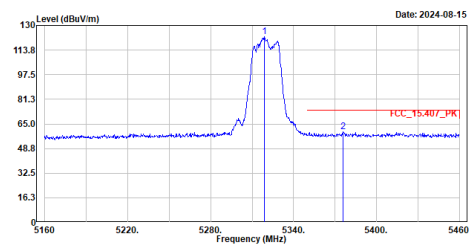


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5318.700	122.67	-----	-----	108.14	14.53	Peak
2	5376.000	59.94	74.00	-14.06	45.34	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
TEST BY :Peter

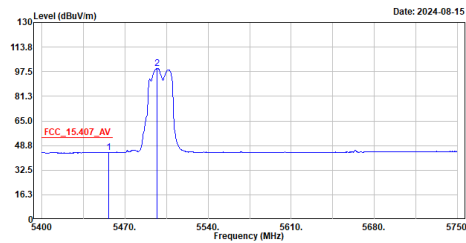

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.350	44.39	54.00	-9.61	29.36	15.03	Average
2	5496.950	99.73	-----	-----	84.32	15.41	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
TEST BY :Peter

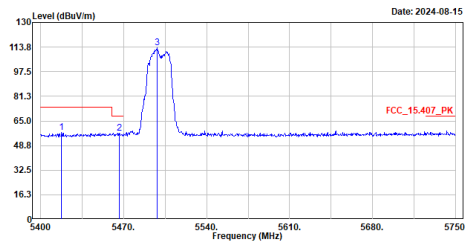

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5417.500	57.60	74.00	-16.40	42.86	14.74	Peak
2	5466.150	56.92	68.22	-11.30	41.81	15.11	Peak
3	5498.000	113.14	-----	-----	97.73	15.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
TEST BY :Peter

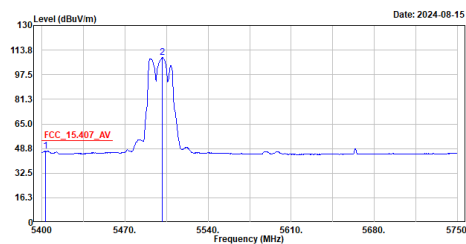

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5402.800	47.09	54.00	-6.91	32.41	14.68	Average
2	5501.150	108.89	-----	-----	93.46	15.43	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
TEST BY :Peter

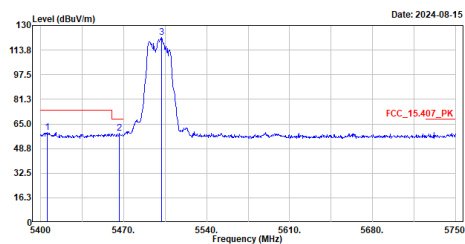

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5405.250	59.50	74.00	-14.50	44.82	14.68	Peak
2	5466.500	58.69	68.22	-9.53	43.57	15.12	Peak
3	5501.850	122.12	-----	-----	106.67	15.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5580MHz
TEST BY :Peter

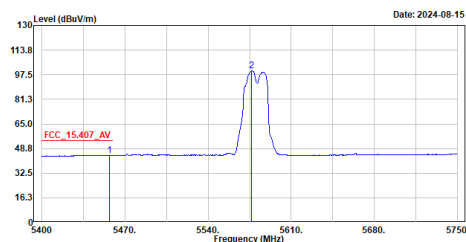

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5457.050	44.22	54.00	-9.78	29.19	15.03	Average
2	5576.750	100.11	-----	-----	84.77	15.34	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5580MHz
TEST BY :Peter

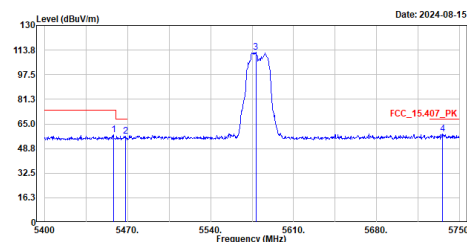

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.100	58.08	74.00	-15.92	43.04	15.04	Peak
2	5468.250	57.14	68.22	-11.08	42.01	15.13	Peak
3	5578.150	112.38	-----	-----	97.04	15.34	Peak
4	5735.650	58.13	68.22	-10.09	41.96	16.17	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5580MHz
TEST BY :Peter

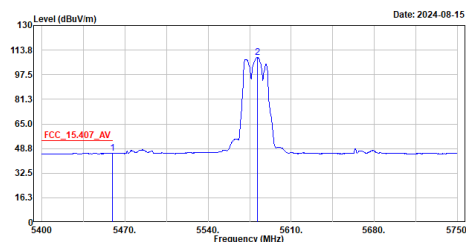

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.150	45.85	54.00	-8.15	30.00	15.05	Average
2	5581.650	109.11	-----	-----	93.79	15.32	Average


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5580MHz
TEST BY :Peter

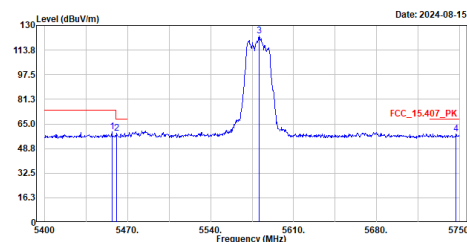


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.700	59.72	74.00	-14.28	44.69	15.03	Peak
2	5460.900	58.91	68.22	-9.31	43.84	15.07	Peak
3	5580.950	123.32	-----	-----	107.99	15.33	Peak
4	5747.200	58.40	68.22	-9.82	42.17	16.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

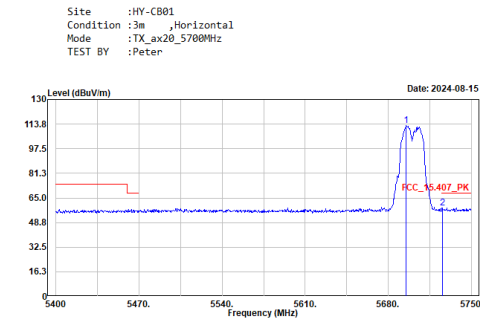


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5695.050	112.91	-----	-----	96.94	15.97	Peak
2	5725.500	58.51	68.22	-9.71	42.39	16.12	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

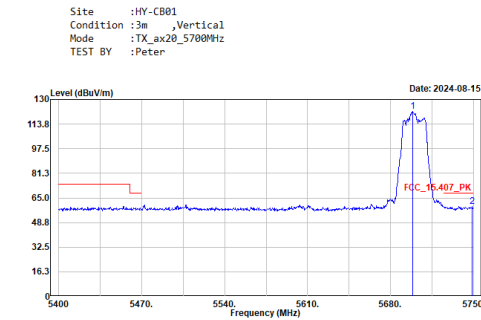


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5698.900	121.98	-----	-----	105.99	15.99	Peak
2	5748.950	59.22	68.22	-9.00	42.98	16.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

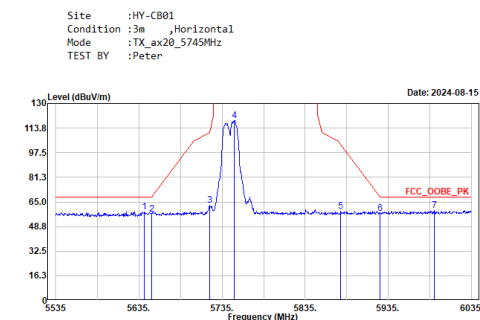


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5641.500	58.51	68.22	-9.71	42.90	15.61	Peak
2	5650.000	56.98	68.23	-11.25	41.32	15.66	Peak
3	5720.500	62.68	111.94	-49.26	46.58	16.10	Peak
4	5750.000	118.86	-----	-----	102.62	16.24	Peak
5	5878.000	59.03	102.98	-43.95	42.71	16.32	Peak
6	5925.000	57.50	68.23	-10.73	41.12	16.38	Peak
7	5990.500	59.55	68.22	-8.67	43.09	16.46	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

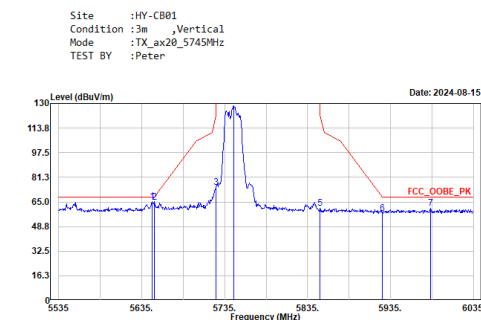

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5648.000	65.19	68.22	-3.03	49.54	15.65	Peak
2	5650.000	64.98	68.23	-3.25	49.32	15.66	Peak
3	5724.500	74.45	121.06	-46.61	58.33	16.12	Peak
4	5746.000	128.69	-----	-----	112.47	16.22	Peak
5	5850.000	60.70	122.20	-61.50	44.45	16.25	Peak
6	5925.000	57.37	68.23	-10.86	40.99	16.38	Peak
7	5983.500	60.90	68.22	-7.32	44.45	16.45	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

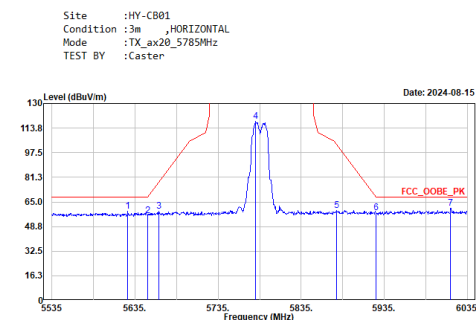

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5626.500	58.94	68.22	-9.28	43.43	15.51	Peak
2	5650.000	55.94	68.23	-12.29	40.28	15.66	Peak
3	5664.000	58.69	78.58	-19.89	42.94	15.75	Peak
4	5780.500	118.07	-----	-----	101.75	16.32	Peak
5	5878.000	59.25	102.98	-43.73	42.93	16.32	Peak
6	5925.000	58.04	68.23	-10.19	41.66	16.38	Peak
7	6015.000	60.70	68.22	-7.52	44.16	16.54	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

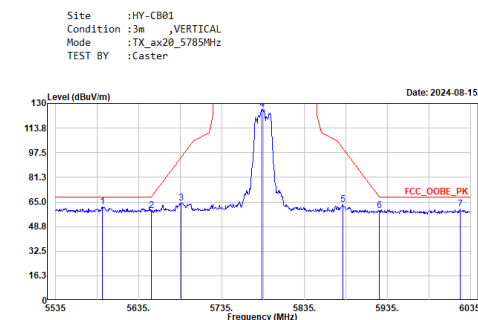

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5591.500	61.98	68.22	-6.24	46.68	15.30	Peak
2	5650.000	59.31	68.23	-8.92	43.65	15.66	Peak
3	5686.500	64.41	95.22	-30.81	48.50	15.91	Peak
4	5784.000	126.00	-----	-----	109.68	16.32	Peak
5	5881.000	63.48	100.76	-37.28	47.16	16.32	Peak
6	5925.000	59.16	68.23	-9.07	42.78	16.38	Peak
7	6022.500	60.15	68.22	-8.07	43.59	16.56	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

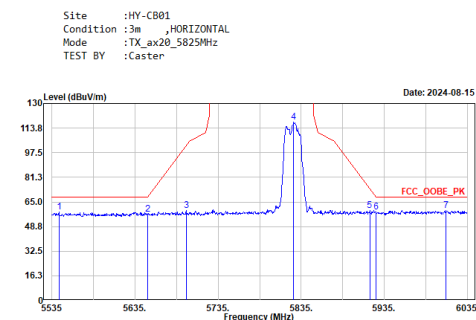

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5543.500	58.47	68.22	-9.75	43.04	15.43	Peak
2	5650.000	56.84	68.23	-11.39	41.18	15.66	Peak
3	5696.500	59.12	102.61	-43.49	43.14	15.98	Peak
4	5826.000	117.53	-----	-----	101.24	16.29	Peak
5	5917.500	59.40	73.77	-14.37	43.02	16.38	Peak
6	5925.000	58.54	68.23	-9.69	42.16	16.38	Peak
7	6009.000	59.48	68.22	-8.74	42.95	16.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

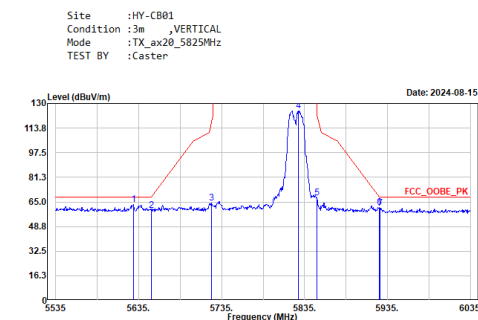


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5628.500	63.31	68.22	-4.91	47.79	15.52	Peak
2	5650.000	59.58	68.23	-8.65	43.92	15.66	Peak
3	5722.500	64.42	116.50	-52.08	48.31	16.11	Peak
4	5827.500	125.21	-----	-----	108.93	16.28	Peak
5	5850.000	67.57	122.20	-54.63	51.32	16.25	Peak
6	5925.000	61.09	68.23	-7.14	44.71	16.38	Peak
7	5926.000	60.89	68.22	-7.33	44.51	16.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

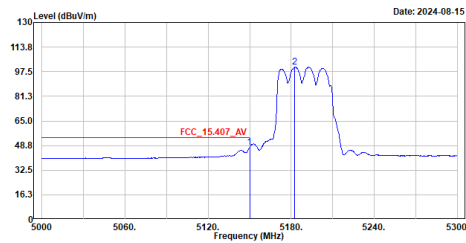


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	47.75	54.00	-6.25	33.35	14.40	Average
2	5182.400	100.42	-----	-----	85.95	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

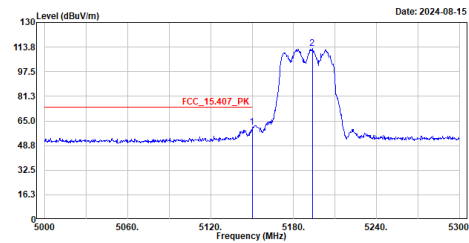


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	60.63	74.00	-13.37	46.23	14.40	Peak
2	5193.500	112.65	-----	-----	98.15	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

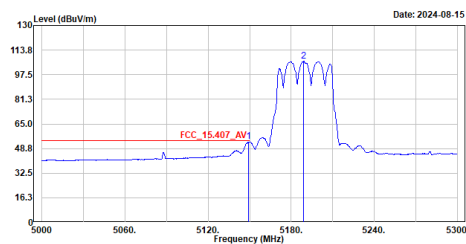


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.400	53.37	54.00	-0.63	38.97	14.40	Average
2	5188.700	106.37	-----	-----	91.88	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Caster

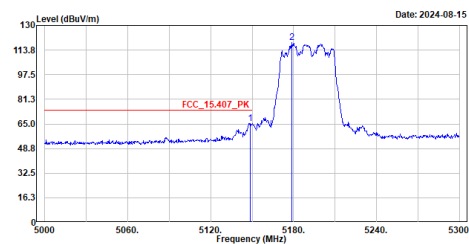


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.500	65.44	74.00	-8.56	51.04	14.40	Peak
2	5178.500	118.78	-----	-----	104.32	14.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

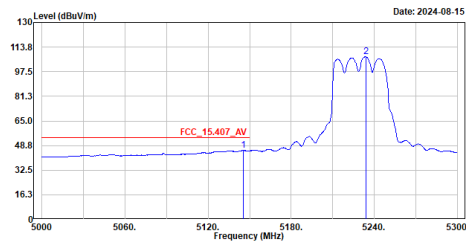


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5145.200	45.48	54.00	-8.52	31.08	14.40	Average
2	5234.000	107.50	-----	-----	93.01	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

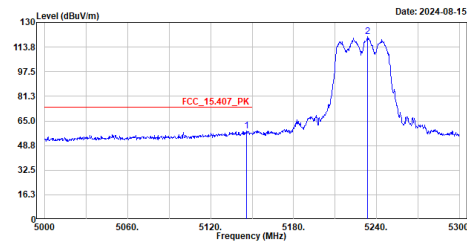


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.100	58.24	74.00	-15.76	43.84	14.40	Peak
2	5233.400	120.55	-----	-----	106.05	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

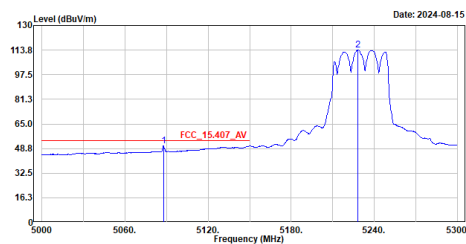


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5087.900	50.53	54.00	-3.47	36.21	14.32	Average
2	5228.300	114.01	-----	-----	99.51	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

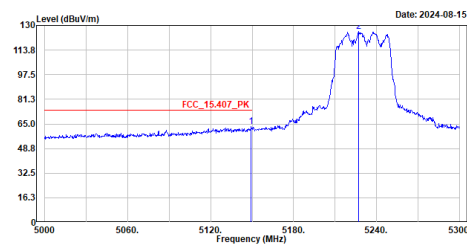


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.400	63.08	74.00	-10.92	48.68	14.40	Peak
2	5227.100	126.09	-----	-----	111.59	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5270MHz
TEST BY :Caster

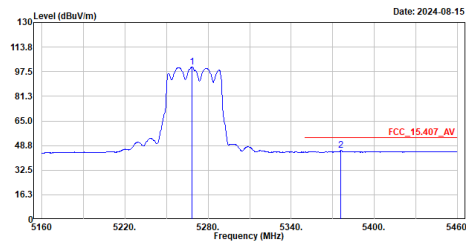


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5268.300	100.57	-----	-----	86.07	14.50	Average
2	5376.000	45.44	54.00	-8.56	30.84	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5270MHz
TEST BY :Caster

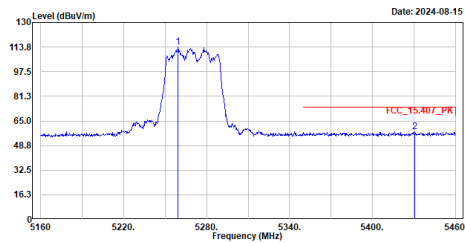


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5259.300	113.67	-----	-----	99.18	14.49	Peak
2	5430.600	57.96	74.00	-16.04	43.14	14.82	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5270MHz
TEST BY :Caster

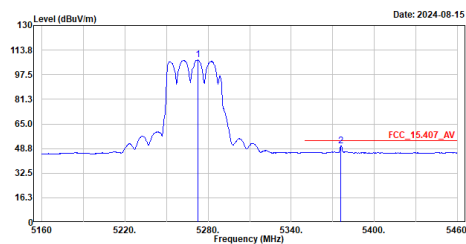


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5272.500	107.26	-----	-----	92.75	14.51	Average
2	5376.000	50.67	54.00	-3.33	36.07	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5270MHz
TEST BY :Caster

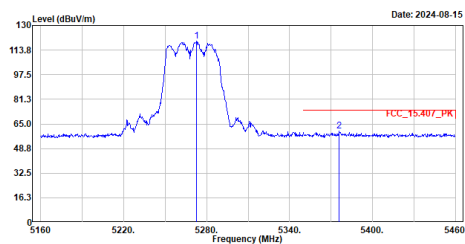


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5272.800	119.70	-----	-----	105.19	14.51	Peak
2	5376.000	60.19	74.00	-13.81	45.59	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

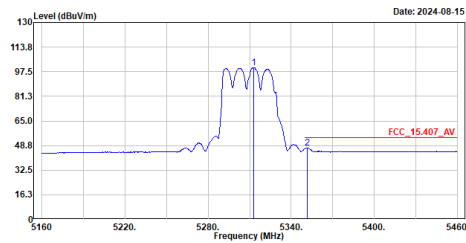


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5313.000	100.05	-----	-----	85.52	14.53	Average
2	5351.400	47.25	54.00	-6.75	32.72	14.53	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

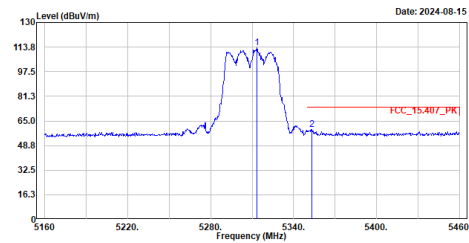


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5313.600	113.30	-----	-----	98.77	14.53	Peak
2	5353.200	59.36	74.00	-14.64	44.82	14.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

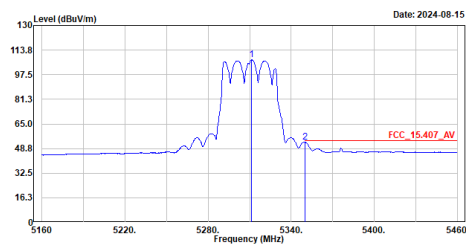


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5311.500	107.25	-----	-----	92.71	14.54	Average
2	5350.200	53.02	54.00	-0.98	38.49	14.53	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

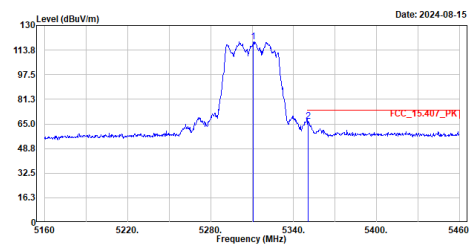


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5310.900	119.42	-----	-----	104.89	14.53	Peak
2	5350.800	66.64	74.00	-7.36	52.11	14.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

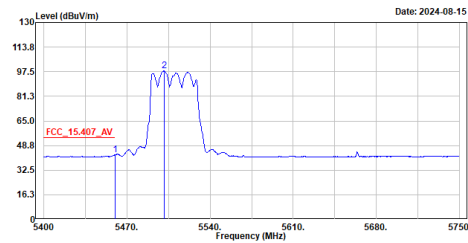

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.850	42.64	54.00	-11.36	27.59	15.05	Average
2	5501.150	98.02	-----	-----	82.59	15.43	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

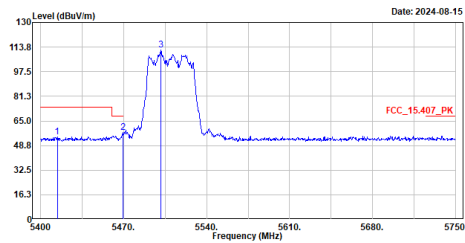

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5414.000	54.58	74.00	-19.42	39.86	14.72	Peak
2	5469.650	57.34	68.22	-10.88	42.19	15.15	Peak
3	5501.500	111.63	-----	-----	96.18	15.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

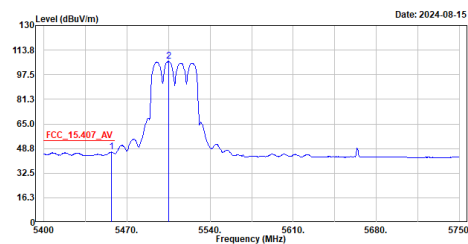

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5456.700	46.39	54.00	-7.61	31.36	15.03	Average
2	5505.000	106.38	-----	-----	90.91	15.47	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

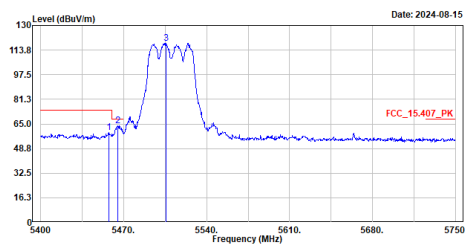

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.750	59.39	74.00	-14.61	44.35	15.04	Peak
2	5465.100	63.79	68.22	-4.43	48.68	15.11	Peak
3	5505.700	118.41	-----	-----	102.94	15.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5550MHz
TEST BY :Caster

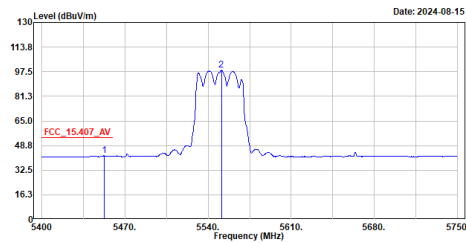

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5452.500	41.95	54.00	-12.05	26.96	14.99	Average
2	5551.200	98.37	-----	-----	82.95	15.42	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5550MHz
TEST BY :Caster

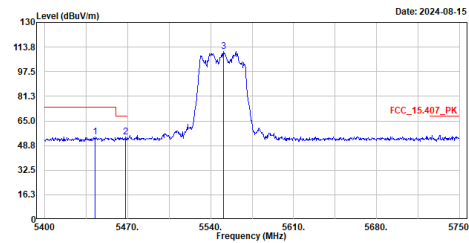

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5442.700	54.58	74.00	-19.42	39.67	14.91	Peak
2	5467.900	54.43	68.22	-13.79	39.30	15.13	Peak
3	5550.850	110.70	-----	-----	95.28	15.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5550MHz
TEST BY :Caster

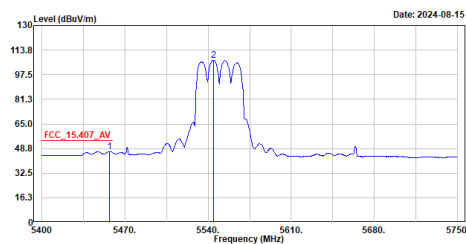

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.050	46.69	54.00	-7.31	31.66	15.03	Average
2	5544.900	107.07	-----	-----	91.64	15.43	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5550MHz
TEST BY :Caster

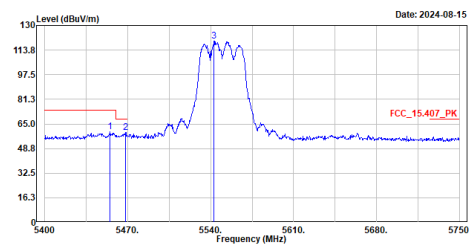

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5455.300	59.80	74.00	-14.20	44.78	15.02	Peak
2	5468.250	59.34	68.22	-8.88	44.21	15.13	Peak
3	5542.800	119.49	-----	-----	104.06	15.43	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

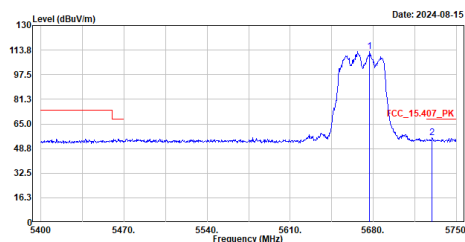


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5676.850	112.77	-----	-----	96.93	15.84	Peak
2	5729.700	55.72	68.22	-12.50	39.57	16.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

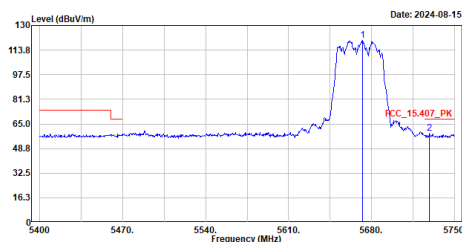


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5672.650	120.20	-----	-----	104.38	15.82	Peak
2	5729.000	58.73	68.22	-9.49	42.59	16.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5755MHz
TEST BY :Caster

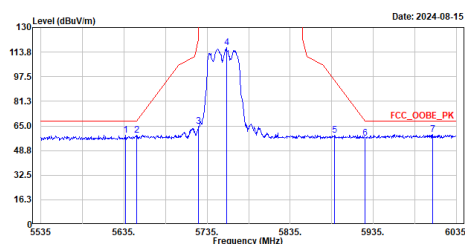


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5636.500	58.78	68.22	-9.44	43.21	15.57	Peak
2	5650.000	58.92	68.23	-9.31	43.26	15.66	Peak
3	5725.000	64.61	122.20	-57.59	48.49	16.12	Peak
4	5758.500	116.85	-----	-----	100.57	16.28	Peak
5	5888.500	58.82	95.22	-36.40	42.48	16.34	Peak
6	5925.000	57.06	68.23	-11.17	40.68	16.38	Peak
7	6006.500	59.33	68.22	-8.89	42.82	16.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5755MHz
TEST BY :Caster

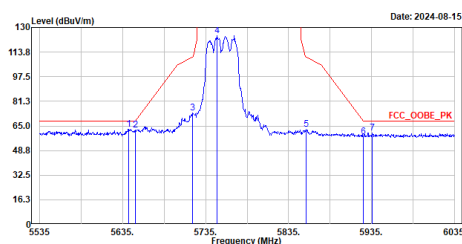

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5642.000	62.77	68.22	-5.45	47.16	15.61	Peak
2	5650.000	62.40	68.23	-5.83	46.74	15.66	Peak
3	5719.000	73.80	110.52	-36.72	57.70	16.10	Peak
4	5749.000	124.84	-----	-----	108.60	16.24	Peak
5	5856.500	62.60	110.38	-47.78	46.33	16.27	Peak
6	5925.000	57.73	68.23	-10.50	41.35	16.38	Peak
7	5936.000	60.29	68.22	-7.93	43.92	16.37	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

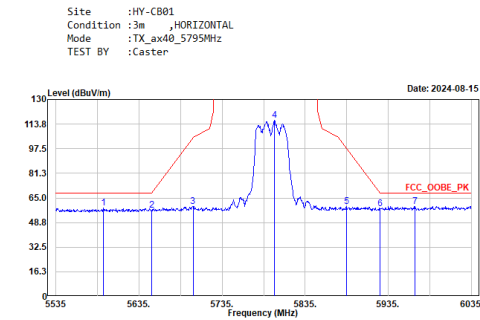


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5592.500	58.32	68.22	-9.90	43.01	15.31	Peak
2	5650.000	57.05	68.23	-11.18	41.39	15.66	Peak
3	5700.000	59.43	105.20	-45.77	43.43	16.00	Peak
4	5798.000	116.07	-----	-----	99.72	16.35	Peak
5	5884.500	59.27	98.18	-38.91	42.94	16.33	Peak
6	5925.000	57.88	68.23	-10.35	41.50	16.38	Peak
7	5967.000	59.51	68.22	-8.71	43.11	16.40	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

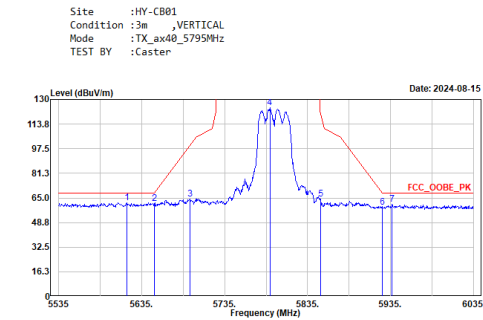


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5617.000	62.05	68.22	-6.17	46.61	15.44	Peak
2	5650.000	61.15	68.23	-7.08	45.49	15.66	Peak
3	5693.000	64.34	100.02	-35.68	48.39	15.95	Peak
4	5789.500	124.78	-----	-----	108.45	16.33	Peak
5	5850.500	64.06	121.06	-57.00	47.81	16.25	Peak
6	5925.000	58.90	68.23	-9.33	42.52	16.38	Peak
7	5937.000	60.91	68.22	-7.31	44.54	16.37	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

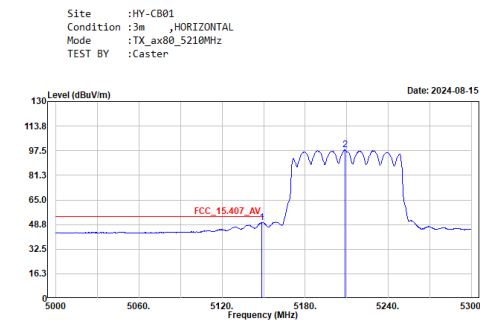

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.500	49.99	54.00	-4.01	35.59	14.40	Average
2	5208.000	98.06	-----	-----	83.55	14.51	Average


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

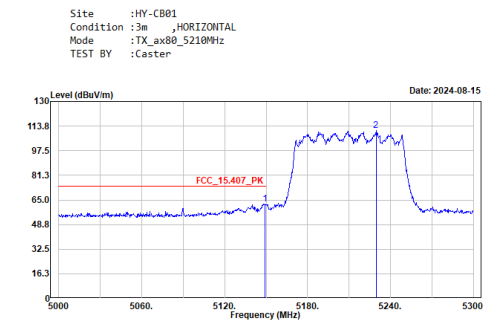

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.100	62.36	74.00	-11.64	47.96	14.40	Peak
2	5229.500	110.63	-----	-----	96.14	14.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
TEST BY :Caster

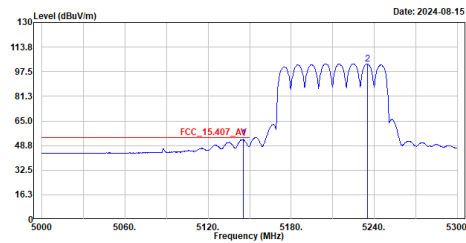


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5145.200	53.36	54.00	-0.64	38.96	14.40	Average
2	5234.900	102.75	-----	-----	88.26	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax80_5210MHz
TEST BY :Caster

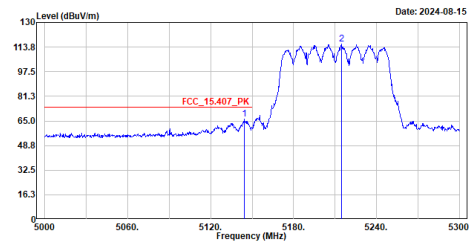


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.300	66.02	74.00	-7.98	51.63	14.39	Peak
2	5214.800	115.90	-----	-----	101.40	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

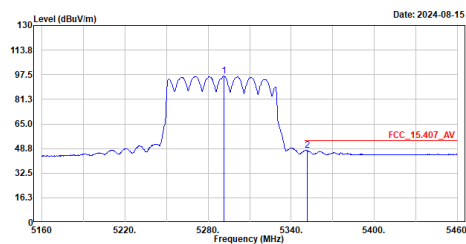


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5291.400	96.79	-----	-----	82.26	14.53	Average
2	5351.700	47.55	54.00	-6.45	33.02	14.53	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

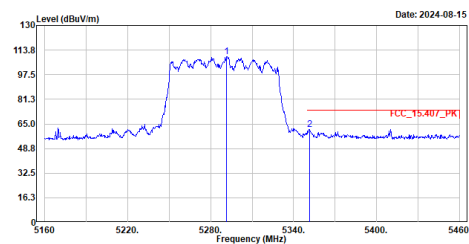


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5291.700	109.63	-----	-----	95.10	14.53	Peak
2	5351.400	61.35	74.00	-12.65	46.82	14.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

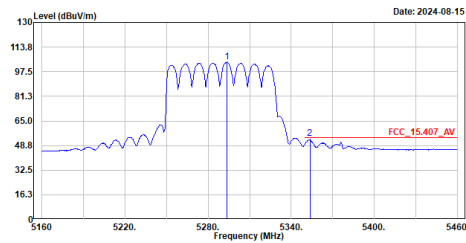


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5293.500	103.78	-----	-----	89.25	14.53	Average
2	5353.500	53.25	54.00	-0.75	38.71	14.54	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

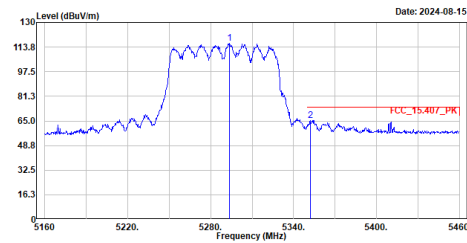


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5293.500	116.11	-----	-----	101.58	14.53	Peak
2	5352.000	65.14	74.00	-8.86	50.61	14.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

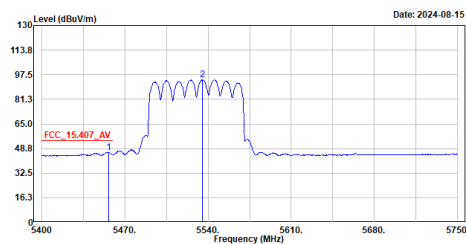


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5456.000	46.29	54.00	-7.71	31.27	15.02	Average
2	5535.100	94.13	-----	-----	78.69	15.44	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

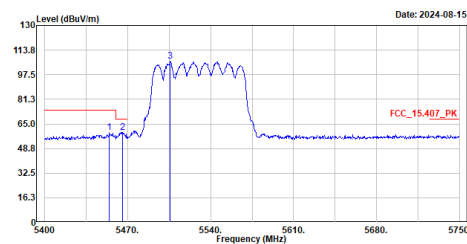


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5454.600	59.44	74.00	-14.56	44.43	15.01	Peak
2	5465.800	59.56	68.22	-8.66	44.45	15.11	Peak
3	5506.050	106.27	-----	-----	90.81	15.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

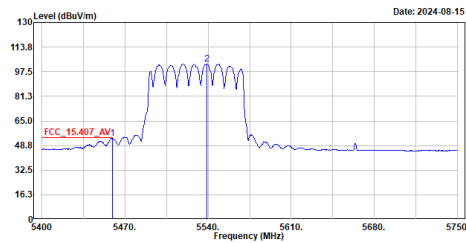

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.150	53.31	54.00	-0.69	38.26	15.05	Average
2	5538.950	102.64	-----	-----	87.20	15.44	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

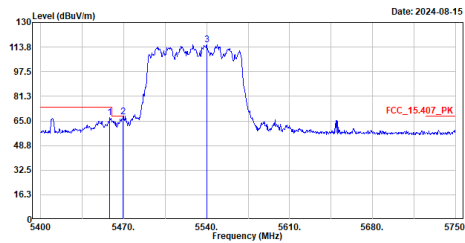

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.450	67.41	74.00	-6.59	52.37	15.04	Peak
2	5469.650	67.58	68.22	-0.64	52.43	15.15	Peak
3	5540.000	115.46	-----	-----	100.03	15.43	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5610MHz
TEST BY :Caster

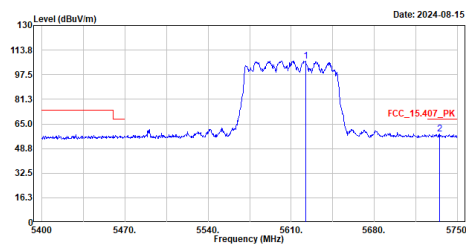

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5622.250	106.59	-----	-----	91.12	15.47	Peak
2	5734.950	58.16	68.22	-10.06	41.99	16.17	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5610MHz
TEST BY :Caster

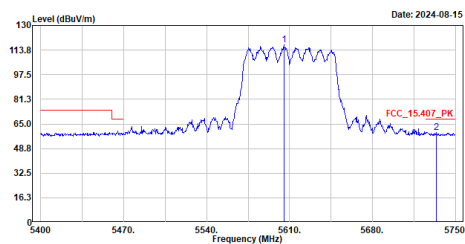

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5605.100	117.08	-----	-----	101.72	15.36	Peak
2	5733.550	59.49	68.22	-8.73	43.33	16.16	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_au80_5775MHz
TEST BY :Caster

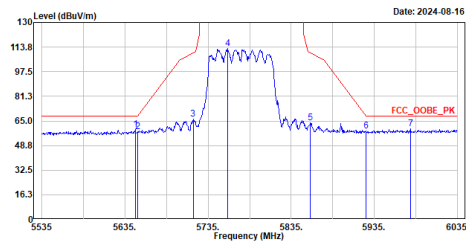


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5647.500	59.59	68.22	-8.63	43.94	15.65	Peak
2	5650.000	57.70	68.23	-10.53	42.04	15.66	Peak
3	5717.000	66.20	109.96	-43.76	50.12	16.08	Peak
4	5758.500	113.07	-----	-----	96.79	16.28	Peak
5	5858.000	63.62	109.96	-46.34	47.35	16.27	Peak
6	5925.000	58.22	68.23	-10.01	41.84	16.38	Peak
7	5978.500	59.85	68.22	-8.37	43.42	16.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_au80_5775MHz
TEST BY :Caster

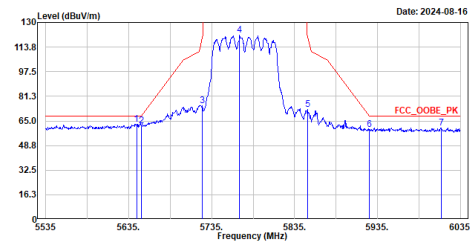


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5644.500	62.95	68.22	-5.27	47.32	15.63	Peak
2	5650.000	61.64	68.23	-6.59	45.98	15.66	Peak
3	5723.500	75.21	118.78	-43.57	59.10	16.11	Peak
4	5768.500	121.56	-----	-----	105.26	16.30	Peak
5	5850.500	72.38	121.06	-48.68	56.13	16.25	Peak
6	5925.000	59.36	68.23	-8.87	42.98	16.38	Peak
7	6011.500	60.40	68.22	-7.82	43.87	16.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Antenna Type: Dipole

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5180MHz
TEST BY :Peter

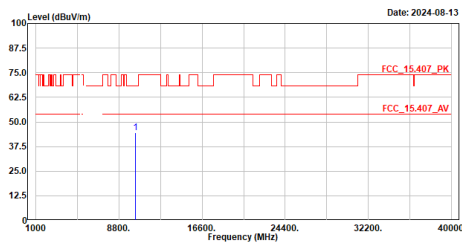


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10360.000	44.50	68.22	-23.72	53.74	-9.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5180MHz
TEST BY :Peter

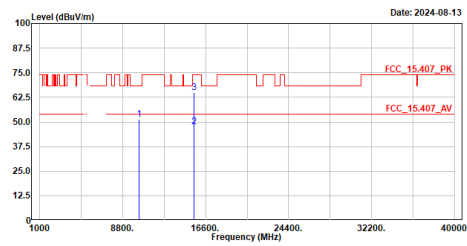


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10360.000	51.20	68.22	-17.02	60.44	-9.24	Peak
2	15540.000	47.38	54.00	-6.62	48.67	-1.29	Average
3	15540.000	65.07	74.00	-8.93	66.36	-1.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz
TEST BY :Peter

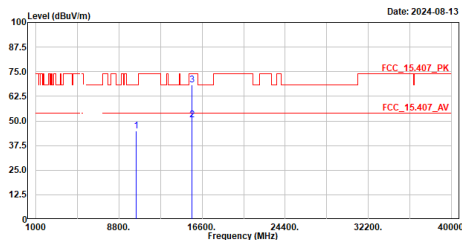


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10440.000	44.88	68.22	-23.34	54.25	-9.37	Peak
2	15660.000	50.59	54.00	-3.41	51.78	-1.19	Average
3	15660.000	68.16	74.00	-5.84	69.35	-1.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5220MHz
TEST BY :Peter

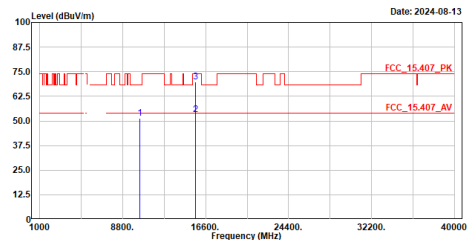


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10440.000	51.20	68.22	-17.02	60.57	-9.37	Peak
2	15660.000	53.29	54.00	-0.71	54.48	-1.19	Average
3	15660.000	69.85	74.00	-4.15	71.04	-1.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
TEST BY :Peter

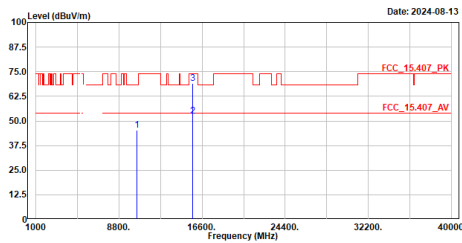


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	45.29	68.22	-22.93	54.62	-9.33	Peak
2	15720.000	52.33	54.00	-1.67	53.41	-1.08	Average
3	15720.000	69.01	74.00	-4.99	70.09	-1.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5240MHz
TEST BY :Peter

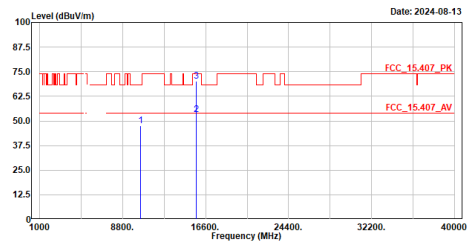


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	47.48	68.22	-20.74	56.81	-9.33	Peak
2	15720.000	53.35	54.00	-0.65	54.43	-1.08	Average
3	15720.000	70.19	74.00	-3.81	71.27	-1.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5260MHz
TEST BY :Peter

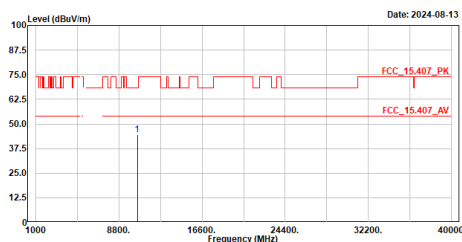


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	44.58	68.22	-23.64	53.83	-9.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5260MHz
TEST BY :Peter

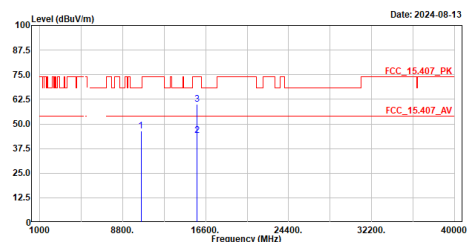


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	46.40	68.22	-21.82	55.65	-9.25	Peak
2	15780.000	43.97	54.00	-10.03	45.08	-1.11	Average
3	15780.000	59.94	74.00	-14.06	61.05	-1.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5300MHz
TEST BY :Peter

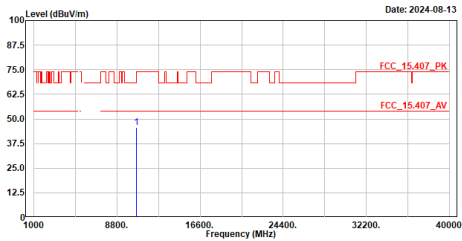

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	45.83	74.00	-28.17	54.65	-8.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5300MHz
TEST BY :Peter

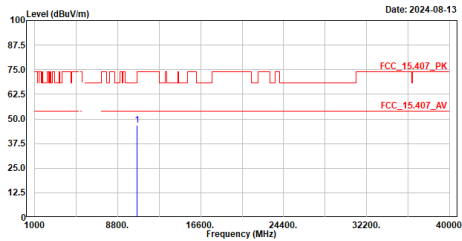

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	46.60	74.00	-27.40	55.42	-8.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5320MHz
TEST BY :Peter

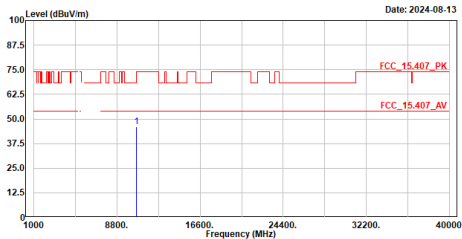

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	46.21	74.00	-27.79	55.11	-8.90	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5320MHz
TEST BY :Peter

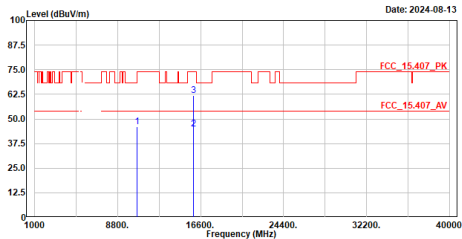

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10640.000	46.11	74.00	-27.89	55.01	-8.90	Peak
2	15960.000	44.83	54.00	-9.17	45.91	-1.08	Average
3	15960.000	61.85	74.00	-12.15	62.93	-1.08	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5500MHz
TEST BY :Peter

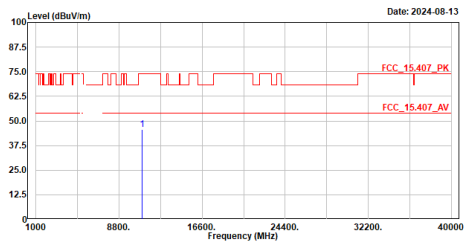


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	45.50	74.00	-28.50	53.97	-8.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5500MHz
TEST BY :Peter

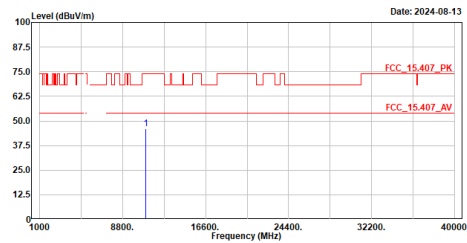


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	46.03	74.00	-27.97	54.50	-8.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5500MHz
TEST BY :Peter

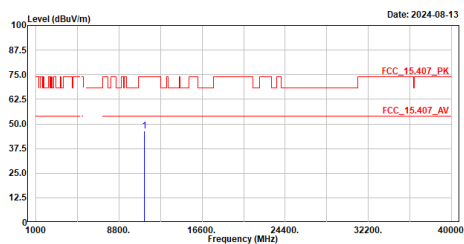


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	46.49	74.00	-27.51	54.28	-7.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5500MHz
TEST BY :Peter

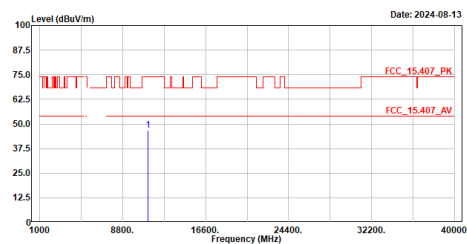


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	46.77	74.00	-27.23	54.56	-7.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5700MHz
TEST BY :Peter

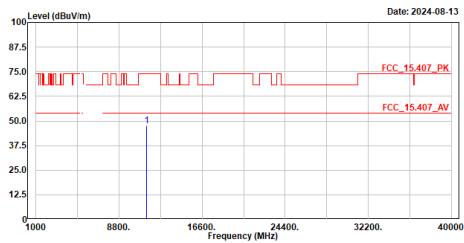


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	47.60	74.00	-26.40	54.81	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5700MHz
TEST BY :Peter

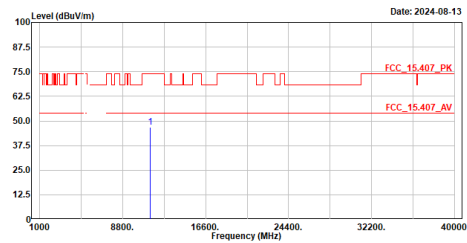


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	46.98	74.00	-27.02	54.19	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5720MHz
TEST BY :Peter

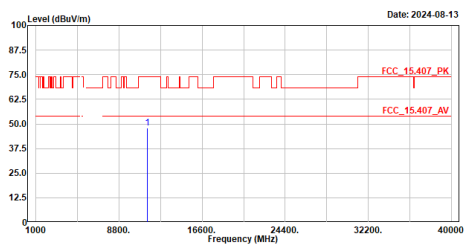


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11440.000	48.01	74.00	-25.99	55.15	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5720MHz
TEST BY :Peter

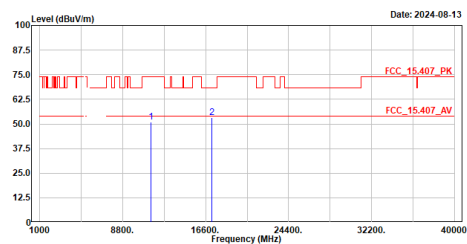


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11440.000	51.00	74.00	-23.00	58.14	-7.14	Peak
2	17160.000	53.26	68.22	-14.96	53.45	-0.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
TEST BY :Peter

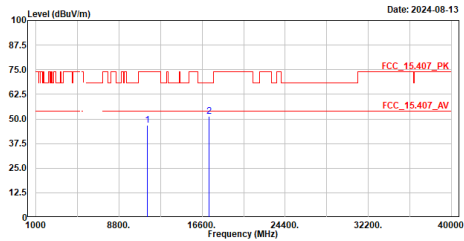


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	46.83	74.00	-27.17	53.93	-7.10	Peak
2	17235.000	51.45	68.22	-16.77	51.98	-0.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
TEST BY :Peter

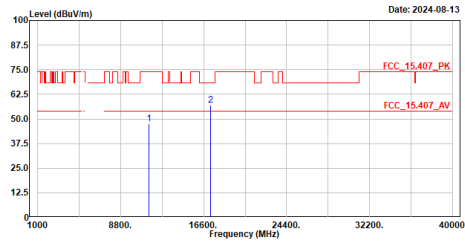


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	47.58	74.00	-26.42	54.68	-7.10	Peak
2	17235.000	56.84	68.22	-11.38	57.37	-0.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5785MHz
TEST BY :Peter

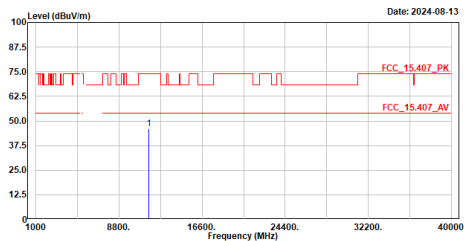


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	46.01	74.00	-27.99	53.20	-7.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5785MHz
TEST BY :Peter

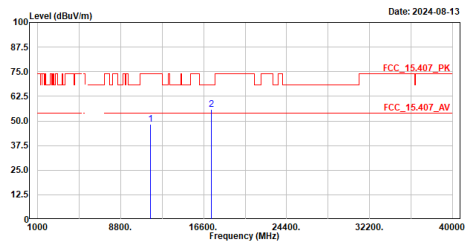


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	48.42	74.00	-25.58	55.61	-7.19	Peak
2	17355.000	55.99	68.22	-12.23	56.42	-0.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5625MHz
TEST BY :Peter

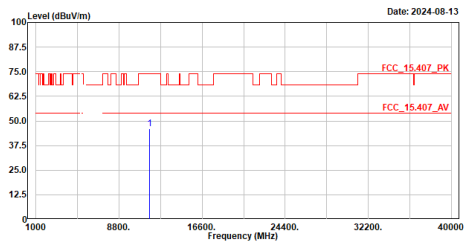


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	45.99	74.00	-28.01	53.17	-7.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5625MHz
TEST BY :Peter

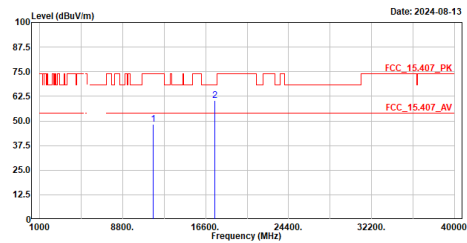


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	48.16	74.00	-25.84	55.34	-7.18	Peak
2	17475.000	60.28	68.22	-7.94	60.49	-8.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5180MHz
TEST BY :Peter

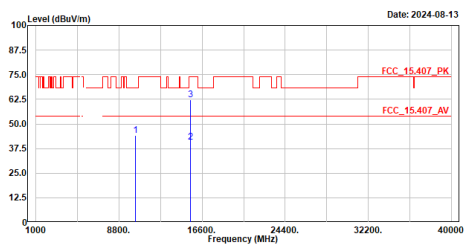


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	44.23	68.22	-23.99	53.47	-9.24	Peak
2	15540.000	40.72	54.00	-13.28	42.01	-1.29	Average
3	15540.000	62.20	74.00	-11.80	63.49	-1.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5180MHz
TEST BY :Peter

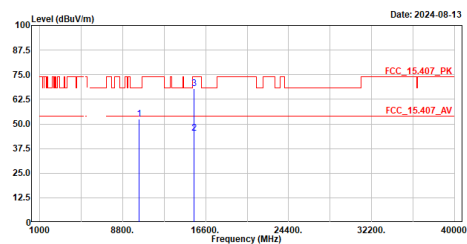


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10360.000	52.44	68.22	-15.78	61.68	-9.24	Peak
2	15540.000	45.33	54.00	-8.67	46.62	-1.29	Average
3	15540.000	67.97	74.00	-6.03	69.26	-1.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5220MHz
TEST BY :Peter

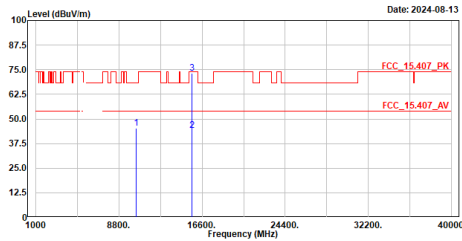


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10440.000	45.16	68.22	-23.06	54.53	-9.37	Peak
2	15660.000	44.33	54.00	-9.67	45.52	-1.19	Average
3	15660.000	73.27	74.00	-0.73	74.46	-1.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5220MHz
TEST BY :Peter

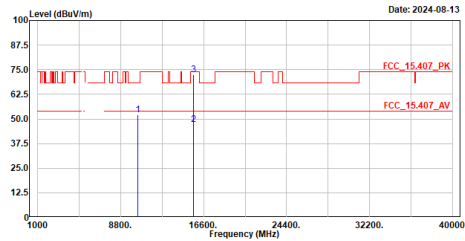


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10440.000	52.25	68.22	-15.97	61.62	-9.37	Peak
2	15660.000	47.02	54.00	-6.98	48.21	-1.19	Average
3	15660.000	72.27	74.00	-1.73	73.46	-1.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5240MHz
TEST BY :Peter

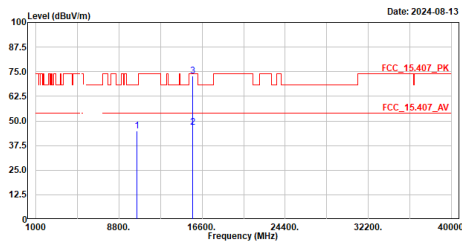


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10480.000	45.01	68.22	-23.21	54.34	-9.33	Peak
2	15720.000	46.66	54.00	-7.34	47.74	-1.08	Average
3	15720.000	72.68	74.00	-1.32	73.76	-1.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5240MHz
TEST BY :Peter

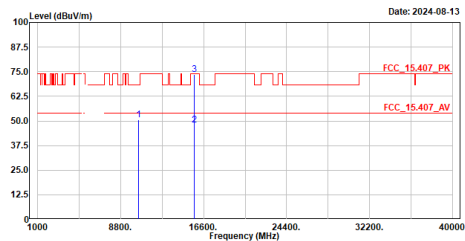


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10480.000	50.65	68.22	-17.57	59.98	-9.33	Peak
2	15720.000	47.99	54.00	-6.01	49.07	-1.08	Average
3	15720.000	73.40	74.00	-0.60	74.48	-1.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5260MHz
TEST BY :Peter

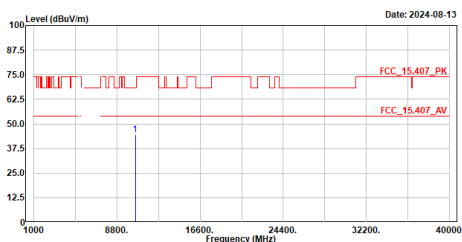


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	44.40	68.22	-23.82	53.65	-9.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5260MHz
TEST BY :Peter

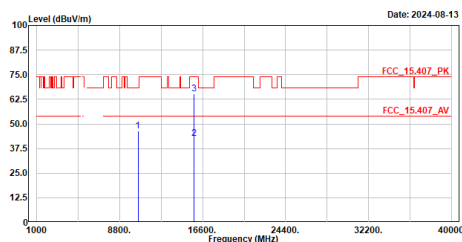


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	46.54	68.22	-21.68	55.79	-9.25	Peak
2	15780.000	42.81	54.00	-11.19	43.92	-1.11	Average
3	15780.000	65.17	74.00	-8.83	66.28	-1.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5300MHz
TEST BY :Peter

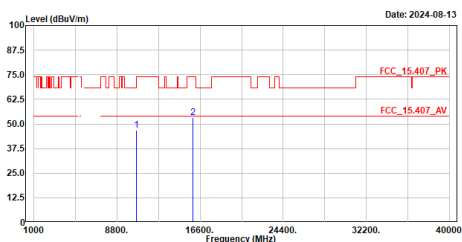


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	46.84	74.00	-27.16	55.66	-8.82	Peak
2	15900.000	53.26	74.00	-20.74	54.42	-1.16	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5300MHz
TEST BY :Peter

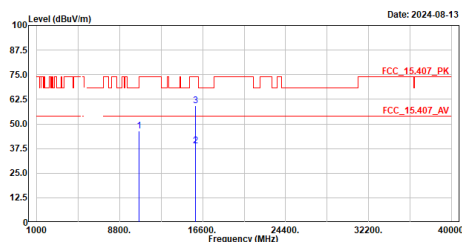


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10600.000	46.44	74.00	-27.56	55.26	-8.82	Peak
2	15900.000	38.85	54.00	-15.15	40.01	-1.16	Average
3	15900.000	59.38	74.00	-14.62	60.54	-1.16	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5320MHz
TEST BY :Peter

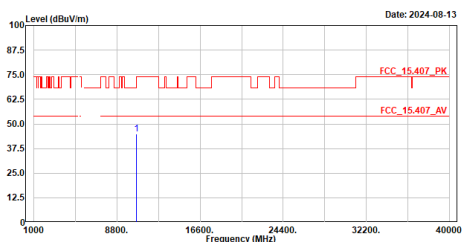


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	45.05	74.00	-28.95	53.95	-8.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5320MHz
TEST BY :Peter

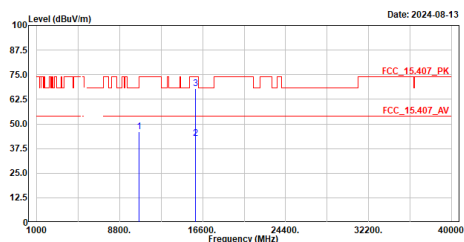


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10640.000	45.93	74.00	-28.07	54.83	-8.90	Peak
2	15960.000	42.52	54.00	-11.48	43.60	-1.08	Average
3	15960.000	67.79	74.00	-6.21	68.87	-1.08	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5500MHz
TEST BY :Peter

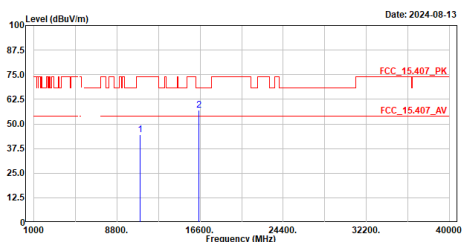


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11000.000	44.53	74.00	-29.47	53.00	-8.47	Peak
2	16500.000	56.81	68.22	-11.41	57.07	-0.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5500MHz
TEST BY :Peter

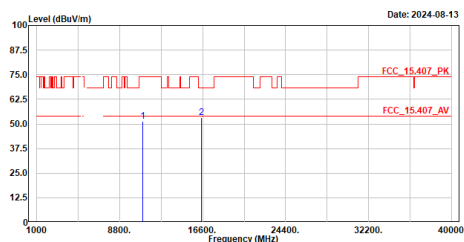


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11000.000	51.50	74.00	-22.50	59.97	-8.47	Peak
2	16500.000	53.07	68.22	-15.15	53.33	-0.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5580MHz
TEST BY :Peter

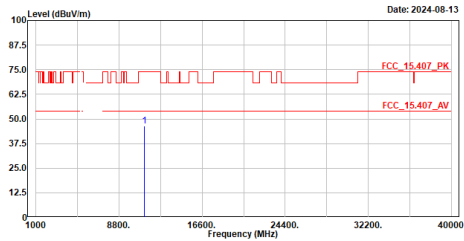


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	46.59	74.00	-27.41	54.38	-7.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5580MHz
TEST BY :Peter

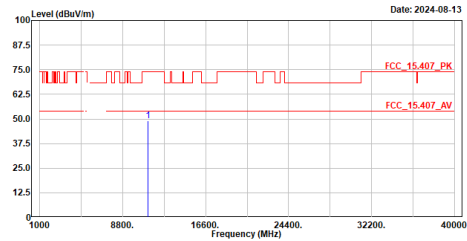


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11160.000	49.05	74.00	-24.95	56.84	-7.79	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5700MHz
TEST BY :Peter

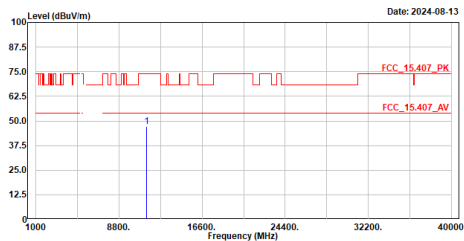


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	47.21	74.00	-26.79	54.42	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5700MHz
TEST BY :Peter

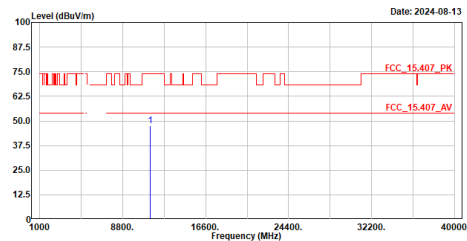


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11400.000	47.50	74.00	-26.50	54.71	-7.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5720MHz
TEST BY :Peter

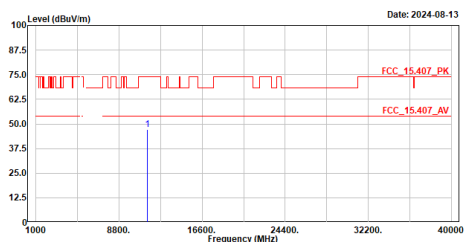


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	47.04	74.00	-26.96	54.18	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5720MHz
TEST BY :Peter

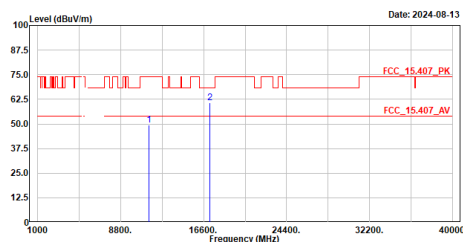


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11440.000	49.29	74.00	-24.71	56.43	-7.14	Peak
2	17160.000	60.84	68.22	-7.38	61.03	-0.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5745MHz
TEST BY :Peter

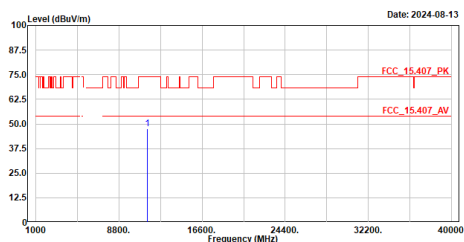


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	47.51	74.00	-26.49	54.61	-7.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5745MHz
TEST BY :Peter

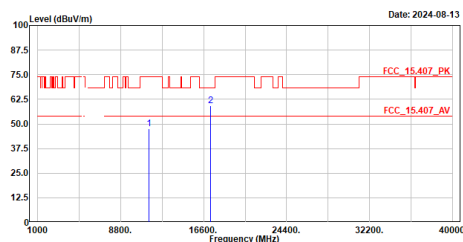


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11490.000	47.69	74.00	-26.31	54.79	-7.10	Peak
2	17235.000	59.25	68.22	-8.97	59.78	-0.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5785MHz
TEST BY :Peter

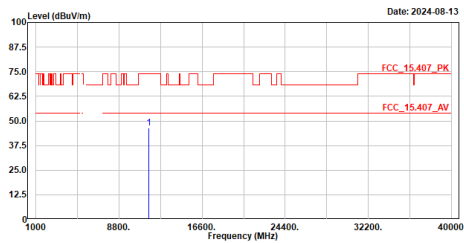


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	46.31	74.00	-27.69	53.50	-7.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5785MHz
TEST BY :Peter

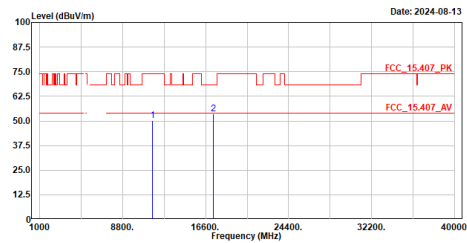


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11570.000	50.26	74.00	-23.74	57.45	-7.19	Peak
2	17355.000	53.56	68.22	-14.66	53.99	-0.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax20_5825MHz
TEST BY :Peter

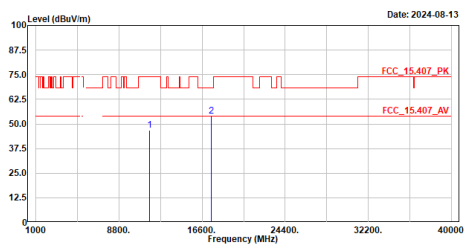


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	46.94	74.00	-27.06	54.12	-7.18	Peak
2	17475.000	53.88	68.22	-14.34	54.09	-0.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax20_5825MHz
TEST BY :Peter

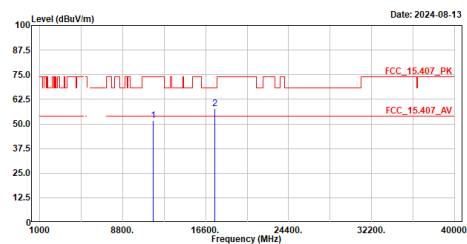


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11650.000	51.65	74.00	-22.35	58.83	-7.18	Peak
2	17475.000	57.66	68.22	-10.56	57.87	-0.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5190MHz
TEST BY :Peter

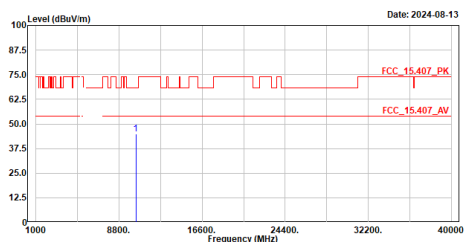


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	45.00	68.22	-23.22	54.32	-9.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5190MHz
TEST BY :Peter

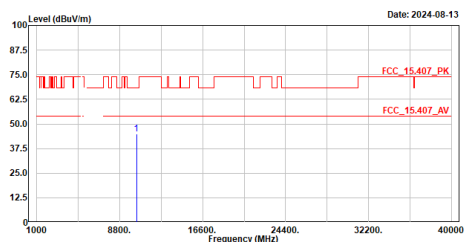


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	44.98	68.22	-23.24	54.30	-9.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

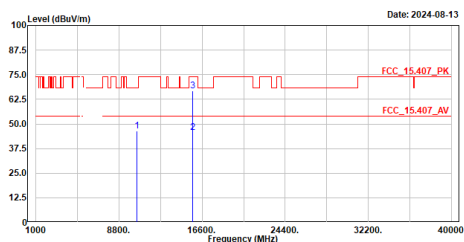


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	46.49	68.22	-21.73	55.84	-9.35	Peak
2	15690.000	45.82	54.00	-8.18	46.97	-1.15	Average
3	15690.000	66.78	74.00	-7.22	67.93	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5230MHz
TEST BY :Caster

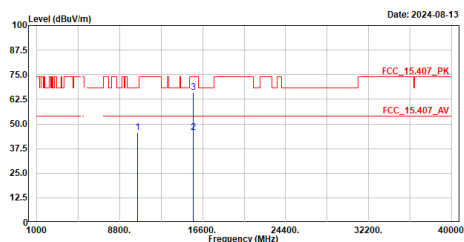


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	45.70	68.22	-22.52	55.05	-9.35	Peak
2	15690.000	45.62	54.00	-8.38	46.77	-1.15	Average
3	15690.000	65.92	74.00	-8.08	67.07	-1.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5270MHz
TEST BY :Caster

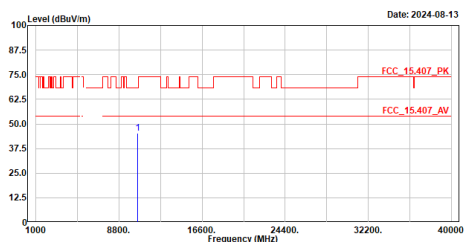


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	45.37	68.22	-22.85	54.51	-9.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5270MHz
TEST BY :Caster

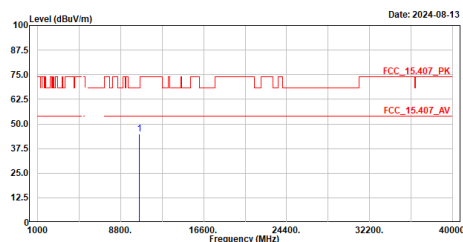


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10540.000	45.08	68.22	-23.14	54.22	-9.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

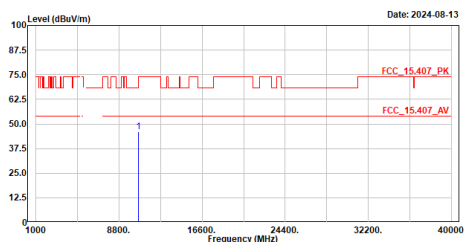


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	46.10	74.00	-27.90	54.95	-8.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5310MHz
TEST BY :Caster

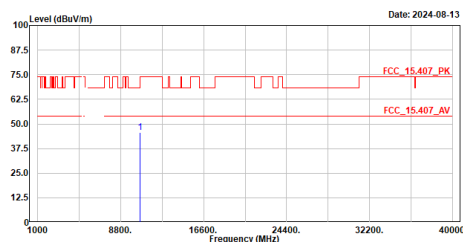


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10620.000	45.55	74.00	-28.45	54.40	-8.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

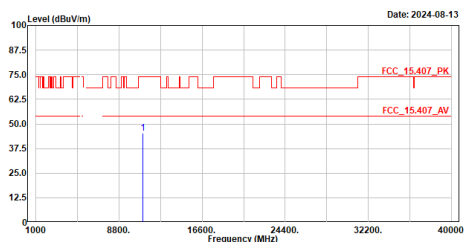


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	45.26	74.00	-28.74	53.62	-8.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5510MHz
TEST BY :Caster

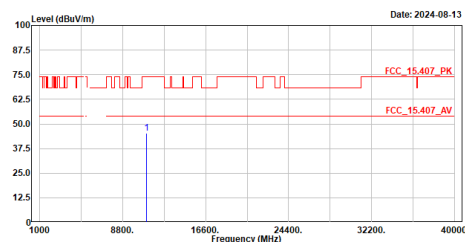


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11020.000	45.35	74.00	-28.65	53.71	-8.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5550MHz
TEST BY :Caster

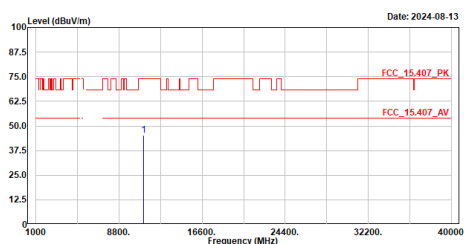


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	45.30	74.00	-28.70	53.29	-7.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5550MHz
TEST BY :Caster

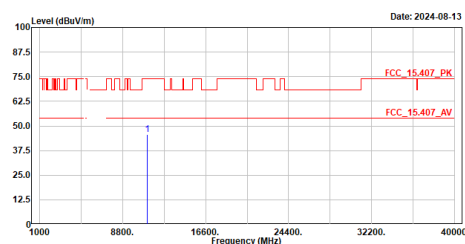


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11100.000	45.66	74.00	-28.34	53.65	-7.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

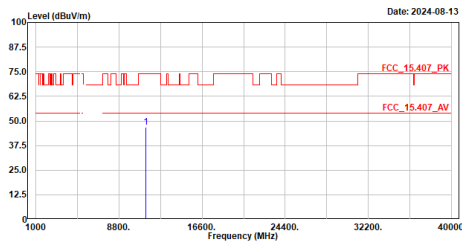


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	46.80	74.00	-27.20	54.16	-7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5670MHz
TEST BY :Caster

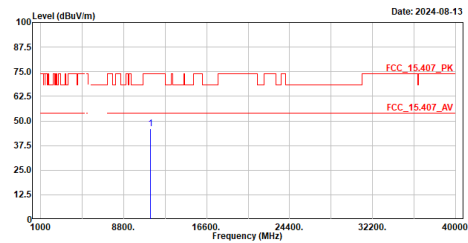


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11340.000	46.17	74.00	-27.83	53.53	-7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5710MHz
TEST BY :Caster

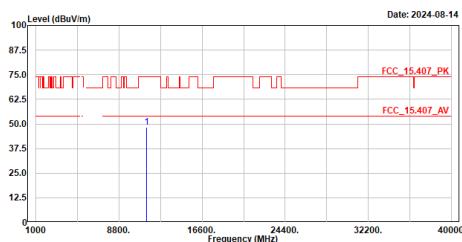


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11420.000	48.27	74.00	-25.73	55.44	-7.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5710MHz
TEST BY :Caster

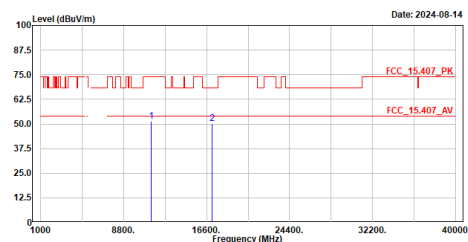


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11420.000	51.31	74.00	-22.69	58.48	-7.17	Peak
2	17130.000	50.17	68.22	-18.05	50.36	-0.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

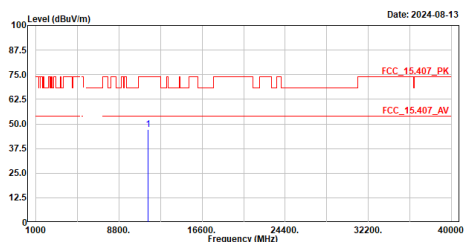


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	47.34	74.00	-26.66	54.45	-7.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

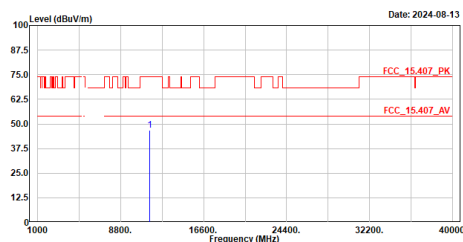


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	46.69	74.00	-27.31	53.80	-7.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

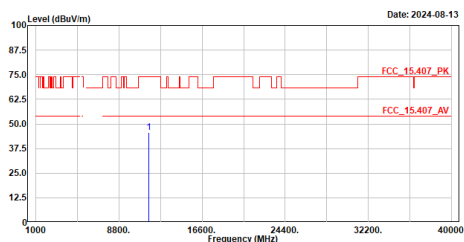


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	45.66	74.00	-28.34	52.90	-7.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax40_5795MHz
TEST BY :Caster

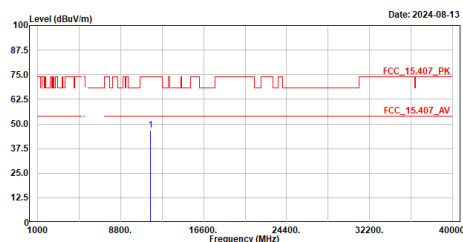


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	46.97	74.00	-27.03	54.21	-7.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

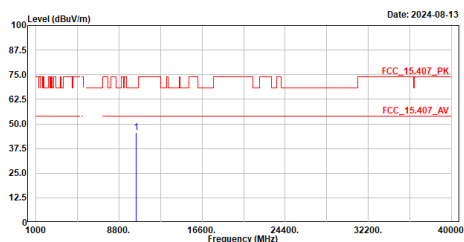


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10420.000	45.59	68.22	-22.63	54.97	-9.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5210MHz
TEST BY :Caster

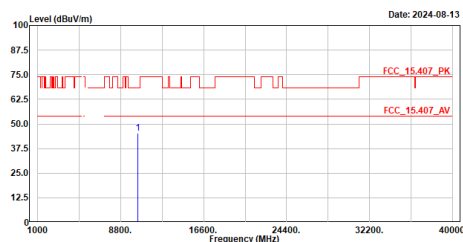


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10420.000	45.48	68.22	-22.82	54.78	-9.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

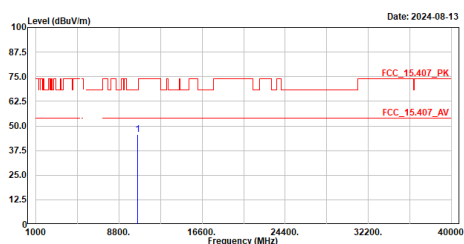


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10580.000	45.48	68.22	-22.74	54.41	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5290MHz
TEST BY :Caster

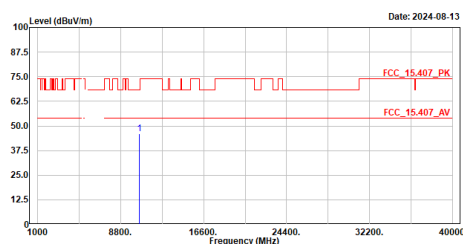


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	10580.000	45.92	68.22	-22.30	54.85	-8.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

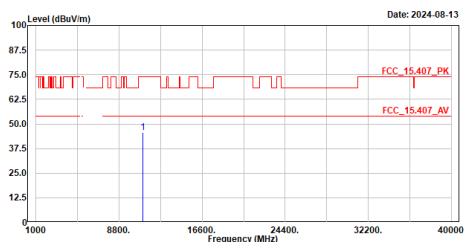


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	45.66	74.00	-28.34	53.81	-8.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5530MHz
TEST BY :Caster

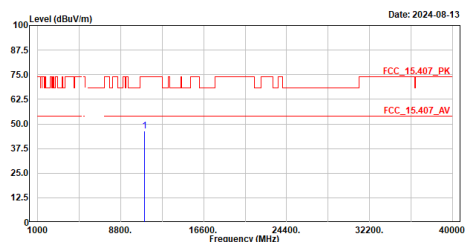


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	46.48	74.00	-27.52	54.63	-8.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5610MHz
TEST BY :Caster

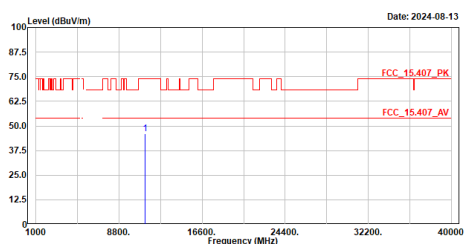


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	46.20	74.00	-27.80	53.73	-7.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5610MHz
TEST BY :Caster

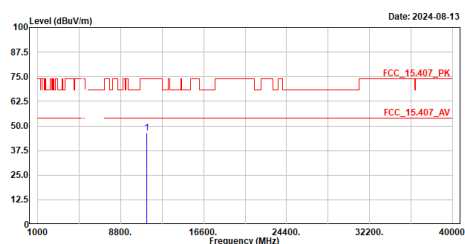


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	46.56	74.00	-27.44	54.09	-7.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5690MHz
TEST BY :Caster

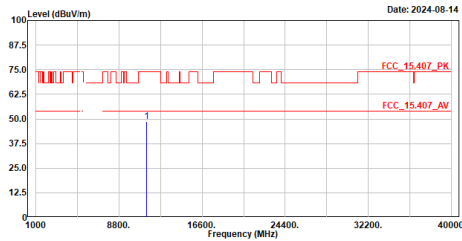


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	48.87	74.00	-25.13	56.13	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5690MHz
TEST BY :Caster

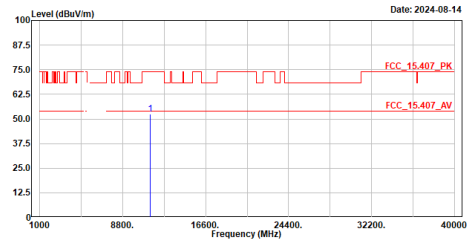


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	52.51	74.00	-21.49	59.77	-7.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

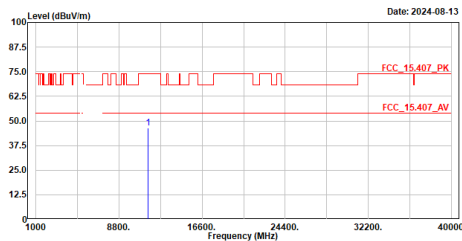


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	46.44	74.00	-27.56	53.58	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ax80_5775MHz
TEST BY :Caster

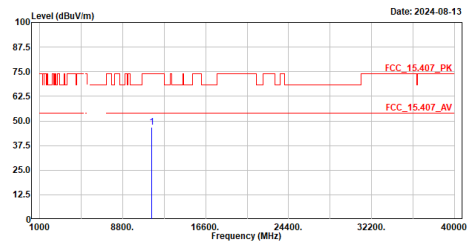


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	46.93	74.00	-27.07	54.07	-7.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

DC Power Supply mode


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_au80_5775MHz
TEST BY :Caster

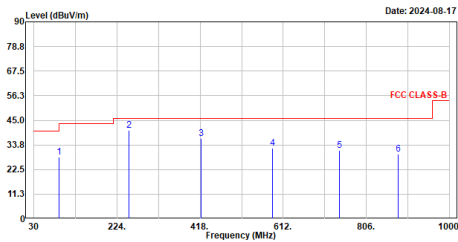

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	88.200	28.04	43.50	-15.46	57.80	-29.76	QP
2	252.130	40.40	46.00	-5.60	65.17	-24.77	QP
3	419.940	36.54	46.00	-9.46	56.43	-19.89	QP
4	587.750	32.37	46.00	-13.63	48.13	-15.76	QP
5	742.950	31.10	46.00	-14.90	44.28	-13.18	QP
6	879.720	29.65	46.00	-16.35	41.68	-12.03	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_au80_5775MHz
TEST BY :Caster

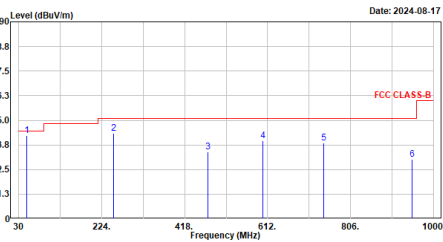


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	48.430	37.99	40.00	-2.01	61.23	-23.24	QP
2	252.130	39.22	46.00	-6.78	63.99	-24.77	QP
3	473.290	30.61	46.00	-15.39	49.03	-18.42	QP
4	600.360	35.67	46.00	-10.33	50.97	-15.30	QP
5	742.950	34.48	46.00	-11.52	47.66	-13.18	QP
6	950.530	27.25	46.00	-18.75	37.88	-10.63	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

PoE mode


Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_au80_5775MHz
TEST BY :Caster

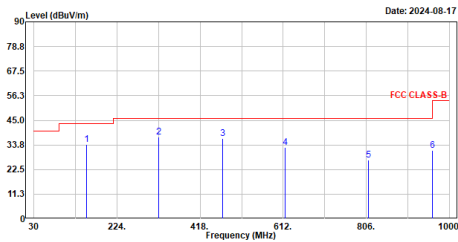

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	152.220	33.84	43.50	-9.66	57.66	-23.82	QP
2	321.970	37.25	46.00	-8.75	59.50	-22.25	QP
3	470.380	36.69	46.00	-9.31	55.12	-18.43	QP
4	615.880	32.71	46.00	-13.29	48.04	-15.33	QP
5	810.850	26.87	46.00	-19.13	39.32	-12.45	QP
6	960.230	31.20	54.00	-22.80	42.00	-10.80	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_au80_5775MHz
TEST BY :Caster

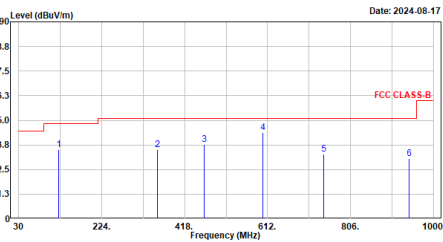

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	124.090	31.69	43.50	-11.81	57.67	-25.98	QP
2	354.950	31.74	46.00	-14.26	53.48	-21.74	QP
3	463.590	34.08	46.00	-11.92	52.52	-18.44	QP
4	600.360	39.38	46.00	-6.62	54.68	-15.30	QP
5	742.950	29.65	46.00	-16.35	42.83	-13.18	QP
6	942.770	27.60	46.00	-18.40	38.30	-10.70	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Peter

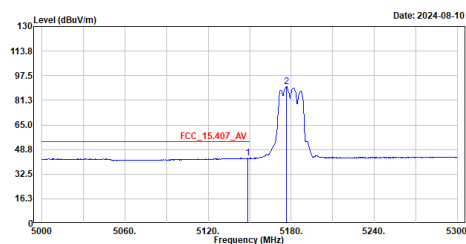


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5148.500	43.20	54.00	-10.80	28.80	14.40	Average
2	5176.700	90.39	-----	-----	75.94	14.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Peter

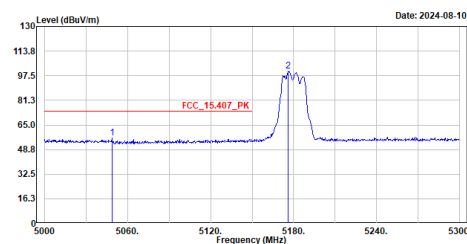


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5048.600	56.41	74.00	-17.59	42.11	14.30	Peak
2	5176.100	100.36	-----	-----	85.91	14.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Peter

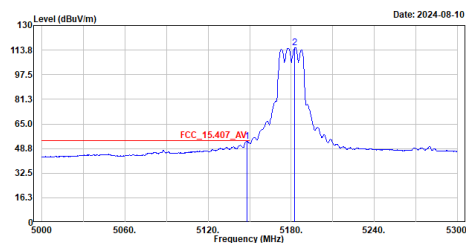


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.900	53.45	54.00	-0.55	39.05	14.40	Average
2	5182.700	115.21	-----	-----	100.74	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Peter

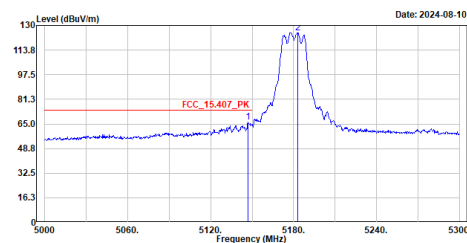


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.000	66.06	74.00	-7.94	51.66	14.40	Peak
2	5183.000	125.31	-----	-----	110.84	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_B1
TEST BY :Peter

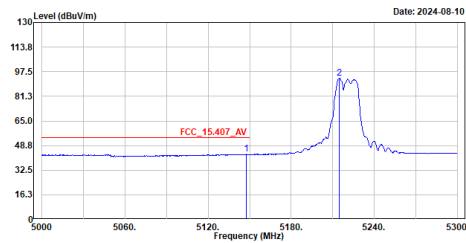


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.600	42.94	54.00	-11.06	28.54	14.40	Average
2	5214.800	93.35	-----	-----	78.85	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_B1
TEST BY :Peter

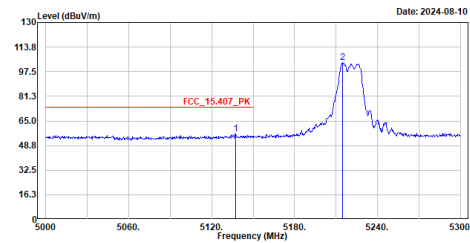


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5137.400	56.44	74.00	-17.56	42.05	14.39	Peak
2	5214.500	103.37	-----	-----	88.87	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_B1
TEST BY :Peter

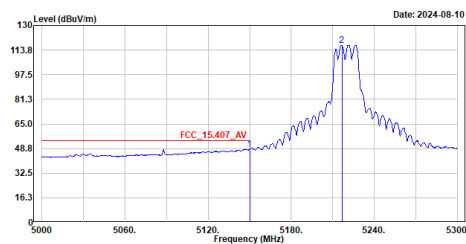


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	48.28	54.00	-5.72	33.88	14.40	Average
2	5216.600	116.95	-----	-----	102.44	14.51	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_B1
TEST BY :Peter

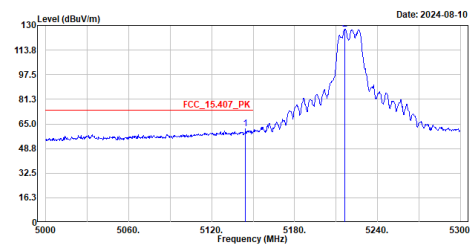


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.600	61.76	74.00	-12.24	47.37	14.39	Peak
2	5216.300	127.60	-----	-----	113.09	14.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_B2
TEST BY :Peter

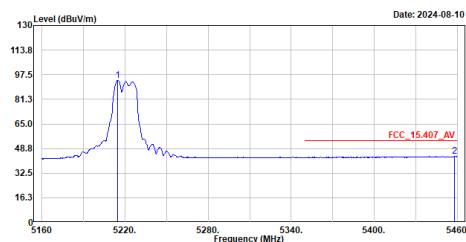


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5214.600	93.82	-----	-----	79.32	14.50	Average
2	5457.900	43.58	54.00	-10.42	28.54	15.04	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5220MHz_B2
TEST BY :Peter

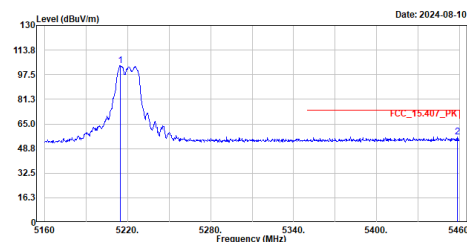


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5214.600	103.71	-----	-----	89.21	14.50	Peak
2	5458.500	56.44	74.00	-17.56	41.40	15.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_B2
TEST BY :Peter

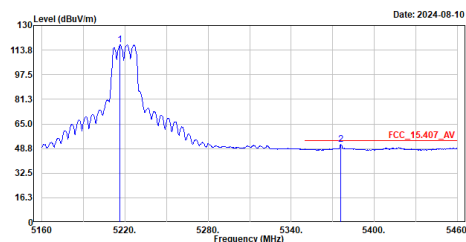


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5216.400	117.17	-----	-----	102.66	14.51	Average
2	5376.000	51.55	54.00	-2.45	36.95	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5220MHz_B2
TEST BY :Peter

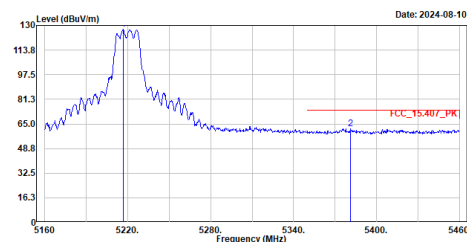


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5216.700	127.48	-----	-----	112.97	14.51	Peak
2	5381.400	61.98	74.00	-12.02	47.37	14.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Peter

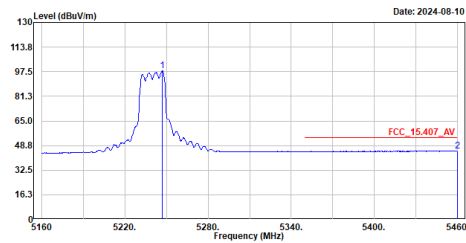


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5247.000	98.29	-----	-----	83.82	14.47	Average
2	5460.000	45.35	54.00	-8.65	30.30	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Peter

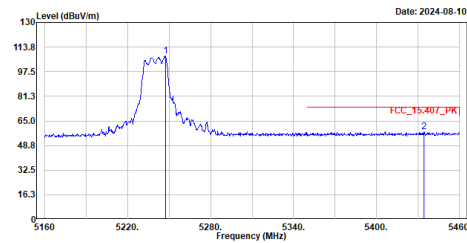


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5247.300	107.94	-----	-----	93.47	14.47	Peak
2	5434.200	57.82	74.00	-16.18	42.97	14.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Peter

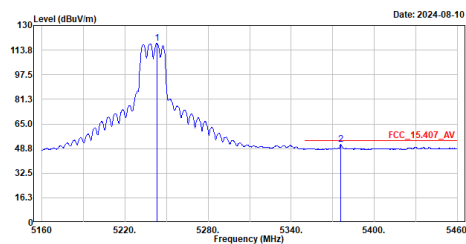


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5243.100	118.41	-----	-----	103.92	14.49	Average
2	5376.000	51.30	54.00	-2.70	36.70	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Peter

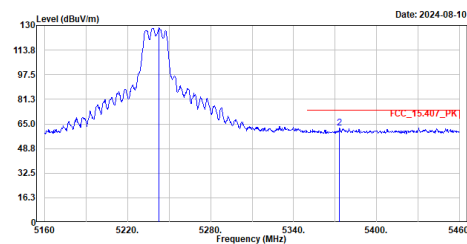


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5242.800	128.44	-----	-----	113.95	14.49	Peak
2	5373.300	62.40	74.00	-11.60	47.81	14.59	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5260MHz
TEST BY :Peter

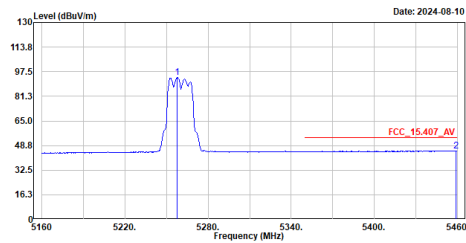


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5257.800	93.80	-----	-----	79.32	14.48	Average
2	5458.800	45.37	54.00	-8.63	30.32	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5260MHz
TEST BY :Peter

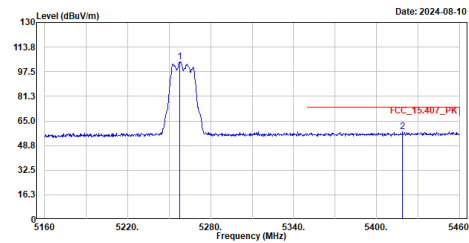


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5257.500	104.04	-----	-----	89.56	14.48	Peak
2	5418.900	57.91	74.00	-16.09	43.16	14.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5260MHz
TEST BY :Peter

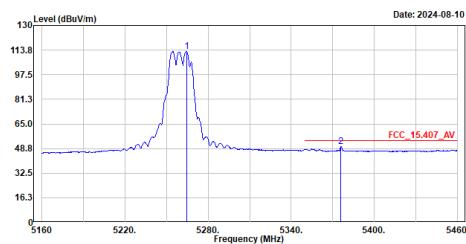


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5264.400	112.74	-----	-----	98.25	14.49	Average
2	5376.000	50.28	54.00	-3.72	35.68	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5260MHz
TEST BY :Peter

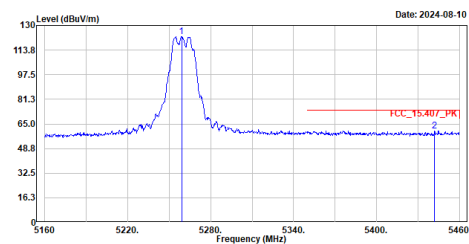


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5259.000	122.71	-----	-----	108.22	14.49	Peak
2	5442.000	60.50	74.00	-13.50	45.60	14.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5300MHz
TEST BY :Peter

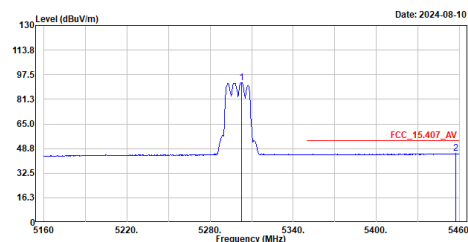


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5302.800	92.44	-----	-----	77.90	14.54	Average
2	5457.300	45.43	54.00	-8.57	30.40	15.03	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5300MHz
TEST BY :Peter

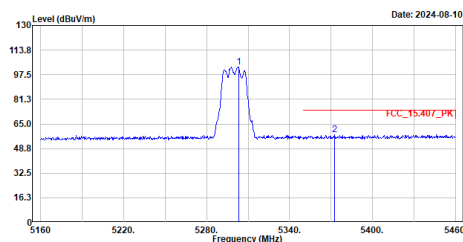


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5303.100	102.60	-----	-----	88.06	14.54	Peak
2	5372.700	57.95	74.00	-16.05	43.37	14.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5300MHz
TEST BY :Peter

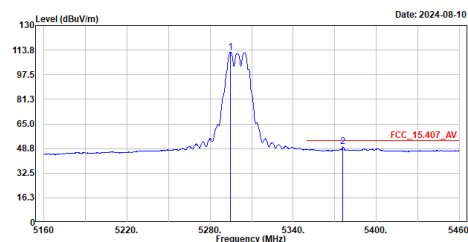


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5294.700	112.33	-----	-----	97.79	14.54	Average
2	5376.000	49.89	54.00	-4.11	35.29	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5300MHz
TEST BY :Peter

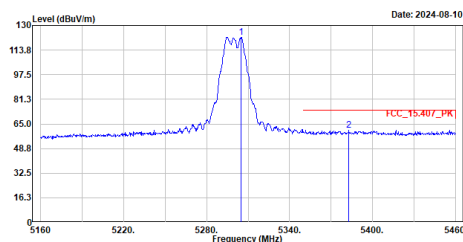


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5304.900	122.09	-----	-----	107.55	14.54	Peak
2	5382.900	61.07	74.00	-12.93	46.45	14.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
TEST BY :Peter

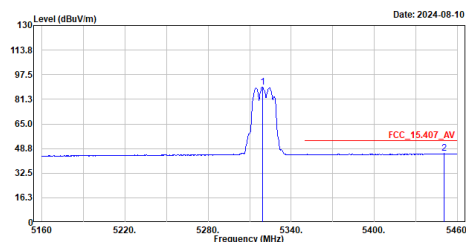


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5319.300	89.51	-----	-----	74.98	14.53	Average
2	5450.400	45.38	54.00	-8.62	30.41	14.97	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
TEST BY :Peter

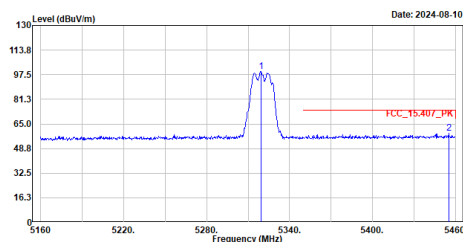


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5319.300	99.70	-----	-----	85.17	14.53	Peak
2	5455.200	58.63	74.00	-15.37	43.62	15.01	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5320MHz
TEST BY :Peter

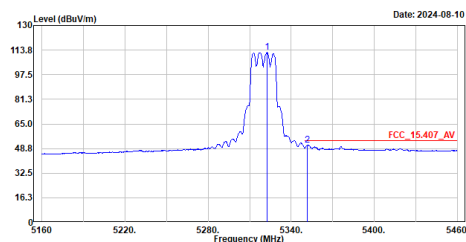


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5322.600	112.18	-----	-----	97.65	14.53	Average
2	5351.700	51.22	54.00	-2.78	36.69	14.53	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5320MHz
TEST BY :Peter

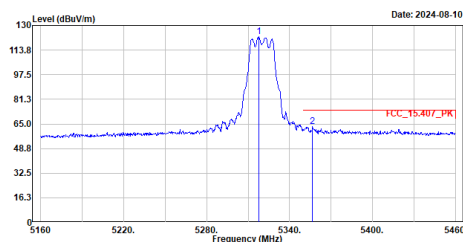


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5317.800	122.40	-----	-----	107.87	14.53	Peak
2	5356.500	63.27	74.00	-10.73	48.72	14.55	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
TEST BY :Peter

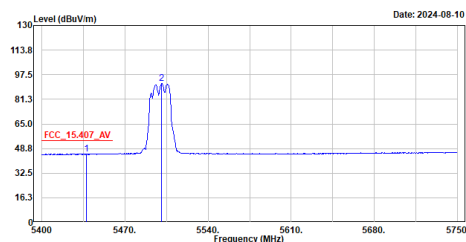

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5437.450	45.33	54.00	-8.67	30.46	14.87	Average
2	5500.800	91.77	-----	-----	76.34	15.43	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
TEST BY :Peter

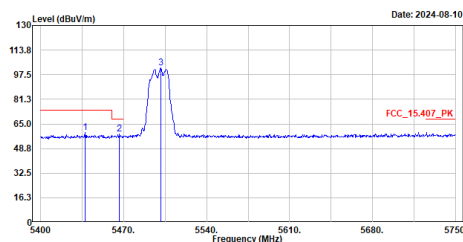

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5437.450	59.32	74.00	-14.68	44.45	14.87	Peak
2	5466.500	58.30	68.22	-9.92	43.18	15.12	Peak
3	5501.500	101.80	-----	-----	86.35	15.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5500MHz
TEST BY :Peter

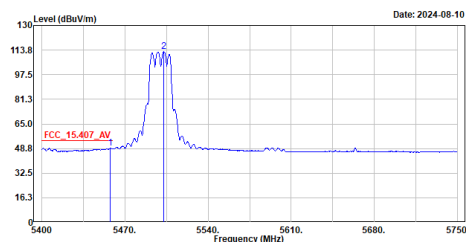

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.400	49.02	54.00	-4.98	33.99	15.03	Average
2	5502.900	112.74	-----	-----	97.29	15.45	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5500MHz
TEST BY :Peter

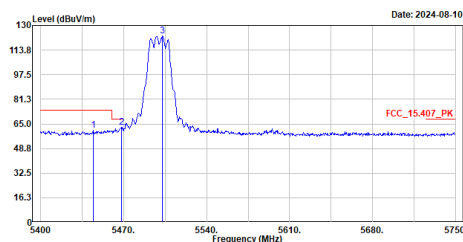

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5444.450	60.87	74.00	-13.13	45.94	14.93	Peak
2	5468.250	62.79	68.22	-5.43	47.66	15.13	Peak
3	5502.900	122.96	-----	-----	107.51	15.45	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5580MHz
TEST BY :Peter

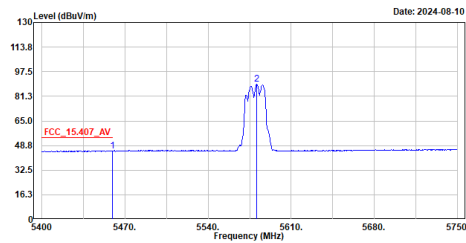

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5459.150	45.29	54.00	-8.71	30.24	15.05	Average
2	5580.950	89.28	-----	-----	73.95	15.33	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5580MHz
TEST BY :Peter

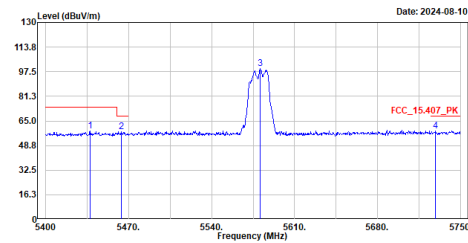

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5437.450	58.20	74.00	-15.80	43.33	14.87	Peak
2	5464.050	57.79	68.22	-10.43	42.69	15.10	Peak
3	5580.950	99.69	-----	-----	84.36	15.33	Peak
4	5729.000	58.21	68.22	-10.01	42.07	16.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5580MHz
TEST BY :Peter

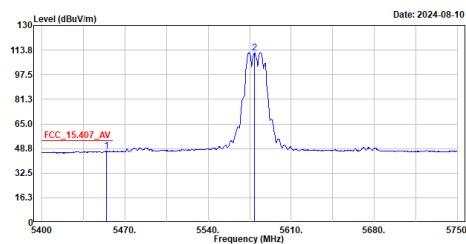

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5454.600	46.90	54.00	-7.10	31.89	15.01	Average
2	5579.200	112.05	-----	-----	96.72	15.33	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5580MHz
TEST BY :Peter

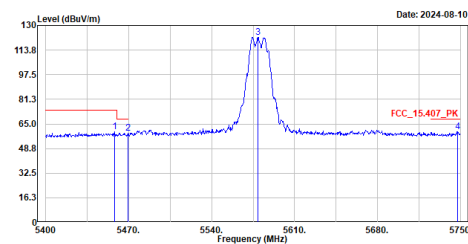

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.100	59.69	74.00	-14.31	44.65	15.04	Peak
2	5469.650	58.80	68.22	-9.42	43.65	15.15	Peak
3	5579.200	122.30	-----	-----	106.97	15.33	Peak
4	5747.550	59.95	68.22	-8.27	43.72	16.23	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5700MHz
TEST BY :Peter

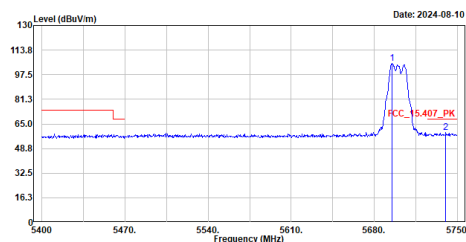


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5695.050	104.98	-----	-----	89.01	15.97	Peak
2	5740.200	59.35	68.22	-8.87	43.16	16.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5700MHz
TEST BY :Peter

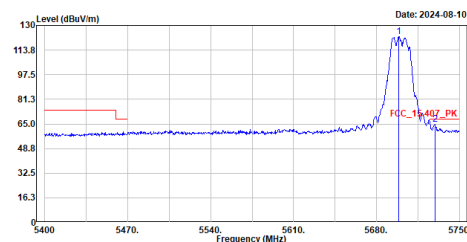


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5698.900	122.63	-----	-----	106.64	15.99	Peak
2	5729.350	64.54	68.22	-3.68	48.40	16.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
TEST BY :Peter

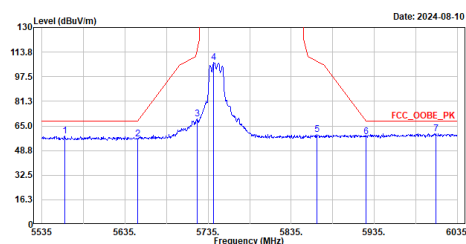


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5562.500	58.33	68.22	-9.89	42.94	15.39	Peak
2	5650.000	56.51	68.23	-11.72	40.85	15.66	Peak
3	5721.500	69.53	114.22	-44.69	53.42	16.11	Peak
4	5742.000	106.87	-----	-----	90.66	16.21	Peak
5	5806.000	59.38	107.72	-48.34	43.09	16.29	Peak
6	5925.000	57.73	68.23	-10.50	41.35	16.38	Peak
7	6009.500	59.96	68.22	-8.26	43.43	16.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5745MHz
TEST BY :Peter

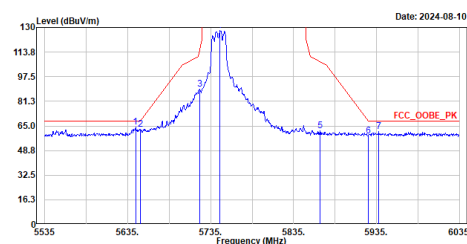

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5644.500	64.14	68.22	-4.08	48.51	15.63	Peak
2	5650.000	62.69	68.23	-5.54	47.03	15.66	Peak
3	5721.500	89.13	114.22	-25.09	73.02	16.11	Peak
4	5746.500	127.82	-----	-----	111.59	16.23	Peak
5	5806.500	61.99	107.58	-45.59	45.70	16.29	Peak
6	5925.000	58.60	68.23	-9.63	42.22	16.38	Peak
7	5938.000	61.20	68.22	-7.02	44.83	16.37	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

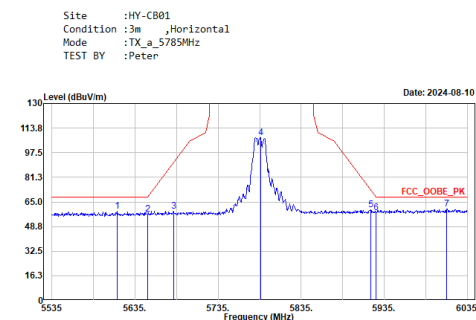

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5614.000	58.81	68.22	-9.41	43.39	15.42	Peak
2	5650.000	57.04	68.23	-11.19	41.38	15.66	Peak
3	5681.500	59.04	91.52	-32.48	43.16	15.88	Peak
4	5786.000	107.65	-----	-----	91.33	16.32	Peak
5	5918.500	59.70	73.03	-13.33	43.33	16.37	Peak
6	5925.000	58.12	68.23	-10.11	41.74	16.38	Peak
7	6010.500	68.50	68.22	-7.72	43.97	16.53	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

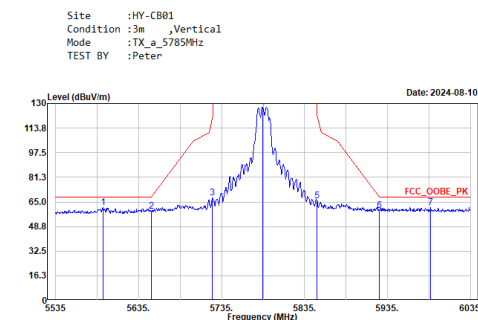

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5592.500	61.28	68.22	-6.94	45.97	15.31	Peak
2	5650.000	59.08	68.23	-9.15	43.42	15.66	Peak
3	5724.000	67.72	119.92	-52.20	51.60	16.12	Peak
4	5784.500	127.61	-----	-----	111.29	16.32	Peak
5	5850.000	65.83	122.20	-56.37	49.58	16.25	Peak
6	5925.000	59.53	68.23	-8.70	43.15	16.38	Peak
7	5986.500	61.22	68.22	-7.00	44.77	16.45	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

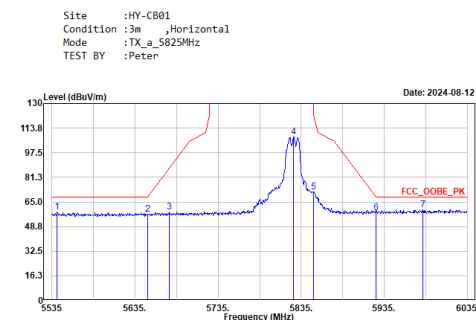

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5541.500	58.26	68.22	-9.96	42.82	15.44	Peak
2	5650.000	56.78	68.23	-11.45	41.12	15.66	Peak
3	5676.500	58.16	87.82	-29.66	42.32	15.84	Peak
4	5826.000	108.06	-----	-----	91.77	16.29	Peak
5	5850.000	71.82	122.20	-50.38	55.57	16.25	Peak
6	5925.000	57.81	68.23	-10.42	41.43	16.38	Peak
7	5981.500	59.79	68.22	-8.43	43.35	16.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

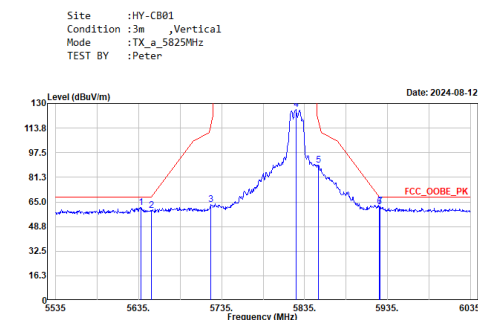


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5638.000	61.50	68.22	-6.72	45.92	15.58	Peak
2	5650.000	59.35	68.23	-8.88	43.69	15.66	Peak
3	5722.000	63.30	115.36	-52.06	47.19	16.11	Peak
4	5824.500	125.86	-----	-----	109.57	16.29	Peak
5	5851.500	89.27	118.78	-29.51	73.01	16.26	Peak
6	5925.000	61.88	68.23	-6.35	45.50	16.38	Peak
7	5926.000	62.32	68.22	-5.90	45.94	16.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Peter

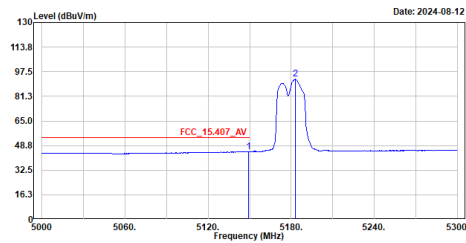


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.400	44.66	54.00	-9.34	30.26	14.40	Average
2	5183.000	92.51	-----	-----	78.04	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5180MHz
TEST BY :Peter

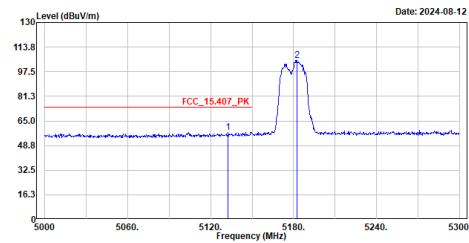


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5132.600	57.60	74.00	-16.40	43.22	14.38	Peak
2	5182.400	105.11	-----	-----	90.64	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
TEST BY :Peter

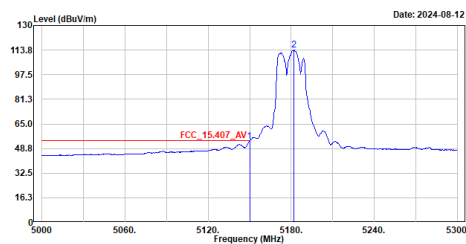


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	53.34	54.00	-0.66	38.94	14.40	Average
2	5181.000	113.63	-----	-----	99.16	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5180MHz
TEST BY :Peter

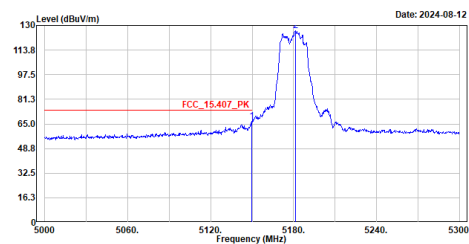


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.700	66.54	74.00	-7.46	52.14	14.40	Peak
2	5181.200	126.52	-----	-----	112.05	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_B1
TEST BY :Peter

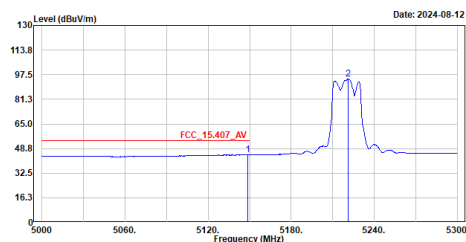


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.500	44.72	54.00	-9.28	30.32	14.40	Average
2	5221.400	94.80	-----	-----	80.30	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_B1
TEST BY :Peter

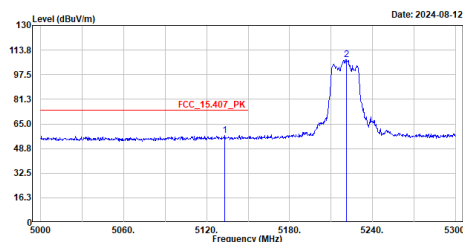


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5132.900	57.34	74.00	-16.66	42.96	14.38	Peak
2	5221.400	107.42	-----	-----	92.92	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_B1
TEST BY :Peter

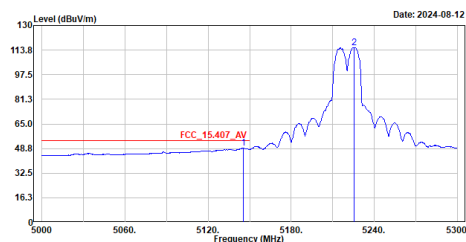


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5145.500	48.96	54.00	-5.04	34.56	14.40	Average
2	5225.300	115.34	-----	-----	100.84	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_B1
TEST BY :Peter

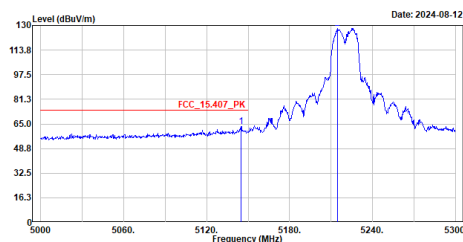


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5144.900	63.37	74.00	-10.63	48.97	14.40	Peak
2	5214.800	128.14	-----	-----	113.64	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_B2
TEST BY :Peter

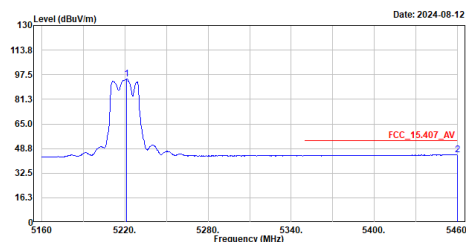


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5221.200	94.92	-----	-----	80.41	14.51	Average
2	5460.000	44.66	54.00	-9.34	29.61	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5220MHz_B2
TEST BY :Peter

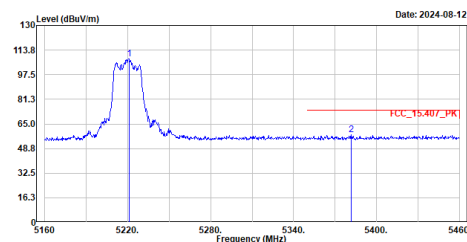


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5220.900	108.10	-----	-----	93.59	14.51	Peak
2	5381.700	57.90	74.00	-16.10	43.28	14.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_B2
TEST BY :Peter

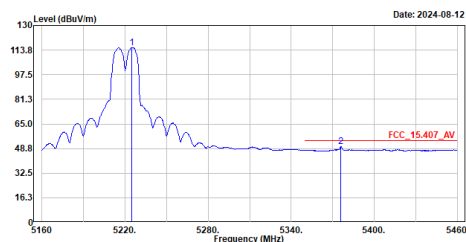


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5225.100	115.29	-----	-----	100.79	14.50	Average
2	5376.000	50.14	54.00	-3.86	35.54	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5220MHz_B2
TEST BY :Peter

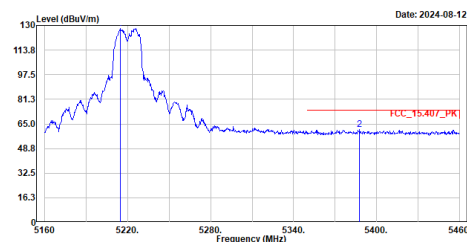


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5214.600	128.27	-----	-----	113.77	14.50	Peak
2	5387.700	61.35	74.00	-12.65	46.73	14.62	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5240MHz
TEST BY :Peter

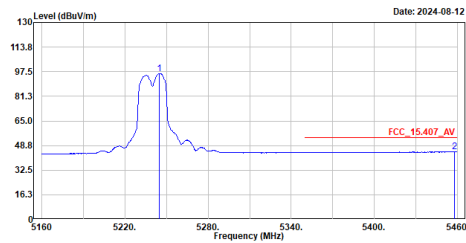


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5244.600	96.27	-----	-----	81.79	14.48	Average
2	5458.200	44.71	54.00	-9.29	29.67	15.04	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5240MHz
TEST BY :Peter

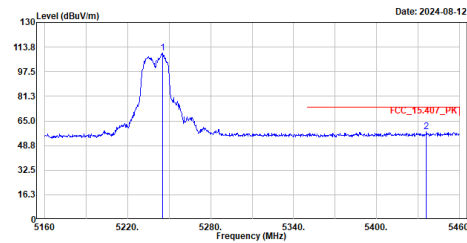


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5245.200	109.94	-----	-----	95.46	14.48	Peak
2	5436.000	57.72	74.00	-16.28	42.85	14.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5240MHz
TEST BY :Peter

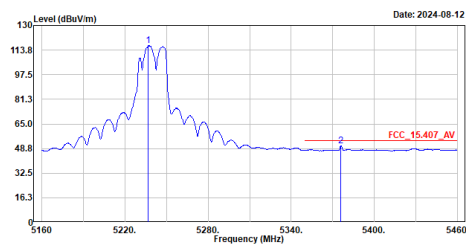


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5236.800	116.59	-----	-----	102.10	14.49	Average
2	5376.000	50.55	54.00	-3.45	35.95	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5240MHz
TEST BY :Peter

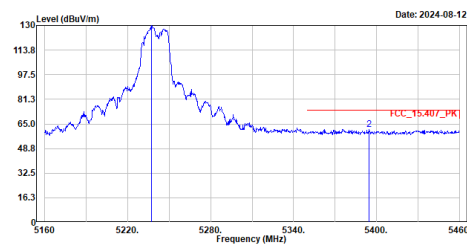


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5237.100	129.84	-----	-----	115.35	14.49	Peak
2	5394.600	61.26	74.00	-12.74	46.62	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5260MHz
TEST BY :Peter

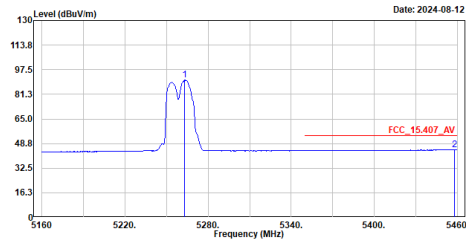


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5263.200	90.69	-----	-----	76.20	14.49	Average
2	5457.900	44.60	54.00	-9.40	29.56	15.04	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5260MHz
TEST BY :Peter

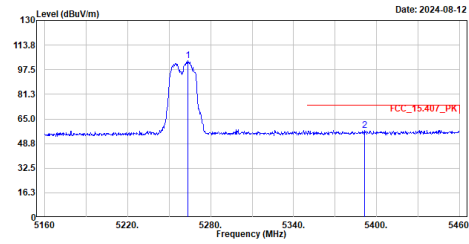


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5263.500	103.55	-----	-----	89.06	14.49	Peak
2	5391.600	57.57	74.00	-16.43	42.93	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5260MHz
TEST BY :Peter

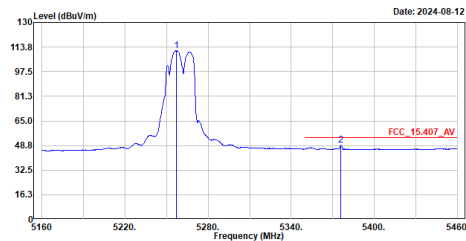


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5256.900	111.50	-----	-----	97.02	14.48	Average
2	5376.000	48.86	54.00	-5.14	34.26	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5260MHz
TEST BY :Peter

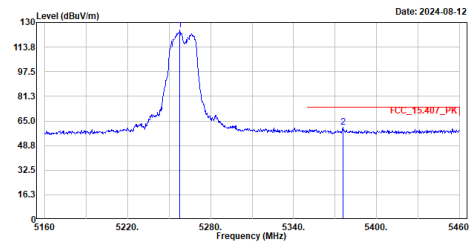


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5257.800	124.91	-----	-----	110.43	14.48	Peak
2	5376.000	60.83	74.00	-13.17	46.23	14.60	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5300MHz
TEST BY :Peter

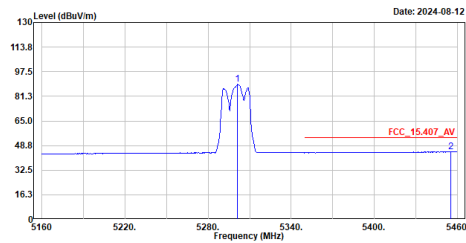


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5301.300	89.13	-----	-----	74.59	14.54	Average
2	5455.200	44.62	54.00	-9.38	29.61	15.01	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5300MHz
TEST BY :Peter

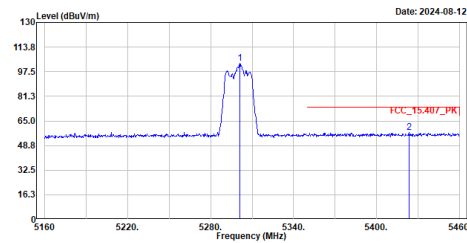


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5301.300	102.96	-----	-----	88.42	14.54	Peak
2	5423.400	57.37	74.00	-16.63	42.60	14.77	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5300MHz
TEST BY :Peter

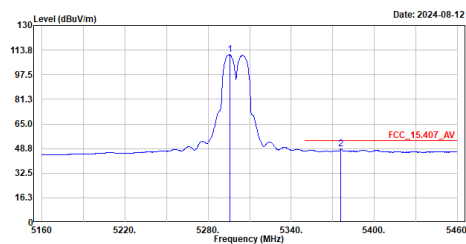


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5295.600	110.77	-----	-----	96.23	14.54	Average
2	5375.700	48.67	54.00	-5.33	34.07	14.60	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5300MHz
TEST BY :Peter

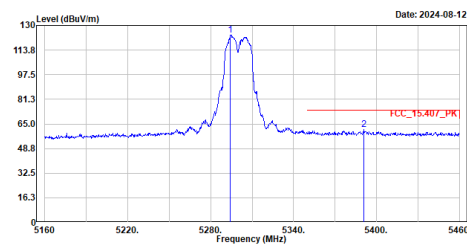


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5294.400	123.86	-----	-----	109.32	14.54	Peak
2	5390.700	61.20	74.00	-12.80	46.56	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
TEST BY :Peter

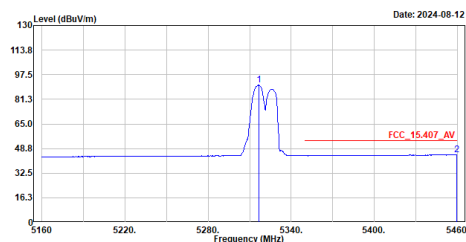


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5316.600	90.62	-----	-----	76.08	14.54	Average
2	5459.700	44.67	54.00	-9.33	29.62	15.05	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5320MHz
TEST BY :Peter

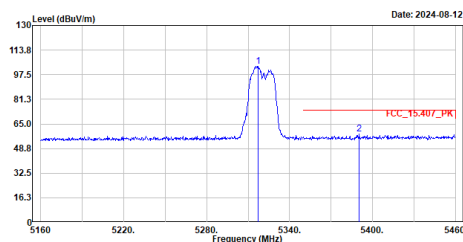


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5317.200	103.04	-----	-----	88.50	14.54	Peak
2	5390.400	58.19	74.00	-15.81	43.55	14.64	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
TEST BY :Peter

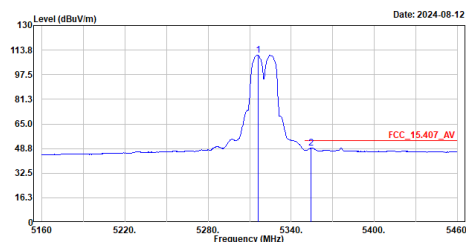


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5316.000	110.41	-----	-----	95.87	14.54	Average
2	5354.400	49.03	54.00	-4.97	34.49	14.54	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5320MHz
TEST BY :Peter

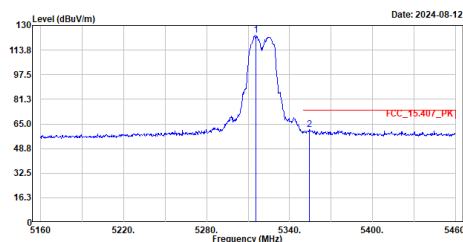


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5315.700	123.85	-----	-----	109.31	14.54	Peak
2	5354.400	61.27	74.00	-12.73	46.73	14.54	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
TEST BY :Peter

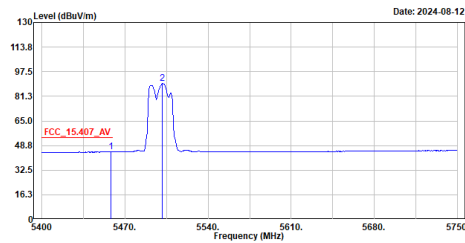


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.450	44.60	54.00	-9.40	29.56	15.04	Average
2	5501.500	89.93	-----	-----	74.48	15.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5500MHz
TEST BY :Peter

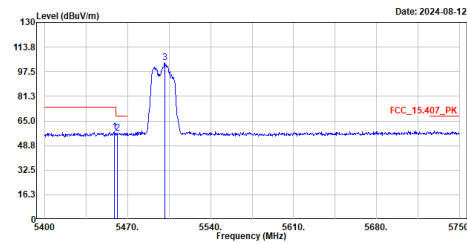


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5458.800	57.68	74.00	-16.32	42.63	15.05	Peak
2	5461.250	57.04	68.22	-11.18	41.97	15.07	Peak
3	5501.150	103.62	-----	-----	88.19	15.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
TEST BY :Peter

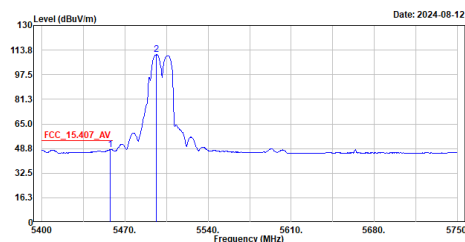


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5457.750	48.00	54.00	-6.00	32.96	15.04	Average
2	5496.600	110.75	-----	-----	95.34	15.41	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5500MHz
TEST BY :Peter

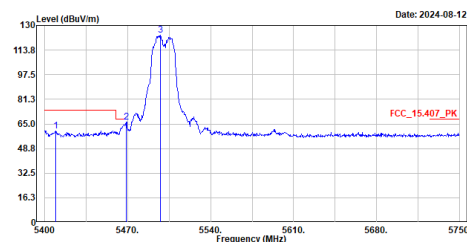


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5409.100	60.57	74.00	-13.43	45.87	14.70	Peak
2	5468.950	66.30	68.22	-1.92	51.16	15.14	Peak
3	5497.650	123.60	-----	-----	108.19	15.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5580MHz
TEST BY :Peter

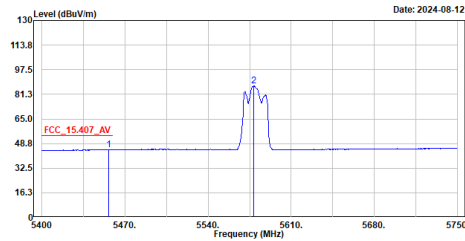

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.350	44.75	54.00	-9.25	29.72	15.03	Average
2	5578.500	87.02	-----	-----	71.68	15.34	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ax20_5580MHz
TEST BY :Peter

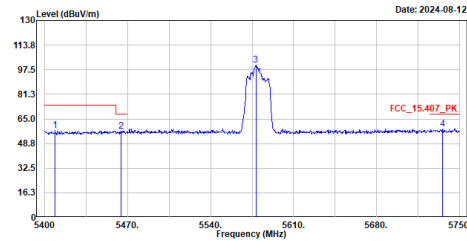

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5408.750	57.50	74.00	-16.50	42.80	14.70	Peak
2	5464.400	56.97	68.22	-11.25	41.87	15.10	Peak
3	5578.150	100.49	-----	-----	85.15	15.34	Peak
4	5736.000	58.56	68.22	-9.66	42.39	16.17	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5580MHz
TEST BY :Peter

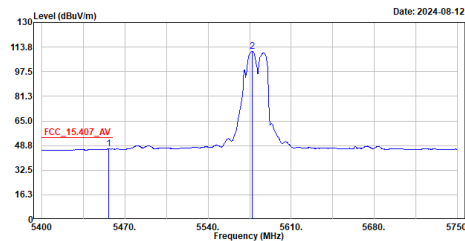

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5456.350	46.56	54.00	-7.44	31.53	15.03	Average
2	5577.100	111.05	-----	-----	95.71	15.34	Average


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ax20_5580MHz
TEST BY :Peter

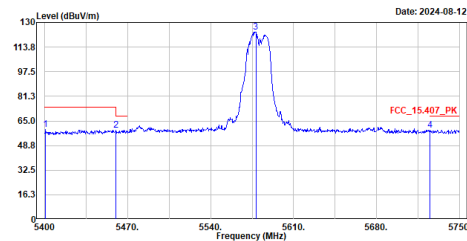


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5400.700	59.21	74.00	-14.79	44.55	14.66	Peak
2	5460.200	58.78	68.22	-9.44	43.72	15.06	Peak
3	5578.150	123.00	-----	-----	108.46	15.34	Peak
4	5725.150	59.00	68.22	-9.22	42.88	16.12	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

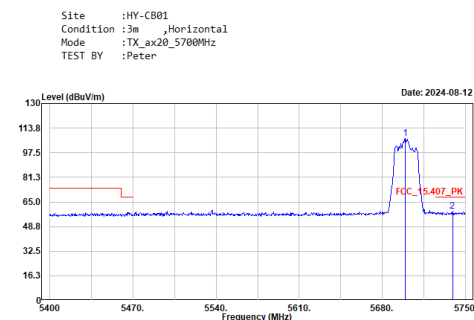


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5699.250	106.86	68.22	-	90.86	16.00	Peak
2	5739.150	59.04	68.22	-9.18	42.85	16.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

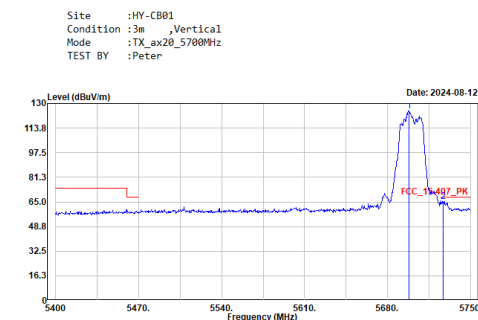


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5697.850	125.06	68.22	-	109.07	15.99	Peak
2	5726.900	65.48	68.22	-2.74	49.35	16.13	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

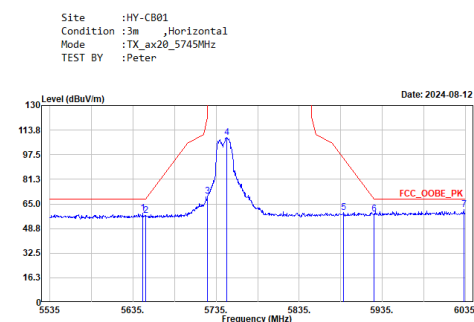


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5646.500	58.82	68.22	-9.40	43.18	15.64	Peak
2	5650.000	57.45	68.22	-10.78	41.79	15.66	Peak
3	5725.000	70.37	122.20	-51.83	54.25	16.12	Peak
4	5748.000	109.02	68.22	-	92.79	16.23	Peak
5	5888.500	59.22	95.22	-36.00	42.88	16.34	Peak
6	5925.000	58.39	68.22	-9.84	42.01	16.38	Peak
7	5933.000	61.43	68.22	-6.79	44.82	16.61	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

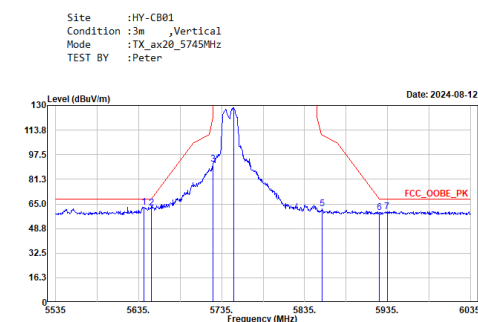

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5641.000	62.95	68.22	-5.27	47.34	15.61	Peak
2	5650.000	62.38	68.22	-5.85	46.72	15.66	Peak
3	5725.000	91.34	122.20	-30.86	75.22	16.12	Peak
4	5750.000	128.76	68.22	-	112.52	16.24	Peak
5	5856.500	61.77	110.38	-48.61	45.50	16.27	Peak
6	5925.000	59.45	68.22	-8.78	43.07	16.38	Peak
7	5934.500	60.08	68.22	-8.14	43.71	16.37	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

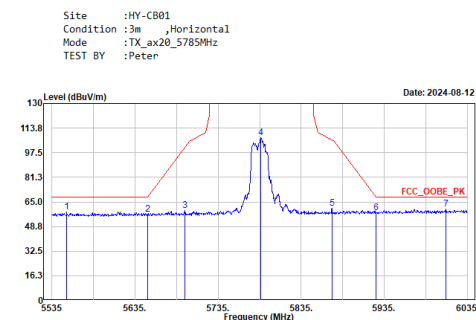

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5553.000	58.34	68.22	-9.88	42.92	15.42	Peak
2	5650.000	56.83	68.23	-11.40	41.17	15.66	Peak
3	5695.000	59.59	101.50	-41.91	43.62	15.97	Peak
4	5786.000	107.60	-----	-----	91.28	16.32	Peak
5	5872.000	60.60	106.04	-45.44	44.30	16.30	Peak
6	5925.000	57.66	68.23	-10.57	41.28	16.38	Peak
7	6009.500	60.21	68.22	-8.01	43.68	16.53	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

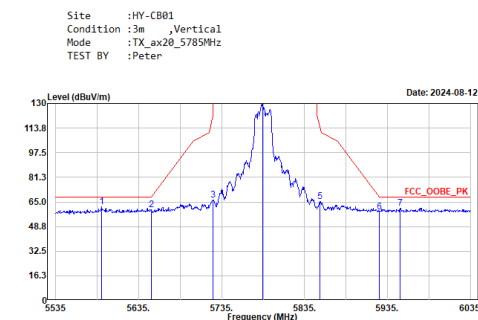

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5590.500	61.68	68.22	-6.54	46.38	15.30	Peak
2	5650.000	59.93	68.23	-8.30	44.27	15.66	Peak
3	5725.000	66.46	122.20	-55.74	50.34	16.12	Peak
4	5784.500	129.36	-----	-----	113.04	16.32	Peak
5	5853.500	65.19	114.22	-49.03	48.93	16.26	Peak
6	5925.000	58.37	68.23	-9.86	41.99	16.38	Peak
7	5950.500	60.72	68.22	-7.50	44.37	16.35	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

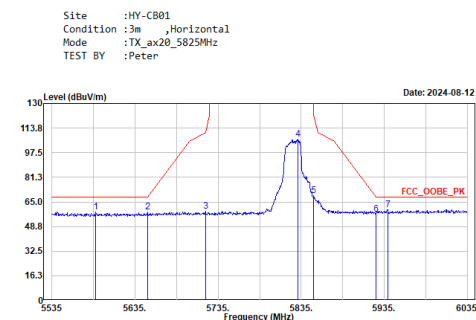

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5588.000	58.38	68.22	-9.84	43.07	15.31	Peak
2	5650.000	58.18	68.23	-10.05	42.52	15.66	Peak
3	5720.000	58.96	110.80	-51.84	42.86	16.10	Peak
4	5831.500	106.49	-----	-----	90.21	16.28	Peak
5	5850.000	69.01	122.20	-53.19	52.76	16.25	Peak
6	5925.000	57.06	68.23	-11.17	40.68	16.38	Peak
7	5939.000	60.09	68.22	-8.13	43.72	16.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

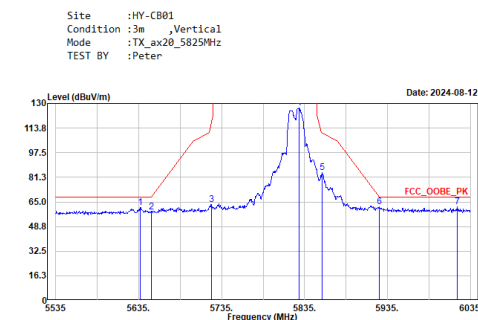

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5637.000	61.41	68.22	-6.81	45.84	15.57	Peak
2	5650.000	58.24	68.23	-9.99	42.58	15.66	Peak
3	5722.500	63.31	116.50	-53.19	47.20	16.11	Peak
4	5828.500	127.28	-----	-----	111.00	16.28	Peak
5	5856.000	84.28	110.52	-26.24	68.01	16.27	Peak
6	5925.000	61.84	68.23	-6.39	45.46	16.38	Peak
7	6019.000	62.02	68.22	-6.20	45.46	16.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.