




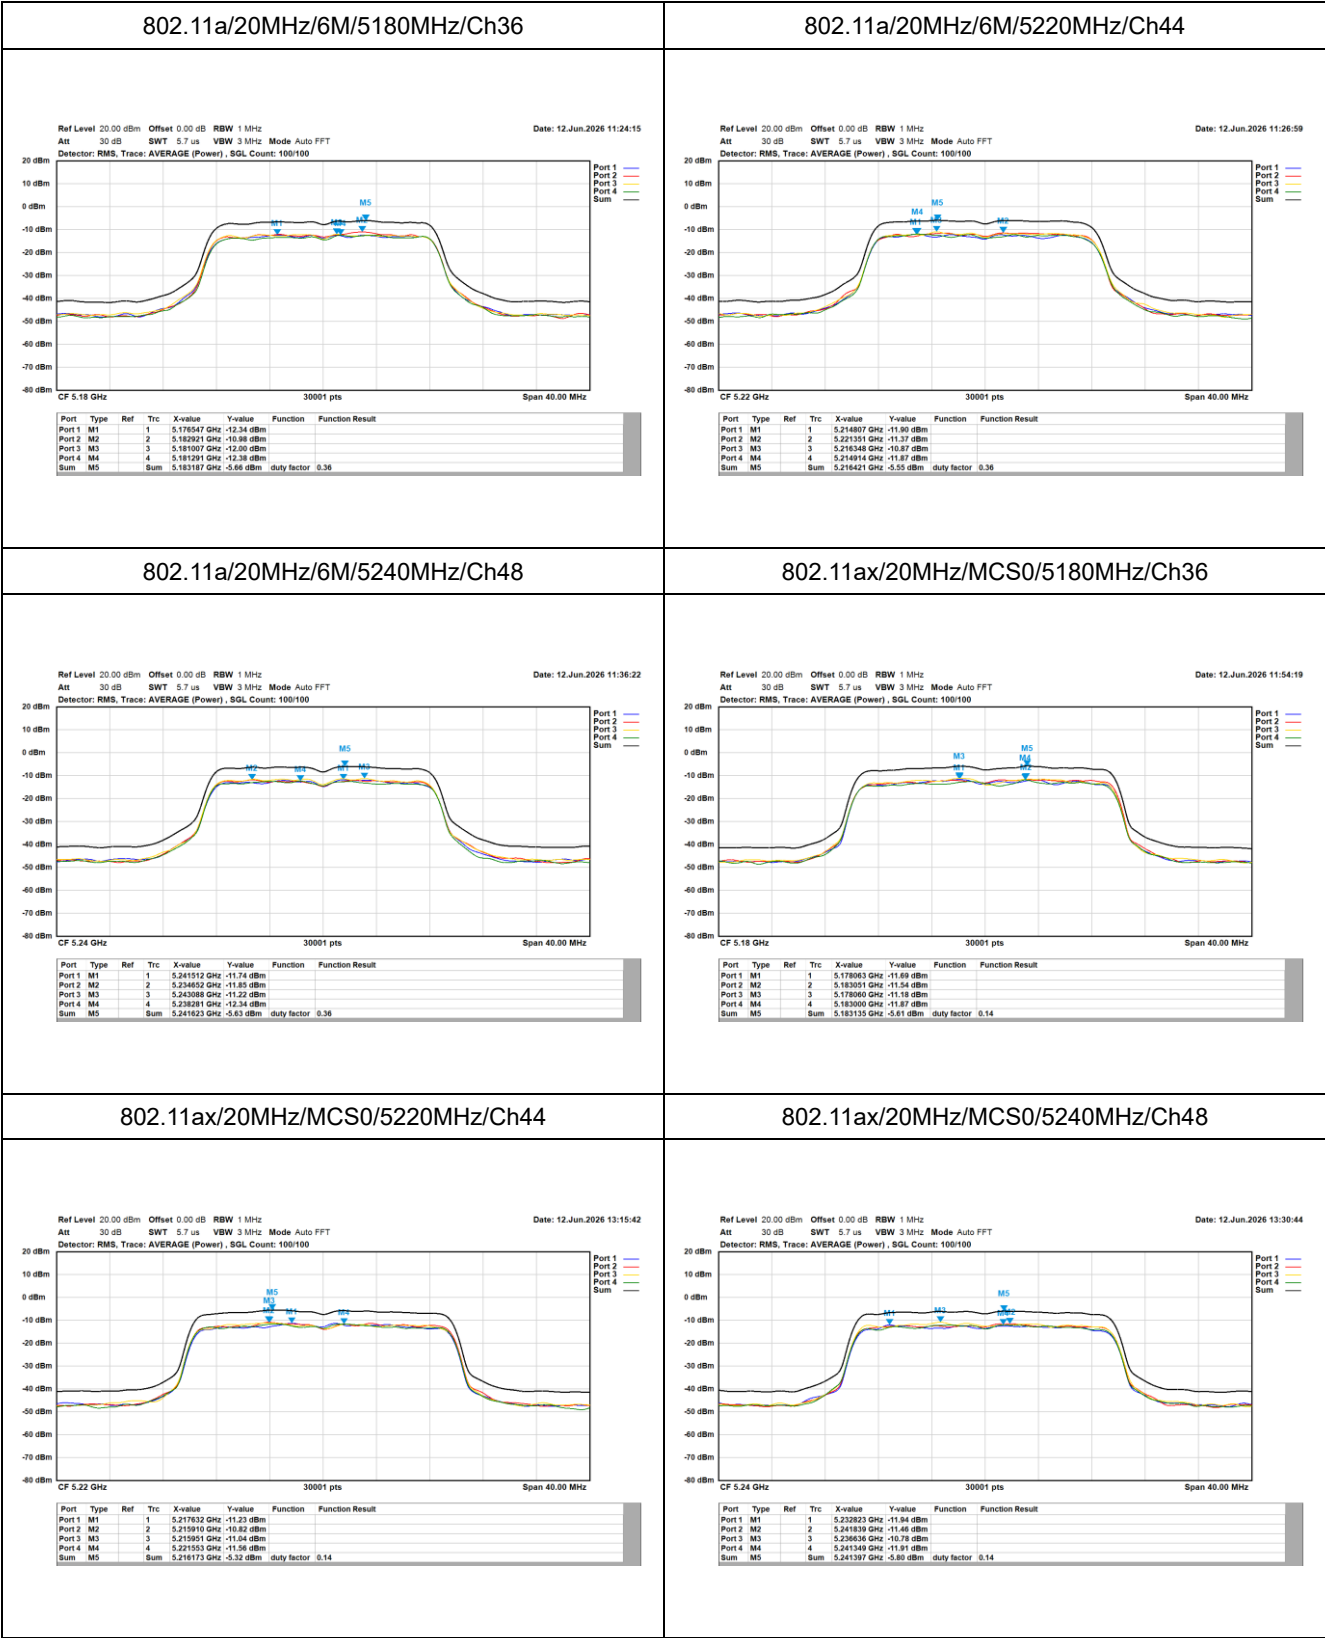

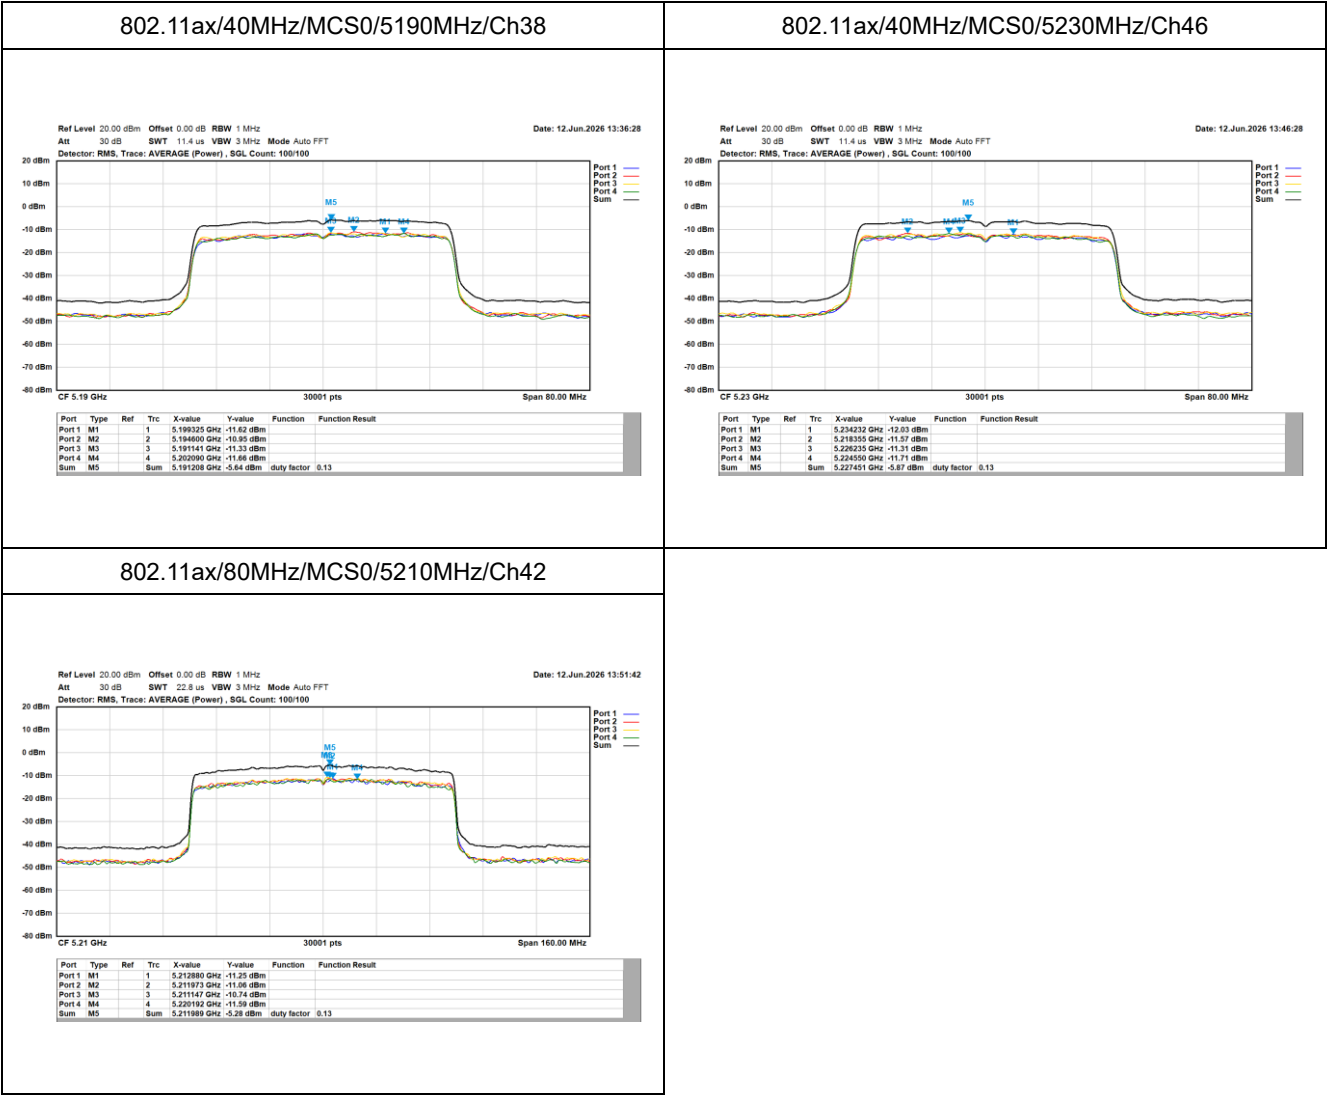


Appendix E. Test Result of Radiated Emission Master Mode

TX_a_5180MHz_H

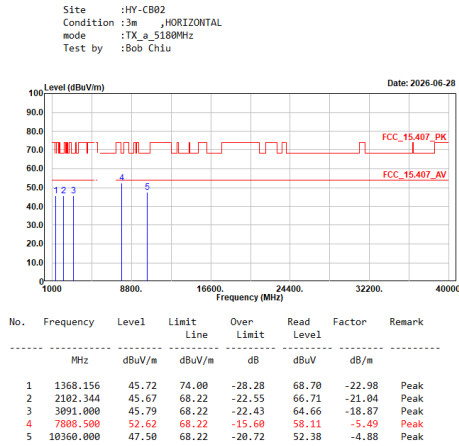


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5180MHz_V

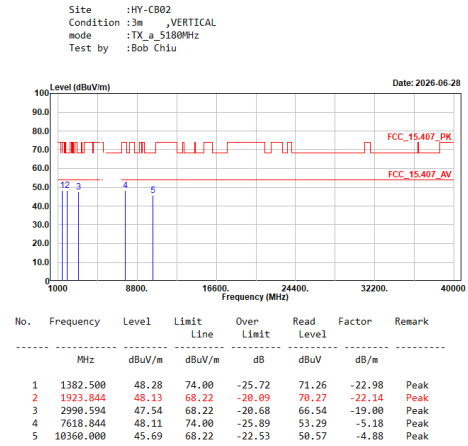


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_H

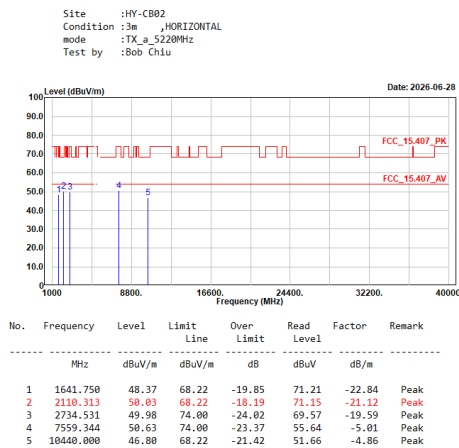

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_a_5220MHz_V

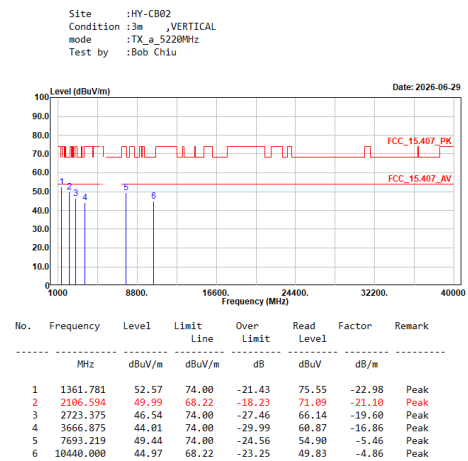

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5240MHz
Test by :Bob Chiu

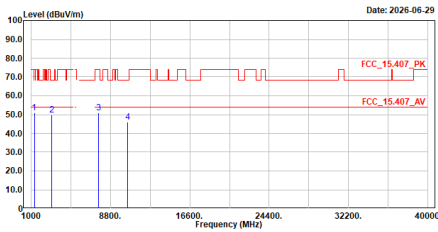


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1304.938	51.10	74.00	-22.90	74.22	-23.12	Peak
2	3004.938	49.96	68.22	-18.26	69.03	-19.07	Peak
3	7643.281	58.87	74.00	-23.13	56.15	-5.28	Peak
4	10480.000	46.22	68.22	-22.00	50.91	-4.69	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5240MHz
Test by :Bob Chiu

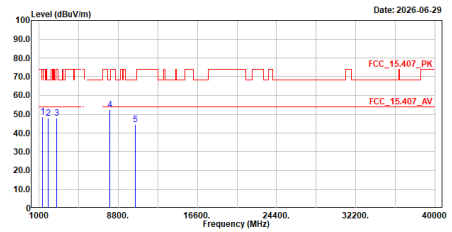


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1371.344	48.57	74.00	-25.43	71.55	-22.98	Peak
2	1890.906	47.79	68.22	-20.43	70.06	-22.27	Peak
3	2757.906	47.89	74.00	-26.11	67.58	-19.09	Peak
4	7963.094	52.32	68.22	-15.90	57.74	-5.42	Peak
5	10480.000	44.43	68.22	-23.79	49.12	-4.69	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5745MHz
Test by :Bob Chiu

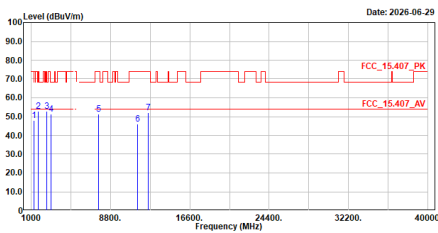


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1286.344	48.10	68.22	-20.12	71.27	-23.17	Peak
2	1656.625	52.95	68.22	-15.27	75.79	-22.84	Peak
3	2498.656	52.80	74.00	-21.20	73.49	-20.69	Peak
4	2962.438	51.49	68.22	-16.73	70.61	-19.12	Peak
5	7616.188	51.44	74.00	-22.56	56.61	-5.17	Peak
6	11490.000	45.94	74.00	-28.06	48.38	-2.44	Peak
7	12480.840	52.05	74.00	-21.95	52.91	-0.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5745MHz
Test by :Bob Chiu

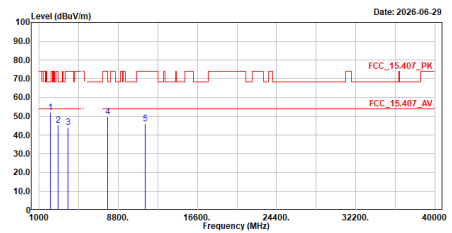


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	2092.781	52.22	68.22	-16.00	73.25	-21.03	Peak
2	2851.938	45.47	74.00	-28.53	64.75	-19.28	Peak
3	3824.656	44.06	74.00	-29.94	59.81	-15.75	Peak
4	7742.625	49.84	74.00	-24.16	55.29	-5.45	Peak
5	11490.000	46.10	74.00	-27.90	48.54	-2.44	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5785MHz
Test by :Bob Chiu

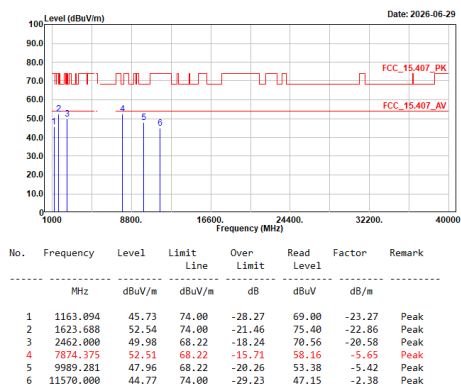


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5785MHz
Test by :Bob Chiu

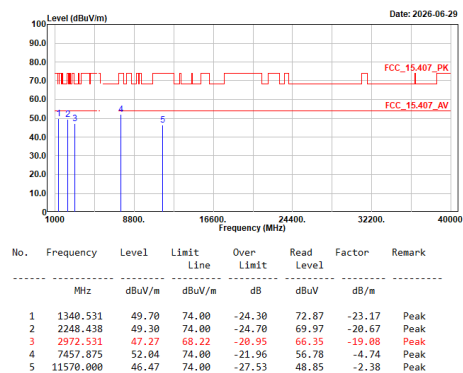


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5825MHz
Test by :Bob Chiu

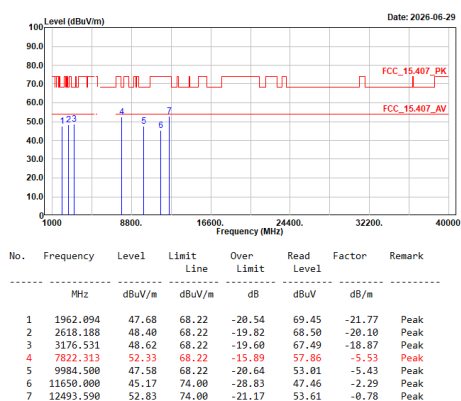


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5825MHz
Test by :Bob Chiu

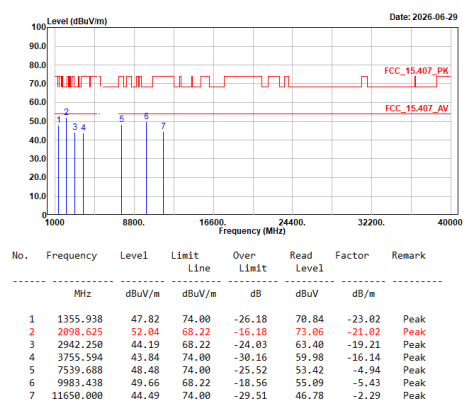


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_H


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5180MHz
Test by :Bob Chiu

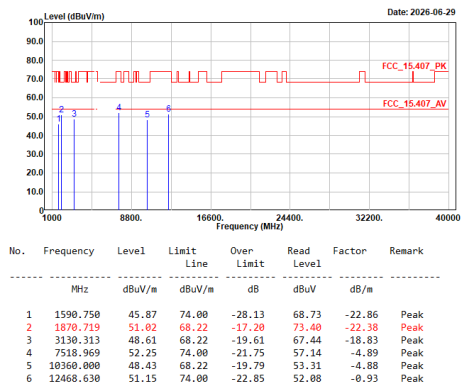

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_V


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5180MHz
Test by :Bob Chiu

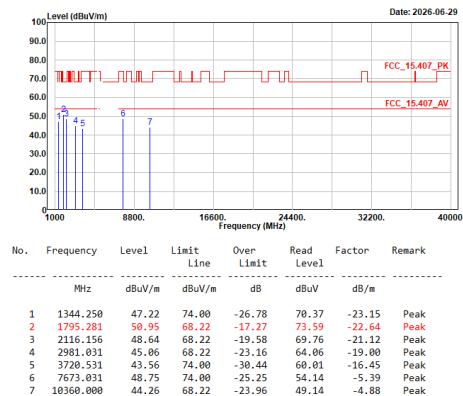

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_H


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5220MHz
Test by :Bob Chiu

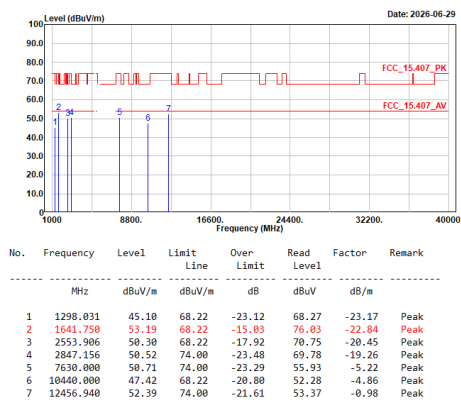

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_V


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5220MHz
Test by :Bob Chiu

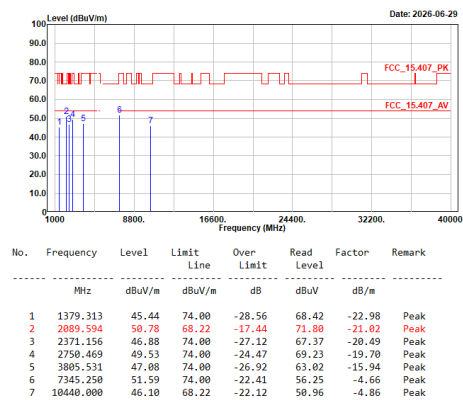

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_H


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5240MHz
Test by :Bob Chiu

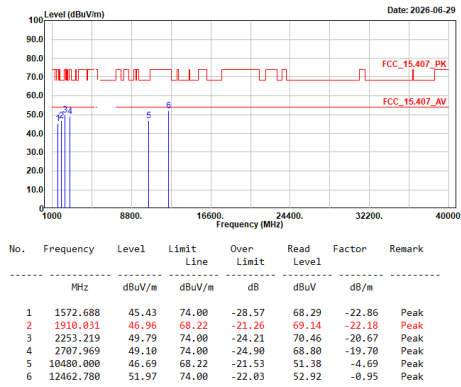

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_V


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5240MHz
Test by :Bob Chiu

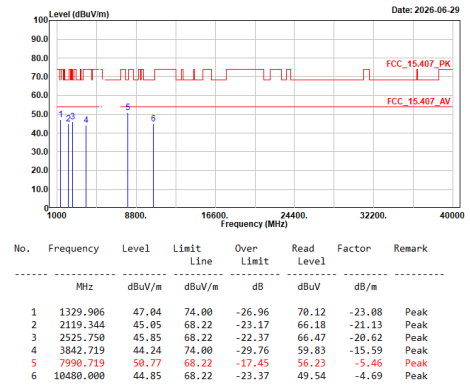

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_H


Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5745MHz
Test by :Bob Chiu

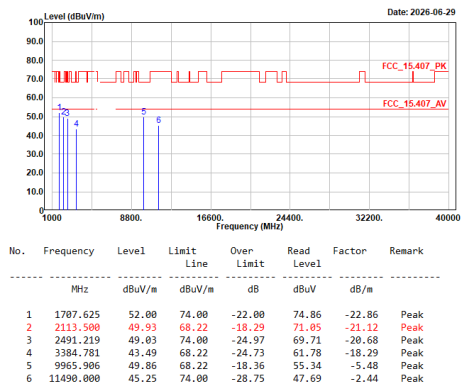

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_V


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5745MHz
Test by :Bob Chiu

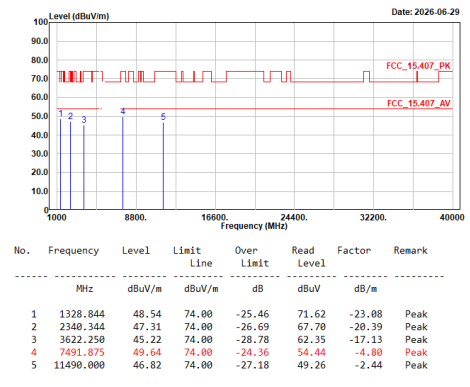

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ax20_5785MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5785MHz
Test by :Bob Chiu

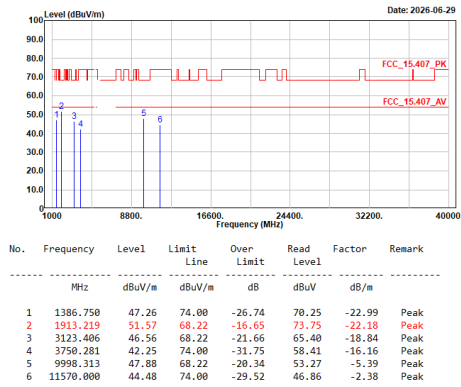


TX_ax20_5785MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5785MHz
Test by :Bob Chiu

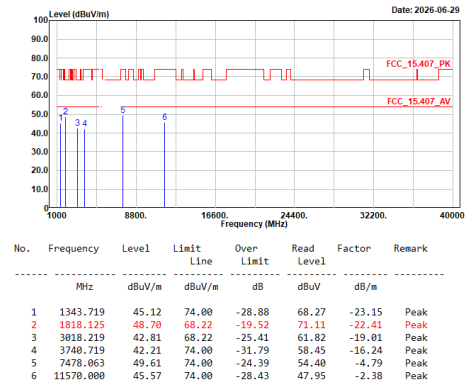


TX_ax20_5825MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax20_5825MHz
Test by :Bob Chiu

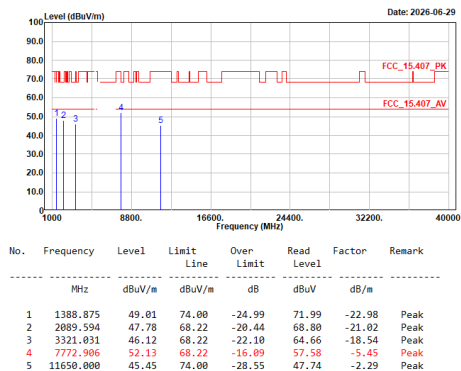


TX_ax20_5825MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5825MHz
Test by :Bob Chiu

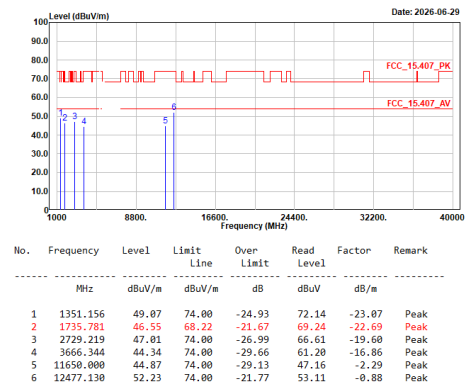

TX_ax40_5190MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5190MHz
Test by :Bob Chiu

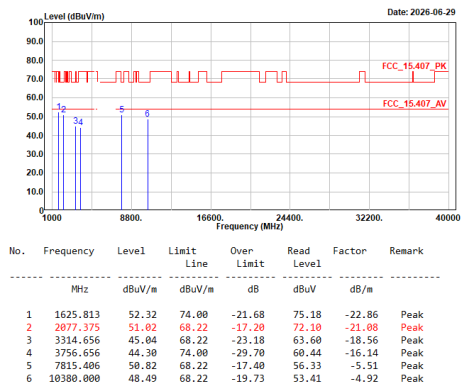


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5190MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5190MHz
Test by :Bob Chiu

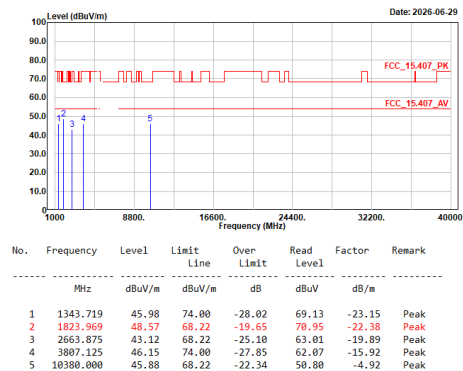


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5230MHz
Test by :Bob Chiu

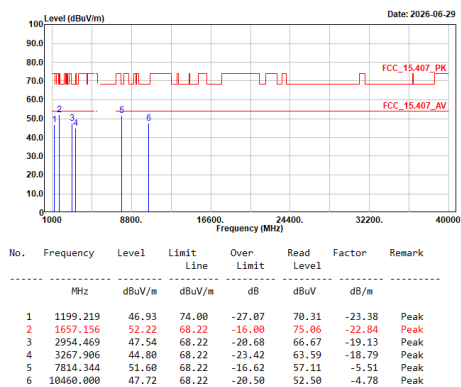


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5230MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5230MHz
Test by :Bob Chiu

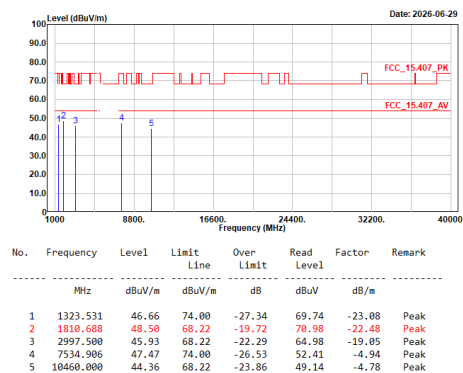


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5755MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5755MHz
Test by :Bob Chiu

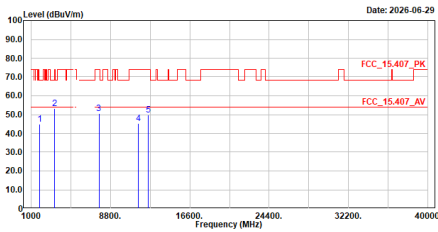


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1796.344	44.77	68.22	-23.45	67.40	-22.63	Peak
2	3269.500	53.02	68.22	-15.20	71.00	-18.78	Peak
3	7656.563	58.40	74.00	-23.60	55.72	-5.32	Peak
4	11510.000	45.16	74.00	-28.84	47.58	-2.42	Peak
5	12481.380	49.93	74.00	-24.07	50.78	-0.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5755MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5755MHz
Test by :Bob Chiu

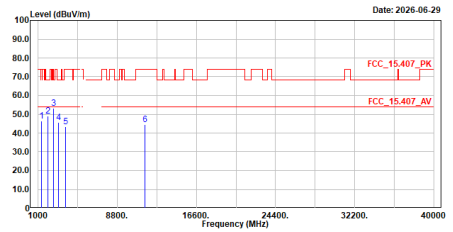


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1334.688	46.45	74.00	-27.55	69.58	-23.13	Peak
2	1961.031	48.91	68.22	-19.31	70.69	-21.78	Peak
3	2496.000	53.02	74.00	-20.98	73.71	-20.69	Peak
4	3024.594	45.83	68.22	-22.39	64.82	-18.99	Peak
5	3697.688	43.57	74.00	-30.43	60.24	-16.67	Peak
6	11510.000	44.38	74.00	-29.62	46.80	-2.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5795MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax40_5795MHz
Test by :Bob Chiu

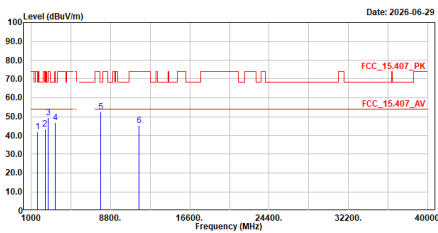


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1615.188	41.79	74.00	-32.21	64.70	-22.91	Peak
2	2349.375	43.32	74.00	-30.68	63.79	-20.47	Peak
3	2683.531	49.58	68.22	-18.64	69.34	-19.76	Peak
4	3391.688	46.92	68.22	-21.30	65.30	-18.28	Peak
5	7803.719	52.40	68.22	-15.82	57.88	-5.48	Peak
6	11590.000	45.29	74.00	-28.71	47.65	-2.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5795MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax40_5795MHz
Test by :Bob Chiu

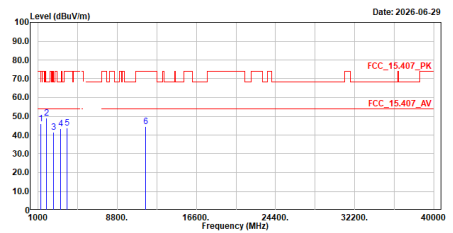


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1236.406	45.89	74.00	-28.11	69.05	-23.16	Peak
2	1842.563	49.06	68.22	-19.16	71.44	-22.38	Peak
3	2494.938	41.32	74.00	-32.68	62.01	-20.69	Peak
4	3191.938	43.21	68.22	-25.01	62.12	-18.91	Peak
5	3840.594	43.62	74.00	-30.38	59.23	-15.61	Peak
6	11590.000	44.69	74.00	-29.31	47.05	-2.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax80_5210MHz
Test by :Bob Chiu

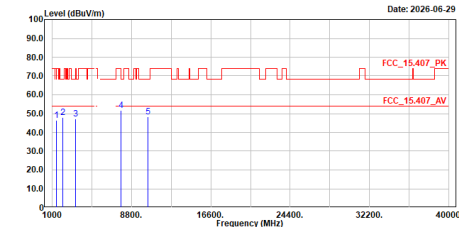


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1423.406	46.49	74.00	-27.51	69.67	-23.18	Peak
2	2056.125	47.94	68.22	-20.28	69.26	-21.32	Peak
3	3299.781	47.35	68.22	-20.87	65.97	-18.62	Peak
4	7729.875	51.83	74.00	-22.17	57.29	-5.46	Peak
5	10420.000	45.20	68.22	-20.02	53.11	-4.91	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5210MHz
Test by :Bob Chiu

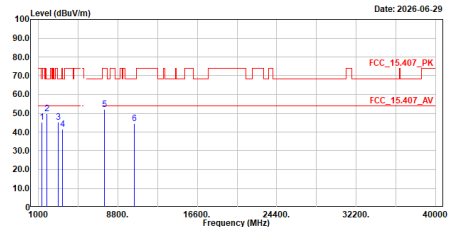


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1343.719	45.34	74.00	-28.66	68.49	-23.15	Peak
2	1827.688	49.98	68.22	-18.24	72.37	-22.39	Peak
3	2965.094	45.47	68.22	-22.75	64.59	-19.12	Peak
4	3367.250	41.40	68.22	-26.82	59.76	-18.36	Peak
5	7479.125	52.22	74.00	-21.78	57.00	-4.78	Peak
6	10420.000	44.66	68.22	-23.56	49.57	-4.91	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5775MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax80_5775MHz
Test by :Bob Chiu

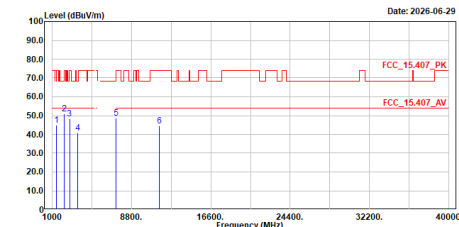


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1397.375	44.72	74.00	-29.28	67.71	-22.99	Peak
2	2158.125	50.77	68.22	-17.45	71.78	-21.01	Peak
3	2701.063	48.41	74.00	-25.59	68.11	-19.70	Peak
4	3495.281	40.74	68.22	-27.48	58.56	-17.82	Peak
5	7243.250	48.66	68.22	-19.56	53.38	-4.72	Peak
6	11550.000	44.37	74.00	-29.63	46.76	-2.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5775MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5775MHz
Test by :Bob Chiu

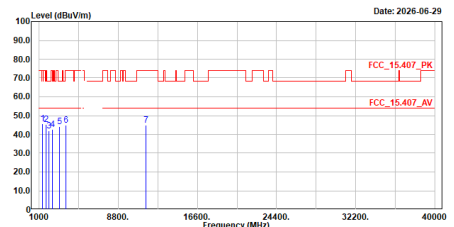


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1343.719	45.53	74.00	-28.47	68.68	-23.15	Peak
2	1693.813	45.18	74.00	-28.82	67.95	-22.77	Peak
3	1943.500	41.88	68.22	-26.34	63.84	-21.96	Peak
4	2297.044	42.60	74.00	-31.40	63.16	-20.56	Peak
5	2984.219	44.13	68.22	-24.09	63.13	-19.00	Peak
6	3674.844	44.85	74.00	-29.15	61.66	-16.81	Peak
7	11550.000	44.81	74.00	-29.19	47.20	-2.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5775MHz_H_QP

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ax80_5775MHz
Test by :Bob Chiu

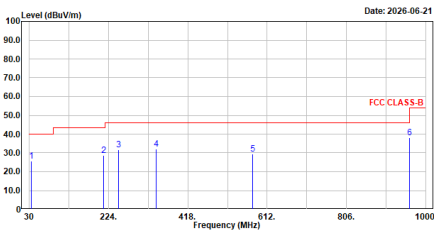


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	Mhz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	35.700	25.80	40.00	-14.20	36.59	-10.79	QP
2	212.259	28.74	43.50	-14.76	42.39	-13.65	QP
3	247.711	31.77	46.00	-14.23	43.87	-12.10	QP
4	339.766	32.18	46.00	-13.82	41.50	-9.32	QP
5	576.028	29.41	46.00	-16.59	33.51	-4.10	QP
6	960.048	38.12	54.00	-15.88	37.04	1.08	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_ax80_5775MHz_V_QP


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5775MHz
Test by :Bob Chiu

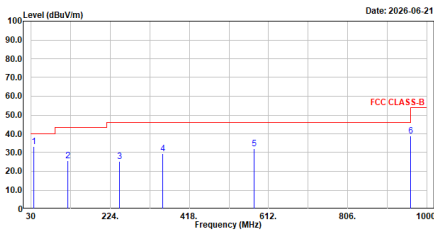


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	Mhz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	36.000	33.28	40.00	-6.72	44.03	-10.75	QP
2	128.005	25.59	43.50	-17.91	38.83	-13.24	QP
3	246.961	25.34	46.00	-20.66	37.45	-12.11	QP
4	352.817	29.29	46.00	-16.71	38.59	-9.30	QP
5	576.028	32.03	46.00	-13.97	36.13	-4.10	QP
6	960.048	39.02	54.00	-14.98	37.94	1.08	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


TX_a_5180MHz_H_Average

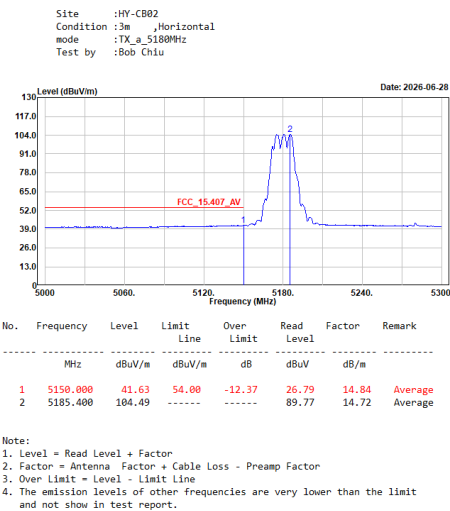


TX_a_5180MHz_H_Peak

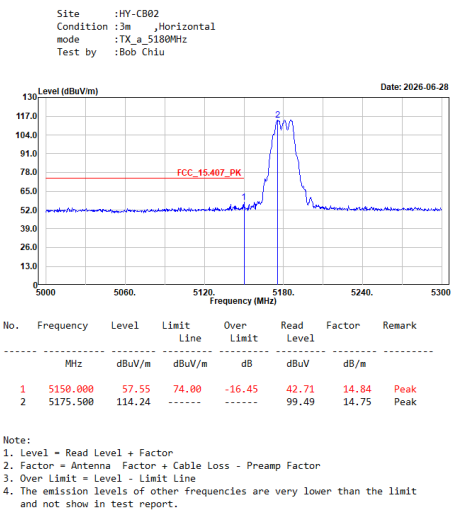


TX_a_5180MHz_V_Average

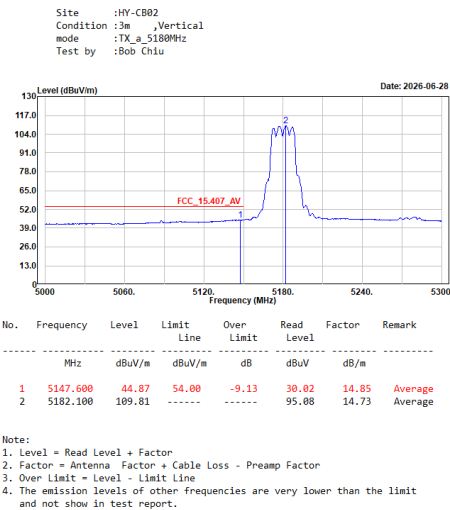


TX_a_5180MHz_V_Peak

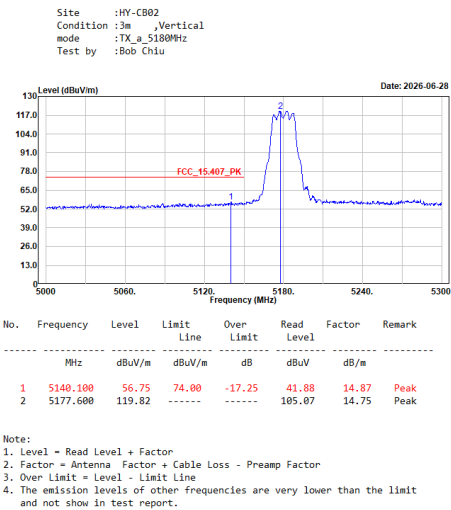


TX_a_5220MHz_B1_H_Average

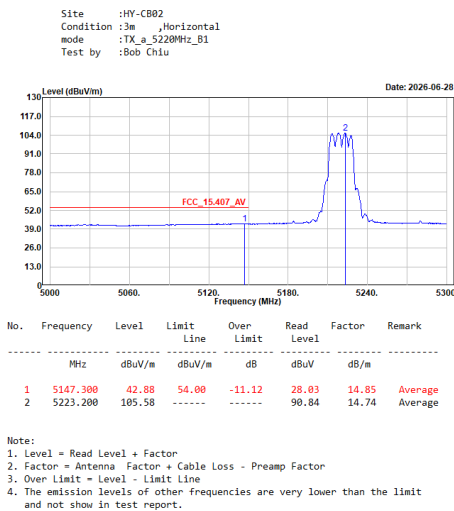


TX_a_5220MHz_B1_H_Peak

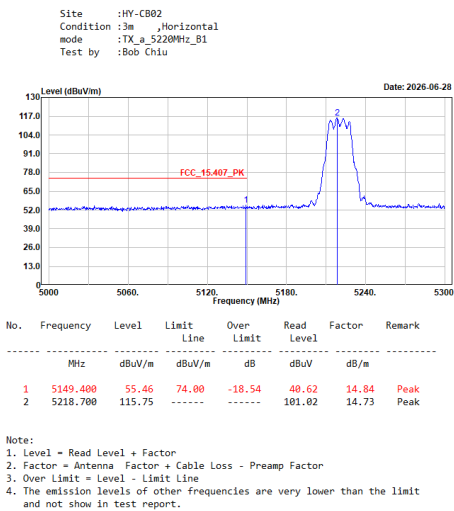

TX_a_5220MHz_B1_V_Average

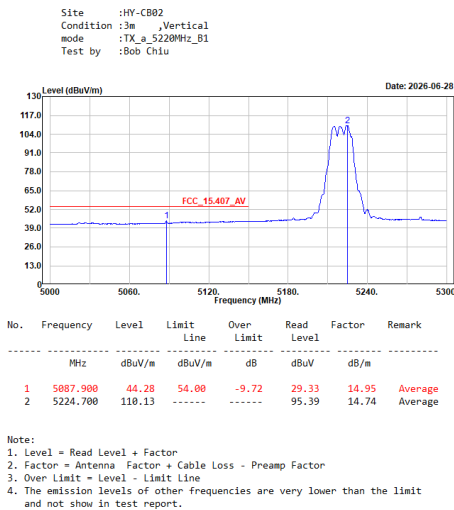


TX_a_5220MHz_B1_V_Peak

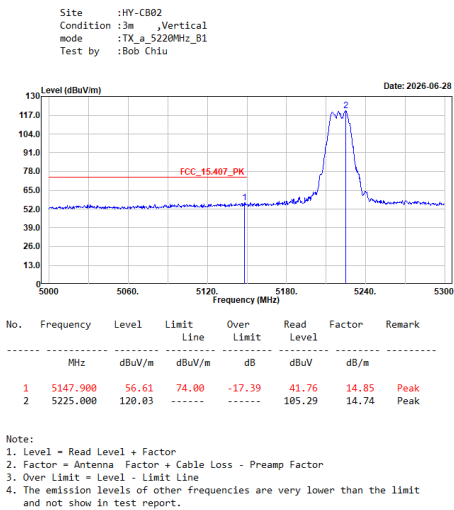

TX_a_5220MHz_B2_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5220MHz_B2
Test by :Bob Chiu

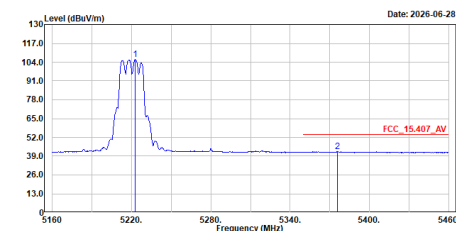


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5223.000	105.74	-----	-----	91.00	14.74	Average
2	5376.000	42.42	54.00	-11.58	27.76	14.66	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_B2_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5220MHz_B2
Test by :Bob Chiu

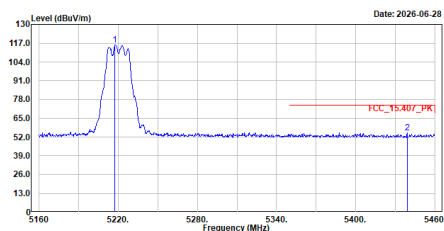


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5217.600	115.57	-----	-----	100.85	14.72	Peak
2	5439.000	55.13	74.00	-18.87	40.36	14.77	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_B2_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5220MHz_B2
Test by :Bob Chiu

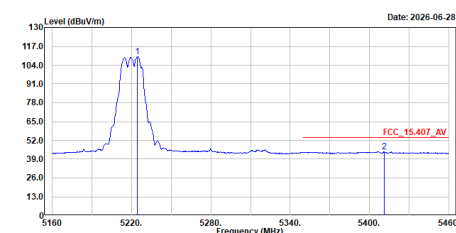


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5224.200	110.12	-----	-----	95.38	14.74	Average
2	5411.100	44.20	54.00	-9.80	29.52	14.68	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5220MHz_B2_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5220MHz_B2
Test by :Bob Chiu

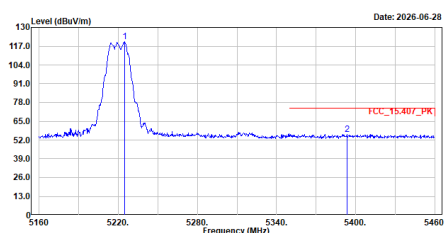


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5225.100	120.02	-----	-----	105.28	14.74	Peak
2	5393.400	56.11	74.00	-17.89	41.45	14.66	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_a_5240MHz_B1_H_Average

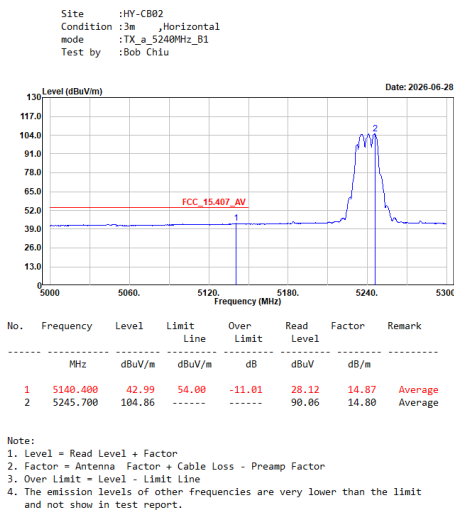


TX_a_5240MHz_B1_H_Peak

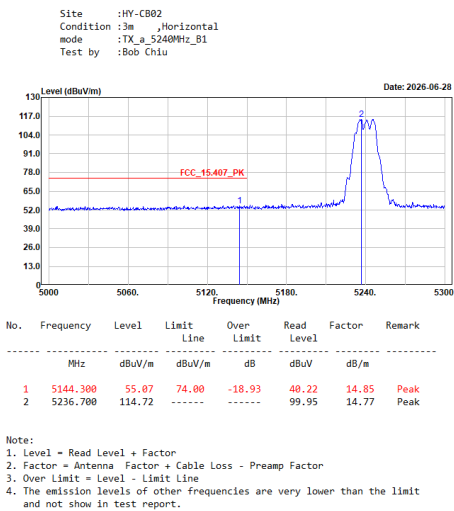

TX_a_5240MHz_B1_V_Average

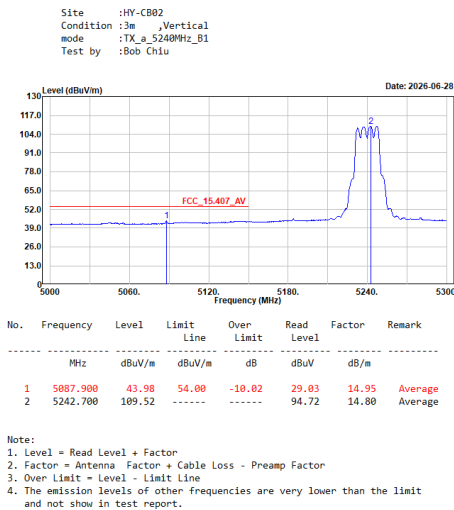


TX_a_5240MHz_B1_V_Peak

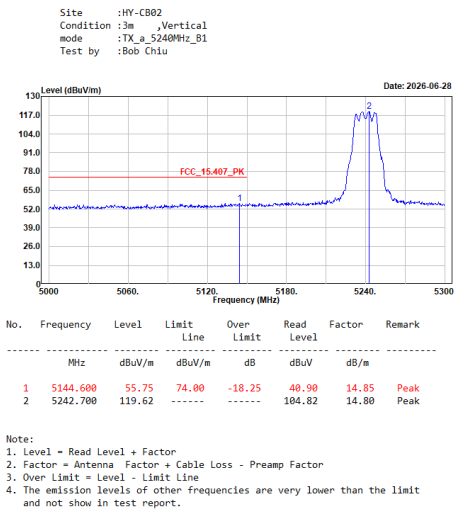

TX_a_5240MHz_B2_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5240MHz_B2
Test by :Bob Chiu

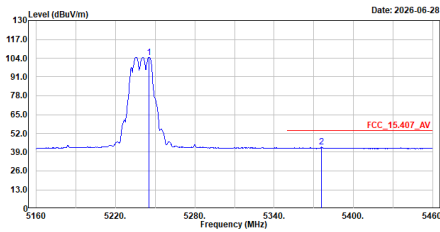


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5245.200	104.72	-----	-----	89.92	14.80	Average
2	5375.700	42.54	54.00	-11.46	27.88	14.66	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_B2_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5240MHz_B2
Test by :Bob Chiu

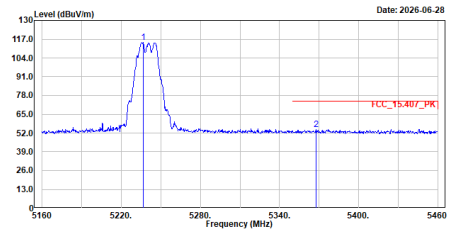


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5236.500	114.65	-----	-----	99.88	14.77	Peak
2	5367.900	54.67	74.00	-19.33	40.01	14.66	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_B2_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5240MHz_B2
Test by :Bob Chiu

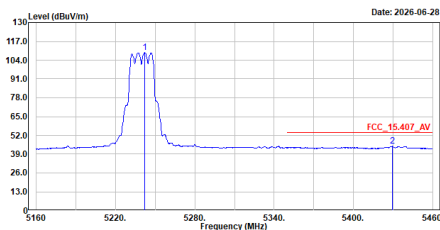


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5242.200	109.31	-----	-----	94.52	14.79	Average
2	5429.400	44.50	54.00	-9.50	29.77	14.73	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5240MHz_B2_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5240MHz_B2
Test by :Bob Chiu

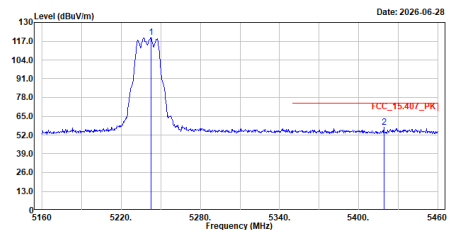


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5242.500	119.66	-----	-----	104.86	14.80	Peak
2	5419.200	57.19	74.00	-16.81	42.49	14.70	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5745MHz
Test by :Bob Chiu

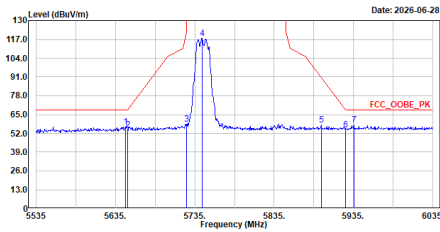


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5648.000	56.53	68.20	-11.67	40.58	15.95	Peak
2	5650.000	54.50	68.21	-13.71	38.53	15.97	Peak
3	5724.500	58.56	121.06	-62.50	42.19	16.37	Peak
4	5744.000	117.79	-----	-----	101.38	16.41	Peak
5	5894.500	57.88	90.77	-32.89	41.21	16.67	Peak
6	5925.000	54.52	68.21	-13.69	37.79	16.73	Peak
7	5935.500	57.97	68.20	-10.23	41.23	16.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5745MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5745MHz
Test by :Bob Chiu

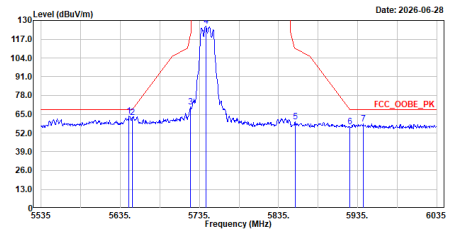


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5646.000	63.53	68.20	-4.67	47.59	15.94	Peak
2	5650.000	62.67	68.21	-5.54	46.70	15.97	Peak
3	5724.000	69.93	119.92	-49.99	53.56	16.37	Peak
4	5743.000	126.04	-----	-----	109.63	16.41	Peak
5	5856.000	59.70	110.52	-50.82	43.04	16.66	Peak
6	5925.000	56.32	68.21	-11.89	39.59	16.73	Peak
7	5942.000	58.37	68.20	-9.83	41.62	16.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5785MHz
Test by :Bob Chiu

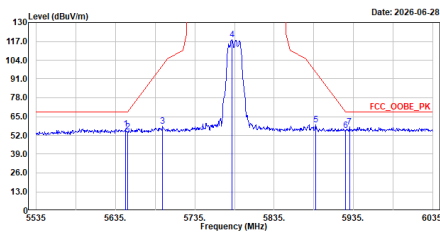


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5648.000	56.56	68.20	-11.64	40.61	15.95	Peak
2	5650.000	54.51	68.21	-13.70	38.54	15.97	Peak
3	5694.500	58.17	101.13	-42.96	41.90	16.27	Peak
4	5781.500	118.41	-----	-----	101.95	16.46	Peak
5	5887.500	59.40	95.95	-36.55	42.72	16.68	Peak
6	5925.000	55.64	68.21	-12.57	38.91	16.73	Peak
7	5930.000	57.90	68.20	-10.30	41.15	16.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5785MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5785MHz
Test by :Bob Chiu

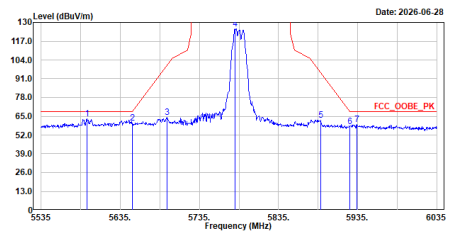


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5593.000	63.15	68.20	-5.05	47.60	15.55	Peak
2	5650.000	60.33	68.21	-7.88	44.36	15.97	Peak
3	5694.500	64.17	101.13	-36.96	47.90	16.27	Peak
4	5780.500	125.67	-----	-----	109.22	16.45	Peak
5	5888.500	62.24	95.21	-32.97	45.57	16.67	Peak
6	5925.000	57.82	68.21	-10.39	41.09	16.73	Peak
7	5934.000	59.26	68.20	-8.94	42.51	16.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5825MHz
Test by :Bob Chiu

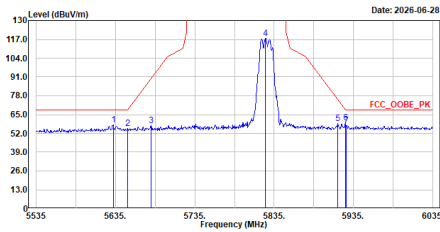


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5632.000	57.66	68.20	-10.54	41.83	15.83	Peak
2	5650.000	55.47	68.21	-12.74	39.50	15.97	Peak
3	5680.000	57.55	90.40	-32.85	41.37	16.18	Peak
4	5824.000	117.93	-----	-----	101.36	16.57	Peak
5	5915.500	58.76	75.24	-16.48	42.04	16.72	Peak
6	5925.000	59.50	68.21	-8.71	42.77	16.73	Peak
7	5926.000	57.57	68.20	-10.63	40.83	16.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_a_5825MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5825MHz
Test by :Bob Chiu

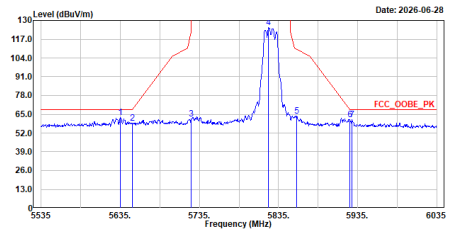


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5635.000	63.03	68.20	-5.17	47.17	15.86	Peak
2	5650.000	59.03	68.21	-9.18	43.06	15.97	Peak
3	5725.000	61.69	122.20	-60.51	45.32	16.37	Peak
4	5825.000	125.20	-----	-----	108.65	16.55	Peak
5	5858.000	63.70	109.96	-46.26	47.05	16.65	Peak
6	5925.000	61.18	68.21	-7.03	44.45	16.73	Peak
7	5927.500	61.20	68.20	-7.00	44.45	16.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5180MHz
Test by :Bob Chiu

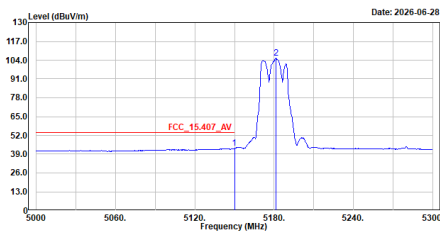


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5150.000	42.98	54.00	-11.02	28.14	14.84	Average
2	5181.200	105.25	-----	-----	90.51	14.74	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_V_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5180MHz
Test by :Bob Chiu

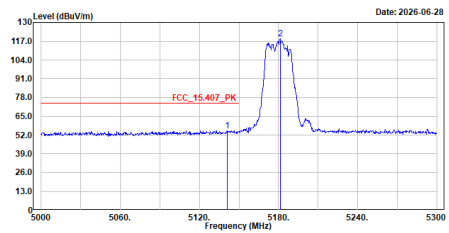


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5141.300	55.14	74.00	-18.86	40.28	14.86	Peak
2	5181.200	118.59	-----	-----	103.85	14.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_V_Average

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5180MHz
Test by :Bob Chiu

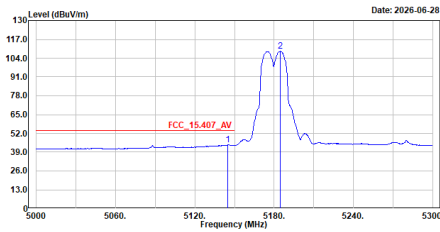


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5144.900	43.96	54.00	-10.04	29.11	14.85	Average
2	5184.500	108.78	-----	-----	94.06	14.72	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5180MHz_V_Peak

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5180MHz
Test by :Bob Chiu

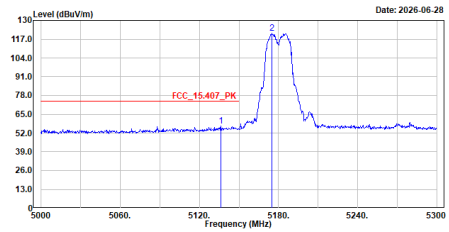


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5136.200	56.83	74.00	-17.17	41.94	14.89	Peak
2	5175.200	121.12	-----	-----	106.37	14.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_B1_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5220MHz_B1
Test by :Bob Chiu

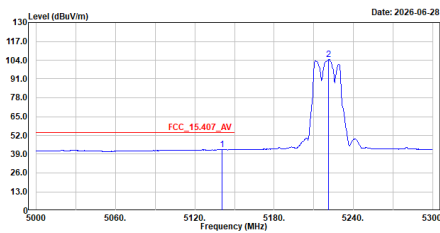


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5140.700	42.13	54.00	-11.87	27.26	14.87	Average
2	5221.400	104.70	-----	-----	89.97	14.73	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_B1_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5220MHz_B1
Test by :Bob Chiu

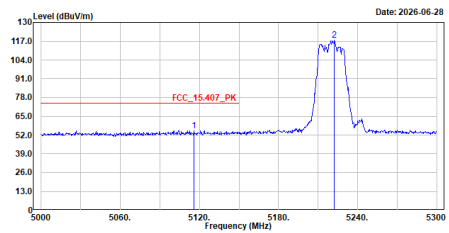


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5116.100	55.13	74.00	-18.87	40.17	14.96	Peak
2	5222.300	117.61	-----	-----	102.88	14.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_B1_V_Average

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5220MHz_B1
Test by :Bob Chiu

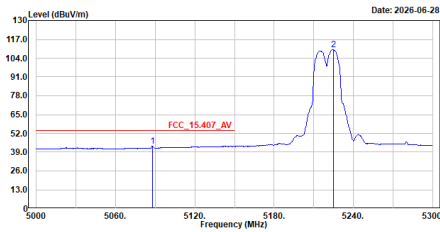


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5087.900	43.39	54.00	-10.61	28.44	14.95	Average
2	5224.700	110.07	-----	-----	95.33	14.74	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_B1_V_Peak

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5220MHz_B1
Test by :Bob Chiu

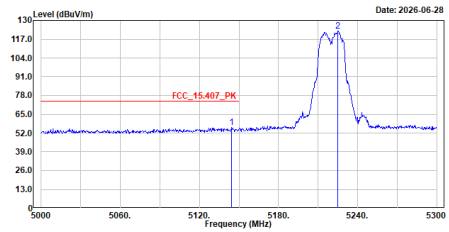


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5144.600	55.69	74.00	-18.31	40.84	14.85	Peak
2	5225.000	122.57	-----	-----	107.83	14.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_B2_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5220MHz_B2
Test by :Bob Chiu

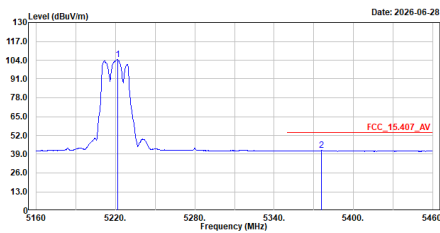


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5221.500	104.64	-----	-----	89.91	14.73	Average
2	5376.000	41.57	54.00	-12.43	26.91	14.66	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_B2_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5220MHz_B2
Test by :Bob Chiu

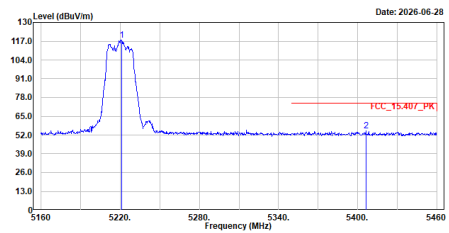


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5220.900	117.84	-----	-----	103.11	14.73	Peak
2	5406.300	54.76	74.00	-19.24	40.09	14.67	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_B2_V_Average

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5220MHz_B2
Test by :Bob Chiu

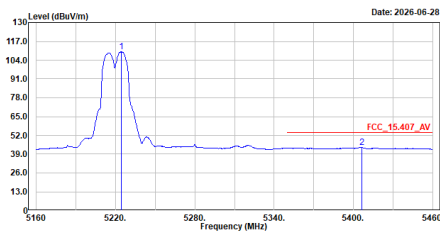


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5224.200	118.04	-----	-----	95.30	14.74	Average
2	5406.300	43.66	54.00	-10.34	28.99	14.67	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5220MHz_B2_V_Peak

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5220MHz_B2
Test by :Bob Chiu

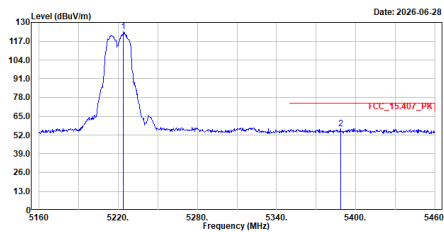


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5223.900	123.58	-----	-----	108.84	14.74	Peak
2	5388.600	56.33	74.00	-17.67	41.67	14.66	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_B1_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5240MHz_B1
Test by :Bob Chiu

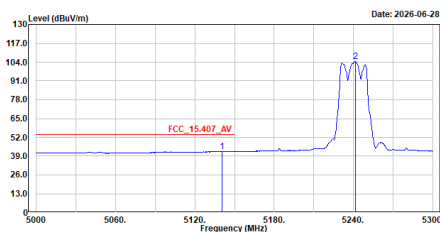


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5240.700	42.35	54.00	-11.65	27.48	14.87	Average
2	5241.500	104.54	-----	-----	89.75	14.79	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_B1_H_Peak


Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5240MHz_B1
Test by :Bob Chiu

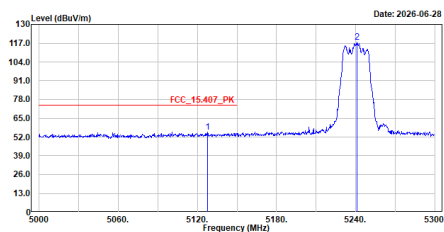


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5227.500	55.35	74.00	-18.65	40.43	14.92	Peak
2	5240.900	117.86	-----	-----	103.07	14.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ax20_5240MHz_B1_V_Average

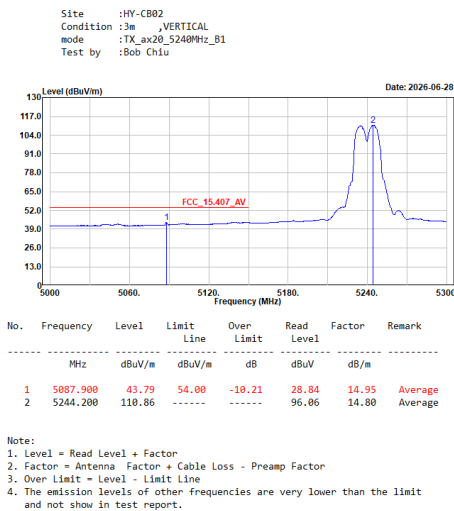


TX_ax20_5240MHz_B1_V_Peak

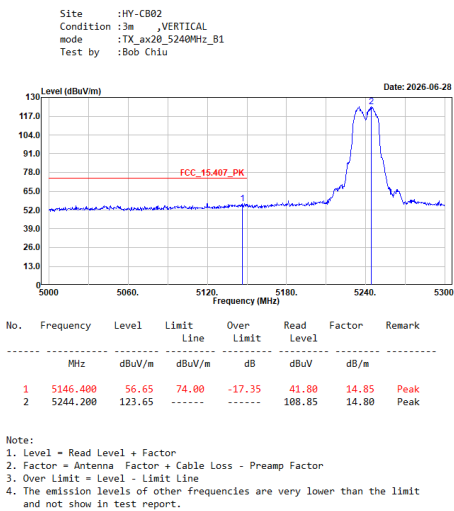

TX_ax20_5240MHz_B2_H_Average

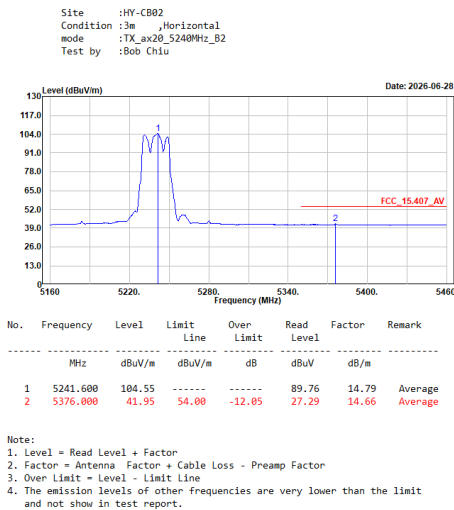


TX_ax20_5240MHz_B2_H_Peak

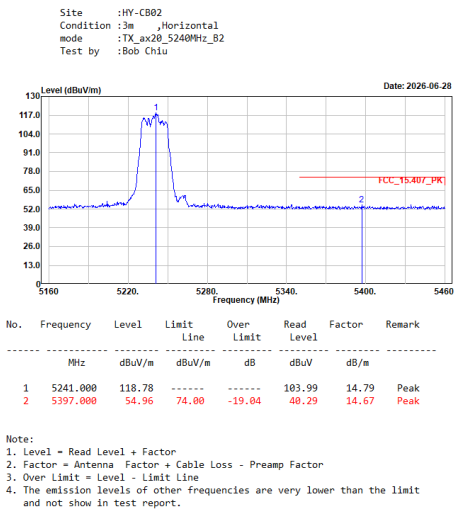

TX_ax20_5240MHz_B2_V_Average

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5240MHz_B2
Test by :Bob Chiu

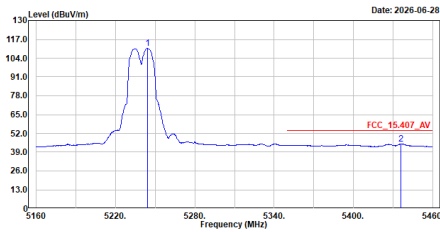


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5244.300	111.01	-----	-----	96.21	14.80	Average
2	5436.000	44.64	54.00	-9.36	29.89	14.75	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5240MHz_B2_V_Peak

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax20_5240MHz_B2
Test by :Bob Chiu

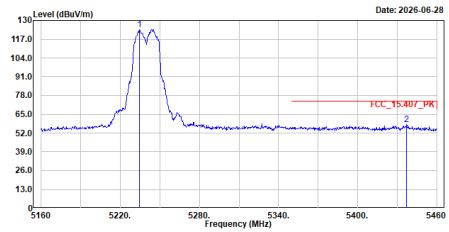


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5234.700	123.79	-----	-----	109.02	14.77	Peak
2	5437.200	58.00	74.00	-16.00	43.25	14.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5745MHz
Test by :Bob Chiu

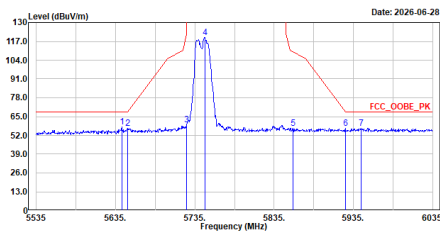


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5643.000	57.86	68.20	-10.34	41.94	15.92	Peak
2	5650.000	56.75	68.21	-11.46	40.78	15.97	Peak
3	5725.000	59.59	122.20	-62.61	43.22	16.37	Peak
4	5747.500	119.71	-----	-----	103.29	16.42	Peak
5	5858.500	57.14	109.82	-52.68	40.48	16.66	Peak
6	5925.000	56.86	68.21	-11.35	40.13	16.73	Peak
7	5944.500	56.99	68.20	-11.21	40.24	16.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5745MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ax20_5745MHz
Test by :Bob Chiu

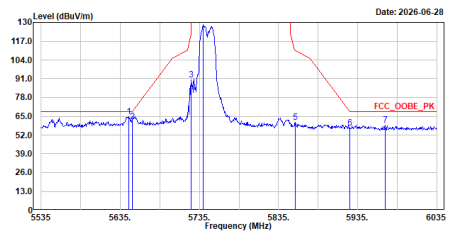


No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5645.500	64.93	68.20	-3.27	49.00	15.93	Peak
2	5650.000	61.32	68.21	-6.89	45.35	15.97	Peak
3	5725.000	90.41	122.20	-31.79	74.04	16.37	Peak
4	5740.000	128.77	-----	-----	112.37	16.40	Peak
5	5856.000	60.85	110.52	-49.67	44.19	16.66	Peak
6	5925.000	56.77	68.21	-11.44	40.04	16.73	Peak
7	5969.500	58.71	68.20	-9.49	41.93	16.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5785MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5785MHz
Test by :Bob Chiu

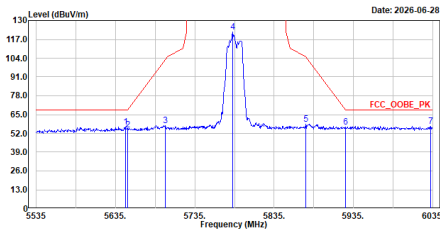


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5647.500	56.59	68.20	-11.61	40.64	15.95	Peak
2	5650.000	54.68	68.21	-13.53	38.71	15.97	Peak
3	5697.500	57.60	103.35	-45.75	41.31	16.29	Peak
4	5782.500	122.18	-----	-----	105.72	16.46	Peak
5	5875.000	58.25	105.20	-46.95	41.58	16.67	Peak
6	5925.000	56.45	68.21	-11.76	39.72	16.73	Peak
7	5932.500	57.13	68.20	-11.07	40.24	16.89	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5785MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ax20_5785MHz
Test by :Bob Chiu

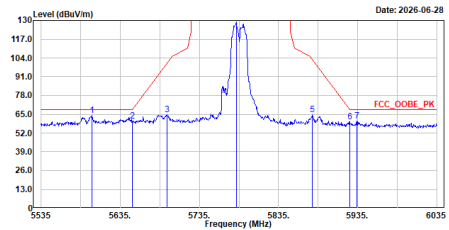


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5599.000	64.05	68.20	-4.15	48.46	15.59	Peak
2	5650.000	60.28	68.21	-7.93	44.31	15.97	Peak
3	5694.000	64.85	100.76	-35.91	48.59	16.26	Peak
4	5781.500	128.95	-----	-----	112.49	16.46	Peak
5	5878.000	64.61	102.98	-38.37	47.95	16.66	Peak
6	5925.000	59.76	68.21	-8.45	43.03	16.73	Peak
7	5934.000	60.35	68.20	-7.85	43.60	16.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5825MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax20_5825MHz
Test by :Bob Chiu

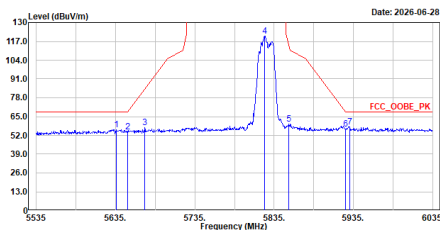


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5636.000	55.99	68.20	-12.21	40.12	15.87	Peak
2	5650.000	54.25	68.21	-13.96	38.28	15.97	Peak
3	5672.000	57.34	84.48	-27.14	41.21	16.13	Peak
4	5823.000	120.72	-----	-----	104.16	16.56	Peak
5	5853.500	60.00	114.22	-54.22	43.35	16.65	Peak
6	5925.000	56.43	68.21	-11.78	39.70	16.73	Peak
7	5930.500	57.84	68.20	-10.36	41.09	16.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax20_5825MHz_V_Peak


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ax20_5825MHz
Test by :Bob Chiu

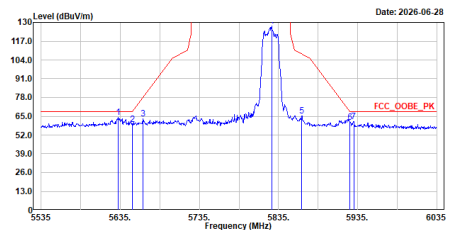


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5632.000	64.34	68.20	-3.86	48.51	15.83	Peak
2	5650.000	59.59	68.21	-8.62	43.62	15.97	Peak
3	5664.000	63.21	78.57	-15.36	47.15	16.06	Peak
4	5826.500	127.44	-----	-----	110.87	16.57	Peak
5	5864.500	65.32	108.14	-42.82	48.66	16.66	Peak
6	5925.000	60.80	68.21	-7.41	44.07	16.73	Peak
7	5930.000	61.30	68.20	-6.90	44.55	16.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ax40_5190MHz_H_Average

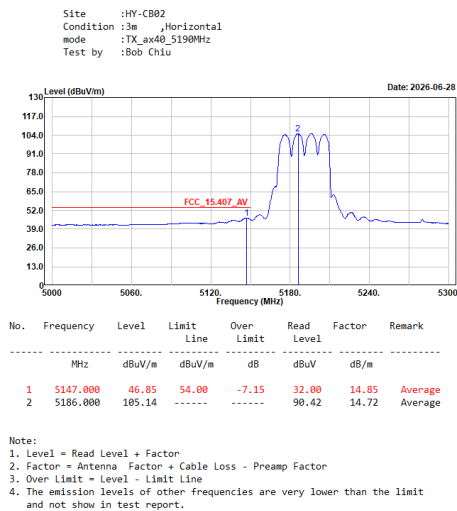


TX_ax40_5190MHz_H_Peak

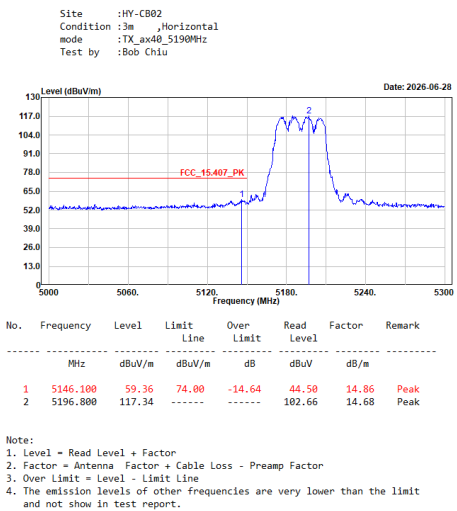


TX_ax40_5190MHz_V_Average

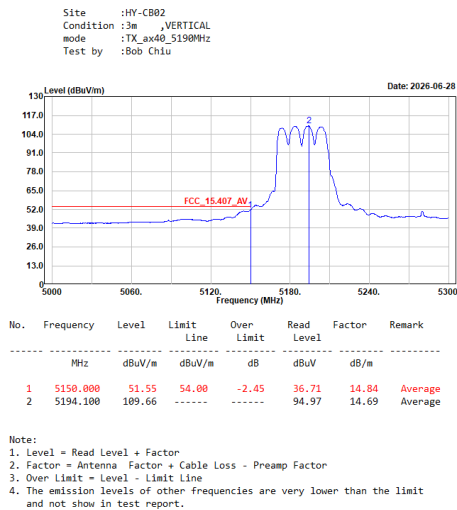


TX_ax40_5190MHz_V_Peak

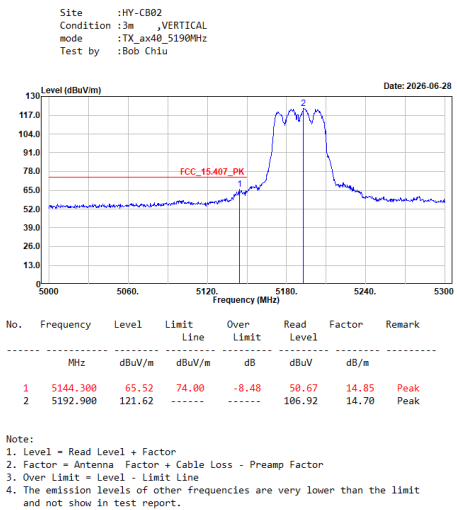


TX_ax40_5230MHz_H_Average

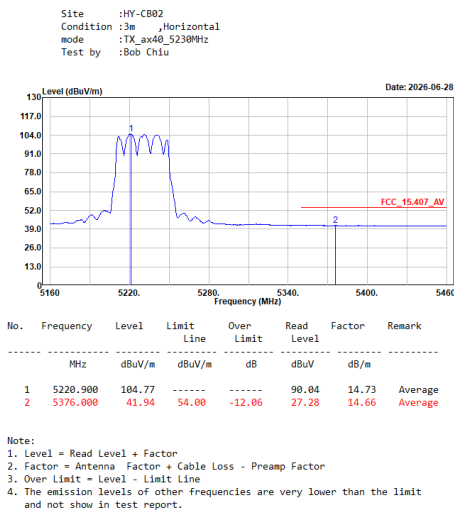


TX_ax40_5230MHz_H_Peak

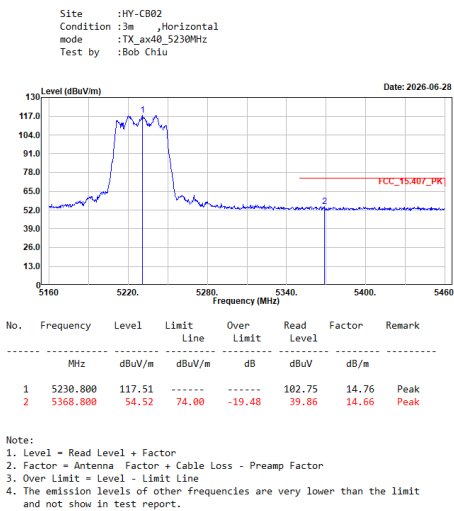


TX_ax40_5230MHz_V_Average

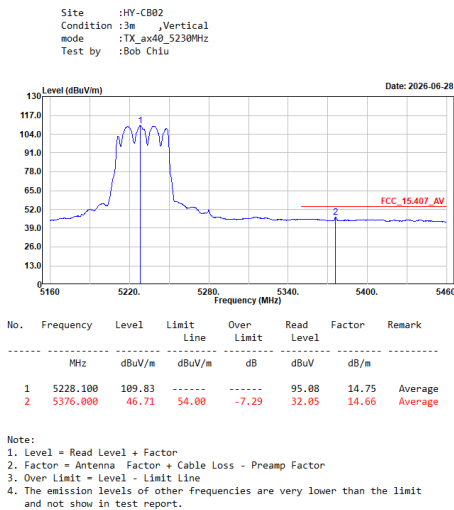

TX_ax40_5230MHz_V_Peak

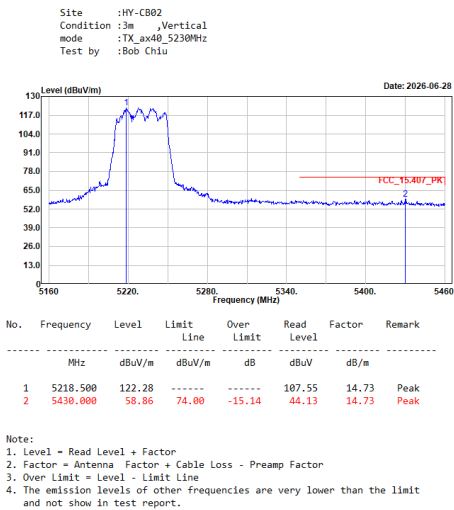


TX_ax40_5755MHz_H_Peak

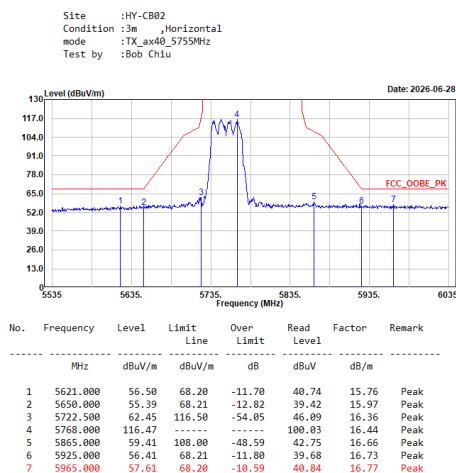


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5755MHz_V_Peak

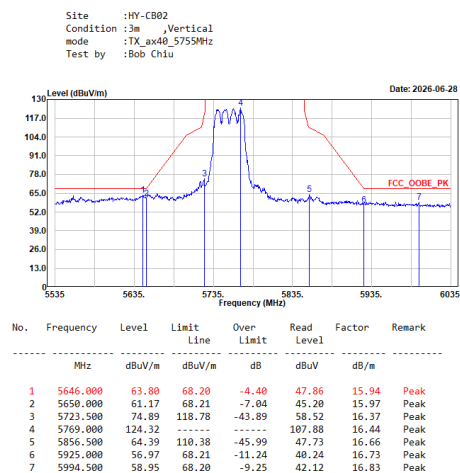


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax40_5795MHz_H_Peak

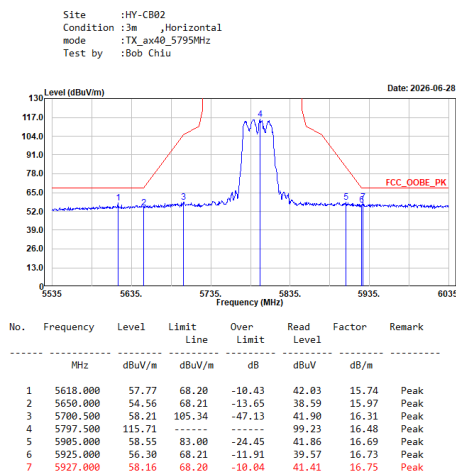

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ax40_5795MHz_V_Peak

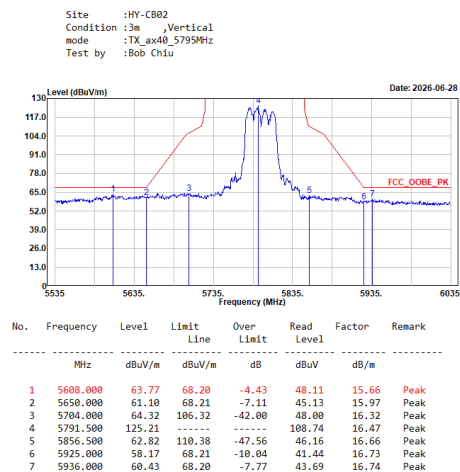

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax80_5210MHz
Test by :Bob Chiu

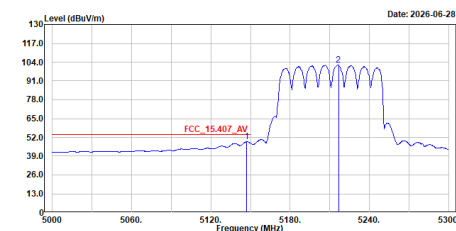


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5147.300	49.00	54.00	-5.00	34.15	14.85	Average
2	5216.600	101.98	-----	-----	87.27	14.71	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ax80_5210MHz
Test by :Bob Chiu

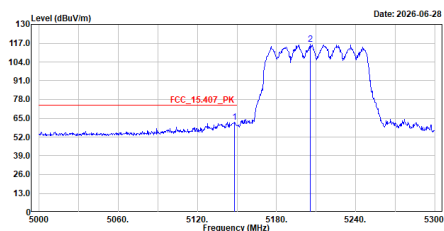


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5148.200	62.46	74.00	-11.54	47.61	14.85	Peak
2	5205.800	116.34	-----	-----	101.65	14.69	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_V_Average

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5210MHz
Test by :Bob Chiu

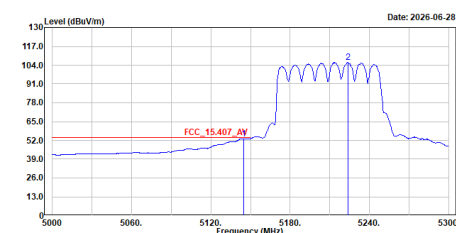


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5144.900	53.20	54.00	-0.80	38.35	14.85	Average
2	5223.800	106.00	-----	-----	91.26	14.74	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ax80_5210MHz_V_Peak


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ax80_5210MHz
Test by :Bob Chiu

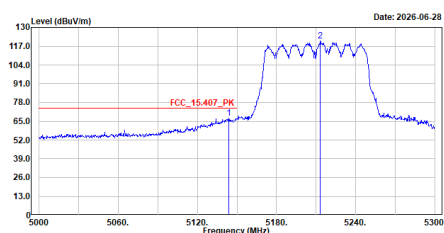

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5144.000	67.07	74.00	-6.93	52.22	14.85	Peak
2	5213.300	120.55	-----	-----	105.84	14.71	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

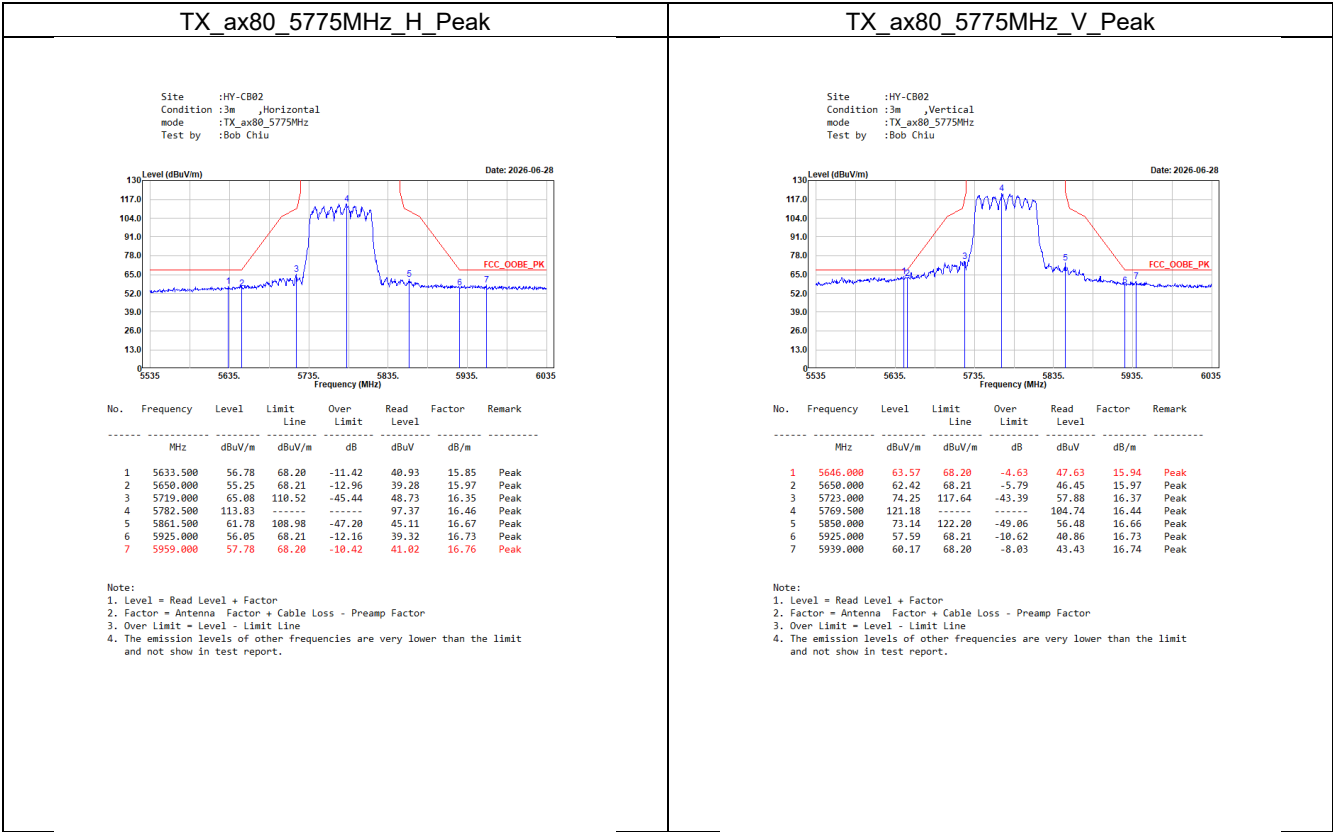

Co-location**TX_g_2462MHz+ax80_5210MHz_H**

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_g_2462MHz+ax80_5210MHz
Test by :Bob Chiu

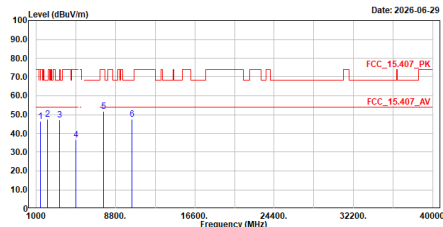


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1401.094	46.36	74.00	-27.64	69.35	-22.99	Peak
2	2074.719	47.51	68.22	-20.71	68.64	-21.13	Peak
3	3262.063	47.20	74.00	-26.80	66.01	-18.81	Peak
4	4924.000	36.42	74.00	-37.58	47.47	-11.05	Peak
5	7628.406	51.53	74.00	-22.47	56.75	-5.22	Peak
6	10420.000	47.51	68.22	-20.71	52.42	-4.91	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_g_2462MHz+ax80_5210MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_g_2462MHz+ax80_5210MHz
Test by :Bob Chiu

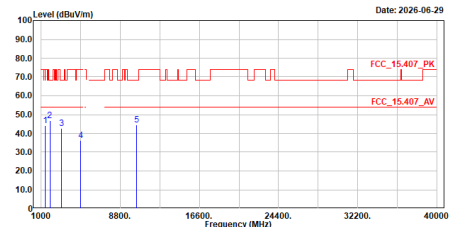


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	1389.406	44.17	74.00	-29.83	67.15	-22.98	Peak
2	1863.281	46.77	68.22	-21.45	69.15	-22.38	Peak
3	2993.250	42.49	68.22	-25.73	61.51	-19.02	Peak
4	4924.000	36.36	74.00	-37.64	47.41	-11.05	Peak
5	10420.000	44.52	68.22	-23.70	49.43	-4.91	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_g_2462MHz+ax80_5210MHz_H_QP

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_g_2462MHz+ax80_5210MHz
Test by :Bob Chiu

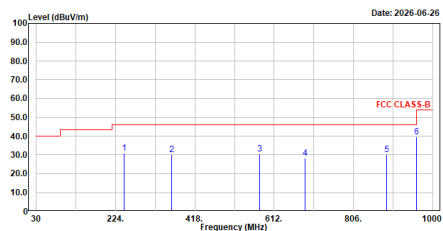


No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	244.811	31.10	46.00	-14.90	43.26	-12.16	QP
2	361.417	30.23	46.00	-15.77	39.31	-9.08	QP
3	576.028	30.66	46.00	-15.34	34.76	-4.10	QP
4	688.234	28.12	46.00	-17.88	30.49	-2.37	QP
5	887.844	30.36	46.00	-15.64	30.39	-0.03	QP
6	960.048	39.54	54.00	-14.46	38.46	1.08	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_g_2462MHz+ax80_5210MHz_V_QP

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_g_2462MHz+ax80_5210MHz
Test by :Bob Chiu

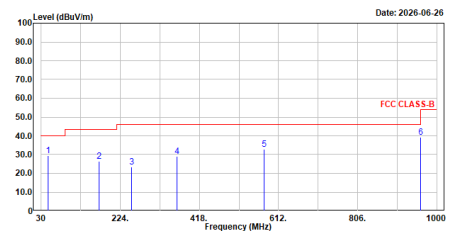

No.	Frequency MHz	Level dBuV/m	Limit dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	46.701	29.26	48.00	-18.74	39.26	-10.00	QP
2	172.057	26.51	43.50	-16.99	37.95	-11.44	QP
3	252.162	23.52	46.00	-22.48	35.55	-12.03	QP
4	363.517	29.22	46.00	-16.78	38.17	-8.95	QP
5	576.028	32.65	46.00	-13.35	36.75	-4.10	QP
6	960.048	39.22	54.00	-14.78	38.14	1.08	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.