

FCC RF Inspection Report

Product Name	Wireless module
Model No	WAPC003
FCC ID.	SLE-WAPC003

Applicant	Moxa Inc.
Address	No. 1111, Heping Rd., Bade Dist., Taoyuan City 334004, Taiwan

Date of Receipt	Apr. 25, 2022
Issued Date	Jul. 25, 2022
Report No.	2240703R-RFNAOTHV03-2
Report Version	V1.0



The test results relate only to the samples tested.

The test results shown in the test report are traceable to the national/international standard through the calibration report of the equipment and evaluated measurement uncertainty herein.

This report must not be used to claim product endorsement by TAF or any agency of the government.

The test report shall not be reproduced without the written approval of DEKRA Testing and Certification Co., Ltd.

Measurement uncertainties evaluated for each testing system and associated connections are given here to provide the system information for reference. Compliance determinations do not take into account measurement uncertainties for each testing system, but are based on the results of the compliance measurement.

Test Report


Issued Date: Jul. 25, 2022

Report No.: 2240703R-RFNAOTHV03-2




Product Name	Wireless module
Applicant	Moxa Inc.
Address	No. 1111, Heping Rd., Bade Dist., Taoyuan City 334004, Taiwan
Manufacturer	Moxa Inc.
Model No.	WAPC003
FCC ID.	SLE-WAPC003
EUT Rated Voltage	12-48 VDC, PoE
EUT Test Voltage	12 VDC
Trade Name	MOXA
Applicable Standard	FCC CFR Title 47 Part 15 Subpart E ANSI C63.4: 2014, ANSI C63.10: 2013 KDB Publication 789033, KDB Publication 987594
Test Result	Complied

Documented By :




(Supervisor / Jinn Chen)

Tested By :

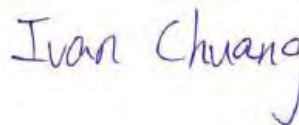

(Senior Engineer / Ivan Chuang)

Approved By :



(Senior Engineer / Jack Hsu)

TABLE OF CONTENTS

Description	Page
1. GENERAL INFORMATION.....	5
1.1. EUT Description.....	5
1.2. Summary of Test Item	8
1.3. Tested System Details.....	9
1.4. Configuration of tested System	9
1.5. EUT Exercise Software	9
1.6. Test Facility	10
1.7. List of Test Equipment	11
1.8. Uncertainty	12
2. Conducted Emission	13
2.1. Test Setup	13
2.2. Limits	13
2.3. Test Procedure	14
2.4. Test Result of Conducted Emission.....	15
3. Radiated Emission.....	16
3.1. Test Setup	16
3.2. Limits	17
3.3. Test Procedure	18
3.4. Test Result of Radiated Emission.....	20
4. Band Edge.....	62
4.1. Test Setup	62
4.2. Limits	63
4.3. Test Procedure	63
4.4. Test Result of Band Edge	65
5. Duty Cycle.....	99
5.1. Test Setup	99
5.2. Test Procedure	99
5.3. Test Result of Duty Cycle.....	100
6. EMI Reduction Method During Compliance Testing	101

Appendix 1: EUT Test Photographs

Appendix 2: Product Photos: Please refer to the file: 2240703R-Product Photos

Revision History

Report No.	Version	Description	Issued Date
2240703R-RFNAOTHV03-2	V1.0	Initial issue of report.	Jul. 25, 2022

1. GENERAL INFORMATION

1.1. EUT Description

Product Name	Wireless module
Trade Name	MOXA
FCC ID.	SLE-WAPC003
Model No.	WAPC003
Frequency Range	802.11a/n/ac-20MHz: 5180-5320MHz, 5500-5700MHz, 5745-5825MHz 802.11n/ac-40MHz: 5190-5310 MHz, 5510-5670MHz, 5755-5795MHz 802.11ac-20MHz: 5720 MHz, 802.11ac-40MHz: 5710 MHz 802.11ac-80MHz: 5210-5290MHz, 5530-5690MHz, 5775MHz
Number of Channels	802.11a/n/ac-20MHz: 24; 802.11n/ac-40MHz: 11, 802.11ac-80MHz: 6
Data Rate	802.11a: 6 - 54Mbps 802.11n: up to 300Mbps 802.11ac-80MHz: up to 866.7Mbps
Type of Modulation	802.11a/n/ac: OFDM, BPSK, QPSK, 16QAM, 64QAM, 256QAM
Antenna Type	Dipole Antenna, Panel Antenna
Channel Control	Auto
Antenna Gain	Refer to the table "Antenna List"

Antenna List

No.	Manufacturer	Part No.	Antenna Type	Peak Gain
1	MOXA	ANT-WDB-ANM-0306	Dipole	5.7dBi For 5.15~5.25GHz 5.7dBi For 5.25~5.35GHz 6.3dBi For 5.47~5.725GHz 6.3dBi For 5.725~5.825GHz
2	MOXA	ANT-WDB-ANM-0502	Dipole	1.41dBi For 5GHz
3	MOXA	ANT-WDB-ARM-02	Dipole	0.81dBi For 5.15~5.25GHz 0.36Bi For 5.25~5.35GHz 0.36dBi For 5.47~5.725GHz -0.39dBi For 5.725~5.825GHz
4	MOXA	ANT-WDB-ARM-0202	Dipole	1.8dBi For 5GHz
5	MOXA	MAT-WDB-CA-RM-2-0205	Dipole	5.7dBi For 5.15~5.25GHz 5.76Bi For 5.25~5.35GHz 5.7dBi For 5.47~5.725GHz 5.2dBi For 5.725~5.825GHz
6	MOXA	MAT-WDB-DA-RM-2-0203-1m	Dipole	2.72dBi For 5.15~5.25GHz 2.72dBi For 5.25~5.35GHz 2.72dBi For 5.47~5.725GHz 2.34dBi For 5.725~5.825GHz
7	MOXA	MAT-WDB-PA-NF-2-0708	Panel	8.77dBi For 5.15~5.25GHz 8.77dBi For 5.25~5.35GHz 8.61dBi For 5.47~5.725GHz 8.18dBi For 5.725~5.825GHz
8	MOXA	ANT-WDB-PNF-1011	Panel	12.04dBi For 5.15~5.25GHz 12.04dBi For 5.25~5.35GHz 11.06dBi For 5.47~5.725GHz 11.06dBi For 5.725~5.825GHz
9	MOXA	ANT-WDB-ONM-0707	Dipole	7.3dBi For 5.15~5.25GHz 7.3dBi For 5.25~5.35GHz 7.5dBi For 5.47~5.725GHz 7.6dBi For 5.725~5.825GHz
10	MOXA	ANT-WDB-ONF-0709	Dipole	8.61dBi For 5.15~5.25GHz 8.15dBi For 5.25~5.35GHz 8.87dBi For 5.47~5.725GHz 8.87dBi For 5.725~5.825GHz
11	MOXA	ANT-WSB5-PNF-16	Panel	16.38dBi For 5.15~5.25GHz 16.38dBi For 5.25~5.35GHz 16.94dBi For 5.47~5.725GHz 16.94dBi For 5.725~5.825GHz

Note: The antenna of EUT is conforming to FCC 15.203.

802.11a/n/ac-20MHz Center Working Frequency of Each Channel:

Channel	Frequency	Channel	Frequency	Channel	Frequency	Channel	Frequency
Channel 36:	5180 MHz	Channel 40:	5200 MHz	Channel 44:	5220 MHz	Channel 48:	5240 MHz
Channel 52:	5260 MHz	Channel 56:	5280 MHz	Channel 60:	5300 MHz	Channel 64:	5320 MHz
Channel 100:	5500 MHz	Channel 104:	5520 MHz	Channel 108:	5540 MHz	Channel 112:	5560 MHz
Channel 116:	5580 MHz	Channel 120:	5600 MHz	Channel 124:	5620 MHz	Channel 128:	5640 MHz
Channel 132:	5660 MHz	Channel 136:	5680 MHz	Channel 140:	5700 MHz	Channel 149:	5745 MHz
Channel 153:	5765 MHz	Channel 157:	5785 MHz	Channel 161:	5805 MHz	Channel 165:	5825 MHz

802.11n/ac-40MHz Center Working Frequency of Each Channel:

Channel	Frequency	Channel	Frequency	Channel	Frequency	Channel	Frequency
Channel 38:	5190 MHz	Channel 46:	5230 MHz	Channel 54:	5270 MHz	Channel 62:	5310 MHz
Channel 102:	5510 MHz	Channel 110:	5550 MHz	Channel 118:	5590 MHz	Channel 126:	5630 MHz
Channel 134:	5670 MHz	Channel 151:	5755 MHz	Channel 159:	5795 MHz		

802.11ac-20MHz Center Working Frequency of Each Channel:

Channel	Frequency
Channel 144:	5720 MHz

802.11ac-40MHz Center Working Frequency of Each Channel:

Channel	Frequency
Channel 142:	5710 MHz

802.11ac-80MHz Center Working Frequency of Each Channel:

Channel	Frequency	Channel	Frequency	Channel	Frequency	Channel	Frequency
Channel 42:	5210 MHz	Channel 58:	5290 MHz	Channel 106:	5530 MHz	Channel 122:	5610 MHz
Channel 138:	5690 MHz	Channel 155:	5775 MHz				

Note:

1. This device is a Wireless module with a built-in 5GHz WLAN transceiver.
2. Regarding the operation frequency, the customer-provided frequency and worst-case is selected to perform the test.
3. Lowest data rate is tested in each mode. The only worst case is shown in the report.
4. These tests were conducted on a sample of the equipment for the purpose of demonstrating compliance of transmitter with Part 15 Subpart E for Unlicensed National Information Infrastructure devices.
5. This is a permissive change for FCC ID: SLE-WAPC003. According to the major change, DEKRA tests Conducted Emission, Radiated Emission, Radiated Band Edge worst-case and other testing data refer to original module report (report no.: 2110552R-E3032110128). Additional the host: Wireless AP/bridge/client, Brand: MOXA, Model number: AWK-4252A is contain this module's FCC ID.

Test Mode	Transmit (802.11ac-80BW)_POE SISO A: Transmit (802.11a) MIMO: Transmit (802.11ac-20BW) MIMO: Transmit (802.11ac-40BW) MIMO: Transmit (802.11ac-80BW)
-----------	--

1.2. Summary of Test Item

Test Condition			Test Item					
			Conducted			Radiated		
Antenna No.	Antenna Type	Antenna Gain	Conducted Power	Power Density	Occupied Bandwidth	Radiated Emission	Band Edge	DFS
1	Dipole	5.7dBi For 5.150~5.250GHz 5.7dBi For 5.250~5.350GHz 6.3dBi For 5.470~5.725GHz 6.3dBi For 5.725~5.825GHz						
2	Dipole	1.41dBi For 5GHz						
3	Dipole	0.81dBi For 5.150~5.250GHz 0.36dBi For 5.250~5.350GHz 0.36dBi For 5.470~5.725GHz -0.39dBi For 5.725~5.825GHz						
4	Dipole	1.8dBi For 5GHz						
5	Dipole	5.7dBi For 5.150~5.250GHz 5.76Bi For 5.250~5.350GHz 5.7dBi For 5.470~5.725GHz 5.2dBi For 5.725~5.825GHz						
6	Dipole	2.72dBi For 5.150~5.250GHz 2.72dBi For 5.250~5.350GHz 2.72dBi For 5.470~5.725GHz 2.34dBi For 5.725~5.825GHz						
7	Panel	8.77dBi For 5.15~5.25GHz 8.77dBi For 5.25~5.35GHz 8.61dBi For 5.47~5.725GHz 8.18dBi For 5.725~5.825GHz						
8	Panel	12.04dBi For 5.150~5.250GHz 12.04dBi For 5.250~5.350GHz 11.06dBi For 5.470~5.725GHz 11.06dBi For 5.725~5.825GHz						
9	Dipole	7.3dBi For 5.150~5.250GHz 7.3dBi For 5.250~5.350GHz 7.5dBi For 5.470~5.725GHz 7.6dBi For 5.725~5.825GHz						
10	Dipole	8.61dBi For 5.150~5.250GHz 8.15dBi For 5.250~5.350GHz 8.87dBi For 5.470~5.725GHz 8.87dBi For 5.725~5.825GHz	✓	✓	✓	✓	✓	✓
11	Panel	16.38dBi For 5.15~5.25GHz 16.38dBi For 5.25~5.35GHz 16.94dBi For 5.47~5.725GHz 16.94dBi For 5.725~5.825GHz	✓	✓	✓	✓	✓	

Note:

- Transmitting antennas of directional gain greater than 6 dBi, the conducted output power from the intentional radiator shall be reduced below the limit.


1.3. Tested System Details

The types for all equipment, plus descriptions of all cables used in the tested system (including inserted cards) are:

Product		Manufacturer	Model No.	Serial No.	Power Cord
1	Notebook PC	ASUS	P2438U	H1NXCV11U083025	N/A
2	DC Power Supply	KEYSIGHT	E36234A	MY59001234	Non-shielded, 1.8m
3	Notebook PC	DELL	Inspiron 15 3000	GT5JPJ2	N/A

Signal Cable Type	Signal cable Description
A	USB Cable
B	LAN Cable
C	LAN to RS-232 Cable
D	RS-232 to USB Cable
E	Power Cable
F	DI/DO Cable
G	LAN Cable
H	LAN Cable

1.4. Configuration of tested System

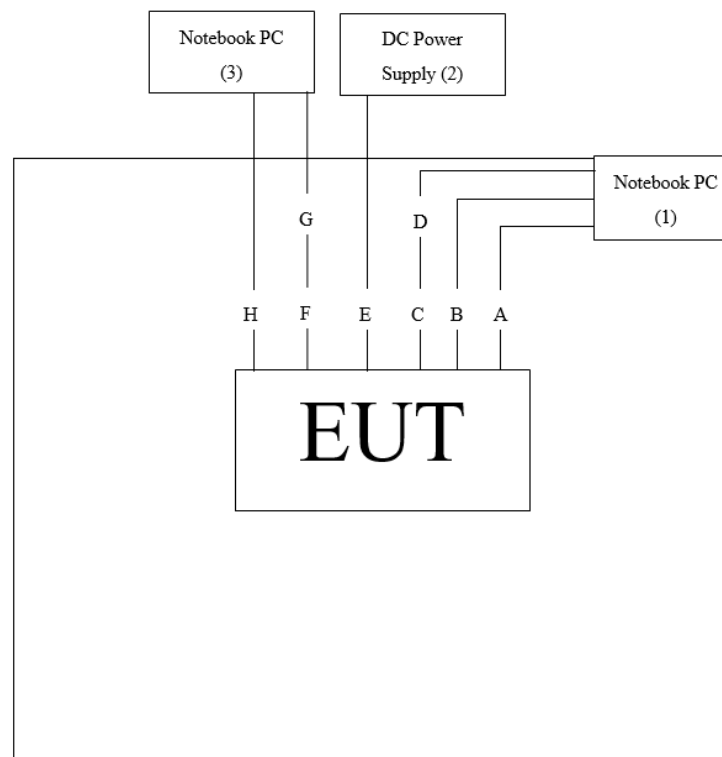

1.5. EUT Exercise Software

1. Setup the EUT as shown in Section 1.4.
2. Execute software "QCARCT V3.0.295.0" on the Notebook Computer.
3. Configure the test mode, the test channel, and the data rate.
4. Press "OK" to start the continuous Transmit.
5. Verify that the EUT works properly.

1.6. Test Facility

Ambient conditions in the laboratory:

Performed Item	Items	Required	Actual
Conducted Emission	Temperature (°C)	10~40 °C	26.4 °C
	Humidity (%RH)	10~90 %	47.2 %
Radiated Emission	Temperature (°C)	10~40 °C	22.9 °C
	Humidity (%RH)	10~90 %	69.1 %

USA : FCC Registration Number: TW0033

Canada : CAB Identifier Number: TW3023 / Company Number: 26930

Site Description : Accredited by TAF
Accredited Number: 3023

Test Laboratory : DEKRA Testing and Certification Co., Ltd
Address : No. 5-22, Ruishukeng Linkou District, New Taipei City,
24451, Taiwan

Performed Location : No. 26, Huaya 1st Rd., Guishan Dist., Taoyuan City
333411, Taiwan, R.O.C.

Phone number : +886-3-275-7255
Fax number : +866-3-327-8031
Email address : info.tw@dekra.com
Website : <http://www.dekra.com.tw>

1.7. List of Test Equipment

For Radiated measurements /HY-CB03

	Equipment	Manufacturer	Model No.	Serial No.	Cal. Date	Due. Date
	Loop Antenna	AMETEK	HLA6121	56736	2022.05.14	2023.05.13
X	Bi-Log Antenna	SCHWARZBECK	VULB9168	9168-675	2021.08.10	2022.08.09
X	Horn Antenna	ETS-Lindgren	3117	00227700	2021.11.09	2022.11.08
X	Horn Antenna	Com-Power	AH-840	101100	2021.10.04	2022.10.03
X	Pre-Amplifier	SGH	SGH0301-9	20211007-10	2022.02.22	2023.02.21
X	Pre-Amplifier	EMCI	EMC051835SE	980313	2021.11.24	2022.11.23
X	Pre-Amplifier	EMCI	EMC05820SE	980310	2021.07.07	2022.07.06
	Pre-Amplifier	EMCI	EMC184045SE	980369		
X	Coaxial Cable	EMCI	EMC102-KM-KM-600	1160314	2022.05.12	2023.05.11
	Coaxial Cable	EMCI	EMC102-KM-KM-7000	170242		
	Filter	MICRO TRONICS	BRM50702	G251	2021.09.16	2022.09.15
X	Filter	MICRO TRONICS	BRM50716	G188	2021.09.16	2022.09.15
X	EMI Test Receiver	R&S	ESR	102793	2021.12.15	2022.12.14
X	Spectrum Analyzer	R&S	FSV3044	101113	2022.01.25	2023.02.24
	Coaxial Cable	SGH	SGH18	2021005-3		
X	Coaxial Cable	SGH	SGH18	202108-4	2022.03.18	2023.03.17
	Coaxial Cable	SGH	SGH18	20110223-1		
	Coaxial Cable	SGH	HA800	GD20110222-3		

Note:

1. All equipments are calibrated every one year.
2. The test instruments marked with "X" are used to measure the final test results.
3. Test Software version : E3 210616 dekra V9

1.8. Uncertainty

Uncertainties have been calculated according to the DEKRA internal document.

The reported expanded uncertainties are based on a standard uncertainty multiplied by a coverage factor of $k=2$, providing a level of confidence of approximately 95%.

Measurement uncertainties evaluated for each testing system and associated connections are given here to provide the system information for reference. Compliance determinations do not take into account measurement uncertainties for each testing system, but are based on the results of the compliance measurement.

Test item	Uncertainty	
Conducted Emission	± 3.42 dB	
Radiated Emission	Under 1GHz ± 4.06 dB	Above 1GHz ± 3.73 dB
Band Edge	Under 1GHz ± 4.06 dB	Above 1GHz ± 3.73 dB
Duty Cycle	± 2.31 msec	

2.3. Test Procedure


The EUT and simulators are connected to the main power through a line impedance stabilization network (L.I.S.N.). This provides a 50 ohm /50uH coupling impedance for the measuring equipment. The peripheral devices are also connected to the main power through a LISN that provides a 50ohm /50uH coupling impedance with 50ohm termination. (Please refers to the block diagram of the test setup and photographs.)

Both sides of A.C. line are checked for maximum conducted interference. In order to find the maximum emission, the relative positions of equipment and all of the interface cables must be changed according to ANSI C63.4:2014 on conducted measurement.


Conducted emissions were invested over the frequency range from 0.15MHz to 30MHz using a receiver bandwidth of 9kHz.

2.4. Test Result of Conducted Emission

Dipole-PoE

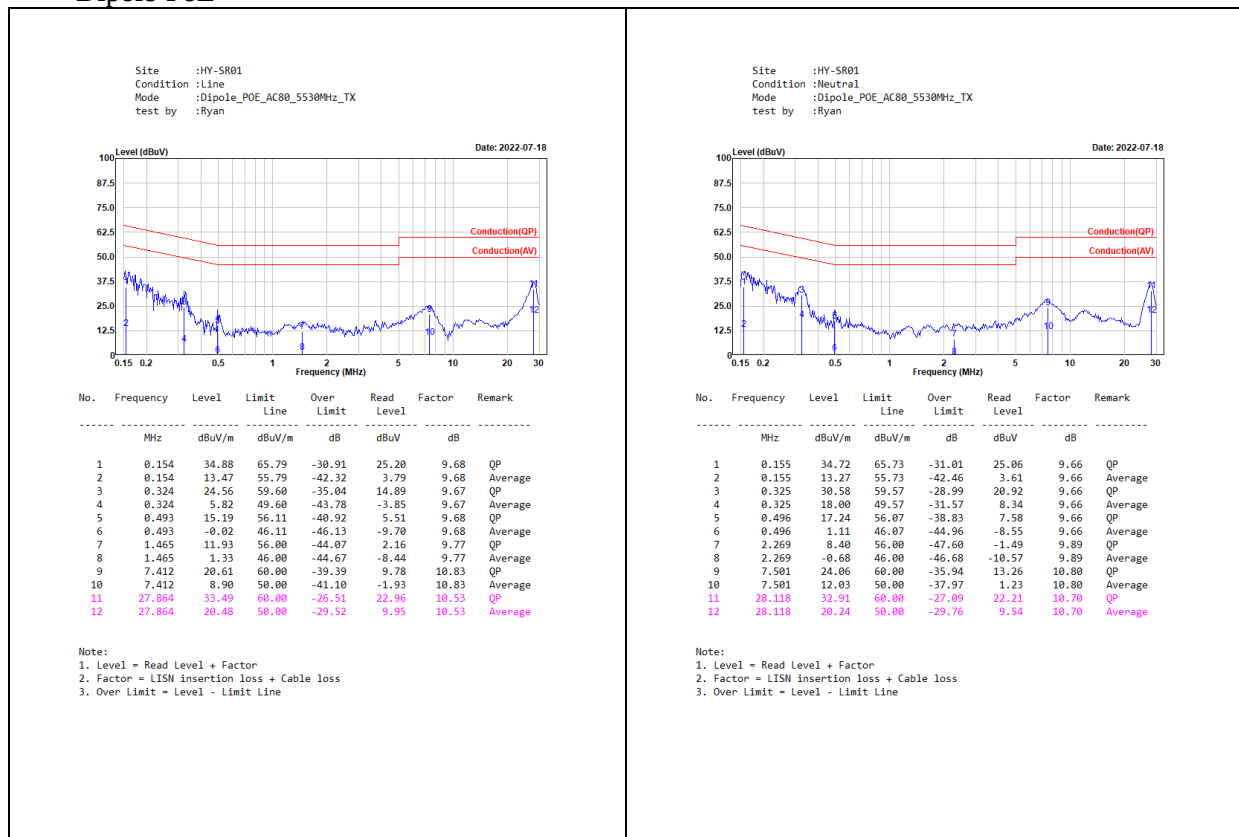


Panel-PoE

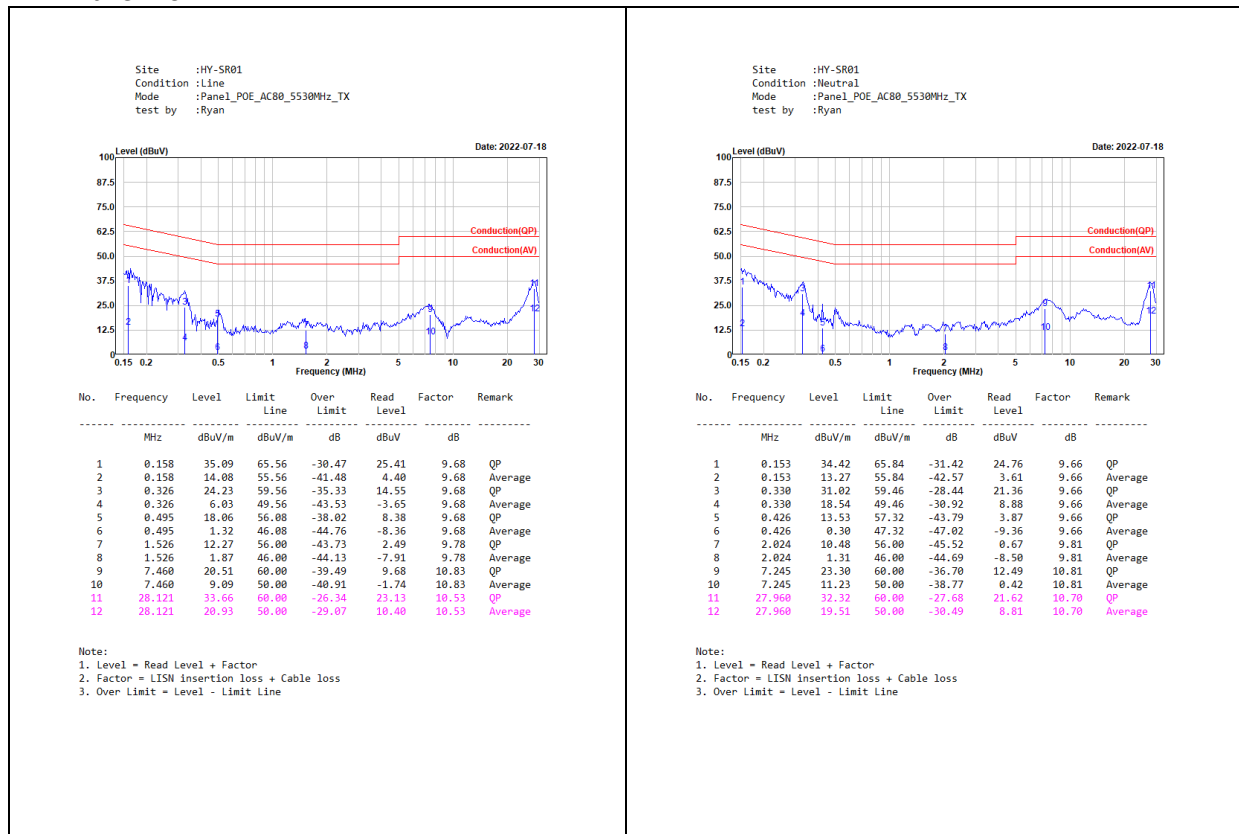


3. Radiated Emission

3.1. Test Setup


Radiated Emission Under 30MHz

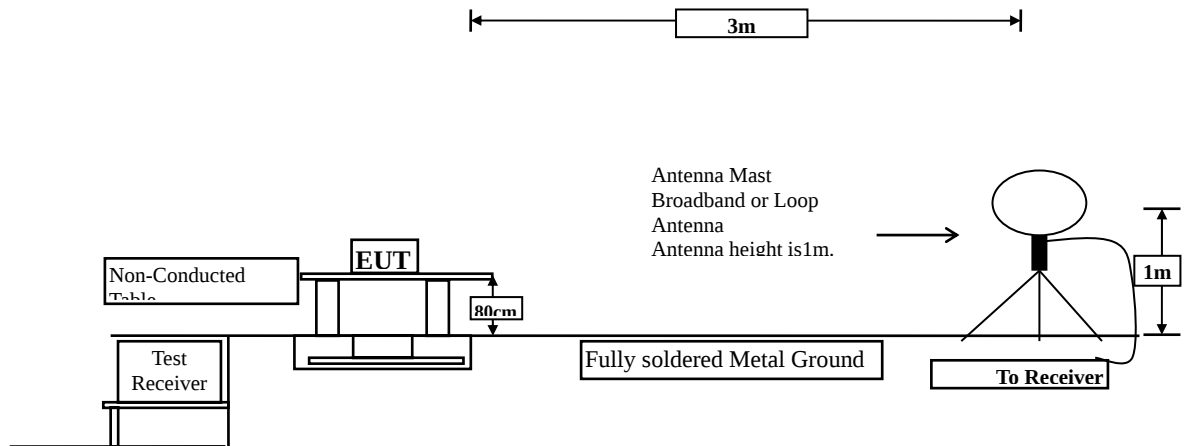

Radiated Emission Below 1GHz

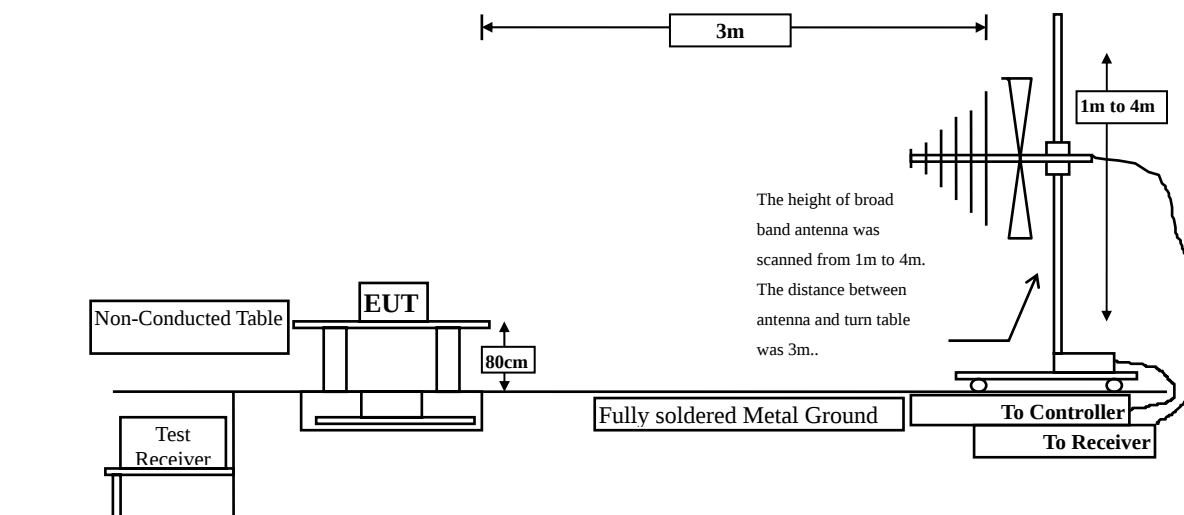

Radiated Emission Above 1GHz

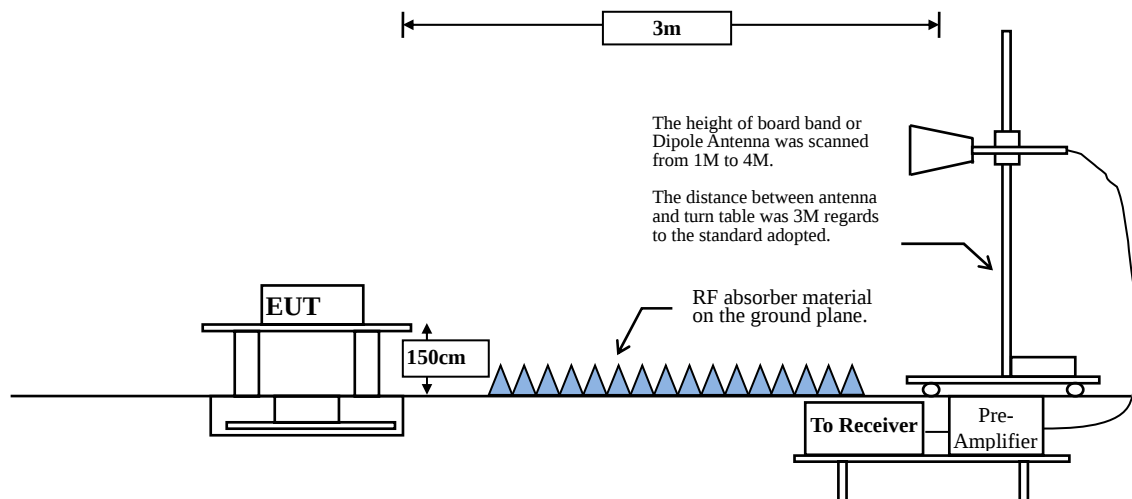

3.2. Limits

Emissions radiated outside of the specified frequency bands, except for harmonics, shall be attenuated by at least 20dB below the level of the fundamental or to the general radiated emission limits in paragraph 15.209, whichever is the lesser attenuation.

FCC Part 15 Subpart C Paragraph 15.209(a) Limits		
Frequency MHz	Field strength (microvolts/meter)	Measurement distance (meter)
0.009-0.490	2400/F(kHz)	300
0.490-1.705	24000/F(kHz)	30
1.705-30	30	30
30-88	100	3
88-216	150	3
216-960	200	3
Above 960	500	3

Remarks: E field strength (dB μ V/m) = 20 log E field strength (uV/m)

3.3. Test Procedure

The EUT was setup according to ANSI C63.10, 2013 and tested according to FCC KDB-789033 test procedure for compliance to FCC 47CFR 15. 407 requirements.

Measuring the frequency range below 1GHz, the EUT is placed on a turn table which is 0.8 meter above ground, when measuring the frequency range above 1GHz, the EUT is placed on a turn table which is 1.5 meter above ground.

The turn table is rotated 360 degrees to determine the position of the maximum emission level.

The EUT was positioned such that the distance from antenna to the EUT was 3 meters.

The antenna is scanned between 1 meter and 4 meters to find out the maximum emission level. This is repeated for both horizontal and vertical polarization of the antenna. In order to find the maximum emission, all of the interface cables were manipulated according to ANSI C63.10: 2013 on radiated measurement.

The resolution bandwidth below 30MHz setting on the field strength meter is 9kHz and 30MHz~1GHz is 120kHz and above 1GHz is 1MHz.

Radiated emission measurements below 30MHz are made using Loop Antenna and 30MHz~1GHz are made using broadband Bilog antenna and above 1GHz are made using Horn Antennas.

The measurement is divided into the Preliminary Measurement and the Final Measurement.

The suspected frequencies are searched for in Preliminary Measurement with the measurement antenna kept pointed at the source of the emission both in azimuth and elevation, with the polarization of the antenna oriented for maximum response. The antenna is pointed at an angle towards the source of the emission, and the EUT is rotated in both height and polarization to maximize the measured emission. The emission is kept within the illumination area of the 3 dB bandwidth of the antenna. The measurement frequency range from 9kHz - 10th Harmonic of fundamental was investigated.

RBW and VBW Parameter setting:

According to KDB 789033 section II.G.5 Procedure for Unwanted Maximum Emissions Measurements above 1000 MHz.

RBW = 1MHz.

VBW $\geq$ 3MHz.

According to KDB 789033 section II.G.6 Procedures for Average Unwanted Emissions Measurements above 1000 MHz.

RBW = 1MHz.

VBW = 10Hz, when duty cycle $\geq$ 98 %

VBW $\geq$ 1/T, when duty cycle < 98 %

(T refers to the minimum transmission duration over which the transmitter is on and is transmitting at its maximum power control level for the tested mode of operation.)


5GHz band	Duty Cycle (%)	T (ms)	1/T (Hz)	VBW (Hz)
802.11 a	95.57	2.0500	488	500
802.11 ac20	98.04	5.0000	200	200
802.11 ac40	94.47	2.3900	418	500
802.11 ac80	91.87	1.1300	885	1000

Note: Duty Cycle Refer to Section 5.

3.4. Test Result of Radiated Emission

Dipole_SISO A


Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5180MHz
Test BY :Edward Wang

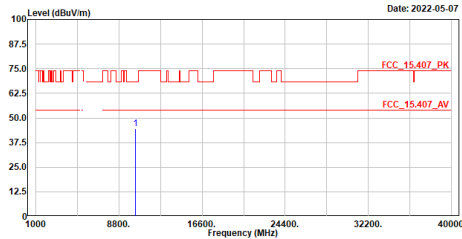

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10360.000	44.57	68.22	-23.65	38.54	6.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5180MHz
Test BY :Edward Wang

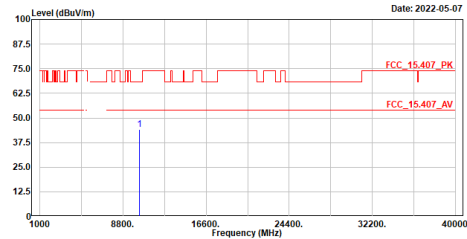

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10360.000	44.11	68.22	-24.11	38.08	6.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz
Test BY :Edward Wang

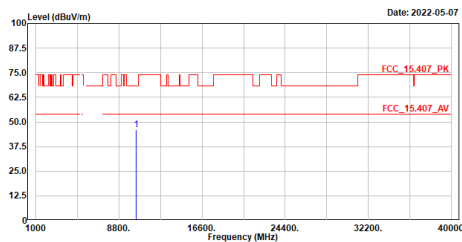

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10440.000	45.98	68.22	-22.24	39.83	6.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5220MHz
Test BY :Edward Wang

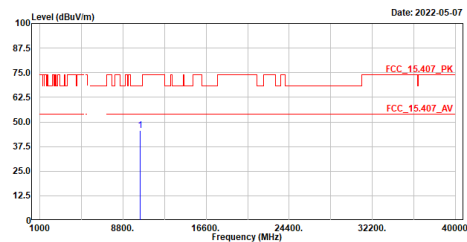

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10440.000	45.74	68.22	-22.48	39.59	6.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
Test BY :Edward Wang

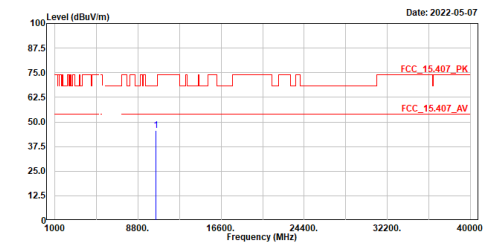

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10480.000	45.82	68.22	-22.40	39.71	6.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5240MHz
Test BY :Edward Wang

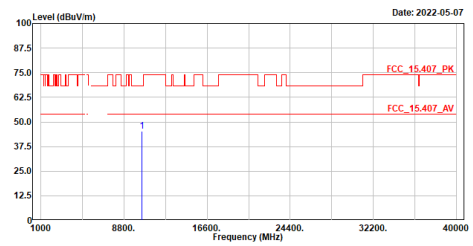

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10480.000	45.43	68.22	-22.79	39.32	6.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5260MHz
Test BY :Edward Wang

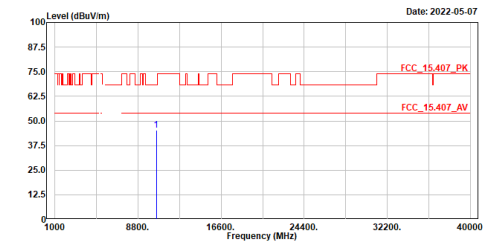

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10520.000	45.43	68.22	-22.79	39.32	6.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5260MHz
Test BY :Edward Wang

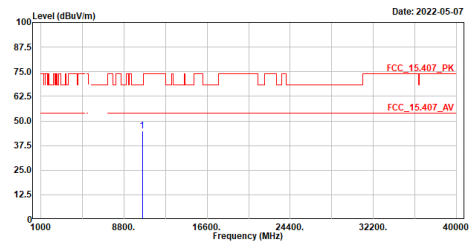

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10520.000	44.97	68.22	-23.25	38.86	6.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5300MHz
Test BY :Edward Wang

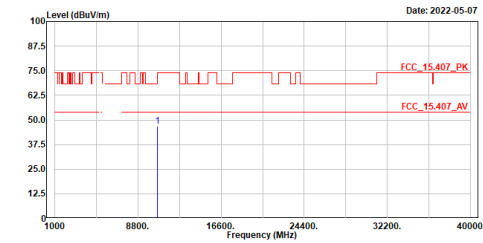


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10600.000	46.81	74.00	-27.19	40.50	6.31	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5300MHz
Test BY :Edward Wang

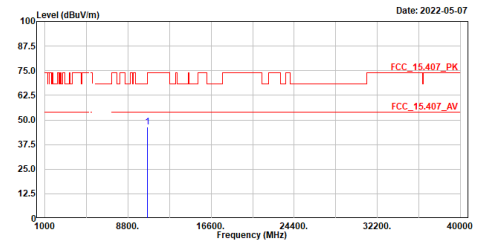


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10600.000	46.29	74.00	-27.71	39.98	6.31	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5300MHz
Test BY :Edward Wang

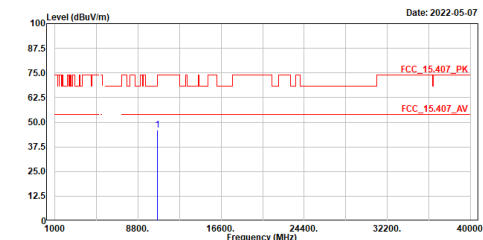


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10640.000	46.07	74.00	-27.93	39.87	6.20	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5300MHz
Test BY :Edward Wang

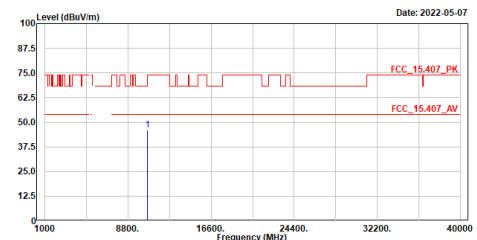


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10640.000	46.04	74.00	-27.96	39.84	6.20	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5580MHz
Test BY :Edward Wang

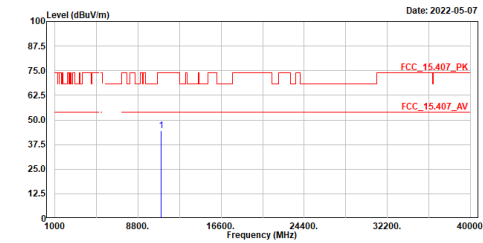


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11000.000	44.68	74.00	-29.32	38.54	6.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5580MHz
Test BY :Edward Wang

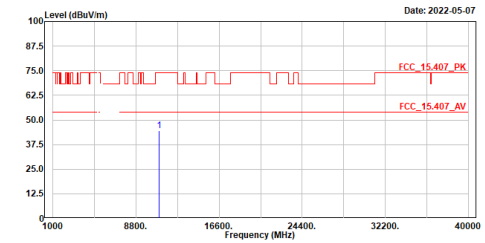


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11000.000	44.39	74.00	-29.61	38.25	6.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5580MHz
Test BY :Edward Wang

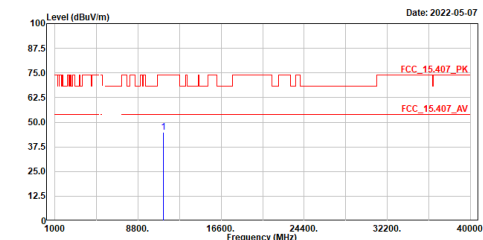


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11160.000	44.98	74.00	-29.02	38.53	6.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5580MHz
Test BY :Edward Wang

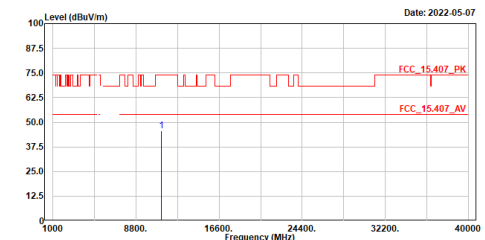


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11160.000	45.51	74.00	-28.49	39.06	6.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5700MHz
Test BY :Edward Wang

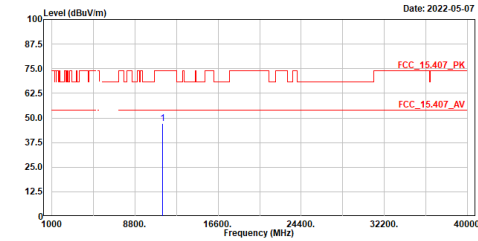


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11400.000	47.09	74.00	-26.91	48.24	6.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5700MHz
Test BY :Edward Wang

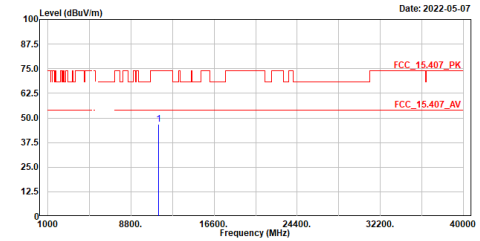


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11400.000	46.88	74.00	-27.12	48.03	6.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
Test BY :Edward Wang

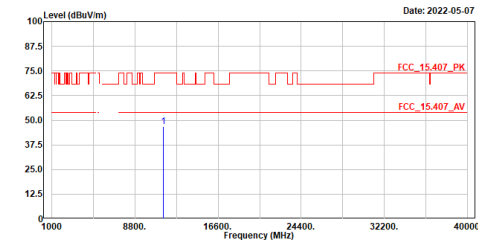


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11490.000	46.85	74.00	-27.15	39.79	7.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
Test BY :Edward Wang

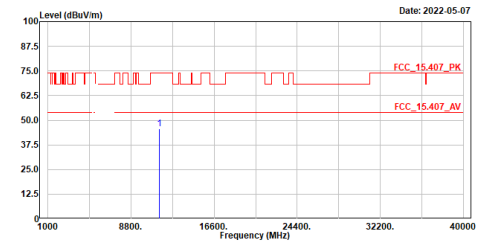


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11490.000	45.77	74.00	-28.23	38.71	7.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5785MHz
Test BY :Edward Wang

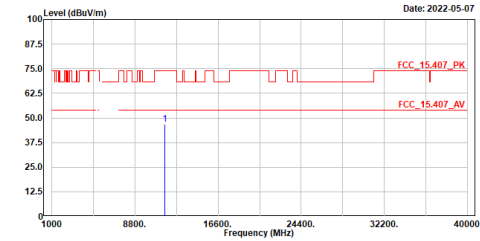


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11570.000	46.83	74.00	-27.17	39.54	7.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5785MHz
Test BY :Edward Wang

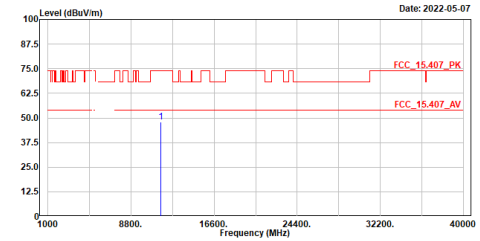


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11570.000	48.01	74.00	-25.99	40.72	7.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5825MHz
Test BY :Edward Wang

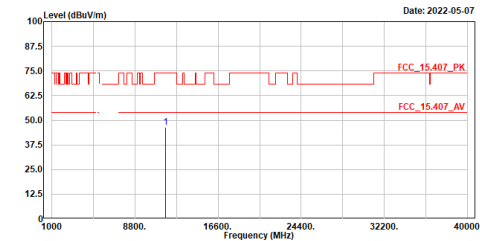


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	46.26	74.00	-27.74	38.75	7.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5825MHz
Test BY :Edward Wang

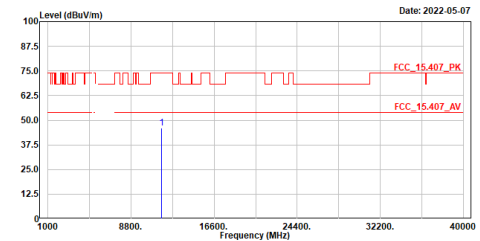


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	46.06	74.00	-27.94	38.55	7.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Dipole_MIMO

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5180MHz
Test BY :Edward Wang

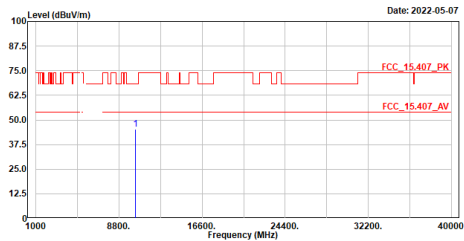


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10360.000	45.40	68.22	-22.82	39.37	6.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5180MHz
Test BY :Edward Wang

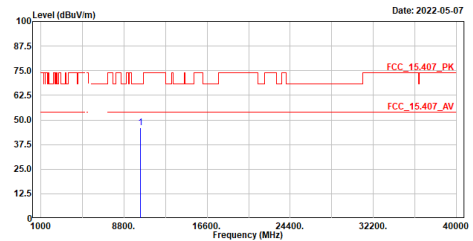


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10360.000	45.89	68.22	-22.33	39.86	6.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5220MHz
Test BY :Edward Wang

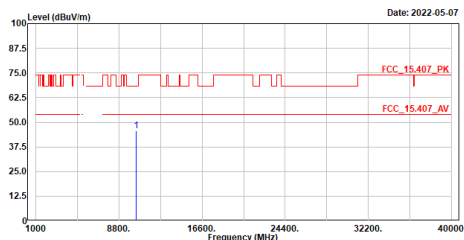


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10440.000	45.81	68.22	-22.41	39.66	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5220MHz
Test BY :Edward Wang

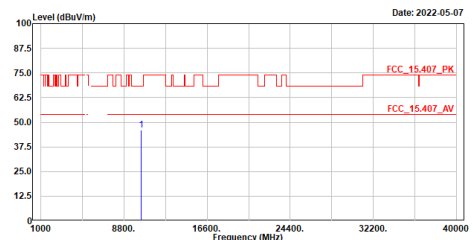


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10440.000	46.19	68.22	-22.03	40.04	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5240MHz
Test BY :Edward Wang

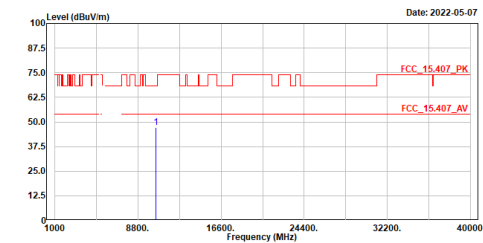


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10480.000	47.02	68.22	-21.20	48.91	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5240MHz
Test BY :Edward Wang

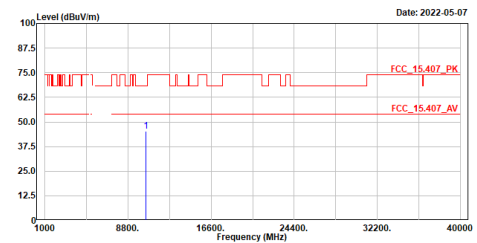


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10480.000	45.44	68.22	-22.78	39.33	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5260MHz
Test BY :Edward Wang

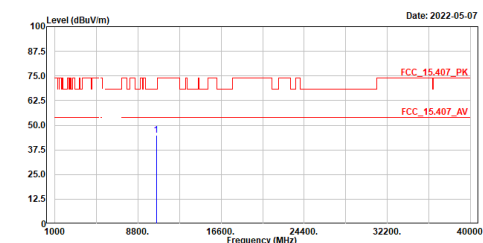


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10520.000	45.00	68.22	-23.22	38.89	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5260MHz
Test BY :Edward Wang

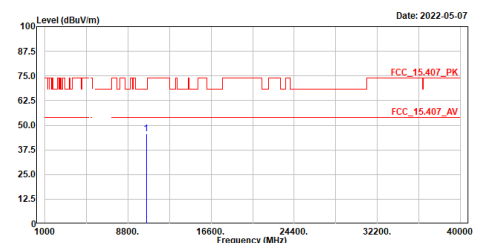


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10520.000	45.84	68.22	-22.38	39.73	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5300MHz
Test BY :Edward Wang

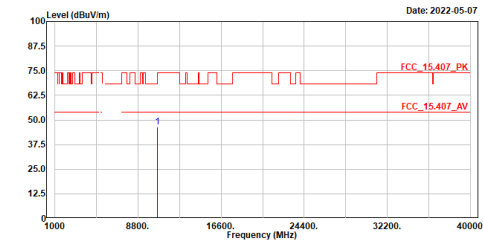


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10600.000	46.35	74.00	-27.65	48.04	6.31	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5300MHz
Test BY :Edward Wang

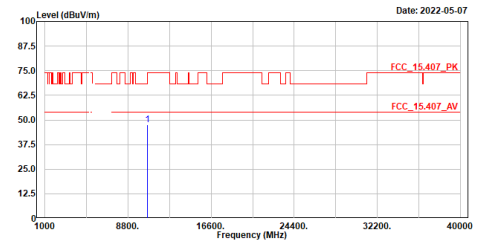


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10600.000	47.43	74.00	-26.57	41.12	6.31	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5320MHz
Test BY :Edward Wang

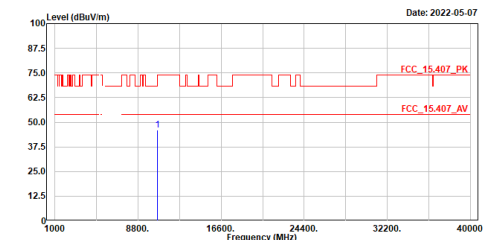


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10640.000	46.09	74.00	-27.91	39.89	6.20	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5320MHz
Test BY :Edward Wang

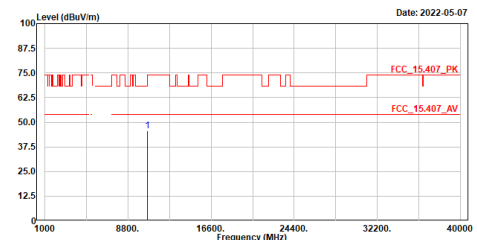


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10640.000	45.63	74.00	-28.37	39.43	6.20	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5580MHz
Test BY :Edward Wang

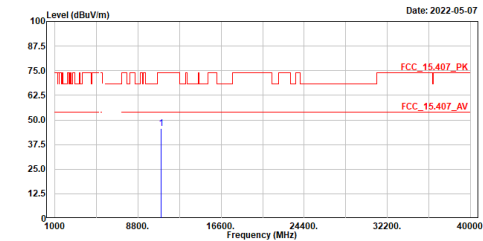


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11000.000	45.75	74.00	-28.25	39.61	6.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5580MHz
Test BY :Edward Wang

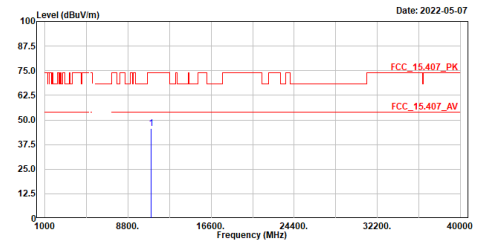


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11000.000	45.76	74.00	-28.24	39.62	6.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5580MHz
Test BY :Edward Wang

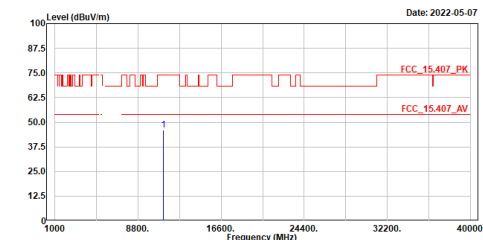


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11160.000	46.09	74.00	-27.91	39.64	6.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5580MHz
Test BY :Edward Wang

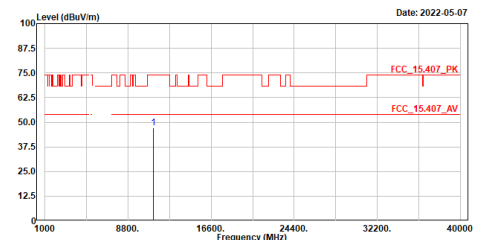


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11160.000	47.16	74.00	-26.84	40.71	6.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5700MHz
Test BY :Edward Wang

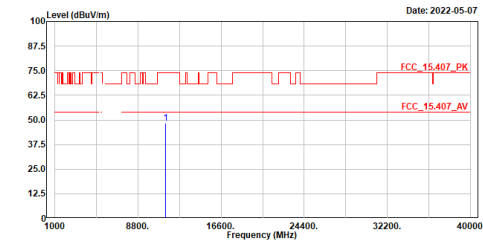


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11400.000	48.27	74.00	-25.73	41.42	6.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5700MHz
Test BY :Edward Wang

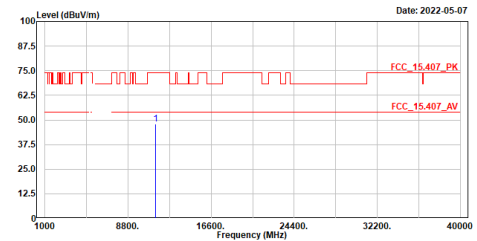


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11400.000	48.01	74.00	-25.99	41.16	6.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5720MHz
Test BY :Edward Wang

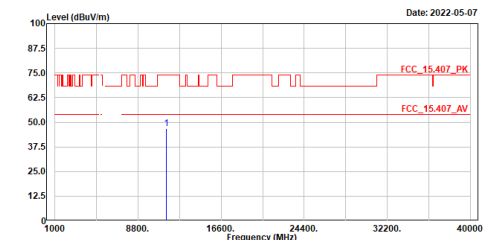


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11440.000	46.70	74.00	-27.30	39.75	6.95	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5720MHz
Test BY :Edward Wang

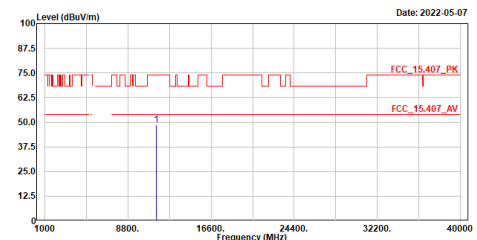


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11440.000	48.50	74.00	-25.50	41.55	6.95	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5745MHz
Test BY :Edward Wang

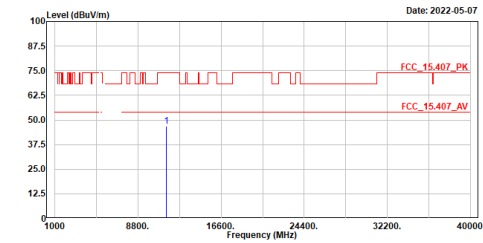


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11490.000	46.94	74.00	-27.06	39.88	7.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5745MHz
Test BY :Edward Wang

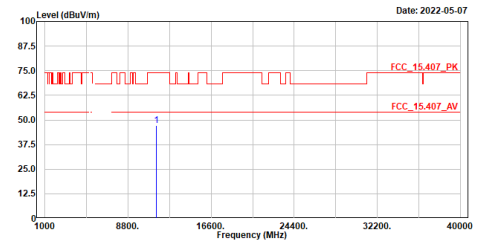


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11490.000	47.12	74.00	-26.88	40.06	7.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5785MHz
Test BY :Edward Wang

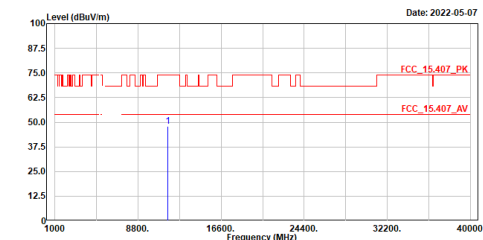


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11570.000	47.75	74.00	-26.25	40.46	7.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5785MHz
Test BY :Edward Wang

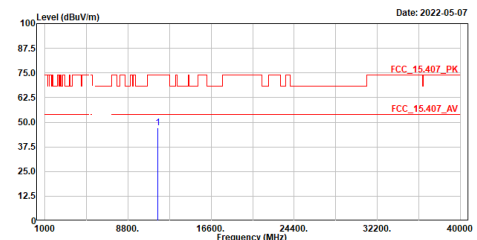


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11570.000	47.04	74.00	-26.96	39.75	7.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5825MHz
Test BY :Edward Wang

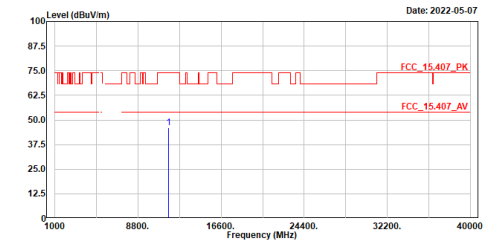


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	45.99	74.00	-28.01	38.48	7.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5825MHz
Test BY :Edward Wang

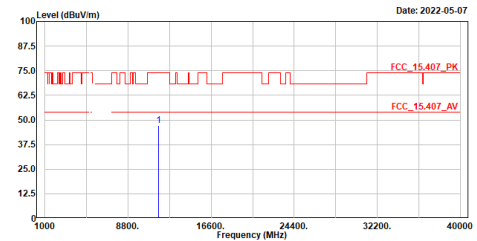


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	47.30	74.00	-26.70	39.79	7.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5190MHz
Test BY :Edward Wang

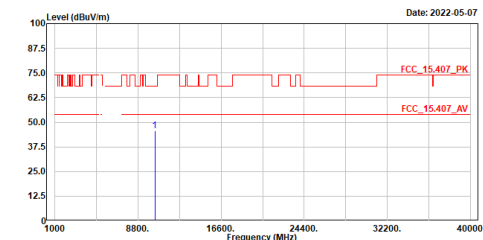


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10380.000	45.71	68.22	-22.51	39.62	6.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5190MHz
Test BY :Edward Wang

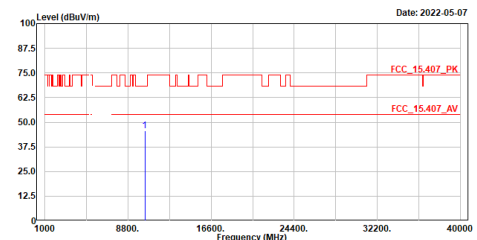


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10380.000	45.74	68.22	-22.48	39.65	6.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5230MHz
Test BY :Edward Wang

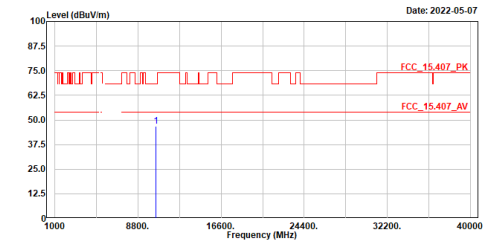


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10460.000	46.75	68.22	-21.47	40.62	6.13	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5230MHz
Test BY :Edward Wang

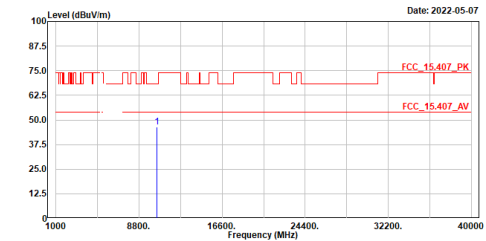


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10460.000	46.24	68.22	-21.98	40.11	6.13	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5270MHz
Test BY :Edward Wang

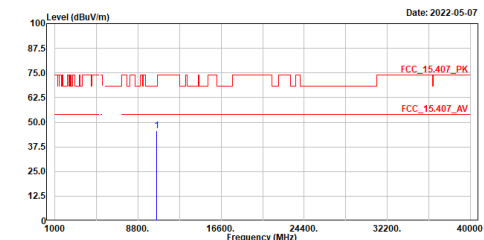


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10540.000	45.76	68.22	-22.46	39.60	6.16	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5270MHz
Test BY :Edward Wang

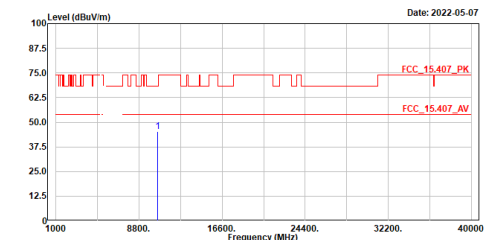


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10540.000	45.15	68.22	-23.07	38.99	6.16	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5310MHz
Test BY :Edward Wang

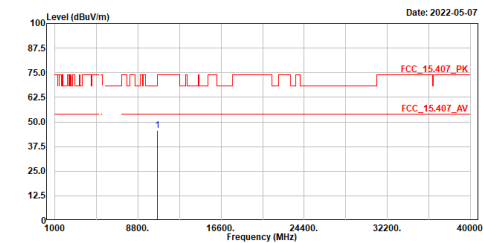

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10620.000	45.79	74.00	-28.21	39.52	6.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5310MHz
Test BY :Edward Wang

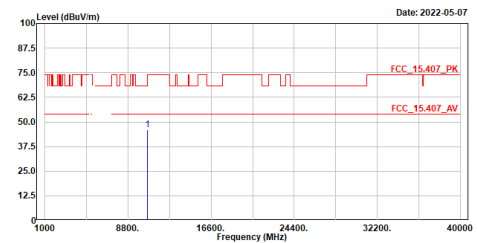

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10620.000	46.04	74.00	-27.96	39.77	6.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5510MHz
Test BY :Edward Wang

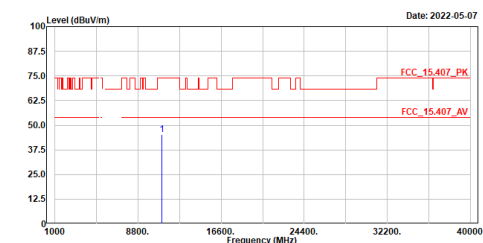

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11020.000	45.31	74.00	-28.69	39.12	6.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5510MHz
Test BY :Edward Wang

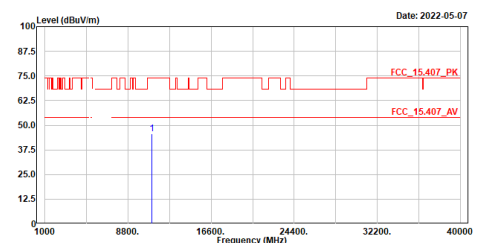

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11020.000	45.84	74.00	-28.16	39.65	6.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5550MHz
Test BY :Edward Wang

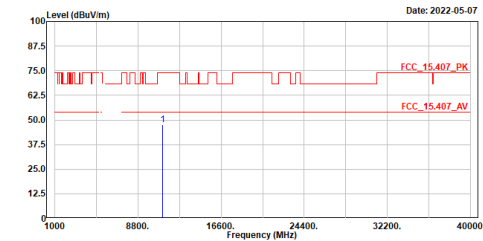


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11100.000	47.60	74.00	-26.40	41.27	6.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5550MHz
Test BY :Edward Wang

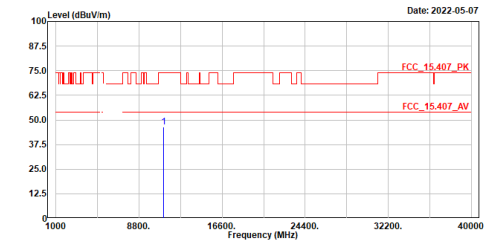


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11100.000	46.38	74.00	-27.62	40.05	6.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5670MHz
Test BY :Edward Wang

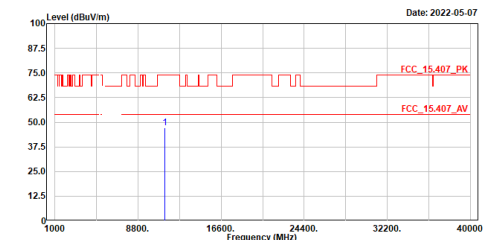


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11340.000	47.05	74.00	-26.95	40.27	6.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5670MHz
Test BY :Edward Wang

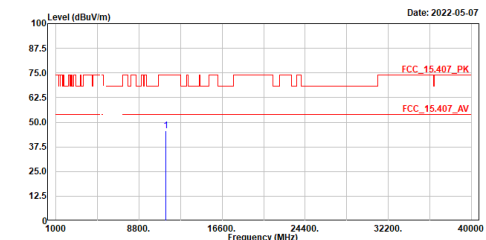


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11340.000	45.80	74.00	-28.20	39.02	6.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5710MHz
Test BY :Edward Wang

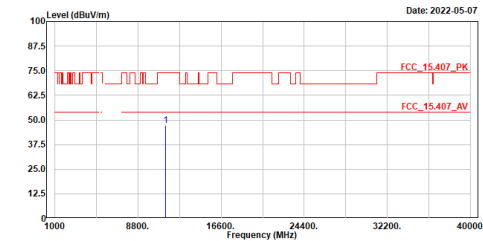


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11420.000	47.29	74.00	-26.71	48.39	6.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5710MHz
Test BY :Edward Wang

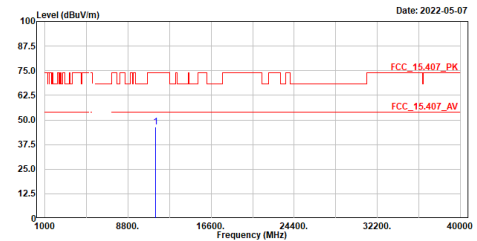


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11420.000	46.57	74.00	-27.43	39.67	6.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5755MHz
Test BY :Edward Wang

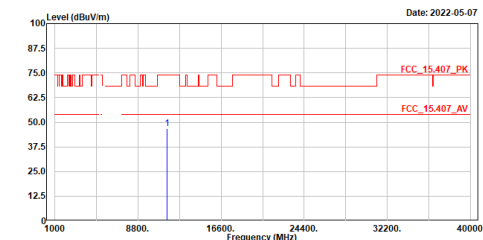


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11510.000	46.62	74.00	-27.38	39.51	7.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5755MHz
Test BY :Edward Wang

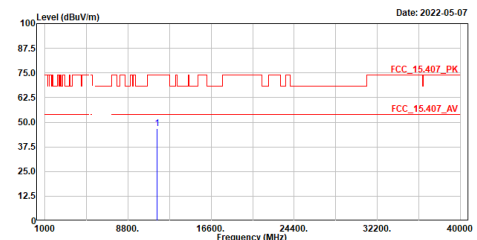


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11510.000	46.70	74.00	-27.30	39.59	7.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5795MHz
Test BY :Edward Wang

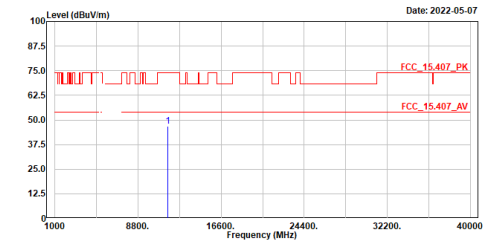


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11590.000	46.79	74.00	-27.21	39.43	7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5795MHz
Test BY :Edward Wang

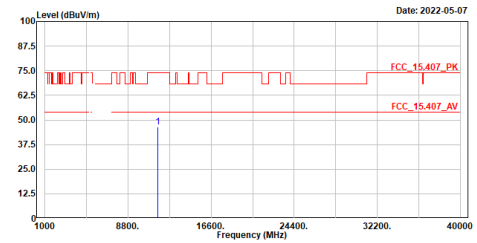


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11590.000	46.46	74.00	-27.54	39.10	7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5210MHz
Test BY :Edward Wang

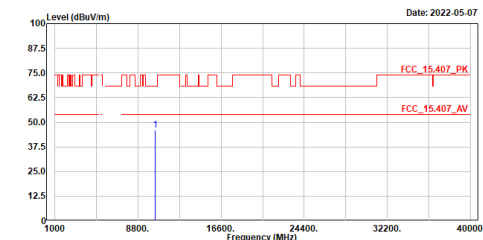


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10420.000	45.91	68.22	-22.31	39.76	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5210MHz
Test BY :Edward Wang

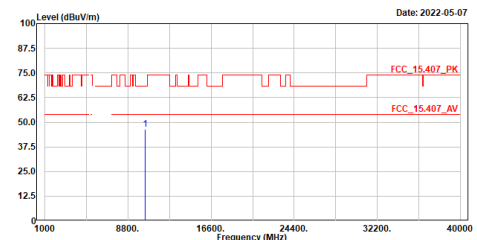


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10420.000	46.45	68.22	-21.77	40.30	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5290MHz
Test BY :Edward Wang

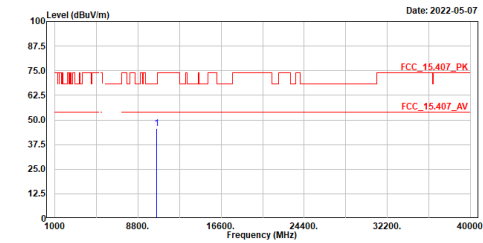


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10580.000	45.52	68.22	-22.70	39.26	6.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5290MHz
Test BY :Edward Wang

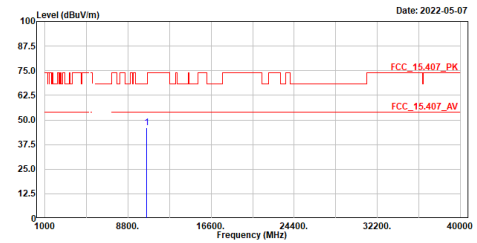


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10580.000	45.97	68.22	-22.25	39.71	6.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5530MHz
Test BY :Edward Wang

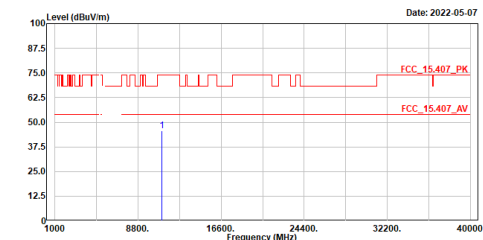


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11060.000	45.71	74.00	-28.29	39.45	6.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5530MHz
Test BY :Edward Wang

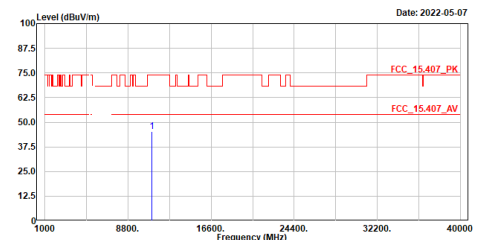


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11060.000	45.31	74.00	-28.69	39.05	6.26	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5610MHz
Test BY :Edward Wang

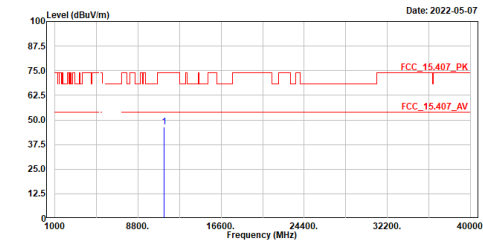


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11228.000	46.38	74.00	-27.62	39.80	6.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5610MHz
Test BY :Edward Wang

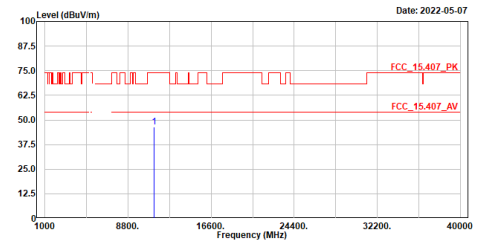


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11228.000	46.24	74.00	-27.76	39.66	6.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5690MHz
Test BY :Edward Wang

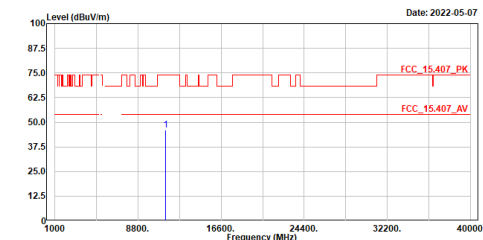


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11380.000	46.06	74.00	-27.94	39.25	6.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5690MHz
Test BY :Edward Wang

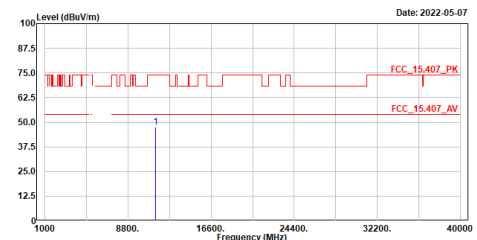


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11380.000	47.36	74.00	-26.64	40.55	6.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5775MHz
Test BY :Edward Wang

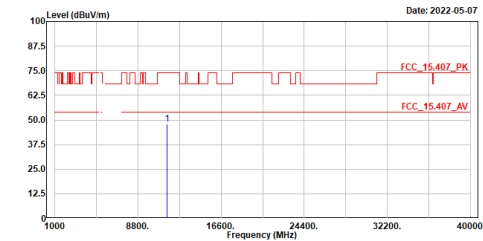


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11550.000	47.92	74.00	-26.08	40.69	7.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5775MHz
Test BY :Edward Wang

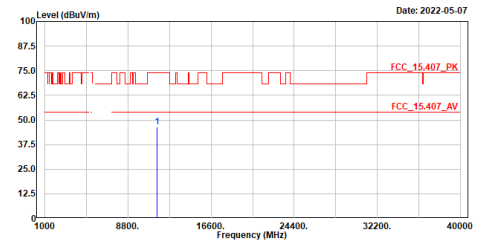


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11550.000	46.53	74.00	-27.47	39.30	7.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5775MHz
Test BY :Ashton Chiu

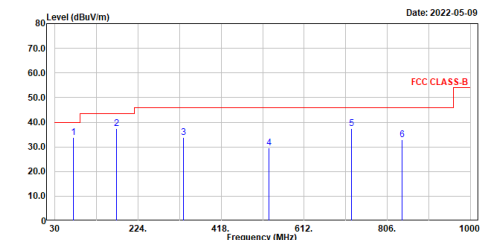


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	72.680	33.90	40.00	-6.10	60.85	-26.95	QP
2	174.530	37.35	43.50	-6.15	62.31	-24.96	QP
3	330.700	33.76	46.00	-12.24	56.43	-22.67	QP
4	529.550	29.64	46.00	-16.36	47.70	-18.06	QP
5	722.580	37.39	46.00	-8.61	51.93	-14.54	QP
6	839.950	32.91	46.00	-13.09	45.85	-12.94	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5775MHz
Test BY :Ashton Chiu

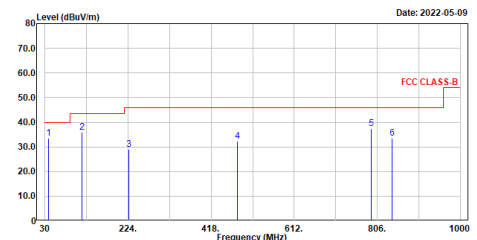


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	38.730	33.42	40.00	-6.58	57.93	-24.51	QP
2	116.330	36.04	43.50	-7.46	62.94	-26.90	QP
3	225.940	29.07	46.00	-16.93	55.78	-26.71	QP
4	479.110	32.35	46.00	-13.65	51.48	-19.13	QP
5	792.420	37.29	46.00	-8.71	50.61	-13.32	QP
6	839.950	33.49	46.00	-12.51	46.43	-12.94	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Panel_SISO A

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5180MHz
Test BY :Lance Chiang

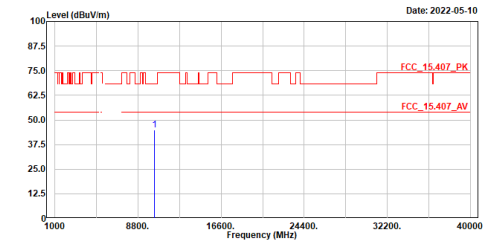


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10360.000	44.84	68.22	-23.38	38.81	6.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5180MHz
Test BY :Lance Chiang

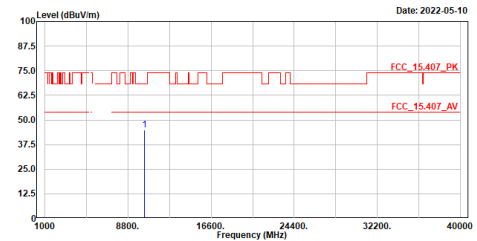


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10360.000	44.80	68.22	-23.42	38.77	6.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5220MHz
Test BY :Lance Chiang

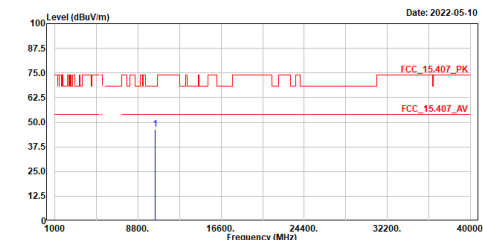


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10440.000	46.36	68.22	-21.86	40.21	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5220MHz
Test BY :Lance Chiang

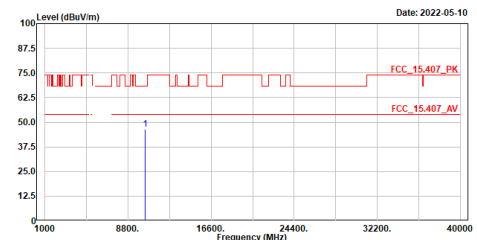


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10440.000	46.49	68.22	-21.73	40.34	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
Test BY :Lance Chiang

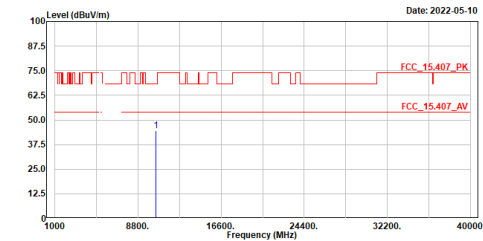


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10480.000	44.60	68.22	-23.62	38.49	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5240MHz
Test BY :Lance Chiang

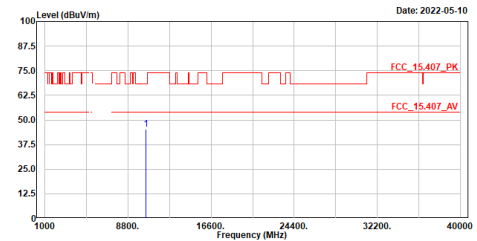


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10480.000	45.45	68.22	-22.77	39.34	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5260MHz
Test BY :Lance Chiang

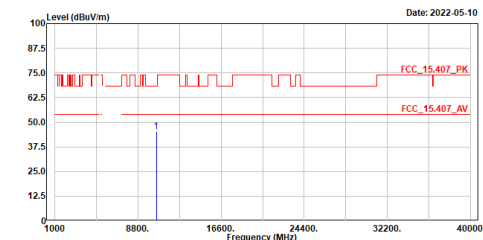


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10520.000	45.23	68.22	-22.99	39.12	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5260MHz
Test BY :Lance Chiang

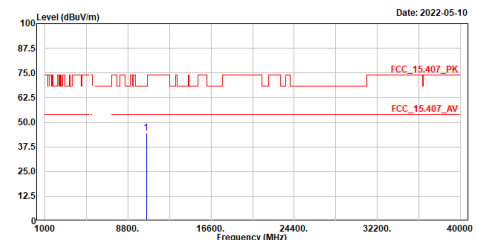


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10520.000	44.66	68.22	-23.56	38.55	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5300MHz
Test BY :Lance Chiang

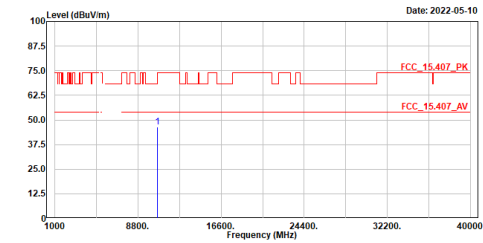


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10600.000	46.42	74.00	-27.58	48.11	6.31	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5300MHz
Test BY :Lance Chiang

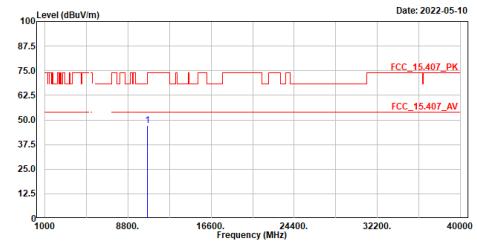


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10600.000	47.26	74.00	-26.74	48.95	6.31	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5320MHz
Test BY :Lance Chiang

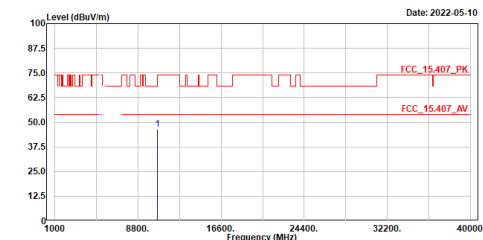


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10640.000	46.31	74.00	-27.69	48.11	6.20	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5320MHz
Test BY :Lance Chiang

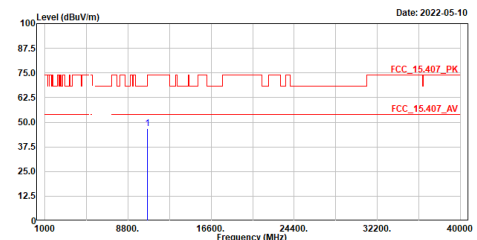


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10640.000	46.96	74.00	-27.04	48.76	6.20	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5580MHz
Test BY :Lance Chiang

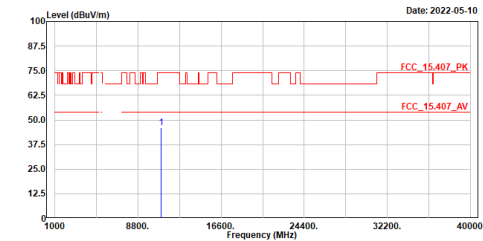


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11000.000	46.08	74.00	-27.92	39.94	6.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5580MHz
Test BY :Lance Chiang

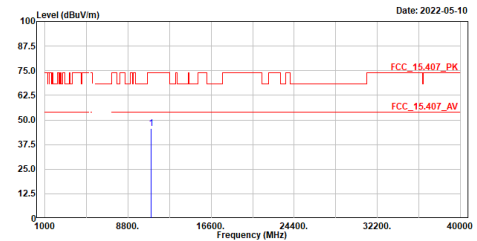


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11000.000	45.76	74.00	-28.24	39.62	6.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5580MHz
Test BY :Lance Chiang

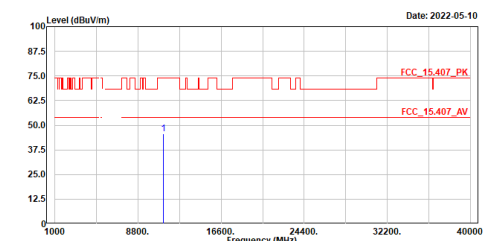


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11160.000	45.57	74.00	-28.43	39.12	6.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5580MHz
Test BY :Lance Chiang

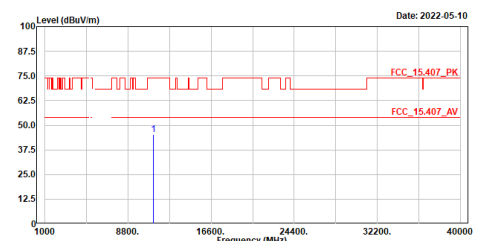


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11160.000	45.41	74.00	-28.59	38.96	6.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5700MHz
Test BY :Lance Chiang

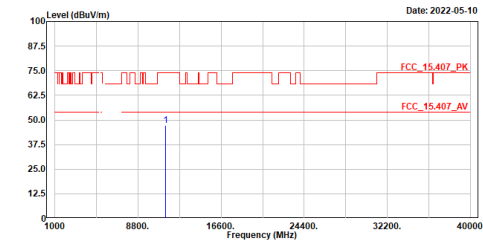


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11400.000	47.02	74.00	-26.98	48.17	6.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5700MHz
Test BY :Lance Chiang

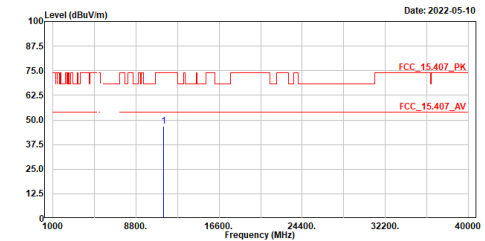


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11400.000	46.91	74.00	-27.09	48.06	6.85	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
Test BY :Lance Chiang

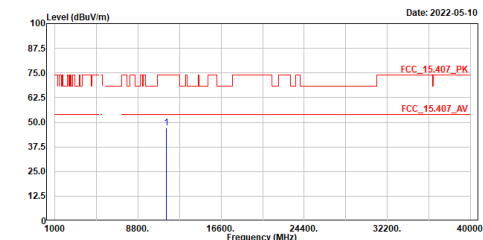


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11490.000	47.09	74.00	-26.91	48.03	7.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
Test BY :Lance Chiang

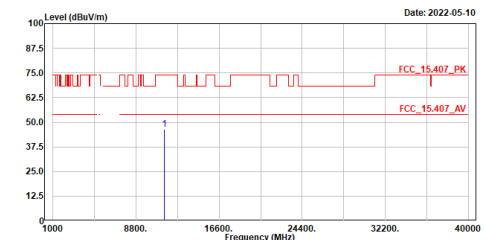


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11490.000	46.32	74.00	-27.68	39.26	7.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5785MHz
Test BY :Lance Chiang

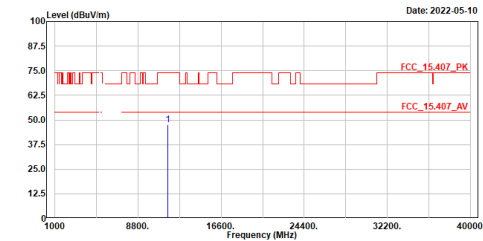


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11570.000	47.44	74.00	-26.56	48.15	7.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5785MHz
Test BY :Lance Chiang

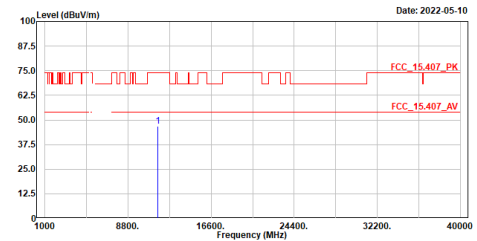


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11570.000	46.77	74.00	-27.23	39.48	7.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_a_5825MHz
Test BY :Lance Chiang

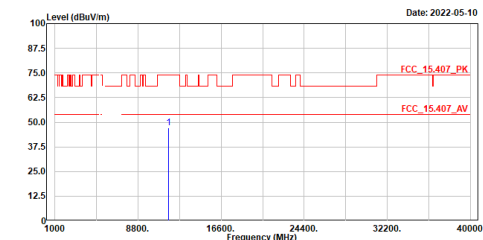


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	47.21	74.00	-26.79	39.70	7.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_a_5825MHz
Test BY :Lance Chiang

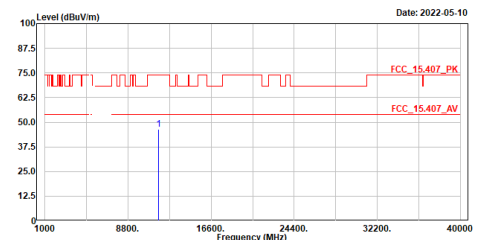


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	46.49	74.00	-27.51	38.98	7.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Panel_MIMO

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5180MHz
Test BY :Lance Chiang

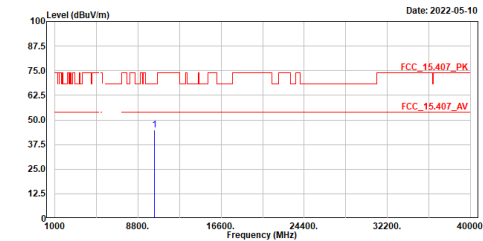


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10360.000	44.95	68.22	-23.27	38.92	6.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5180MHz
Test BY :Lance Chiang

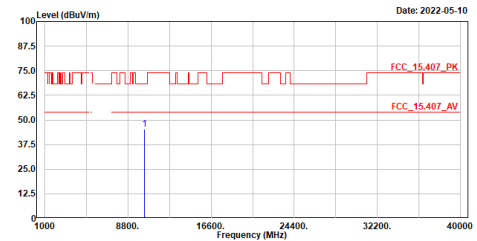


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10360.000	45.22	68.22	-23.00	39.19	6.03	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5220MHz
Test BY :Lance Chiang

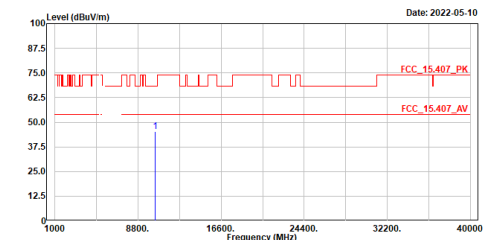


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10440.000	45.32	68.22	-22.90	39.17	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5220MHz
Test BY :Lance Chiang

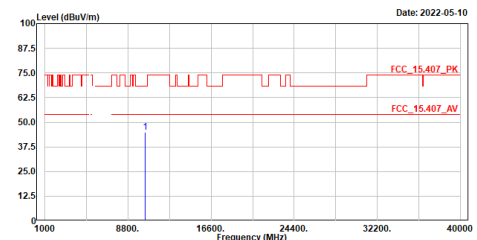


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	10440.000	45.04	68.22	-23.18	38.89	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5240MHz
Test BY :Lance Chiang

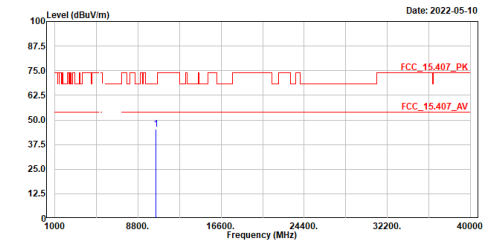


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10480.000	45.17	68.22	-23.05	39.06	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5240MHz
Test BY :Lance Chiang

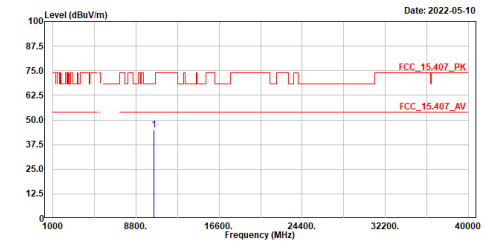


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10480.000	44.95	68.22	-23.27	38.84	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5260MHz
Test BY :Lance Chiang

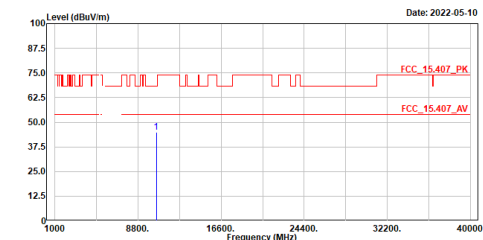


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10520.000	44.84	68.22	-23.38	38.73	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5260MHz
Test BY :Lance Chiang

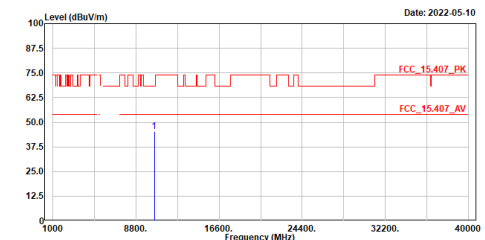


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10520.000	45.41	68.22	-22.81	39.30	6.11	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

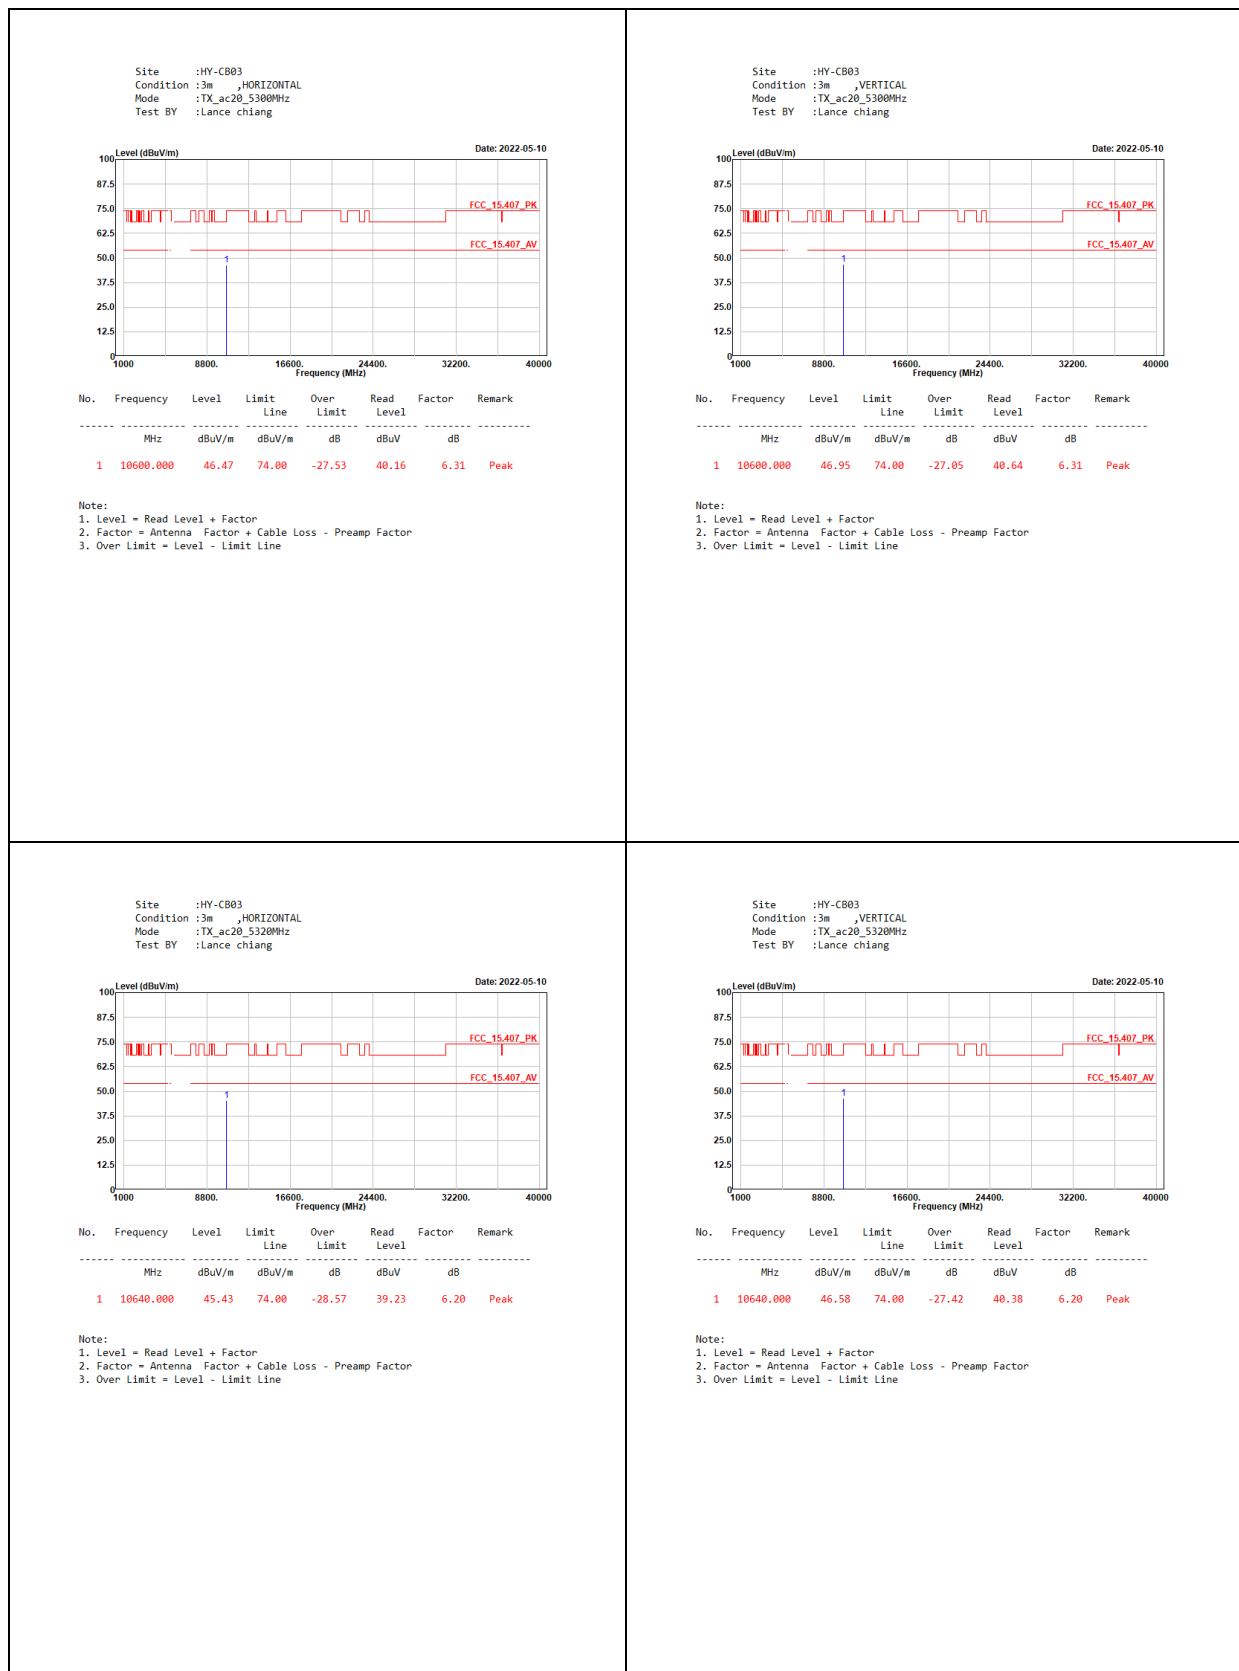

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5580MHz
Test BY :Lance Chiang

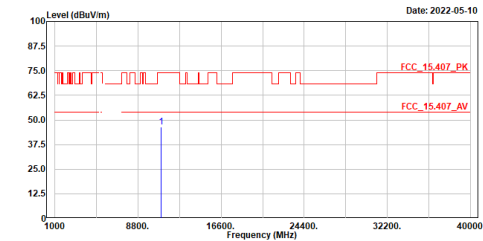


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11000.000	46.41	74.00	-27.59	48.27	6.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5580MHz
Test BY :Lance Chiang

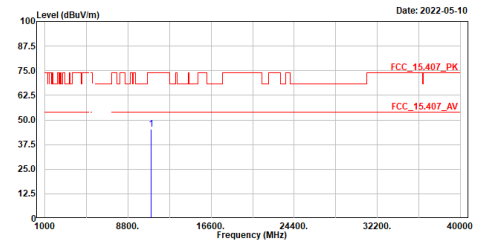


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11000.000	45.21	74.00	-28.79	39.07	6.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5580MHz
Test BY :Lance Chiang

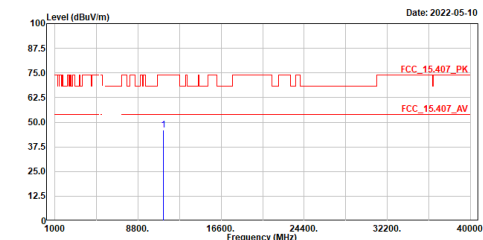


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11160.000	46.01	74.00	-27.99	39.56	6.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5580MHz
Test BY :Lance Chiang

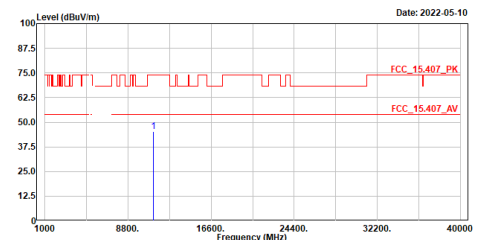


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11160.000	45.25	74.00	-28.75	38.80	6.45	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

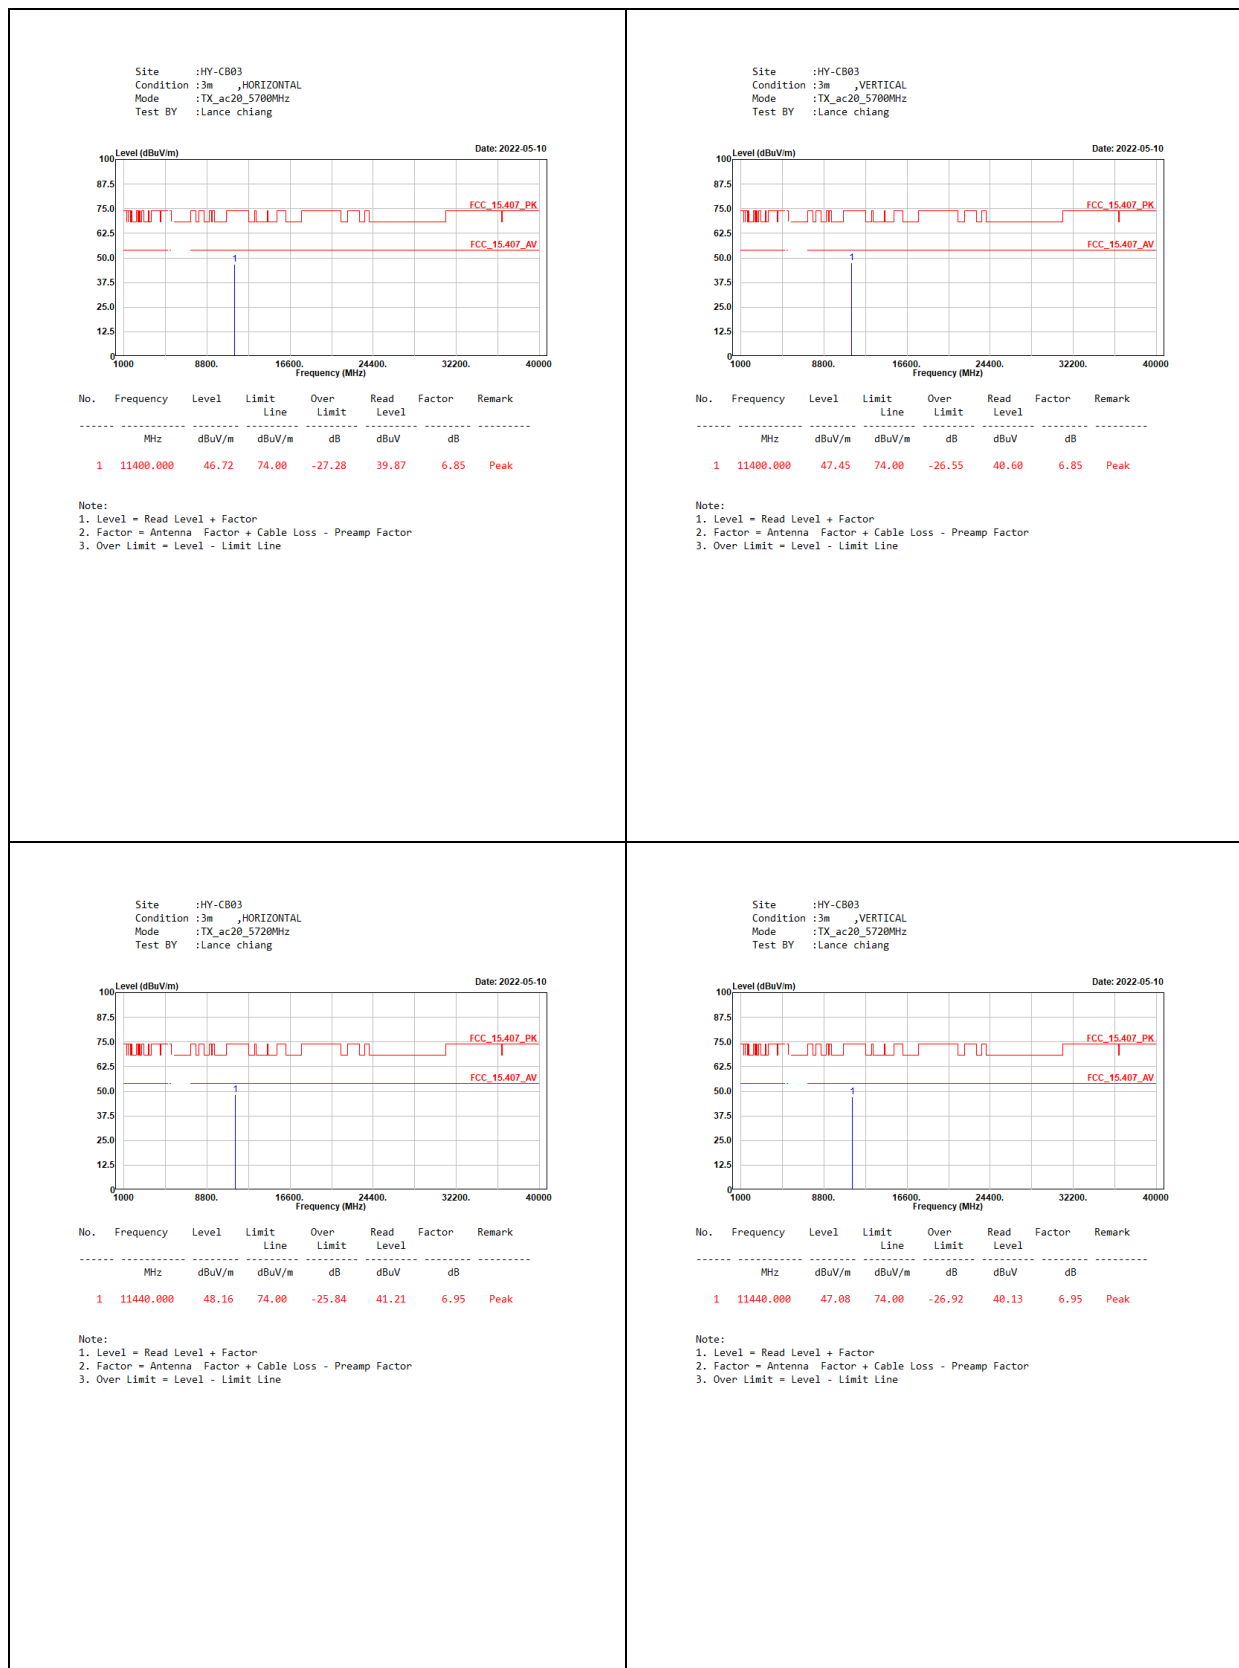

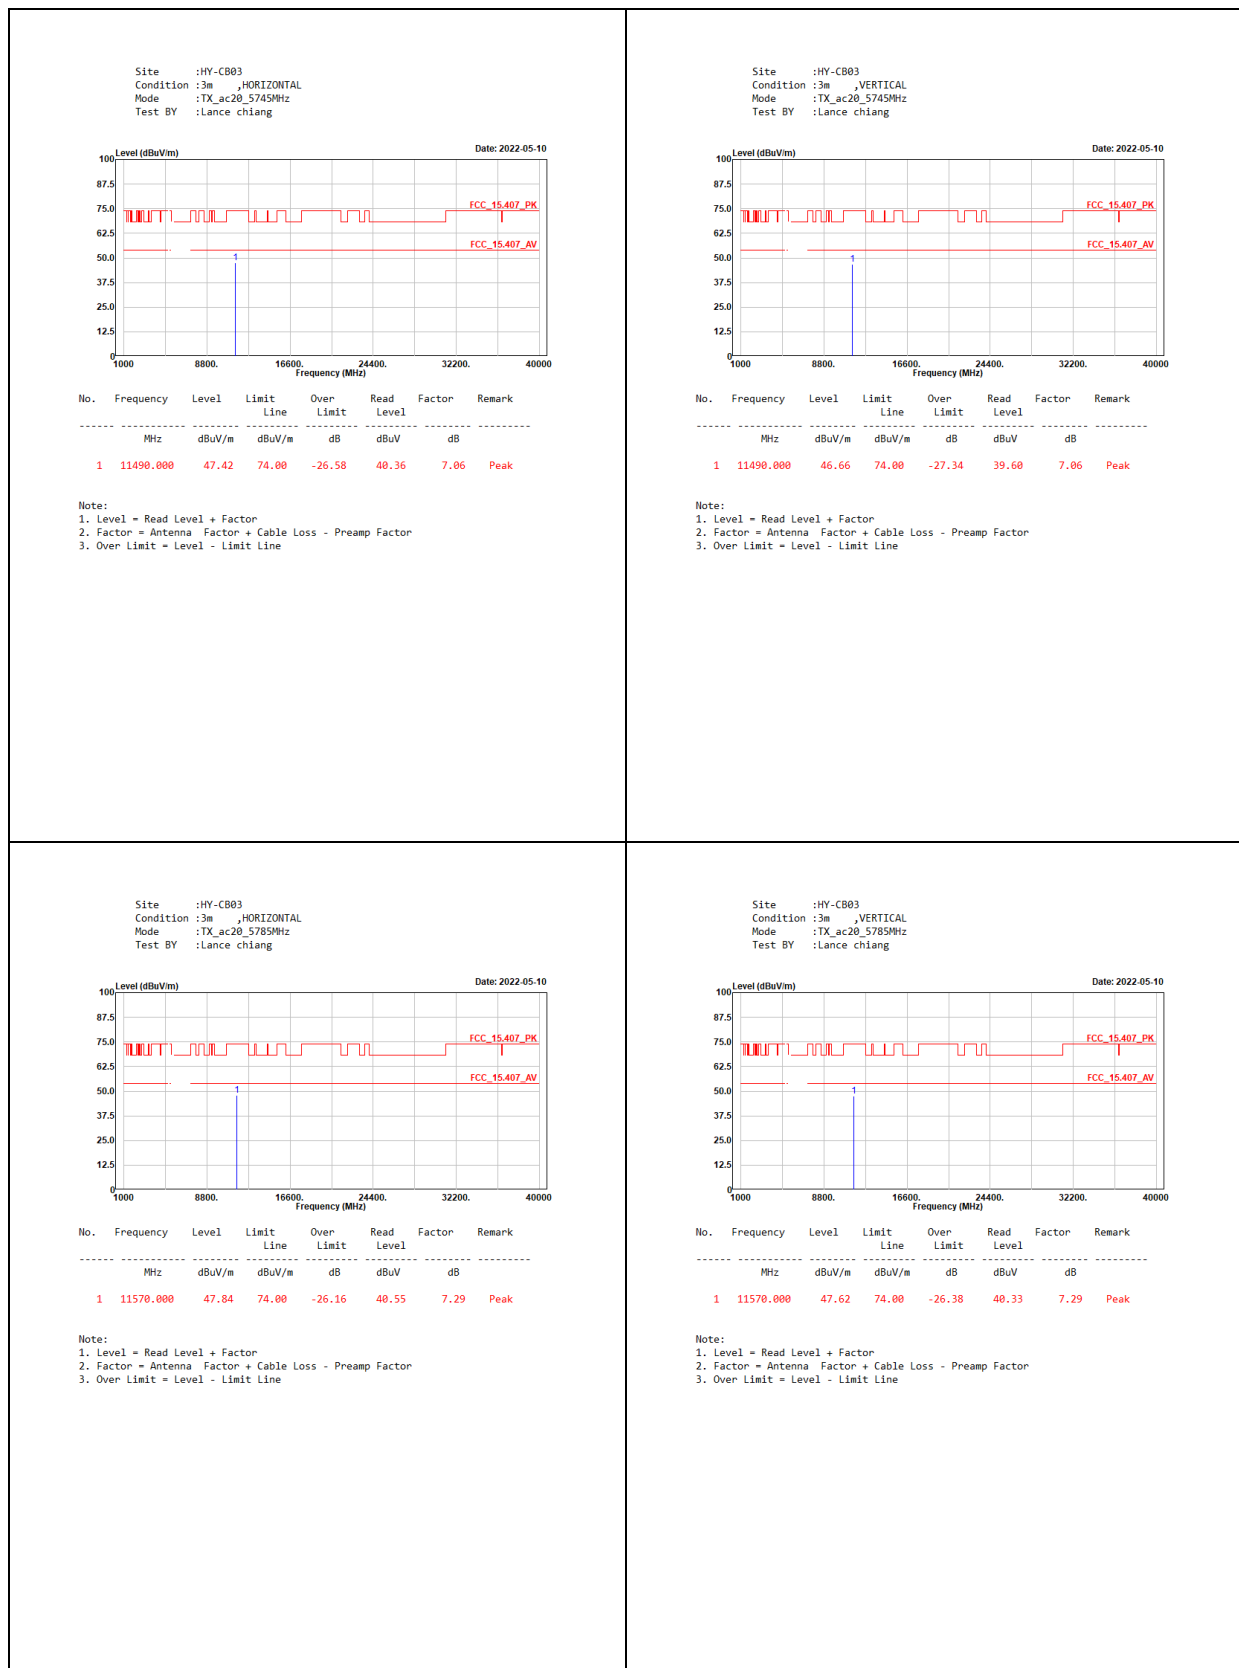

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5825MHz
Test BY :Lance Chiang

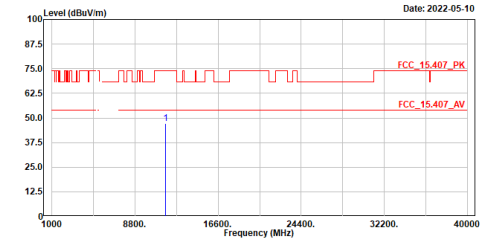


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	47.28	74.00	-26.72	39.77	7.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac20_5825MHz
Test BY :Lance Chiang

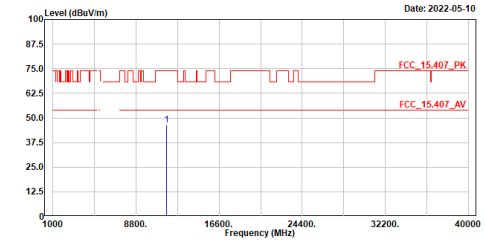


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11650.000	46.40	74.00	-27.60	38.89	7.51	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5190MHz
Test BY :Lance Chiang

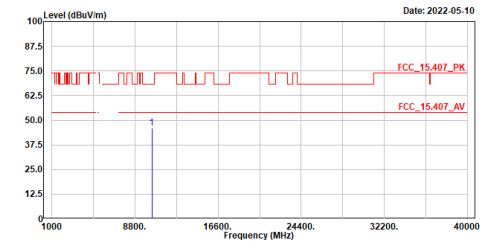


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10380.000	46.03	68.22	-22.19	39.94	6.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5190MHz
Test BY :Lance Chiang

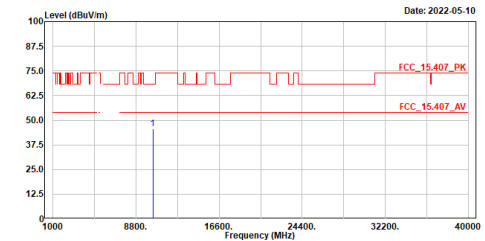


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10380.000	45.65	68.22	-22.57	39.56	6.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5230MHz
Test BY :Lance Chiang

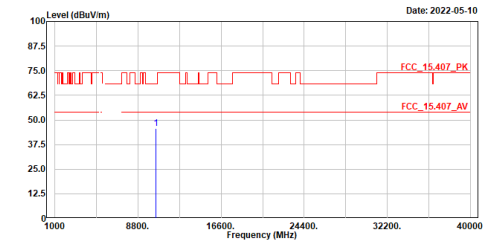


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10460.000	45.71	68.22	-22.51	39.58	6.13	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5230MHz
Test BY :Lance Chiang

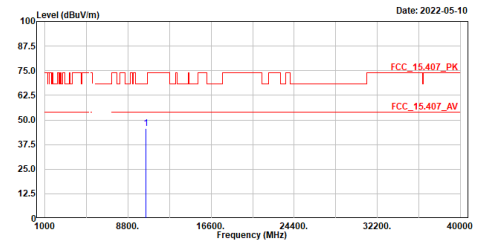


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10460.000	45.70	68.22	-22.52	39.57	6.13	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5270MHz
Test BY :Lance Chiang

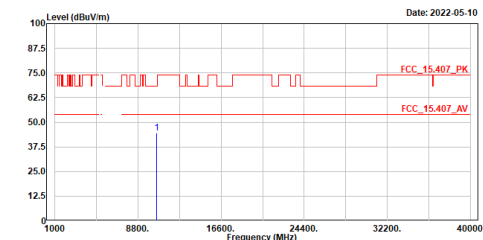


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10540.000	44.67	68.22	-23.55	38.51	6.16	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5270MHz
Test BY :Lance Chiang

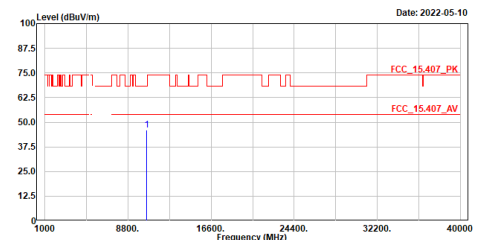


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10540.000	45.92	68.22	-22.30	39.76	6.16	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40.5310MHz
Test BY :Lance Chiang

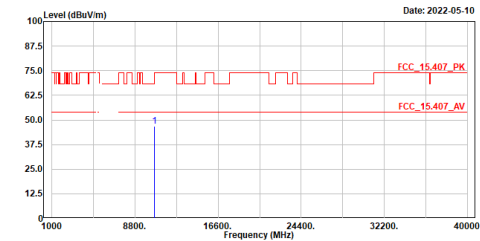


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10620.000	46.70	74.00	-27.30	48.43	6.27	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40.5310MHz
Test BY :Lance Chiang

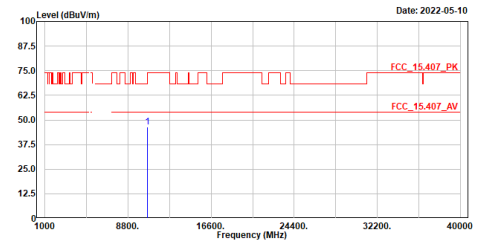


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10620.000	46.44	74.00	-27.56	48.17	6.27	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40.5510MHz
Test BY :Lance Chiang

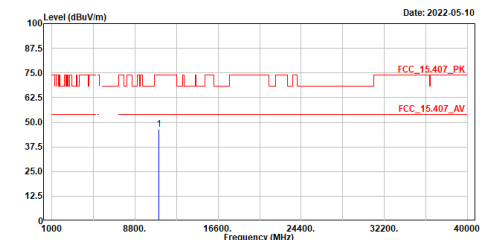


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11020.000	46.48	74.00	-27.52	48.29	6.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40.5510MHz
Test BY :Lance Chiang

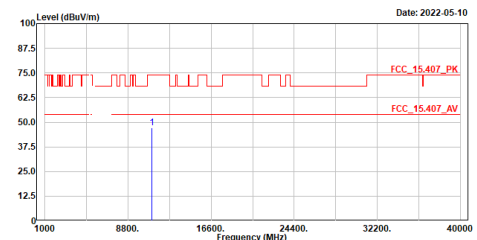


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11020.000	47.29	74.00	-26.71	41.10	6.19	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5550MHz
Test BY :Lance Chiang

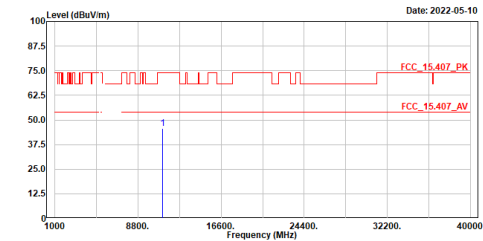


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11100.000	45.84	74.00	-28.16	39.51	6.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5550MHz
Test BY :Lance Chiang

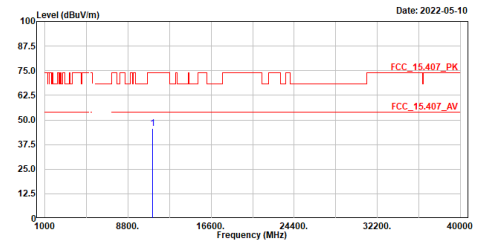


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11100.000	45.79	74.00	-28.21	39.46	6.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5670MHz
Test BY :Lance Chiang

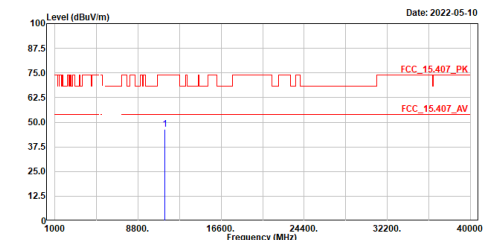


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11340.000	46.45	74.00	-27.55	39.67	6.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5670MHz
Test BY :Lance Chiang

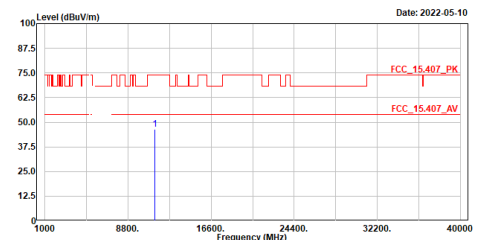


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB	
1	11340.000	46.28	74.00	-27.72	39.50	6.78	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40.5710MHz
Test BY :Lance Chiang

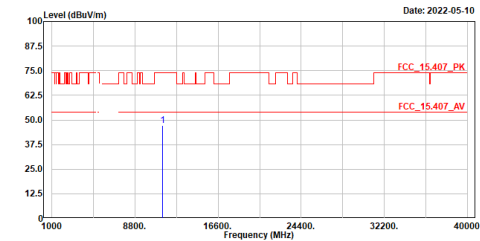


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11420.000	47.20	74.00	-26.80	40.30	6.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40.5710MHz
Test BY :Lance Chiang

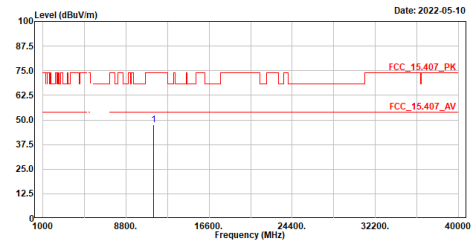


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11420.000	47.50	74.00	-26.50	40.60	6.90	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40.5755MHz
Test BY :Lance Chiang

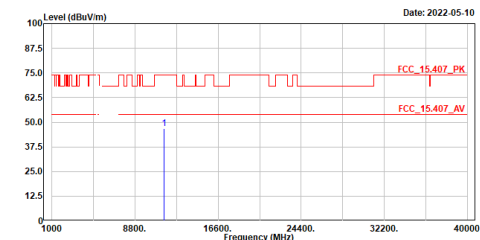


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11550.000	46.68	74.00	-27.32	39.45	7.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40.5755MHz
Test BY :Lance Chiang

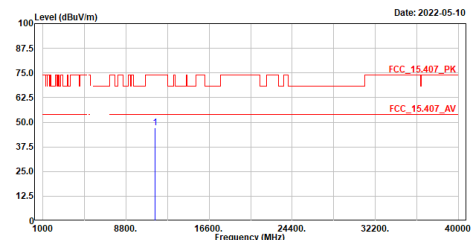


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11550.000	47.19	74.00	-26.81	39.96	7.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5795MHz
Test BY :Lance Chiang

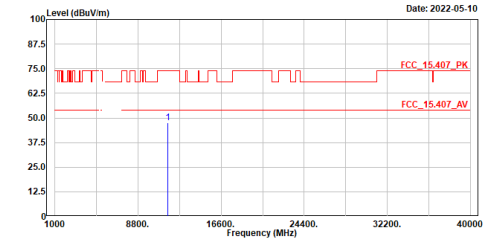


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11590.000	47.44	74.00	-26.56	48.08	7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac40_5795MHz
Test BY :Lance Chiang

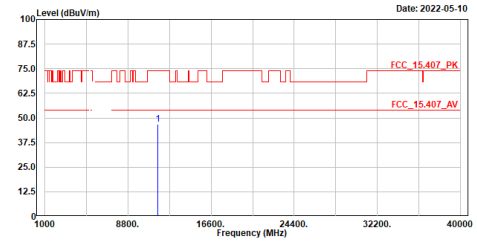


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	11590.000	46.82	74.00	-27.18	39.46	7.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5210MHz
Test BY :Lance Chiang

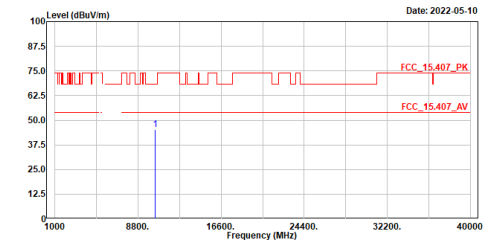


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10420.000	45.42	68.22	-22.80	39.27	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5210MHz
Test BY :Lance Chiang

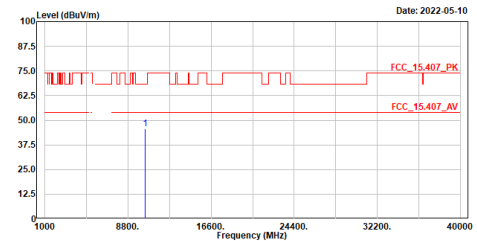


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
			dBuV/m	dB	dBuV	dB	
1	10420.000	45.63	68.22	-22.59	39.48	6.15	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5290MHz
Test BY :Lance Chiang

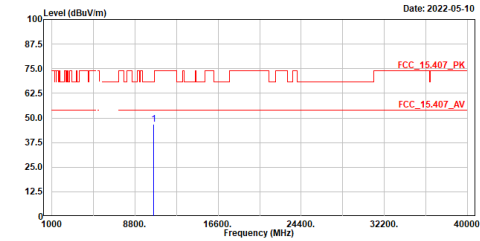

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10580.000	46.77	68.22	-21.45	48.51	6.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5290MHz
Test BY :Lance Chiang

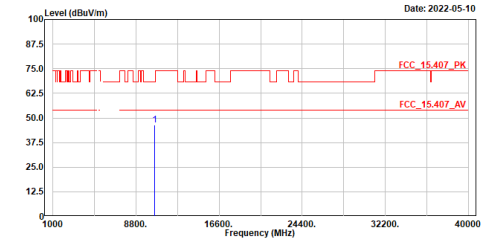

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	10580.000	46.27	68.22	-21.95	48.01	6.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5530MHz
Test BY :Lance Chiang

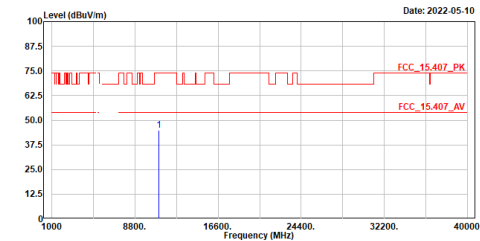

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11060.000	44.98	74.00	-29.02	38.72	6.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5530MHz
Test BY :Lance Chiang

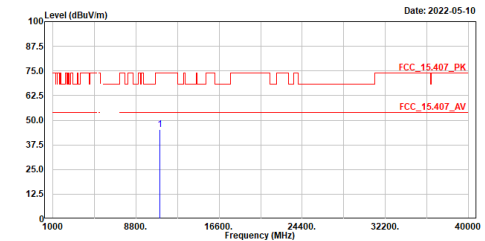

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11060.000	45.16	74.00	-28.84	38.90	6.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5610MHz
Test BY :Lance Chiang

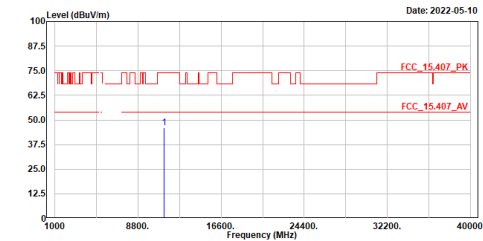


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	11220.000	45.98	74.00	-28.02	39.40	6.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5610MHz
Test BY :Lance Chiang

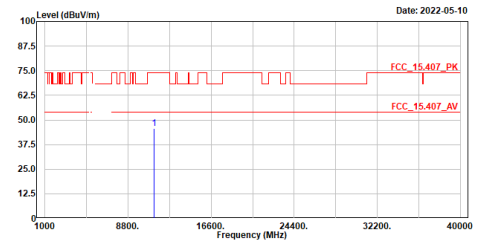


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	11220.000	45.55	74.00	-28.45	38.97	6.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80_5690MHz
Test BY :Lance Chiang

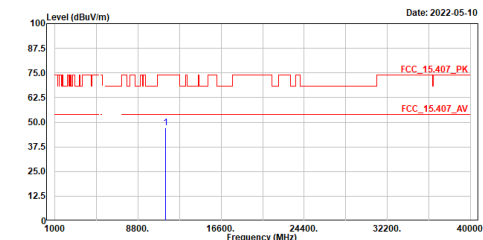


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	11380.000	47.24	74.00	-26.76	40.43	6.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80_5690MHz
Test BY :Lance Chiang

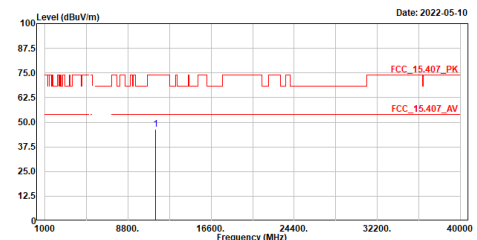


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	11380.000	46.47	74.00	-27.53	39.66	6.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80.5775MHz
Test BY :Lance Chiang

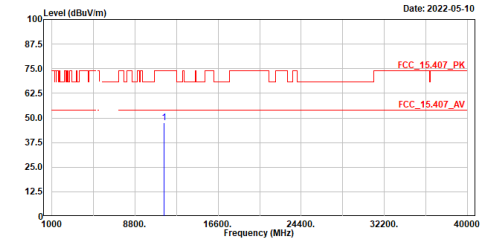


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11550.000	47.64	74.00	-26.36	40.41	7.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80.5775MHz
Test BY :Lance Chiang

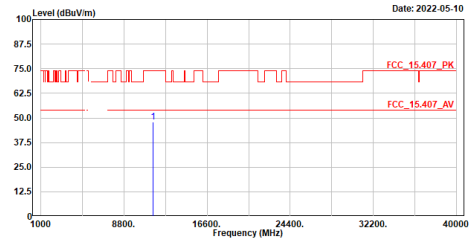


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	11550.000	47.96	74.00	-26.04	40.73	7.23	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,HORIZONTAL
Mode :TX_ac80.5775MHz
Test BY :Ashton Chiu

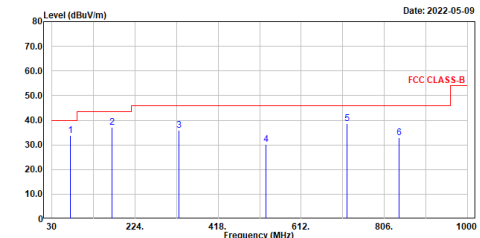


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	72.680	33.67	40.00	-6.33	60.62	-26.95	QP
2	169.680	37.14	43.50	-6.36	61.67	-24.53	QP
3	326.820	35.90	46.00	-10.10	58.66	-22.76	QP
4	529.550	30.13	46.00	-15.87	48.19	-18.06	QP
5	719.670	38.66	46.00	-7.34	53.27	-14.61	QP
6	839.950	33.01	46.00	-12.99	45.95	-12.94	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB03
Condition :3m ,VERTICAL
Mode :TX_ac80.5775MHz
Test BY :Ashton Chiu

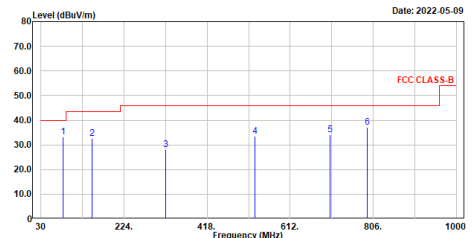

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	81.410	33.06	40.00	-6.94	62.54	-29.48	QP
2	149.310	32.67	43.50	-10.83	57.16	-24.49	QP
3	321.970	28.15	46.00	-17.85	51.03	-22.88	QP
4	529.550	33.59	46.00	-12.41	51.65	-18.06	QP
5	705.120	34.13	46.00	-11.87	48.86	-14.73	QP
6	792.420	37.03	46.00	-8.97	50.35	-13.32	QP


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


4. Band Edge

4.1. Test Setup

RF Conducted Measurement:

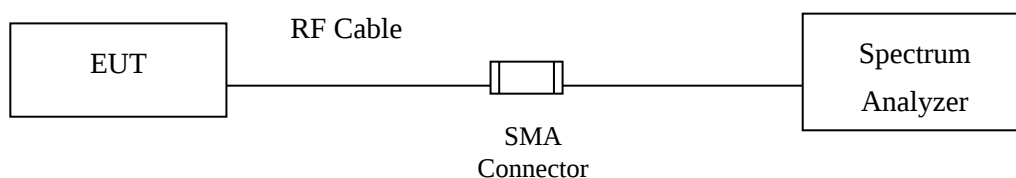

RF Radiated Measurement:

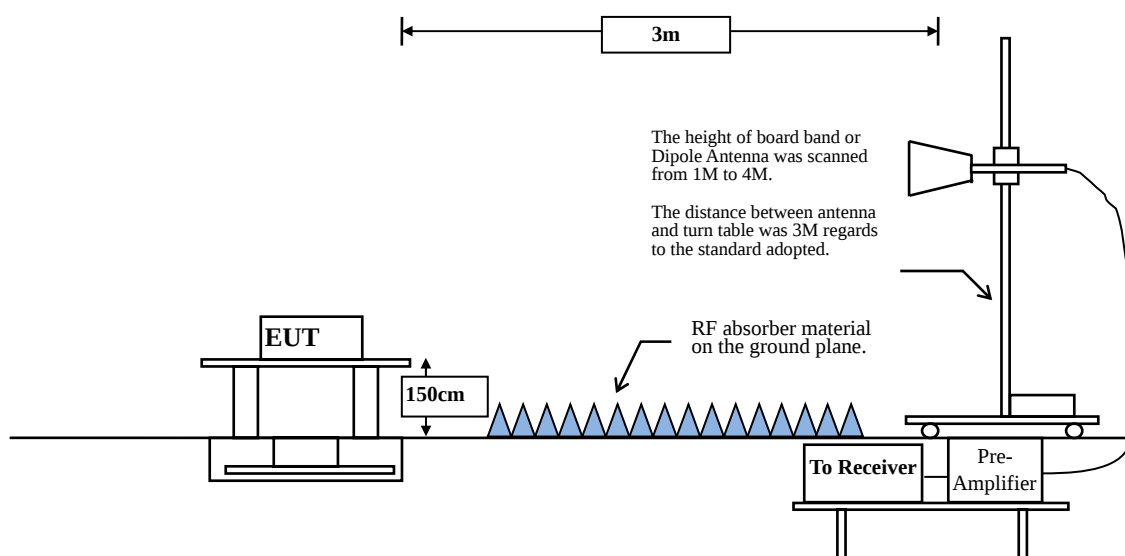

4.2. Limits

The provisions of Section 15.205 of this part apply to intentional radiators operating under this section.

Radiated emissions which fall in the restricted bands, as defined in Section 15.205, must also comply with the radiated emission limits specified in Section 15.209:

FCC Part 15 Subpart C Paragraph 15.209 Limits		
Frequency MHz	uV/m @3m	dBμV/m@3m
30-88	100	40
88-216	150	43.5
216-960	200	46
Above 960	500	54

Remarks :

1. RF Voltage (dBμV) = 20 log RF Voltage (uV)
2. In the Above Table, the tighter limit applies at the band edges.
3. Distance refers to the distance in meters between the measuring instrument antenna and the closed point of any part of the device or system.

4.3. Test Procedure

The EUT is placed on a turn table which is 1.5 meter above ground. The turn table can rotate 360 degrees to determine the position of the maximum emission level. The EUT was positioned such that the distance from antenna to the EUT was 3 meters.

The antenna can move up and down between 1 meter and 4 meters to find out the maximum emission level.

Both horizontal and vertical polarization of the antenna are set on measurement. In order to find the maximum emission, all of the interface cables must be manipulated according to ANSI C63.10:2013 on radiated measurement.

The bandwidth below 1GHz setting on the field strength meter is 120 kHz, above 1GHz are 1 MHz.

The EUT was setup to ANSI C63.10, 2013; tested to UNII test procedure of FCC KDB-789033 for compliance to FCC 47CFR Subpart E requirements.

RBW and VBW Parameter setting:

According to KDB 789033 section II.G.5 Procedure for Unwanted Maximum Emissions
Measurements above 1000 MHz.

RBW = 1MHz.

VBW $\geq$ 3MHz.

According to KDB 789033 section II.G.6 Procedures for Average Unwanted Emissions
Measurements above 1000 MHz.

RBW = 1MHz.

VBW = 10Hz, when duty cycle $\geq$ 98 %

VBW $\geq$ 1/T, when duty cycle < 98 %

(T refers to the minimum transmission duration over which the transmitter is on and is
transmitting at its maximum power control level for the tested mode of operation.)

5GHz band	Duty Cycle (%)	T (ms)	1/T (Hz)	VBW (Hz)
802.11 a	95.57	2.0500	488	500
802.11 ac20	98.04	5.0000	200	200
802.11 ac40	94.47	2.3900	418	500
802.11 ac80	91.87	1.1300	885	1000

Note: Duty Cycle Refer to Section 5.


4.4. Test Result of Band Edge

Dipole_SISO A

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Jing Chang

Level (dBuV/m)

Date: 2022-05-06

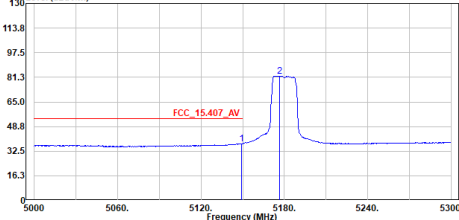


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5149.100	37.50	54.00	-16.50	19.10	18.40	Average
2	5176.700	82.11	-----	-----	63.61	18.50	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
Test BY :Jing Chang

Level (dBuV/m)

Date: 2022-05-06

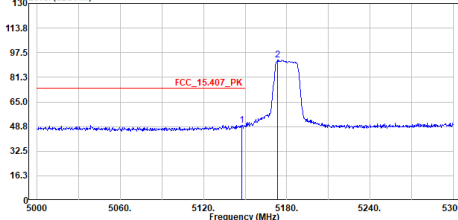


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5147.600	49.79	74.00	-24.21	31.39	18.40	Peak
2	5173.400	92.83	-----	-----	74.34	18.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Jing Chang

Level (dBuV/m)

Date: 2022-05-06

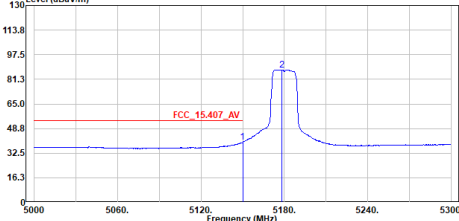


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5150.000	39.88	54.00	-14.12	21.48	18.40	Average
2	5178.200	87.51	-----	-----	69.00	18.51	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5180MHz
Test BY :Jing Chang


Level (dBuV/m)

Date: 2022-05-06

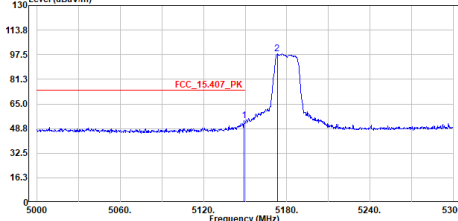


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB	
1	5149.100	53.83	74.00	-20.17	35.43	18.40	Peak
2	5173.100	98.13	-----	-----	79.64	18.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

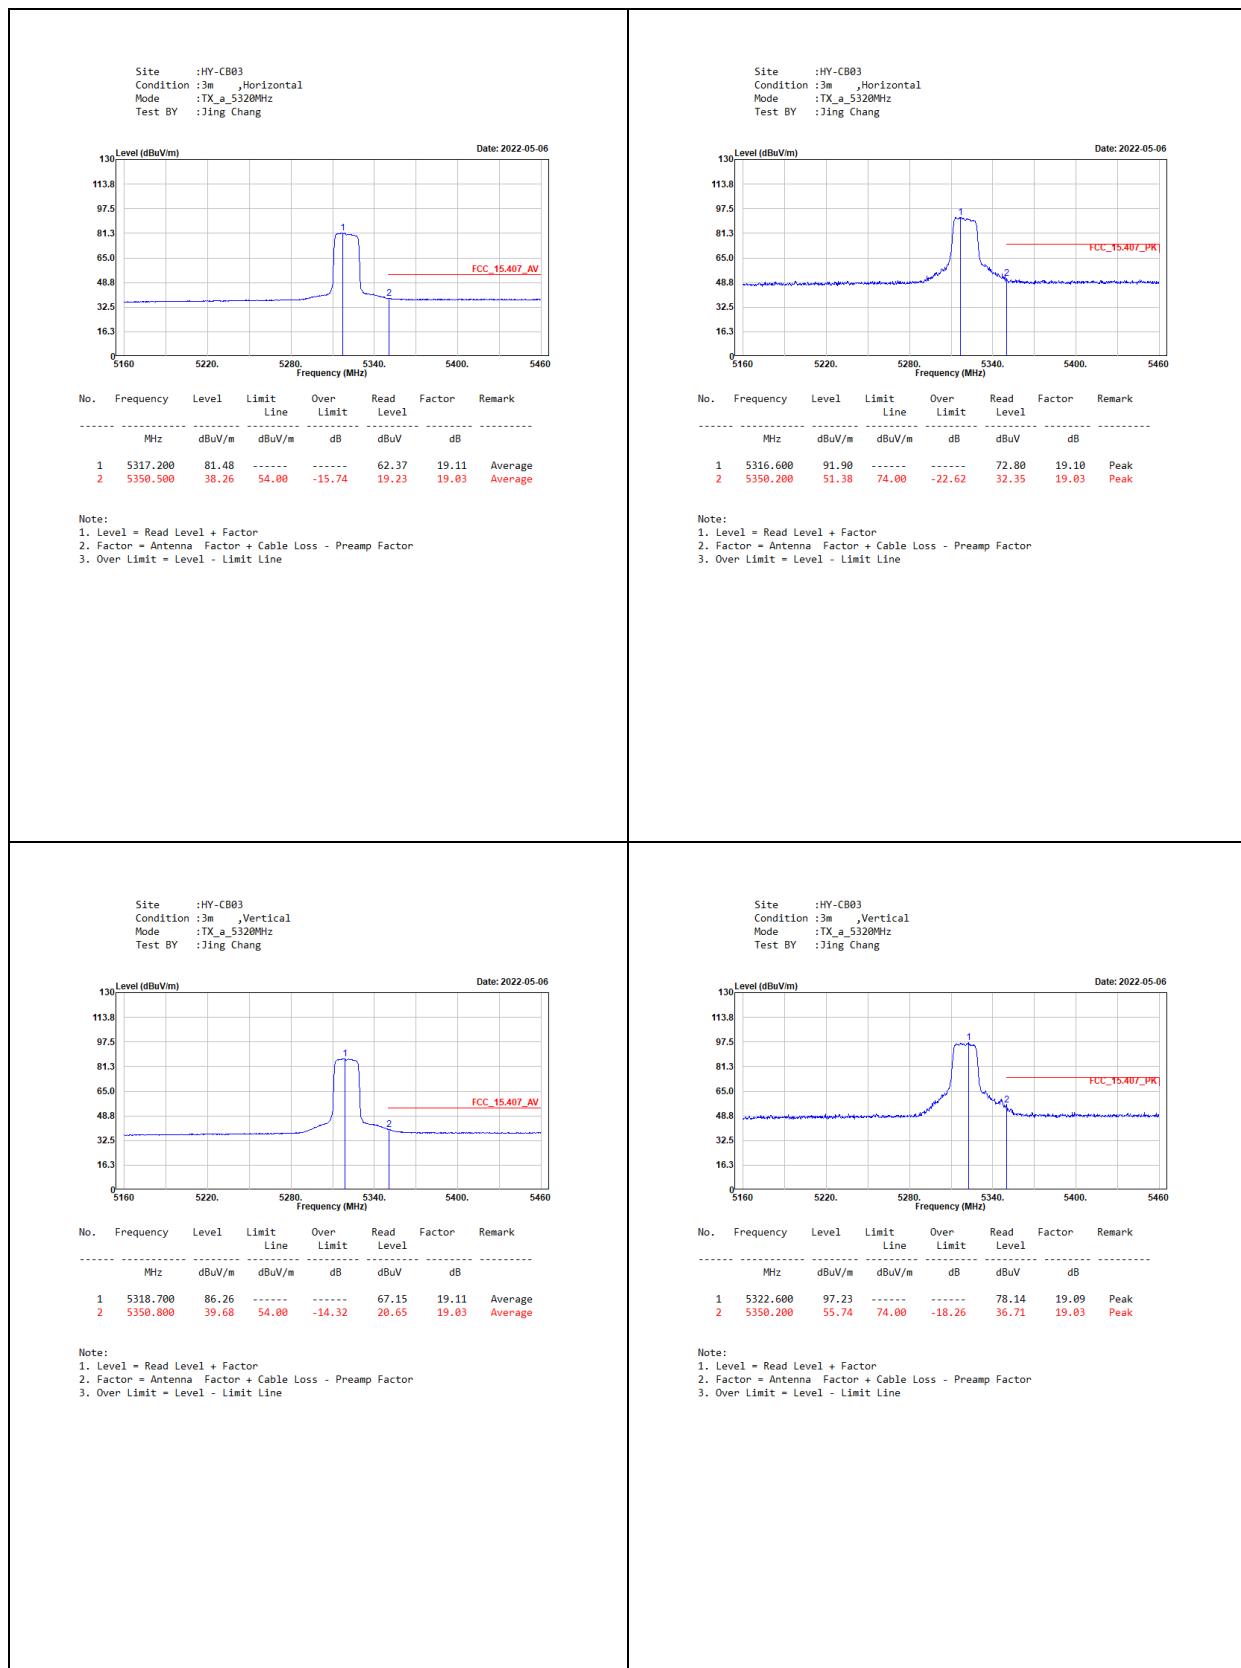


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Jing Chang

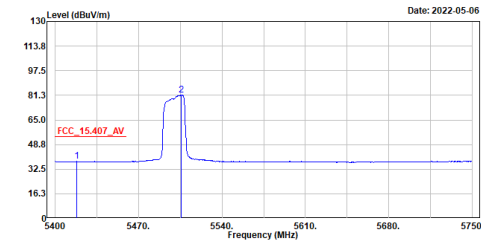

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5418.200	37.62	54.00	-16.38	18.33	19.29	Average
2	5505.700	81.37	-----	-----	61.98	19.39	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Jing Chang

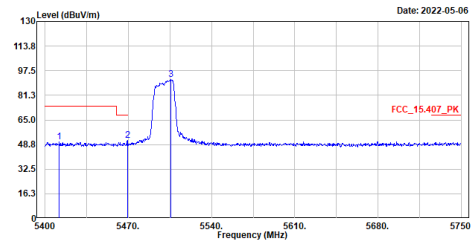

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5411.900	58.59	74.00	-23.41	31.30	19.29	Peak
2	5469.300	51.50	68.22	-16.72	32.23	19.27	Peak
3	5506.050	91.72	-----	-----	72.33	19.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Jing Chang

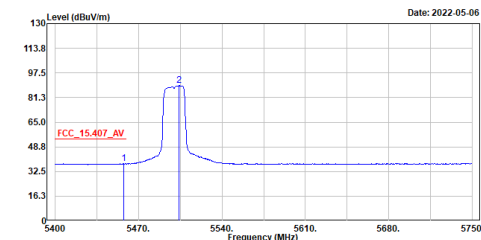

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5457.400	37.77	54.00	-16.23	18.54	19.23	Average
2	5503.950	89.10	-----	-----	69.71	19.39	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Jing Chang

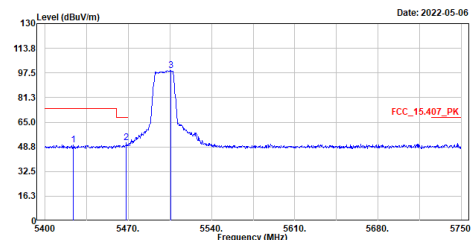

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5423.800	58.21	74.00	-23.79	30.95	19.26	Peak
2	5468.250	51.44	68.22	-16.78	32.17	19.27	Peak
3	5505.700	99.30	-----	-----	79.91	19.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5700MHz
Test BY :Jing Chang

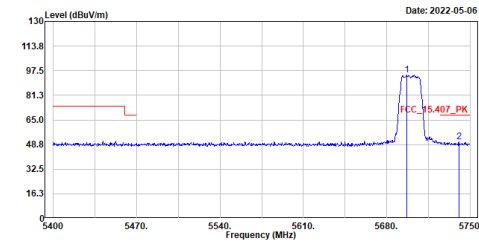


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5696.800	94.53	-----	-----	74.89	19.64	Peak
2	5740.550	50.41	68.22	-17.81	30.55	19.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5700MHz
Test BY :Jing Chang

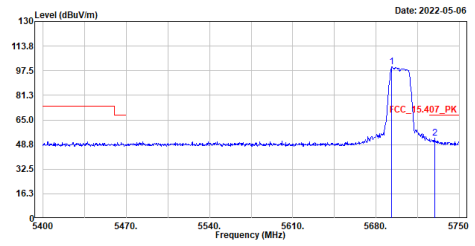


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5693.300	100.16	-----	-----	80.54	19.62	Peak
2	5729.350	52.85	68.22	-15.37	33.04	19.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
Test BY :Jing Chang

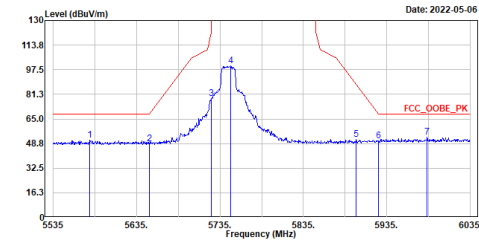


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5579.000	50.80	68.20	-17.40	31.23	19.57	Peak
2	5650.000	48.79	68.21	-19.42	29.48	19.31	Peak
3	5725.000	78.26	122.20	-43.94	58.47	19.79	Peak
4	5748.000	99.93	-----	-----	80.04	19.89	Peak
5	5898.500	51.55	87.81	-36.26	31.16	20.39	Peak
6	5925.000	50.65	68.21	-17.56	30.18	20.47	Peak
7	5983.500	52.74	68.20	-15.46	32.16	20.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5745MHz
Test BY :Jing Chang

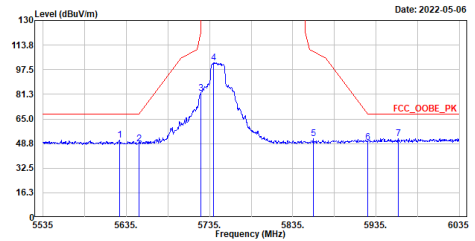


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5627.000	50.83	68.20	-17.37	31.37	19.46	Peak
2	5650.000	48.76	68.21	-19.45	29.45	19.31	Peak
3	5725.000	82.12	122.20	-40.08	62.33	19.79	Peak
4	5739.500	101.94	-----	-----	82.09	19.85	Peak
5	5859.500	51.83	109.54	-57.71	31.70	20.13	Peak
6	5925.000	49.57	68.21	-18.64	29.10	20.47	Peak
7	5962.000	52.09	68.20	-16.11	31.53	20.56	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

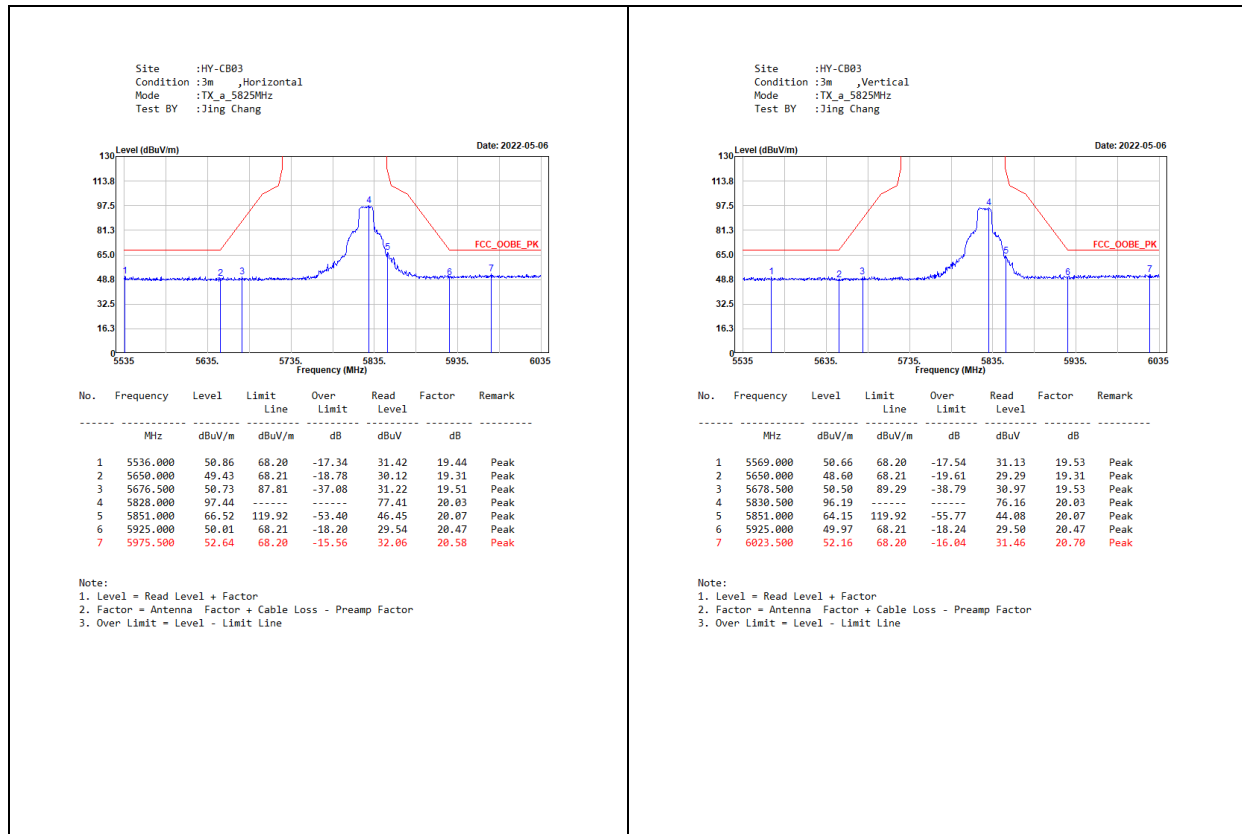

Dipole_MIMO

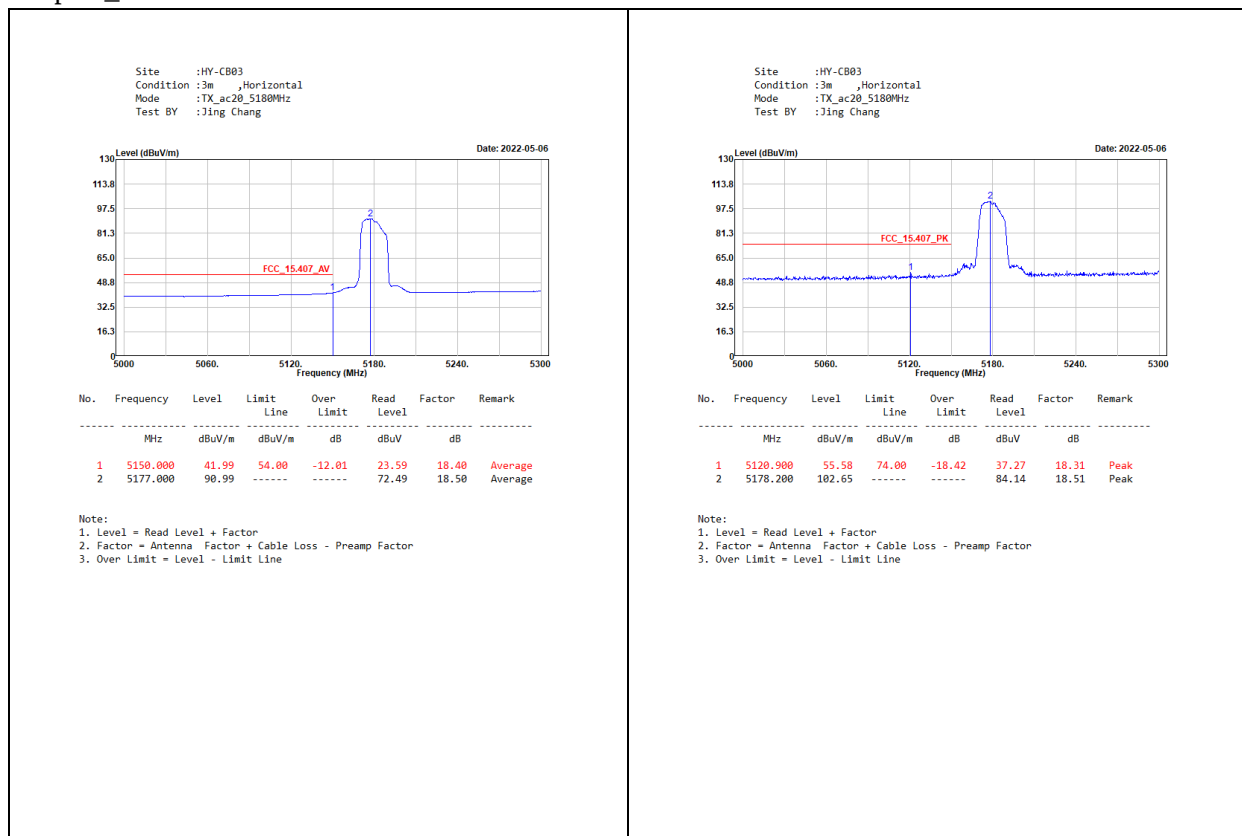


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
Test BY :Jing Chang

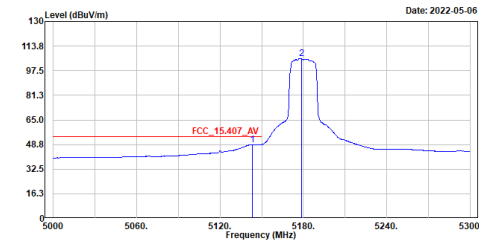

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5143.400	48.68	54.00	-5.32	30.29	18.39	Average
2	5178.500	105.51	-----	-----	87.00	18.51	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
Test BY :Jing Chang

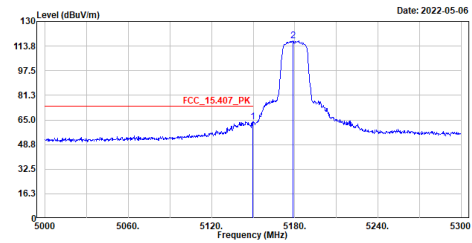

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5149.700	64.01	74.00	-9.99	45.61	18.40	Peak
2	5178.800	117.31	-----	-----	98.80	18.51	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5320MHz
Test BY :Jing Chang

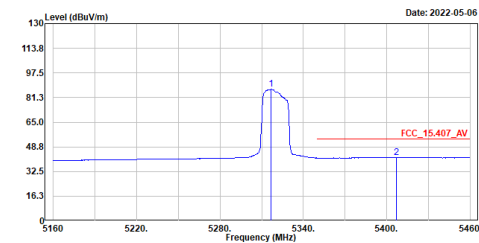

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5316.900	86.66	-----	-----	67.55	19.11	Average
2	5406.900	41.61	54.00	-12.39	22.30	19.31	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5320MHz
Test BY :Jing Chang

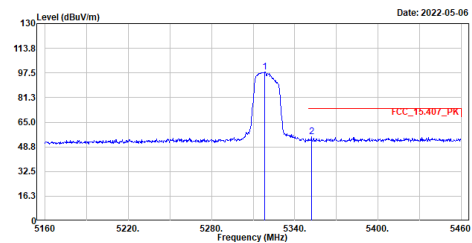

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5318.100	98.29	-----	-----	79.18	19.11	Peak
2	5352.000	55.29	74.00	-18.71	36.25	19.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5320MHz
Test BY :Jing Chang

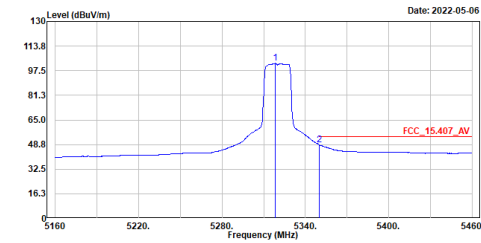

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5318.400	102.31	-----	-----	83.20	19.11	Average
2	5350.200	48.42	54.00	-5.58	29.39	19.03	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5320MHz
Test BY :Jing Chang

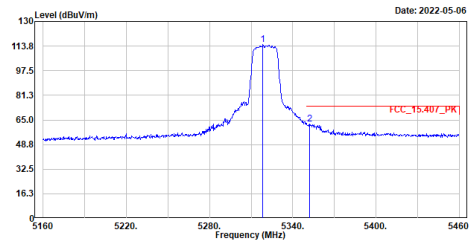

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5318.400	114.76	-----	-----	95.65	19.11	Peak
2	5352.000	62.40	74.00	-11.60	43.36	19.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5500MHz
Test BY :Jing Chang

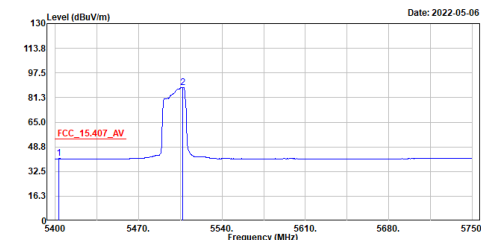

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5402.800	40.96	54.00	-13.04	21.65	19.31	Average
2	5506.750	87.86	-----	-----	68.47	19.39	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5500MHz
Test BY :Jing Chang

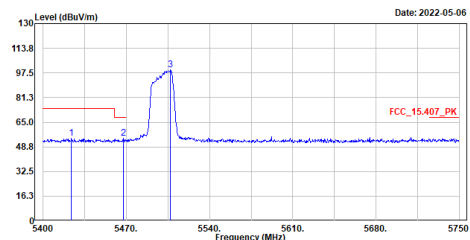

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5423.800	54.35	74.00	-19.65	35.09	19.26	Peak
2	5467.550	54.63	68.22	-13.59	35.36	19.27	Peak
3	5507.100	99.45	-----	-----	80.06	19.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5500MHz
Test BY :Jing Chang

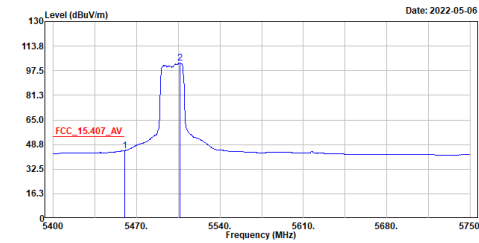

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5459.850	44.73	54.00	-9.27	25.49	19.24	Average
2	5506.400	102.39	-----	-----	83.00	19.39	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5500MHz
Test BY :Jing Chang

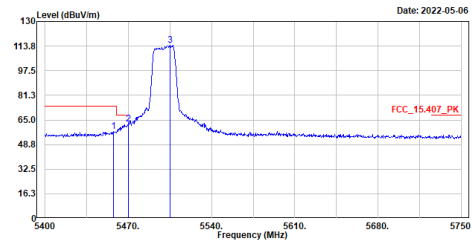

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5457.750	57.31	74.00	-16.69	38.07	19.24	Peak
2	5470.000	62.13	68.22	-6.09	42.85	19.28	Peak
3	5505.000	114.14	-----	-----	94.75	19.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5700MHz
Test BY :Jing Chang

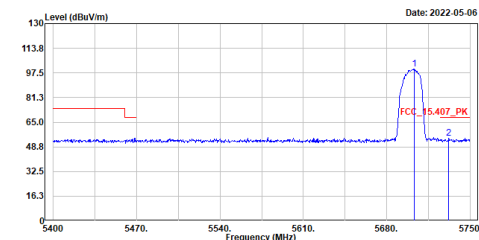

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5703.100	100.09	-----	-----	80.41	19.68	Peak
2	5732.150	54.51	68.22	-13.71	34.69	19.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5700MHz
Test BY :Jing Chang

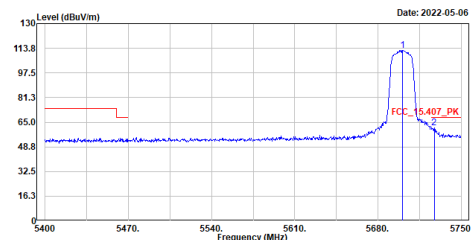


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5700.650	112.50	-----	-----	92.83	19.67	Peak
2	5727.250	61.51	68.22	-6.71	41.71	19.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5745MHz
Test BY :Jing Chang

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5745MHz
Test BY :Jing Chang

Date: 2022-05-06

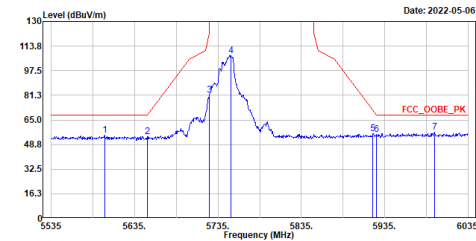

Date: 2022-05-06

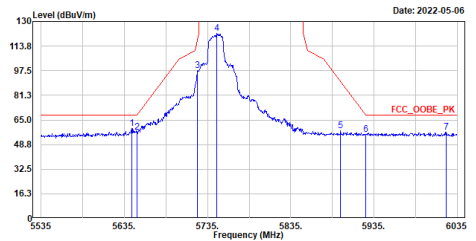

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5599.000	54.75	68.20	-13.45	35.11	19.64	Peak
2	5650.000	53.85	68.21	-14.36	34.54	19.31	Peak
3	5725.000	81.47	122.20	-40.73	61.68	19.79	Peak
4	5750.500	107.60	-----	-----	87.70	19.90	Peak
5	5921.000	56.10	71.17	-15.07	35.64	20.46	Peak
6	5925.000	55.22	68.21	-12.99	34.75	20.47	Peak
7	5995.000	56.95	68.20	-11.25	36.35	20.60	Peak

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5644.000	59.54	68.20	-8.66	40.18	19.36	Peak
2	5650.000	57.04	68.21	-11.17	37.73	19.31	Peak
3	5723.000	97.72	117.64	-19.92	77.94	19.78	Peak
4	5746.500	121.98	-----	-----	102.09	19.89	Peak
5	5895.000	57.65	90.40	-32.75	37.28	20.37	Peak
6	5925.000	55.47	68.21	-12.74	35.00	20.47	Peak
7	6021.500	56.73	68.20	-11.47	36.03	20.70	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5825MHz
Test BY :Jing Chang

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5825MHz
Test BY :Jing Chang

Date: 2022-05-07

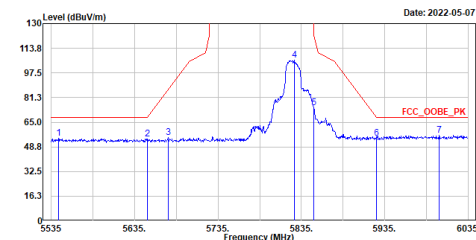

Date: 2022-05-07

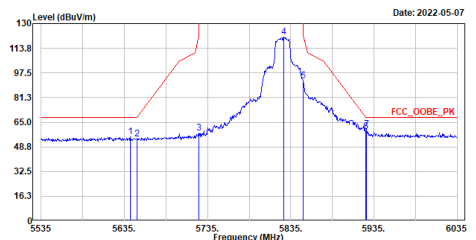


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5543.500	54.55	68.20	-13.65	35.10	19.45	Peak
2	5650.000	54.09	68.21	-14.12	34.78	19.31	Peak
3	5675.000	54.73	86.70	-31.97	35.23	19.50	Peak
4	5827.000	105.92	-----	-----	85.89	20.03	Peak
5	5850.000	74.40	122.20	-47.80	54.34	20.06	Peak
6	5925.000	54.23	68.21	-13.98	33.76	20.47	Peak
7	6000.500	56.59	68.20	-11.61	35.99	20.60	Peak

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5642.500	55.55	68.20	-12.65	36.18	19.37	Peak
2	5650.000	53.90	68.21	-14.31	34.59	19.31	Peak
3	5724.500	57.69	121.06	-63.37	37.90	19.79	Peak
4	5826.500	120.98	-----	-----	100.95	20.03	Peak
5	5850.000	92.40	122.20	-29.80	72.34	20.06	Peak
6	5925.000	58.87	68.21	-9.34	38.40	20.47	Peak
7	5926.000	60.47	68.20	-7.73	40.00	20.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
Test BY :Jing Chang

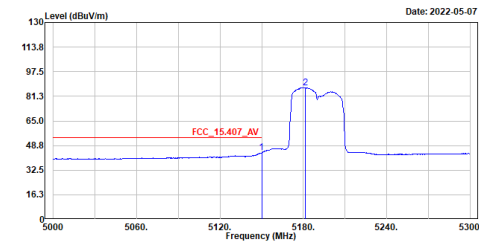

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5150.000	44.02	54.00	-9.98	25.62	18.40	Average
2	5181.200	86.99	-----	-----	68.48	18.51	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
Test BY :Jing Chang

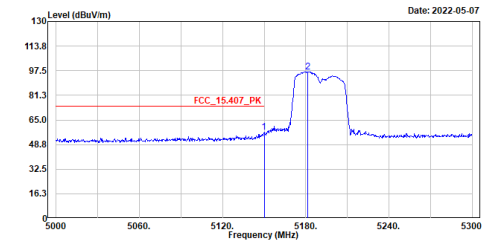

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5150.000	56.71	74.00	-17.29	38.31	18.40	Peak
2	5181.500	96.86	-----	-----	78.35	18.51	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
Test BY :Jing Chang

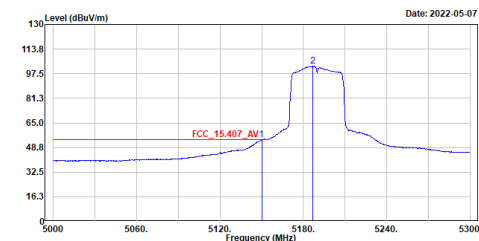

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5150.000	53.79	54.00	-0.21	35.39	18.40	Average
2	5186.600	102.50	-----	-----	83.96	18.54	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
Test BY :Jing Chang

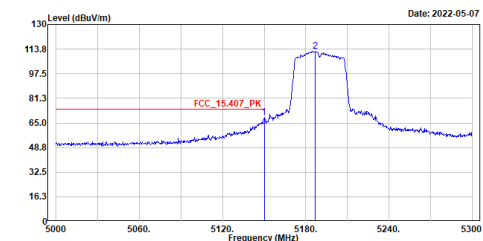

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5150.000	68.45	74.00	-5.55	50.05	18.40	Peak
2	5186.600	112.16	-----	-----	93.62	18.54	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5310MHz
Test BY :Jing Chang

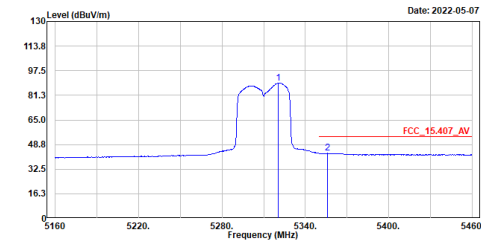

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5320.500	89.32	-----	-----	70.22	19.10	Average
2	5355.900	43.05	54.00	-10.95	24.00	19.05	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5310MHz
Test BY :Jing Chang

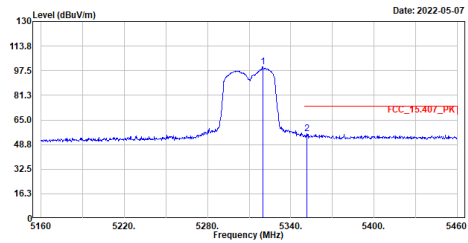

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5319.900	99.92	-----	-----	80.82	19.10	Peak
2	5351.400	55.77	74.00	-18.23	36.73	19.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5310MHz
Test BY :Jing Chang

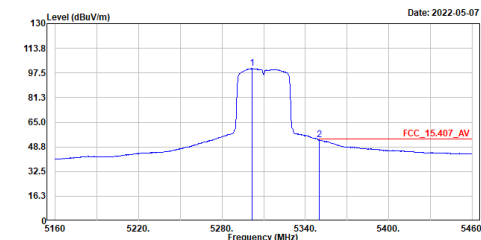

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5301.600	100.36	-----	-----	81.21	19.15	Average
2	5350.200	53.27	54.00	-0.73	34.24	19.03	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5310MHz
Test BY :Jing Chang

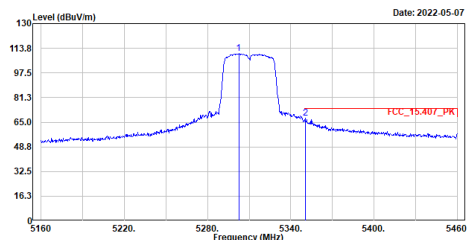

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5302.500	110.18	-----	-----	91.03	19.15	Peak
2	5350.500	67.61	74.00	-6.39	48.58	19.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5510MHz
Test BY :Jing Chang

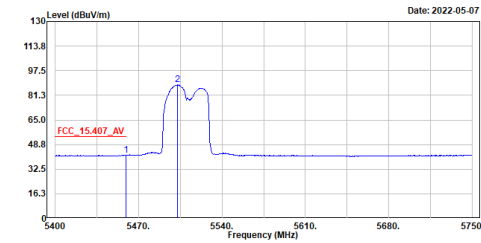

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5459.500	41.79	54.00	-12.21	22.55	19.24	Average
2	5502.900	88.15	-----	-----	68.76	19.39	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5510MHz
Test BY :Jing Chang

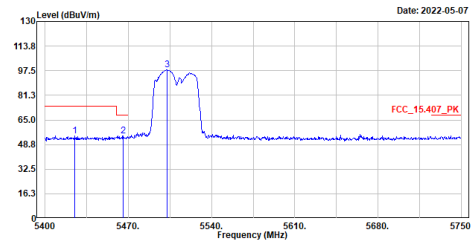

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5424.850	54.62	74.00	-19.38	35.36	19.26	Peak
2	5465.800	54.56	68.22	-13.66	35.30	19.26	Peak
3	5502.900	97.99	-----	-----	78.60	19.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5510MHz
Test BY :Jing Chang

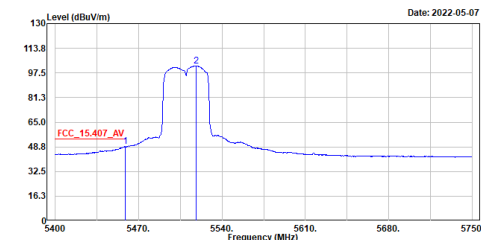

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5458.800	48.83	54.00	-5.17	29.59	19.24	Average
2	5518.300	102.17	-----	-----	82.76	19.41	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5510MHz
Test BY :Jing Chang

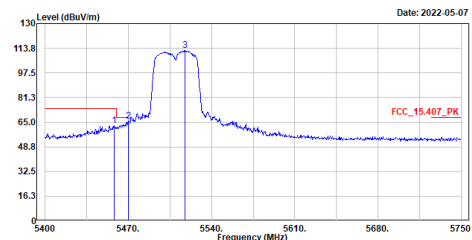

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5458.100	62.71	74.00	-11.29	43.47	19.24	Peak
2	5470.000	65.85	68.22	-2.37	46.57	19.28	Peak
3	5517.950	112.14	-----	-----	92.73	19.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5670MHz
Test BY :Jing Chang

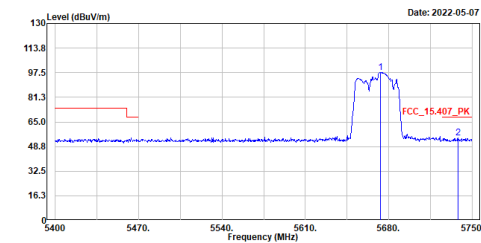

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5673.000	97.85	-----	-----	78.36	19.49	Peak
2	5738.100	54.34	68.22	-13.88	34.50	19.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5670MHz
Test BY :Jing Chang

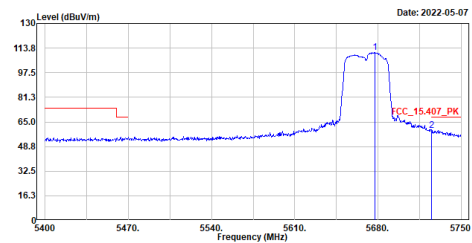

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5677.550	118.67	-----	-----	91.14	19.53	Peak
2	5725.150	59.32	68.22	-8.90	39.53	19.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5755MHz
Test BY :Jing Chang

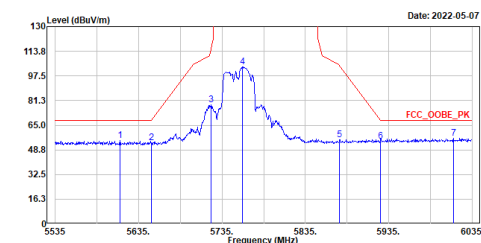

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5612.500	54.80	68.20	-13.40	35.25	19.55	Peak
2	5650.000	53.34	68.21	-14.87	34.03	19.31	Peak
3	5721.500	78.38	114.22	-35.84	58.60	19.78	Peak
4	5759.500	103.31	-----	-----	83.41	19.90	Peak
5	5876.000	55.65	104.46	-48.81	35.41	20.24	Peak
6	5925.000	54.37	68.21	-13.84	33.90	20.47	Peak
7	6012.500	56.47	68.20	-11.73	35.81	20.66	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5755MHz
Test BY :Jing Chang

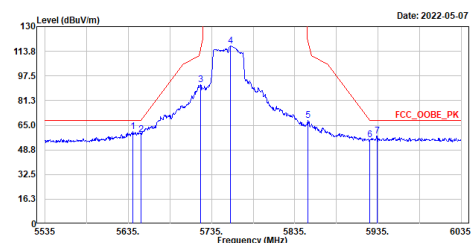

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5640.500	68.80	68.20	-7.40	41.42	19.38	Peak
2	5650.000	58.75	68.21	-9.46	39.44	19.31	Peak
3	5722.000	91.68	115.36	-23.68	71.90	19.78	Peak
4	5758.000	117.37	-----	-----	97.47	19.90	Peak
5	5850.500	68.01	121.06	-53.05	47.95	20.06	Peak
6	5925.000	55.50	68.21	-12.71	35.03	20.47	Peak
7	5934.000	57.80	68.20	-10.40	37.30	20.50	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5795MHz
Test BY :Jing Chang

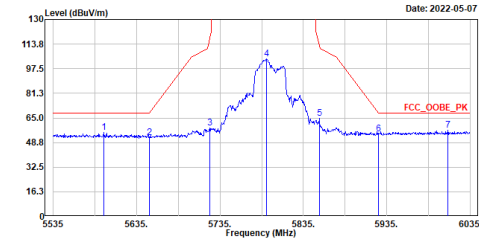

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5595.500	55.61	68.20	-12.59	35.98	19.63	Peak
2	5650.000	52.13	68.21	-16.08	32.82	19.31	Peak
3	5723.000	58.23	117.64	-59.41	38.45	19.78	Peak
4	5791.000	103.85	-----	-----	83.89	19.96	Peak
5	5854.000	64.83	113.08	-48.25	44.75	20.08	Peak
6	5925.000	54.42	68.21	-13.79	33.95	20.47	Peak
7	6009.000	56.98	68.20	-11.30	36.26	20.64	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5795MHz
Test BY :Jing Chang

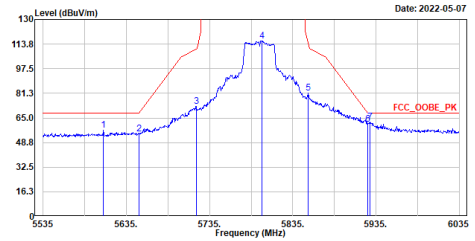

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5607.500	56.68	68.20	-11.52	37.09	19.59	Peak
2	5650.000	54.47	68.21	-13.74	35.16	19.31	Peak
3	5719.000	72.71	110.52	-37.81	52.94	19.77	Peak
4	5798.000	115.86	-----	-----	95.89	19.97	Peak
5	5853.500	81.29	114.22	-32.93	61.21	20.08	Peak
6	5925.000	60.67	68.21	-7.54	40.20	20.47	Peak
7	5928.000	62.43	68.20	-5.77	41.94	20.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5210MHz
Test BY :Edward Wang

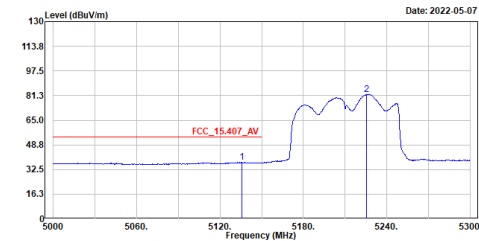

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5135.600	37.21	54.00	-16.79	18.85	18.36	Average
2	5225.600	82.06	-----	-----	63.31	18.75	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5210MHz
Test BY :Edward Wang

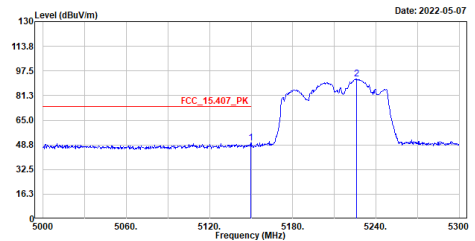

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5149.700	50.12	74.00	-23.88	31.72	18.40	Peak
2	5225.900	92.06	-----	-----	73.31	18.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5210MHz
Test BY :Edward Wang

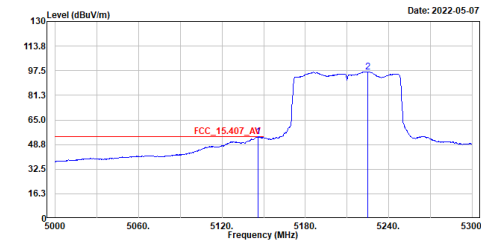

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5146.100	53.89	54.00	-0.11	35.50	18.39	Average
2	5225.000	96.87	-----	-----	78.12	18.75	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5210MHz
Test BY :Edward Wang

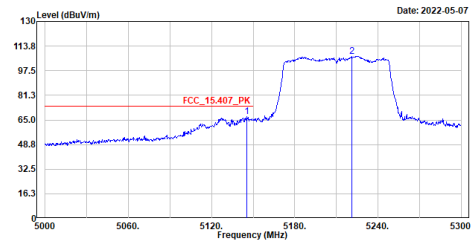

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5145.500	66.99	74.00	-7.01	48.60	18.39	Peak
2	5221.400	106.98	-----	-----	88.25	18.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5290MHz
Test BY :Edward Wang

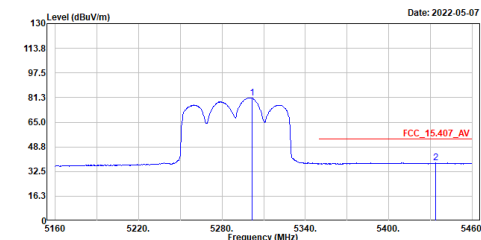

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5301.600	81.12	-----	-----	61.97	19.15	Average
2	5433.600	38.10	54.00	-15.90	18.85	19.25	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5290MHz
Test BY :Edward Wang

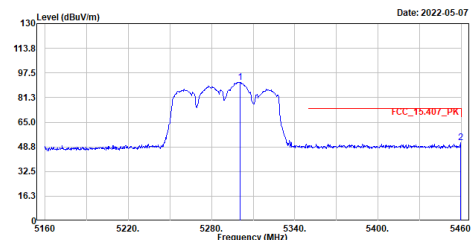

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5300.700	91.26	-----	-----	72.10	19.16	Peak
2	5459.400	51.27	74.00	-22.73	32.03	19.24	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5290MHz
Test BY :Edward Wang

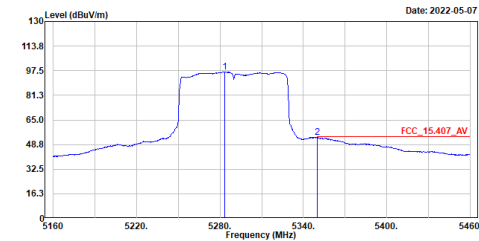

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5283.600	96.73	-----	-----	77.66	19.07	Average
2	5350.200	53.24	54.00	-0.76	34.21	19.03	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5290MHz
Test BY :Edward Wang

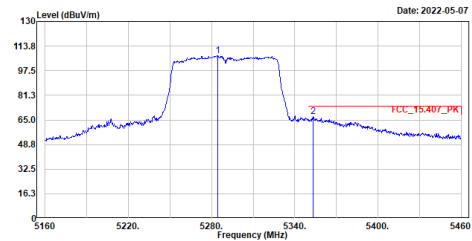

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5284.500	107.27	-----	-----	88.19	19.08	Peak
2	5353.200	67.00	74.00	-7.00	47.96	19.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5530MHz
Test BY :Edward Wang

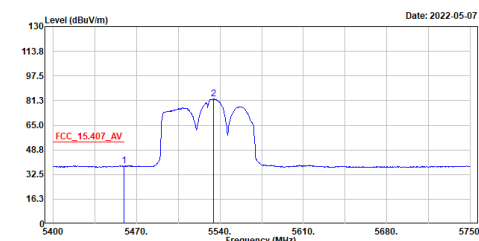

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5459.150	38.20	54.00	-15.80	18.96	19.24	Average
2	5534.750	82.18	-----	-----	62.74	19.44	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5530MHz
Test BY :Edward Wang

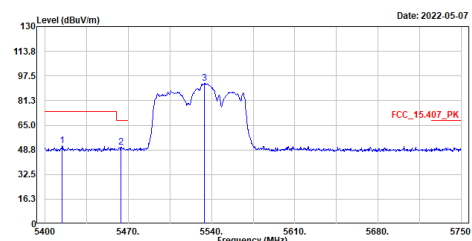

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5414.350	51.69	74.00	-22.31	32.41	19.28	Peak
2	5463.700	50.50	68.22	-17.72	31.24	19.26	Peak
3	5534.050	92.54	-----	-----	73.10	19.44	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5530MHz
Test BY :Edward Wang

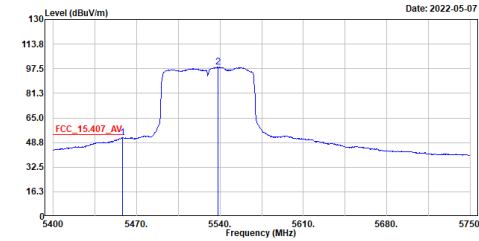

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5458.450	51.90	54.00	-2.10	32.66	19.24	Average
2	5538.250	98.52	-----	-----	79.07	19.45	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5530MHz
Test BY :Edward Wang

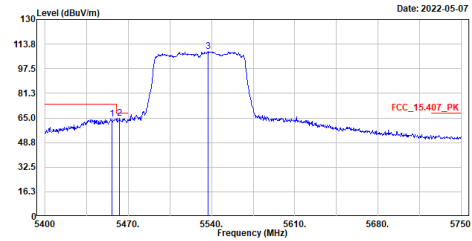

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5456.350	64.26	74.00	-9.74	45.03	19.23	Peak
2	5462.300	64.81	68.22	-3.41	45.56	19.25	Peak
3	5536.850	108.69	-----	-----	89.25	19.44	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5775MHz
Test BY :Edward Wang

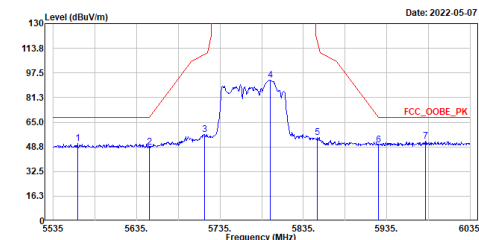

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5564.000	50.86	68.20	-17.34	31.35	19.51	Peak
2	5650.000	48.51	68.21	-19.70	29.20	19.31	Peak
3	5716.500	57.01	109.82	-52.81	37.27	19.74	Peak
4	5795.000	92.71	-----	-----	72.74	19.97	Peak
5	5852.000	54.85	117.64	-62.79	34.78	20.07	Peak
6	5925.000	50.12	68.21	-18.09	29.65	20.47	Peak
7	5981.500	52.54	68.20	-15.66	31.96	20.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5775MHz
Test BY :Edward Wang

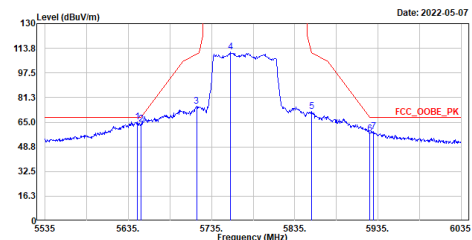


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5646.000	65.17	68.20	-3.03	45.83	19.34	Peak
2	5650.000	63.72	68.21	-4.49	44.41	19.31	Peak
3	5717.000	75.67	109.96	-34.29	55.93	19.74	Peak
4	5758.000	111.22	-----	-----	91.32	19.90	Peak
5	5855.000	71.88	110.80	-38.92	51.79	20.09	Peak
6	5925.000	57.63	68.21	-10.58	37.16	20.47	Peak
7	5929.500	58.91	68.20	-9.29	38.42	20.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Panel_SISO A

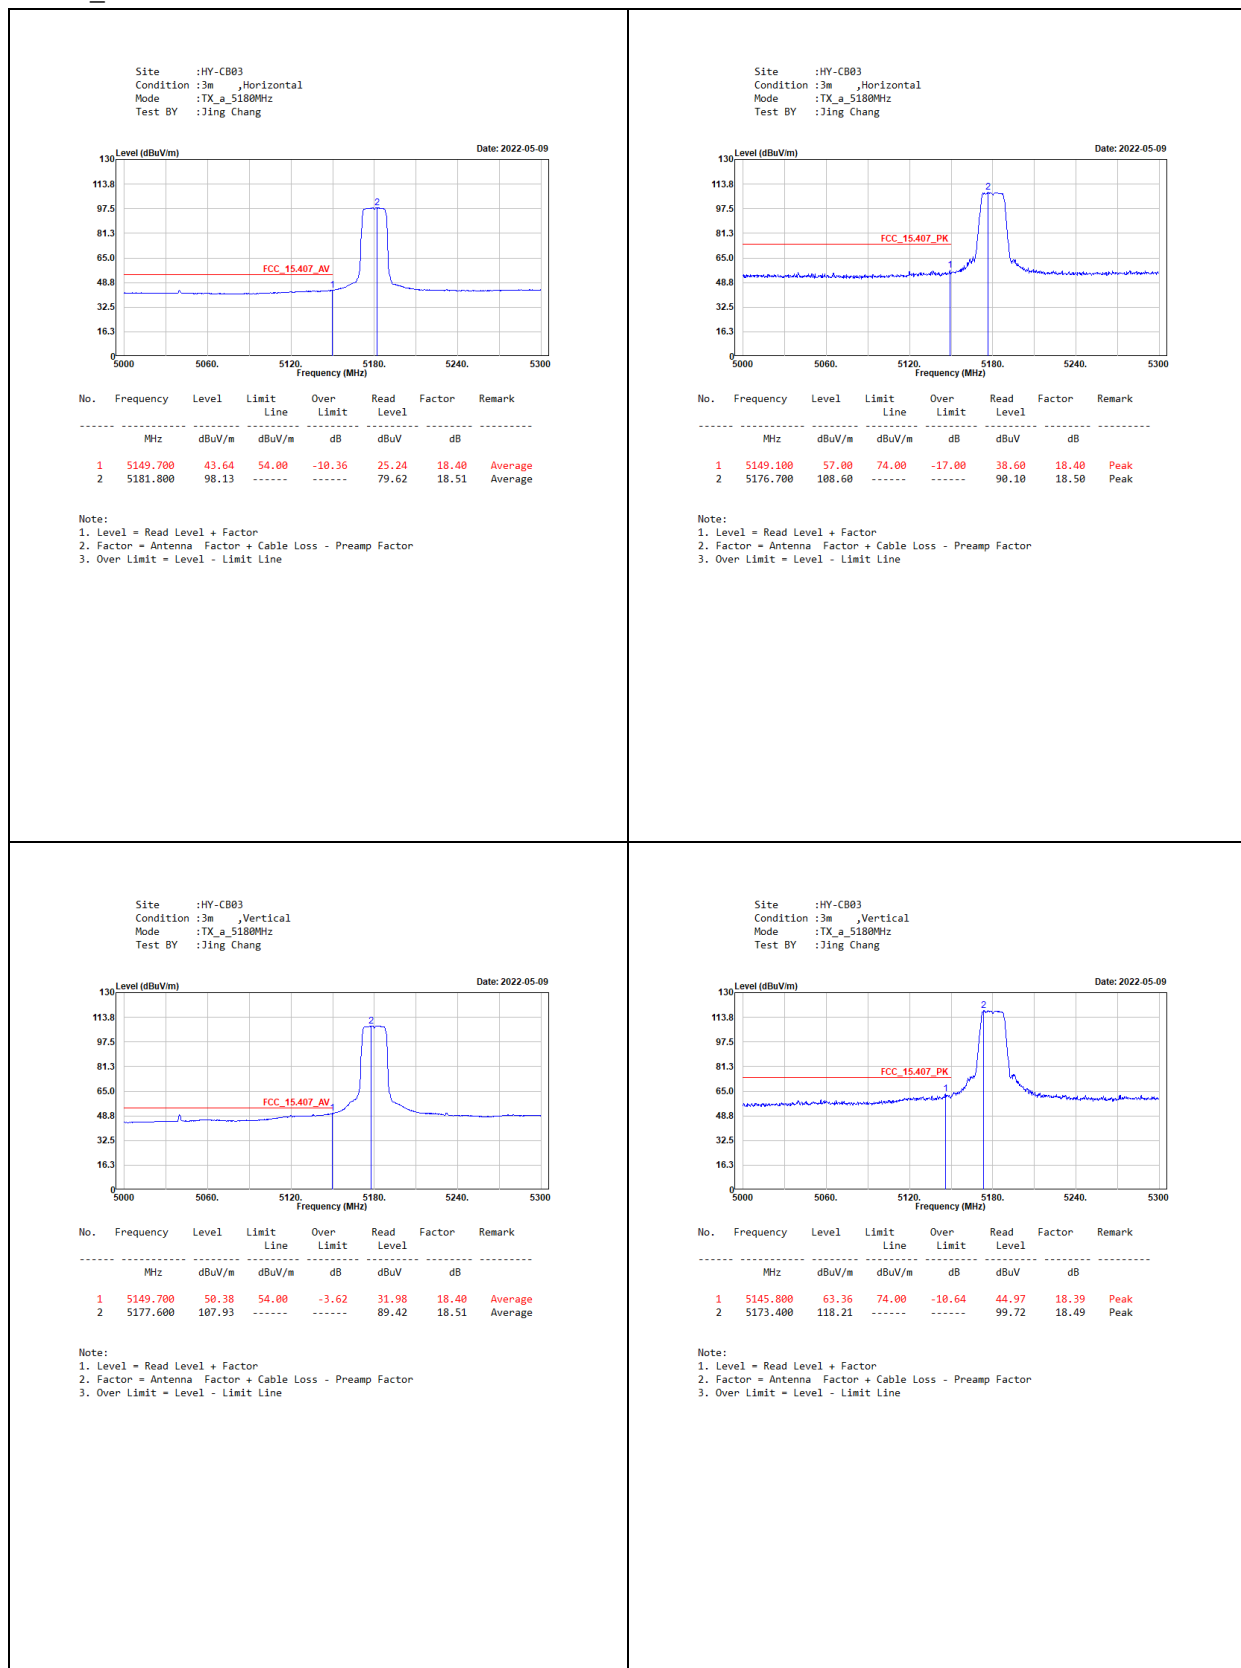


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Jing Chang

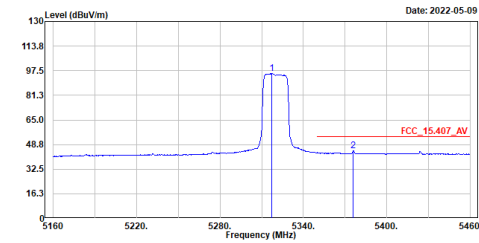

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5317.500	95.54	-----	-----	76.43	19.11	Average
2	5376.000	44.58	54.00	-9.42	25.41	19.17	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5320MHz
Test BY :Jing Chang

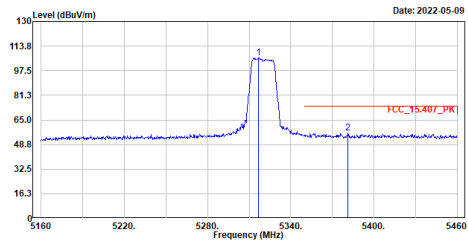

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5316.600	106.15	-----	-----	87.05	19.10	Peak
2	5381.400	56.27	74.00	-17.73	37.06	19.21	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Jing Chang

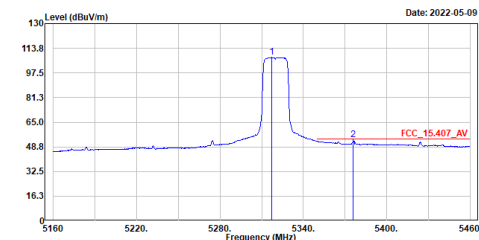

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5317.200	107.80	-----	-----	88.69	19.11	Average
2	5376.000	53.25	54.00	-0.75	34.08	19.17	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5320MHz
Test BY :Jing Chang

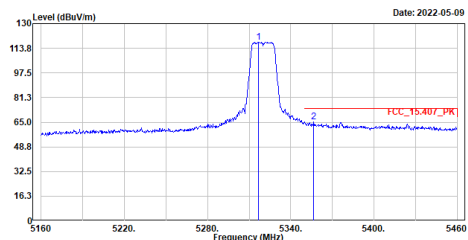

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5316.900	117.85	-----	-----	98.74	19.11	Peak
2	5356.500	65.18	74.00	-8.82	46.12	19.06	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Jing Chang

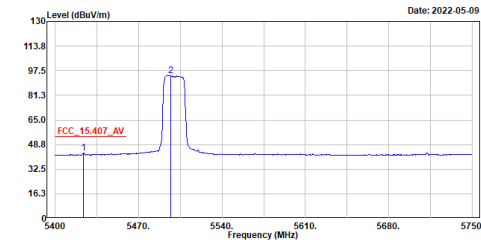

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5423.800	43.16	54.00	-10.84	23.90	19.26	Average
2	5496.950	94.31	-----	-----	74.94	19.37	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5500MHz
Test BY :Jing Chang

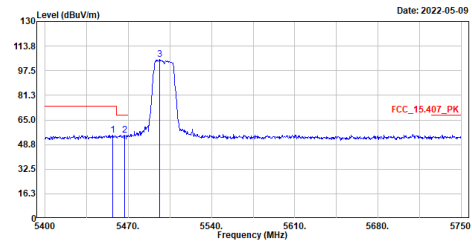

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5456.700	55.12	74.00	-18.88	35.89	19.23	Peak
2	5466.850	55.04	68.22	-13.18	35.78	19.26	Peak
3	5496.600	104.83	-----	-----	85.46	19.37	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Jing Chang

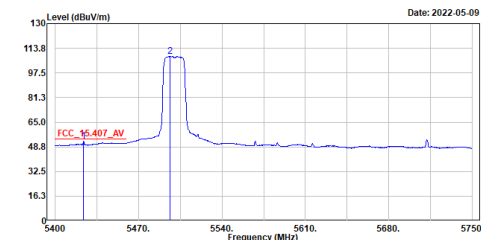

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5423.800	52.72	54.00	-1.28	33.46	19.26	Average
2	5496.600	108.45	-----	-----	89.08	19.37	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5500MHz
Test BY :Jing Chang

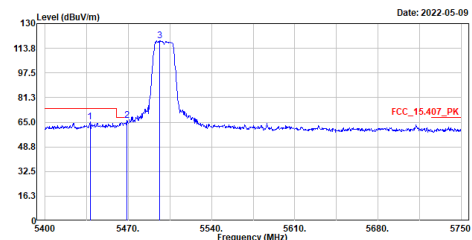

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5437.800	65.25	74.00	-8.75	46.02	19.23	Peak
2	5468.950	66.19	68.22	-2.03	46.92	19.27	Peak
3	5496.600	118.75	-----	-----	99.38	19.37	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5700MHz
Test BY :Jing Chang

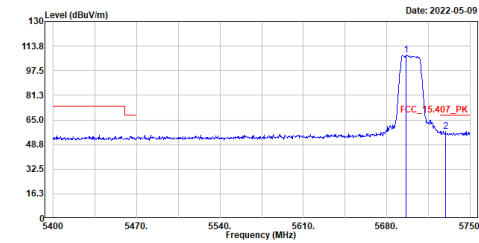

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5696.450	107.76	-----	-----	88.12	19.64	Peak
2	5729.350	57.54	68.22	-10.68	37.73	19.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5700MHz
Test BY :Jing Chang

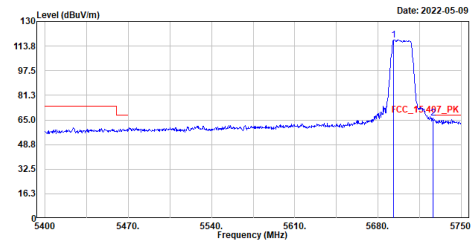

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5693.300	117.96	-----	-----	98.34	19.62	Peak
2	5726.200	66.06	68.22	-2.16	46.27	19.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
Test BY :Jing Chang

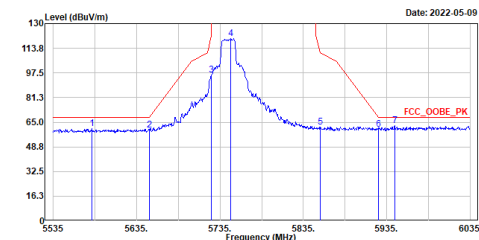

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5581.500	60.78	68.20	-7.42	41.21	19.57	Peak
2	5650.000	59.63	68.21	-8.58	40.32	19.31	Peak
3	5724.000	96.15	121.06	-24.91	76.36	19.79	Peak
4	5748.000	120.05	-----	-----	100.16	19.89	Peak
5	5855.000	61.88	110.80	-48.92	41.79	20.09	Peak
6	5925.000	60.35	68.21	-7.86	39.88	20.47	Peak
7	5944.500	62.61	68.20	-5.59	42.08	20.53	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_a_5745MHz
Test BY :Jing Chang

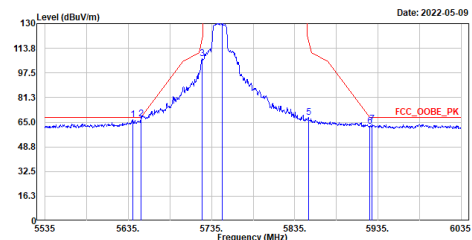


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5640.500	66.55	68.20	-1.65	47.17	19.38	Peak
2	5650.000	67.43	68.21	-0.78	48.12	19.31	Peak
3	5724.000	106.87	119.92	-13.05	87.08	19.79	Peak
4	5748.000	130.19	-----	-----	110.30	19.89	Peak
5	5851.500	68.17	118.78	-50.61	48.10	20.07	Peak
6	5925.000	62.09	68.21	-6.12	41.62	20.47	Peak
7	5928.000	63.56	68.20	-4.64	43.07	20.49	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

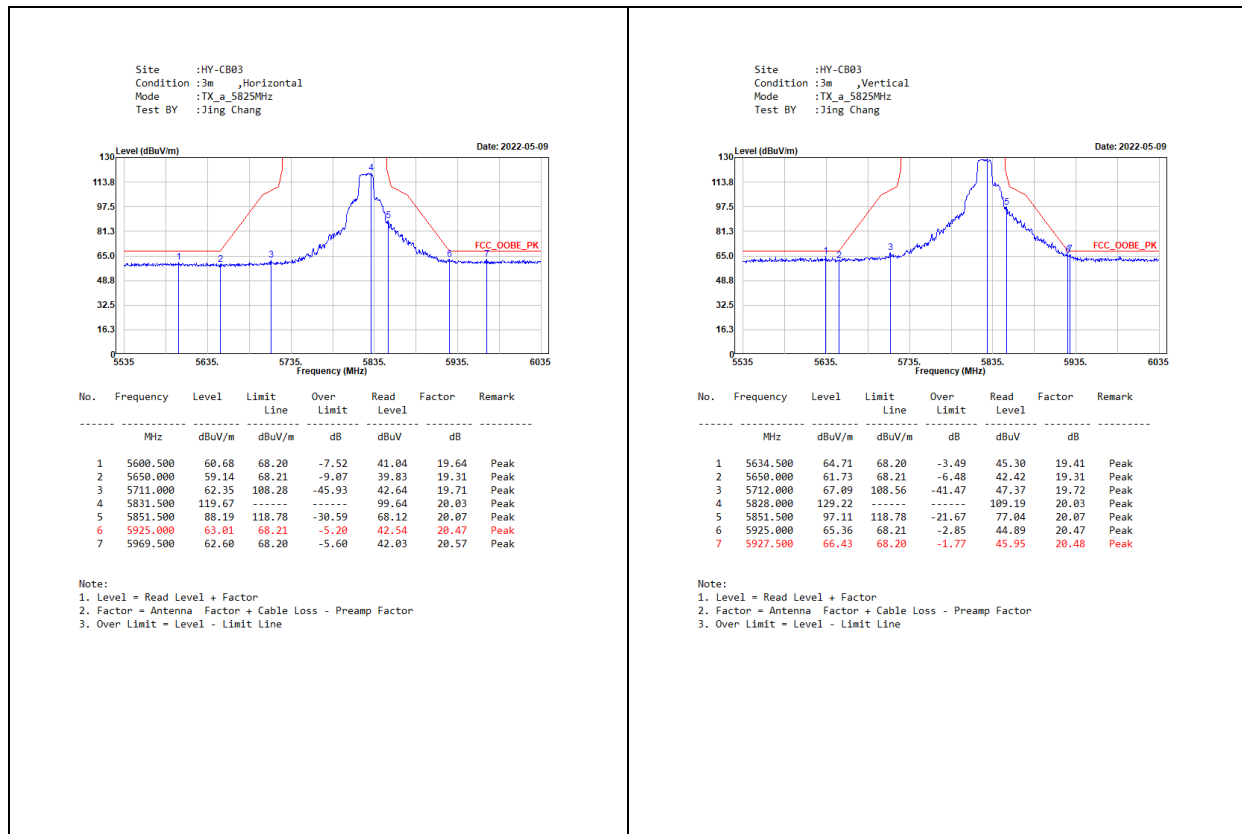

Panel_MIMO

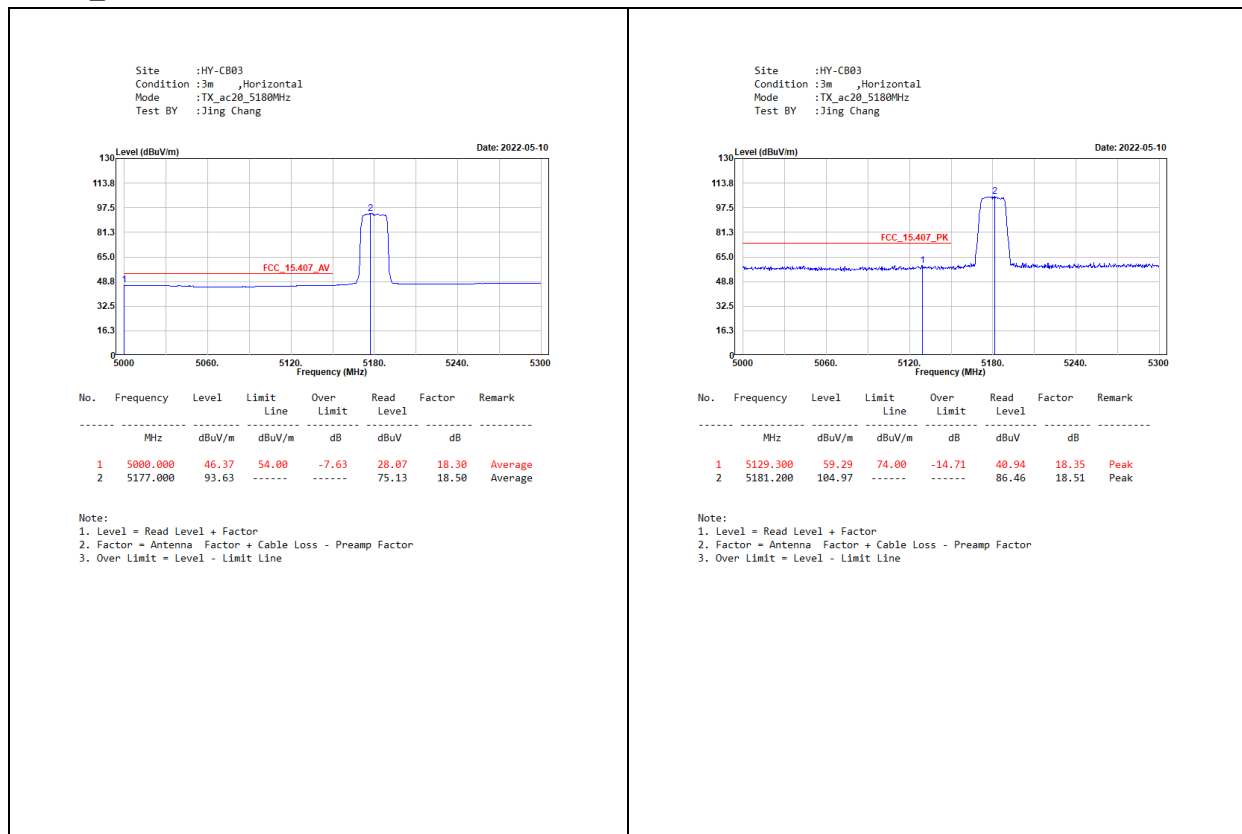


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
Test BY :Jing Chang

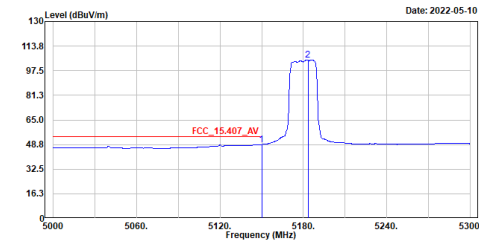

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5150.000	48.74	54.00	-5.26	30.34	18.40	Average
2	5183.300	104.63	-----	-----	86.11	18.52	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
Test BY :Jing Chang

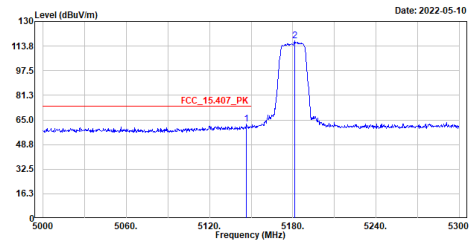

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5146.700	62.12	74.00	-11.88	43.73	18.39	Peak
2	5181.500	117.15	-----	-----	98.64	18.51	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5320MHz
Test BY :Jing Chang

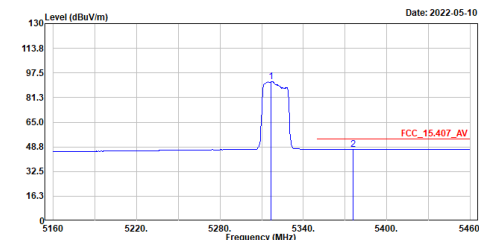

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5316.900	91.70	-----	-----	72.59	19.11	Average
2	5375.700	47.24	54.00	-6.76	28.07	19.17	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5320MHz
Test BY :Jing Chang

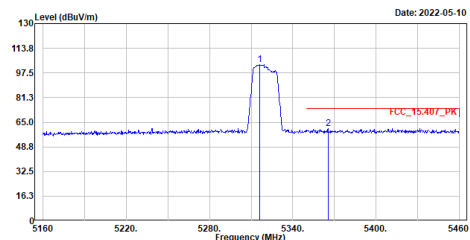

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5316.300	102.90	-----	-----	83.80	19.10	Peak
2	5365.500	60.92	74.00	-13.08	41.81	19.11	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5320MHz
Test BY :Jing Chang

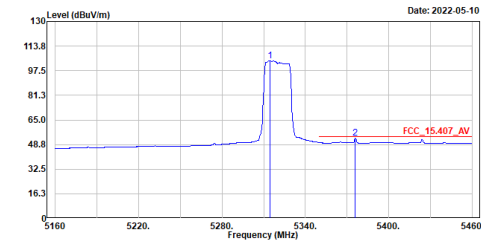

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5314.500	104.06	-----	-----	84.95	19.11	Average
2	5376.000	52.84	54.00	-1.16	33.67	19.17	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5320MHz
Test BY :Jing Chang

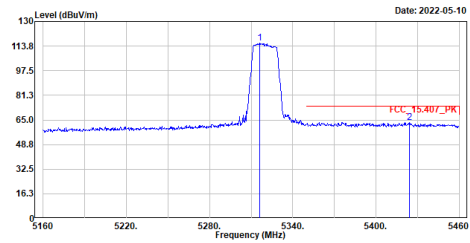

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5316.000	115.69	-----	-----	96.58	19.11	Peak
2	5424.000	63.40	74.00	-10.60	44.14	19.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5500MHz
Test BY :Jing Chang

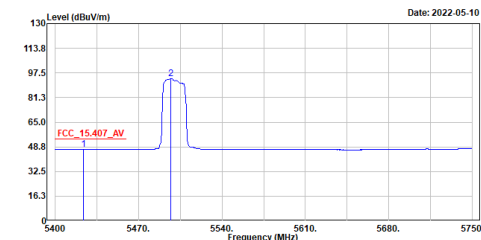

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5423.800	47.12	54.00	-6.88	27.86	19.26	Average
2	5496.950	93.85	-----	-----	74.48	19.37	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5500MHz
Test BY :Jing Chang

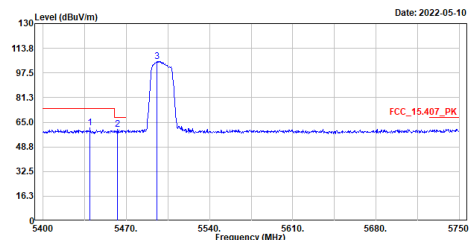

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5439.550	61.11	74.00	-12.89	41.88	19.23	Peak
2	5462.300	60.20	68.22	-8.02	40.95	19.25	Peak
3	5495.900	105.23	-----	-----	85.86	19.37	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5500MHz
Test BY :Jing Chang

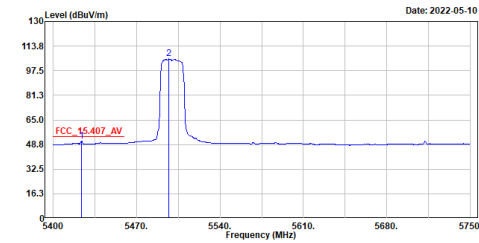

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5423.800	50.96	54.00	-3.04	31.70	19.26	Average
2	5497.300	105.25	-----	-----	85.88	19.37	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5500MHz
Test BY :Jing Chang

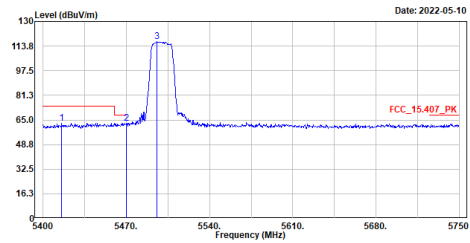

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5415.750	62.98	74.00	-11.02	43.69	19.29	Peak
2	5470.000	62.89	68.22	-5.33	43.61	19.28	Peak
3	5495.900	116.67	-----	-----	97.30	19.37	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5700MHz
Test BY :Jing Chang

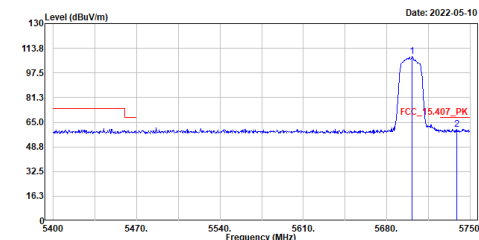

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5701.350	108.24	-----	-----	88.56	19.68	Peak
2	5738.800	60.48	68.22	-7.74	40.63	19.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5700MHz
Test BY :Jing Chang

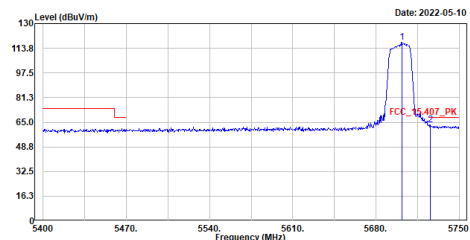

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5701.700	117.67	-----	-----	97.99	19.68	Peak
2	5725.850	63.06	68.22	-5.16	43.27	19.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5745MHz
Test BY :Jing Chang

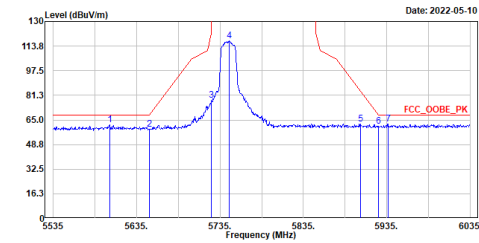

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5602.500	61.65	68.20	-6.55	42.03	19.62	Peak
2	5650.000	58.75	68.21	-9.46	39.44	19.31	Peak
3	5725.000	77.97	122.20	-44.23	58.18	19.79	Peak
4	5746.000	117.26	-----	-----	97.38	19.88	Peak
5	5903.500	62.38	84.11	-21.73	41.97	20.41	Peak
6	5925.000	60.73	68.21	-7.48	40.26	20.47	Peak
7	5936.500	62.40	68.20	-5.80	41.90	20.50	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5745MHz
Test BY :Jing Chang

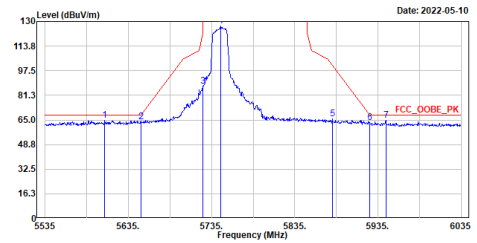

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5606.500	64.59	68.20	-3.61	44.99	19.60	Peak
2	5650.000	63.97	68.21	-4.24	44.66	19.31	Peak
3	5725.000	87.29	122.20	-34.91	67.50	19.79	Peak
4	5746.500	126.97	-----	-----	107.08	19.89	Peak
5	5880.000	65.77	101.50	-35.73	45.51	20.26	Peak
6	5925.000	63.36	68.21	-4.85	42.89	20.47	Peak
7	5944.500	64.55	68.20	-3.65	44.02	20.53	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac20_5825MHz
Test BY :Jing Chang

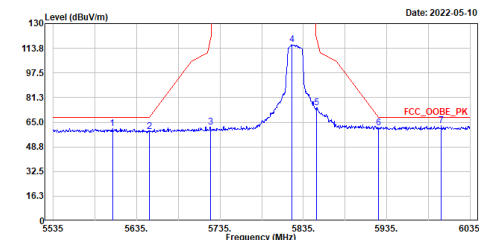

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5606.000	60.83	68.20	-7.37	41.23	19.60	Peak
2	5650.000	59.04	68.21	-9.17	39.73	19.31	Peak
3	5723.500	62.05	118.78	-56.73	42.27	19.78	Peak
4	5821.000	116.08	-----	-----	96.07	20.01	Peak
5	5851.000	74.67	119.92	-45.25	54.60	20.07	Peak
6	5925.000	61.27	68.21	-6.94	40.80	20.47	Peak
7	6000.500	62.62	68.20	-5.58	42.02	20.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac20_5825MHz
Test BY :Jing Chang

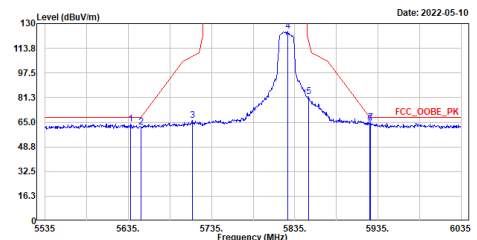

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level		
1	5637.500	63.71	68.20	-4.49	44.31	19.40	Peak
2	5650.000	61.64	68.21	-6.57	42.33	19.31	Peak
3	5712.000	66.24	108.56	-42.32	46.52	19.72	Peak
4	5826.500	124.95	-----	-----	104.92	20.03	Peak
5	5852.000	82.13	117.64	-35.51	62.06	20.07	Peak
6	5925.000	63.73	68.21	-4.48	43.26	20.47	Peak
7	5926.000	64.59	68.20	-3.61	44.12	20.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
Test BY :Jing Chang

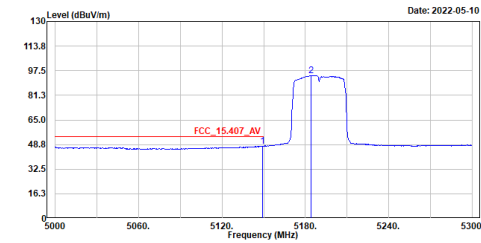

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5149.400	47.61	54.00	-6.39	29.21	18.40	Average
2	5184.200	94.26	-----	-----	75.73	18.53	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
Test BY :Jing Chang

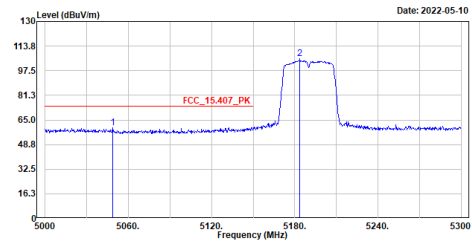

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5048.600	59.75	74.00	-14.25	41.56	18.19	Peak
2	5183.600	105.23	-----	-----	86.70	18.53	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
Test BY :Jing Chang

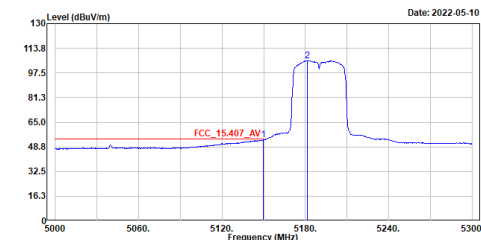

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5149.700	53.24	54.00	-0.76	34.84	18.40	Average
2	5181.500	105.58	-----	-----	87.07	18.51	Average


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
Test BY :Jing Chang

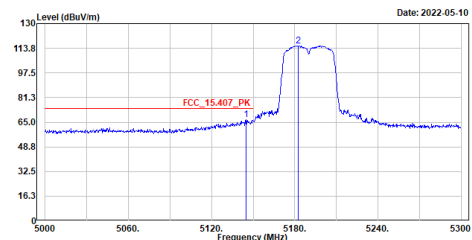


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5144.900	66.62	74.00	-7.38	48.23	18.39	Peak
2	5182.700	115.44	-----	-----	96.92	18.52	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

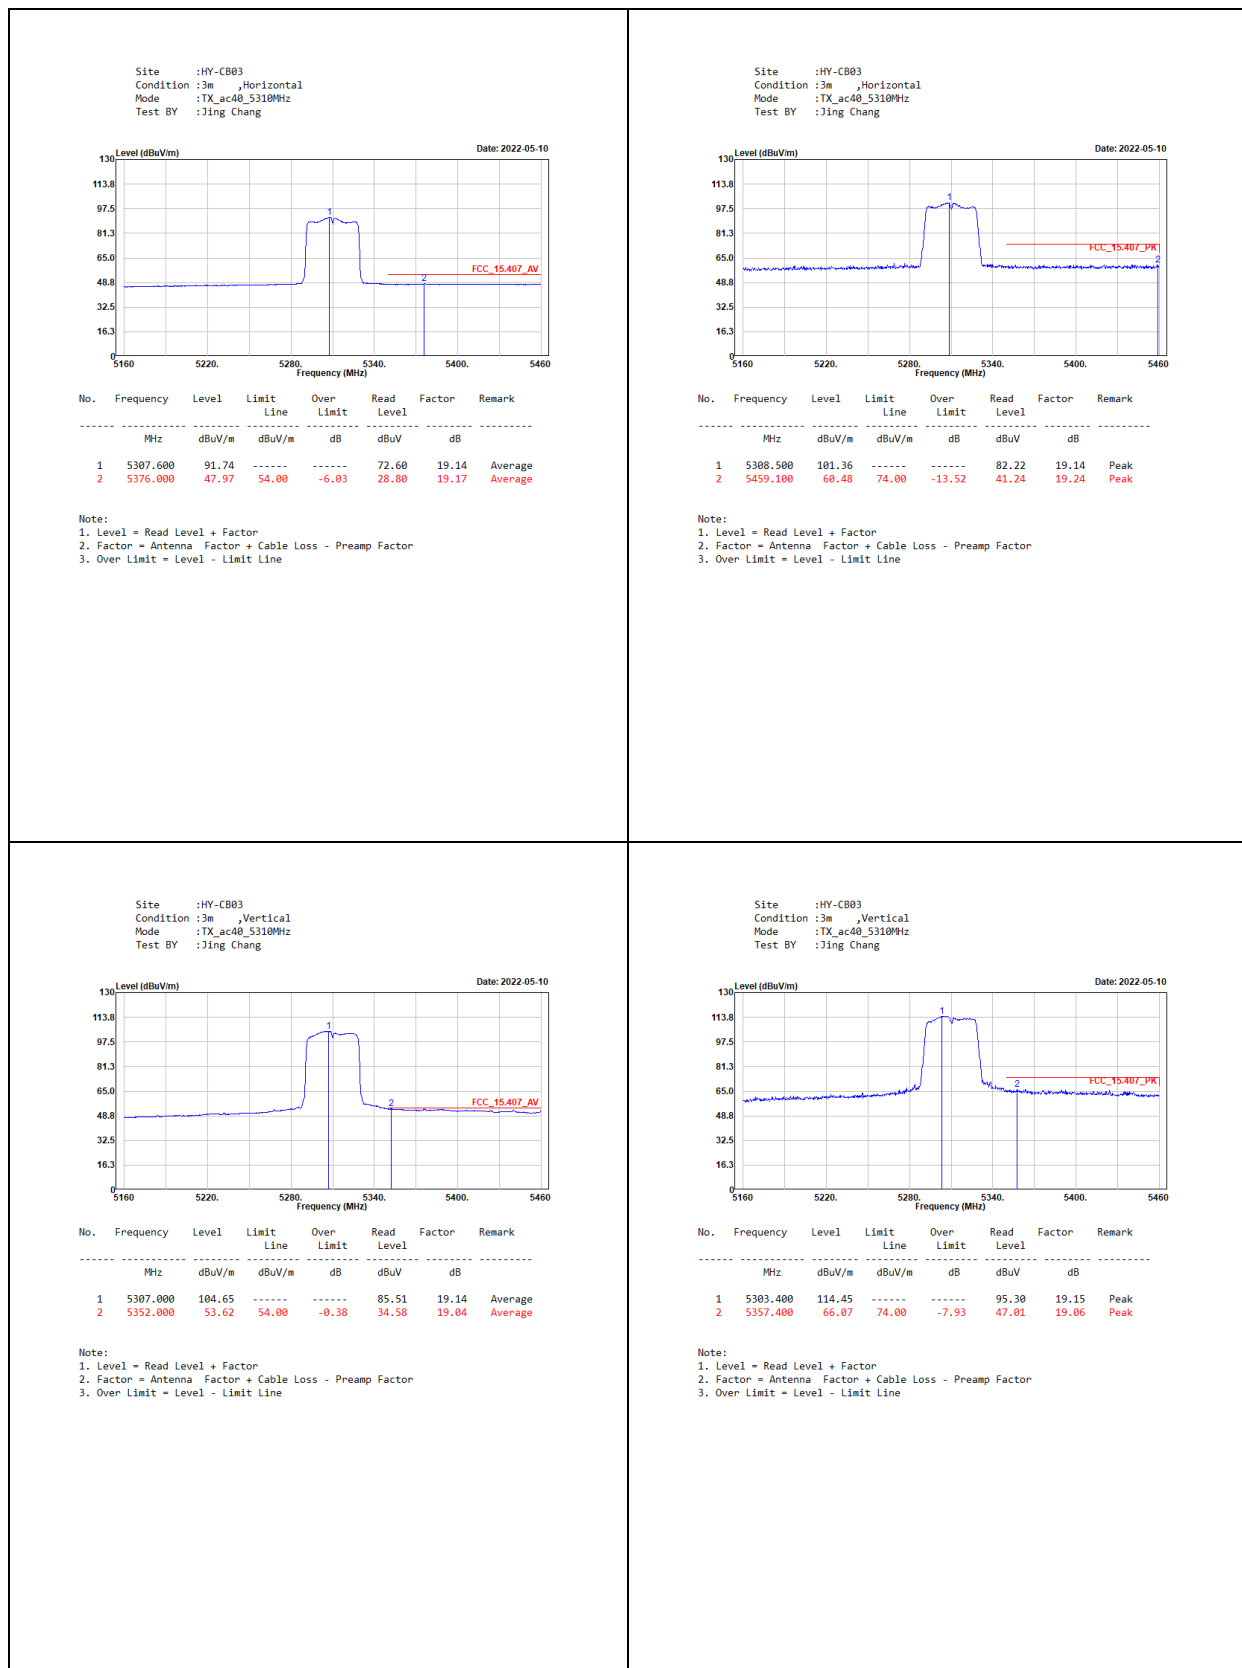




Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5670MHz
Test BY :Jing Chang

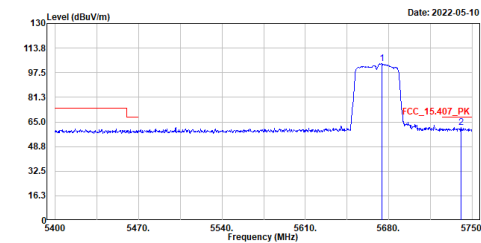

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5674.050	103.64	-----	-----	84.15	19.49	Peak
2	5740.550	61.20	68.22	-7.02	41.34	19.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5670MHz
Test BY :Jing Chang

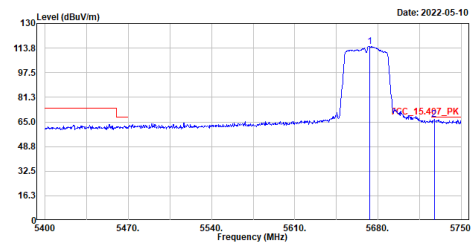

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5673.350	114.90	-----	-----	95.41	19.49	Peak
2	5727.250	66.61	68.22	-1.61	46.81	19.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac40_5755MHz
Test BY :Jing Chang

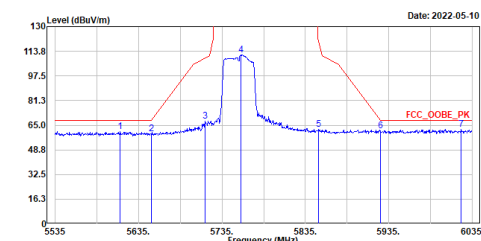

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5613.000	60.86	68.20	-7.34	41.31	19.55	Peak
2	5650.000	59.26	68.21	-8.95	39.95	19.31	Peak
3	5715.000	67.62	109.40	-41.78	47.89	19.73	Peak
4	5758.000	111.34	-----	-----	91.44	19.90	Peak
5	5851.000	62.12	119.92	-57.80	42.05	20.07	Peak
6	5925.000	61.29	68.21	-6.92	40.82	20.47	Peak
7	6022.000	62.47	68.20	-5.73	41.77	20.70	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac40_5755MHz
Test BY :Jing Chang

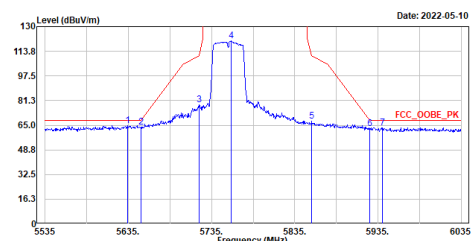


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5634.000	64.73	68.20	-3.47	45.31	19.42	Peak
2	5650.000	63.86	68.21	-4.35	44.55	19.31	Peak
3	5720.500	78.30	111.94	-33.64	58.53	19.77	Peak
4	5759.000	120.45	-----	-----	100.55	19.90	Peak
5	5855.500	67.68	110.66	-42.98	47.59	20.09	Peak
6	5925.000	62.84	68.21	-5.37	42.37	20.47	Peak
7	5940.500	63.43	68.20	-4.77	42.91	20.52	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

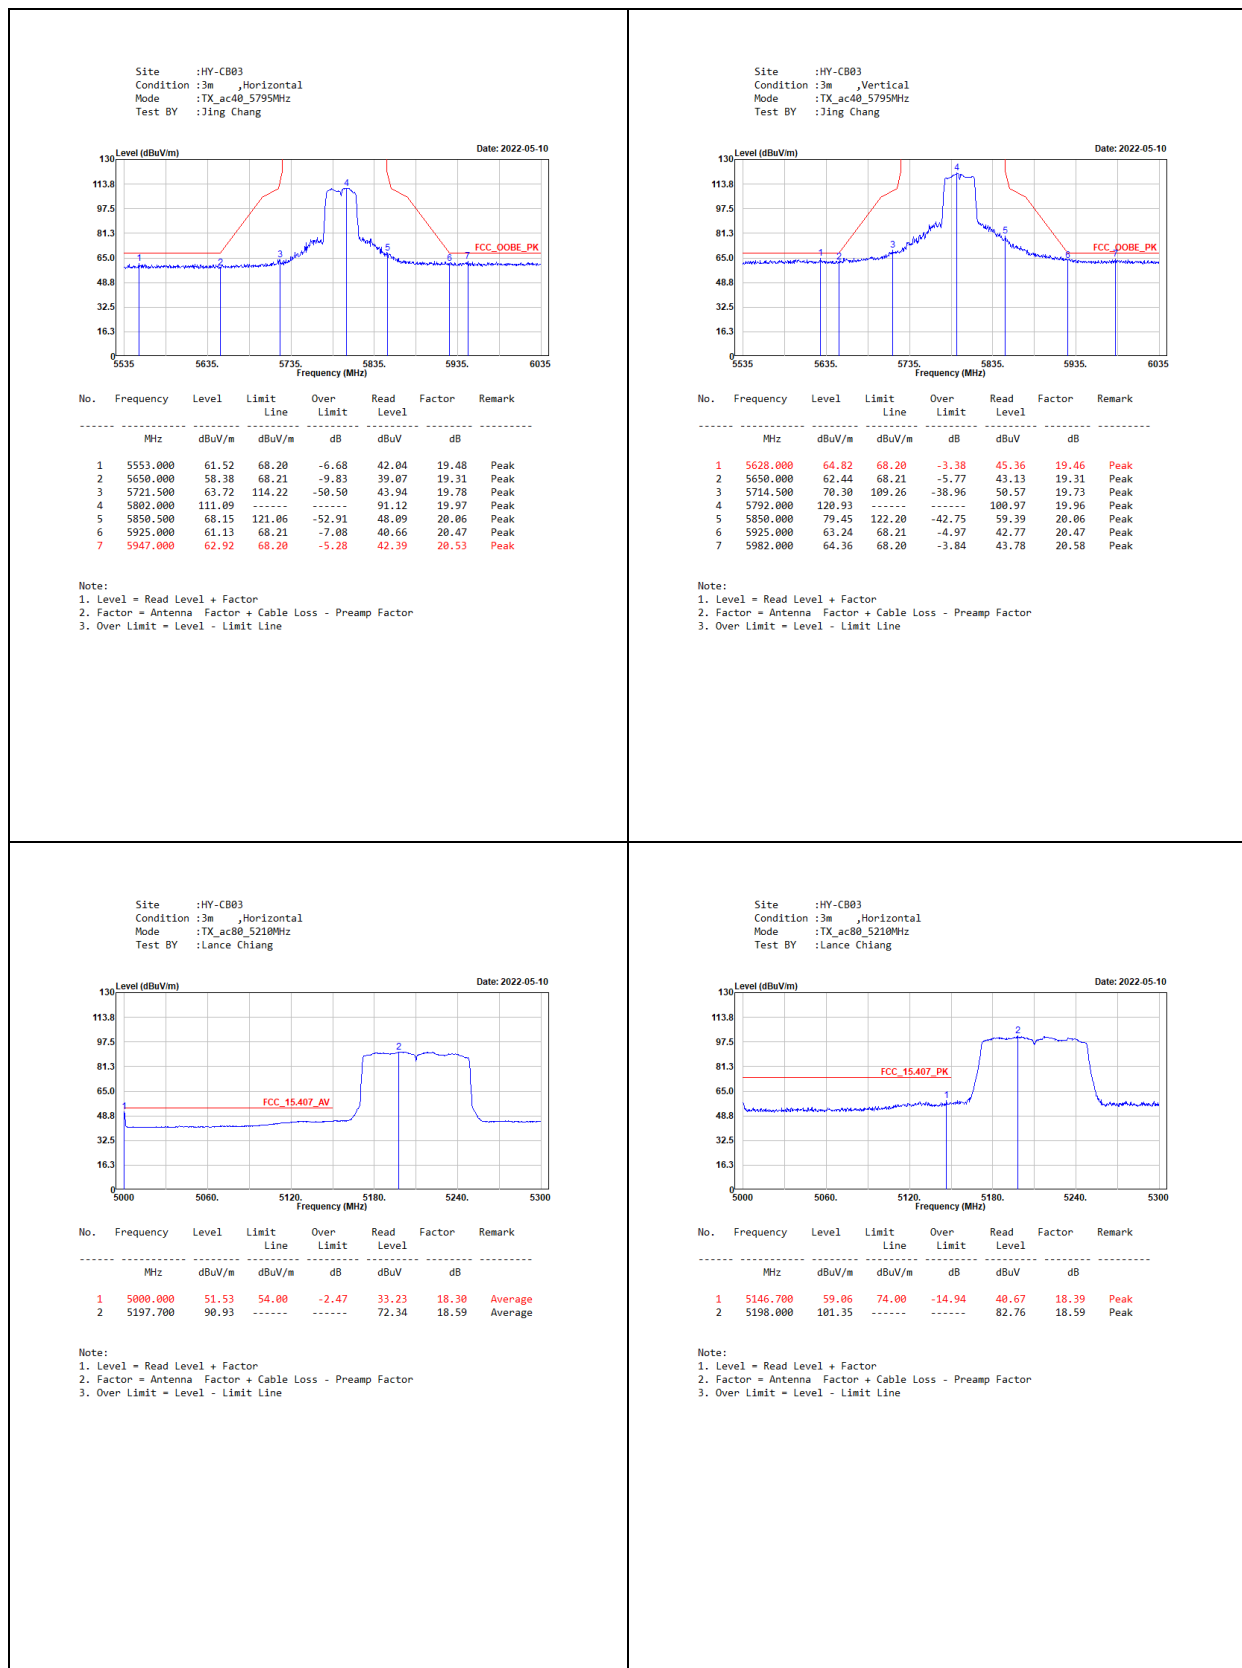


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5210MHz
Test BY :Lance Chiang

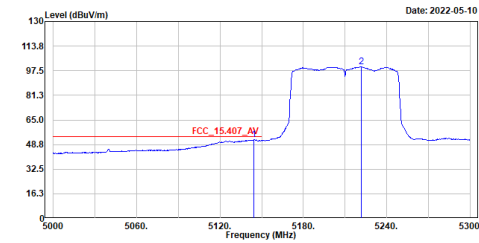

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5144.600	52.02	54.00	-1.98	33.63	18.39	Average
2	5221.700	100.05	-----	-----	81.32	18.73	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5210MHz
Test BY :Lance Chiang

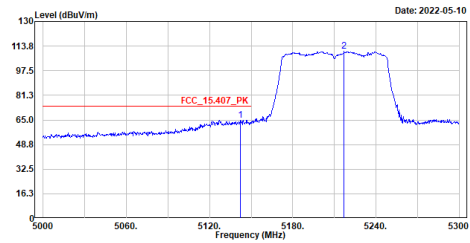

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5142.200	64.94	74.00	-9.06	46.56	18.38	Peak
2	5216.900	110.17	-----	-----	91.46	18.71	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5290MHz
Test BY :Lance Chiang

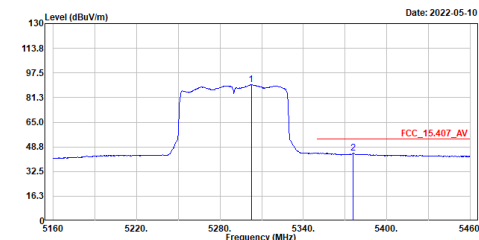

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5302.500	89.75	-----	-----	70.60	19.15	Average
2	5376.000	44.74	54.00	-9.26	25.57	19.17	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5290MHz
Test BY :Lance Chiang

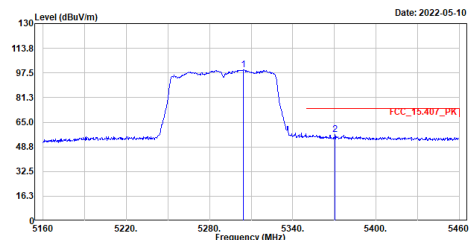

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5304.600	99.41	-----	-----	80.27	19.14	Peak
2	5370.600	56.68	74.00	-17.32	37.54	19.14	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5290MHz
Test BY :Lance Chiang

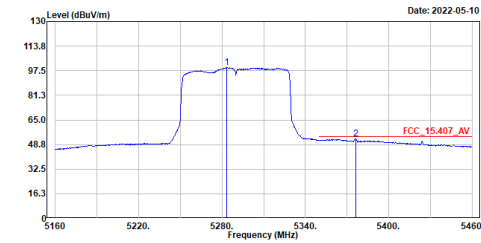

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5283.600	99.54	-----	-----	88.47	19.07	Average
2	5376.300	52.62	54.00	-1.38	33.44	19.18	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5290MHz
Test BY :Lance Chiang

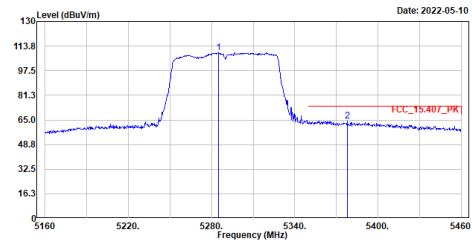

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5284.800	109.53	-----	-----	90.45	19.08	Peak
2	5377.800	64.39	74.00	-9.61	45.20	19.19	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5530MHz
Test BY :Lance Chiang

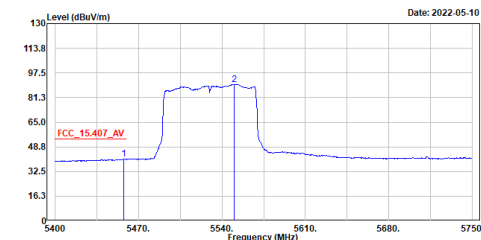

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5457.750	40.59	54.00	-13.41	21.35	19.24	Average
2	5550.150	89.78	-----	-----	70.32	19.46	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5530MHz
Test BY :Lance Chiang

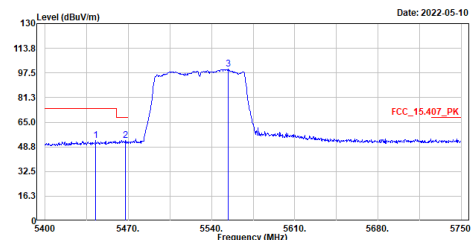

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB	Remark
1	5442.700	52.92	74.00	-21.08	33.69	19.23	Peak
2	5467.550	52.79	68.22	-15.43	33.52	19.27	Peak
3	5554.000	99.89	-----	-----	80.41	19.48	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5530MHz
Test BY :Lance Chiang

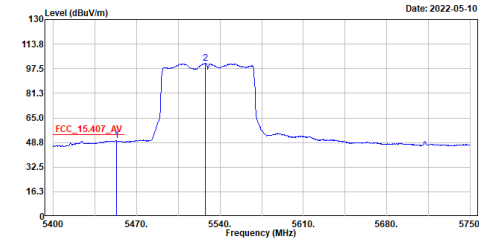

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5453.200	49.93	54.00	-4.07	30.71	19.22	Average
2	5527.750	100.99	-----	-----	81.57	19.42	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5530MHz
Test BY :Lance Chiang

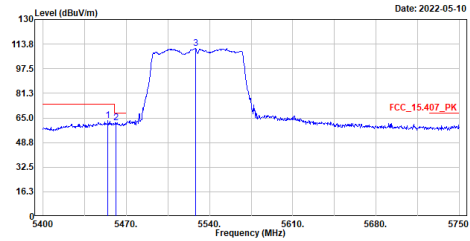

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5454.600	63.13	74.00	-10.87	43.91	19.22	Peak
2	5461.600	61.92	68.22	-6.30	42.67	19.25	Peak
3	5528.100	110.90	-----	-----	91.48	19.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line


Site :HY-CB03
Condition :3m ,Horizontal
Mode :TX_ac80_5775MHz
Test BY :Lance Chiang

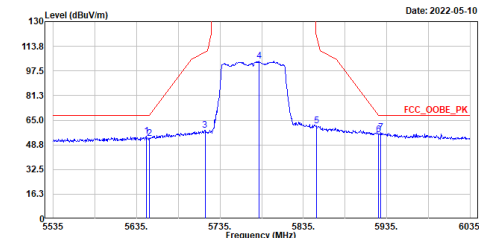

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5646.500	54.22	68.20	-13.98	34.88	19.34	Peak
2	5650.000	52.79	68.21	-15.42	33.48	19.31	Peak
3	5717.000	58.21	109.96	-51.75	38.47	19.74	Peak
4	5782.000	104.18	-----	-----	84.23	19.95	Peak
5	5850.500	61.26	121.06	-59.80	41.20	20.06	Peak
6	5925.000	55.39	68.21	-12.82	34.92	20.47	Peak
7	5928.000	56.69	68.20	-11.51	36.20	20.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

Site :HY-CB03
Condition :3m ,Vertical
Mode :TX_ac80_5775MHz
Test BY :Lance Chiang

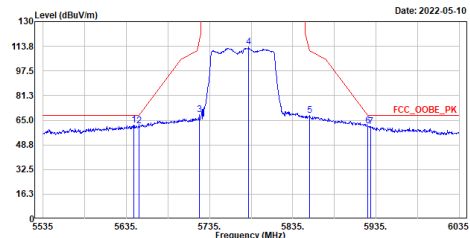


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB	
1	5644.000	62.03	68.20	-6.17	42.67	19.36	Peak
2	5650.000	61.34	68.21	-6.87	42.03	19.31	Peak
3	5722.500	68.63	116.50	-47.87	48.85	19.78	Peak
4	5782.000	113.10	-----	-----	93.15	19.95	Peak
5	5855.500	68.19	110.66	-42.47	48.10	20.09	Peak
6	5925.000	61.15	68.21	-7.06	40.68	20.47	Peak
7	5928.500	60.97	68.20	-7.23	40.48	20.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line

5. Duty Cycle

5.1. Test Setup

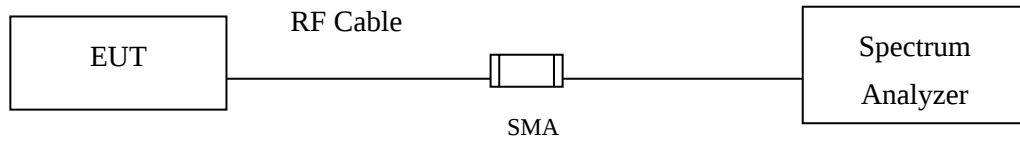

5.2. Test Procedure

The EUT was setup according to ANSI C63.10 2013; tested according to U-NII test procedure of KDB789033 for compliance to FCC 47CFR 15.407 requirements.

5.3. Test Result of Duty Cycle

Product : Wireless module
Test Item : Duty Cycle

Duty Cycle Formula:

Duty Cycle = $T_{on} / (T_{on} + T_{off})$

Duty Factor = $10 \log (1/\text{Duty Cycle})$

Results:

5GHz band	Ton (ms)	Ton + Toff (ms)	Duty Cycle (%)	Duty Factor (dB)
802.11 a	2.0500	2.1450	95.57	0.20
802.11 ac20	5.0000	5.1000	98.04	0.09
802.11 ac40	2.3900	2.5300	94.47	0.25
802.11 ac80	1.1300	1.2300	91.87	0.37

6. EMI Reduction Method During Compliance Testing

No modification was made during testing.