






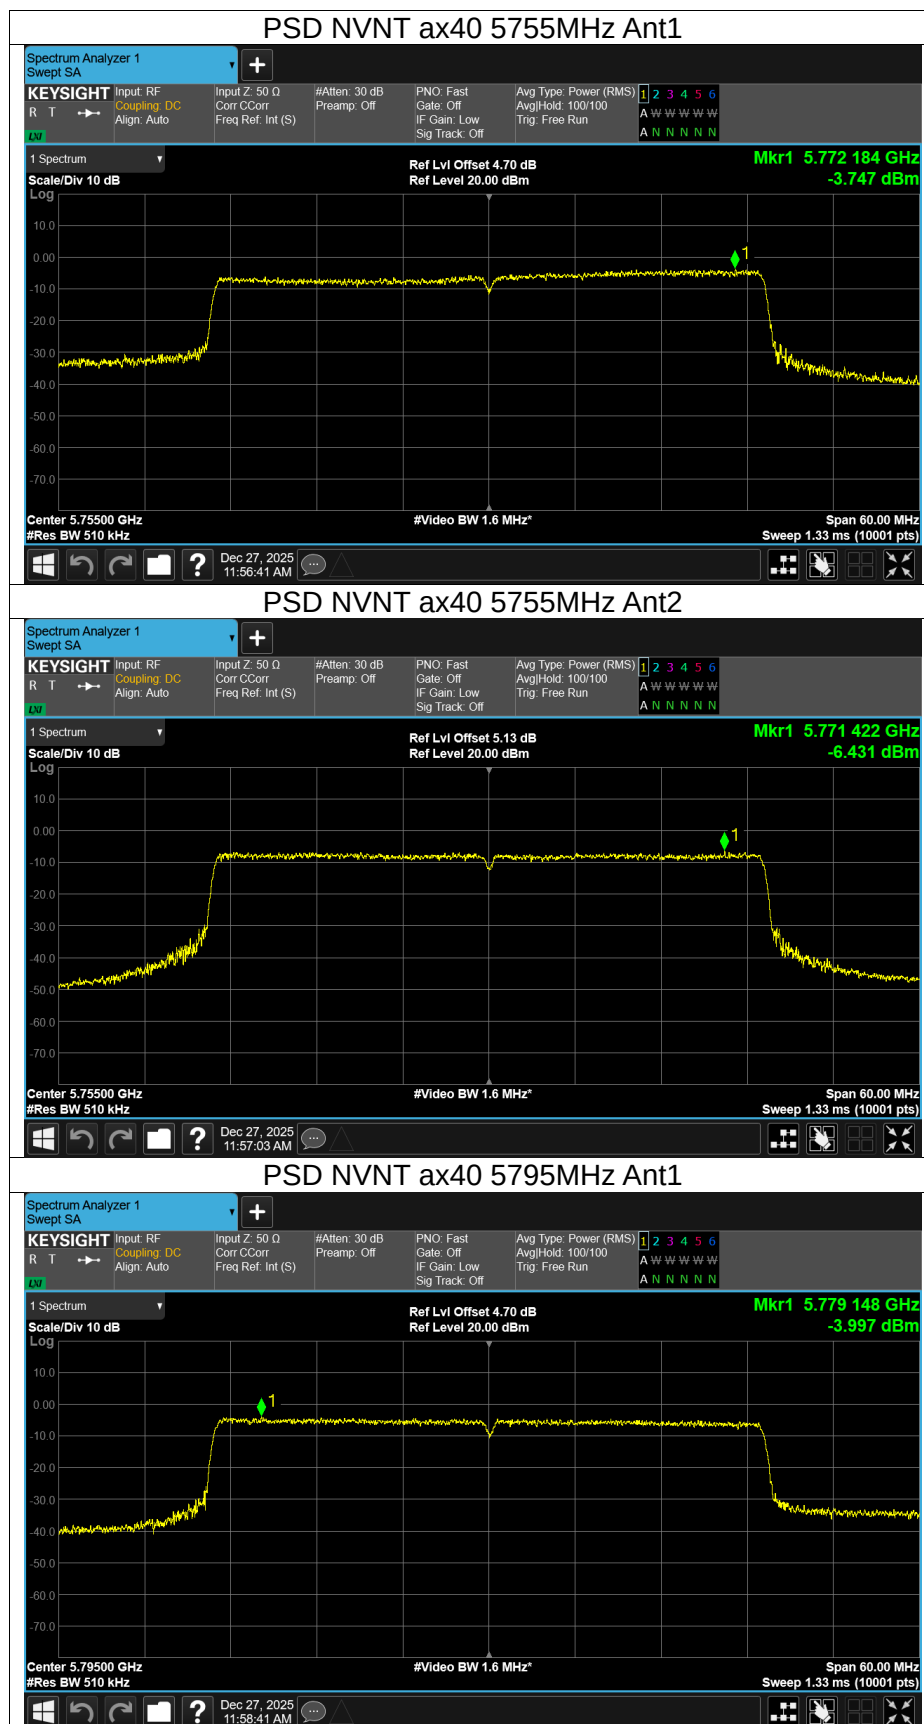

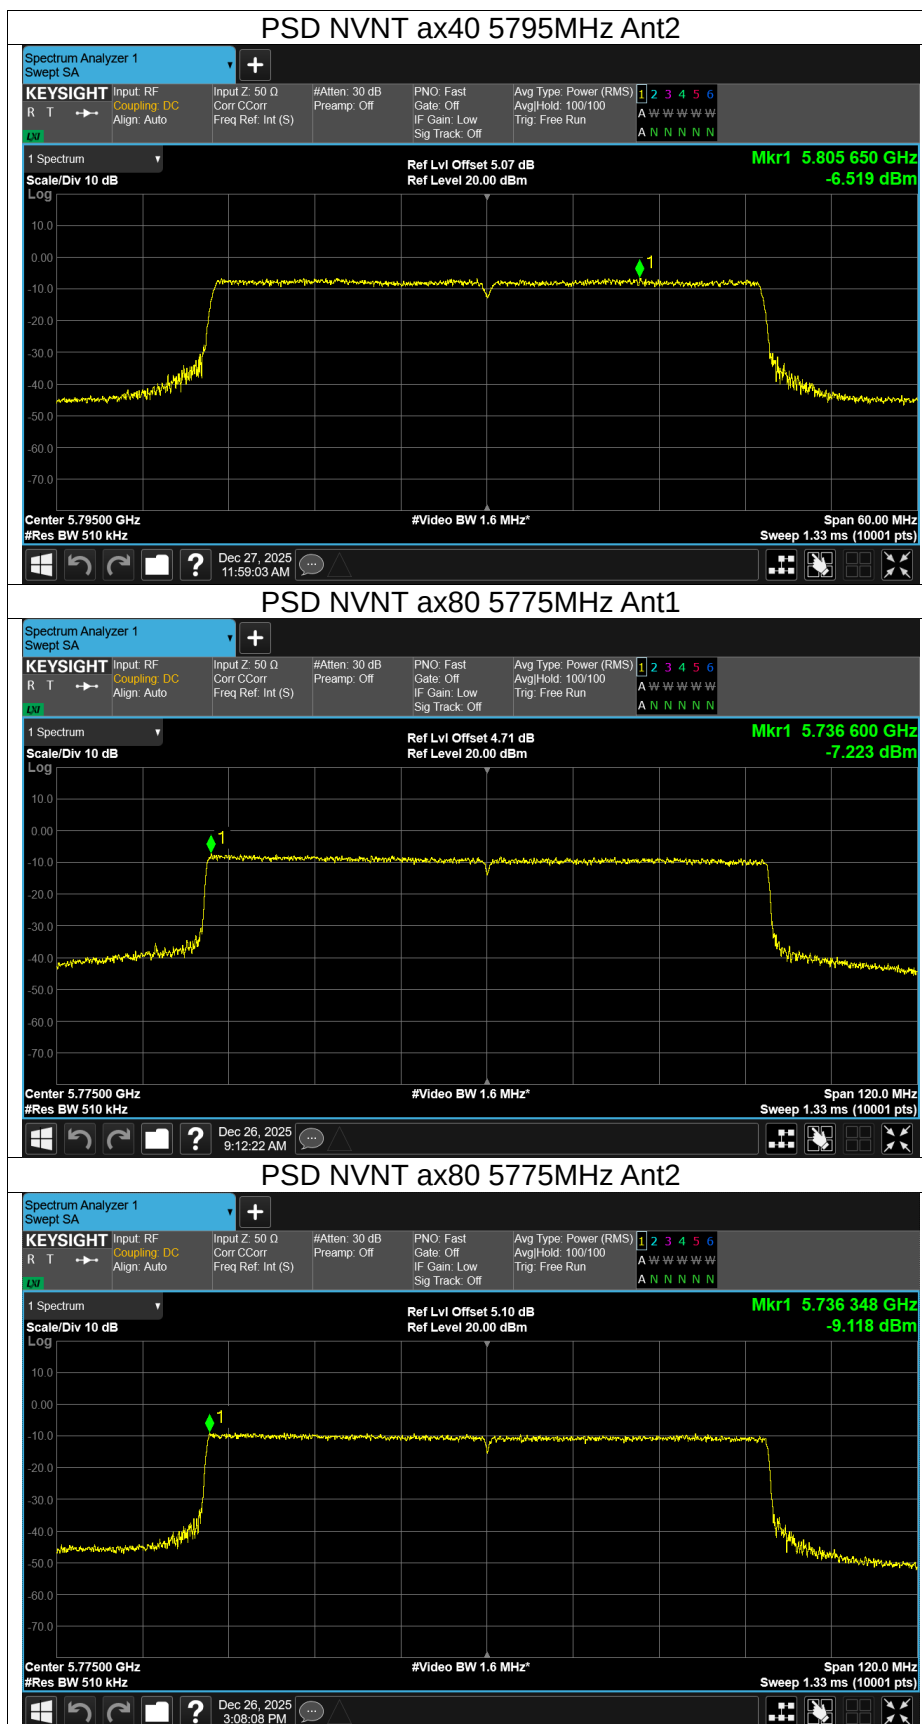

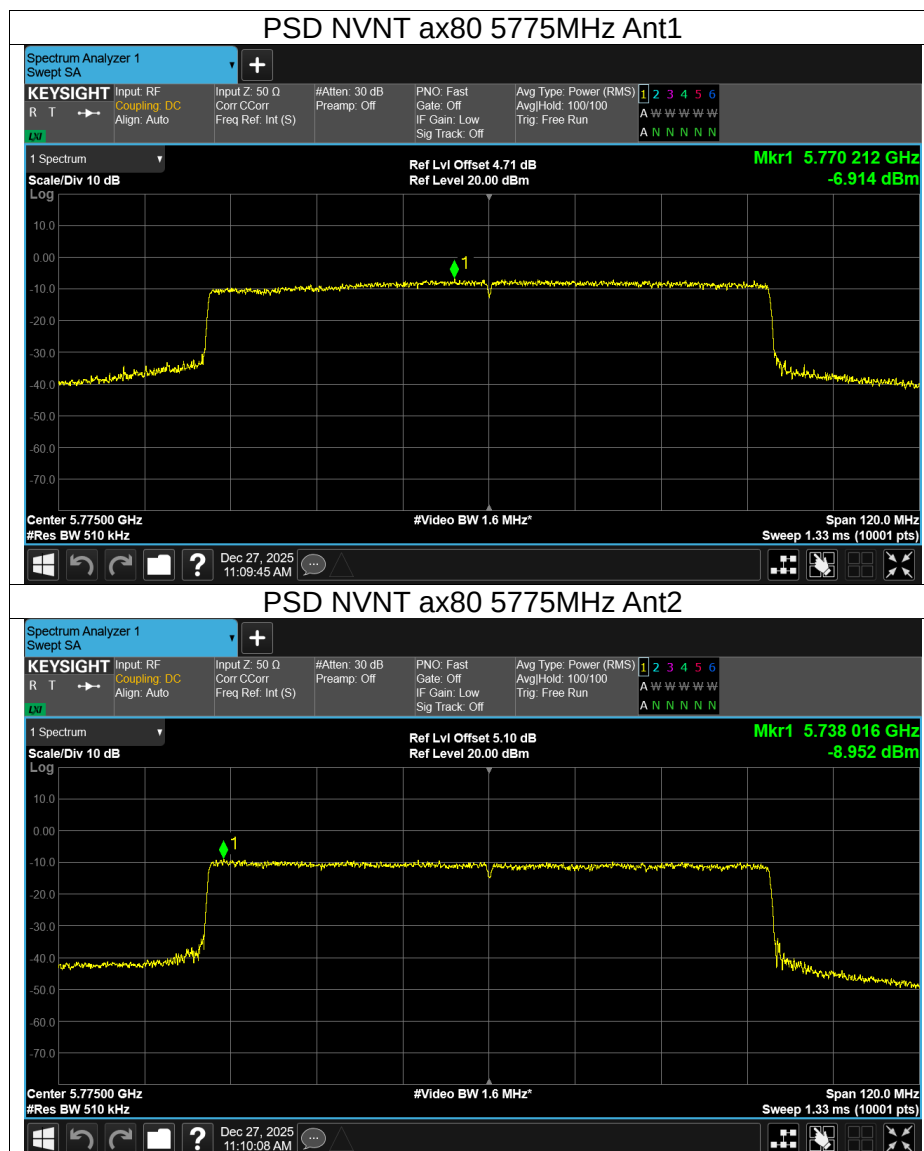

Band Edge

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant1	-42.72	-27	Pass
NVNT	a	5240	Ant1	-45.77	-27	Pass
NVNT	a	5260	Ant1	-43.56	-27	Pass
NVNT	a	5320	Ant1	-44.18	-27	Pass
NVNT	a	5500	Ant1	-39.9	-27	Pass
NVNT	a	5700	Ant1	-43.34	-27	Pass
NVNT	a	5180	Ant2	-42.64	-27	Pass
NVNT	a	5240	Ant2	-45.23	-27	Pass
NVNT	a	5260	Ant2	-43.1	-27	Pass
NVNT	a	5320	Ant2	-44.53	-27	Pass
NVNT	a	5500	Ant2	-41.08	-27	Pass
NVNT	a	5700	Ant2	-44.32	-27	Pass
NVNT	n20	5180	Ant1	-42.27	-27	Pass
NVNT	n20	5240	Ant1	-45.65	-27	Pass
NVNT	n20	5260	Ant1	-43.48	-27	Pass
NVNT	n20	5320	Ant1	-43.94	-27	Pass
NVNT	n20	5500	Ant1	-39.41	-27	Pass
NVNT	n20	5700	Ant1	-42.52	-27	Pass
NVNT	n20	5180	Ant2	-43.11	-27	Pass
NVNT	n20	5240	Ant2	-45.88	-27	Pass
NVNT	n20	5260	Ant2	-43.18	-27	Pass
NVNT	n20	5320	Ant2	-44.94	-27	Pass
NVNT	n20	5500	Ant2	-42.95	-27	Pass
NVNT	n20	5700	Ant2	-43.43	-27	Pass
NVNT	n40	5190	Ant1	-40.86	-27	Pass
NVNT	n40	5230	Ant1	-45.09	-27	Pass
NVNT	n40	5270	Ant1	-41.82	-27	Pass
NVNT	n40	5310	Ant1	-41.74	-27	Pass
NVNT	n40	5510	Ant1	-38.39	-27	Pass
NVNT	n40	5670	Ant1	-43.4	-27	Pass
NVNT	n40	5190	Ant2	-37.5	-27	Pass
NVNT	n40	5230	Ant2	-45.4	-27	Pass
NVNT	n40	5270	Ant2	-43.84	-27	Pass
NVNT	n40	5310	Ant2	-38.18	-27	Pass
NVNT	n40	5510	Ant2	-37.57	-27	Pass
NVNT	n40	5670	Ant2	-43.72	-27	Pass
NVNT	ac20	5180	Ant1	-42.6	-27	Pass
NVNT	ac20	5240	Ant1	-45.76	-27	Pass
NVNT	ac20	5260	Ant1	-43.1	-27	Pass
NVNT	ac20	5320	Ant1	-44.3	-27	Pass
NVNT	ac20	5500	Ant1	-39.85	-27	Pass
NVNT	ac20	5700	Ant1	-42.42	-27	Pass
NVNT	ac20	5180	Ant2	-42.45	-27	Pass
NVNT	ac20	5240	Ant2	-45.51	-27	Pass
NVNT	ac20	5260	Ant2	-42.86	-27	Pass
NVNT	ac20	5320	Ant2	-44.78	-27	Pass
NVNT	ac20	5500	Ant2	-43.04	-27	Pass
NVNT	ac20	5700	Ant2	-42.8	-27	Pass
NVNT	ac40	5190	Ant1	-42.11	-27	Pass
NVNT	ac40	5230	Ant1	-45.16	-27	Pass
NVNT	ac40	5270	Ant1	-43.5	-27	Pass
NVNT	ac40	5310	Ant1	-43.47	-27	Pass
NVNT	ac40	5510	Ant1	-37.37	-27	Pass
NVNT	ac40	5670	Ant1	-42.9	-27	Pass



NVNT	ac40	5190	Ant2	-37.63	-27	Pass
NVNT	ac40	5230	Ant2	-45	-27	Pass
NVNT	ac40	5270	Ant2	-43.05	-27	Pass
NVNT	ac40	5310	Ant2	-37.98	-27	Pass
NVNT	ac40	5510	Ant2	-39.04	-27	Pass
NVNT	ac40	5670	Ant2	-43.57	-27	Pass
NVNT	ac80	5210	Ant1	-38.94	-27	Pass
NVNT	ac80	5290	Ant1	-40.53	-27	Pass
NVNT	ac80	5530	Ant1	-33.72	-27	Pass
NVNT	ac80	5610	Ant1	-42.65	-27	Pass
NVNT	ac80	5210	Ant2	-38.38	-27	Pass
NVNT	ac80	5290	Ant2	-41.38	-27	Pass
NVNT	ac80	5530	Ant2	-34.34	-27	Pass
NVNT	ac80	5610	Ant2	-44.65	-27	Pass
NVNT	ac160	5250	Ant1	-30.54	-27	Pass
NVNT	ac160	5570	Ant1	-30.98	-27	Pass
NVNT	ac160	5250	Ant2	-34.1	-27	Pass
NVNT	ac160	5570	Ant2	-29.93	-27	Pass
NVNT	ax20	5180	Ant1	-29.69	-27	Pass
NVNT	ax20	5240	Ant1	-44.64	-27	Pass
NVNT	ax20	5260	Ant1	-43.6	-27	Pass
NVNT	ax20	5320	Ant1	-38.46	-27	Pass
NVNT	ax20	5500	Ant1	-33.97	-27	Pass
NVNT	ax20	5700	Ant1	-34.26	-27	Pass
NVNT	ax20	5180	Ant2	-30.86	-27	Pass
NVNT	ax20	5240	Ant2	-45.75	-27	Pass
NVNT	ax20	5260	Ant2	-41.92	-27	Pass
NVNT	ax20	5320	Ant2	-29.78	-27	Pass
NVNT	ax20	5500	Ant2	-31.22	-27	Pass
NVNT	ax20	5700	Ant2	-35.36	-27	Pass
NVNT	ax40	5190	Ant1	-37.92	-27	Pass
NVNT	ax40	5230	Ant1	-44.68	-27	Pass
NVNT	ax40	5270	Ant1	-40.79	-27	Pass
NVNT	ax40	5310	Ant1	-33.75	-27	Pass
NVNT	ax40	5510	Ant1	-29.3	-27	Pass
NVNT	ax40	5670	Ant1	-37.46	-27	Pass
NVNT	ax40	5190	Ant2	-27.71	-27	Pass
NVNT	ax40	5230	Ant2	-42.42	-27	Pass
NVNT	ax40	5270	Ant2	-42.64	-27	Pass
NVNT	ax40	5310	Ant2	-30.21	-27	Pass
NVNT	ax40	5510	Ant2	-38	-27	Pass
NVNT	ax40	5670	Ant2	-32.83	-27	Pass
NVNT	ax80	5210	Ant1	-35.41	-27	Pass
NVNT	ax80	5290	Ant1	-34.62	-27	Pass
NVNT	ax80	5530	Ant1	-27.46	-27	Pass
NVNT	ax80	5610	Ant1	-35.44	-27	Pass
NVNT	ax80	5210	Ant2	-35.98	-27	Pass
NVNT	ax80	5290	Ant2	-27.13	-27	Pass
NVNT	ax80	5530	Ant2	-30.89	-27	Pass
NVNT	ax80	5610	Ant2	-37.95	-27	Pass
NVNT	ax160	5250	Ant1	-30.41	-27	Pass
NVNT	ax160	5570	Ant1	-30.04	-27	Pass
NVNT	ax160	5250	Ant2	-31.5	-27	Pass
NVNT	ax160	5570	Ant2	-34.98	-27	Pass

Condition	Mode	Frequency (MHz)	Antenna	Max Value (dBm)	Limit (dBm)	Verdict
-----------	------	-----------------	---------	-----------------	-------------	---------



NVNT	a	5745	Ant1	-36.64	15.6	Pass
NVNT	a	5825	Ant1	-41.86	15.6	Pass
NVNT	a	5745	Ant2	-42.24	15.6	Pass
NVNT	a	5825	Ant2	-42.9	15.6	Pass
NVNT	n20	5745	Ant1	-37.15	15.6	Pass
NVNT	n20	5825	Ant1	-37.83	15.6	Pass
NVNT	n20	5745	Ant2	-36.49	15.6	Pass
NVNT	n20	5825	Ant2	-41.67	15.6	Pass
NVNT	n40	5755	Ant1	-33.83	15.6	Pass
NVNT	n40	5795	Ant1	-41.26	15.6	Pass
NVNT	n40	5755	Ant2	-36.33	15.6	Pass
NVNT	n40	5795	Ant2	-43.18	15.6	Pass
NVNT	ac20	5745	Ant1	-36.12	15.6	Pass
NVNT	ac20	5825	Ant1	-40.67	15.6	Pass
NVNT	ac20	5745	Ant2	-37.96	15.6	Pass
NVNT	ac20	5825	Ant2	-42.5	15.6	Pass
NVNT	ac40	5755	Ant1	-34.72	15.6	Pass
NVNT	ac40	5795	Ant1	-40.53	15.6	Pass
NVNT	ac40	5755	Ant2	-35.76	15.6	Pass
NVNT	ac40	5795	Ant2	-43.45	15.6	Pass
NVNT	ac80	5775	Ant1	-29.8	15.6	Pass
NVNT	ac80	5775	Ant2	-31.28	15.6	Pass
NVNT	ax20	5745	Ant1	-26.57	15.6	Pass
NVNT	ax20	5825	Ant1	-18.62	15.6	Pass
NVNT	ax20	5745	Ant2	-20.77	15.6	Pass
NVNT	ax20	5825	Ant2	-28.63	15.6	Pass
NVNT	ax40	5755	Ant1	-13.77	15.6	Pass
NVNT	ax40	5795	Ant1	-25.05	15.6	Pass
NVNT	ax40	5755	Ant2	-29.39	15.6	Pass
NVNT	ax40	5795	Ant2	-38.2	15.6	Pass
NVNT	ax80	5775	Ant1	-19.65	15.6	Pass
NVNT	ax80	5775	Ant2	-26.26	15.6	Pass

