


TX_ac20_5785MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5785MHz
Test by :Bob Chiu

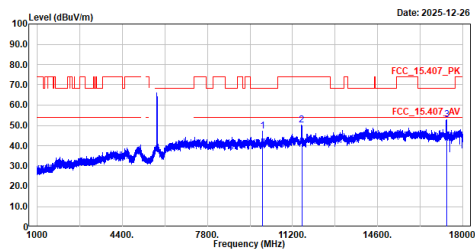


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	9999.906	47.10	68.22	-21.12	52.40	-5.30	Peak
2	11570.000	50.23	74.00	-23.77	52.85	-2.62	Peak
3	17355.000	52.72	68.22	-15.50	49.62	3.10	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5785MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5785MHz
Test by :Bob Chiu

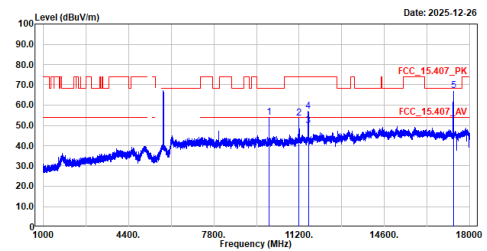


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	9999.906	53.84	68.22	-14.38	59.14	-5.30	Peak
2	11198.410	53.64	74.00	-20.36	57.00	-3.36	Peak
3	11570.000	49.79	54.00	-4.21	52.41	-2.62	Average
4	11570.000	57.11	74.00	-16.89	59.73	-2.62	Peak
5	17355.000	67.27	68.22	-0.95	64.17	3.10	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5825MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac20_5825MHz
Test by :Bob Chiu

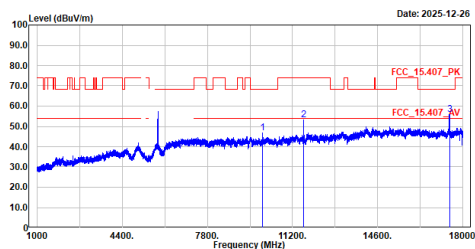


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	9999.906	46.65	68.22	-21.57	51.95	-5.30	Peak
2	11650.000	53.38	74.00	-20.62	55.94	-2.56	Peak
3	17475.000	56.01	68.22	-12.21	52.59	3.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5825MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac20_5825MHz
Test by :Bob Chiu

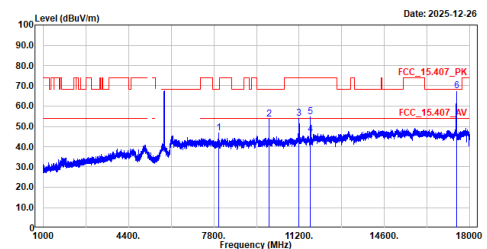


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7998.688	46.75	68.22	-21.47	52.72	-5.97	Peak
2	9999.906	53.54	68.22	-14.68	58.84	-5.30	Peak
3	11190.440	53.86	74.00	-20.14	57.27	-3.41	Peak
4	11650.000	45.95	54.00	-8.05	48.51	-2.56	Average
5	11650.000	54.71	74.00	-19.29	57.27	-2.56	Peak
6	17475.000	67.67	68.22	-0.55	64.25	3.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5190MHz
Test by :Bob Chiu

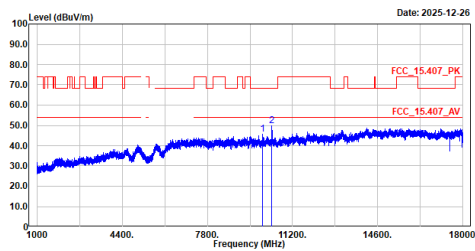


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10000.440	45.81	68.22	-22.41	51.11	-5.30	Peak
2	10380.000	49.71	68.22	-18.51	54.68	-4.97	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5190MHz
Test by :Bob Chiu

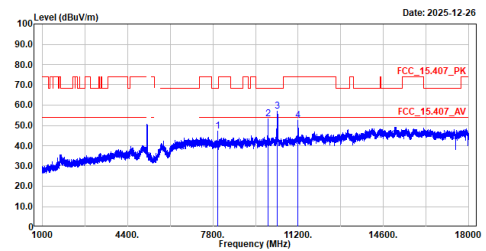


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7992.313	47.27	68.22	-20.95	53.23	-5.96	Peak
2	9999.906	53.11	68.22	-15.11	58.41	-5.30	Peak
3	10380.000	57.11	68.22	-11.11	62.08	-4.97	Peak
4	11197.340	52.55	74.00	-21.45	55.92	-3.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5230MHz
Test by :Bob Chiu

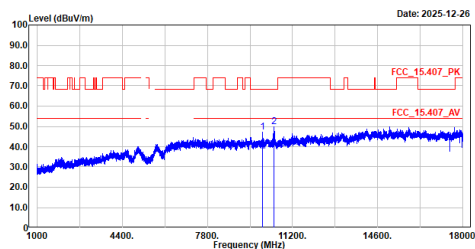


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	9999.906	47.16	68.22	-21.06	52.46	-5.30	Peak
2	10460.000	49.73	68.22	-18.49	54.72	-4.99	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5230MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5230MHz
Test by :Bob Chiu

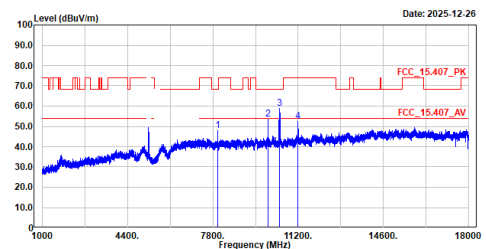


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.906	48.09	68.22	-20.13	54.06	-5.97	Peak
2	9999.906	53.62	68.22	-14.60	58.92	-5.30	Peak
3	10460.000	59.02	68.22	-9.20	64.01	-4.99	Peak
4	11196.280	52.54	74.00	-21.46	55.92	-3.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5270MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5270MHz
Test by :Bob Chiu

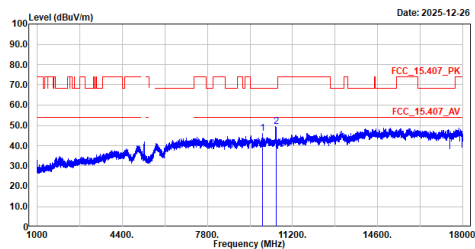


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	9999.906	46.12	68.22	-22.10	51.42	-5.30	Peak
2	10540.000	49.40	68.22	-18.82	54.34	-4.94	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5270MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5270MHz
Test by :Bob Chiu

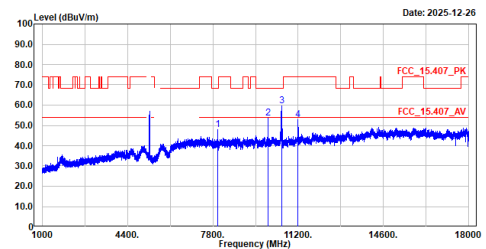


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7992.844	47.75	68.22	-20.47	53.71	-5.96	Peak
2	10000.440	53.45	68.22	-14.77	58.75	-5.30	Peak
3	10540.000	59.48	68.22	-8.74	64.42	-4.94	Peak
4	11189.380	53.01	74.00	-20.99	56.43	-3.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5310MHz
Test by :Bob Chiu

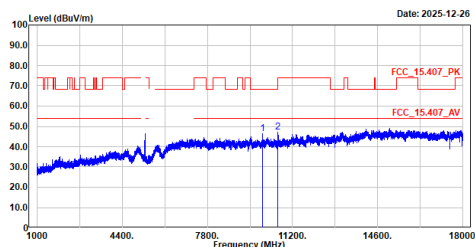


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	9999.906	46.43	68.22	-21.79	51.73	-5.30	Peak
2	10620.000	47.23	74.00	-26.77	51.97	-4.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5310MHz_V


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5310MHz
Test by :Bob Chiu

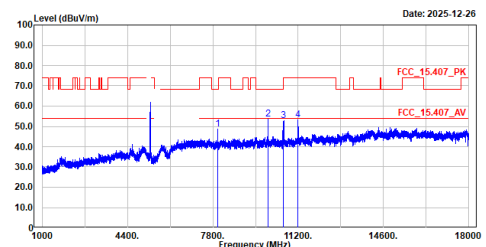

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7994.969	48.76	68.22	-19.46	54.73	-5.97	Peak
2	9999.906	53.63	68.22	-14.59	58.93	-5.30	Peak
3	10620.000	52.75	74.00	-21.25	57.49	-4.74	Peak
4	11197.880	53.27	74.00	-20.73	56.63	-3.36	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5510MHz_H

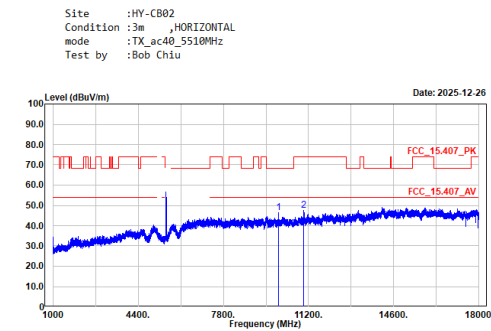

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	9999.906	46.56	68.22	-21.66	51.86	-5.30	Peak
2	11020.000	47.50	74.00	-26.50	51.65	-4.15	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5510MHz_V

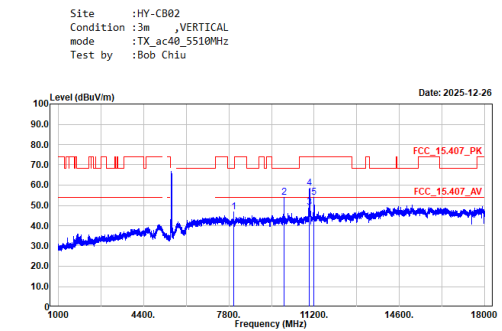

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7996.563	46.89	68.22	-21.33	52.85	-5.96	Peak
2	9999.906	53.93	68.22	-14.29	59.23	-5.30	Peak
3	11020.000	49.05	54.00	-4.95	53.20	-4.15	Average
4	11020.000	58.31	74.00	-15.69	62.46	-4.15	Peak
5	11198.410	53.78	74.00	-20.22	57.14	-3.36	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5550MHz_H

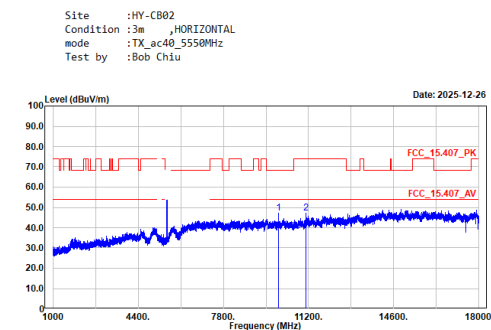

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	9999.906	47.16	68.22	-21.06	52.46	-5.30	Peak
2	11100.000	47.01	74.00	-26.99	50.86	-3.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5550MHz_V

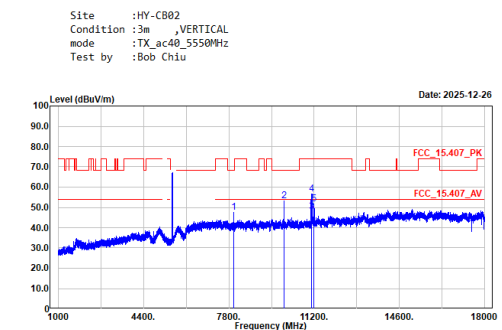


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7992.844	47.68	68.22	-20.54	53.64	-5.96	Peak
2	9999.906	53.21	68.22	-15.01	58.51	-5.30	Peak
3	11100.000	48.06	54.00	-5.94	51.89	-3.83	Average
4	11100.000	56.65	74.00	-17.35	60.48	-3.83	Peak
5	11193.090	51.73	74.00	-22.27	55.12	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5670MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5670MHz
Test by :Bob Chiu

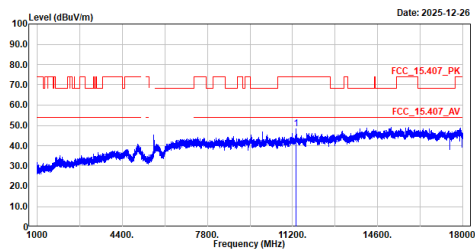


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11340.000	48.20	74.00	-25.80	51.20	-3.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5670MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5670MHz
Test by :Bob Chiu

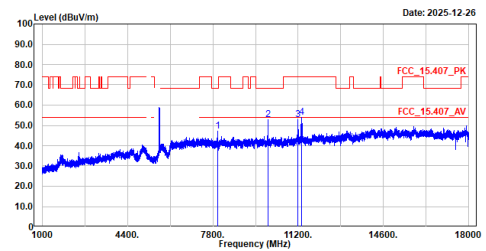


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7998.688	47.09	68.22	-21.13	53.06	-5.97	Peak
2	9999.906	52.94	68.22	-15.28	58.24	-5.30	Peak
3	11187.780	53.00	74.00	-21.00	56.42	-3.42	Peak
4	11340.000	53.93	74.00	-20.07	56.93	-3.00	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5710MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5710MHz
Test by :Bob Chiu

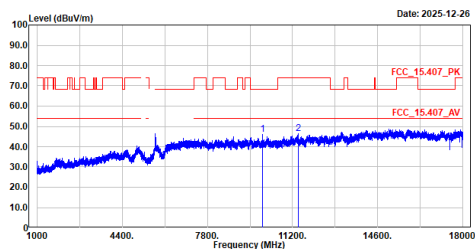


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	9999.906	45.90	68.22	-22.32	51.20	-5.30	Peak
2	11420.000	46.24	74.00	-27.76	49.10	-2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5710MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5710MHz
Test by :Bob Chiu

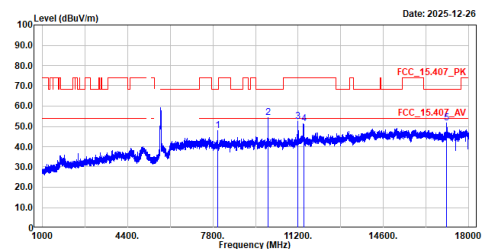


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.031	47.78	68.22	-20.44	53.74	-5.96	Peak
2	9999.906	54.36	68.22	-13.86	59.66	-5.30	Peak
3	11195.220	52.46	74.00	-21.54	55.85	-3.39	Peak
4	11420.000	51.48	74.00	-22.52	54.34	-2.86	Peak
5	17130.000	51.57	68.22	-16.65	48.71	2.86	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5755MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5755MHz
Test by :Bob Chiu

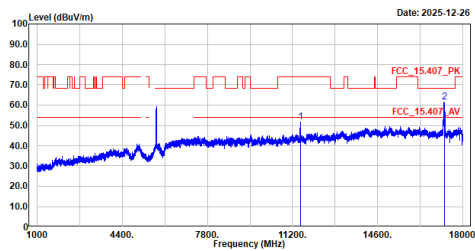


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	51.64	74.00	-22.36	54.41	-2.77	Peak
2	17265.000	61.55	68.22	-6.67	58.82	2.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5755MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5755MHz
Test by :Bob Chiu

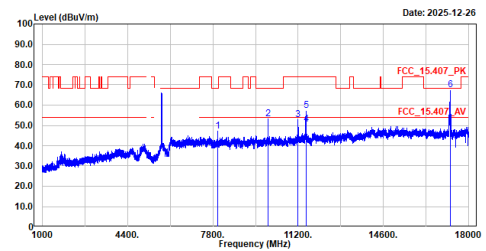


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.563	47.31	68.22	-20.91	53.27	-5.96	Peak
2	9999.906	53.30	68.22	-14.92	58.60	-5.30	Peak
3	11195.750	52.88	74.00	-21.12	56.26	-3.38	Peak
4	11510.000	50.59	54.00	-3.41	53.36	-2.77	Average
5	11510.000	57.42	74.00	-16.58	60.19	-2.77	Peak
6	17265.000	67.65	68.22	-0.57	64.92	2.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac40_5795MHz
Test by :Bob Chiu

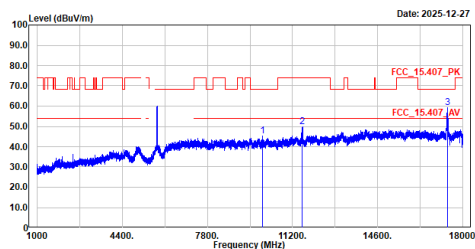


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10000.440	45.42	68.22	-22.80	50.72	-5.30	Peak
2	11590.000	49.73	74.00	-24.27	52.33	-2.60	Peak
3	17385.000	59.34	68.22	-8.88	56.01	3.33	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5795MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac40_5795MHz
Test by :Bob Chiu

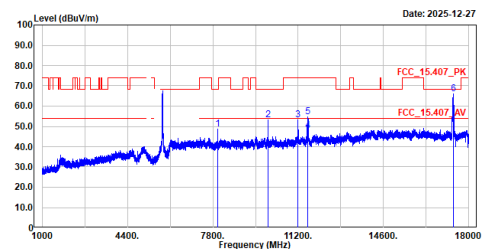


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7994.438	48.56	68.22	-19.66	54.53	-5.97	Peak
2	9999.906	53.15	68.22	-15.07	58.45	-5.30	Peak
3	11194.160	53.30	74.00	-20.70	56.69	-3.39	Peak
4	11590.000	47.74	54.00	-6.26	50.34	-2.60	Average
5	11590.000	54.65	74.00	-19.35	57.25	-2.60	Peak
6	17385.000	66.17	68.22	-2.05	62.84	3.33	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5210MHz
Test by :Bob Chiu

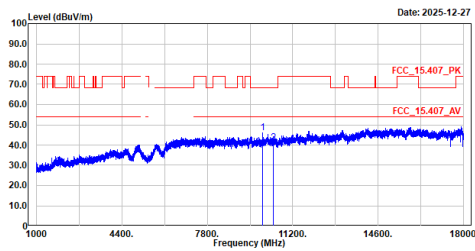


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	9999.906	45.92	68.22	-22.30	51.22	-5.30	Peak
2	10420.000	41.03	68.22	-27.19	45.99	-4.96	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5210MHz
Test by :Bob Chiu

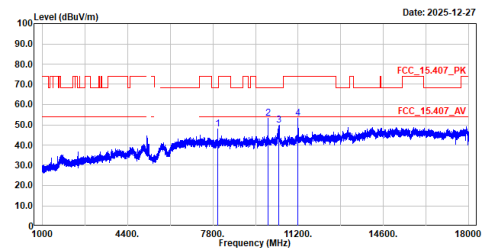


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7995.500	47.79	68.22	-20.43	53.76	-5.97	Peak
2	10000.440	53.06	68.22	-15.16	58.36	-5.30	Peak
3	10420.000	49.81	68.22	-18.41	54.77	-4.96	Peak
4	11193.630	53.28	74.00	-20.72	56.67	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5290MHz
Test by :Bob Chiu

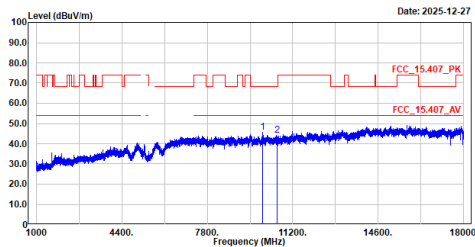


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	9999.906	45.69	68.22	-22.53	50.99	-5.30	Peak
2	10580.000	44.32	68.22	-23.90	49.19	-4.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5290MHz
Test by :Bob Chiu

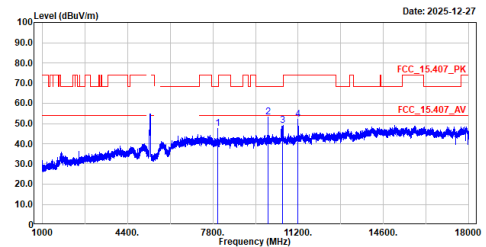


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7993.906	47.40	68.22	-20.82	53.37	-5.97	Peak
2	9999.906	53.36	68.22	-14.86	58.66	-5.30	Peak
3	10580.000	49.17	68.22	-19.05	54.04	-4.87	Peak
4	11194.690	52.00	74.00	-22.00	55.39	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5530MHz
Test by :Bob Chiu

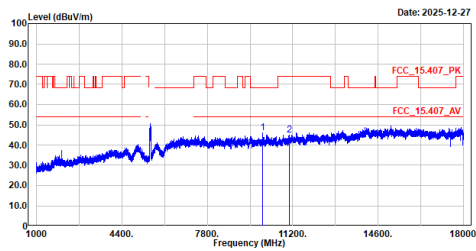


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
				dB			
1	10000.440	45.98	68.22	-22.24	51.28	-5.30	Peak
2	11060.000	44.93	74.00	-29.07	48.94	-4.01	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5530MHz
Test by :Bob Chiu

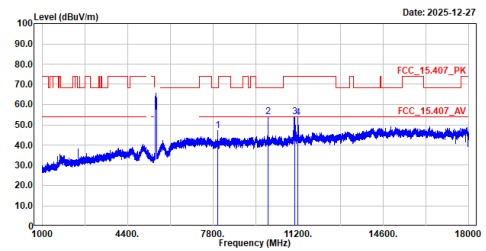


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
				dB			
1	7998.688	47.16	68.22	-21.06	53.13	-5.97	Peak
2	9999.906	53.84	68.22	-14.38	59.14	-5.30	Peak
3	11060.000	53.89	74.00	-20.11	57.90	-4.01	Peak
4	11190.970	53.69	74.00	-20.31	57.10	-3.41	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5610MHz
Test by :Bob Chiu

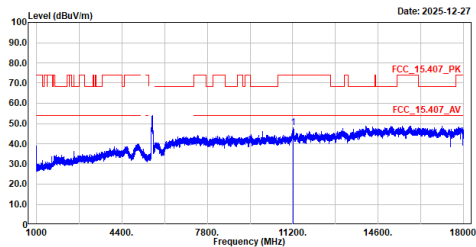


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
				dB			
1	11220.000	48.02	74.00	-25.98	51.31	-3.29	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5610MHz
Test by :Bob Chiu

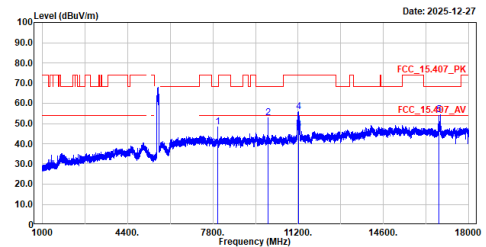


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
				dB			
1	7996.563	48.14	68.22	-20.08	54.10	-5.96	Peak
2	9999.906	52.79	68.22	-15.43	58.09	-5.30	Peak
3	11220.000	47.05	54.00	-6.95	50.34	-3.29	Average
4	11220.000	55.75	74.00	-18.25	59.04	-3.29	Peak
5	16830.000	54.18	68.22	-14.04	51.60	2.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5690MHz
Test by :Bob Chiu

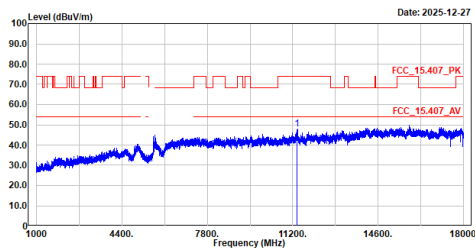

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	


1	11380.000	47.92	74.00	-26.08	50.87	-2.95	Peak
---	-----------	-------	-------	--------	-------	-------	------

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5690MHz
Test by :Bob Chiu

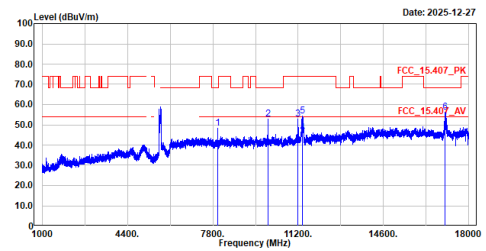

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	


1	7994.969	48.15	68.22	-20.07	54.12	-5.97	Peak
2	9999.906	52.79	68.22	-15.43	58.09	-5.30	Peak
3	11194.690	52.82	74.00	-21.18	56.21	-3.39	Peak
4	11380.000	46.02	54.00	-7.98	48.97	-2.95	Average
5	11380.000	54.18	74.00	-19.82	57.13	-2.95	Peak
6	17070.000	56.16	68.22	-12.06	53.60	2.56	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5775MHz
Test by :Bob Chiu

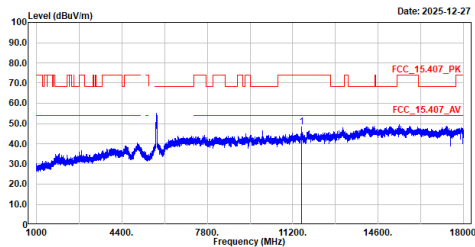

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	


1	11550.000	48.29	74.00	-25.71	50.94	-2.65	Peak
---	-----------	-------	-------	--------	-------	-------	------

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5775MHz
Test by :Bob Chiu

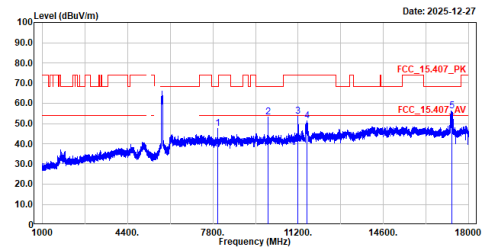

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	


1	7998.156	47.41	68.22	-20.81	53.38	-5.97	Peak
2	9999.906	53.26	68.22	-14.96	58.56	-5.30	Peak
3	11196.810	53.45	74.00	-20.55	56.82	-3.37	Peak
4	11550.000	51.42	74.00	-22.58	54.07	-2.65	Peak
5	17325.000	56.12	68.22	-12.10	53.25	2.87	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5250MHz
Test by :Bob Chiu

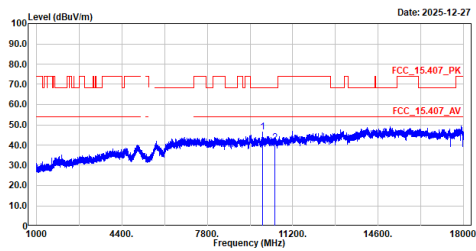


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
				dB	dBuV		
1	9999.906	46.39	68.22	-21.83	51.69	-5.30	Peak
2	10500.000	41.02	68.22	-27.20	45.95	-4.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5250MHz
Test by :Bob Chiu

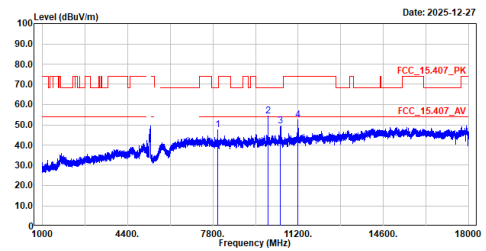


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
				dB	dBuV		
1	7993.375	47.72	68.22	-20.50	53.68	-5.96	Peak
2	9999.906	54.20	68.22	-14.02	59.50	-5.30	Peak
3	10500.000	49.61	68.22	-18.61	54.54	-4.93	Peak
4	11194.160	52.46	74.00	-21.54	55.85	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac160_5570MHz
Test by :Bob Chiu

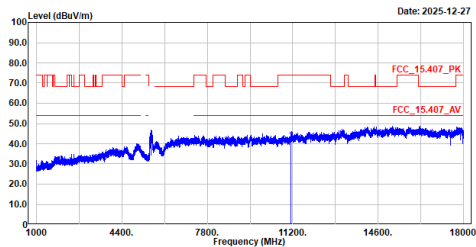


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
				dB	dBuV		
1	11140.000	41.69	74.00	-32.31	45.39	-3.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac160_5570MHz
Test by :Bob Chiu

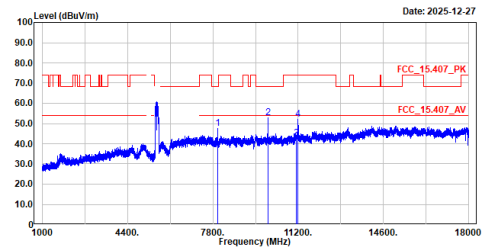


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
				dB	dBuV		
1	8001.344	47.42	68.22	-20.80	53.39	-5.97	Peak
2	9999.906	52.93	68.22	-15.29	58.23	-5.30	Peak
3	11140.000	42.47	74.00	-31.53	46.17	-3.70	Peak
4	11191.500	52.25	74.00	-21.75	55.66	-3.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20_5180MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5180MHz
Test by :Nova

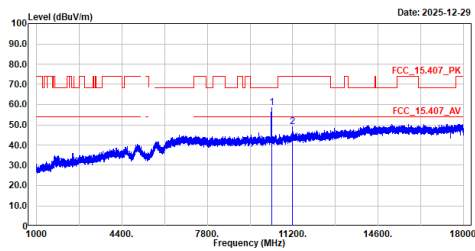


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10360.000	58.56	68.22	-9.66	63.53	-4.97	Peak
2	11189.380	49.20	74.00	-24.80	52.62	-3.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20_5180MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5180MHz
Test by :Nova

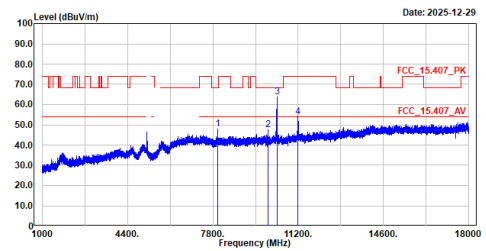


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7993.375	47.80	68.22	-20.42	53.76	-5.96	Peak
2	10000.440	47.54	68.22	-20.68	52.84	-5.30	Peak
3	10360.000	63.96	68.22	-4.26	68.93	-4.97	Peak
4	11192.560	53.94	74.00	-20.06	57.34	-3.40	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20_5220MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5220MHz
Test by :Nova

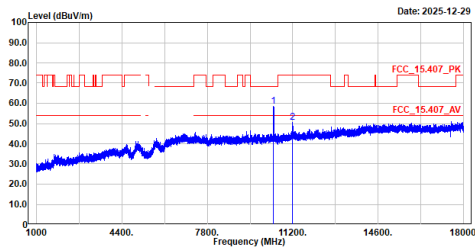


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10440.000	58.45	68.22	-9.77	63.42	-4.97	Peak
2	11195.220	50.62	74.00	-23.38	54.01	-3.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20_5220MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5220MHz
Test by :Nova

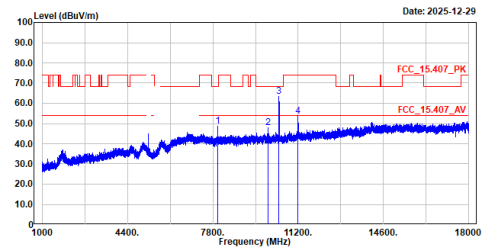


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7993.906	48.57	68.22	-19.65	54.54	-5.97	Peak
2	10000.440	48.08	68.22	-20.14	53.38	-5.30	Peak
3	10440.000	63.37	68.22	-4.85	68.35	-4.98	Peak
4	11192.560	53.48	74.00	-20.52	56.88	-3.40	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5240MHz
Test by :Nova

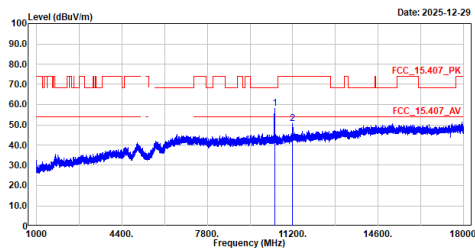


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	58.08	68.22	-10.14	63.03	-4.95	Peak
2	11195.750	50.49	74.00	-23.51	53.87	-3.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5240MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5240MHz
Test by :Nova

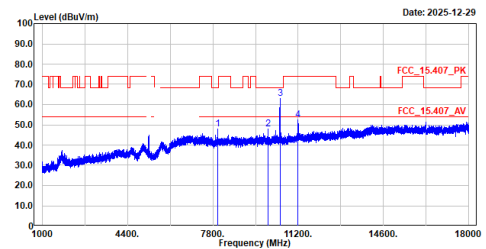


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7998.688	47.85	68.22	-20.37	53.82	-5.97	Peak
2	9999.906	48.07	68.22	-20.15	53.37	-5.30	Peak
3	10480.000	62.94	68.22	-5.28	67.90	-4.96	Peak
4	11195.220	52.54	74.00	-21.46	55.93	-3.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5260MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5260MHz
Test by :Nova

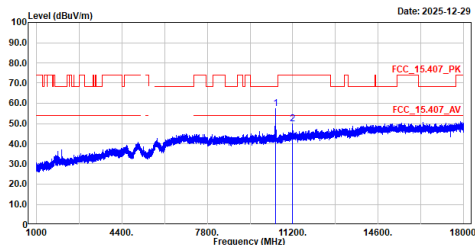


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10520.000	57.30	68.22	-10.92	62.25	-4.95	Peak
2	11200.000	49.85	74.00	-24.15	53.20	-3.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5260MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5260MHz
Test by :Nova

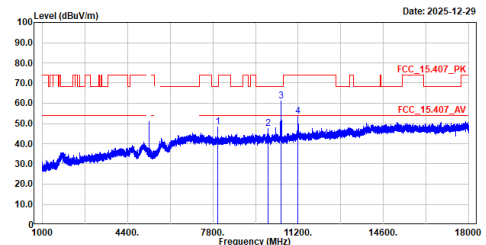


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.906	48.24	68.22	-19.98	54.21	-5.97	Peak
2	10000.440	47.47	68.22	-20.75	52.77	-5.30	Peak
3	10520.000	61.14	68.22	-7.08	66.09	-4.95	Peak
4	11196.280	53.68	74.00	-20.32	57.06	-3.38	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5300MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5300MHz
Test by :Nova

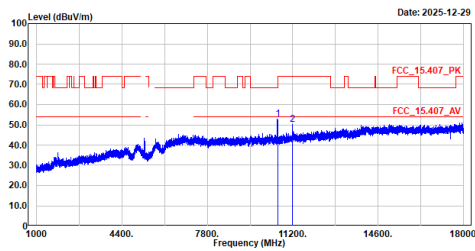


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10600.000	52.67	74.00	-21.33	57.50	-4.83	Peak
2	11194.160	50.02	74.00	-23.98	53.41	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5300MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5300MHz
Test by :Nova

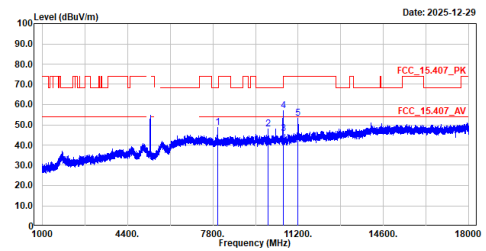


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	7995.500	48.67	68.22	-19.55	54.64	-5.97	Peak
2	10000.440	48.10	68.22	-20.12	53.40	-5.30	Peak
3	10600.000	45.48	54.00	-8.52	50.31	-4.83	Average
4	10600.000	56.87	74.00	-17.13	61.70	-4.83	Peak
5	11190.970	53.36	74.00	-20.64	56.77	-3.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5320MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5320MHz
Test by :Nova

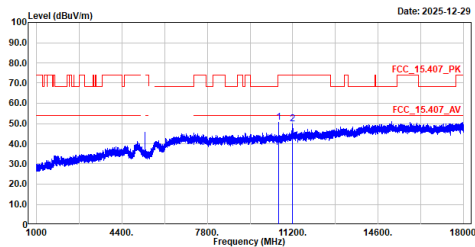


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	10640.000	50.69	74.00	-23.31	55.29	-4.60	Peak
2	11189.380	49.69	74.00	-24.31	53.11	-3.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5320MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5320MHz
Test by :Nova

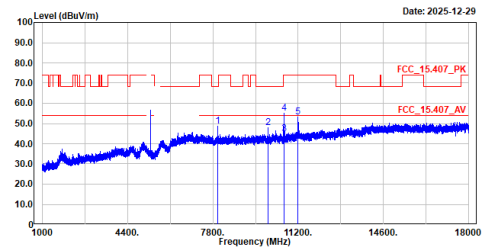


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dBuV/m	dB	dBuV		
1	7993.906	48.61	68.22	-19.61	54.58	-5.97	Peak
2	10000.440	47.90	68.22	-20.32	53.20	-5.30	Peak
3	10640.000	44.97	54.00	-9.03	49.59	-4.62	Average
4	10640.000	55.21	74.00	-18.79	59.83	-4.62	Peak
5	11194.690	53.02	74.00	-20.98	56.41	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5500MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5500MHz
Test by :Nova

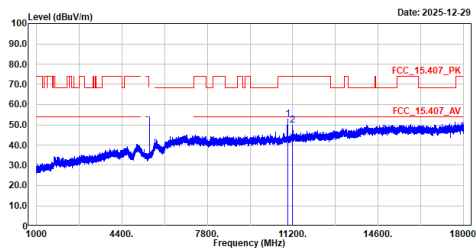


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11000.000	53.00	74.00	-21.00	57.22	-4.22	Peak
2	11195.220	49.90	74.00	-24.10	53.29	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5500MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5500MHz
Test by :Nova

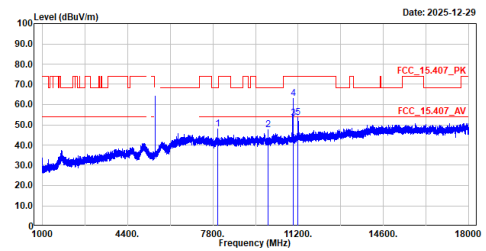


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7994.438	48.03	68.22	-20.19	54.00	-5.97	Peak
2	10000.440	47.61	68.22	-20.61	52.91	-5.30	Peak
3	11000.000	53.24	54.00	-0.76	57.46	-4.22	Average
4	11000.000	63.07	74.00	-10.93	67.29	-4.22	Peak
5	11190.970	53.48	74.00	-20.52	56.89	-3.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5580MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5580MHz
Test by :Nova

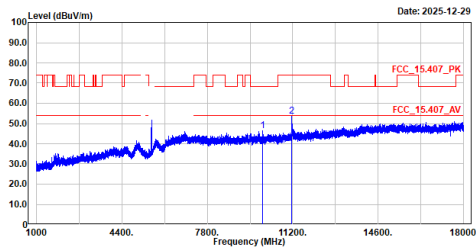


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	9999.906	46.48	68.22	-21.74	51.78	-5.30	Peak
2	11160.000	53.47	74.00	-20.53	57.04	-3.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20 5580MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5580MHz
Test by :Nova

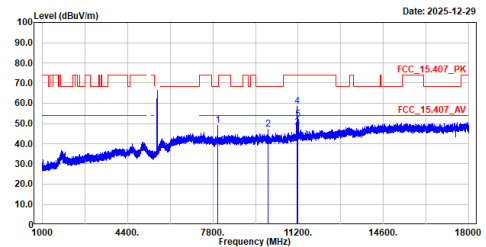


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.031	48.99	68.22	-19.23	54.95	-5.96	Peak
2	10000.970	47.13	68.22	-21.09	52.43	-5.30	Peak
3	11160.000	47.85	54.00	-6.15	51.46	-3.61	Average
4	11160.000	58.55	74.00	-15.45	62.16	-3.61	Peak
5	11194.160	52.15	74.00	-21.85	55.54	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5700MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5700MHz
Test by :Nova

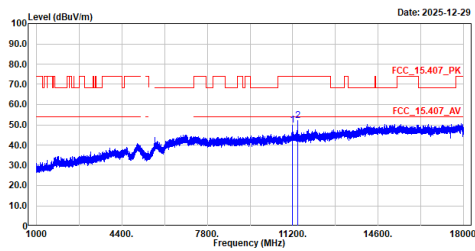


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11196.810	49.87	74.00	-24.13	53.24	-3.37	Peak
2	11400.000	51.95	74.00	-22.05	54.86	-2.91	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5700MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5700MHz
Test by :Nova

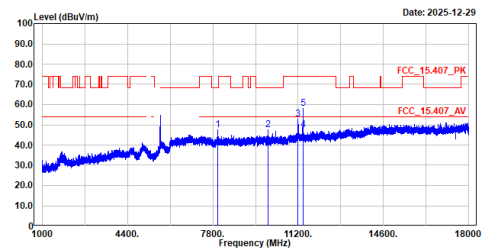


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7995.500	47.43	68.22	-20.79	53.40	-5.97	Peak
2	9999.906	47.47	68.22	-20.75	52.77	-5.30	Peak
3	11191.500	52.71	74.00	-21.29	56.12	-3.41	Peak
4	11400.000	47.42	54.00	-6.58	50.34	-2.92	Average
5	11400.000	58.17	74.00	-15.83	61.09	-2.92	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5720MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5720MHz
Test by :Nova

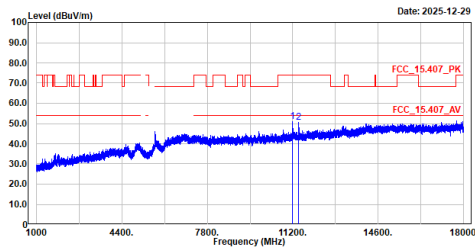


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	11194.690	50.84	74.00	-23.16	54.23	-3.39	Peak
2	11440.000	50.57	74.00	-23.43	53.37	-2.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5720MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5720MHz
Test by :Nova

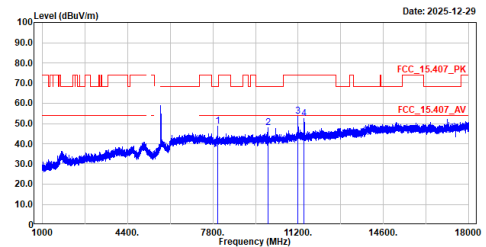


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	7993.906	48.57	68.22	-19.65	54.54	-5.97	Peak
2	9999.906	47.80	68.22	-20.42	53.10	-5.30	Peak
3	11193.090	53.76	74.00	-20.24	57.15	-3.39	Peak
4	11440.000	52.47	74.00	-21.53	55.25	-2.78	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20_5745MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5745MHz
Test by :Nova

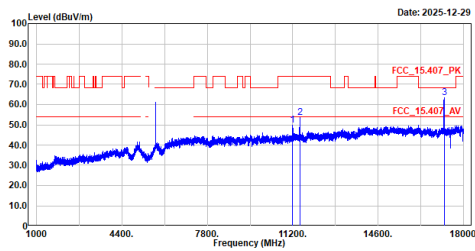


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11194.690	49.97	74.00	-24.03	53.36	-3.39	Peak
2	11490.000	53.66	74.00	-20.34	56.46	-2.80	Peak
3	17235.000	63.25	68.22	-4.97	68.57	2.68	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20_5745MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5745MHz
Test by :Nova

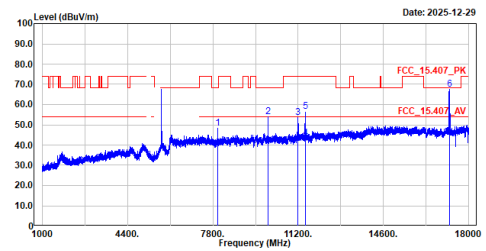


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7998.688	48.45	68.22	-19.77	54.42	-5.97	Peak
2	9999.906	53.79	68.22	-14.43	59.09	-5.30	Peak
3	11189.380	53.61	74.00	-20.39	57.03	-3.42	Peak
4	11490.000	43.53	54.00	-10.47	46.33	-2.80	Average
5	11490.000	56.63	74.00	-17.37	59.43	-2.80	Peak
6	17235.000	67.39	68.22	-0.83	64.72	2.67	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20_5785MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5785MHz
Test by :Nova

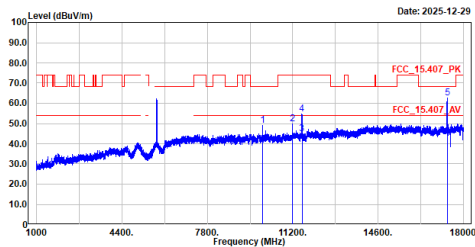


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	9999.906	49.11	68.22	-19.11	54.41	-5.30	Peak
2	11196.280	49.94	74.00	-24.06	53.32	-3.38	Peak
3	11570.000	44.74	54.00	-9.26	47.36	-2.62	Average
4	11570.000	54.74	74.00	-19.26	57.37	-2.63	Peak
5	17355.000	62.67	68.22	-5.55	59.57	3.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be20_5785MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5785MHz
Test by :Nova

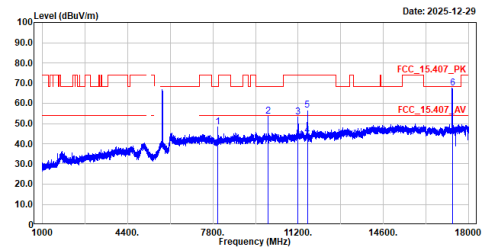


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7994.438	48.39	68.22	-19.83	54.36	-5.97	Peak
2	10000.440	53.45	68.22	-14.77	58.75	-5.30	Peak
3	11195.220	53.36	74.00	-20.64	56.75	-3.39	Peak
4	11570.000	44.07	54.00	-9.93	46.69	-2.62	Average
5	11570.000	56.64	74.00	-17.36	59.26	-2.62	Peak
6	17355.000	67.70	68.22	-0.52	64.60	3.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5825MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be20_5825MHz
Test by :Nova

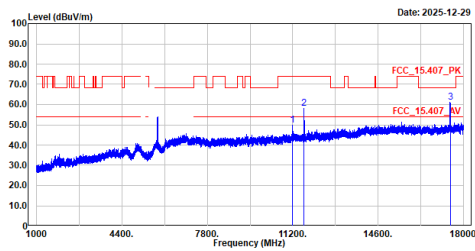


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11192.560	49.99	74.00	-24.01	53.39	-3.40	Peak
2	11650.000	58.27	74.00	-15.73	60.83	-2.56	Peak
3	17475.000	61.24	68.22	-6.98	57.82	3.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5825MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be20_5825MHz
Test by :Nova

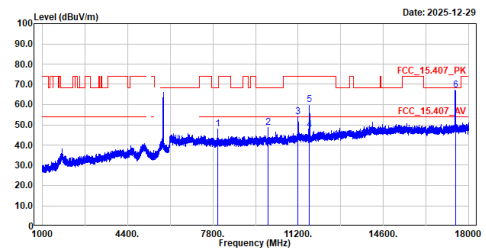


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7994.969	48.07	68.22	-20.15	54.04	-5.97	Peak
2	10000.440	48.59	68.22	-19.63	53.89	-5.30	Peak
3	11192.560	53.92	74.00	-20.08	57.32	-3.40	Peak
4	11650.000	47.67	54.00	-6.33	50.23	-2.56	Average
5	11650.000	60.12	74.00	-13.88	62.68	-2.56	Peak
6	17475.000	67.35	68.22	-0.87	63.92	3.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be40_5190MHz
Test by :Bob Chiu

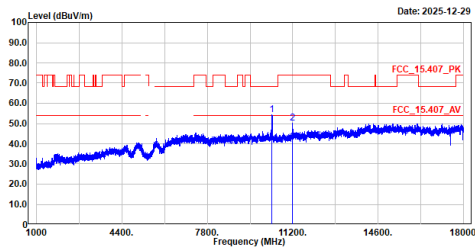


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	54.40	68.22	-13.82	59.37	-4.97	Peak
2	11193.090	50.17	74.00	-23.83	53.56	-3.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5190MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be40_5190MHz
Test by :Bob Chiu

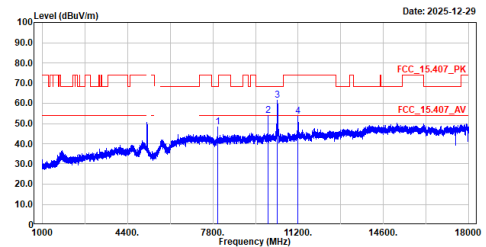


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.563	48.45	68.22	-19.77	54.41	-5.96	Peak
2	10000.440	54.04	68.22	-14.18	59.34	-5.30	Peak
3	10380.000	61.34	68.22	-6.88	66.31	-4.97	Peak
4	11197.340	53.71	74.00	-20.29	57.08	-3.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5230MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX be40_5230MHz
Test by :Bob Chiu

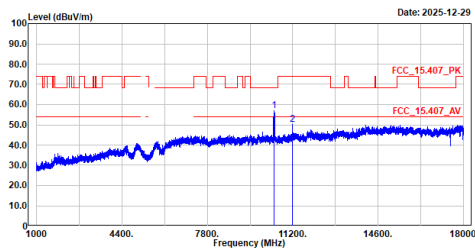


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB		dBuV		
1	10460.000	56.96	68.22	-11.26	61.95	-4.99	Peak
2	11198.940	50.16	74.00	-23.84	53.51	-3.35	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5230MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX be40_5230MHz
Test by :Bob Chiu

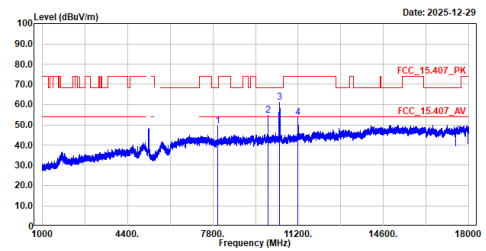


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB		dBuV		
1	8000.281	49.48	68.22	-18.74	55.45	-5.97	Peak
2	10000.440	54.81	68.22	-13.41	60.11	-5.30	Peak
3	10460.000	61.22	68.22	-7.00	66.21	-4.99	Peak
4	11194.690	53.57	74.00	-20.43	56.96	-3.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5270MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX be40_5270MHz
Test by :Bob Chiu

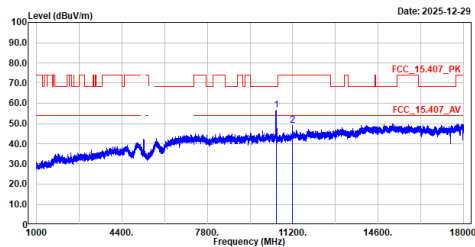


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB		dBuV		
1	10540.000	56.75	68.22	-11.47	61.69	-4.94	Peak
2	11194.160	49.00	74.00	-25.00	52.39	-3.39	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5270MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX be40_5270MHz
Test by :Bob Chiu

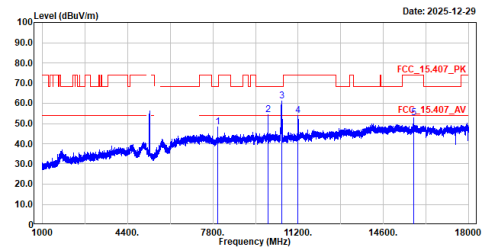


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
			dB		dBuV		
1	7990.188	48.32	68.22	-19.90	54.28	-5.96	Peak
2	10000.440	54.20	68.22	-14.02	59.50	-5.30	Peak
3	10540.000	61.23	68.22	-6.99	66.17	-4.94	Peak
4	11190.970	53.89	74.00	-20.11	57.30	-3.41	Peak
5	15818.160	52.96	74.00	-21.04	51.28	1.68	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5310MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX be40_5310MHz
Test by :Bob Chiu

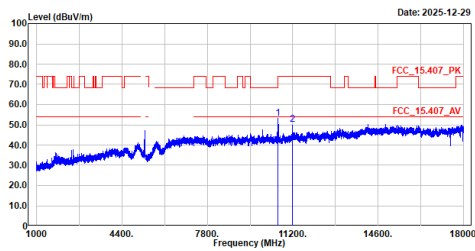


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10620.000	53.20	74.00	-20.80	57.94	-4.74	Peak
2	11188.310	50.27	74.00	-23.73	53.69	-3.42	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5310MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX be40_5310MHz
Test by :Bob Chiu

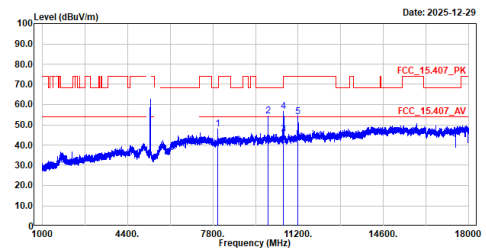


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7994.438	48.08	68.22	-20.14	54.05	-5.97	Peak
2	9999.906	54.29	68.22	-13.93	59.59	-5.30	Peak
3	10620.000	45.32	54.00	-8.68	50.06	-4.74	Average
4	10620.000	56.58	74.00	-17.42	61.32	-4.74	Peak
5	11193.090	53.93	74.00	-20.07	57.32	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5510MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX be40_5510MHz
Test by :Bob Chiu

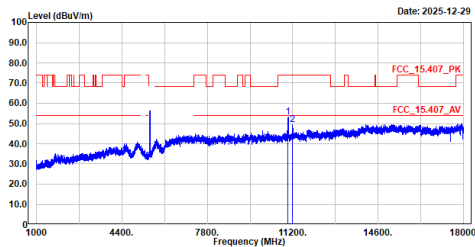


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11020.000	53.39	74.00	-20.61	57.54	-4.15	Peak
2	11192.030	49.49	74.00	-24.51	52.90	-3.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5510MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX be40_5510MHz
Test by :Bob Chiu

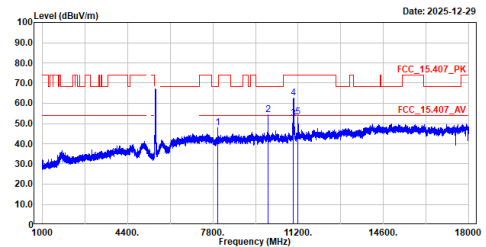


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7993.906	47.98	68.22	-20.24	53.95	-5.97	Peak
2	9999.906	54.28	68.22	-13.94	59.58	-5.30	Peak
3	11020.000	52.63	54.00	-1.37	56.78	-4.15	Average
4	11020.000	62.60	74.00	-11.40	66.75	-4.15	Peak
5	11193.630	53.19	74.00	-20.81	56.58	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5550MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX be40_5550MHz
Test by :Bob Chiu

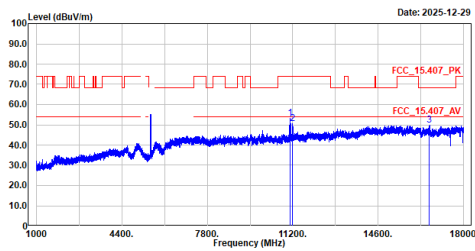


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11100.000	53.27	74.00	-20.73	57.10	-3.83	Peak
2	11195.220	50.56	74.00	-23.44	53.95	-3.39	Peak
3	16650.000	49.67	68.22	-18.55	47.10	2.57	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5550MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX be40_5550MHz
Test by :Bob Chiu

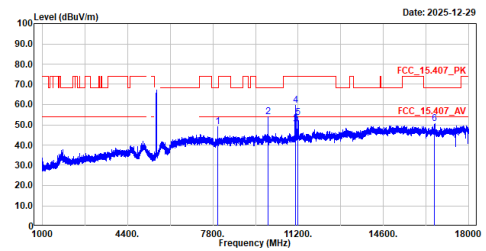


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7994.438	49.02	68.22	-19.20	54.99	-5.97	Peak
2	9999.906	53.85	68.22	-14.37	59.15	-5.30	Peak
3	11100.000	50.02	54.00	-3.98	53.85	-3.83	Average
4	11100.000	59.44	74.00	-14.56	63.27	-3.83	Peak
5	11195.220	53.66	74.00	-20.34	57.05	-3.39	Peak
6	16650.000	50.64	68.22	-17.58	48.09	2.55	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5670MHz H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX be40_5670MHz
Test by :Bob Chiu

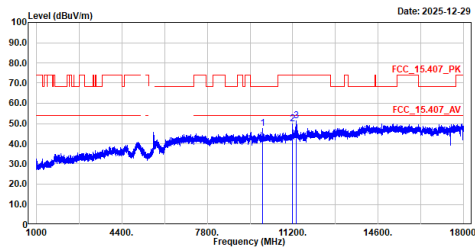


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10000.440	47.67	68.22	-20.55	52.97	-5.30	Peak
2	11194.690	49.76	74.00	-24.24	53.15	-3.39	Peak
3	11340.000	51.27	74.00	-22.73	54.27	-3.00	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5670MHz V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX be40_5670MHz
Test by :Bob Chiu

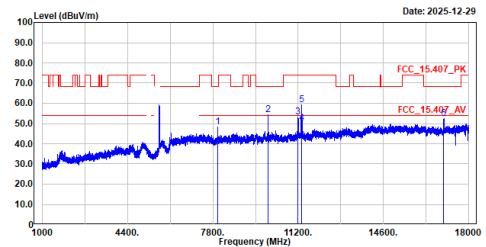


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7992.844	48.47	68.22	-19.75	54.43	-5.96	Peak
2	9999.906	54.34	68.22	-13.88	59.64	-5.30	Peak
3	11195.220	53.30	74.00	-20.70	56.69	-3.39	Peak
4	11340.000	50.15	54.00	-3.85	53.15	-3.00	Average
5	11340.000	59.22	74.00	-14.78	62.22	-3.00	Peak
6	17010.000	52.35	68.22	-15.87	49.79	2.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5710MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be40_5710MHz
Test by :Bob Chiu

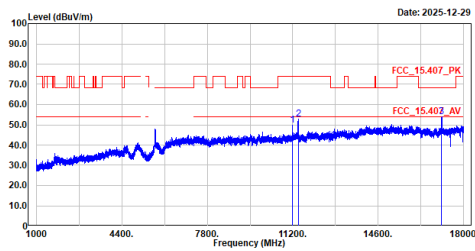


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11195.220	49.86	74.00	-24.14	53.25	-3.39	Peak
2	11420.000	52.91	74.00	-21.09	55.77	-2.86	Peak
3	17130.000	53.99	68.22	-14.23	51.13	2.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5710MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be40_5710MHz
Test by :Bob Chiu

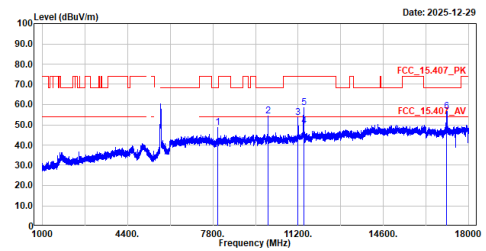


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.563	48.63	68.22	-19.59	54.59	-5.96	Peak
2	9999.906	54.29	68.22	-13.93	59.59	-5.30	Peak
3	11192.560	53.58	74.00	-20.42	56.98	-3.40	Peak
4	11420.000	49.30	54.00	-4.70	52.16	-2.86	Average
5	11420.000	58.57	74.00	-15.43	61.43	-2.86	Peak
6	17130.000	56.64	68.22	-11.58	53.78	2.86	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5755MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be40_5755MHz
Test by :Bob Chiu

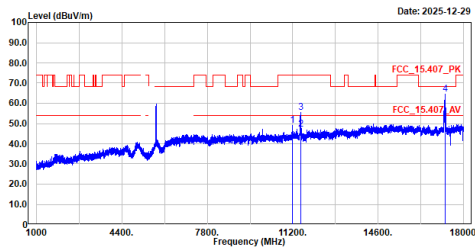


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11195.750	49.10	74.00	-24.90	52.48	-3.38	Peak
2	11510.000	47.11	54.00	-6.89	49.88	-2.77	Average
3	11510.000	55.62	74.00	-18.38	58.39	-2.77	Peak
4	17265.000	64.69	68.22	-3.53	61.96	2.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5755MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be40_5755MHz
Test by :Bob Chiu

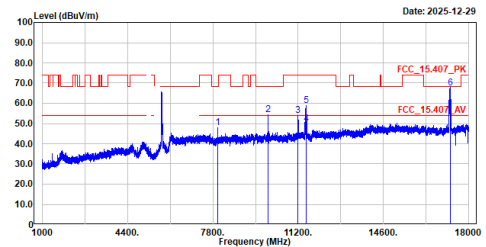


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7997.625	47.94	68.22	-20.28	53.90	-5.96	Peak
2	9999.906	54.40	68.22	-13.82	59.70	-5.30	Peak
3	11197.880	53.98	74.00	-20.02	57.34	-3.36	Peak
4	11510.000	49.70	54.00	-4.30	52.47	-2.77	Average
5	11510.000	58.96	74.00	-15.04	61.73	-2.77	Peak
6	17265.000	67.69	68.22	-0.53	64.96	2.73	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5795MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX be40_5795MHz
Test by :Bob Chiu

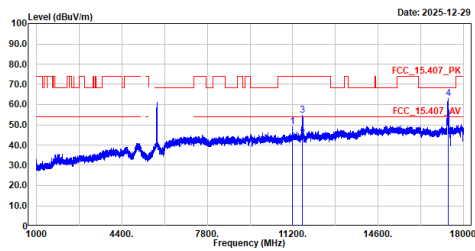


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11199.470	49.13	74.00	-24.87	52.48	-3.35	Peak
2	11590.000	43.58	54.00	-10.42	46.18	-2.60	Average
3	11590.000	54.67	74.00	-19.33	57.27	-2.60	Peak
4	17385.000	62.95	68.22	-5.27	59.62	3.33	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5795MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX be40_5795MHz
Test by :Bob Chiu

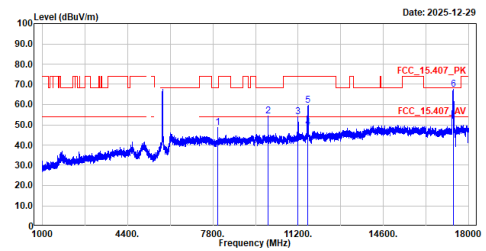


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7995.500	48.82	68.22	-19.40	54.79	-5.97	Peak
2	9999.906	54.34	68.22	-13.88	59.64	-5.30	Peak
3	11199.470	53.79	74.00	-20.21	57.14	-3.35	Peak
4	11590.000	48.71	54.00	-5.29	51.31	-2.60	Average
5	11590.000	59.73	74.00	-14.27	62.33	-2.60	Peak
6	17385.000	67.63	68.22	-0.59	64.30	3.33	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5210MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX be80_5210MHz
Test by :Bob Chiu

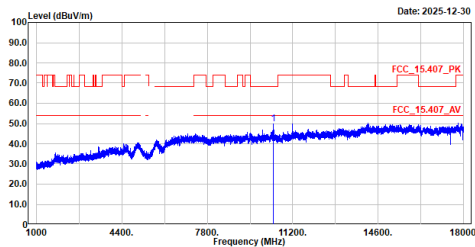


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10420.000	49.72	68.22	-18.50	54.68	-4.96	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5210MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX be80_5210MHz
Test by :Bob Chiu

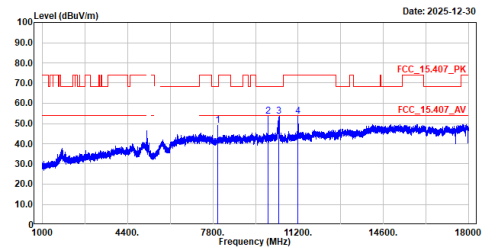


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7993.906	48.93	68.22	-19.29	54.90	-5.97	Peak
2	9999.906	53.50	68.22	-14.72	58.80	-5.30	Peak
3	10420.000	53.51	68.22	-14.71	58.47	-4.96	Peak
4	11197.340	53.48	74.00	-20.52	56.85	-3.37	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5290MHz
Test by :Bob Chiu

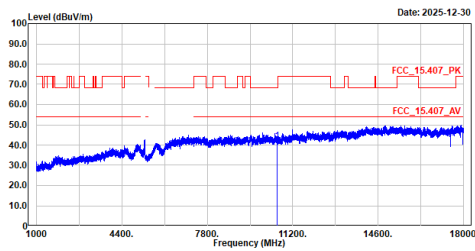


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10580.000	41.83	68.22	-26.39	46.70	-4.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5290MHz
Test by :Bob Chiu

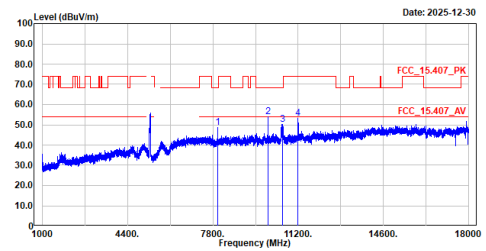


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7994.438	48.62	68.22	-19.60	54.59	-5.97	Peak
2	9999.906	53.88	68.22	-14.34	59.18	-5.30	Peak
3	10580.000	50.18	68.22	-18.04	55.05	-4.87	Peak
4	11193.630	53.32	74.00	-20.68	56.71	-3.39	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5530MHz
Test by :Bob Chiu

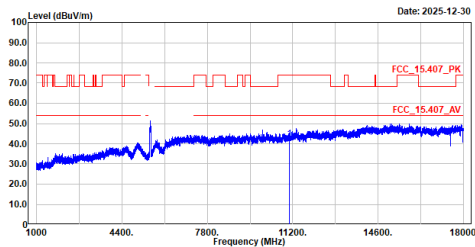


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	11060.000	42.44	74.00	-31.56	46.45	-4.01	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5530MHz
Test by :Bob Chiu

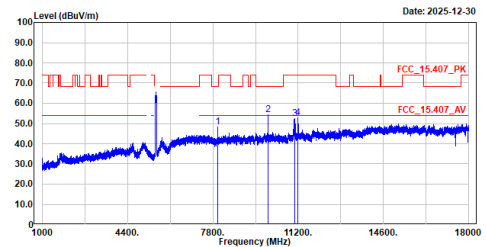


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7992.313	48.30	68.22	-19.92	54.26	-5.96	Peak
2	10000.440	54.24	68.22	-13.98	59.54	-5.30	Peak
3	11060.000	52.39	74.00	-21.61	56.40	-4.01	Peak
4	11191.500	52.79	74.00	-21.21	56.20	-3.41	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5610MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5610MHz
Test by :Bob Chiu

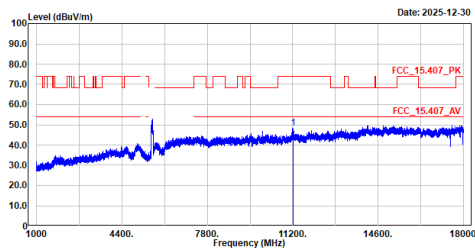


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	48.32	74.00	-25.68	51.61	-3.29	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5610MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5610MHz
Test by :Bob Chiu

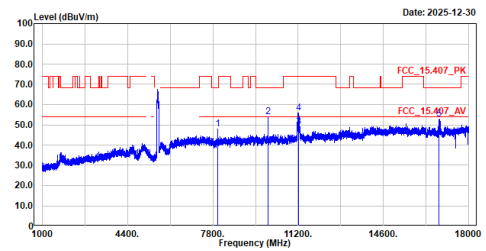


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7999.219	47.95	68.22	-20.27	53.92	-5.97	Peak
2	9999.906	54.09	68.22	-14.13	59.39	-5.30	Peak
3	11220.000	49.19	74.00	-24.81	52.48	-3.29	Average
4	11220.000	55.91	74.00	-18.09	59.20	-3.29	Peak
5	16830.000	52.90	68.22	-15.32	50.32	2.58	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5690MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5690MHz
Test by :Bob Chiu

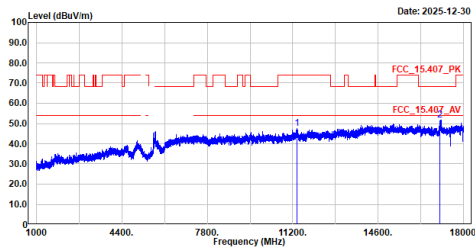


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11380.000	47.45	74.00	-26.55	50.40	-2.95	Peak
2	17070.000	51.81	68.22	-16.41	49.25	2.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5690MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5690MHz
Test by :Bob Chiu

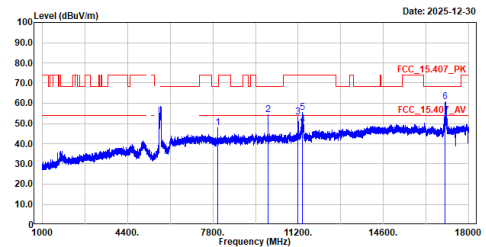


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7992.313	47.94	68.22	-20.28	53.90	-5.96	Peak
2	10000.440	54.16	68.22	-14.06	59.46	-5.30	Peak
3	11193.630	53.14	74.00	-20.86	56.53	-3.39	Peak
4	11380.000	49.54	74.00	-24.46	52.49	-2.95	Average
5	11380.000	55.33	74.00	-18.67	58.28	-2.95	Peak
6	17070.000	60.66	68.22	-7.56	58.10	2.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5775MHz
Test by :Bob Chiu

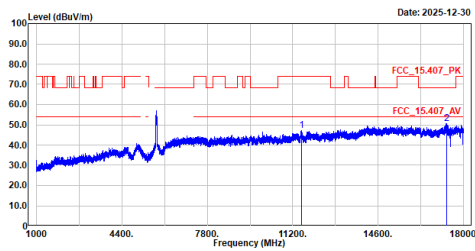


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11550.000	47.18	74.00	-26.82	49.83	-2.65	Peak
2	17325.000	50.73	68.22	-17.49	47.86	2.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5775MHz
Test by :Bob Chiu

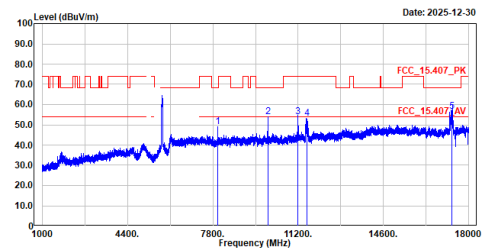


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.906	49.06	68.22	-19.16	55.03	-5.97	Peak
2	9999.906	53.91	68.22	-14.31	59.21	-5.30	Peak
3	11193.630	53.97	74.00	-20.03	57.36	-3.39	Peak
4	11550.000	53.30	74.00	-20.70	55.95	-2.65	Peak
5	17325.000	56.69	68.22	-11.53	53.82	2.87	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be160_5250MHz
Test by :Bob Chiu

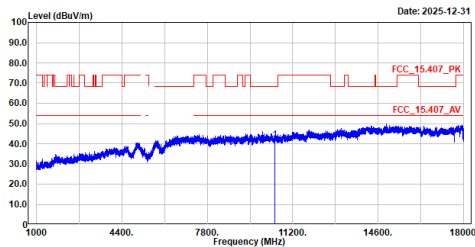


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10500.000	41.72	68.22	-26.50	46.65	-4.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_V


Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be160_5250MHz
Test by :Bob Chiu

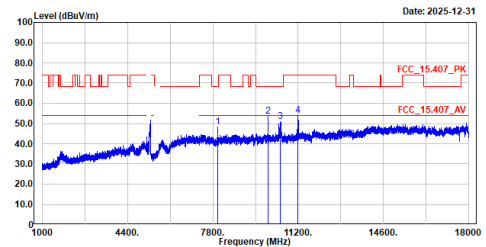

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.906	48.31	68.22	-19.91	54.28	-5.97	Peak
2	9999.906	53.64	68.22	-14.58	58.94	-5.30	Peak
3	10500.000	51.01	68.22	-17.21	55.94	-4.93	Peak
4	11193.090	53.89	74.00	-20.11	57.28	-3.39	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5570MHz_H

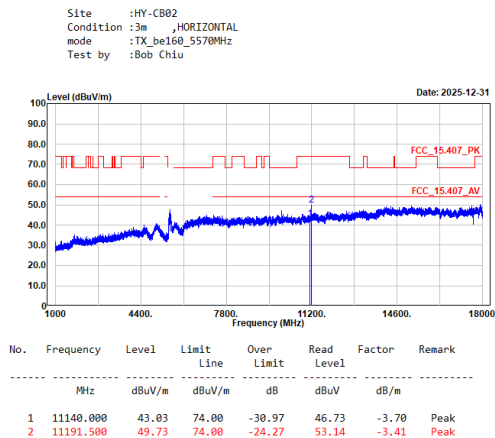


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5570MHz_V

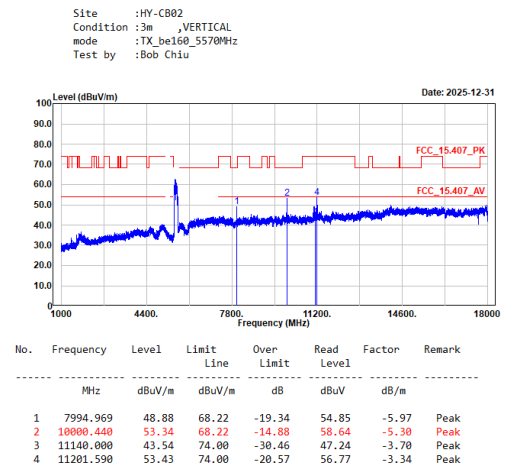


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5570MHz_H_QP

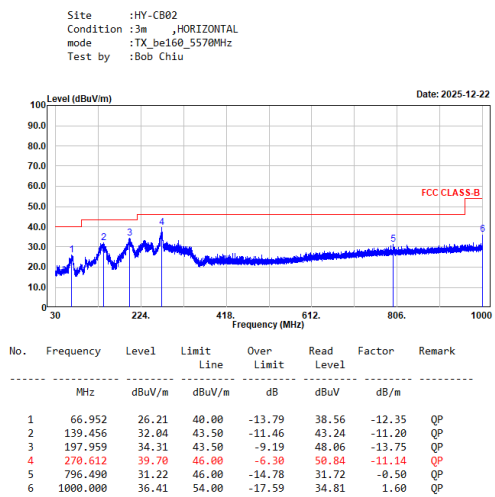

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.


TX_be160_5570MHz_V_QP

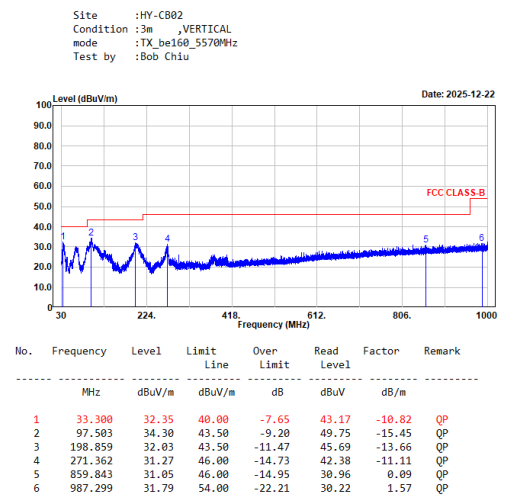

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX a 5180MHz H Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5180MHz
Test by :Caster

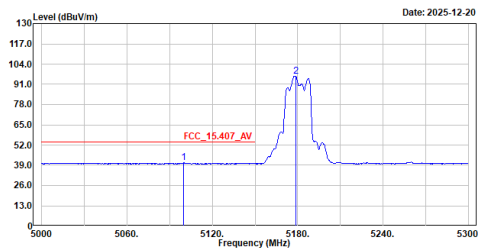


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5099.900	40.77	54.00	-13.23	26.28	14.49	Average
2	5178.500	96.36	-----	-----	81.88	14.48	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5180MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5180MHz
Test by :Caster

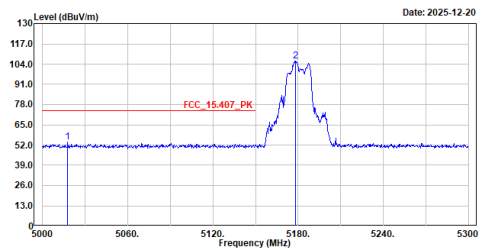


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5017.700	53.96	74.00	-20.04	39.51	14.45	Peak
2	5178.200	105.85	-----	-----	91.37	14.48	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5180MHz V Average

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5180MHz
Test by :Caster

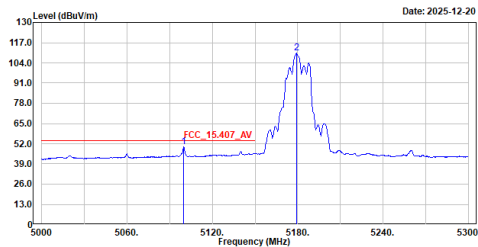


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5099.900	49.90	54.00	-4.10	35.41	14.49	Average
2	5179.100	110.18	-----	-----	95.70	14.48	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5180MHz V Peak

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5180MHz
Test by :Caster

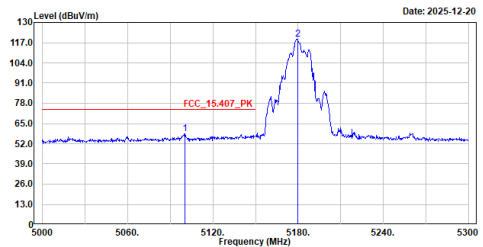


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5100.200	58.61	74.00	-15.39	44.12	14.49	Peak
2	5179.700	119.38	-----	-----	104.88	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5320MHz H Average

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5320MHz
Test by :Caster

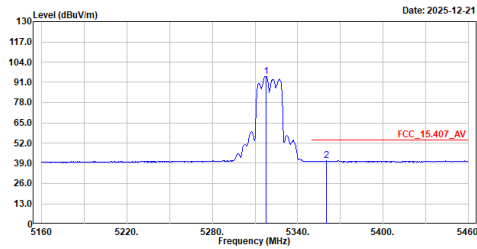


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5317.800	94.79	-----	-----	80.30	14.49	Average
2	5360.100	48.64	54.00	-13.36	26.17	14.47	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5320MHz H Peak

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_a_5320MHz
Test by :Caster

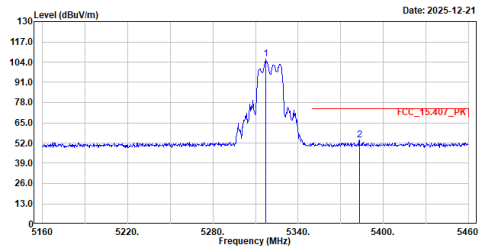


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5317.500	105.73	-----	-----	91.23	14.50	Peak
2	5383.200	54.02	74.00	-19.98	39.56	14.46	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5320MHz V Average

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5320MHz
Test by :Caster

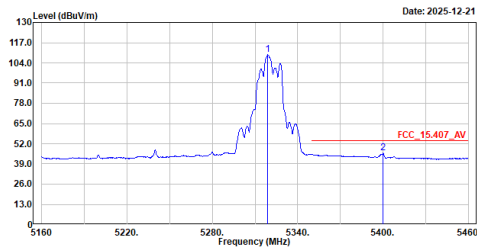


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5319.000	109.16	-----	-----	94.67	14.49	Average
2	5400.000	45.87	54.00	-8.13	31.41	14.46	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5320MHz V Peak

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_a_5320MHz
Test by :Caster

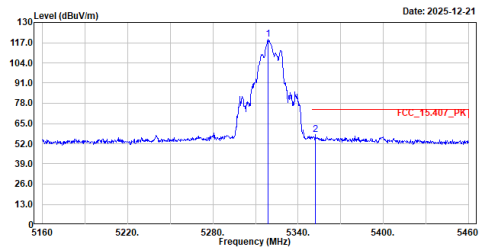


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5318.700	119.09	-----	-----	104.60	14.49	Peak
2	5352.000	57.71	74.00	-16.29	43.24	14.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz H Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5500MHz
Test by :Bob Chiu

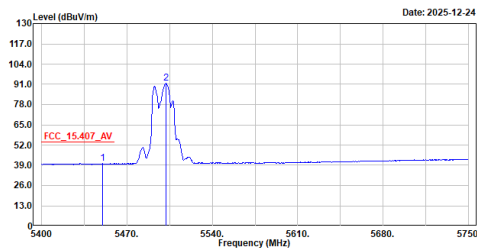


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5450.850	40.23	54.00	-13.77	25.44	14.79	Average
2	5501.850	91.82	-----	-----	76.65	15.17	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5500MHz
Test by :Bob Chiu

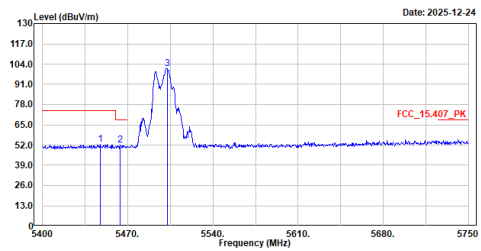


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5447.250	52.48	74.00	-21.52	37.71	14.77	Peak
2	5463.700	52.10	68.22	-16.12	37.21	14.89	Peak
3	5502.900	101.18	-----	-----	86.00	15.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz V Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5500MHz
Test by :Bob Chiu

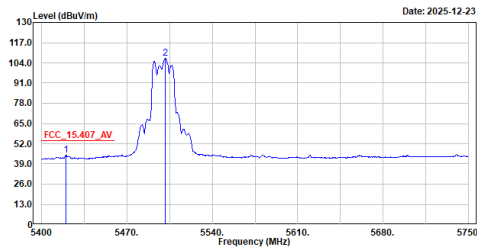


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5419.950	44.64	54.00	-9.36	30.06	14.58	Average
2	5501.150	107.16	-----	-----	92.00	15.16	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5500MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5500MHz
Test by :Bob Chiu

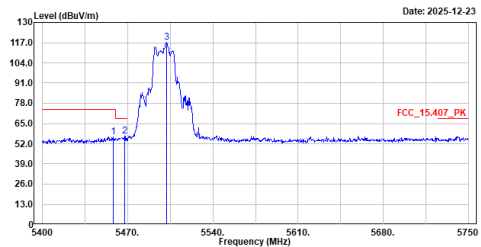


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.100	56.60	74.00	-17.40	41.75	14.85	Peak
2	5467.550	57.14	68.22	-11.08	42.22	14.92	Peak
3	5501.850	117.14	-----	-----	101.97	15.17	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5700MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5700MHz
Test by :Bob Chiu

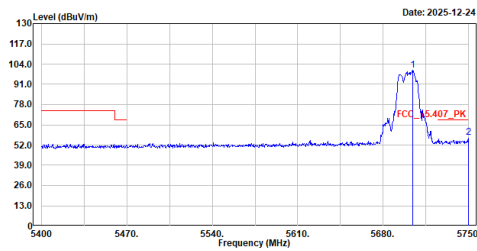


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5704.500	99.86	-----	-----	83.57	16.29	Peak
2	5750.000	56.89	68.22	-11.33	40.36	16.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5700MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5700MHz
Test by :Bob Chiu

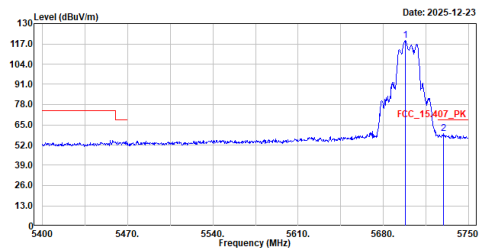


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5697.850	119.36	-----	-----	103.13	16.23	Peak
2	5729.700	59.18	68.22	-9.04	42.76	16.42	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5745MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5745MHz
Test by :Bob Chiu

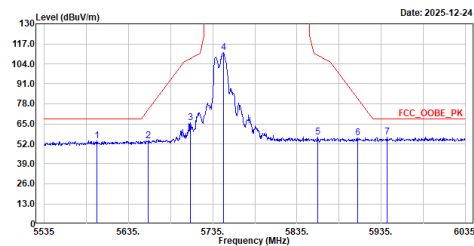


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5597.500	53.84	68.20	-14.36	38.47	15.37	Peak
2	5658.500	54.17	74.50	-20.33	38.30	15.87	Peak
3	5700.500	65.64	107.58	-41.94	49.34	16.30	Peak
4	5747.500	111.18	-----	-----	94.67	16.51	Peak
5	5859.500	56.19	109.54	-53.35	39.74	16.45	Peak
6	5907.000	56.17	81.52	-25.35	39.52	16.65	Peak
7	5942.500	56.53	68.20	-11.67	39.78	16.75	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5745MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5745MHz
Test by :Bob Chiu

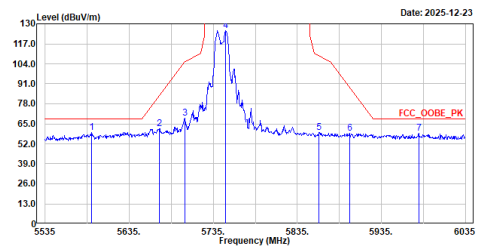


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5590.500	59.26	68.20	-8.94	43.91	15.35	Peak
2	5671.000	61.90	83.74	-21.84	45.92	15.98	Peak
3	5701.500	68.44	105.62	-37.18	52.18	16.26	Peak
4	5749.500	125.48	-----	-----	108.96	16.52	Peak
5	5861.000	59.31	109.12	-49.81	42.85	16.46	Peak
6	5897.000	58.98	88.92	-29.94	42.36	16.62	Peak
7	5979.500	58.65	68.20	-9.55	41.94	16.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5825MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_a_5825MHz
Test by :Bob Chiu

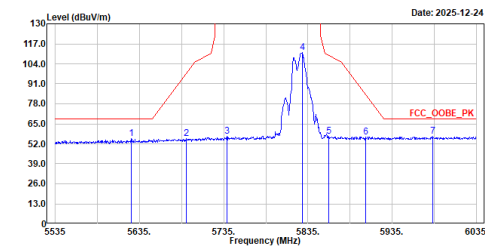


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5625.500	55.24	68.20	-12.96	39.66	15.58	Peak
2	5690.500	55.21	98.17	-42.96	39.05	16.16	Peak
3	5738.500	56.78	68.22	-11.44	40.32	16.46	Peak
4	5828.000	111.15	-----	-----	94.70	16.45	Peak
5	5859.500	56.94	109.54	-52.60	40.49	16.45	Peak
6	5904.000	56.64	83.74	-27.10	40.00	16.64	Peak
7	5983.500	56.77	68.20	-11.43	40.06	16.71	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX a 5825MHz V Peak


Site :HY-CB02
Condition :3m ,Vertical
mode :TX_a_5825MHz
Test by :Bob Chiu

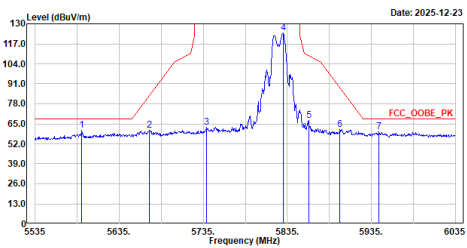

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5590.500	60.96	68.20	-7.24	45.61	15.35	Peak
2	5670.500	60.73	83.37	-22.64	44.76	15.97	Peak
3	5739.000	62.78	68.22	-5.44	46.31	16.47	Peak
4	5830.500	124.12	-----	-----	107.68	16.44	Peak
5	5860.500	67.43	109.26	-41.83	50.97	16.46	Peak
6	5897.500	61.36	88.55	-27.19	44.74	16.62	Peak
7	5944.000	59.99	68.20	-8.21	43.25	16.74	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_H_Average

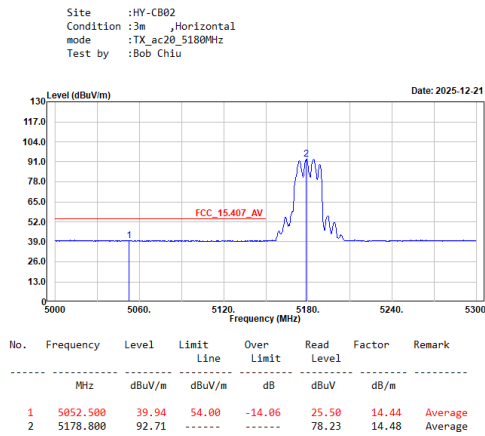


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_H_Peak

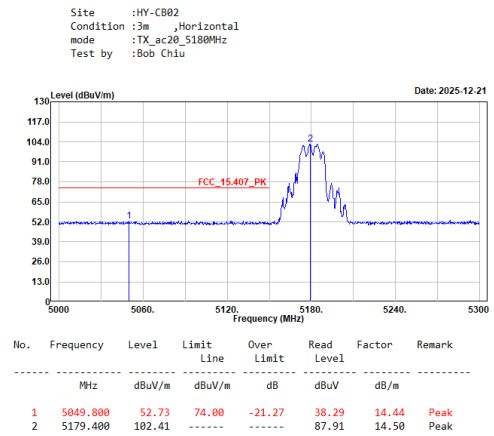


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_V_Average

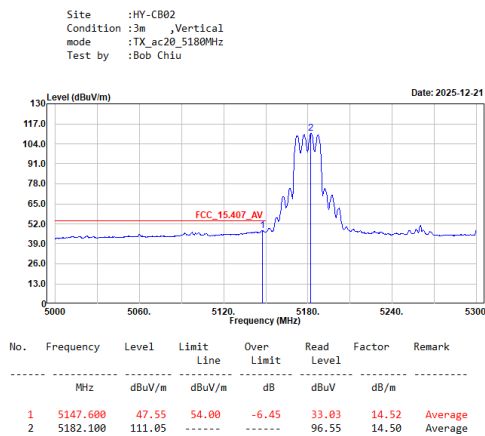


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5180MHz_V_Peak

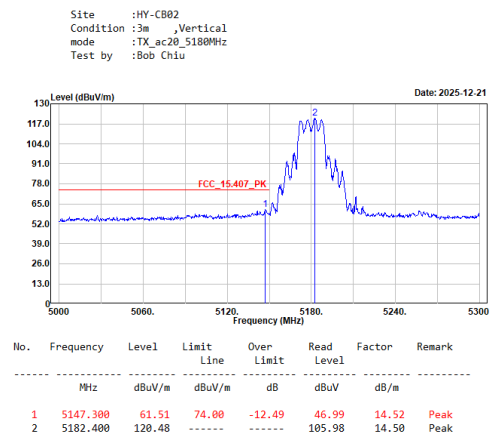


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac20_5320MHz_H_Average

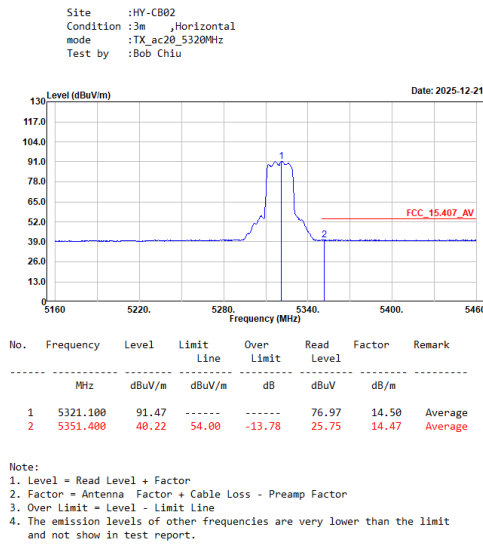


TX_ac20_5320MHz_H_Peak

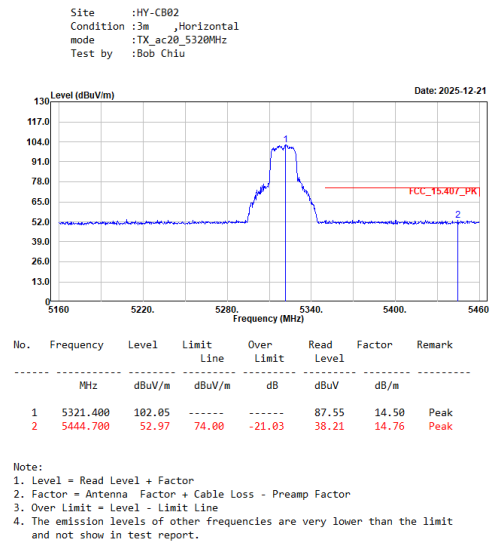


TX_ac20_5320MHz_V_Average

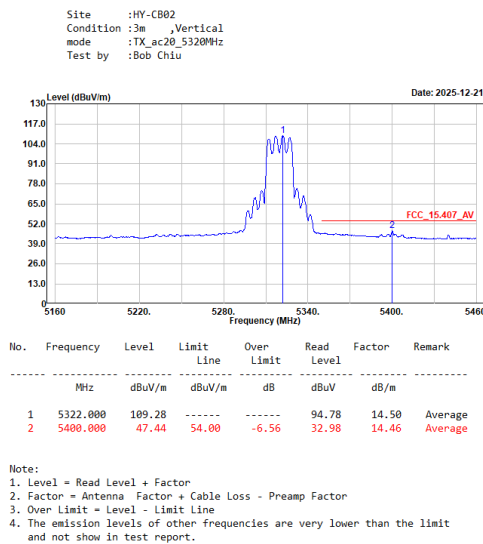

TX_ac20_5320MHz_V_Peak

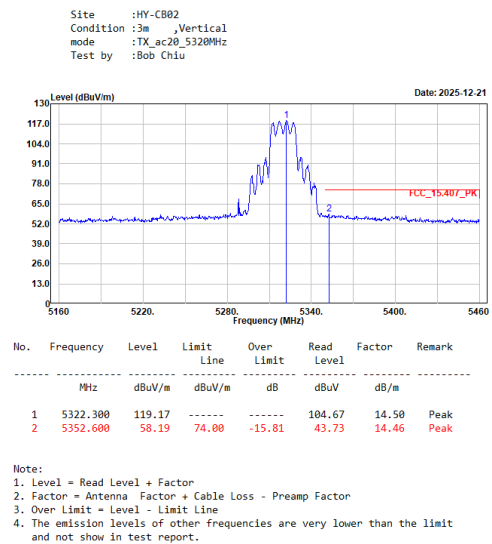


TX_ac20_5500MHz_H_Average

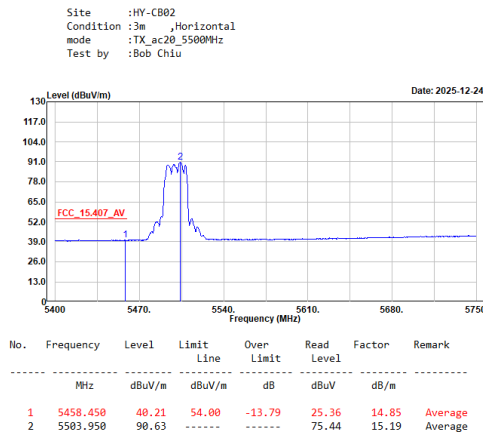


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_H_Peak

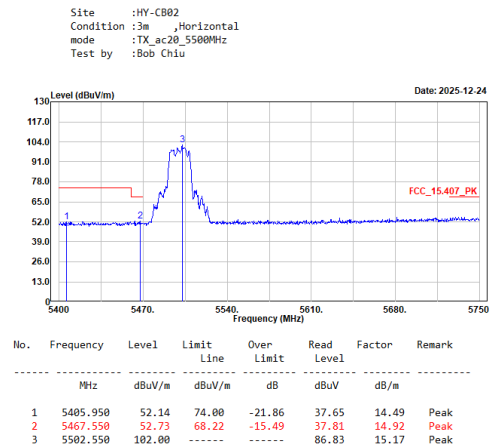


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_V_Average

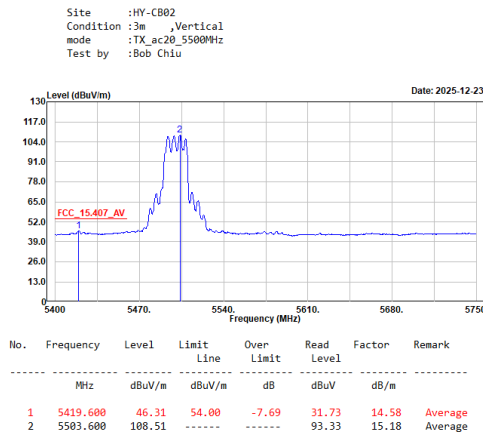


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac20_5500MHz_V_Peak

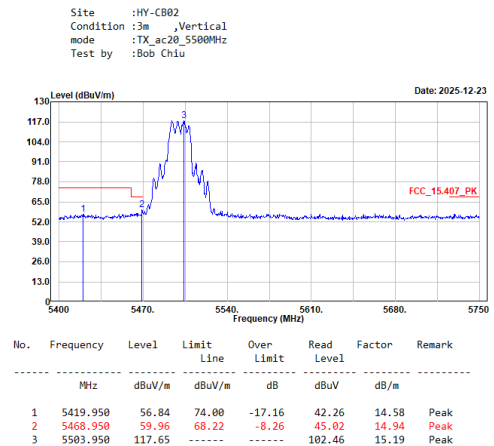


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac20_5700MHz_H_Peak

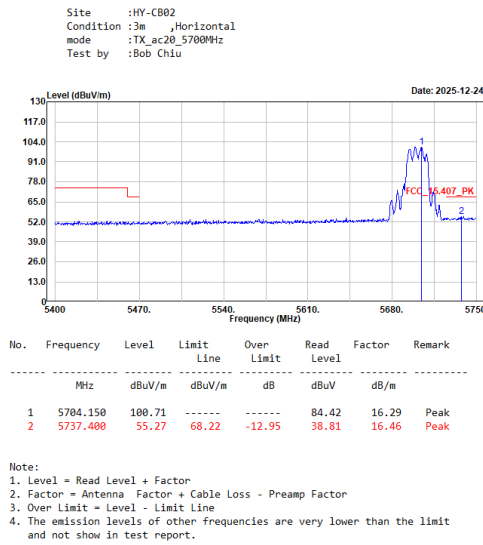


TX_ac20_5700MHz_V_Peak

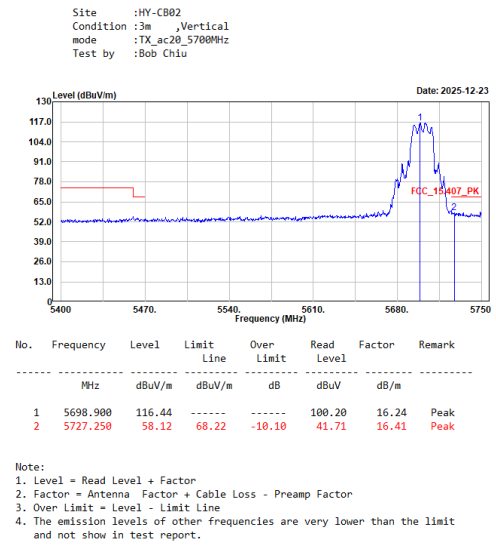

TX_ac20_5745MHz_H_Peak

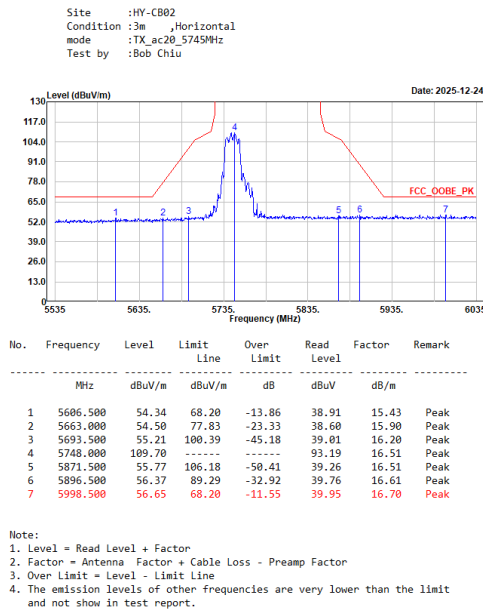


TX_ac20_5745MHz_V_Peak

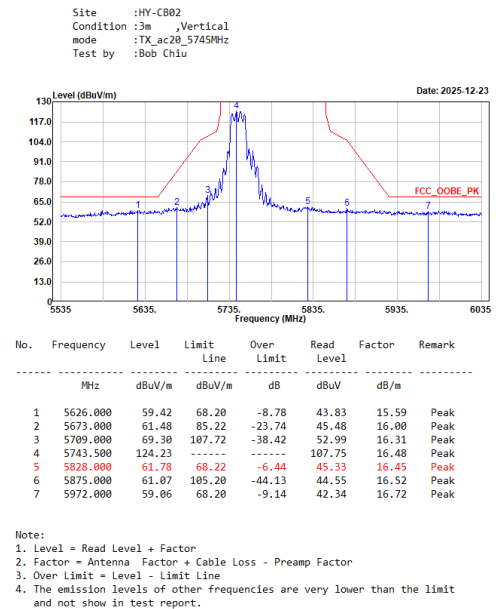

TX_ac20_5825MHz_H_Peak

TX_ac20_5825MHz_V_Peak


Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac20_5825MHz
Test by :Bob Chiu

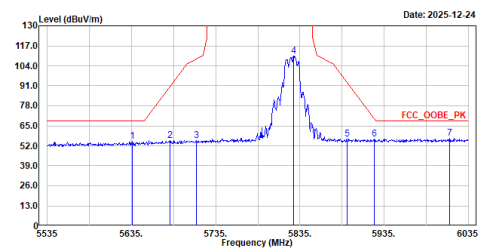

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5636.000	54.88	68.20	-13.32	39.21	15.67	Peak
2	5680.500	55.52	90.77	-35.25	39.44	16.08	Peak
3	5712.000	55.25	108.56	-53.31	38.93	16.32	Peak
4	5827.500	110.57	-----	-----	94.12	16.45	Peak
5	5891.000	56.61	93.36	-36.75	40.03	16.58	Peak
6	5923.000	56.30	69.69	-13.39	39.58	16.72	Peak
7	6012.500	56.72	68.20	-11.48	40.01	16.71	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac20_5825MHz
Test by :Bob Chiu

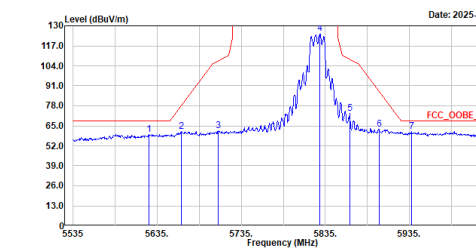


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5625.500	59.30	68.20	-8.90	43.72	15.58	Peak
2	5663.500	61.39	78.20	-16.81	45.48	15.91	Peak
3	5708.000	61.97	107.44	-45.47	45.67	16.30	Peak
4	5828.500	124.85	-----	-----	108.40	16.45	Peak
5	5864.000	72.89	108.28	-35.39	56.42	16.47	Peak
6	5899.000	62.80	87.44	-24.64	46.18	16.62	Peak
7	5937.500	61.21	68.20	-6.99	44.47	16.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac40_5190MHz
Test by :Bob Chiu

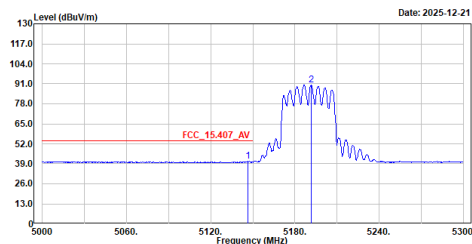


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5146.700	40.65	54.00	-13.35	26.14	14.51	Average
2	5191.400	90.23	-----	-----	75.73	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac40_5190MHz
Test by :Bob Chiu

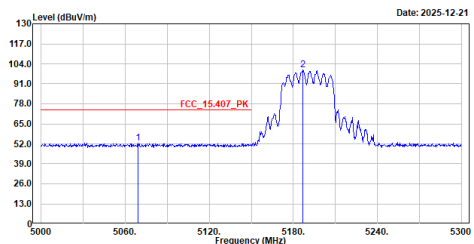


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5069.000	52.28	74.00	-21.72	37.82	14.46	Peak
2	5186.900	99.87	-----	-----	85.38	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac40_5190MHz
Test by :Bob Chiu

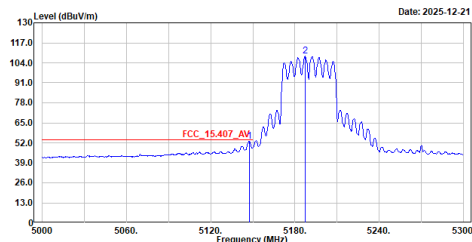


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.600	53.06	54.00	-0.94	38.54	14.52	Average
2	5187.200	108.49	-----	-----	94.00	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5190MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac40_5190MHz
Test by :Bob Chiu

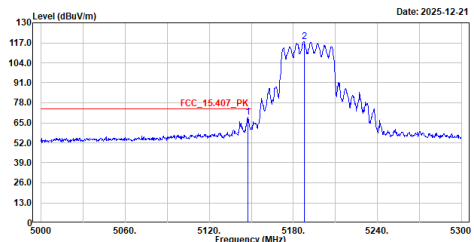


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.600	68.49	74.00	-5.51	53.97	14.52	Peak
2	5187.800	117.56	-----	-----	103.08	14.48	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5310MHz_H_Average

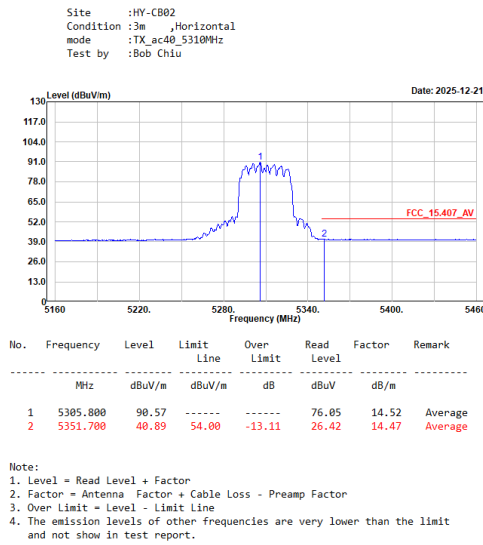


TX_ac40_5310MHz_H_Peak

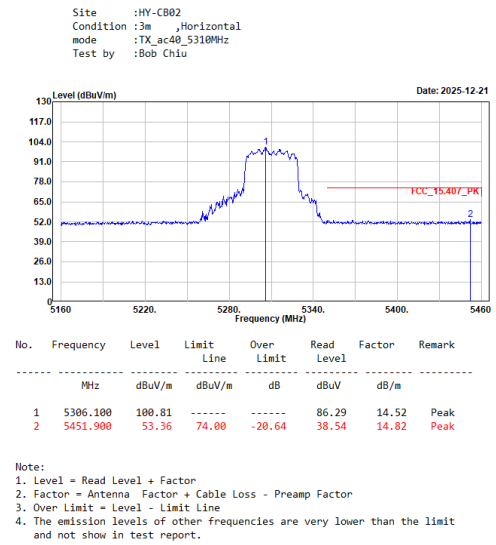


TX_ac40_5310MHz_V_Average

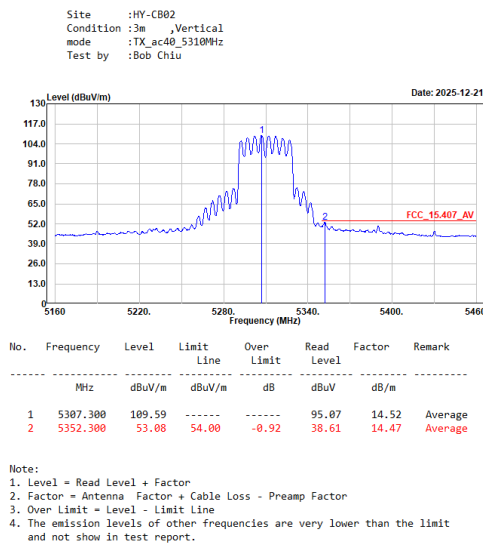

TX_ac40_5310MHz_V_Peak

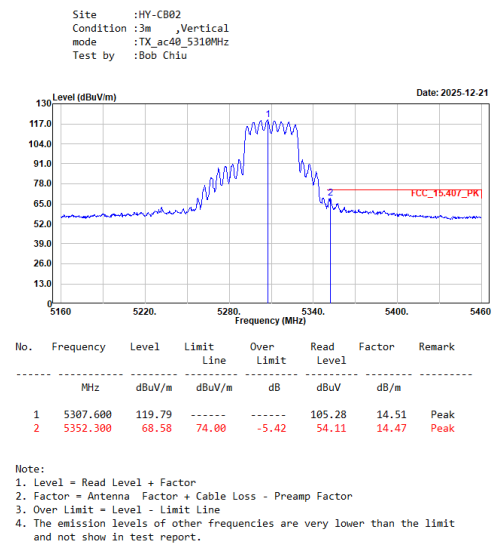


TX_ac40_5510MHz_H_Average

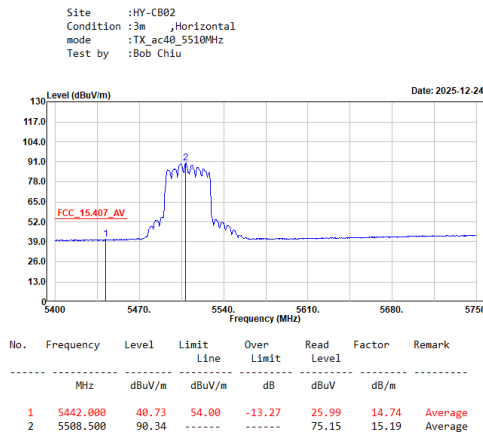


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5510MHz_H_Peak

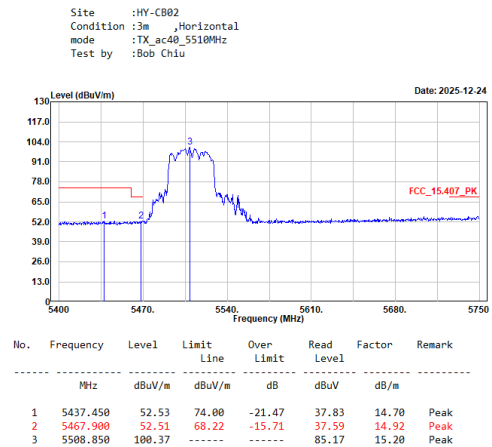


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5510MHz_V_Average

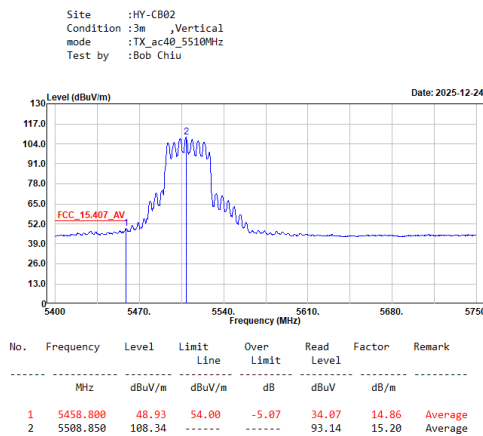


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac40_5510MHz_V_Peak

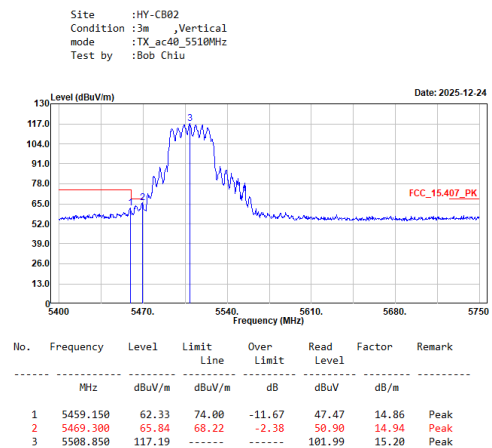


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5670MHz_H_Peak

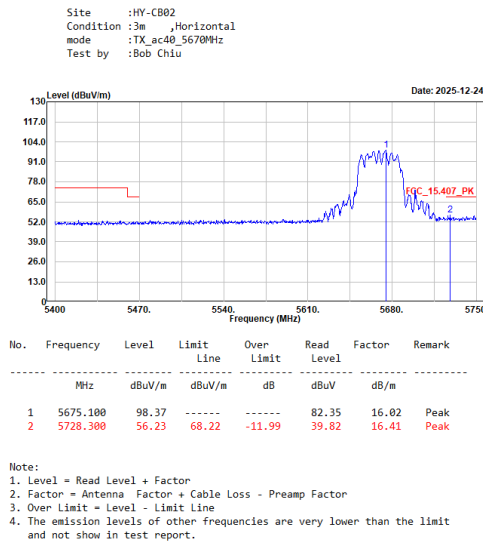


TX_ac40_5670MHz_V_Peak

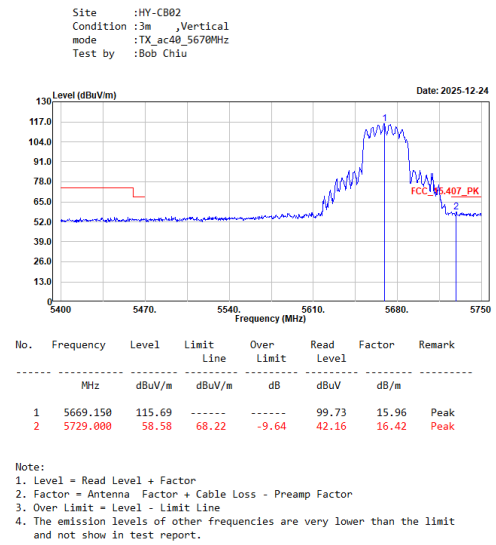


TX_ac40_5755MHz_H_Peak

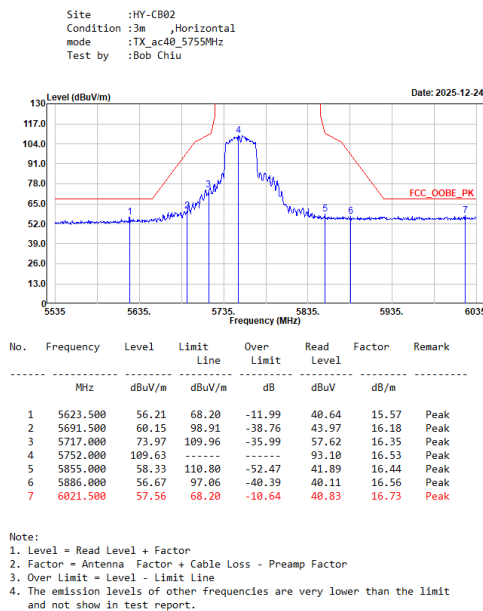

TX_ac40_5755MHz_V_Peak

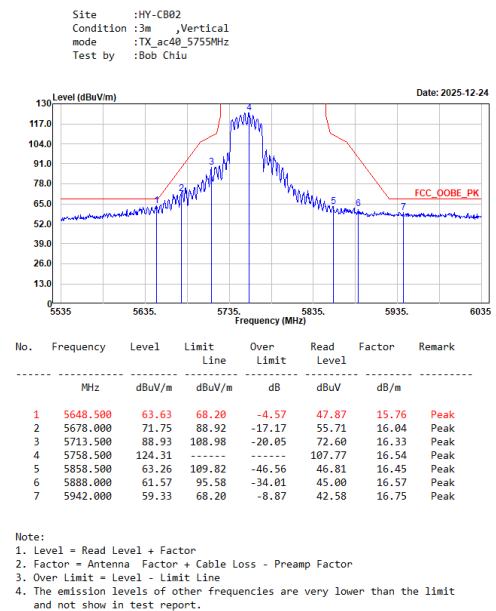


TX_ac40_5795MHz_H_Peak

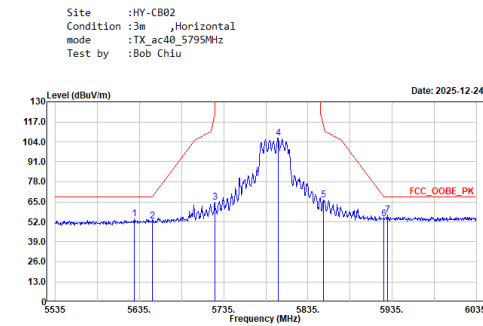

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5629.000	53.98	68.20	-14.22	38.37	15.61	Peak
2	5650.000	52.58	68.21	-15.63	36.81	15.77	Peak
3	5724.500	64.52	121.06	-56.54	48.13	16.39	Peak
4	5799.500	106.61	-----	-----	90.09	16.52	Peak
5	5853.500	66.25	114.22	-47.97	49.82	16.43	Peak
6	5925.000	54.08	68.21	-14.13	37.35	16.73	Peak
7	5929.500	56.21	68.20	-11.99	39.46	16.75	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac40_5795MHz_V_Peak

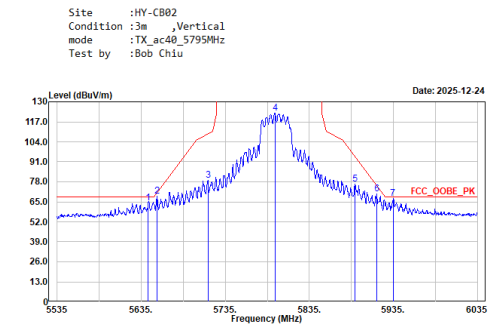

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5643.500	64.33	68.20	-3.87	48.60	15.73	Peak
2	5653.500	68.68	70.00	-2.12	52.87	15.81	Peak
3	5714.500	79.03	109.26	-30.23	62.69	16.34	Peak
4	5794.000	122.56	-----	-----	106.04	16.52	Peak
5	5889.500	76.45	94.47	-18.02	59.87	16.58	Peak
6	5915.500	70.00	75.24	-5.24	53.31	16.69	Peak
7	5934.500	67.23	68.20	-0.97	50.49	16.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5210MHz_H_Average

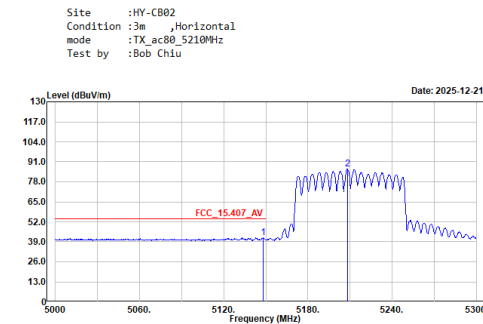

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.200	41.61	54.00	-12.39	27.09	14.52	Average
2	5208.200	86.41	-----	-----	71.92	14.49	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_H_Peak

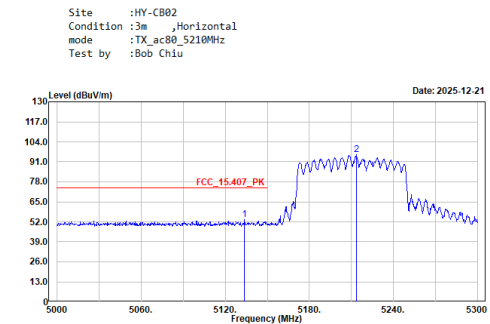


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5133.800	53.57	74.00	-20.43	39.07	14.50	Peak
2	5213.600	95.51	-----	-----	81.02	14.49	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5210MHz
Test by :Bob Chiu

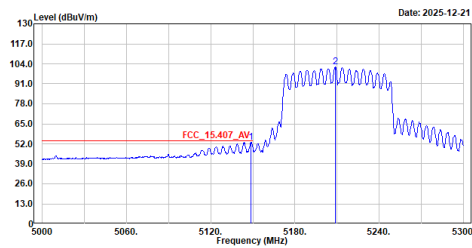


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5148.500	53.15	54.00	-0.85	38.63	14.52	Average
2	5208.800	101.84	-----	-----	87.35	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5210MHz
Test by :Bob Chiu

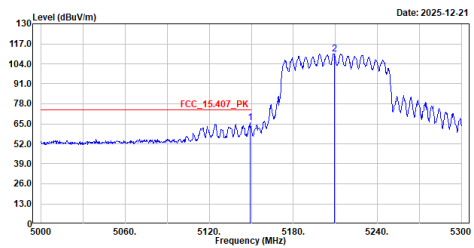


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5149.100	65.85	74.00	-8.15	51.33	14.52	Peak
2	5209.100	110.26	-----	-----	95.77	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5290MHz
Test by :Bob Chiu

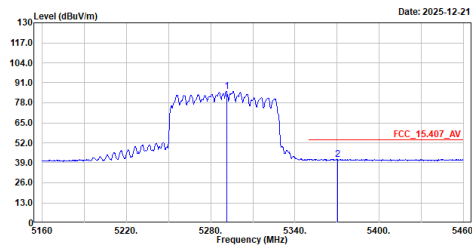


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5291.400	85.52	-----	-----	71.00	14.52	Average
2	5370.300	41.39	54.00	-12.61	26.92	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5290MHz
Test by :Bob Chiu

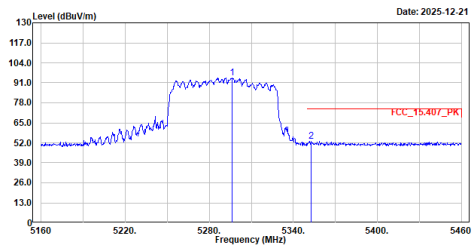


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	Limit	Level	dB/m	
1	5296.200	94.22	-----	-----	79.70	14.52	Peak
2	5352.900	52.98	74.00	-21.02	38.52	14.46	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5290MHz_V_Average

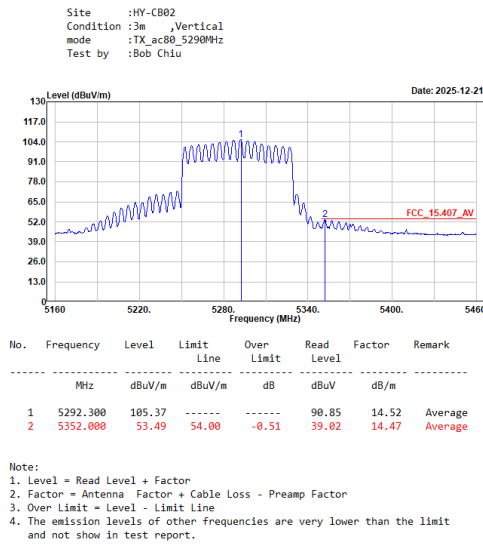


TX_ac80_5290MHz_V_Peak

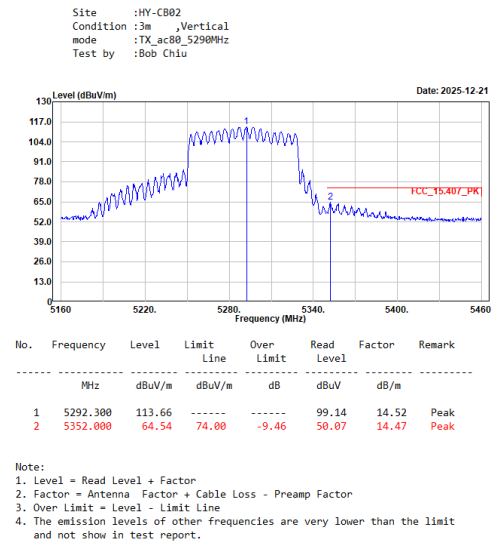

TX_ac80_5530MHz_H_Average

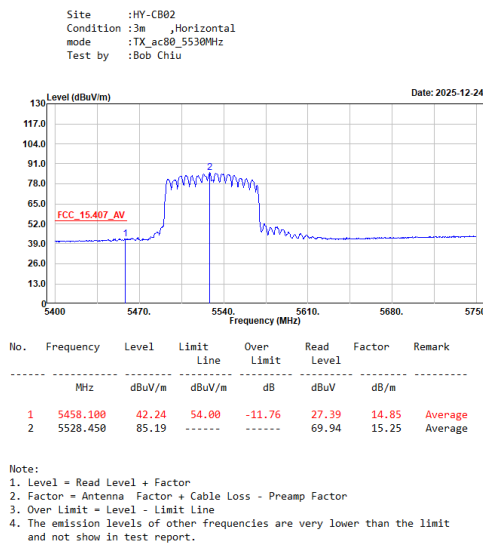


TX_ac80_5530MHz_H_Peak

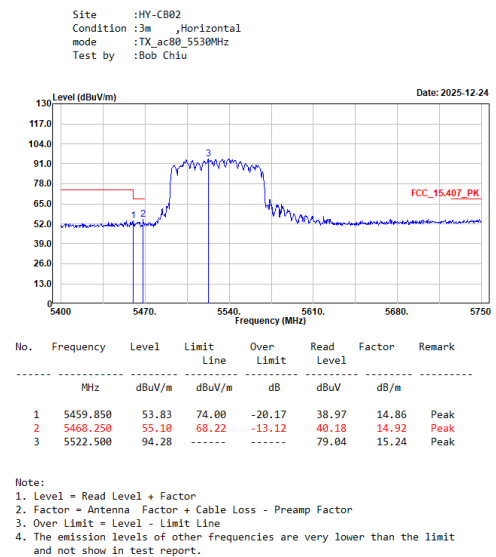

TX_ac80_5530MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5530MHz
Test by :Bob Chiu

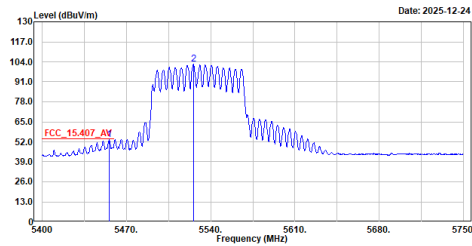


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5455.650	53.30	54.00	-0.70	38.47	14.83	Average
2	5525.650	102.36	-----	-----	87.11	15.25	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5530MHz
Test by :Bob Chiu

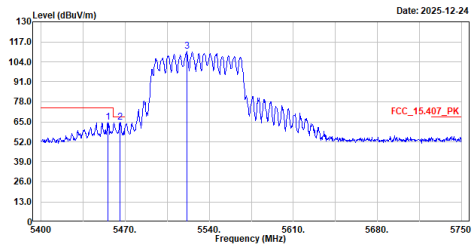


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5455.650	64.66	74.00	-9.34	49.83	14.83	Peak
2	5465.800	64.70	68.22	-3.52	49.79	14.91	Peak
3	5521.450	110.87	-----	-----	95.63	15.24	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5610MHz
Test by :Bob Chiu

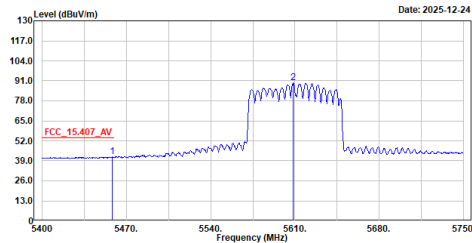


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.450	41.52	54.00	-12.48	26.67	14.85	Average
2	5608.600	89.71	-----	-----	74.25	15.46	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5610MHz
Test by :Bob Chiu

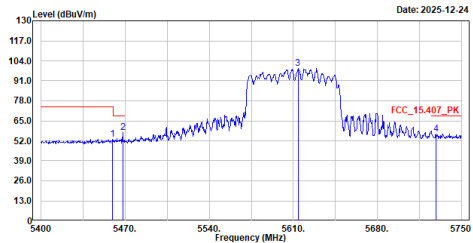


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5459.500	53.13	74.00	-20.87	38.27	14.86	Peak
2	5467.900	57.50	68.22	-10.72	42.58	14.92	Peak
3	5613.850	98.98	-----	-----	83.49	15.49	Peak
4	5728.650	56.60	68.22	-11.62	40.19	16.41	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_V_Average

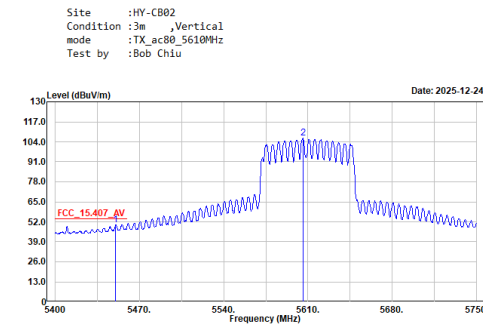


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_V_Peak

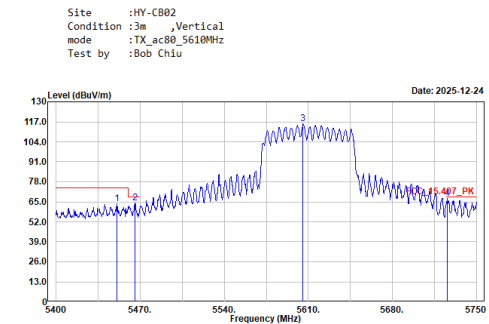


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_H_Peak

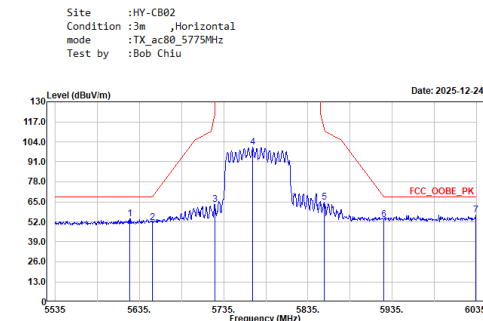


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_V_Peak

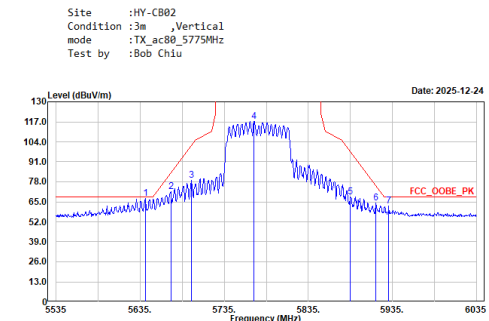


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band1_H_Average

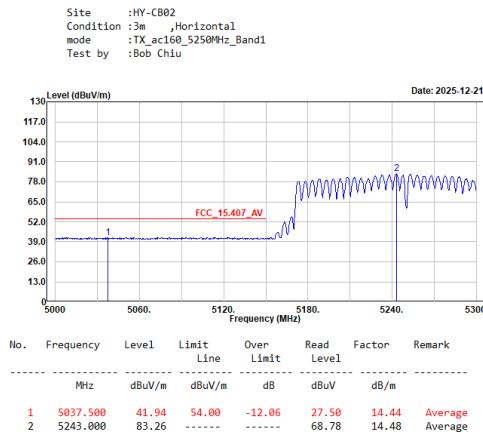


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band1_H_Peak

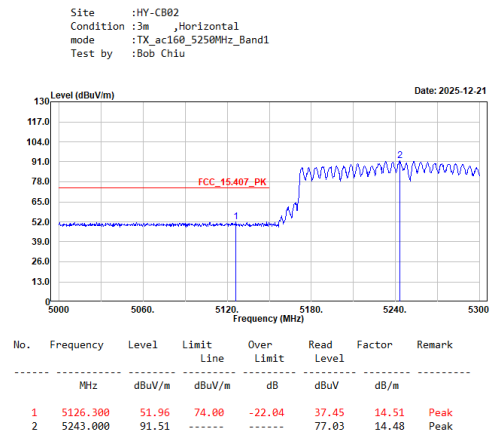


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band1_V_Average

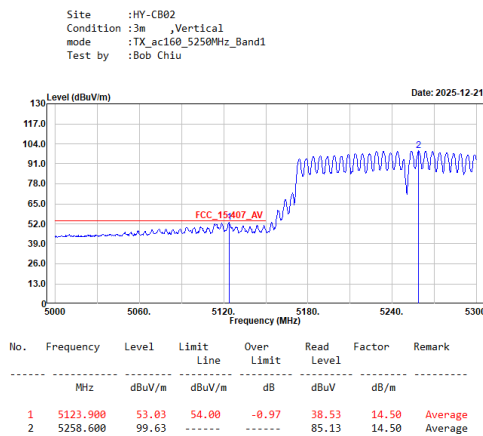


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5250MHz_Band1_V_Peak

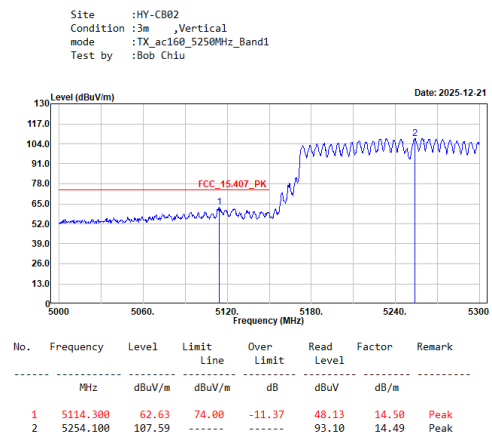


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac160_5250MHz_Band2_H_Average

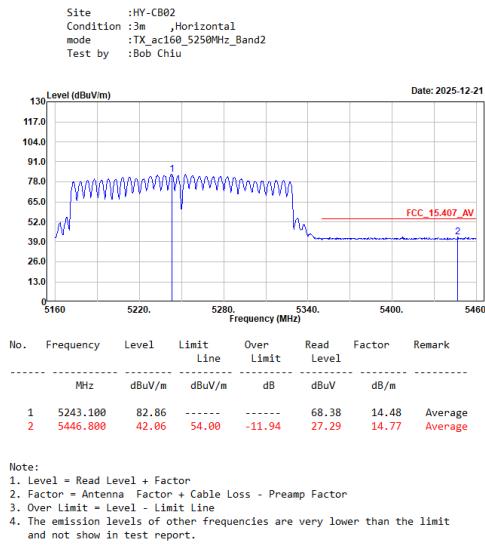


TX_ac160_5250MHz_Band2_H_Peak

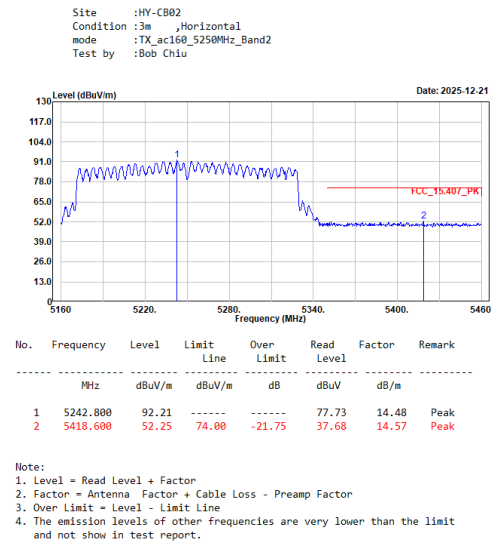

TX_ac160_5250MHz_Band2_V_Average

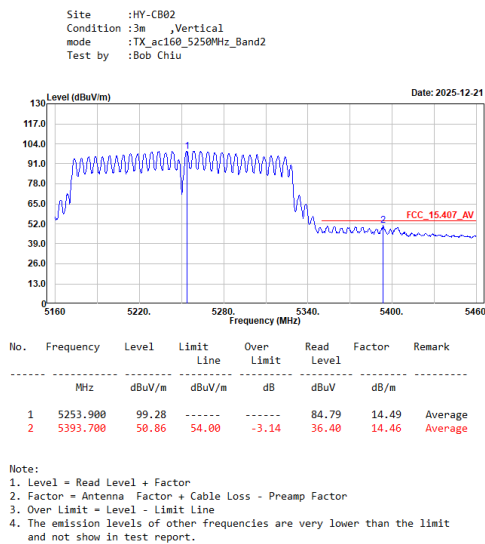


TX_ac160_5250MHz_Band2_V_Peak

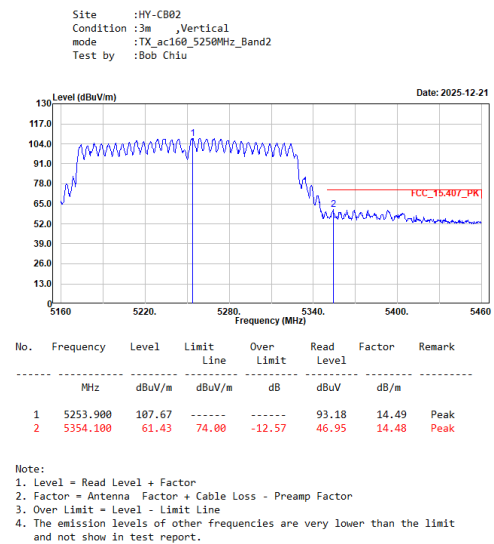

TX_ac160_5570MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5570MHz
Test by :Bob Chiu

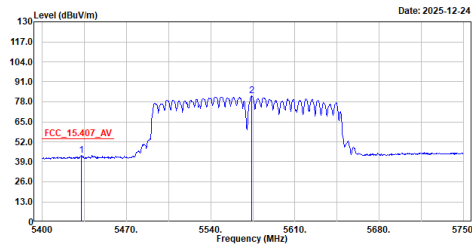


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5432.200	43.08	54.00	-10.92	28.41	14.67	Average
2	5573.950	81.88	-----	-----	66.54	15.34	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac160_5570MHz
Test by :Bob Chiu

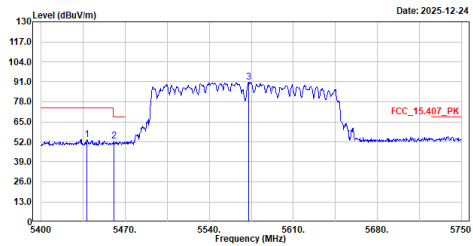


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5438.150	53.64	74.00	-20.36	38.94	14.70	Peak
2	5460.900	52.55	68.22	-15.67	37.68	14.87	Peak
3	5572.900	90.97	-----	-----	75.63	15.34	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5570MHz
Test by :Bob Chiu

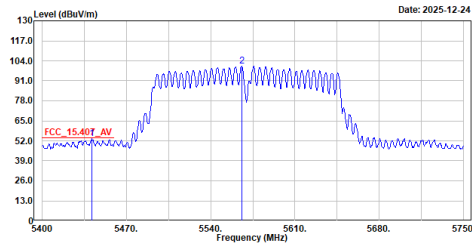


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5441.300	53.36	54.00	-0.64	38.62	14.74	Average
2	5565.900	100.38	-----	-----	85.05	15.33	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac160_5570MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac160_5570MHz
Test by :Bob Chiu

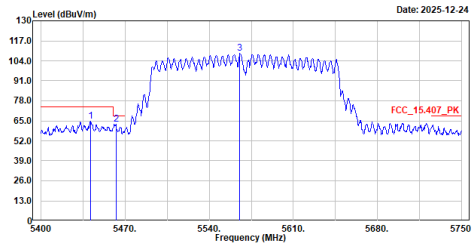


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5441.300	64.80	74.00	-9.20	50.06	14.74	Peak
2	5462.300	63.00	68.22	-5.22	48.11	14.89	Peak
3	5565.550	108.70	-----	-----	93.37	15.33	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be20_5180MHz
Test by :Bob Chiu

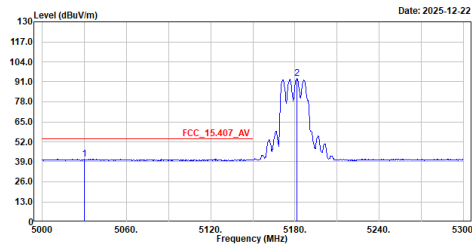


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5030.000	40.77	54.00	-13.23	26.33	14.44	Average
2	5181.500	92.99	-----	-----	78.49	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be20_5180MHz
Test by :Bob Chiu

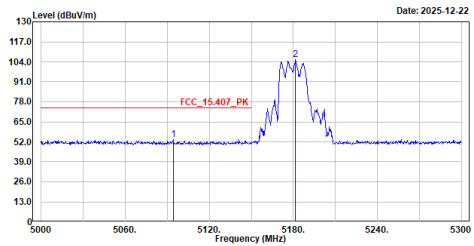


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5094.200	53.65	74.00	-20.35	39.16	14.49	Peak
2	5181.500	105.30	-----	-----	90.80	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be20_5180MHz
Test by :Bob Chiu

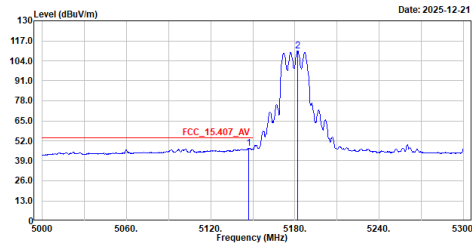


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.300	47.27	54.00	-6.73	32.75	14.52	Average
2	5182.100	110.62	-----	-----	96.12	14.50	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5180MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be20_5180MHz
Test by :Bob Chiu

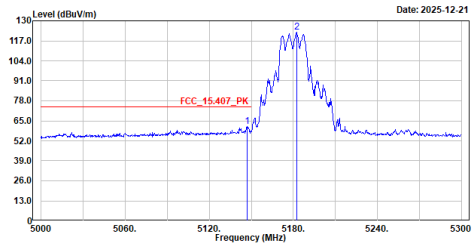


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5147.000	61.21	74.00	-12.79	46.69	14.52	Peak
2	5182.400	122.41	-----	-----	107.91	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5320MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be20_5320MHz
Test by :Bob Chiu

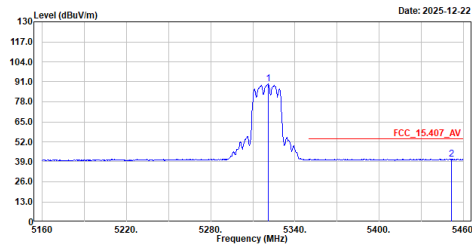


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5320.800	89.90	-----	-----	75.40	14.50	Average
2	5451.300	40.84	54.00	-13.16	26.03	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5320MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be20_5320MHz
Test by :Bob Chiu

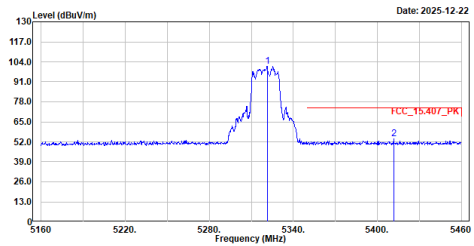


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5321.400	100.95	-----	-----	86.45	14.50	Peak
2	5411.700	53.73	74.00	-20.27	39.20	14.53	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5320MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be20_5320MHz
Test by :Bob Chiu

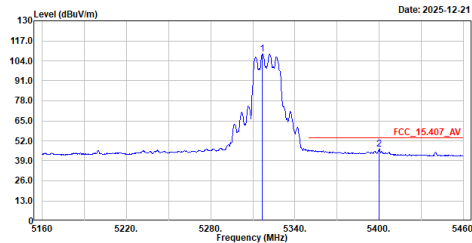


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5316.900	108.42	-----	-----	93.92	14.50	Average
2	5400.000	46.57	54.00	-7.43	32.11	14.46	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5320MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be20_5320MHz
Test by :Bob Chiu

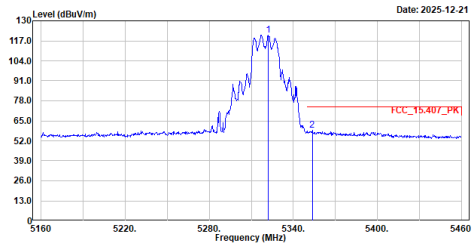


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5322.000	120.91	-----	-----	106.41	14.50	Peak
2	5353.500	58.68	74.00	-15.32	44.20	14.48	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5500MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be20_5500MHz
Test by :Bob Chiu

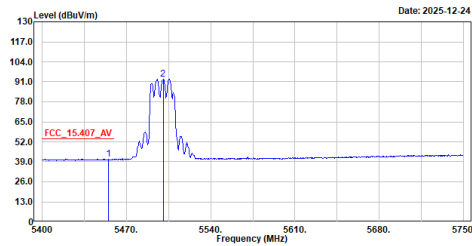


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5455.300	40.81	54.00	-13.19	25.98	14.83	Average
2	5500.450	92.94	-----	-----	77.78	15.16	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5500MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be20_5500MHz
Test by :Bob Chiu

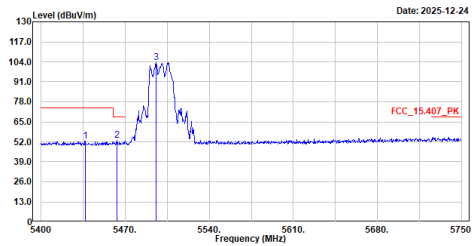


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5436.750	52.30	74.00	-21.70	37.60	14.70	Peak
2	5463.000	52.81	68.22	-15.41	37.92	14.89	Peak
3	5495.550	103.31	-----	-----	88.18	15.13	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5500MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be20_5500MHz
Test by :Bob Chiu

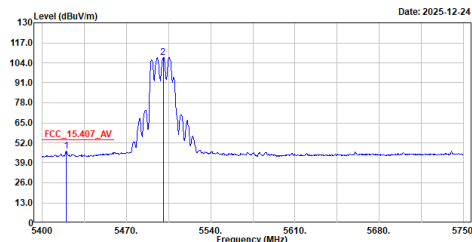


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5419.950	46.49	54.00	-7.51	31.91	14.58	Average
2	5500.450	107.59	-----	-----	92.43	15.16	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be20_5500MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be20_5500MHz
Test by :Bob Chiu

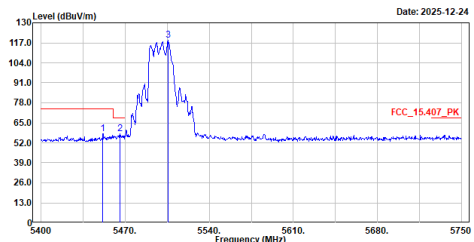


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5451.450	57.94	74.00	-16.06	43.13	14.81	Peak
2	5465.450	58.10	68.22	-10.12	43.19	14.91	Peak
3	5505.700	118.50	-----	-----	103.31	15.19	Peak


Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be20 5700MHz H Peak

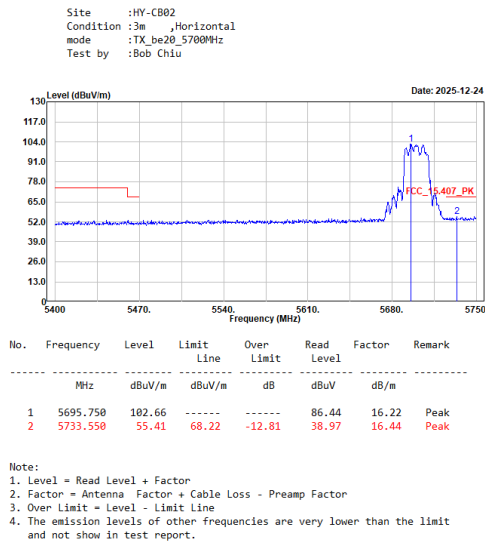


TX be20 5700MHz V Peak


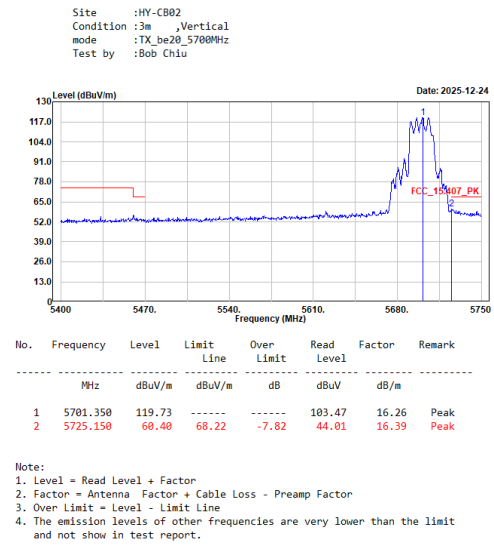


TX be20 5745MHz H Peak

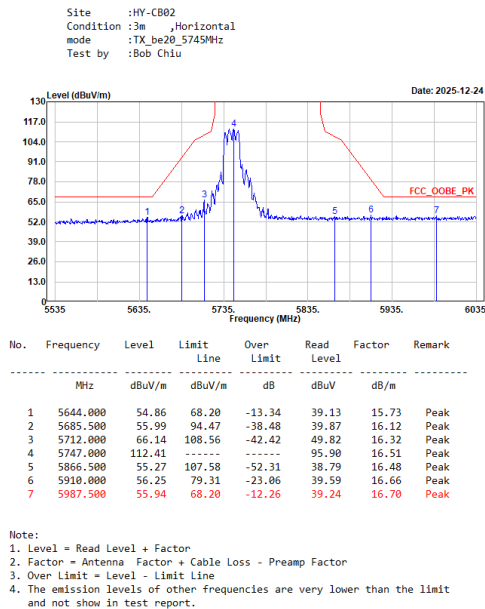


TX be20 5745MHz V Peak

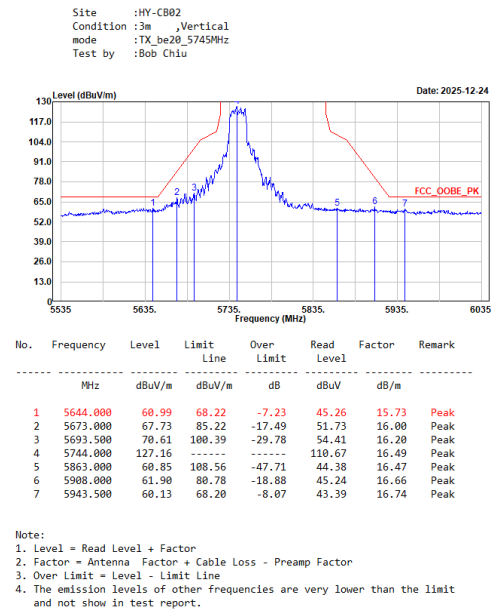

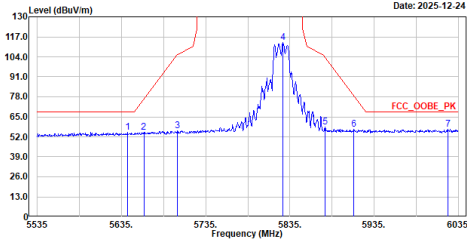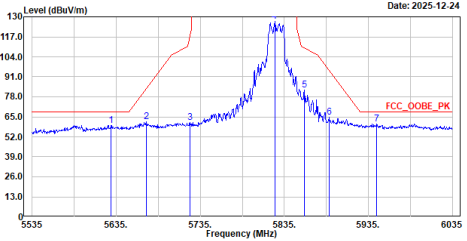TX_be20_5825MHz_H_Peak				TX_be20_5825MHz_V_Peak			
Site :HY-CB02 Condition :3m ,Horizontal mode :TX_be20_5825MHz Test by :Bob Chiu 				Site :HY-CB02 Condition :3m ,Vertical mode :TX_be20_5825MHz Test by :Bob Chiu 			
No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5642.000	54.98	68.20	-13.22	39.27	15.71	Peak
2	5661.500	55.12	76.72	-21.60	39.23	15.89	Peak
3	5701.000	55.91	105.48	-49.57	39.66	16.25	Peak
4	5827.000	113.41	-----	-----	96.95	16.46	Peak
5	5876.500	58.29	104.09	-45.80	41.76	16.53	Peak
6	5911.000	56.75	78.57	-21.82	40.08	16.67	Peak
7	6022.500	56.68	68.20	-11.52	39.95	16.73	Peak
Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.							
No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5629.000	59.53	68.20	-8.67	43.92	15.61	Peak
2	5670.500	61.74	83.37	-21.63	45.77	15.97	Peak
3	5722.500	61.34	116.50	-55.16	44.97	16.37	Peak
4	5823.500	127.25	-----	-----	110.79	16.46	Peak
5	5858.500	82.42	109.82	-27.40	65.97	16.45	Peak
6	5888.000	64.75	95.58	-30.83	48.18	16.57	Peak
7	5945.000	60.53	68.20	-7.67	43.79	16.74	Peak
Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.							

TX be40 5190MHz H Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5190MHz
Test by :Bob Chiu

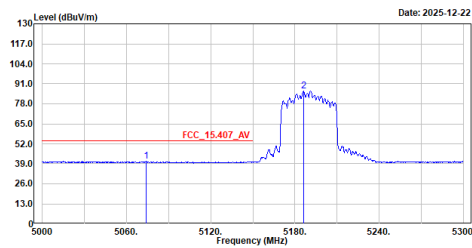


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5073.800	40.53	54.00	-13.47	26.05	14.48	Average
2	5186.300	86.22	-----	-----	71.73	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5190MHz H Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5190MHz
Test by :Bob Chiu

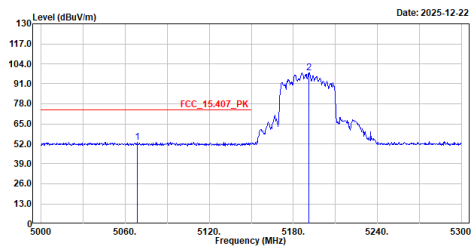


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5068.400	53.03	74.00	-20.97	38.57	14.46	Peak
2	5191.100	98.34	-----	-----	83.84	14.50	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5190MHz V Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5190MHz
Test by :Bob Chiu

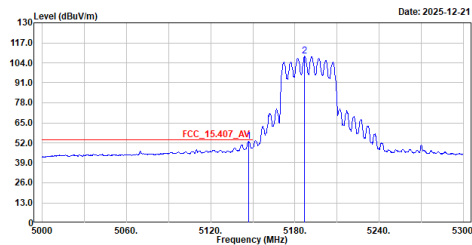


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5147.000	53.02	54.00	-0.98	38.50	14.52	Average
2	5186.900	108.25	-----	-----	93.76	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5190MHz V Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5190MHz
Test by :Bob Chiu

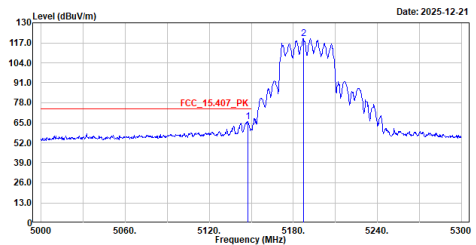


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5147.600	65.97	74.00	-8.03	51.45	14.52	Peak
2	5187.200	119.85	-----	-----	105.36	14.49	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5310MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5310MHz
Test by :Bob Chiu

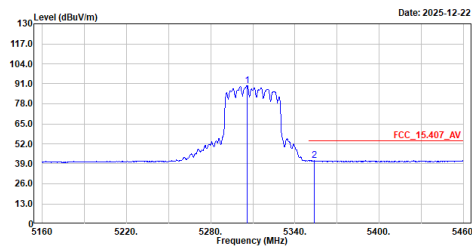


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5306.100	89.70	-----	-----	75.18	14.52	Average
2	5353.800	41.23	54.00	-12.77	26.75	14.48	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5310MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be40_5310MHz
Test by :Bob Chiu

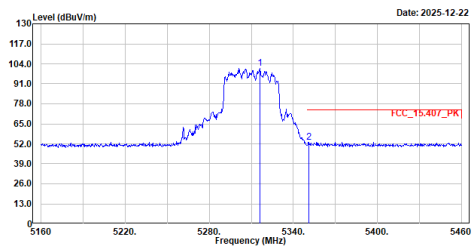


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5316.300	101.20	-----	-----	86.70	14.50	Peak
2	5351.100	53.21	74.00	-20.79	38.74	14.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5310MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5310MHz
Test by :Bob Chiu

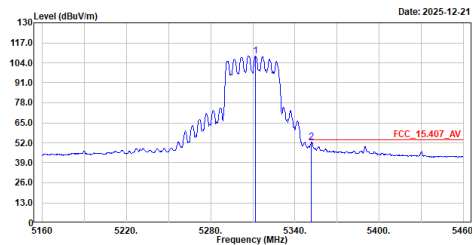


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5312.100	108.53	-----	-----	94.01	14.52	Average
2	5351.700	52.60	54.00	-1.40	38.13	14.47	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5310MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be40_5310MHz
Test by :Bob Chiu

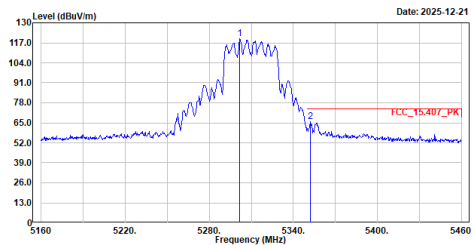


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5301.900	119.56	-----	-----	105.03	14.53	Peak
2	5352.300	65.70	74.00	-8.30	51.23	14.47	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5510MHz_H_Average

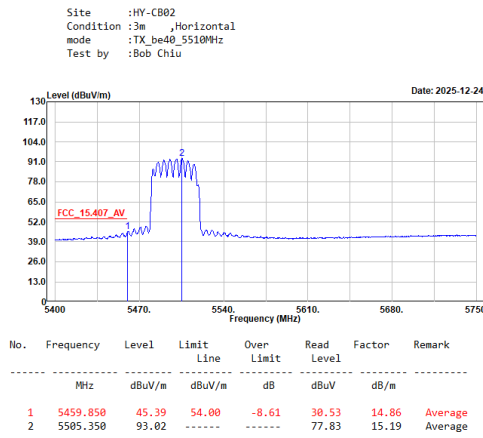


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5510MHz_H_Peak

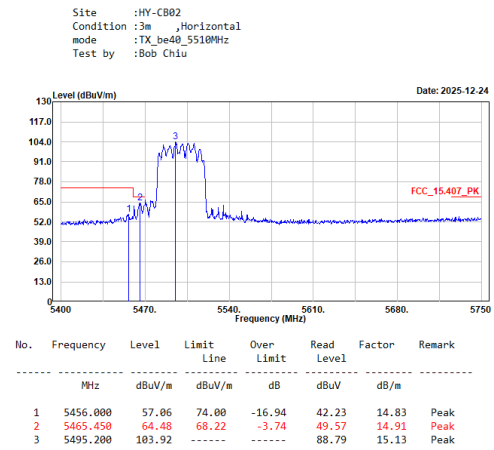


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5510MHz_V_Average

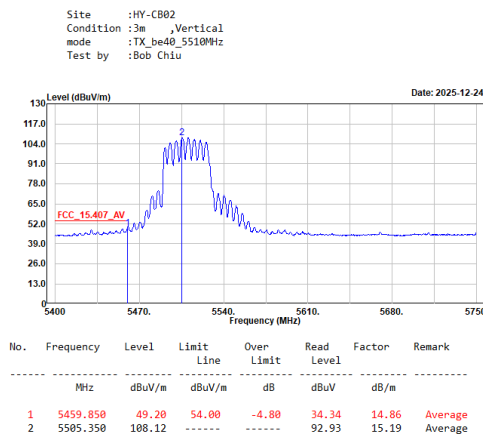


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be40_5510MHz_V_Peak

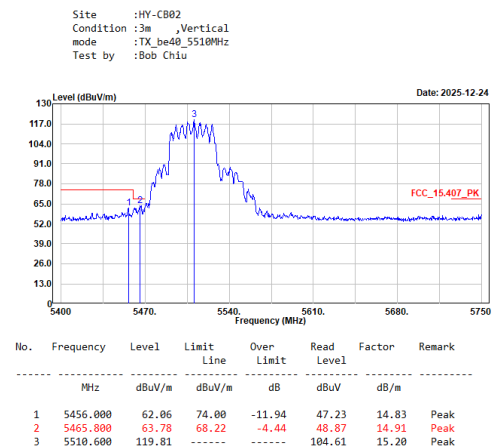


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be40 5670MHz H Peak

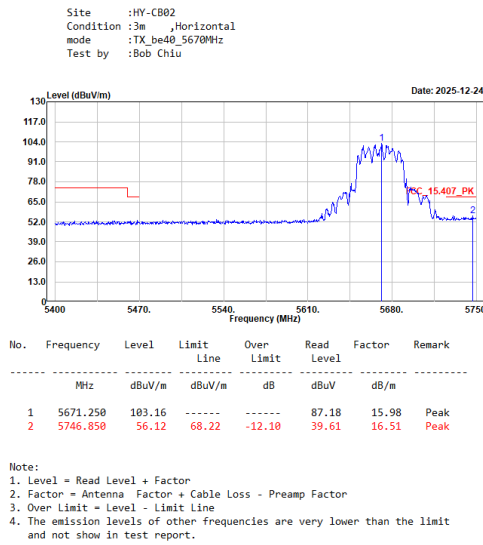


TX be40 5670MHz V Peak

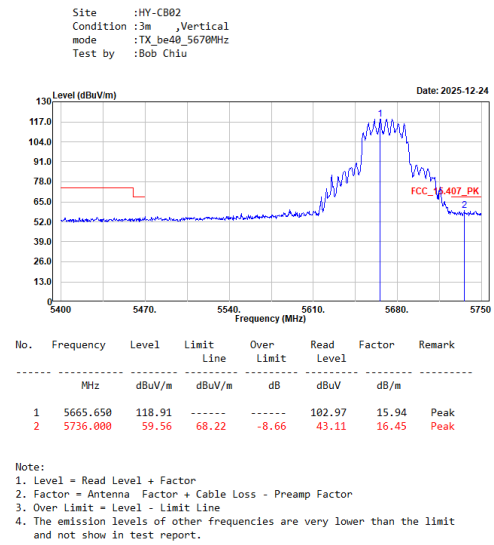


TX be40 5755MHz H Peak

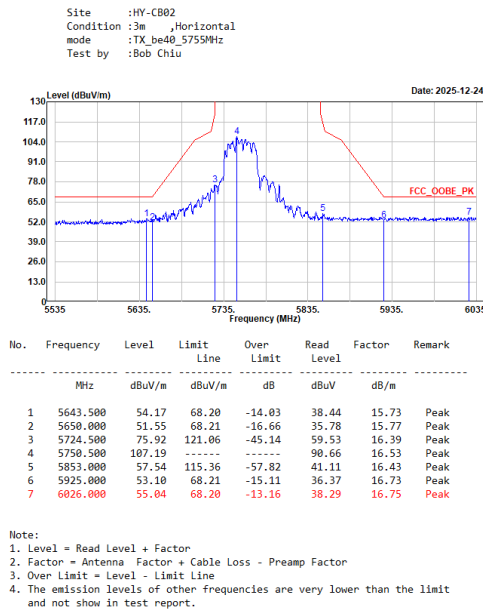

TX be40 5755MHz V Peak

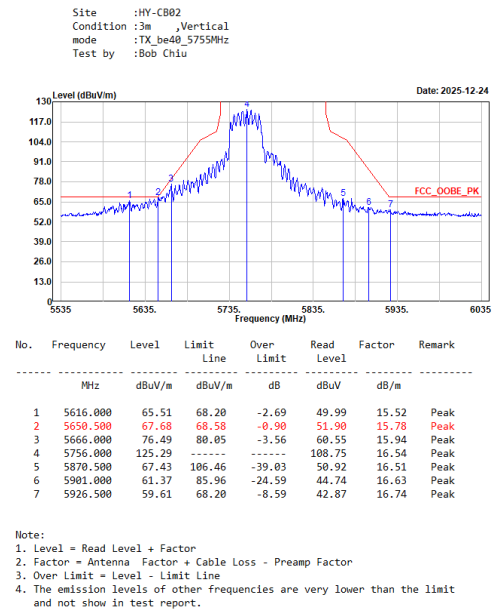

TX be40 5795MHz H Peak

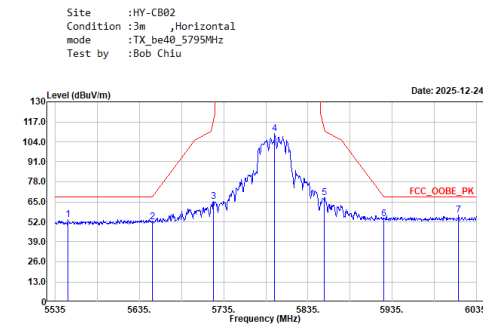


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5550.000	53.61	68.20	-14.59	38.29	15.32	Peak
2	5650.000	51.99	68.21	-16.22	36.22	15.77	Peak
3	5723.000	65.46	117.64	-52.18	49.08	16.38	Peak
4	5795.500	109.50	-----	-----	92.98	16.52	Peak
5	5854.500	67.89	111.94	-44.05	51.45	16.44	Peak
6	5925.000	53.95	68.21	-14.26	37.22	16.73	Peak
7	6014.000	56.41	68.20	-11.79	39.70	16.71	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be40 5795MHz V Peak

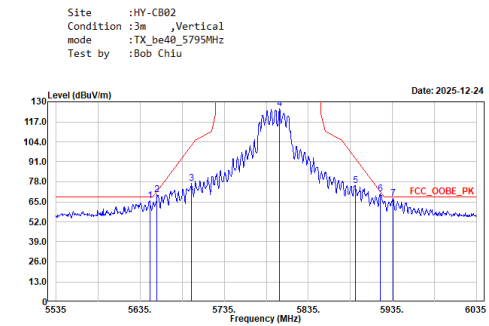


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5646.500	65.59	68.20	-2.61	49.84	15.75	Peak
2	5655.000	69.54	71.91	-2.37	53.71	15.83	Peak
3	5696.000	76.82	102.24	-25.42	60.60	16.22	Peak
4	5800.500	125.57	-----	-----	109.05	16.52	Peak
5	5891.000	75.62	93.36	-17.74	59.04	16.58	Peak
6	5920.500	70.83	71.54	-1.51	53.32	16.71	Peak
7	5936.000	67.29	68.20	-0.91	50.55	16.74	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5210MHz H Average

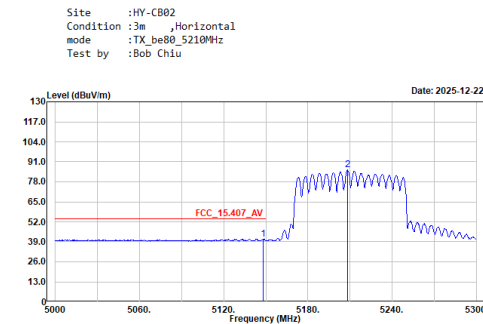


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.200	40.90	54.00	-13.10	26.38	14.52	Average
2	5208.200	85.84	-----	-----	71.35	14.49	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5210MHz H Peak

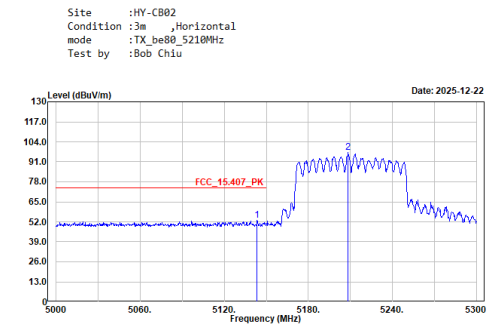


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5143.400	52.91	74.00	-21.09	38.40	14.51	Peak
2	5208.500	97.30	-----	-----	82.81	14.49	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V_Average

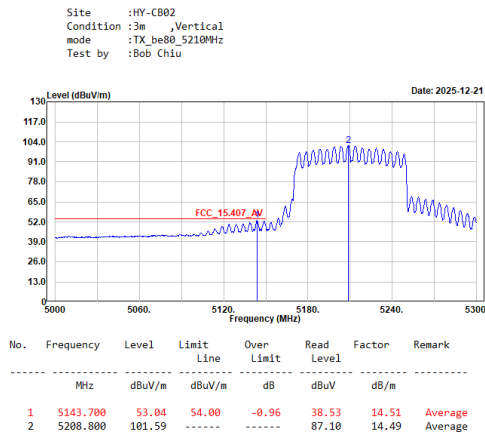


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V_Peak

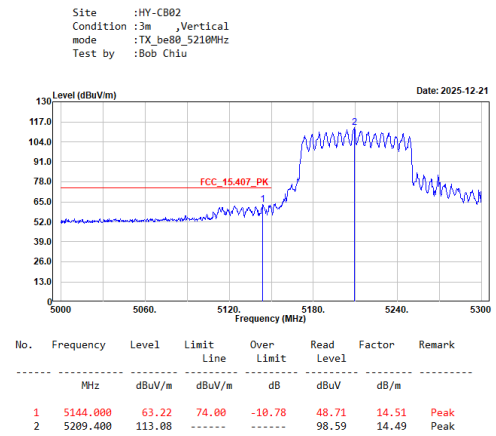


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H_Average

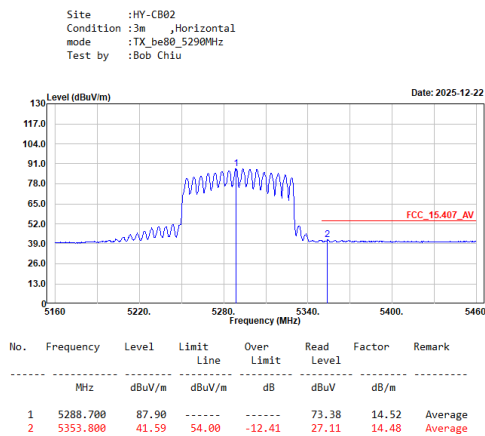


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H_Peak

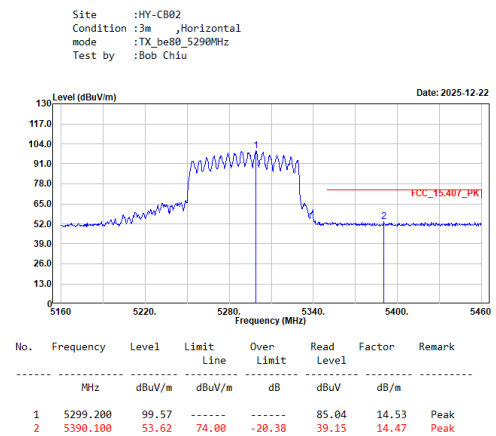


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be80 5290MHz V Average

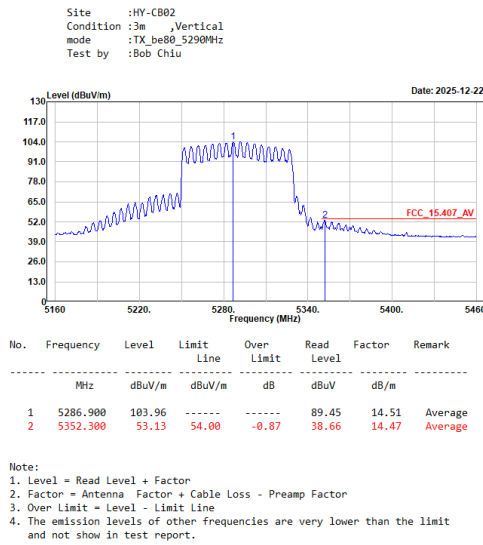


TX be80 5290MHz V Peak

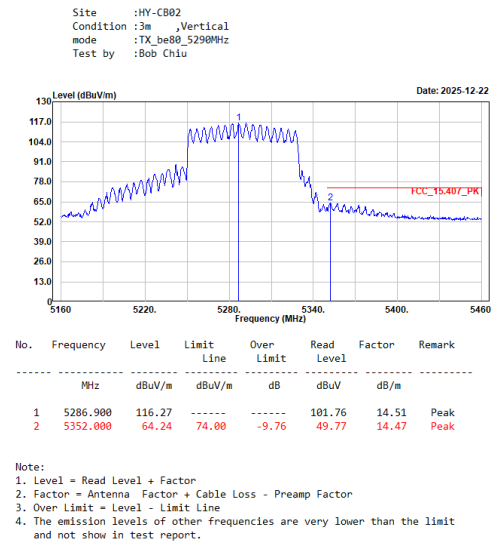


TX be80 5530MHz H Average

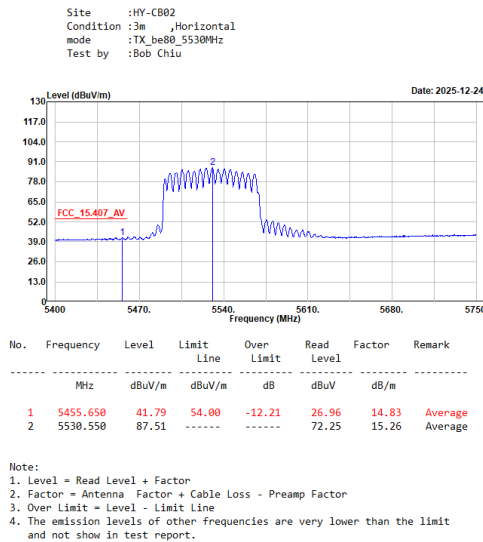

TX be80 5530MHz H Peak

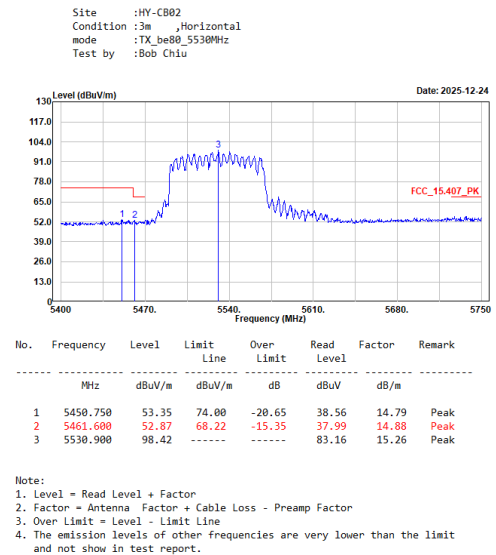


TX be80 5530MHz V Average

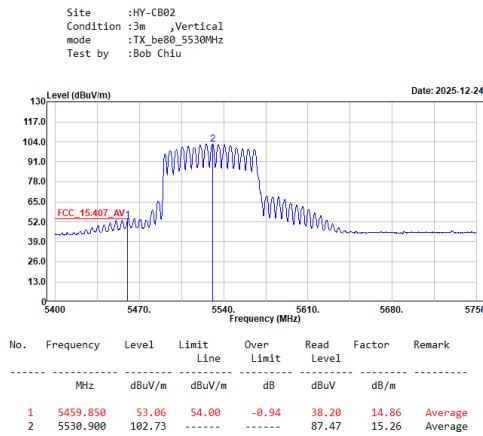


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5530MHz V Peak

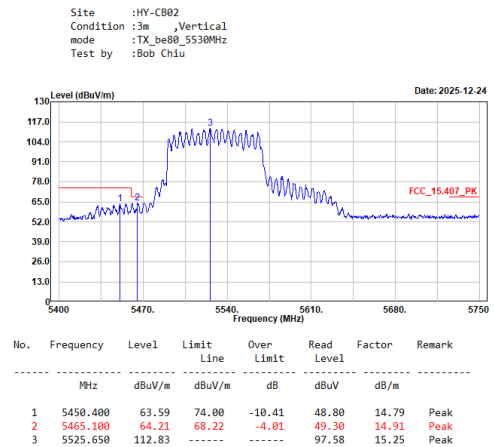


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5610MHz H Average

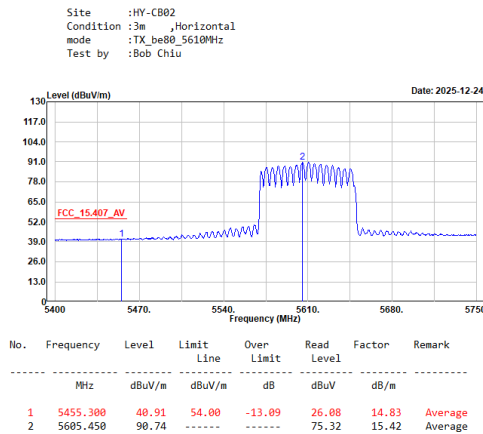


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80 5610MHz H Peak

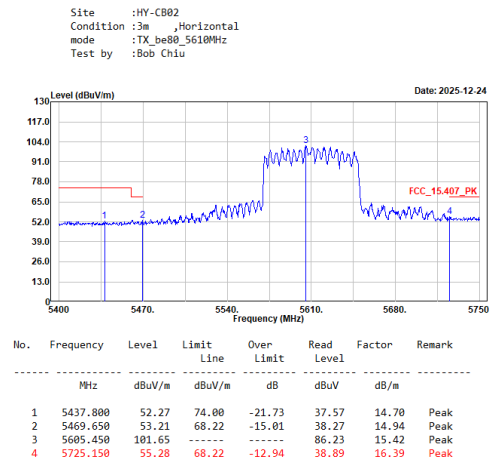

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be80 5610MHz V Average

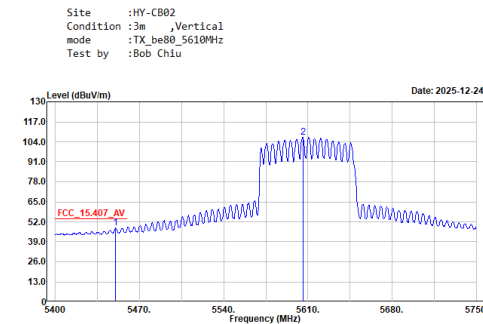

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5450.050	48.02	54.00	-5.98	33.23	14.79	Average
2	5605.000	106.99	-----	-----	91.57	15.42	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be80 5610MHz V Peak

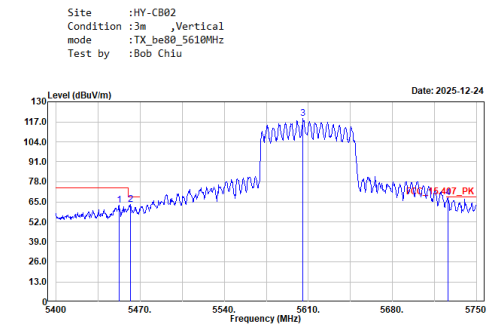

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5452.500	62.59	74.00	-11.41	47.77	14.82	Peak
2	5461.950	63.33	68.22	-4.89	48.45	14.88	Peak
3	5605.450	119.08	-----	-----	103.66	15.42	Peak
4	5726.200	67.60	68.22	-0.62	51.20	16.40	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be80 5775MHz H Peak

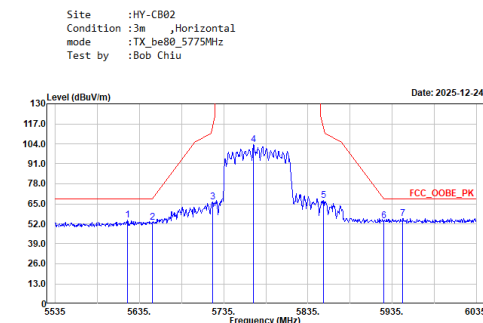

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5620.500	54.63	68.20	-13.57	39.09	15.54	Peak
2	5650.000	52.77	68.21	-15.44	37.00	15.77	Peak
3	5721.500	66.12	114.22	-48.10	49.75	16.37	Peak
4	5770.000	103.64	-----	-----	87.11	16.53	Peak
5	5853.500	67.14	114.22	-47.08	50.71	16.43	Peak
6	5925.000	53.74	68.21	-14.47	37.01	16.73	Peak
7	5947.500	55.48	68.20	-12.72	38.74	16.74	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX be80 5775MHz V Peak

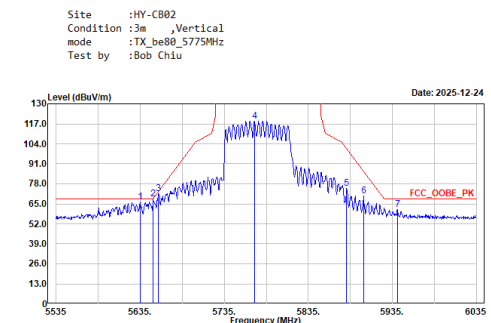

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5635.000	66.32	68.20	-1.88	50.66	15.66	Peak
2	5650.500	68.06	68.58	-0.52	52.28	15.78	Peak
3	5657.000	71.68	73.39	-1.71	55.83	15.85	Peak
4	5771.000	118.90	-----	-----	102.37	16.53	Peak
5	5880.500	75.14	101.13	-25.99	58.60	16.54	Peak
6	5900.500	69.94	86.33	-16.39	53.31	16.63	Peak
7	5941.000	61.55	68.20	-6.65	44.80	16.75	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band1_H_Average

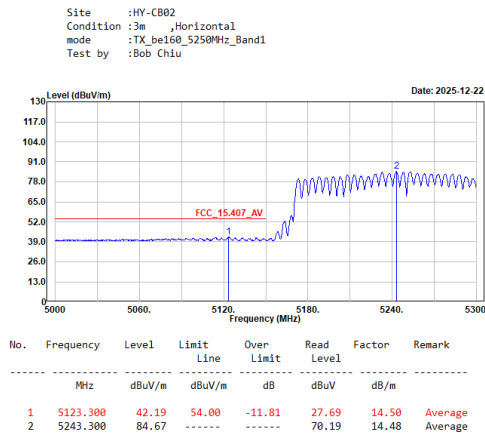


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band1_H_Peak

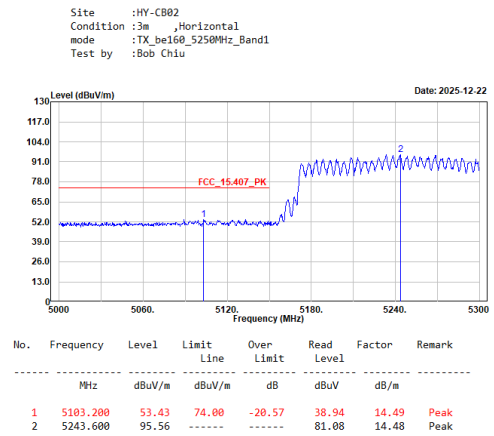


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band1_V_Average

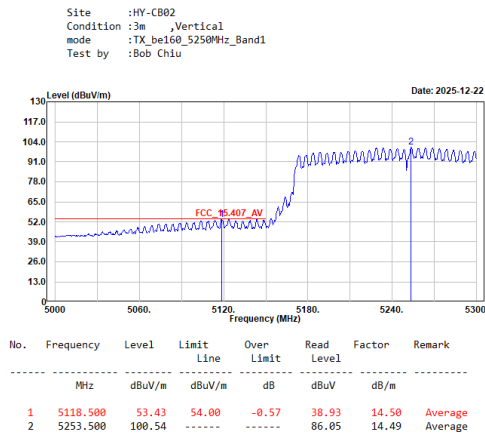


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_Band1_V_Peak

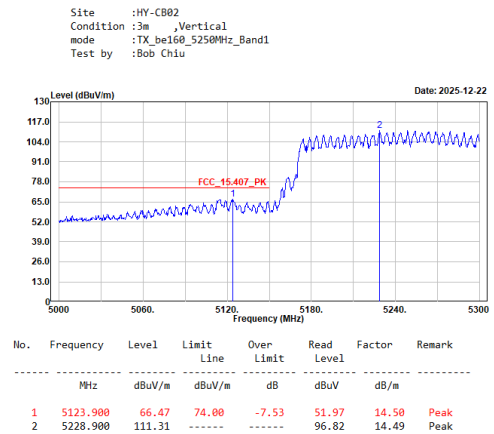


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be160_5250MHz_Band2_H_Average

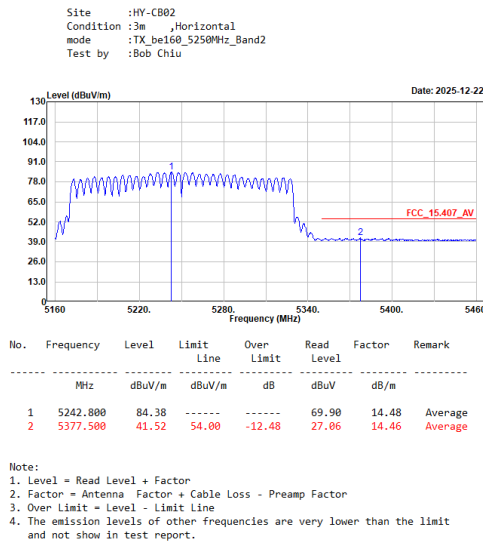


TX_be160_5250MHz_Band2_H_Peak

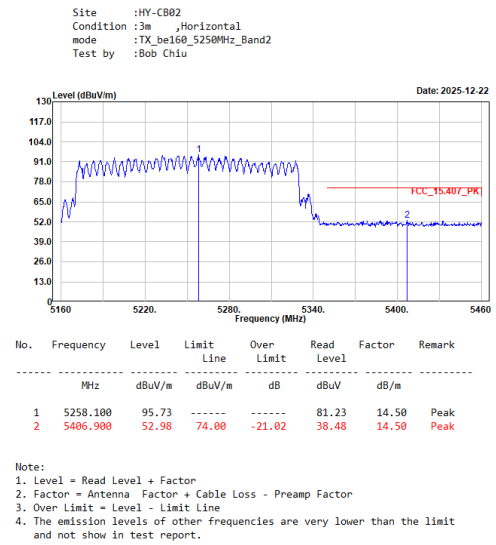


TX_be160_5250MHz_Band2_V_Average

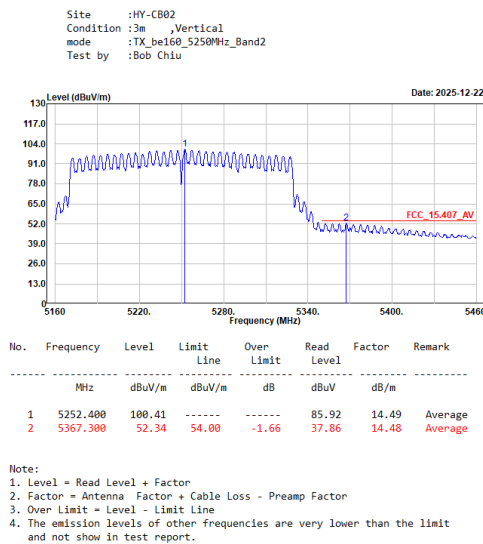

TX_be160_5250MHz_Band2_V_Peak

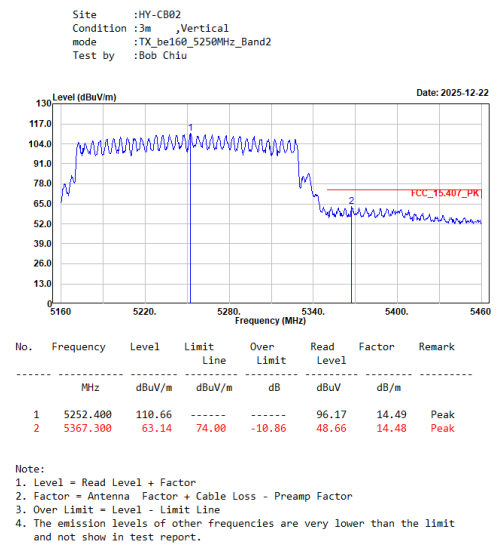


TX_be160_5570MHz_H_Average

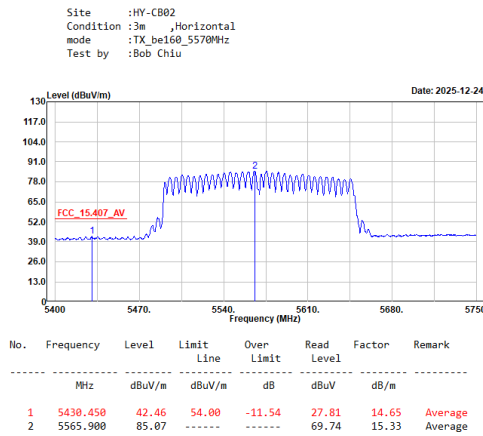


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5570MHz_H_Peak

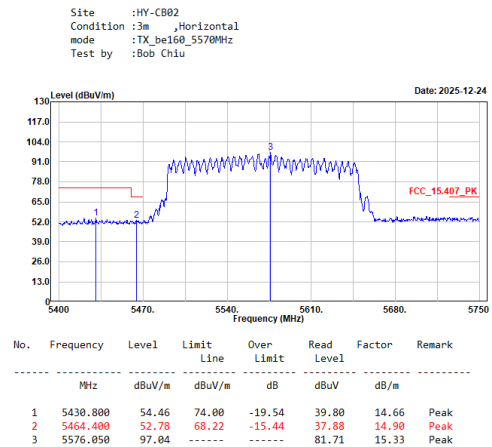


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5570MHz_V_Average

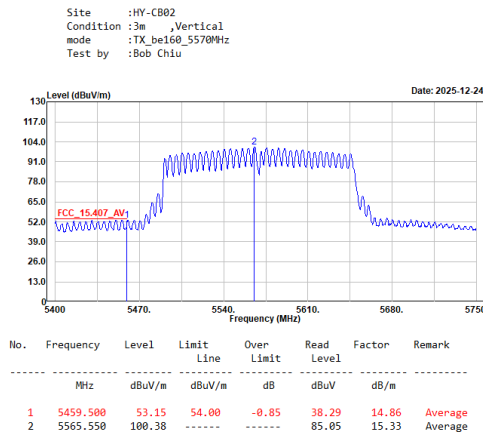





Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5570MHz_V_Peak

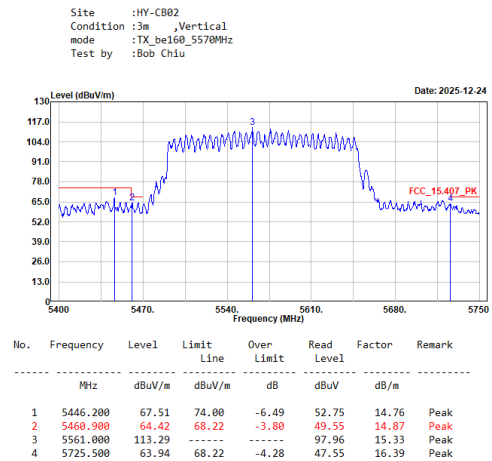


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be160_5250MHz_H				TX_be160_5250MHz_V																																																																			
Site :HY-CB02 Condition :3m ,HORIZONTAL mode :TX_be160_5250MHz Test by :Bob Chiu Level (dBuV/m) 100 90.0 80.0 70.0 60.0 50.0 40.0 30.0 20.0 10.0 0 18000 22400 26800 31200 35600 40000 Frequency (MHz) FCC_15.407_PK FCC_15.407_A2 Date: 2025-12-31 <table><tr><th>No.</th><th>Frequency</th><th>Level</th><th>Limit Line</th><th>Over Limit</th><th>Read Level</th><th>Factor</th><th>Remark</th></tr><tr><td></td><td>MHz</td><td>dBuV/m</td><td>dBuV/m</td><td>dB</td><td>dBuV</td><td>dB/m</td><td></td></tr><tr><td>1</td><td>39863.880</td><td>43.77</td><td>54.00</td><td>-10.23</td><td>24.54</td><td>19.23</td><td>Average</td></tr><tr><td>2</td><td>39863.880</td><td>56.49</td><td>74.00</td><td>-17.51</td><td>37.26</td><td>19.23</td><td>Peak</td></tr></table> Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.				No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark		MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m		1	39863.880	43.77	54.00	-10.23	24.54	19.23	Average	2	39863.880	56.49	74.00	-17.51	37.26	19.23	Peak	Site :HY-CB02 Condition :3m ,VERTICAL mode :TX_be160_5250MHz Test by :Bob Chiu Level (dBuV/m) 100 90.0 80.0 70.0 60.0 50.0 40.0 30.0 20.0 10.0 0 18000 22400 26800 31200 35600 40000 Frequency (MHz) FCC_15.407_PK FCC_15.407_A2 Date: 2025-12-31 <table><tr><th>No.</th><th>Frequency</th><th>Level</th><th>Limit Line</th><th>Over Limit</th><th>Read Level</th><th>Factor</th><th>Remark</th></tr><tr><td></td><td>MHz</td><td>dBuV/m</td><td>dBuV/m</td><td>dB</td><td>dBuV</td><td>dB/m</td><td></td></tr><tr><td>1</td><td>39437.630</td><td>42.73</td><td>54.00</td><td>-11.27</td><td>24.35</td><td>18.38</td><td>Average</td></tr><tr><td>2</td><td>39437.630</td><td>56.87</td><td>74.00</td><td>-17.13</td><td>38.49</td><td>18.38</td><td>Peak</td></tr></table> Note: 1. Level = Read Level + Factor 2. Factor = Antenna Factor + Cable Loss - Preamp Factor 3. Over Limit = Level - Limit Line 4. The emission levels of other frequencies are very lower than the limit and not show in test report.				No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark		MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m		1	39437.630	42.73	54.00	-11.27	24.35	18.38	Average	2	39437.630	56.87	74.00	-17.13	38.49	18.38	Peak
No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark																																																																
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m																																																																	
1	39863.880	43.77	54.00	-10.23	24.54	19.23	Average																																																																
2	39863.880	56.49	74.00	-17.51	37.26	19.23	Peak																																																																
No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark																																																																
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m																																																																	
1	39437.630	42.73	54.00	-11.27	24.35	18.38	Average																																																																
2	39437.630	56.87	74.00	-17.13	38.49	18.38	Peak																																																																

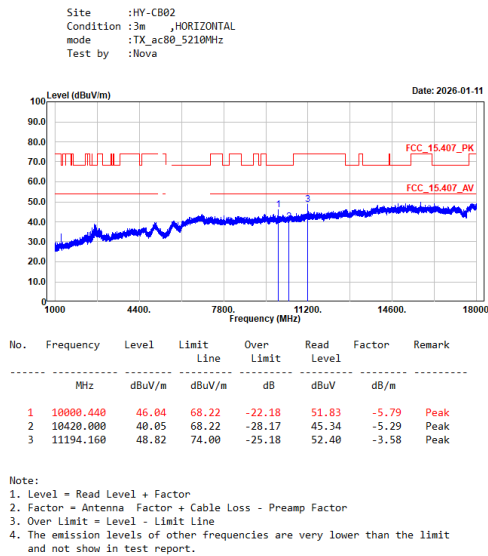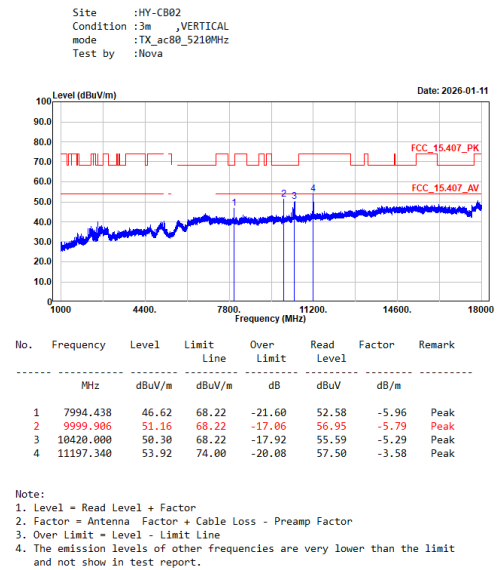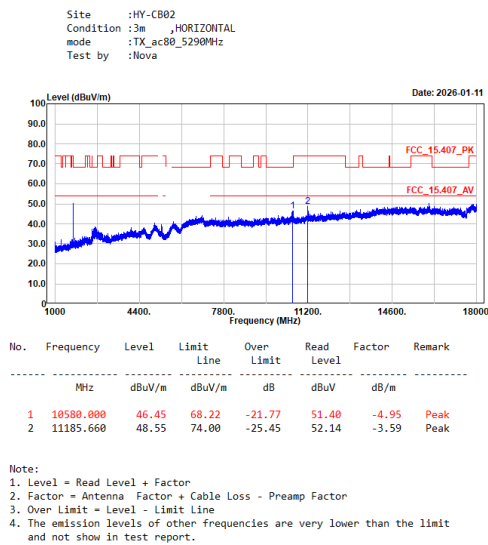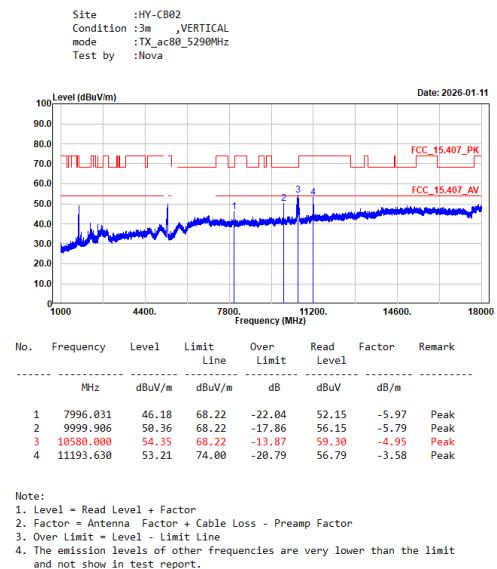M/N: AW7990-NPD, Antenna: Dipole**TX_ac80_5210MHz_H****TX_ac80_5210MHz_V****TX_ac80_5290MHz_H****TX_ac80_5290MHz_V**

TX_ac80_5530MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5530MHz
Test by :Nova

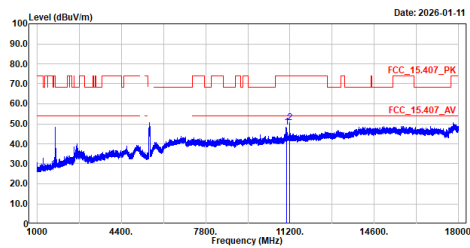


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11060.000	48.12	74.00	-25.88	52.01	-3.89	Peak
2	11190.970	50.74	74.00	-23.26	54.33	-3.59	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5530MHz
Test by :Nova

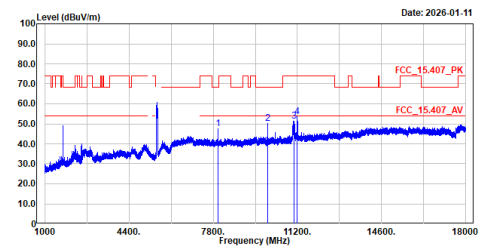


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7994.969	47.57	68.22	-20.65	53.54	-5.97	Peak
2	10000.440	50.11	68.22	-18.11	55.90	-5.79	Peak
3	11060.000	51.26	74.00	-22.74	55.15	-3.89	Peak
4	11189.910	53.42	74.00	-20.58	57.01	-3.59	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5610MHz
Test by :Nova

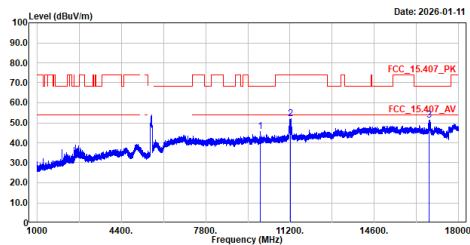


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	9999.906	45.52	68.22	-22.70	51.31	-5.79	Peak
2	11220.000	52.08	74.00	-21.92	55.55	-3.47	Peak
3	16830.000	51.21	68.22	-17.01	49.00	2.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5610MHz
Test by :Nova

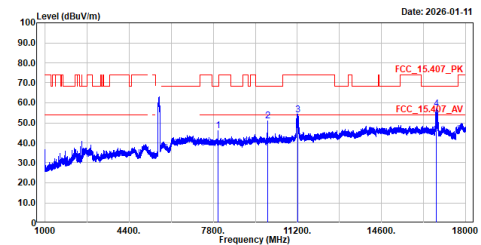


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7992.313	46.00	68.22	-22.22	51.96	-5.96	Peak
2	10000.440	50.77	68.22	-17.45	56.56	-5.79	Peak
3	11220.000	53.89	74.00	-20.11	57.36	-3.47	Peak
4	16830.000	56.96	68.22	-11.26	54.75	2.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5690MHz
Test by :Nova

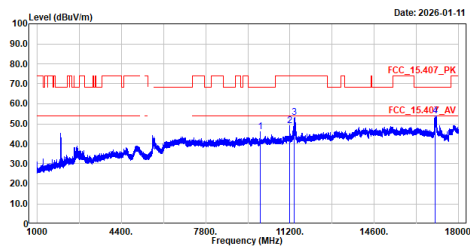


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10000.440	46.00	68.22	-22.22	51.79	-5.79	Peak
2	11192.560	49.01	74.00	-24.99	52.59	-3.58	Peak
3	11380.000	53.11	74.00	-20.89	56.16	-3.05	Peak
4	17070.000	54.13	68.22	-14.09	51.70	2.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5690MHz
Test by :Nova

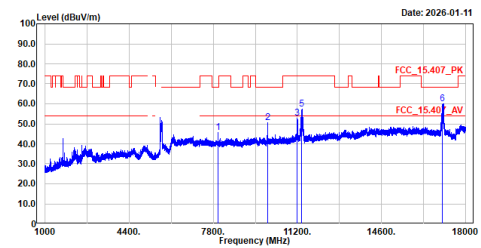


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.031	45.82	68.22	-22.40	51.79	-5.97	Peak
2	9999.906	50.68	68.22	-17.54	56.47	-5.79	Peak
3	11197.340	52.96	74.00	-21.04	56.54	-3.58	Peak
4	11380.000	44.45	54.00	-9.55	47.50	-3.05	Average
5	11380.000	57.37	74.00	-16.63	60.42	-3.05	Peak
6	17070.000	60.83	68.22	-8.19	57.60	2.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5775MHz
Test by :Nova

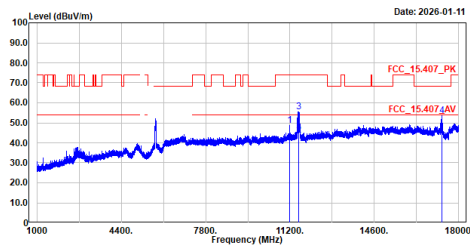


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11195.750	48.59	74.00	-25.41	52.17	-3.58	Peak
2	11550.000	43.59	54.00	-10.41	46.38	-2.79	Average
3	11550.000	55.37	74.00	-18.63	58.16	-2.79	Peak
4	17325.000	53.51	68.22	-14.71	50.90	2.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5775MHz
Test by :Nova

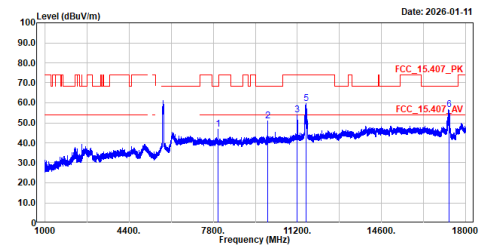


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	8002.938	46.78	68.22	-21.44	52.79	-6.01	Peak
2	10000.440	50.87	68.22	-17.35	56.66	-5.79	Peak
3	11187.780	53.85	74.00	-20.15	57.43	-3.58	Peak
4	11550.000	47.29	54.00	-6.71	50.08	-2.79	Average
5	11550.000	59.52	74.00	-14.48	62.31	-2.79	Peak
6	17325.000	56.43	68.22	-11.79	53.82	2.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5210MHz
Test by :Nova

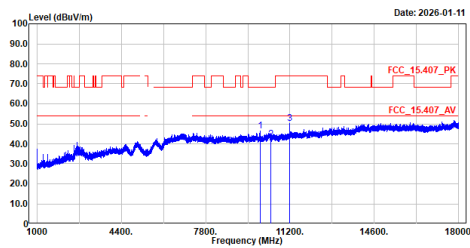


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	9999.906	46.40	68.22	-21.82	52.19	-5.79	Peak
2	10420.000	42.42	68.22	-25.80	47.71	-5.29	Peak
3	11192.560	50.18	74.00	-23.82	53.76	-3.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5210MHz
Test by :Nova

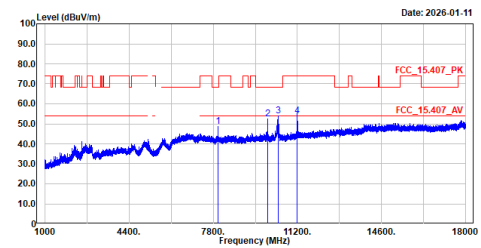


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.375	48.69	68.22	-19.53	54.65	-5.96	Peak
2	10000.440	52.32	68.22	-15.90	58.11	-5.79	Peak
3	10420.000	53.88	68.22	-14.34	59.17	-5.29	Peak
4	11189.910	53.84	74.00	-20.16	57.43	-3.59	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5290MHz
Test by :Nova

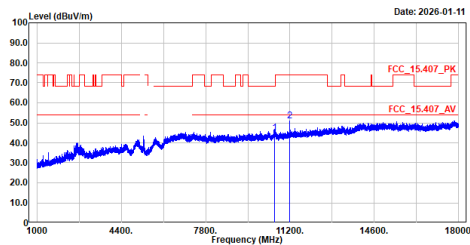


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10580.000	44.91	68.22	-23.31	49.86	-4.95	Peak
2	11194.160	50.77	74.00	-23.23	54.35	-3.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5290MHz
Test by :Nova

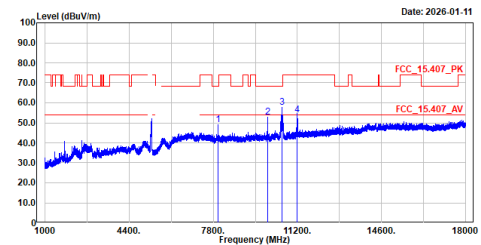


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7992.844	49.01	68.22	-19.21	54.97	-5.96	Peak
2	10000.440	52.73	68.22	-15.49	58.52	-5.79	Peak
3	10580.000	57.86	68.22	-10.36	62.81	-4.95	Peak
4	11189.910	53.83	74.00	-20.17	57.42	-3.59	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5530MHz
Test by :Nova

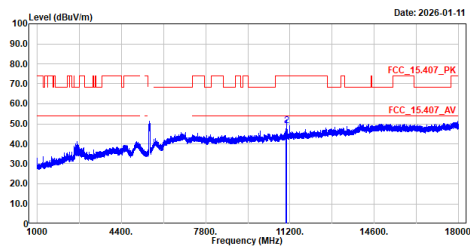


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11043.818	47.58	74.00	-26.42	51.53	-3.95	Peak
2	11060.000	48.88	74.00	-25.12	52.77	-3.89	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5530MHz
Test by :Nova

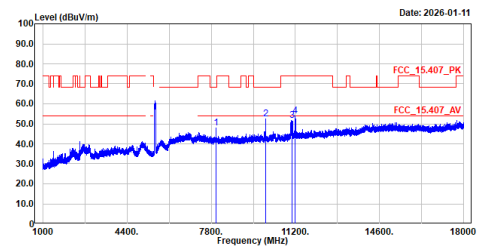


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7999.219	48.10	68.22	-20.12	54.09	-5.99	Peak
2	10000.440	52.37	68.22	-15.85	58.16	-5.79	Peak
3	11060.000	51.55	74.00	-22.45	55.44	-3.89	Peak
4	11197.340	53.89	74.00	-20.11	57.47	-3.58	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5610MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5610MHz
Test by :Nova

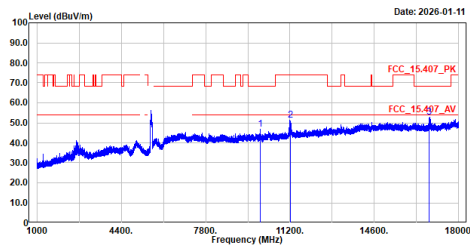


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10000.440	46.81	68.22	-21.41	52.60	-5.79	Peak
2	11220.000	51.38	74.00	-22.62	54.85	-3.47	Peak
3	16830.000	52.78	68.22	-15.44	50.57	2.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5610MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5610MHz
Test by :Nova

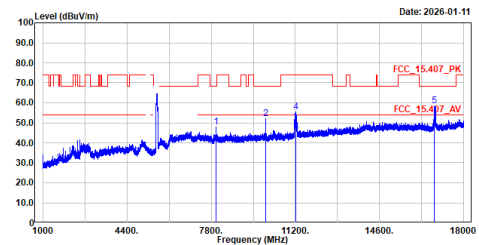


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7988.594	48.05	68.22	-20.17	53.99	-5.94	Peak
2	10000.440	52.15	68.22	-16.07	57.94	-5.79	Peak
3	11220.000	45.32	54.00	-8.68	48.79	-3.47	Average
4	11220.000	55.56	74.00	-18.44	59.03	-3.47	Peak
5	16830.000	58.42	68.22	-9.80	56.21	2.21	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5690MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5690MHz
Test by :Nova

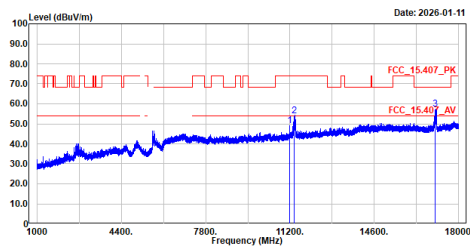


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11191.500	49.21	74.00	-24.79	52.80	-3.59	Peak
2	11380.000	53.90	74.00	-20.10	56.95	-3.05	Peak
3	17070.000	57.42	68.22	-10.80	54.99	2.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5690MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5690MHz
Test by :Nova

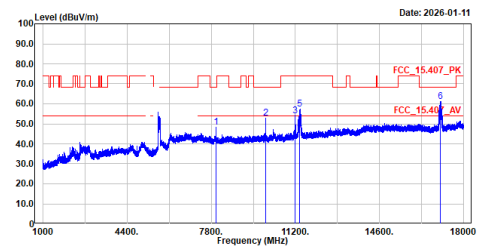


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7992.844	48.29	68.22	-19.93	54.25	-5.96	Peak
2	9999.906	52.92	68.22	-15.30	58.71	-5.79	Peak
3	11194.160	53.84	74.00	-20.16	57.42	-3.58	Peak
4	11380.000	46.72	54.00	-7.28	49.77	-3.05	Average
5	11380.000	57.45	74.00	-16.55	60.50	-3.05	Peak
6	17070.000	61.01	68.22	-7.21	58.58	2.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5775MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5775MHz
Test by :Nova

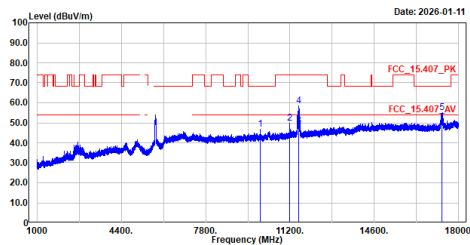


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10000.440	46.66	68.22	-21.56	52.45	-5.79	Peak
2	11191.500	49.74	74.00	-24.26	53.33	-3.59	Peak
3	11550.000	48.50	54.00	-5.50	51.29	-2.79	Average
4	11550.000	58.39	74.00	-15.61	61.18	-2.79	Peak
5	17325.000	55.08	68.22	-13.14	52.47	2.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5775MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5775MHz
Test by :Nova

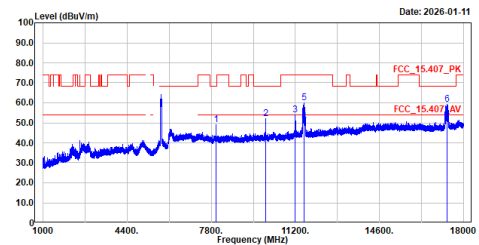


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7994.438	49.19	68.22	-19.03	55.15	-5.96	Peak
2	9999.906	52.16	68.22	-16.06	57.95	-5.79	Peak
3	11192.560	53.82	74.00	-20.18	57.40	-3.58	Peak
4	11550.000	50.56	54.00	-3.44	53.35	-2.79	Average
5	11550.000	60.87	74.00	-13.93	62.86	-2.79	Peak
6	17325.000	59.32	68.22	-8.90	56.71	2.61	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_H_QP

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5775MHz
Test by :Bob Chiu

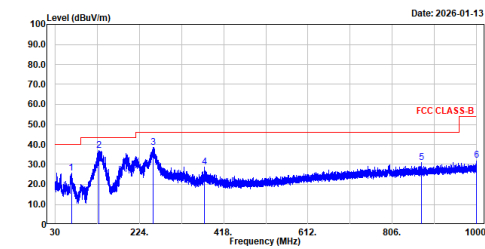


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	67.102	25.77	40.00	-14.23	38.22	-12.45	QP
2	130.555	36.81	43.50	-6.69	48.98	-12.17	QP
3	254.962	38.60	46.00	-7.40	50.62	-12.02	QP
4	373.668	28.53	46.00	-17.47	36.96	-8.43	QP
5	873.294	30.80	46.00	-15.20	30.97	-0.17	QP
6	1000.000	31.97	54.00	-22.03	30.60	1.37	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_be80_5775MHz_V_QP

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5775MHz
Test by :Bob Chiu

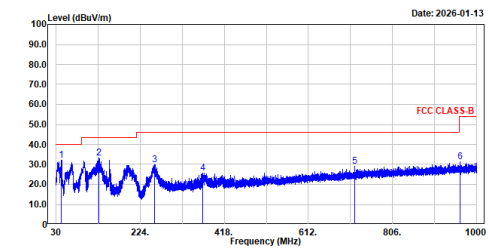


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	41.101	32.04	40.00	-7.96	42.45	-10.41	QP
2	128.105	33.27	43.50	-10.23	45.86	-12.59	QP
3	257.262	29.92	46.00	-16.08	41.85	-11.93	QP
4	368.567	25.78	46.00	-20.22	34.50	-8.72	QP
5	719.236	28.94	46.00	-17.06	30.78	-1.84	QP
6	961.998	31.24	54.00	-22.76	30.16	1.08	QP

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

TX_ac80_5210MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Bob Chiu

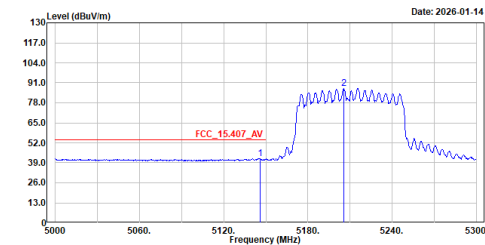


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5145.100	41.90	54.00	-12.10	27.46	14.44	Average
2	5205.500	87.35	-----	-----	72.98	14.37	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5210MHz
Test by :Bob Chiu

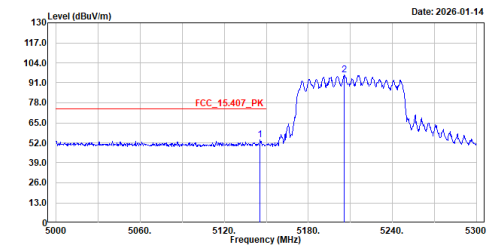


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5145.500	53.78	74.00	-20.22	39.35	14.43	Peak
2	5205.800	96.13	-----	-----	81.76	14.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5210MHz
Test by :Bob Chiu

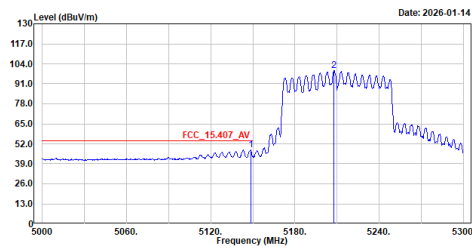


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.500	47.89	54.00	-6.11	33.45	14.44	Average
2	5207.900	99.73	-----	-----	85.37	14.36	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5210MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5210MHz
Test by :Bob Chiu

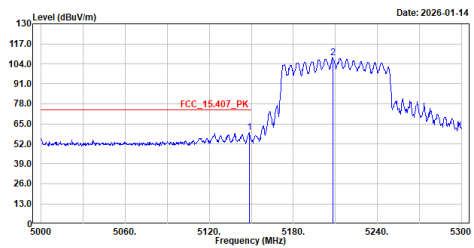


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5148.500	59.18	74.00	-14.82	44.74	14.44	Peak
2	5208.200	108.04	-----	-----	93.68	14.36	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5290MHz
Test by :Bob Chiu

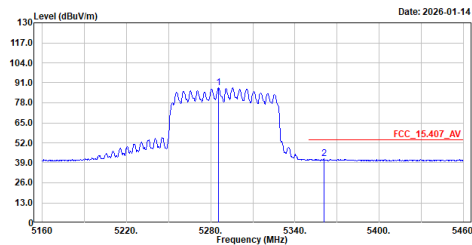


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5285.700	87.89	-----	-----	73.56	14.33	Average
2	5360.700	41.60	54.00	-12.40	27.36	14.24	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5290MHz
Test by :Bob Chiu

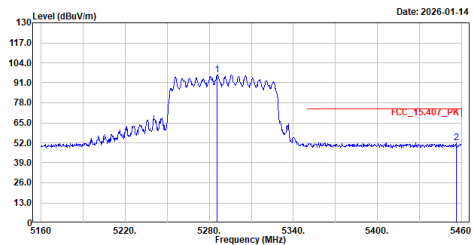


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5285.700	96.18	-----	-----	81.85	14.33	Peak
2	5456.100	52.13	74.00	-21.87	37.70	14.43	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5290MHz
Test by :Bob Chiu

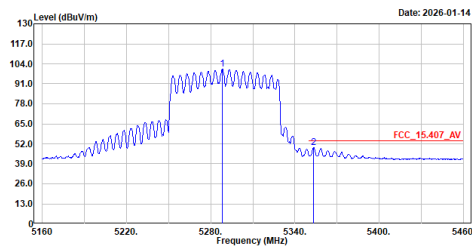


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5288.400	100.46	-----	-----	86.13	14.33	Average
2	5353.200	49.57	54.00	-4.43	35.32	14.25	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5290MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5290MHz
Test by :Bob Chiu

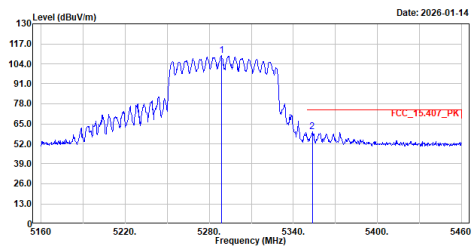


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5288.700	109.18	-----	-----	94.85	14.33	Peak
2	5353.500	59.88	74.00	-14.12	45.63	14.25	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5530MHz
Test by :Bob Chiu

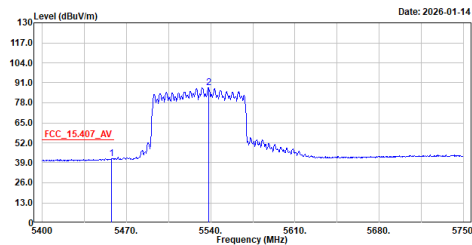


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.750	41.74	54.00	-12.26	27.30	14.44	Average
2	5538.250	87.74	-----	-----	72.87	14.87	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5530MHz
Test by :Bob Chiu

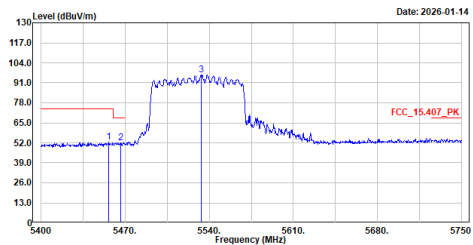


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5456.000	52.41	74.00	-21.59	37.98	14.43	Peak
2	5466.500	52.21	68.22	-16.01	37.72	14.49	Peak
3	5533.350	96.37	-----	-----	81.53	14.84	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5530MHz
Test by :Bob Chiu

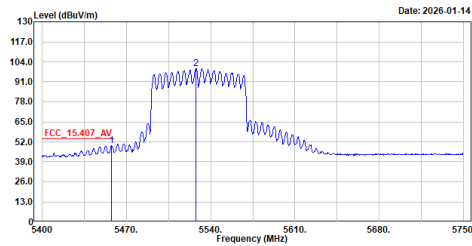


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5457.750	49.48	54.00	-4.52	35.04	14.44	Average
2	5527.750	99.67	-----	-----	84.86	14.81	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_ac80_5530MHz
Test by :Bob Chiu

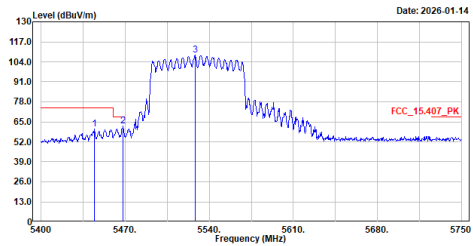


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5444.450	60.39	74.00	-13.61	46.01	14.38	Peak
2	5468.250	62.43	68.22	-5.79	47.94	14.49	Peak
3	5528.100	108.37	-----	-----	93.56	14.81	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5610MHz
Test by :Bob Chiu

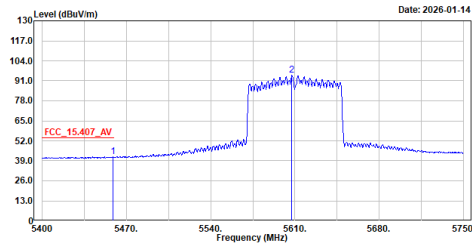


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.800	41.63	54.00	-12.37	26.77	14.86	Average
2	5607.550	94.58	-----	-----	79.13	15.45	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_ac80_5610MHz
Test by :Bob Chiu

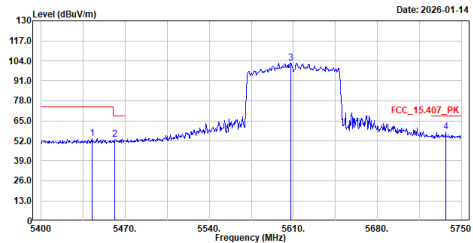


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5442.350	53.63	74.00	-20.37	38.89	14.74	Peak
2	5461.600	53.22	68.22	-15.00	38.34	14.88	Peak
3	5607.900	102.70	-----	-----	87.24	15.46	Peak
4	5736.700	57.64	68.22	-10.58	41.18	16.46	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5610MHz_V_Average

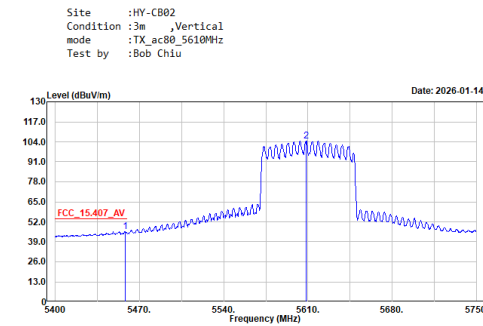

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.450	45.72	54.00	-8.28	30.87	14.85	Average
2	5608.600	104.62	-----	-----	89.16	15.46	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5610MHz_V_Peak

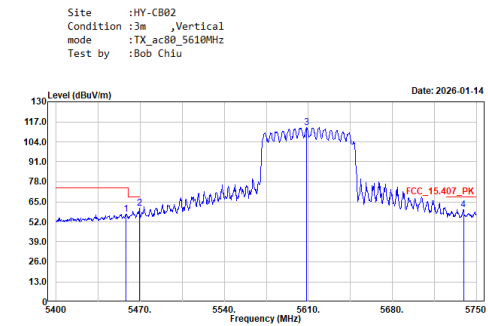

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5458.450	57.06	74.00	-16.94	42.21	14.85	Peak
2	5469.300	60.70	68.22	-7.52	45.76	14.94	Peak
3	5608.250	113.30	-----	-----	97.84	15.46	Peak
4	5739.150	59.96	68.22	-8.26	43.49	16.47	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5775MHz_H_Peak

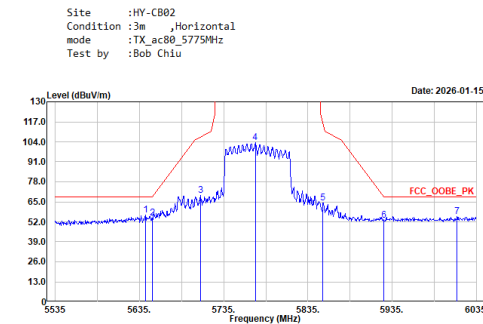

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5642.000	56.24	68.20	-11.96	40.83	15.41	Peak
2	5650.000	54.43	68.21	-13.78	38.96	15.47	Peak
3	5707.500	69.09	107.30	-38.21	53.16	15.93	Peak
4	5772.500	103.36	-----	-----	87.22	16.14	Peak
5	5853.000	64.22	115.36	-51.14	48.06	16.16	Peak
6	5925.000	53.05	68.21	-15.16	36.72	16.33	Peak
7	6012.000	55.34	68.20	-12.86	39.00	16.34	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_ac80_5775MHz_V_Peak

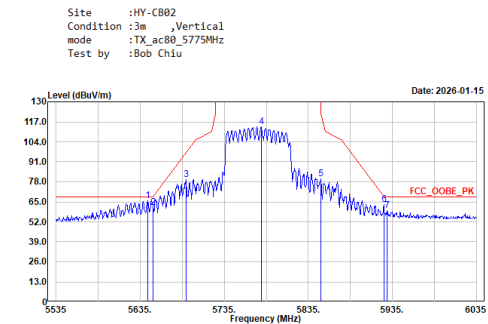

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5644.000	65.81	68.20	-2.39	50.39	15.42	Peak
2	5650.000	61.41	68.21	-6.80	45.94	15.47	Peak
3	5689.500	79.65	97.43	-17.78	63.83	15.82	Peak
4	5779.000	113.99	-----	-----	97.84	16.15	Peak
5	5850.000	80.18	122.20	-42.02	64.02	16.16	Peak
6	5925.000	63.27	68.21	-4.94	46.94	16.33	Peak
7	5929.000	59.60	68.20	-8.60	43.25	16.35	Peak


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_H_Average

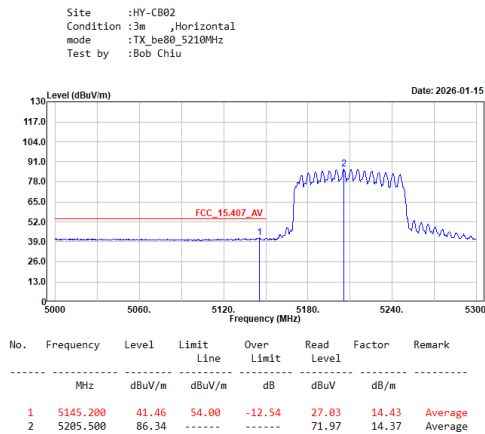


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_H_Peak

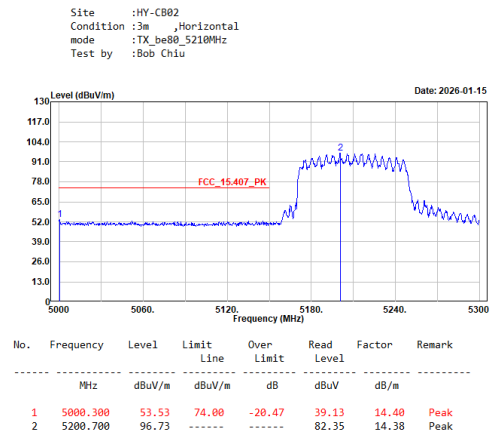


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V_Average

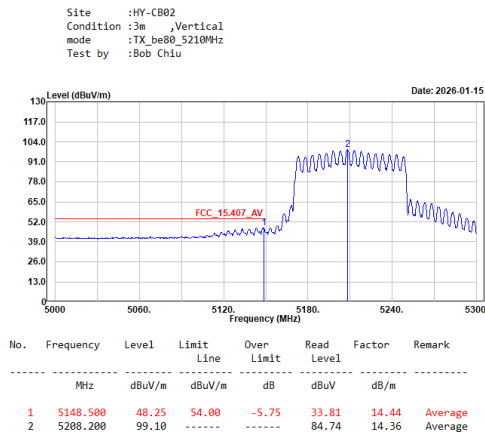

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.


TX_be80_5210MHz_V_Peak

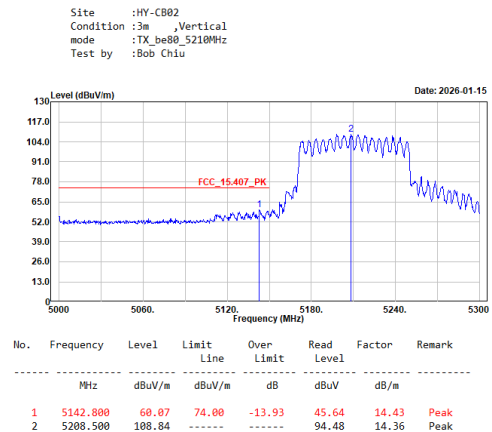

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H_Average

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5290MHz
Test by :Bob Chiu

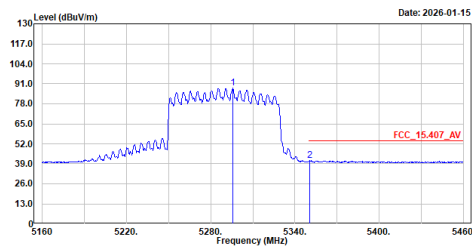


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5295.900	88.31	-----	-----	73.97	14.34	Average
2	5350.800	41.37	54.00	-12.63	27.11	14.26	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H_Peak

Site :HY-CB02
Condition :3m ,Horizontal
mode :TX_be80_5290MHz
Test by :Bob Chiu

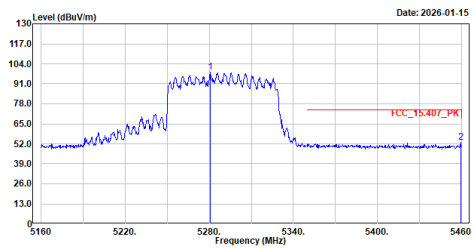


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5280.900	98.58	-----	-----	84.25	14.33	Peak
2	5459.400	52.83	74.00	-21.17	38.38	14.45	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_V_Average

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5290MHz
Test by :Bob Chiu

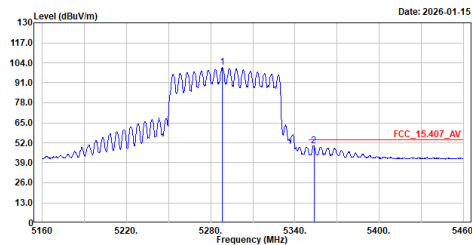


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5288.400	101.26	-----	-----	86.93	14.33	Average
2	5353.500	50.07	54.00	-3.93	35.82	14.25	Average

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_V_Peak

Site :HY-CB02
Condition :3m ,Vertical
mode :TX_be80_5290MHz
Test by :Bob Chiu

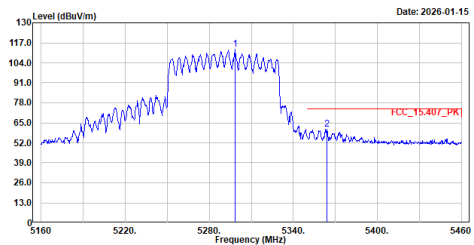


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	5298.300	112.61	-----	-----	98.27	14.34	Peak
2	5364.000	60.64	74.00	-13.36	46.41	14.23	Peak

Note:


1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_H_Average

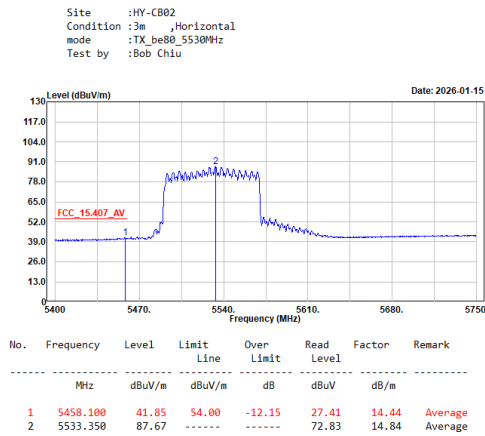


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_H_Peak

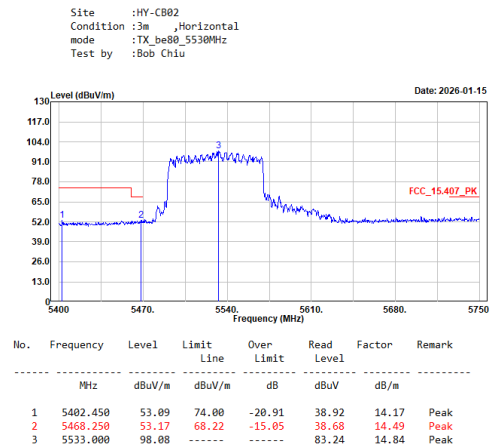


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_V_Average

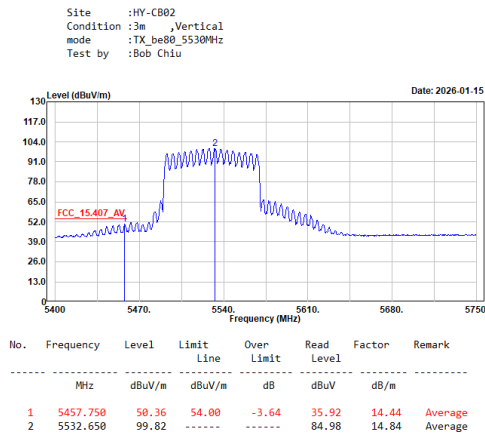


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5530MHz_V_Peak

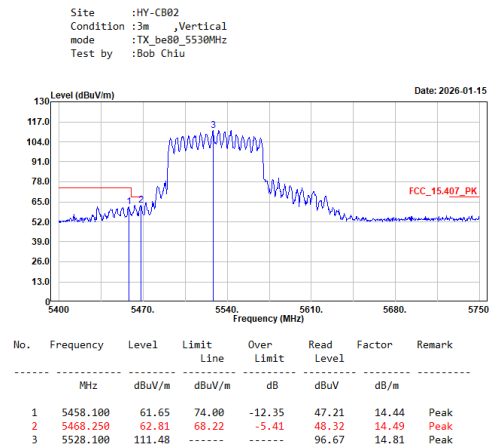


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_H_Average

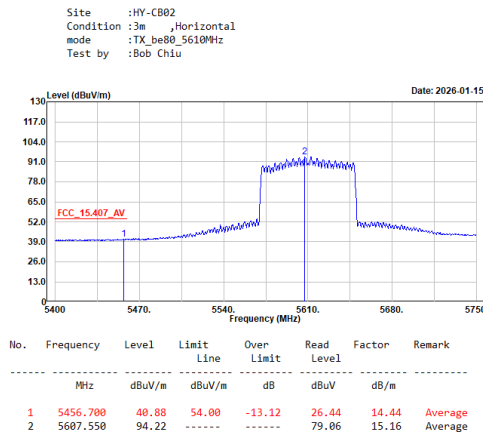


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_H_Peak

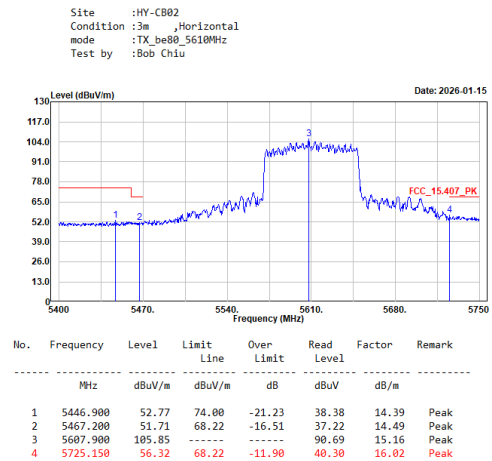


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_V_Average

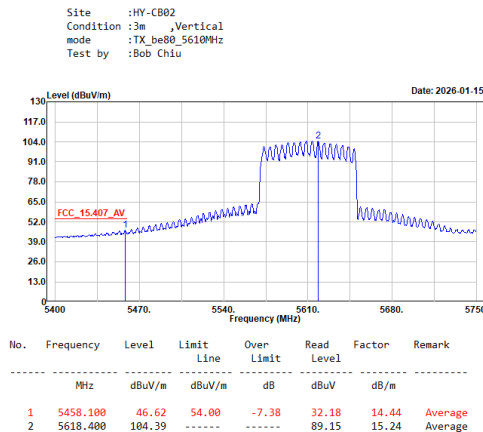


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_V_Peak

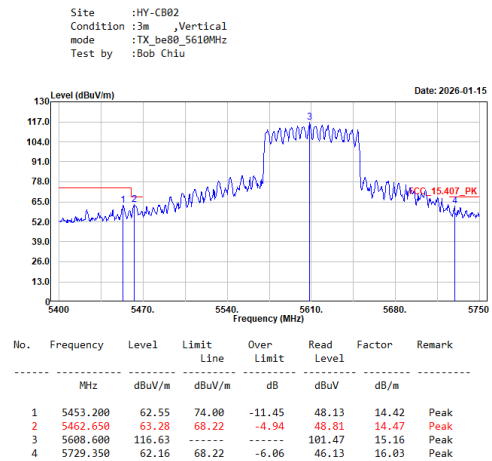


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_H_Peak

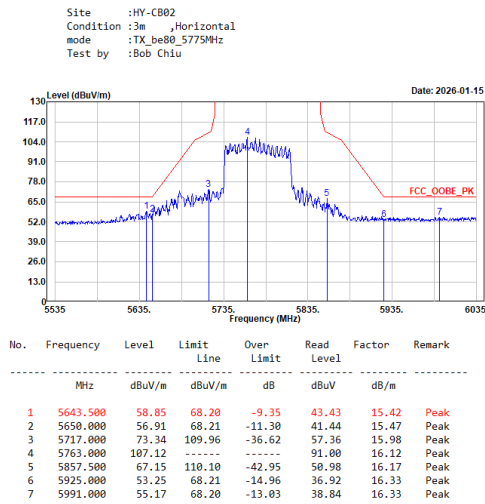


Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_V_Peak

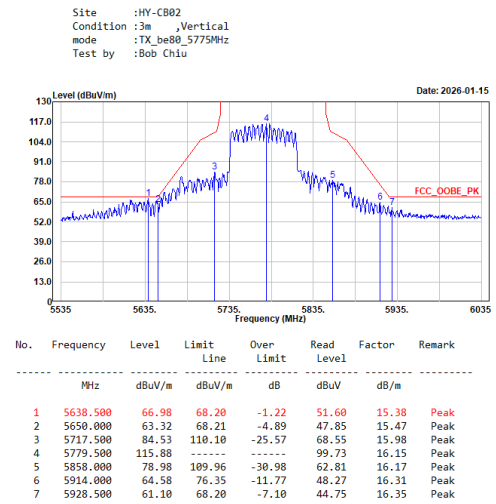






Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5775MHz_H

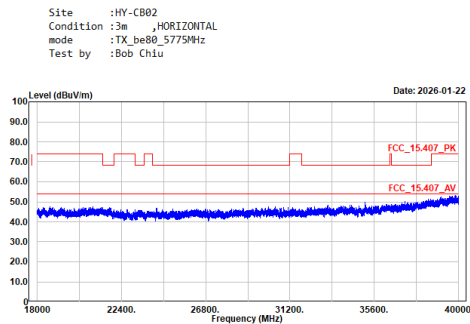


TX_be80_5775MHz_V

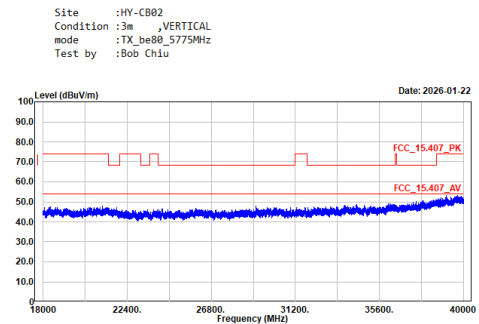

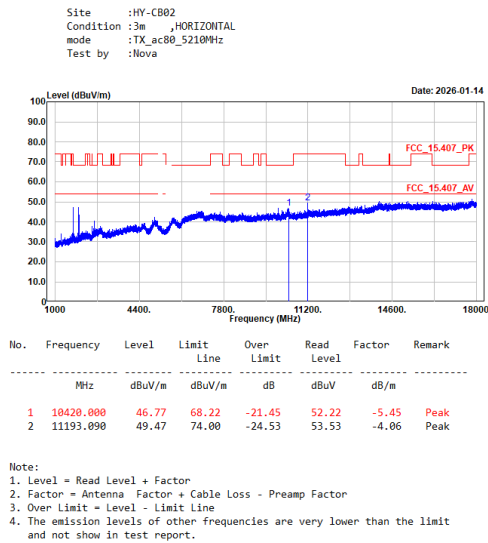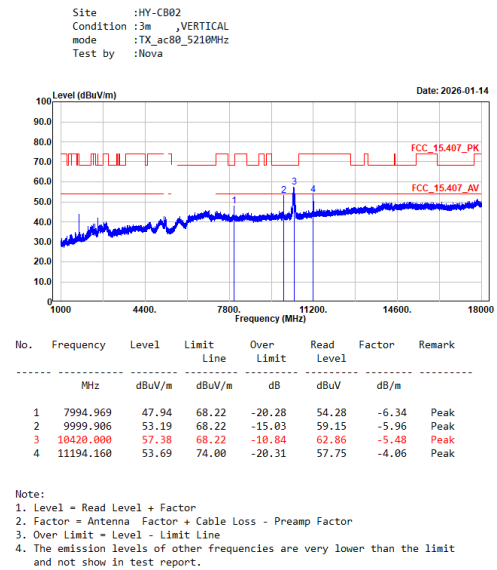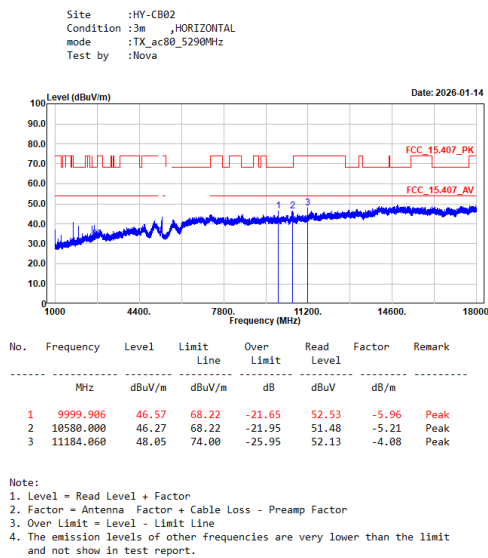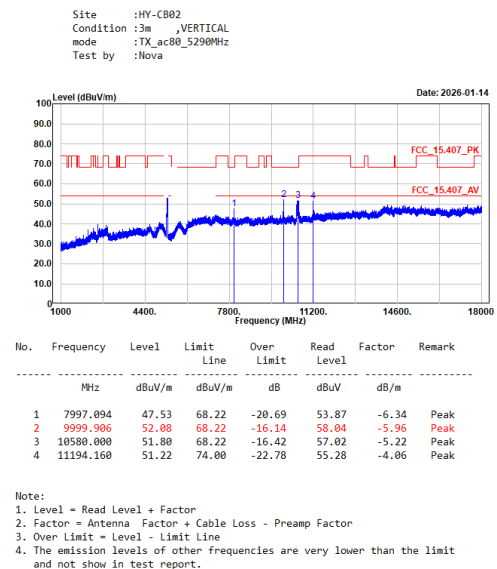M/N: AW7990-NPD, Antenna: PCB**TX_ac80_5210MHz_H****TX_ac80_5210MHz_V****TX_ac80_5290MHz_H****TX_ac80_5290MHz_V**

TX_ac80_5530MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5530MHz
Test by :Nova

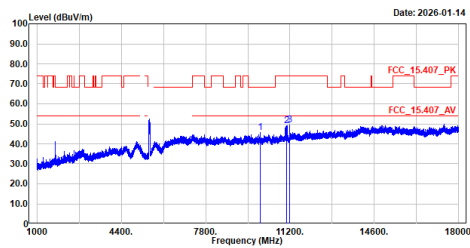


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	9999.906	45.78	68.22	-22.44	51.74	-5.96	Peak
2	11060.000	49.17	74.00	-24.83	53.42	-4.25	Peak
3	11193.090	49.33	74.00	-24.67	53.39	-4.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5530MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5530MHz
Test by :Nova

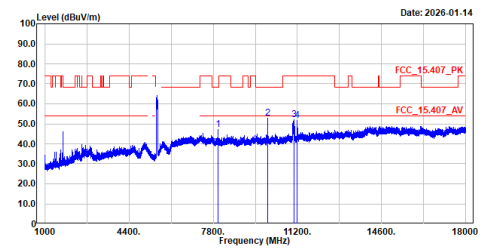


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.906	47.11	68.22	-21.11	53.44	-6.33	Peak
2	9999.906	52.96	68.22	-15.26	58.92	-5.96	Peak
3	11060.000	52.25	74.00	-21.75	56.57	-4.32	Peak
4	11191.500	51.73	74.00	-22.27	55.80	-4.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5610MHz
Test by :Nova

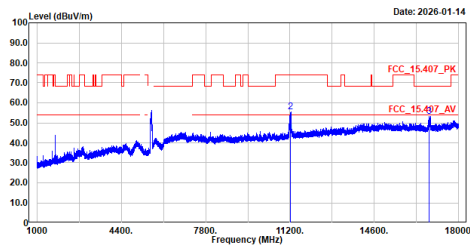


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	44.70	54.00	-9.30	48.64	-3.94	Average
2	11220.000	55.43	74.00	-18.57	59.25	-3.82	Peak
3	16830.000	53.04	68.22	-15.18	51.00	2.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5610MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5610MHz
Test by :Nova

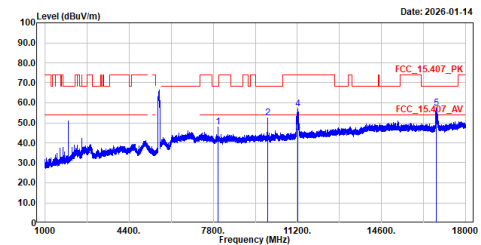


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7997.094	47.92	68.22	-20.30	54.26	-6.34	Peak
2	10000.440	52.45	68.22	-15.77	58.41	-5.96	Peak
3	11220.000	45.39	54.00	-8.61	49.33	-3.94	Average
4	11220.000	57.08	74.00	-16.92	60.98	-3.90	Peak
5	16830.000	57.18	68.22	-11.04	55.25	1.93	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5690MHz
Test by :Nova

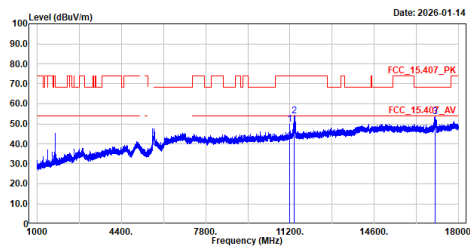


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11196.818	49.85	74.00	-24.15	53.90	-4.05	Peak
2	11380.000	53.92	74.00	-20.08	57.37	-3.45	Peak
3	17070.000	53.58	68.22	-14.64	51.40	2.18	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5690MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5690MHz
Test by :Nova

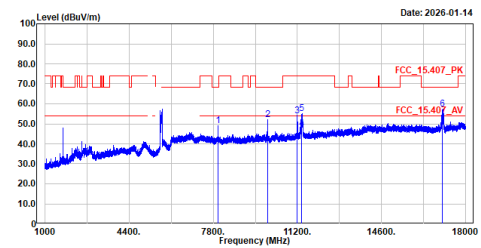


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.563	48.94	68.22	-19.28	55.28	-6.34	Peak
2	10000.440	52.20	68.22	-16.02	58.16	-5.96	Peak
3	11195.220	53.89	74.00	-20.11	57.95	-4.06	Peak
4	11380.000	47.61	54.00	-6.39	51.08	-3.47	Average
5	11380.000	54.93	74.00	-19.07	58.36	-3.43	Peak
6	17070.000	57.31	68.22	-10.91	55.22	2.09	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_ac80_5775MHz
Test by :Nova

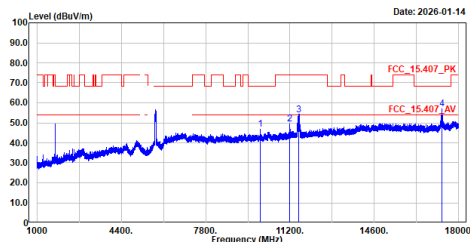


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10000.440	46.77	68.22	-21.45	52.73	-5.96	Peak
2	11193.090	49.57	74.00	-24.43	53.63	-4.06	Peak
3	11550.000	53.86	74.00	-20.14	57.03	-3.17	Peak
4	17325.000	57.08	68.22	-11.14	54.71	2.37	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_ac80_5775MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_ac80_5775MHz
Test by :Nova

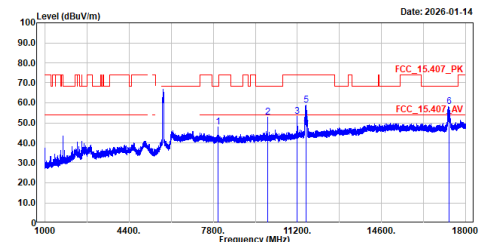


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.563	47.92	68.22	-20.30	54.26	-6.34	Peak
2	9999.906	52.82	68.22	-15.40	58.78	-5.96	Peak
3	11187.780	53.31	74.00	-20.69	57.37	-4.06	Peak
4	11550.000	48.68	54.00	-5.32	51.85	-3.17	Average
5	11550.000	58.76	74.00	-15.24	61.95	-3.19	Peak
6	17325.000	58.03	68.22	-10.19	55.71	2.32	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5210MHz
Test by :Nova

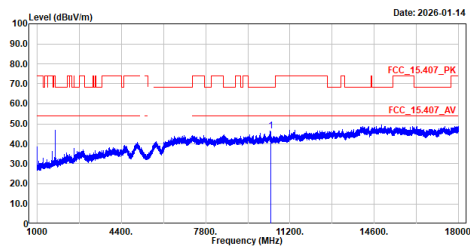


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10420.000	46.35	68.22	-21.87	51.82	-5.47	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5210MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5210MHz
Test by :Nova

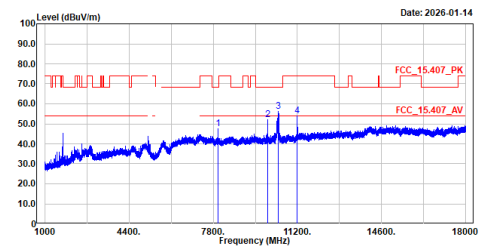


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7999.906	47.59	68.22	-20.63	53.92	-6.33	Peak
2	9999.906	52.22	68.22	-16.00	58.18	-5.96	Peak
3	10420.000	56.08	68.22	-12.14	61.62	-5.54	Peak
4	11192.560	53.99	74.00	-20.01	58.05	-4.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5290MHz
Test by :Nova

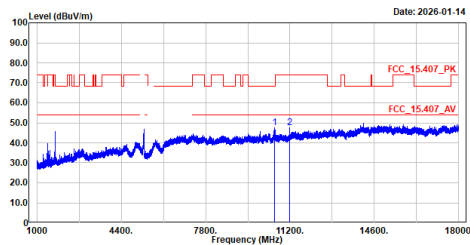


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	10580.000	47.56	68.22	-20.66	52.77	-5.21	Peak
2	11201.060	47.67	74.00	-26.33	51.71	-4.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX_be80_5290MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5290MHz
Test by :Nova

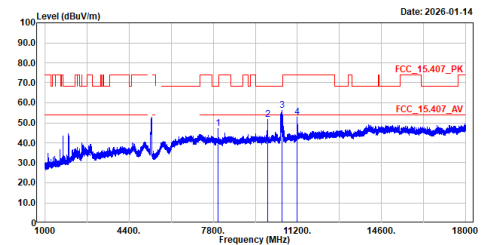


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	Line	Limit	Level	dB/m	
1	7997.094	47.03	68.22	-21.19	53.37	-6.34	Peak
2	9999.906	51.88	68.22	-16.34	57.84	-5.96	Peak
3	10580.000	56.30	68.22	-11.92	61.49	-5.19	Peak
4	11195.750	52.97	74.00	-21.03	57.03	-4.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5530MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5530MHz
Test by :Nova

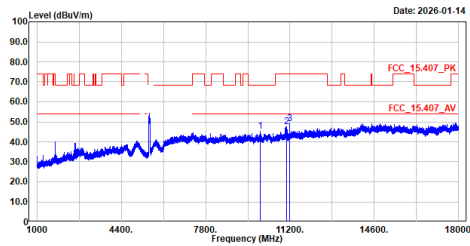


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10000.440	45.42	68.22	-22.80	51.38	-5.96	Peak
2	11060.000	47.37	74.00	-26.63	51.79	-4.42	Peak
3	11190.970	48.88	74.00	-25.12	52.95	-4.07	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5530MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5530MHz
Test by :Nova

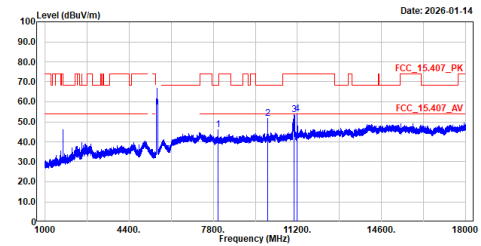


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.906	46.11	68.22	-22.11	52.44	-6.33	Peak
2	10000.440	51.83	68.22	-16.39	57.79	-5.96	Peak
3	11060.000	53.50	74.00	-20.50	57.85	-4.35	Peak
4	11194.690	53.77	74.00	-20.23	57.83	-4.06	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5610MHz
Test by :Nova

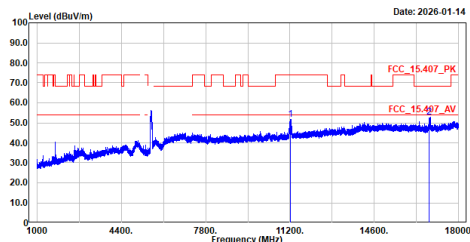


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11220.000	51.72	74.00	-22.28	55.70	-3.98	Peak
2	16830.000	52.81	68.22	-15.41	50.77	2.04	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5610MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5610MHz
Test by :Nova

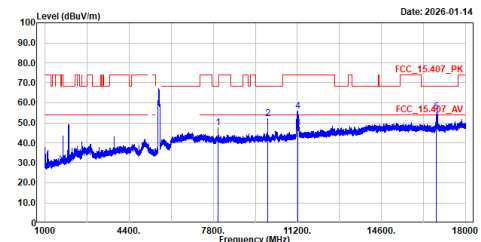


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7993.375	47.66	68.22	-20.56	53.98	-6.32	Peak
2	9999.906	52.18	68.22	-16.04	58.14	-5.96	Peak
3	11220.000	47.66	54.00	-6.34	51.60	-3.94	Average
4	11220.000	55.86	74.00	-18.14	59.84	-3.98	Peak
5	16830.000	55.39	68.22	-12.83	53.34	2.05	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5690MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5690MHz
Test by :Nova

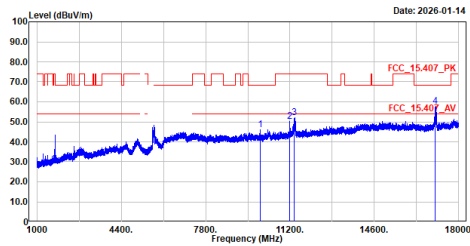


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10000.440	45.89	68.22	-22.33	51.85	-5.96	Peak
2	11194.160	50.27	74.00	-23.73	54.33	-4.06	Peak
3	11380.000	52.12	74.00	-21.88	55.57	-3.45	Peak
4	17070.000	57.63	68.22	-10.59	55.53	2.10	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5690MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5690MHz
Test by :Nova

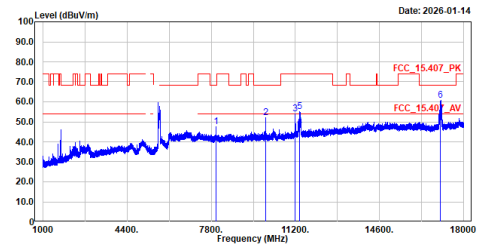


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7990.719	47.66	68.22	-20.56	53.97	-6.31	Peak
2	9999.906	51.91	68.22	-16.31	57.87	-5.96	Peak
3	11198.940	53.97	74.00	-20.03	58.01	-4.04	Peak
4	11380.000	47.59	54.00	-6.41	51.06	-3.47	Average
5	11380.000	54.93	74.00	-19.07	58.42	-3.49	Peak
6	17070.000	60.79	68.22	-7.43	58.65	2.14	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5775MHz_H

Site :HY-CB02
Condition :3m ,HORIZONTAL
mode :TX_be80_5775MHz
Test by :Nova

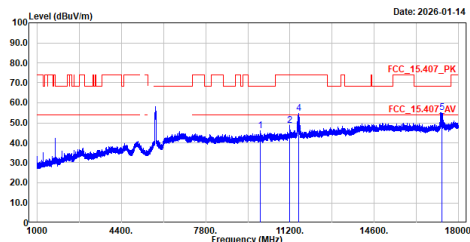


No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	9999.906	46.22	68.22	-22.00	52.18	-5.96	Peak
2	11194.160	48.85	74.00	-25.15	52.91	-4.06	Peak
3	11550.000	43.51	54.00	-10.49	46.68	-3.17	Average
4	11550.000	54.66	74.00	-19.34	57.83	-3.17	Peak
5	17325.000	55.13	68.22	-13.09	52.86	2.27	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

TX be80_5775MHz_V

Site :HY-CB02
Condition :3m ,VERTICAL
mode :TX_be80_5775MHz
Test by :Nova

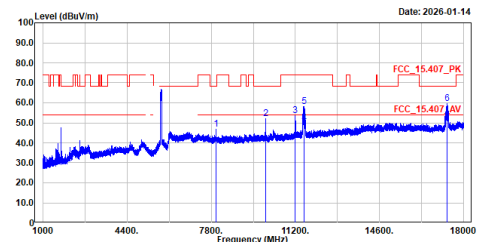

No.	Frequency	Level	Limit	Over	Read	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	7996.031	46.74	68.22	-21.48	53.08	-6.34	Peak
2	9999.906	52.13	68.22	-16.09	58.09	-5.96	Peak
3	11201.060	53.41	74.00	-20.59	57.45	-4.04	Peak
4	11550.000	49.67	54.00	-4.33	52.84	-3.17	Average
5	11550.000	58.26	74.00	-15.74	61.43	-3.17	Peak
6	17325.000	59.53	68.22	-8.69	57.09	2.44	Peak

Note:

1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.