

3.2.2.7 Interleaved 2 of 5

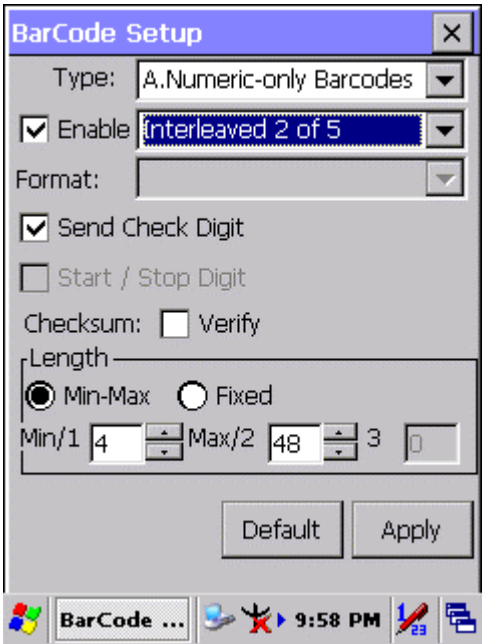


Figure 3-12 Interleaved 2 of 5

Table 3-10 Interleaved 2 of 5 Explaining

Item		Explaining
☒	Send Check Digit	Whether send check digit by barcode.
Checksum	☐ Verify	Whether verify checksum by barcode.
Length	☒ Min / Max (Default: 4 / 48)	Min Length can be set from 2 to 48
		Max Length can be set from 2 to 48
	☐ Fixed	Length 1 can be set from 2 to 48
		Length 2 can be set from 2 to 48
		Length 3 can be set from 2 to 48

3.2.2.8 Plessey / MSI

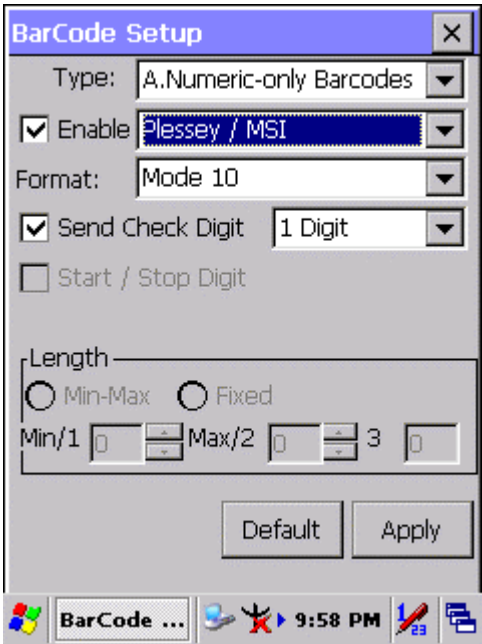


Figure 3-13 Plessey / MSI

Table 3-11 Plessey / MSI Explaining

Item		Explaining
Format	Mode 10	Checksum mode for this barcode.
	Mode 10-10	
	Mode 11-10	
☒ Send Check Digit		Whether send check digit by barcode.
	1 Digit	Check 1 digit & send by checksum.
	2 Digits	Check 2 digits & send by checksum.

3.2.2.9 Code11

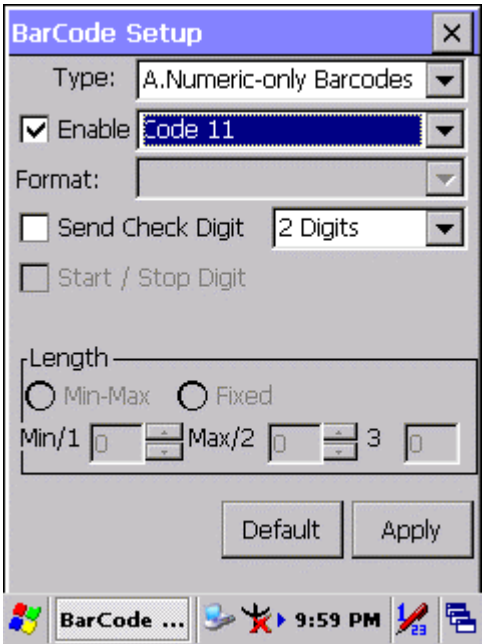


Figure 3-14 Code 11

Table 3-12 Code 11 Explaining

Item		Explaining
☐	Send Check Digit	Whether send check digit by barcode.
	1 Digit	Check 1 digit & send by checksum.
	2 Digits	Check 2 digits & send by checksum.

3.2.2.10 Codabar / NW7

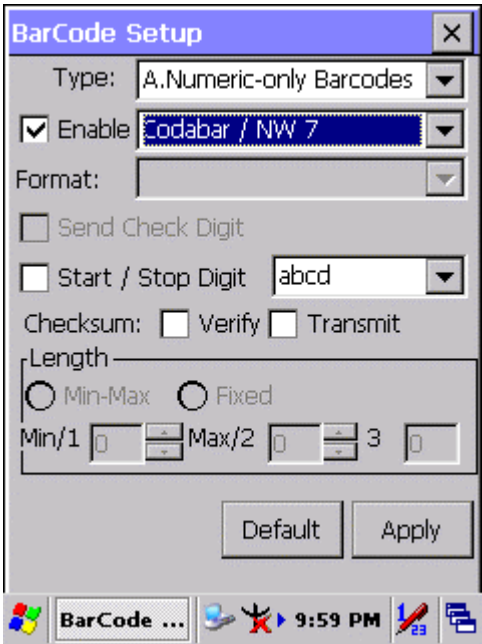


Figure 3-15 Codabar / NW7

Table 3-13 Codabar / NW7 Explaining

Item		Explaining
☐ Start / Stop Digit	ABCD	Start / Stop transmit type
	abcd	
	TN*E	
	tn*e	
Checksum	☐ Verify	Whether verify checksum by barcode.
	☐ Transmit	Whether transmit checksum by barcode.

3.2.2.11 Matrix 2 of 5

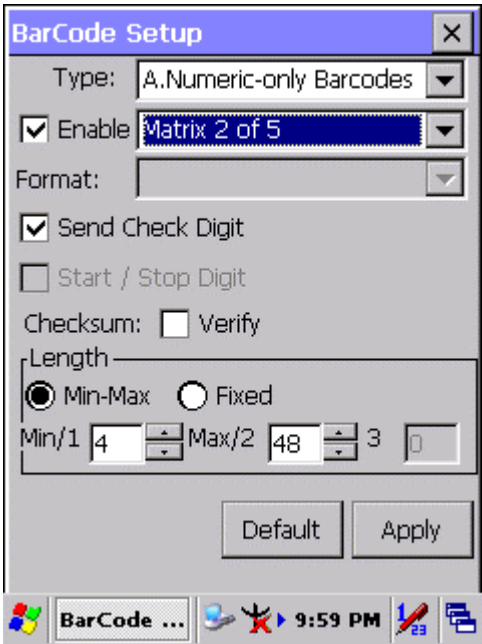


Figure 3-16 Matrix 2 of 5

Table 3-14 Matrix 2 of 5 Explaining

Item		Explaining
☒ Send Check Digit		Whether send check digit by barcode.
Checksum	☐ Verify	Whether verify checksum by barcode.
Length	☒ Min-Max (Default: 4 / 48)	Min Length can be set from 4 to 48
		Max Length can be set from 4 to 48
	☐ Fixed	Length 1 can be set from 4 to 48
		Length 2 can be set from 4 to 48
		Length 3 can be set from 4 to 48

B Type -- Alphanumeric Barcodes

3.2.2.12 Code39 / Code32

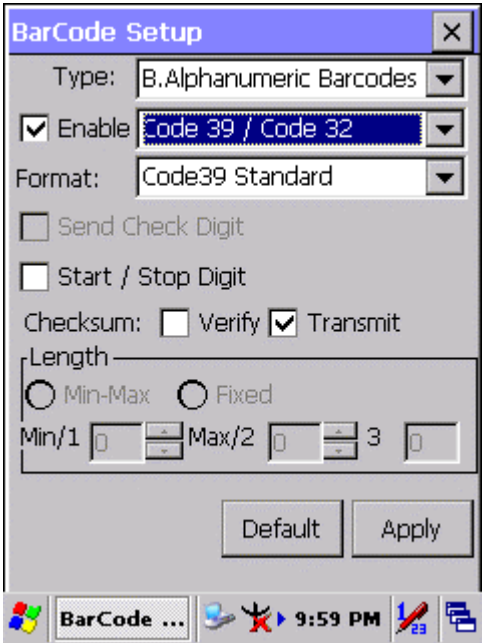


Figure 3-17 Code39 / Code32

Table 3-15 Code39 / Code32 Explaining

Item		Explaining
Format	Code39 Standard	Enable Code 39 Standard characters
	Code39 Full ASCII	Enable Code 39 Full ASCII character
	Code32	Enable Code 32
☐ Start / Stop Digit		Whether transmit Start & Stop Digit.
Checksum	☐ Verify	Whether verify checksum by barcode.
	☒ Transmit	Whether transmit checksum by barcode.

3.2.2.13 Code93

The barcode do not have setting.

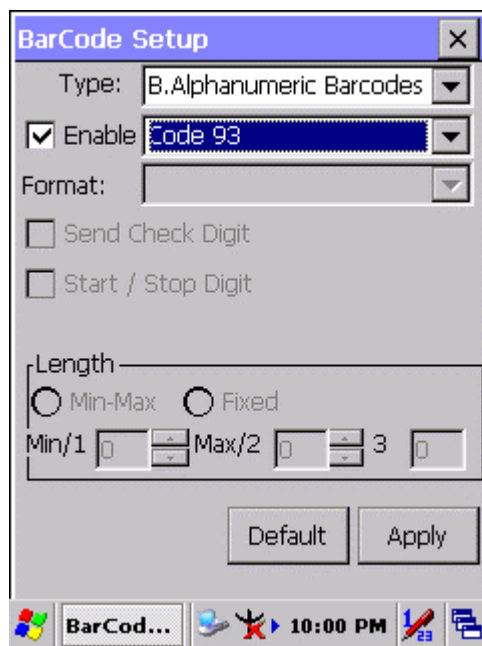


Figure 3-18 Code93

3.2.2.14 Code128

The barcode do not have setting.

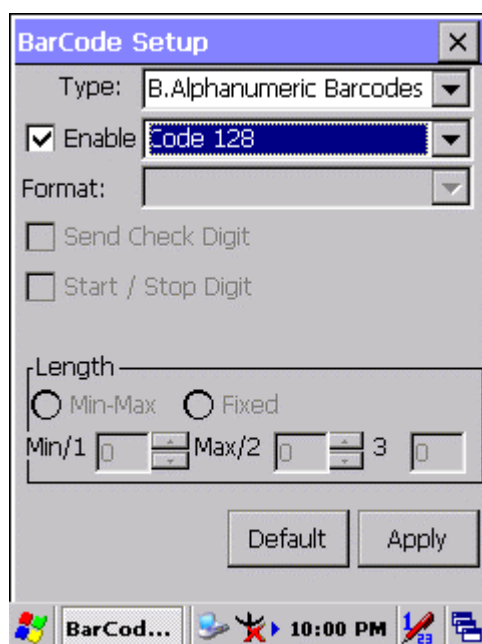


Figure 3-19 Code 128