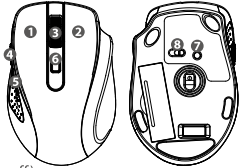


 REDRAGON BM-4091 2.4G/BT DUAL MODE WIRELESS MOUSE  Please scan here to download user manual  2.4G/BT Dual Mode Wireless Mouse Operating Instructions	US UK Dear user Thank you for choosing our REDRAGON product. To protect your rights and for better customer service, we ask that you note our warranty rules. - Within guaranty period, repair is guaranteed for failure due to electrical circuit problems. Other damages, such as disassembly, hard impacts, submersion into water, plugging into improper current or voltage, and damage caused by natural disasters such as fire, flood, or earthquake are not included. - Consumable parts (such as foot pad) and spare parts replacement are not included in our warranty. Button description - Left mouse button - Right mouse button - Mouse wheel and middle button - Forward button - Back button - DPI button - BT pair - Mode/Power switch: BT mode /OFF (power off) 	How to connect to devices - Take out the wireless mouse from the packaging box (the receiver is stored at the bottom of the mouse). Select the bottom switch according to the required usage mode (see the following illustration). - Slide the bottom switch to the 2.4G mode, Insert the receiver into a valid USB port of the computer, and press any button of the mouse. Now you can use the wireless 2.4G mouse. - Slide the bottom switch to the BT mode, Press the pairing button for about 3 seconds, and the mouse will enter the BT pairing mode. On the operating system side of the PC, turn on the search for BT devices: BT5.0 Mouse (for Windows 7 and above), BT3.0 Mouse (for Windows 7 and below). Complete the pairing according to the operation process, and now you can use the BT mouse. DPI adjustable Under the DPI button, the LED indicator shows a red light in 2.4G mode and a blue light in BT mode. Click the DPI button to cyclically switch among 800/1200 (default)/1600/2400/4000 DPI. During the switching process, the LED under the DPI button will flash, it flashes 1 time at 800 DPI, 2 times at 1200 DPI, 3 times at 1600 DPI, 4 times at 2400 DPI, and 5 times at 4000 DPI.	Low Battery Voltage Reminder Function When the battery reaches a low power state, during the use of the mouse, the LED underthe DPI button will flash to remind you to replace the battery in a timely manner. Standby and Hibernation Functions When the mouse is stationary for about 10 seconds, it will enter the standby state. Moving the mouse or pressing a button can wake it up. When the mouse is not used for about 30 minutes, it will enter the hibernation state, and you need to press a button to wake up the mouse. Receiver Storage Function This mouse uses anNano receiver, which can usually be left in the USB port of a PC or Notebook for a long time without any impact on the computer. If you want to carry the mouse alone when going out or store it, you can put the receiver inside the mouse, which is convenient for storage and carrying when going out to avoid leaving it behind. Troubleshooting If you are unable to connect the mouse's Bluetooth or 2.4G mode to other devices or cannot use it properly, please try the following steps:	1.For the BT aspect: - Please use a branded BT adapter. Otherwise, it may lead to compatibility issues. (Refer to the user manual of the BT adapter itself for the installation of the adapter driver.) - Before connecting the mouse, please confirm that you have completed the installation of the BT adapter and that the computer's BT device has been properly activated. - If the connection fails, please disable or delete the original mouse connection in the BT device selection bar, and then reconnect according to the above pairing steps. - Ensure that the computer's BT device has not been changed. If it has been changed, you must re-pair it. 2.For the 2.4G aspect: - Slide the mouse power switch to the 2.4G position. Press the left button + middle button + right button for about 3 seconds, and the mouse will enter the 2.4G code-pairing mode. Pull out the receiver from the computer's USB port and plug it in again (keep the mouse within a distance of 30 cm from the receiver during pairing). When the LED under the DPI button stays on for about 2 seconds and then turns
off, it indicates that the code-pairing is successful, and you can use the wireless mouse again. - Check if the mouse has a low battery indication, and charge the mouse according to the above charging instructions. - Ensure that the mouse is used within a working range of 10 meters. FCC STATEMENT 1. This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) This device must accept any interference received, including interference that may cause undesired operation. 2. Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.	This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures: Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. Consult the dealer or an experienced radio/TV technician for help.	ISED WARNING This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licenceexempt RSS(s). Operation is subject to the following two conditions: (1) This device may not cause interference. (2) This device must accept any interference, including interference that may cause undesired operation of the device. L'émetteur/récepteurexempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et DéveloppementéconomiqueCanada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes: (1) l'appareil ne doit pas produire de brouillage, et (2) l'appareil doit accepter tout brouillage radioélectrique subi, même si e brouillage est susceptible d'en compromettre le fonctionnement 'appareil numérique du ciem conforme.	BATTERY SAFETY GUIDELINES DO NOT replace the battery with a different model. DO NOT use this product if the battery shows signs of damage including, but not limited to tearing, deformation, leakage, or the smell of electrolytic material. DO NOT touch the battery fi material is leaking and seek immediate medical attention if any material comes into contact with your skin or eyes. DO NOT expose the battery to liquid, heat sources, electricity (outside of the product itself), or other non-standard operating condition. DO NOT remove the battery except for proper disposal and recycling as required by local laws and regulations. DO NOT impact, bend, alter, dissemble, or otherwise damage the battery as the contents are volatile, hazardous, and can be harmful. CAUTION Failing to follow all safety guidelines may result product damage, explosion, fire, and/or electric shock.	1. Cleaning Instructions: Before cleaning, always unplug the device from the computer's USB port. Clean the surfaces with a soft, dry cloth. For stubborn dirt, use a cloth that is slightly dampened with water. Do not use chemical agents or solvents. Ensure the devices are completely dry before reconnecting them. 2. Ergonomic Health and Safety Guide: Incorrect or prolonged use of computer equipment can lead to discomfort, fatigue, headaches and serious long-term injuries known as musculoskeletal disorders (MSDs). Please take relaxation breaks every 30-60 minutes. 3. WARNING: The product is not a toy. Please keep it out of reach of small children. The product contains small components that may pose a choking hazard. RF warning statement: The device has been evaluated to meet general RF exposure requirement. The device can be used in portable exposure condition without restriction.

型号	BM-4091/4091G/4091V/ 4091B/4091P 4091		备注：尺寸：L60*W80mm 材质：80g书写纸，风琴折，正反印 印刷：单色				
名称	说明书(英)						
日期	2026-1-22						
页码	1 OF 1		文件编号				
绘图	吴九香	审核	香敏琪	核准		版本	A