

Brookstone® BK-550

User Manual



Hello.

Congratulations on purchasing your new Brookstone BK-550.

At Brookstone we understand that every body is different and have carefully designed your massage chair with that in mind. But enough about us, this is about you. Learning how to use your new chair is simple (we designed it that way).

So let's get started.


We Can Help.

Our team will respond quickly to help you solve any issues

1.877.977.0656

Need a deeper massage?
Remove Softening Pad

- 1** Unzip
- 2** Fold Down
- 3** Remove Pad

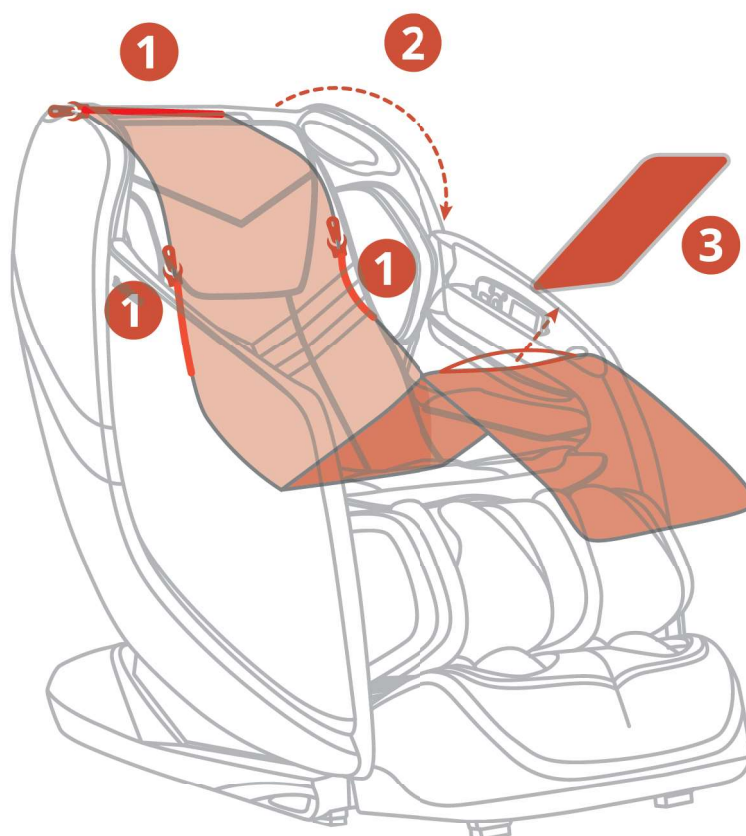

Scan QR Code for Support

Open camera app & scan for instant support



For replacement parts and tech support, please call our service and warranty hotline, or visit www.cozziausa.com

TABLE OF CONTENTS



Dimensions	3
Contents	4



Move & Clearance	5
Components	6
Massage Points	7
Specifications	8




Interface	9-10
Demo	11
Auto Massage	12-16
Spot Massage	17-18
Custom Massage	19-23
Recline	24-26
Settings	27-28




Safety	29-30
Grounding Instruction	31
Troubleshooting	31
Care and Storage	31
Warranty	32

DIMENSIONS

First, let's get your chair inside.

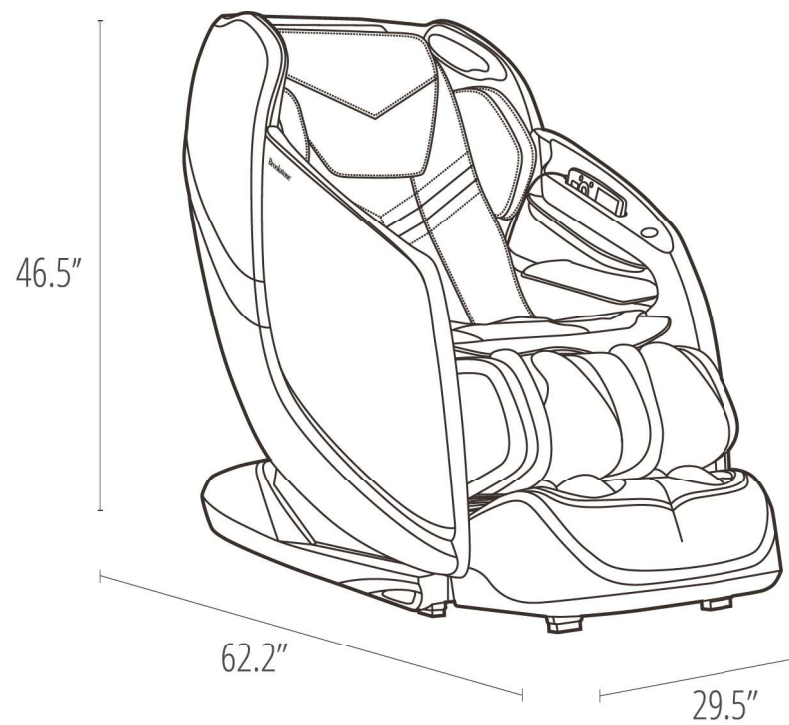

Box

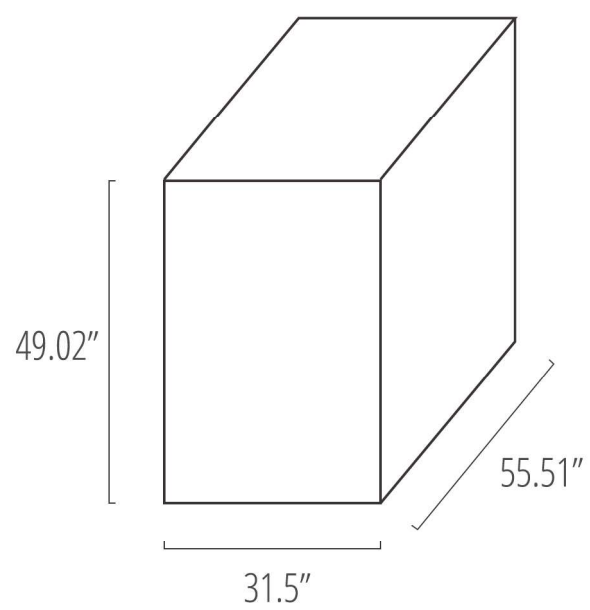


BK-550 Massage Chair

CONTENTS


Everything you need for a relaxing experience.




User Manual

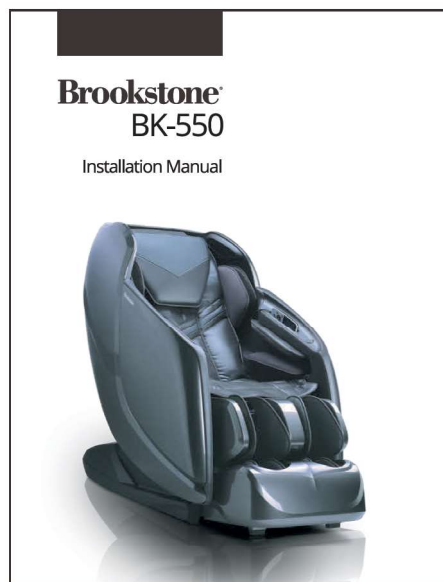


Installation Manual

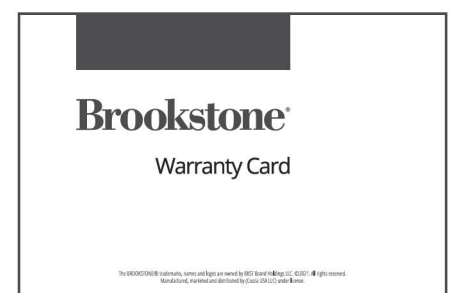

Warranty Postcard

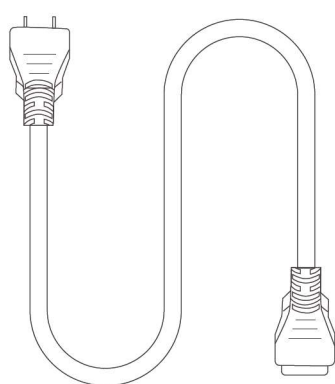

Power Cord



Wired Remote




BK-550 Massage Chair


Move & Clearance

A few simple steps to find the best place for your new chair.

HOW TO MOVE

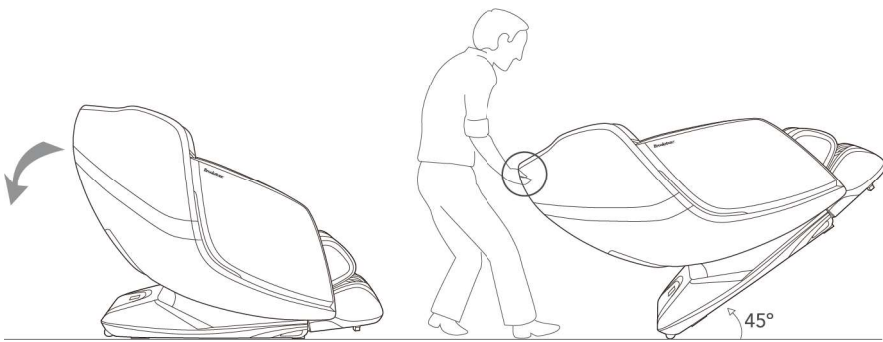


Lower down the backrest 45 degrees onto wheels

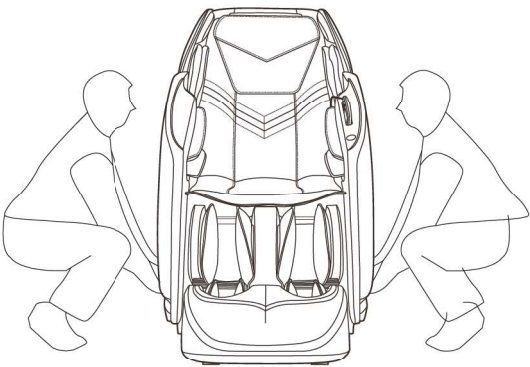


Two people are needed to lift the chair

CLEARANCE

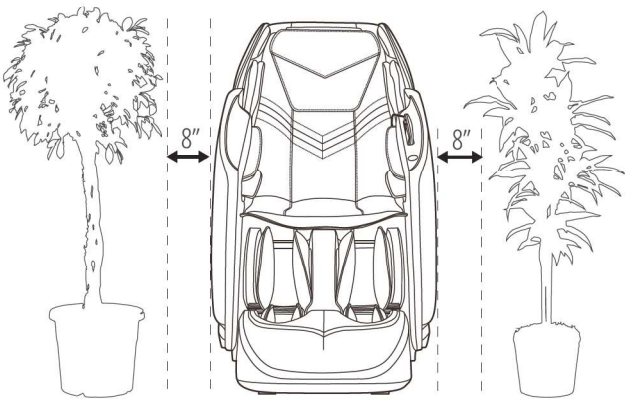


Reserve space on the left and right

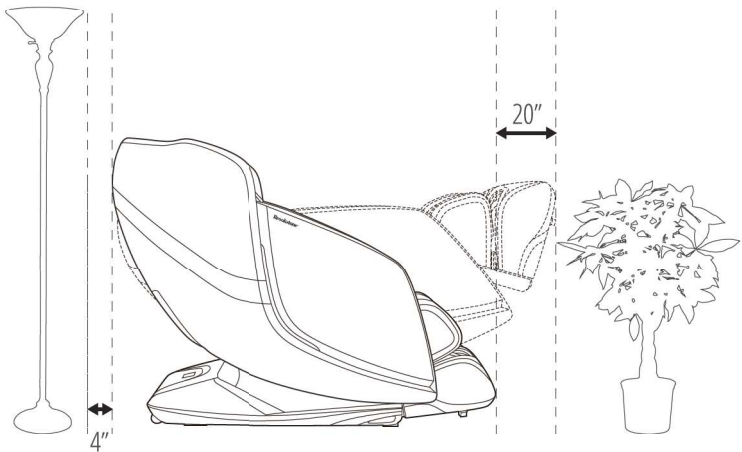

Reserve space on the front and back

CHAIR COMPONENTS


Some of your chair's most important features.

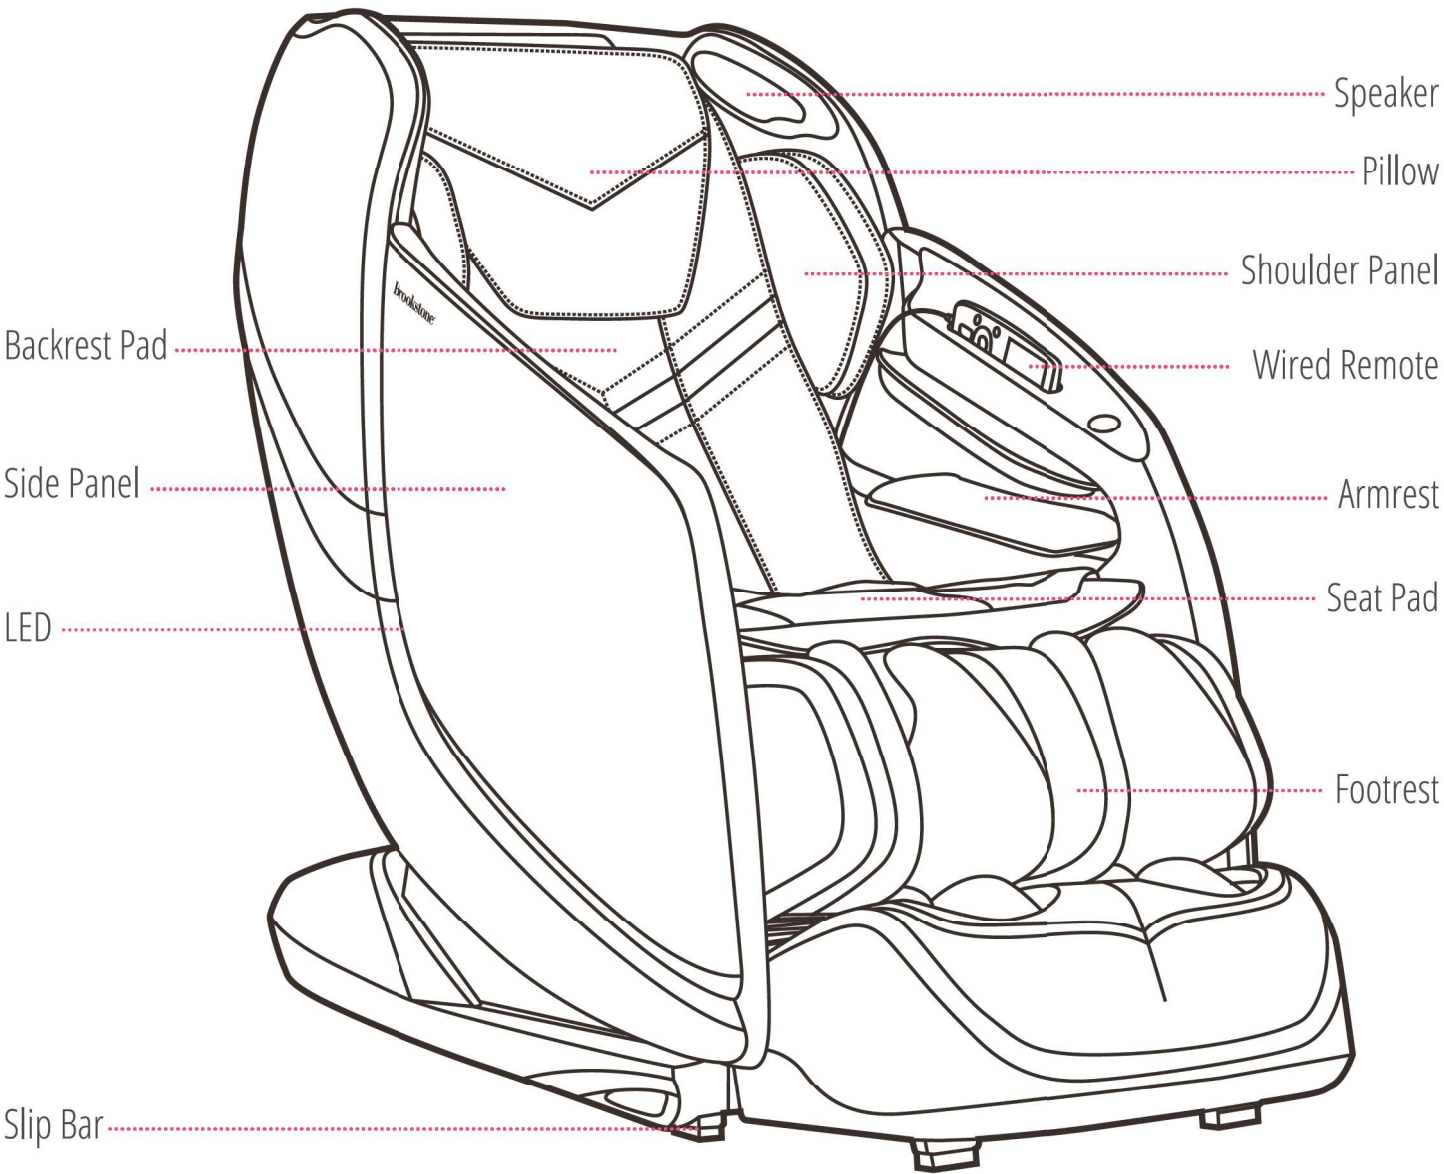

Note: The speaker will only operate when the massage chair is in operation

 To play music using your massage chair's speakers please connect your smartphone, tablet, or other electronic device to your chair, using bluetooth.

MASSAGE POINTS

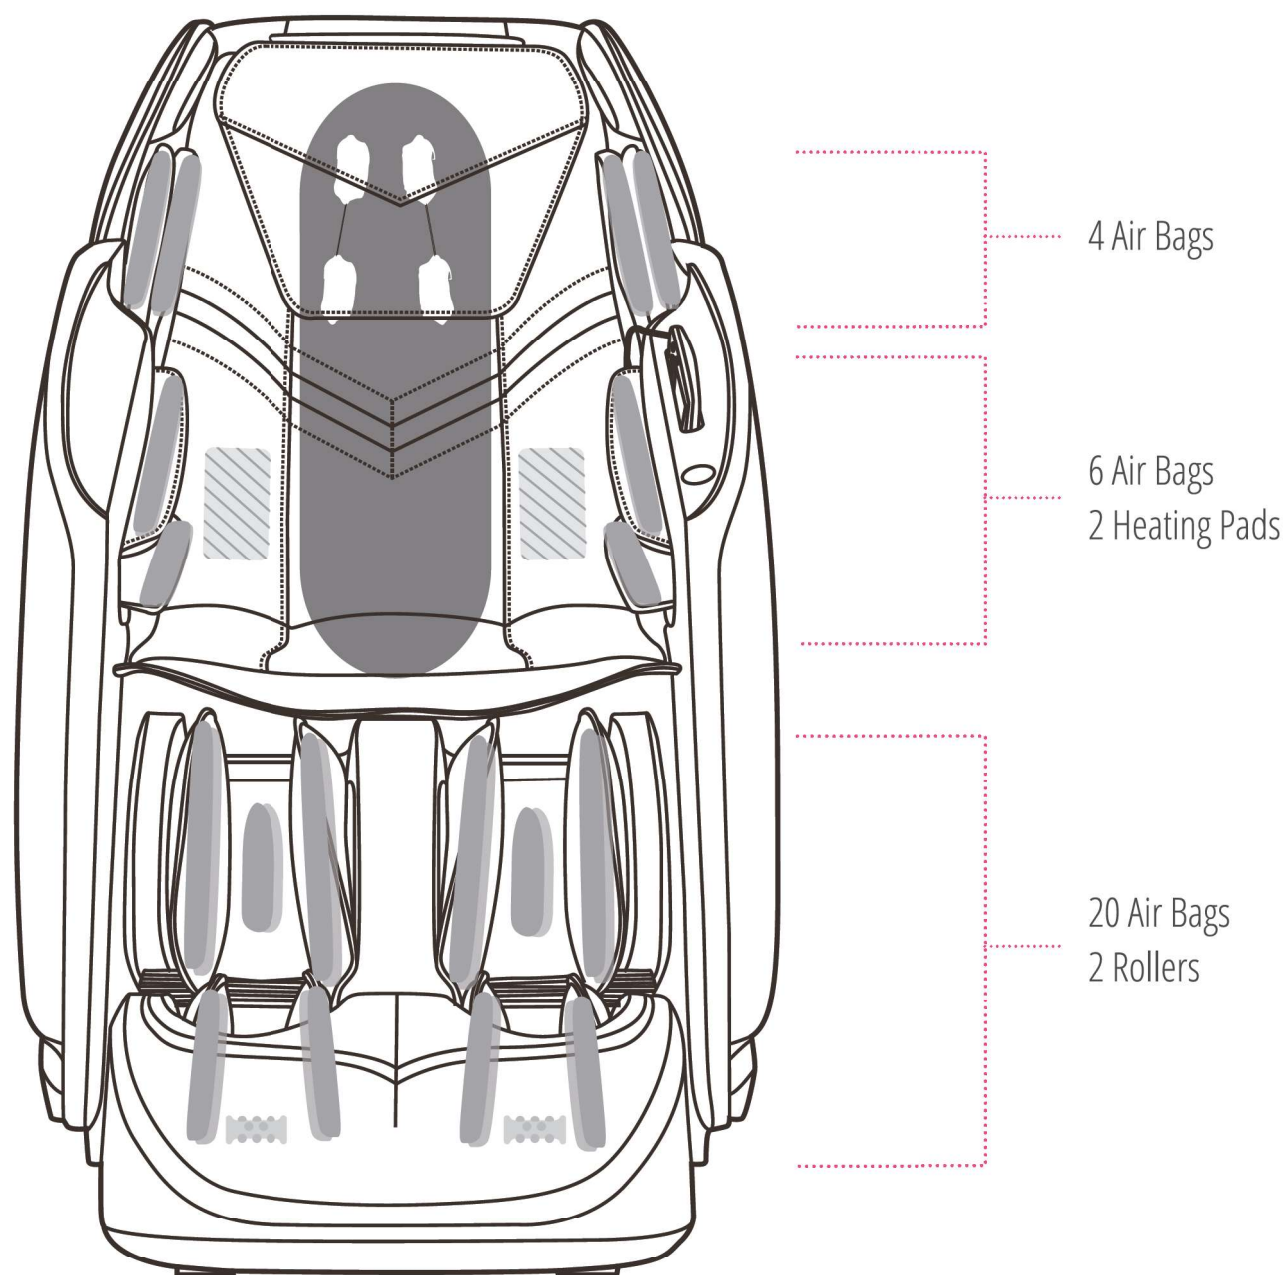

● Back Massage Mode ● Air Bag ■ Roller ● Heating Pads

CHAIR SPECIFICATIONS


A few important facts about your massage chair.



Model No.
BK-550



Max Massage Time
30 minutes

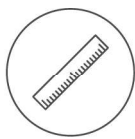

Dimensions (L x W x H)
Chair dimensions: 62.2" x 29.5" x 46.5"
Reclined dimensions: 67.7" x 29.5" x 45.3"



Shipping Weight
Gross weight: 240.3 lbs
Net weight: 211.64 lbs



Usage Condition
Environment temperature: 10°C-40°C
Contrasting humidity: 30-85RH



Storage Condition
Storage temperature: -20°C-60°C
Storage humidity level: 30-85RH



Rated Current
1.3A



Rated Voltage
110 - 120V



Rated Frequency
60Hz



Power of Speakers
14W (2 sides)



Length of Wiring
Controller wiring: 31.5"
Power supply wiring: 70.9"




Safety Feature
Equipped with overheating and power surge detectors safety feature

WIRED REMOTE




INTERFACE

Menu Screen

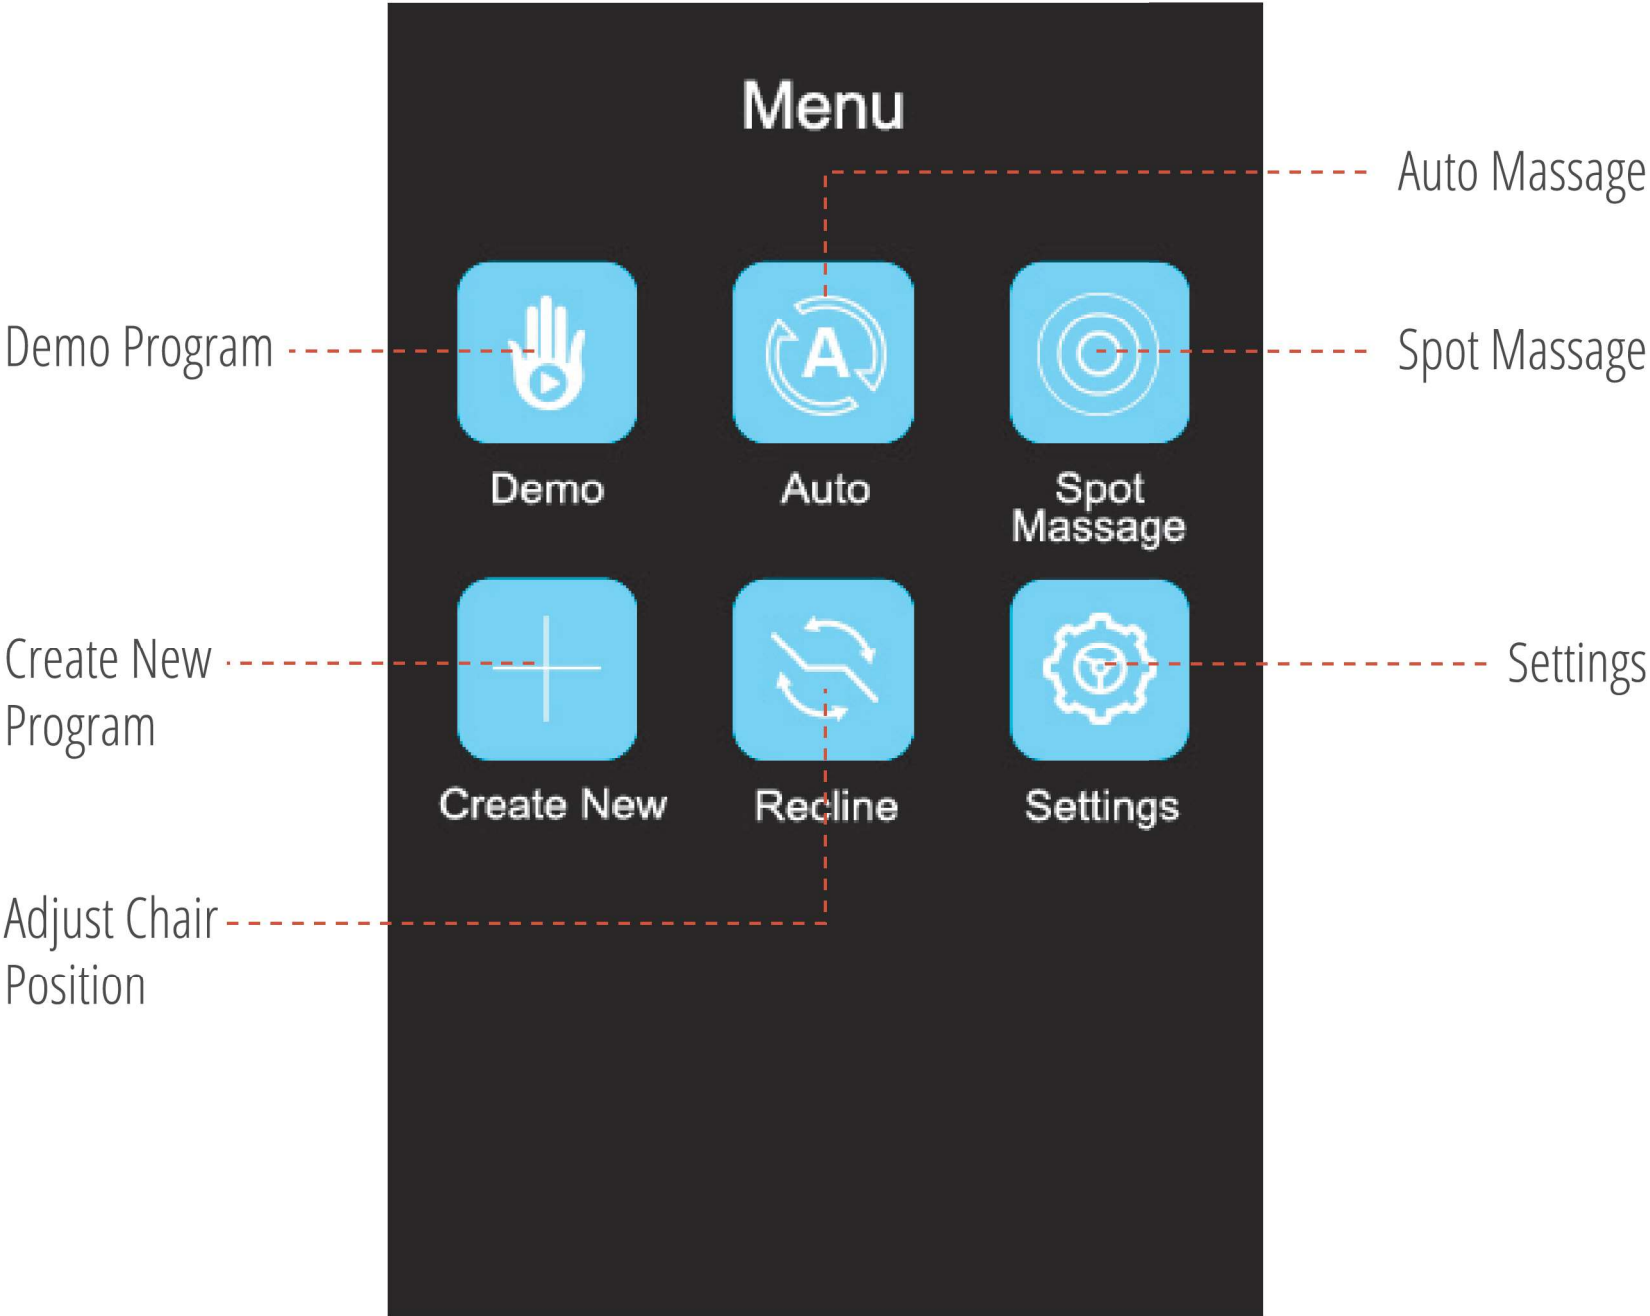

DEMO


In order to allow you to quickly understand how to use the chair, we created a demo module for you.

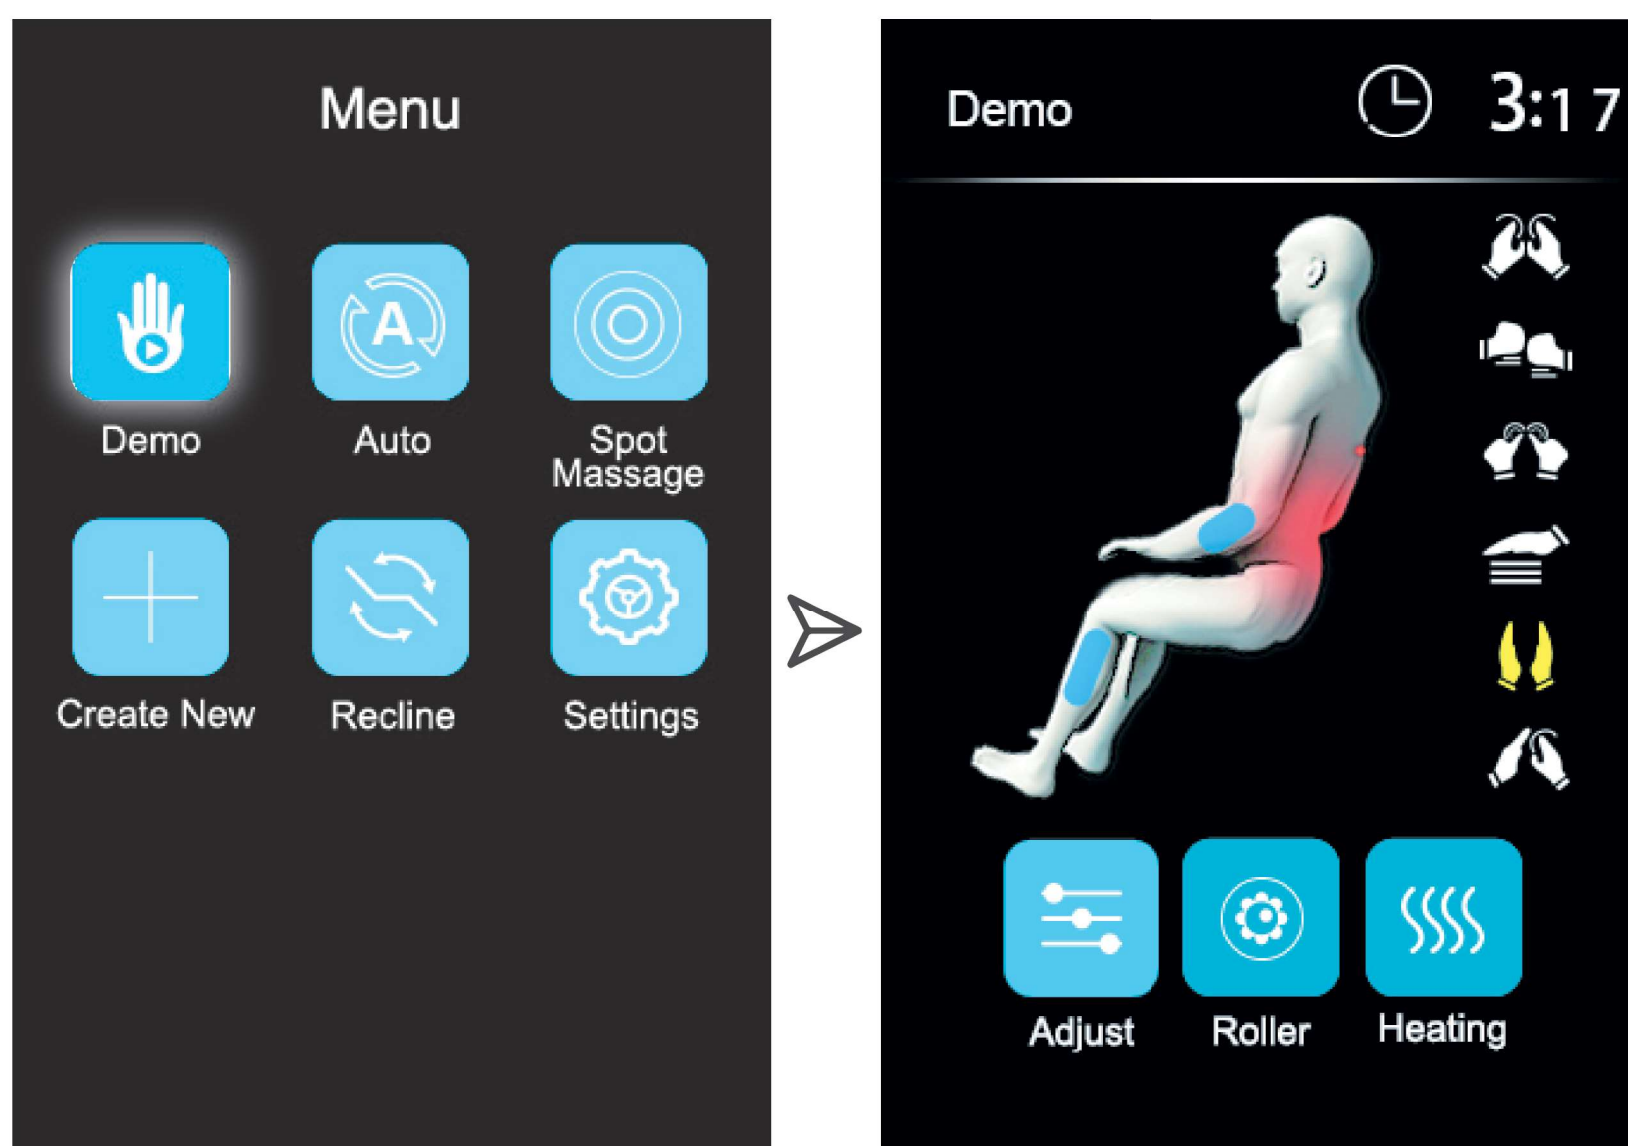

Choose "Demo" and press "OK" to begin demo program


AUTO MESSAGE

We have designed your chair with multiple massage options for your changing needs. Follow these simple instructions to begin a new auto massage.

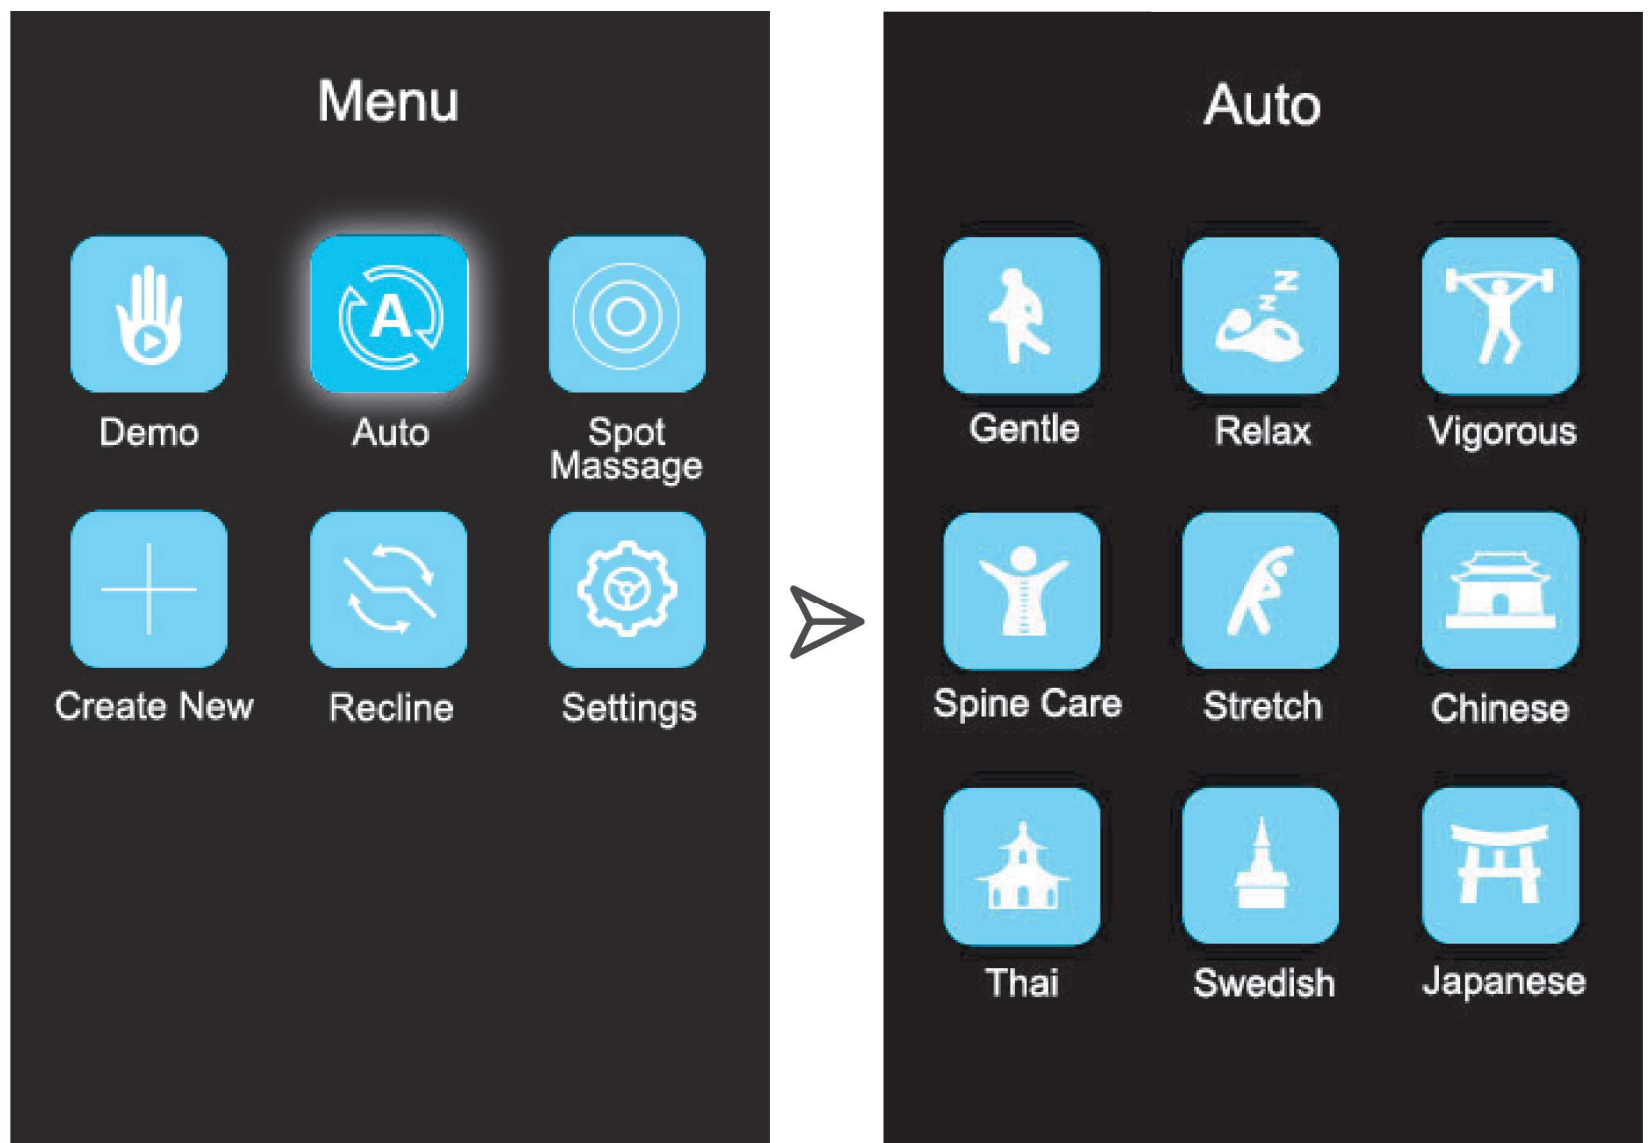

Choose "Auto" and press "OK" to get into auto massage interface

Auto Massage Interface

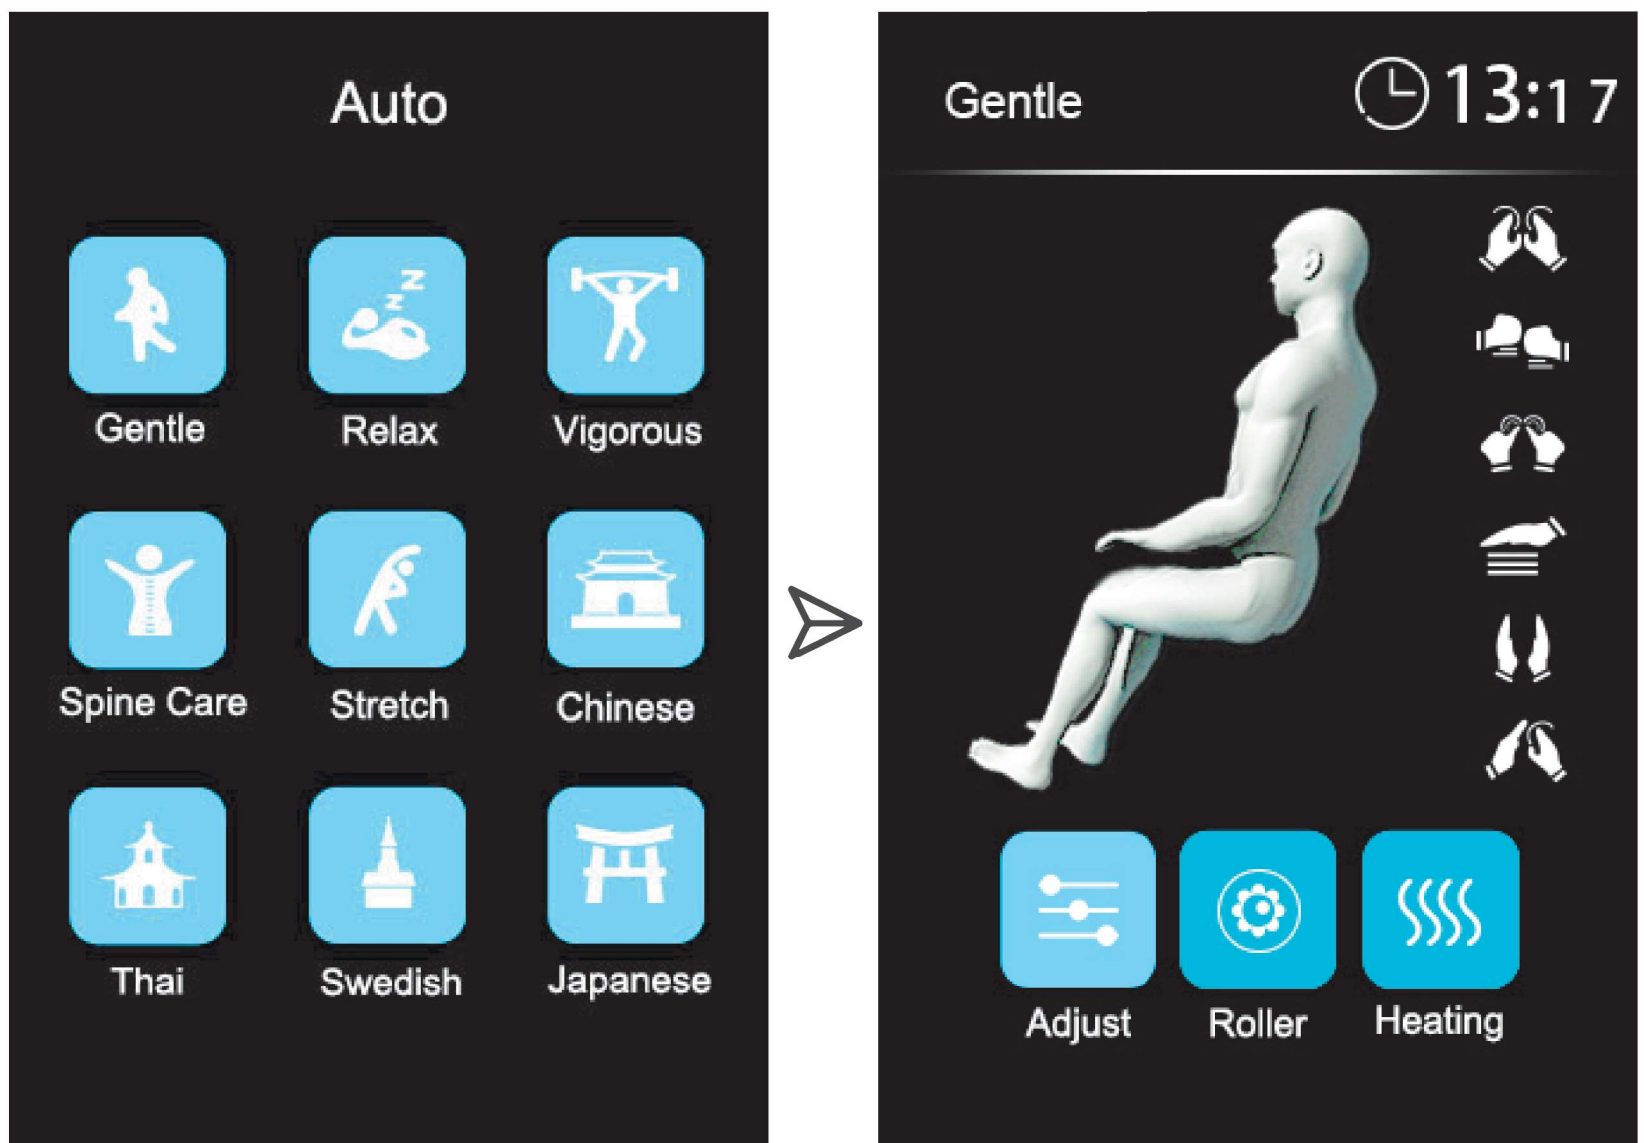

Choose 1 of our 9 auto massages
(Gentle, Relax, Stretch, Vigourous , Spine Care, Stretch, Chinese, Thai, Swedish, Japanese)

Massage Controls

Name of Auto Program

Gentle

13:17

Time Left



3D Strength & Air Intensity



Adjust




Roller



Heating

Foot Roller

Lumbar Heat

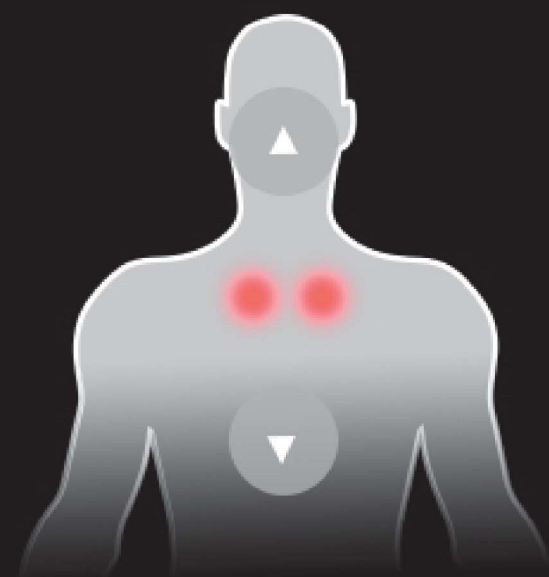


Scanning Completed

If the shoulder position is incorrect use the up/down button to move the massage rollers up or down and then press OK



Roller up / down


When you choose an auto program, the chair will detect your shoulder position automatically.
You can adjust the massage roller higher or lower with the direction buttons

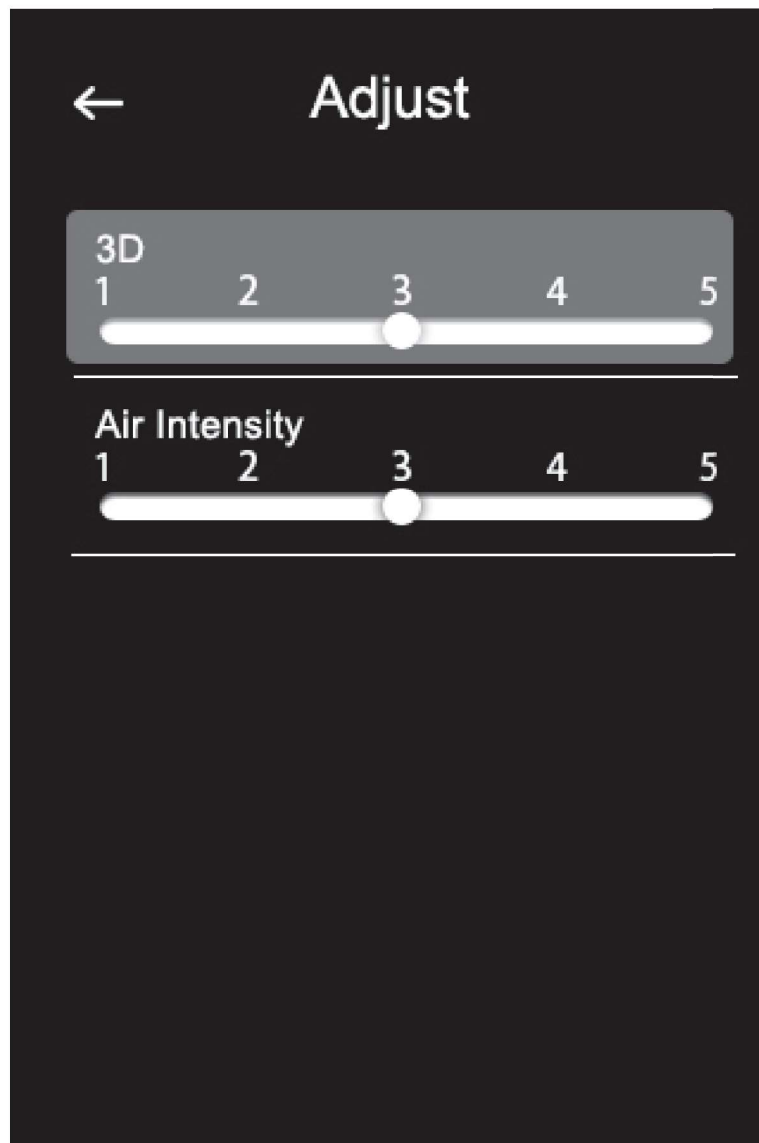

In this interface, you can adjust massage 3D strength and air intensity

SPOT MESSAGE

This is a fixed message area and actions program

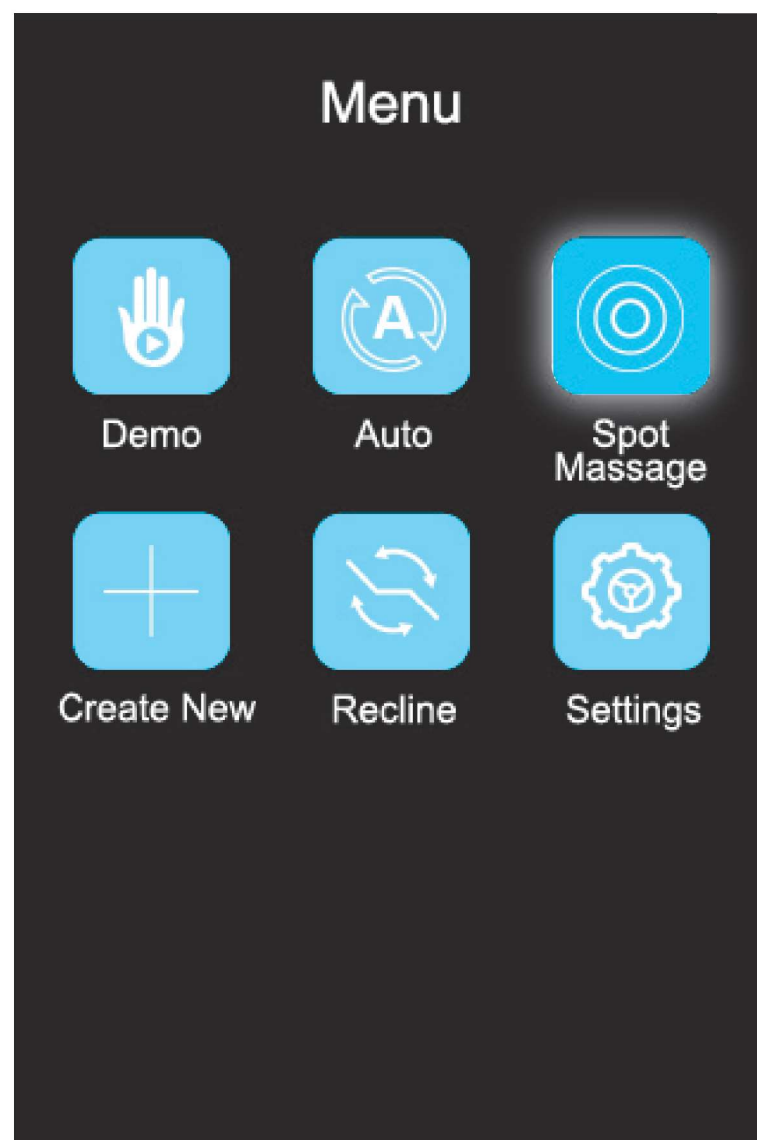

Choose "Spot Message" and press "OK" to begin spot massage