




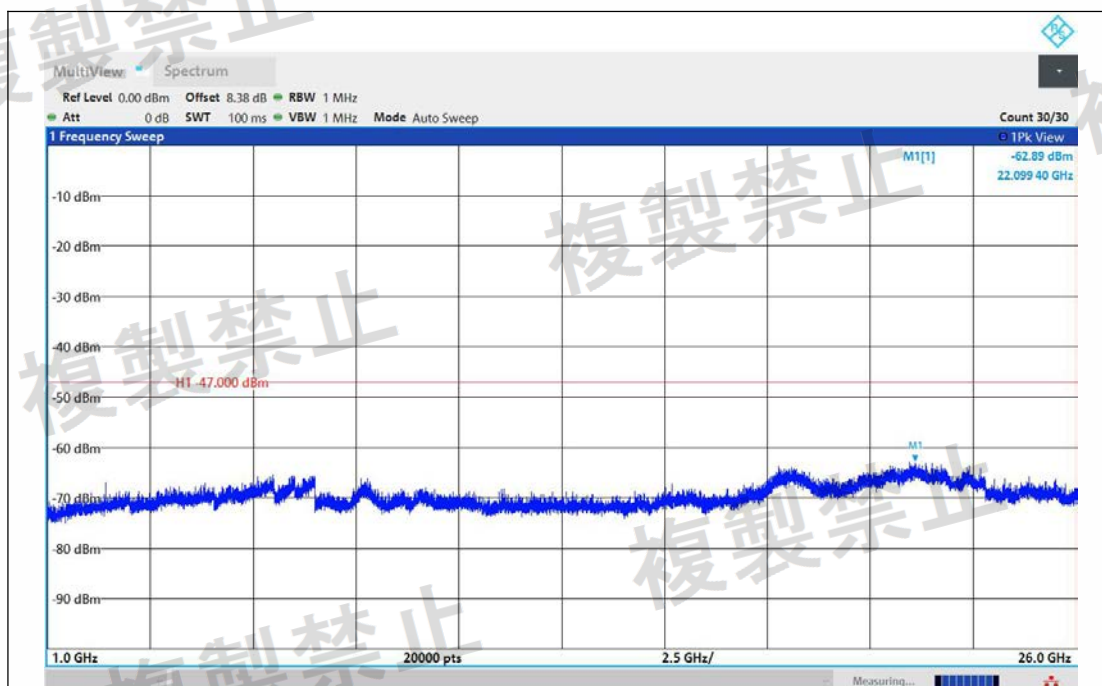


NTVN-11AX20MIMO-Ant1-5320-1000~26000-PASS

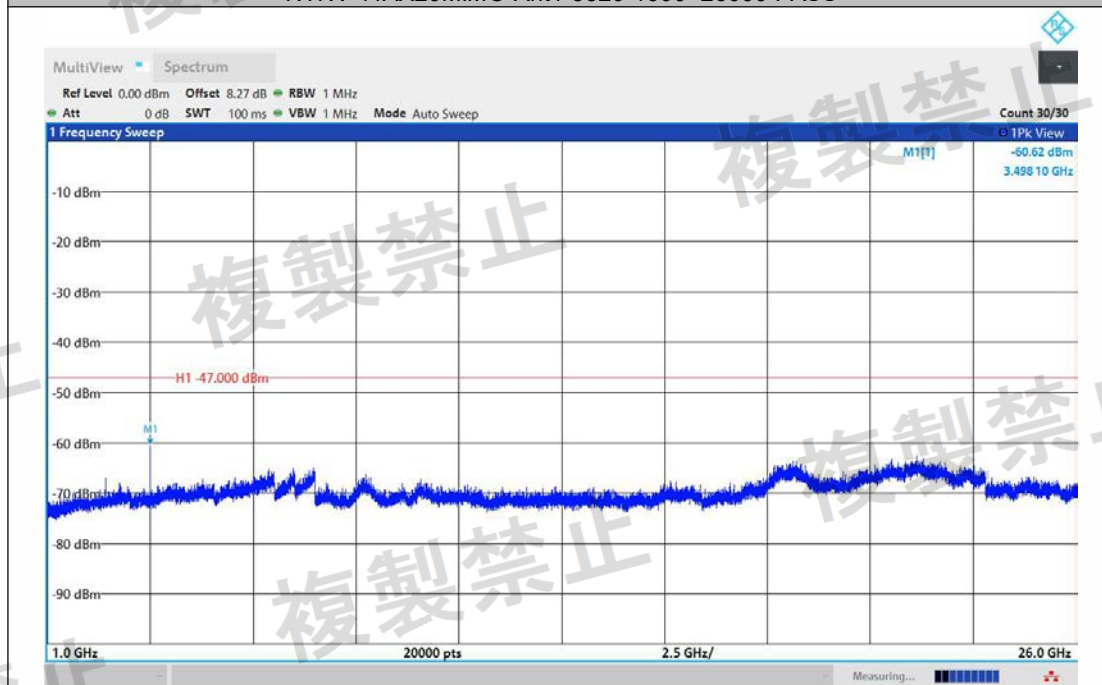


NTVN-11AX20MIMO-Ant2-5320-1000~26000-PASS

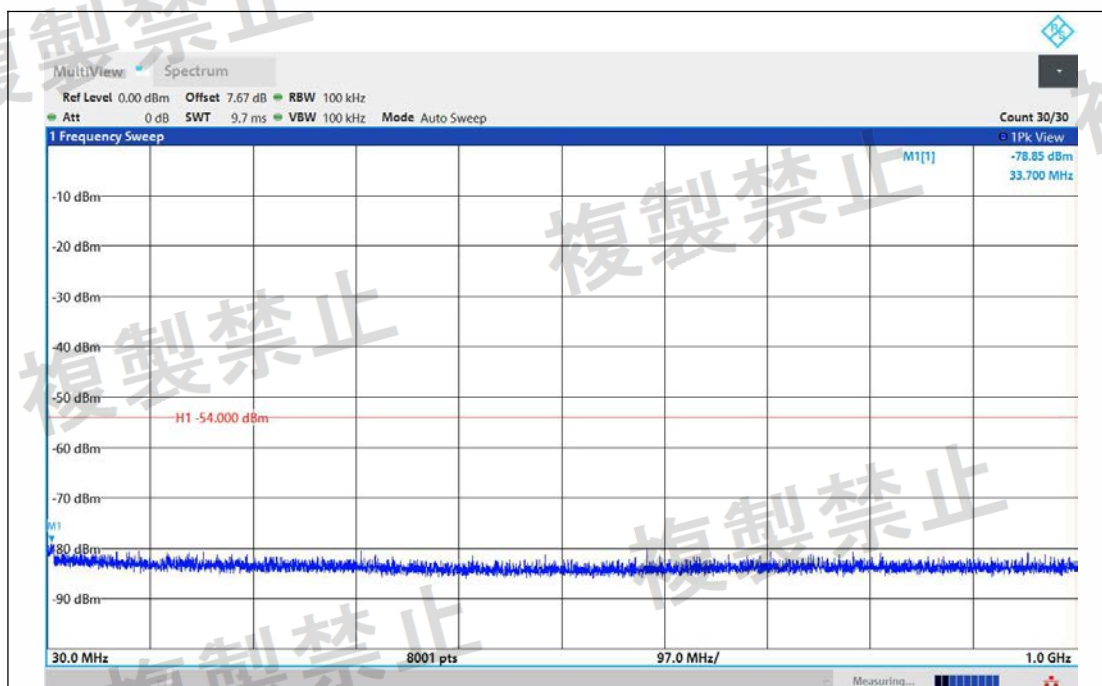


NTNV-11AX20MIMO-Ant1-5500-30~1000-PASS

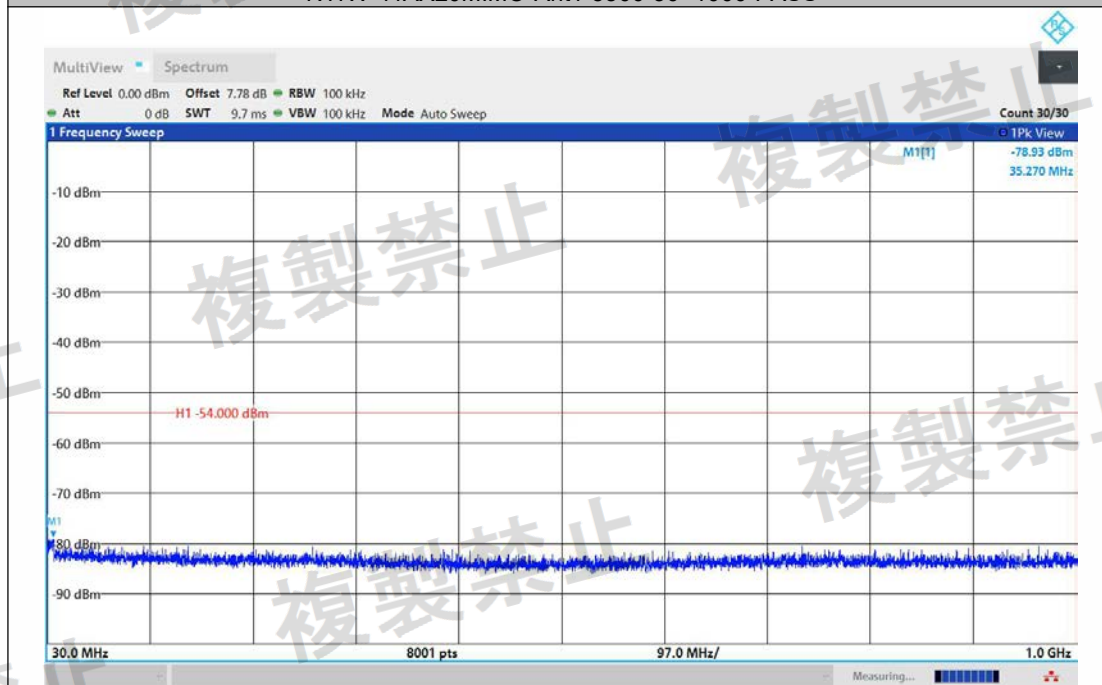


NTNV-11AX20MIMO-Ant2-5500-30~1000-PASS

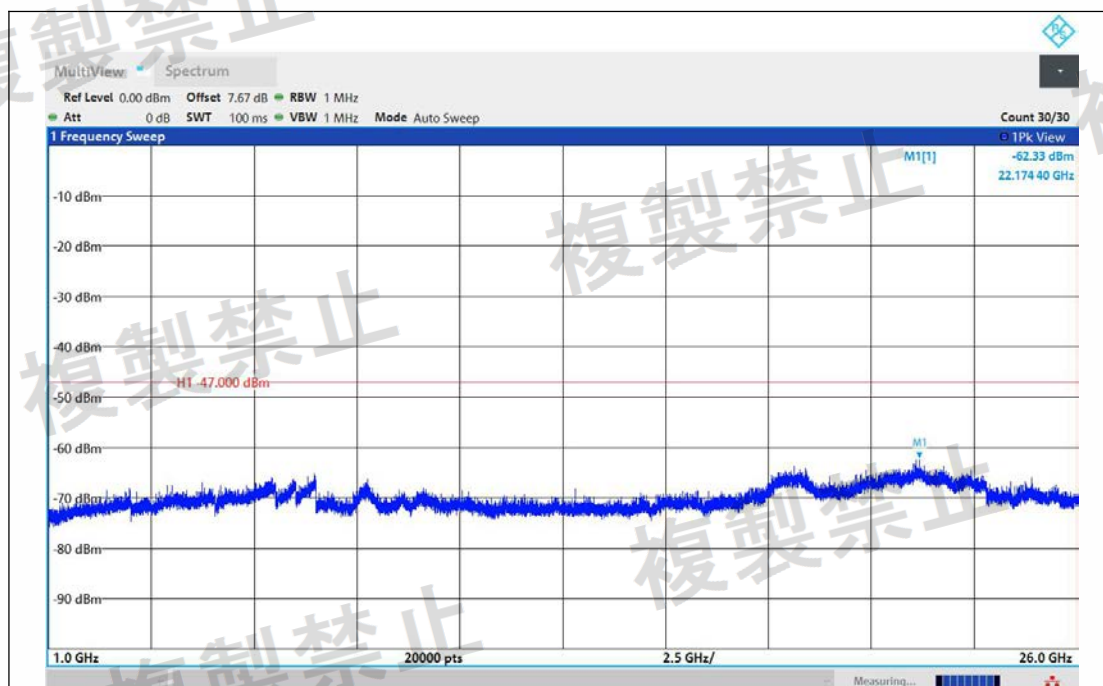


NTNV-11AX20MIMO-Ant1-5500-1000~26000-PASS

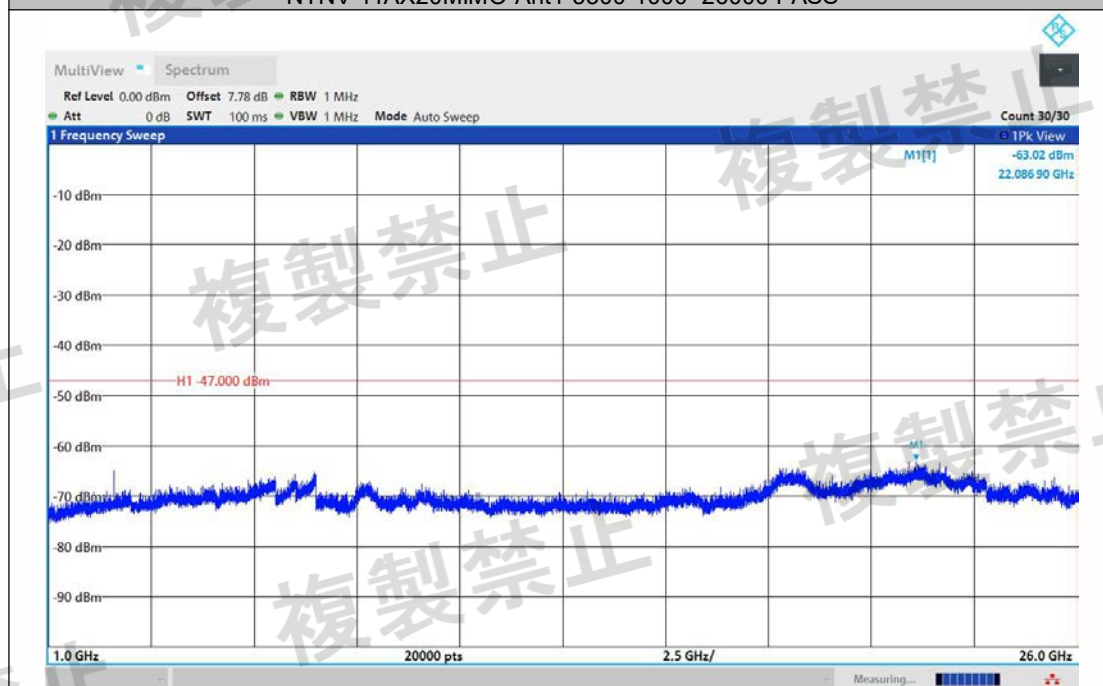


NTNV-11AX20MIMO-Ant2-5500-1000~26000-PASS

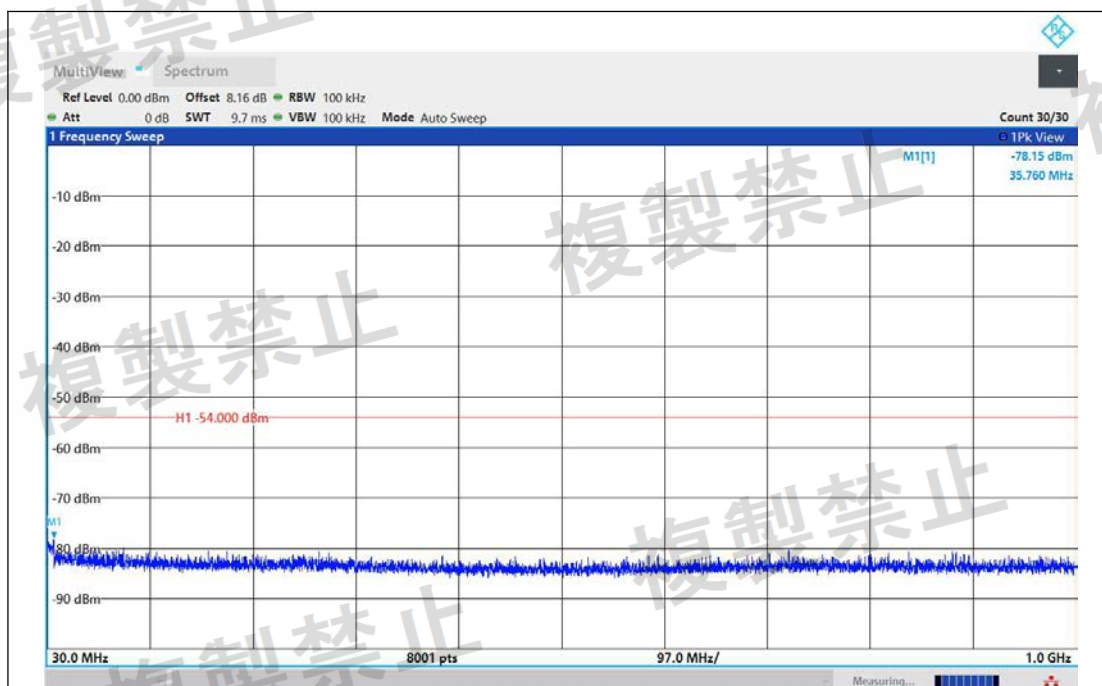


NTNV-11AX20MIMO-Ant1-5580-30~1000-PASS

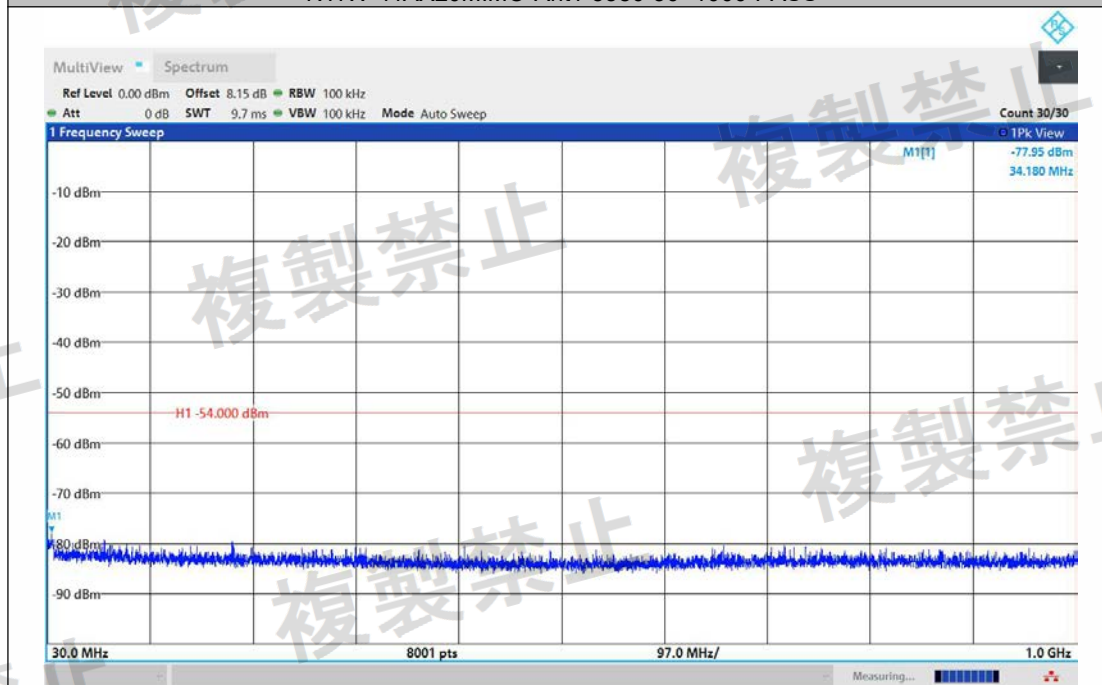


NTNV-11AX20MIMO-Ant2-5580-30~1000-PASS

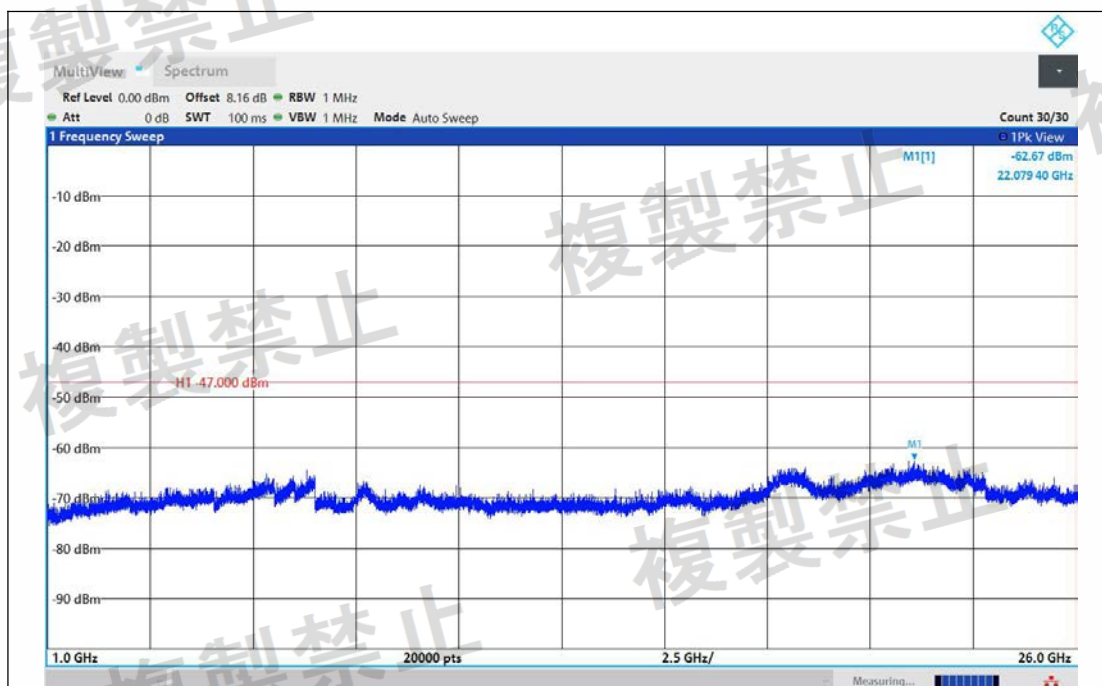


NTVN-11AX20MIMO-Ant1-5580-1000~26000-PASS

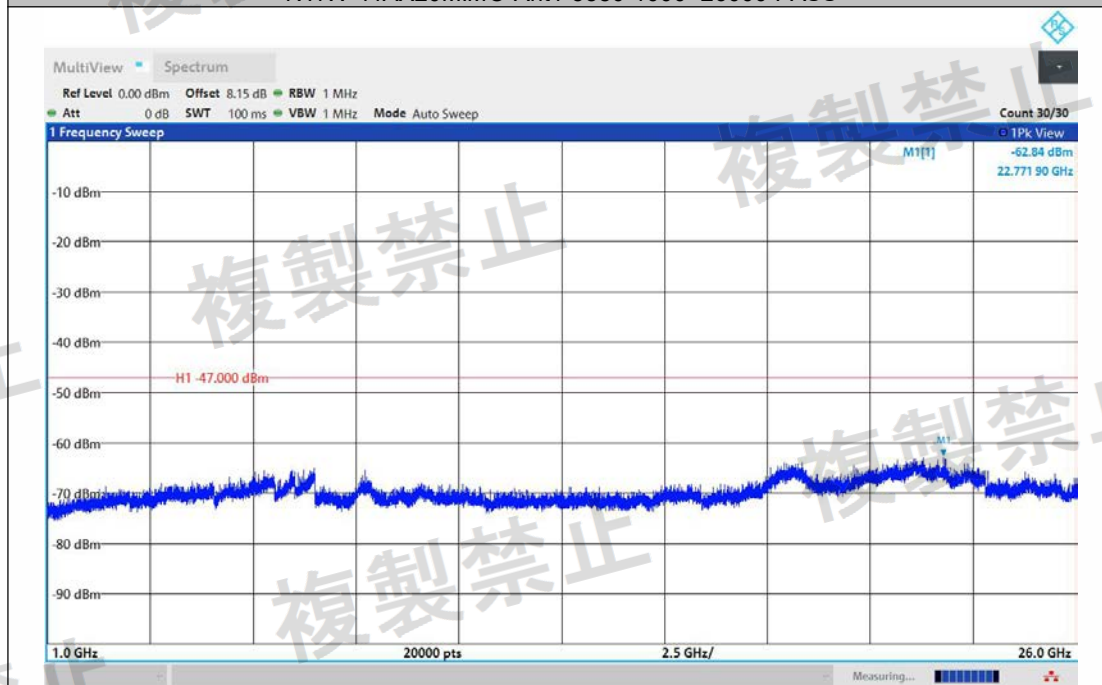


NTVN-11AX20MIMO-Ant2-5580-1000~26000-PASS

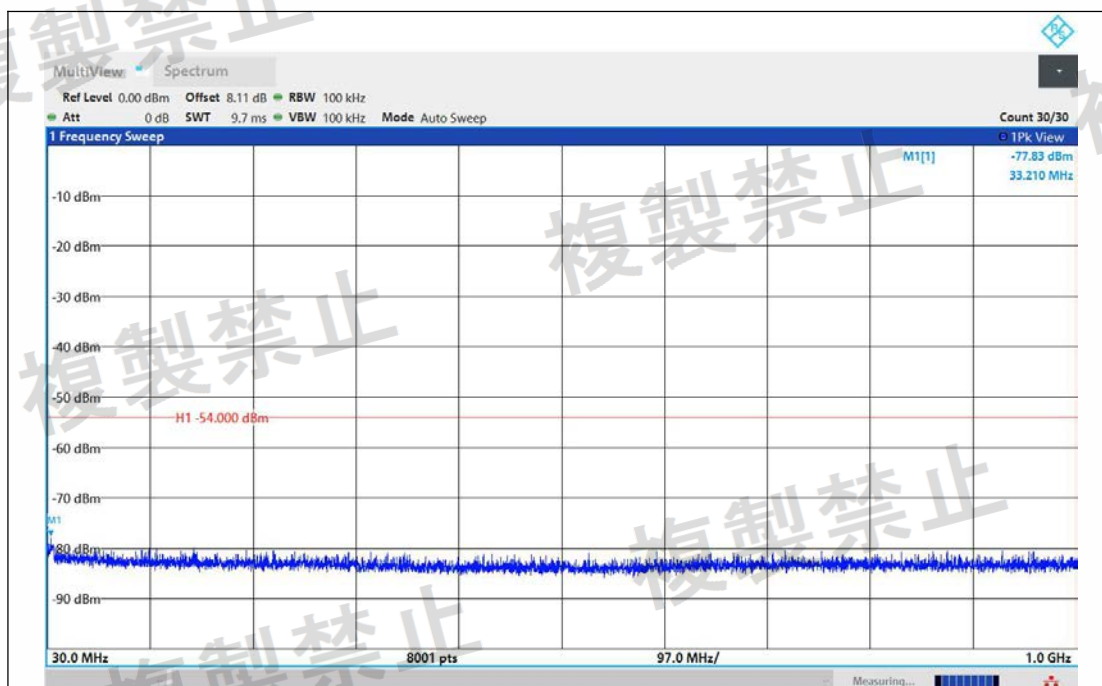


NTNV-11AX20MIMO-Ant1-5700-30~1000-PASS

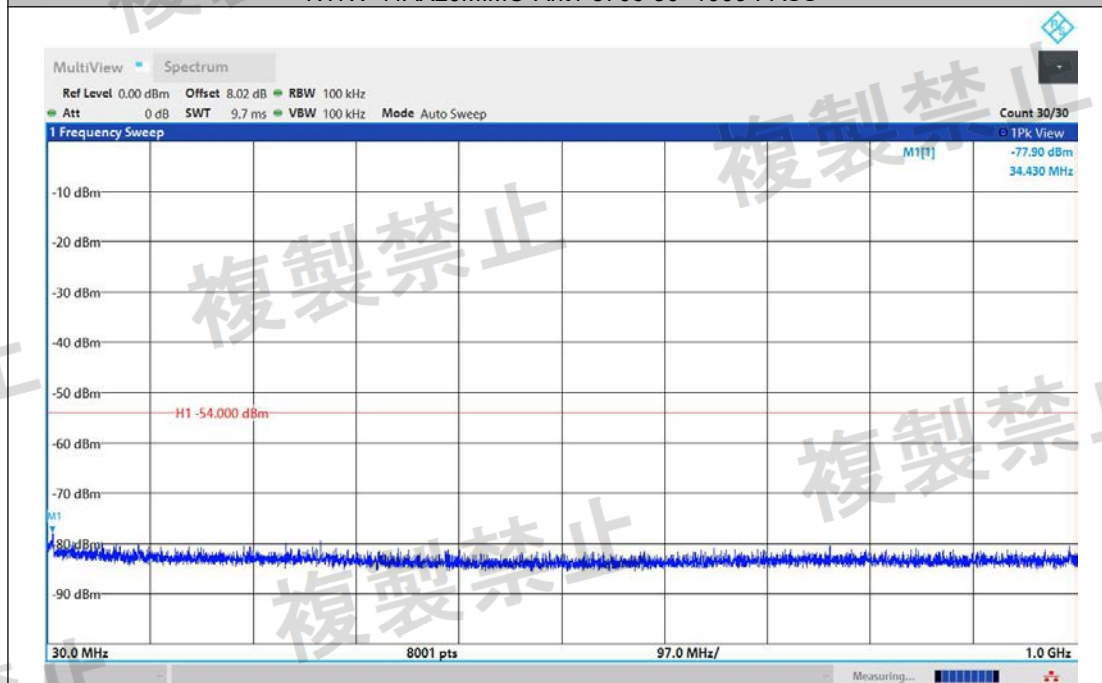


NTNV-11AX20MIMO-Ant2-5700-30~1000-PASS

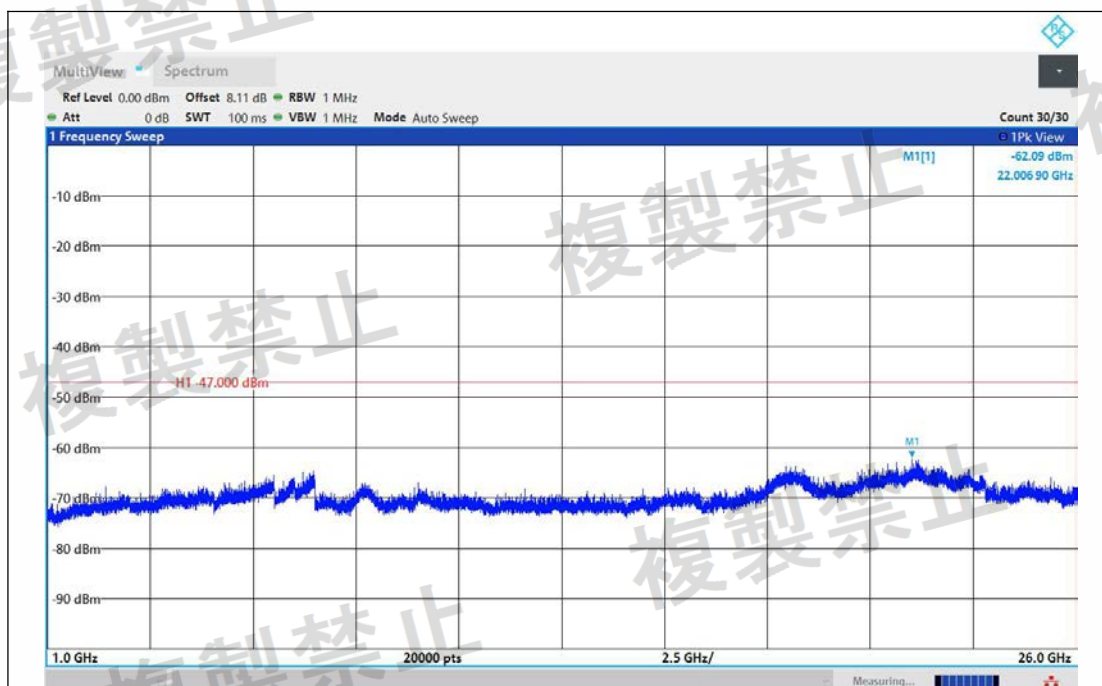


NTVN-11AX20MIMO-Ant1-5700-1000~26000-PASS

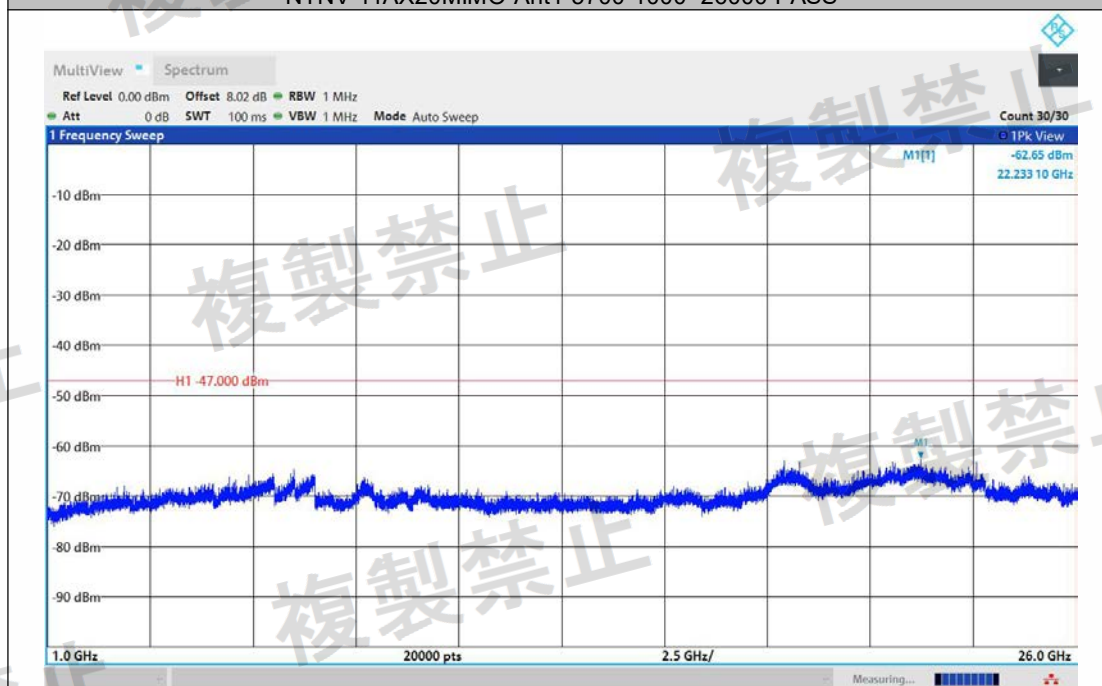


NTVN-11AX20MIMO-Ant2-5700-1000~26000-PASS

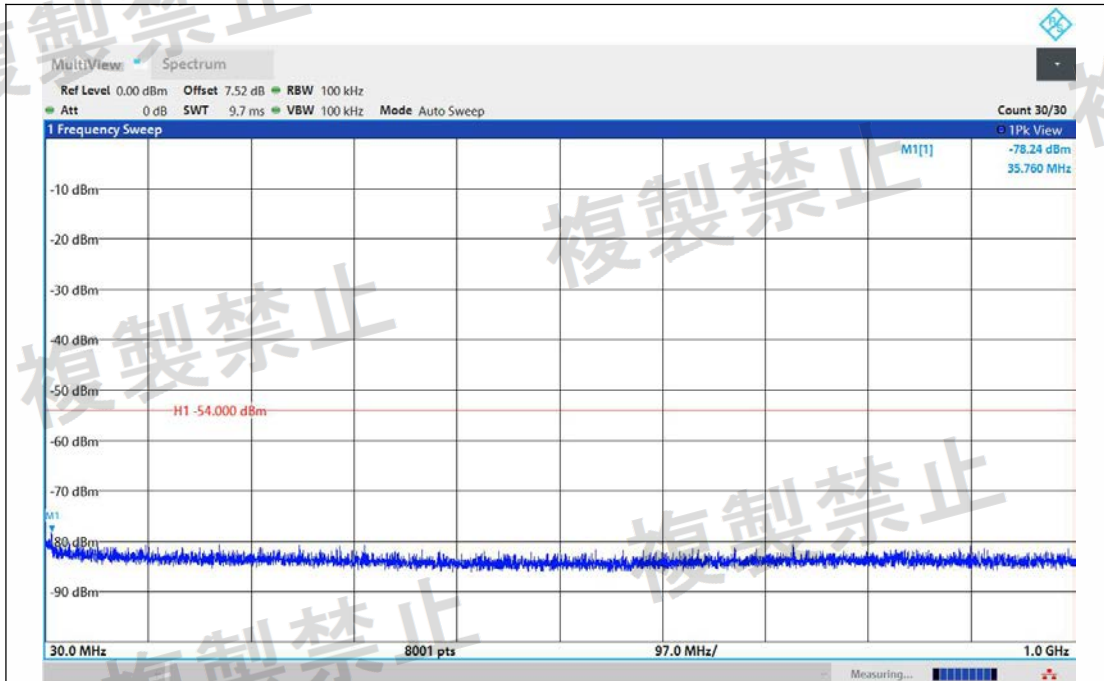


NTNV-11AX40MIMO-Ant1-5190-30~1000-PASS

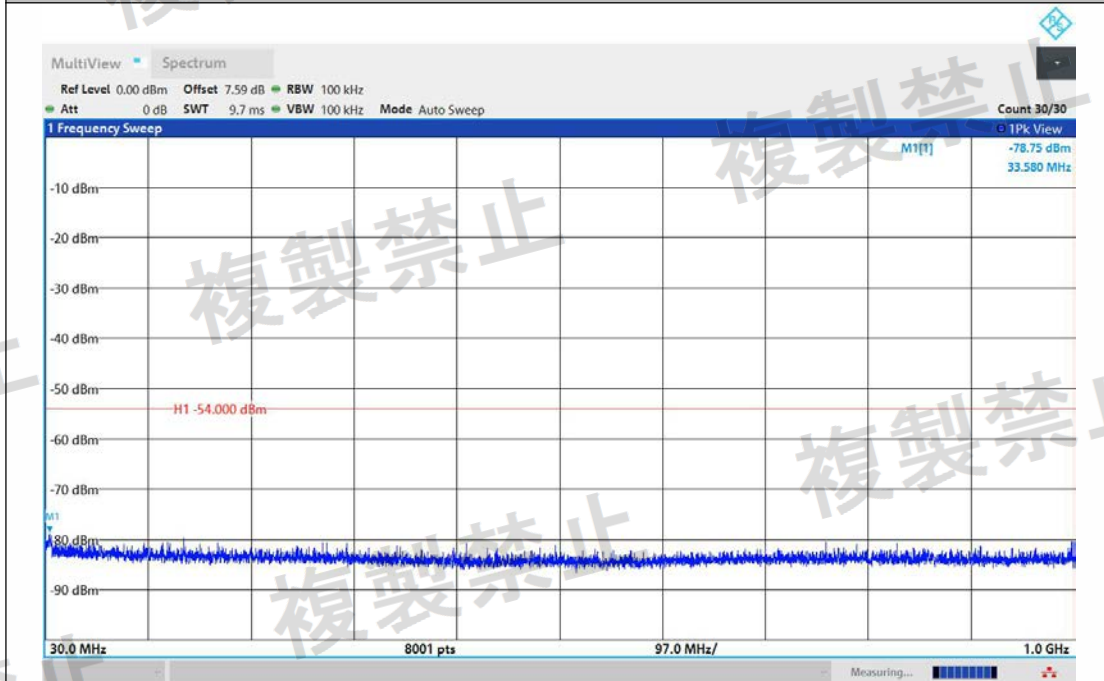


NTNV-11AX40MIMO-Ant2-5190-30~1000-PASS

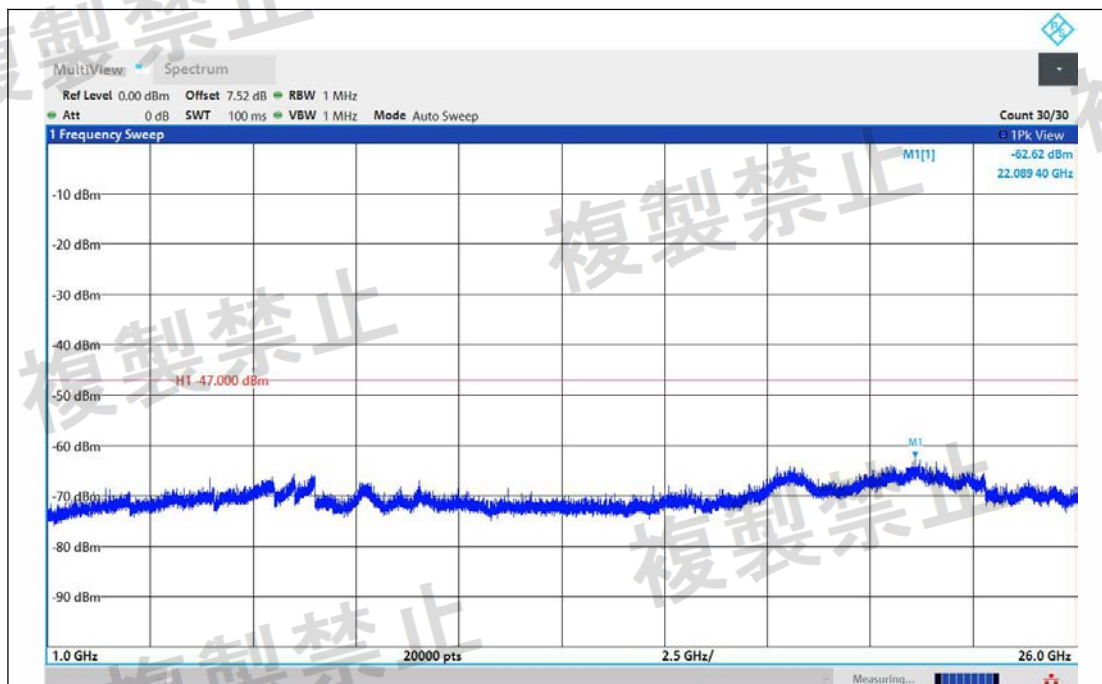


NTNV-11AX40MIMO-Ant1-5190-1000~26000-PASS

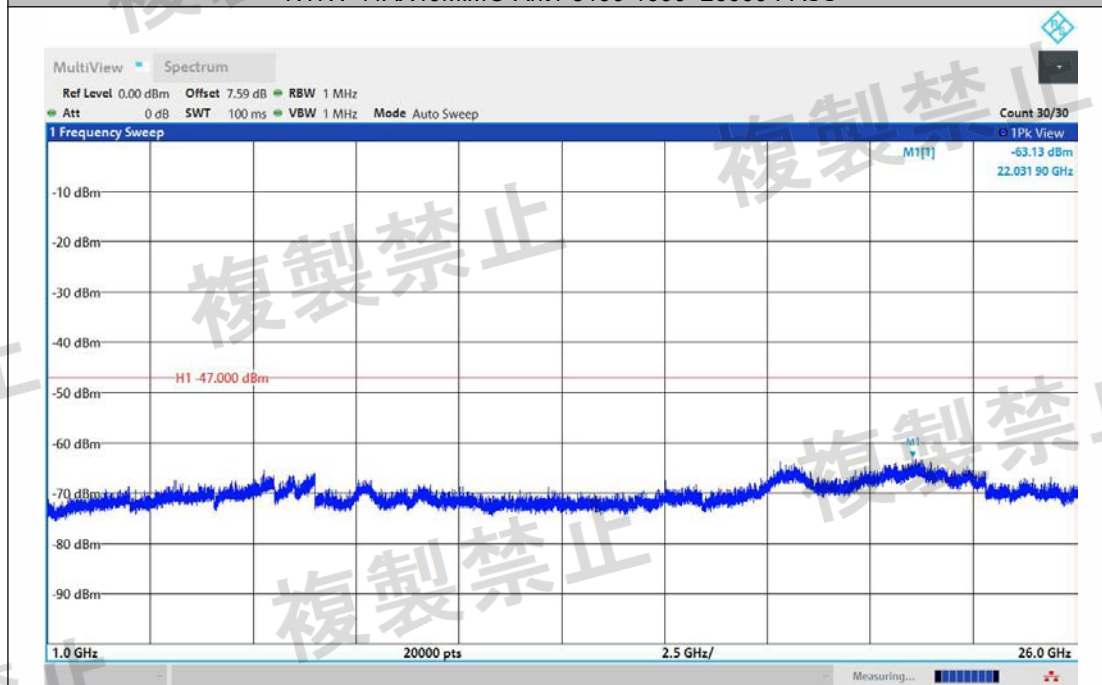


NTNV-11AX40MIMO-Ant2-5190-1000~26000-PASS

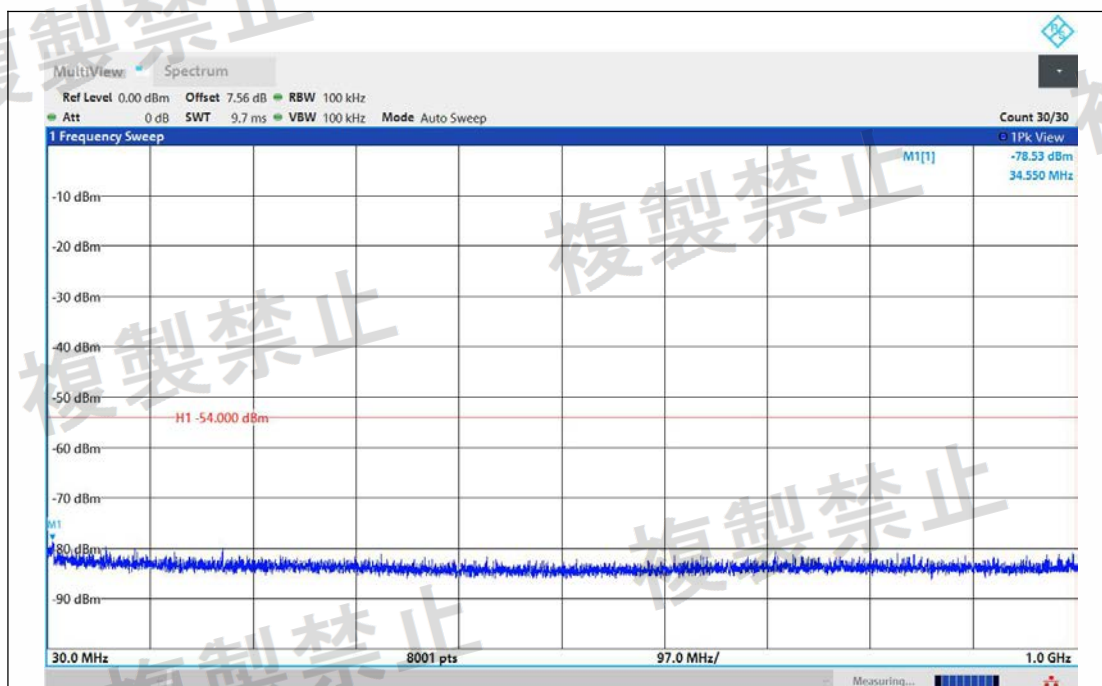


NTNV-11AX40MIMO-Ant1-5230-30~1000-PASS

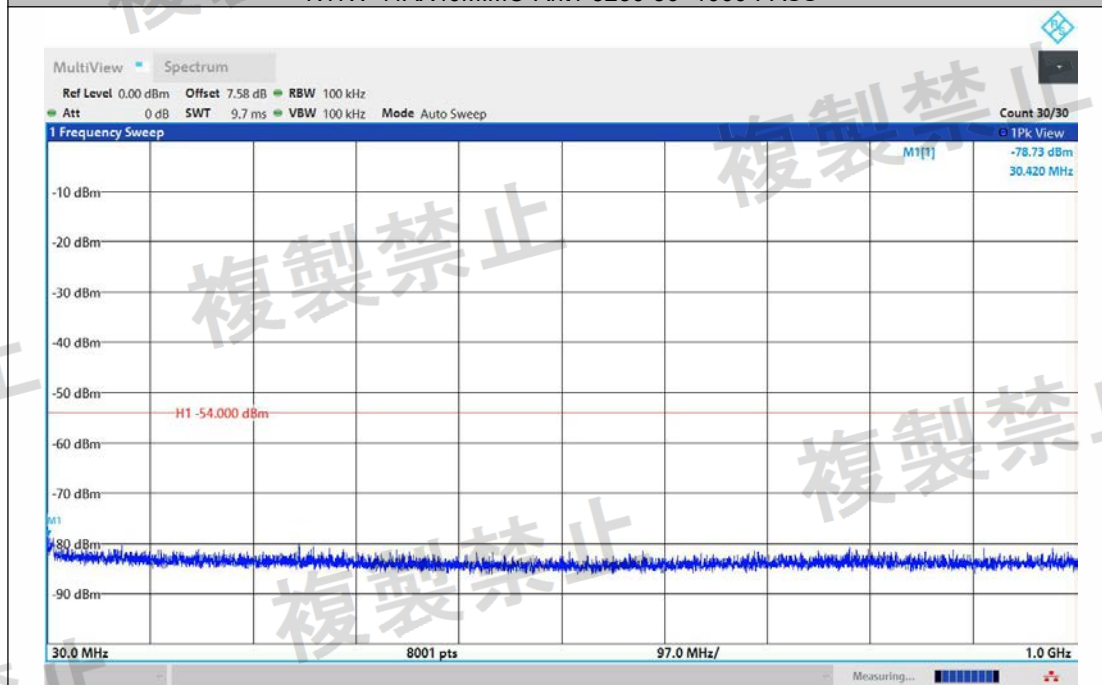


NTNV-11AX40MIMO-Ant2-5230-30~1000-PASS

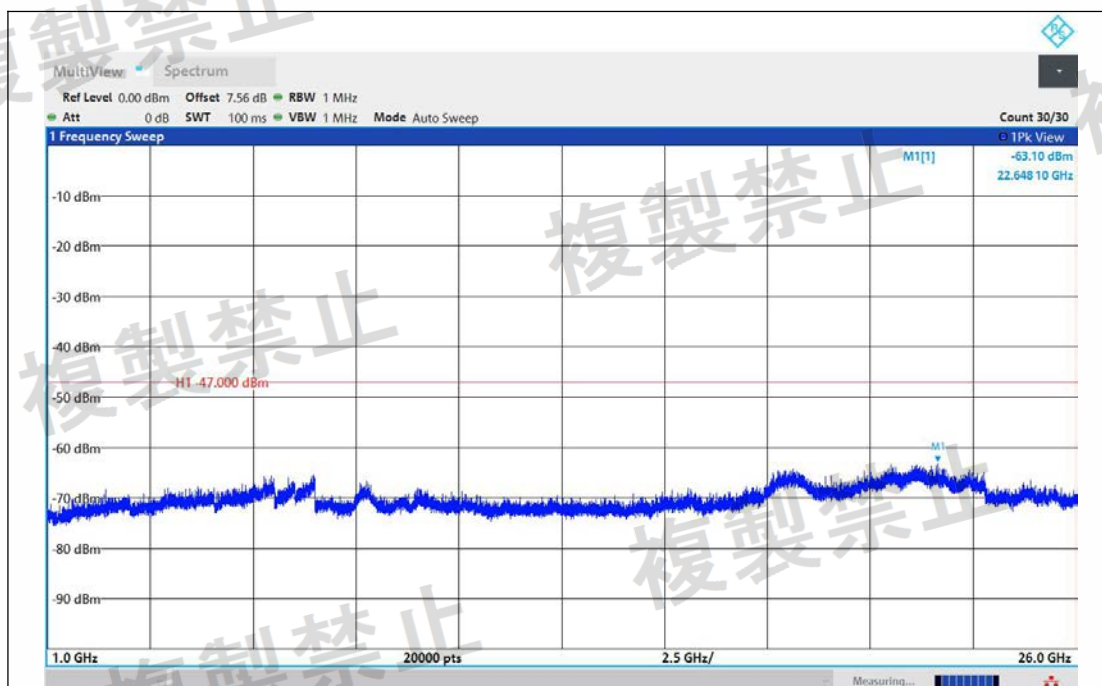


NTVN-11AX40MIMO-Ant1-5230-1000~26000-PASS

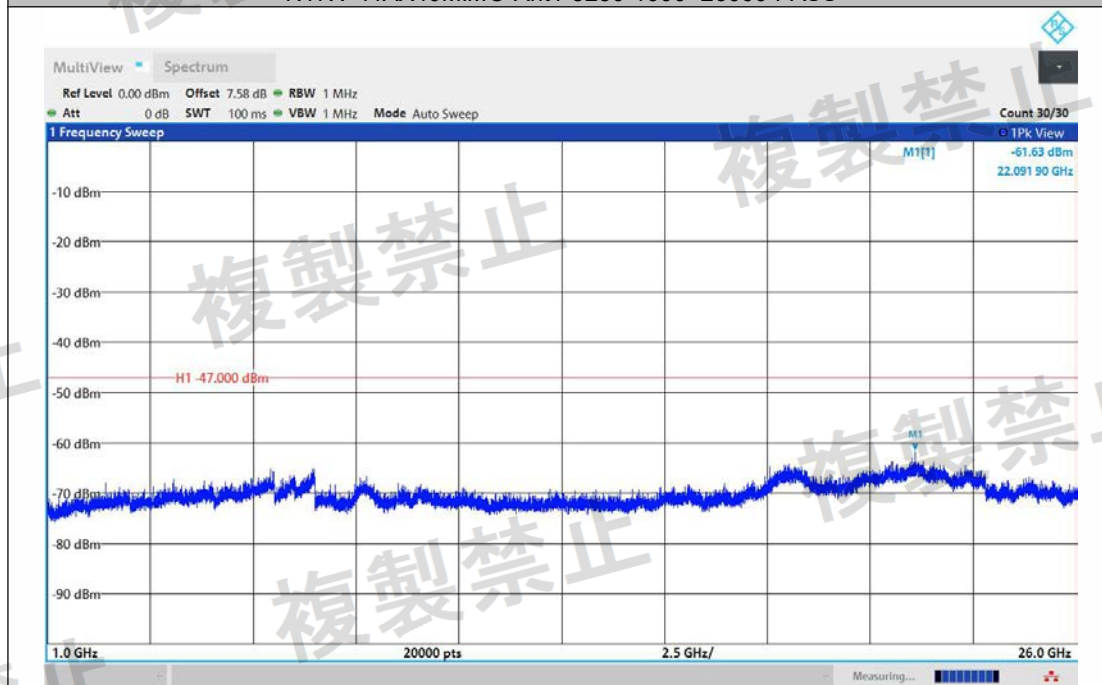


NTVN-11AX40MIMO-Ant2-5230-1000~26000-PASS

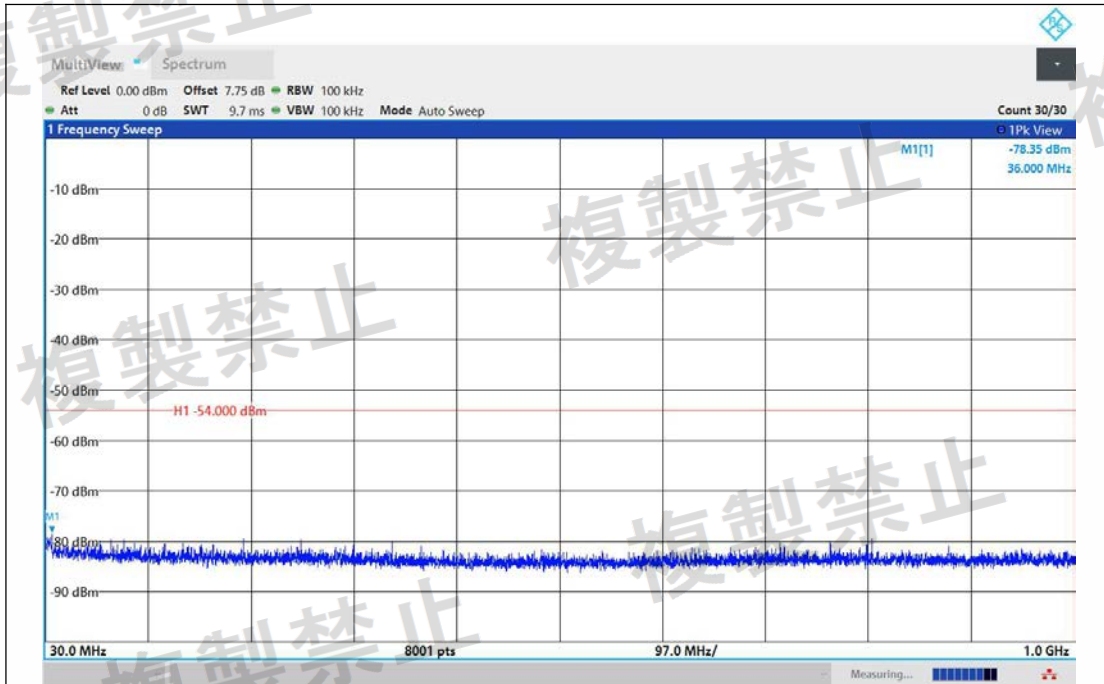


NTNV-11AX40MIMO-Ant1-5270-30~1000-PASS

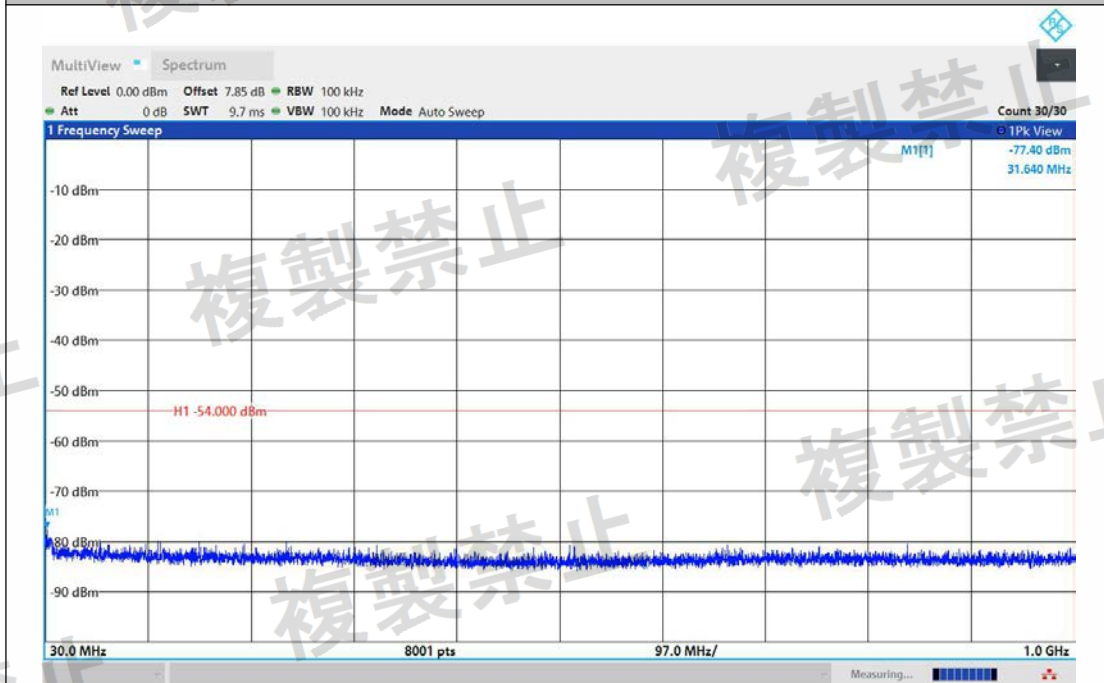


NTNV-11AX40MIMO-Ant2-5270-30~1000-PASS

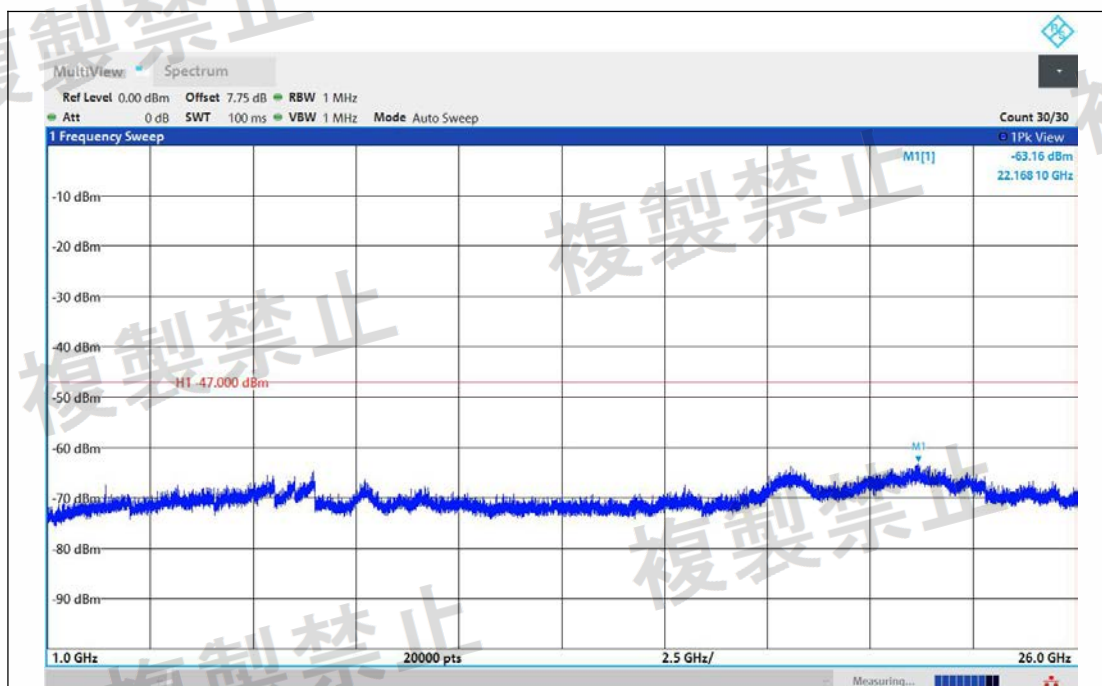


NTVN-11AX40MIMO-Ant1-5270-1000~26000-PASS

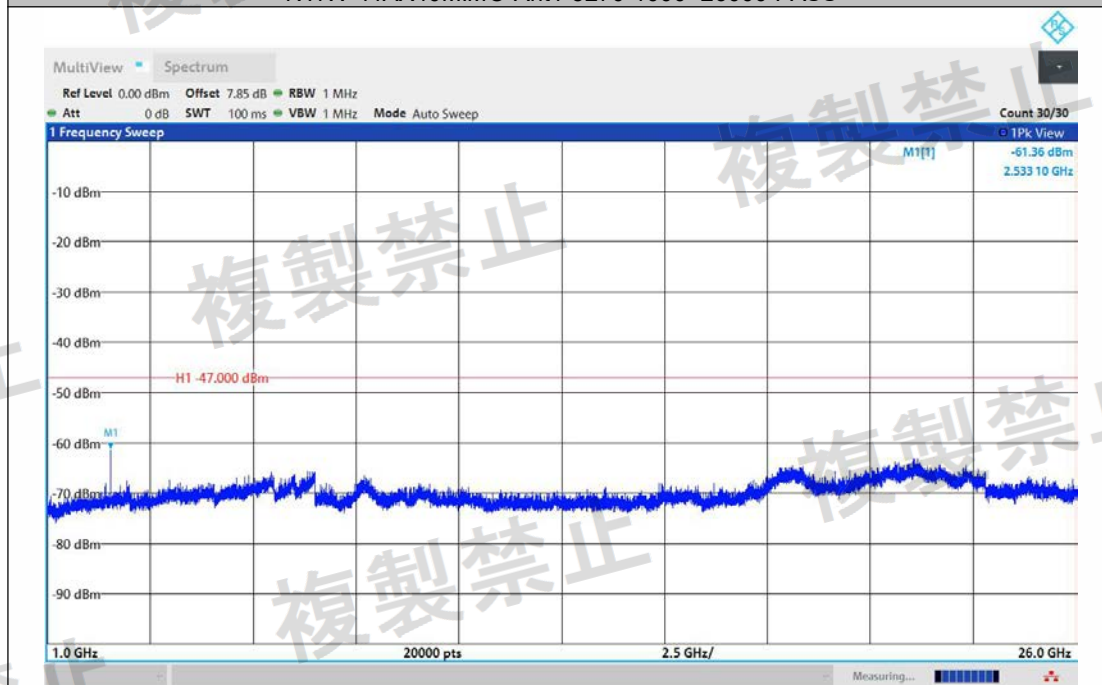


NTVN-11AX40MIMO-Ant2-5270-1000~26000-PASS

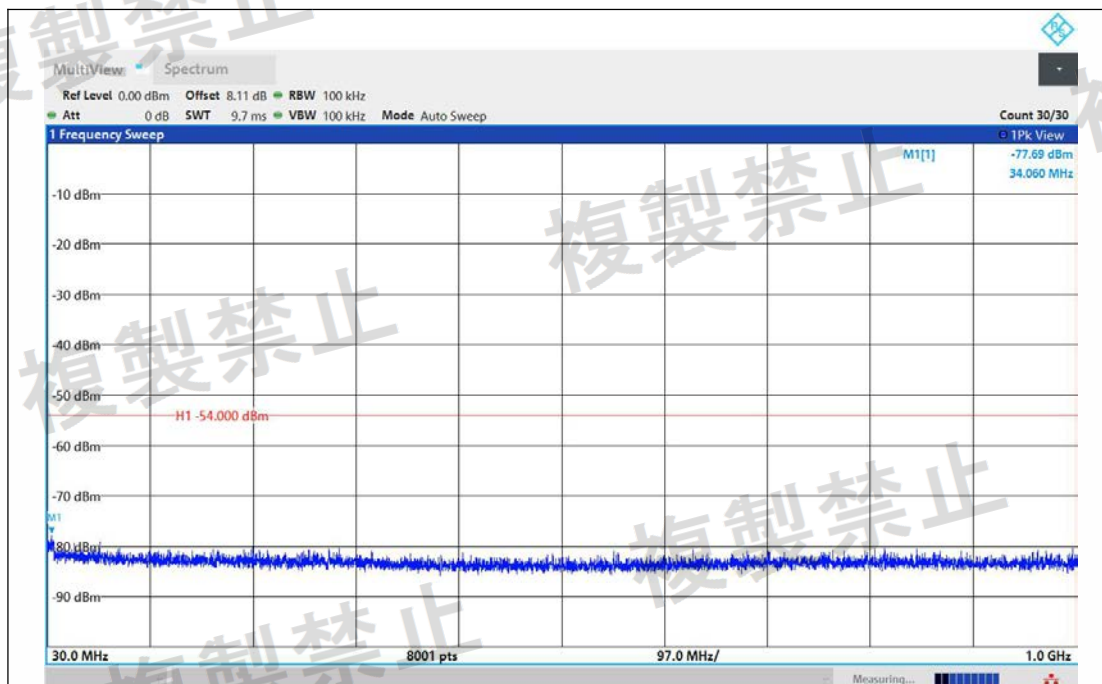


NTNV-11AX40MIMO-Ant1-5310-30~1000-PASS

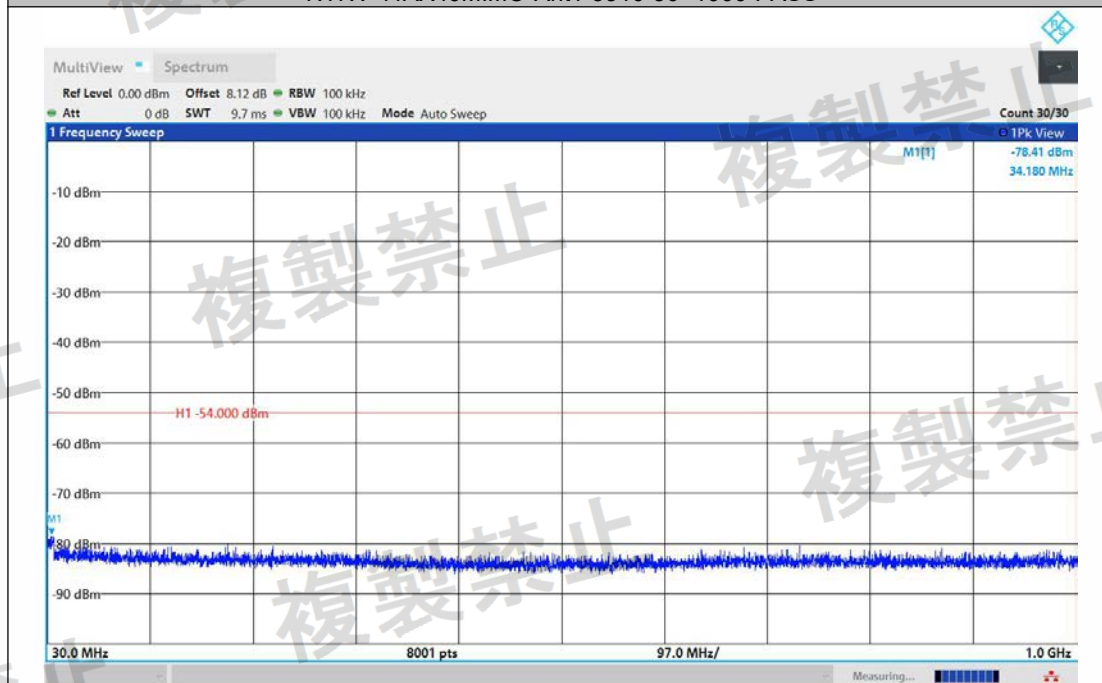


NTNV-11AX40MIMO-Ant2-5310-30~1000-PASS

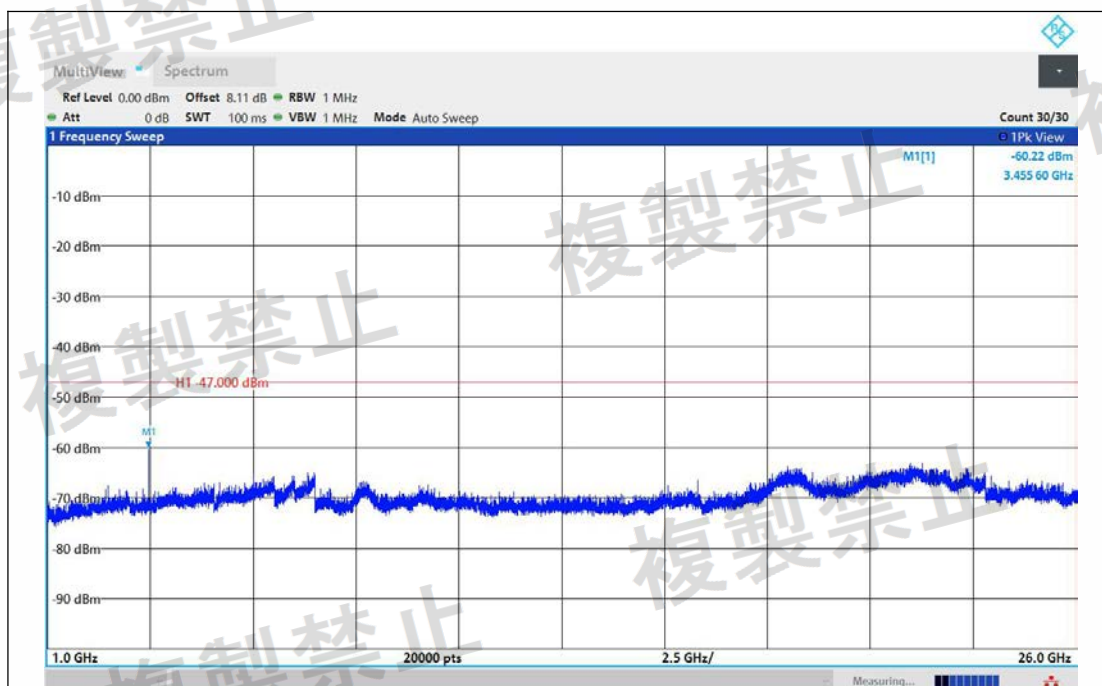


NTNV-11AX40MIMO-Ant1-5310-1000~26000-PASS

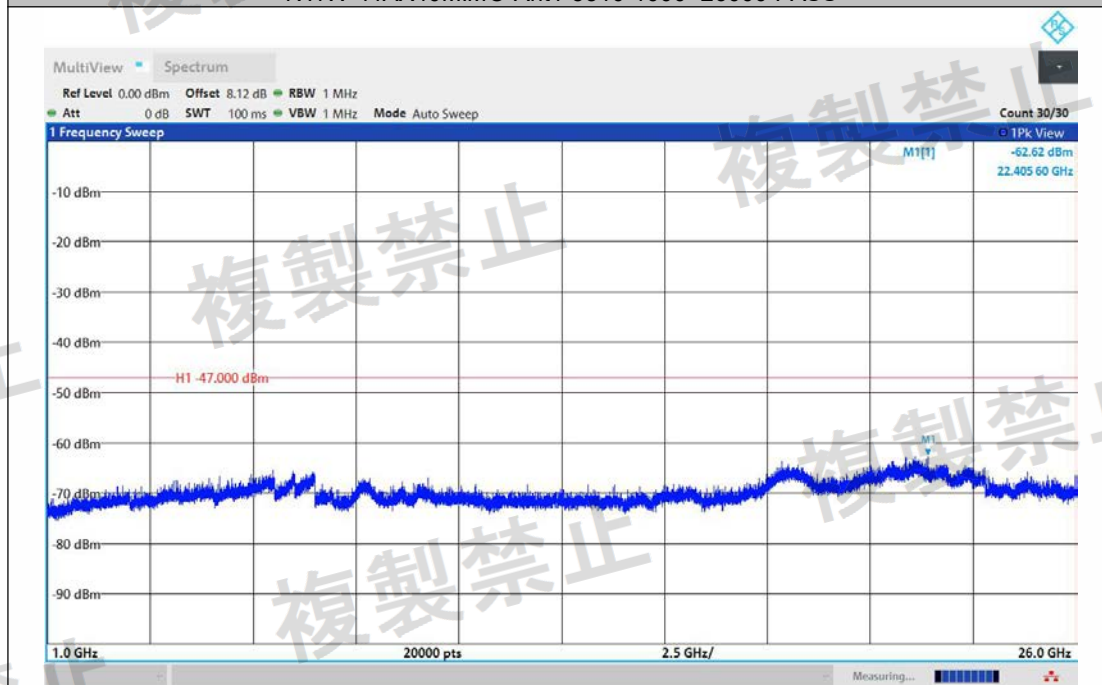


NTNV-11AX40MIMO-Ant2-5310-1000~26000-PASS

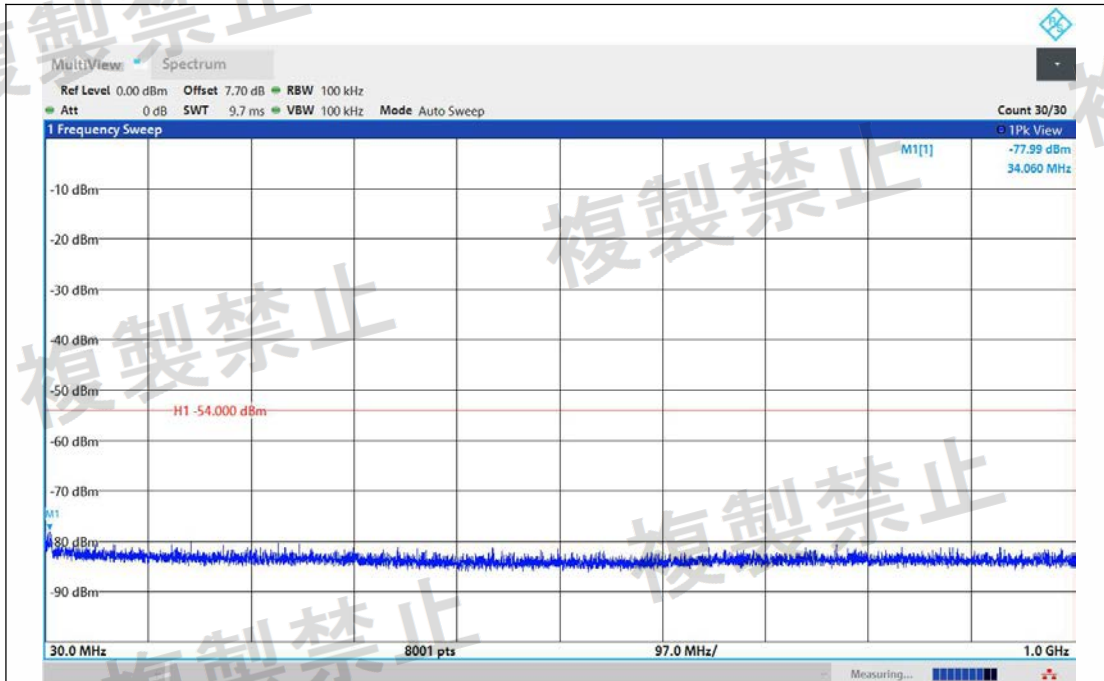


NTNV-11AX40MIMO-Ant1-5510-30~1000-PASS

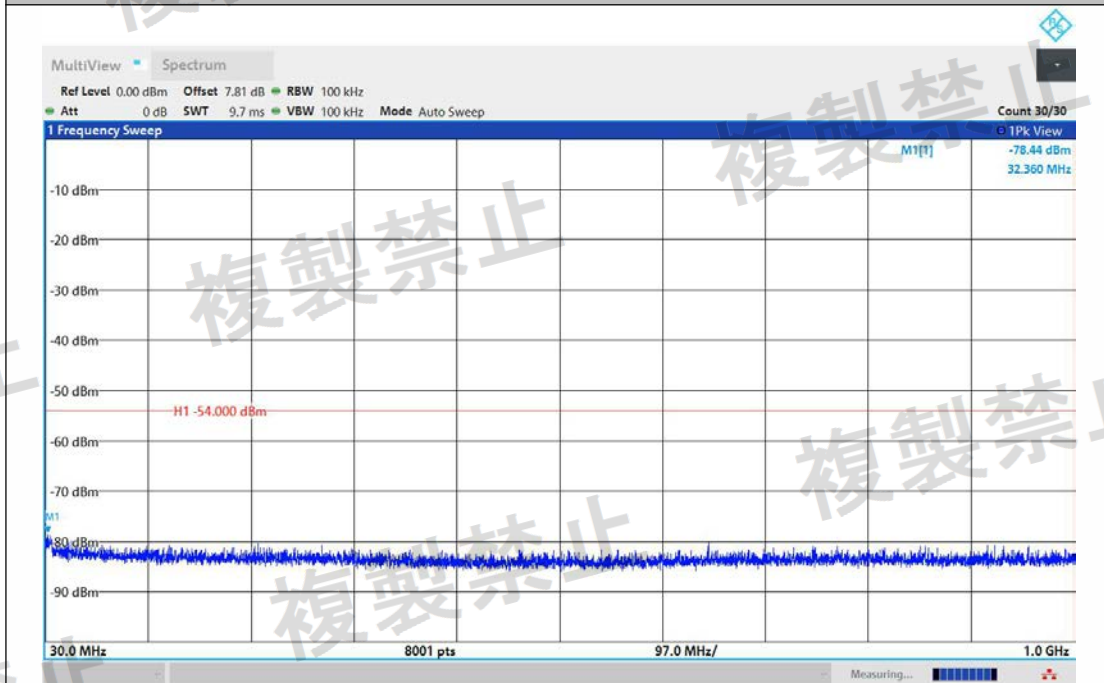


NTNV-11AX40MIMO-Ant2-5510-30~1000-PASS

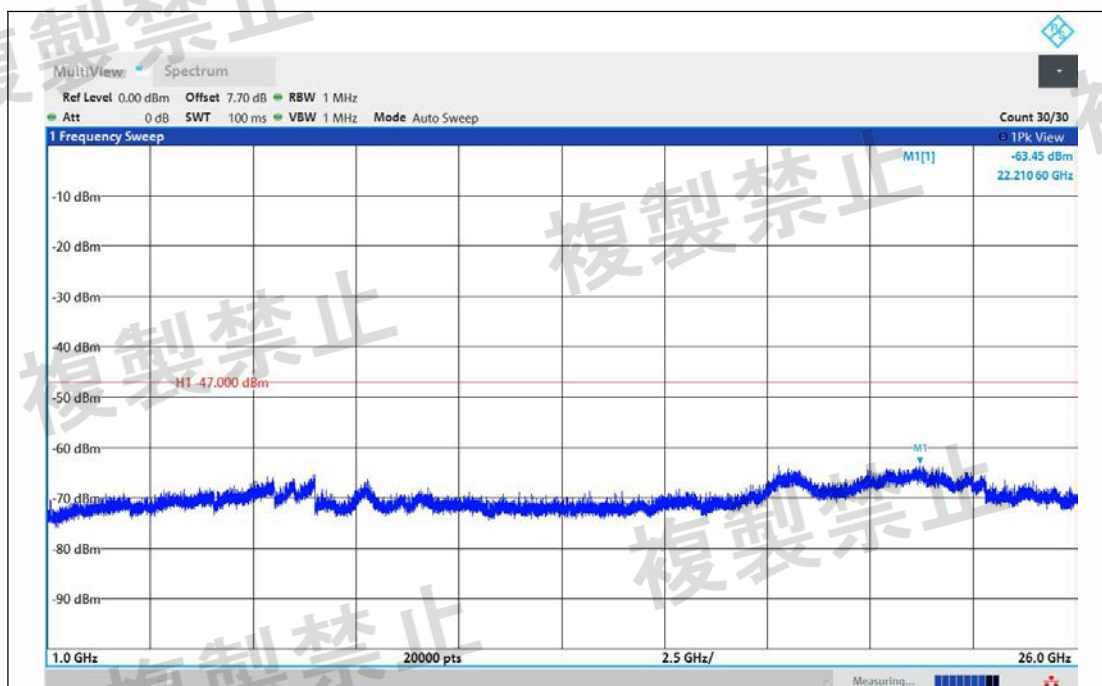


NTVN-11AX40MIMO-Ant1-5510-1000~26000-PASS

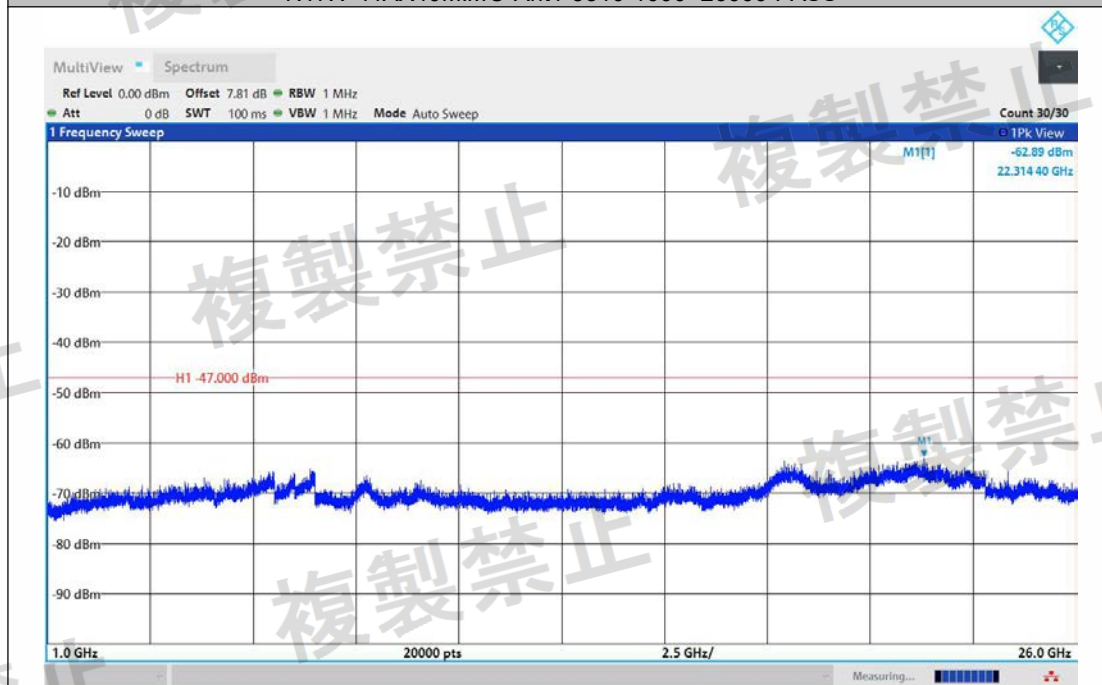


NTVN-11AX40MIMO-Ant2-5510-1000~26000-PASS

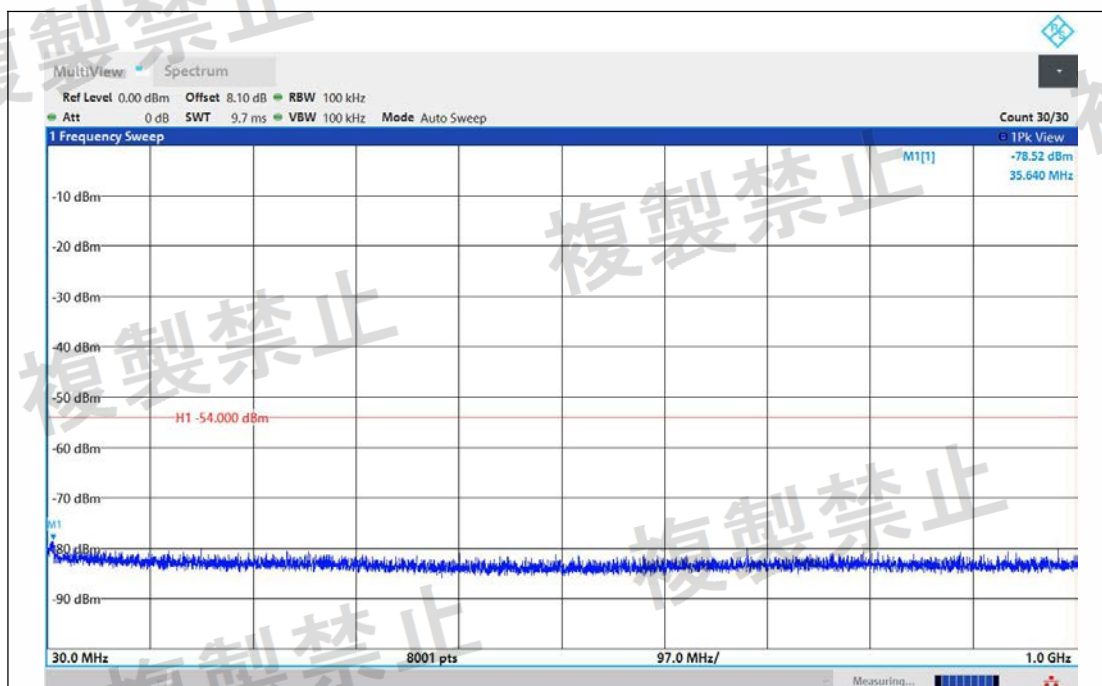


NTNV-11AX40MIMO-Ant1-5670-30~1000-PASS

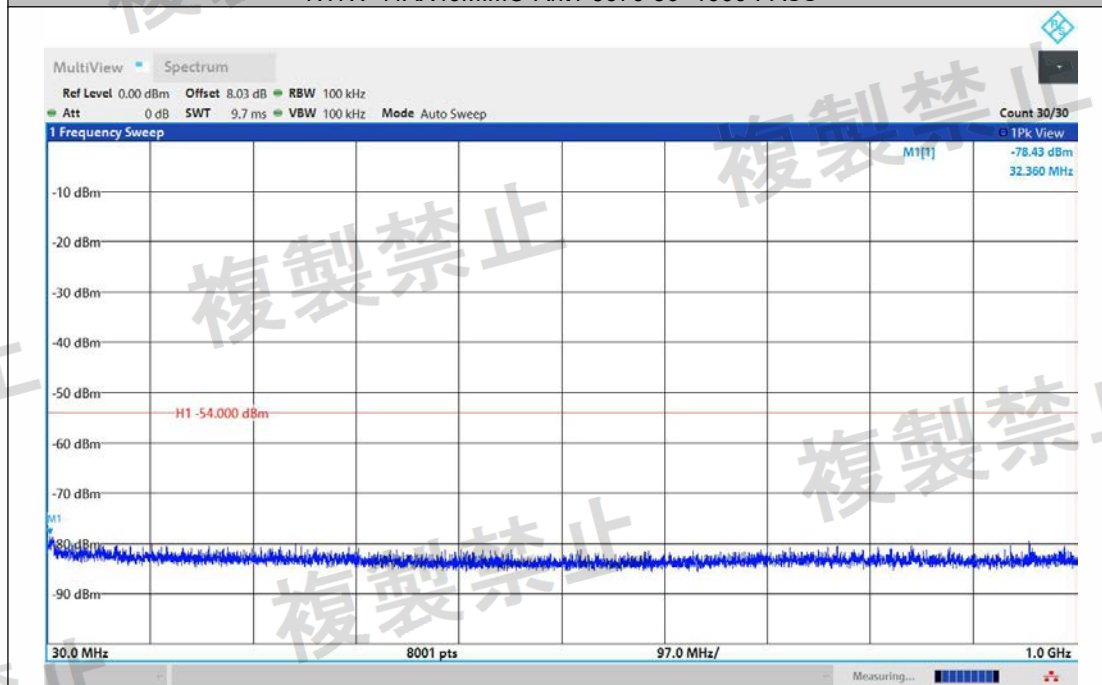


NTNV-11AX40MIMO-Ant2-5670-30~1000-PASS

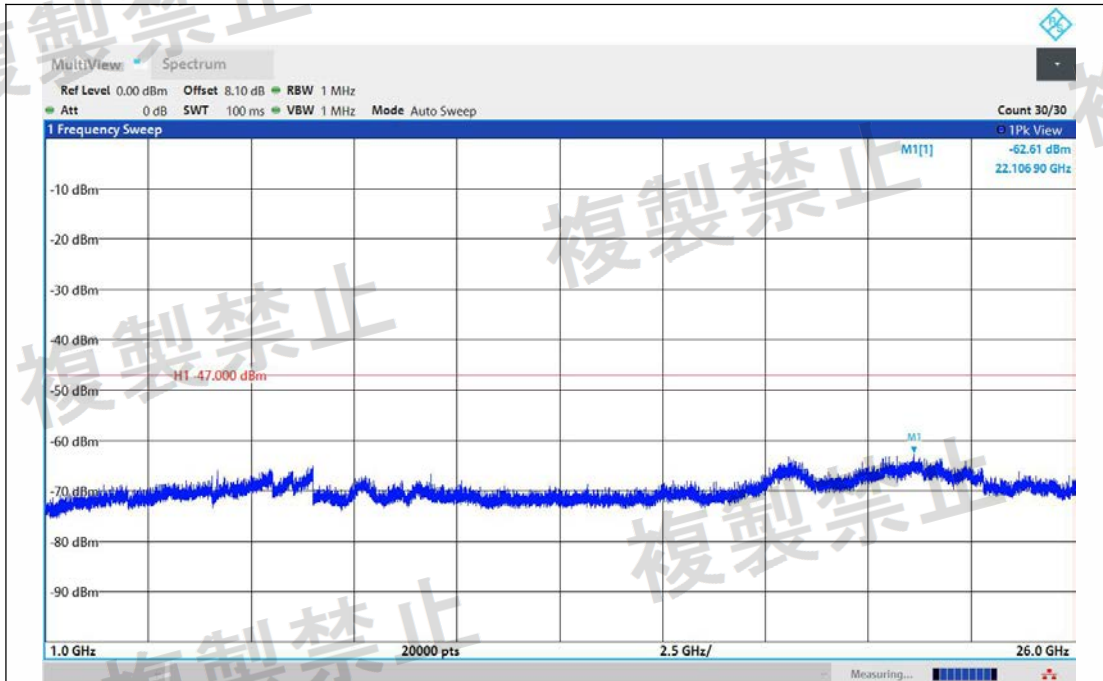


NTNV-11AX40MIMO-Ant1-5670-1000~26000-PASS

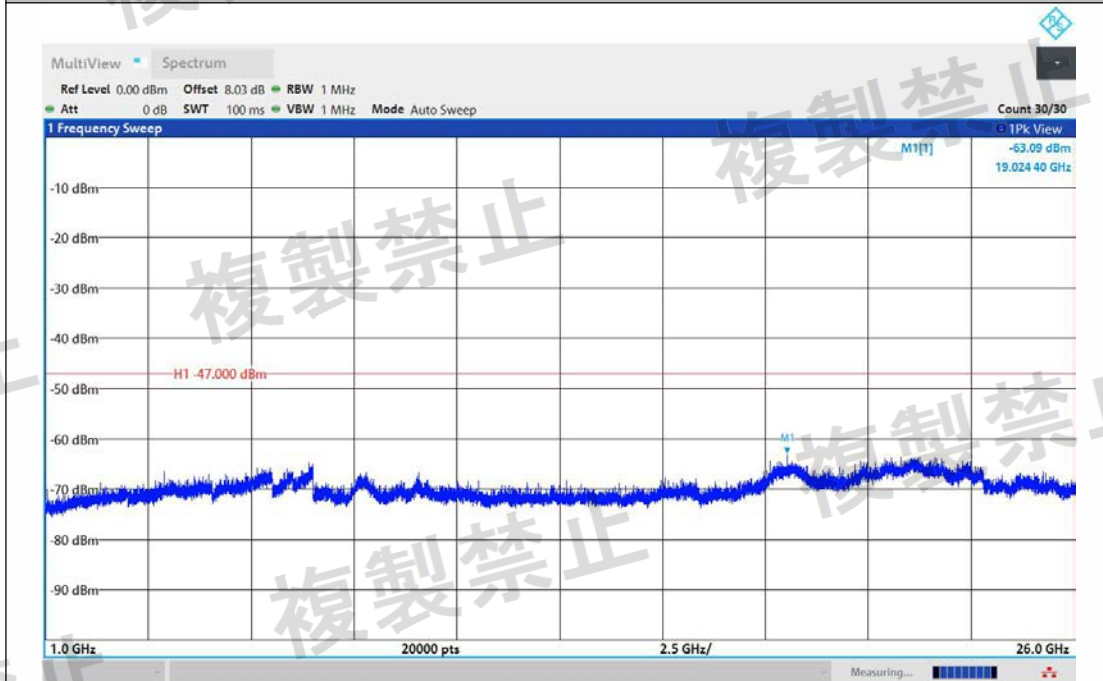


NTNV-11AX40MIMO-Ant2-5670-1000~26000-PASS

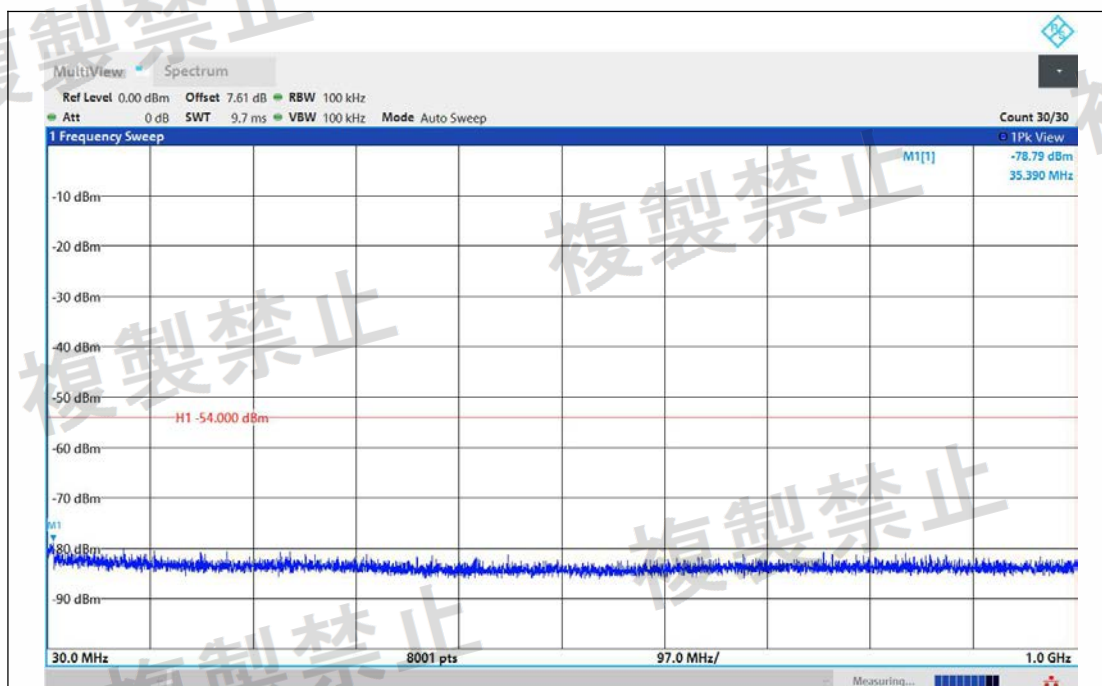


NTNV-11AX80MIMO-Ant1-5210-30~1000-PASS

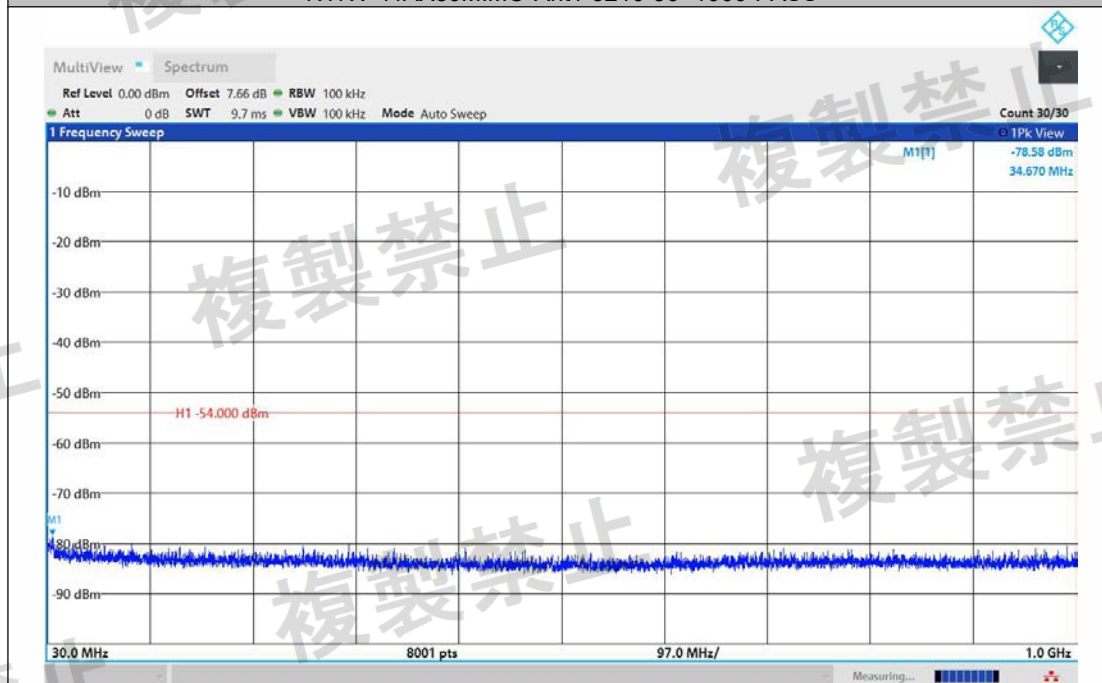


NTNV-11AX80MIMO-Ant2-5210-30~1000-PASS

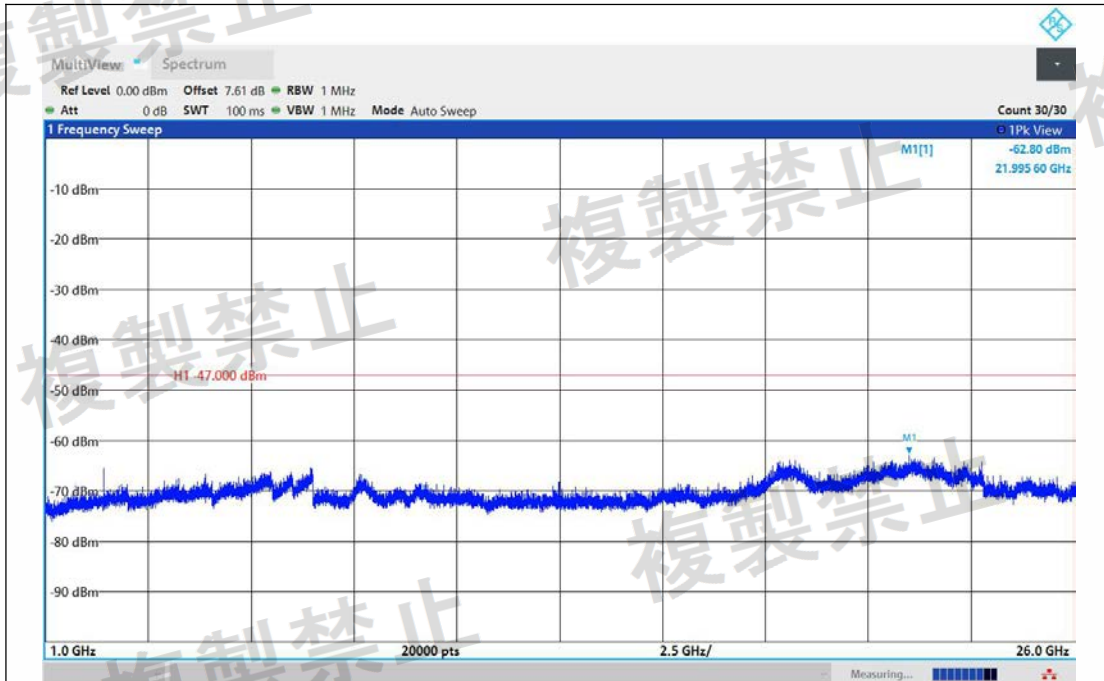


NTVN-11AX80MIMO-Ant1-5210-1000~26000-PASS

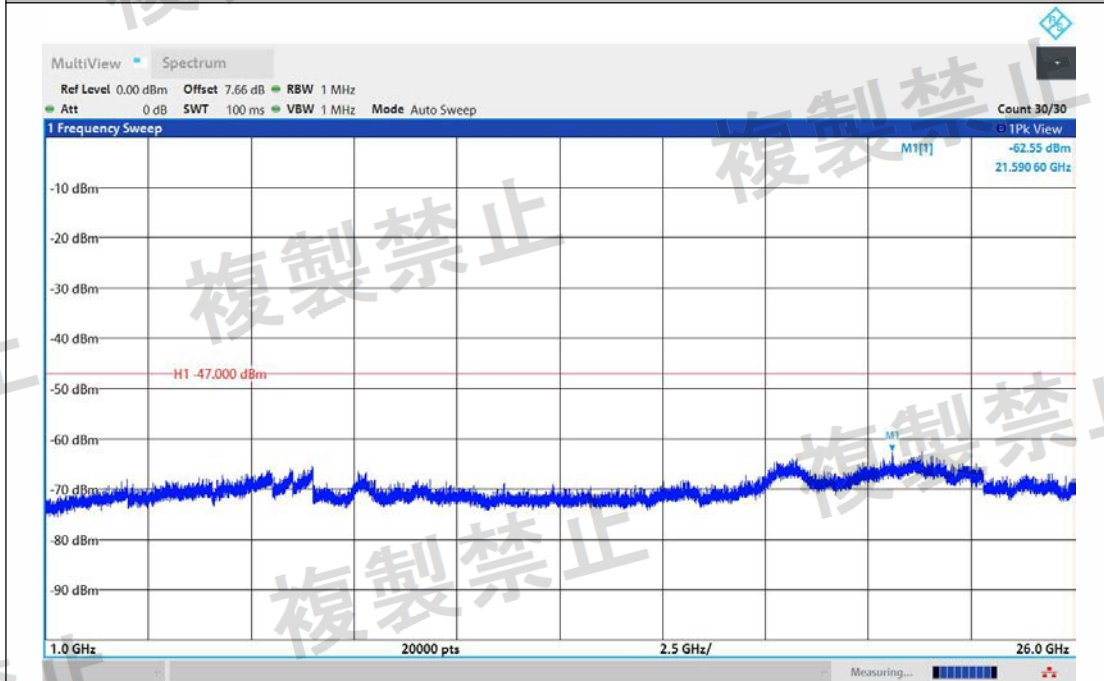


NTVN-11AX80MIMO-Ant2-5210-1000~26000-PASS

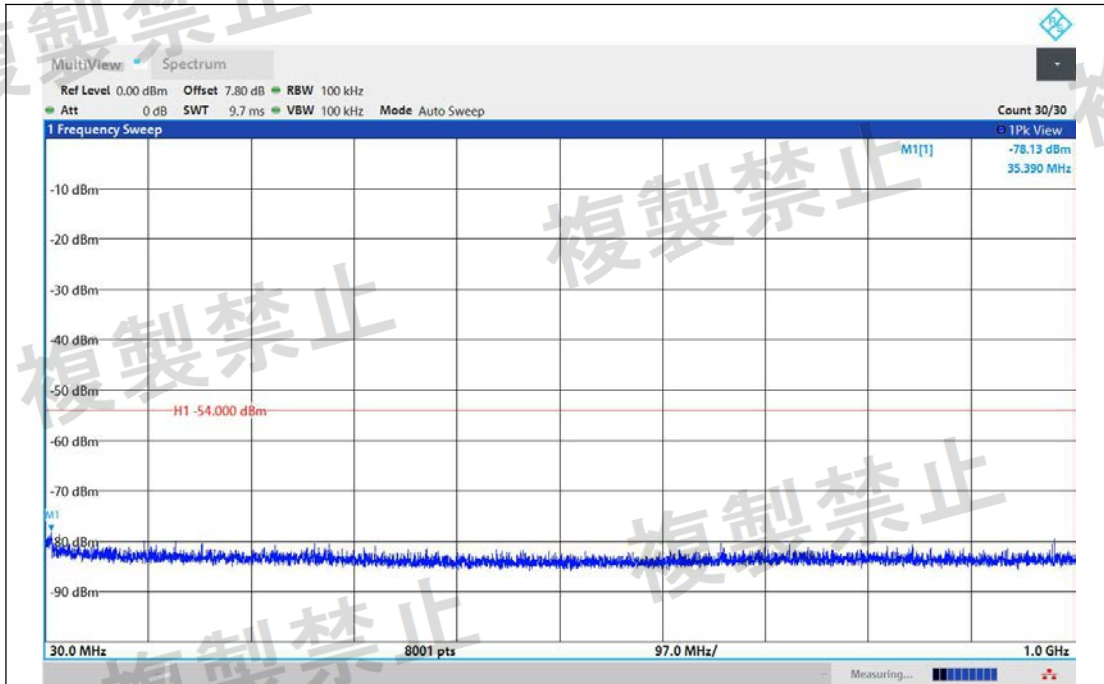


NTNV-11AX80MIMO-Ant1-5290-30~1000-PASS

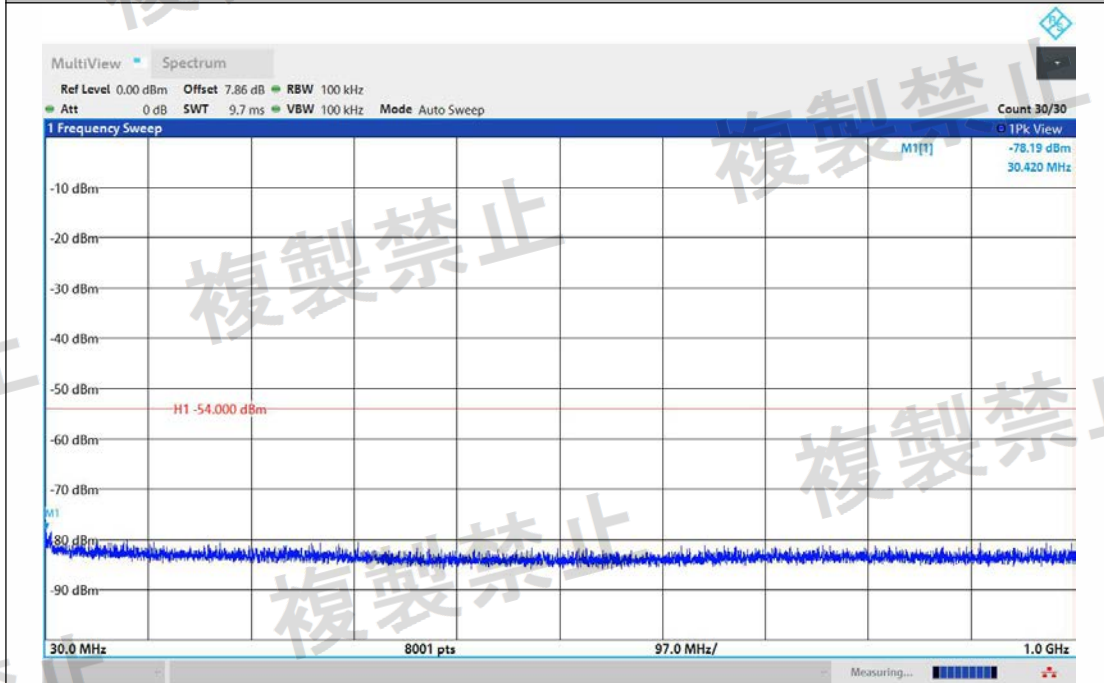


NTNV-11AX80MIMO-Ant2-5290-30~1000-PASS

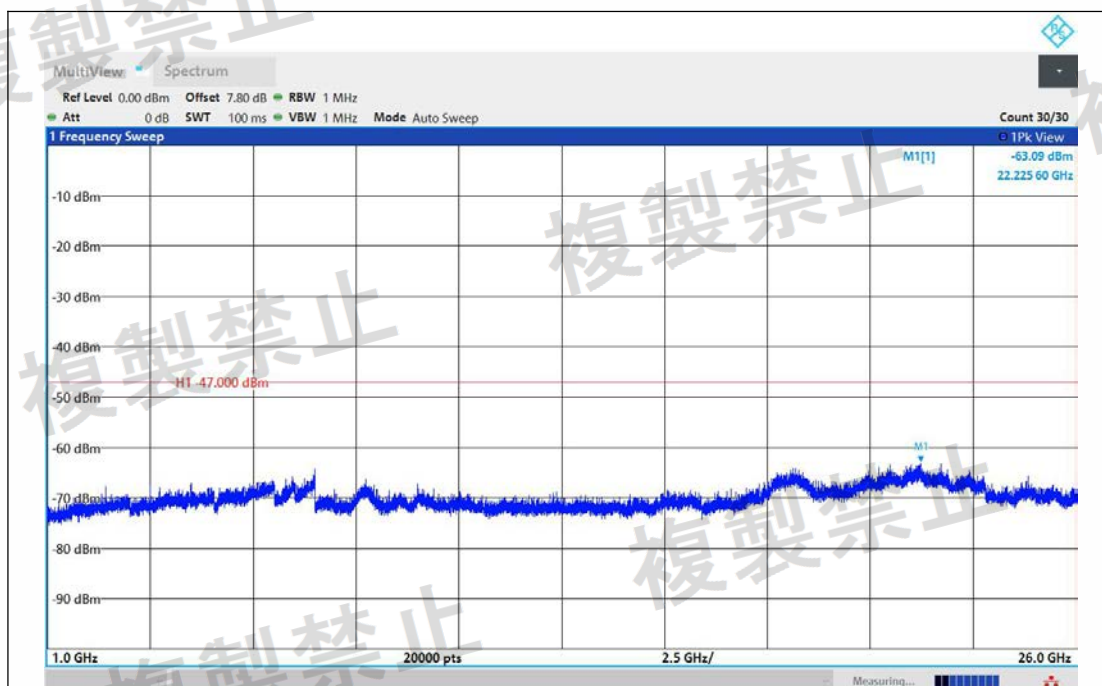


NTVN-11AX80MIMO-Ant1-5290-1000~26000-PASS

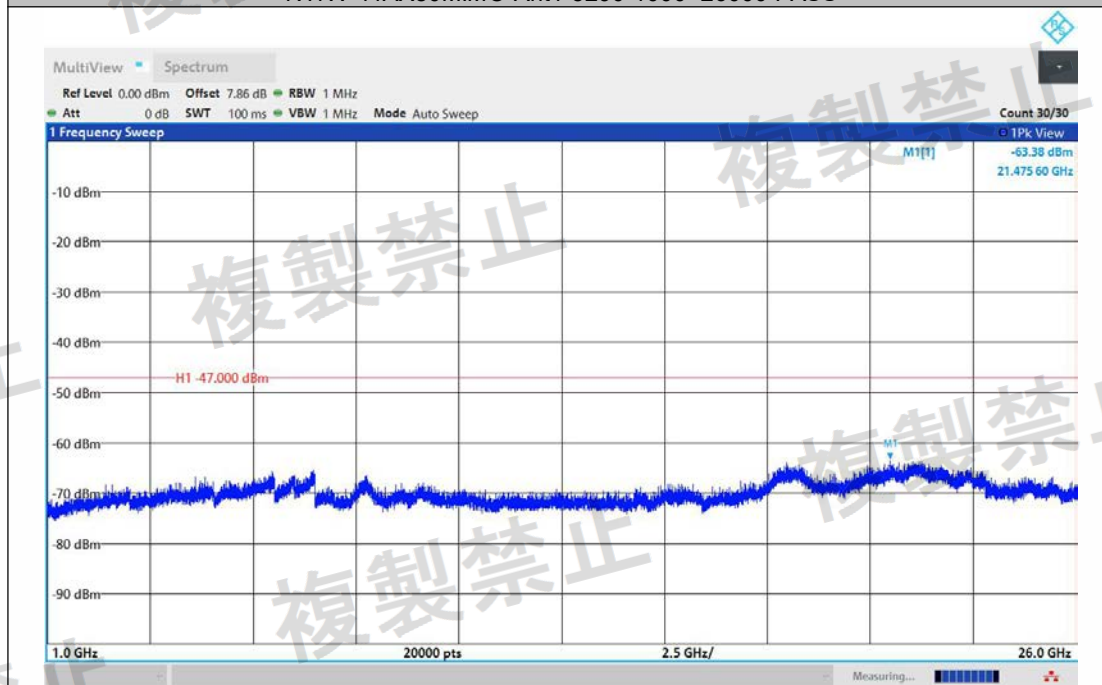


NTVN-11AX80MIMO-Ant2-5290-1000~26000-PASS

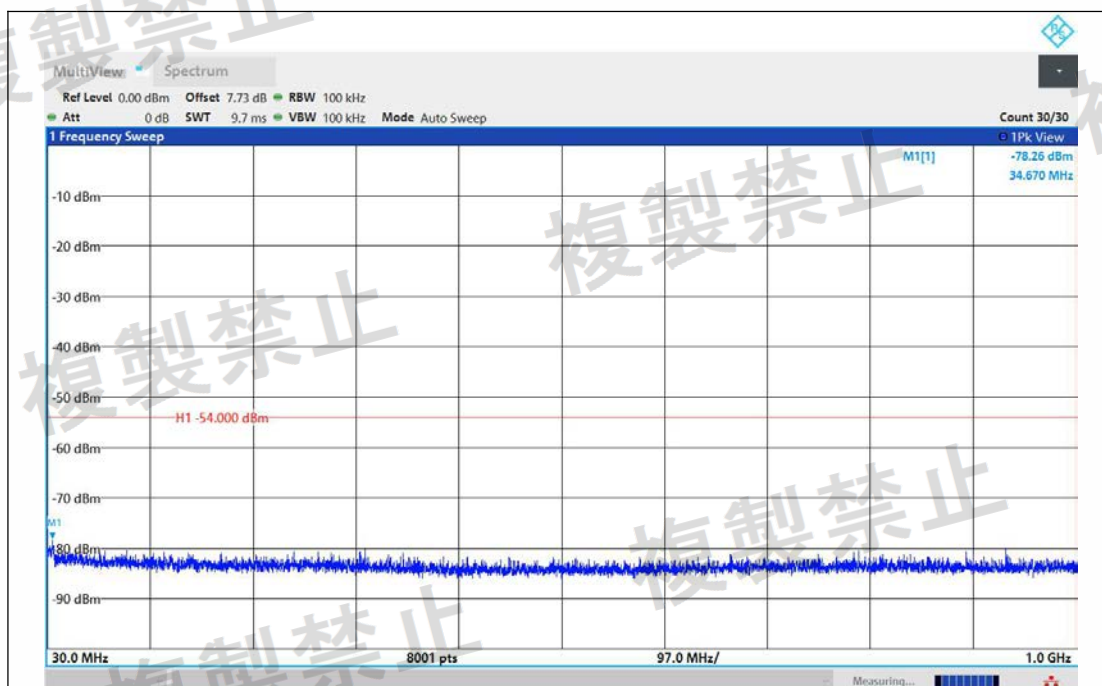


NTNV-11AX80MIMO-Ant1-5530-30~1000-PASS

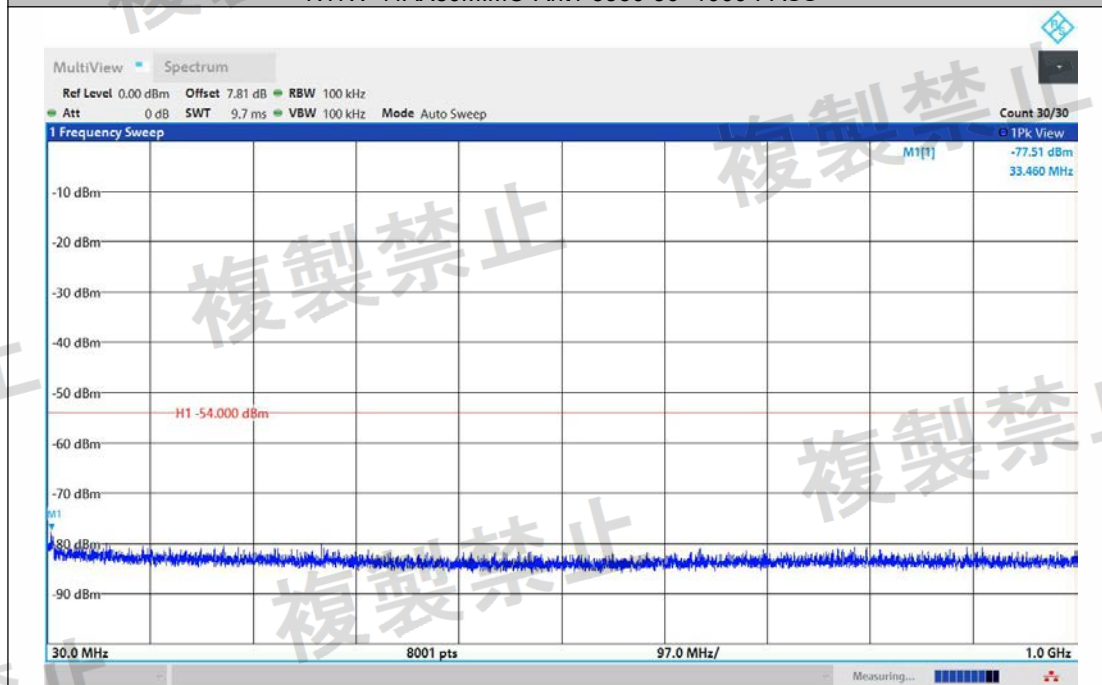


NTNV-11AX80MIMO-Ant2-5530-30~1000-PASS

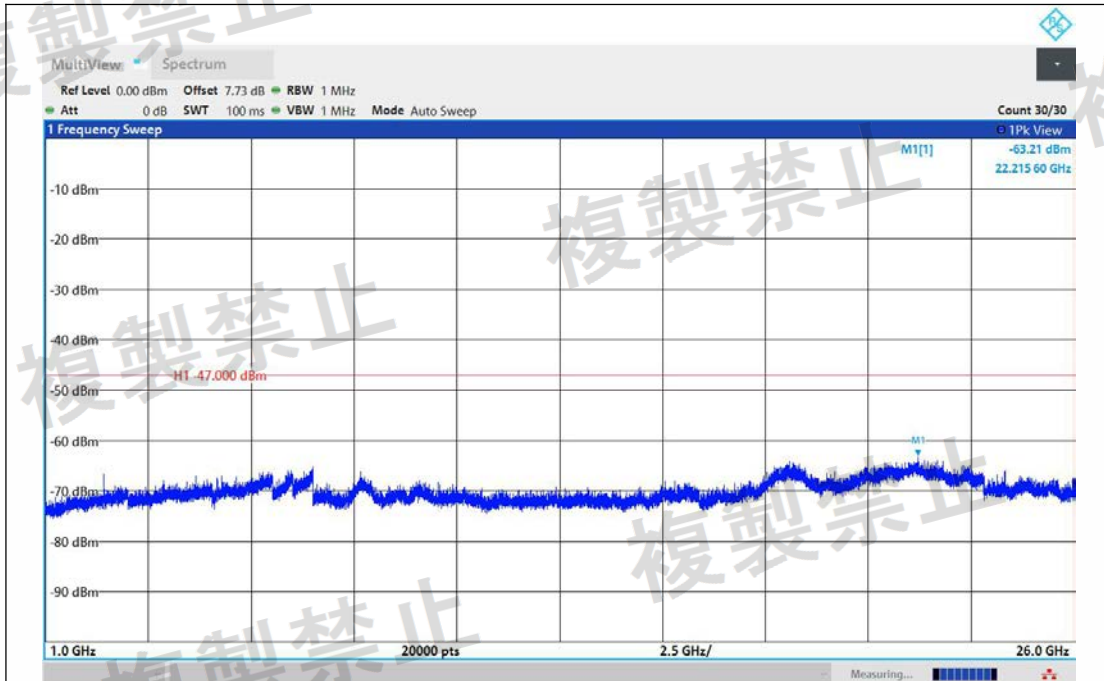


NTNV-11AX80MIMO-Ant1-5530-1000~26000-PASS

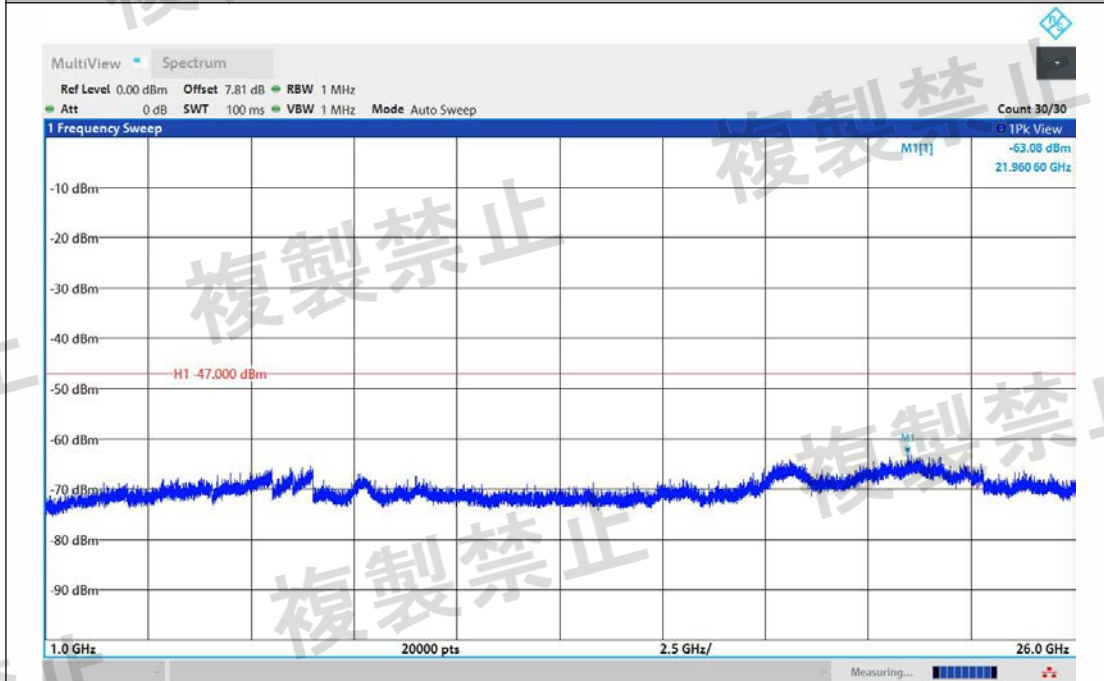


NTNV-11AX80MIMO-Ant2-5530-1000~26000-PASS

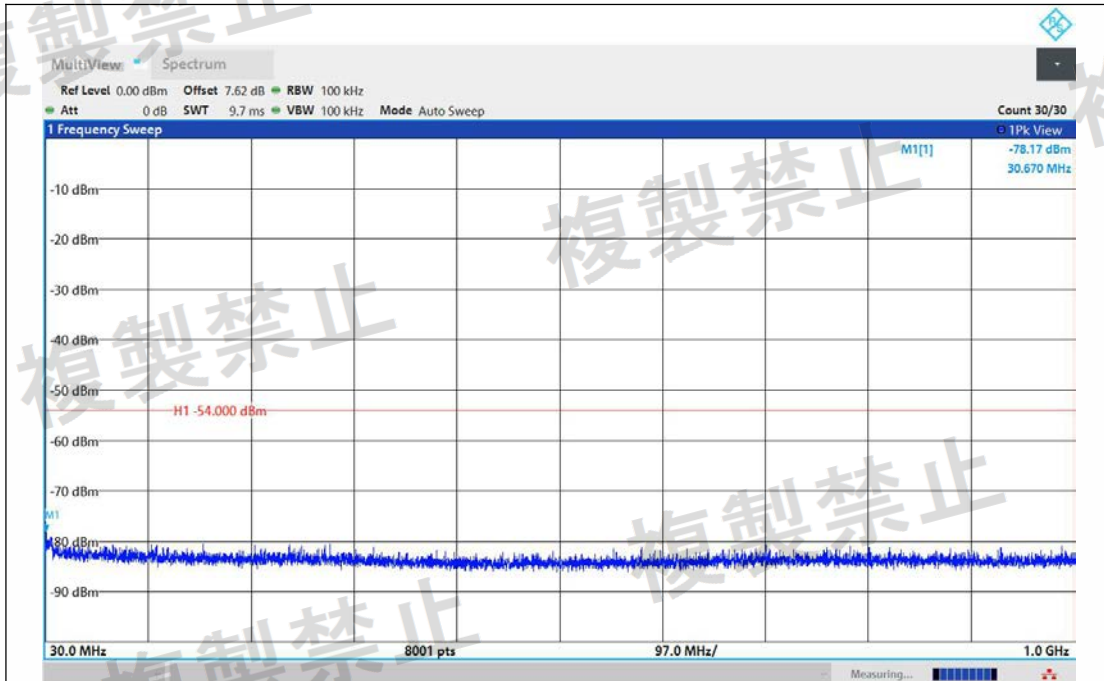


NTNV-11AX160MIMO-Ant1-5250-30~1000-PASS

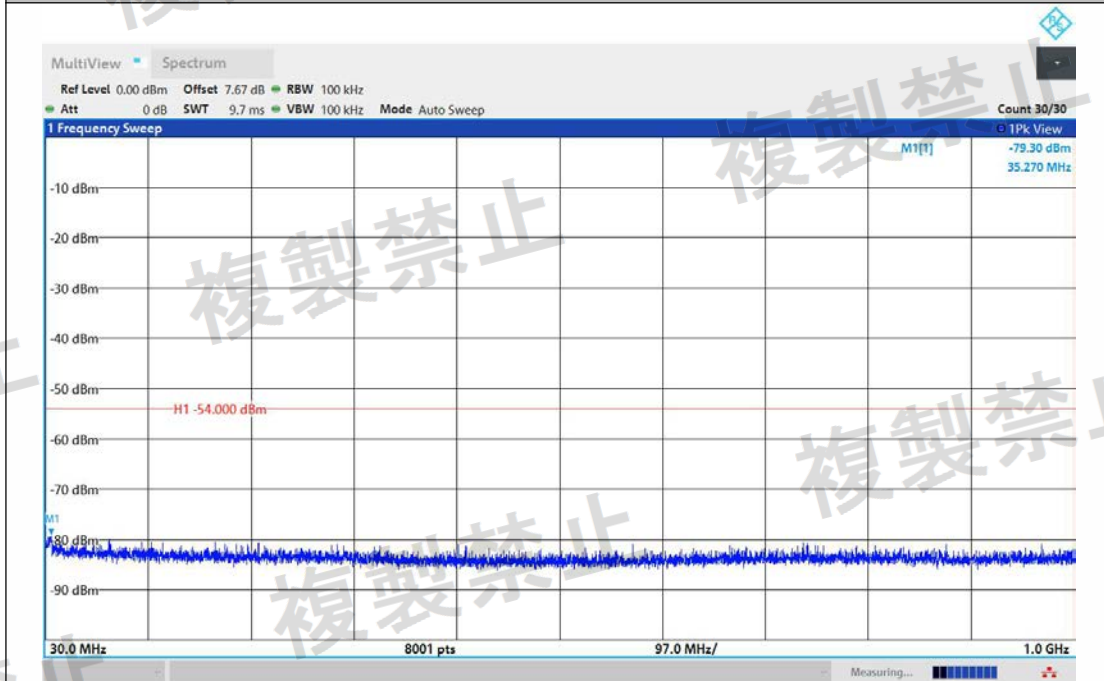


NTNV-11AX160MIMO-Ant2-5250-30~1000-PASS

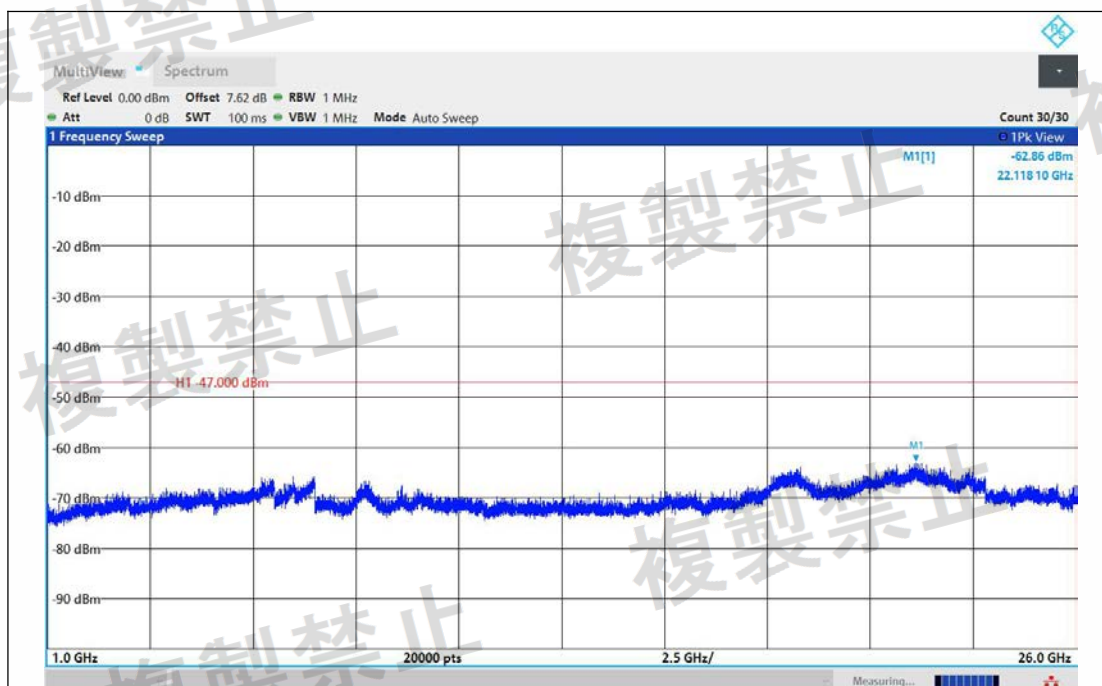


NTVN-11AX160MIMO-Ant1-5250-1000~26000-PASS

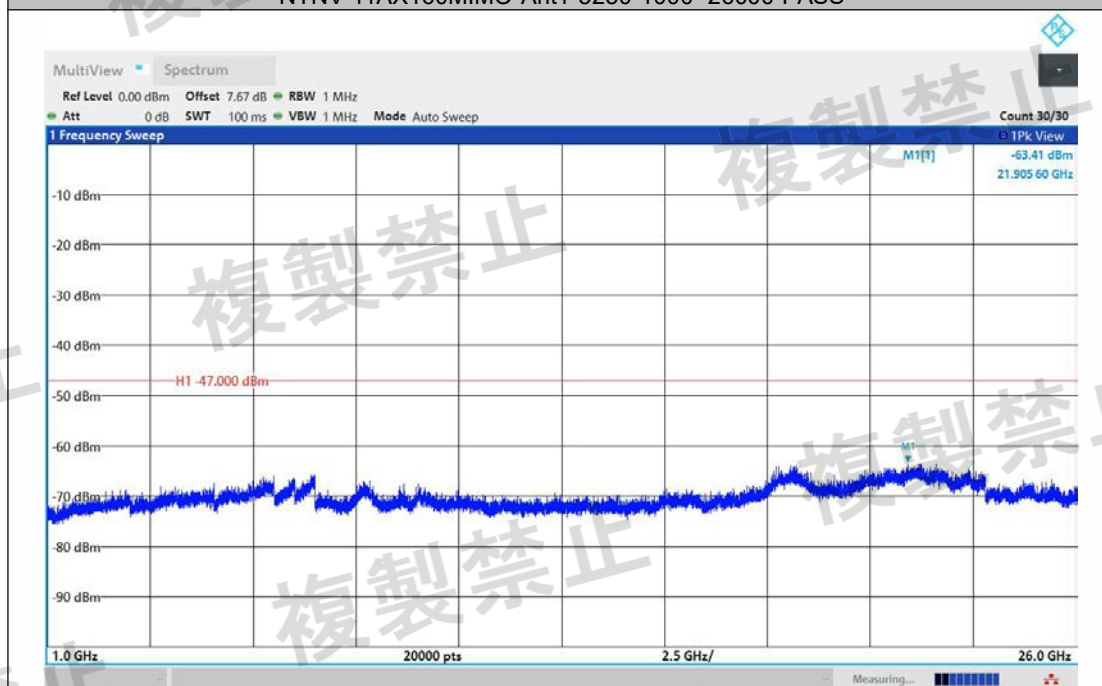



NTVN-11AX160MIMO-Ant2-5250-1000~26000-PASS

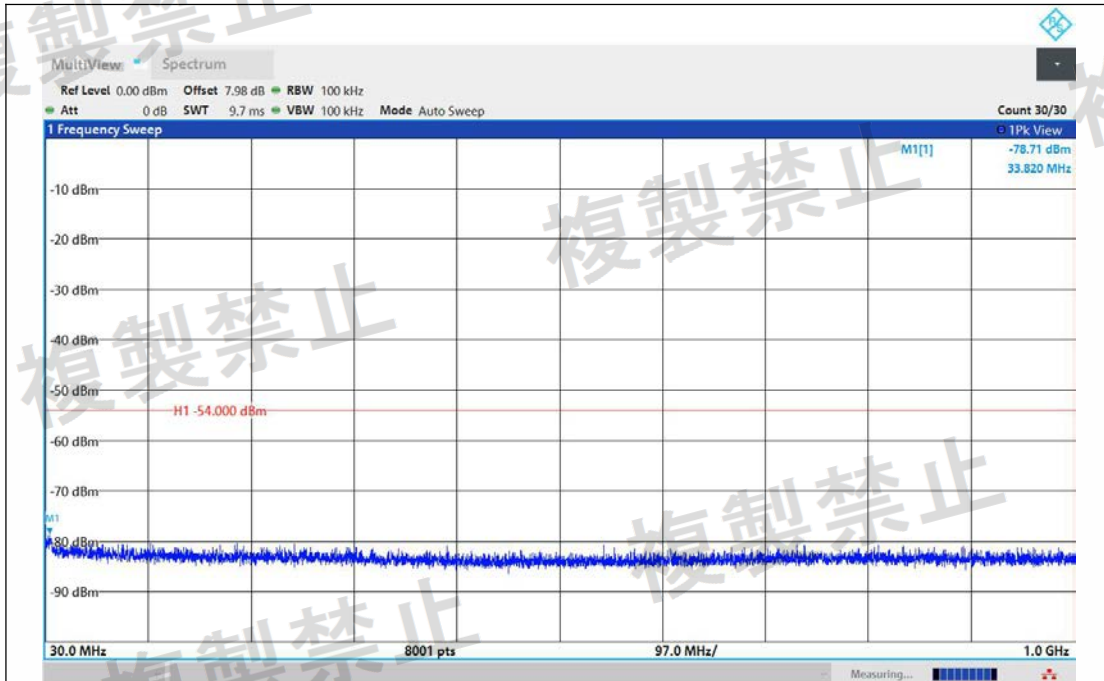

NTNV-11AX160MIMO-Ant1-5570-30~1000-PASS

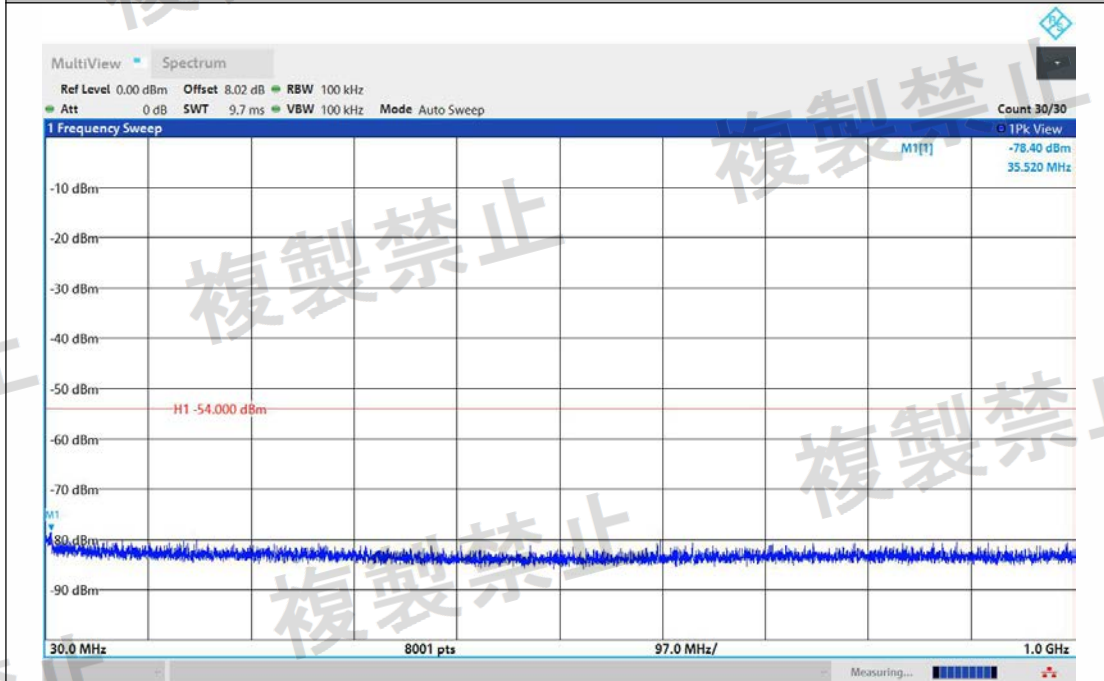

NTNV-11AX160MIMO-Ant2-5570-30~1000-PASS

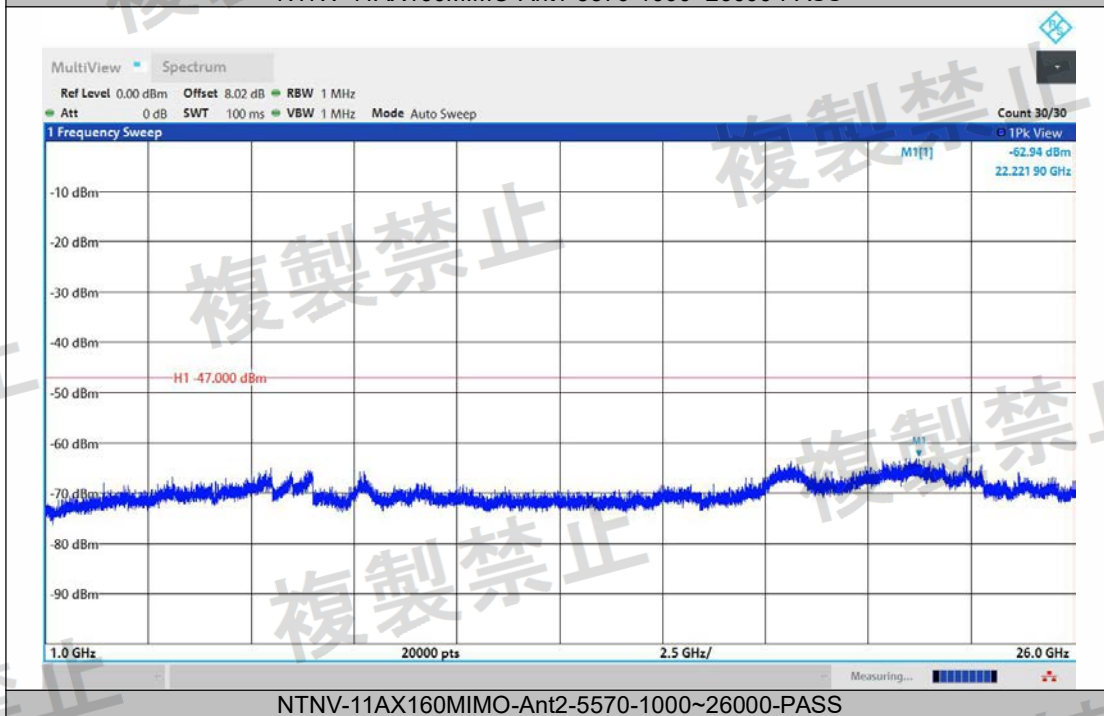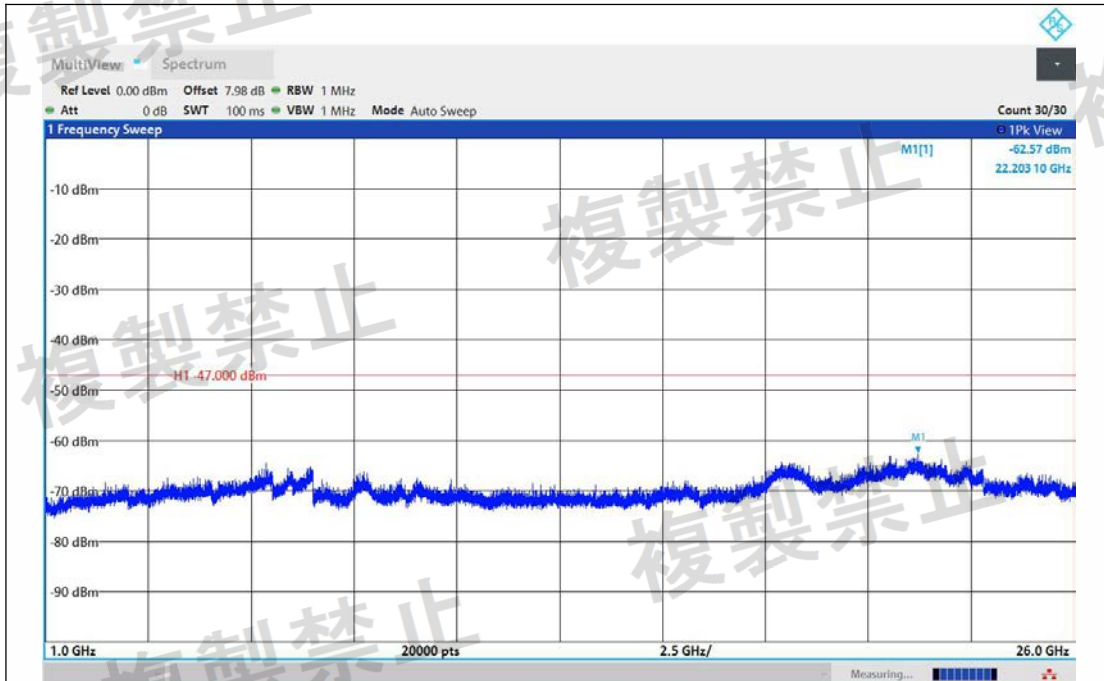

7.8. TRANSMISSION BURST LENGTH

7.8.1. Limit

Item	Limit
Burst Length	≤8ms

7.8.2. Test Procedure

Test Method for Radio Equipment mentioned in MIC Notice No.88 Annex45 Clause 10

7.8.3. Test Configuration

Temperature and Voltage Measurement (under normal and extreme test conditions)



Remarks:

The spectrum analyzer could be connected to a monopole antenna or directly connected to the EUT, if the EUT has already employing an antenna connector.

7.8.4. Test Result


Temperature : 24.5℃
Humidity : 45%

Test By: LHJ
Test voltage: Normal voltage


TestCondition	TestMode	Antenna	Frequency[MHz]	Result [ms]	Limit [ms]	Verdict
NTNV	11A	Ant1	5180	2.05	≤8	PASS
NTNV	11A	Ant2	5180	2.04	≤8	PASS
NTNV	11A	Ant1	5200	2.05	≤8	PASS
NTNV	11A	Ant2	5200	2.05	≤8	PASS
NTNV	11A	Ant1	5240	2.05	≤8	PASS
NTNV	11A	Ant2	5240	2.04	≤8	PASS
NTNV	11A	Ant1	5260	2.05	≤8	PASS
NTNV	11A	Ant2	5260	2.05	≤8	PASS
NTNV	11A	Ant1	5280	2.04	≤8	PASS
NTNV	11A	Ant2	5280	2.05	≤8	PASS
NTNV	11A	Ant1	5320	2.04	≤8	PASS
NTNV	11A	Ant2	5320	2.05	≤8	PASS
NTNV	11A	Ant1	5500	2.05	≤8	PASS
NTNV	11A	Ant2	5500	2.04	≤8	PASS
NTNV	11A	Ant1	5580	2.05	≤8	PASS
NTNV	11A	Ant2	5580	2.05	≤8	PASS
NTNV	11A	Ant1	5700	2.05	≤8	PASS
NTNV	11A	Ant2	5700	2.05	≤8	PASS
NTNV	11N20MIMO	Ant1	5180	1.91	≤8	PASS
NTNV	11N20MIMO	Ant2	5180	1.91	≤8	PASS
NTNV	11N20MIMO	Ant1	5200	1.91	≤8	PASS
NTNV	11N20MIMO	Ant2	5200	1.91	≤8	PASS
NTNV	11N20MIMO	Ant1	5240	1.91	≤8	PASS
NTNV	11N20MIMO	Ant2	5240	1.91	≤8	PASS
NTNV	11N20MIMO	Ant1	5260	1.91	≤8	PASS
NTNV	11N20MIMO	Ant2	5260	1.91	≤8	PASS
NTNV	11N20MIMO	Ant1	5280	1.91	≤8	PASS
NTNV	11N20MIMO	Ant2	5280	1.91	≤8	PASS
NTNV	11N20MIMO	Ant1	5320	1.91	≤8	PASS
NTNV	11N20MIMO	Ant2	5320	1.91	≤8	PASS
NTNV	11N20MIMO	Ant1	5500	1.92	≤8	PASS
NTNV	11N20MIMO	Ant2	5500	1.91	≤8	PASS
NTNV	11N20MIMO	Ant1	5580	1.91	≤8	PASS
NTNV	11N20MIMO	Ant2	5580	1.91	≤8	PASS
NTNV	11N20MIMO	Ant1	5700	1.91	≤8	PASS
NTNV	11N20MIMO	Ant2	5700	1.91	≤8	PASS
NTNV	11N40MIMO	Ant1	5190	0.94	≤8	PASS
NTNV	11N40MIMO	Ant2	5190	0.93	≤8	PASS
NTNV	11N40MIMO	Ant1	5230	0.93	≤8	PASS
NTNV	11N40MIMO	Ant2	5230	0.92	≤8	PASS
NTNV	11N40MIMO	Ant1	5270	0.93	≤8	PASS
NTNV	11N40MIMO	Ant2	5270	0.93	≤8	PASS
NTNV	11N40MIMO	Ant1	5310	0.93	≤8	PASS
NTNV	11N40MIMO	Ant2	5310	0.92	≤8	PASS
NTNV	11N40MIMO	Ant1	5510	0.94	≤8	PASS
NTNV	11N40MIMO	Ant2	5510	0.93	≤8	PASS
NTNV	11N40MIMO	Ant1	5670	0.93	≤8	PASS
NTNV	11N40MIMO	Ant2	5670	0.93	≤8	PASS
NTNV	11AC20MIMO	Ant1	5180	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant2	5180	1.92	≤8	PASS
NTNV	11AC20MIMO	Ant1	5200	1.92	≤8	PASS
NTNV	11AC20MIMO	Ant2	5200	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant1	5240	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant2	5240	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant1	5260	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant2	5260	1.92	≤8	PASS
NTNV	11AC20MIMO	Ant1	5280	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant2	5280	1.92	≤8	PASS

NTNV	11AC20MIMO	Ant1	5320	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant2	5320	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant1	5500	1.92	≤8	PASS
NTNV	11AC20MIMO	Ant2	5500	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant1	5580	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant2	5580	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant1	5700	1.91	≤8	PASS
NTNV	11AC20MIMO	Ant2	5700	1.91	≤8	PASS
NTNV	11AC40MIMO	Ant1	5190	0.94	≤8	PASS
NTNV	11AC40MIMO	Ant2	5190	0.93	≤8	PASS
NTNV	11AC40MIMO	Ant1	5230	0.94	≤8	PASS
NTNV	11AC40MIMO	Ant2	5230	0.93	≤8	PASS
NTNV	11AC40MIMO	Ant1	5270	0.94	≤8	PASS
NTNV	11AC40MIMO	Ant2	5270	0.93	≤8	PASS
NTNV	11AC40MIMO	Ant1	5310	0.93	≤8	PASS
NTNV	11AC40MIMO	Ant2	5310	0.93	≤8	PASS
NTNV	11AC40MIMO	Ant1	5510	0.93	≤8	PASS
NTNV	11AC40MIMO	Ant2	5510	0.93	≤8	PASS
NTNV	11AC40MIMO	Ant1	5670	0.94	≤8	PASS
NTNV	11AC40MIMO	Ant2	5670	0.93	≤8	PASS
NTNV	11AC80MIMO	Ant1	5210	0.45	≤8	PASS
NTNV	11AC80MIMO	Ant2	5210	0.44	≤8	PASS
NTNV	11AC80MIMO	Ant1	5290	0.45	≤8	PASS
NTNV	11AC80MIMO	Ant2	5290	0.44	≤8	PASS
NTNV	11AC80MIMO	Ant1	5530	0.45	≤8	PASS
NTNV	11AC80MIMO	Ant2	5530	0.44	≤8	PASS
NTNV	11AC160MIMO	Ant1	5250	0.24	≤8	PASS
NTNV	11AC160MIMO	Ant2	5250	0.24	≤8	PASS
NTNV	11AC160MIMO	Ant1	5570	0.24	≤8	PASS
NTNV	11AC160MIMO	Ant2	5570	0.24	≤8	PASS
NTNV	11AX20MIMO	Ant1	5180	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant2	5180	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant1	5200	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant2	5200	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant1	5240	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant2	5240	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant1	5260	0.29	≤8	PASS
NTNV	11AX20MIMO	Ant2	5260	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant1	5280	0.29	≤8	PASS
NTNV	11AX20MIMO	Ant2	5280	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant1	5320	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant2	5320	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant1	5500	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant2	5500	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant1	5580	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant2	5580	0.29	≤8	PASS
NTNV	11AX20MIMO	Ant1	5700	0.30	≤8	PASS
NTNV	11AX20MIMO	Ant2	5700	0.30	≤8	PASS
NTNV	11AX40MIMO	Ant1	5190	0.29	≤8	PASS
NTNV	11AX40MIMO	Ant2	5190	0.28	≤8	PASS
NTNV	11AX40MIMO	Ant1	5230	0.29	≤8	PASS
NTNV	11AX40MIMO	Ant2	5230	0.28	≤8	PASS
NTNV	11AX40MIMO	Ant1	5270	0.29	≤8	PASS
NTNV	11AX40MIMO	Ant2	5270	0.27	≤8	PASS
NTNV	11AX40MIMO	Ant1	5310	0.28	≤8	PASS
NTNV	11AX40MIMO	Ant2	5310	0.27	≤8	PASS
NTNV	11AX40MIMO	Ant1	5510	0.28	≤8	PASS
NTNV	11AX40MIMO	Ant2	5510	0.28	≤8	PASS
NTNV	11AX40MIMO	Ant1	5670	0.29	≤8	PASS
NTNV	11AX40MIMO	Ant2	5670	0.27	≤8	PASS
NTNV	11AX80MIMO	Ant1	5210	0.27	≤8	PASS
NTNV	11AX80MIMO	Ant2	5210	0.26	≤8	PASS
NTNV	11AX80MIMO	Ant1	5290	0.28	≤8	PASS
NTNV	11AX80MIMO	Ant2	5290	0.27	≤8	PASS
NTNV	11AX80MIMO	Ant1	5530	0.27	≤8	PASS
NTNV	11AX80MIMO	Ant2	5530	0.39	≤8	PASS
NTNV	11AX160MIMO	Ant1	5250	0.27	≤8	PASS
NTNV	11AX160MIMO	Ant2	5250	0.27	≤8	PASS


NTNV	11AX160MIMO	Ant1	5570	0.27	≤8	PASS
NTNV	11AX160MIMO	Ant2	5570	0.26	≤8	PASS

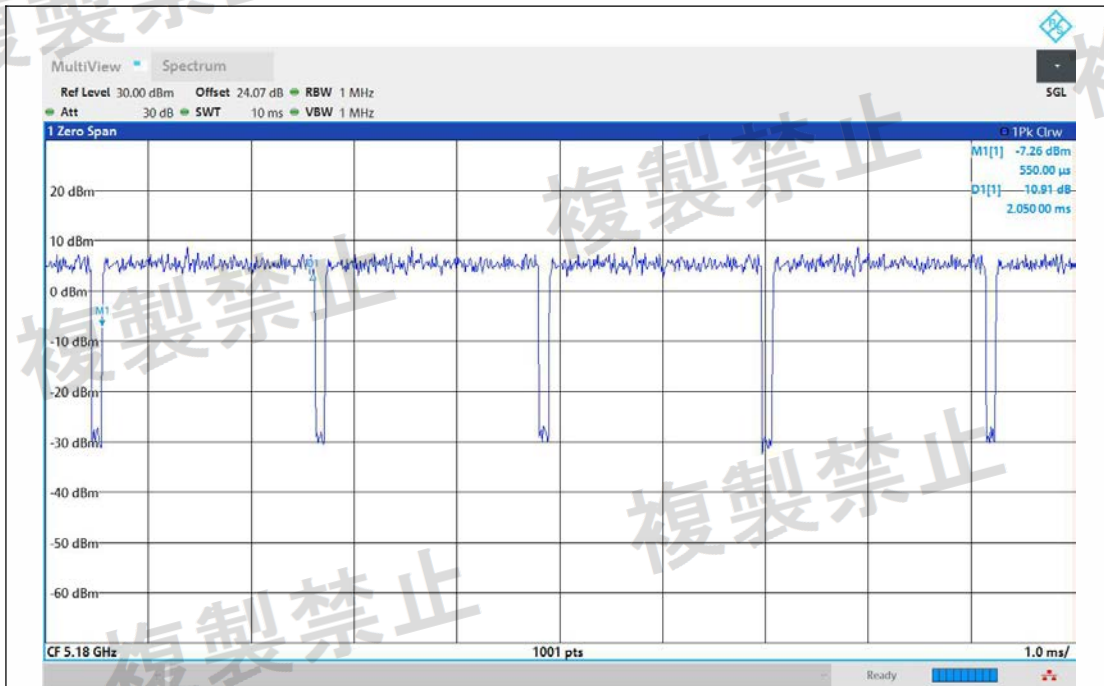


NTNV-11A-Ant1-5180-PASS

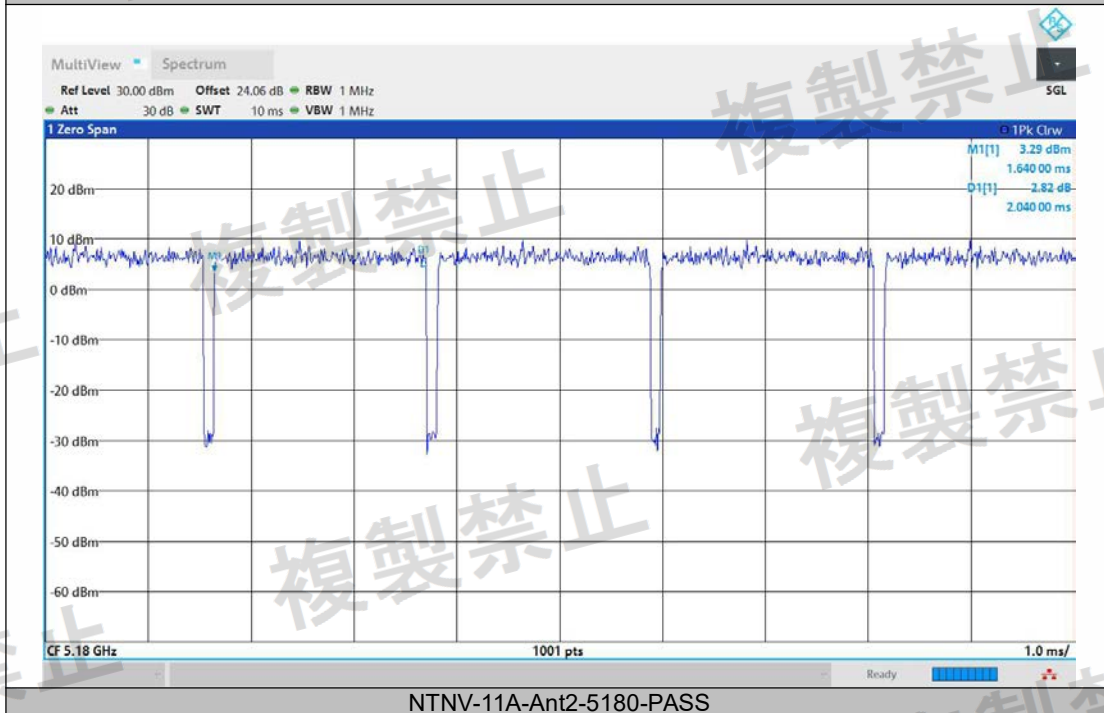


NTNV-11A-Ant2-5180-PASS

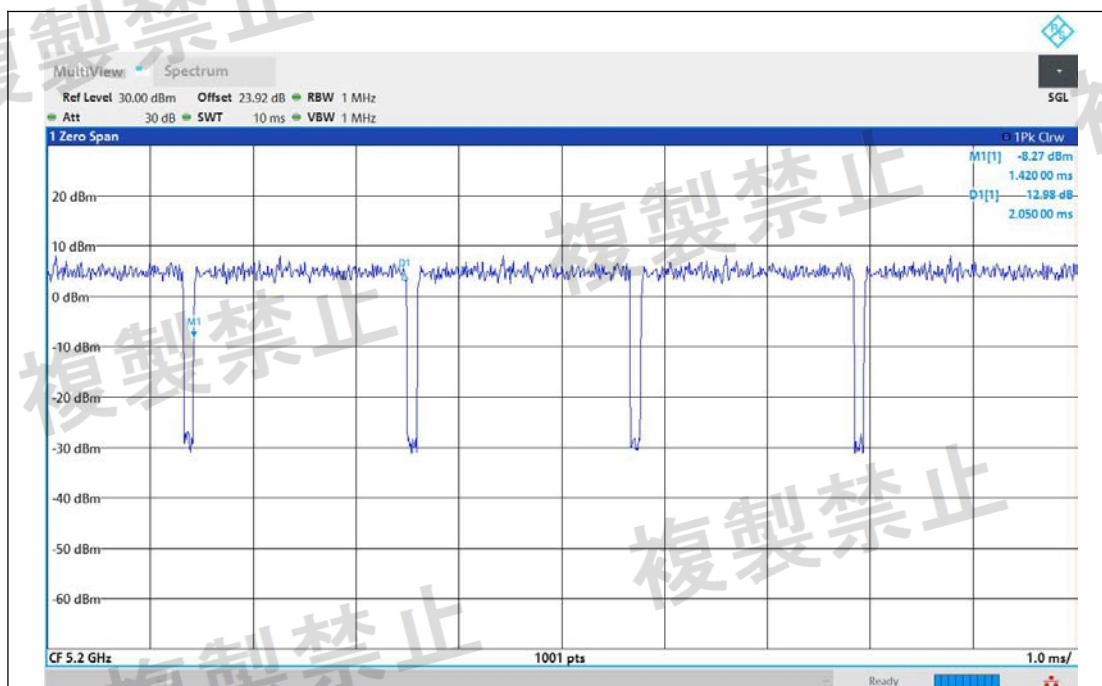


NTNV-11A-Ant1-5200-PASS

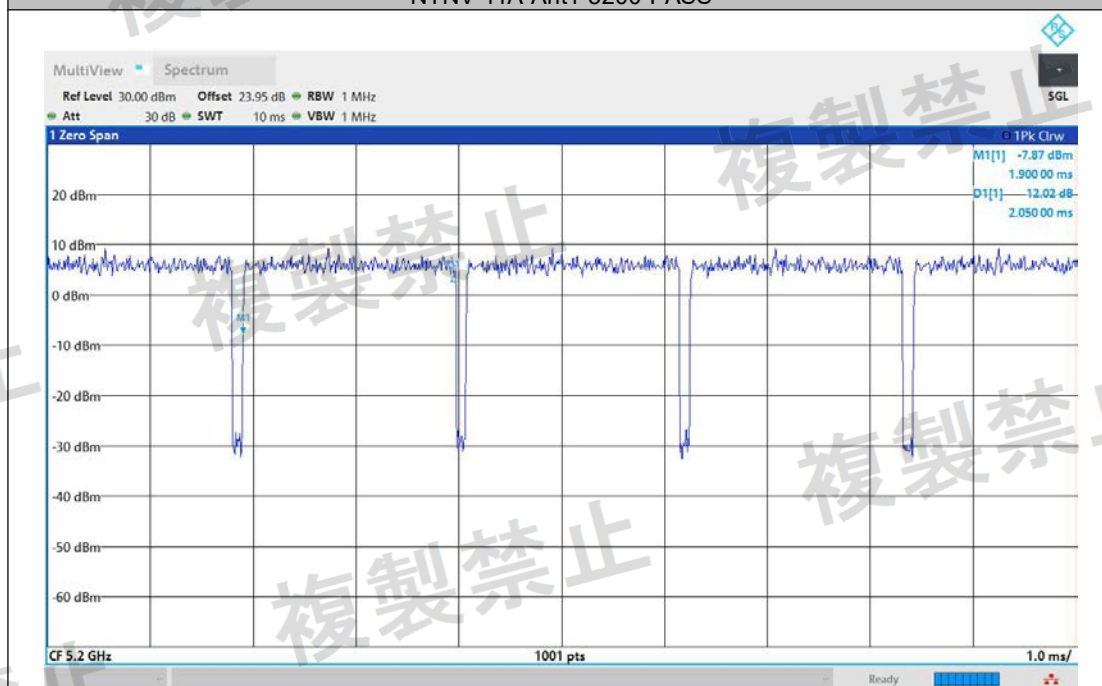


NTNV-11A-Ant2-5200-PASS

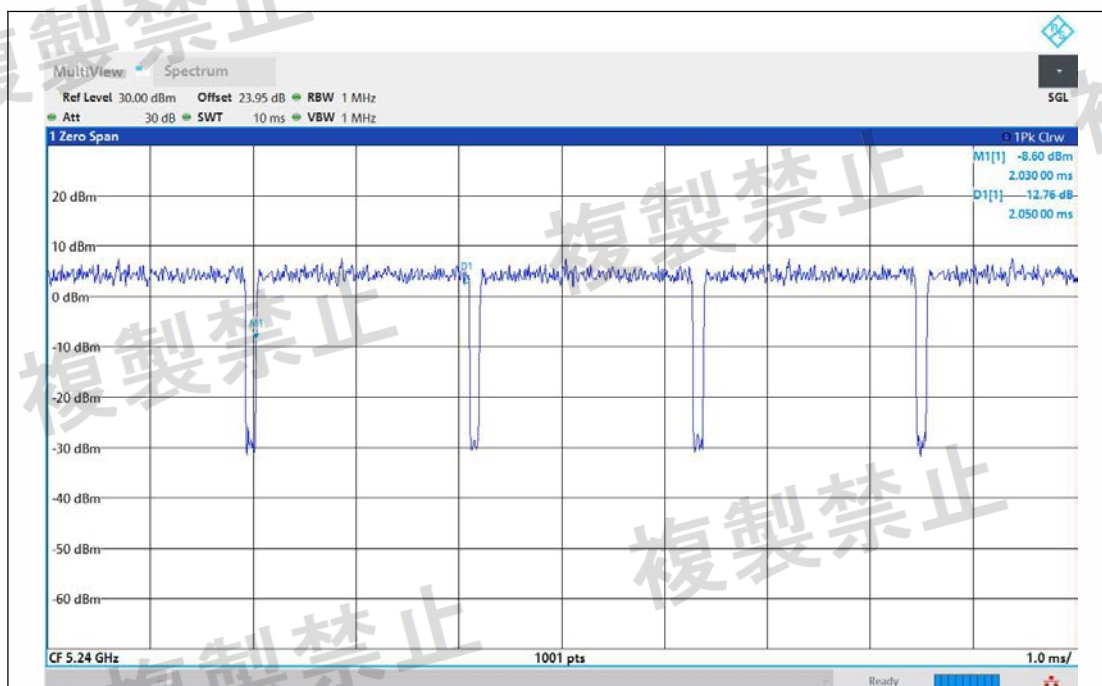


NTNV-11A-Ant1-5240-PASS

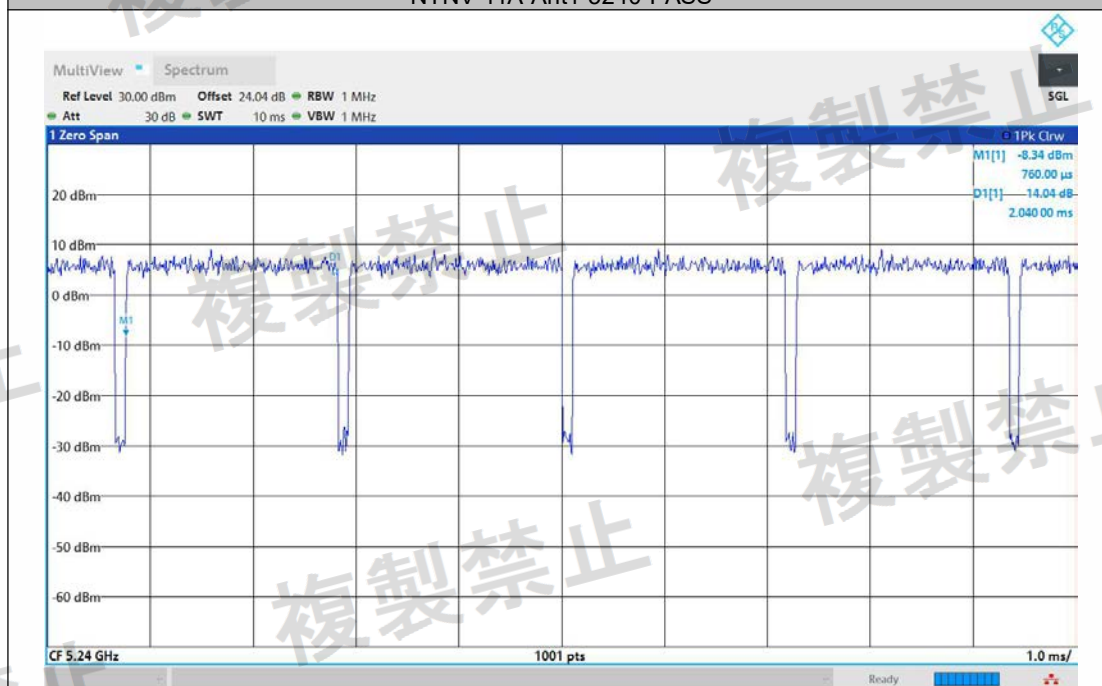


NTNV-11A-Ant2-5240-PASS

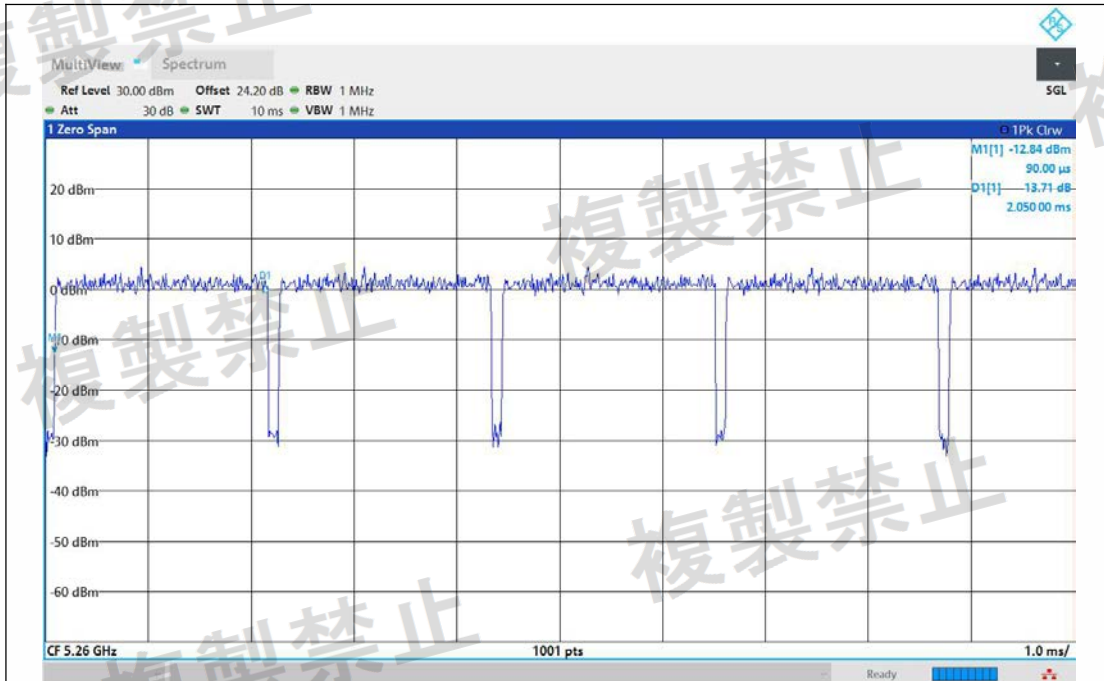


NTNV-11A-Ant1-5260-PASS

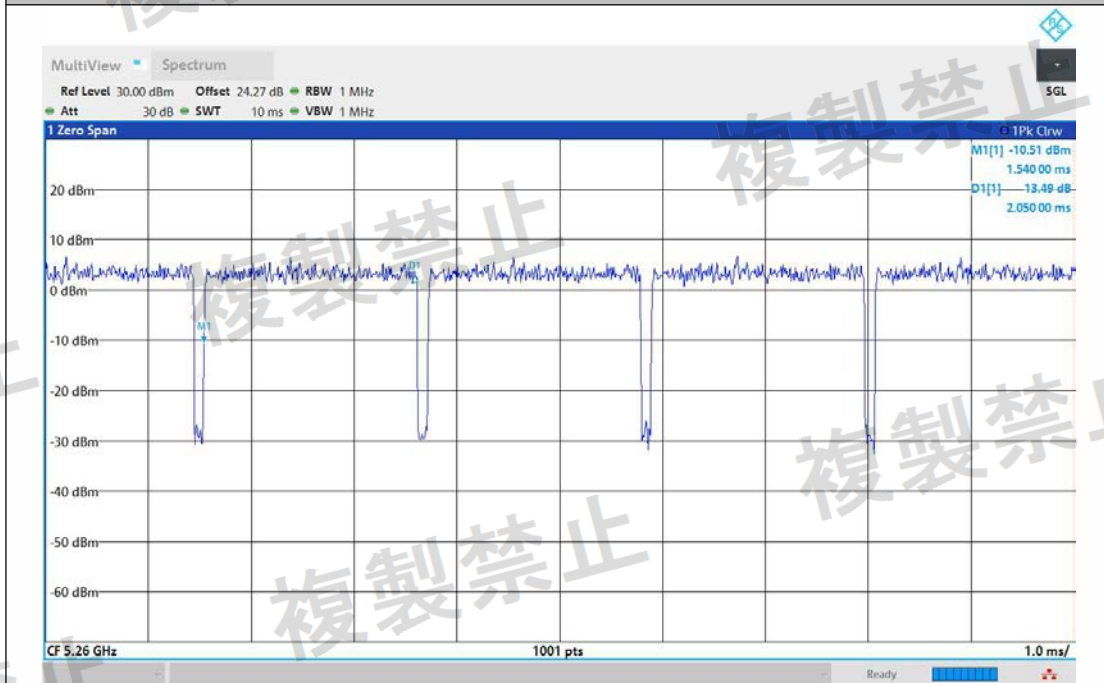


NTNV-11A-Ant2-5260-PASS

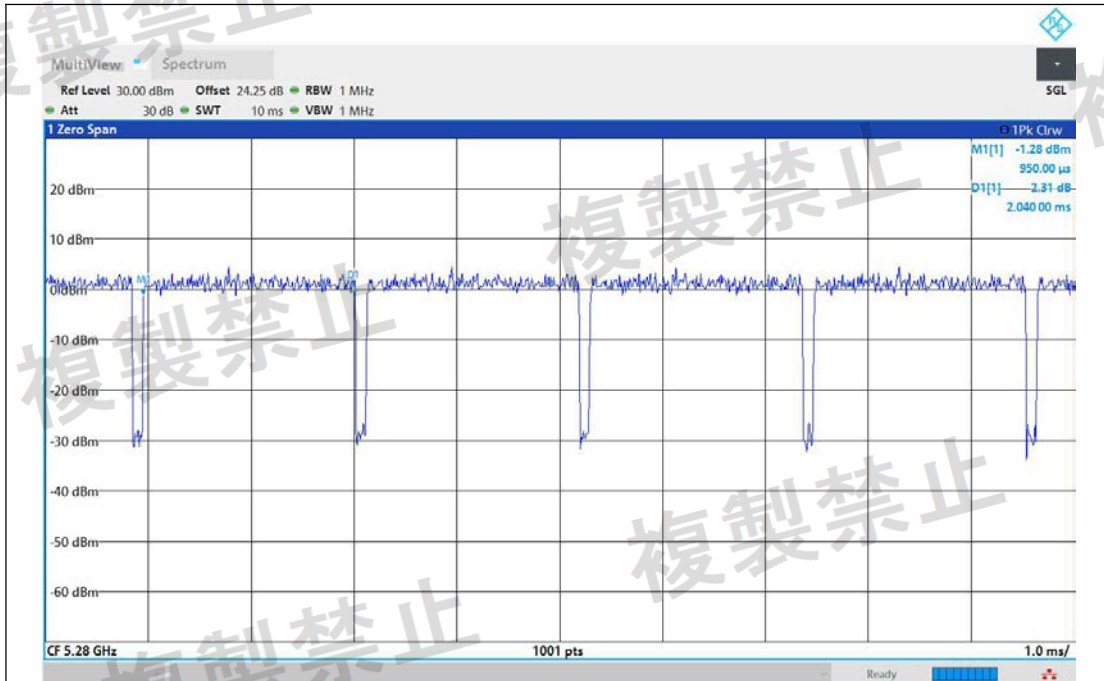


NTNV-11A-Ant1-5280-PASS

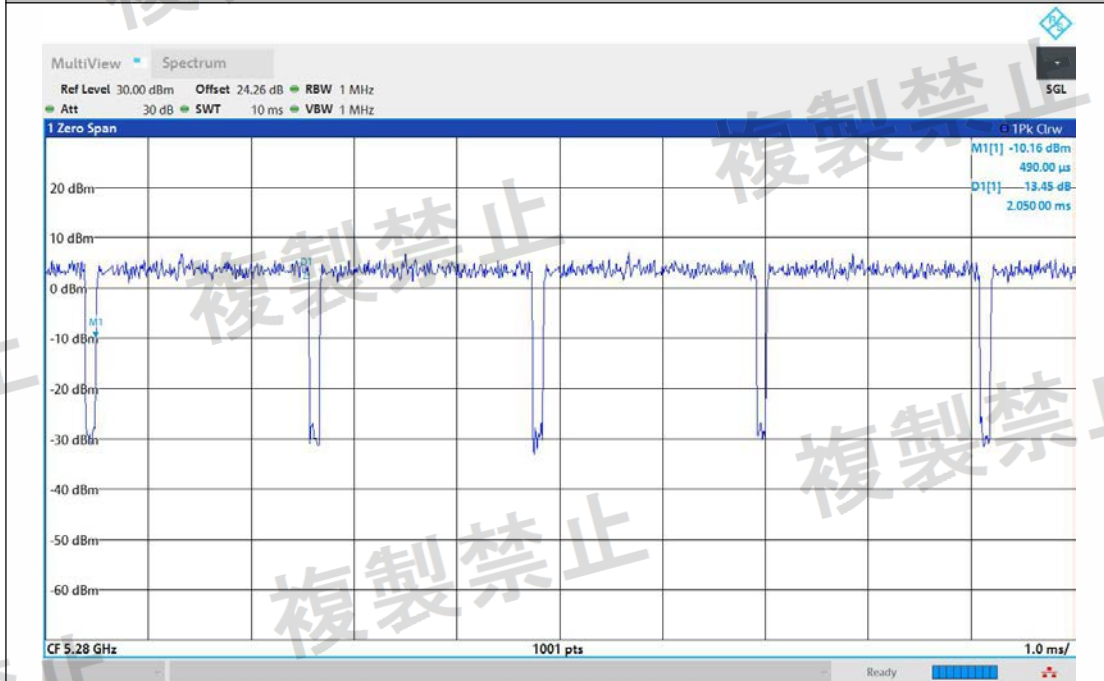


NTNV-11A-Ant2-5280-PASS

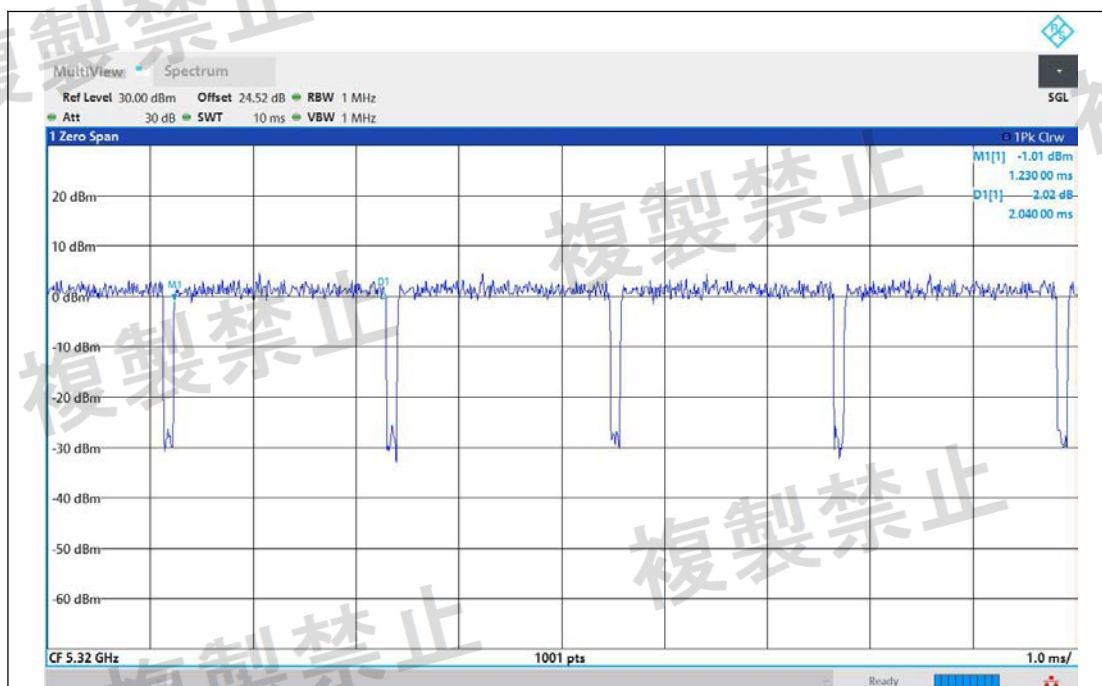


NTNV-11A-Ant1-5320-PASS

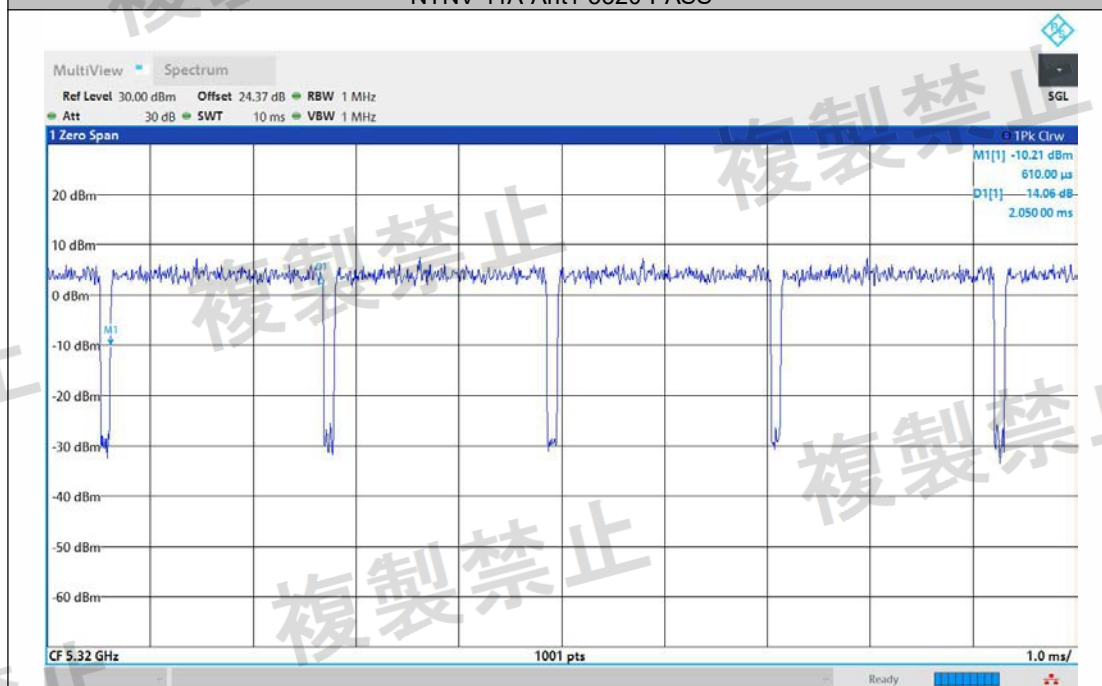


NTNV-11A-Ant2-5320-PASS

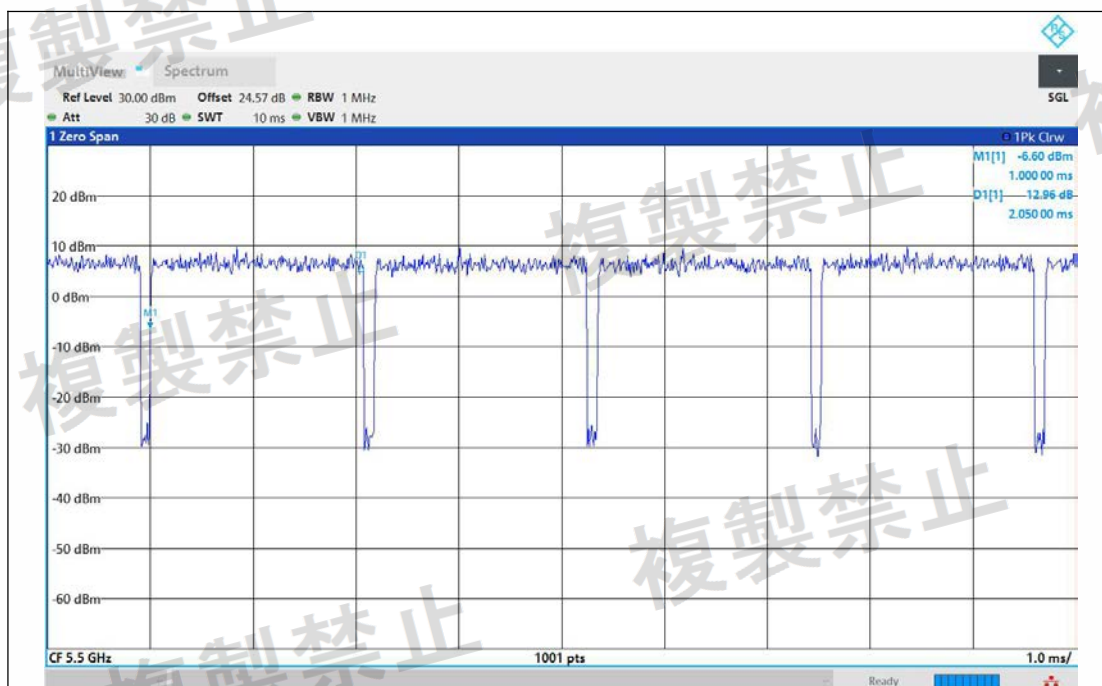


NTNV-11A-Ant1-5500-PASS

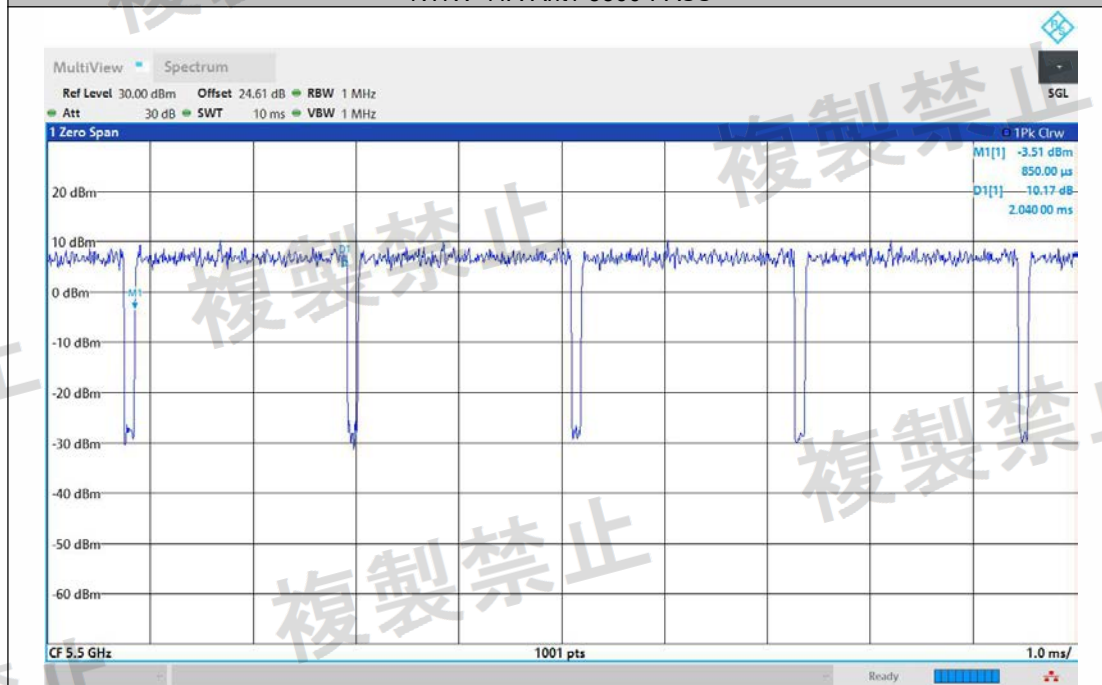


NTNV-11A-Ant2-5500-PASS

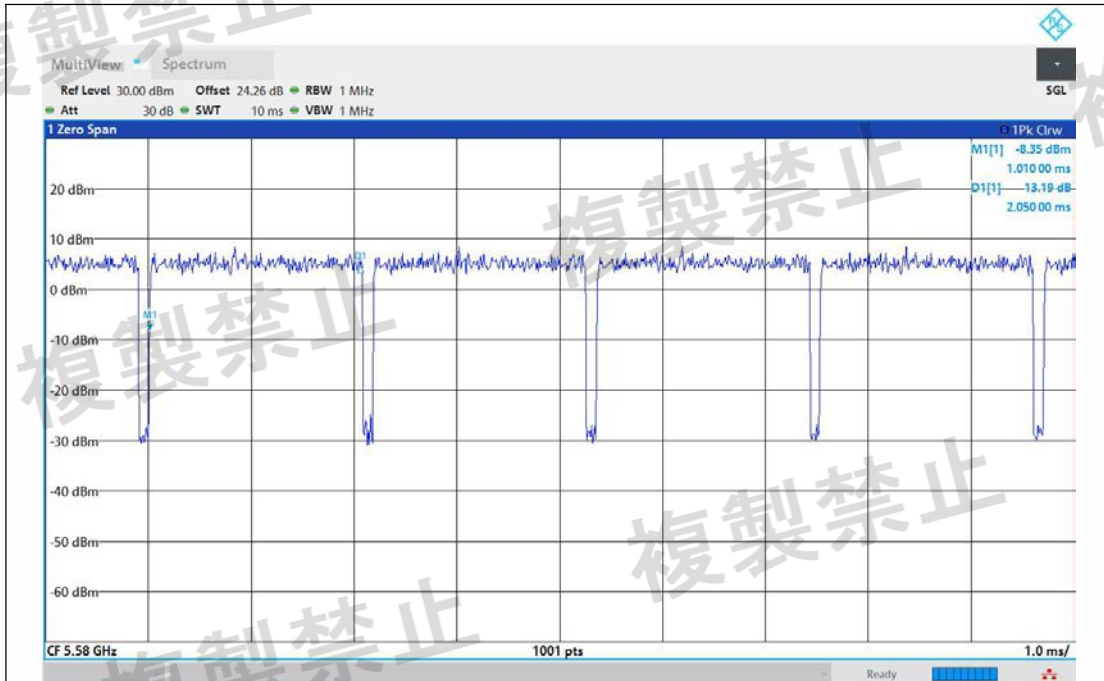


NTNV-11A-Ant1-5580-PASS

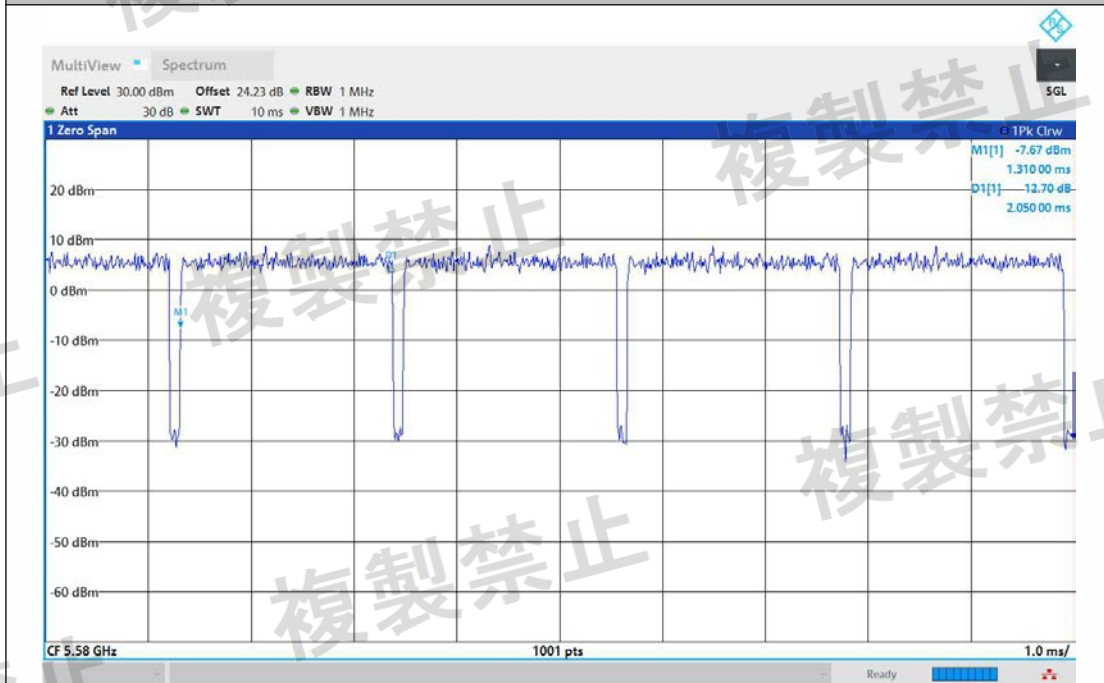


NTNV-11A-Ant2-5580-PASS

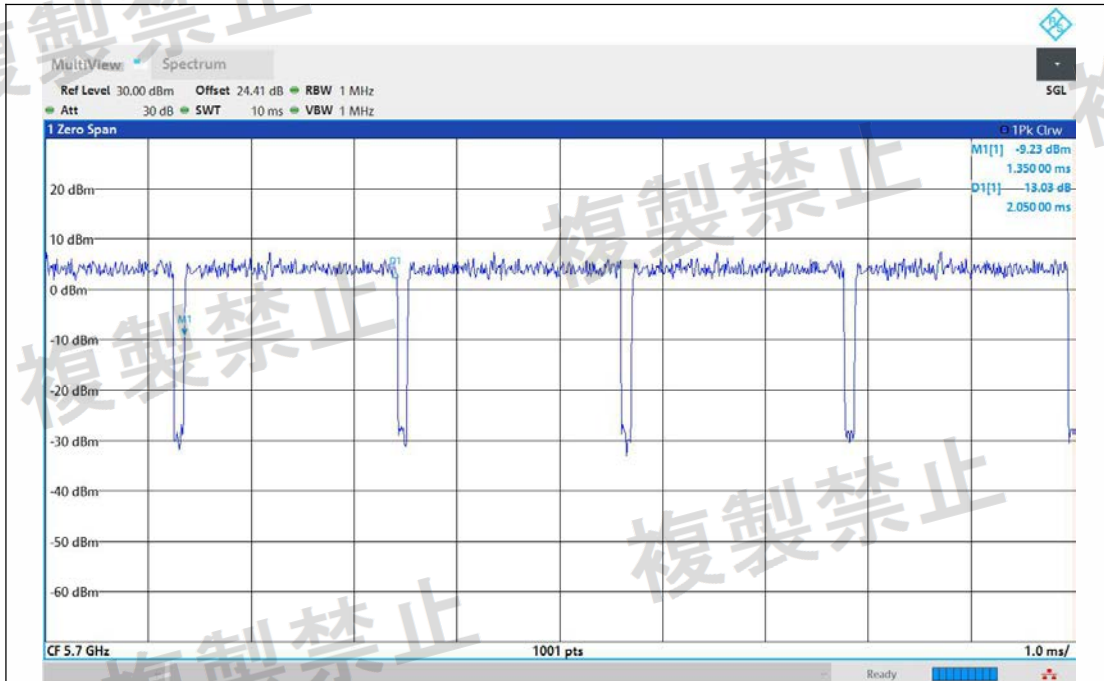


NTNV-11A-Ant1-5700-PASS

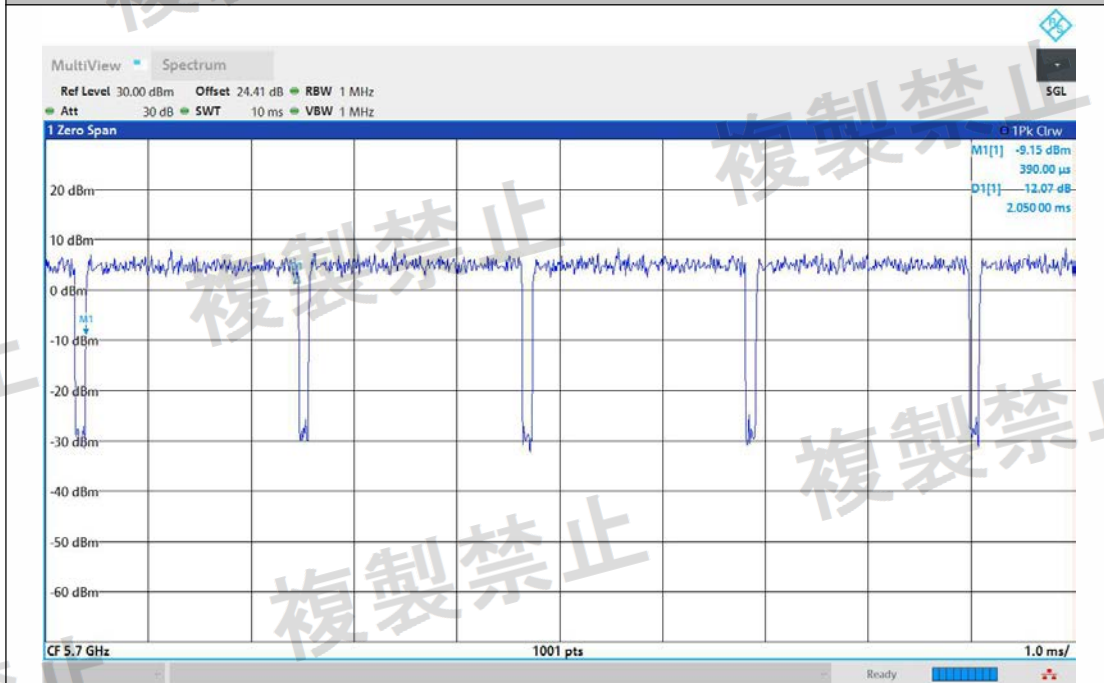


NTNV-11A-Ant2-5700-PASS

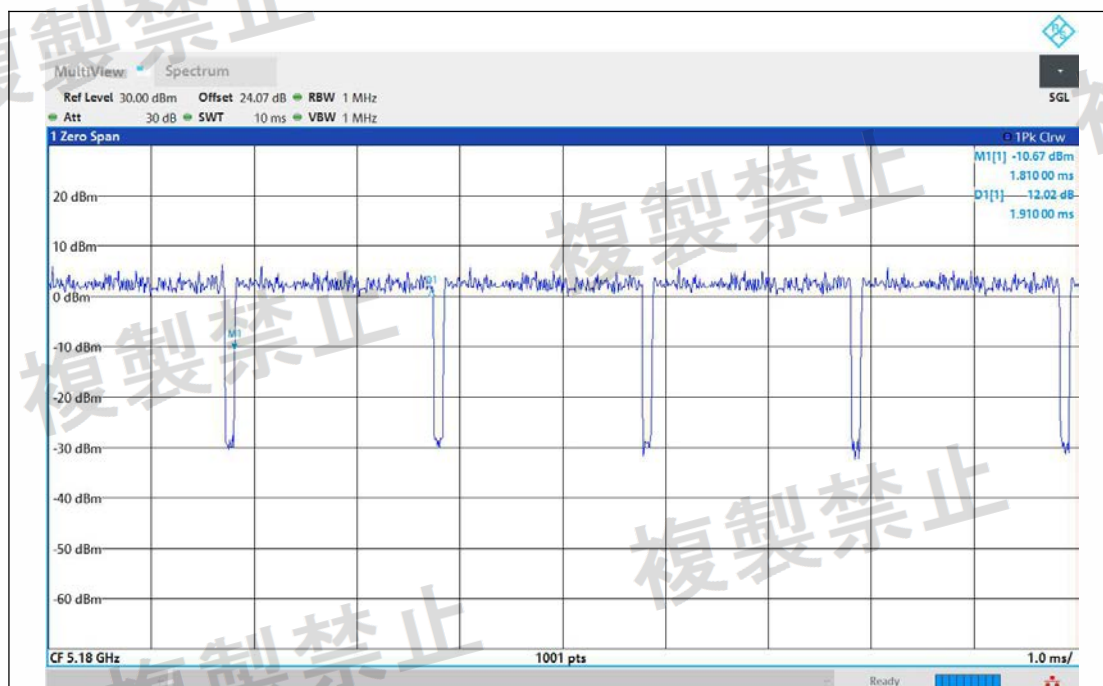


NTNV-11N20MIMO-Ant1-5180-PASS

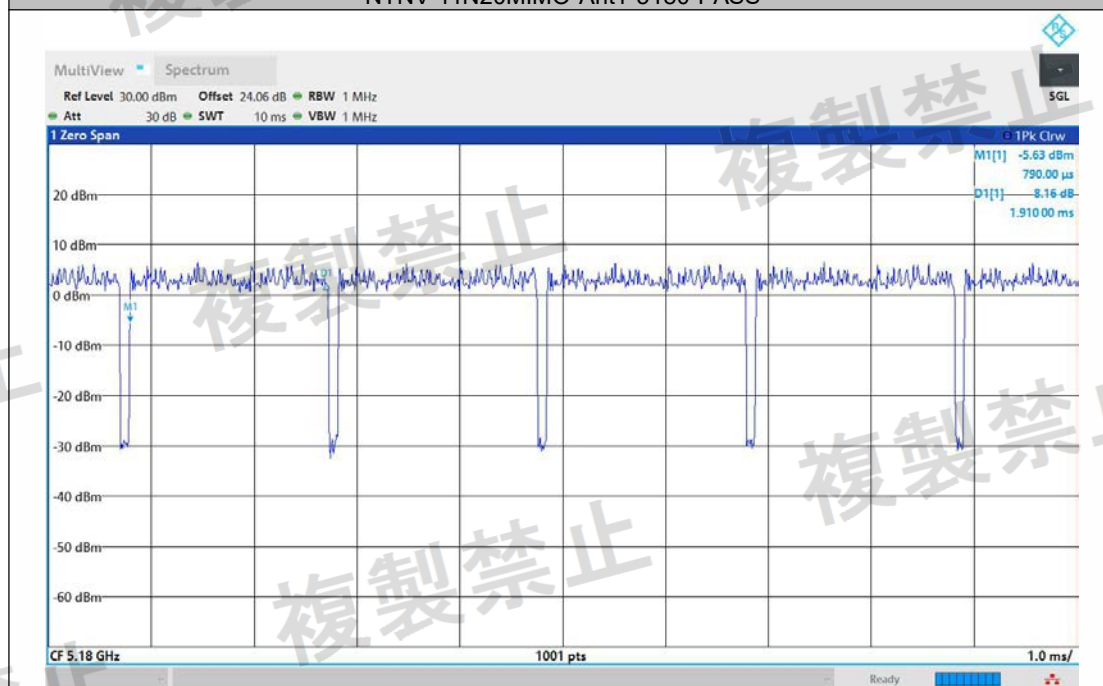


NTNV-11N20MIMO-Ant2-5180-PASS

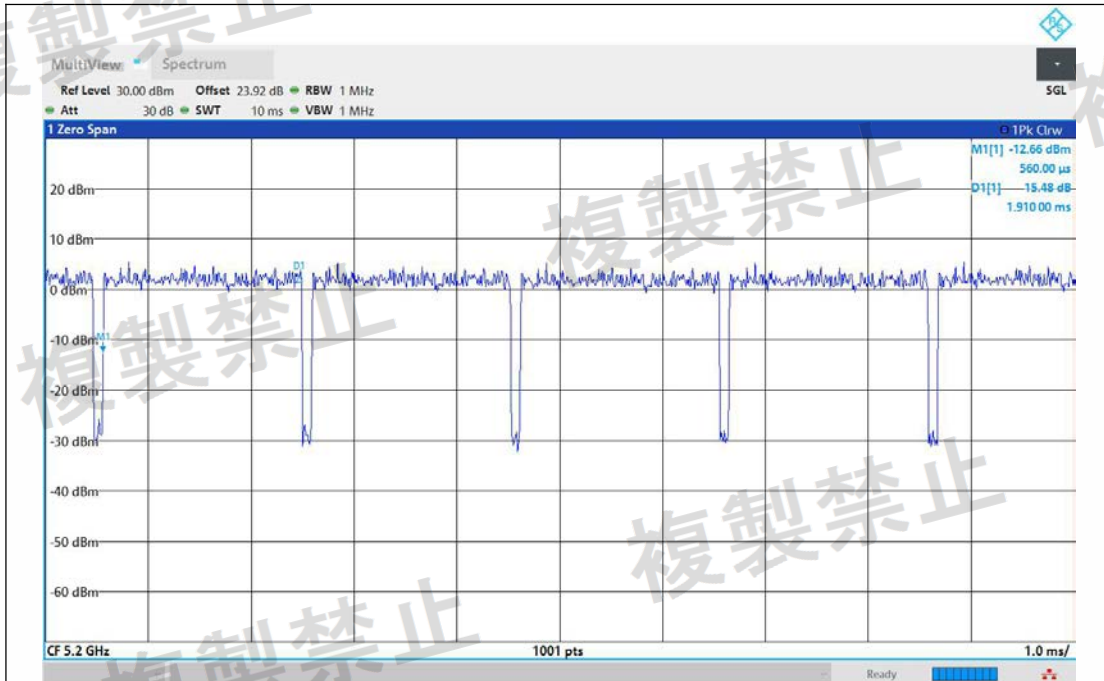


NTNV-11N20MIMO-Ant1-5200-PASS

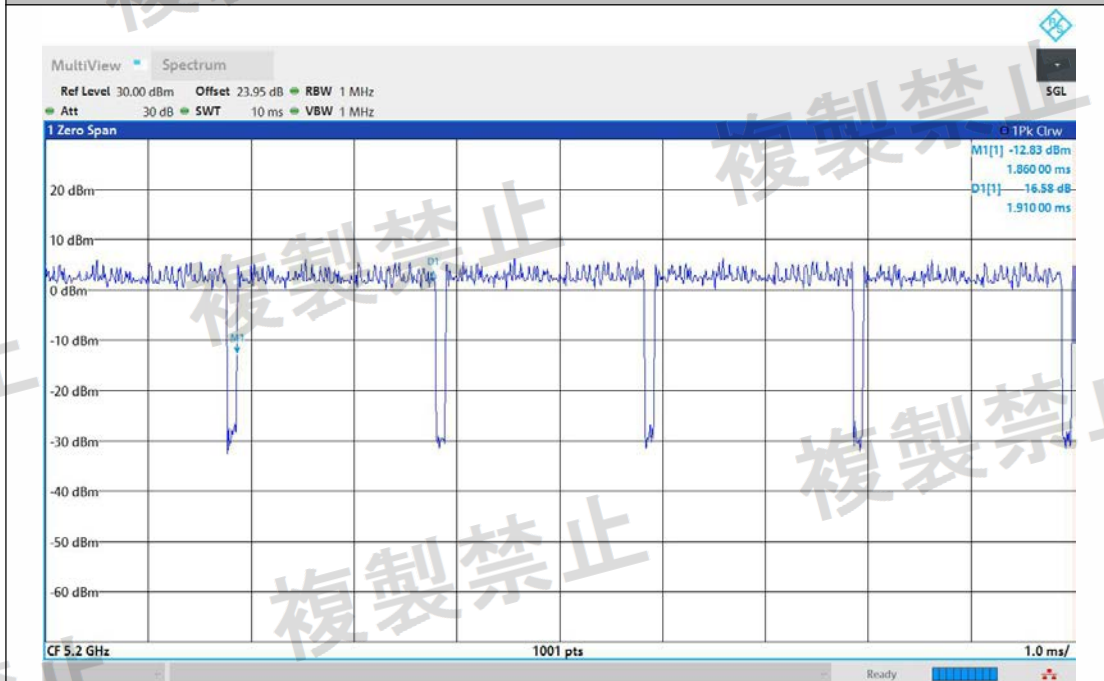


NTNV-11N20MIMO-Ant2-5200-PASS

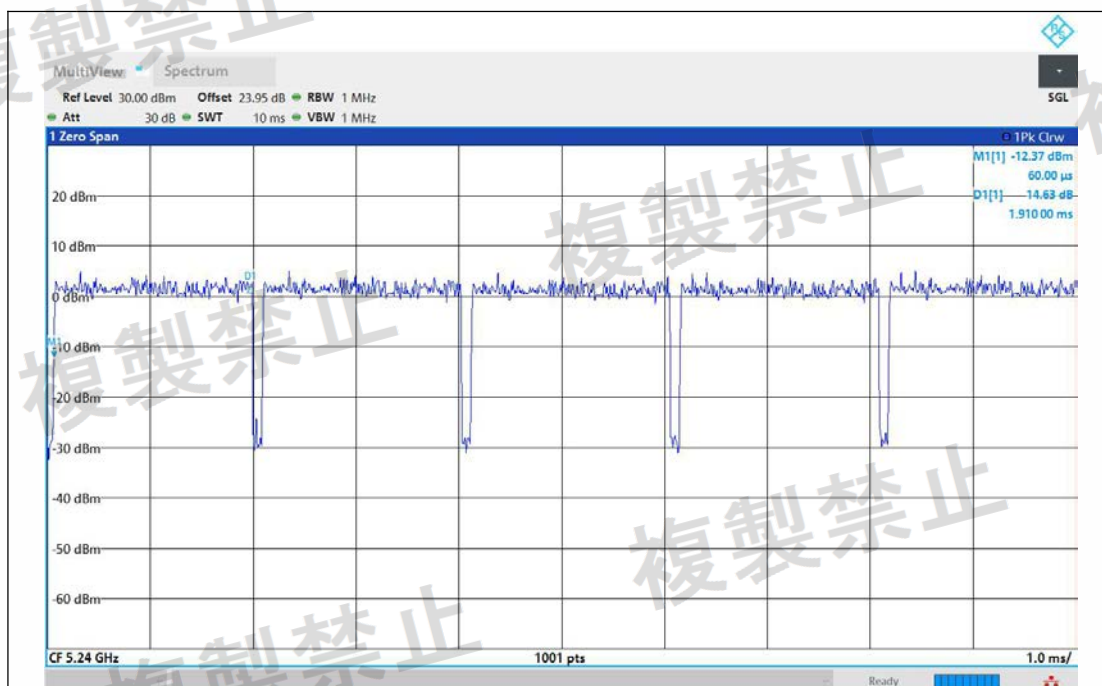


NTVN-11N20MIMO-Ant1-5240-PASS

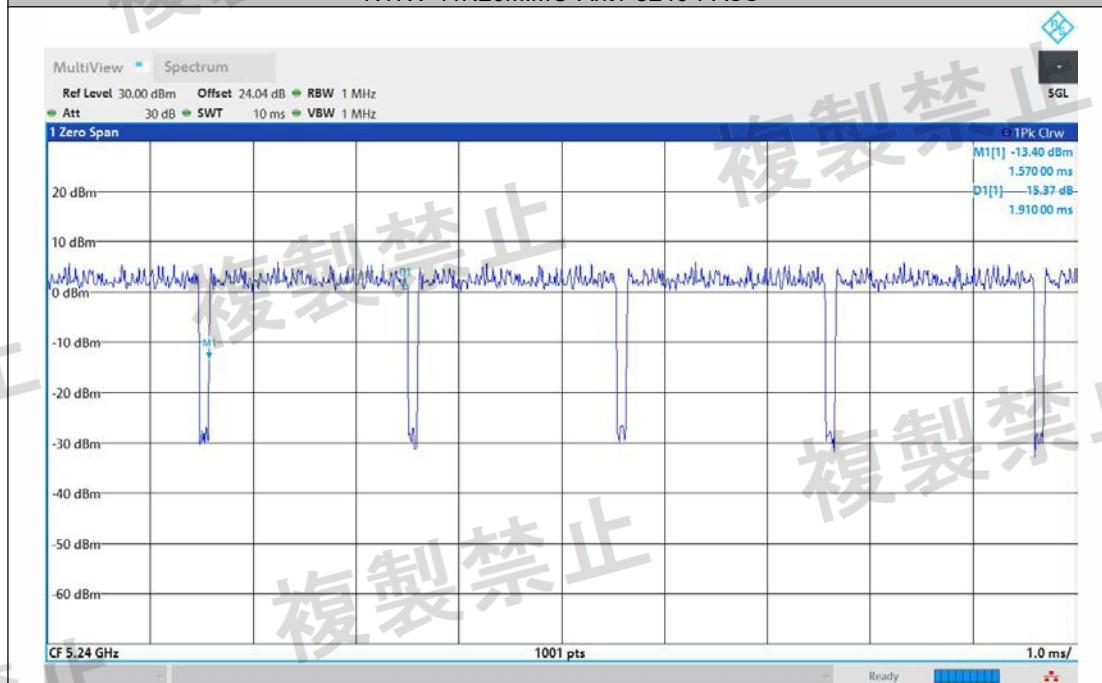


NTVN-11N20MIMO-Ant2-5240-PASS

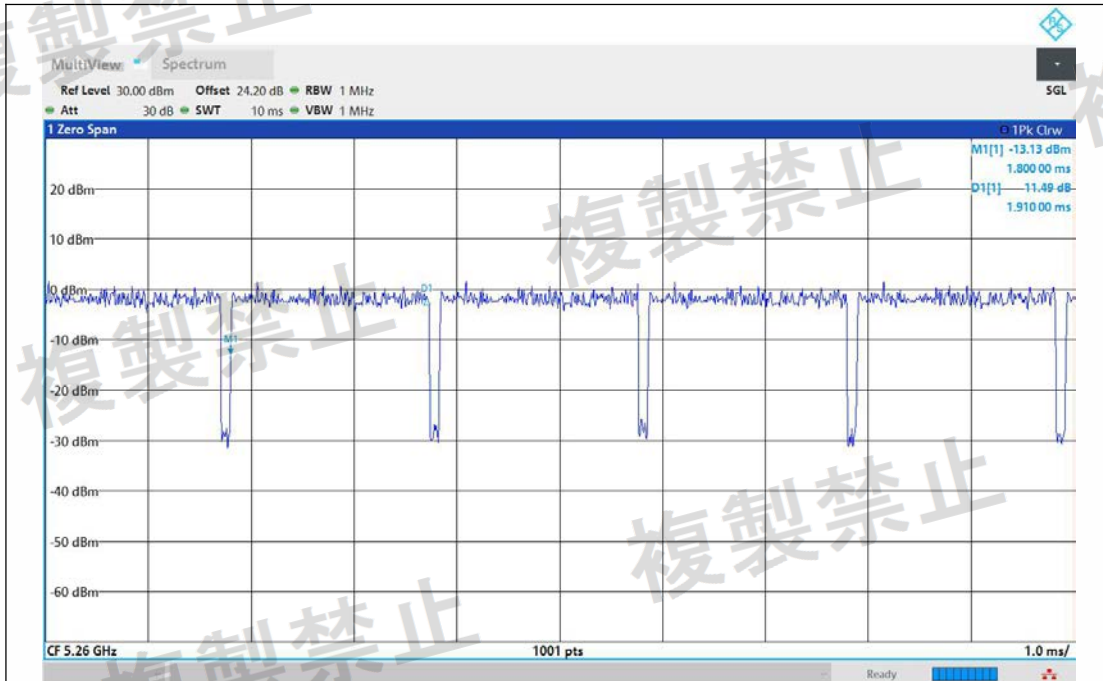


NTNV-11N20MIMO-Ant1-5260-PASS

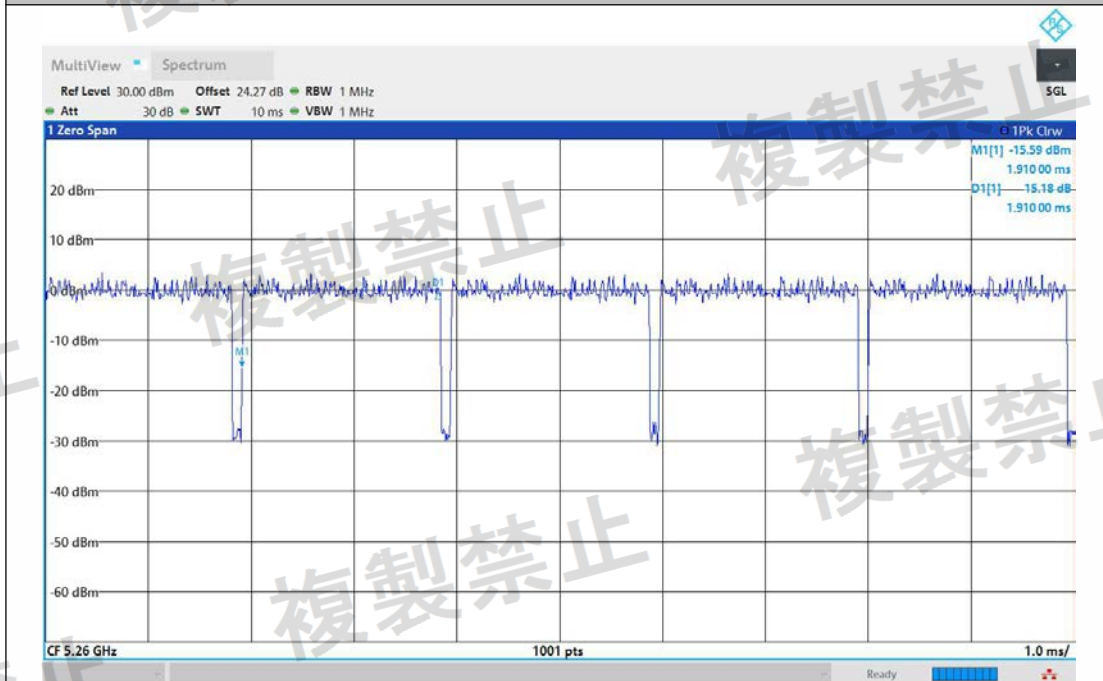


NTNV-11N20MIMO-Ant2-5260-PASS

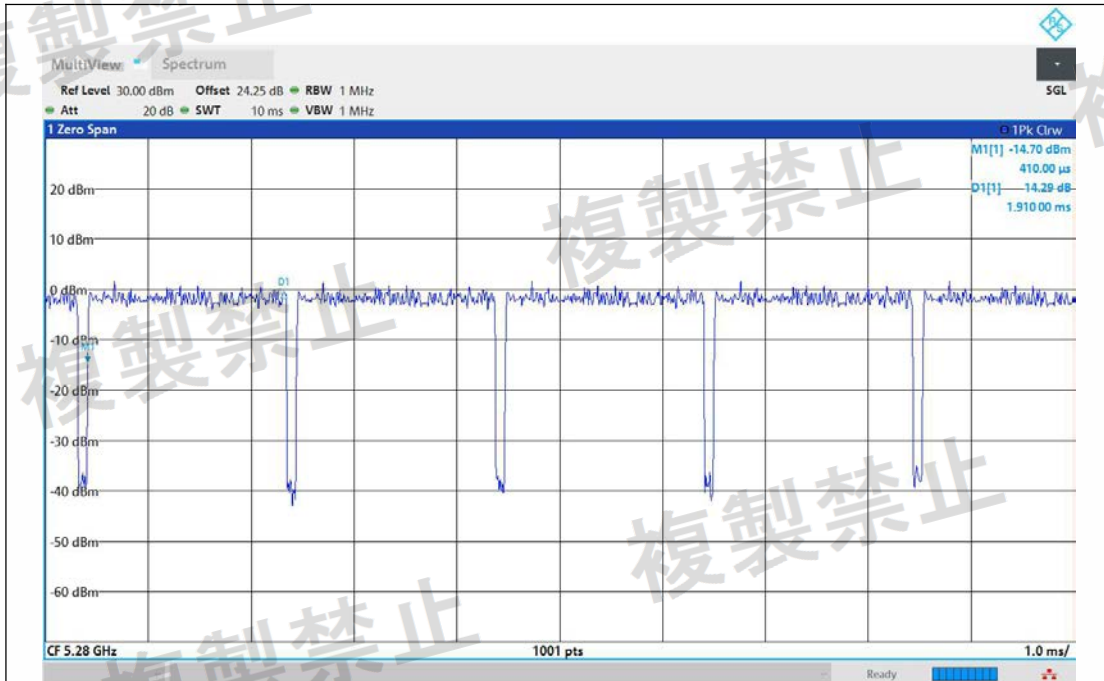


NTNV-11N20MIMO-Ant1-5280-PASS

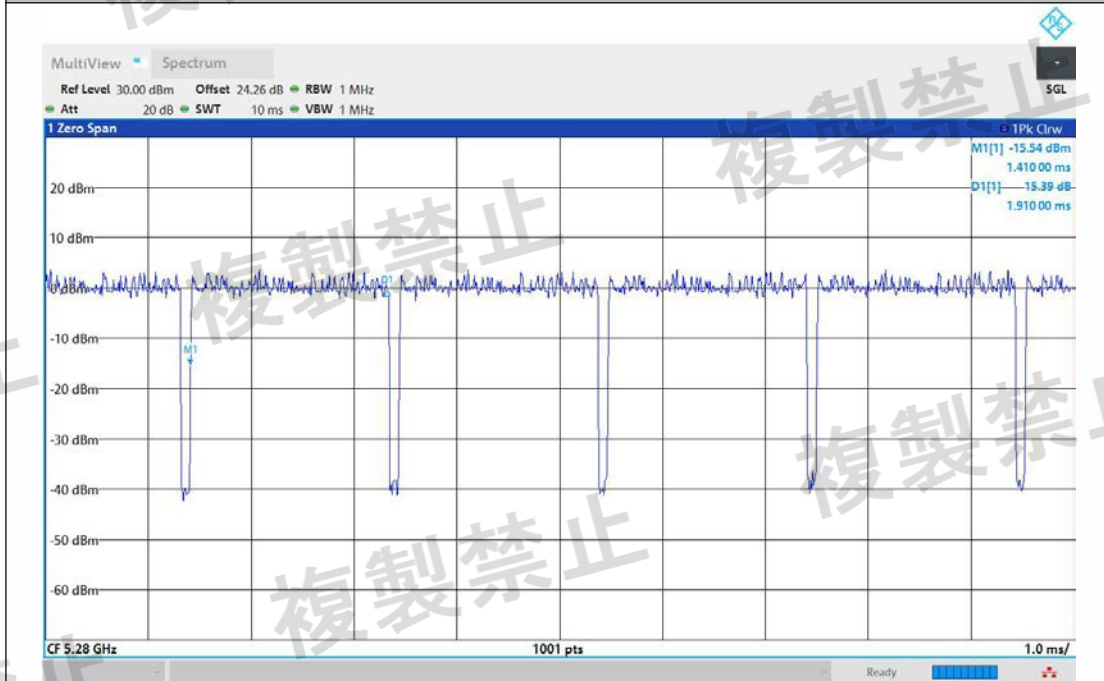


NTNV-11N20MIMO-Ant2-5280-PASS

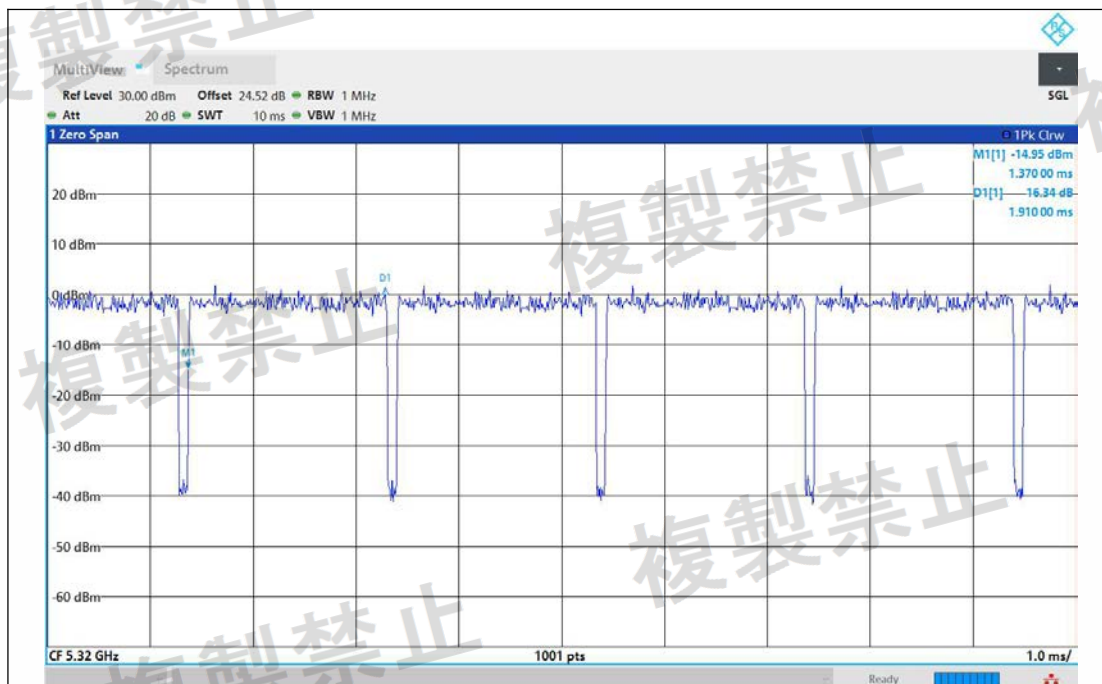


NTVN-11N20MIMO-Ant1-5320-PASS

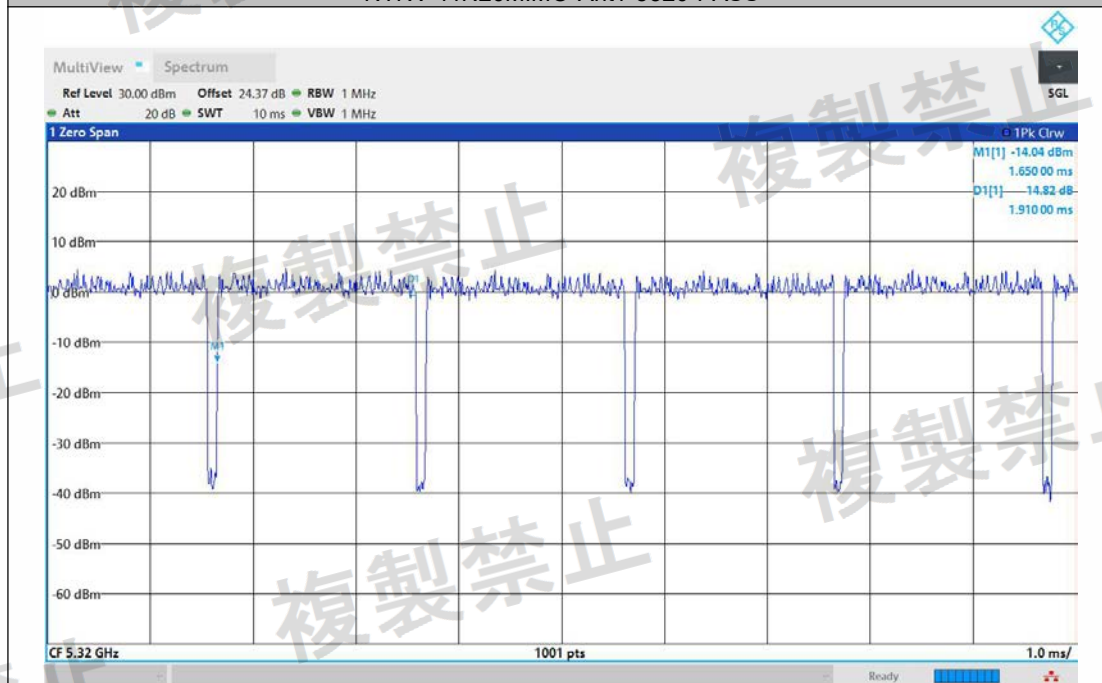


NTVN-11N20MIMO-Ant2-5320-PASS

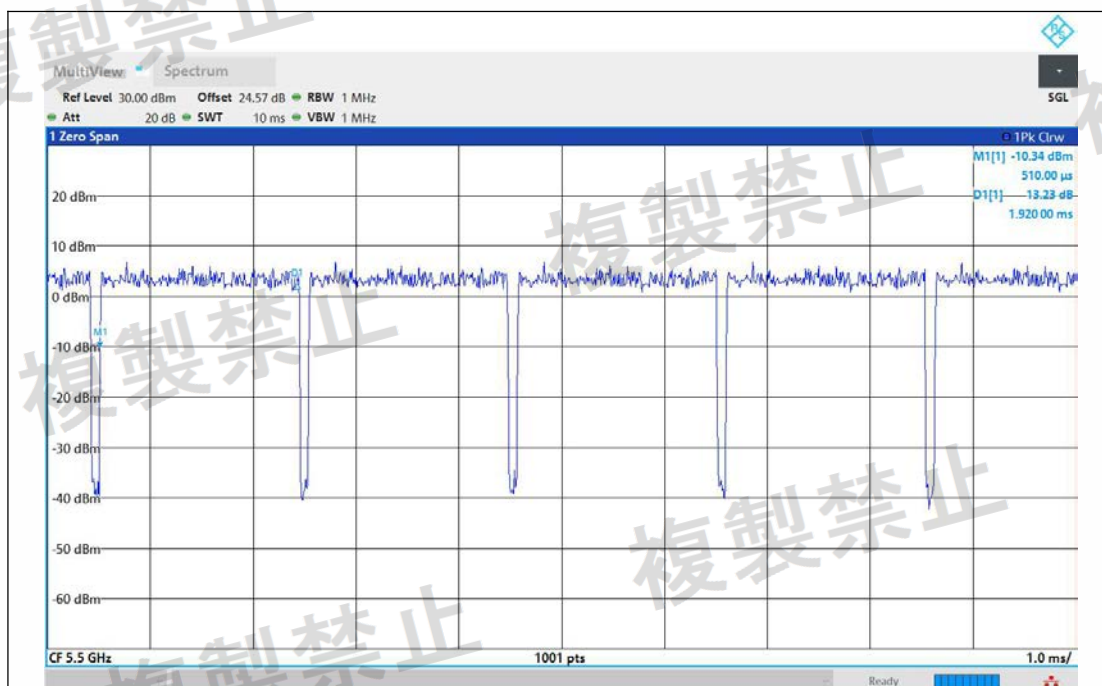


NTNV-11N20MIMO-Ant1-5500-PASS

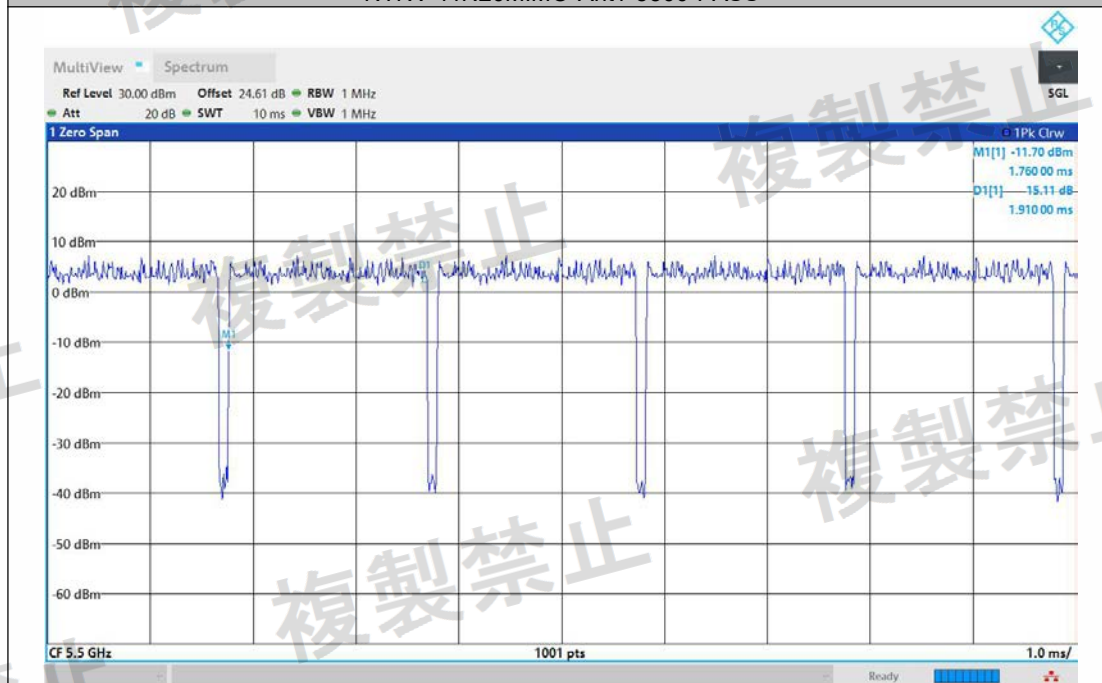


NTNV-11N20MIMO-Ant2-5500-PASS

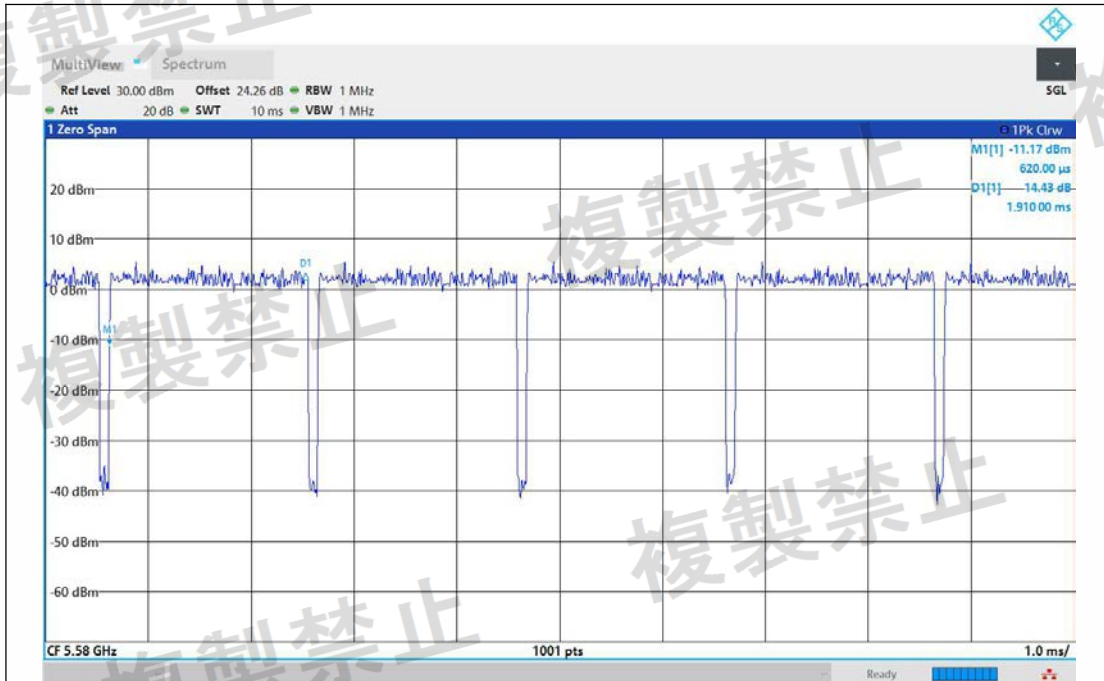


NTNV-11N20MIMO-Ant1-5580-PASS

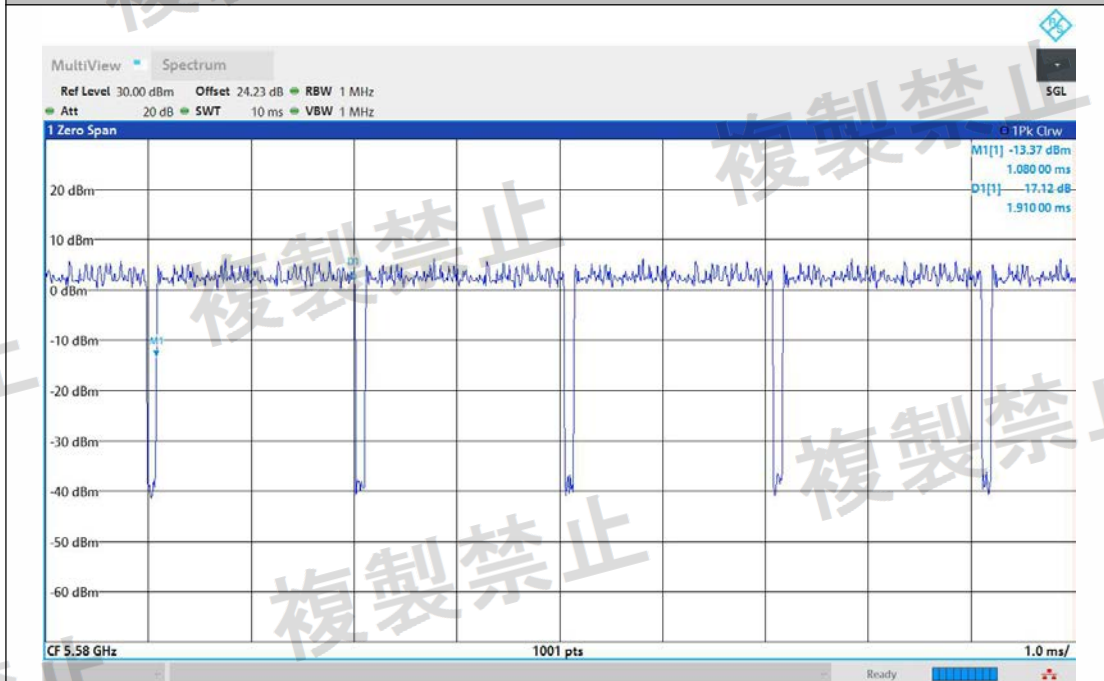


NTNV-11N20MIMO-Ant2-5580-PASS

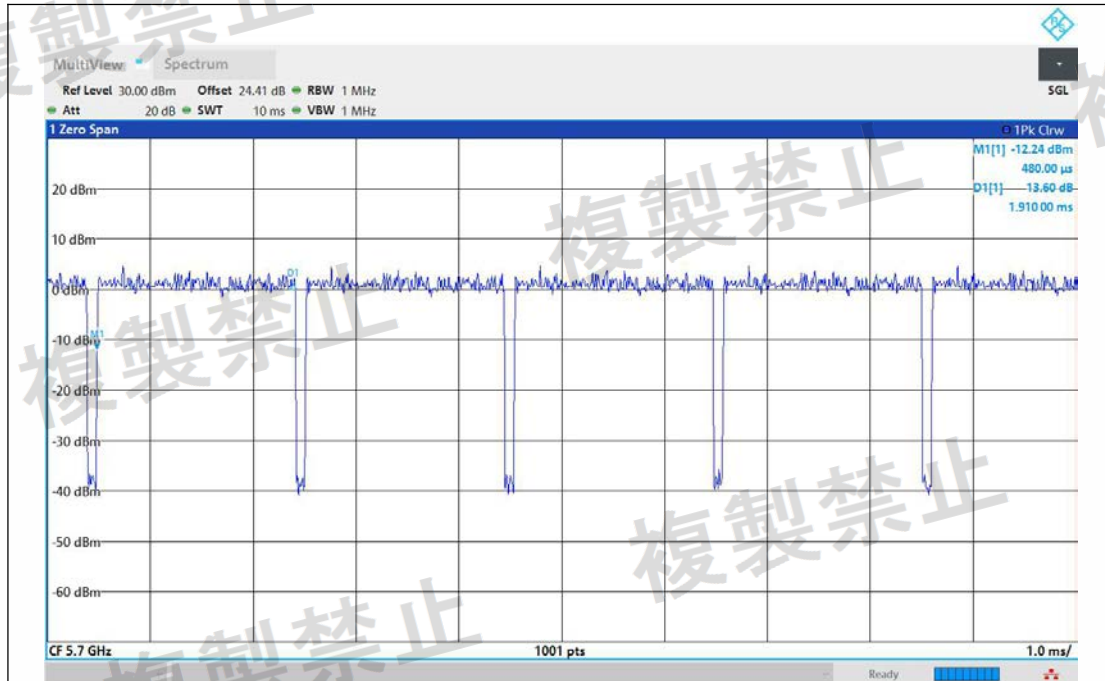


NTNV-11N20MIMO-Ant1-5700-PASS

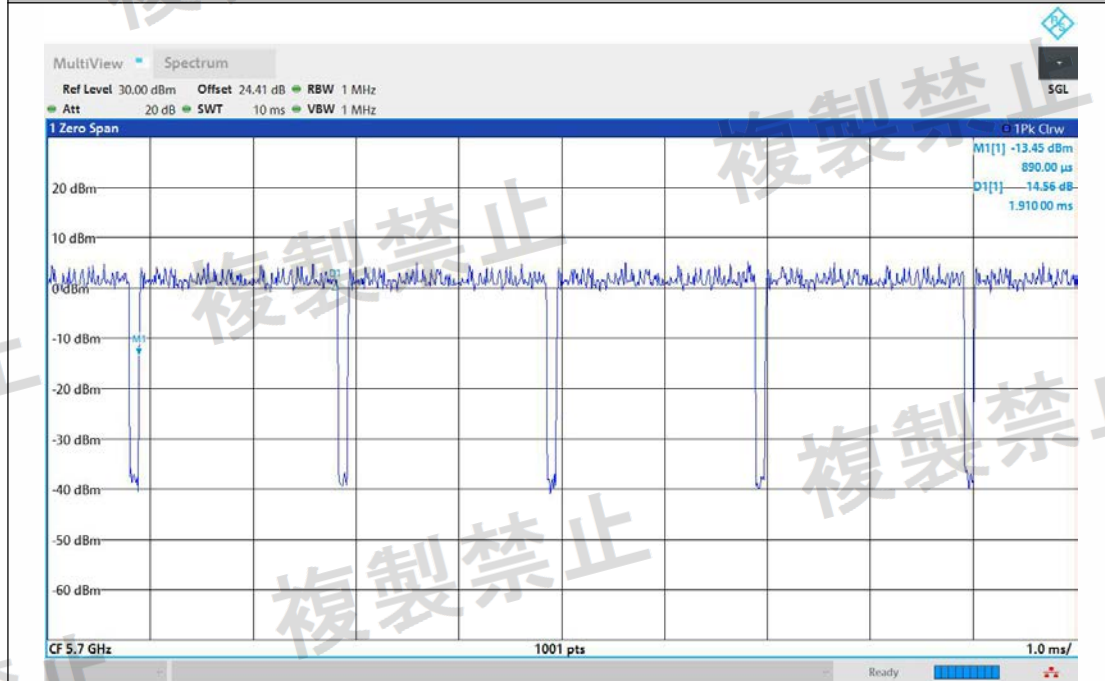


NTNV-11N20MIMO-Ant2-5700-PASS

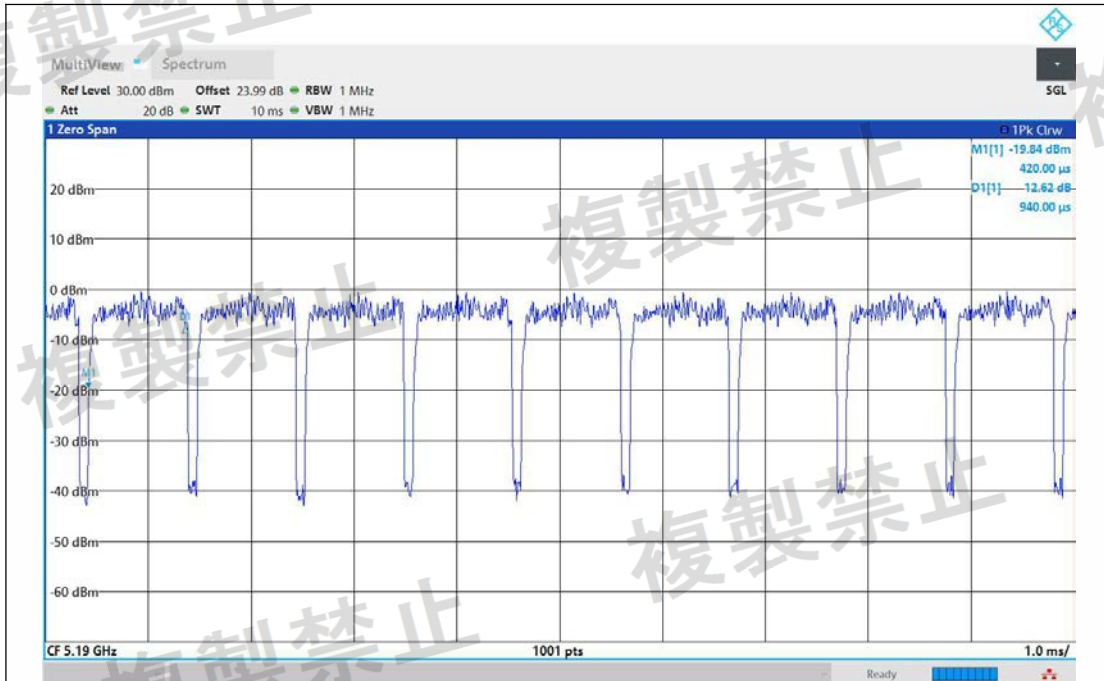


NTNV-11N40MIMO-Ant1-5190-PASS

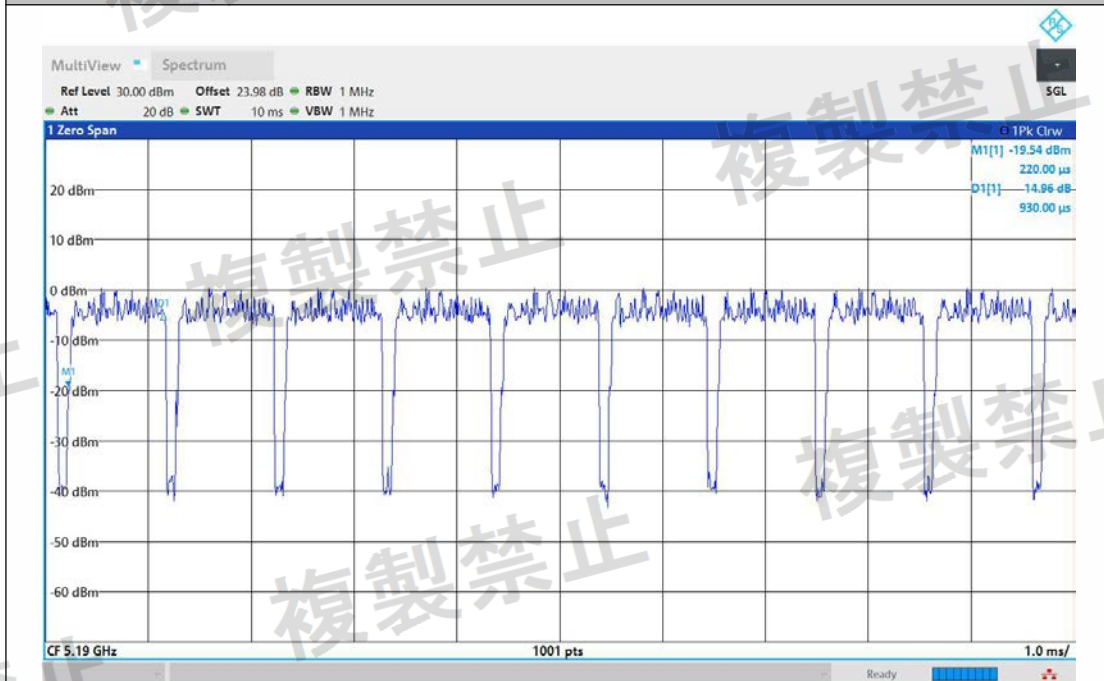


NTNV-11N40MIMO-Ant2-5190-PASS

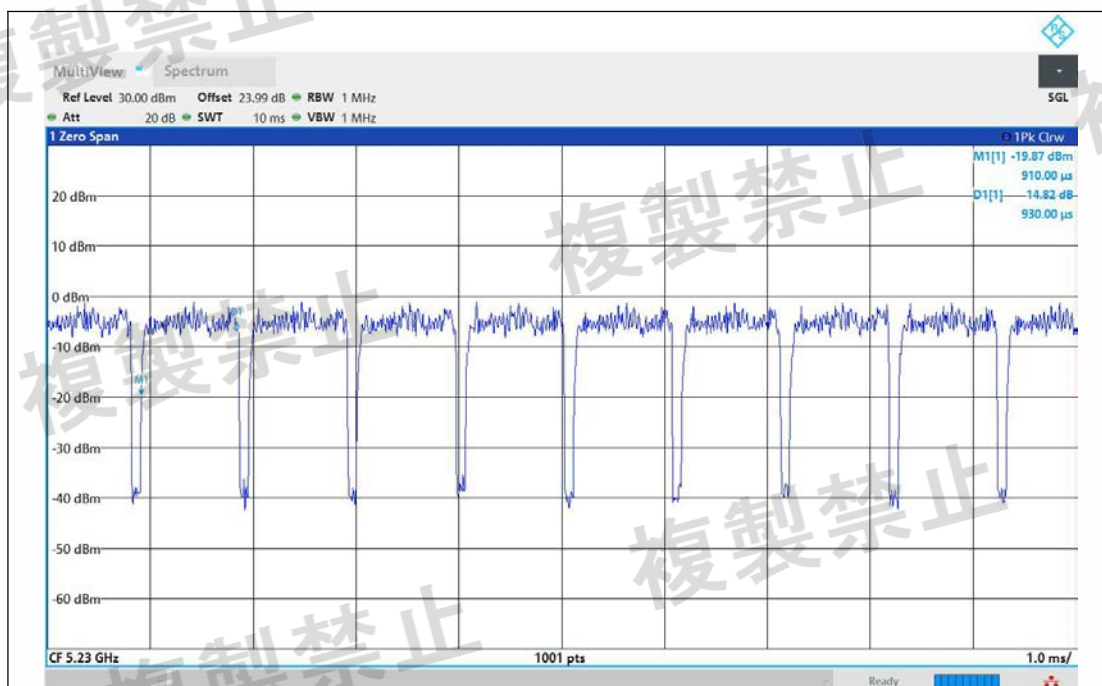


NTNV-11N40MIMO-Ant1-5230-PASS

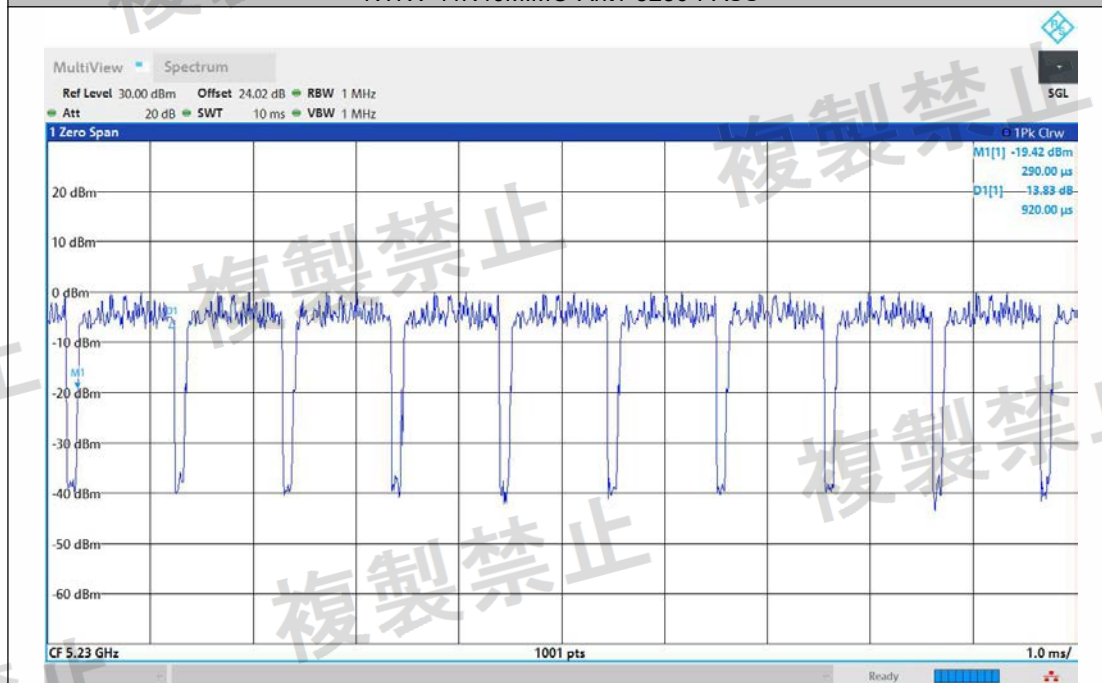


NTNV-11N40MIMO-Ant2-5230-PASS

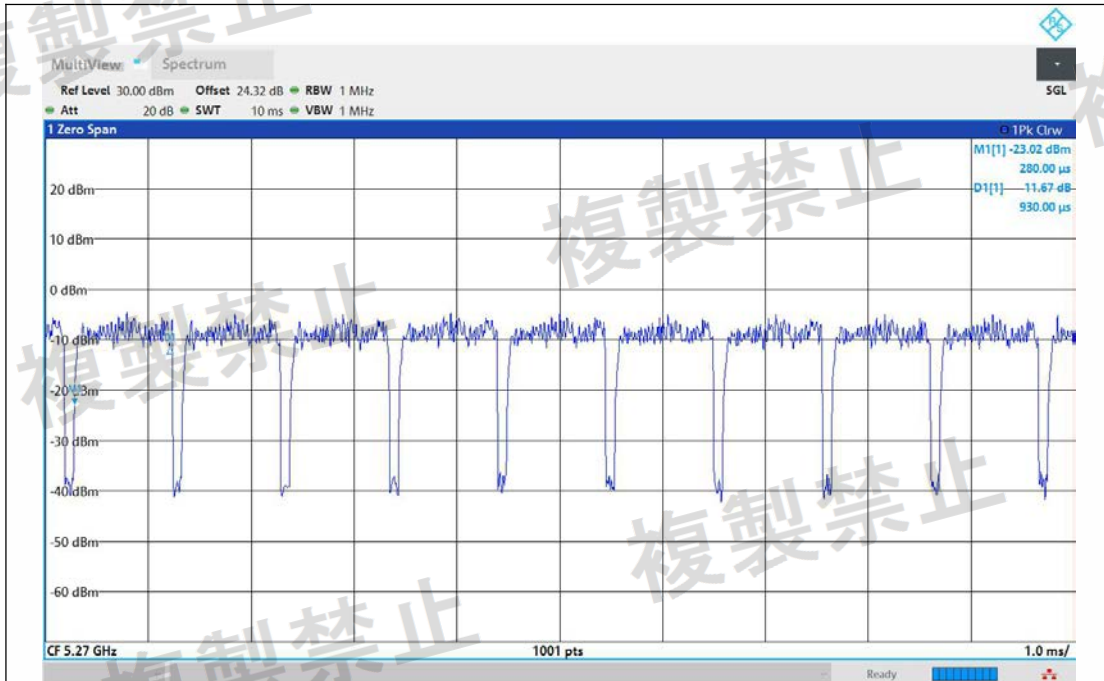


NTNV-11N40MIMO-Ant1-5270-PASS

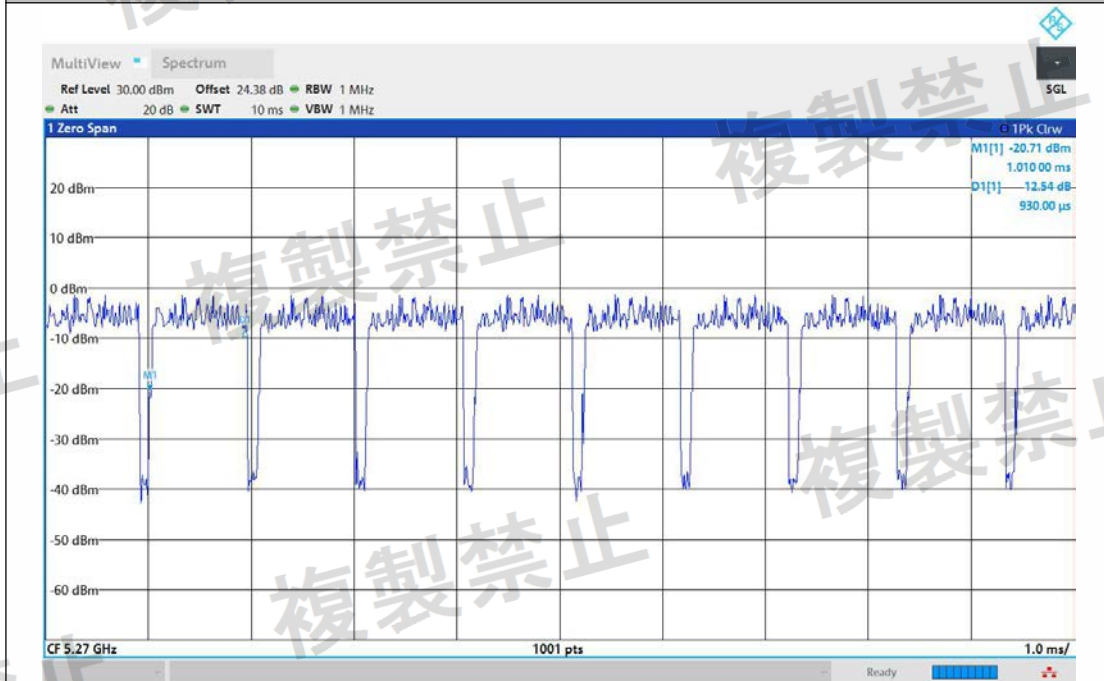


NTNV-11N40MIMO-Ant2-5270-PASS

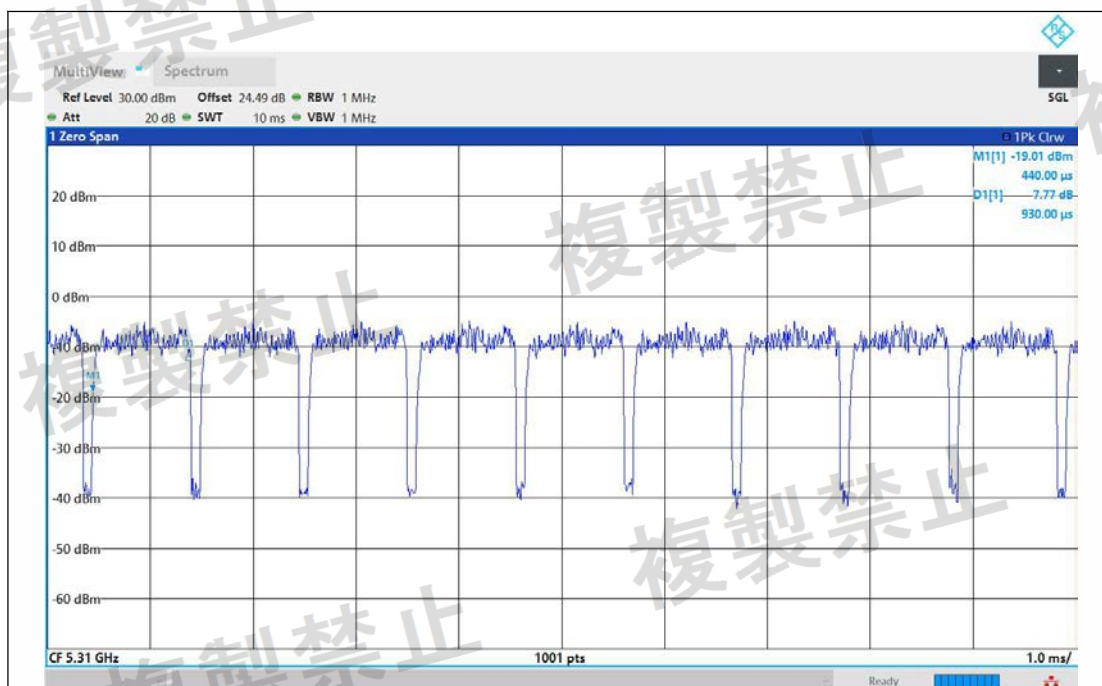


NTNV-11N40MIMO-Ant1-5310-PASS

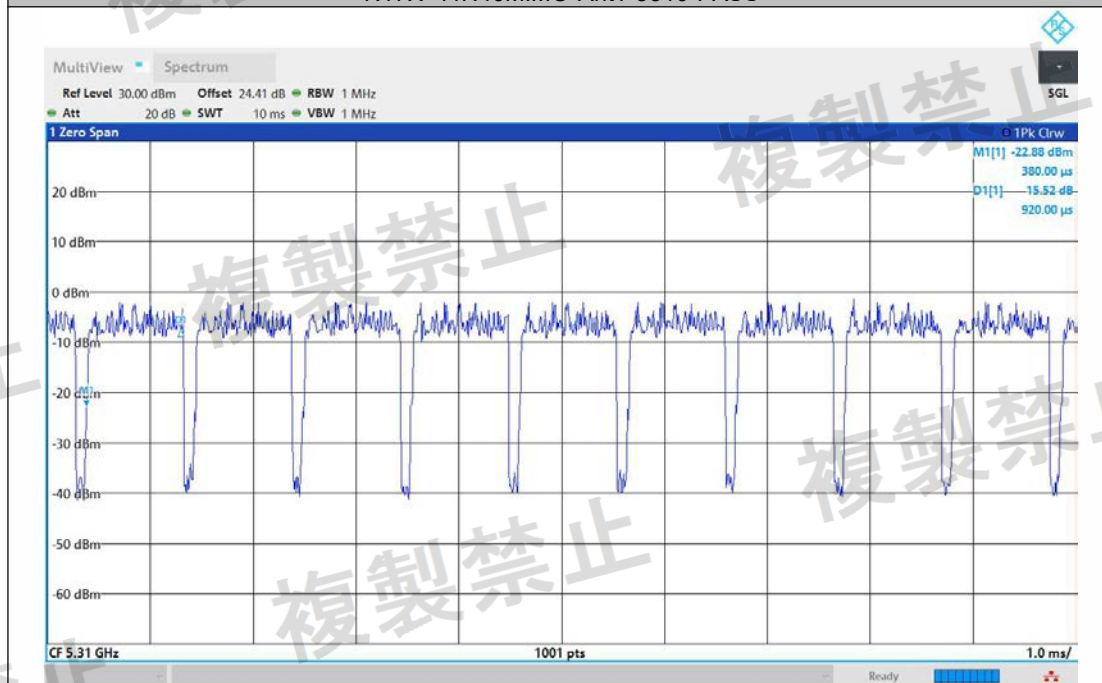


NTNV-11N40MIMO-Ant2-5310-PASS

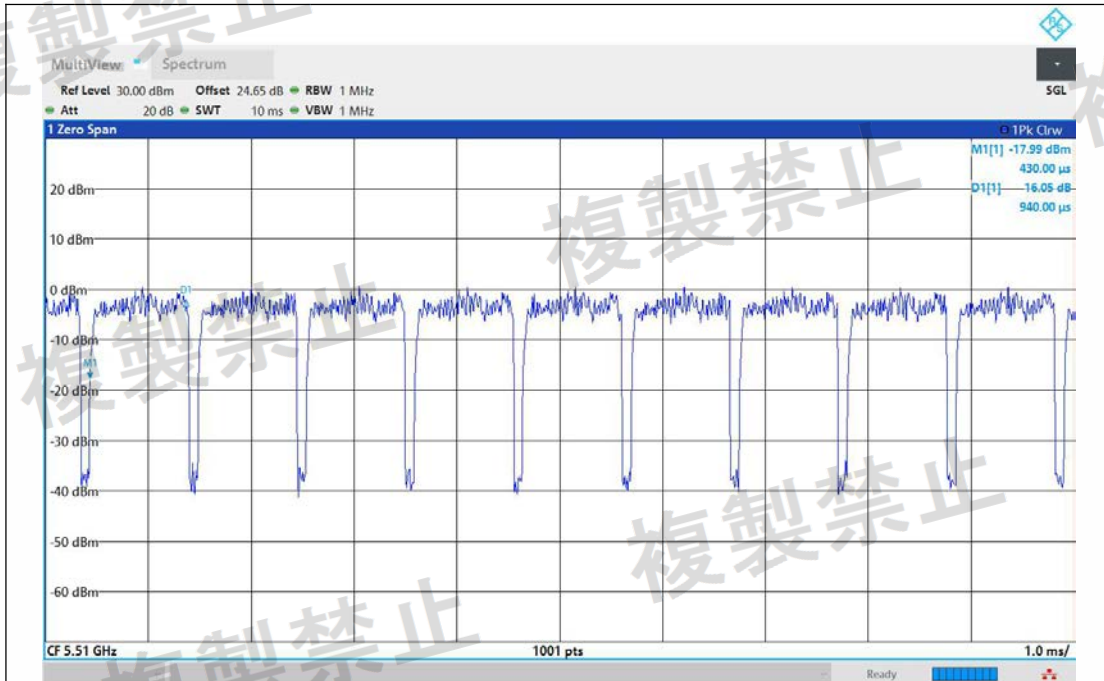


NTNV-11N40MIMO-Ant1-5510-PASS

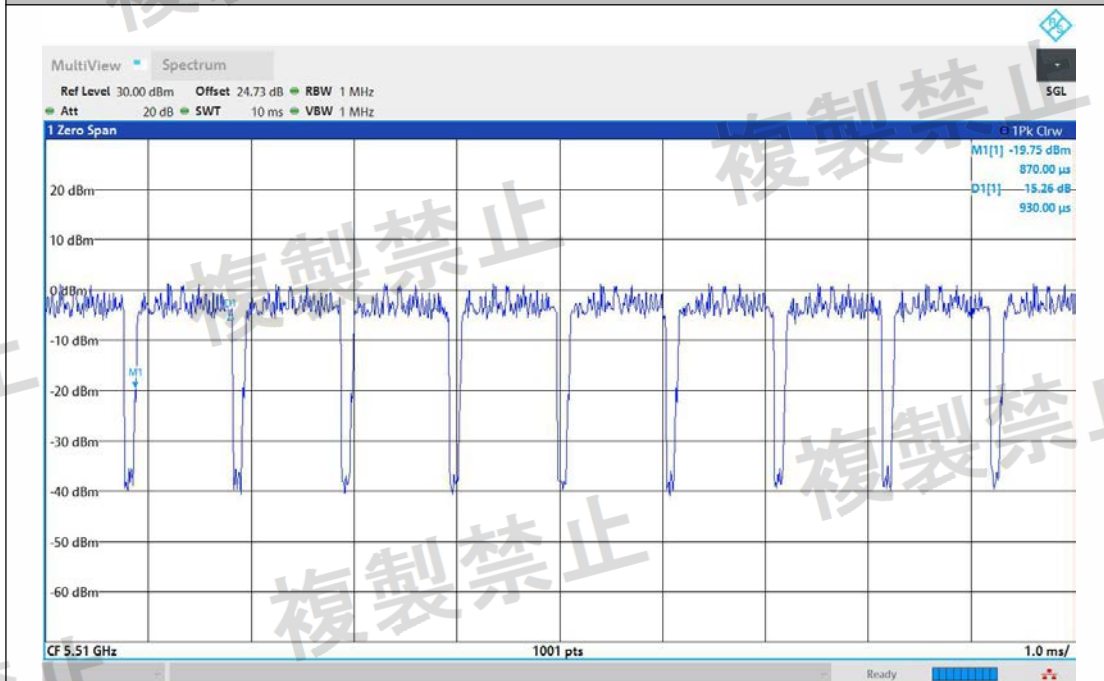


NTNV-11N40MIMO-Ant2-5510-PASS

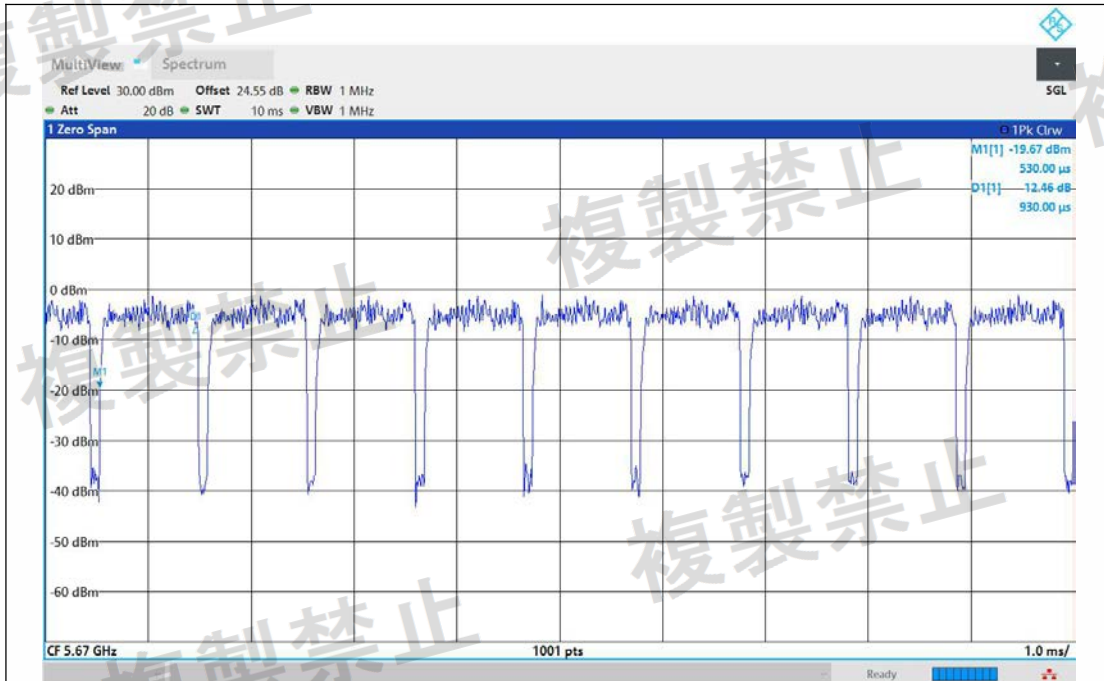


NTNV-11N40MIMO-Ant1-5670-PASS

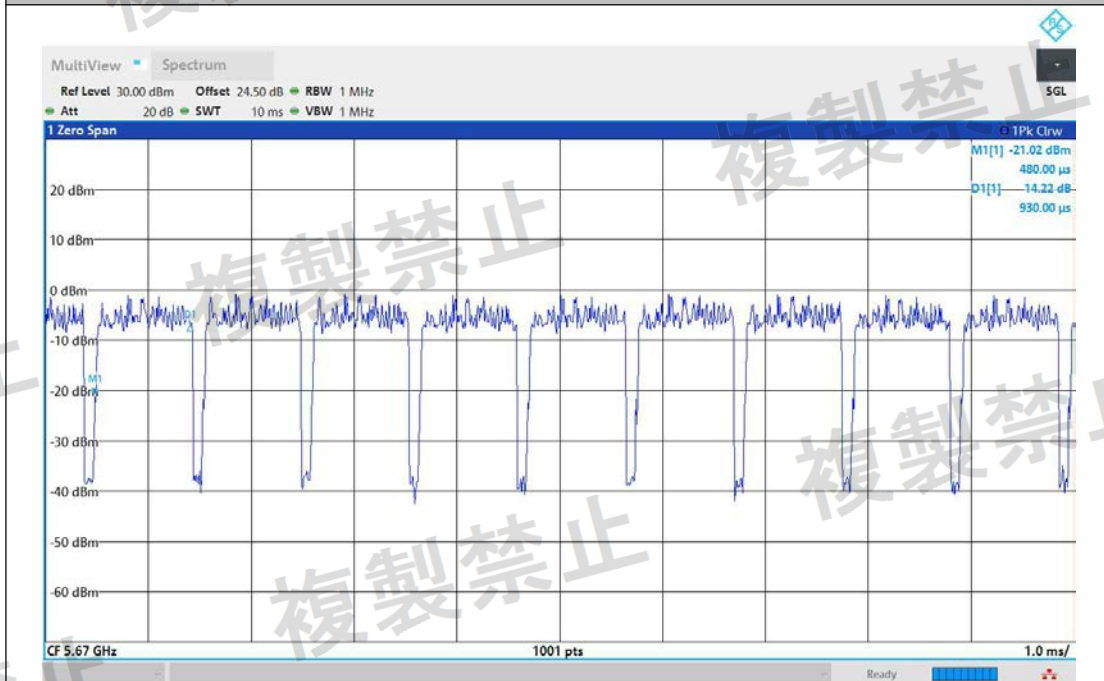


NTNV-11N40MIMO-Ant2-5670-PASS

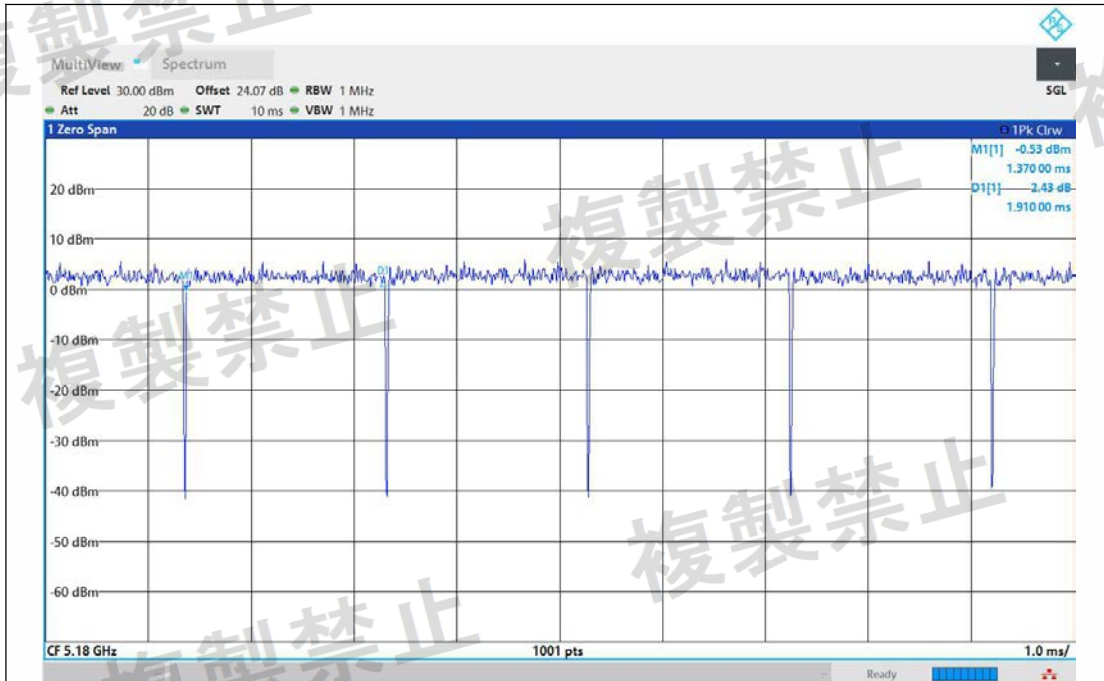


NTNV-11AC20MIMO-Ant1-5180-PASS

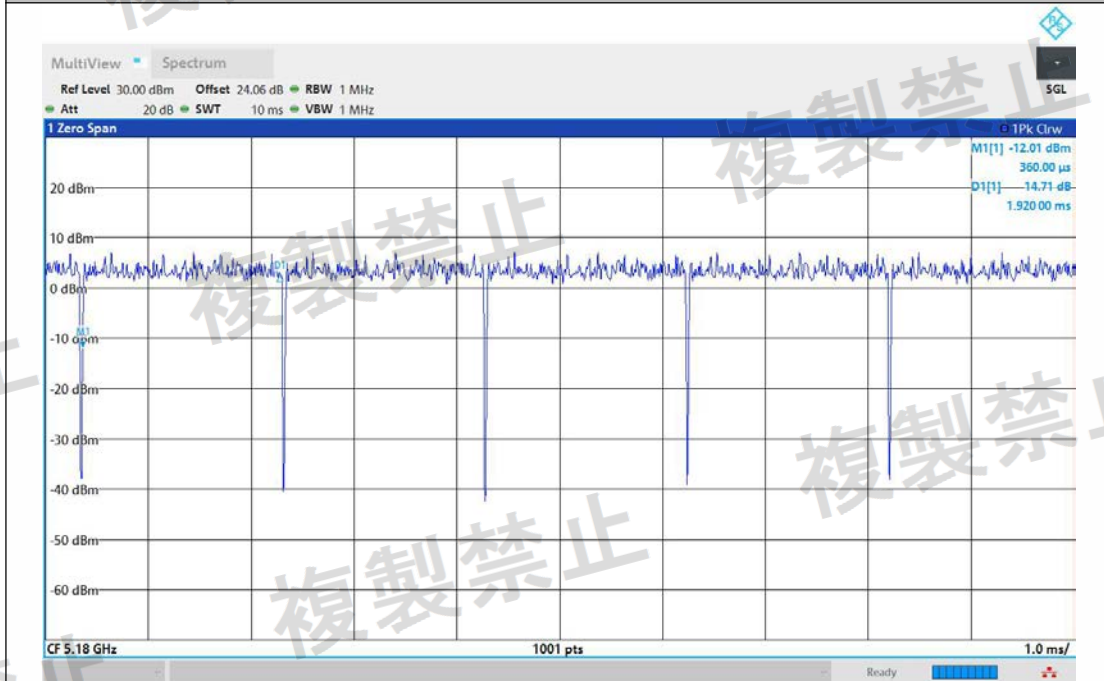


NTNV-11AC20MIMO-Ant2-5180-PASS

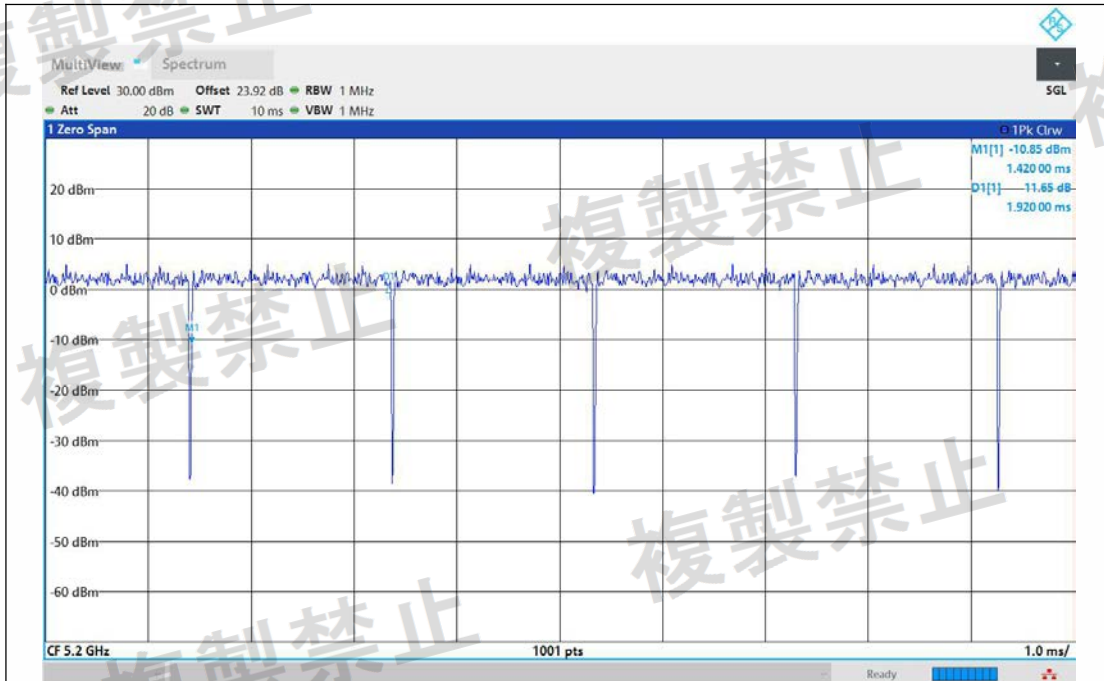


NTNV-11AC20MIMO-Ant1-5200-PASS

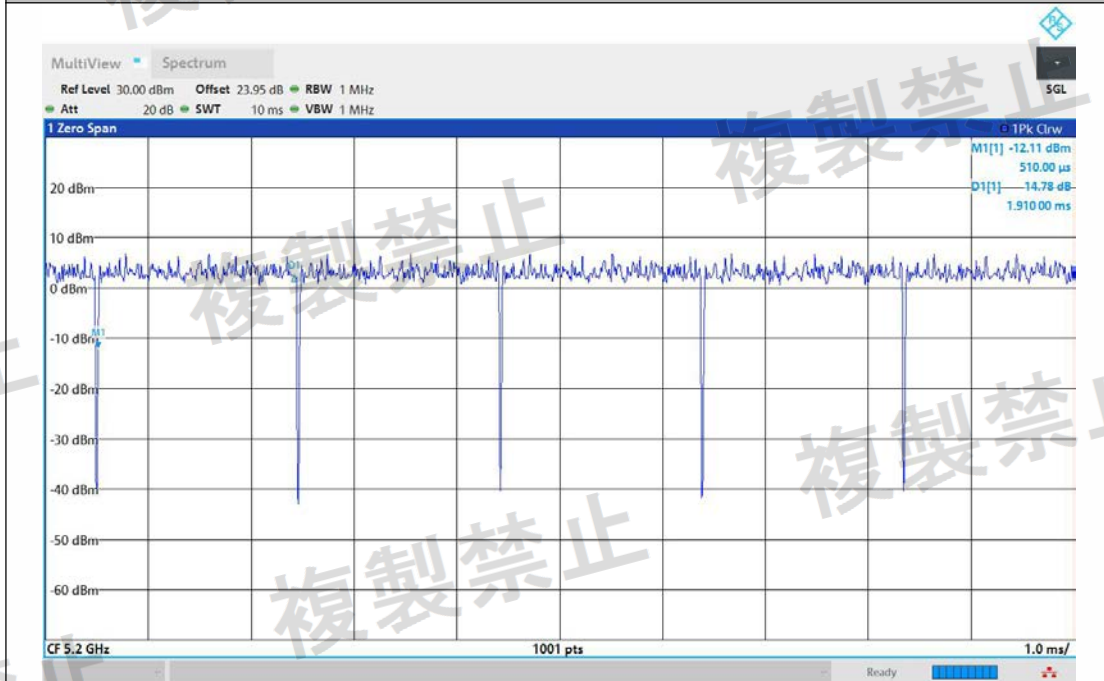


NTNV-11AC20MIMO-Ant2-5200-PASS

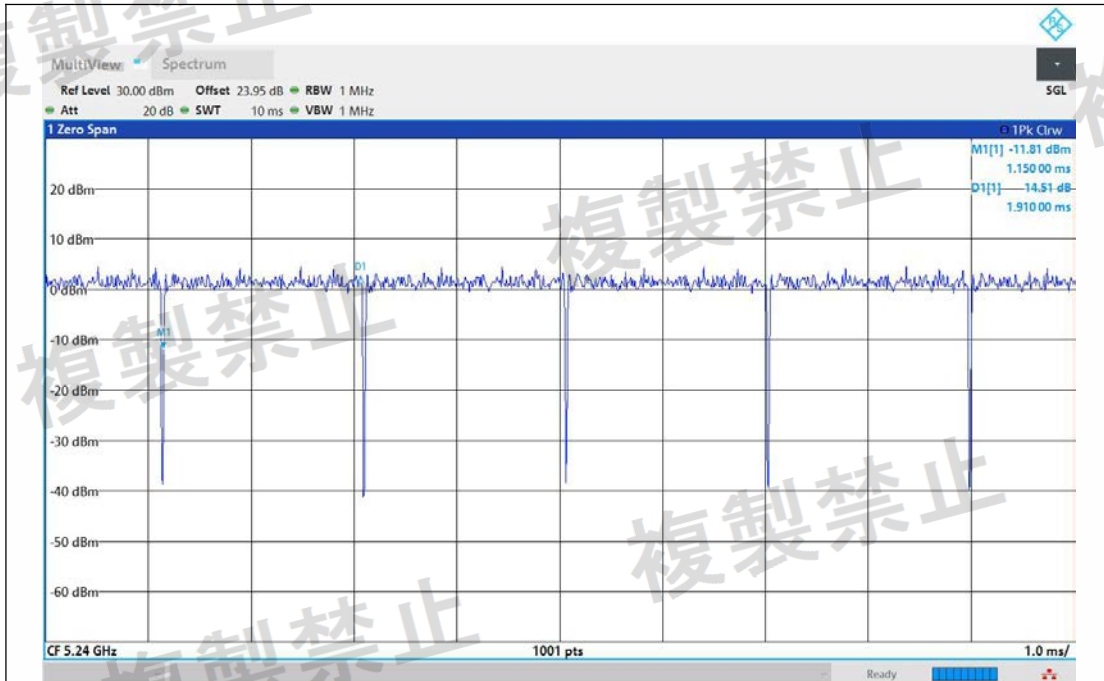


NTNV-11AC20MIMO-Ant1-5240-PASS

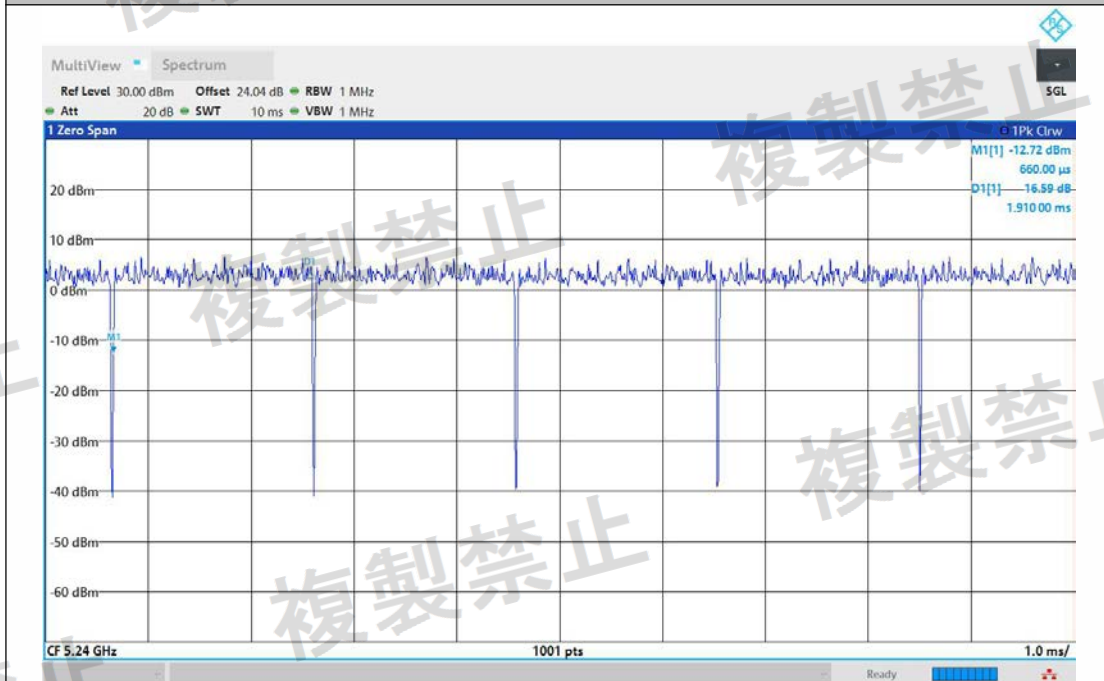


NTNV-11AC20MIMO-Ant2-5240-PASS

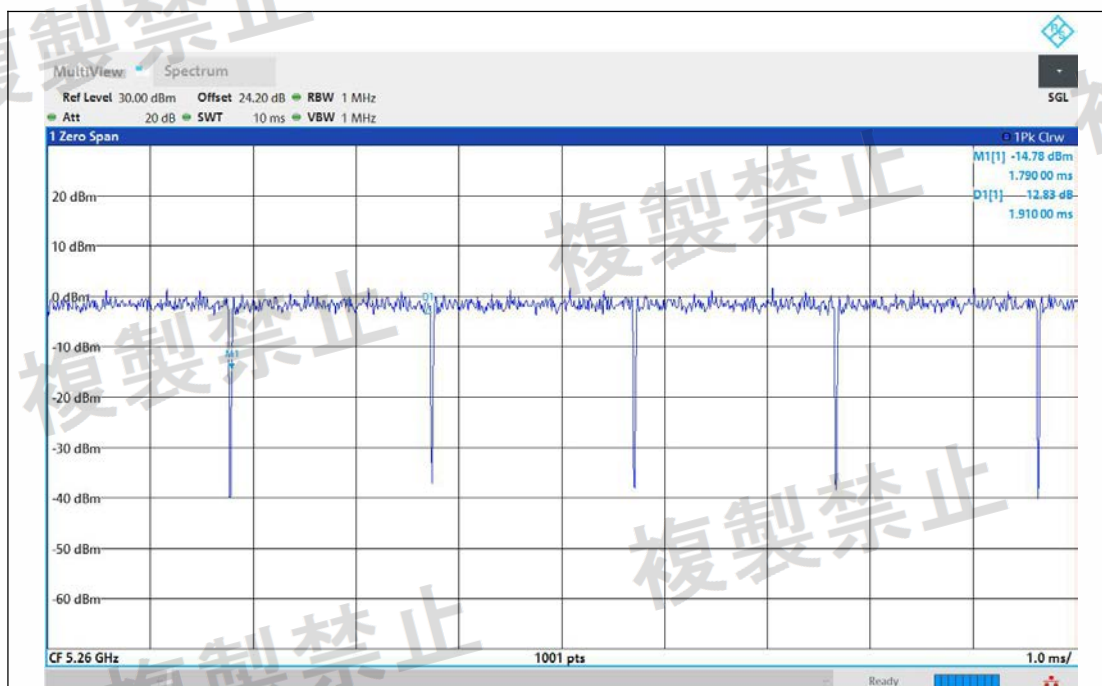


NTNV-11AC20MIMO-Ant1-5260-PASS

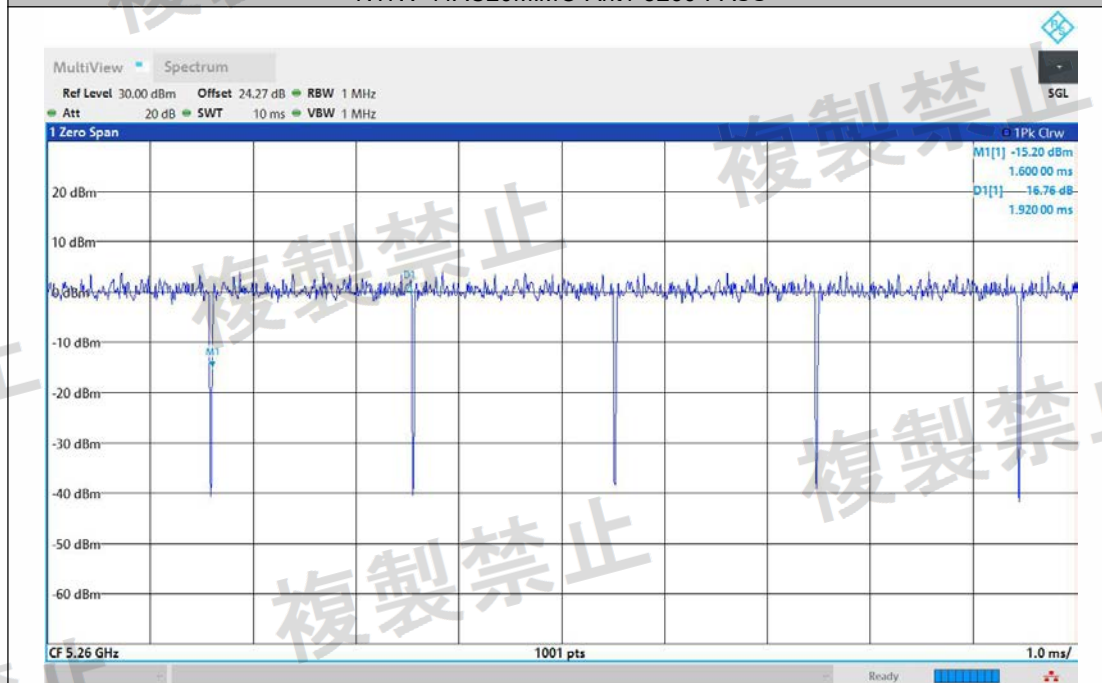


NTNV-11AC20MIMO-Ant2-5260-PASS

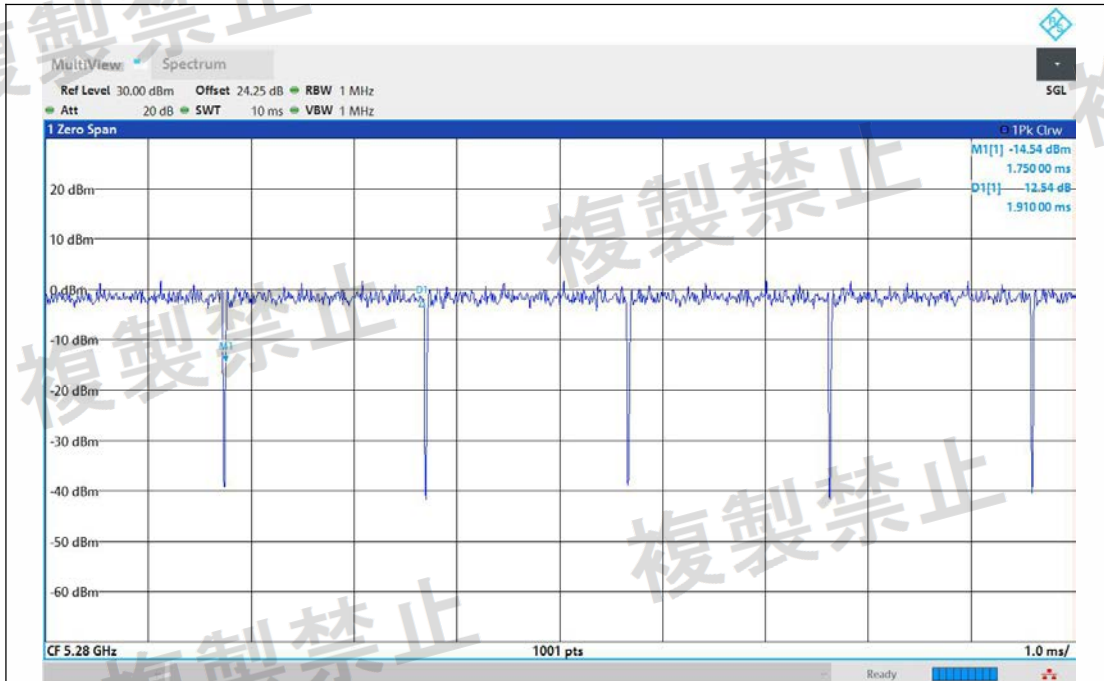


NTNV-11AC20MIMO-Ant1-5280-PASS

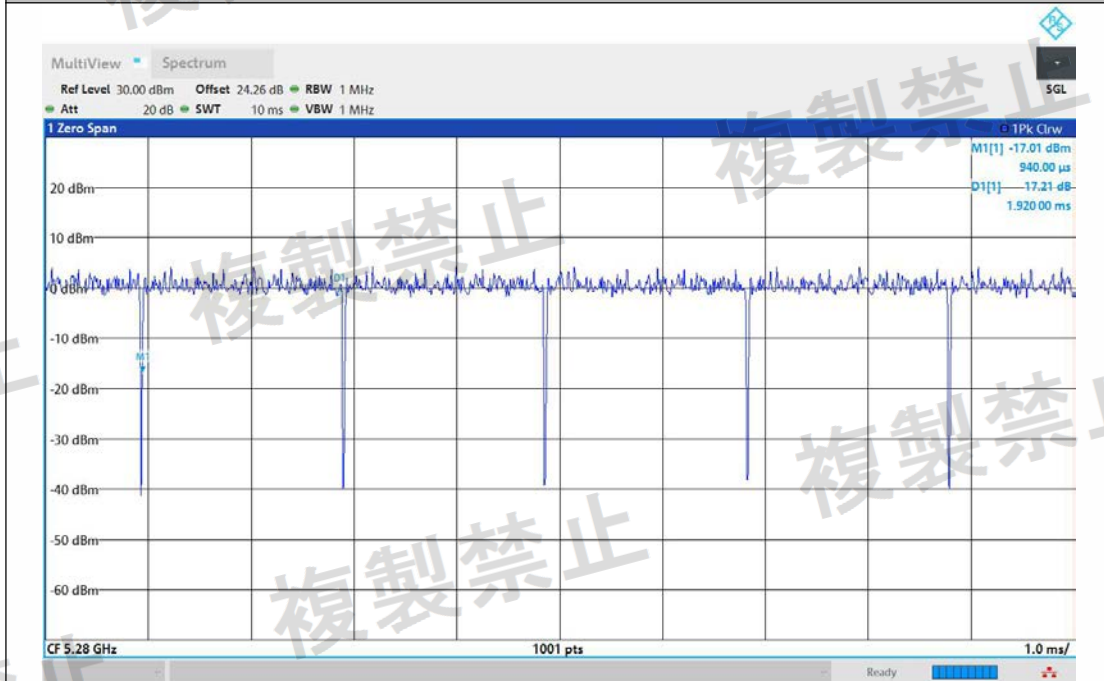


NTNV-11AC20MIMO-Ant2-5280-PASS

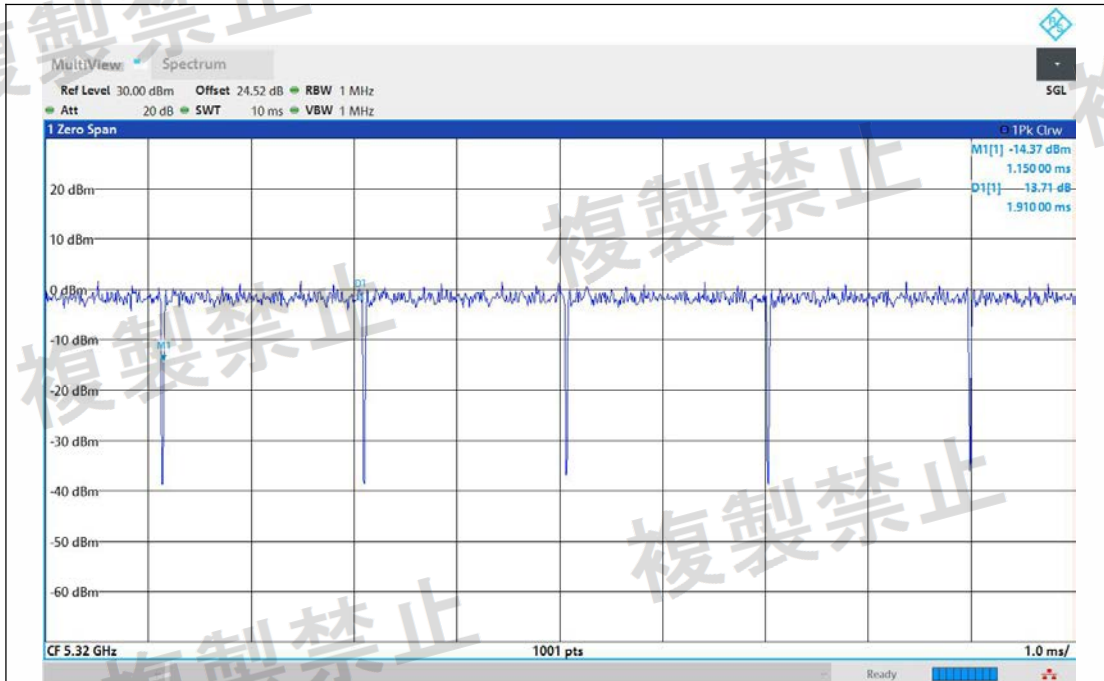


NTNV-11AC20MIMO-Ant1-5320-PASS

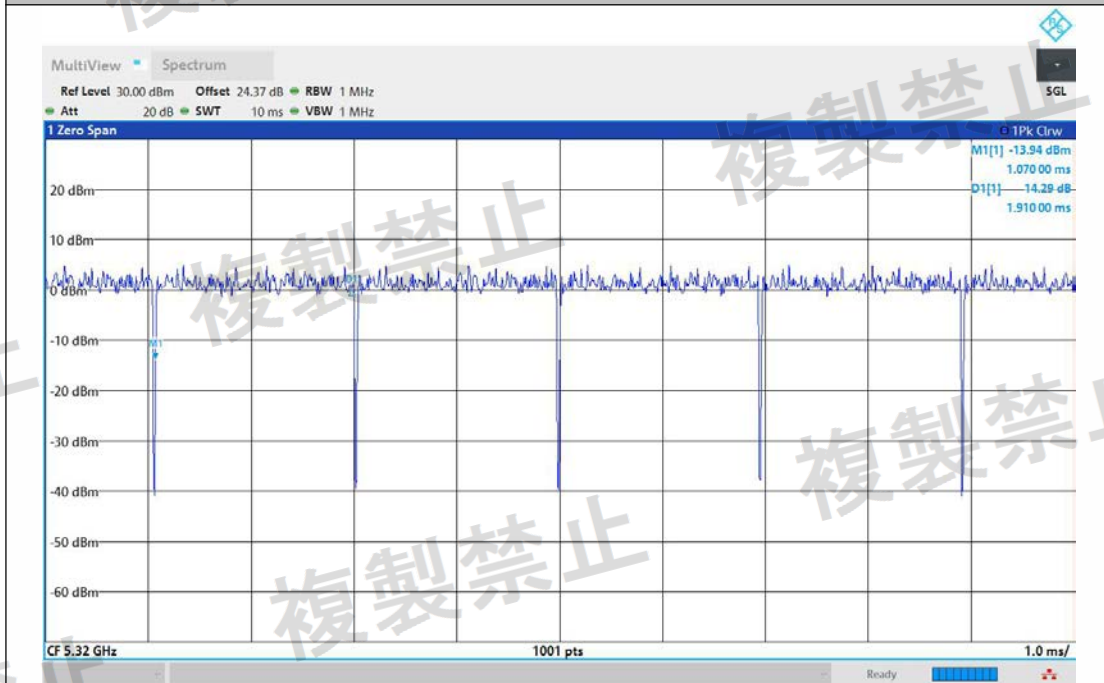


NTNV-11AC20MIMO-Ant2-5320-PASS

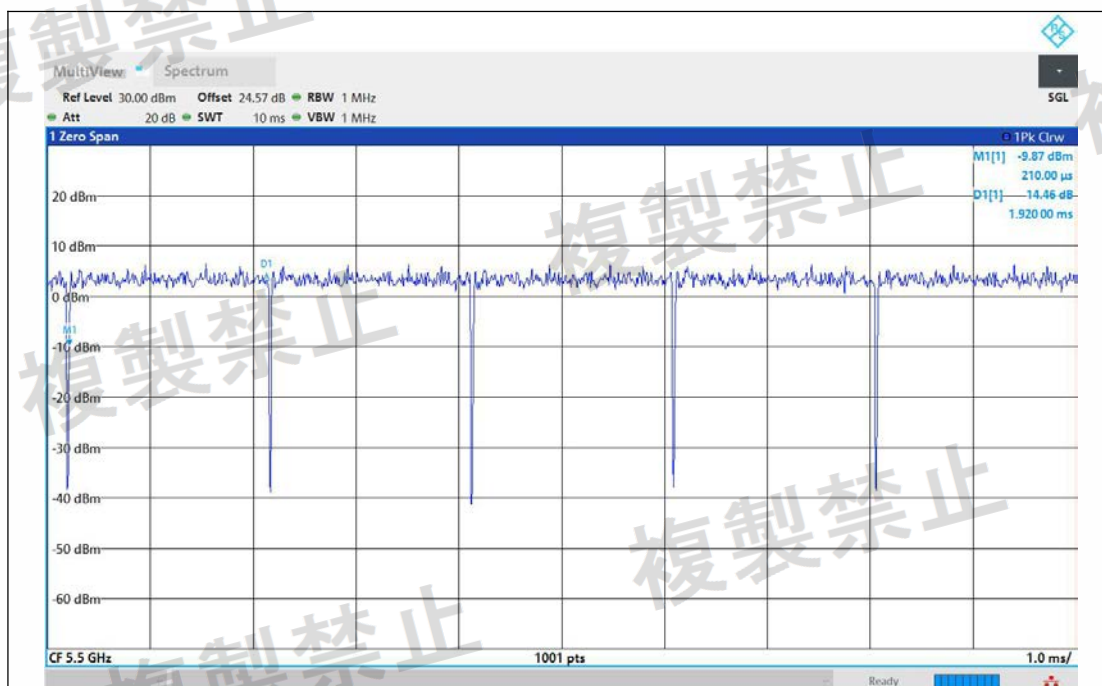


NTNV-11AC20MIMO-Ant1-5500-PASS

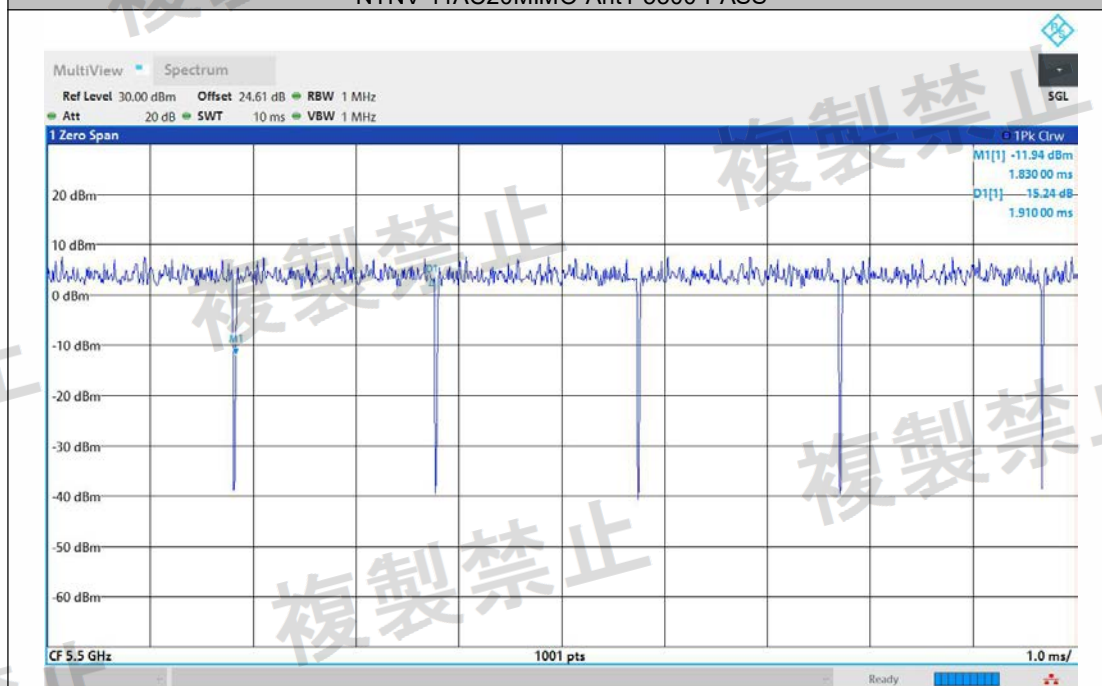


NTNV-11AC20MIMO-Ant2-5500-PASS

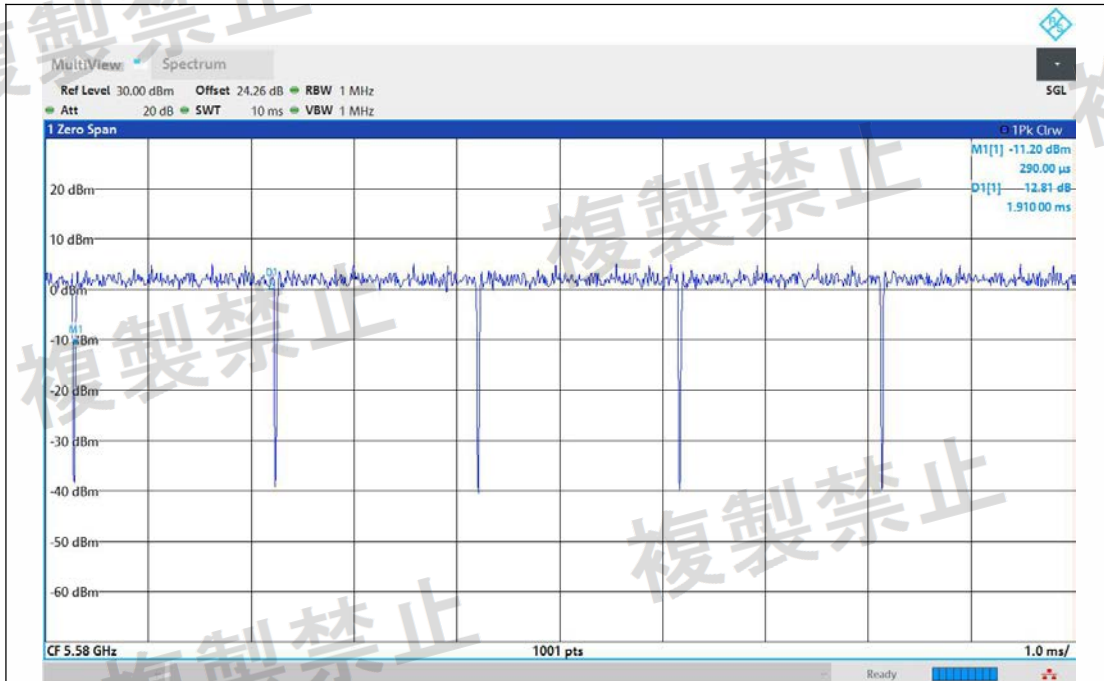


NTNV-11AC20MIMO-Ant1-5580-PASS

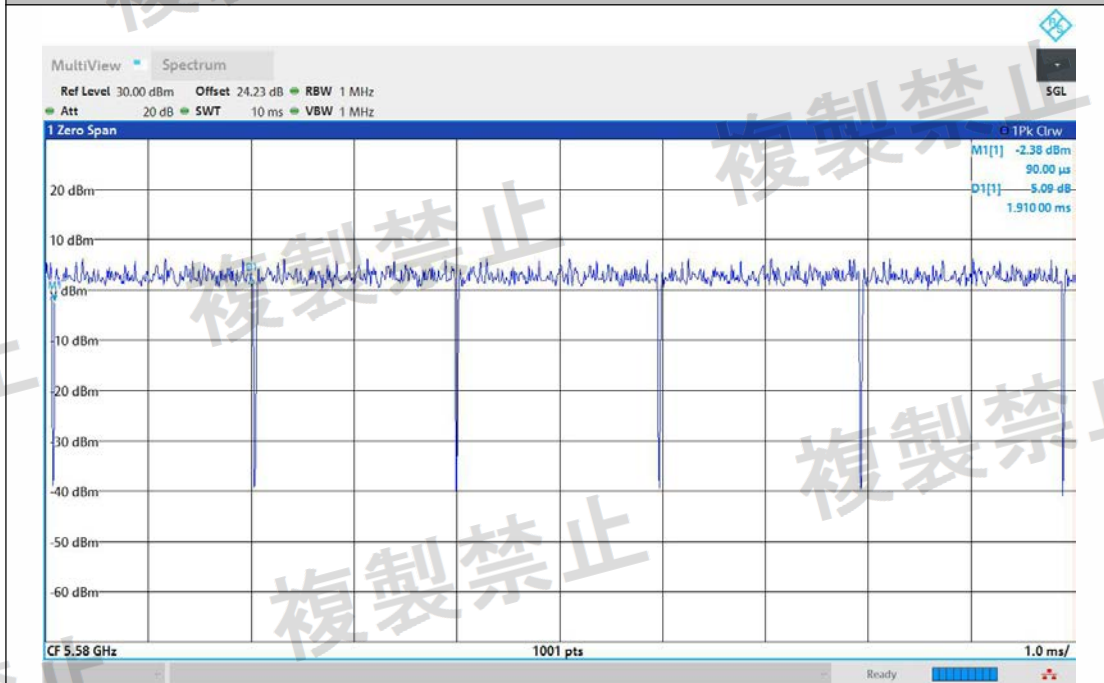


NTNV-11AC20MIMO-Ant2-5580-PASS

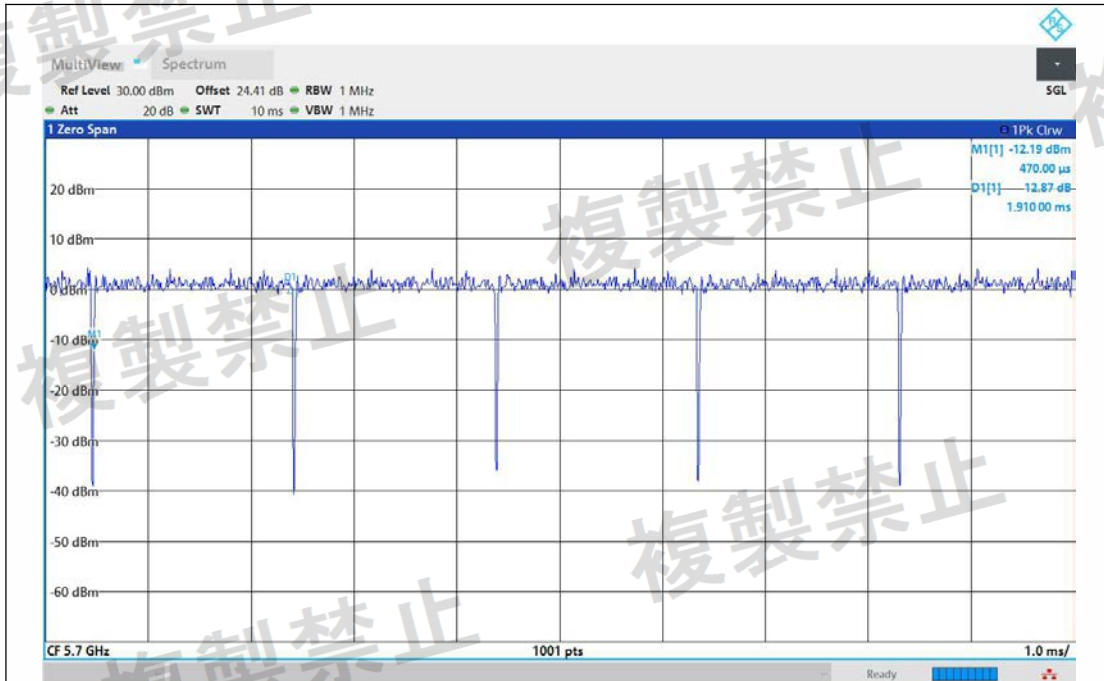


NTNV-11AC20MIMO-Ant1-5700-PASS

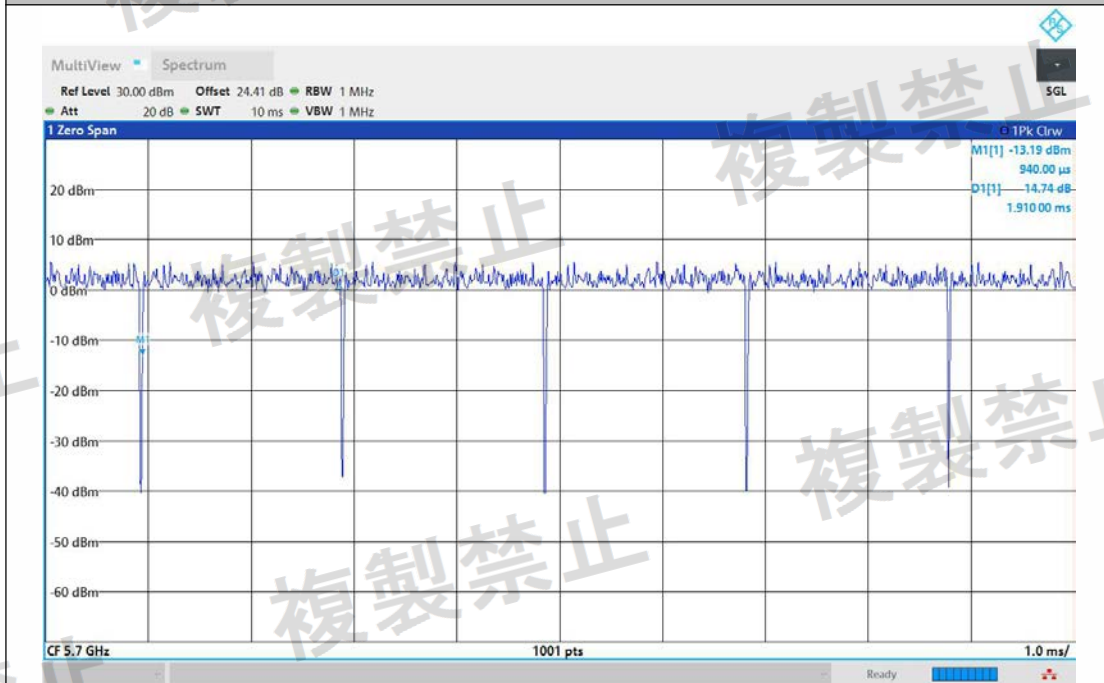


NTNV-11AC20MIMO-Ant2-5700-PASS

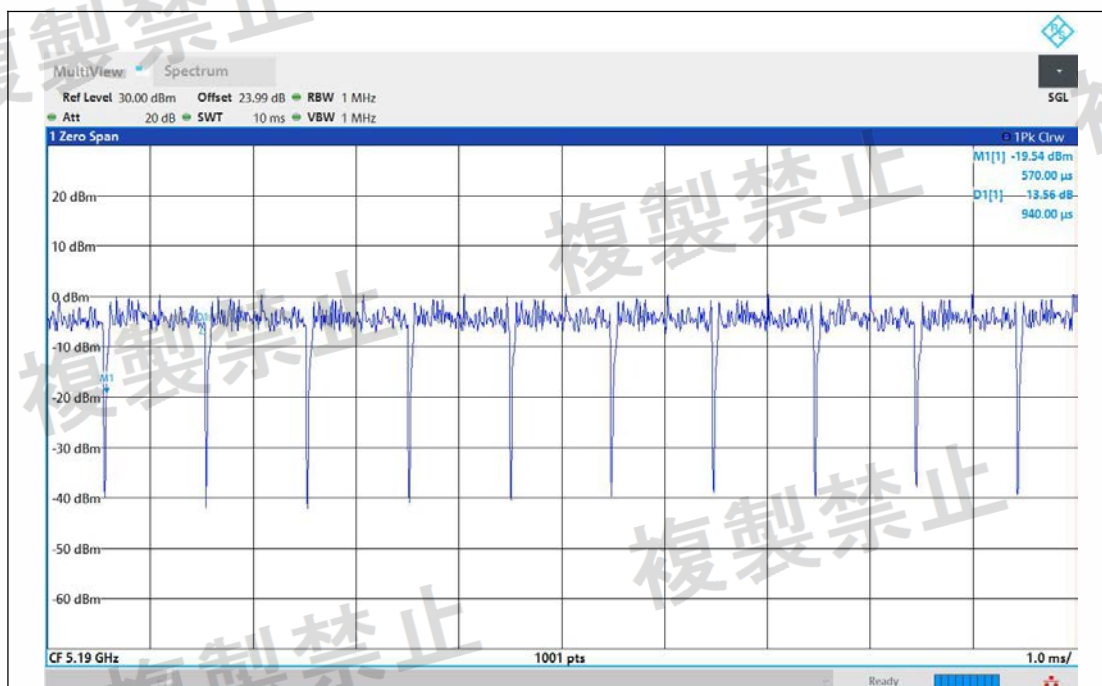


NTNV-11AC40MIMO-Ant1-5190-PASS

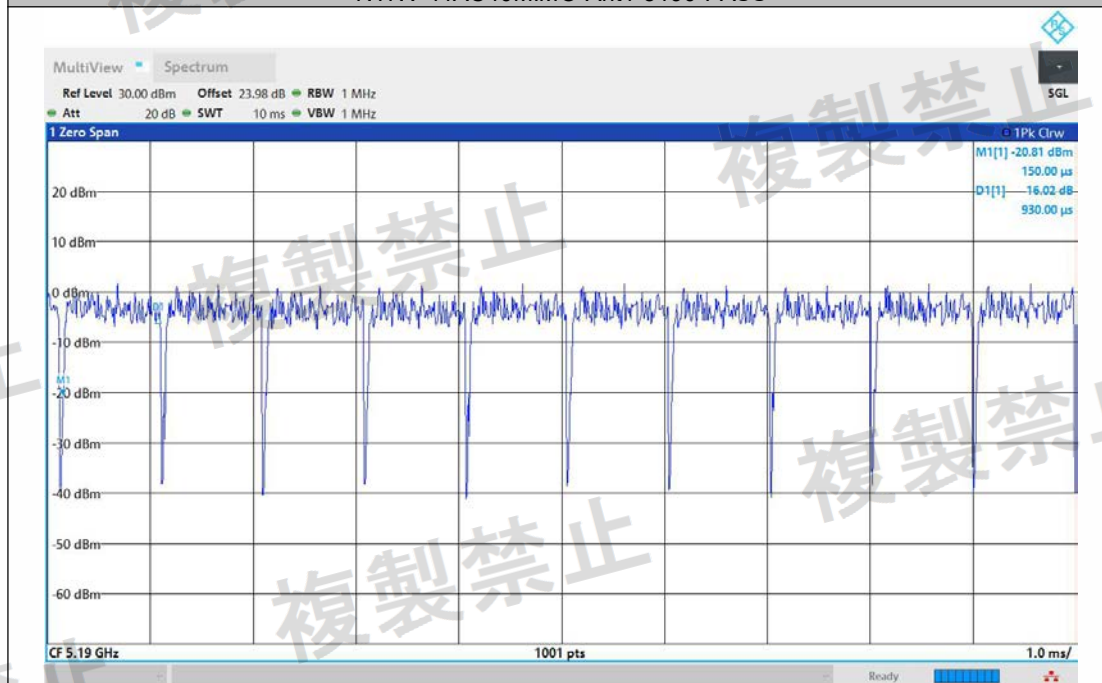


NTNV-11AC40MIMO-Ant2-5190-PASS

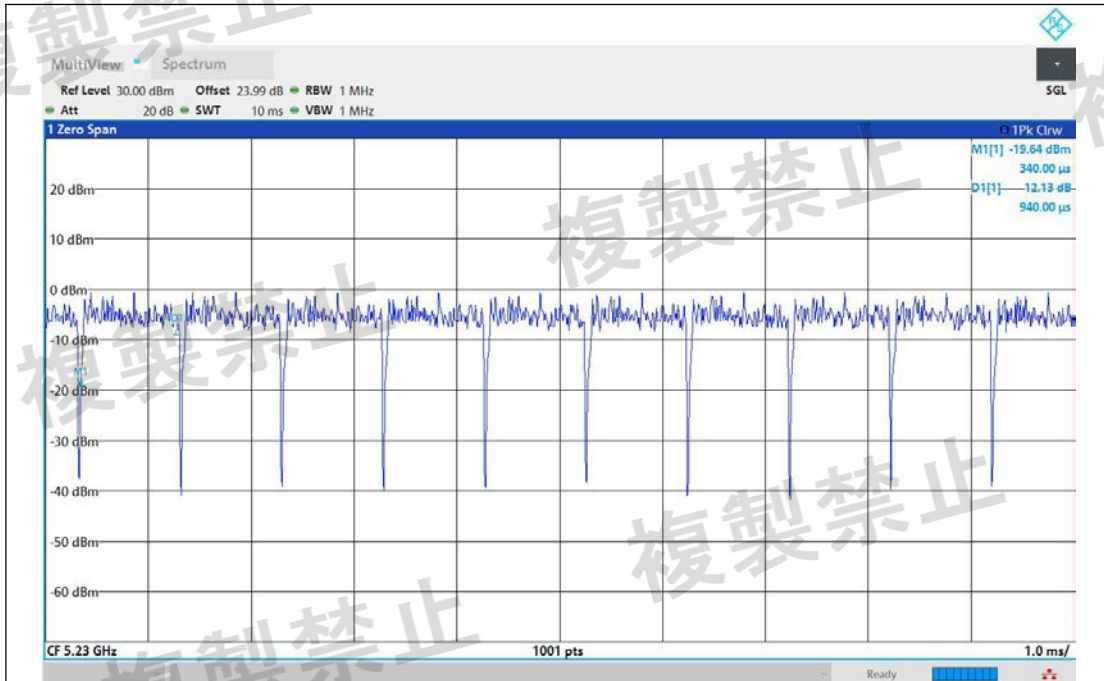


NTNV-11AC40MIMO-Ant1-5230-PASS

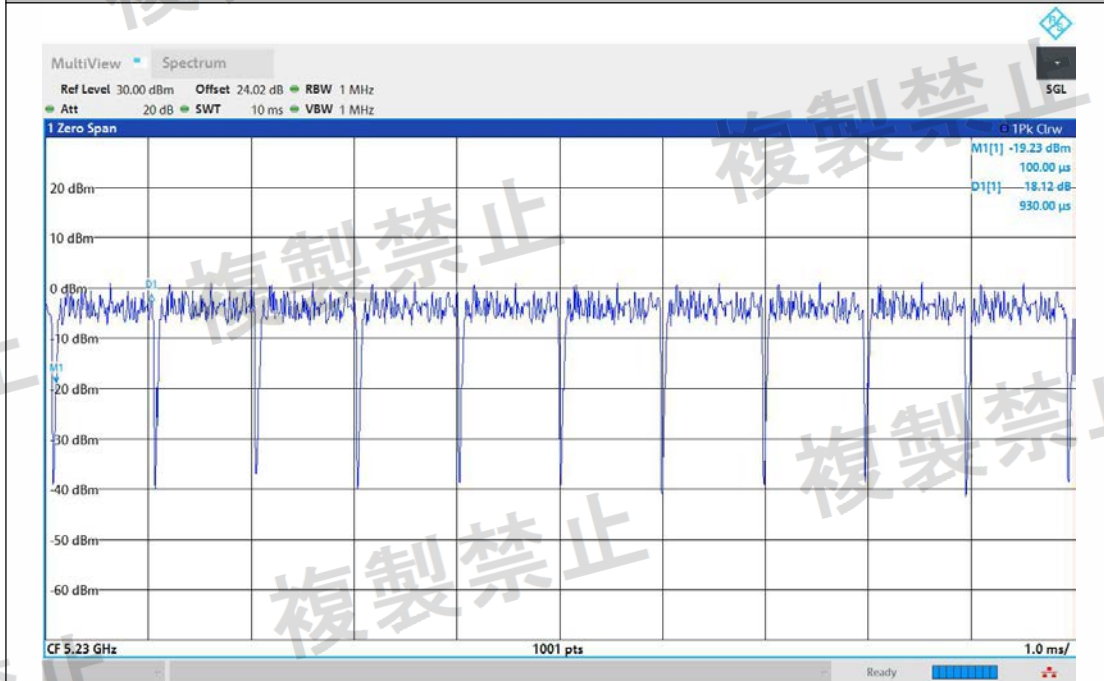


NTNV-11AC40MIMO-Ant2-5230-PASS

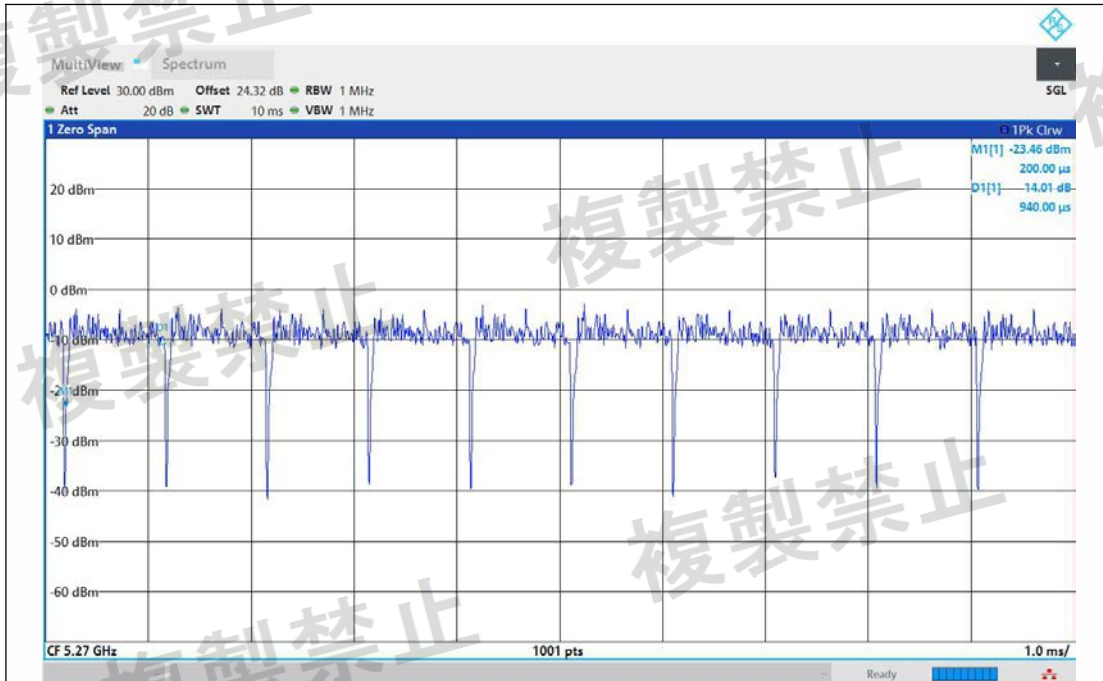


NTNV-11AC40MIMO-Ant1-5270-PASS

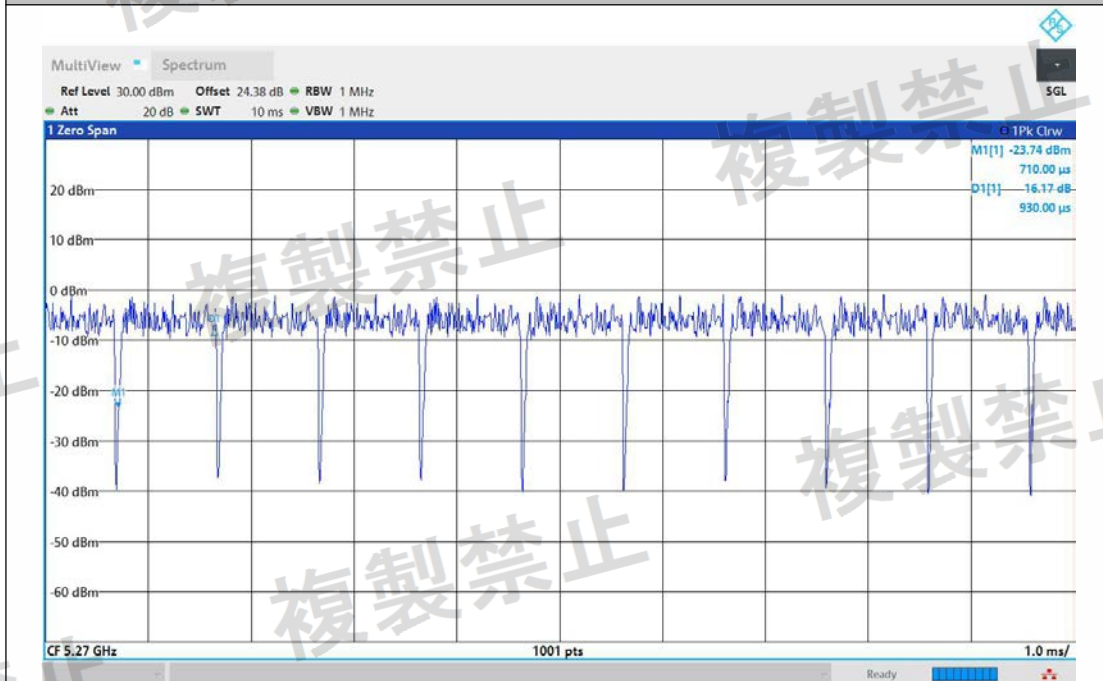


NTNV-11AC40MIMO-Ant2-5270-PASS

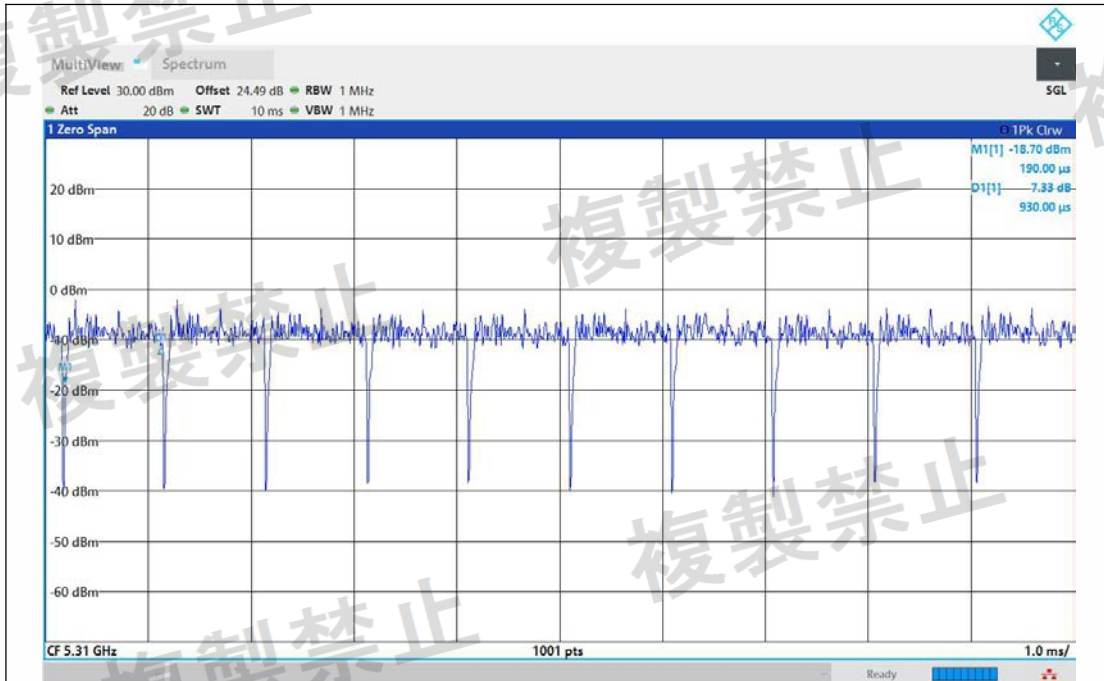


NTNV-11AC40MIMO-Ant1-5310-PASS

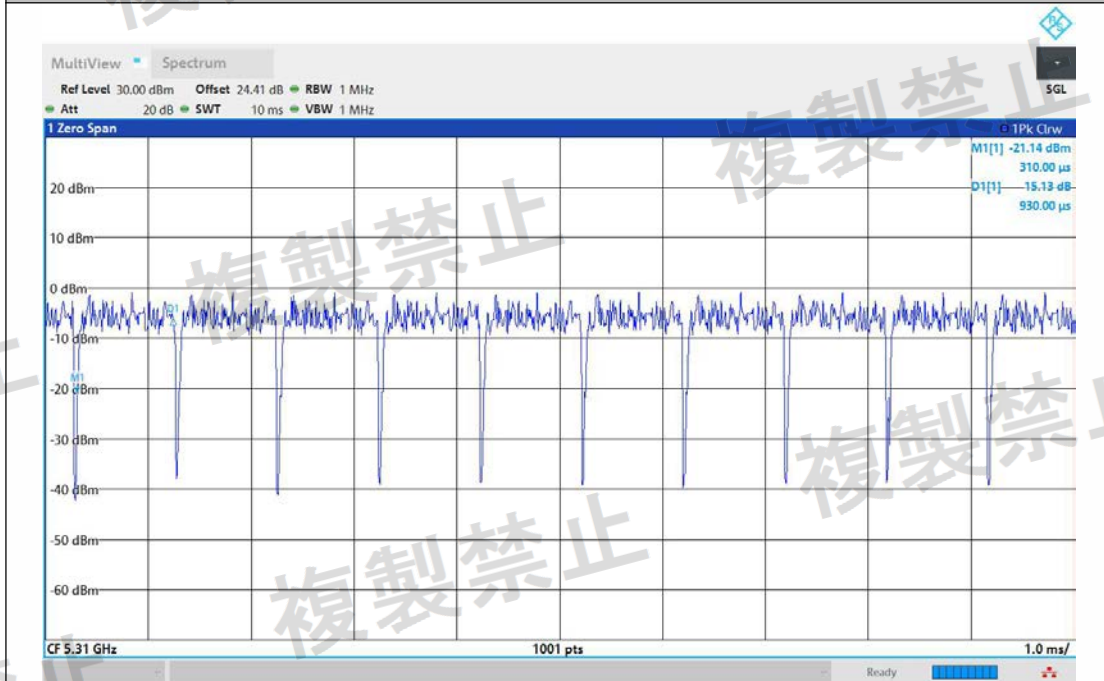


NTNV-11AC40MIMO-Ant2-5310-PASS

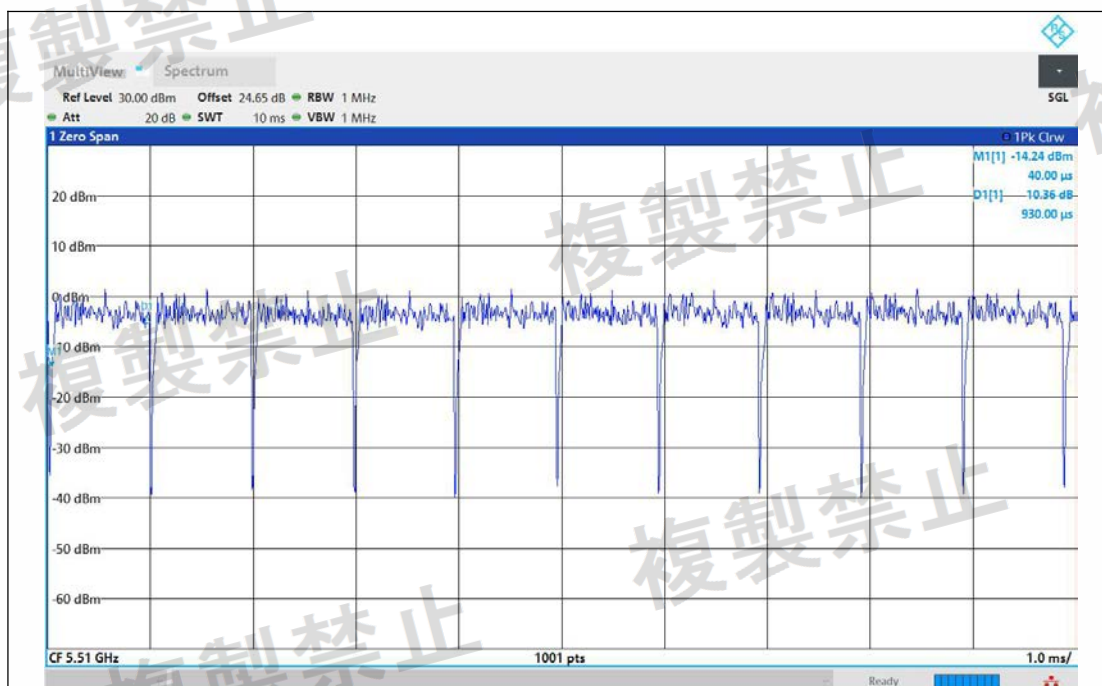


NTNV-11AC40MIMO-Ant1-5510-PASS

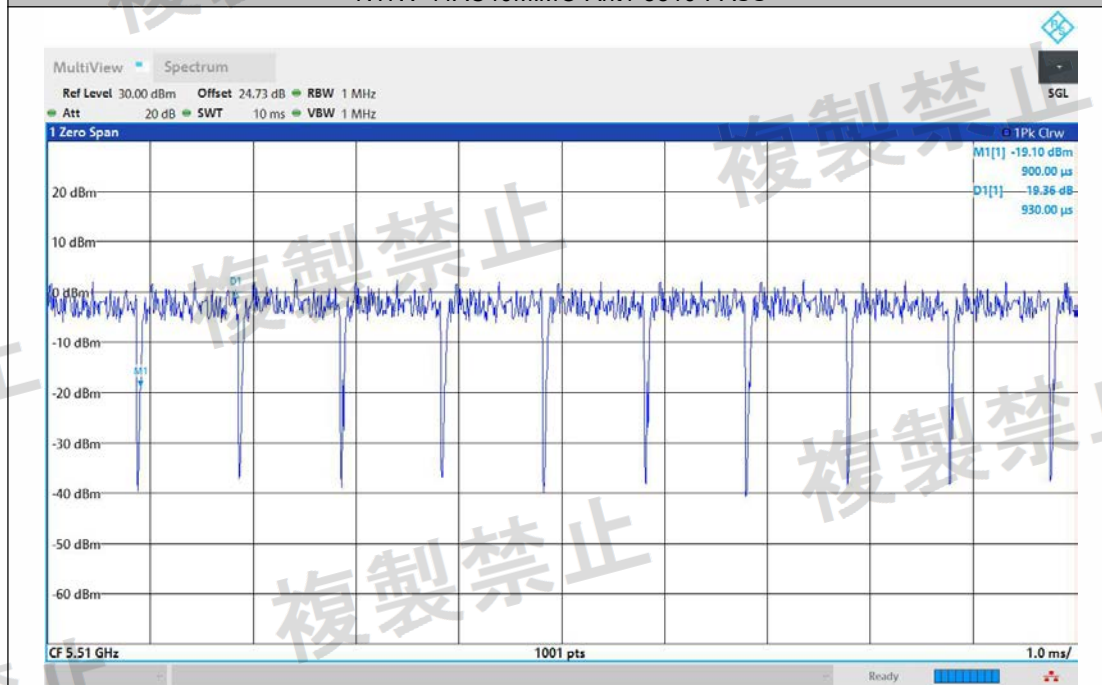


NTNV-11AC40MIMO-Ant2-5510-PASS

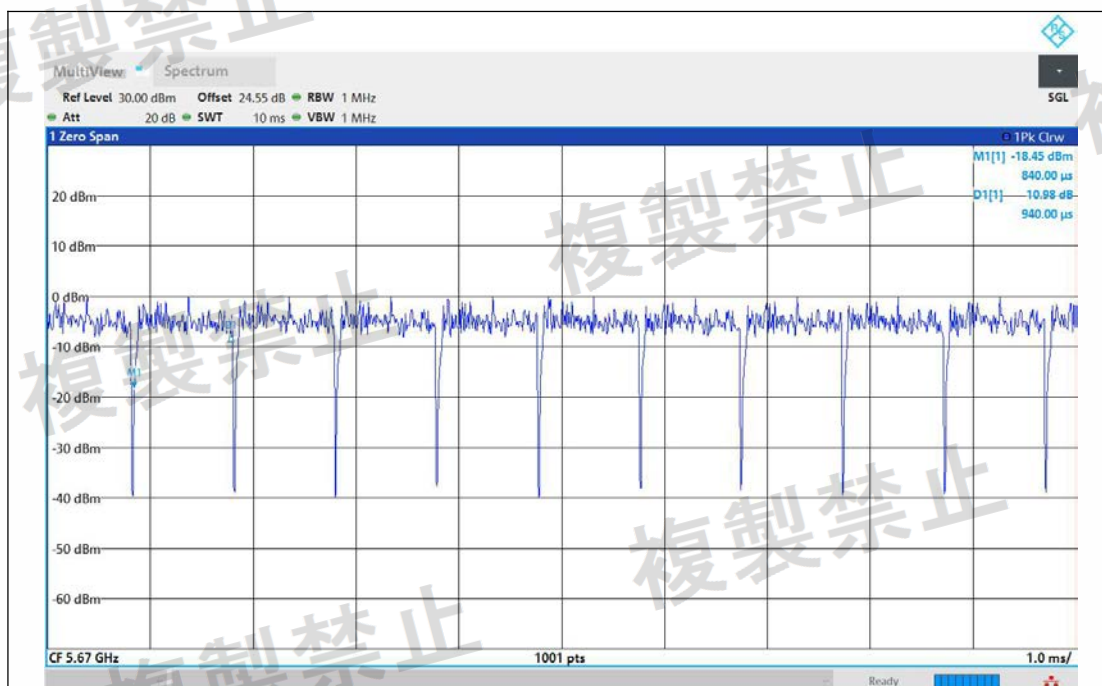


NTNV-11AC40MIMO-Ant1-5670-PASS

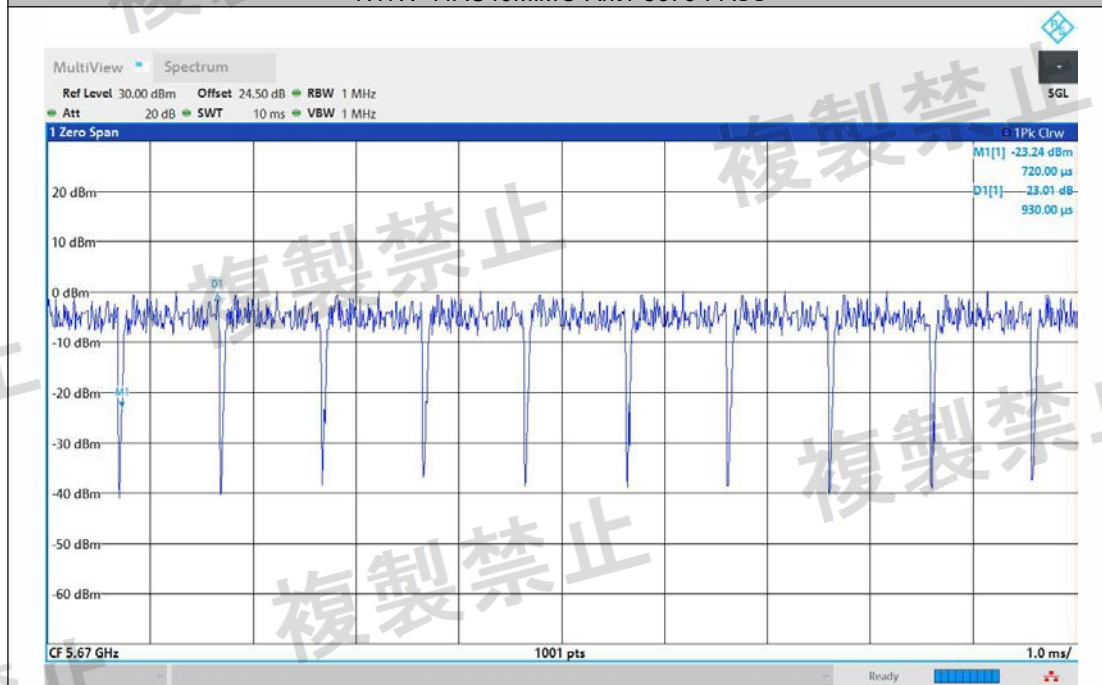


NTNV-11AC40MIMO-Ant2-5670-PASS

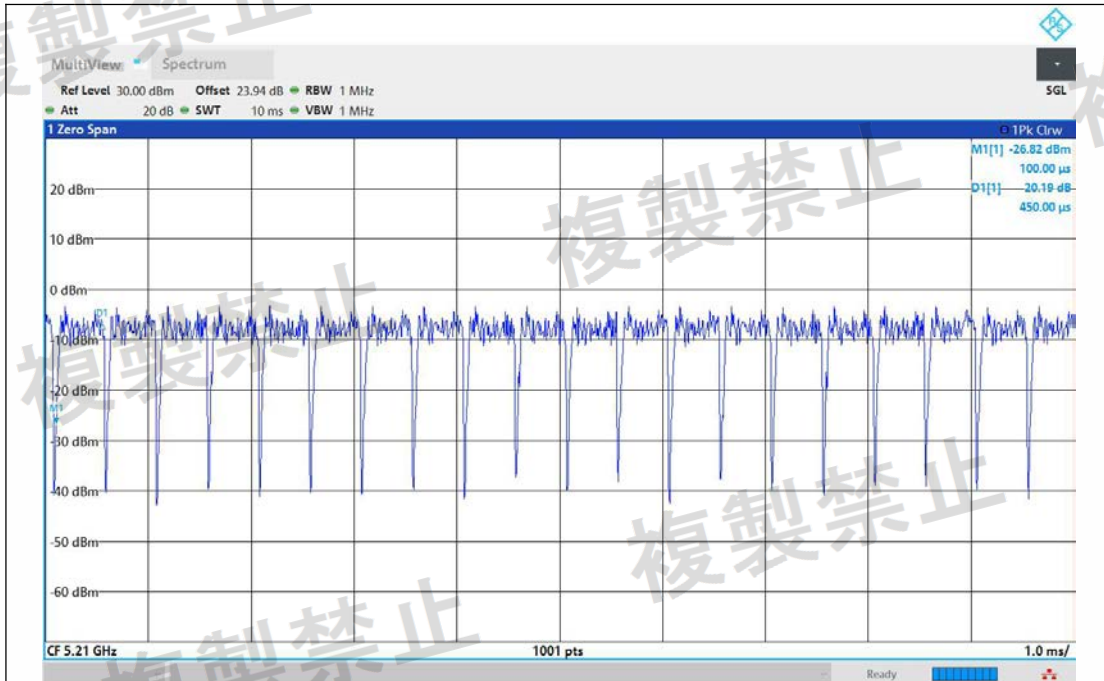


NTNV-11AC80MIMO-Ant1-5210-PASS

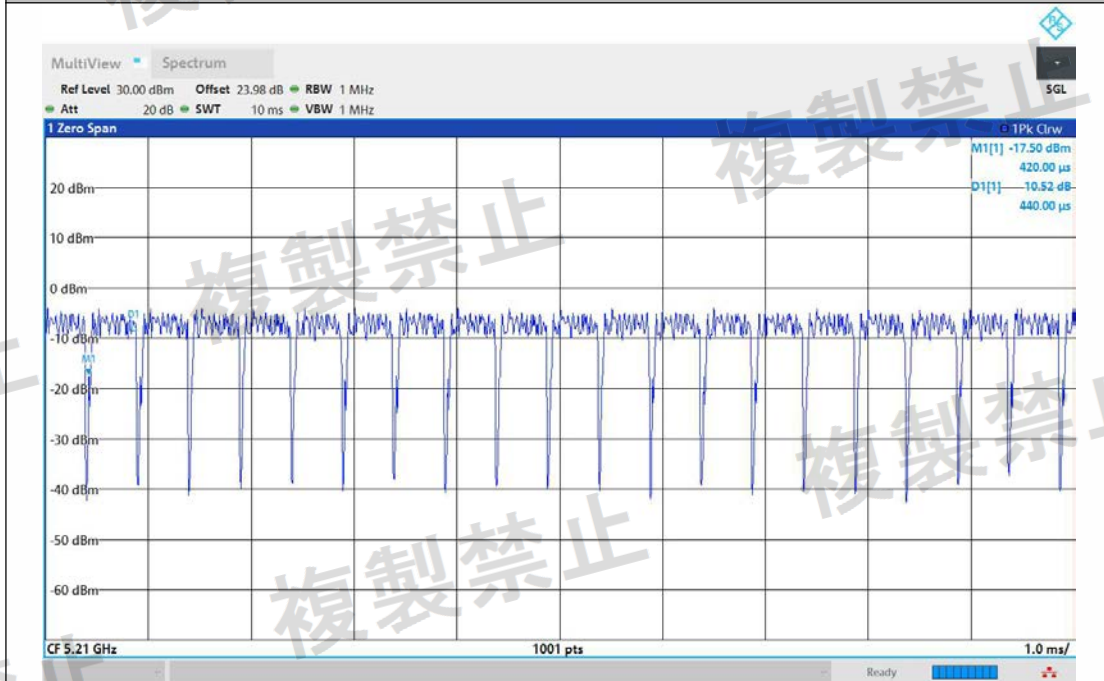


NTNV-11AC80MIMO-Ant2-5210-PASS

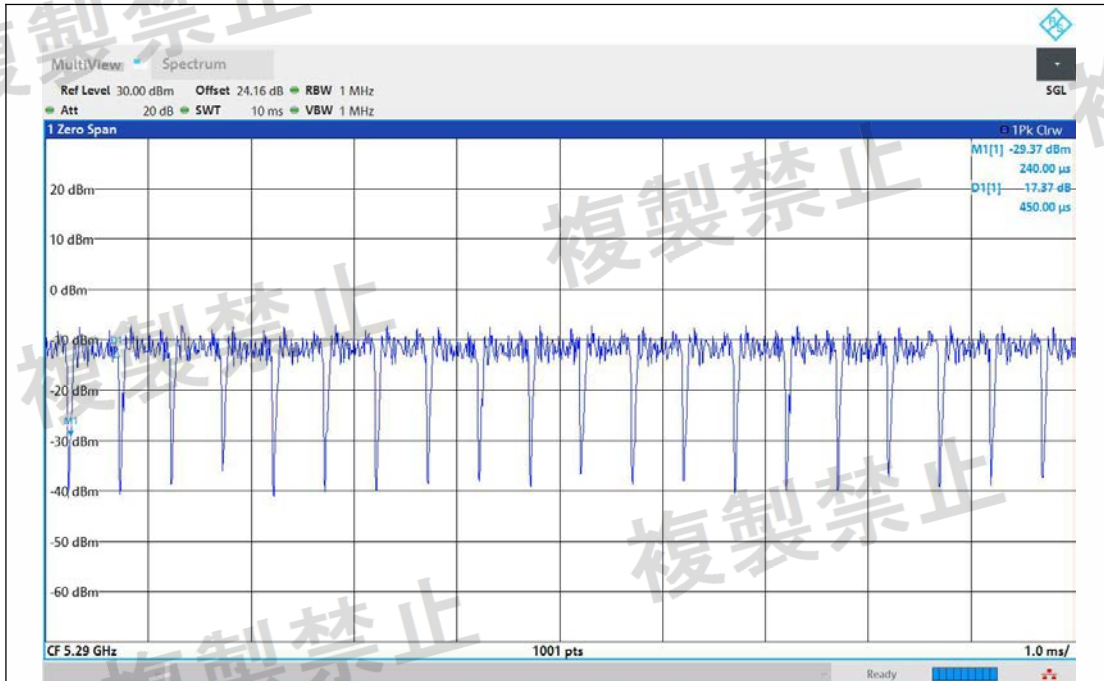


NTNV-11AC80MIMO-Ant1-5290-PASS

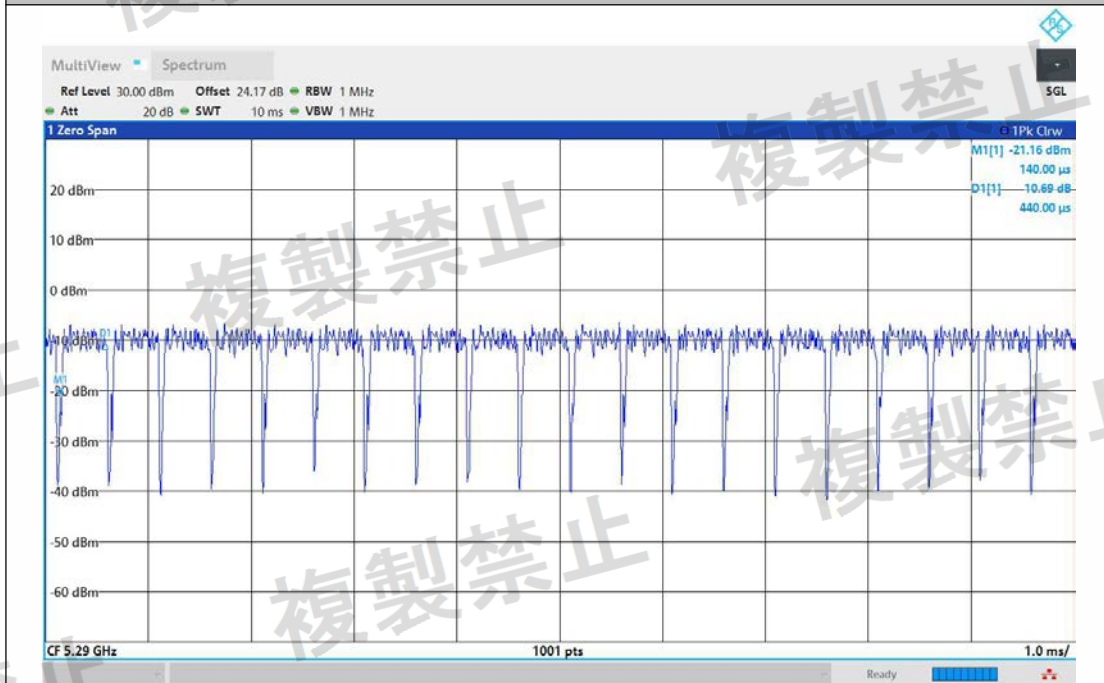


NTNV-11AC80MIMO-Ant2-5290-PASS

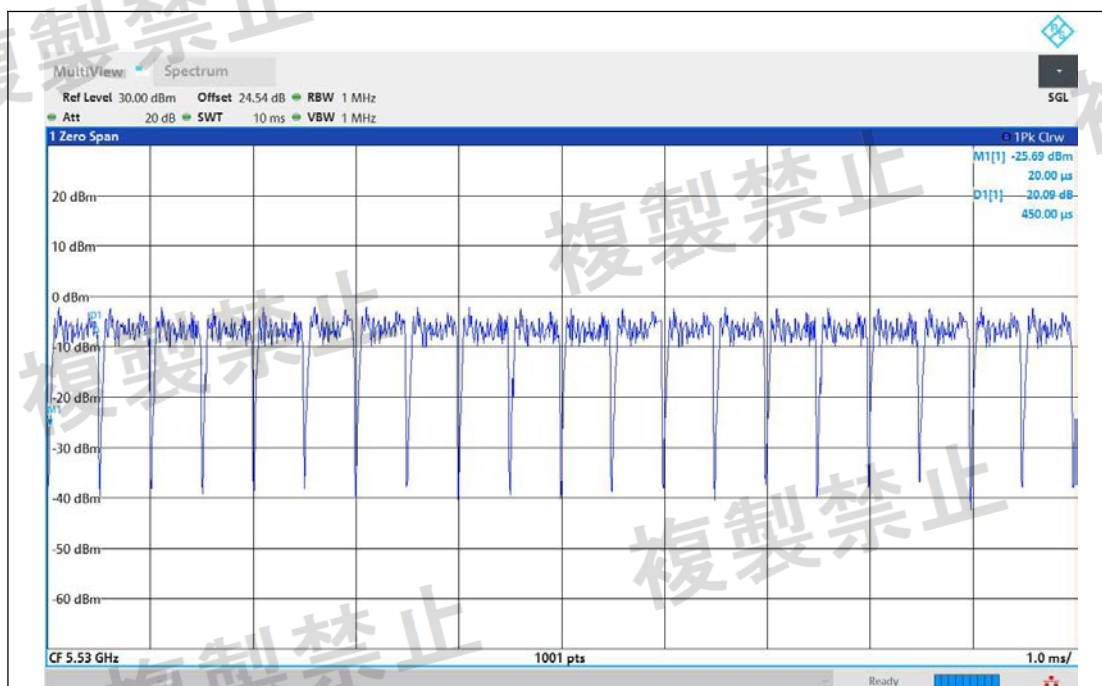


NTNV-11AC80MIMO-Ant1-5530-PASS

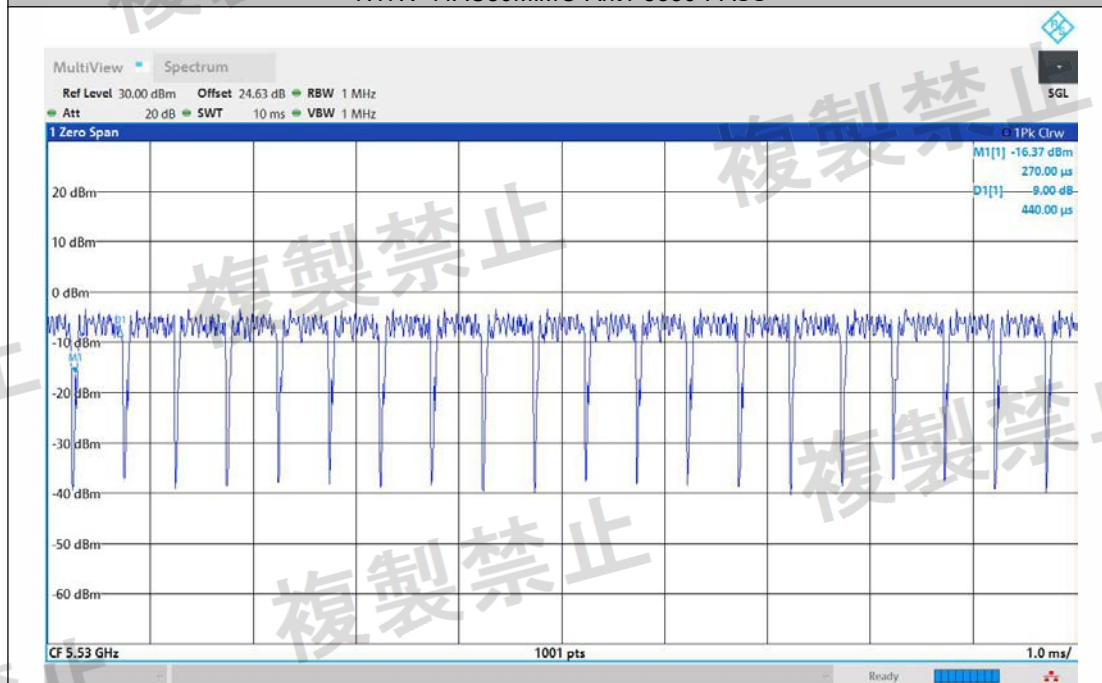


NTNV-11AC80MIMO-Ant2-5530-PASS

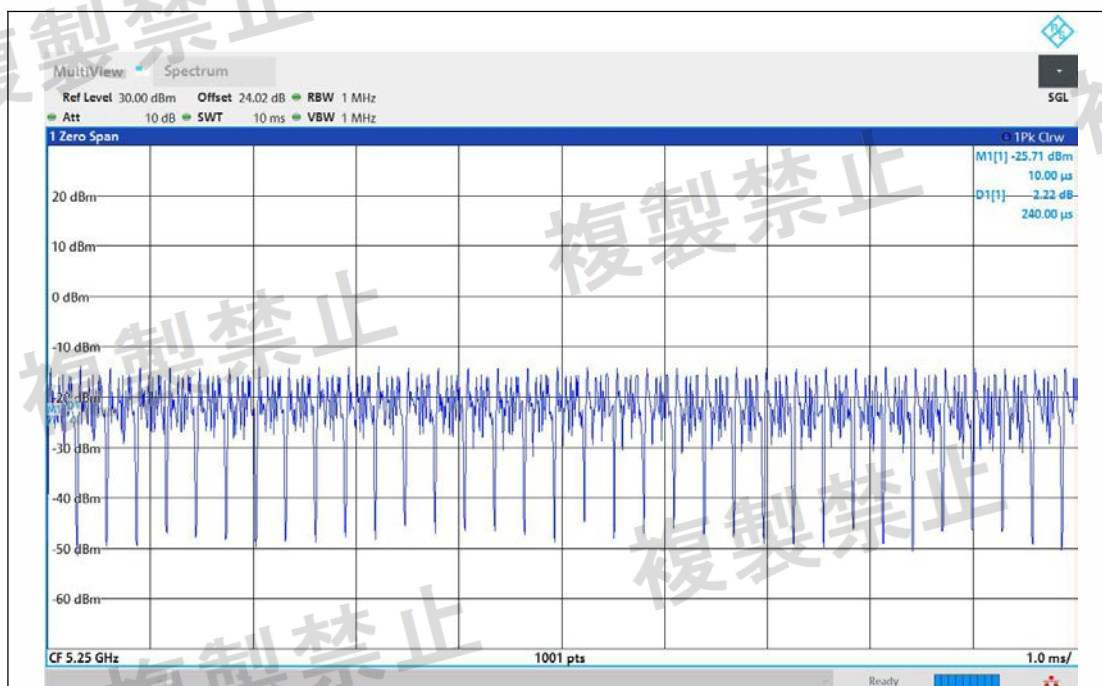


NTNV-11AC160MIMO-Ant1-5250-PASS

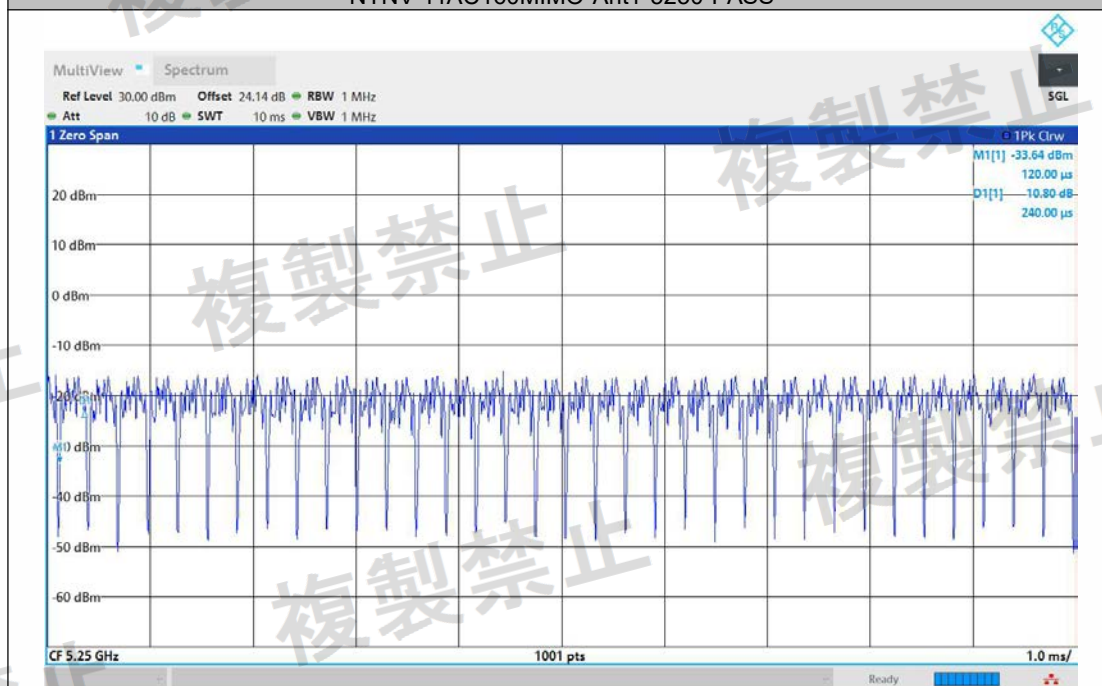


NTNV-11AC160MIMO-Ant2-5250-PASS

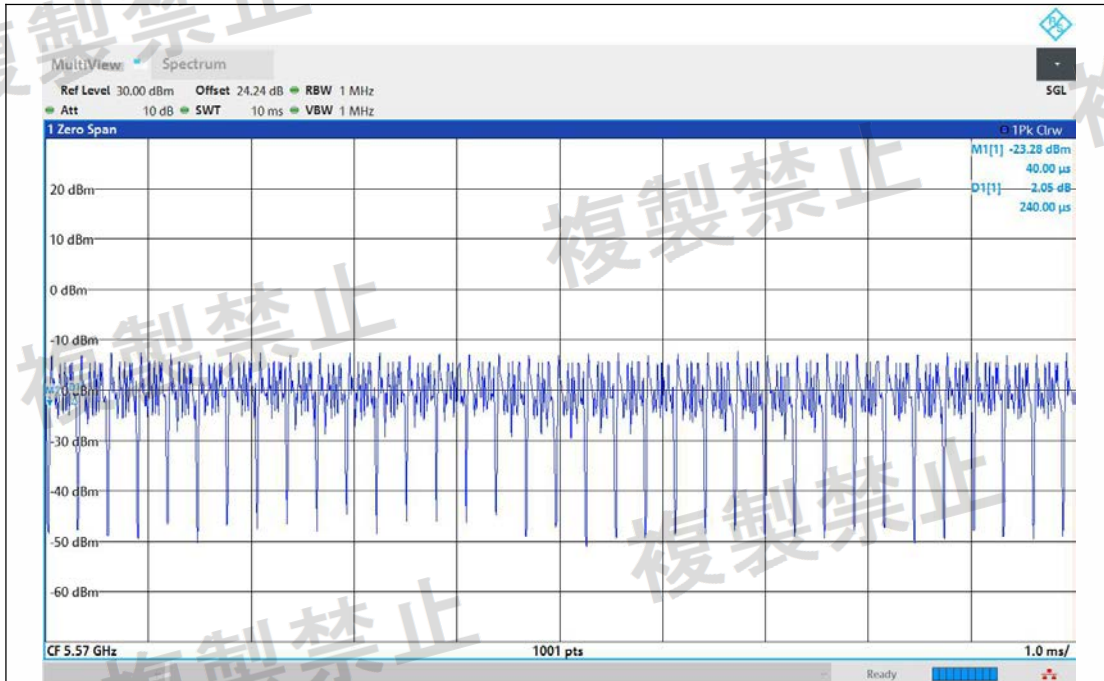


NTNV-11AC160MIMO-Ant1-5570-PASS

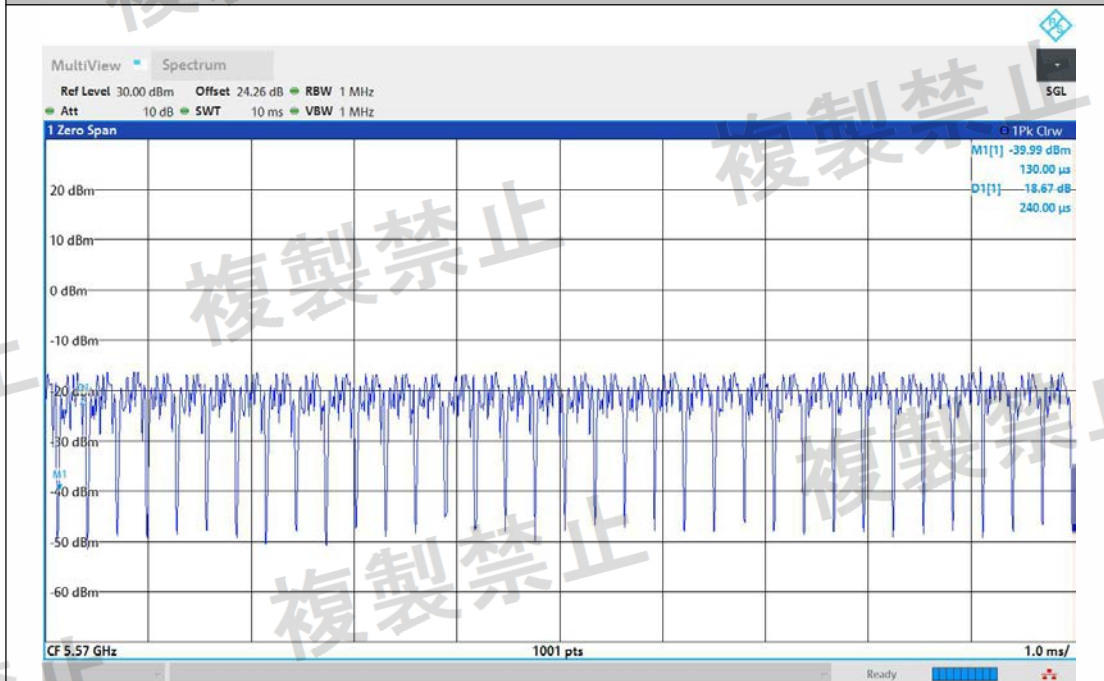


NTNV-11AC160MIMO-Ant2-5570-PASS

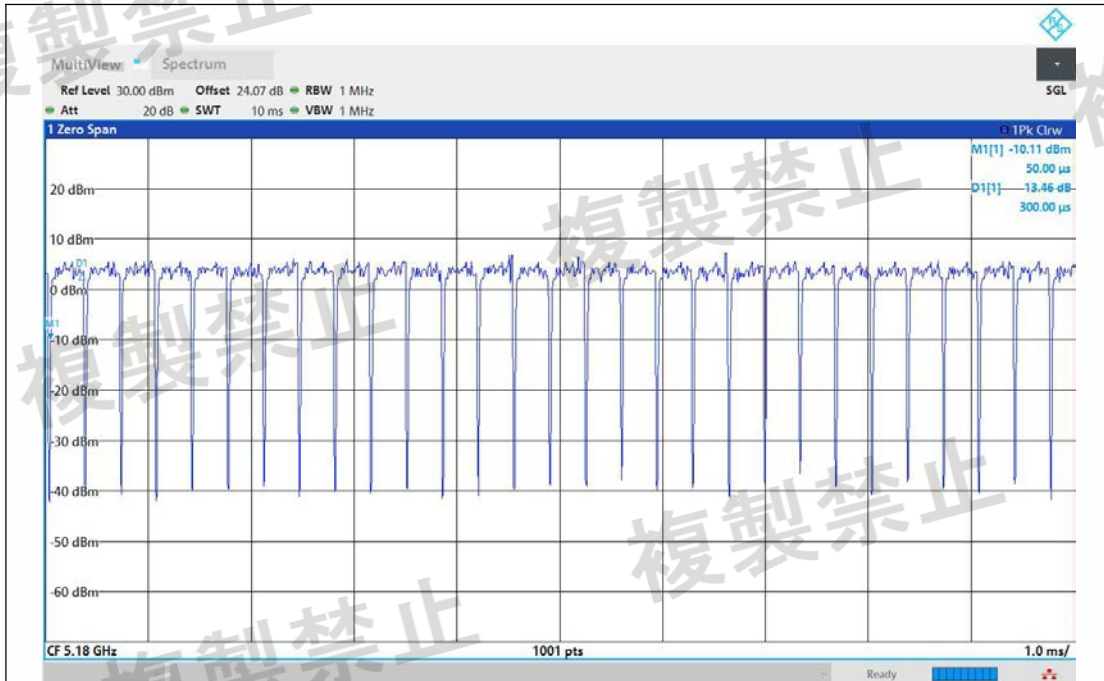


NTNV-11AX20MIMO-Ant1-5180-PASS

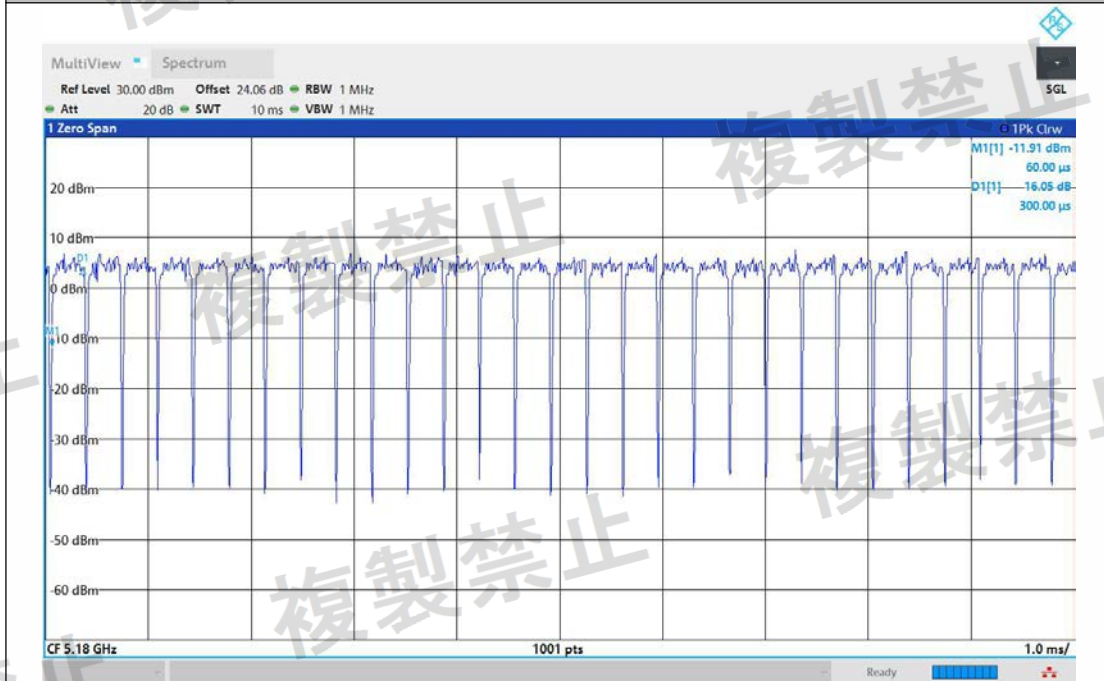


NTNV-11AX20MIMO-Ant2-5180-PASS

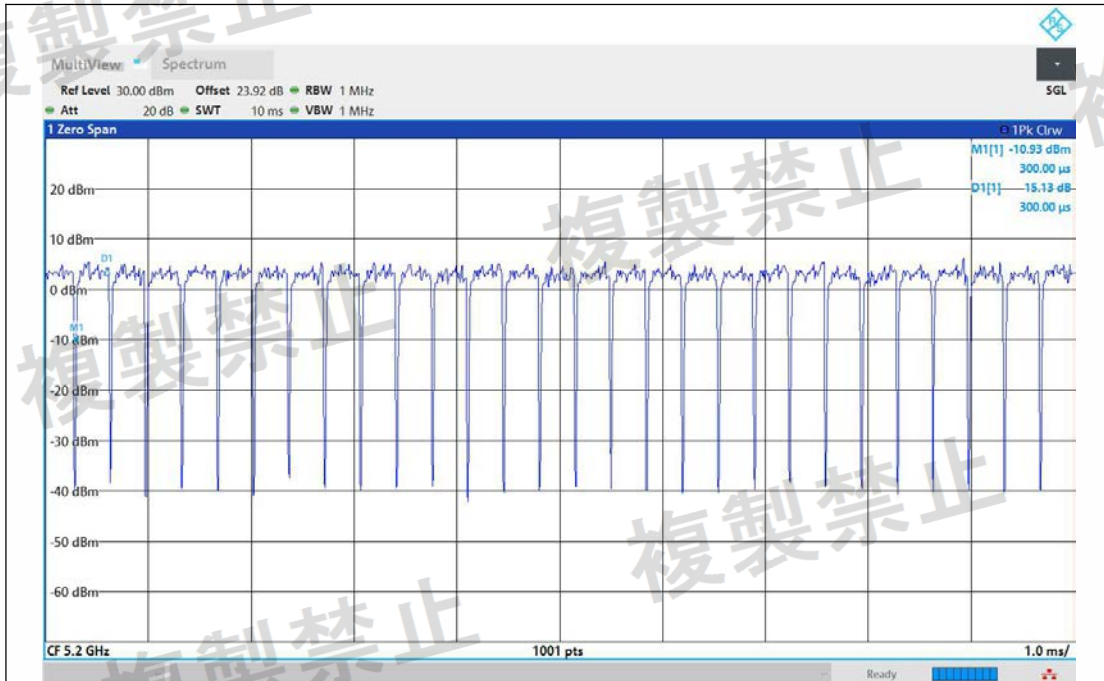


NTNV-11AX20MIMO-Ant1-5200-PASS

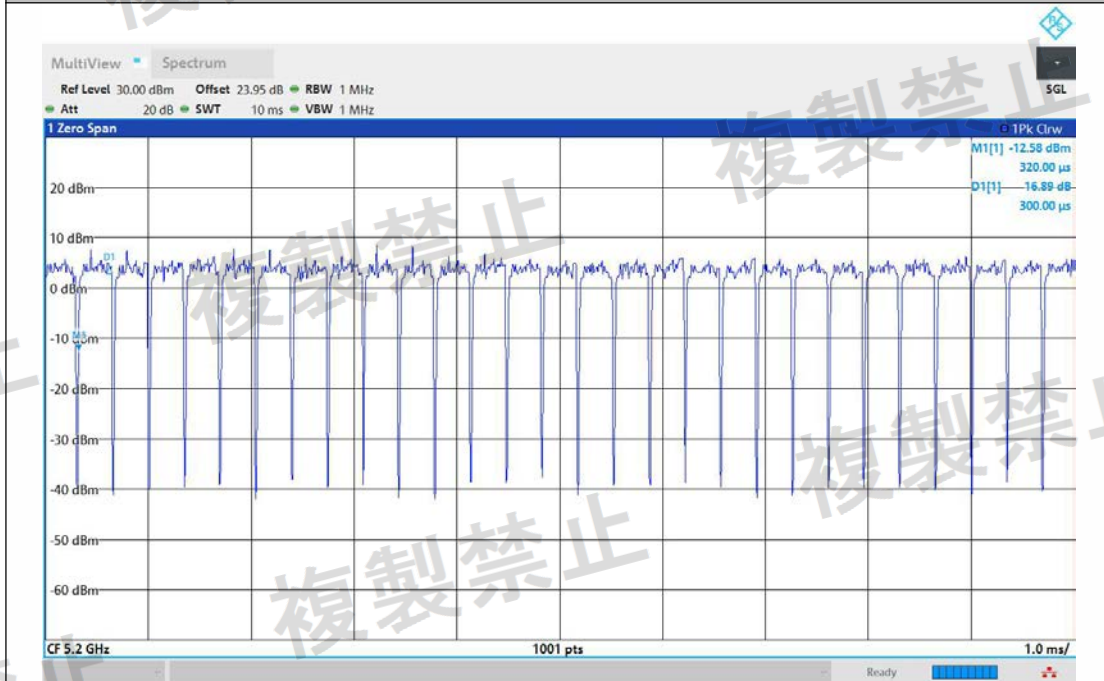


NTNV-11AX20MIMO-Ant2-5200-PASS

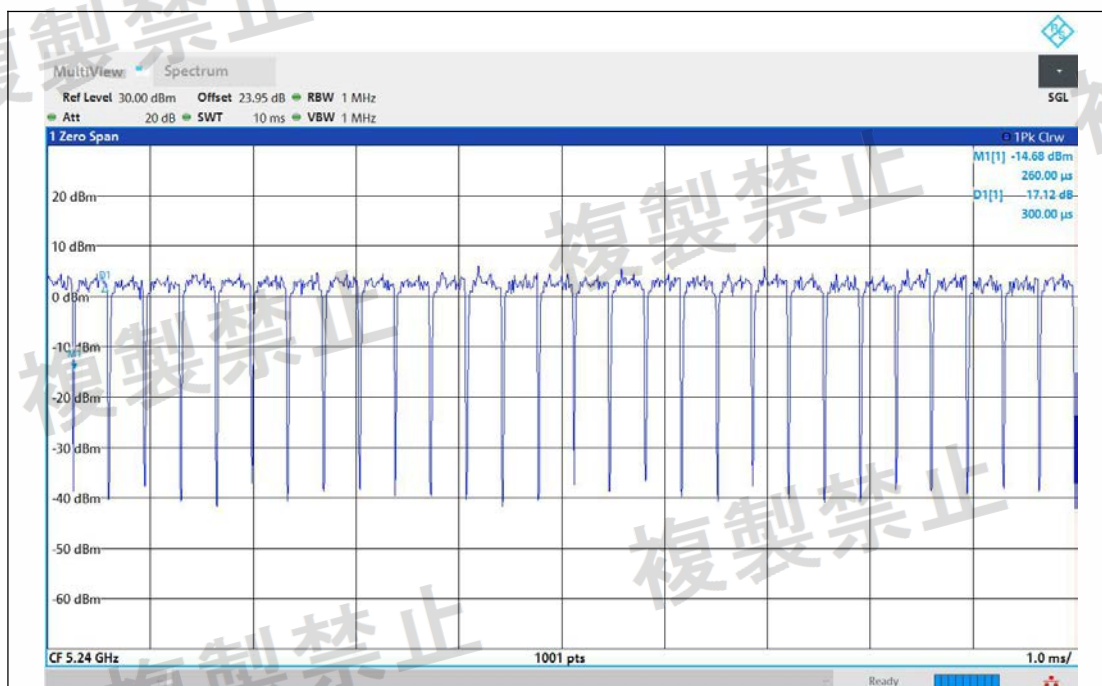


NTNV-11AX20MIMO-Ant1-5240-PASS

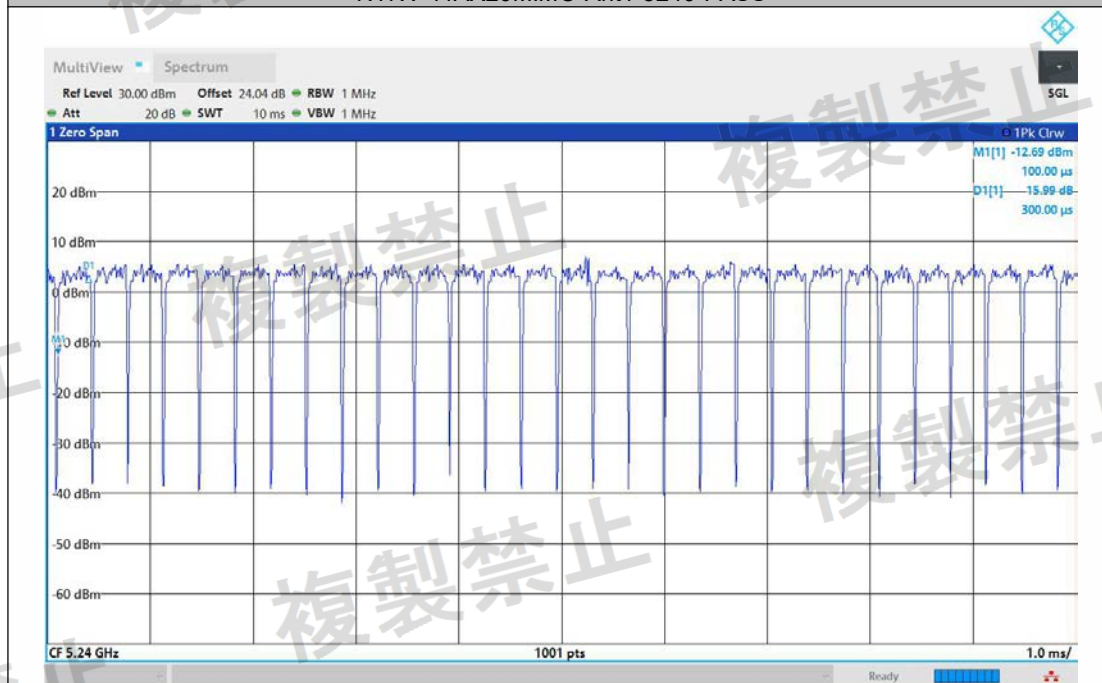


NTNV-11AX20MIMO-Ant2-5240-PASS

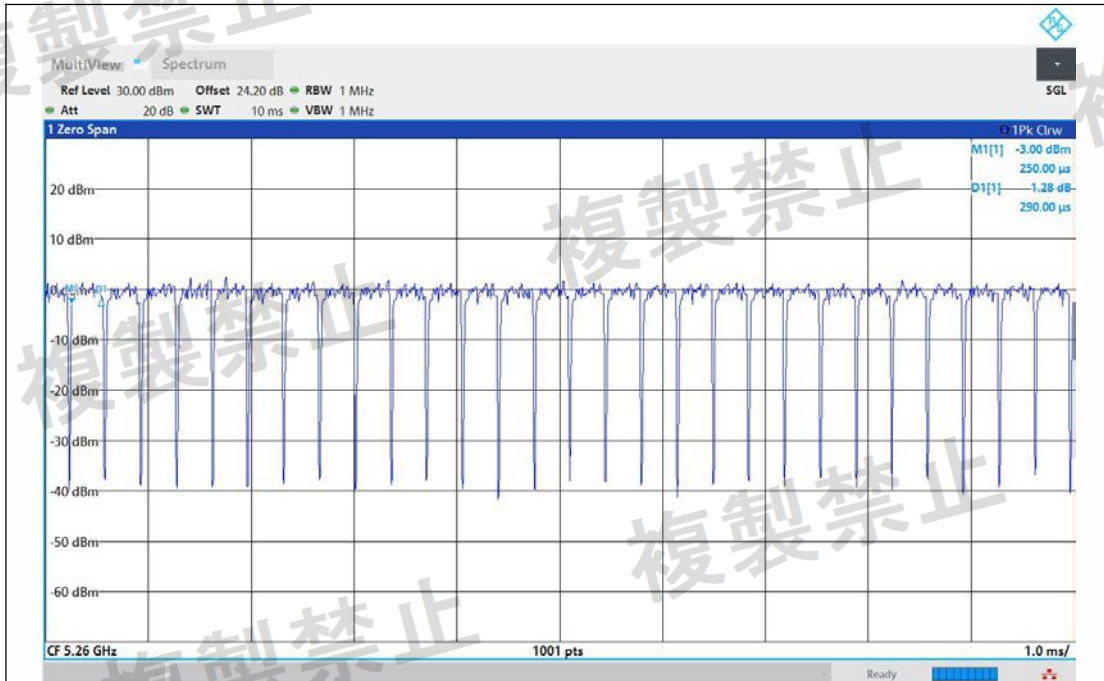


NTNV-11AX20MIMO-Ant1-5260-PASS

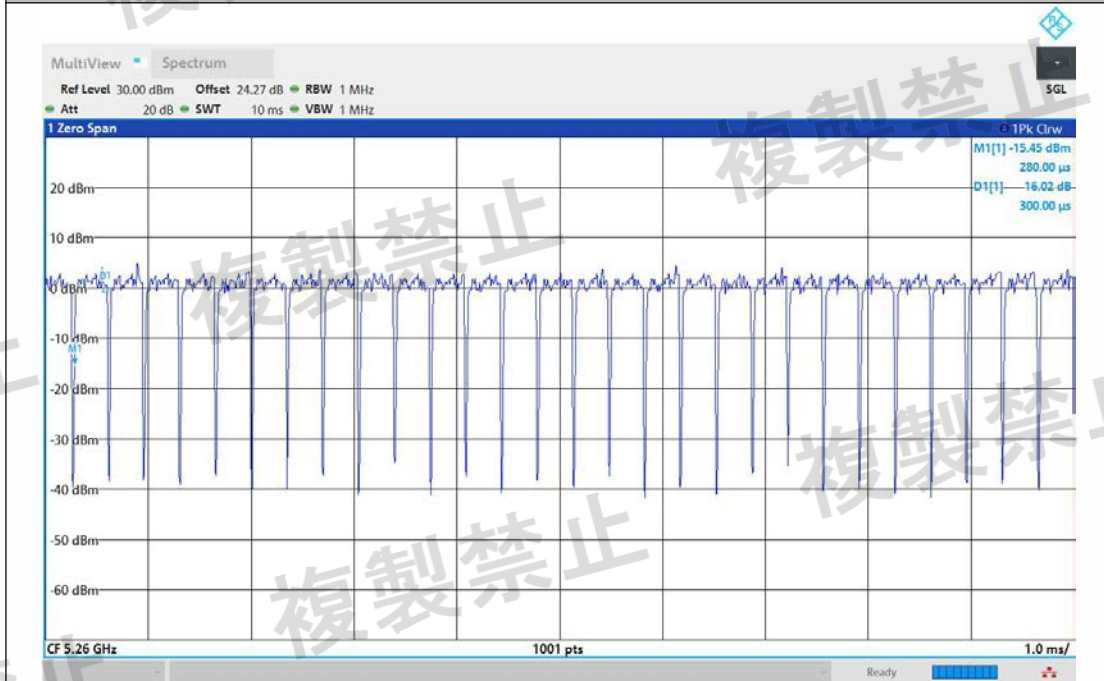


NTNV-11AX20MIMO-Ant2-5260-PASS

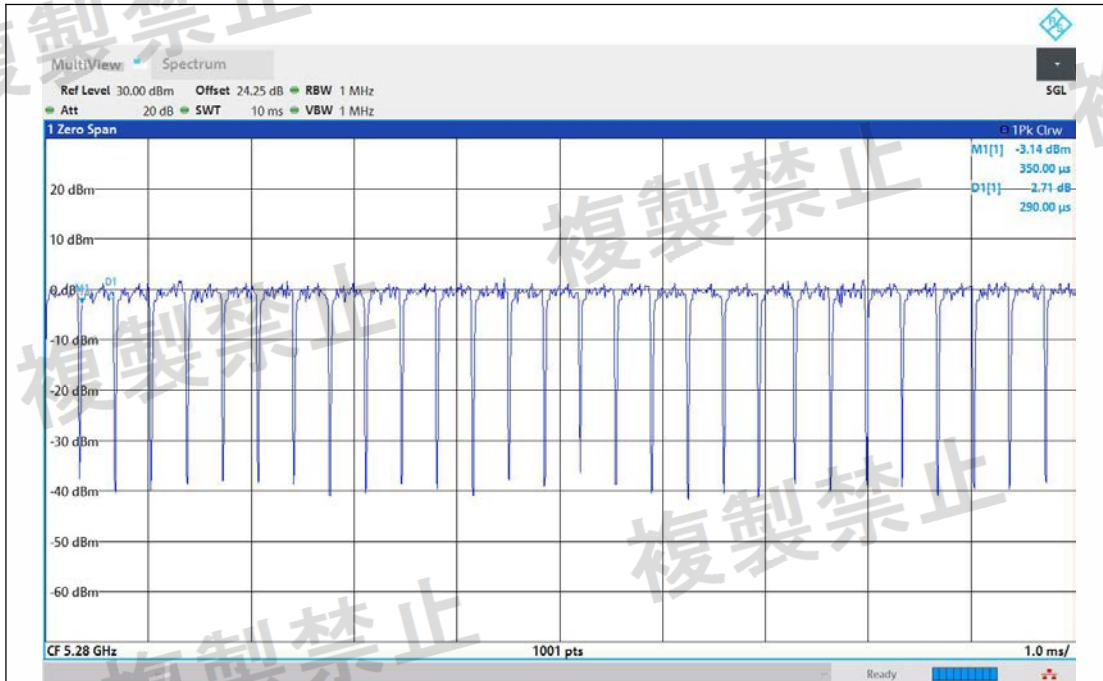


NTNV-11AX20MIMO-Ant1-5280-PASS

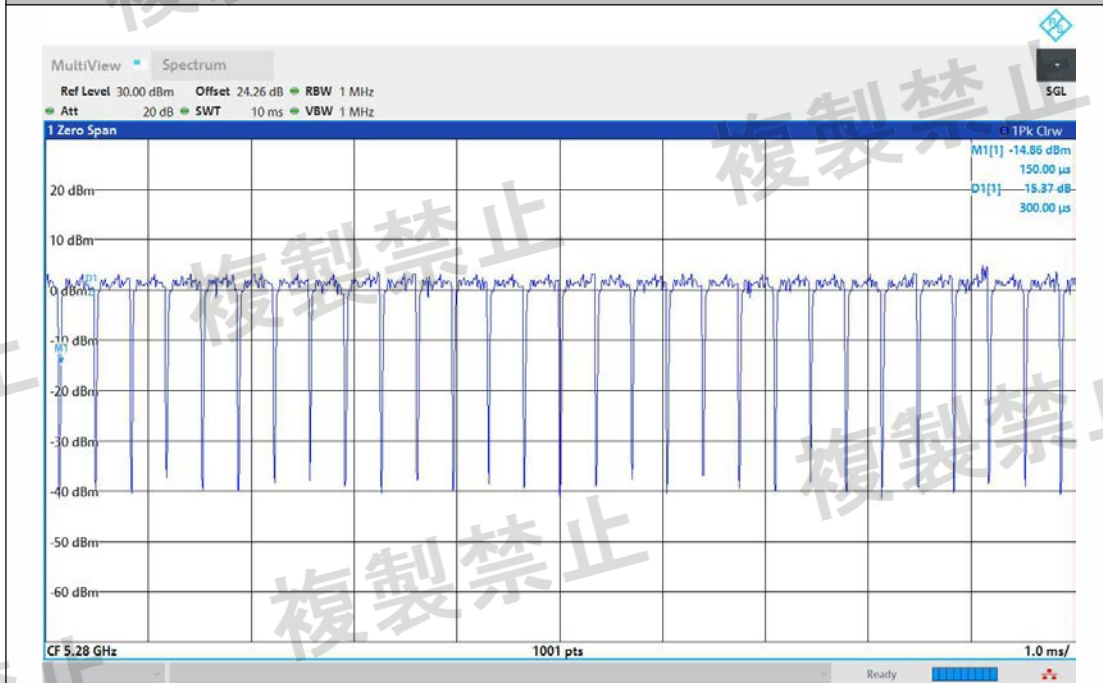


NTNV-11AX20MIMO-Ant2-5280-PASS

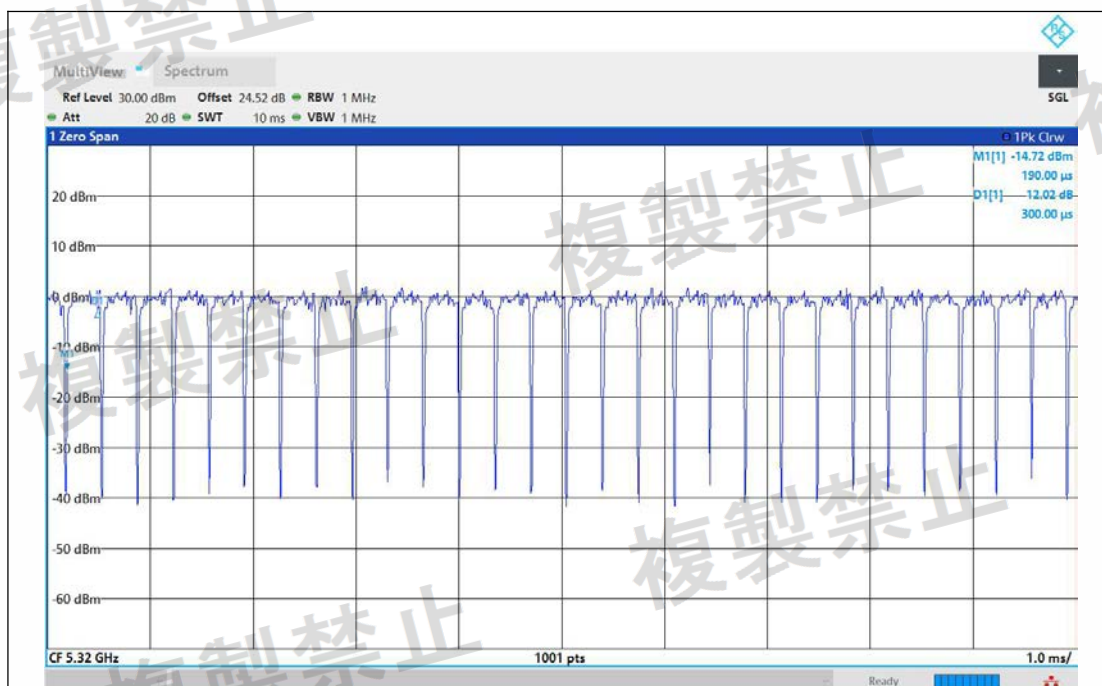


NTNV-11AX20MIMO-Ant1-5320-PASS

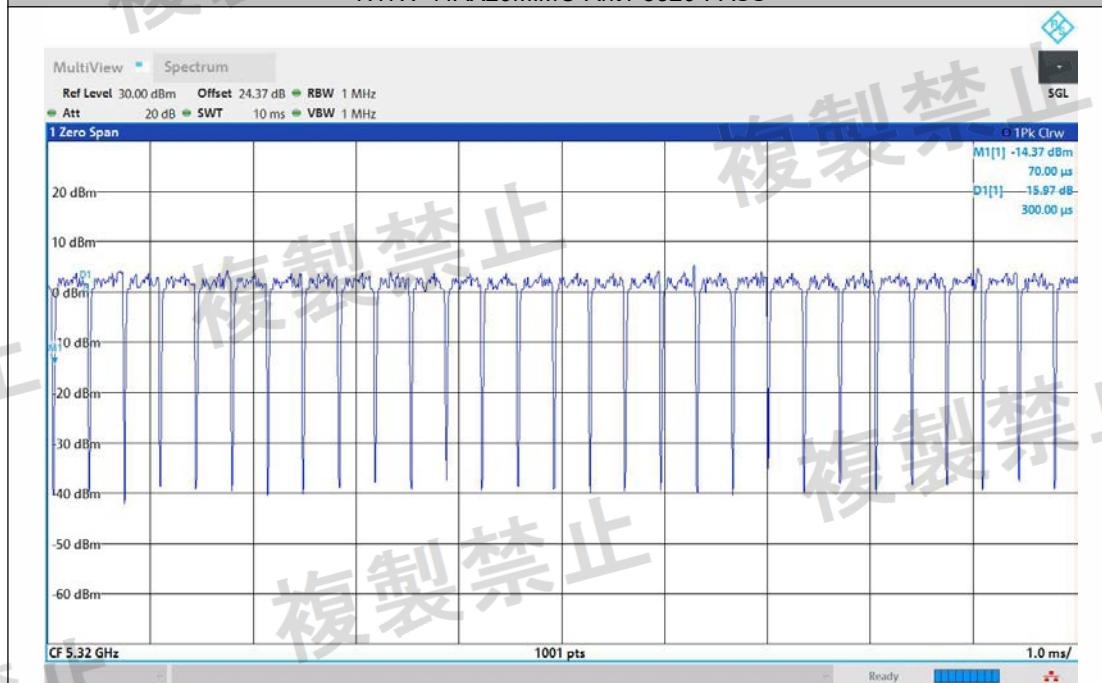


NTNV-11AX20MIMO-Ant2-5320-PASS

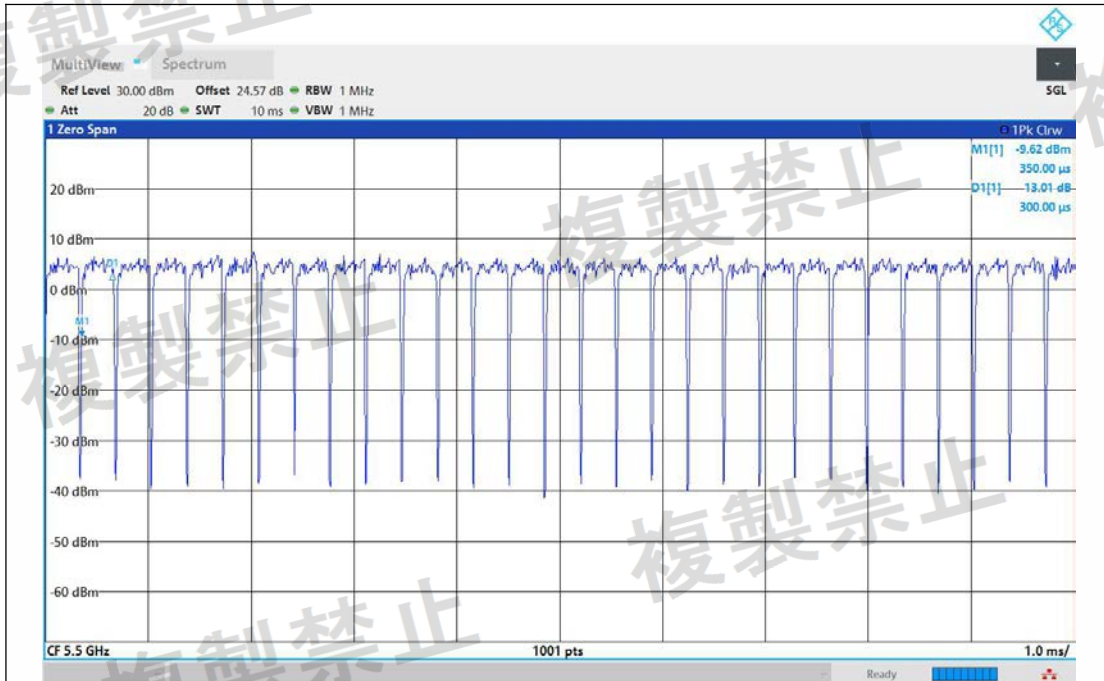


NTNV-11AX20MIMO-Ant1-5500-PASS

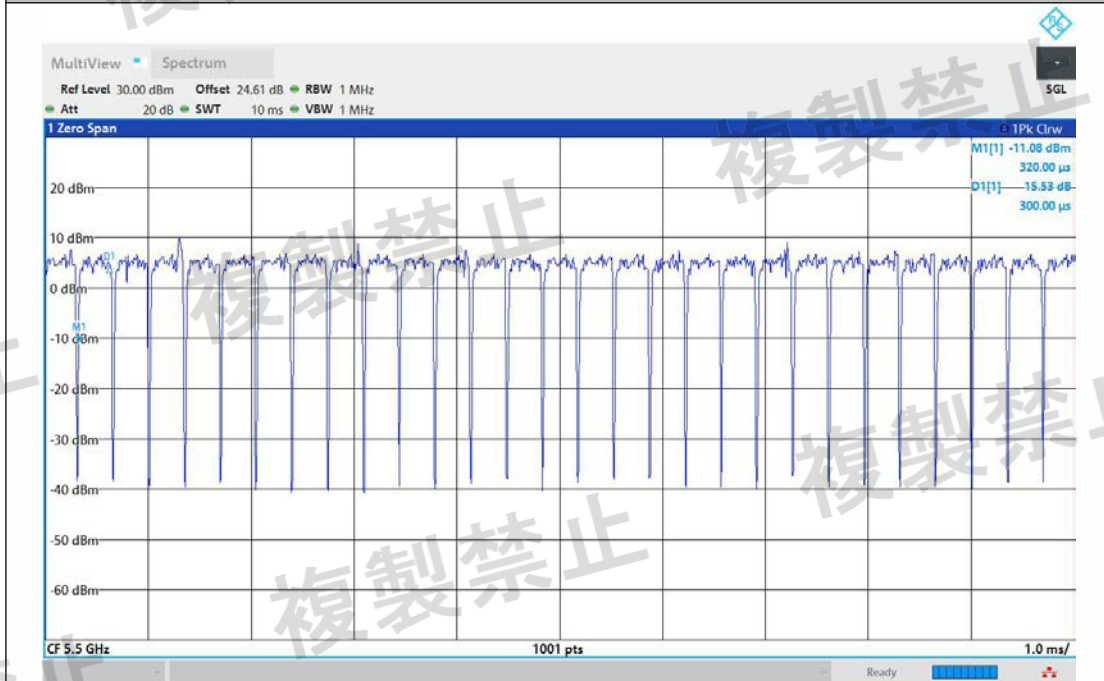


NTNV-11AX20MIMO-Ant2-5500-PASS

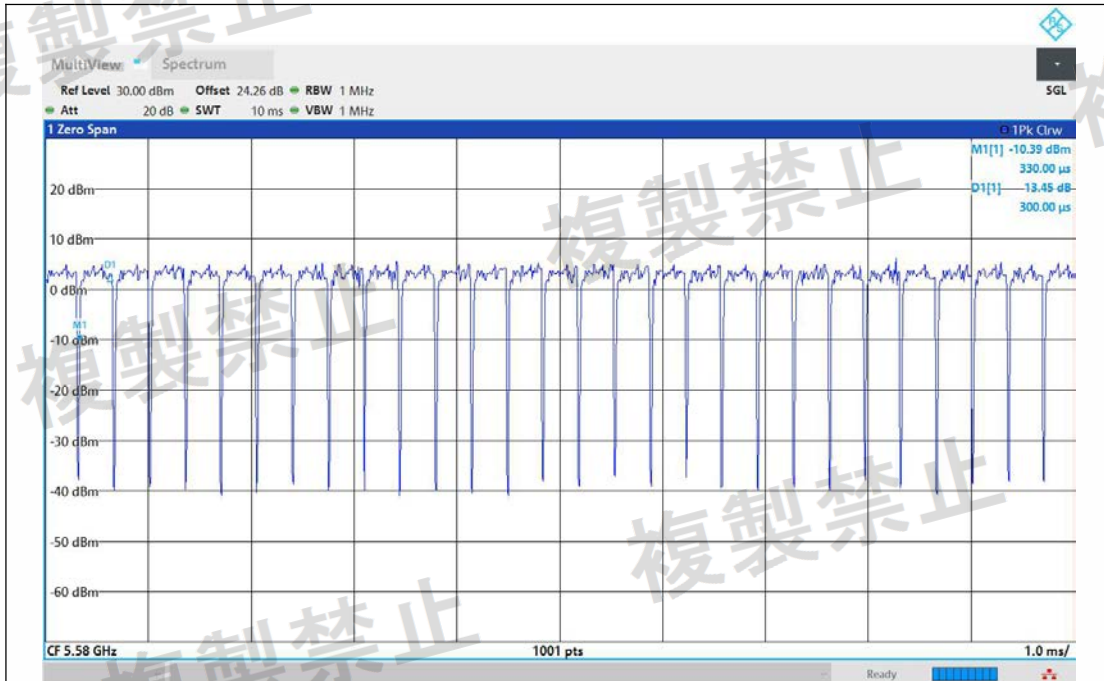


NTNV-11AX20MIMO-Ant1-5580-PASS

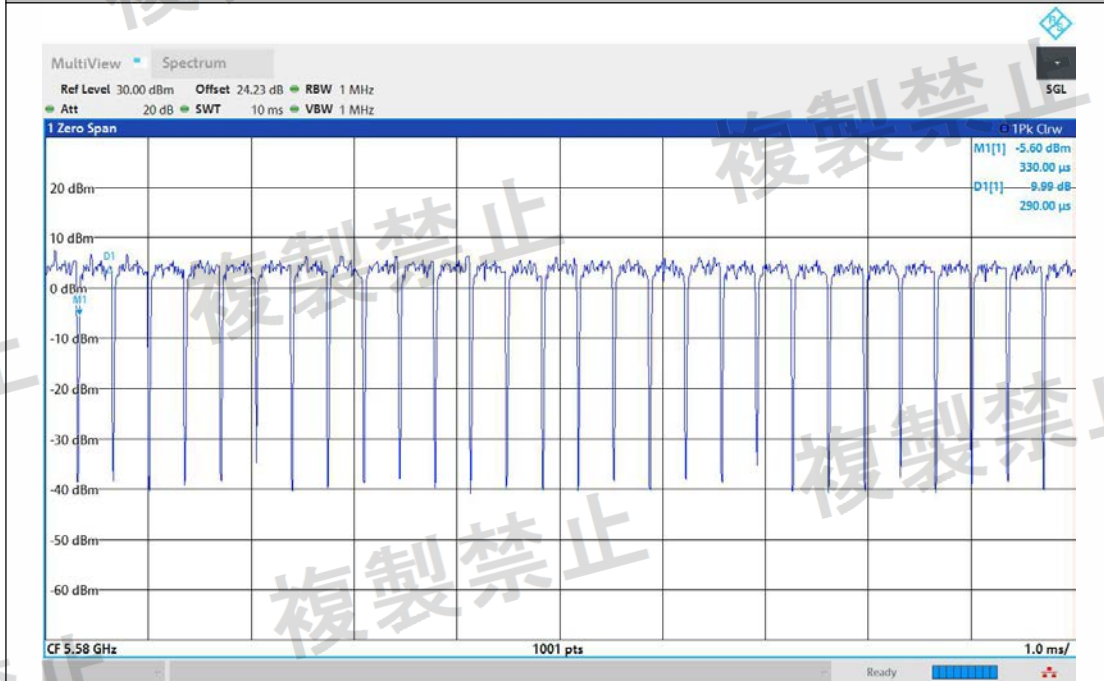


NTNV-11AX20MIMO-Ant2-5580-PASS

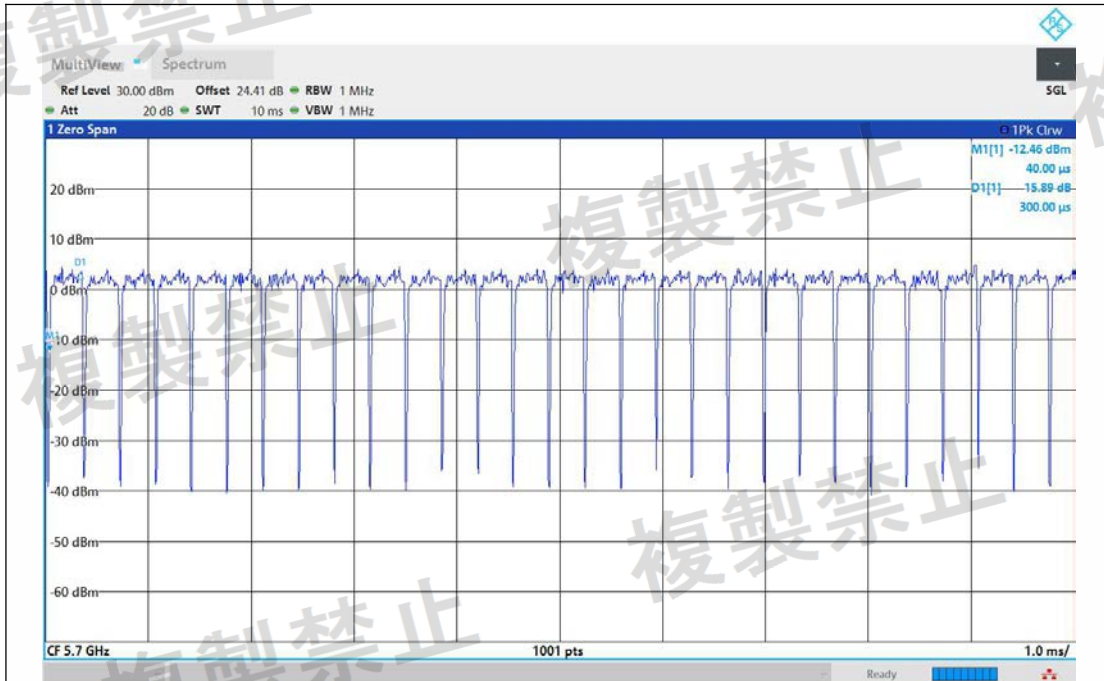


NTNV-11AX20MIMO-Ant1-5700-PASS

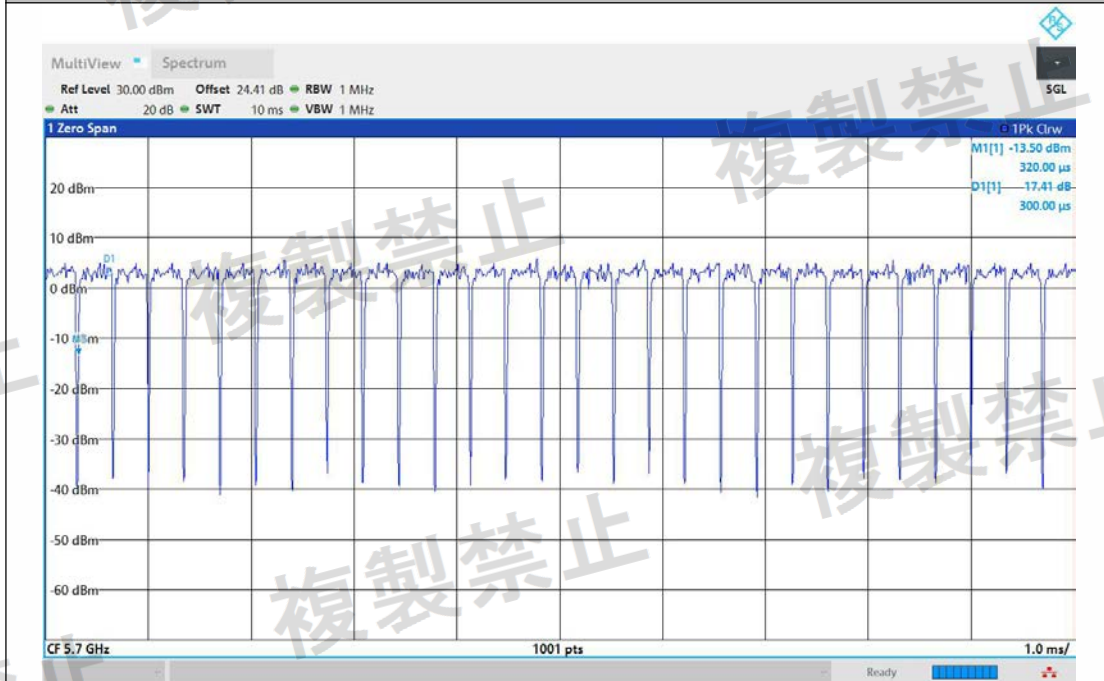


NTNV-11AX20MIMO-Ant2-5700-PASS

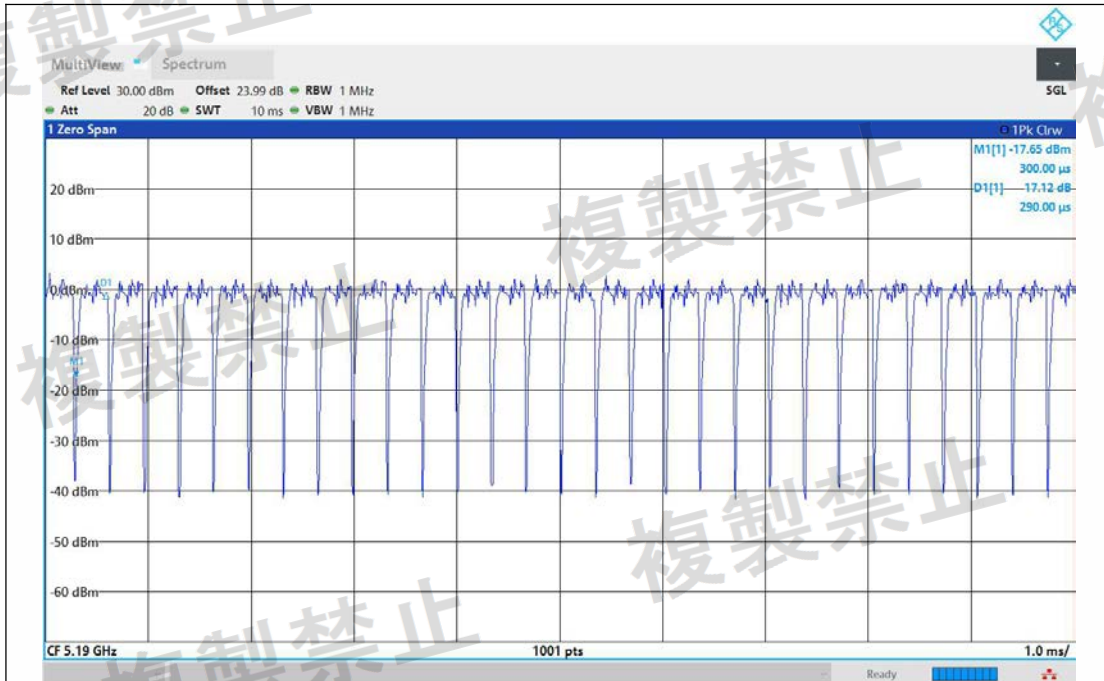


NTNV-11AX40MIMO-Ant1-5190-PASS

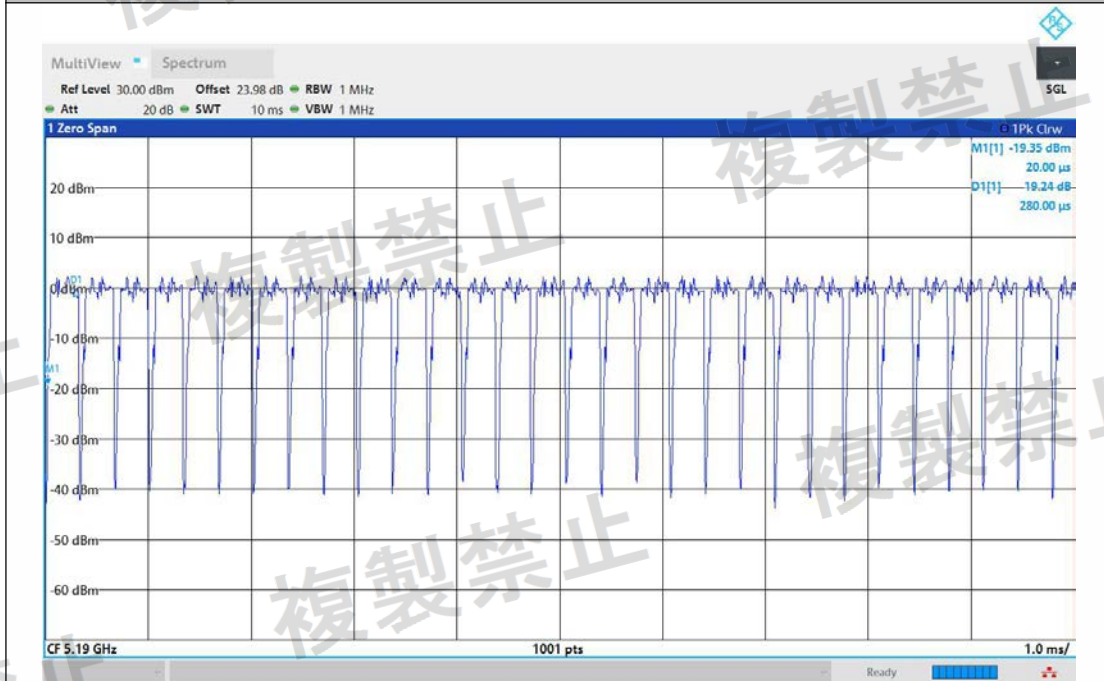


NTNV-11AX40MIMO-Ant2-5190-PASS

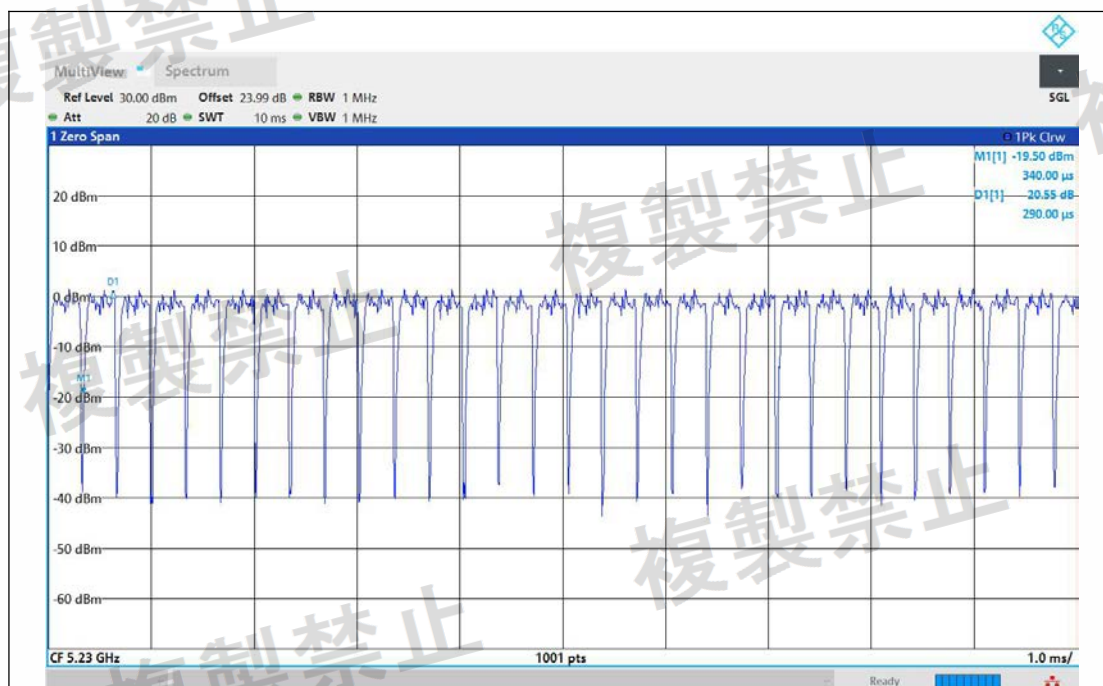


NTNV-11AX40MIMO-Ant1-5230-PASS

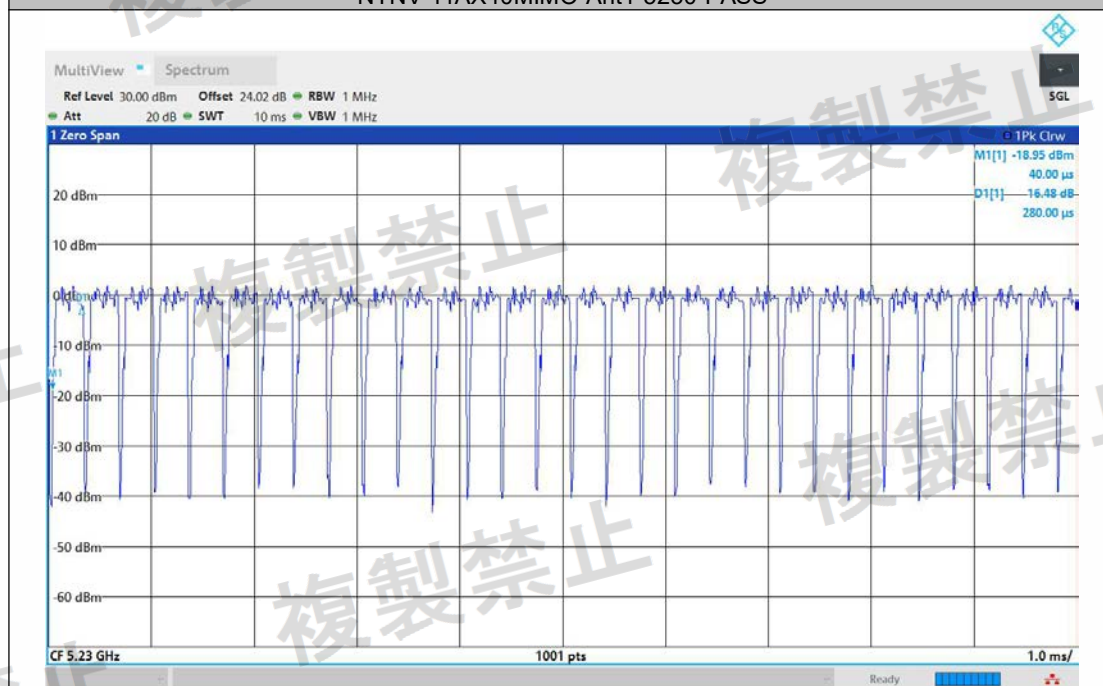


NTNV-11AX40MIMO-Ant2-5230-PASS

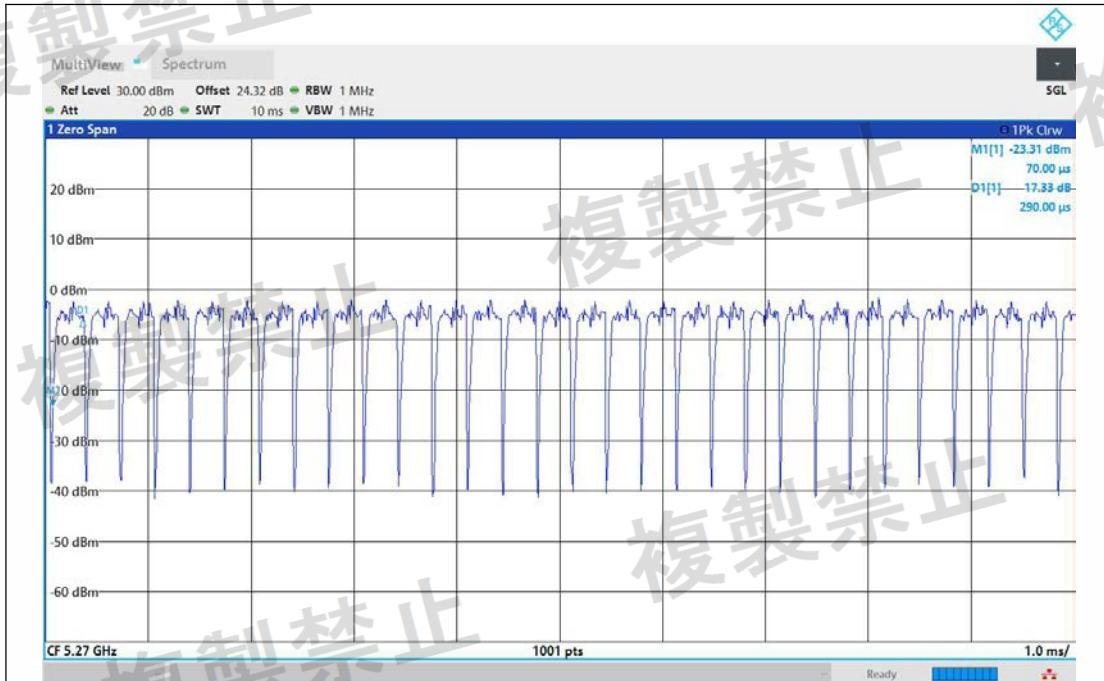


NTNV-11AX40MIMO-Ant1-5270-PASS

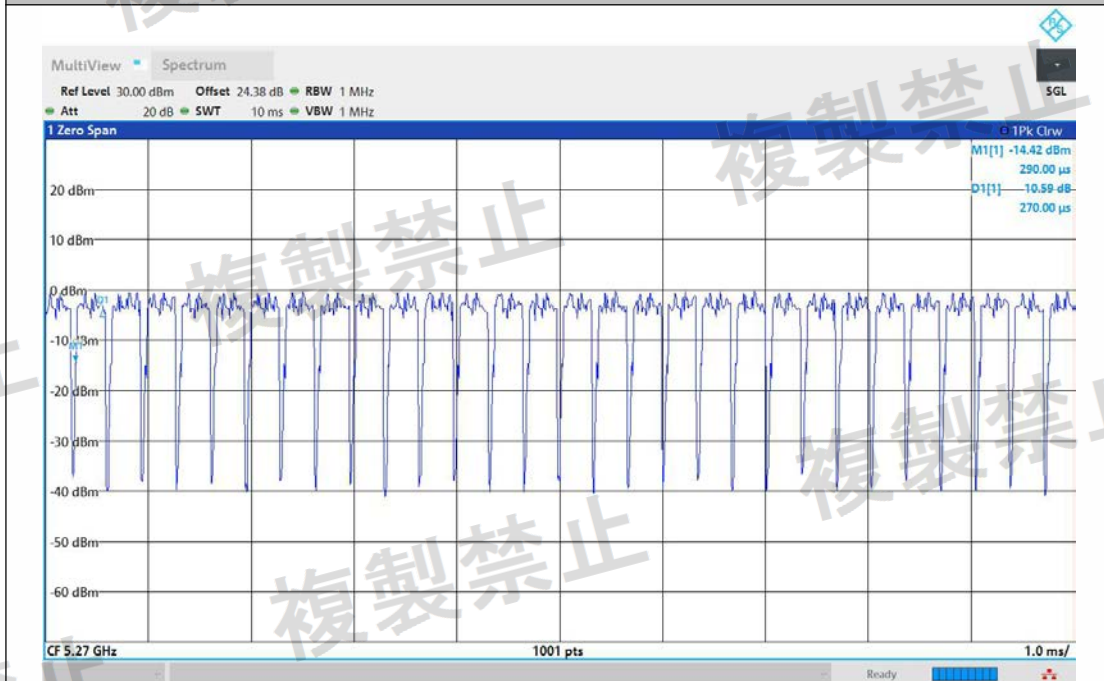


NTNV-11AX40MIMO-Ant2-5270-PASS

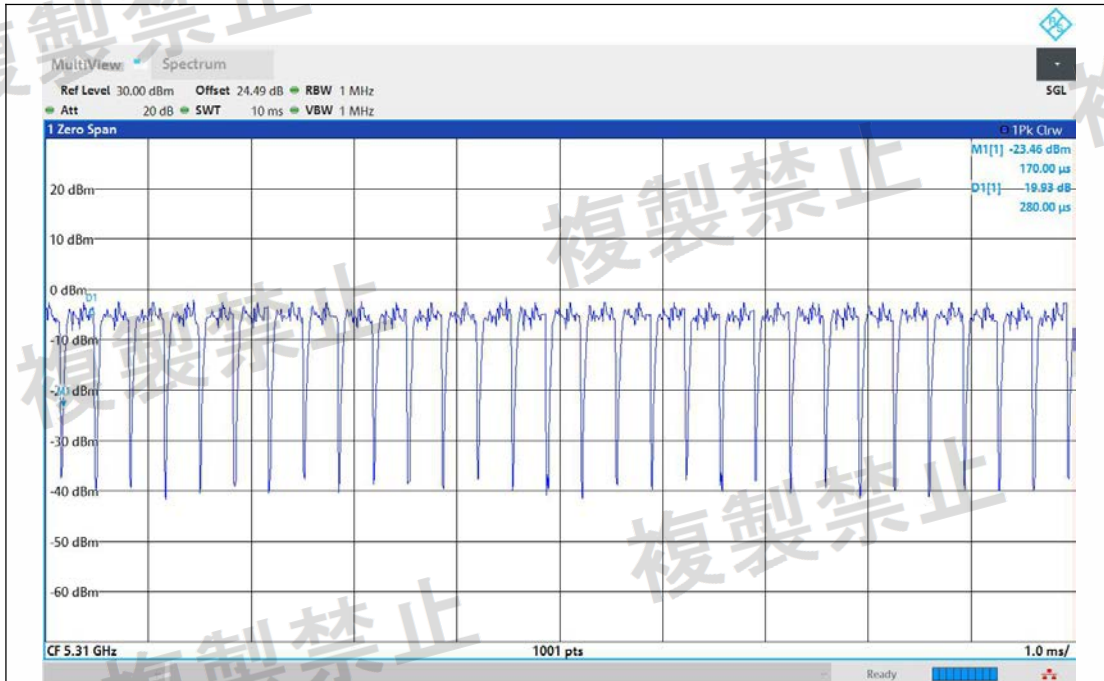


NTNV-11AX40MIMO-Ant1-5310-PASS

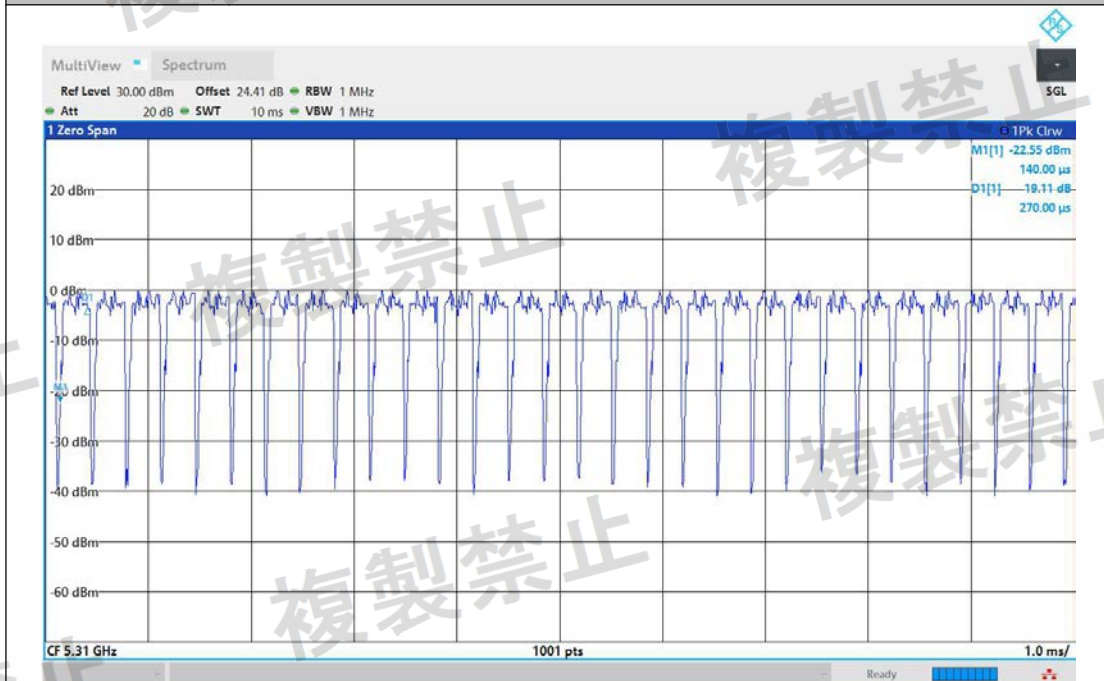


NTNV-11AX40MIMO-Ant2-5310-PASS

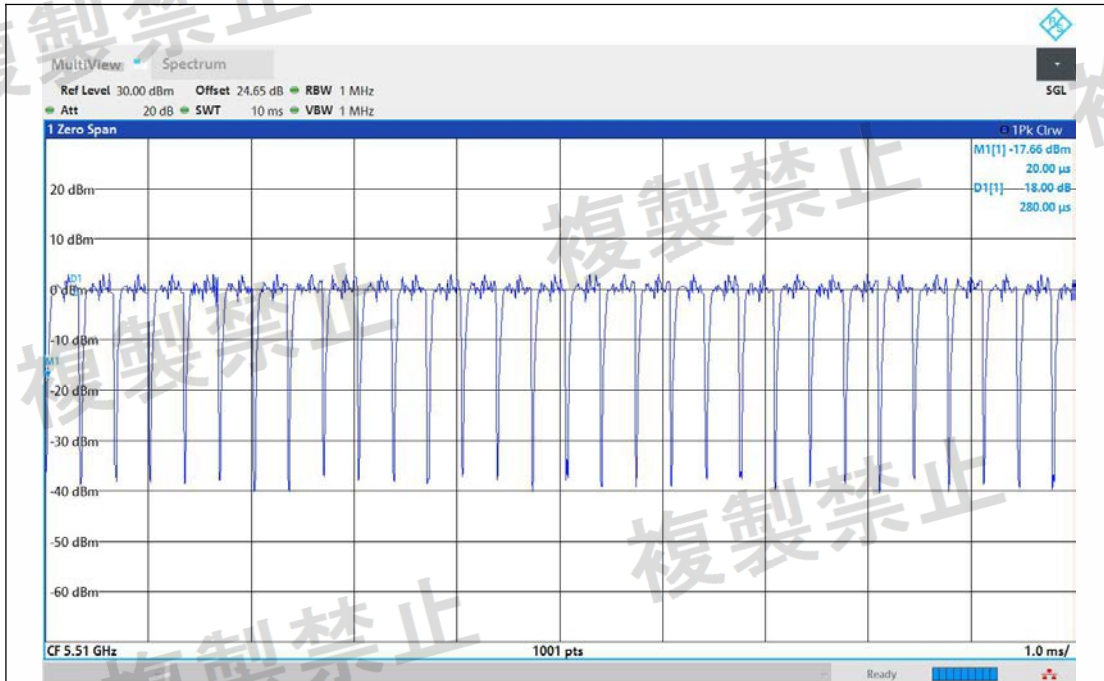


NTNV-11AX40MIMO-Ant1-5510-PASS

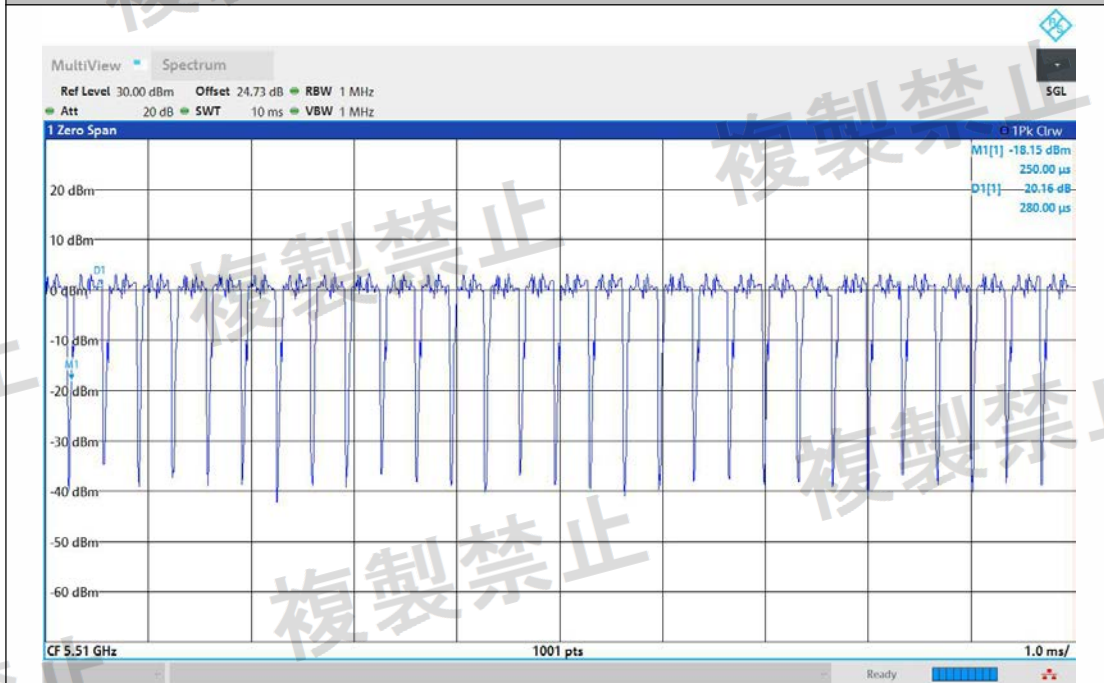


NTNV-11AX40MIMO-Ant2-5510-PASS

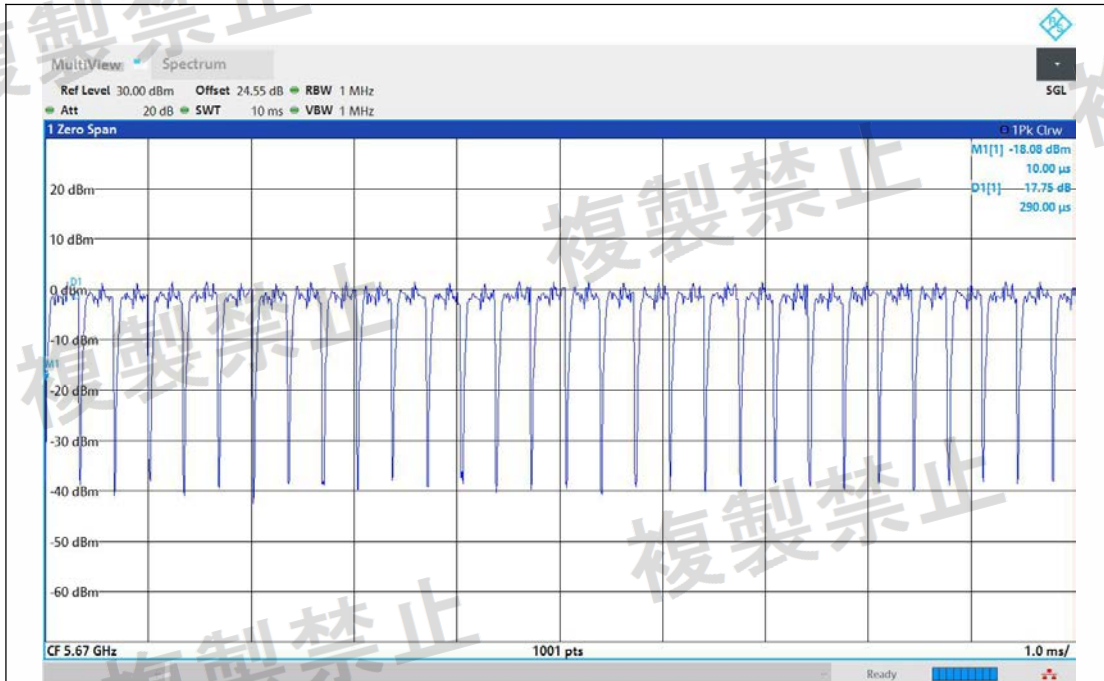


NTNV-11AX40MIMO-Ant1-5670-PASS

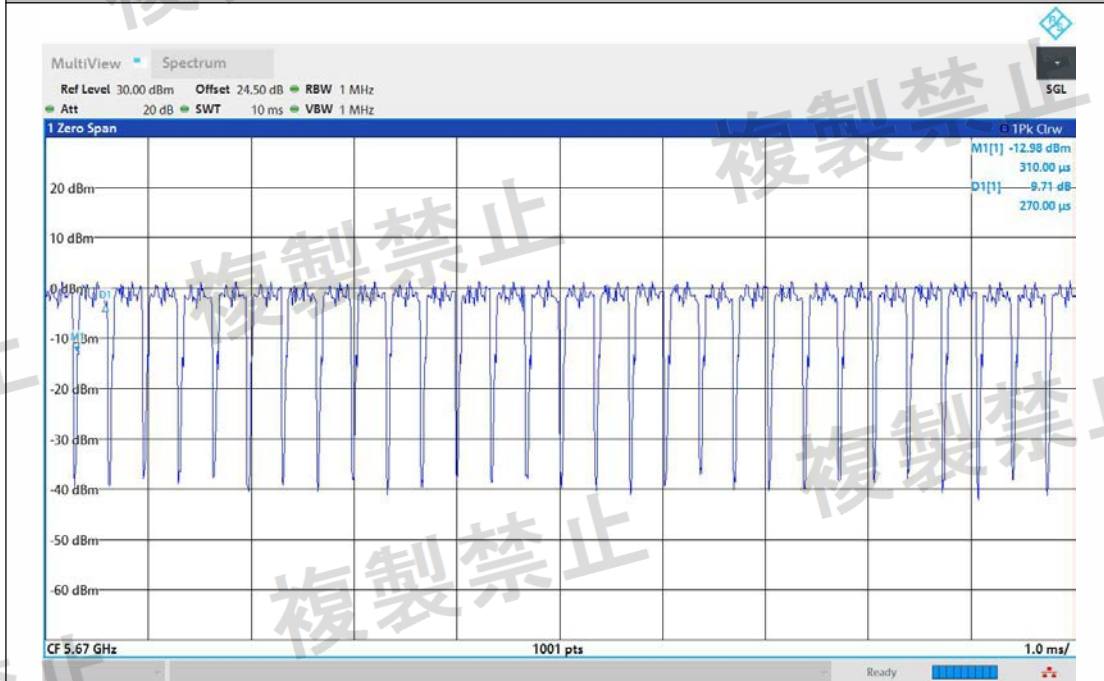


NTNV-11AX40MIMO-Ant2-5670-PASS

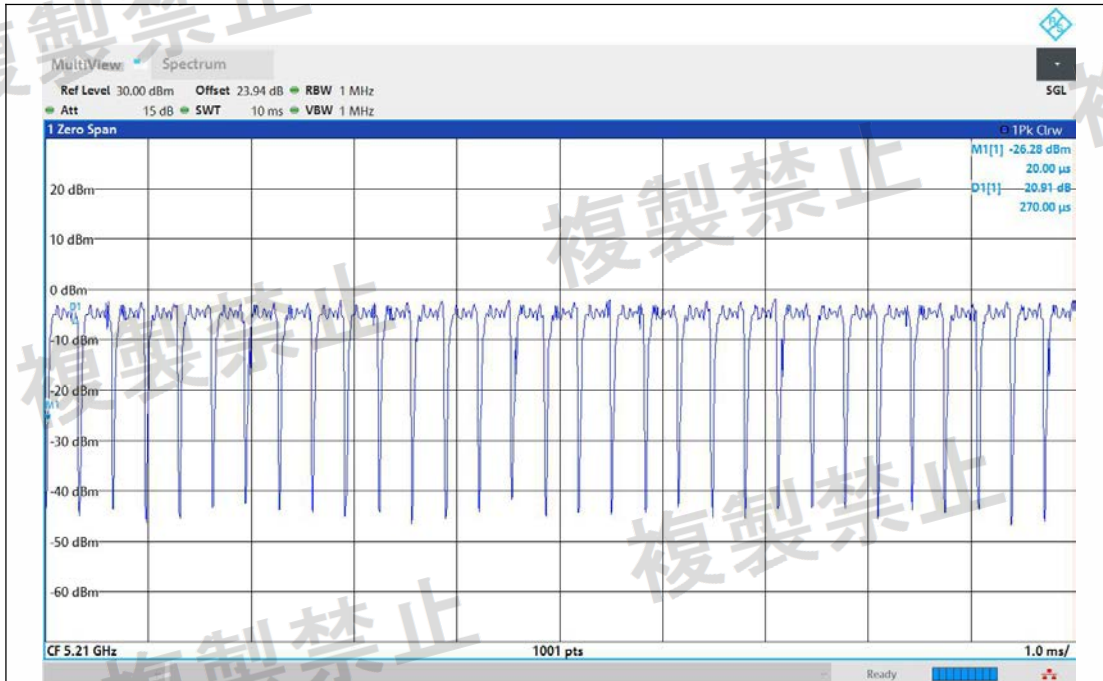


NTNV-11AX80MIMO-Ant1-5210-PASS

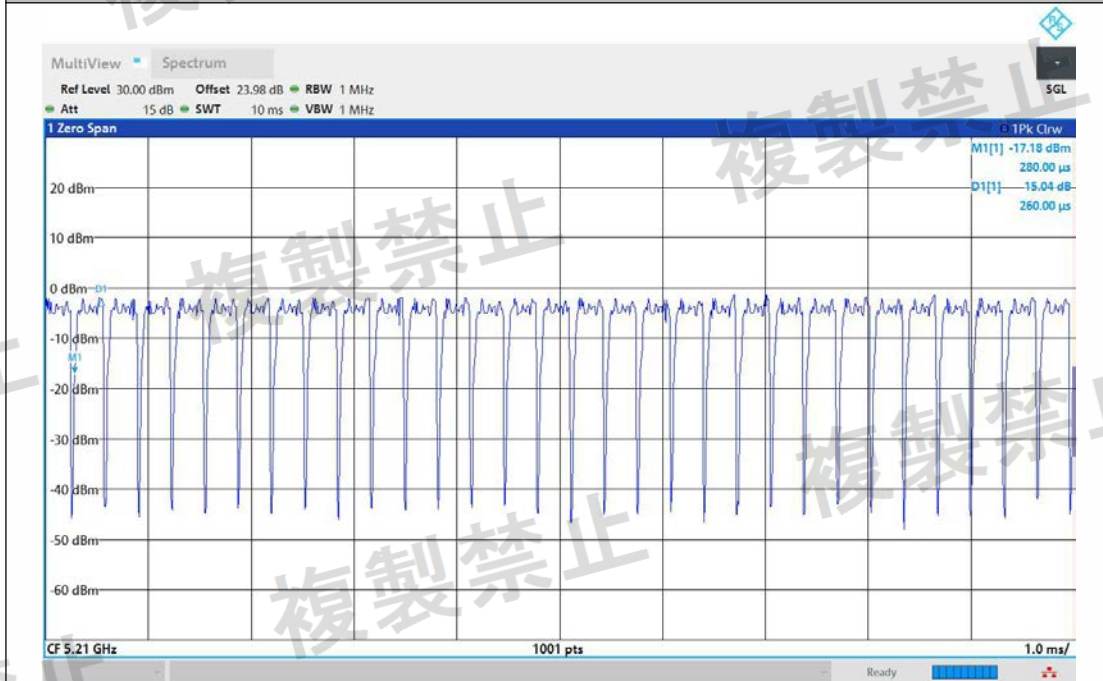


NTNV-11AX80MIMO-Ant2-5210-PASS

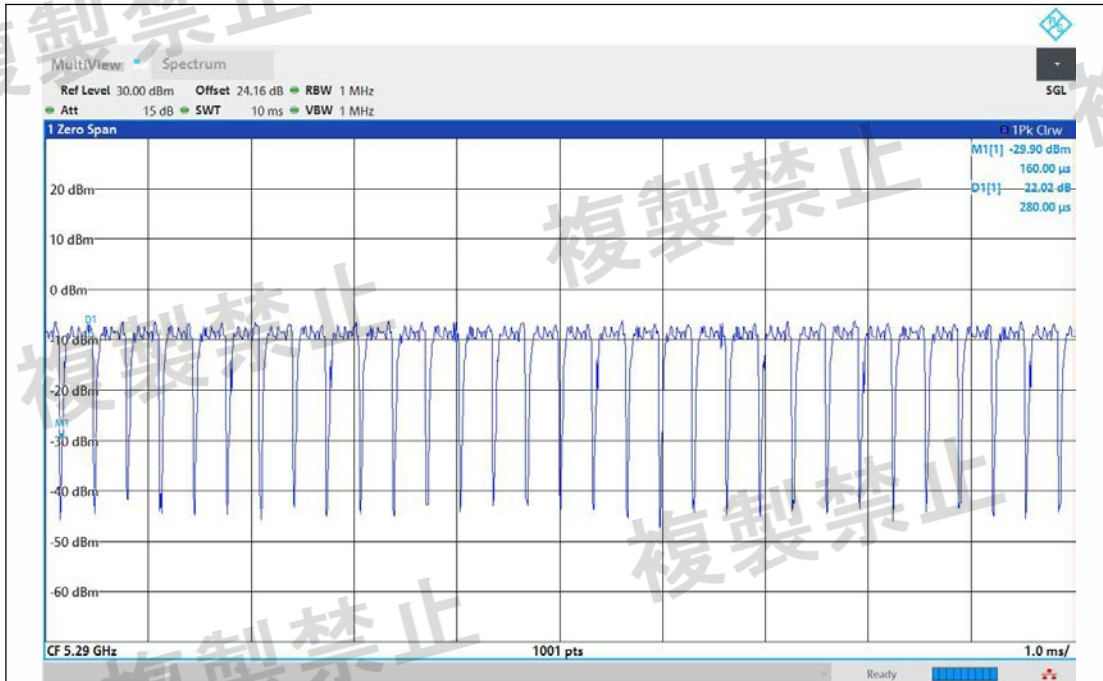


NTNV-11AX80MIMO-Ant1-5290-PASS

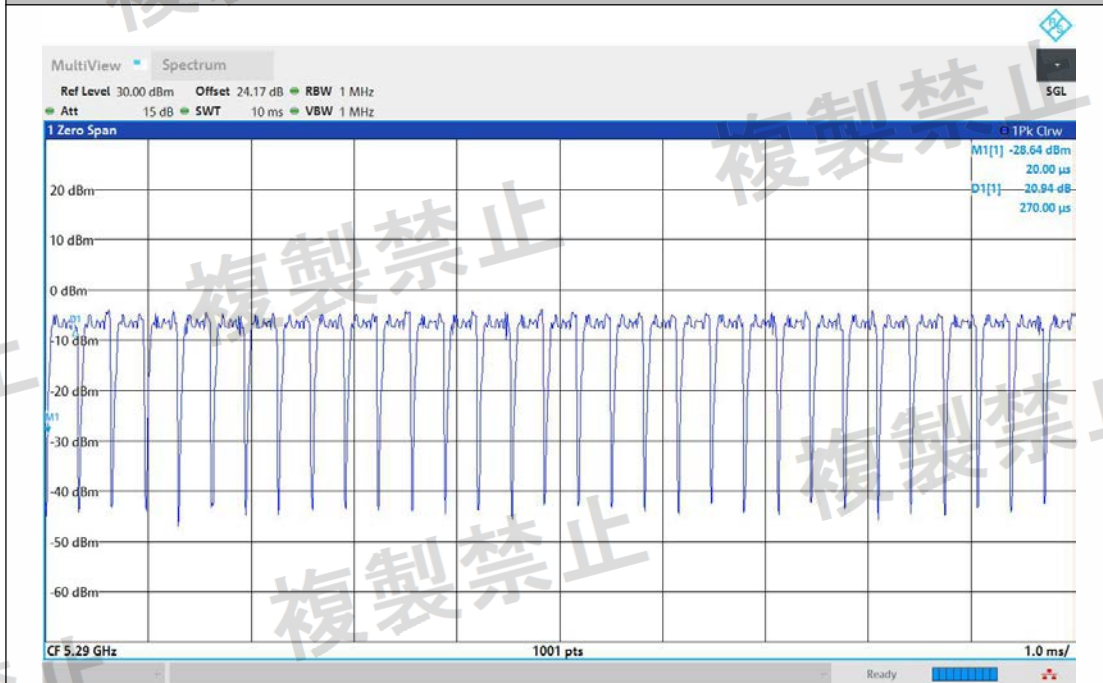


NTNV-11AX80MIMO-Ant2-5290-PASS

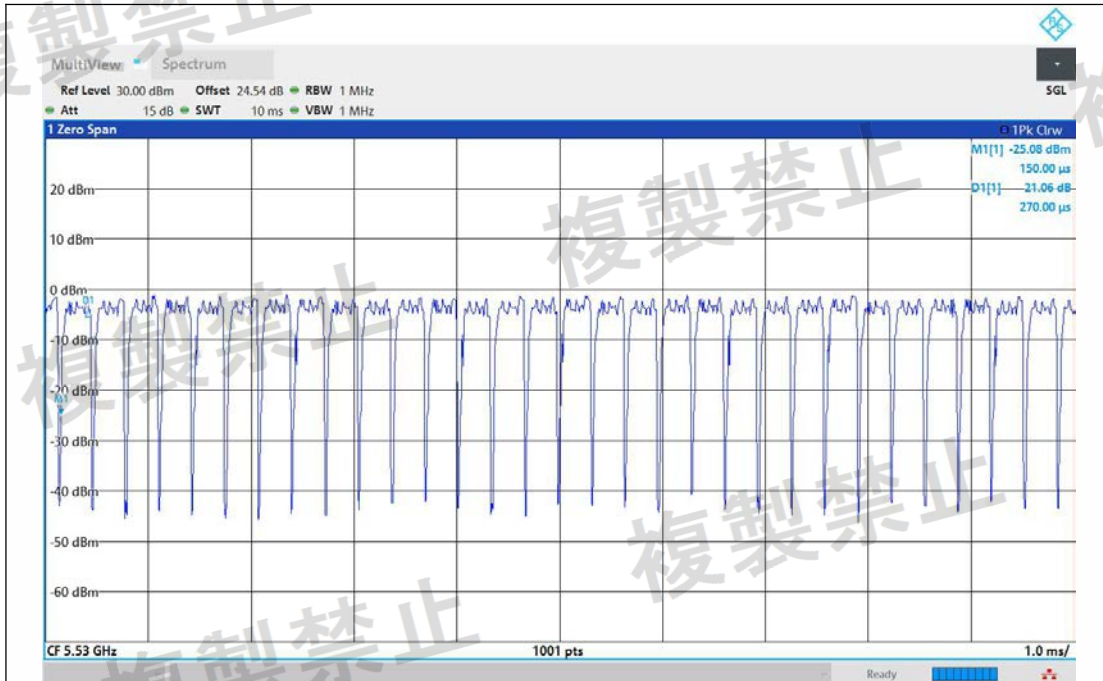


NTNV-11AX80MIMO-Ant1-5530-PASS

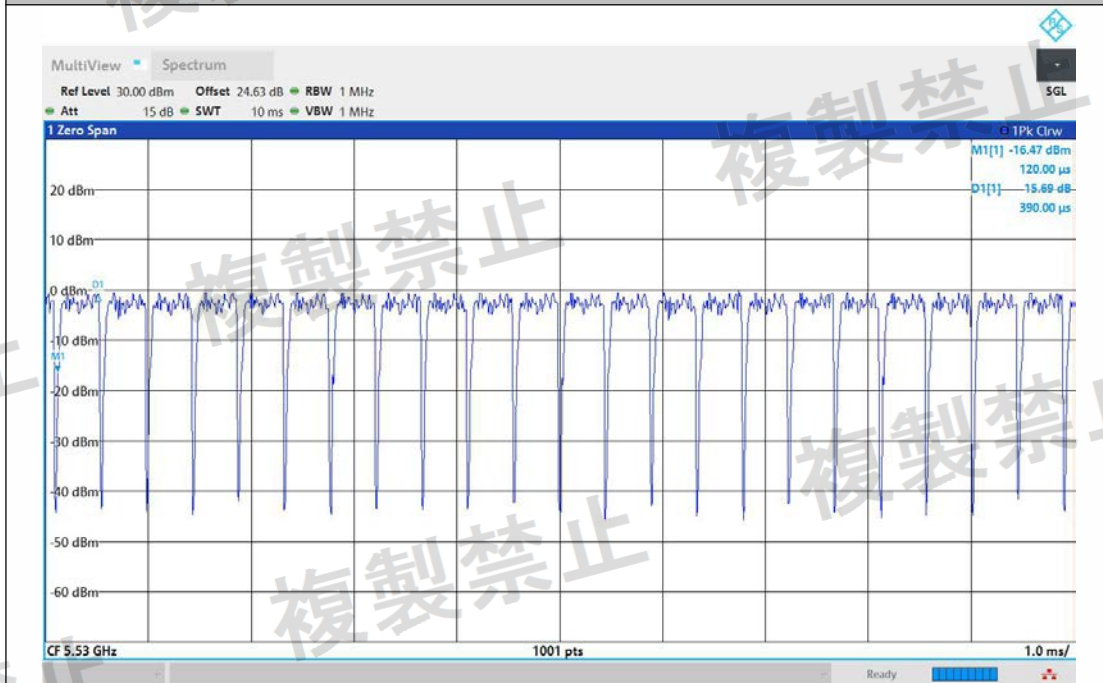


NTNV-11AX80MIMO-Ant2-5530-PASS

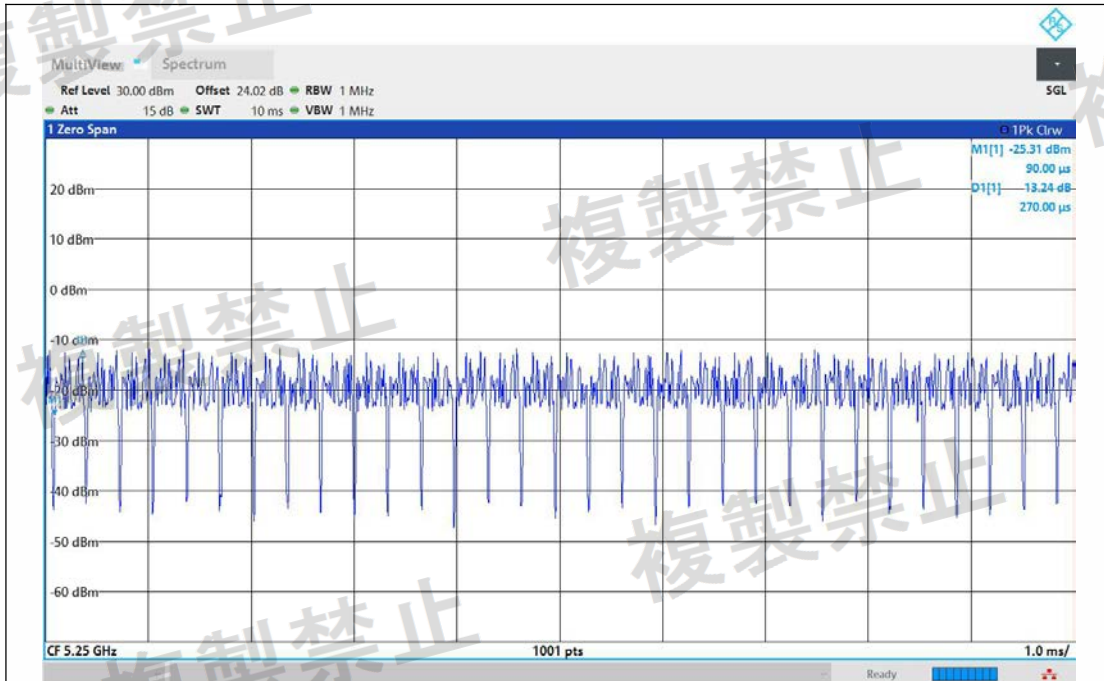


NTVN-11AX160MIMO-Ant1-5250-PASS

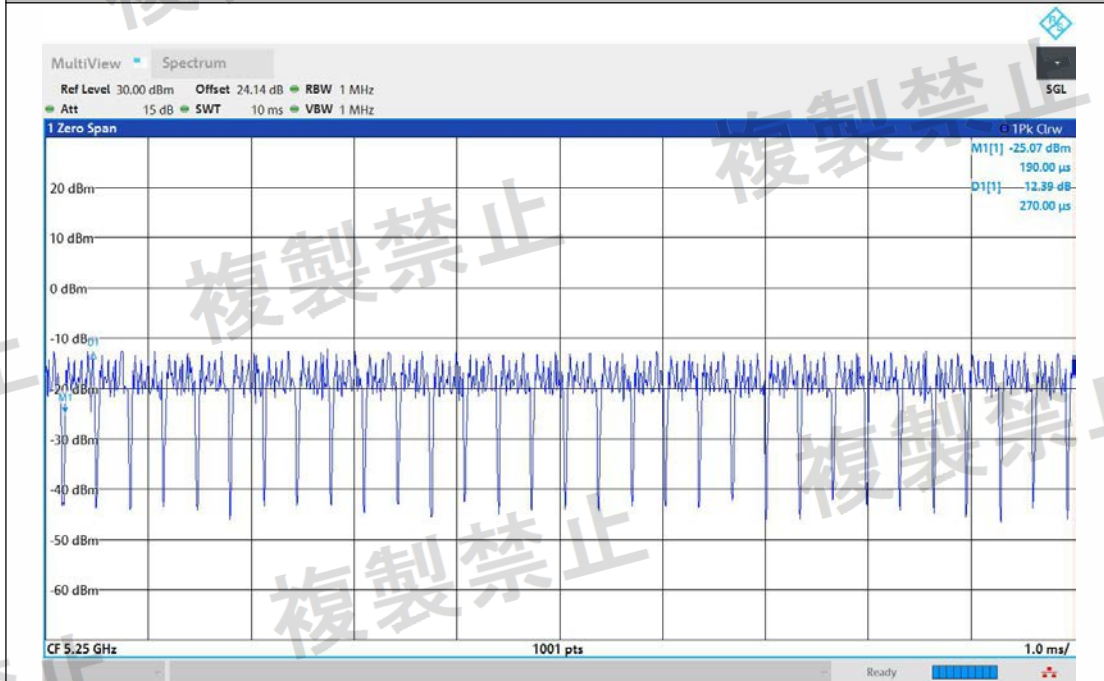

NTVN-11AX160MIMO-Ant2-5250-PASS

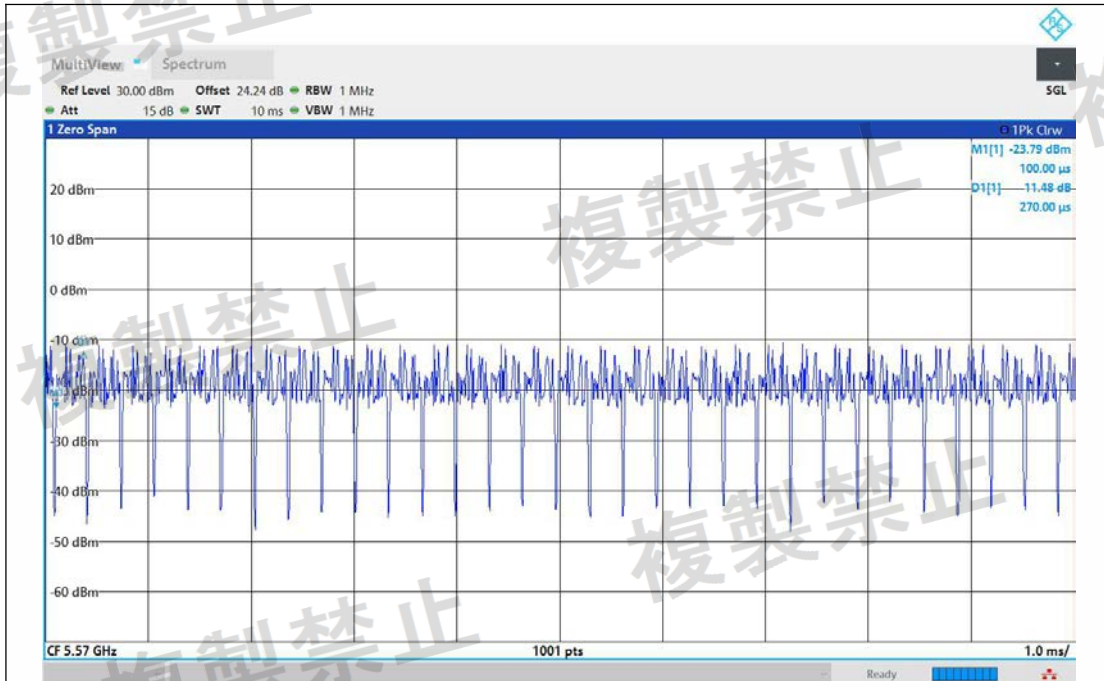


NTNV-11AX160MIMO-Ant1-5570-PASS

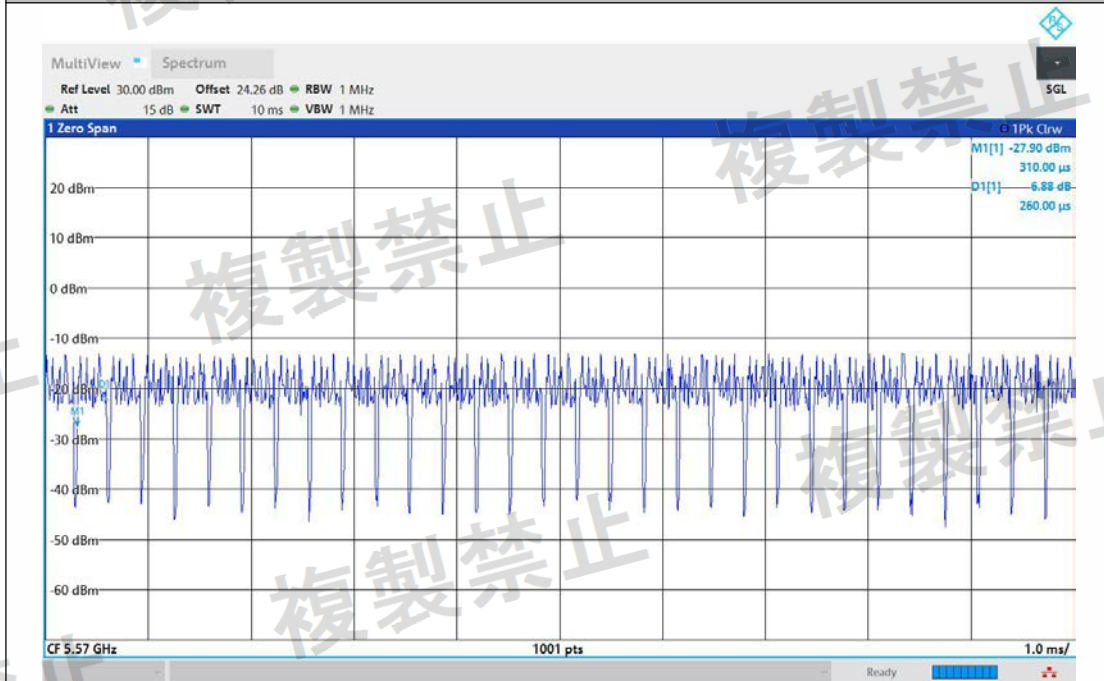


NTNV-11AX160MIMO-Ant2-5570-PASS

7.9. INTERFERENCE PREVENTION FUNCTION

(1) In case identification code is transmitted



(2) In case identification code is received



(3) Measuring Equipment Conditions

- a. The Demodulator shall demodulate the TX-signal transmitted by the EUT and be able to display the contents of the identification code.
- b. The opposite sample shall be able to transmit TX-signal equivalent to the TX-signal transmitted by the EUT.

(4) Conditions of EUT

The EUT is set on the usual operating mode.

(5) Measurement Procedure

- (1) In case the EUT possesses function to transmit identification code automatically
 - a. Predetermined identification code is transmitted by the EUT.
 - b. Verify the transmitted identification code.
- (2) In case the EUT possesses function to receive identification code automatically
 - a. Predetermined identification code is transmitted by the opposite sample.
 - b. Verify the working of the normal communication.
 - c. Other code than the predetermined identification code is transmitted by the opposite sample.
 - d. Verify the EUT to stop transmitting or to display that the ID code is different.

Carrier Sense


Temperature : 24.5℃
Humidity : 45 %

Test By: LHJ
Test voltage: Normal voltage

	Normal Voltage	High Voltage	Low Voltage
Result	Pass	Pass	Pass

7.10. CARRIER SENSE FUNCTION

(1) System diagram

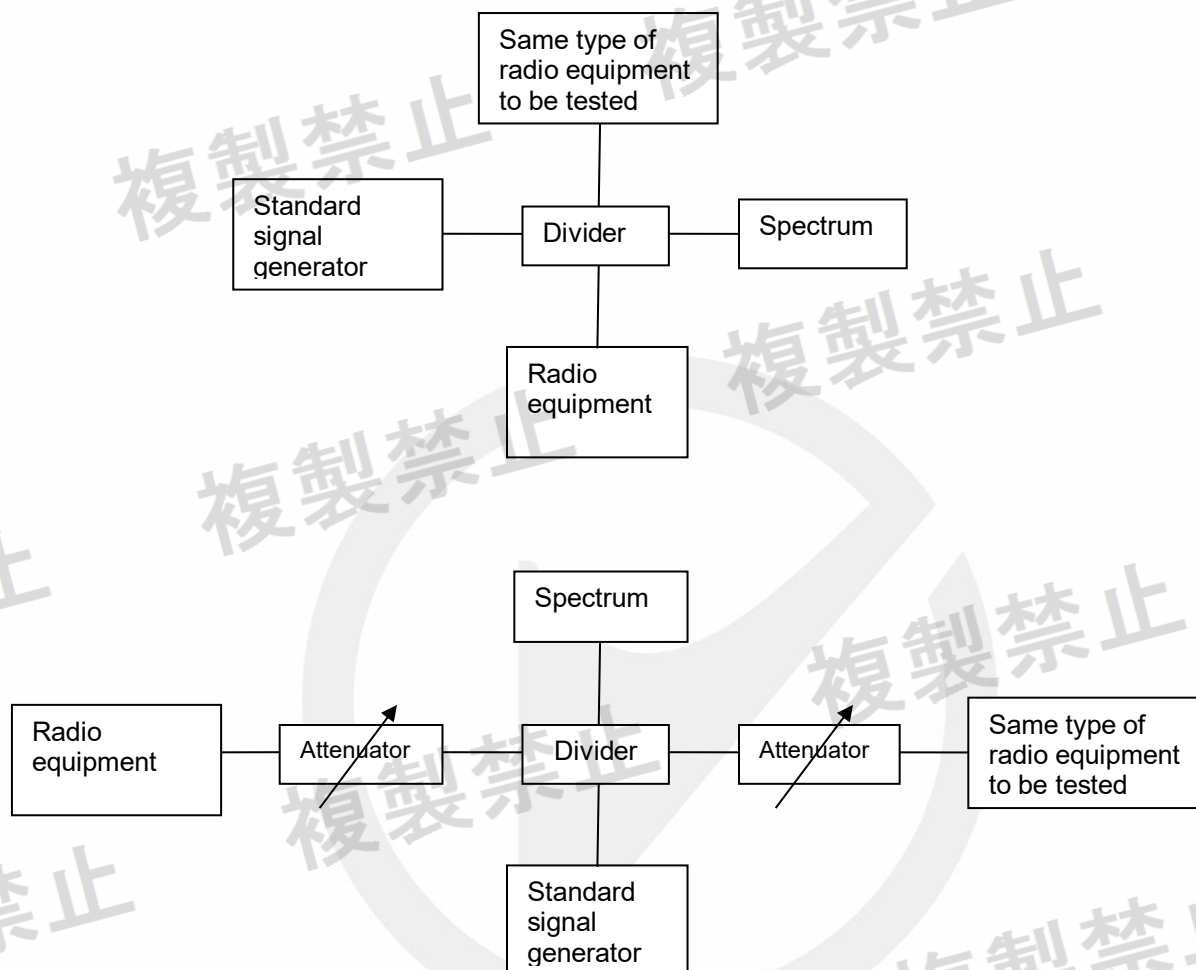

(2) Conditions of test equipment

(a) Condition of equipment of same type of radio equipment to be tested is as follows. It shall be able to perform communication with the radio equipment to be tested.

(b) Standard signal oscillator setting up

Carrier frequency	In the reception frequency band around the frequency of test equipment
Modulation	No modulation
Output level	Antenna input of the test equipment, the value is equivalent to level 100 mV and electric field strength

(c) Spectrum analyzer setting up

Carrier frequency	Center frequency of used frequency band
Sweep bandwidth	50MHz
Resoluble bandwidth	about 1MHz
Video bandwidth	Equivalent to resolvable bandwidth
Y-axis scale	10dB/Div.
Trigger condition	Free run
Detection mode	Positive peak

(d) The external testing device, the device can be connected with the test equipment. However, the device can be replaced with a counter device capable of communicating with the test equipment.

(3) Conditions of radio equipment

Set the radio equipment and the same type to the equipment into communication condition.

(4) The method of test results: Pass or not Pass.

Test Result

Temperature : 24.5℃
Humidity : 45 %

Test By: LHJ
Test voltage: Normal voltage

TestCondition	TestMode	Antenna	Freq(MHz)	SSG Test Level(mV/m)	Verdict
NTNV	11A	Ant1	5180	100	PASS
		Ant2	5180	100	PASS
		Ant1	5200	100	PASS
		Ant2	5200	100	PASS
		Ant1	5240	100	PASS
		Ant2	5240	100	PASS
		Ant1	5260	100	PASS
		Ant2	5260	100	PASS
		Ant1	5280	100	PASS
		Ant2	5280	100	PASS
		Ant1	5320	100	PASS
		Ant2	5320	100	PASS
		Ant1	5500	100	PASS
		Ant2	5500	100	PASS
		Ant1	5580	100	PASS
		Ant2	5580	100	PASS
		Ant1	5700	100	PASS
		Ant2	5700	100	PASS
	11N20MIMO	Ant1	5180	100	PASS
		Ant2	5180	100	PASS
		Ant1	5200	100	PASS
		Ant2	5200	100	PASS
		Ant1	5240	100	PASS
		Ant2	5240	100	PASS
		Ant1	5260	100	PASS
		Ant2	5260	100	PASS
		Ant1	5280	100	PASS
		Ant2	5280	100	PASS
		Ant1	5320	100	PASS
		Ant2	5320	100	PASS
		Ant1	5500	100	PASS
		Ant2	5500	100	PASS
		Ant1	5580	100	PASS
		Ant2	5580	100	PASS
		Ant1	5700	100	PASS
		Ant2	5700	100	PASS
	11N40MIMO	Ant1	5190	100	PASS
		Ant2	5190	100	PASS
		Ant1	5230	100	PASS
		Ant2	5230	100	PASS
		Ant1	5270	100	PASS
		Ant2	5270	100	PASS
		Ant1	5310	100	PASS
		Ant2	5310	100	PASS
		Ant1	5510	100	PASS
		Ant2	5510	100	PASS
		Ant1	5670	100	PASS
		Ant2	5670	100	PASS
	11AC20MIMO	Ant1	5180	100	PASS

		Ant2	5180	100	PASS
		Ant1	5200	100	PASS
		Ant2	5200	100	PASS
		Ant1	5240	100	PASS
		Ant2	5240	100	PASS
		Ant1	5260	100	PASS
		Ant2	5260	100	PASS
		Ant1	5280	100	PASS
		Ant2	5280	100	PASS
		Ant1	5320	100	PASS
		Ant2	5320	100	PASS
		Ant1	5500	100	PASS
		Ant2	5500	100	PASS
		Ant1	5580	100	PASS
		Ant2	5580	100	PASS
		Ant1	5700	100	PASS
		Ant2	5700	100	PASS
11AC40MIMO		Ant1	5190	100	PASS
		Ant2	5190	100	PASS
		Ant1	5230	100	PASS
		Ant2	5230	100	PASS
		Ant1	5270	100	PASS
		Ant2	5270	100	PASS
		Ant1	5310	100	PASS
		Ant2	5310	100	PASS
		Ant1	5510	100	PASS
		Ant2	5510	100	PASS
		Ant1	5670	100	PASS
		Ant2	5670	100	PASS
11AC80MIMO		Ant1	5210	100	PASS
		Ant2	5210	100	PASS
		Ant1	5290	100	PASS
		Ant2	5290	100	PASS
		Ant1	5530	100	PASS
		Ant2	5530	100	PASS
11AC160MIMO		Ant1	5250	100	PASS
		Ant2	5250	100	PASS
		Ant1	5570	100	PASS
		Ant2	5570	100	PASS
11AX20MIMO		Ant1	5180	100	PASS
		Ant2	5180	100	PASS
		Ant1	5200	100	PASS
		Ant2	5200	100	PASS
		Ant1	5240	100	PASS
		Ant2	5240	100	PASS
		Ant1	5260	100	PASS
		Ant2	5260	100	PASS
		Ant1	5280	100	PASS
		Ant2	5280	100	PASS
		Ant1	5320	100	PASS
		Ant2	5320	100	PASS
		Ant1	5500	100	PASS
		Ant2	5500	100	PASS
		Ant1	5580	100	PASS
		Ant2	5580	100	PASS

		Ant1	5700	100	PASS
		Ant2	5700	100	PASS
	11AX40MIMO	Ant1	5190	100	PASS
		Ant2	5190	100	PASS
		Ant1	5230	100	PASS
		Ant2	5230	100	PASS
		Ant1	5270	100	PASS
		Ant2	5270	100	PASS
		Ant1	5310	100	PASS
		Ant2	5310	100	PASS
		Ant1	5510	100	PASS
		Ant2	5510	100	PASS
		Ant1	5670	100	PASS
		Ant2	5670	100	PASS
	11AX80MIMO	Ant1	5210	100	PASS
		Ant2	5210	100	PASS
		Ant1	5290	100	PASS
		Ant2	5290	100	PASS
		Ant1	5530	100	PASS
		Ant2	5530	100	PASS
	11AX160MIMO	Ant1	5250	100	PASS
		Ant2	5250	100	PASS
		Ant1	5570	100	PASS
		Ant2	5570	100	PASS

7.11. RF ACCESSIBILITY

Standard requirement


Article 2, Item (19) Notice 88 Appendix 43, 44, 4

The EUT shall be constructed in such a way that sensitive RF parts, (like modulation and oscillator parts) cannot be reached easily by the user. These parts shall be covered by soldered metal caps or glue or by other mechanical covers. If the covers are fixed with screws, these shall be not the common type(s) like a Phillips, but special versions like Torx, so that the user cannot open the device with common tools.

☒	Sealed with special screws.
☐	Plastic chassis is being welded using ultrasonic waves.
☐	Chassis is glued using a special adhesive.
☐	Metal covers are spot-fused.
☐	Cover is specially interlocked.
☒	RF and Modulation components are covered with shielding case and this shielding case is soldered.
☐	Shield case is welded at RF and modulation parts, and ID-ROM is welded using the BGA Method.
☐	Shield case is welded at RF and modulation parts, and ID-ROM is glued at its lead with a special adhesive.
☐	Shield case is welded at RF and modulation parts, and ID-ROM is glued with anon-transparent laminating agent.
☐	RF and Modulation parts are mounted on PCB with surface mount technology, and there is no any adjustable parts on PCB or adjustable parts are not exposed.

Test result: Pass

APPENDIX- PHOTOGRAPHS OF TEST SETUP

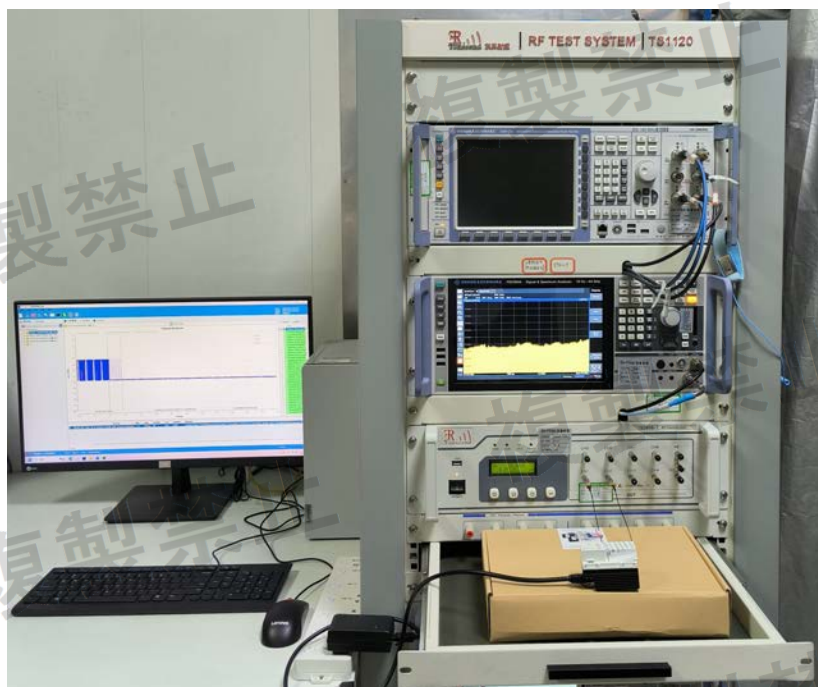

--- End of Report ---

声 明 Statement

1. 本报告无授权批准人签字及“检验检测专用章”无效。
1. This report is invalid without the signature of the authorized approver and "special seal for testing".
2. 未经许可本报告不得部分复制。
2. This report shall not be copied partly without authorization.
3. 本报告的检测结果仅对送测样品有效，委托方对样品的代表性和资料的真实性负责。
3. The test results or observations are applicable only to tested sample. Client shall be responsible for representativeness of the sample and authenticity of the material.
4. 本检测报告中检测项目标注有特殊符号则该项目不在资质认定范围内，仅作为客户委托、科研、教学或内部质量控制等目的使用。
4. The observations or tests with special mark fall outside the scope of accreditation, and are only used for purpose of commission, research, training, internal quality control etc.
5. 本检测报告以实测值进行符合性判定，未考虑不确定度所带来的风险，本实验室不承担相关责任，特别约定、标准或规范中有明确规定的除外。
5. The test results or observations are provided in accordance with measured value, without taking risks caused by uncertainty into account. Without explicit stipulation in special agreements, standards or regulations, EMTEK shall not assume any responsibility.
6. 对本检验报告若有异议，请于收到报告之日起 20 日内提出。
6. Objections shall be raised within 20 days from the date receiving the report.