




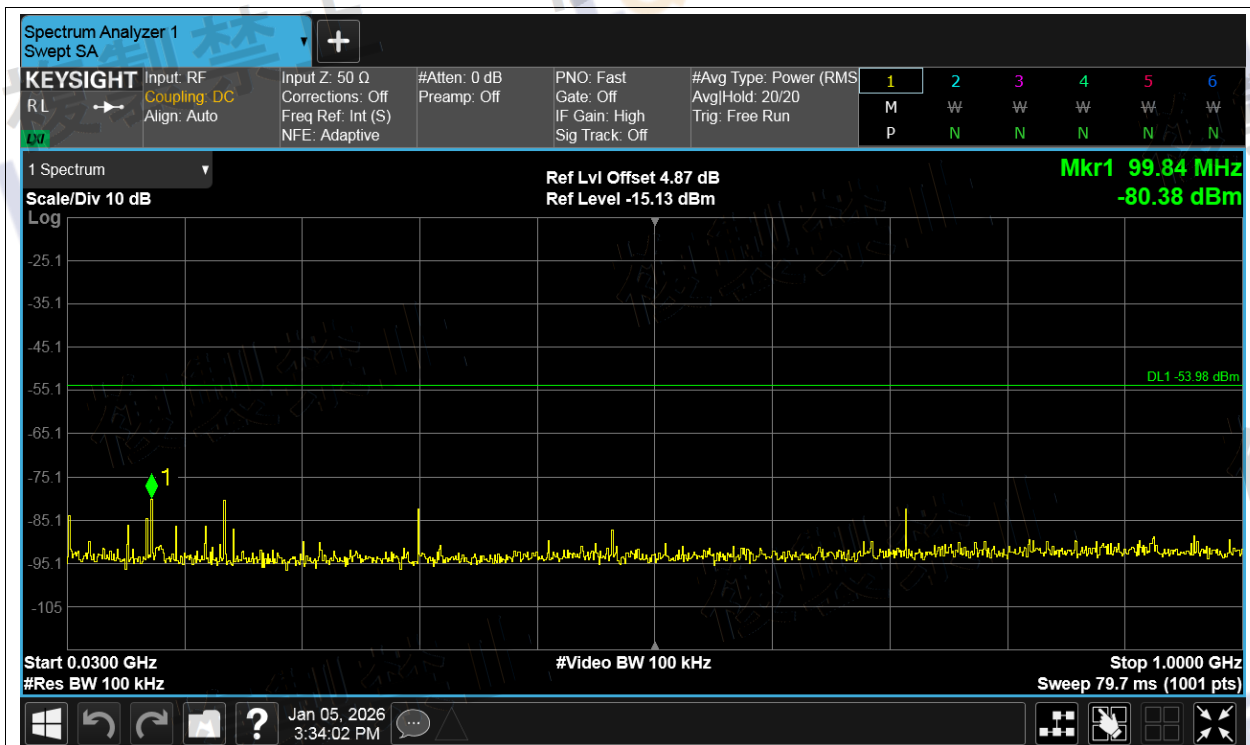


Rx. Spurious NVNT n40 5590MHz Ant1 @ 1000MHz-26000MHz

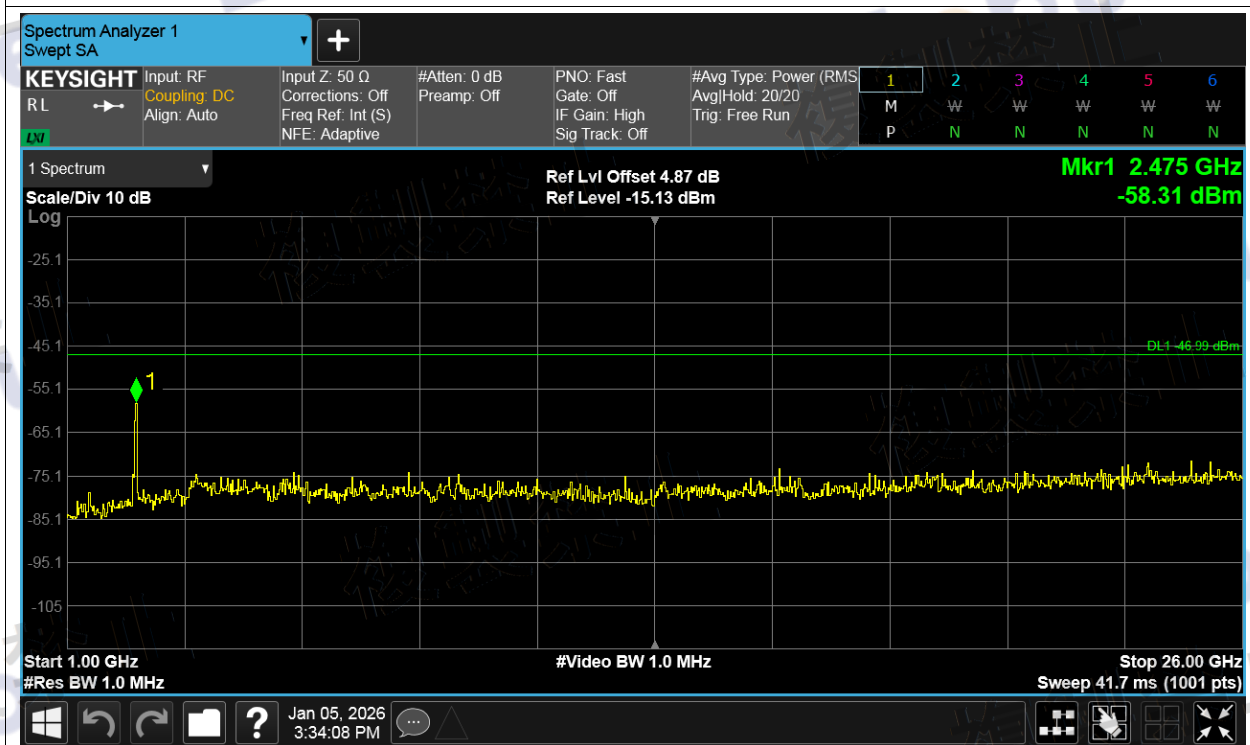


Rx. Spurious NVNT n40 5670MHz Ant1 @ 30MHz-1000MHz

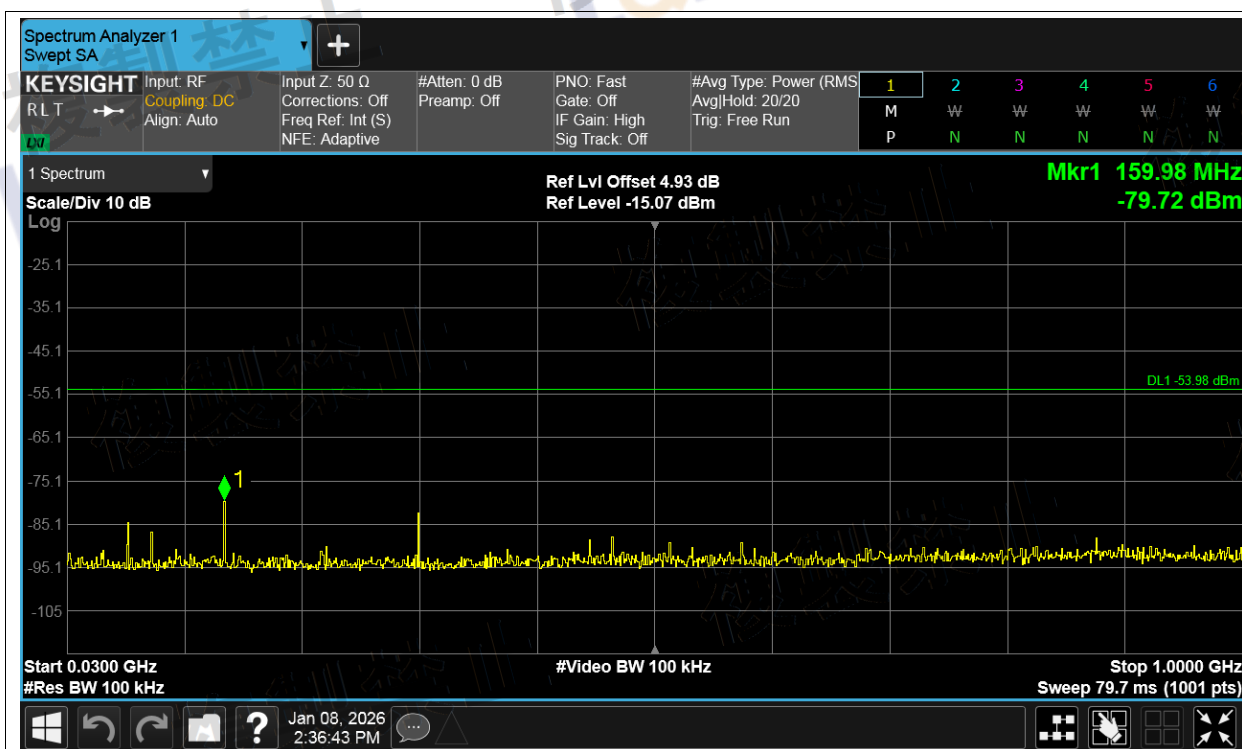


Rx. Spurious NVNT n40 5670MHz Ant1 @ 1000MHz-26000MHz

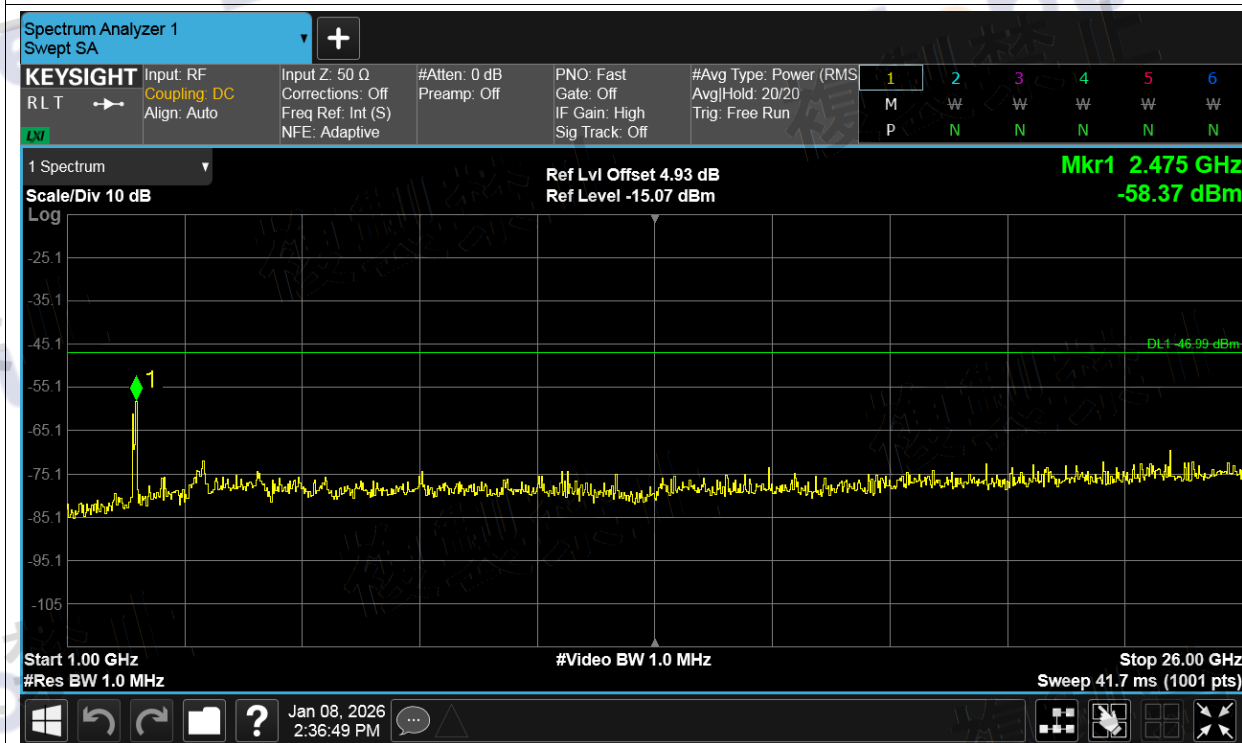


Rx. Spurious NVNT ac20 5180MHz Ant1 @ 30MHz-1000MHz

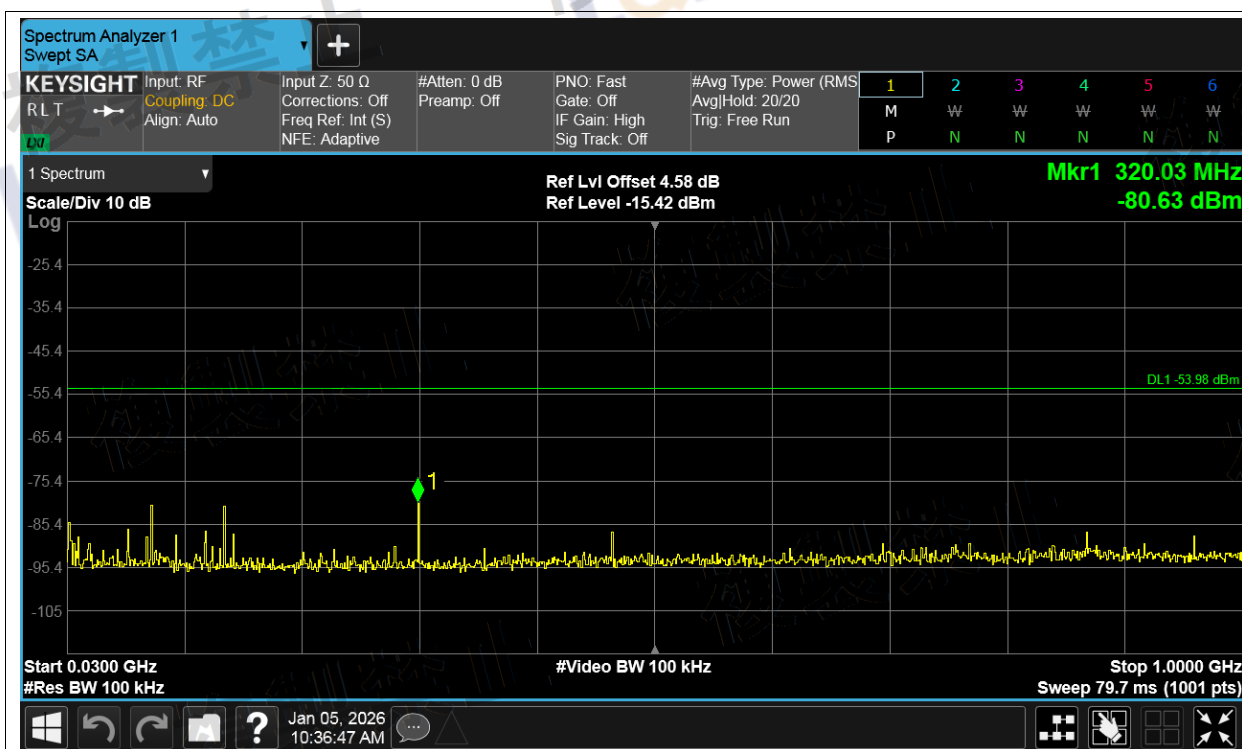


Rx. Spurious NVNT ac20 5180MHz Ant1 @ 1000MHz-26000MHz

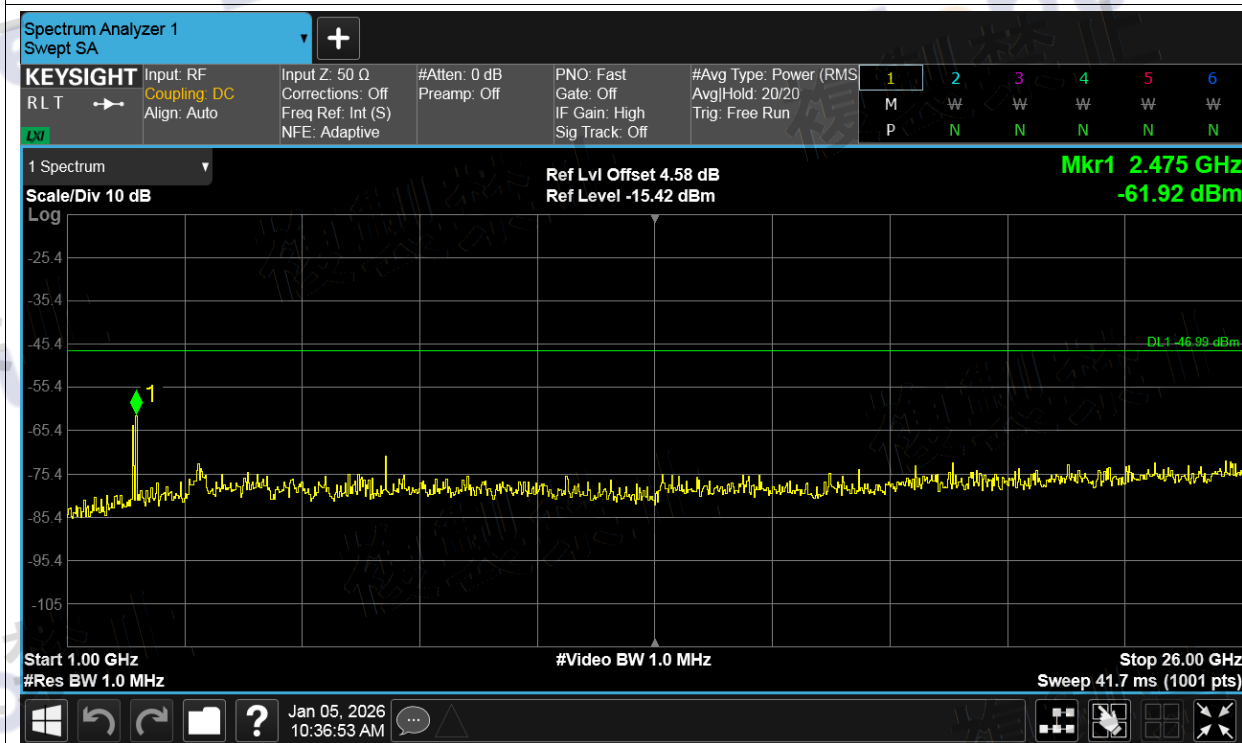


Rx. Spurious NVNT ac20 5200MHz Ant1 @ 30MHz-1000MHz

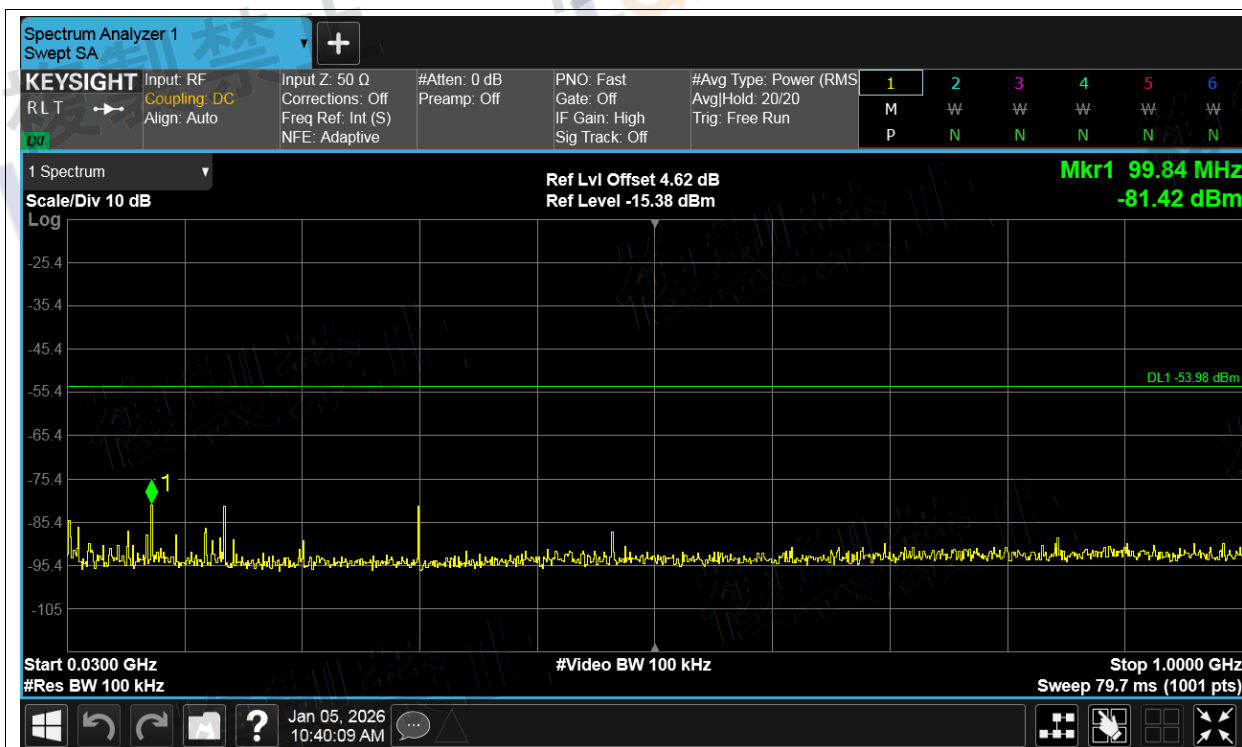


Rx. Spurious NVNT ac20 5200MHz Ant1 @ 1000MHz-26000MHz

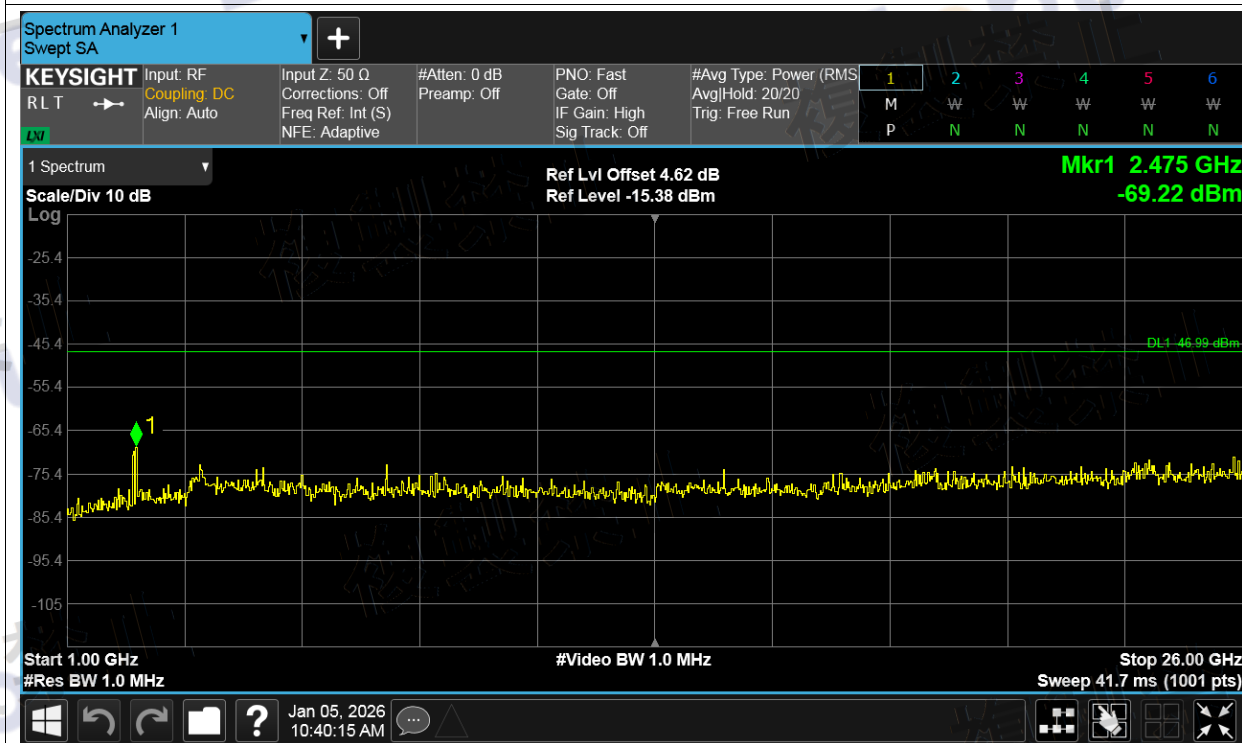


Rx. Spurious NVNT ac20 5240MHz Ant1 @ 30MHz-1000MHz

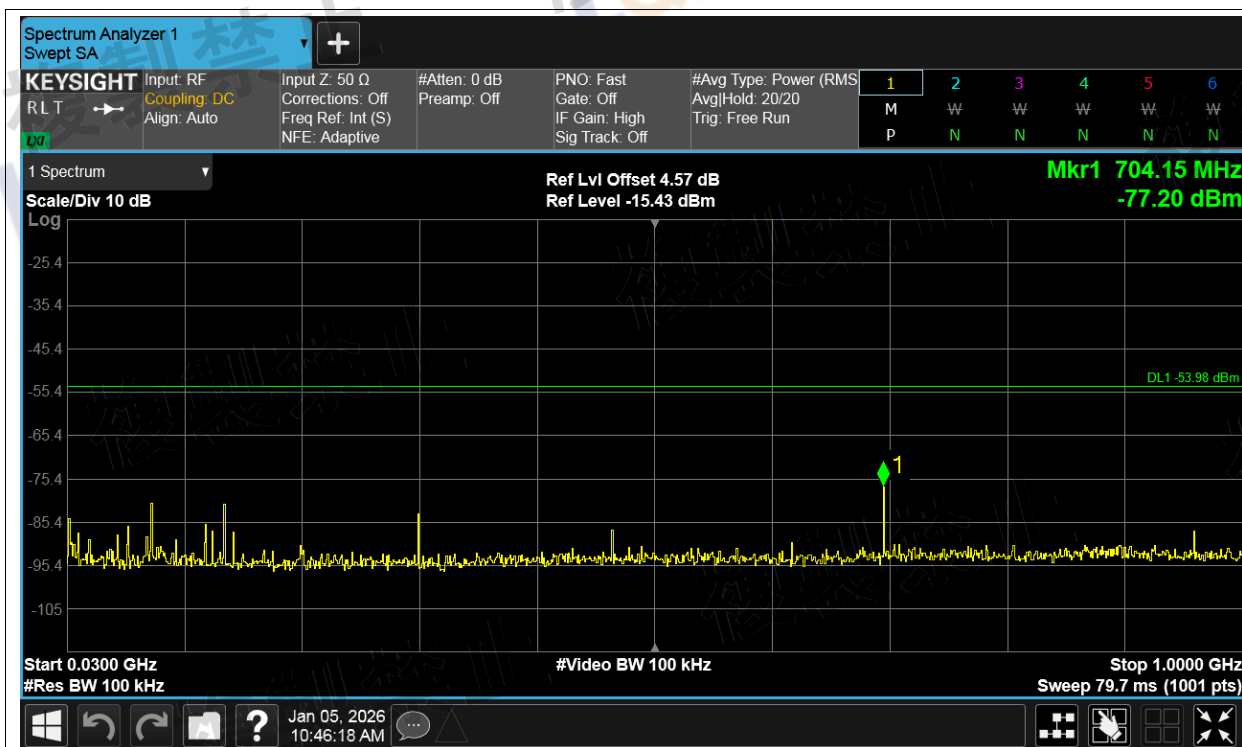


Rx. Spurious NVNT ac20 5240MHz Ant1 @ 1000MHz-26000MHz

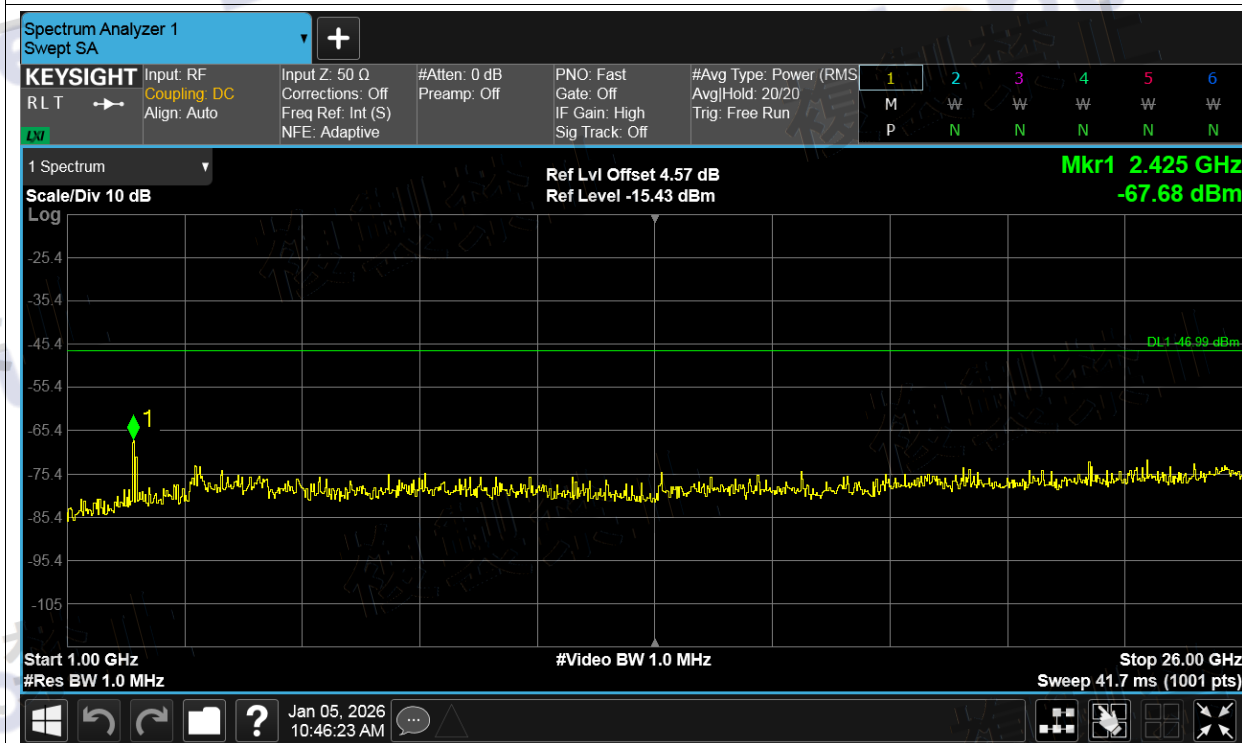


Rx. Spurious NVNT ac20 5260MHz Ant1 @ 30MHz-1000MHz

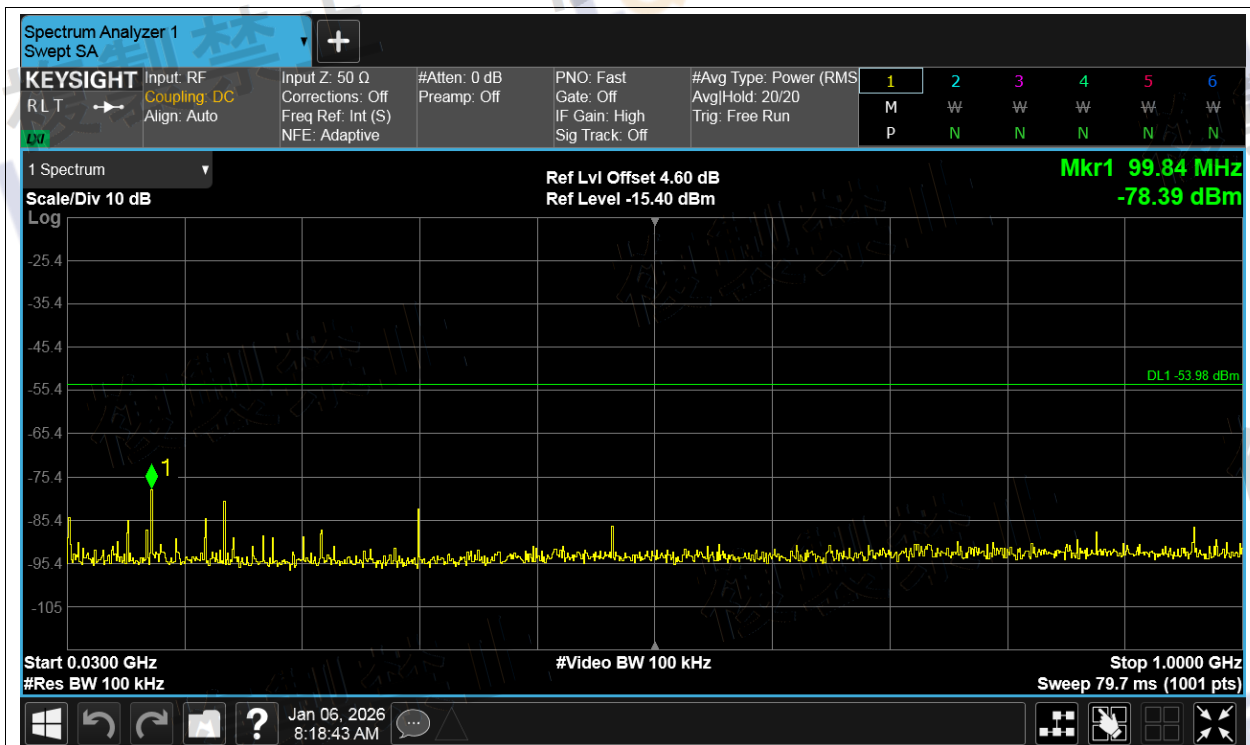


Rx. Spurious NVNT ac20 5260MHz Ant1 @ 1000MHz-26000MHz

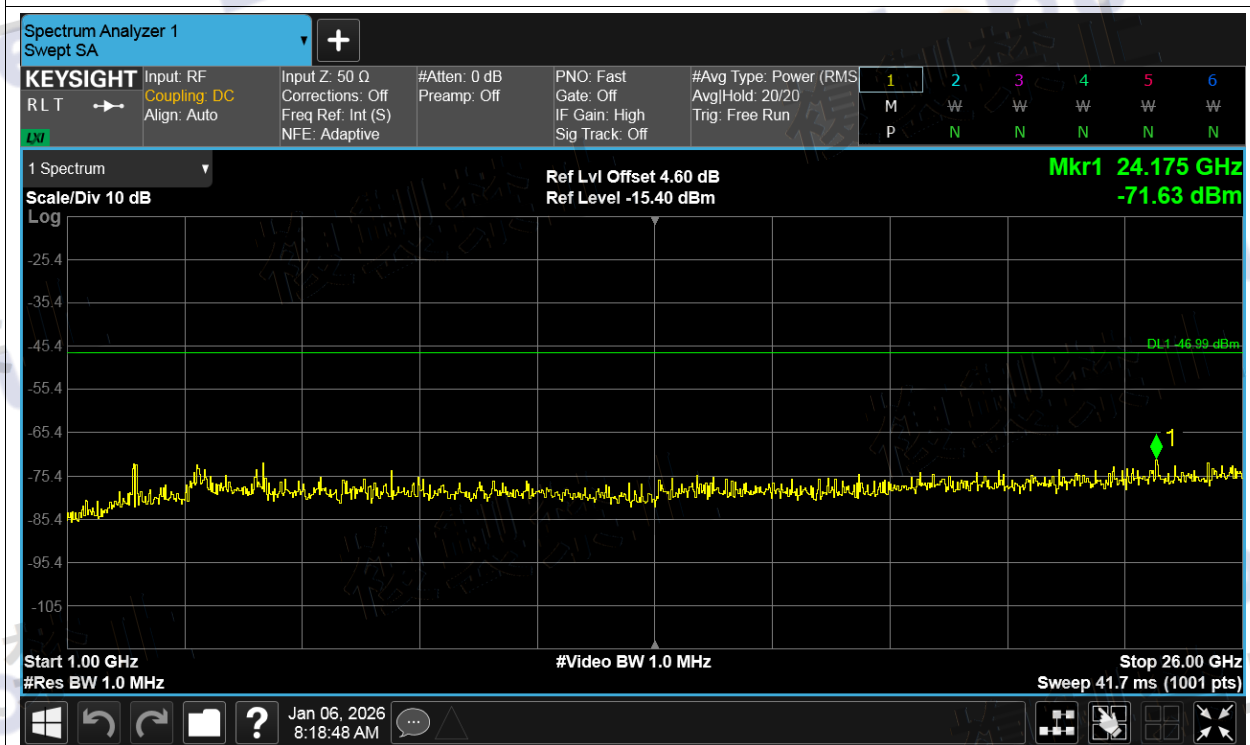


Rx. Spurious NVNT ac20 5300MHz Ant1 @ 30MHz-1000MHz

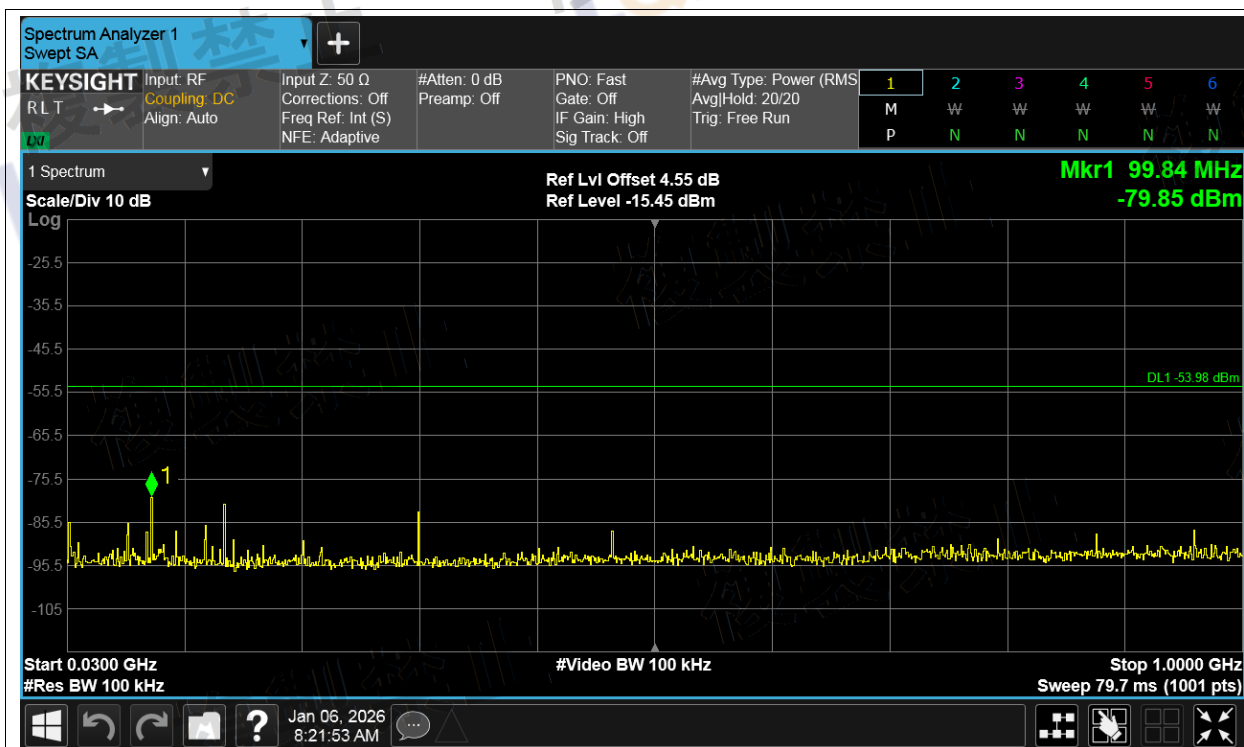


Rx. Spurious NVNT ac20 5300MHz Ant1 @ 1000MHz-26000MHz

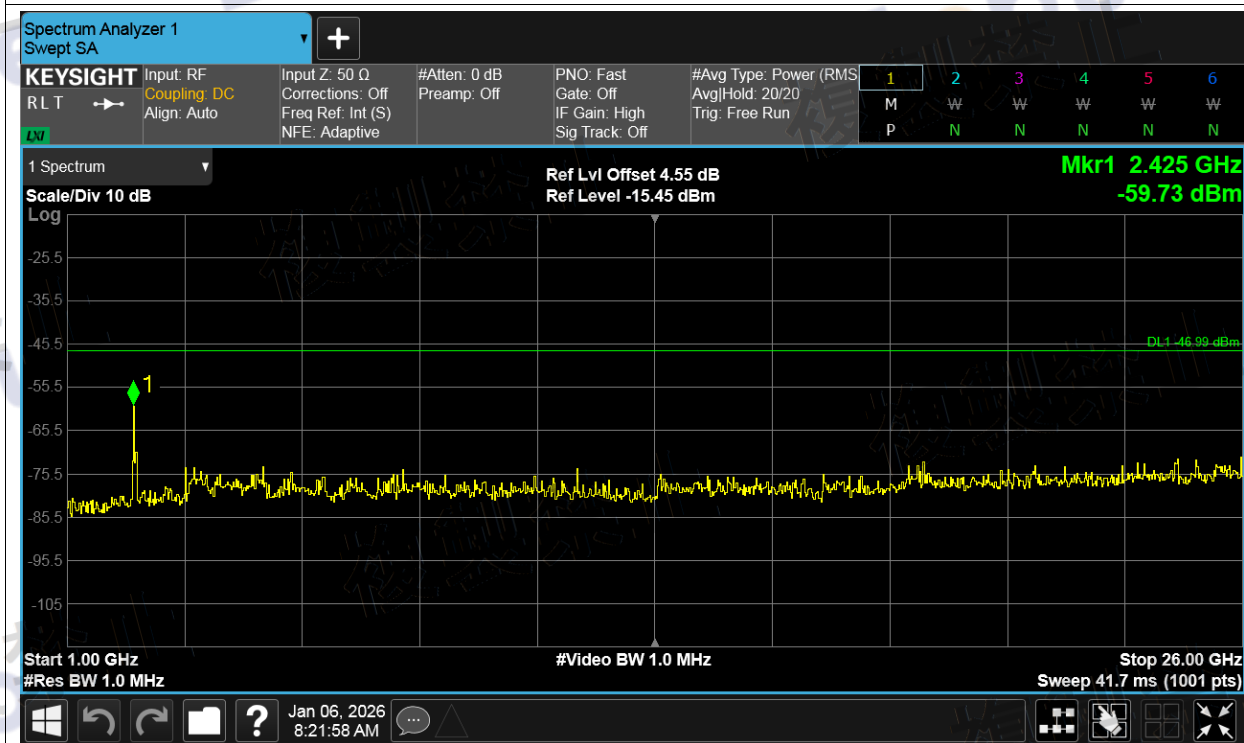


Rx. Spurious NVNT ac20 5320MHz Ant1 @ 30MHz-1000MHz

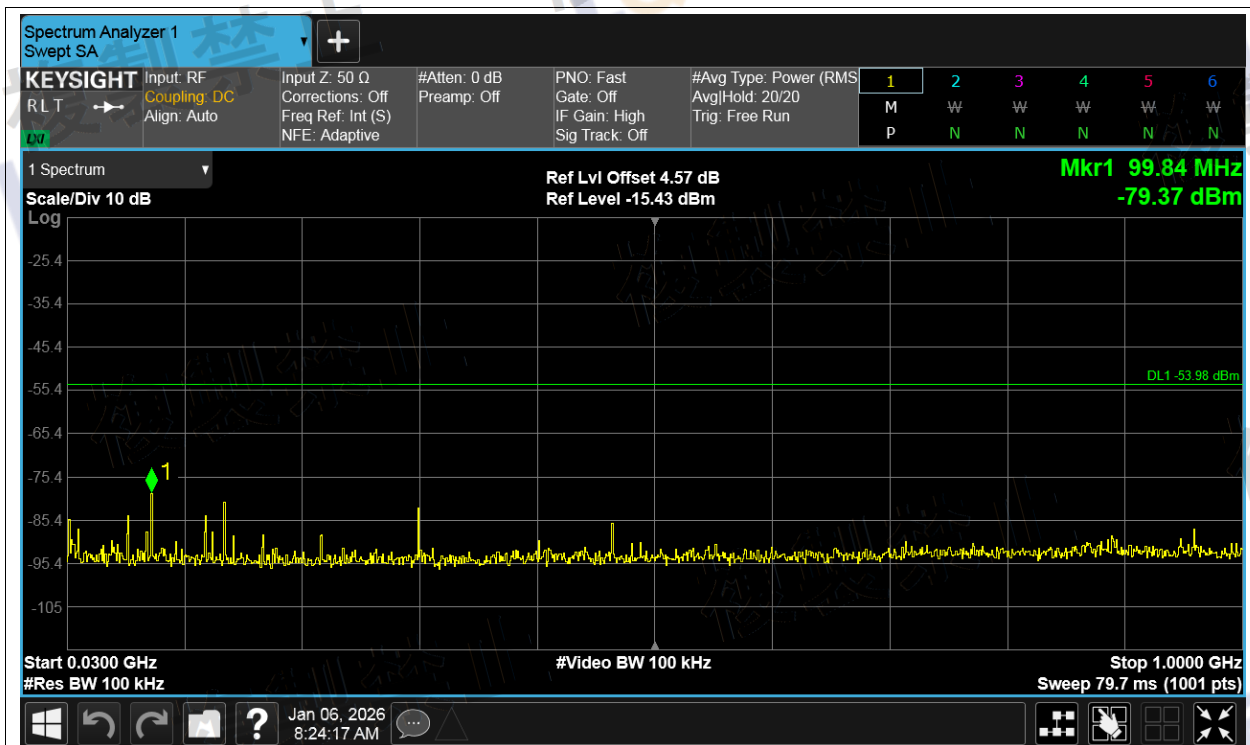


Rx. Spurious NVNT ac20 5320MHz Ant1 @ 1000MHz-26000MHz

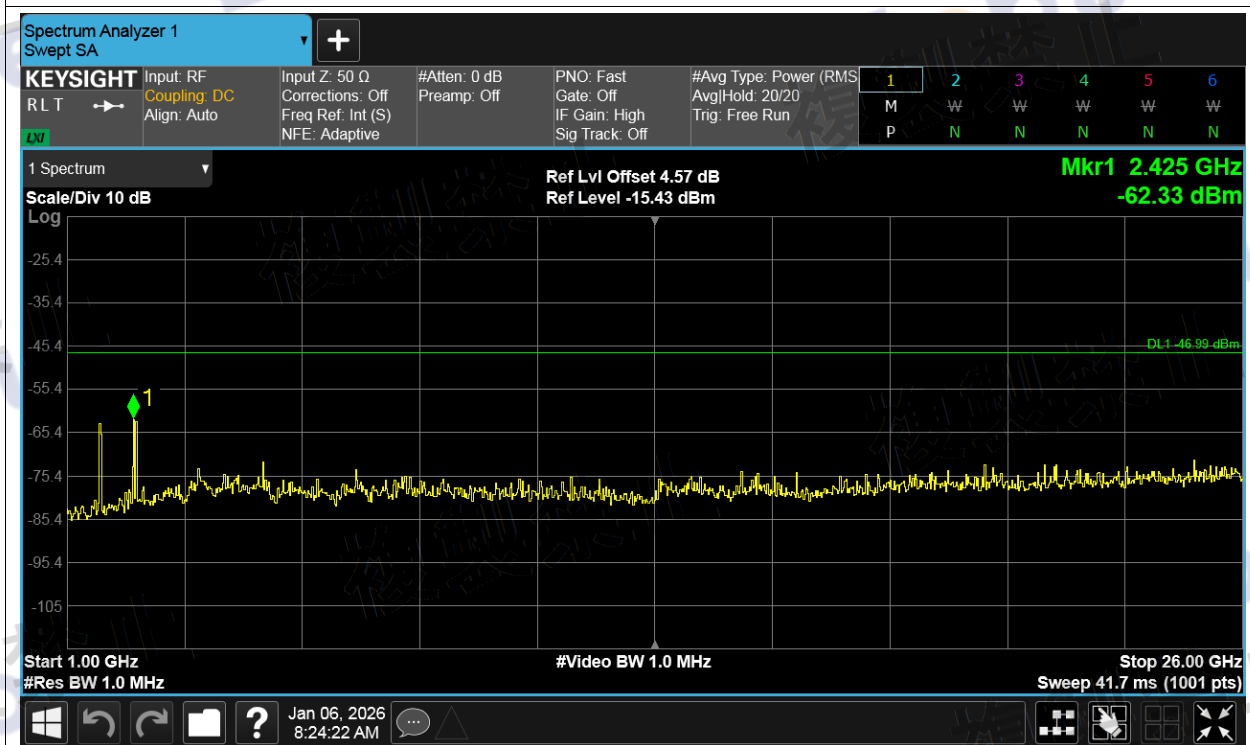


Rx. Spurious NVNT ac20 5500MHz Ant1 @ 30MHz-1000MHz

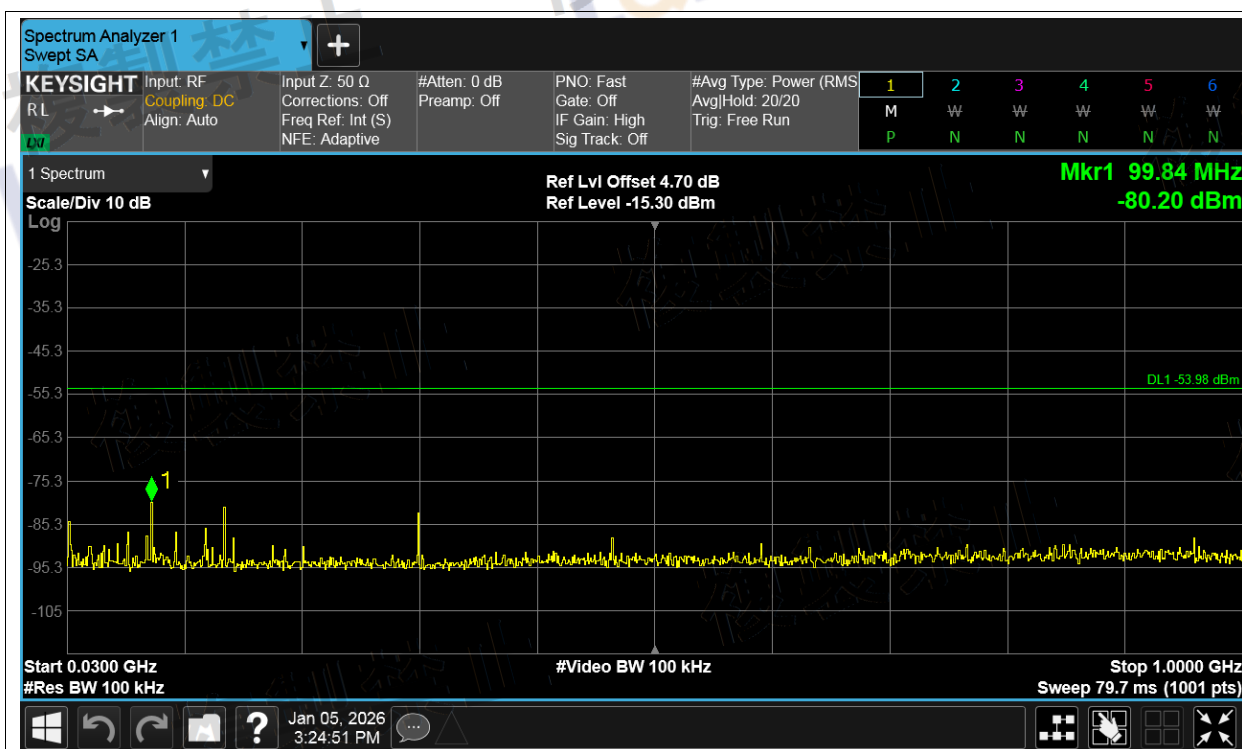


Rx. Spurious NVNT ac20 5500MHz Ant1 @ 1000MHz-26000MHz

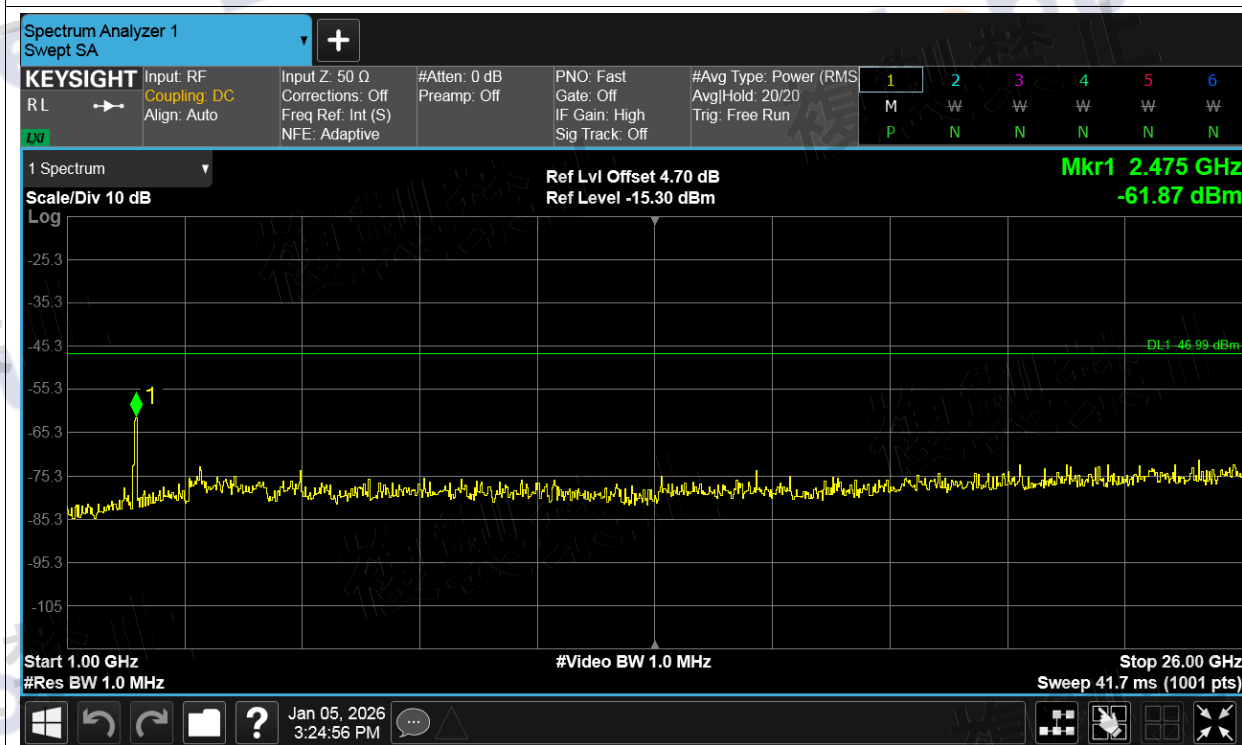


Rx. Spurious NVNT ac20 5580MHz Ant1 @ 30MHz-1000MHz

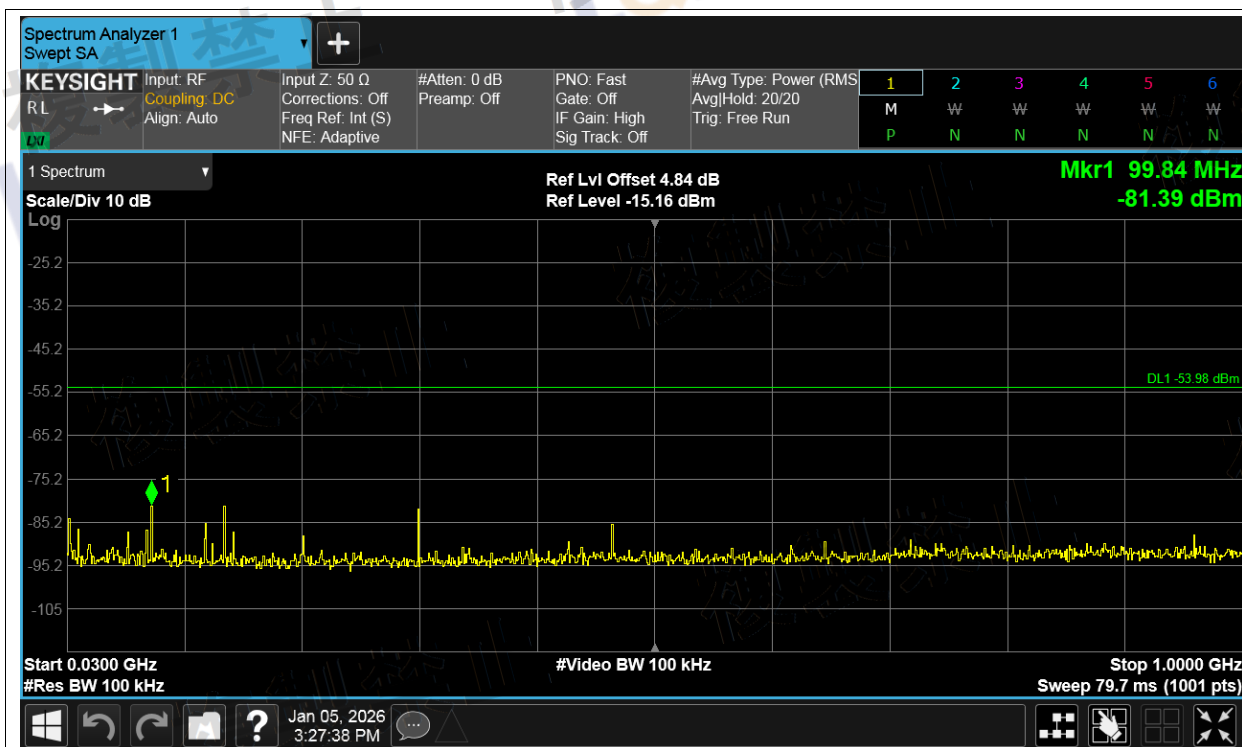


Rx. Spurious NVNT ac20 5580MHz Ant1 @ 1000MHz-26000MHz

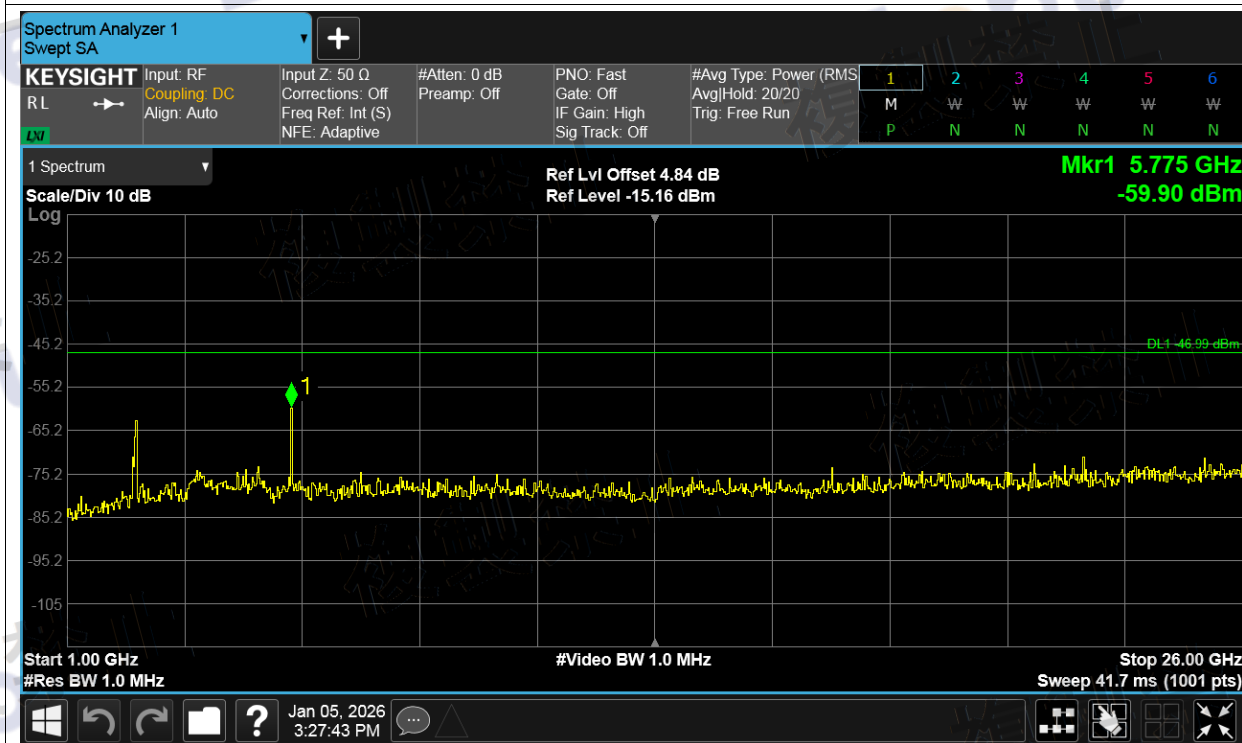


Rx. Spurious NVNT ac20 5700MHz Ant1 @ 30MHz-1000MHz

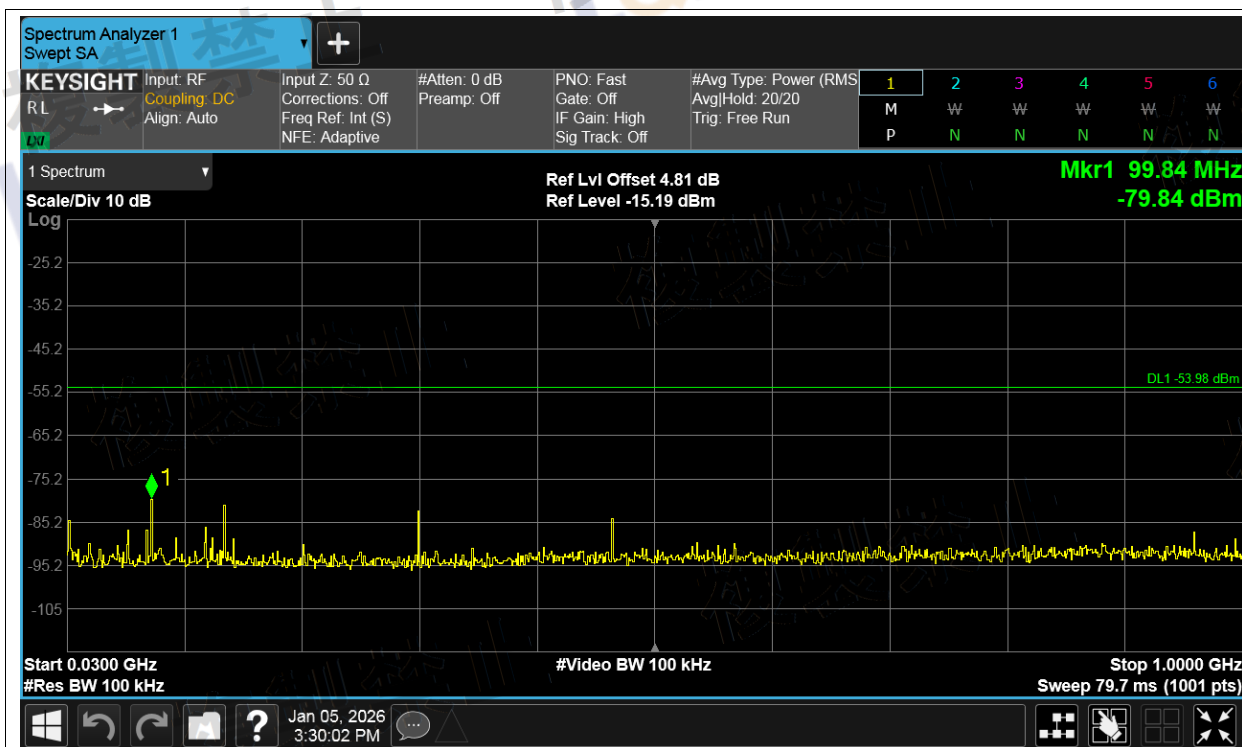


Rx. Spurious NVNT ac20 5700MHz Ant1 @ 1000MHz-26000MHz

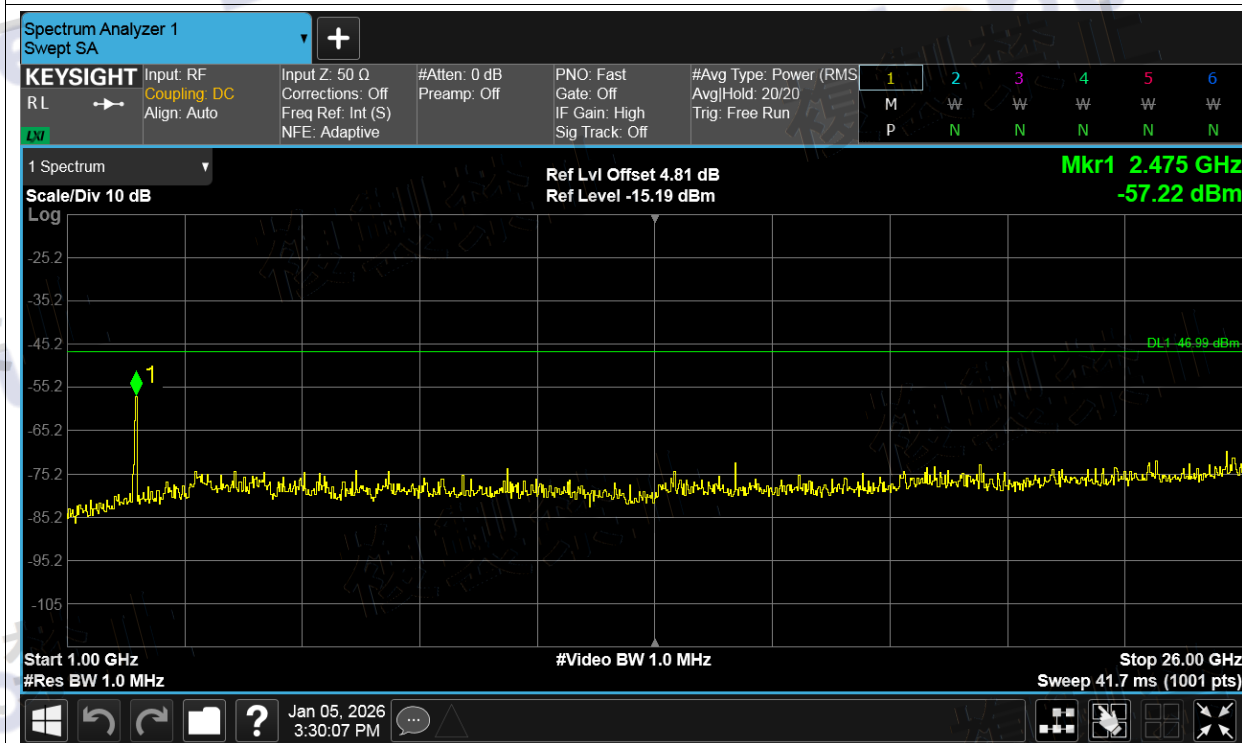


Rx. Spurious NVNT ac40 5190MHz Ant1 @ 30MHz-1000MHz

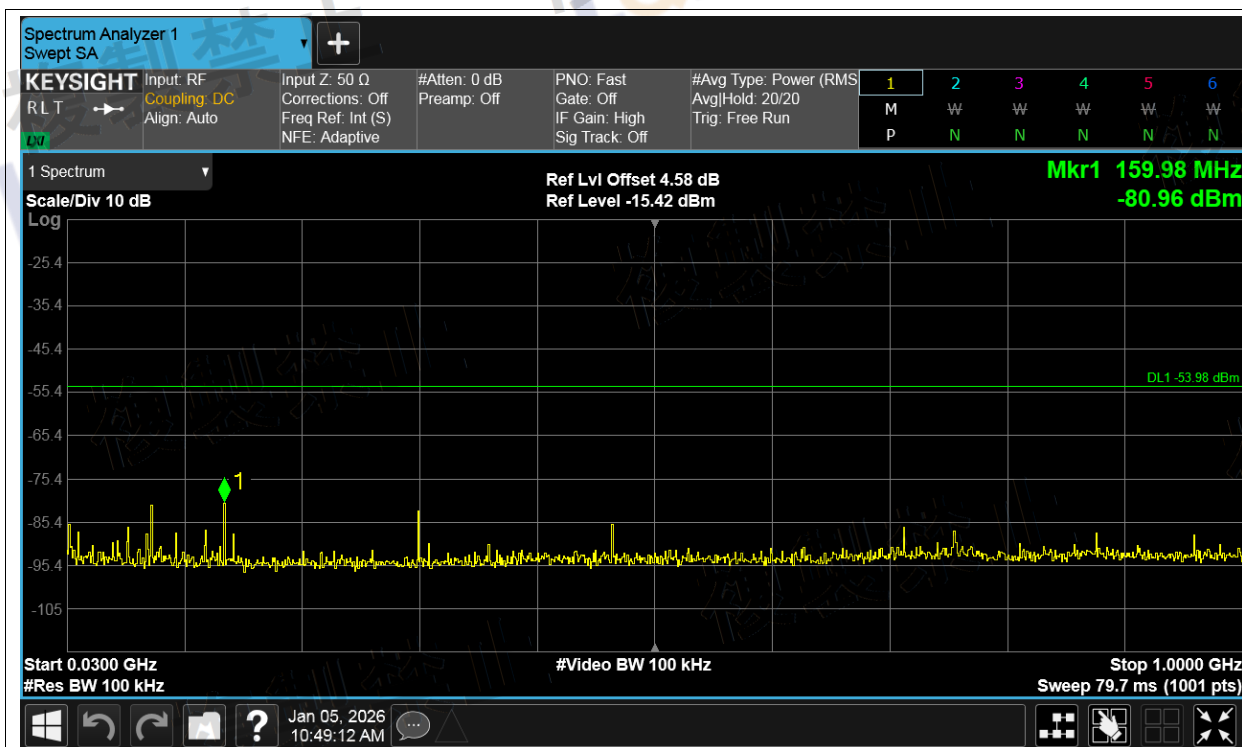


Rx. Spurious NVNT ac40 5190MHz Ant1 @ 1000MHz-26000MHz

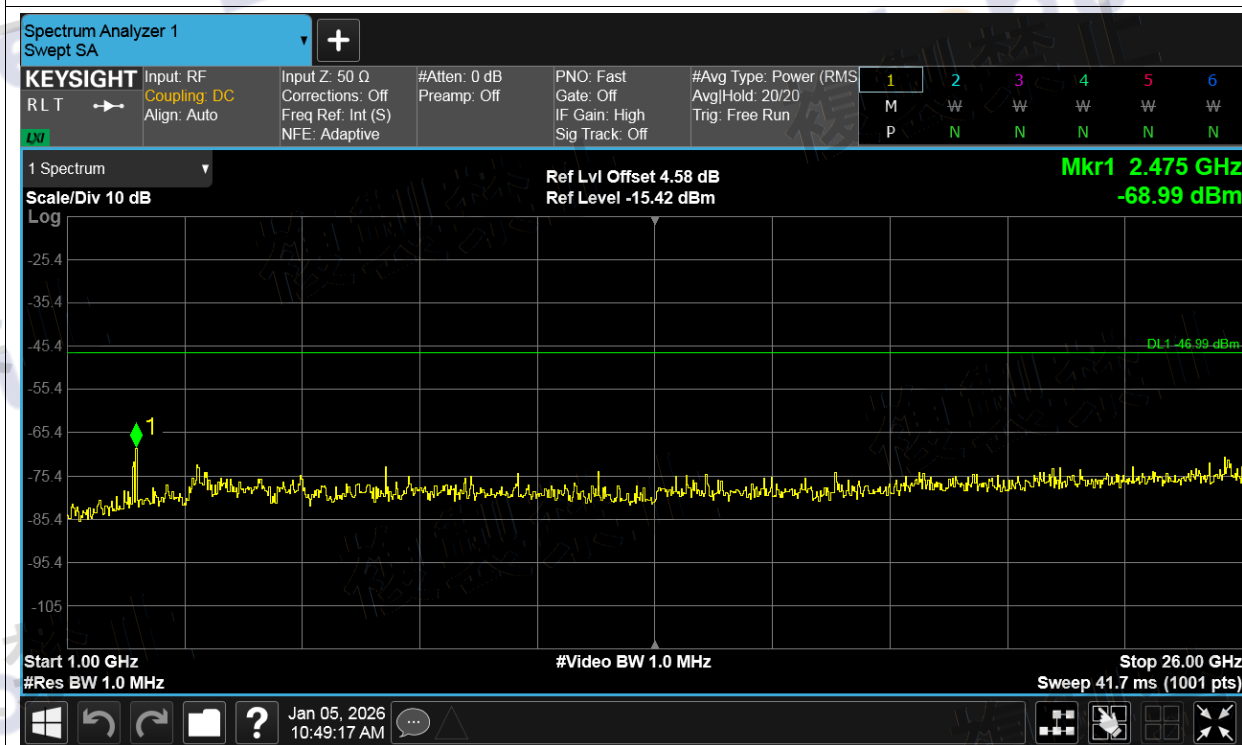


Rx. Spurious NVNT ac40 5200MHz Ant1 @ 30MHz-1000MHz

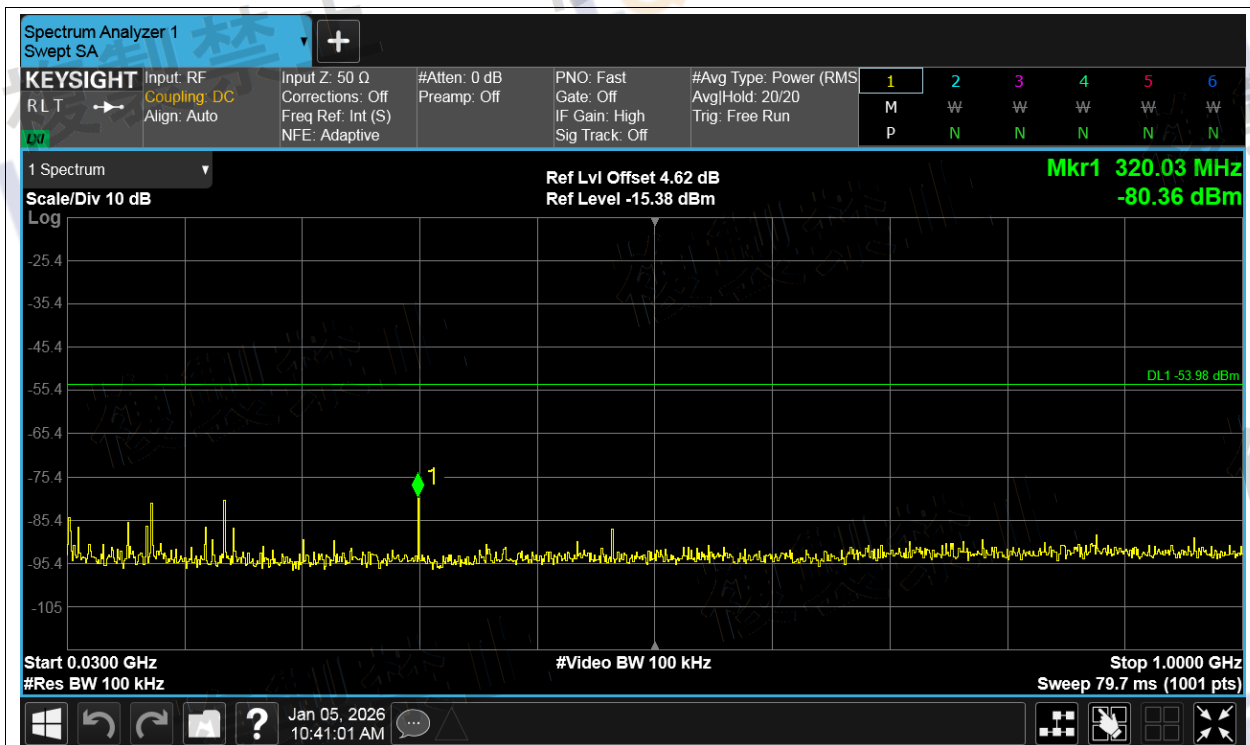


Rx. Spurious NVNT ac40 5200MHz Ant1 @ 1000MHz-26000MHz

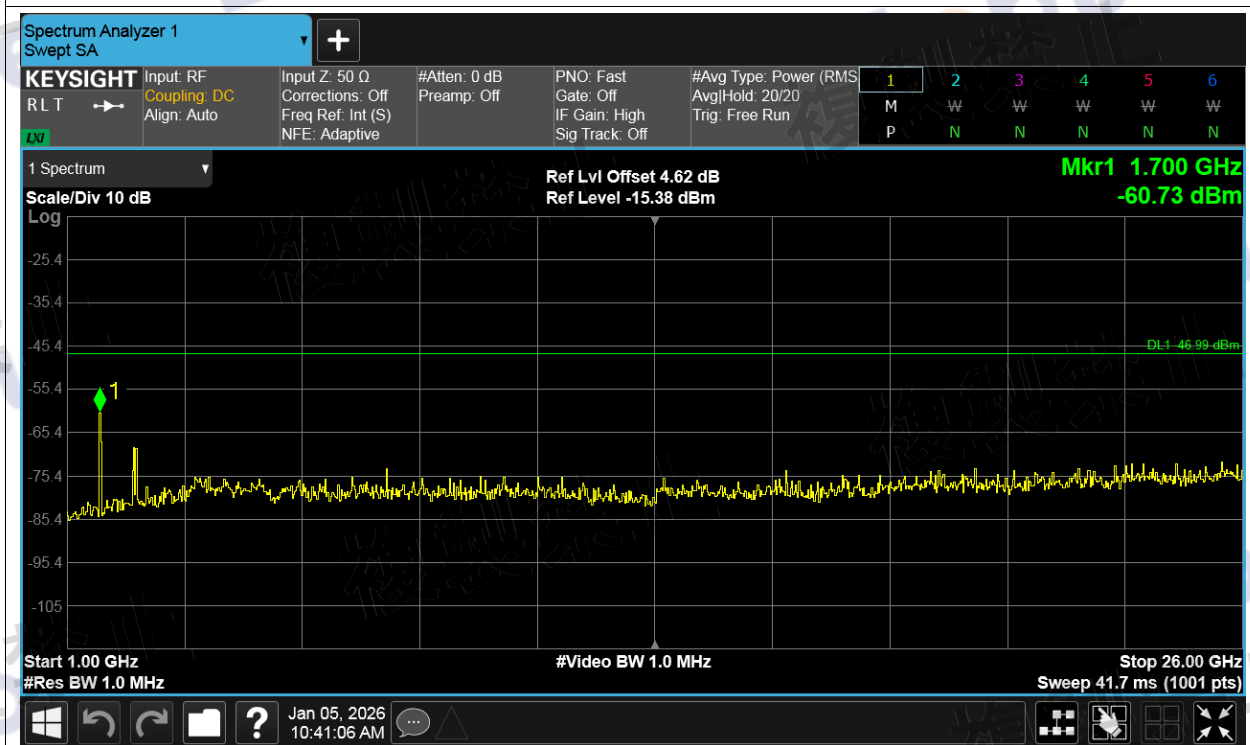


Rx. Spurious NVNT ac40 5230MHz Ant1 @ 30MHz-1000MHz

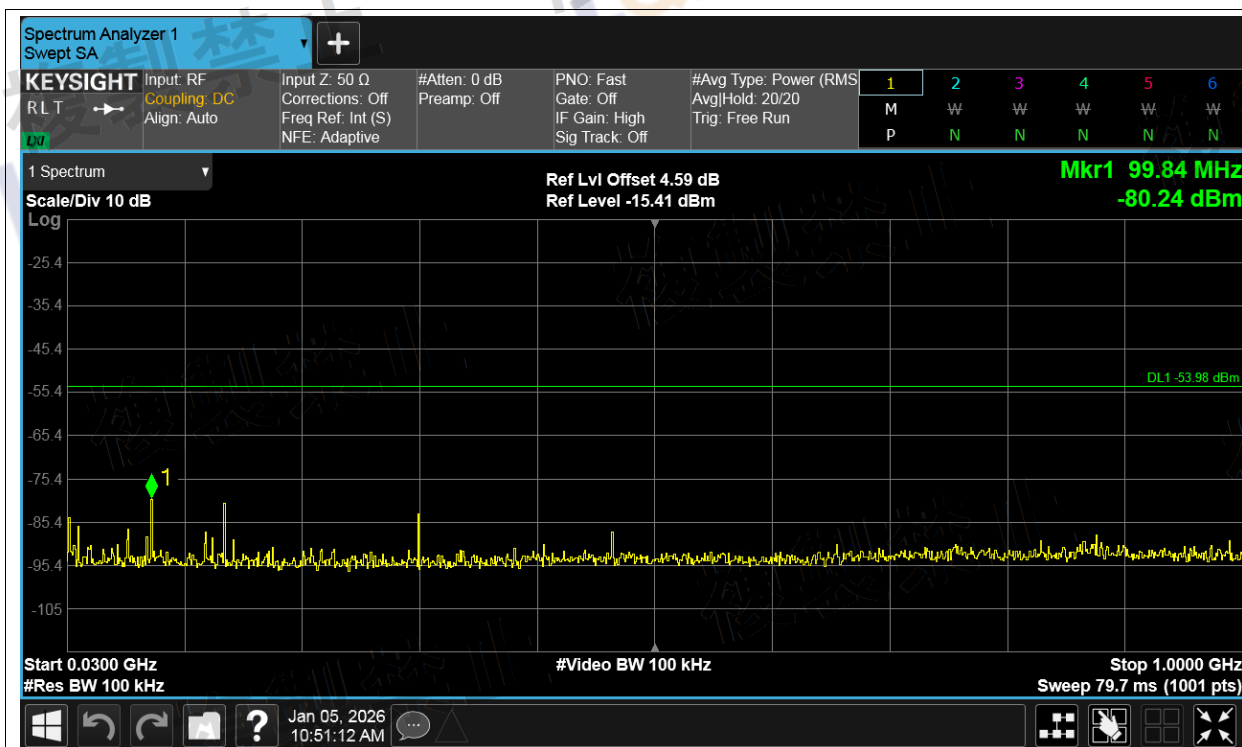


Rx. Spurious NVNT ac40 5230MHz Ant1 @ 1000MHz-26000MHz

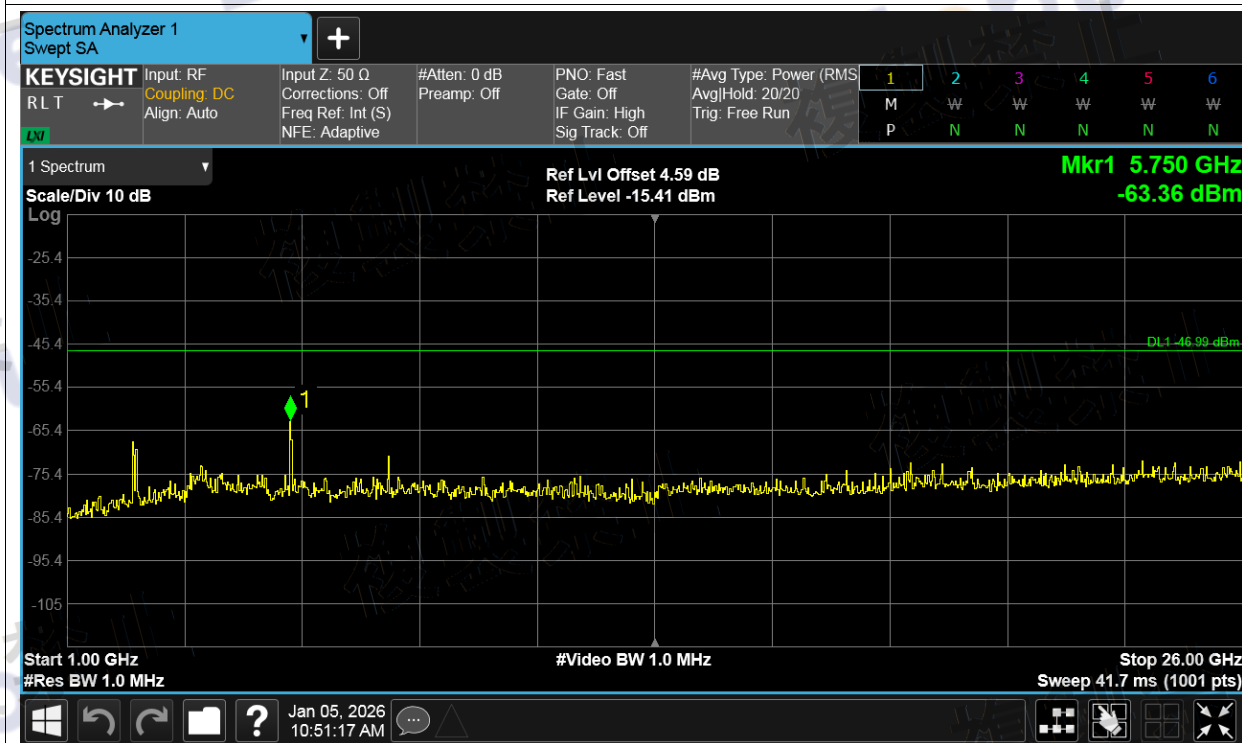


Rx. Spurious NVNT ac40 5270MHz Ant1 @ 30MHz-1000MHz

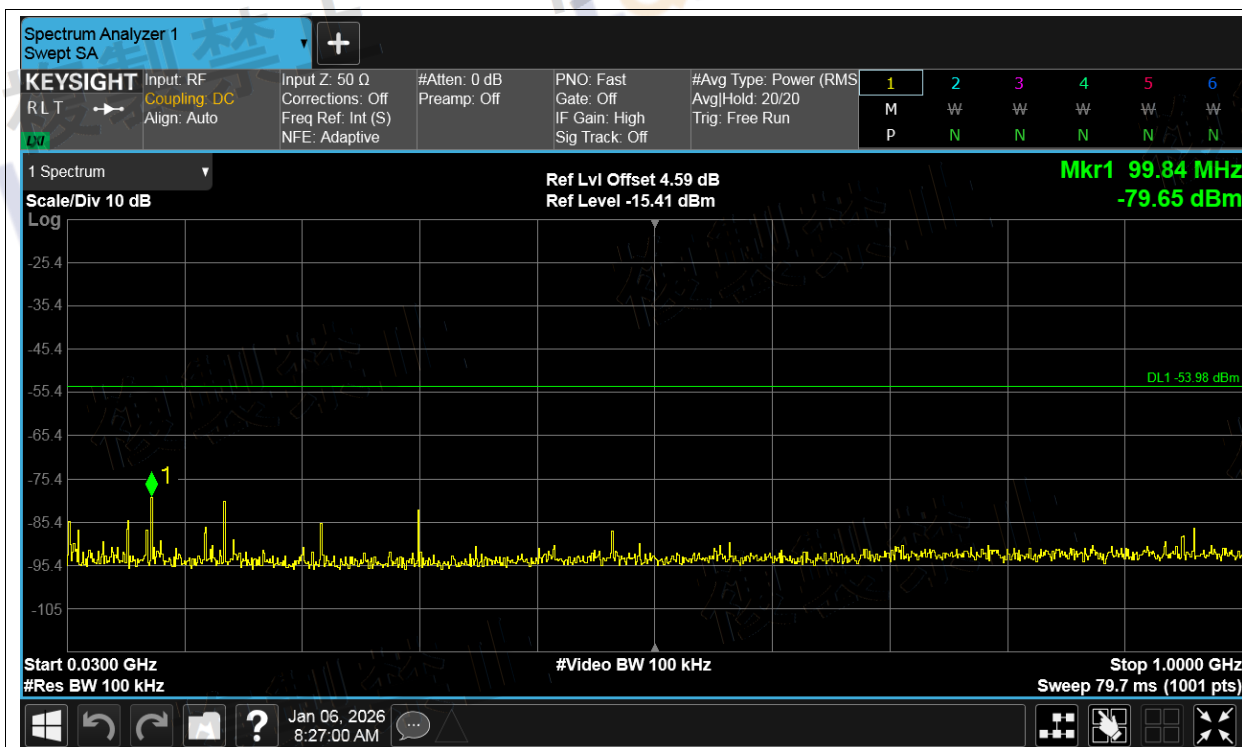


Rx. Spurious NVNT ac40 5270MHz Ant1 @ 1000MHz-26000MHz

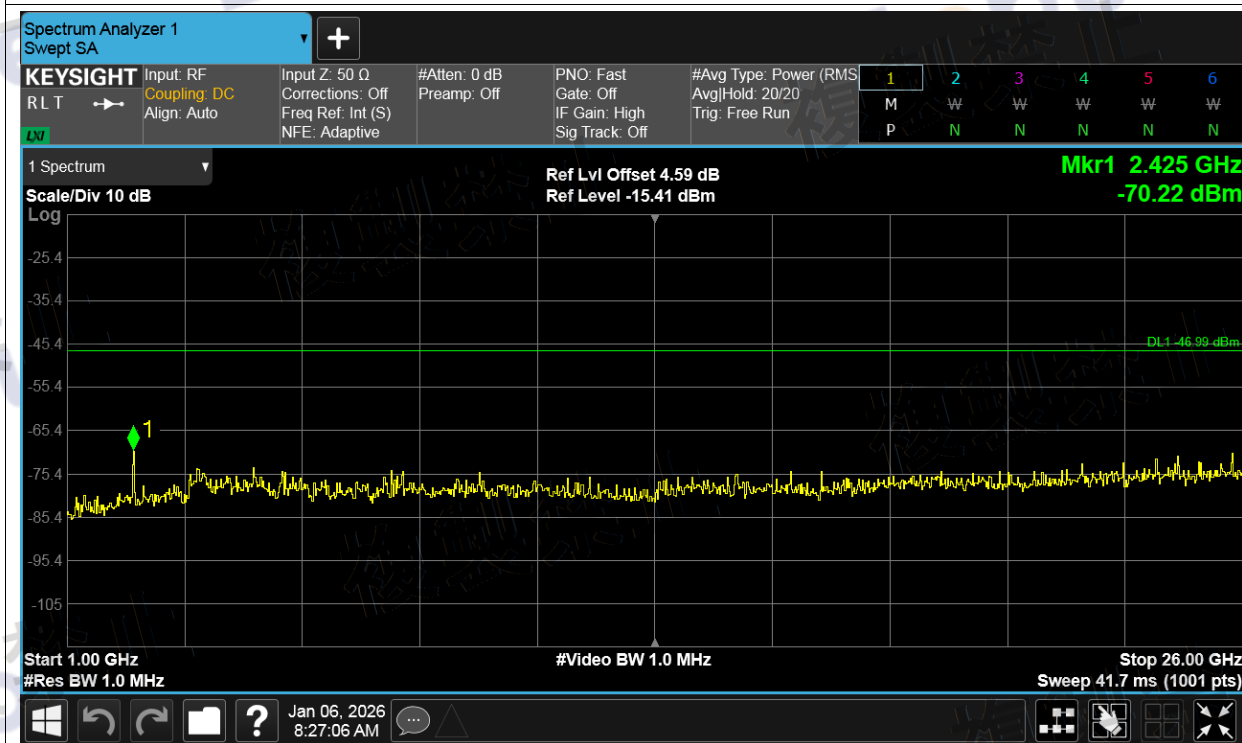


Rx. Spurious NVNT ac40 5310MHz Ant1 @ 30MHz-1000MHz

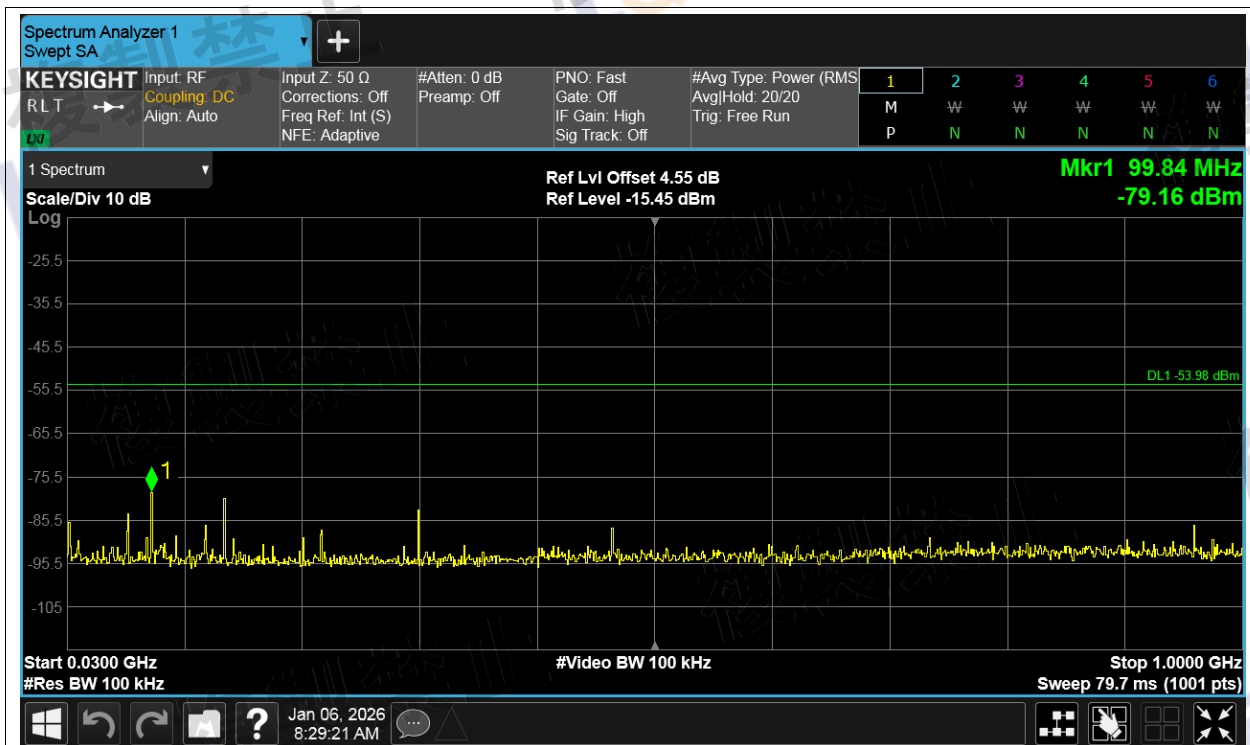


Rx. Spurious NVNT ac40 5310MHz Ant1 @ 1000MHz-26000MHz

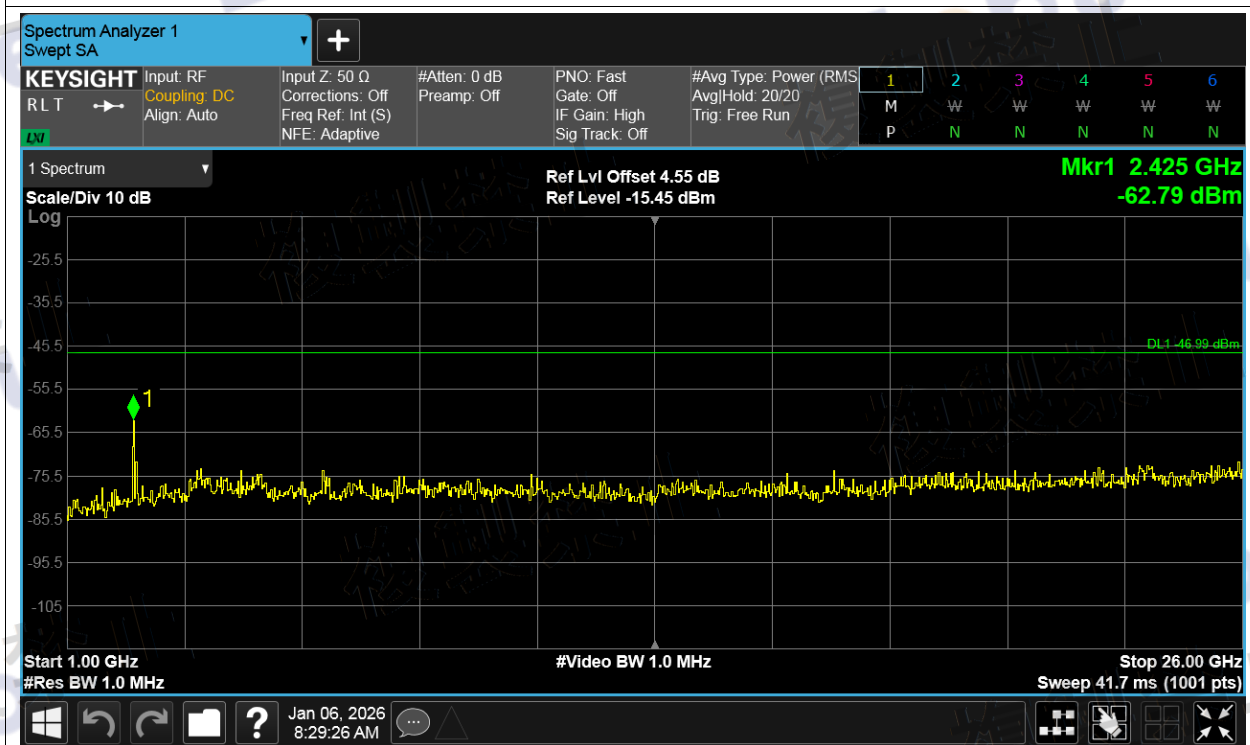


Rx. Spurious NVNT ac40 5510MHz Ant1 @ 30MHz-1000MHz

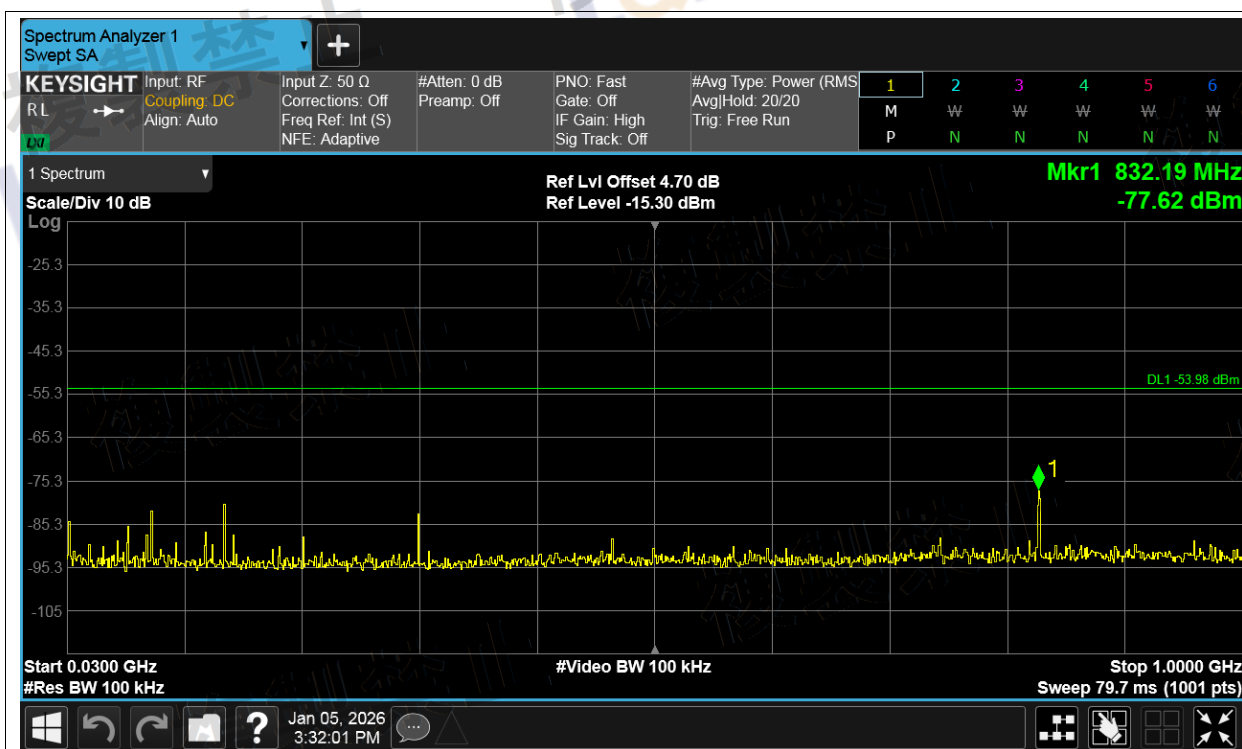


Rx. Spurious NVNT ac40 5510MHz Ant1 @ 1000MHz-26000MHz

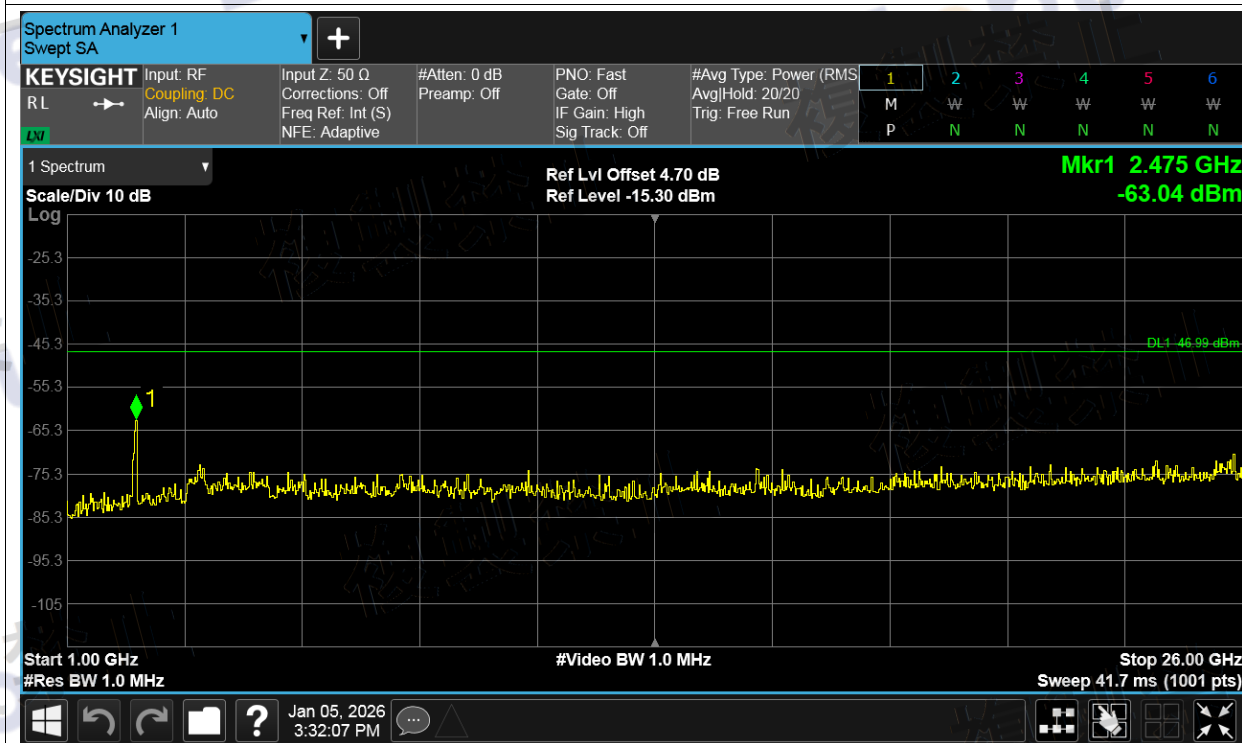


Rx. Spurious NVNT ac40 5590MHz Ant1 @ 30MHz-1000MHz

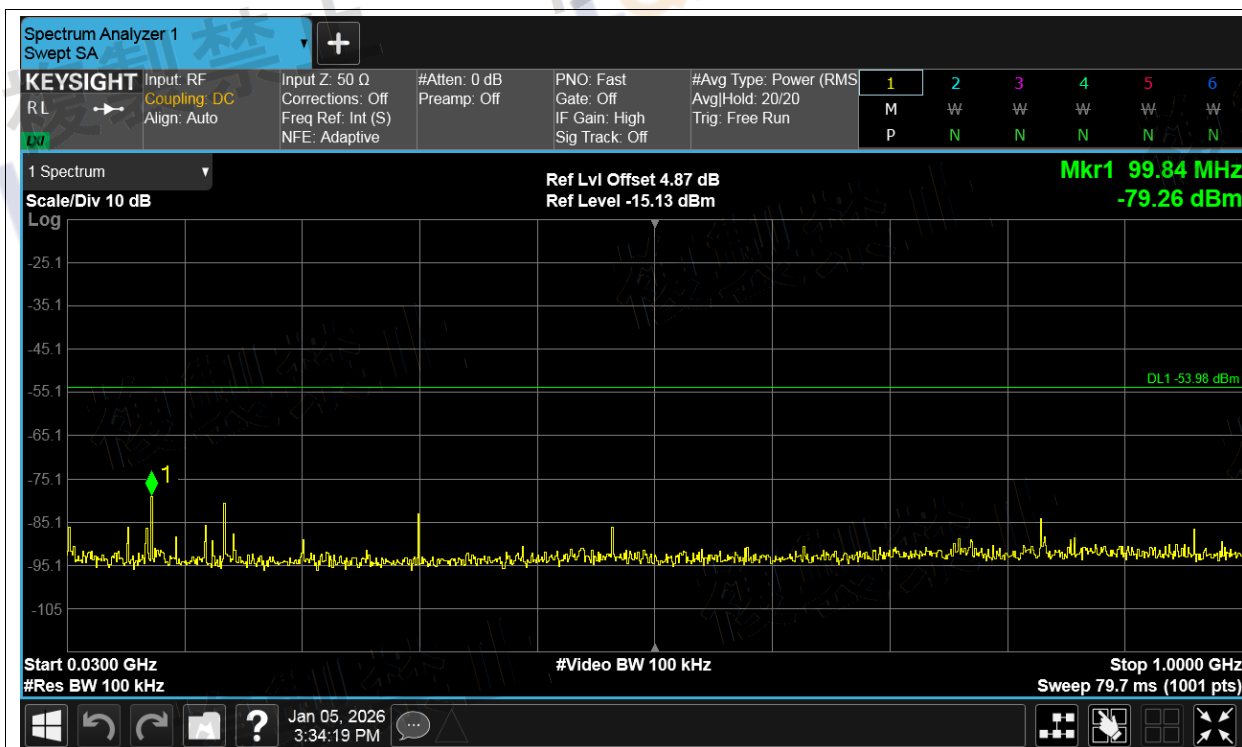


Rx. Spurious NVNT ac40 5590MHz Ant1 @ 1000MHz-26000MHz

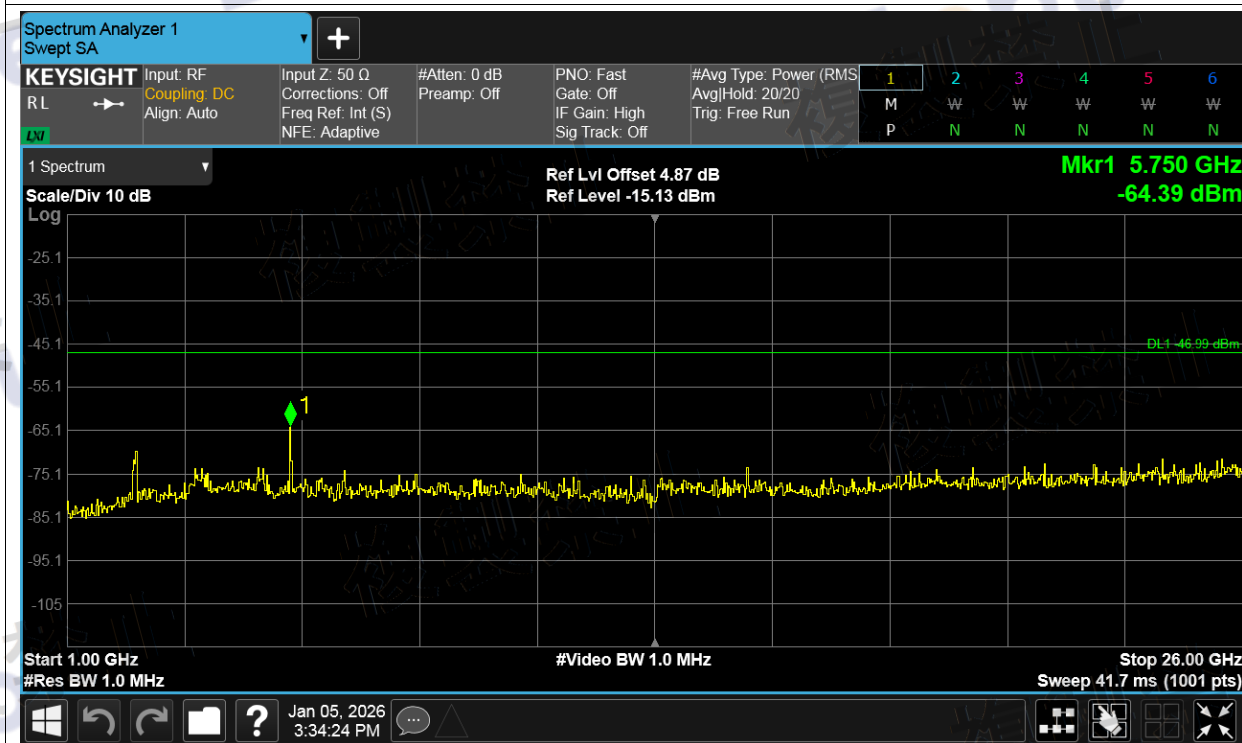


Rx. Spurious NVNT ac40 5670MHz Ant1 @ 30MHz-1000MHz

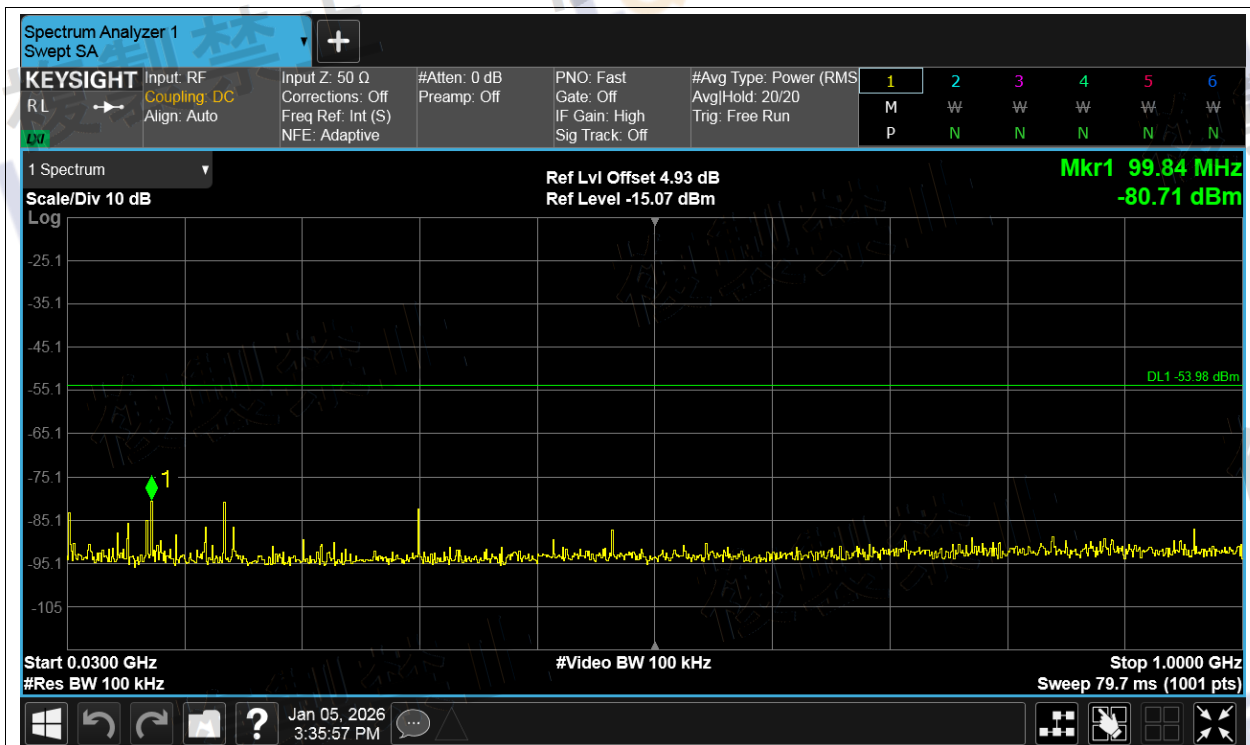


Rx. Spurious NVNT ac40 5670MHz Ant1 @ 1000MHz-26000MHz

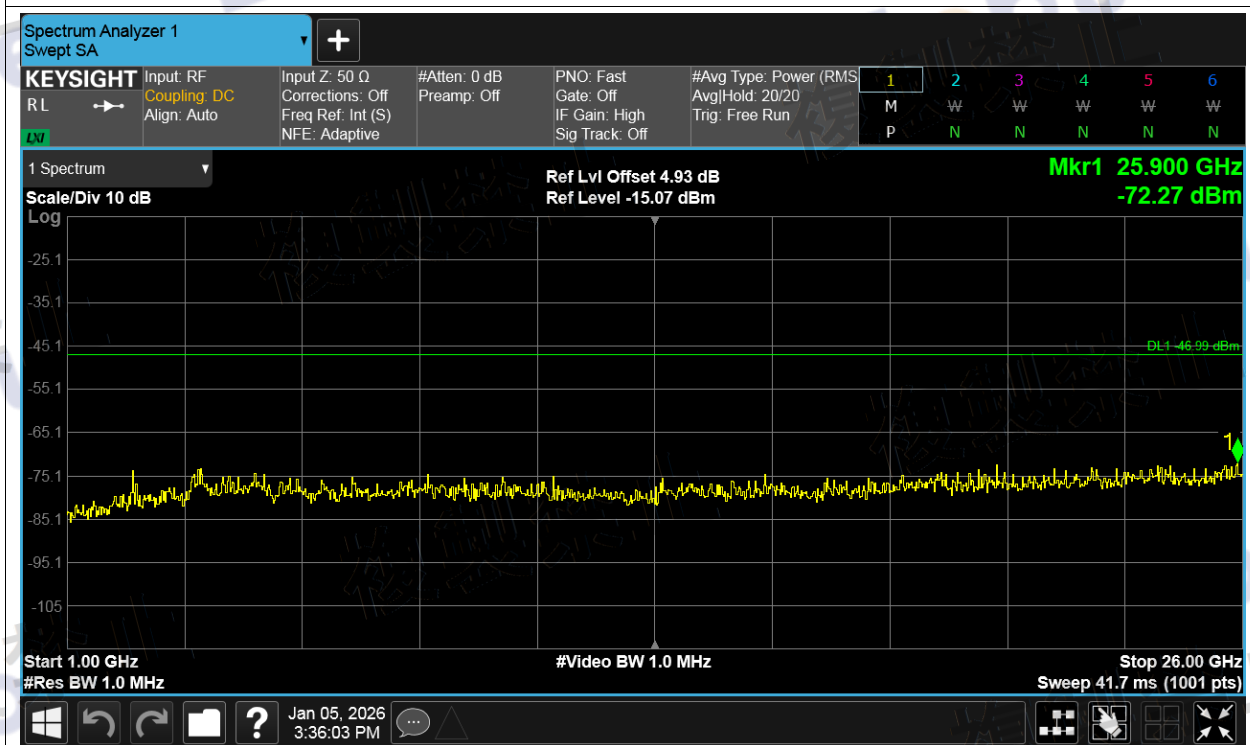


Rx. Spurious NVNT ax20 5180MHz Ant1 @ 30MHz-1000MHz

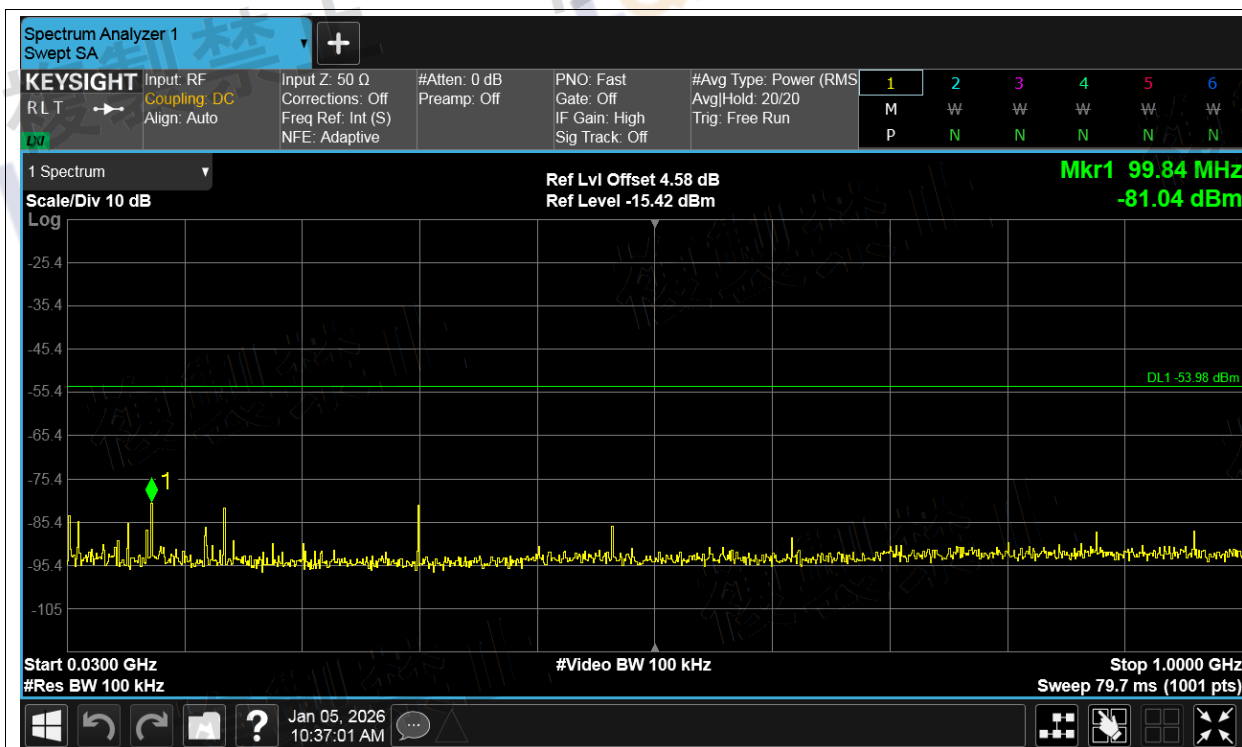


Rx. Spurious NVNT ax20 5180MHz Ant1 @ 1000MHz-26000MHz

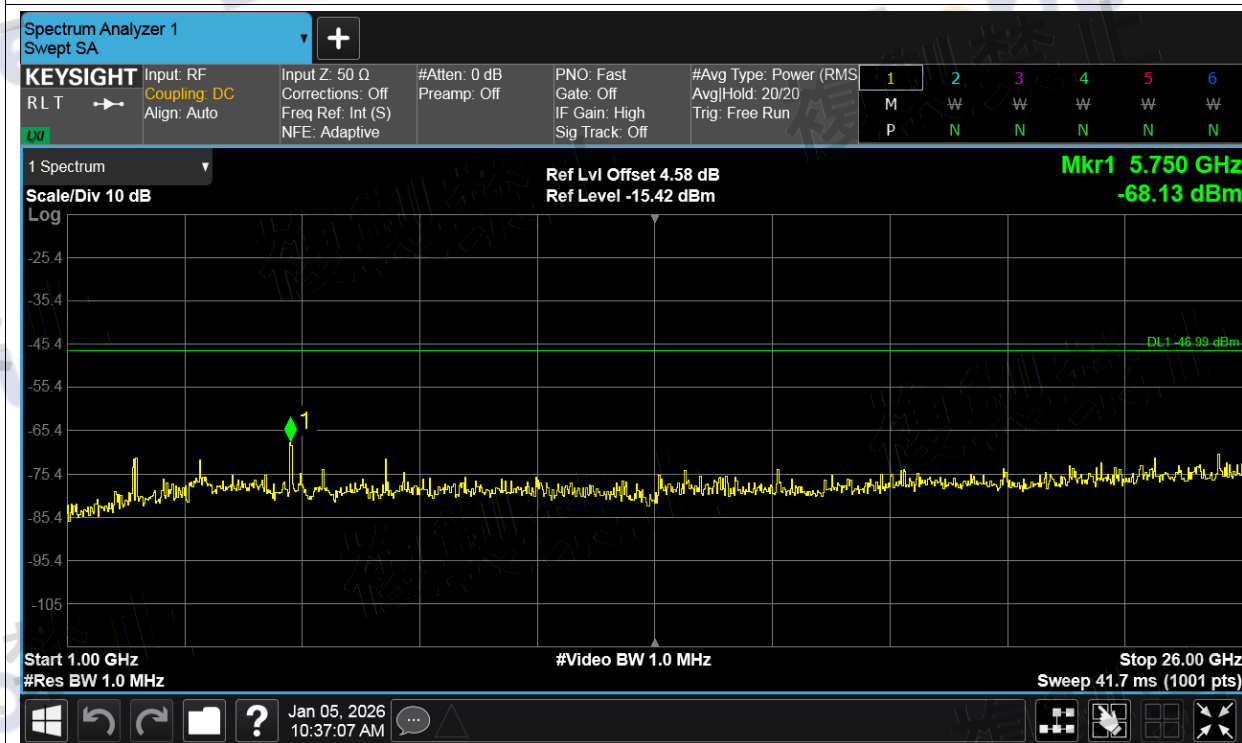


Rx. Spurious NVNT ax20 5200MHz Ant1 @ 30MHz-1000MHz

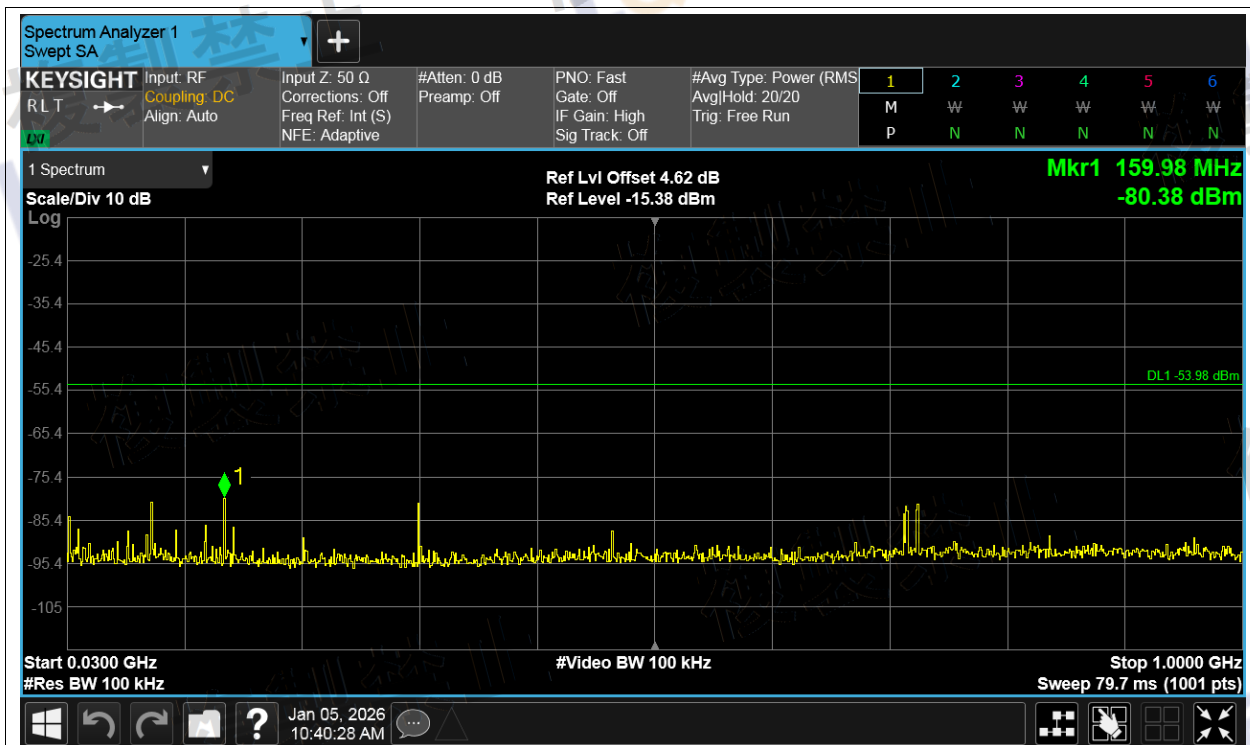


Rx. Spurious NVNT ax20 5200MHz Ant1 @ 1000MHz-26000MHz

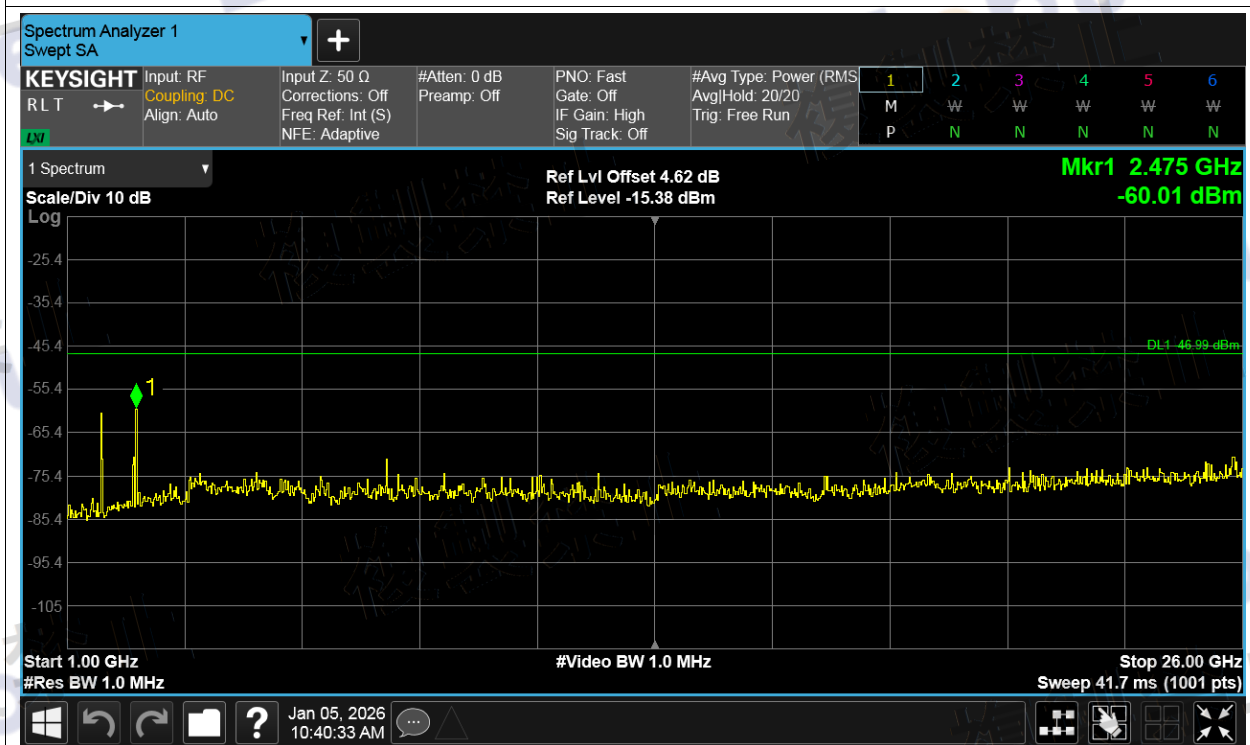


Rx. Spurious NVNT ax20 5240MHz Ant1 @ 30MHz-1000MHz

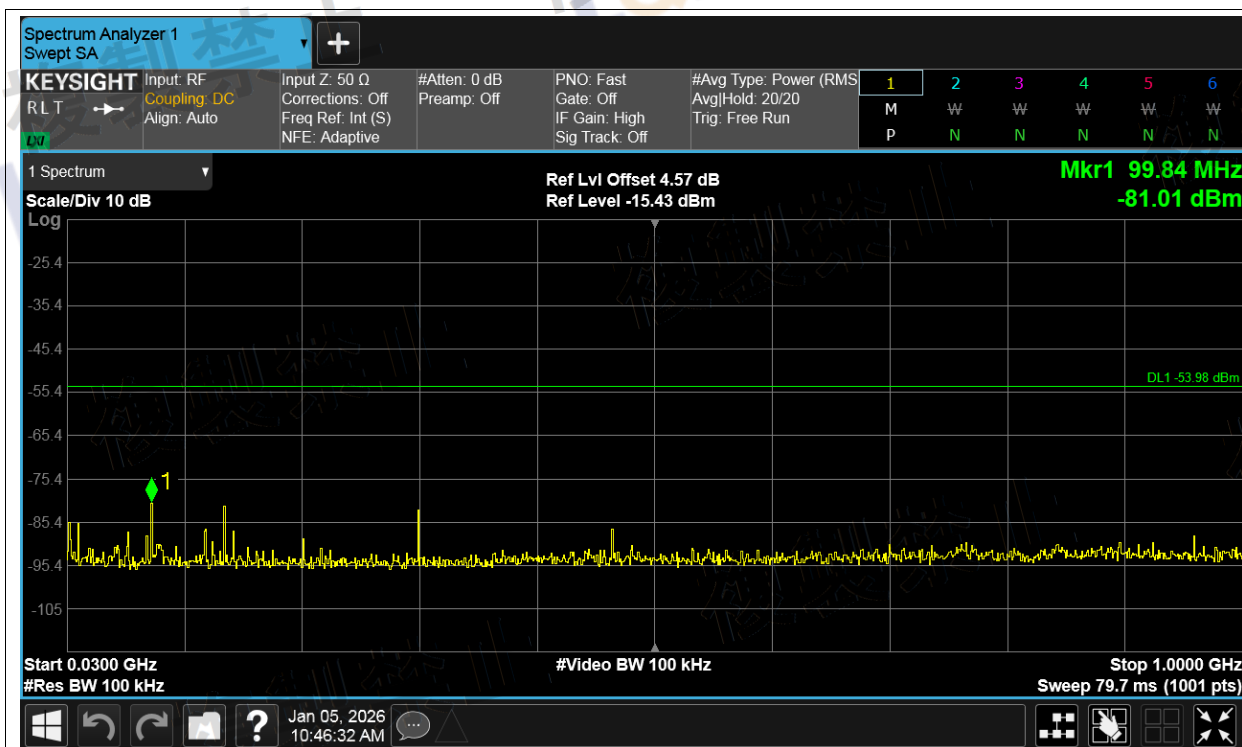


Rx. Spurious NVNT ax20 5240MHz Ant1 @ 1000MHz-26000MHz

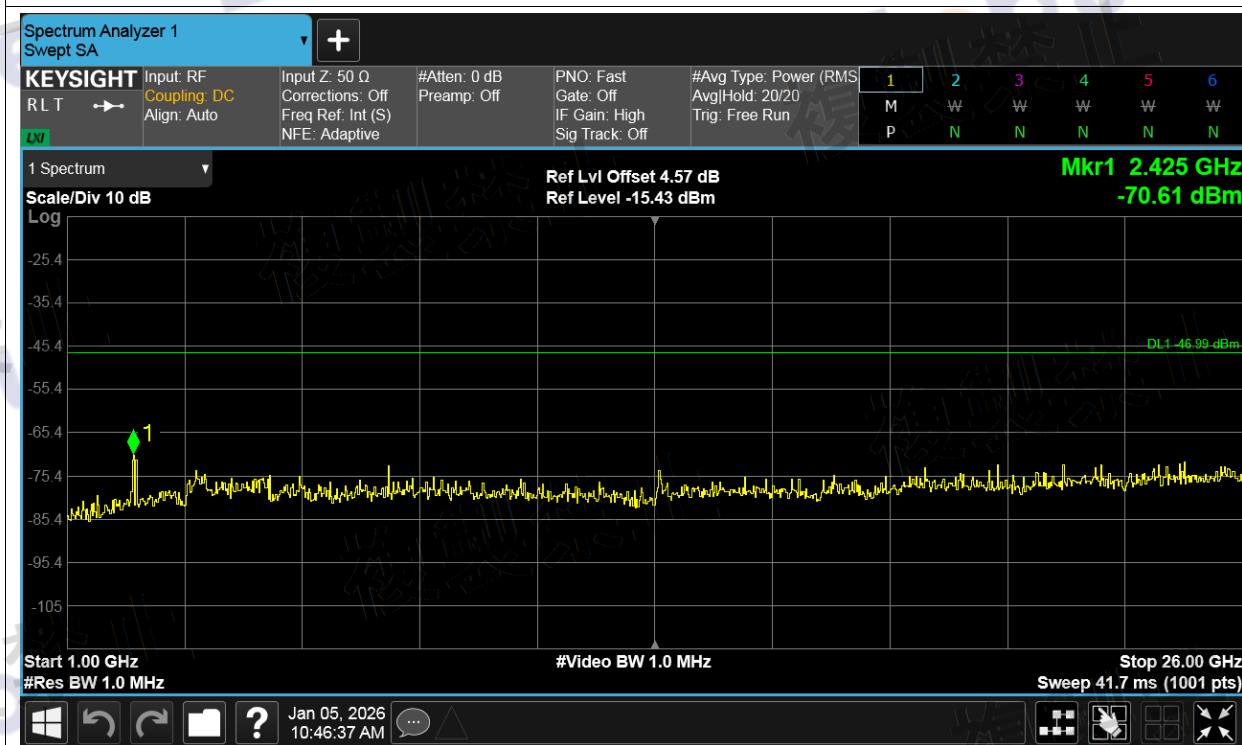


Rx. Spurious NVNT ax20 5260MHz Ant1 @ 30MHz-1000MHz

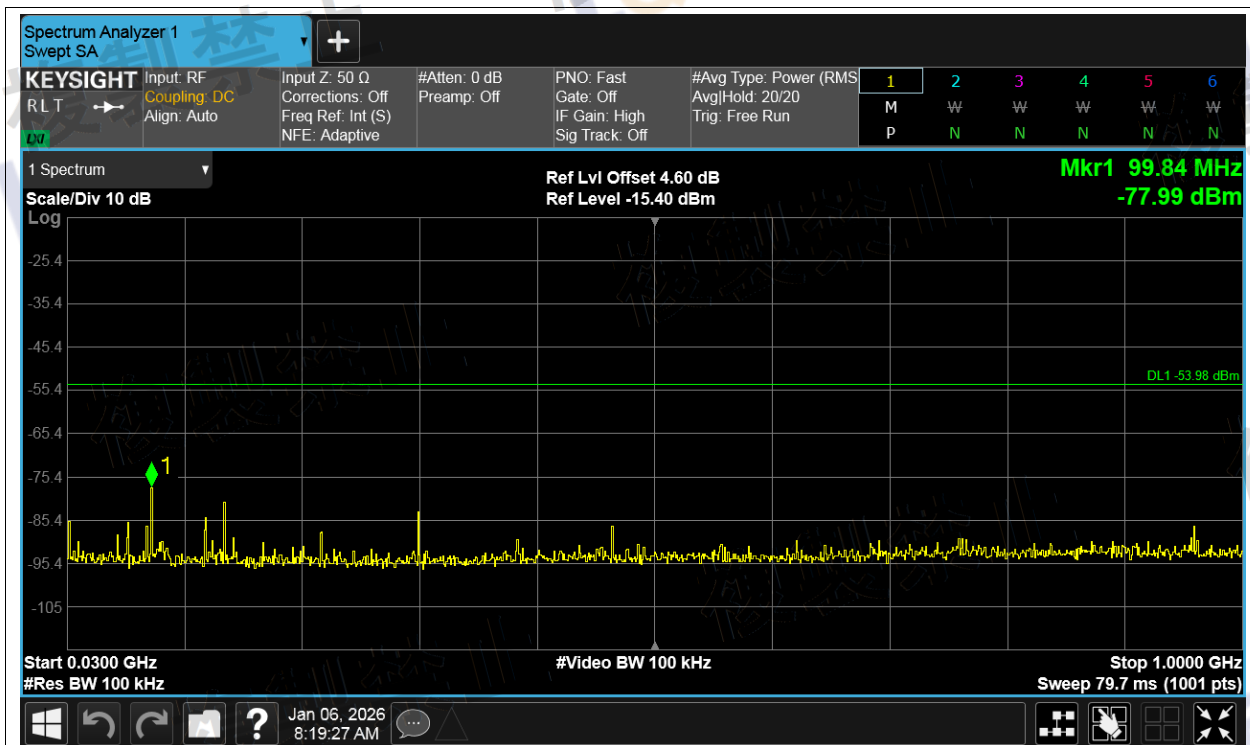


Rx. Spurious NVNT ax20 5260MHz Ant1 @ 1000MHz-26000MHz

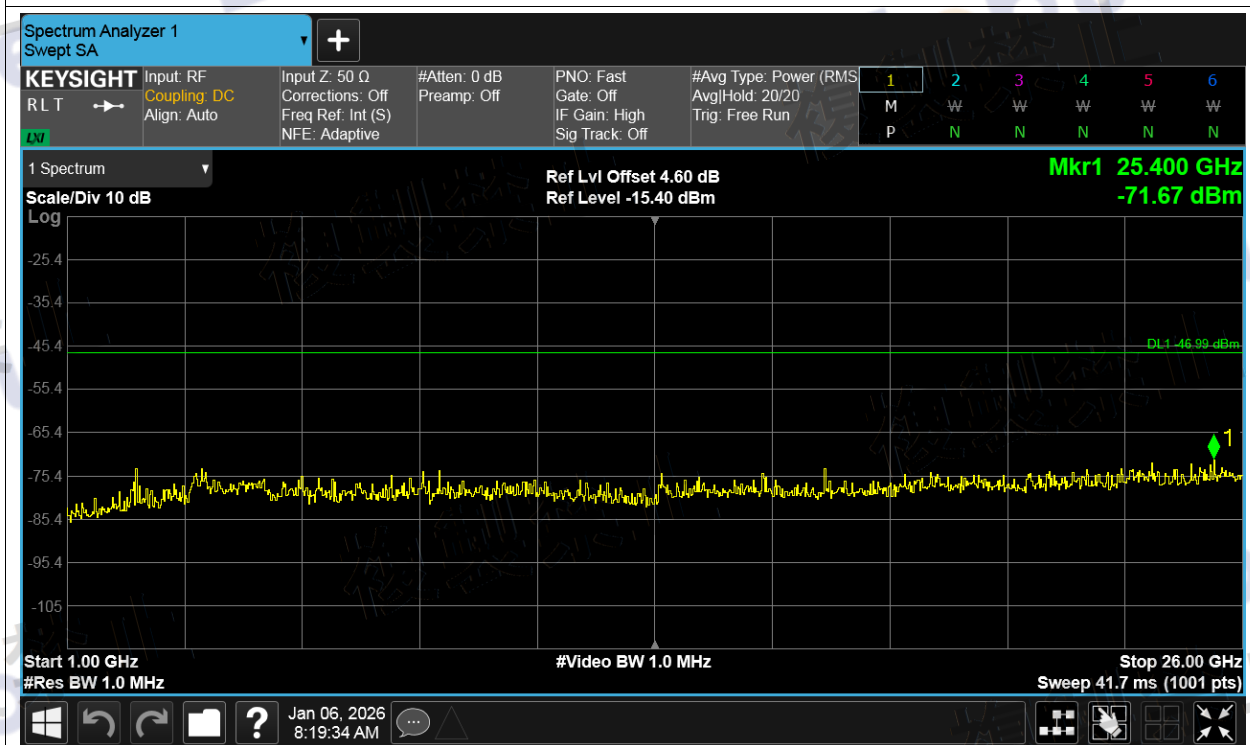


Rx. Spurious NVNT ax20 5300MHz Ant1 @ 30MHz-1000MHz

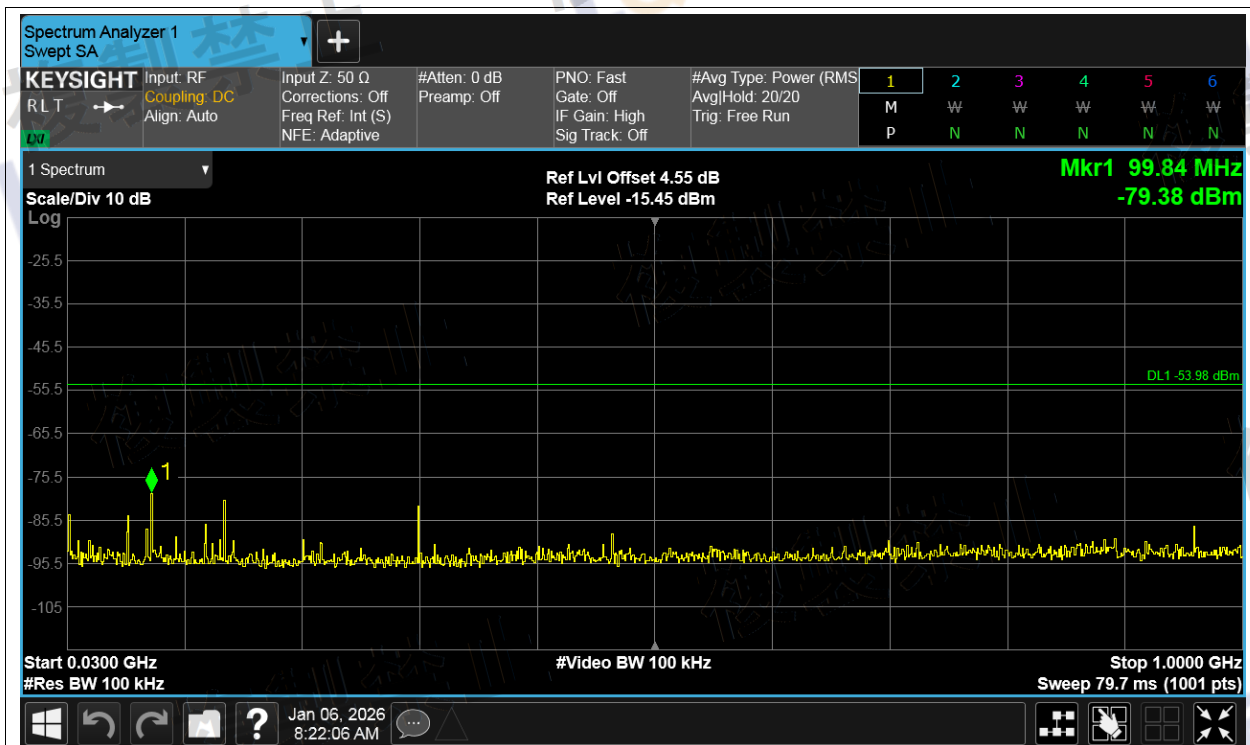


Rx. Spurious NVNT ax20 5300MHz Ant1 @ 1000MHz-26000MHz

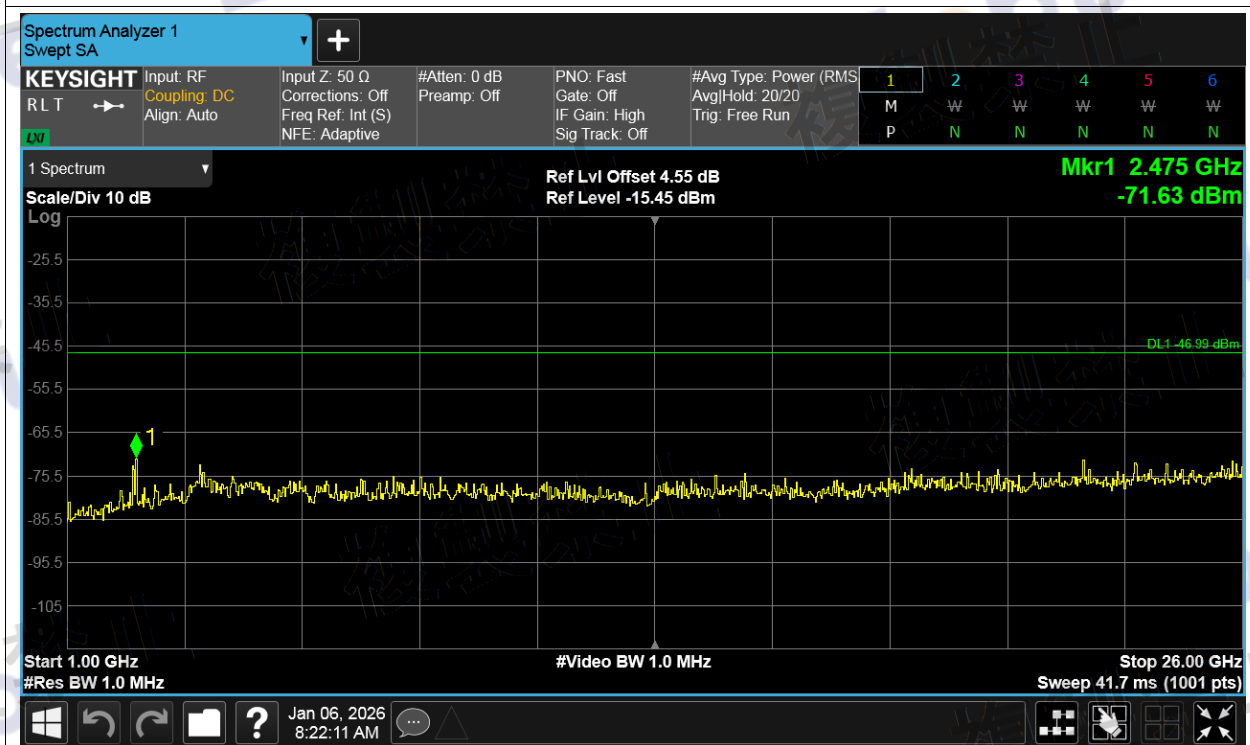


Rx. Spurious NVNT ax20 5320MHz Ant1 @ 30MHz-1000MHz

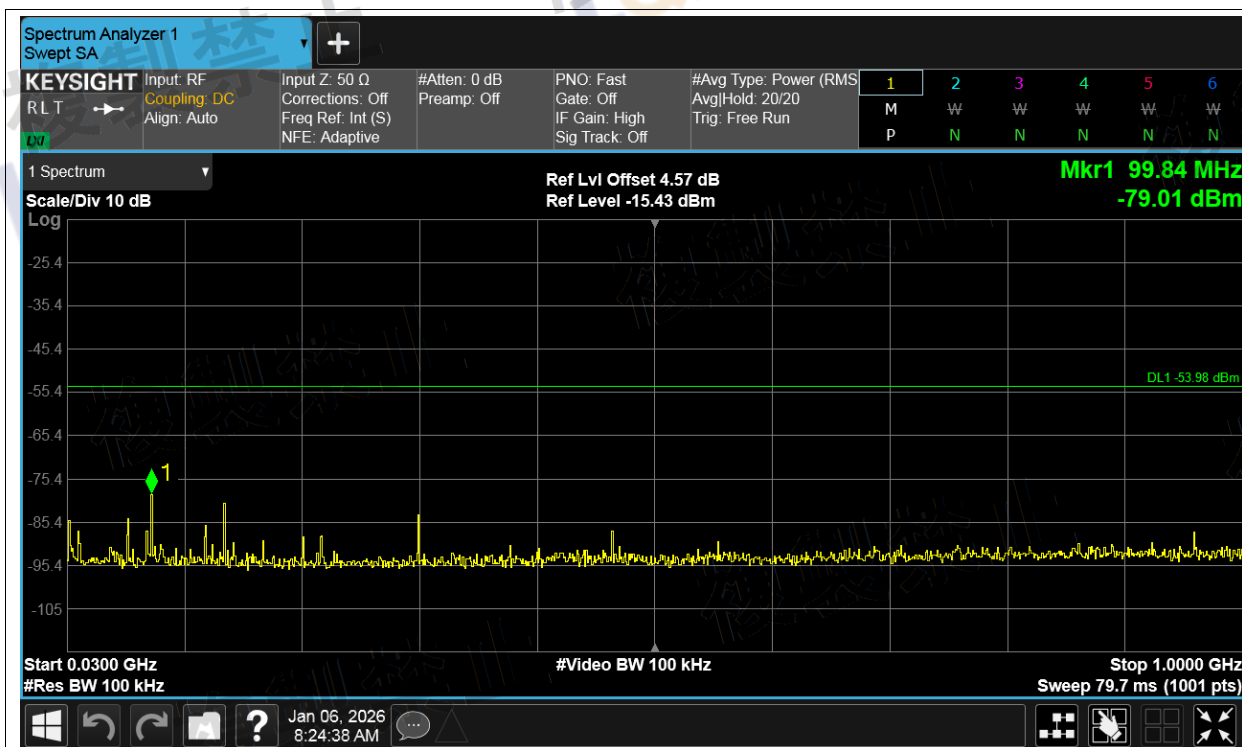


Rx. Spurious NVNT ax20 5320MHz Ant1 @ 1000MHz-26000MHz

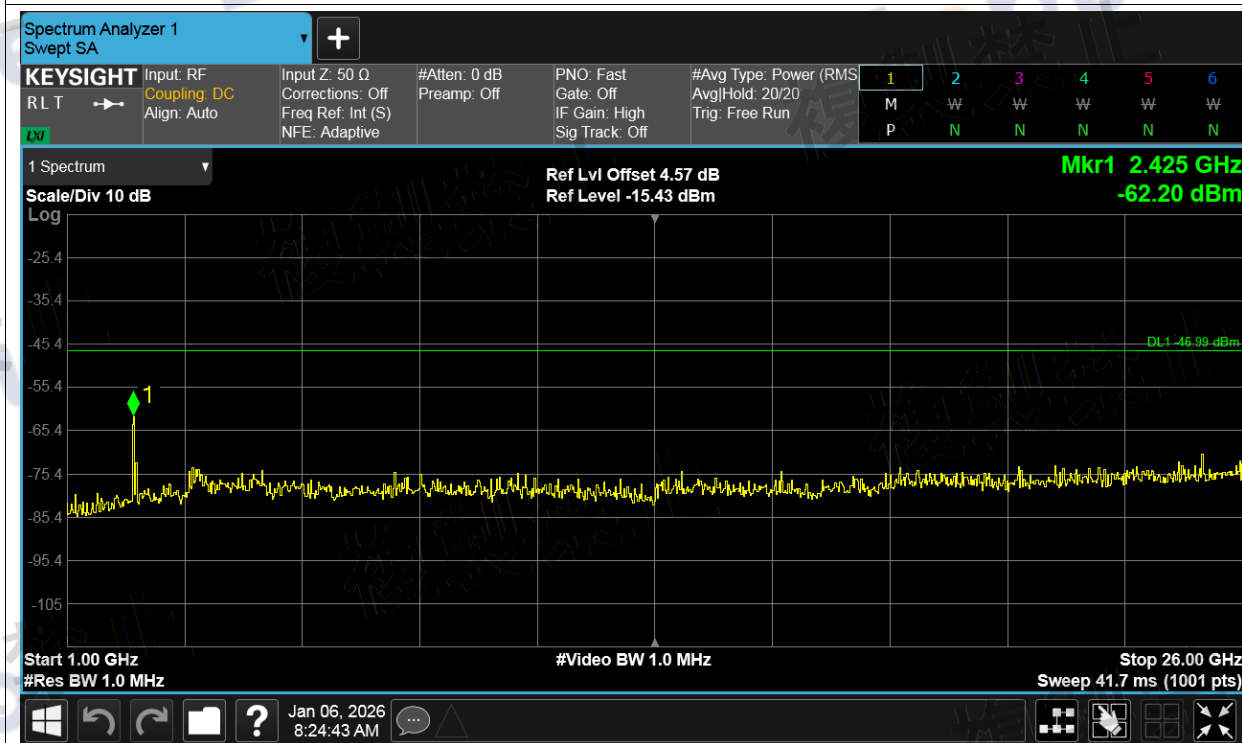


Rx. Spurious NVNT ax20 5500MHz Ant1 @ 30MHz-1000MHz

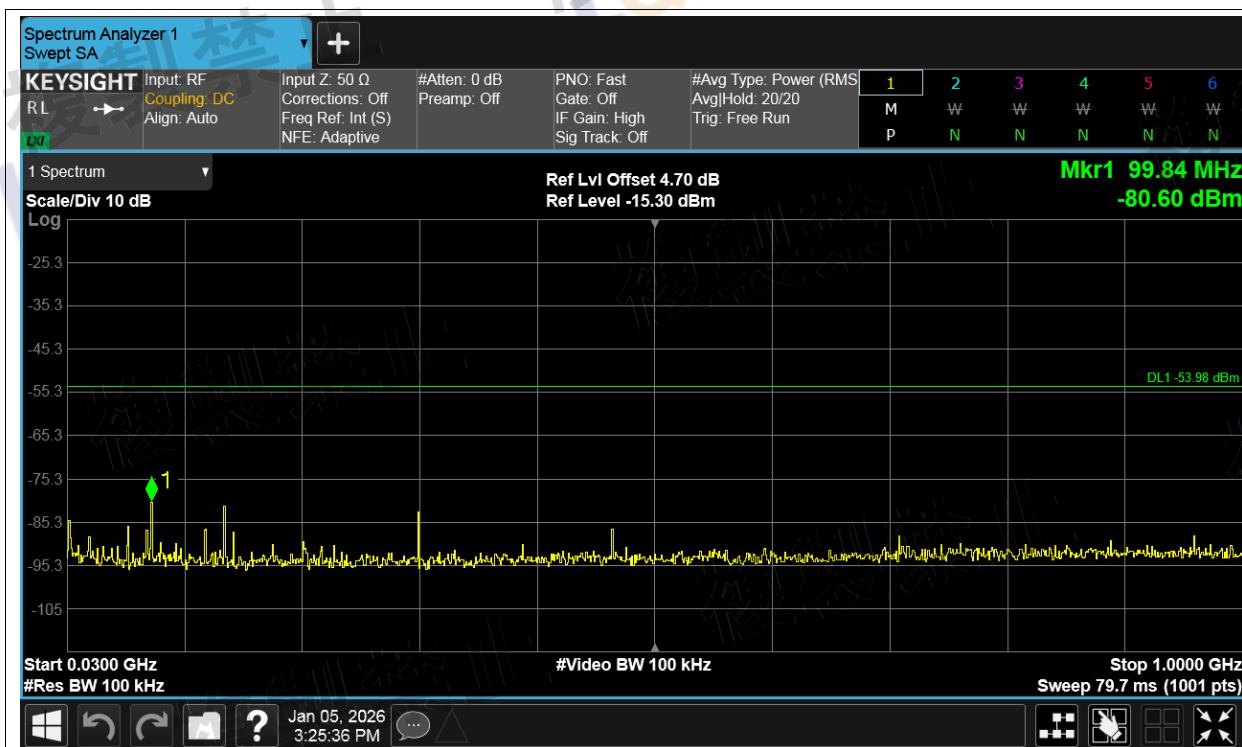


Rx. Spurious NVNT ax20 5500MHz Ant1 @ 1000MHz-26000MHz

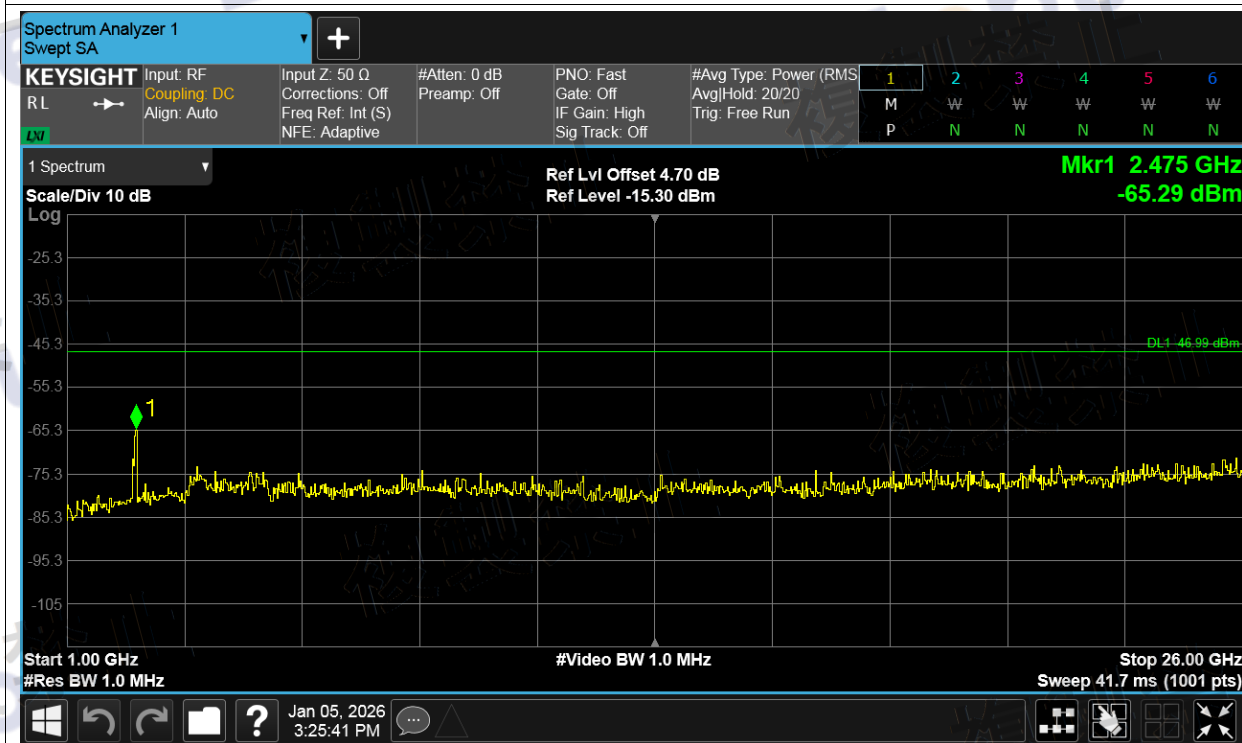


Rx. Spurious NVNT ax20 5580MHz Ant1 @ 30MHz-1000MHz

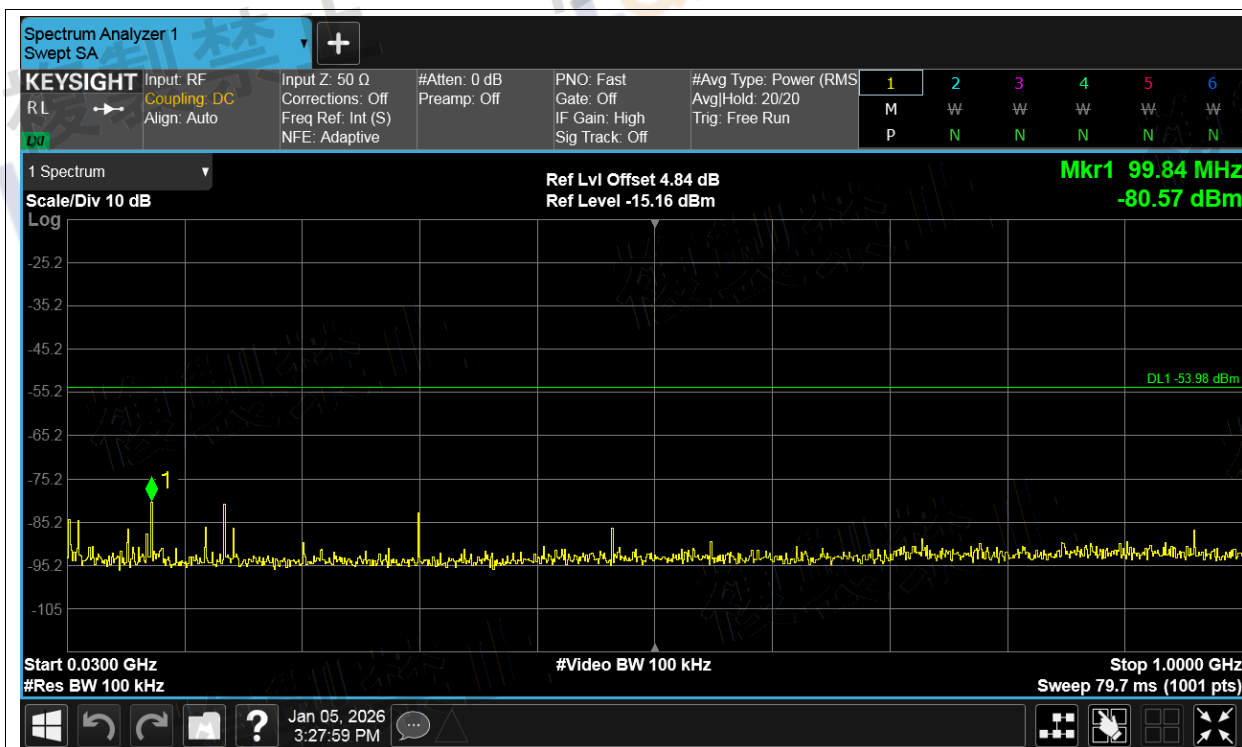


Rx. Spurious NVNT ax20 5580MHz Ant1 @ 1000MHz-26000MHz

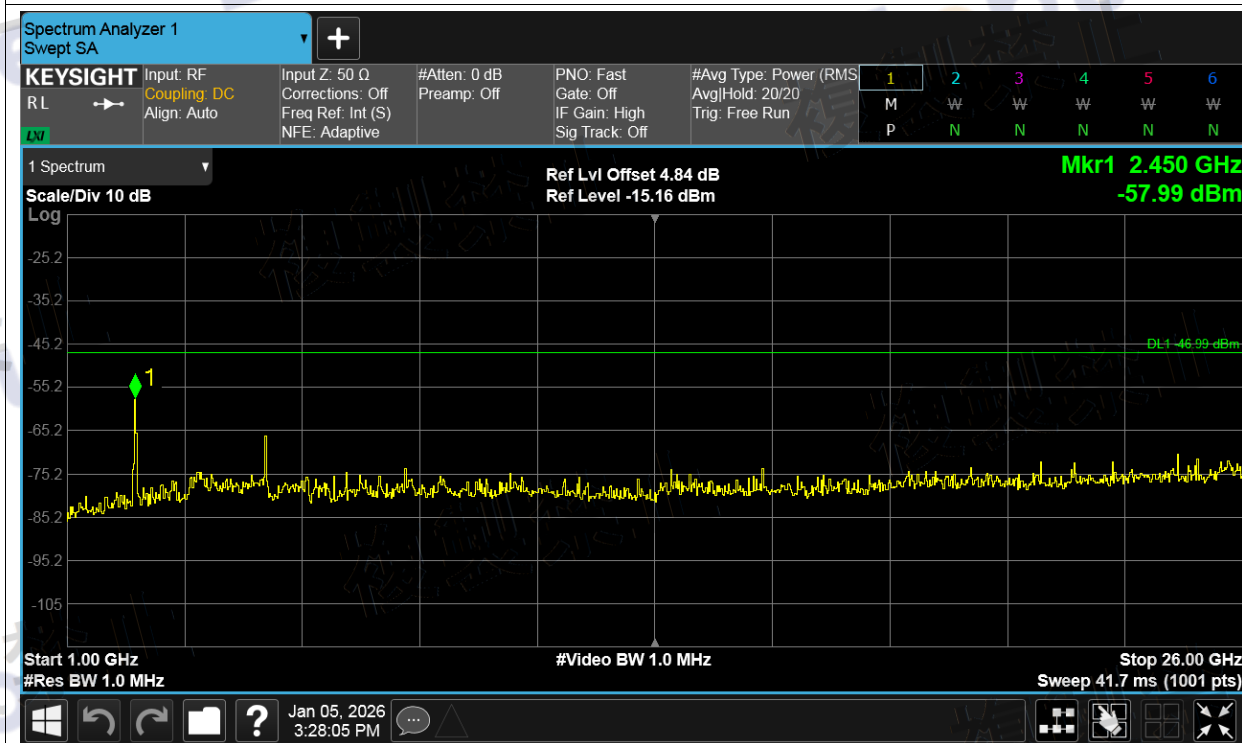


Rx. Spurious NVNT ax20 5700MHz Ant1 @ 30MHz-1000MHz

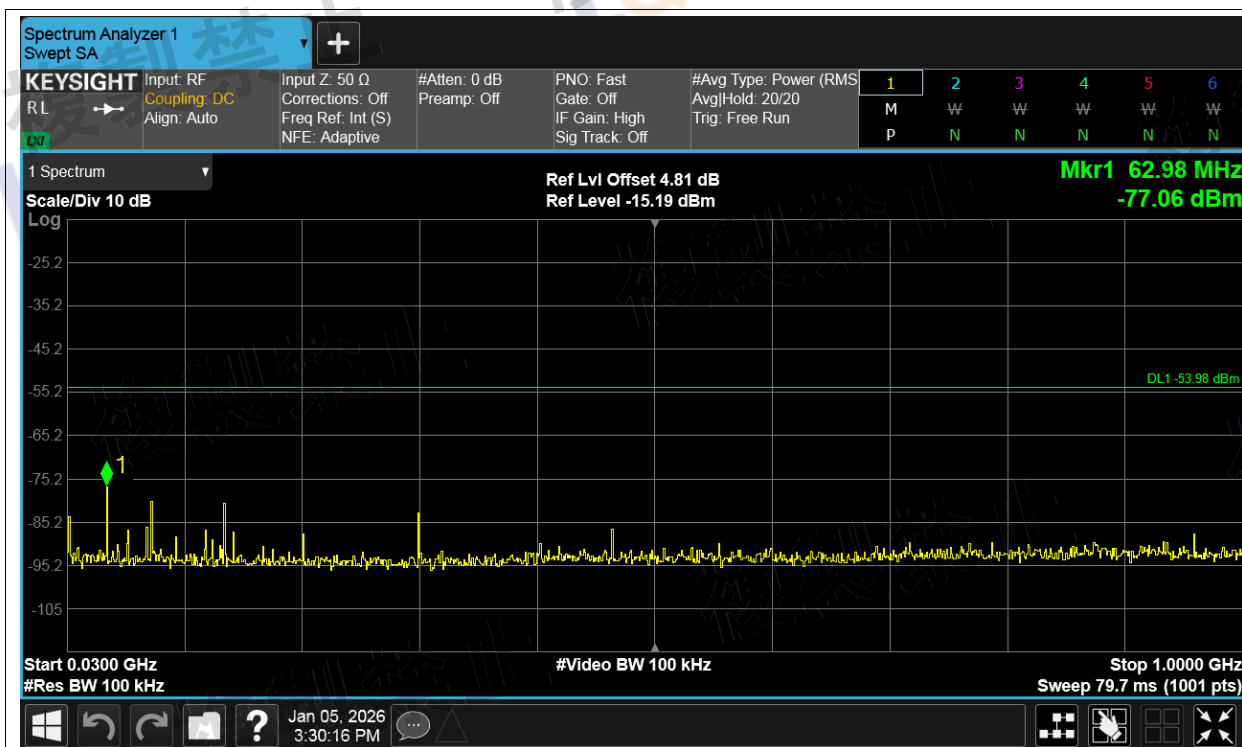


Rx. Spurious NVNT ax20 5700MHz Ant1 @ 1000MHz-26000MHz

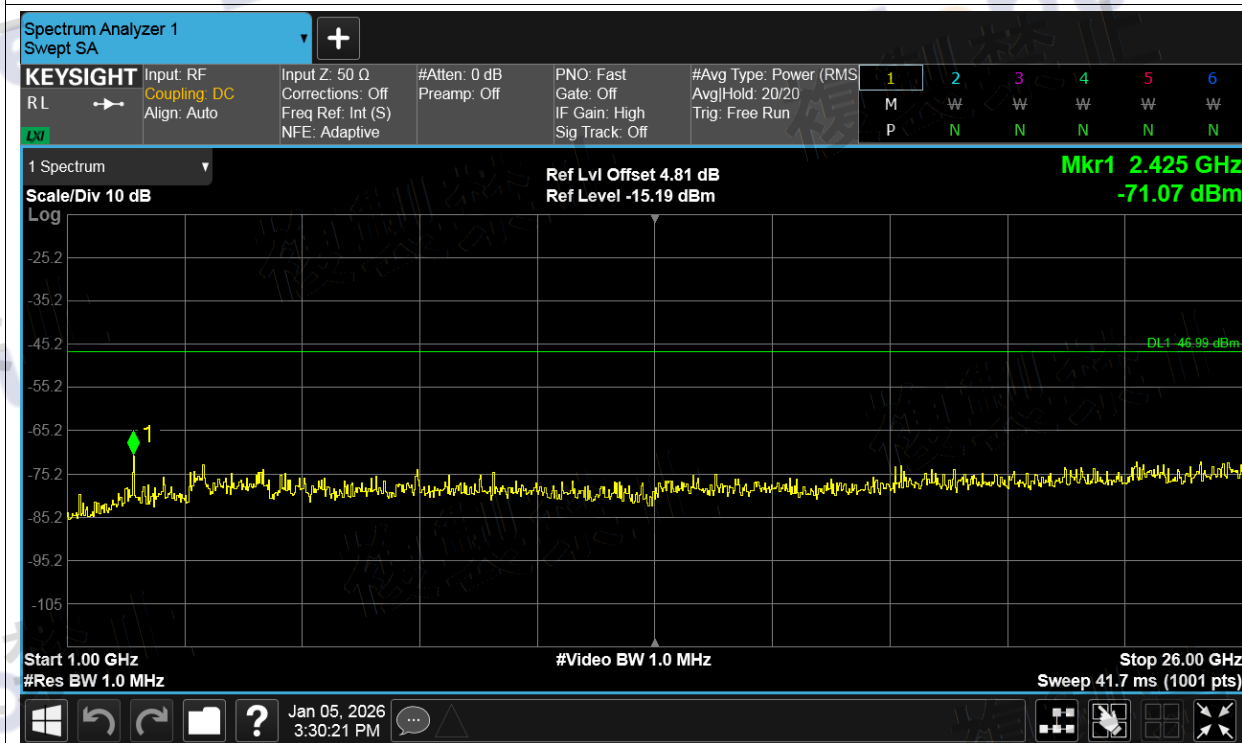


Rx. Spurious NVNT ax40 5190MHz Ant1 @ 30MHz-1000MHz

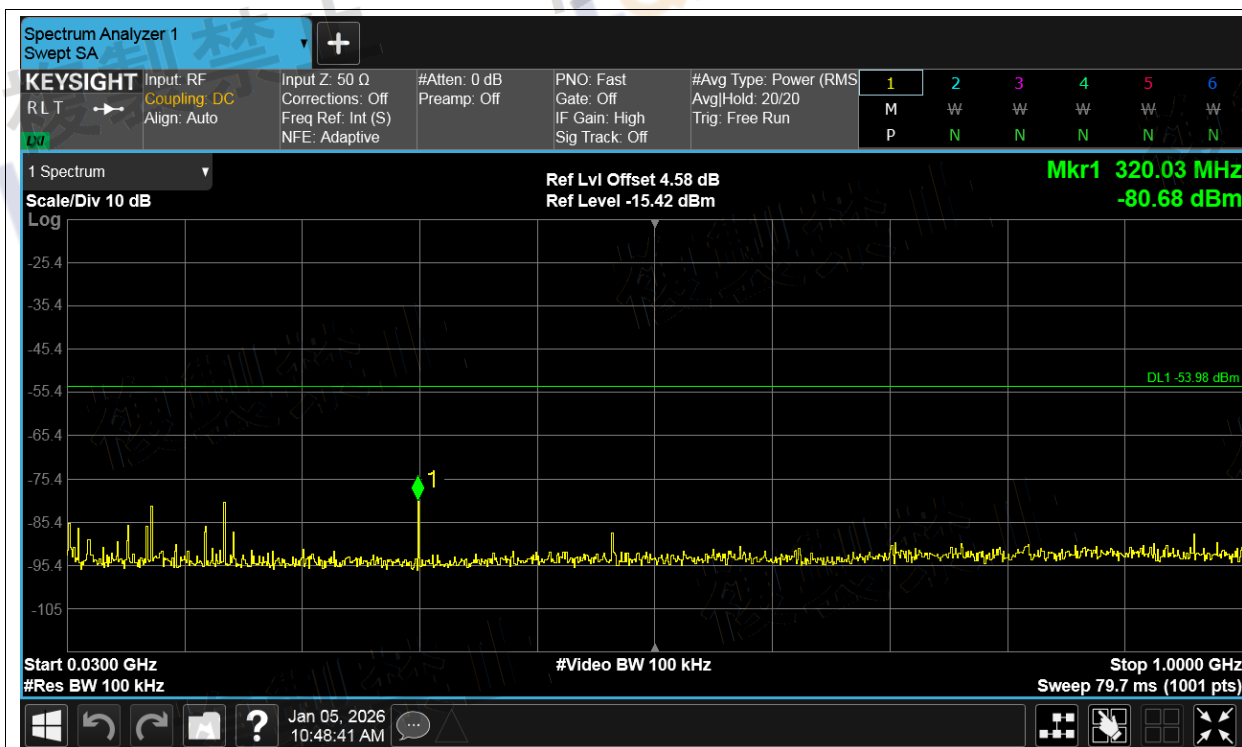


Rx. Spurious NVNT ax40 5190MHz Ant1 @ 1000MHz-26000MHz

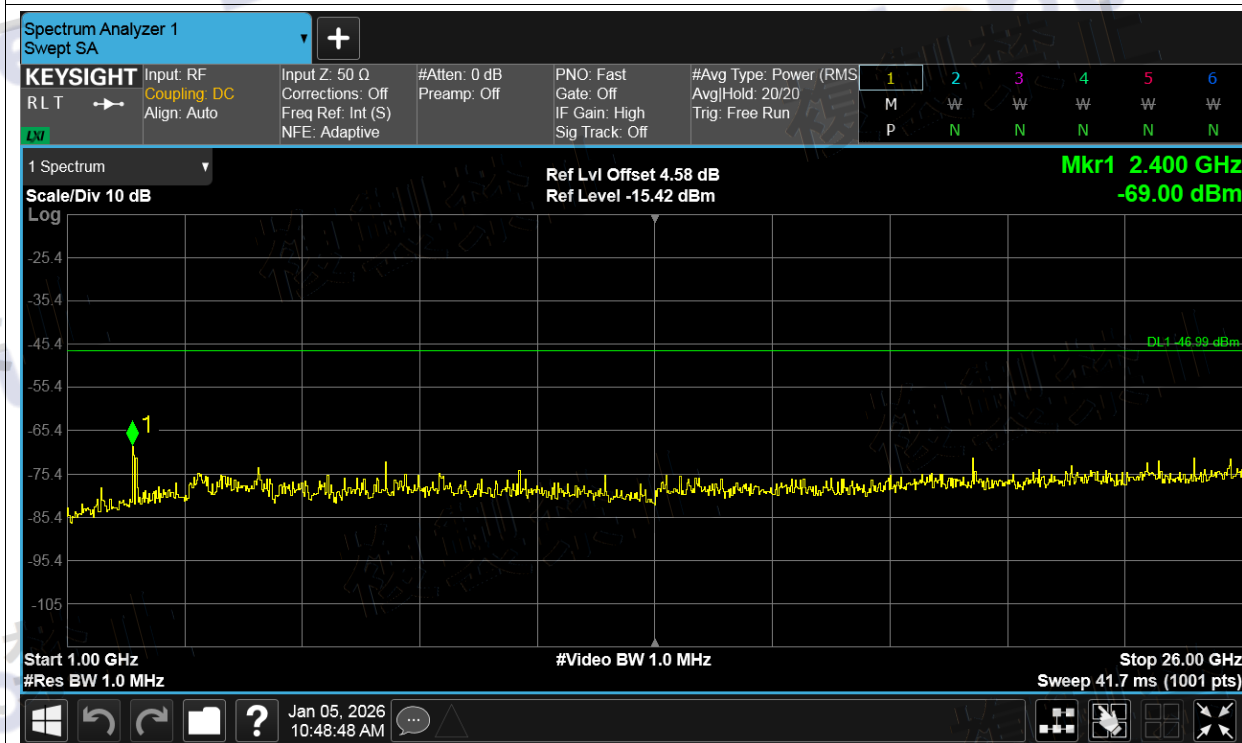


Rx. Spurious NVNT ax40 5200MHz Ant1 @ 30MHz-1000MHz

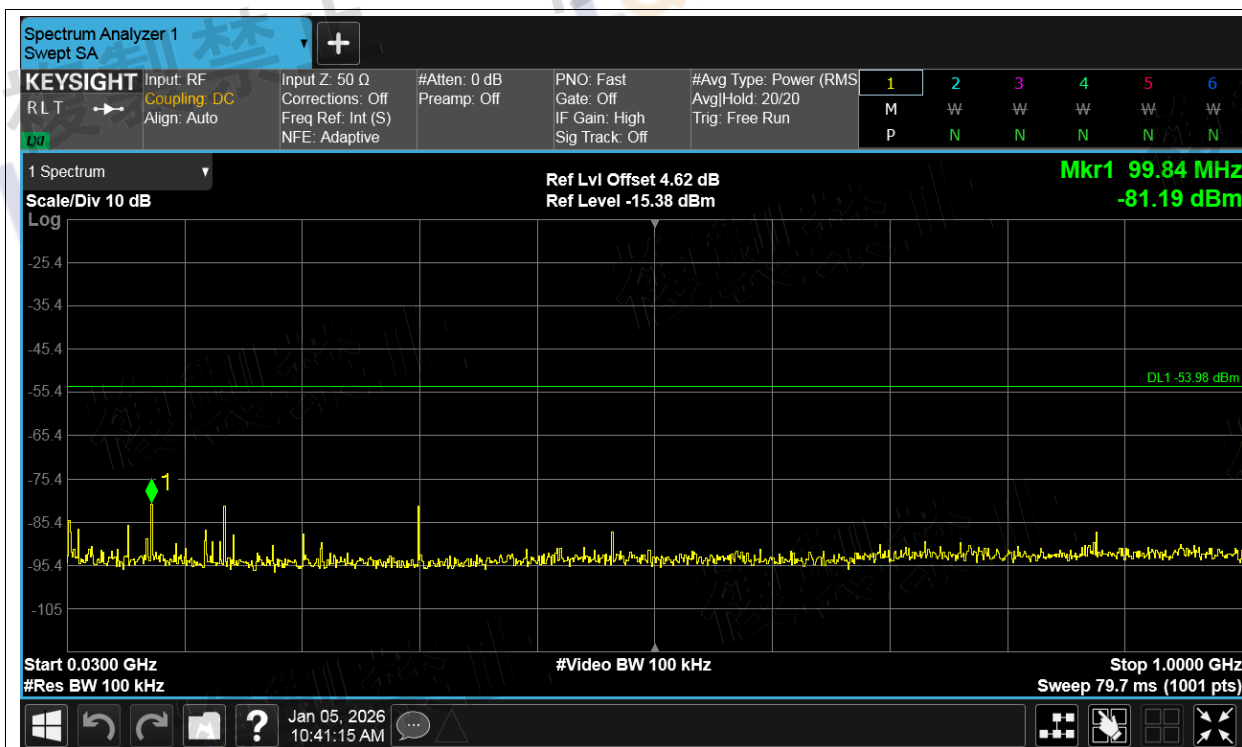


Rx. Spurious NVNT ax40 5200MHz Ant1 @ 1000MHz-26000MHz

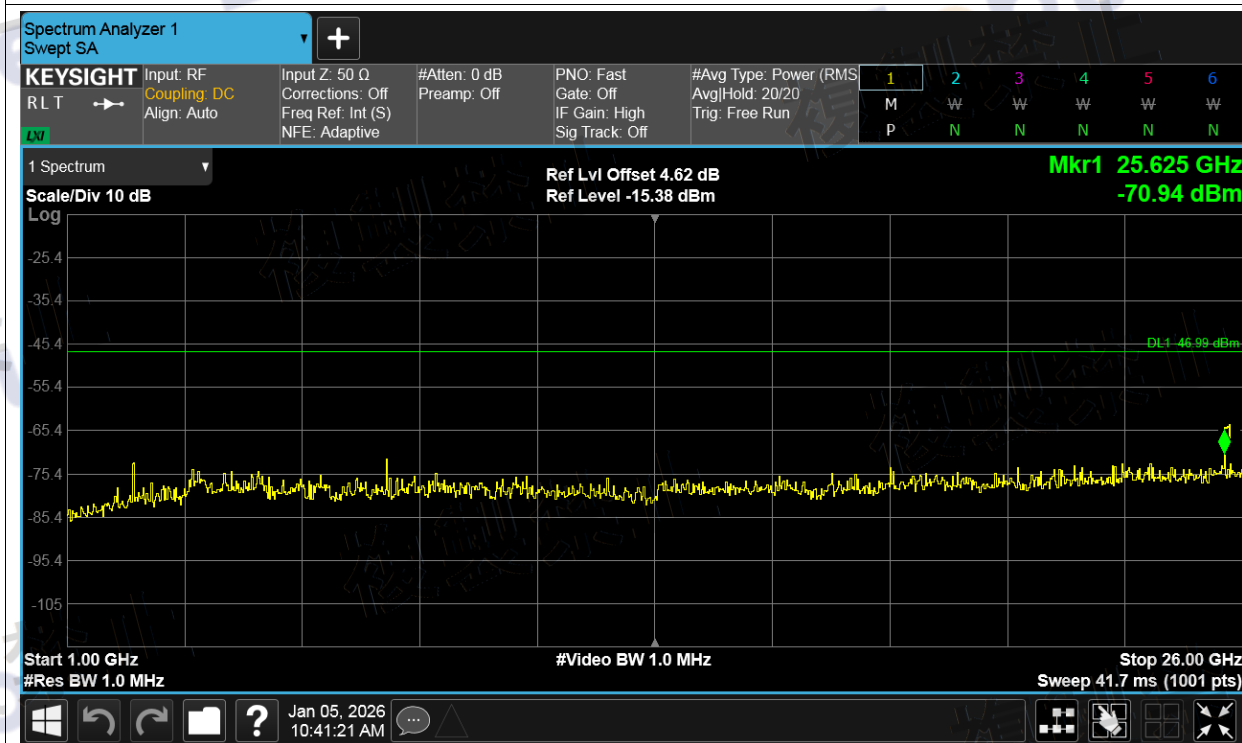


Rx. Spurious NVNT ax40 5230MHz Ant1 @ 30MHz-1000MHz

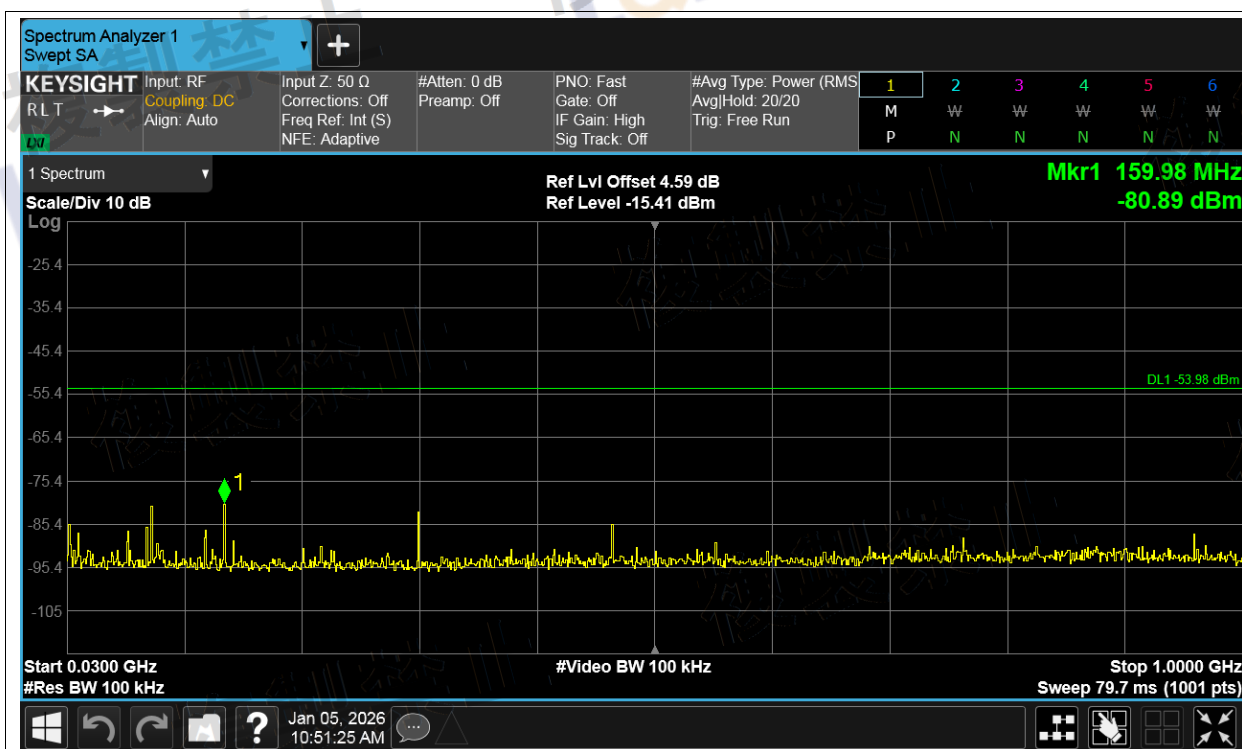


Rx. Spurious NVNT ax40 5230MHz Ant1 @ 1000MHz-26000MHz

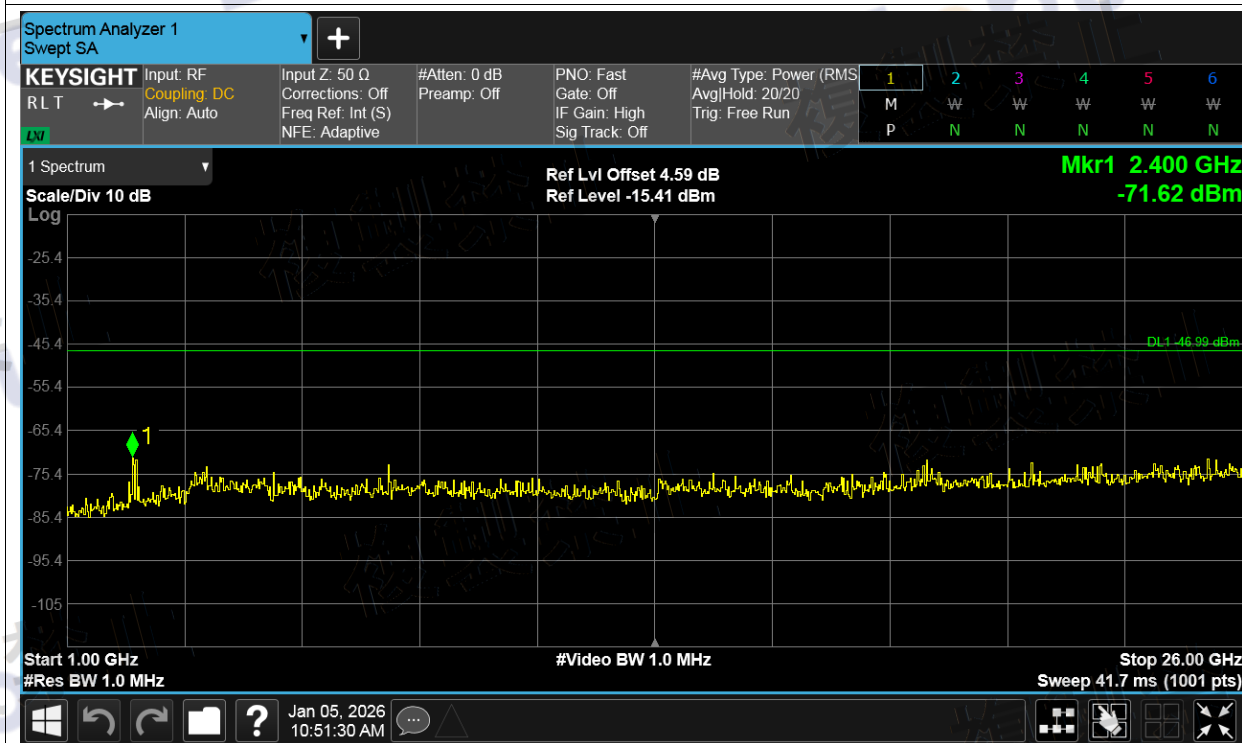


Rx. Spurious NVNT ax40 5270MHz Ant1 @ 30MHz-1000MHz

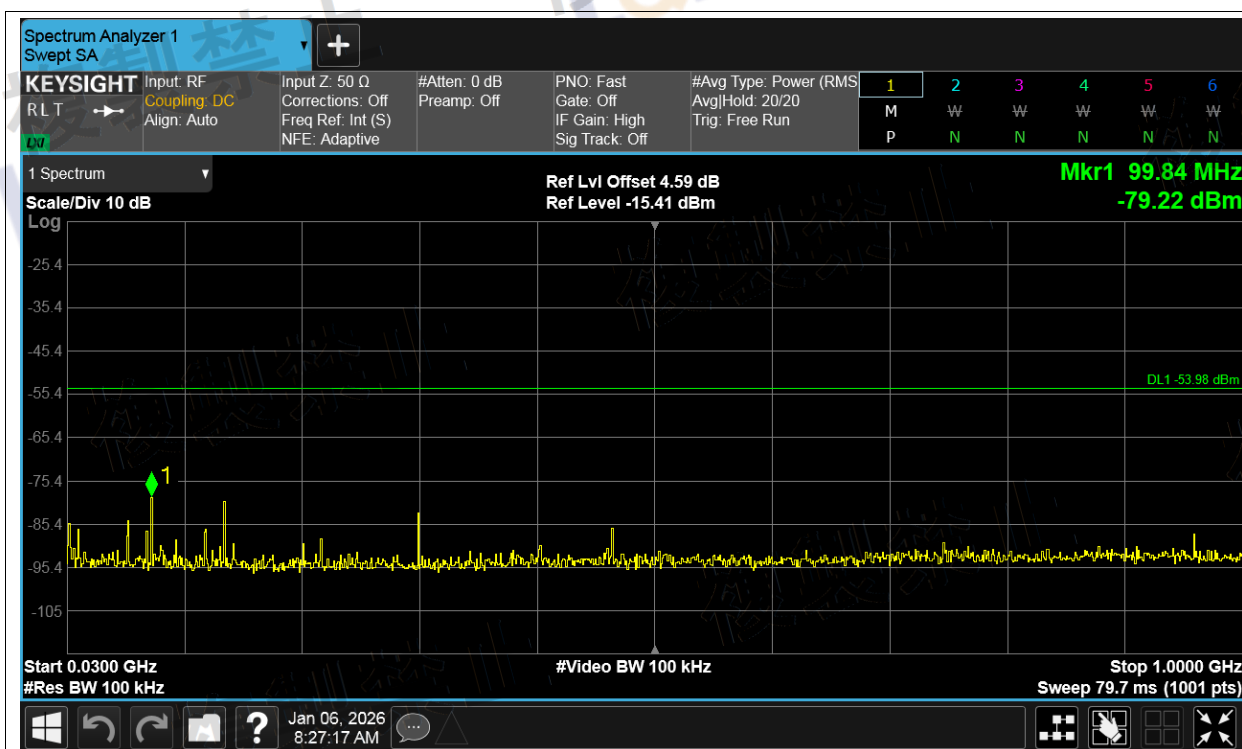


Rx. Spurious NVNT ax40 5270MHz Ant1 @ 1000MHz-26000MHz

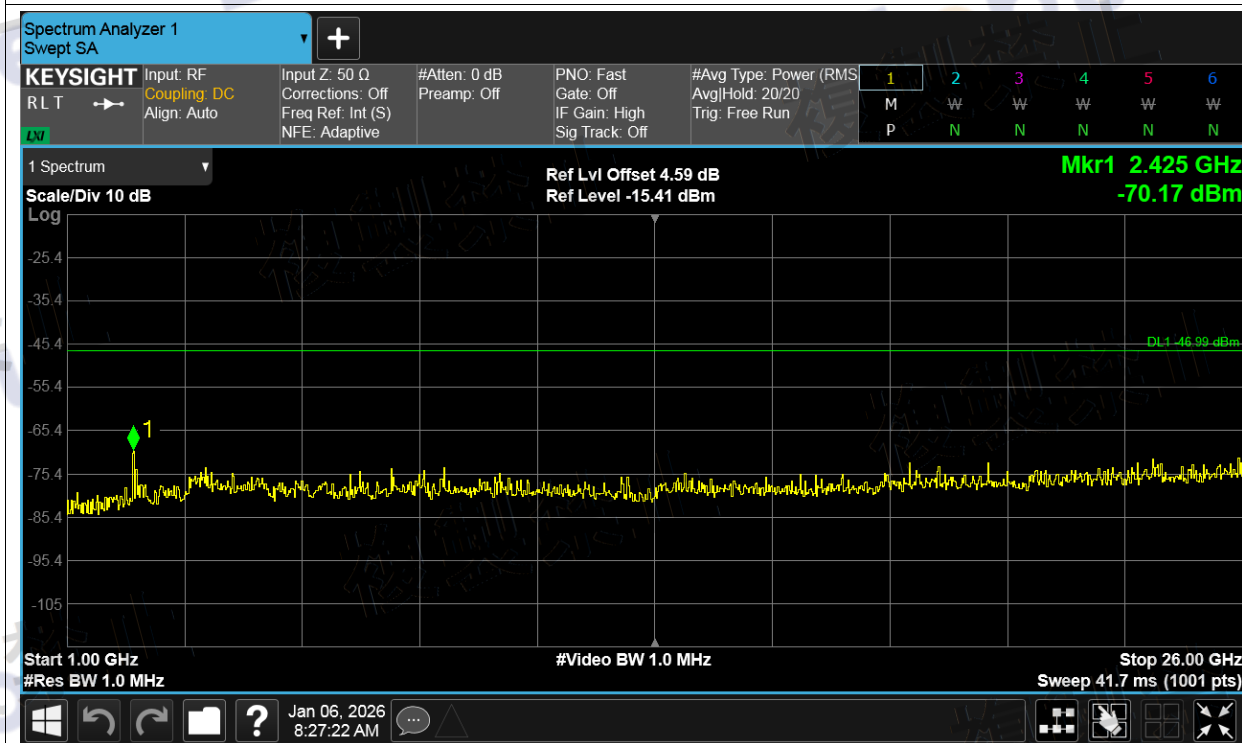


Rx. Spurious NVNT ax40 5310MHz Ant1 @ 30MHz-1000MHz

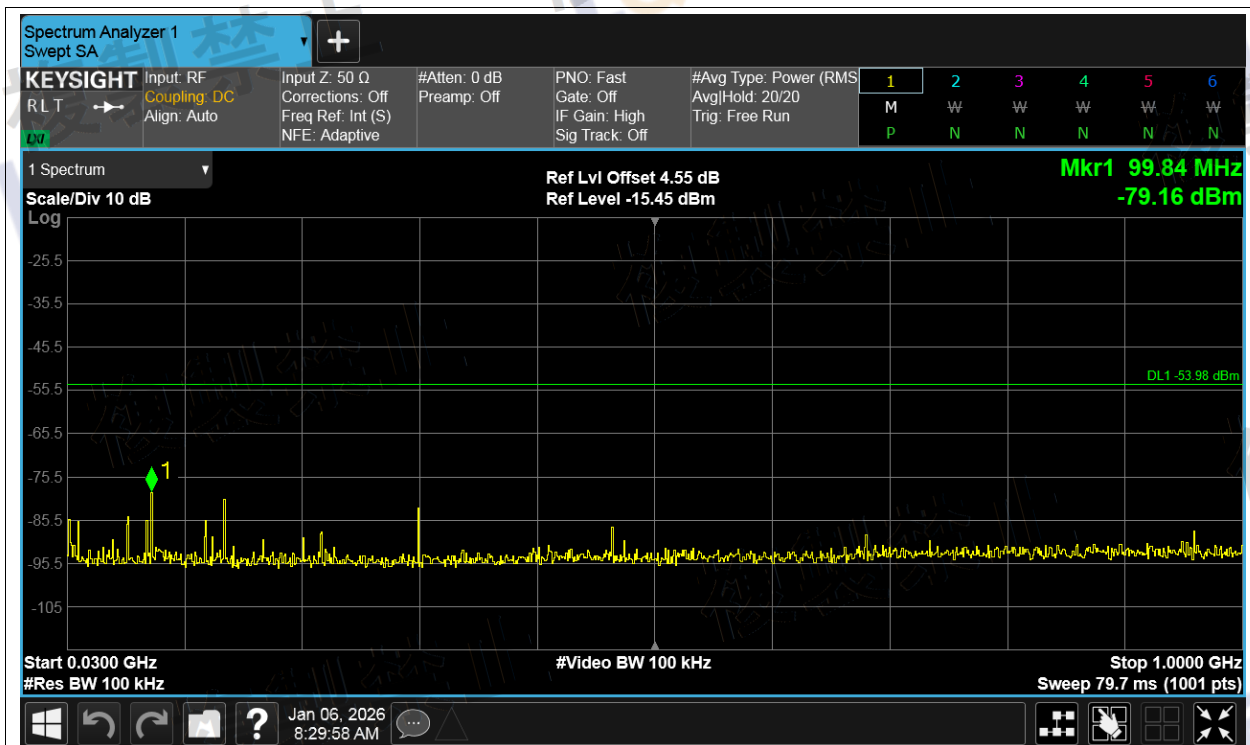


Rx. Spurious NVNT ax40 5310MHz Ant1 @ 1000MHz-26000MHz

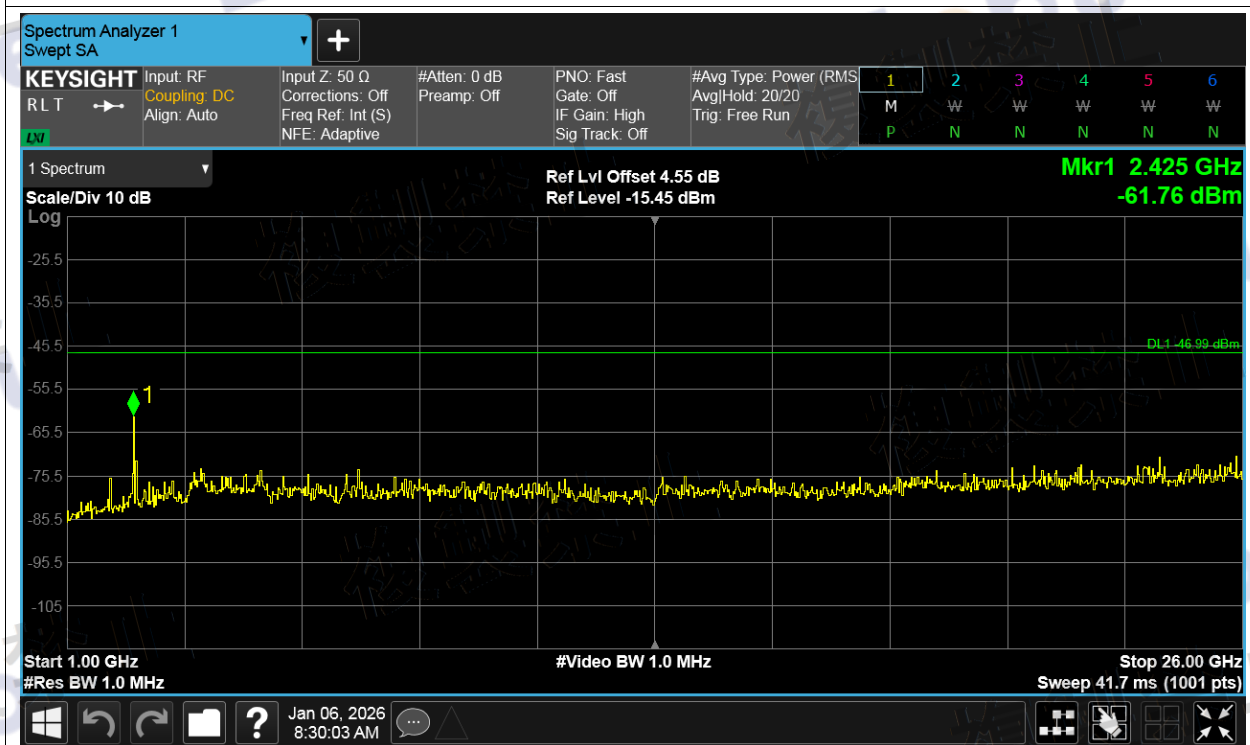


Rx. Spurious NVNT ax40 5510MHz Ant1 @ 30MHz-1000MHz

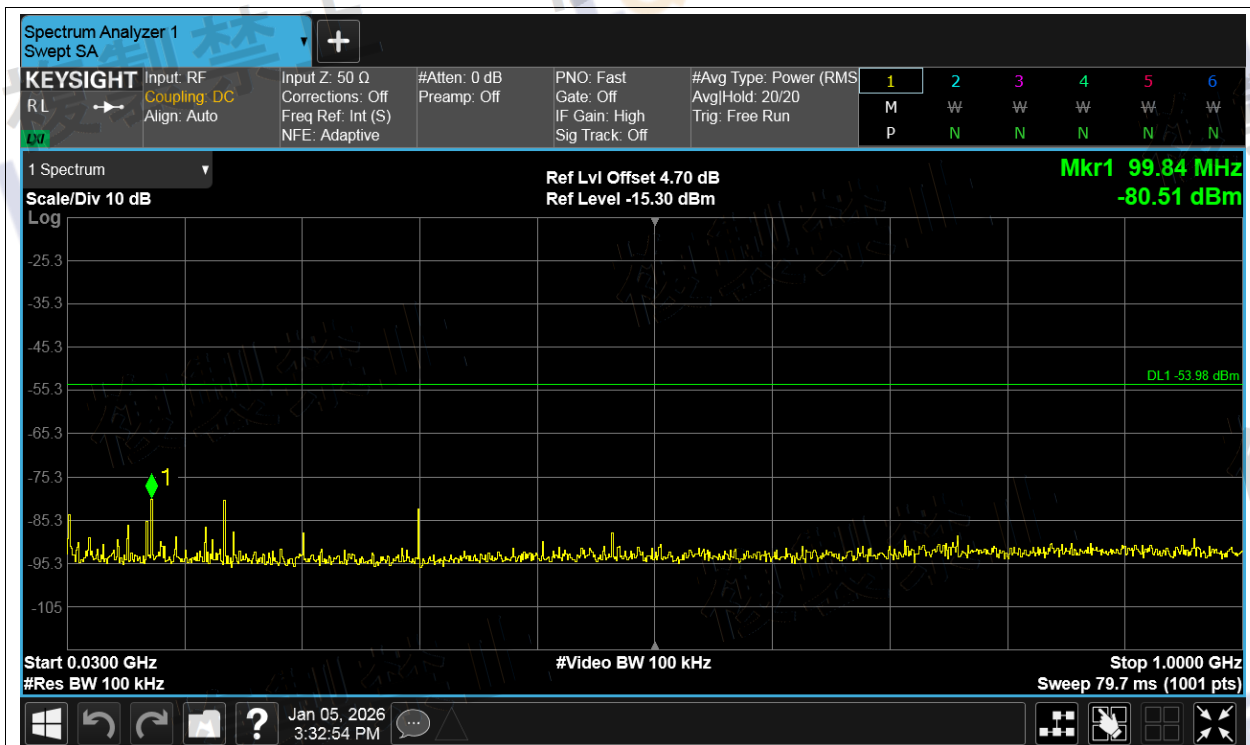


Rx. Spurious NVNT ax40 5510MHz Ant1 @ 1000MHz-26000MHz

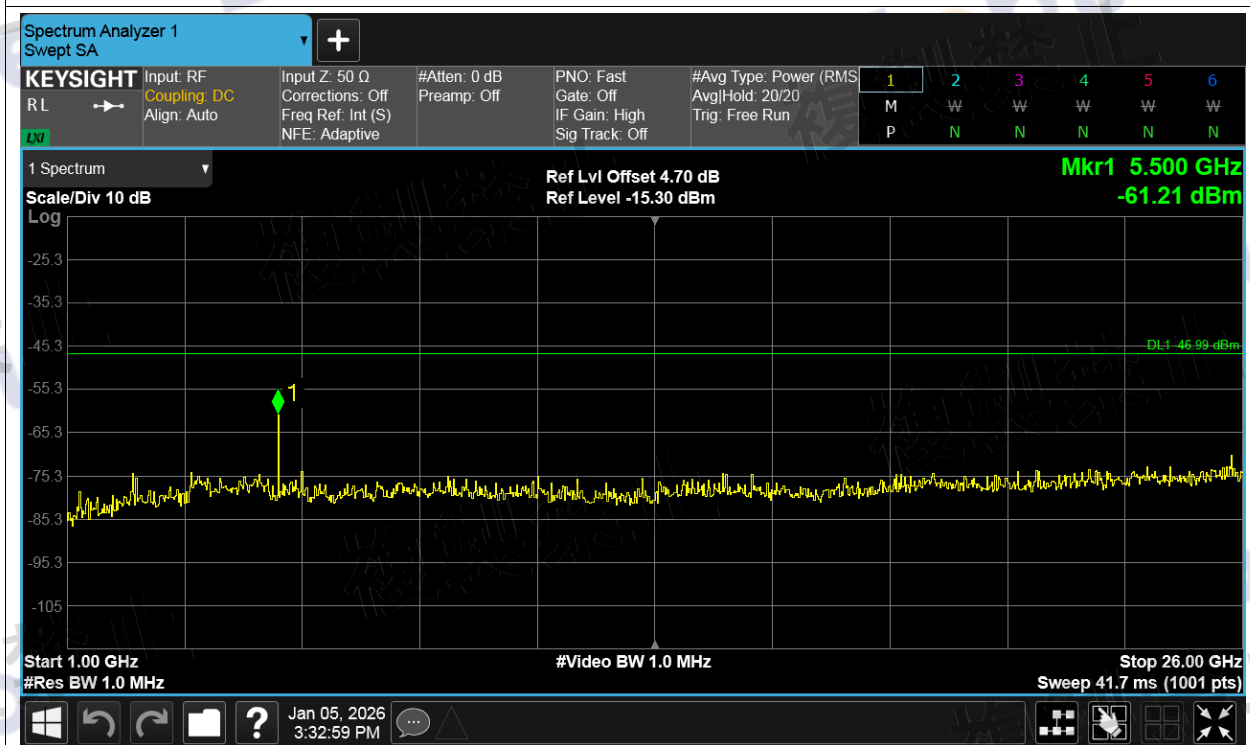


Rx. Spurious NVNT ax40 5590MHz Ant1 @ 30MHz-1000MHz

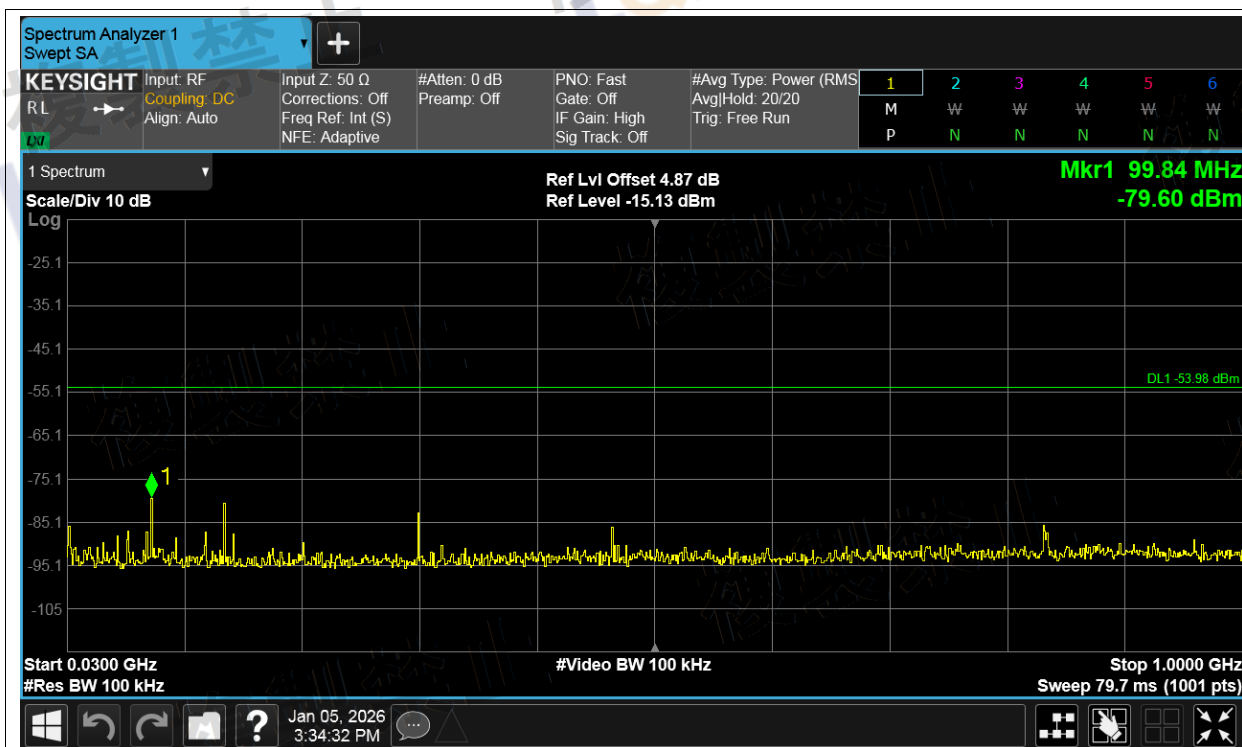


Rx. Spurious NVNT ax40 5590MHz Ant1 @ 1000MHz-26000MHz

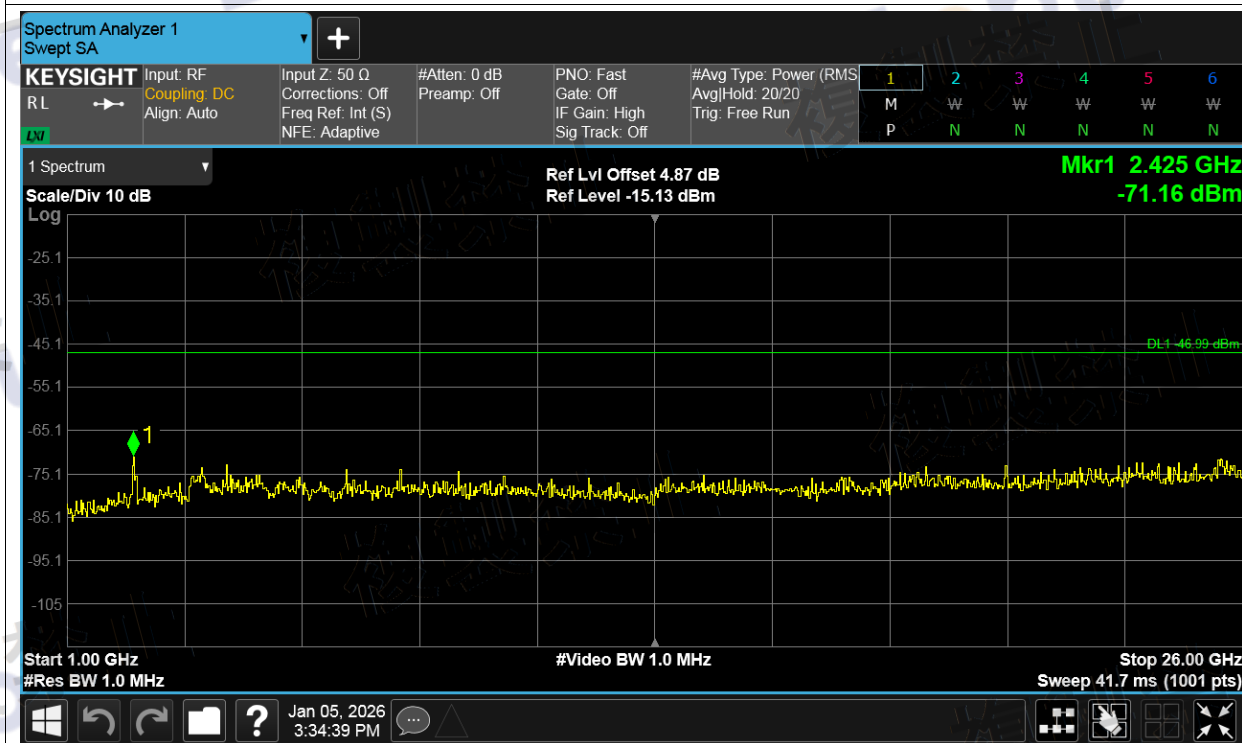

Rx. Spurious NVNT ax40 5670MHz Ant1 @ 30MHz-1000MHz

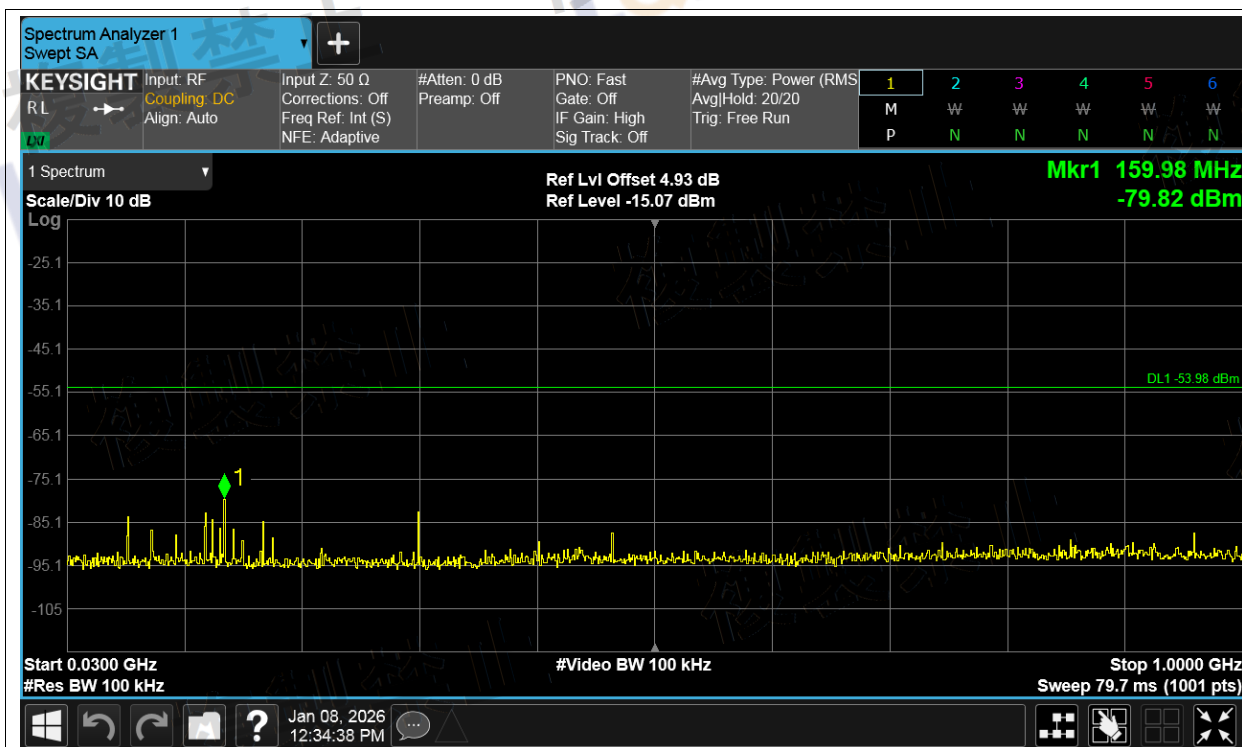


Rx. Spurious NVNT ax40 5670MHz Ant1 @ 1000MHz-26000MHz

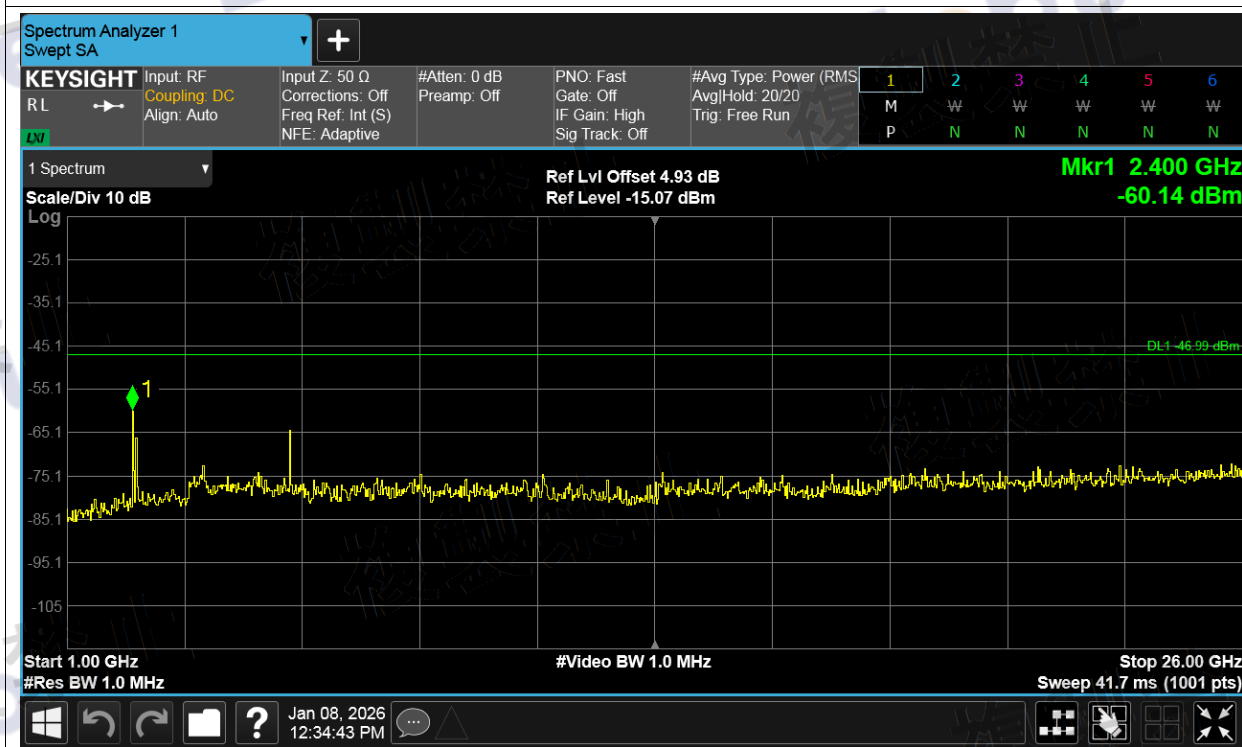

Carrier Sense

Condition	Mode	Frequency (MHz)	Antenna	CW Level (dBm)	Verdict
NVNT	n20	5200	Ant1	-45.58	Pass

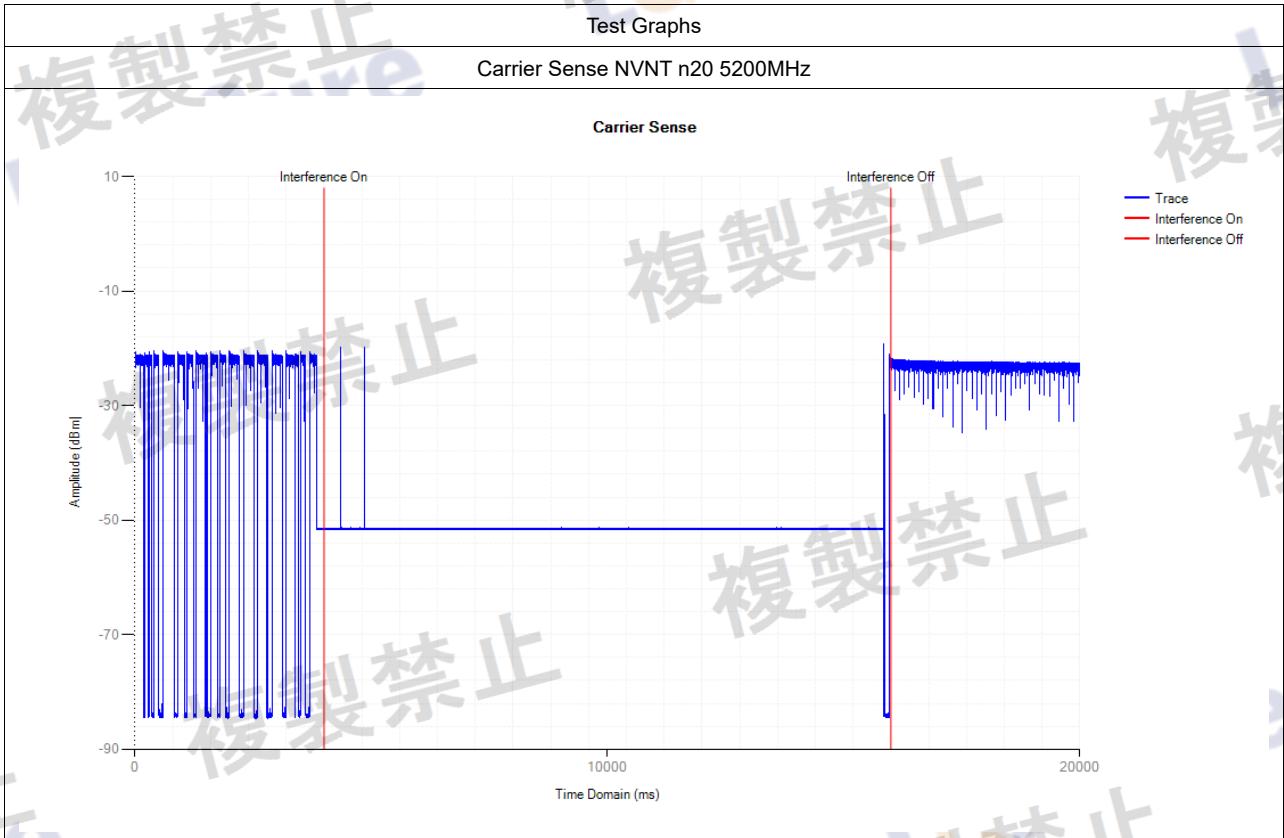

Adjacent Channel Emitted Power

Condition	Mode	Frequency (MHz)	Antenna	Offset (MHz)	Value (dBc)	Limit (dBc)	Verdict
NVNT	n40	5200	Ant1	-40	-36.99	-25	Pass
NVNT	n40	5200	Ant1	-80	-48.36	-40	Pass
NVNT	n40	5200	Ant1	40	-41.04	-25	Pass
NVNT	n40	5200	Ant1	80	-50.47	-40	Pass
NVNT	n40	5270	Ant1	-40	-45.70	-25	Pass
NVNT	n40	5270	Ant1	-80	-52.99	-40	Pass
NVNT	n40	5270	Ant1	40	-45.08	-25	Pass
NVNT	n40	5270	Ant1	80	-54.28	-40	Pass
NVNT	n40	5310	Ant1	-40	-45.63	-25	Pass
NVNT	n40	5310	Ant1	-80	-53.28	-40	Pass
NVNT	n40	5310	Ant1	40	-46.42	-25	Pass
NVNT	n40	5310	Ant1	80	-54.78	-40	Pass
NVNT	n40	5510	Ant1	-40	-42.52	-25	Pass
NVNT	n40	5510	Ant1	-80	-51.84	-40	Pass
NVNT	n40	5510	Ant1	40	-47.12	-25	Pass
NVNT	n40	5510	Ant1	80	-51.20	-40	Pass
NVNT	n40	5590	Ant1	-40	-42.99	-25	Pass
NVNT	n40	5590	Ant1	-80	-52.74	-40	Pass
NVNT	n40	5590	Ant1	40	-47.57	-25	Pass
NVNT	n40	5590	Ant1	80	-52.88	-40	Pass
NVNT	n40	5670	Ant1	-40	-41.87	-25	Pass
NVNT	n40	5670	Ant1	-80	-52.14	-40	Pass
NVNT	n40	5670	Ant1	40	-47.02	-25	Pass
NVNT	n40	5670	Ant1	80	-53.52	-40	Pass
NVNT	ac20	5180	Ant1	-20	-31.77	-25	Pass
NVNT	ac20	5180	Ant1	-40	-55.38	-40	Pass
NVNT	ac20	5180	Ant1	20	-31.77	-25	Pass
NVNT	ac20	5180	Ant1	40	-56.12	-40	Pass
NVNT	ac20	5200	Ant1	-20	-31.88	-25	Pass
NVNT	ac20	5200	Ant1	-40	-55.52	-40	Pass
NVNT	ac20	5200	Ant1	20	-31.71	-25	Pass
NVNT	ac20	5200	Ant1	40	-56.04	-40	Pass
NVNT	ac20	5240	Ant1	-20	-31.75	-25	Pass
NVNT	ac20	5240	Ant1	-40	-56.53	-40	Pass
NVNT	ac20	5240	Ant1	20	-31.46	-25	Pass
NVNT	ac20	5240	Ant1	40	-57.12	-40	Pass
NVNT	ac20	5260	Ant1	-20	-31.73	-25	Pass
NVNT	ac20	5260	Ant1	-40	-56.48	-40	Pass
NVNT	ac20	5260	Ant1	20	-31.46	-25	Pass
NVNT	ac20	5260	Ant1	40	-57.26	-40	Pass
NVNT	ac20	5300	Ant1	-20	-31.98	-25	Pass

NVNT	ac20	5300	Ant1	-40	-56.50	-40	Pass
NVNT	ac20	5300	Ant1	20	-31.83	-25	Pass
NVNT	ac20	5300	Ant1	40	-56.75	-40	Pass
NVNT	ac20	5320	Ant1	-20	-31.79	-25	Pass
NVNT	ac20	5320	Ant1	-40	-56.38	-40	Pass
NVNT	ac20	5320	Ant1	20	-31.54	-25	Pass
NVNT	ac20	5320	Ant1	40	-57.22	-40	Pass
NVNT	ac20	5500	Ant1	-20	-31.85	-25	Pass
NVNT	ac20	5500	Ant1	-40	-54.56	-40	Pass
NVNT	ac20	5500	Ant1	20	-31.28	-25	Pass
NVNT	ac20	5500	Ant1	40	-54.92	-40	Pass
NVNT	ac20	5580	Ant1	-20	-31.91	-25	Pass
NVNT	ac20	5580	Ant1	-40	-54.72	-40	Pass
NVNT	ac20	5580	Ant1	20	-31.47	-25	Pass
NVNT	ac20	5580	Ant1	40	-54.88	-40	Pass
NVNT	ac20	5700	Ant1	-20	-31.73	-25	Pass
NVNT	ac20	5700	Ant1	-40	-53.84	-40	Pass
NVNT	ac20	5700	Ant1	20	-31.81	-25	Pass
NVNT	ac20	5700	Ant1	40	-55.40	-40	Pass
NVNT	ac40	5190	Ant1	-40	-34.14	-25	Pass
NVNT	ac40	5190	Ant1	-80	-49.73	-40	Pass
NVNT	ac40	5190	Ant1	40	-30.89	-25	Pass
NVNT	ac40	5190	Ant1	80	-50.62	-40	Pass
NVNT	ac40	5200	Ant1	-40	-34.39	-25	Pass
NVNT	ac40	5200	Ant1	-80	-49.75	-40	Pass
NVNT	ac40	5200	Ant1	40	-30.95	-25	Pass
NVNT	ac40	5200	Ant1	80	-50.80	-40	Pass
NVNT	ac40	5230	Ant1	-40	-34.22	-25	Pass
NVNT	ac40	5230	Ant1	-80	-50.24	-40	Pass
NVNT	ac40	5230	Ant1	40	-30.42	-25	Pass
NVNT	ac40	5230	Ant1	80	-50.97	-40	Pass
NVNT	ac40	5270	Ant1	-40	-34.67	-25	Pass
NVNT	ac40	5270	Ant1	-80	-51.02	-40	Pass
NVNT	ac40	5270	Ant1	40	-30.23	-25	Pass
NVNT	ac40	5270	Ant1	80	-50.53	-40	Pass
NVNT	ac40	5310	Ant1	-40	-35.14	-25	Pass
NVNT	ac40	5310	Ant1	-80	-50.49	-40	Pass
NVNT	ac40	5310	Ant1	40	-31.22	-25	Pass
NVNT	ac40	5310	Ant1	80	-51.66	-40	Pass
NVNT	ac40	5510	Ant1	-40	-42.39	-25	Pass
NVNT	ac40	5510	Ant1	-80	-51.71	-40	Pass
NVNT	ac40	5510	Ant1	40	-41.55	-25	Pass
NVNT	ac40	5510	Ant1	80	-51.23	-40	Pass
NVNT	ac40	5590	Ant1	-40	-42.95	-25	Pass


NVNT	ac40	5590	Ant1	-80	-52.85	-40	Pass
NVNT	ac40	5590	Ant1	40	-42.16	-25	Pass
NVNT	ac40	5590	Ant1	80	-52.74	-40	Pass
NVNT	ac40	5670	Ant1	-40	-41.55	-25	Pass
NVNT	ac40	5670	Ant1	-80	-52.12	-40	Pass
NVNT	ac40	5670	Ant1	40	-42.78	-25	Pass
NVNT	ac40	5670	Ant1	80	-53.38	-40	Pass
NVNT	ax20	5180	Ant1	-20	-31.33	-25	Pass
NVNT	ax20	5180	Ant1	-40	-54.61	-40	Pass
NVNT	ax20	5180	Ant1	20	-32.79	-25	Pass
NVNT	ax20	5180	Ant1	40	-56.22	-40	Pass
NVNT	ax20	5200	Ant1	-20	-31.58	-25	Pass
NVNT	ax20	5200	Ant1	-40	-55.82	-40	Pass
NVNT	ax20	5200	Ant1	20	-30.61	-25	Pass
NVNT	ax20	5200	Ant1	40	-56.88	-40	Pass
NVNT	ax20	5240	Ant1	-20	-29.64	-25	Pass
NVNT	ax20	5240	Ant1	-40	-56.19	-40	Pass
NVNT	ax20	5240	Ant1	20	-30.99	-25	Pass
NVNT	ax20	5240	Ant1	40	-57.43	-40	Pass
NVNT	ax20	5260	Ant1	-20	-31.78	-25	Pass
NVNT	ax20	5260	Ant1	-40	-56.67	-40	Pass
NVNT	ax20	5260	Ant1	20	-31.01	-25	Pass
NVNT	ax20	5260	Ant1	40	-57.29	-40	Pass
NVNT	ax20	5300	Ant1	-20	-31.60	-25	Pass
NVNT	ax20	5300	Ant1	-40	-57.03	-40	Pass
NVNT	ax20	5300	Ant1	20	-31.11	-25	Pass
NVNT	ax20	5300	Ant1	40	-57.41	-40	Pass
NVNT	ax20	5320	Ant1	-20	-31.44	-25	Pass
NVNT	ax20	5320	Ant1	-40	-56.95	-40	Pass
NVNT	ax20	5320	Ant1	20	-31.36	-25	Pass
NVNT	ax20	5320	Ant1	40	-57.45	-40	Pass
NVNT	ax20	5500	Ant1	-20	-31.11	-25	Pass
NVNT	ax20	5500	Ant1	-40	-55.49	-40	Pass
NVNT	ax20	5500	Ant1	20	-31.02	-25	Pass
NVNT	ax20	5500	Ant1	40	-55.92	-40	Pass
NVNT	ax20	5580	Ant1	-20	-31.14	-25	Pass
NVNT	ax20	5580	Ant1	-40	-55.66	-40	Pass
NVNT	ax20	5580	Ant1	20	-30.52	-25	Pass
NVNT	ax20	5580	Ant1	40	-56.15	-40	Pass
NVNT	ax20	5700	Ant1	-20	-30.94	-25	Pass
NVNT	ax20	5700	Ant1	-40	-54.62	-40	Pass
NVNT	ax20	5700	Ant1	20	-30.74	-25	Pass
NVNT	ax20	5700	Ant1	40	-56.48	-40	Pass
NVNT	ax40	5190	Ant1	-40	-35.49	-25	Pass

NVNT	ax40	5190	Ant1	-80	-50.62	-40	Pass
NVNT	ax40	5190	Ant1	40	-38.06	-25	Pass
NVNT	ax40	5190	Ant1	80	-52.36	-40	Pass
NVNT	ax40	5200	Ant1	-40	-35.79	-25	Pass
NVNT	ax40	5200	Ant1	-80	-50.44	-40	Pass
NVNT	ax40	5200	Ant1	40	-37.95	-25	Pass
NVNT	ax40	5200	Ant1	80	-52.24	-40	Pass
NVNT	ax40	5230	Ant1	-40	-35.20	-25	Pass
NVNT	ax40	5230	Ant1	-80	-51.17	-40	Pass
NVNT	ax40	5230	Ant1	40	-37.11	-25	Pass
NVNT	ax40	5230	Ant1	80	-52.92	-40	Pass
NVNT	ax40	5270	Ant1	-40	-35.52	-25	Pass
NVNT	ax40	5270	Ant1	-80	-51.90	-40	Pass
NVNT	ax40	5270	Ant1	40	-36.58	-25	Pass
NVNT	ax40	5270	Ant1	80	-52.32	-40	Pass
NVNT	ax40	5310	Ant1	-40	-36.75	-25	Pass
NVNT	ax40	5310	Ant1	-80	-51.55	-40	Pass
NVNT	ax40	5310	Ant1	40	-38.33	-25	Pass
NVNT	ax40	5310	Ant1	80	-53.47	-40	Pass
NVNT	ax40	5510	Ant1	-40	-43.59	-25	Pass
NVNT	ax40	5510	Ant1	-80	-52.89	-40	Pass
NVNT	ax40	5510	Ant1	40	-48.13	-25	Pass
NVNT	ax40	5510	Ant1	80	-52.30	-40	Pass
NVNT	ax40	5590	Ant1	-40	-43.89	-25	Pass
NVNT	ax40	5590	Ant1	-80	-53.88	-40	Pass
NVNT	ax40	5590	Ant1	40	-48.35	-25	Pass
NVNT	ax40	5590	Ant1	80	-53.80	-40	Pass
NVNT	ax40	5670	Ant1	-40	-42.73	-25	Pass
NVNT	ax40	5670	Ant1	-80	-53.20	-40	Pass
NVNT	ax40	5670	Ant1	40	-48.05	-25	Pass
NVNT	ax40	5670	Ant1	80	-54.59	-40	Pass
NVNT	a	5260	Ant1	-20	-33.28	-25	Pass
NVNT	a	5260	Ant1	-40	-55.54	-40	Pass
NVNT	a	5260	Ant1	20	-36.93	-25	Pass
NVNT	a	5260	Ant1	40	-56.37	-40	Pass
NVNT	a	5300	Ant1	-20	-33.55	-25	Pass
NVNT	a	5300	Ant1	-40	-56.57	-40	Pass
NVNT	a	5300	Ant1	20	-37.01	-25	Pass
NVNT	a	5300	Ant1	40	-56.67	-40	Pass
NVNT	a	5320	Ant1	-20	-33.27	-25	Pass
NVNT	a	5320	Ant1	-40	-56.29	-40	Pass
NVNT	a	5320	Ant1	20	-36.99	-25	Pass
NVNT	a	5320	Ant1	40	-56.75	-40	Pass
NVNT	a	5500	Ant1	-20	-32.48	-25	Pass


NVNT	a	5500	Ant1	-40	-54.52	-40	Pass
NVNT	a	5500	Ant1	20	-36.44	-25	Pass
NVNT	a	5500	Ant1	40	-55.18	-40	Pass
NVNT	a	5580	Ant1	-20	-32.97	-25	Pass
NVNT	a	5580	Ant1	-40	-54.73	-40	Pass
NVNT	a	5580	Ant1	20	-36.53	-25	Pass
NVNT	a	5580	Ant1	40	-55.07	-40	Pass
NVNT	a	5700	Ant1	-20	-32.38	-25	Pass
NVNT	a	5700	Ant1	-40	-53.83	-40	Pass
NVNT	a	5700	Ant1	20	-36.48	-25	Pass
NVNT	a	5700	Ant1	40	-55.46	-40	Pass
NVNT	n20	5260	Ant1	-20	-31.49	-25	Pass
NVNT	n20	5260	Ant1	-40	-55.26	-40	Pass
NVNT	n20	5260	Ant1	20	-32.69	-25	Pass
NVNT	n20	5260	Ant1	40	-56.01	-40	Pass
NVNT	n20	5300	Ant1	-20	-31.54	-25	Pass
NVNT	n20	5300	Ant1	-40	-56.06	-40	Pass
NVNT	n20	5300	Ant1	20	-32.66	-25	Pass
NVNT	n20	5300	Ant1	40	-56.56	-40	Pass
NVNT	n20	5320	Ant1	-20	-31.48	-25	Pass
NVNT	n20	5320	Ant1	-40	-56.35	-40	Pass
NVNT	n20	5320	Ant1	20	-32.69	-25	Pass
NVNT	n20	5320	Ant1	40	-56.82	-40	Pass
NVNT	n20	5500	Ant1	-20	-31.70	-25	Pass
NVNT	n20	5500	Ant1	-40	-54.89	-40	Pass
NVNT	n20	5500	Ant1	20	-32.79	-25	Pass
NVNT	n20	5500	Ant1	40	-55.15	-40	Pass
NVNT	n20	5580	Ant1	-20	-31.62	-25	Pass
NVNT	n20	5580	Ant1	-40	-54.86	-40	Pass
NVNT	n20	5580	Ant1	20	-32.57	-25	Pass
NVNT	n20	5580	Ant1	40	-55.20	-40	Pass
NVNT	n20	5700	Ant1	-20	-31.35	-25	Pass
NVNT	n20	5700	Ant1	-40	-53.88	-40	Pass
NVNT	n20	5700	Ant1	20	-32.54	-25	Pass
NVNT	n20	5700	Ant1	40	-55.48	-40	Pass

Test Graphs


ACEP NVNT n40 5200MHz Ant1

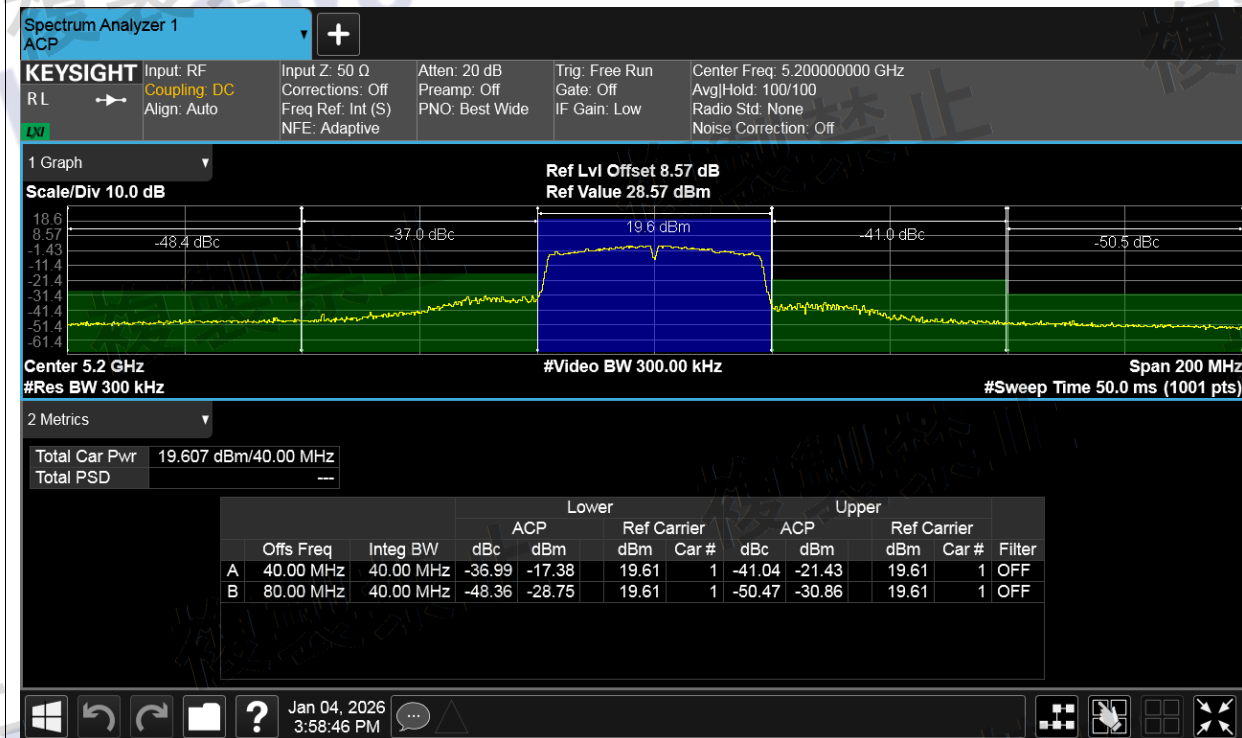


ACEP NVNT n40 5270MHz Ant1

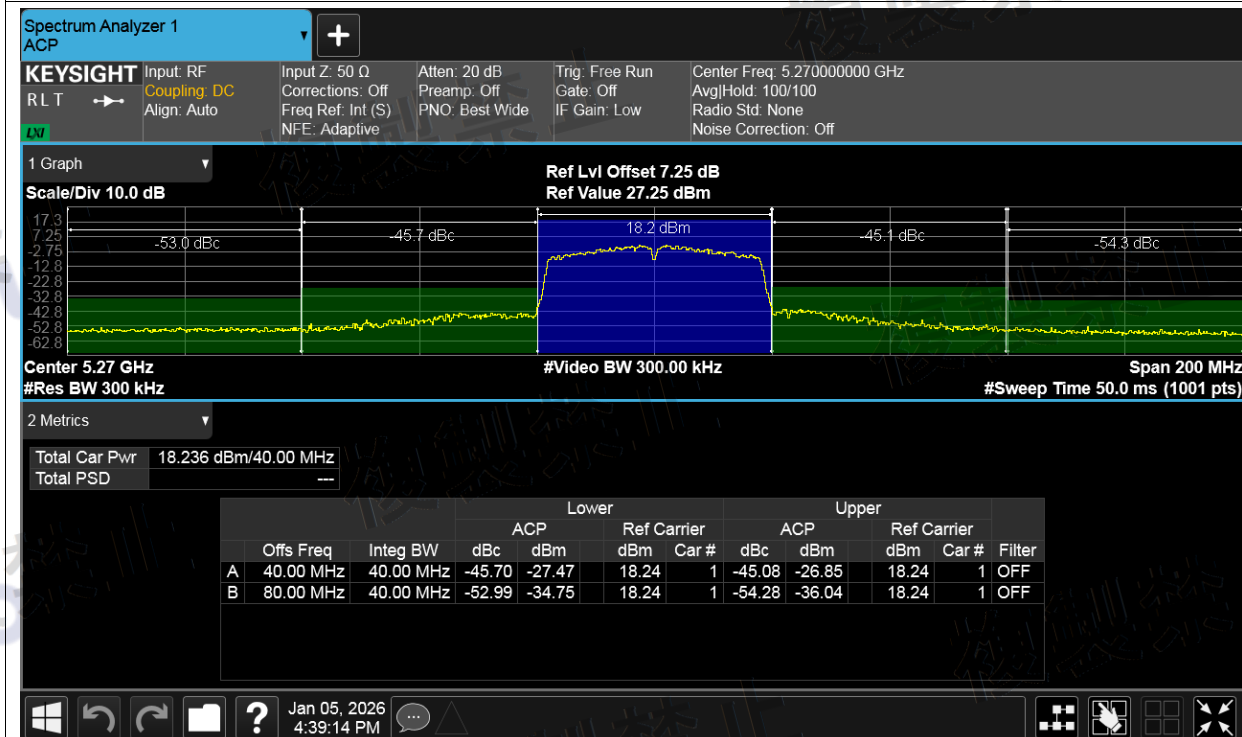


ACEP NVNT n40 5310MHz Ant1

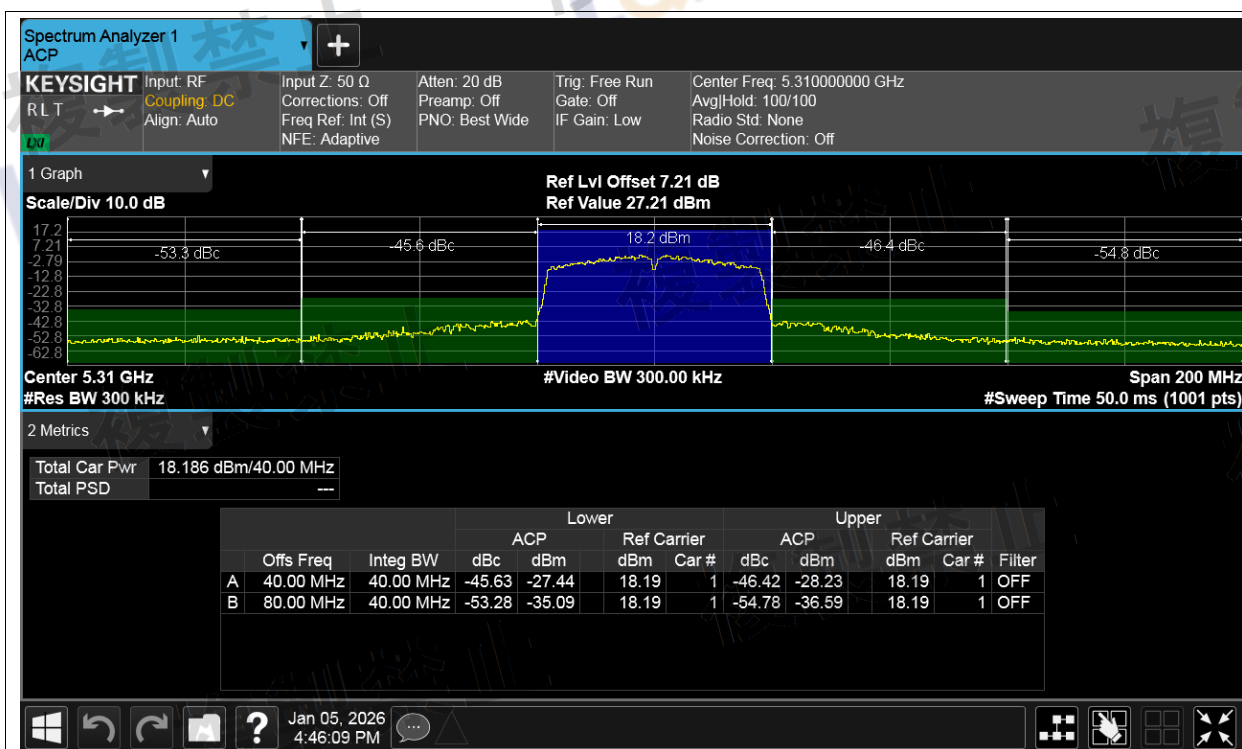

ACEP NVNT n40 5510MHz Ant1

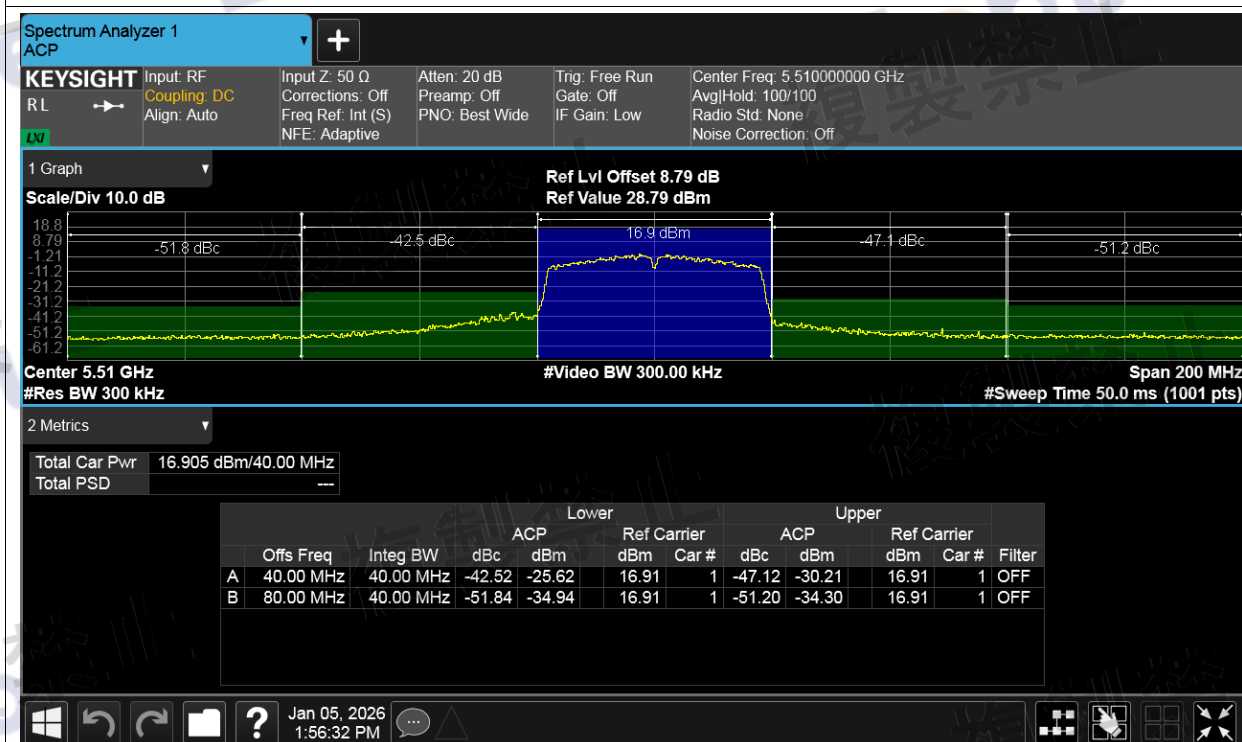


ACEP NVNT n40 5590MHz Ant1

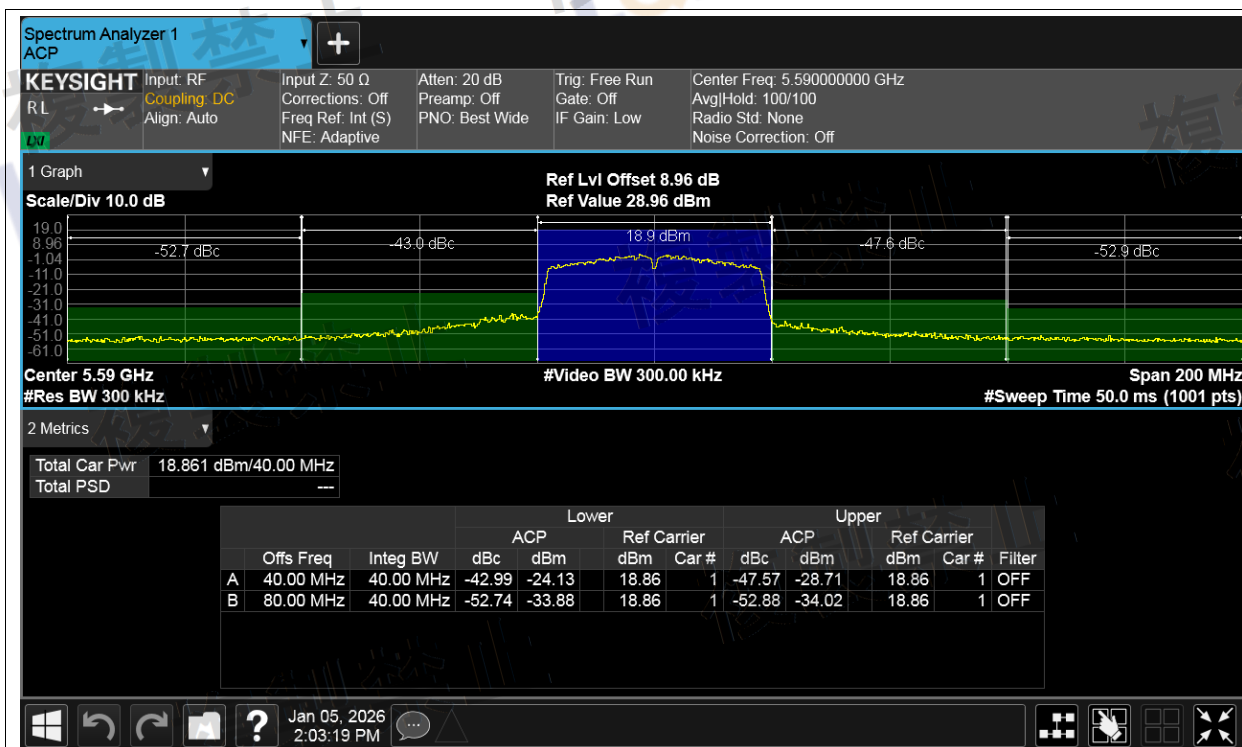


ACEP NVNT n40 5670MHz Ant1




ACEP NVNT ac20 5180MHz Ant1

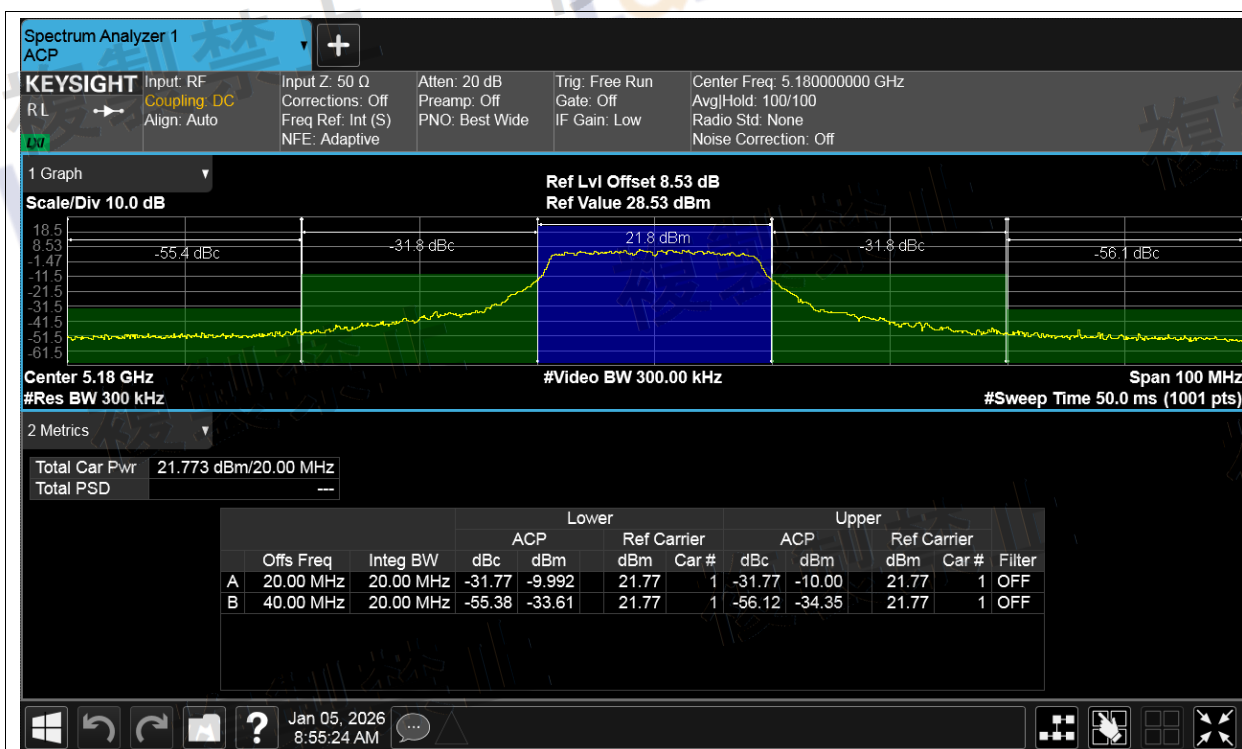

ACEP NVNT ac20 5200MHz Ant1

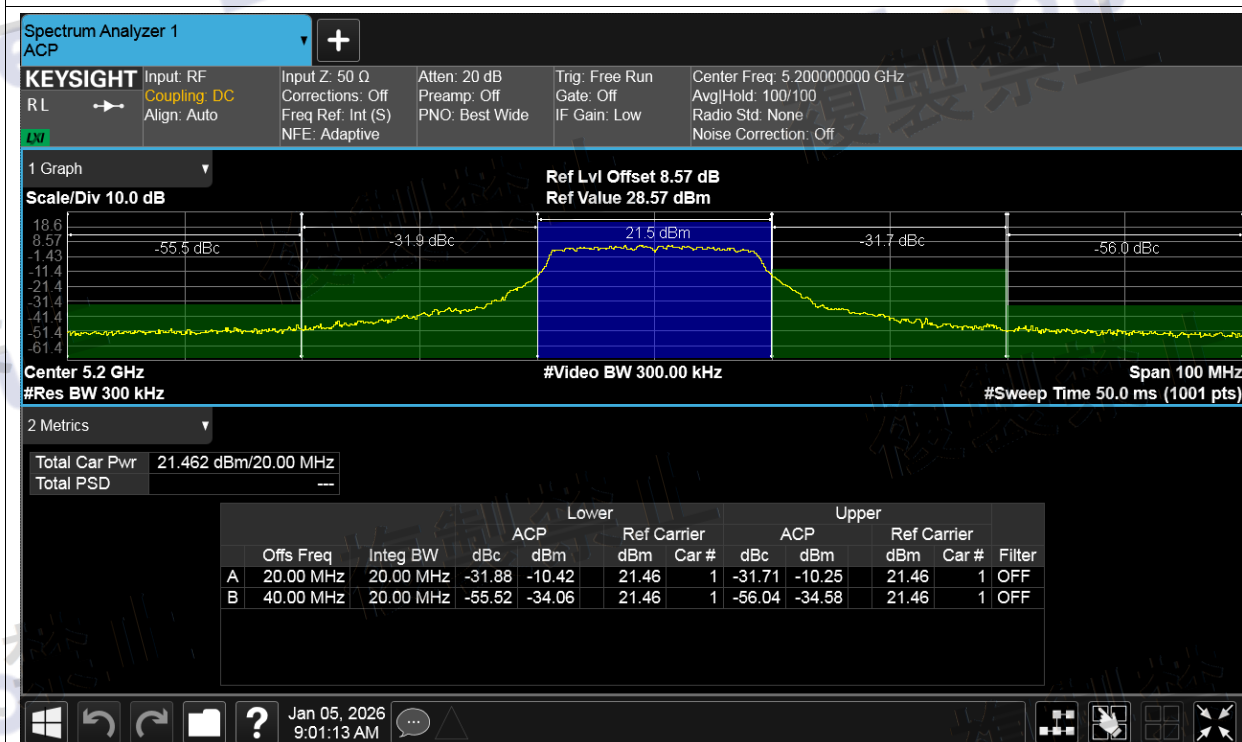


ACEP NVNT ac20 5240MHz Ant1

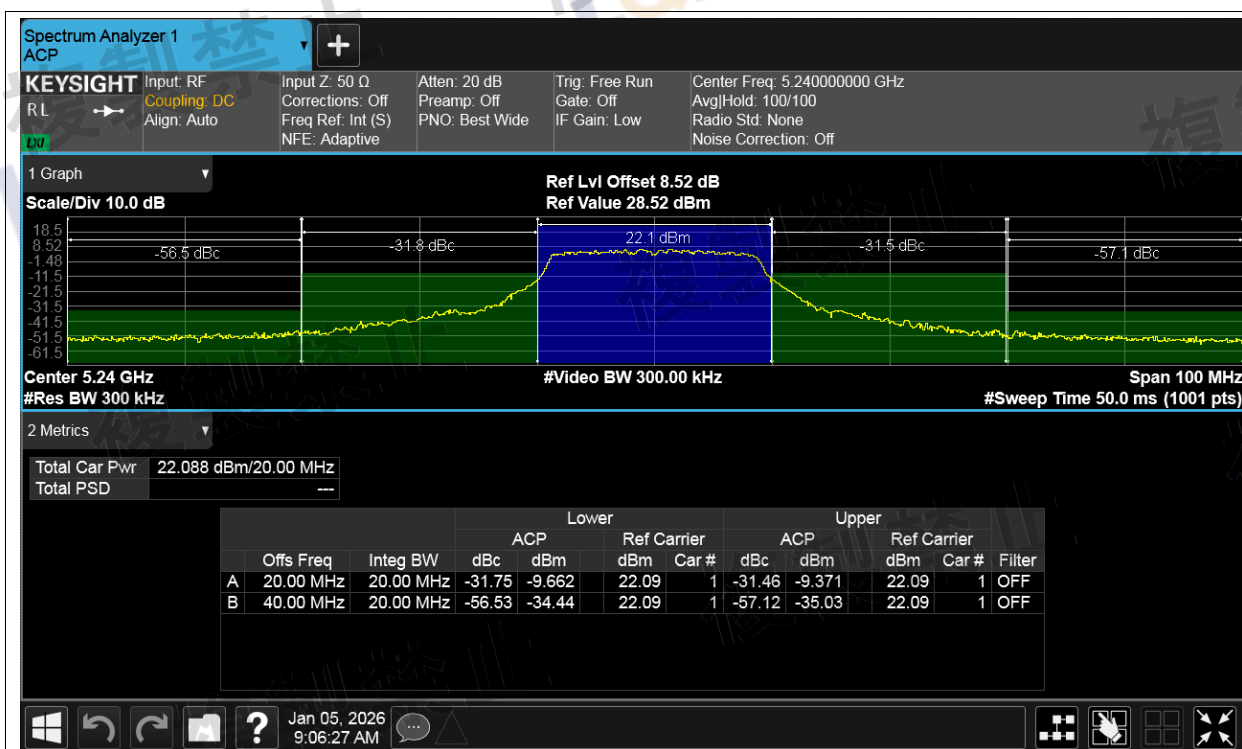


ACEP NVNT ac20 5260MHz Ant1




ACEP NVNT ac20 5300MHz Ant1

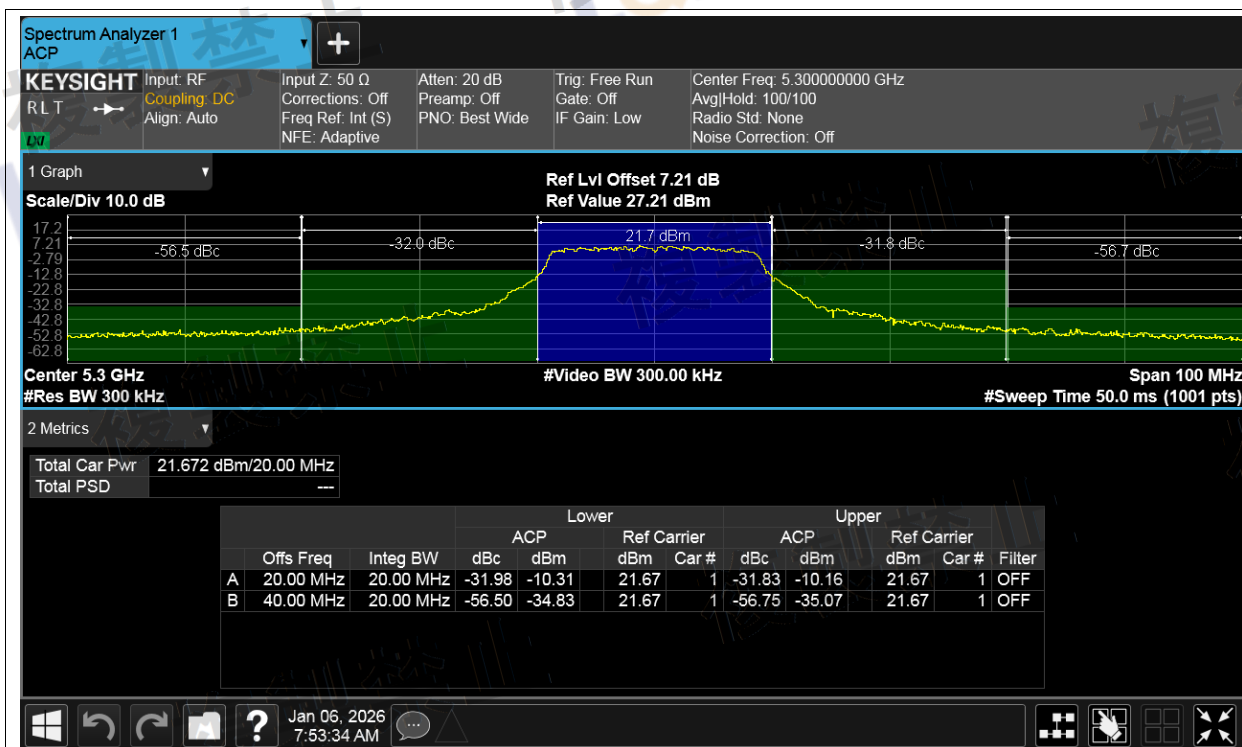


ACEP NVNT ac20 5320MHz Ant1

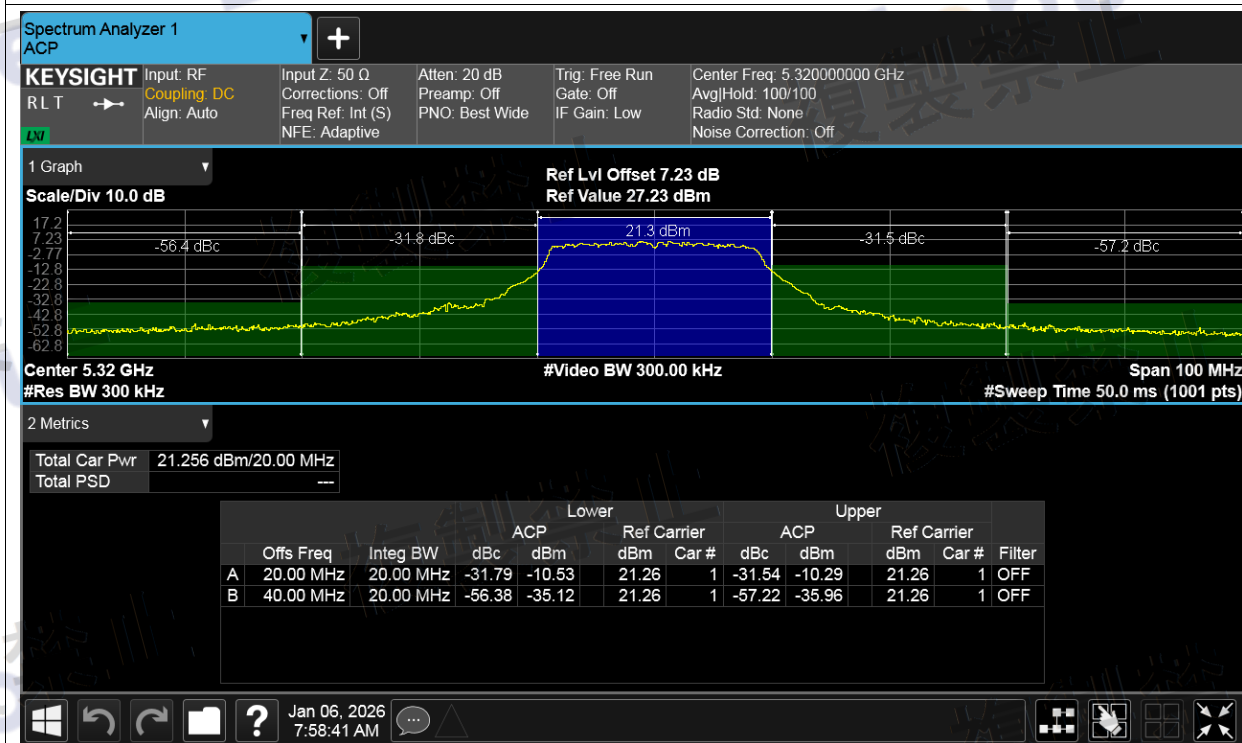


ACEP NVNT ac20 5500MHz Ant1

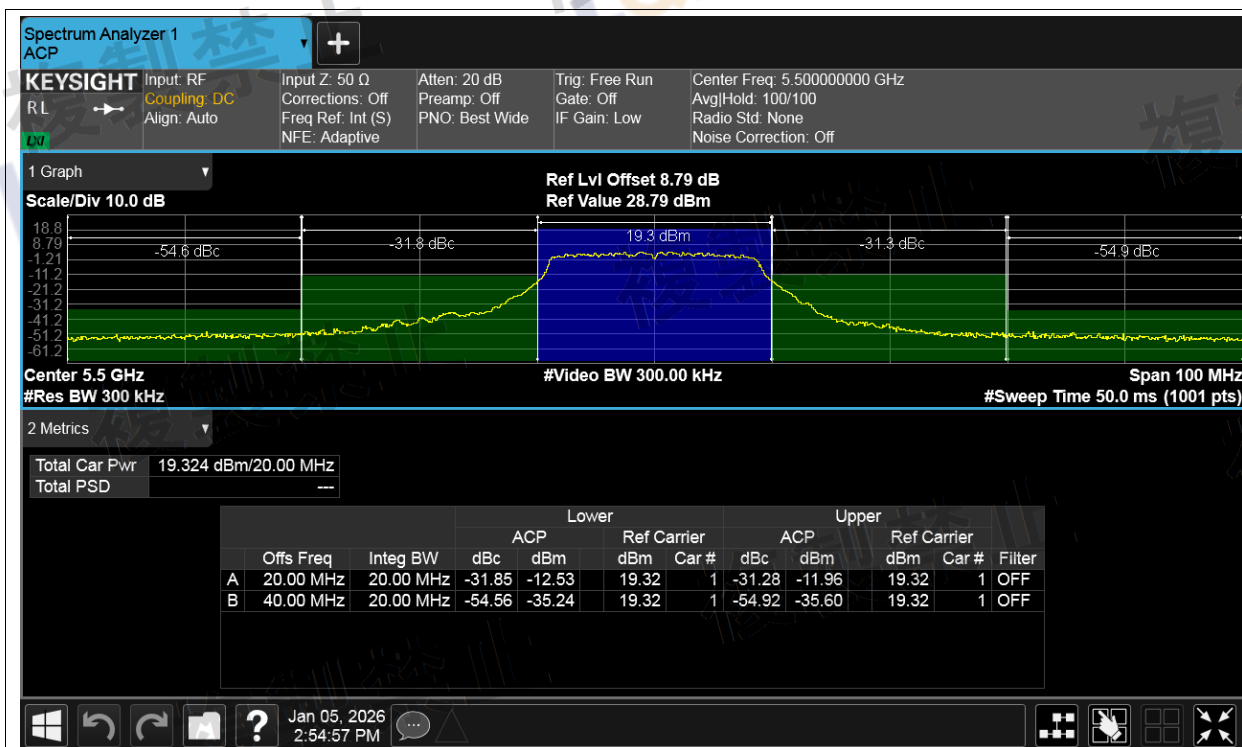

ACEP NVNT ac20 5580MHz Ant1

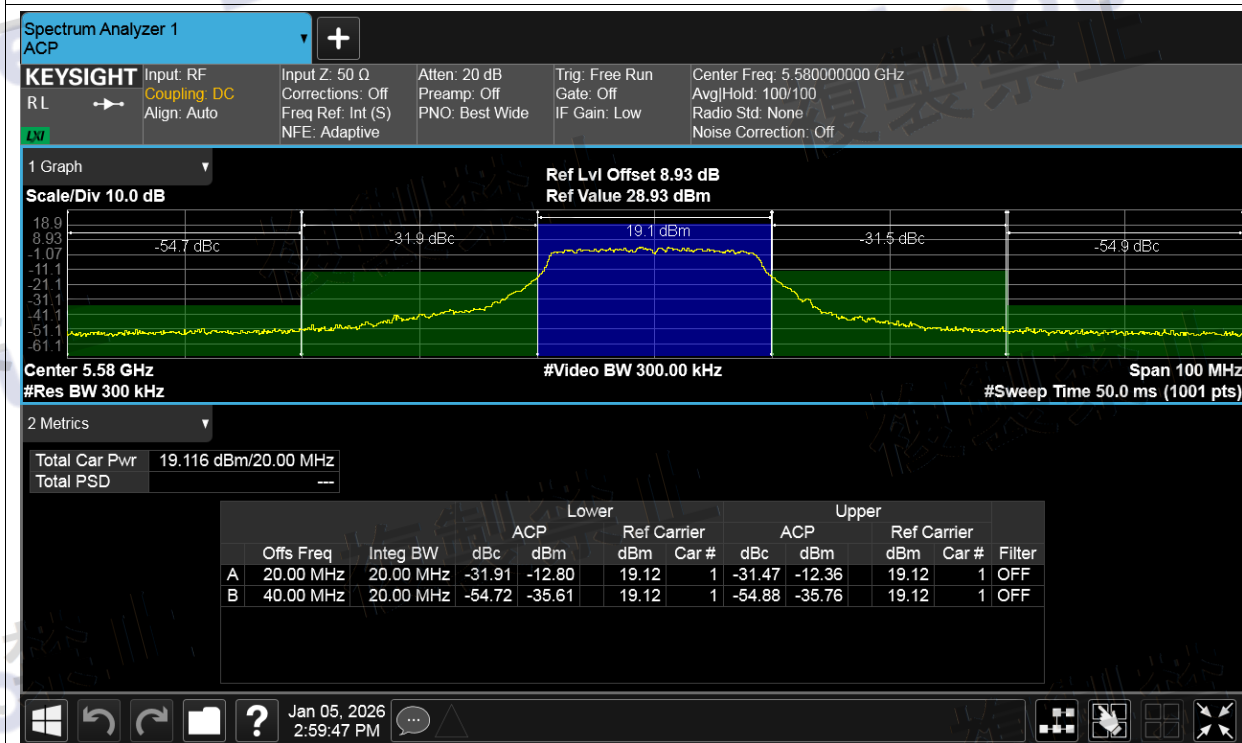


ACEP NVNT ac20 5700MHz Ant1

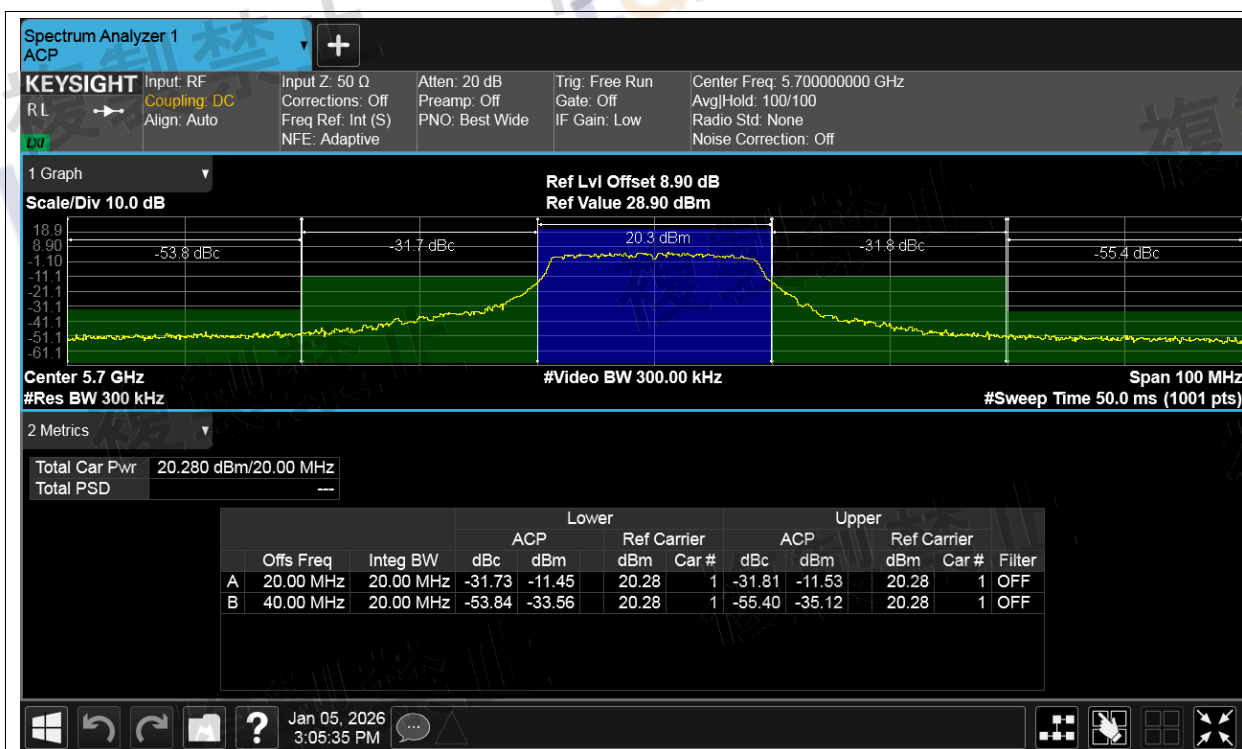

ACEP NVNT ac40 5190MHz Ant1



ACEP NVNT ac40 5200MHz Ant1

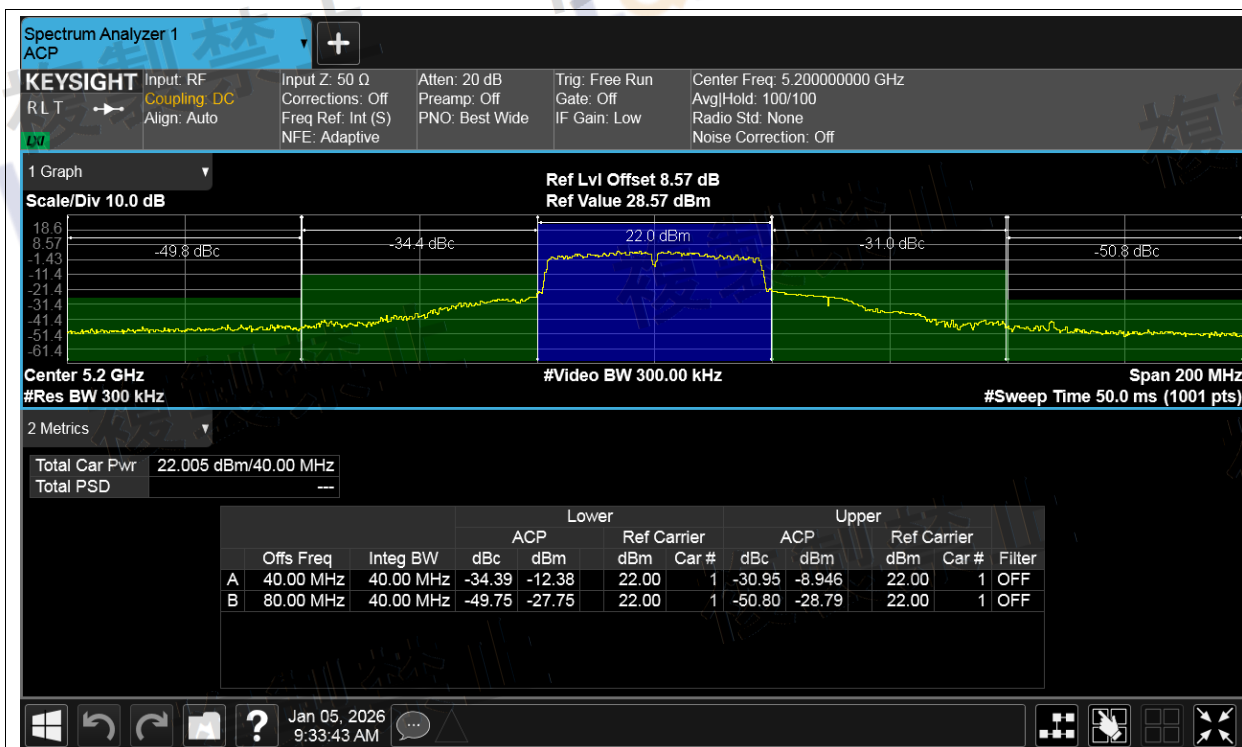

ACEP NVNT ac40 5230MHz Ant1




ACEP NVNT ac40 5270MHz Ant1




ACEP NVNT ac40 5310MHz Ant1




ACEP NVNT ac40 5510MHz Ant1

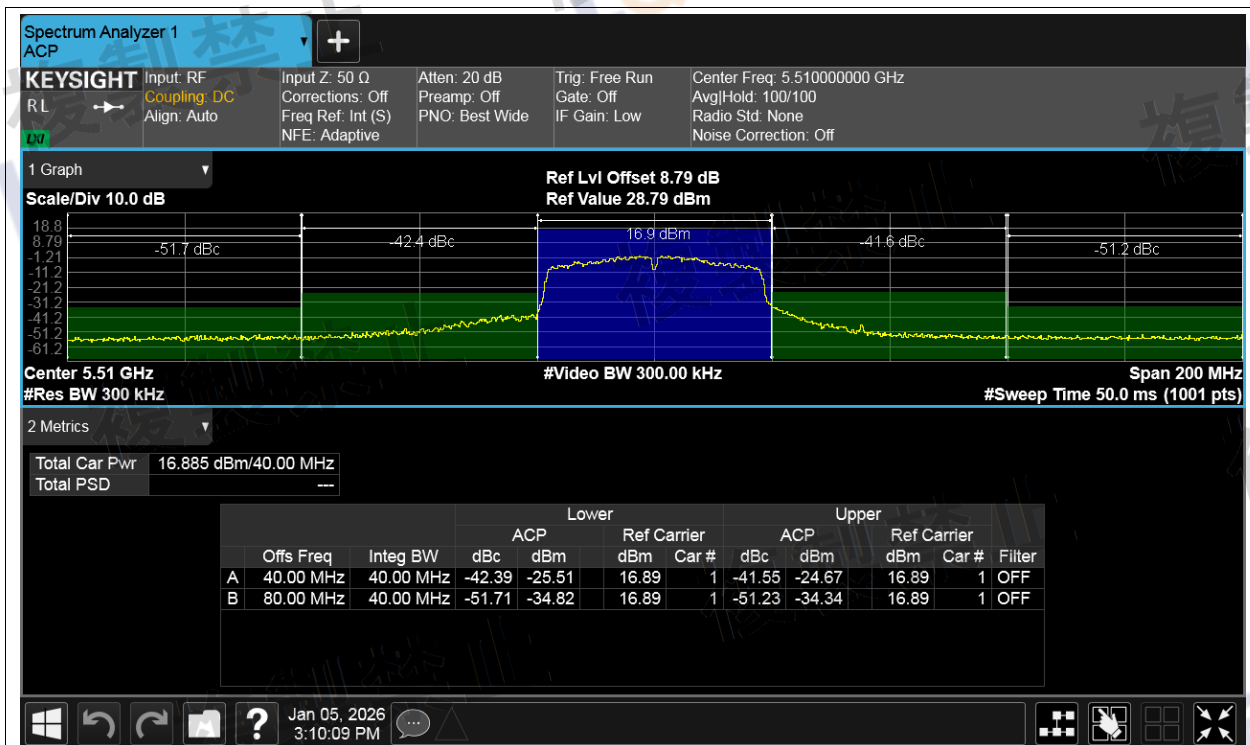


ACEP NVNT ac40 5590MHz Ant1

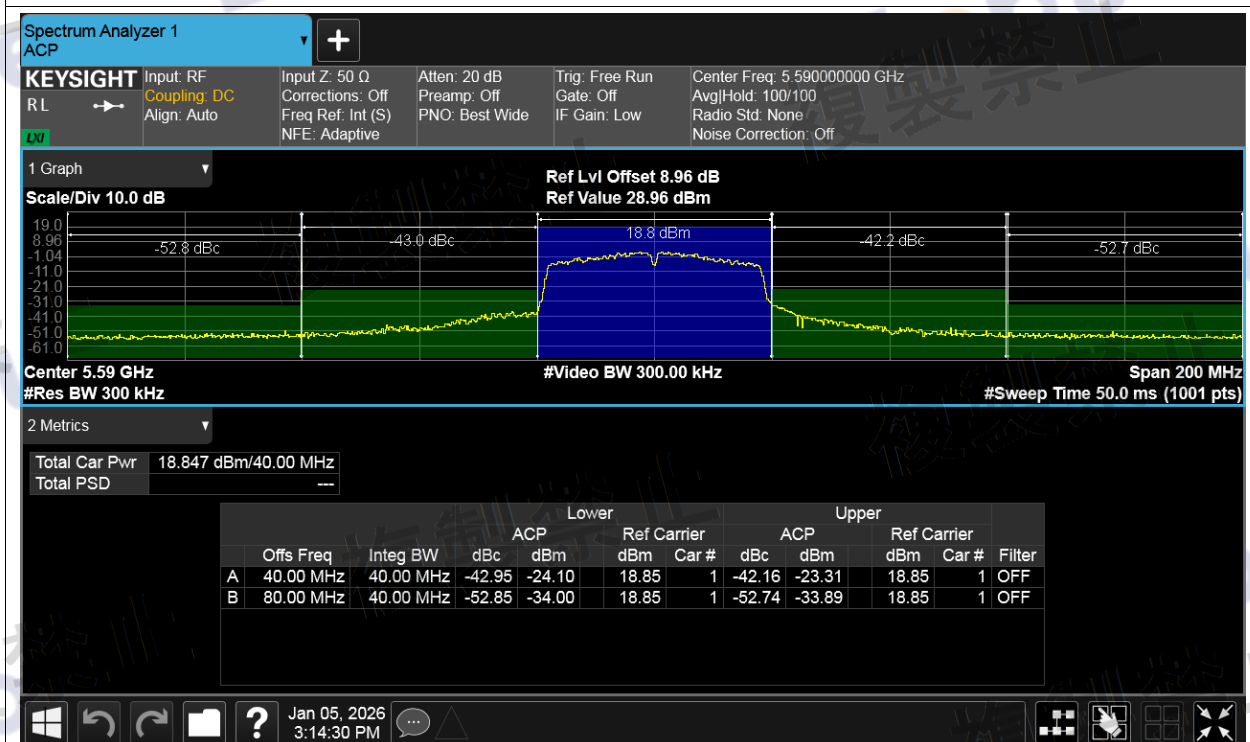


ACEP NVNT ac40 55670MHz Ant1

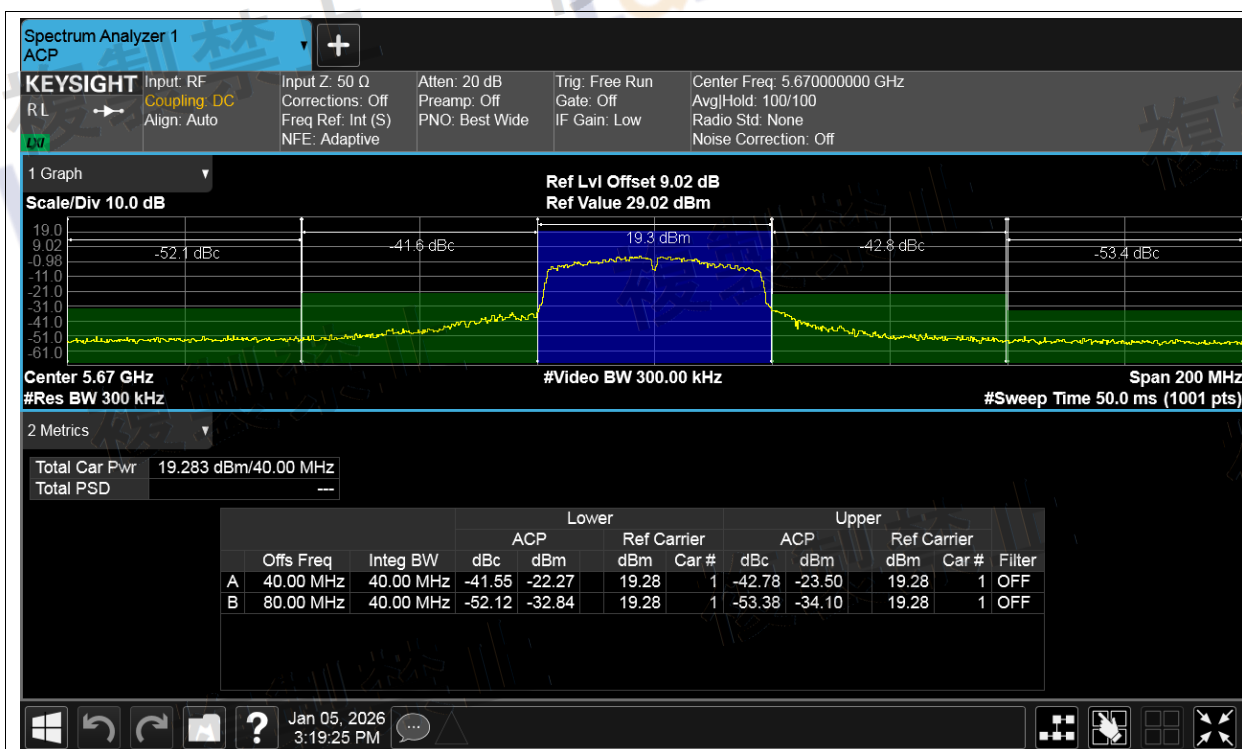


ACEP NVNT ax20 5180MHz Ant1

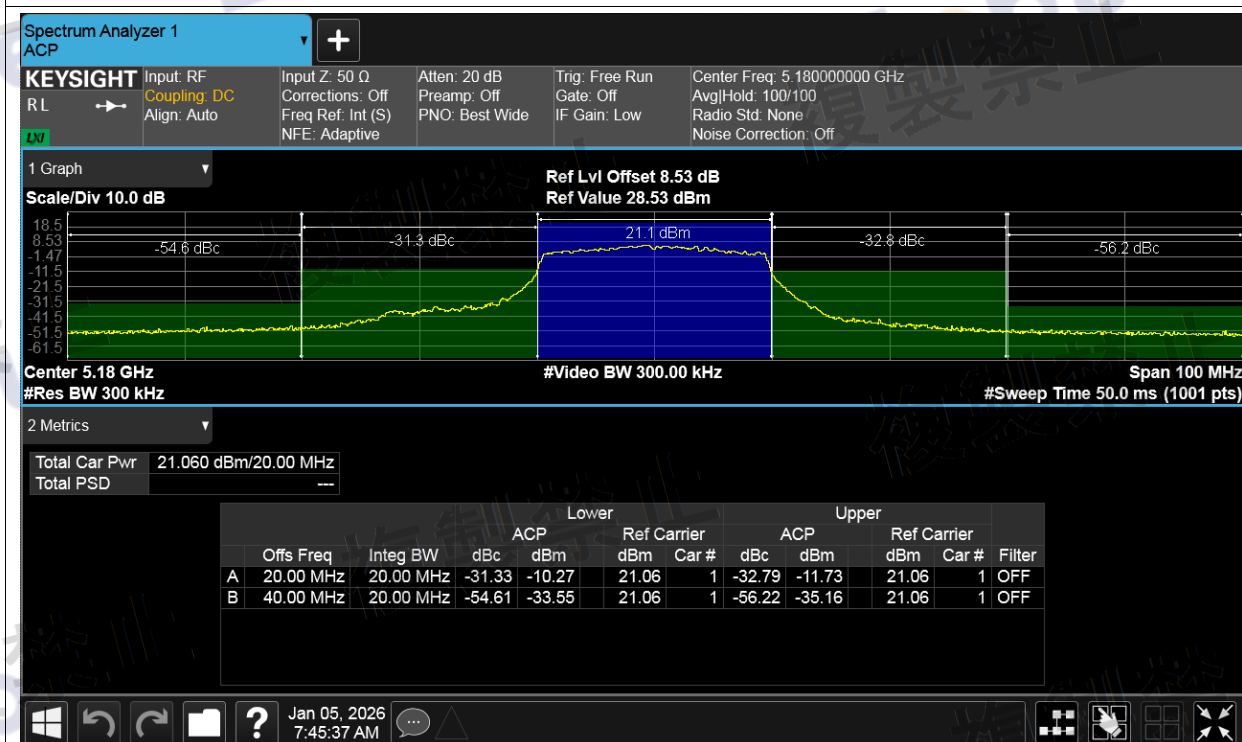


ACEP NVNT ax20 5200MHz Ant1

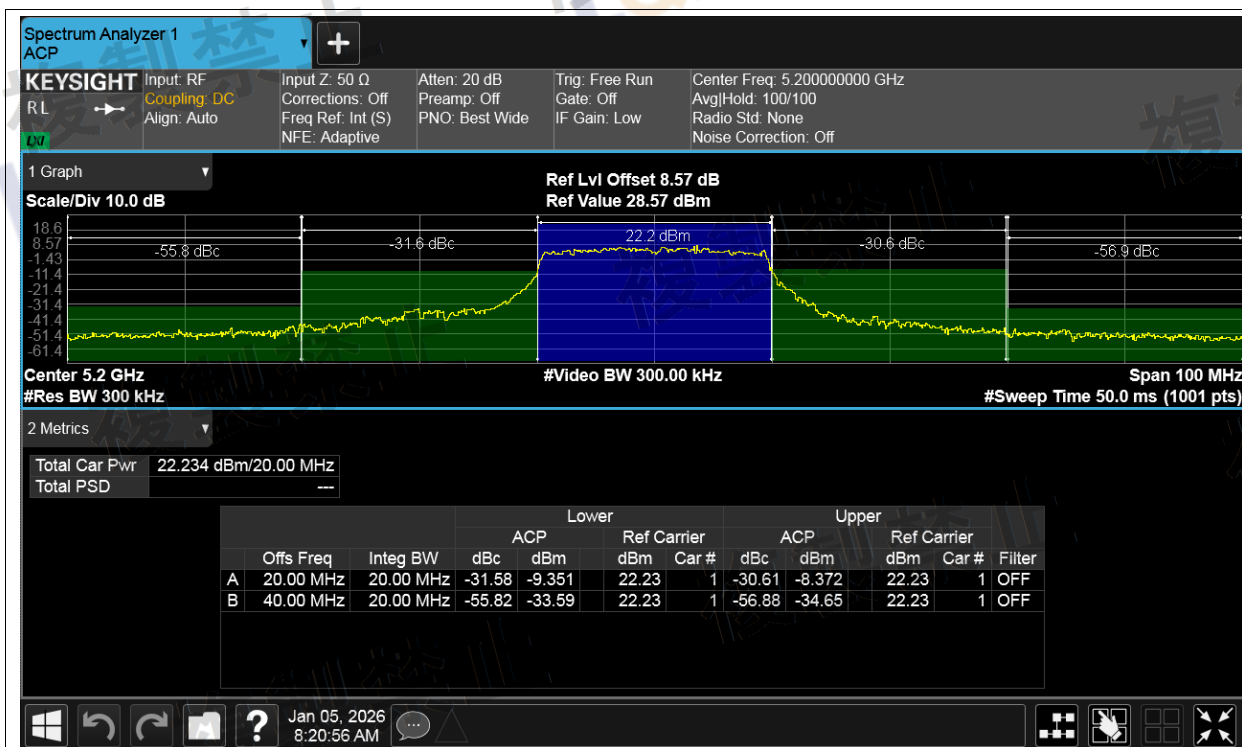


ACEP NVNT ax20 5240MHz Ant1

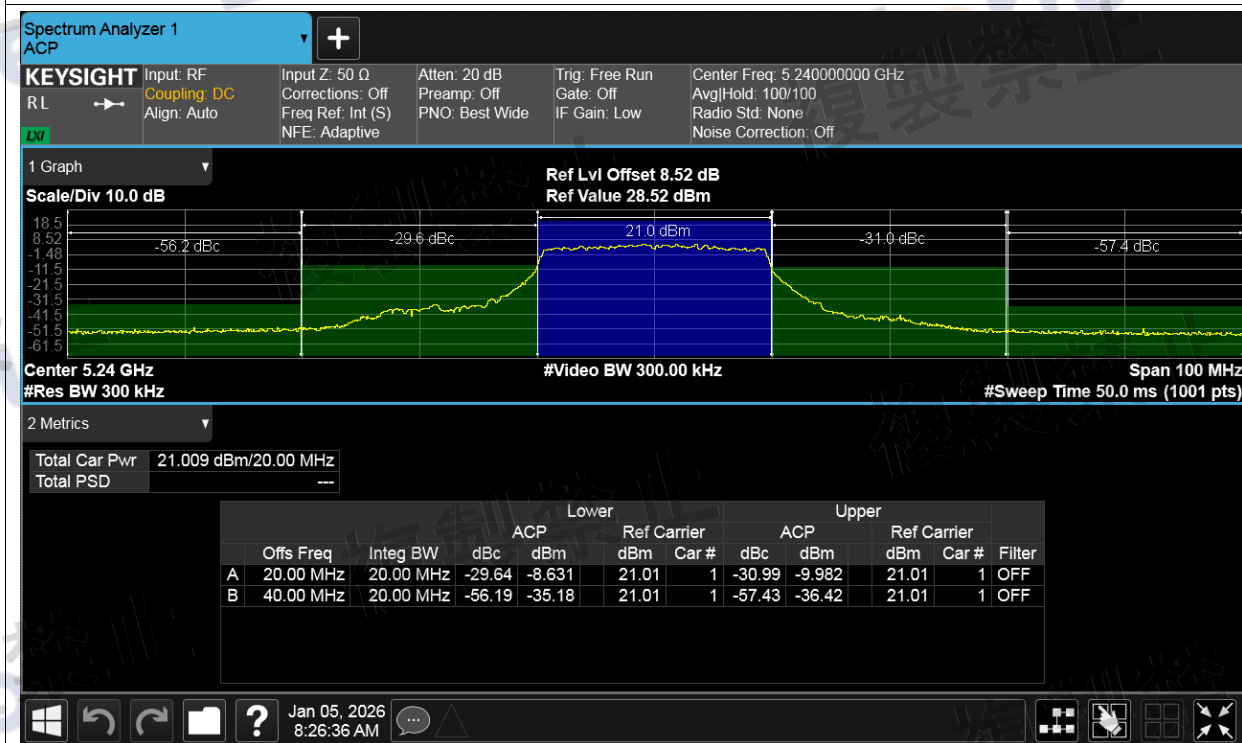


ACEP NVNT ax20 5260MHz Ant1

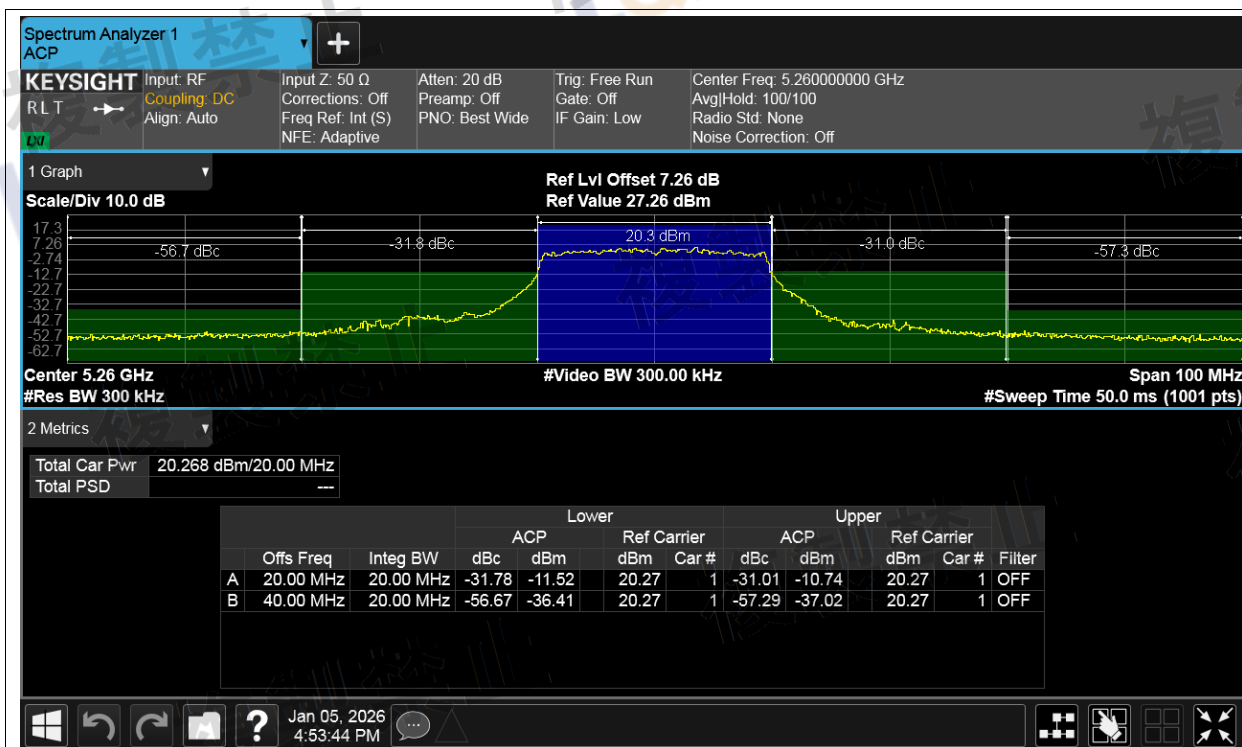


ACEP NVNT ax20 5300MHz Ant1

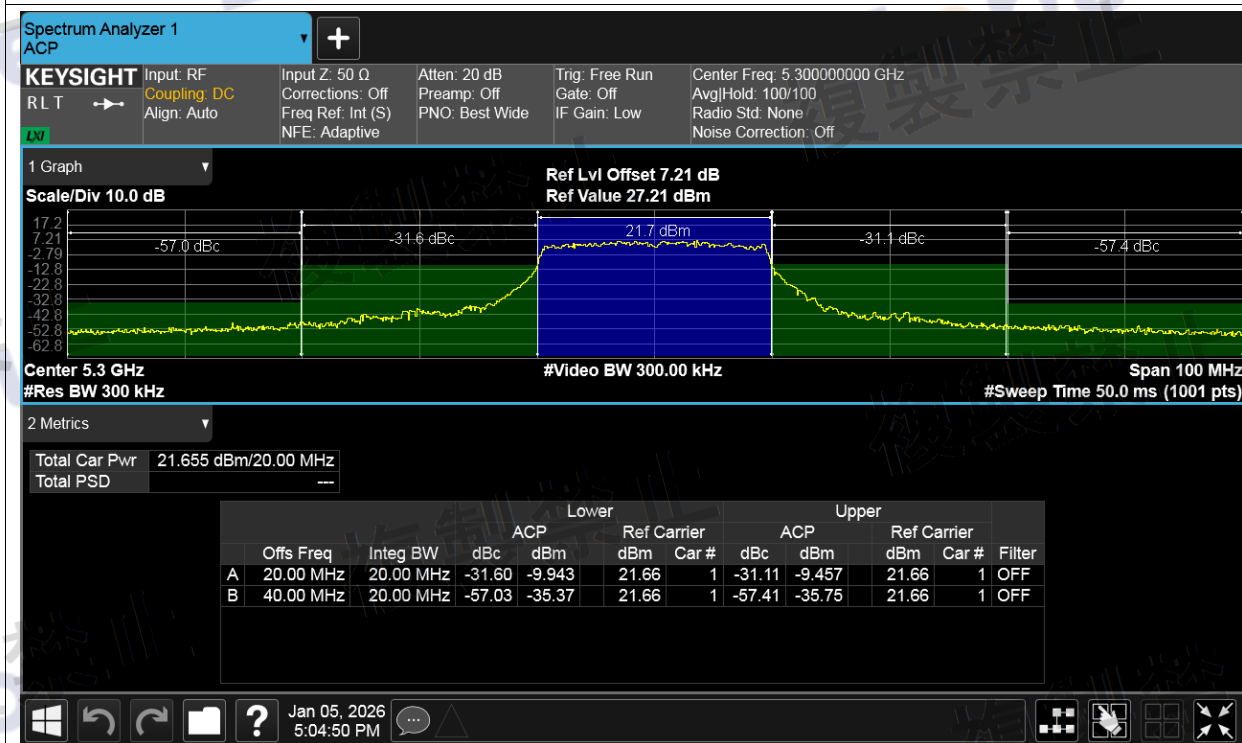


ACEP NVNT ax20 5320MHz Ant1

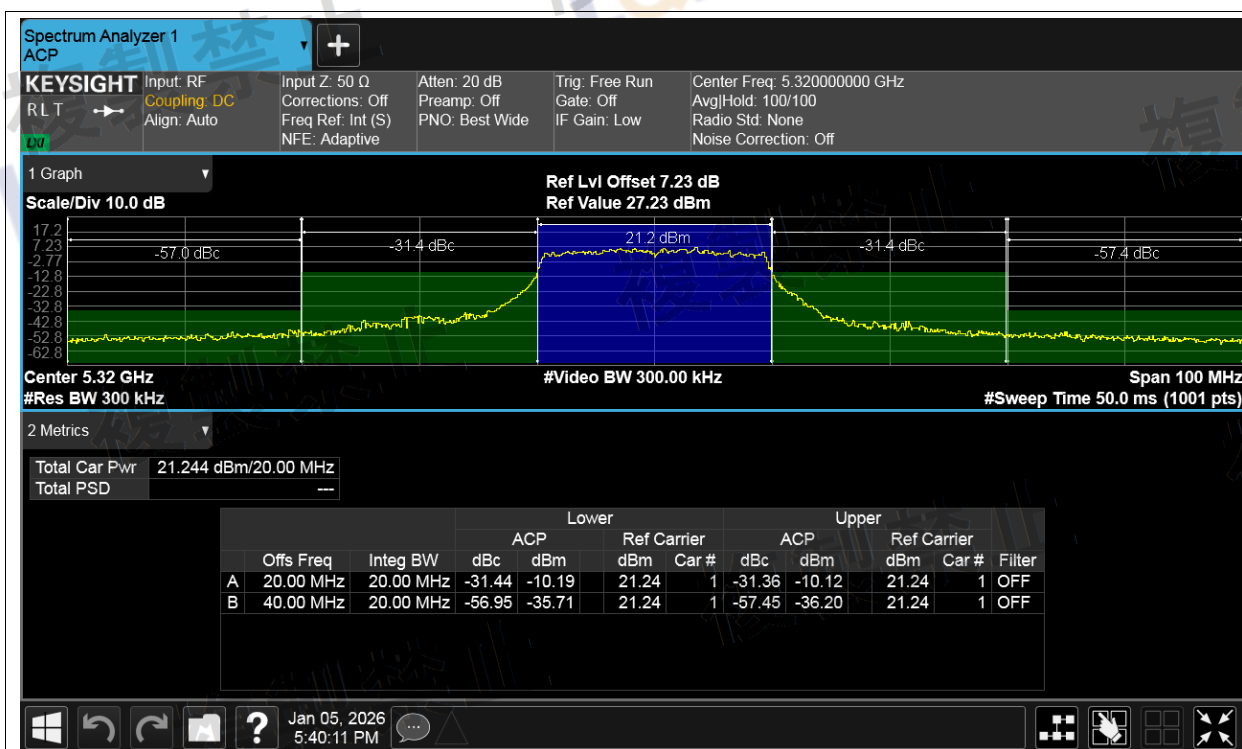


ACEP NVNT ax20 5500MHz Ant1

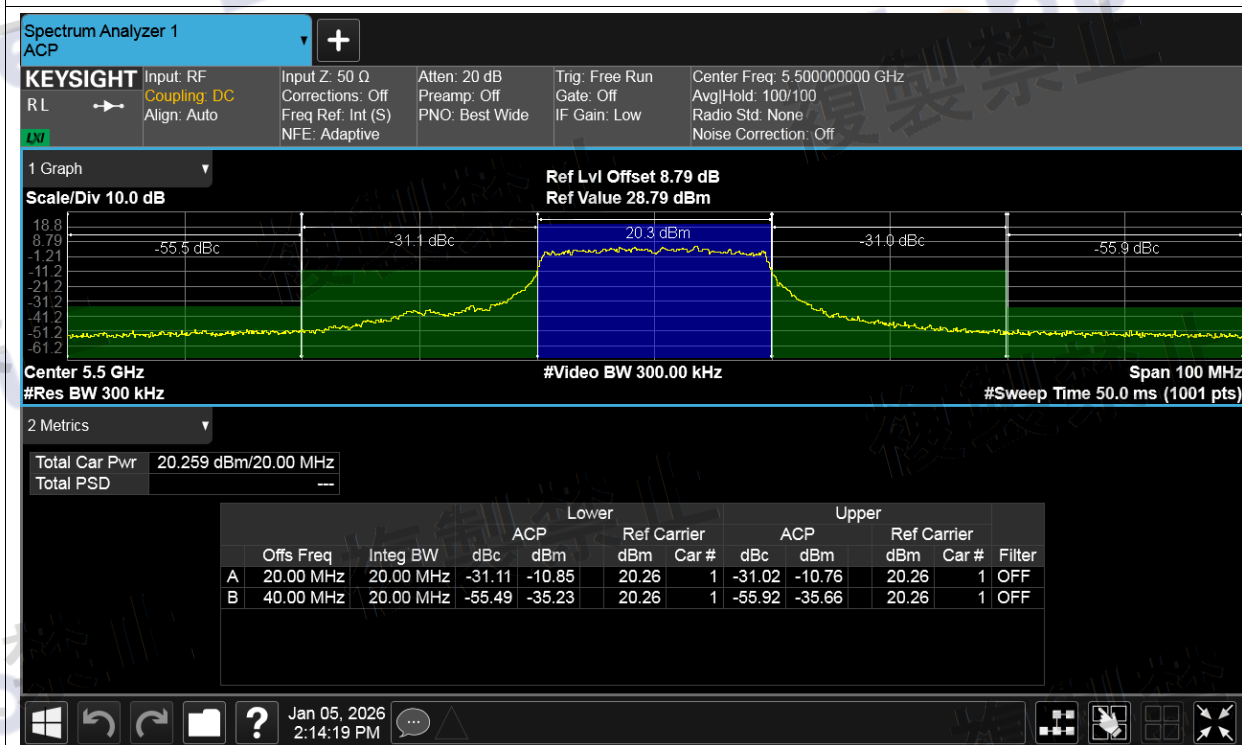


ACEP NVNT ax20 5580MHz Ant1

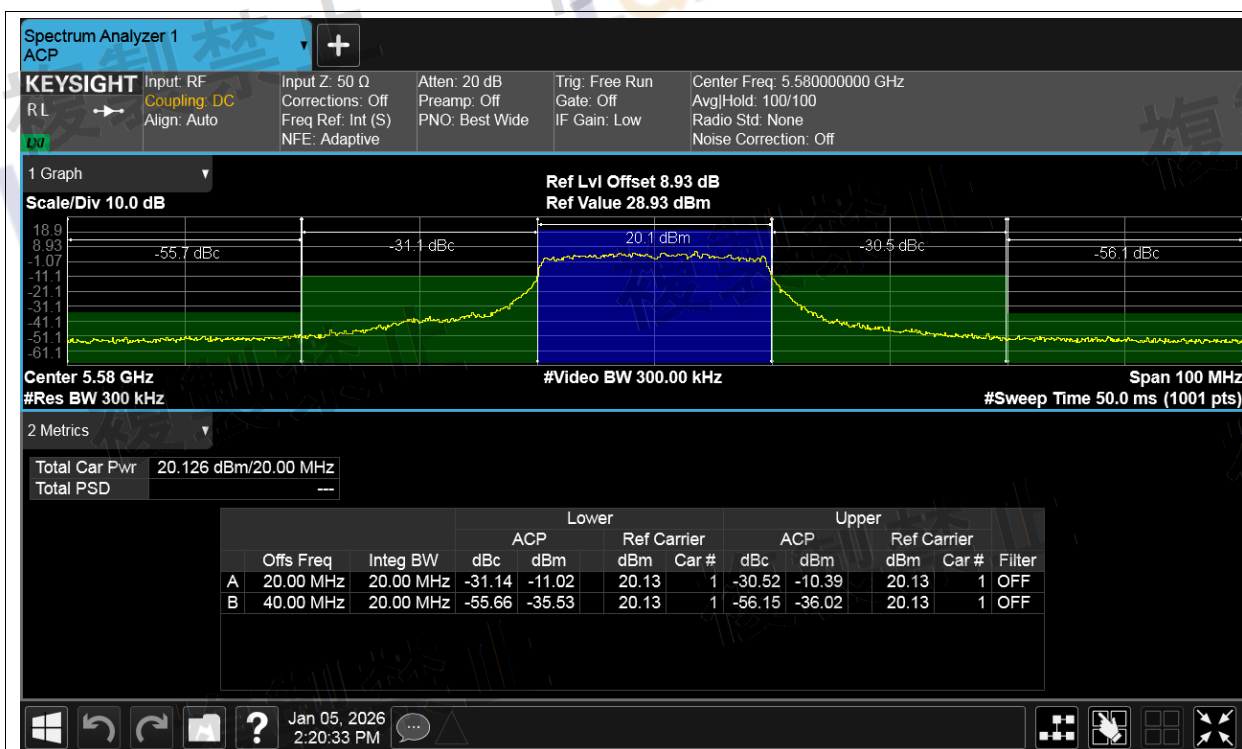


ACEP NVNT ax20 5700MHz Ant1

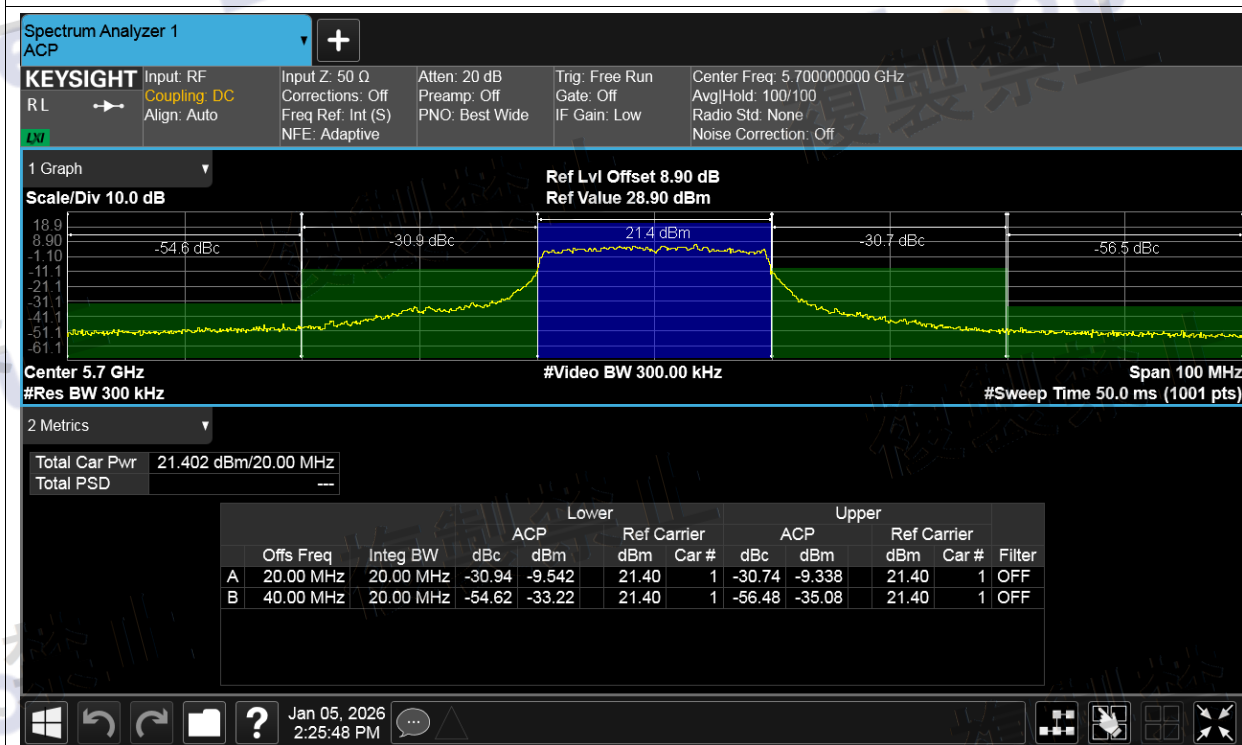


ACEP NVNT ax40 5190MHz Ant1

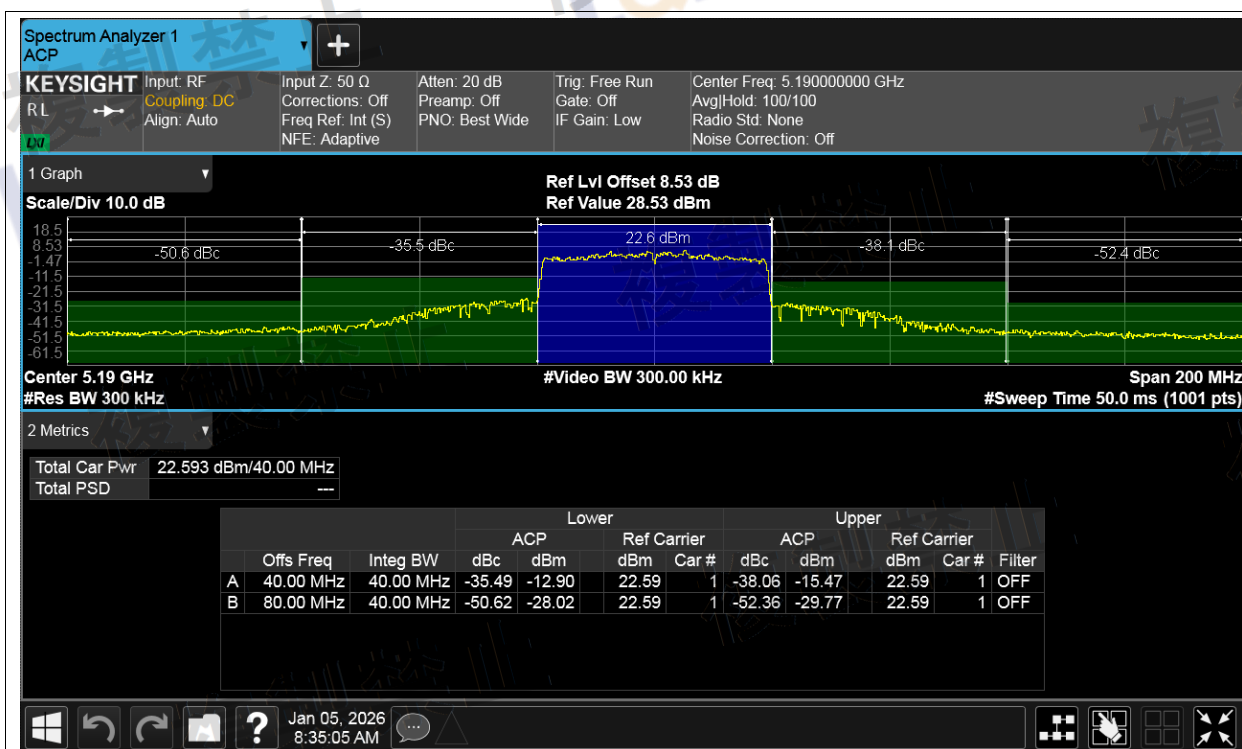


ACEP NVNT ax40 5200MHz Ant1

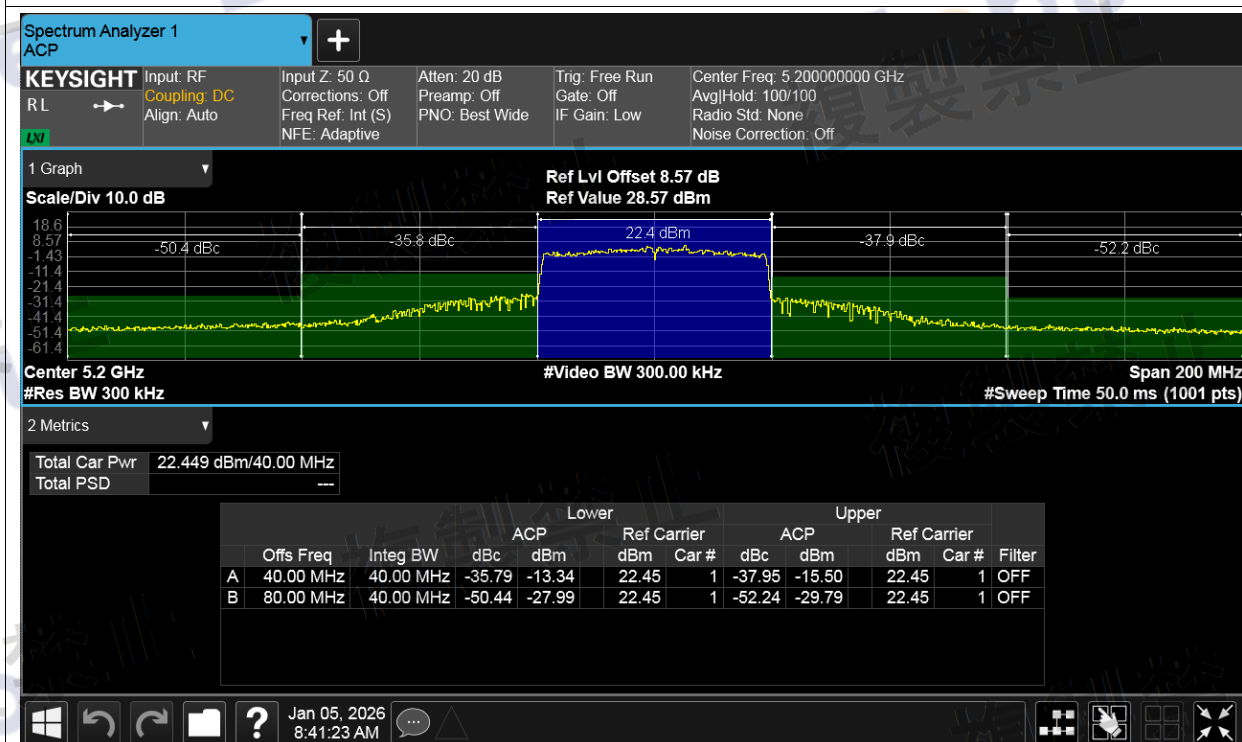


ACEP NVNT ax40 5230MHz Ant1

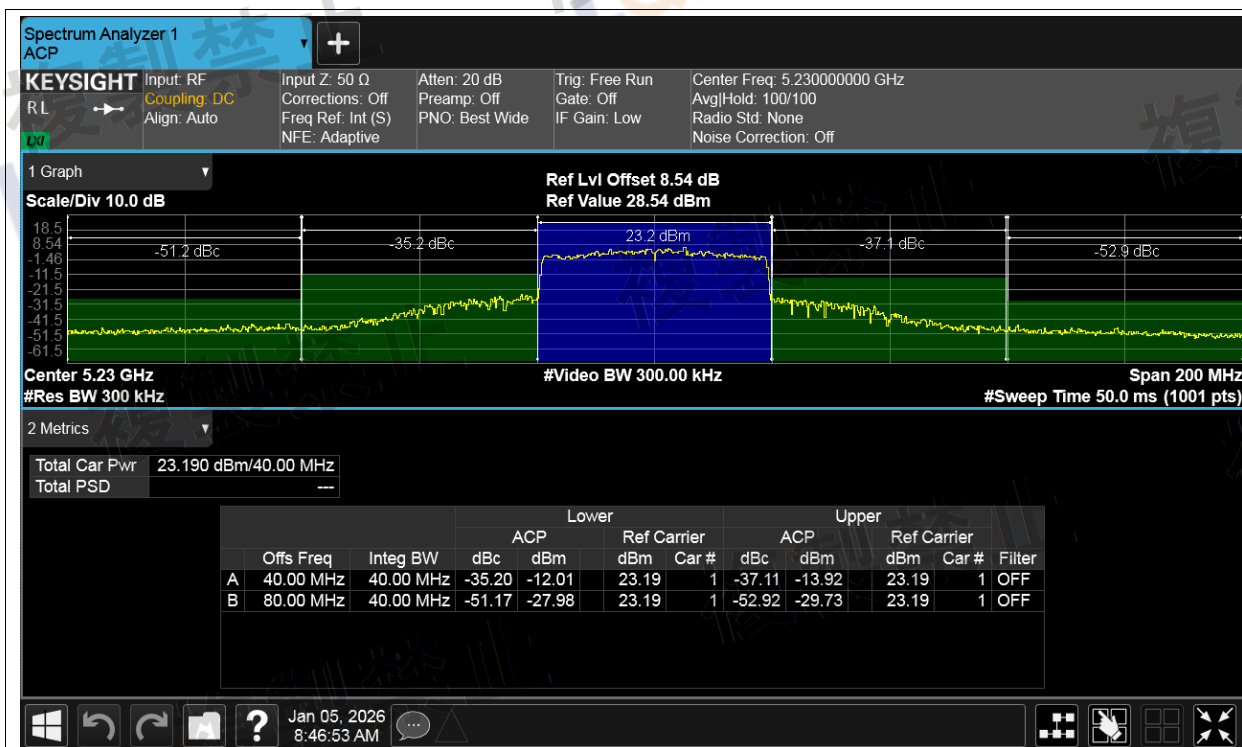


ACEP NVNT ax40 5270MHz Ant1

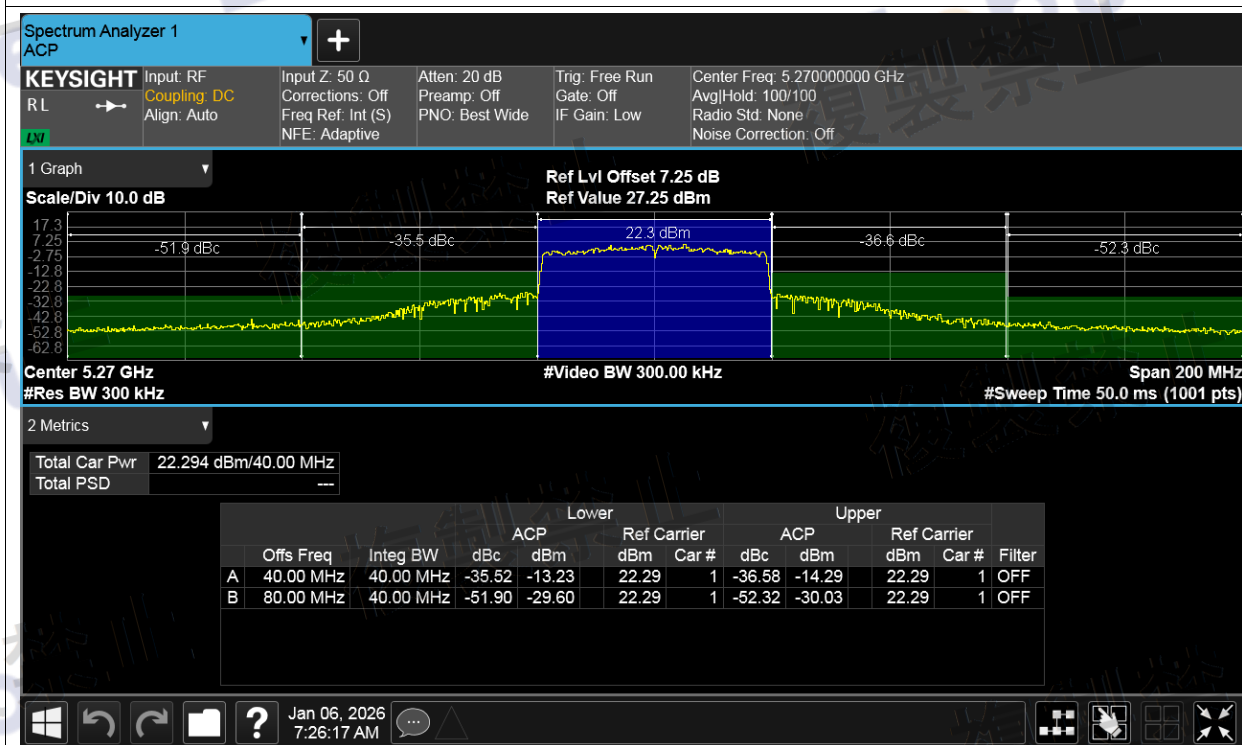


ACEP NVNT ax40 5310MHz Ant1

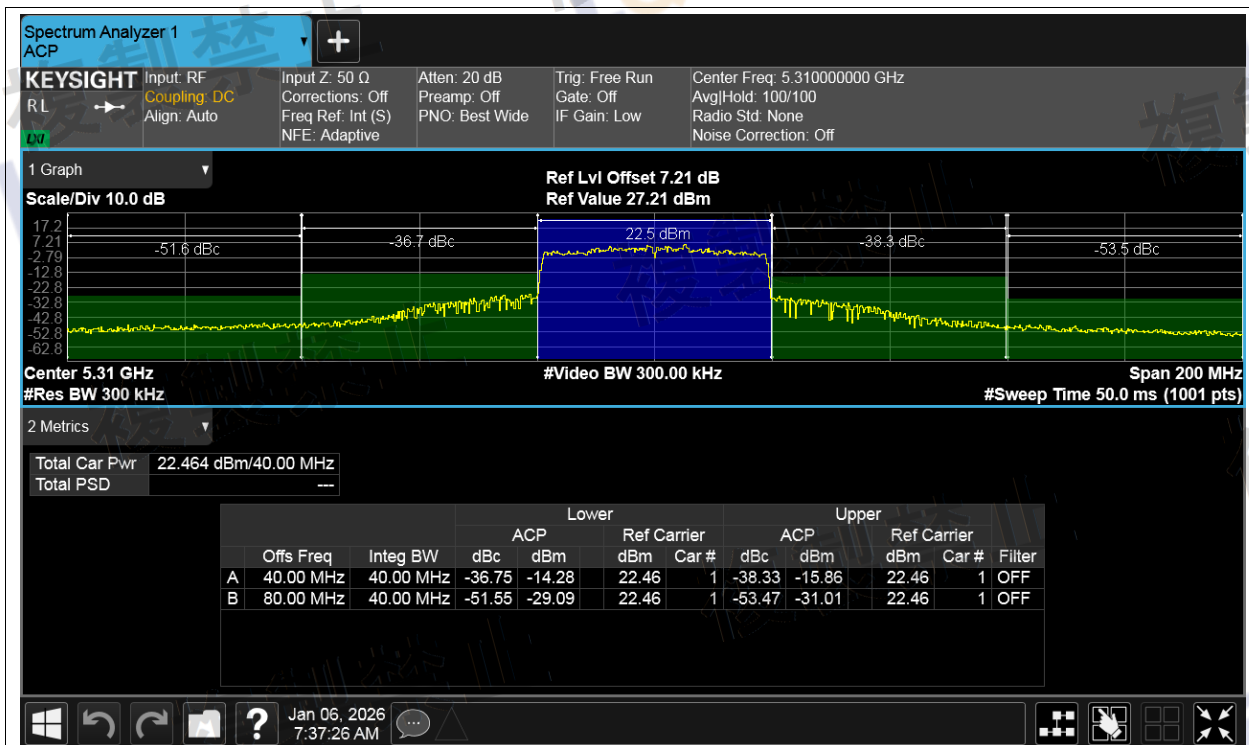

ACEP NVNT ax40 5510MHz Ant1

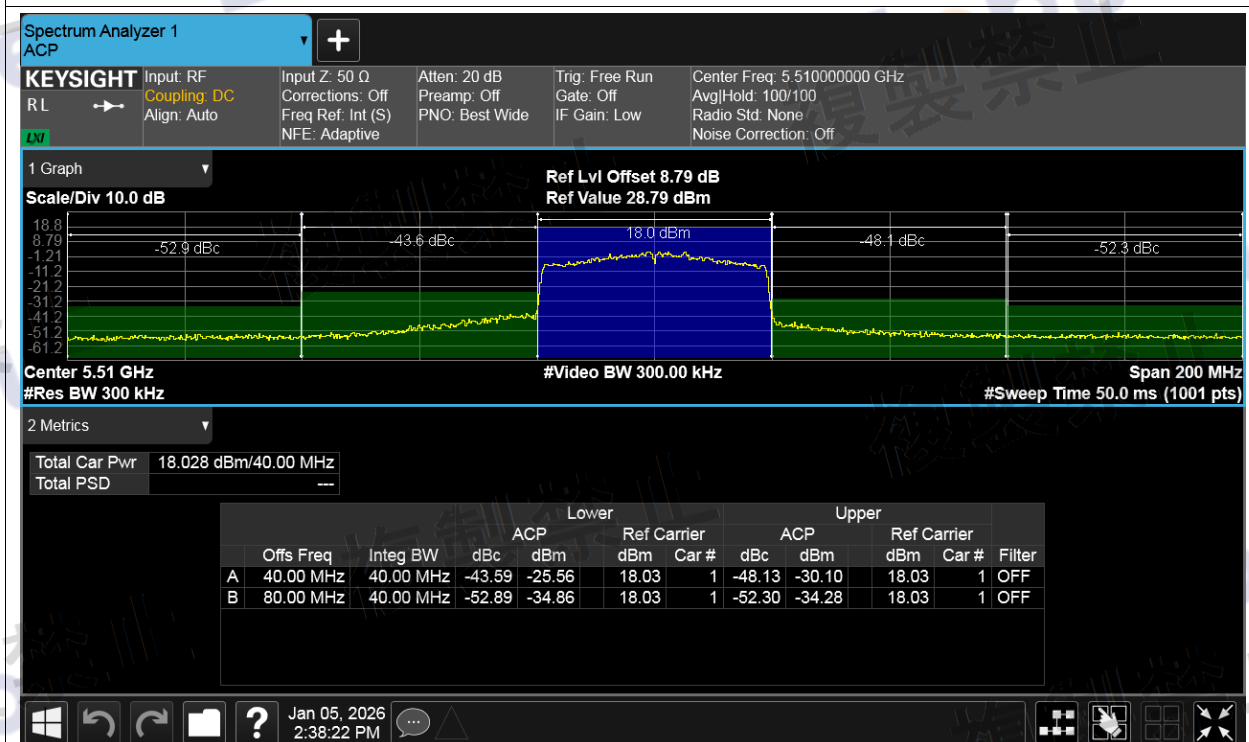


ACEP NVNT ax40 5590MHz Ant1

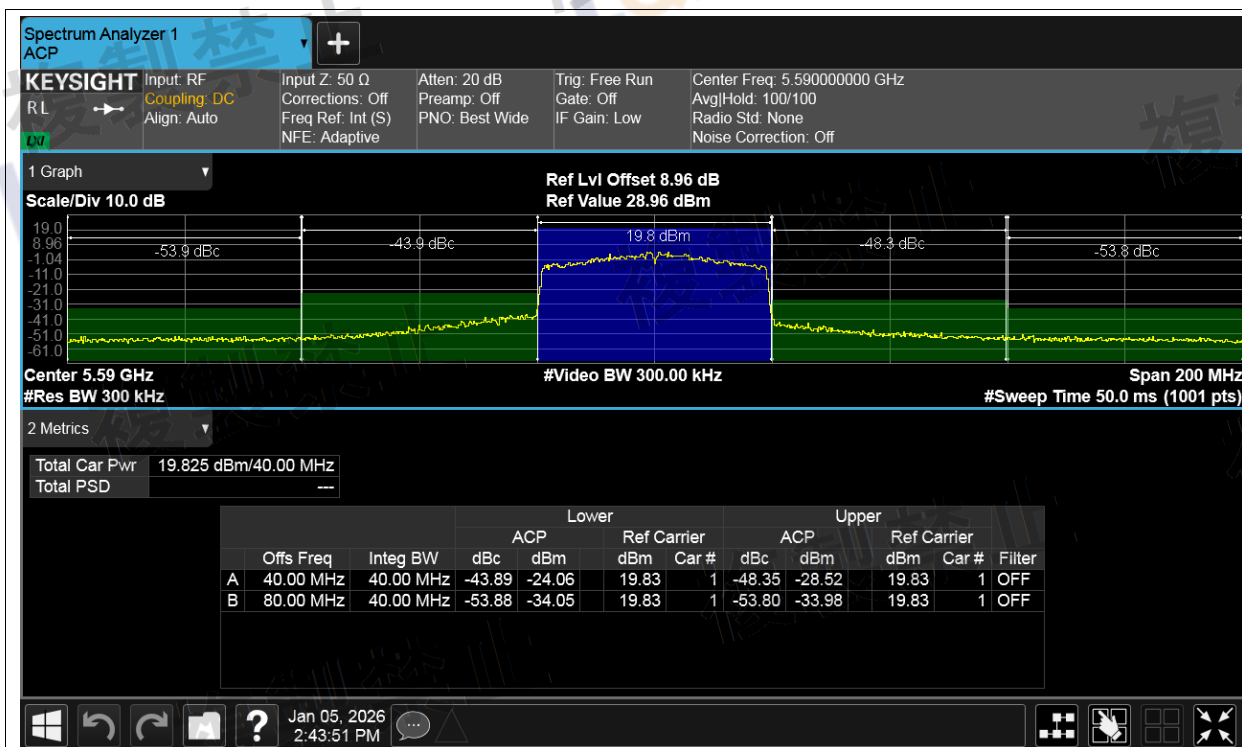


ACEP NVNT ax40 5670MHz Ant1




ACEP NVNT a 5260MHz Ant1

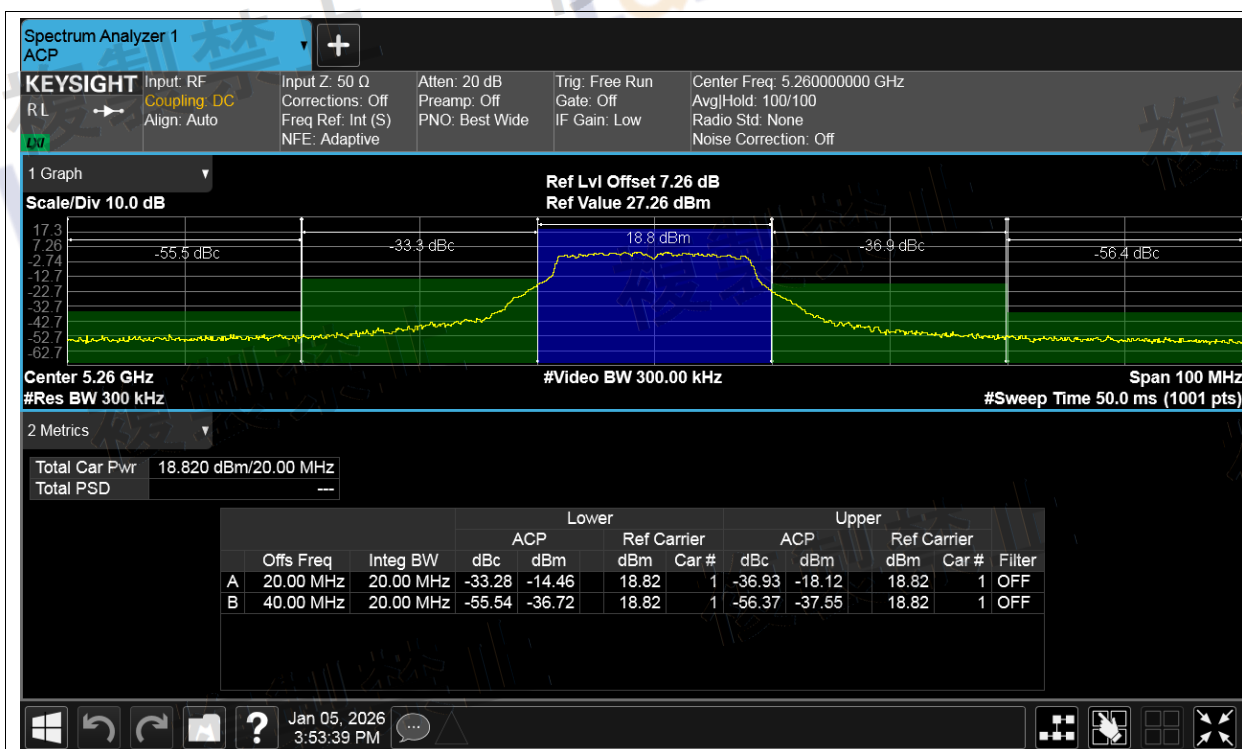


ACEP NVNT a 5300MHz Ant1

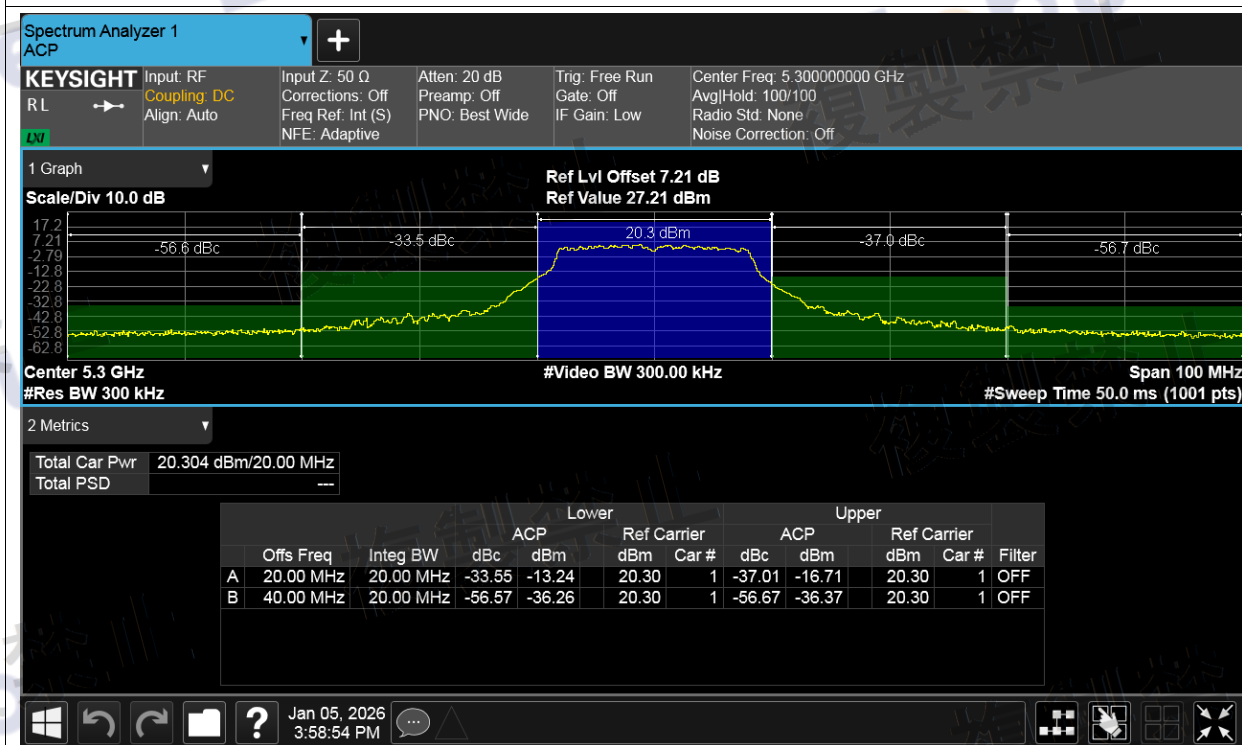


ACEP NVNT a 5320MHz Ant1

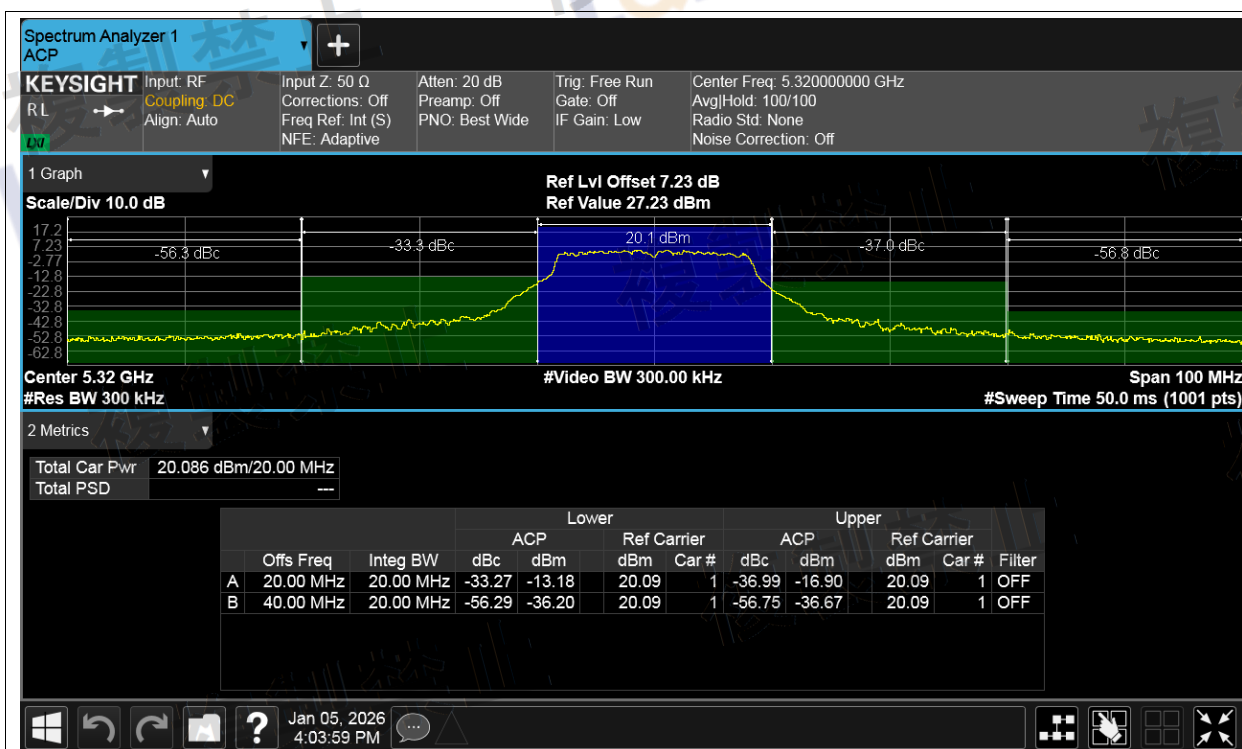


ACEP NVNT a 5500MHz Ant1

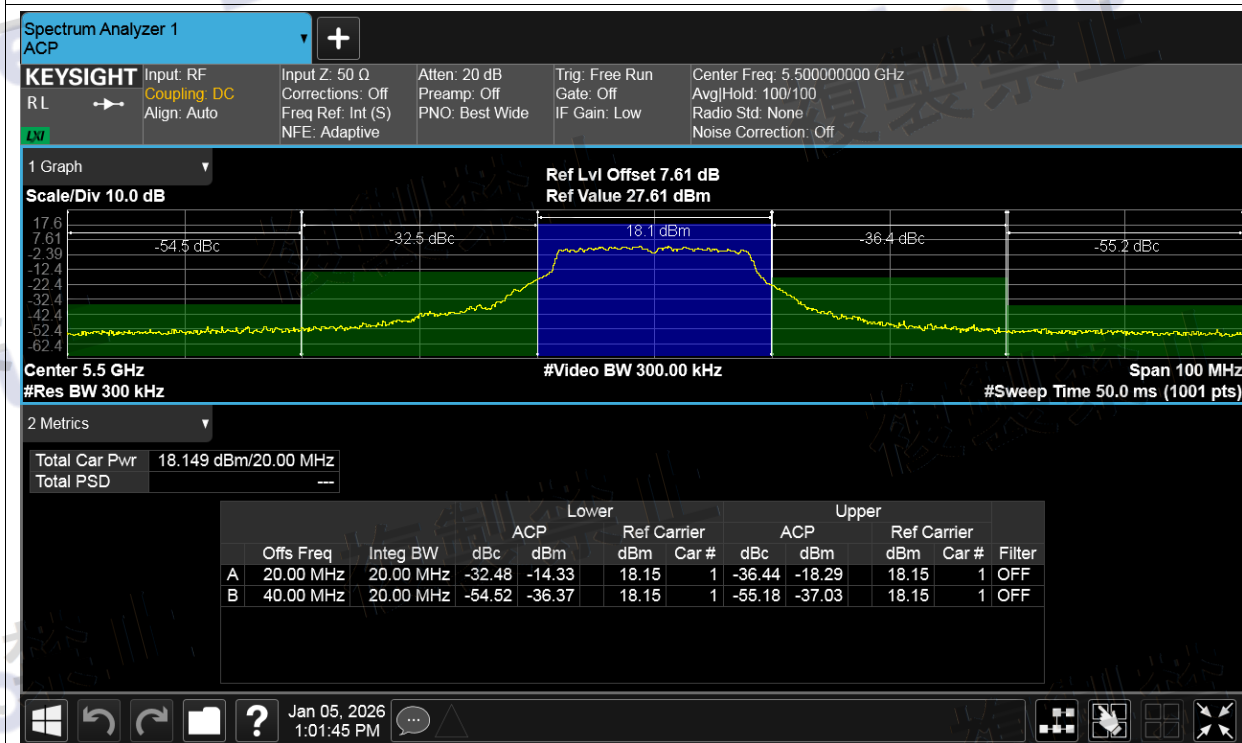


ACEP NVNT a 5580MHz Ant1

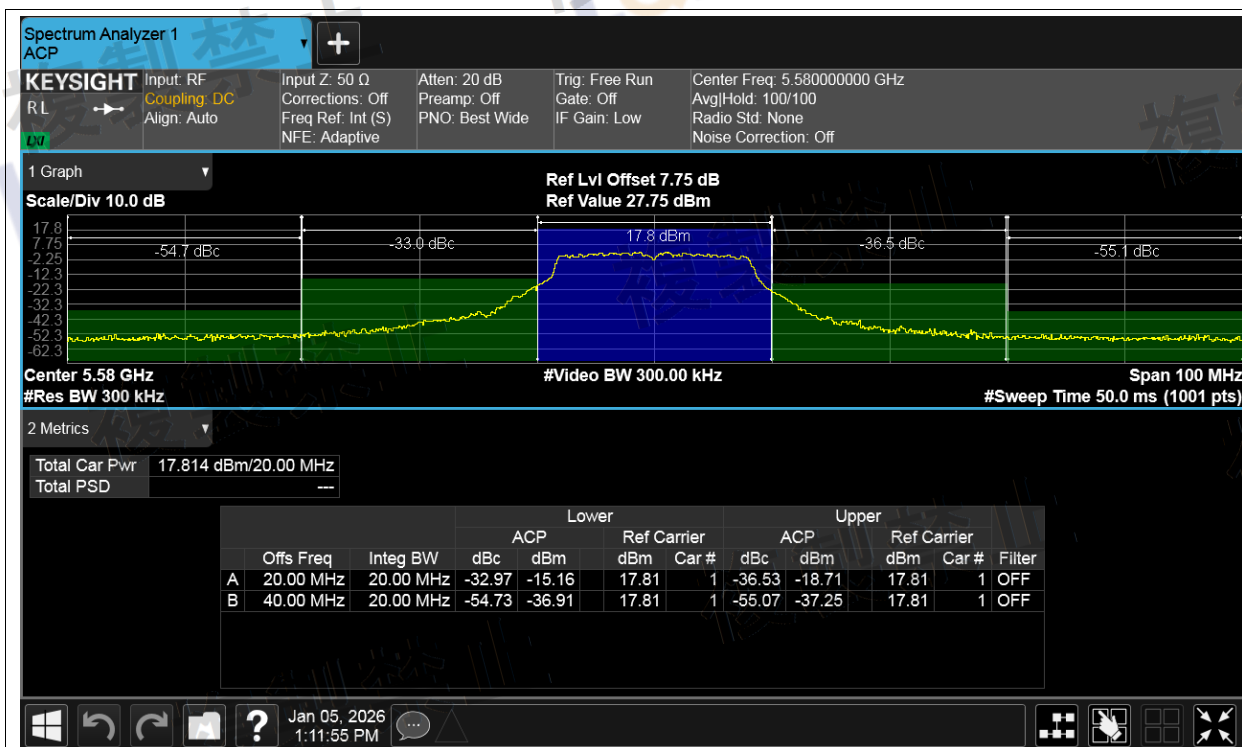


ACEP NVNT a 5700MHz Ant1

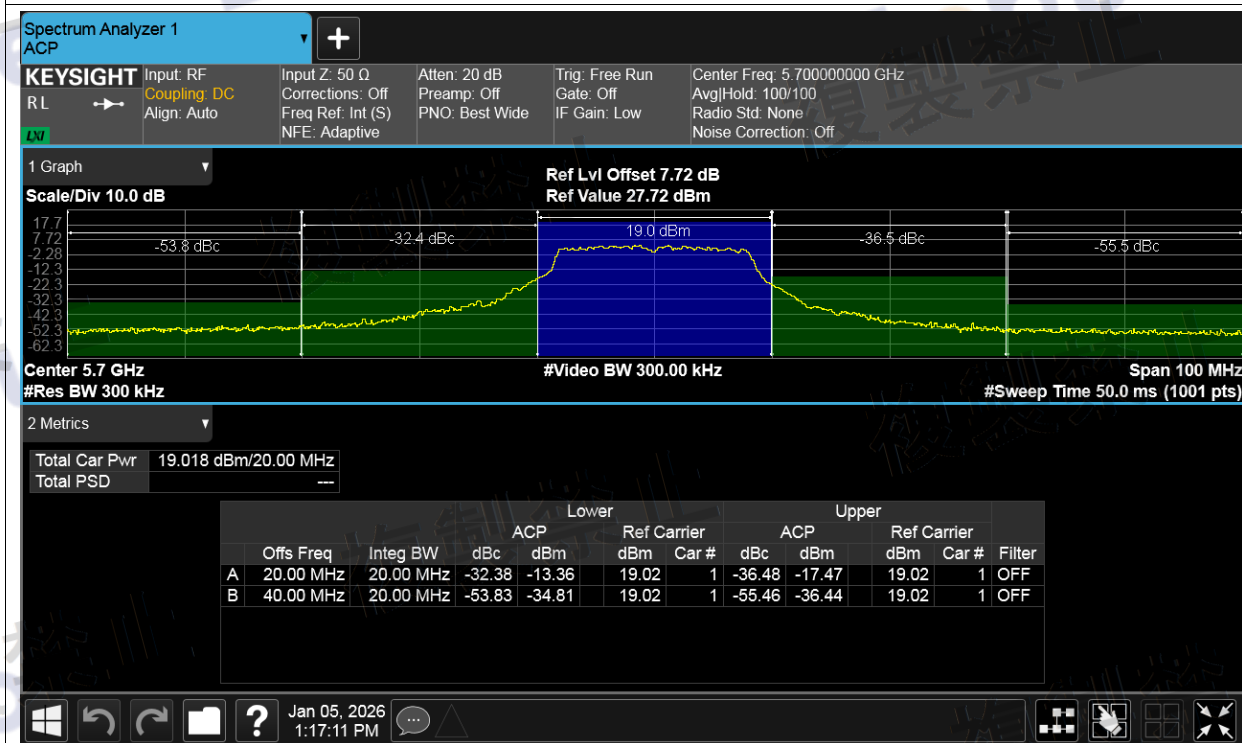


ACEP NVNT n20 5260MHz Ant1

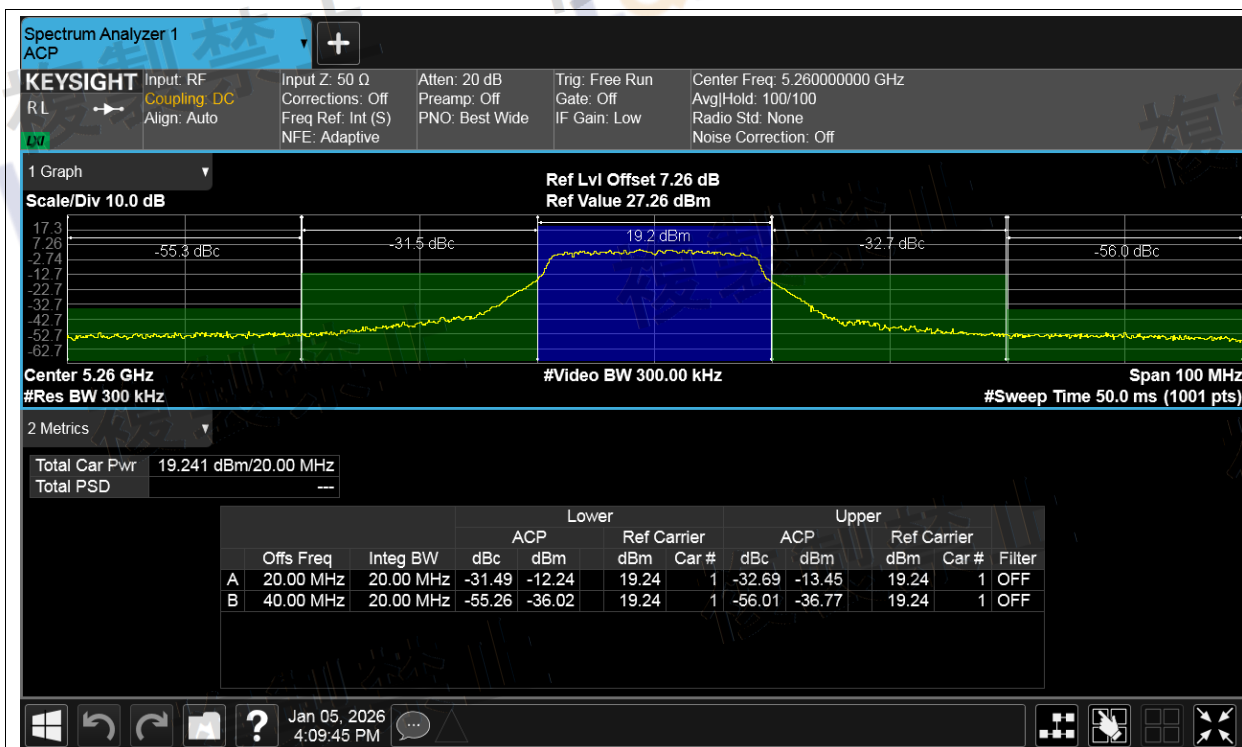


ACEP NVNT n20 5300MHz Ant1

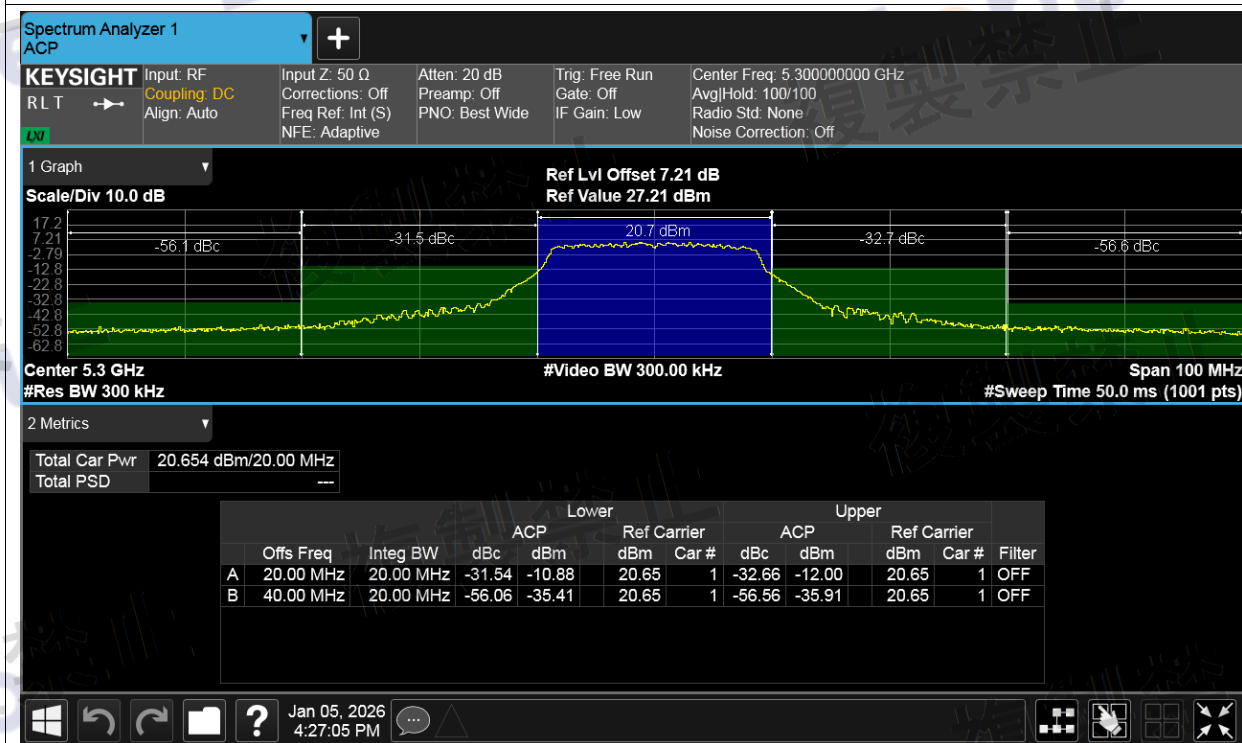


ACEP NVNT n20 5320MHz Ant1

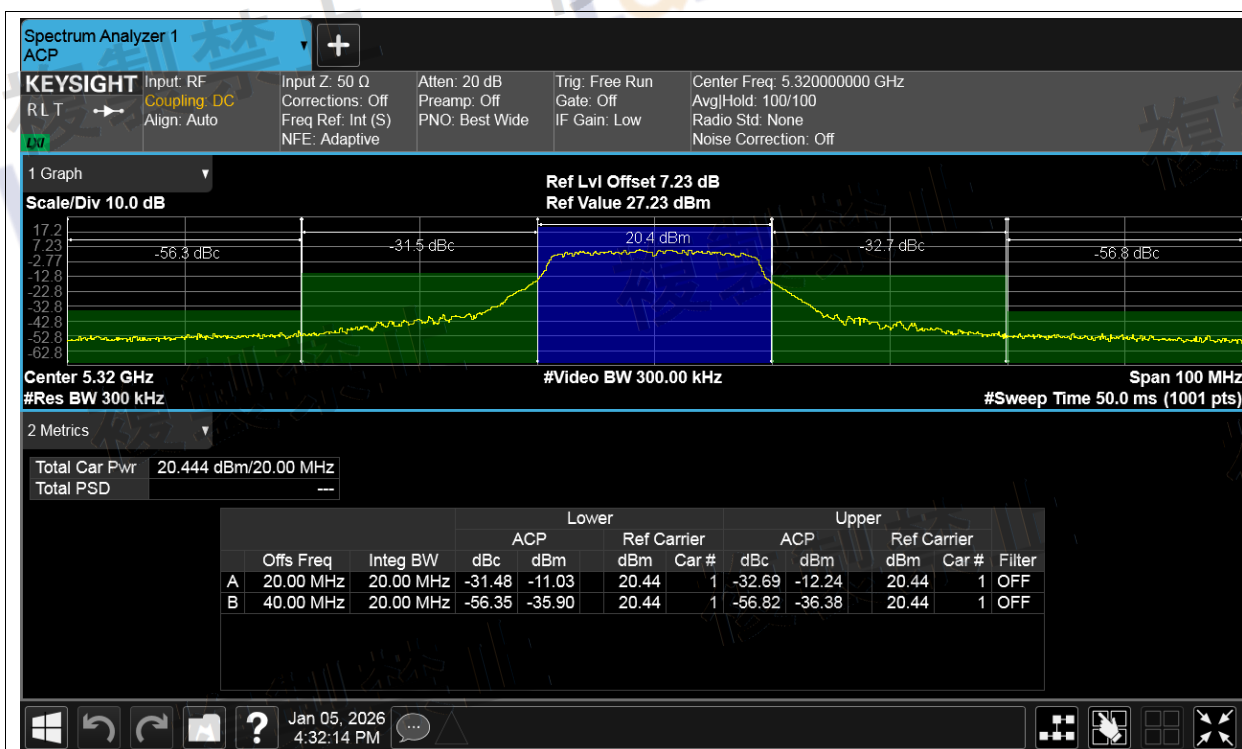

ACEP NVNT n20 5500MHz Ant1

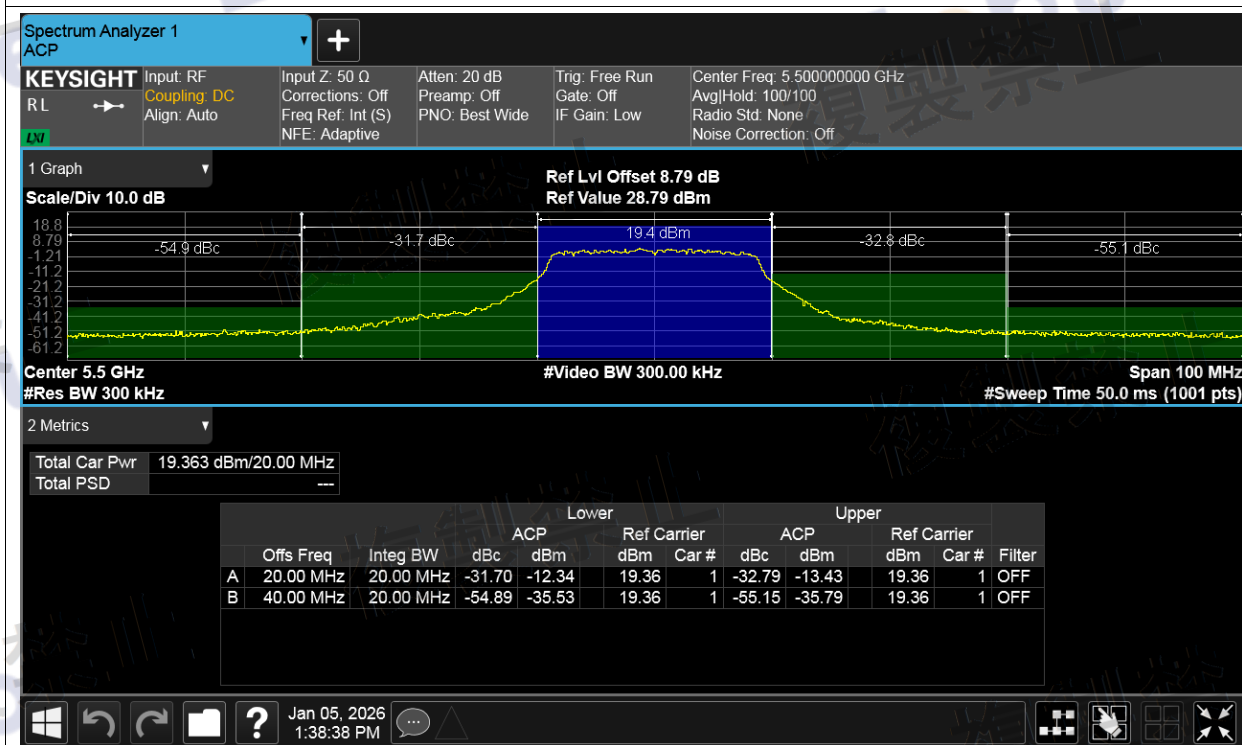

ACEP NVNT n20 5580MHz Ant1

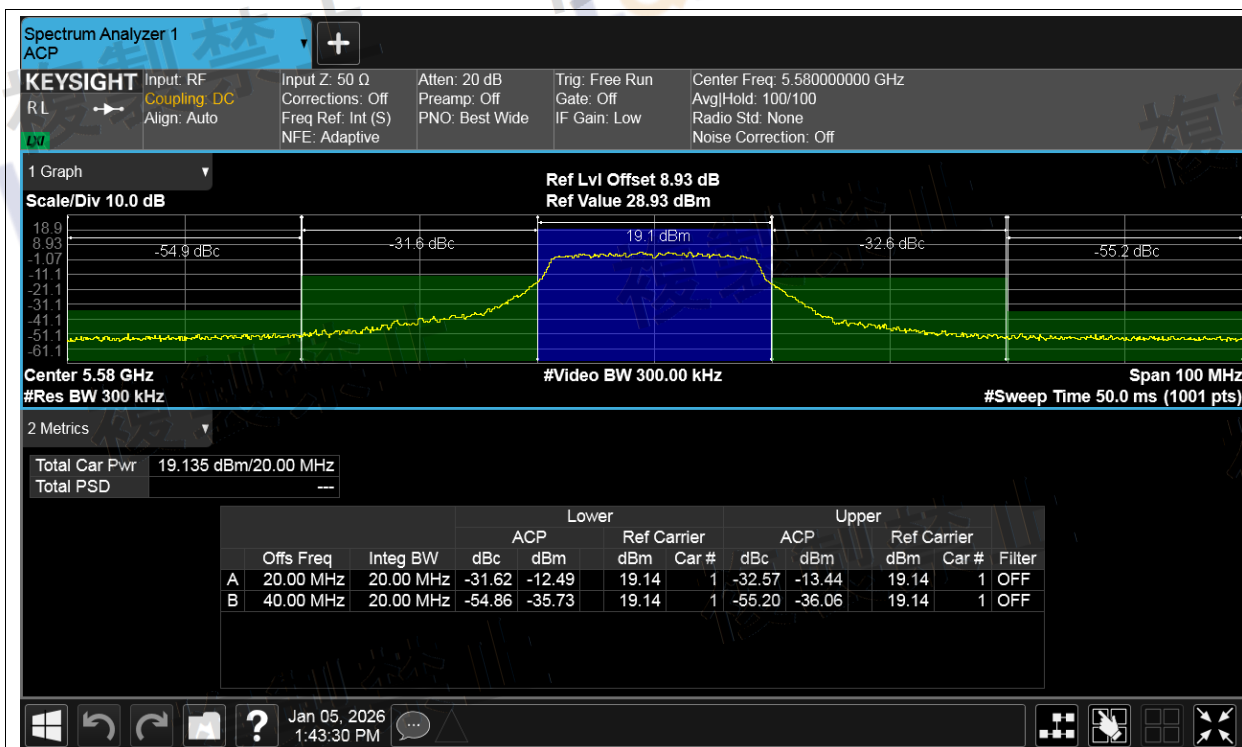

ACEP NVNT n20 5700MHz Ant1

