




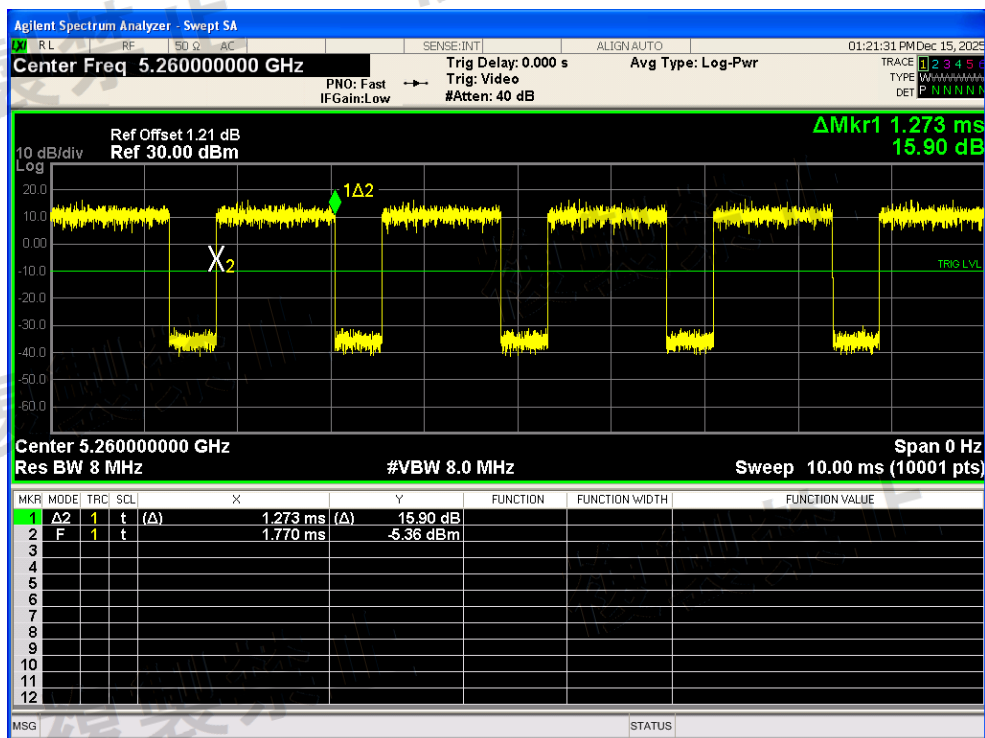


Burst Length NVNT n20 5280MHz Ant1

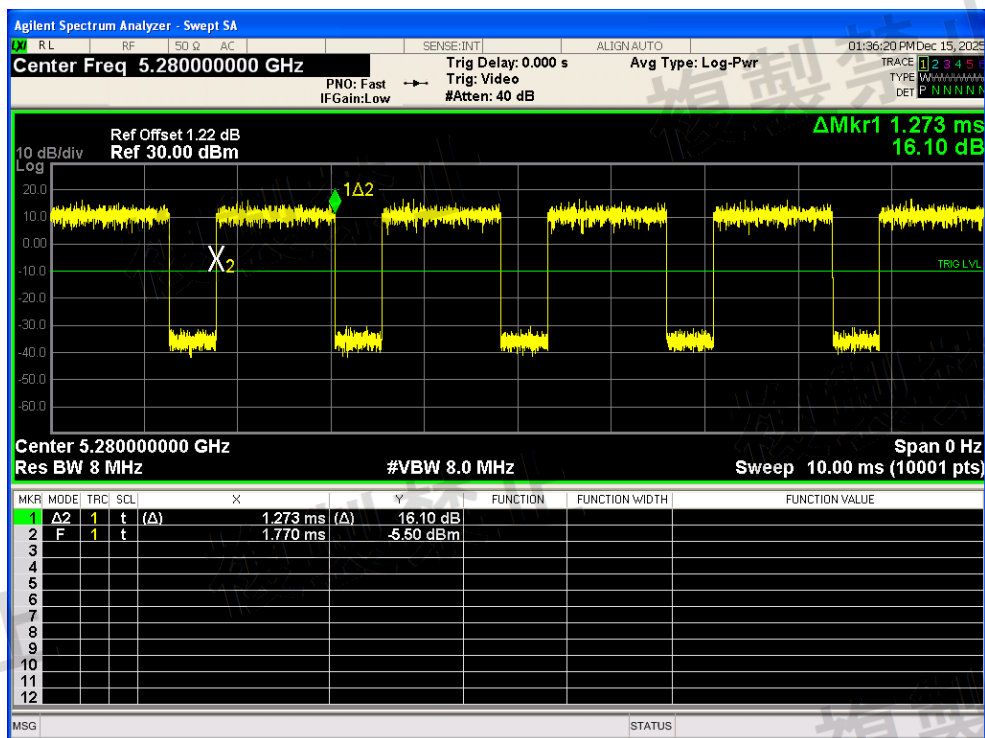


Burst Length NVNT n20 5320MHz Ant1

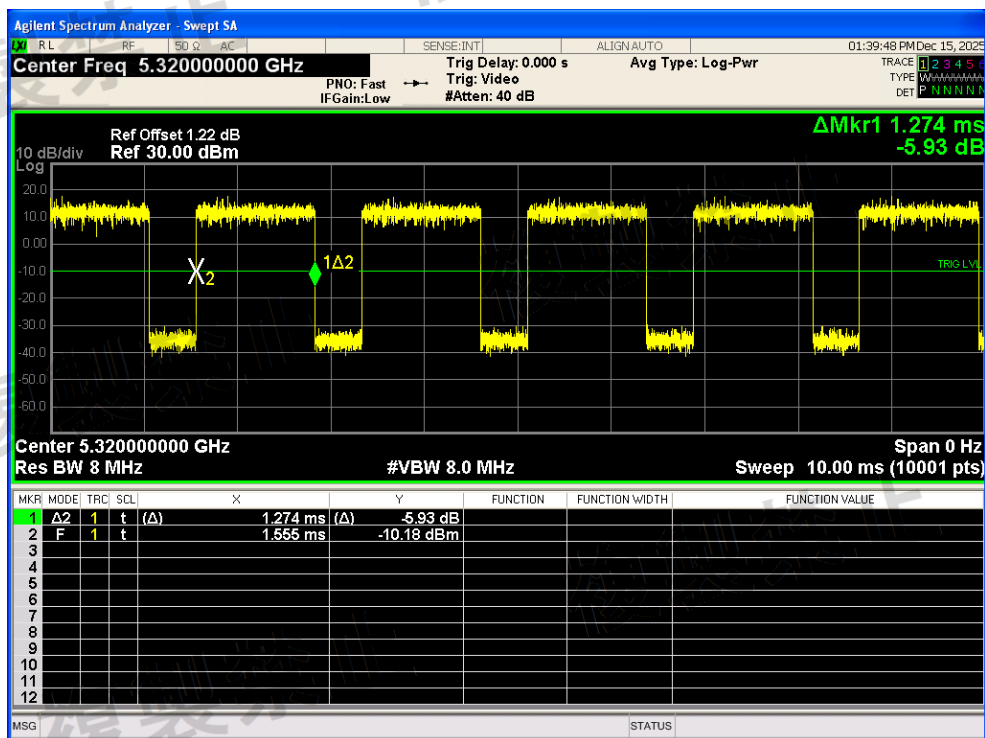


Burst Length NVNT n20 5260MHz Ant2

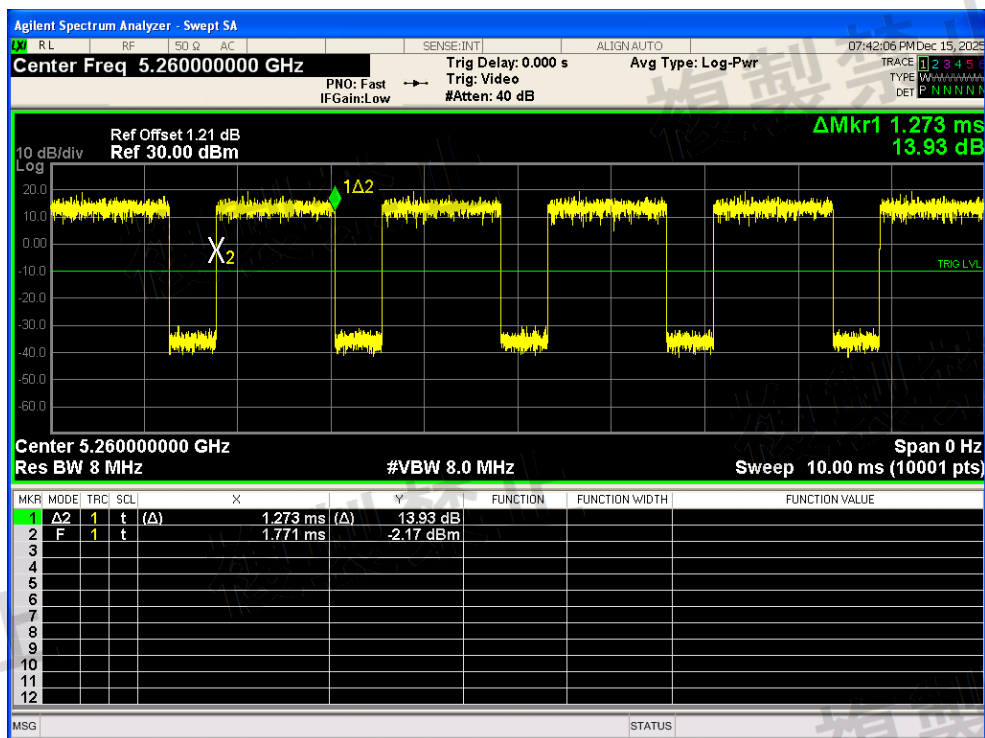


Burst Length NVNT n20 5280MHz Ant2

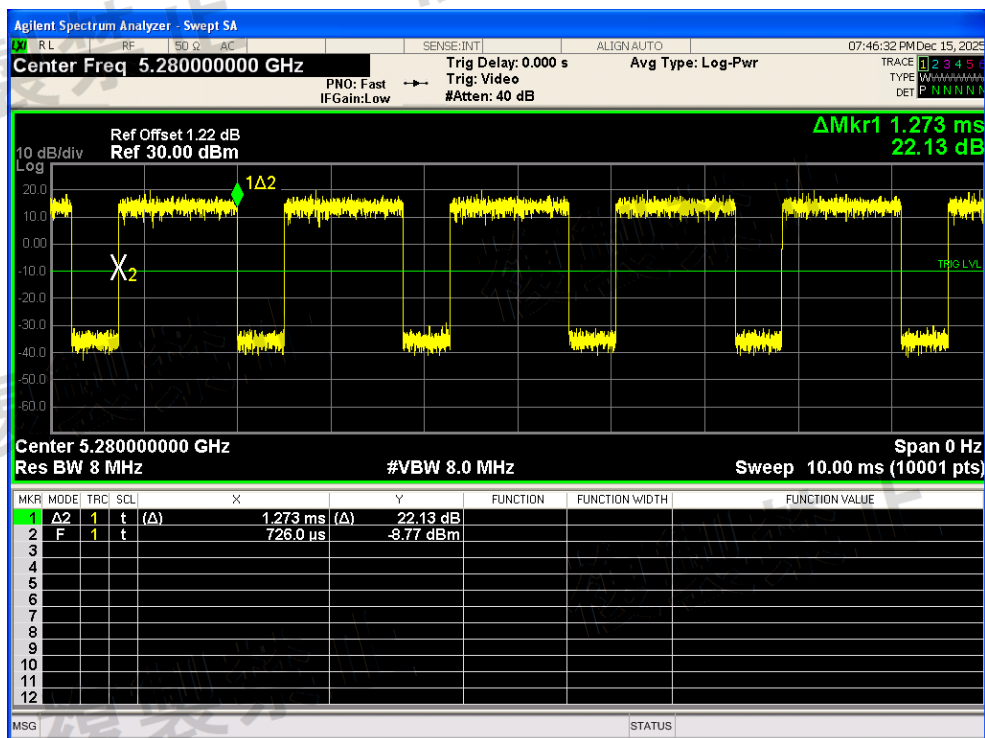


Burst Length NVNT n20 5320MHz Ant2

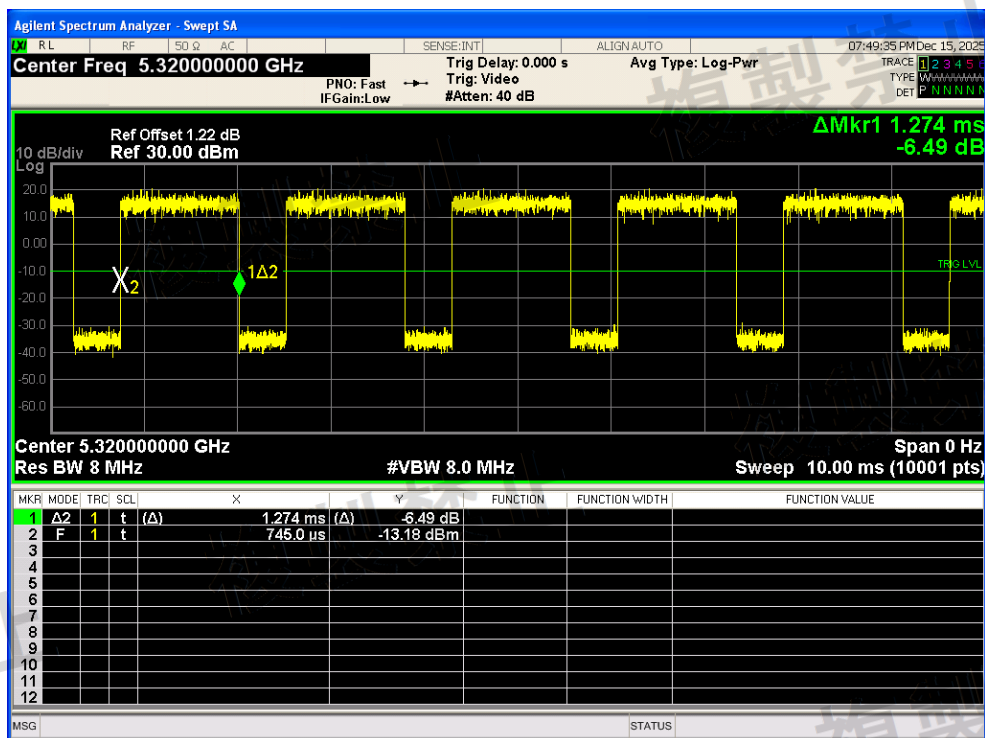


Burst Length NVNT n40 5270MHz Ant1

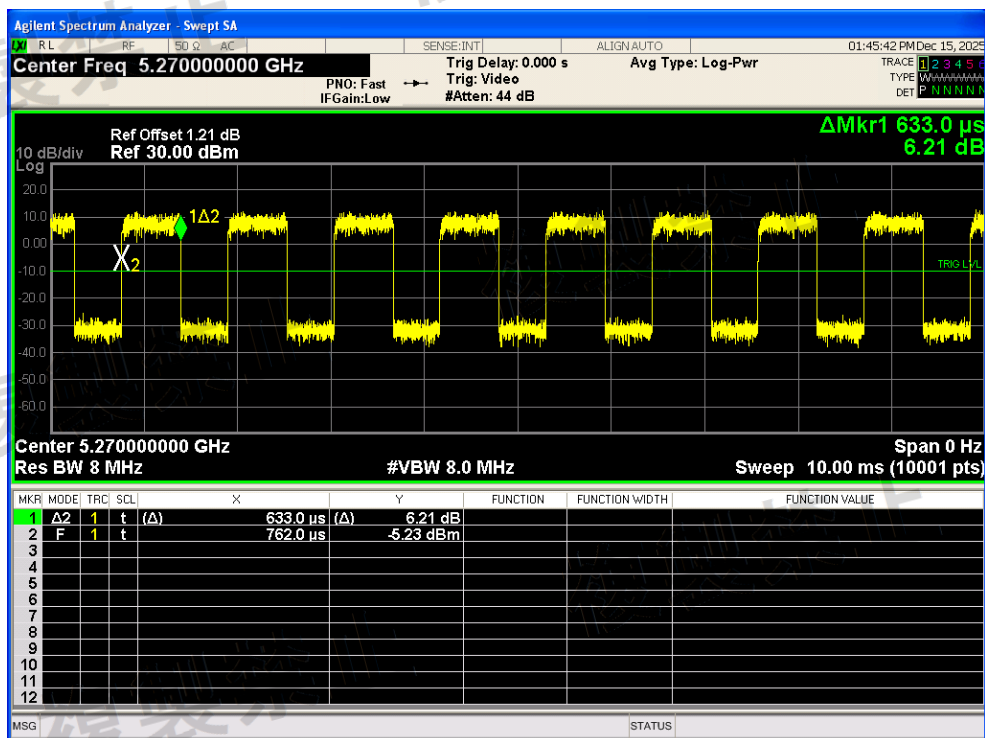


Burst Length NVNT n40 5310MHz Ant1

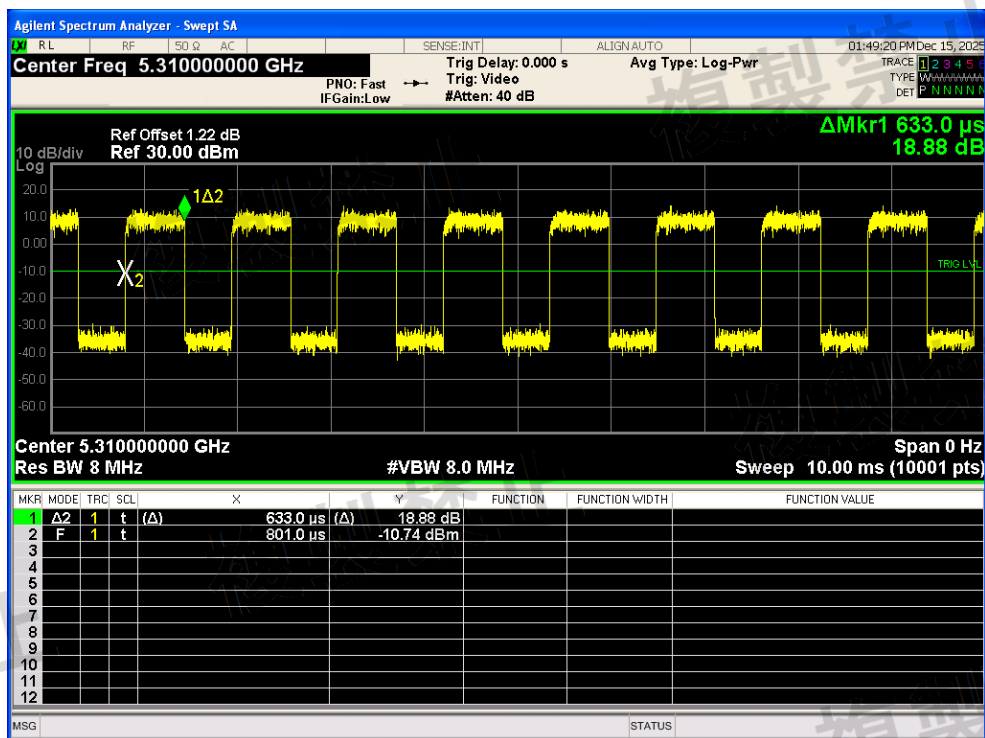

Burst Length NVNT n40 5270MHz Ant2

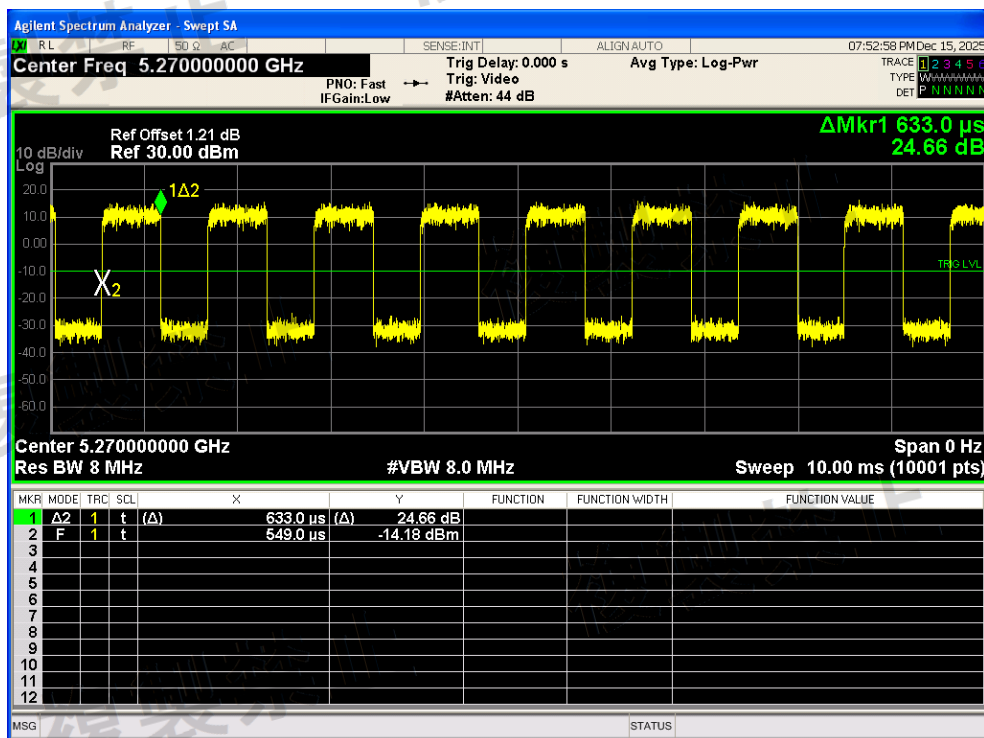

Burst Length NVNT n40 5310MHz Ant2

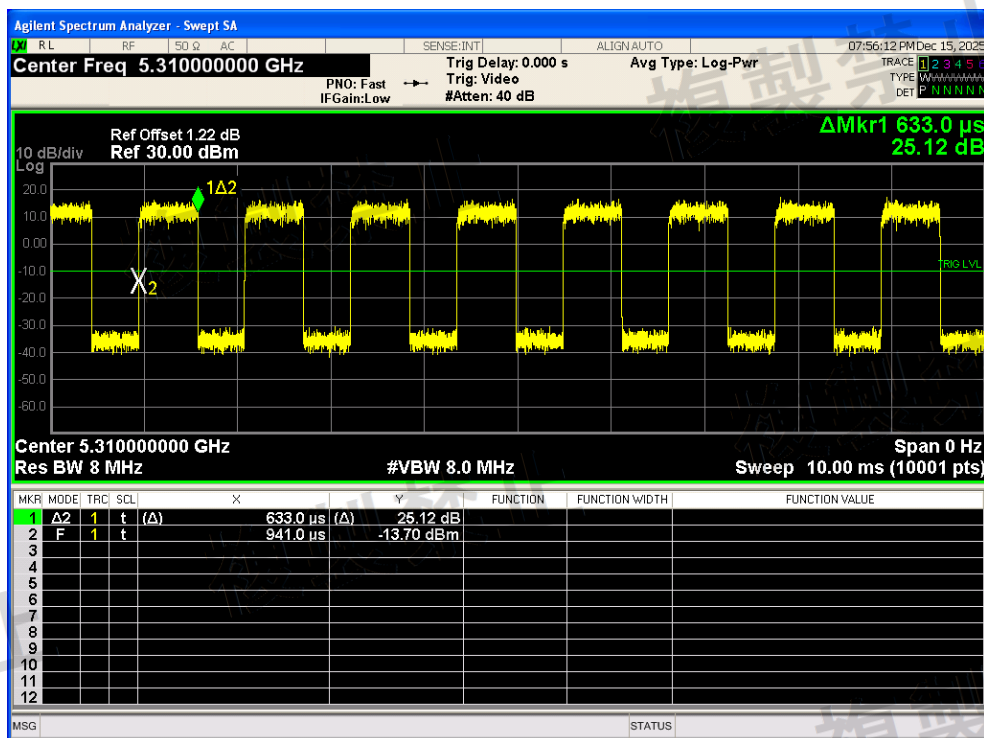


Rx Spurious Emission

Condition	Mode	Frequency (MHz)	Antenna	Range (MHz)	Emission Frequency (MHz)	Max Value (dBm)	Max Value (nW)	Limit (nW)	Verdict
NVNT	a	5260	Ant1	30-1000	737.4	-86.25	0.0024	4	Pass
NVNT	a	5260	Ant1	1000-26000	1746.88	-64.31	0.3707	20	Pass
NVNT	a	5280	Ant1	30-1000	761.06	-85.63	0.0027	4	Pass
NVNT	a	5280	Ant1	1000-26000	25955.63	-66.69	0.2143	20	Pass
NVNT	a	5320	Ant1	30-1000	705.12	-84.57	0.0035	4	Pass
NVNT	a	5320	Ant1	1000-26000	25970.63	-65.78	0.2642	20	Pass
NVNT	a	5260	Ant2	30-1000	851.86	-87.18	0.0019	4	Pass
NVNT	a	5260	Ant2	1000-26000	1773.13	-62.93	0.5093	20	Pass
NVNT	a	5280	Ant2	30-1000	751.41	-87.08	0.002	4	Pass
NVNT	a	5280	Ant2	1000-26000	1766.25	-57.65	1.7179	20	Pass
NVNT	a	5320	Ant2	30-1000	231.06	-86.76	0.0021	4	Pass
NVNT	a	5320	Ant2	1000-26000	1766.25	-64.59	0.3475	20	Pass
NVNT	ac20	5260	Ant1	30-1000	213.04	-86.69	0.0021	4	Pass
NVNT	ac20	5260	Ant1	1000-26000	25987.5	-65.55	0.2786	20	Pass
NVNT	ac20	5280	Ant1	30-1000	887.31	-85.84	0.0026	4	Pass
NVNT	ac20	5280	Ant1	1000-26000	25940	-65.51	0.2812	20	Pass
NVNT	ac20	5320	Ant1	30-1000	905.28	-75.48	0.0283	4	Pass
NVNT	ac20	5320	Ant1	1000-26000	25912.5	-66.26	0.2366	20	Pass
NVNT	ac20	5260	Ant2	30-1000	247.84	-87	0.002	4	Pass
NVNT	ac20	5260	Ant2	1000-26000	1765.63	-57.18	1.9143	20	Pass
NVNT	ac20	5280	Ant2	30-1000	958.85	-87.82	0.0017	4	Pass
NVNT	ac20	5280	Ant2	1000-26000	3553.75	-67.16	0.1923	20	Pass
NVNT	ac20	5320	Ant2	30-1000	235.45	-87.08	0.002	4	Pass
NVNT	ac20	5320	Ant2	1000-26000	1771.88	-56.69	2.1429	20	Pass
NVNT	ac40	5270	Ant1	30-1000	879.91	-85.45	0.0029	4	Pass


NVNT	ac40	5270	Ant1	1000-26000	25982.5	-64.7	0.3388	20	Pass
NVNT	ac40	5310	Ant1	30-1000	913.48	-84.19	0.0038	4	Pass
NVNT	ac40	5310	Ant1	1000-26000	25740.63	-65.13	0.3069	20	Pass
NVNT	ac40	5270	Ant2	30-1000	833.21	-87.24	0.0019	4	Pass
NVNT	ac40	5270	Ant2	1000-26000	1765.63	-66.54	0.2218	20	Pass
NVNT	ac40	5310	Ant2	30-1000	859.86	-87.84	0.0016	4	Pass
NVNT	ac40	5310	Ant2	1000-26000	1766.88	-61.58	0.695	20	Pass
NVNT	ac80	5290	Ant1	30-1000	773.48	-86.3	0.0023	4	Pass
NVNT	ac80	5290	Ant1	1000-26000	25944.38	-66.11	0.2449	20	Pass
NVNT	ac80	5290	Ant2	30-1000	804.42	-85.48	0.0028	4	Pass
NVNT	ac80	5290	Ant2	1000-26000	25935	-65.42	0.2871	20	Pass
NVNT	n20	5260	Ant1	30-1000	314.36	-86.27	0.0024	4	Pass
NVNT	n20	5260	Ant1	1000-26000	25641.88	-66.29	0.235	20	Pass
NVNT	n20	5280	Ant1	30-1000	705.29	-83.59	0.0044	4	Pass
NVNT	n20	5280	Ant1	1000-26000	25482.5	-66.26	0.2366	20	Pass
NVNT	n20	5320	Ant1	30-1000	722.24	-85.44	0.0029	4	Pass
NVNT	n20	5320	Ant1	1000-26000	25271.88	-66.35	0.2317	20	Pass
NVNT	n20	5260	Ant2	30-1000	249.66	-87.35	0.0018	4	Pass
NVNT	n20	5260	Ant2	1000-26000	1781.88	-53.58	4.3853	20	Pass
NVNT	n20	5280	Ant2	30-1000	762.18	-86.85	0.0021	4	Pass
NVNT	n20	5280	Ant2	1000-26000	1775.63	-54.54	3.5156	20	Pass
NVNT	n20	5320	Ant2	30-1000	975.43	-87.57	0.0017	4	Pass
NVNT	n20	5320	Ant2	1000-26000	1773.75	-58.1	1.5488	20	Pass
NVNT	n40	5270	Ant1	30-1000	854.6	-86.28	0.0024	4	Pass
NVNT	n40	5270	Ant1	1000-26000	25801.25	-65.42	0.2871	20	Pass
NVNT	n40	5310	Ant1	30-1000	722.12	-83.1	0.0049	4	Pass
NVNT	n40	5310	Ant1	1000-26000	25627.5	-66.42	0.228	20	Pass
NVNT	n40	5270	Ant2	30-1000	804.84	-86.68	0.0021	4	Pass
NVNT	n40	5270	Ant2	1000-26000	1768.75	-65.15	0.3055	20	Pass

NVNT	n40	5310	Ant2	30-1000	940.13	-87.01	0.002	4	Pass
NVNT	n40	5310	Ant2	1000-26000	1776.88	-62.25	0.5957	20	Pass


Rx. Spurious NVNT a 5260MHz Ant1 @ 30MHz-1000MHz

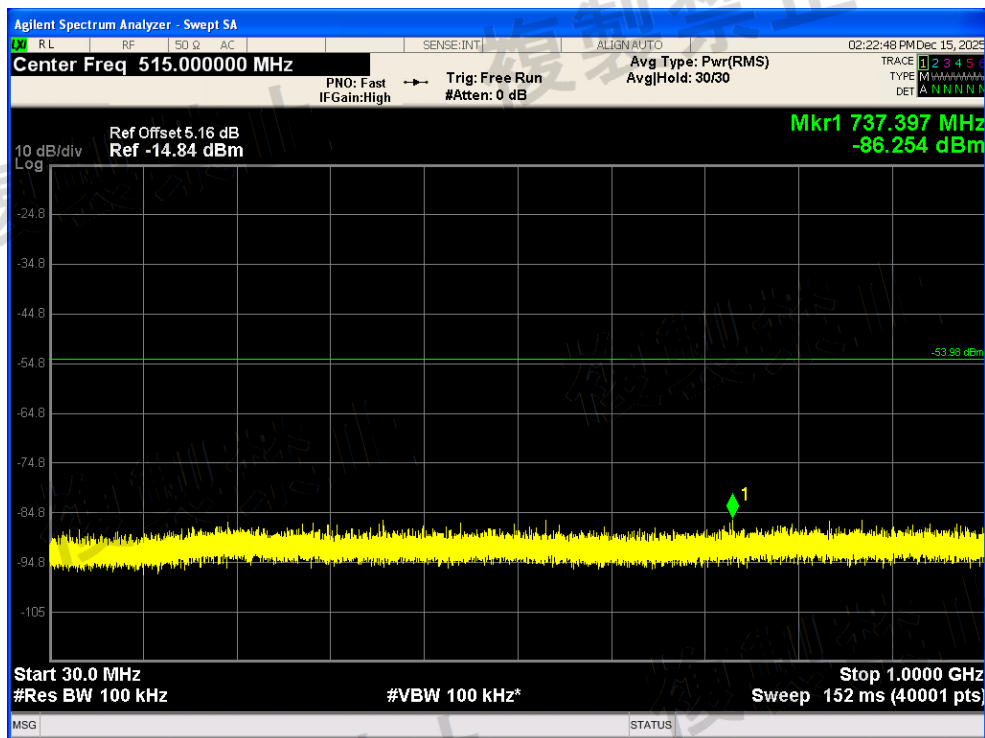


Rx. Spurious NVNT a 5260MHz Ant1 @ 1000MHz-26000MHz

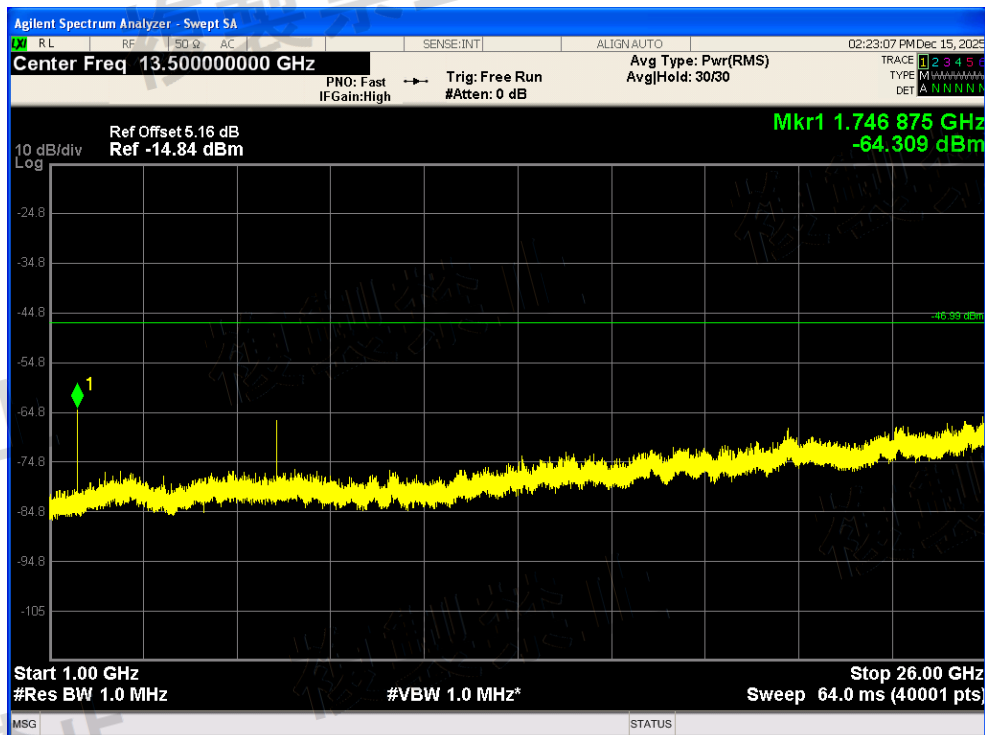


Rx. Spurious NVNT a 5280MHz Ant1 @ 30MHz-1000MHz

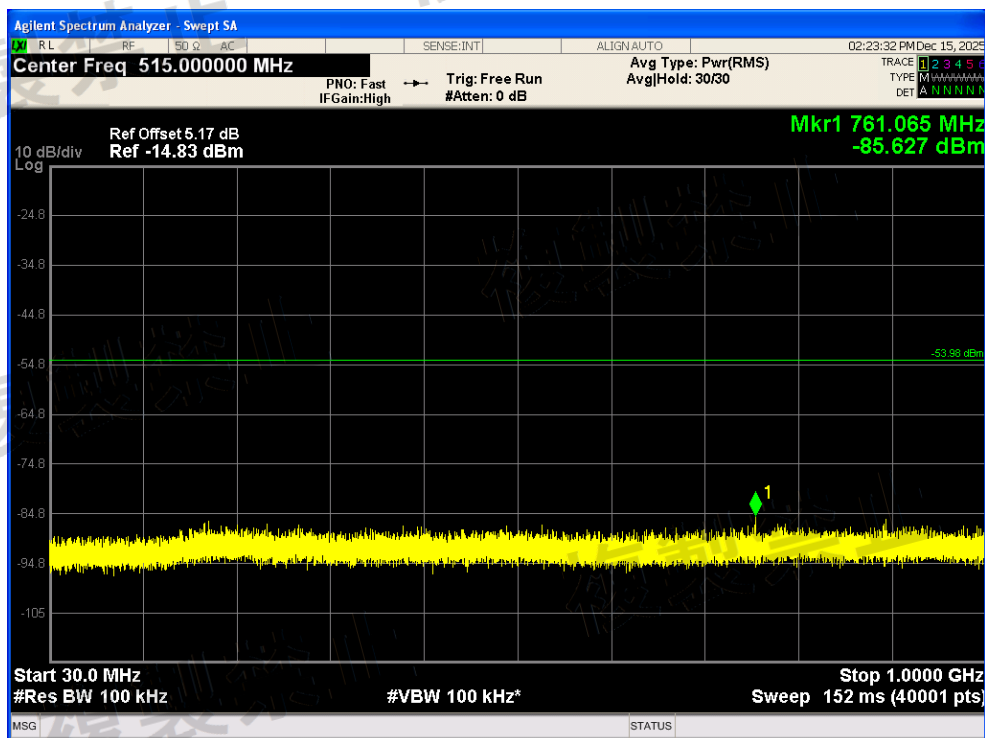


Rx. Spurious NVNT a 5280MHz Ant1 @ 1000MHz-26000MHz

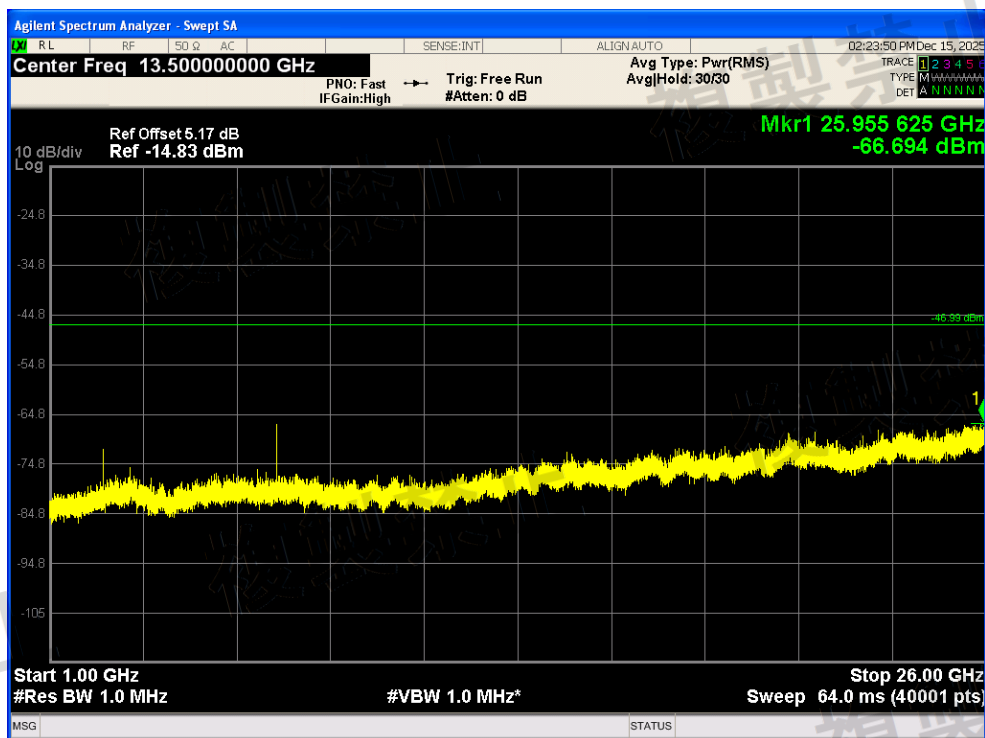


Rx. Spurious NVNT a 5320MHz Ant1 @ 30MHz-1000MHz

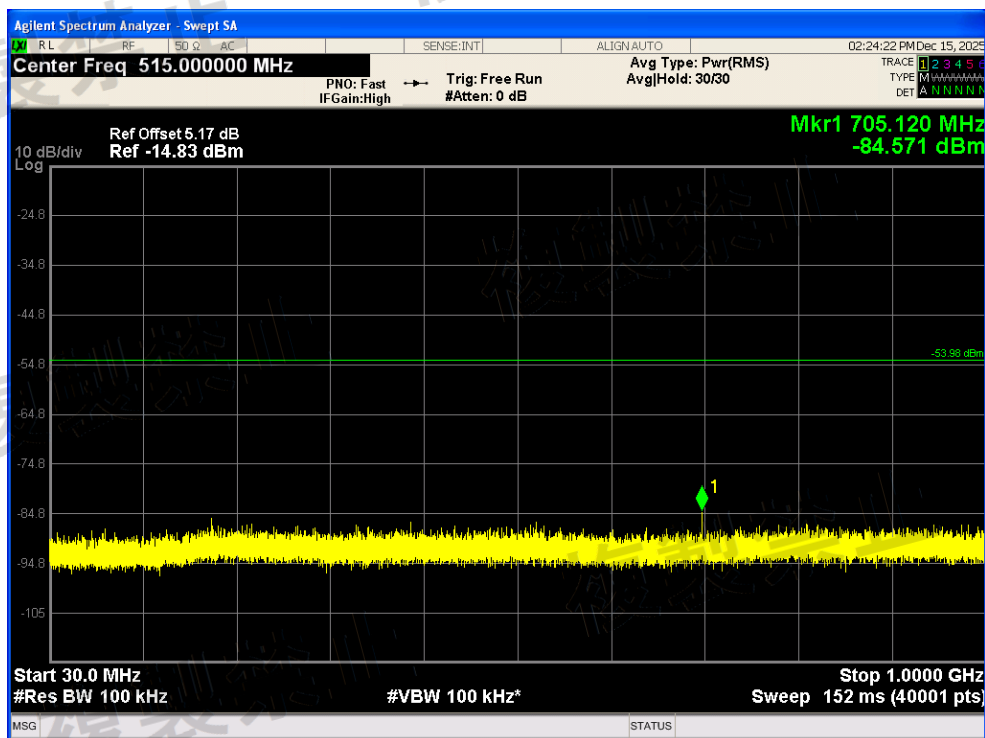


Rx. Spurious NVNT a 5320MHz Ant1 @ 1000MHz-26000MHz

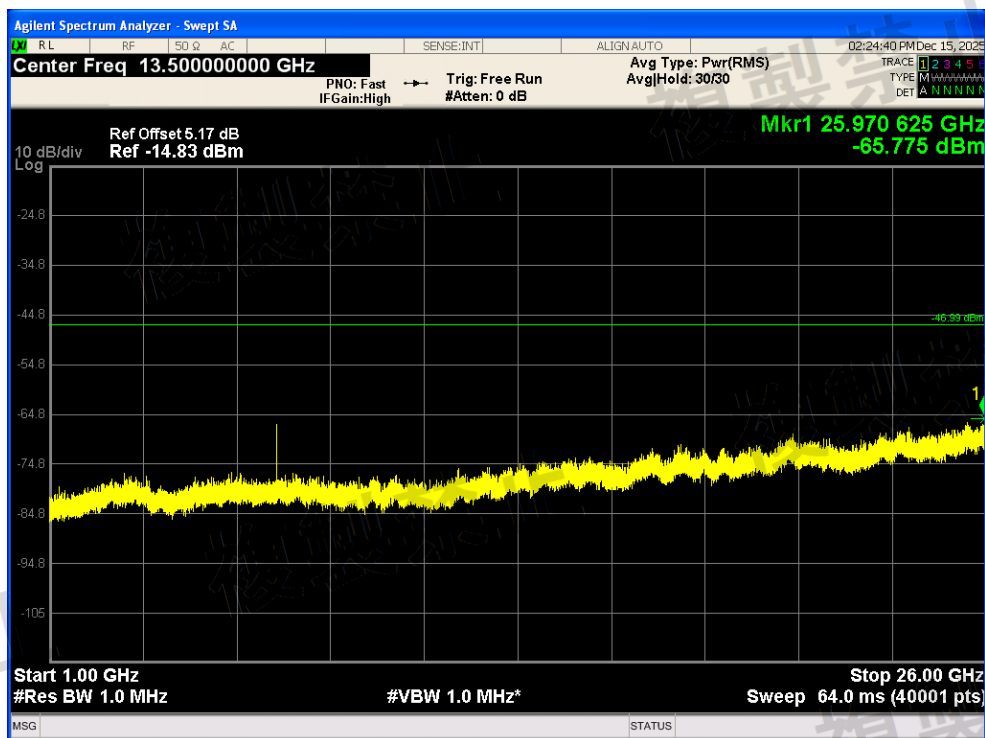


Rx. Spurious NVNT a 5260MHz Ant2 @ 30MHz-1000MHz

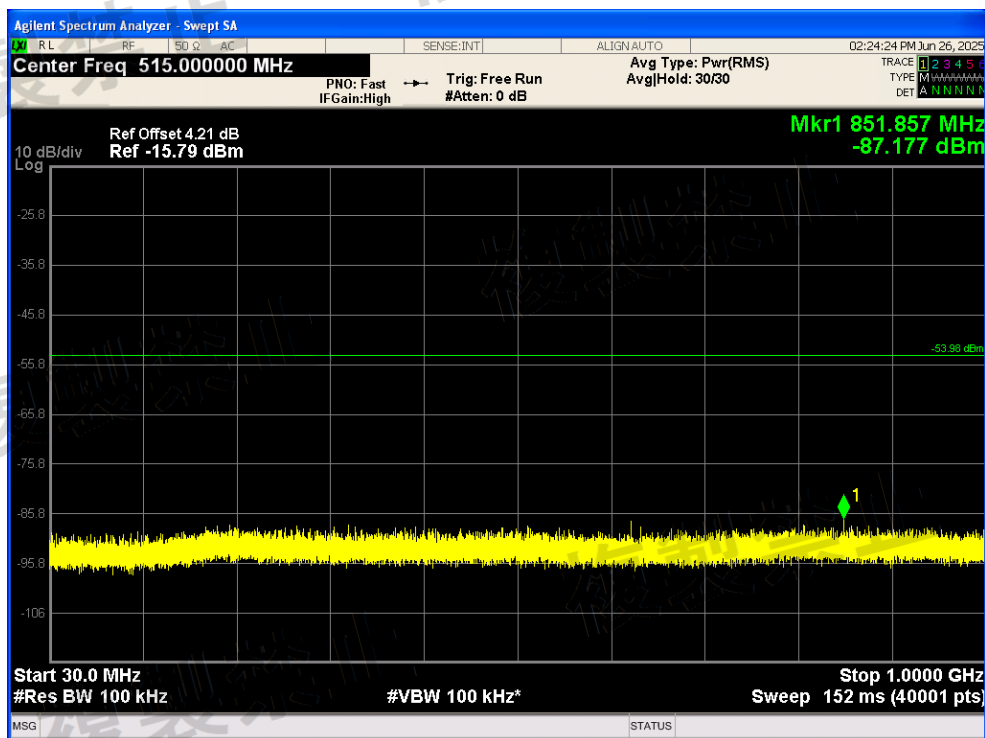


Rx. Spurious NVNT a 5260MHz Ant2 @ 1000MHz-26000MHz

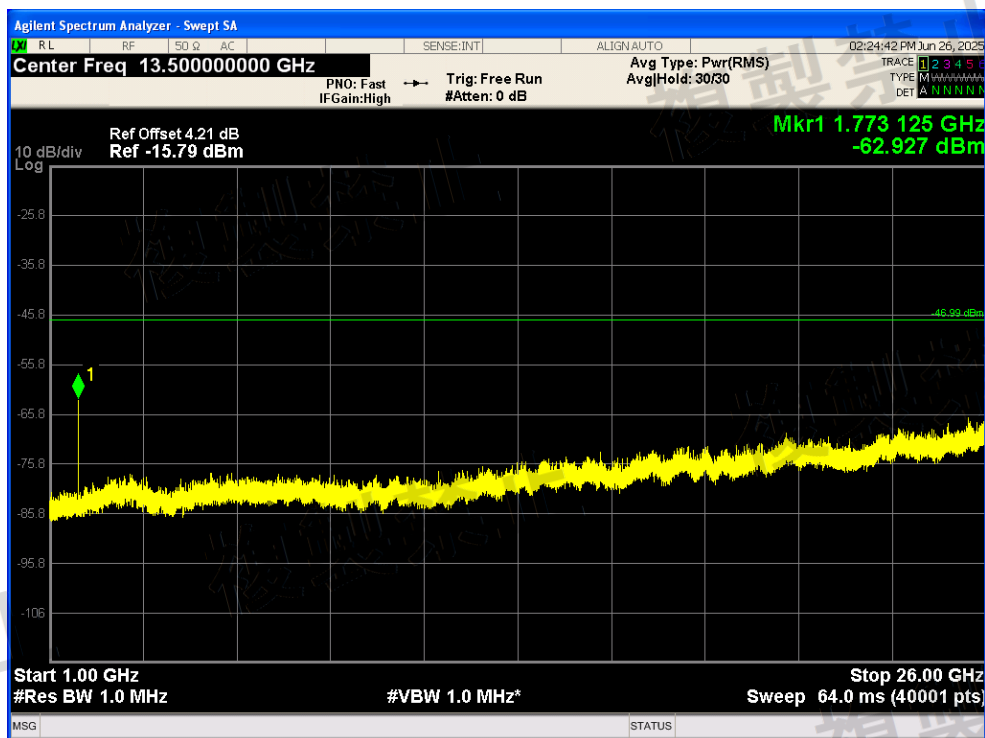


Rx. Spurious NVNT a 5280MHz Ant2 @ 30MHz-1000MHz

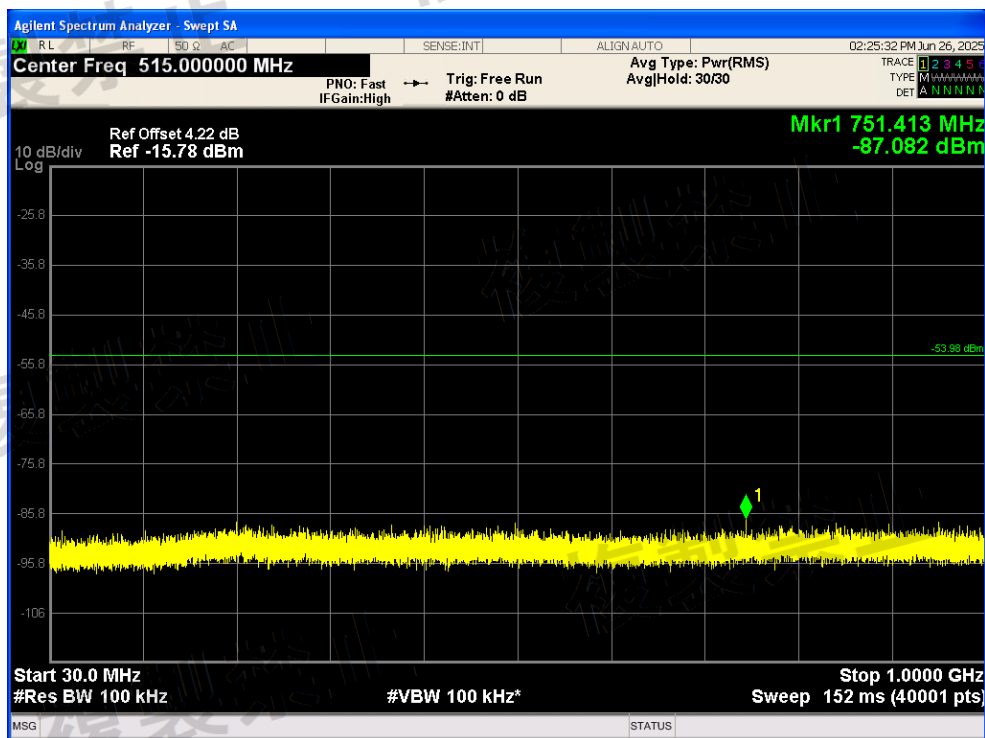


Rx. Spurious NVNT a 5280MHz Ant2 @ 1000MHz-26000MHz

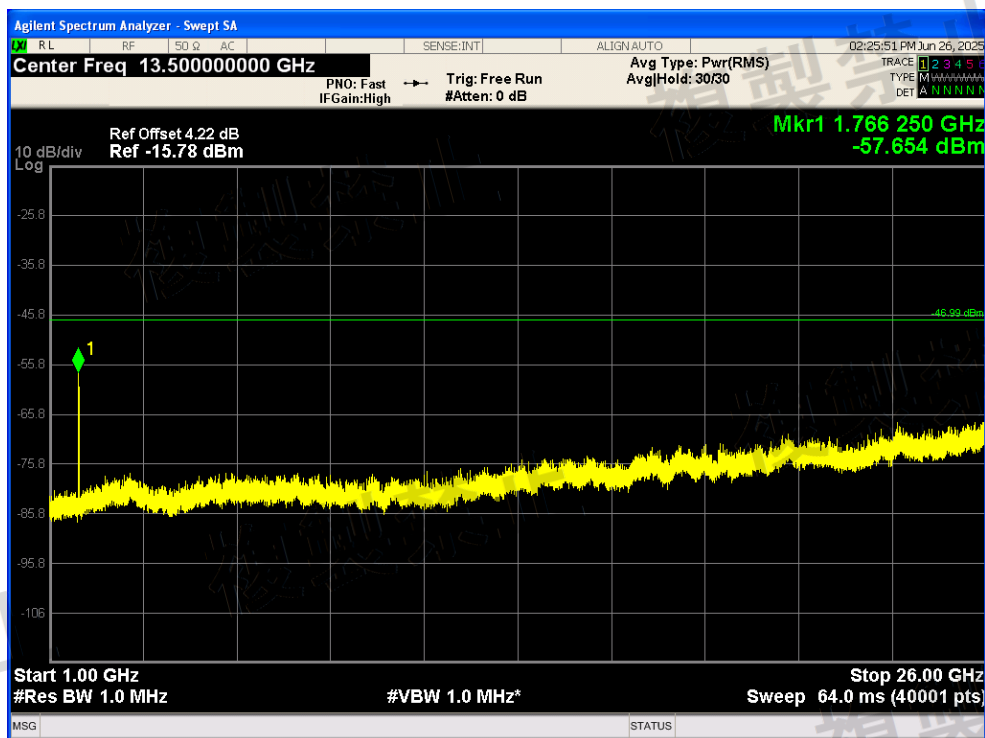


Rx. Spurious NVNT a 5320MHz Ant2 @ 30MHz-1000MHz

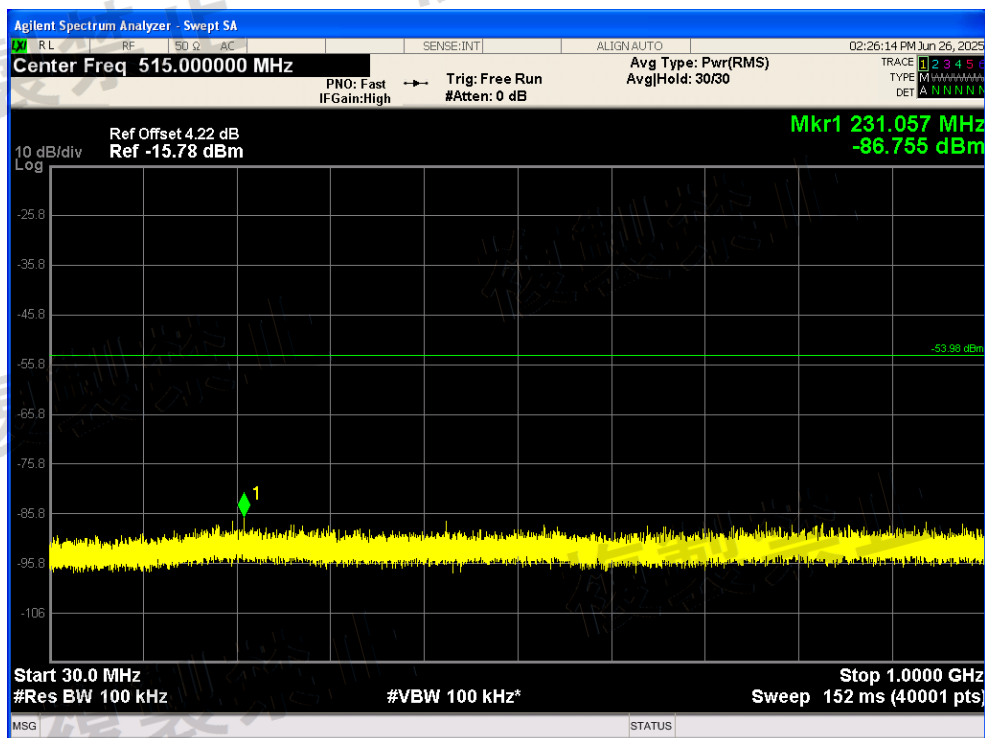


Rx. Spurious NVNT a 5320MHz Ant2 @ 1000MHz-26000MHz

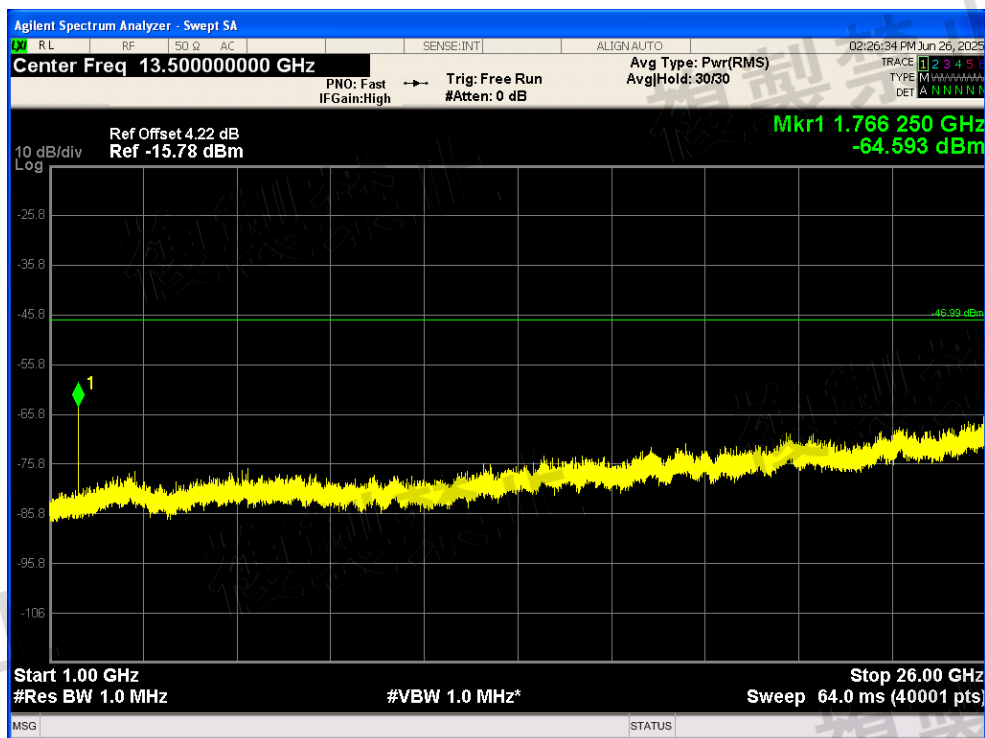


Rx. Spurious NVNT ac20 5260MHz Ant1 @ 30MHz-1000MHz

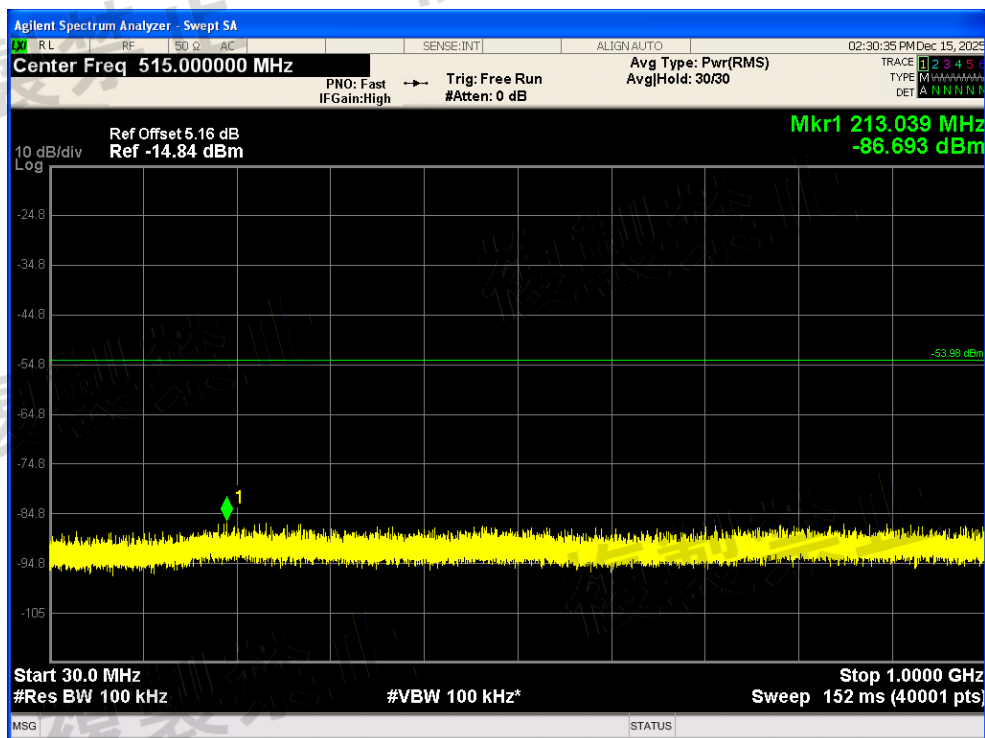


Rx. Spurious NVNT ac20 5260MHz Ant1 @ 1000MHz-26000MHz

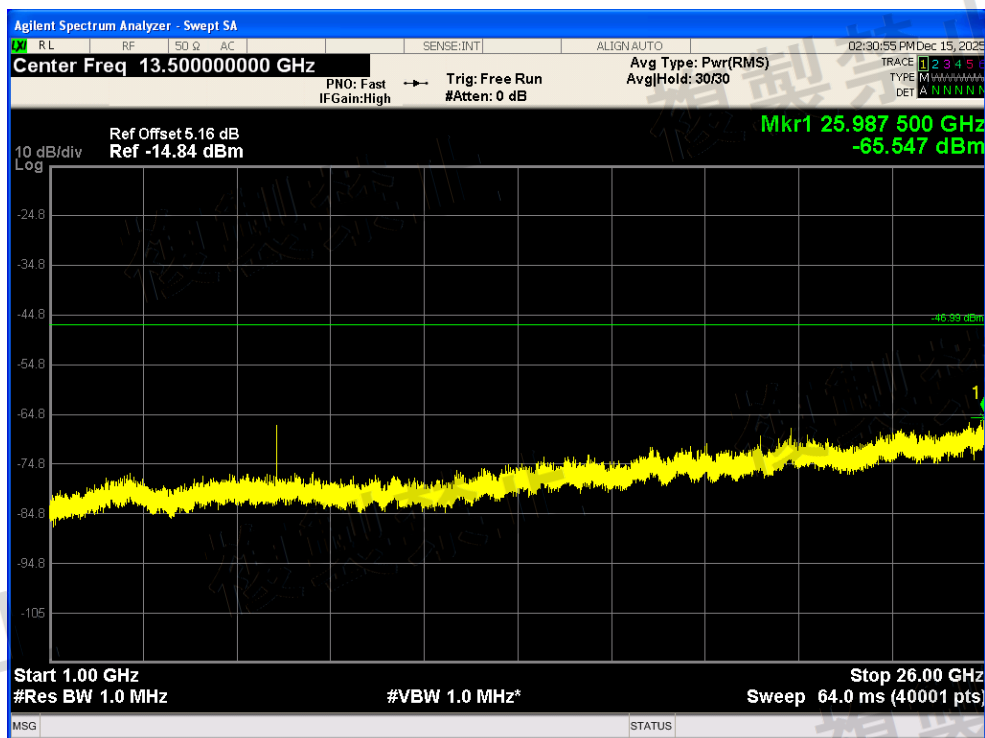


Rx. Spurious NVNT ac20 5280MHz Ant1 @ 30MHz-1000MHz

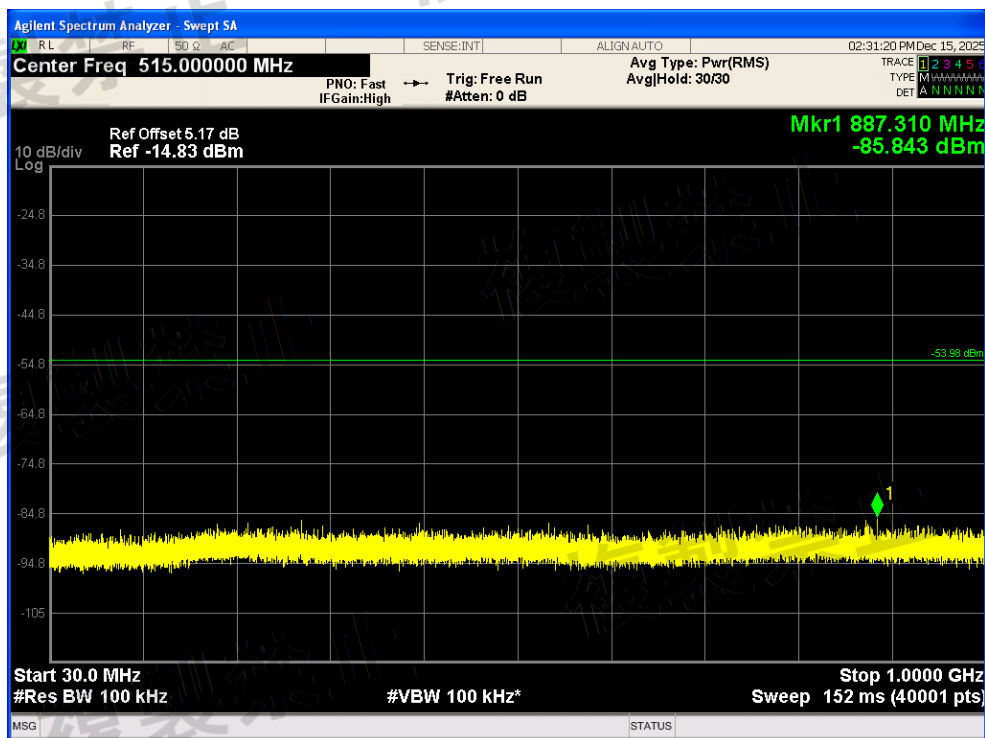


Rx. Spurious NVNT ac20 5280MHz Ant1 @ 1000MHz-26000MHz

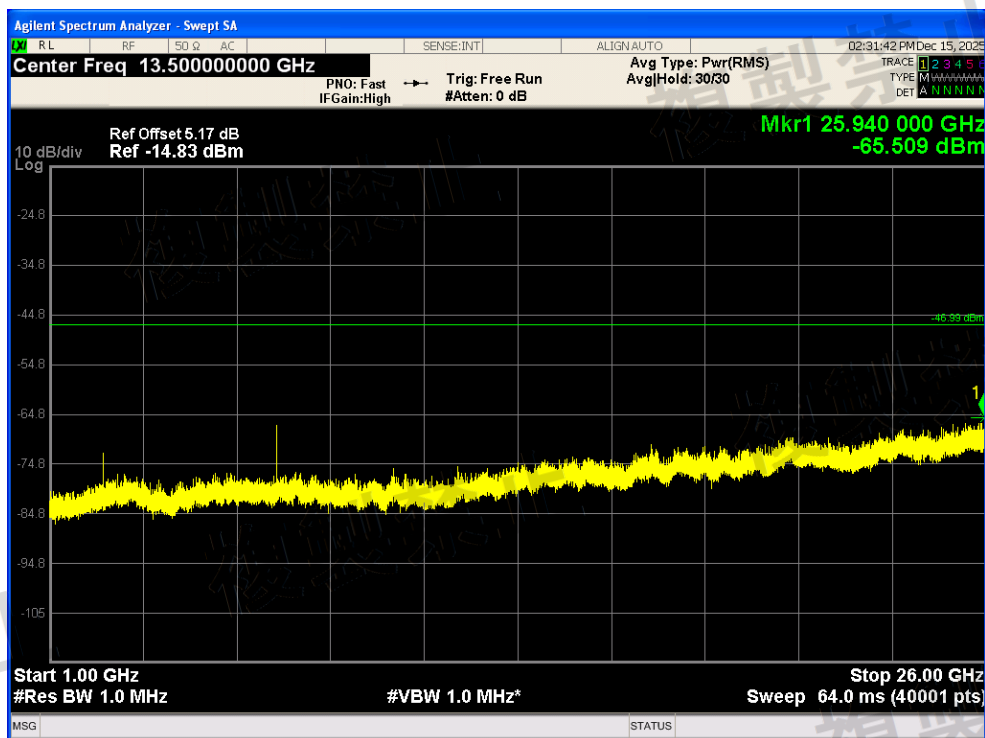


Rx. Spurious NVNT ac20 5320MHz Ant1 @ 30MHz-1000MHz

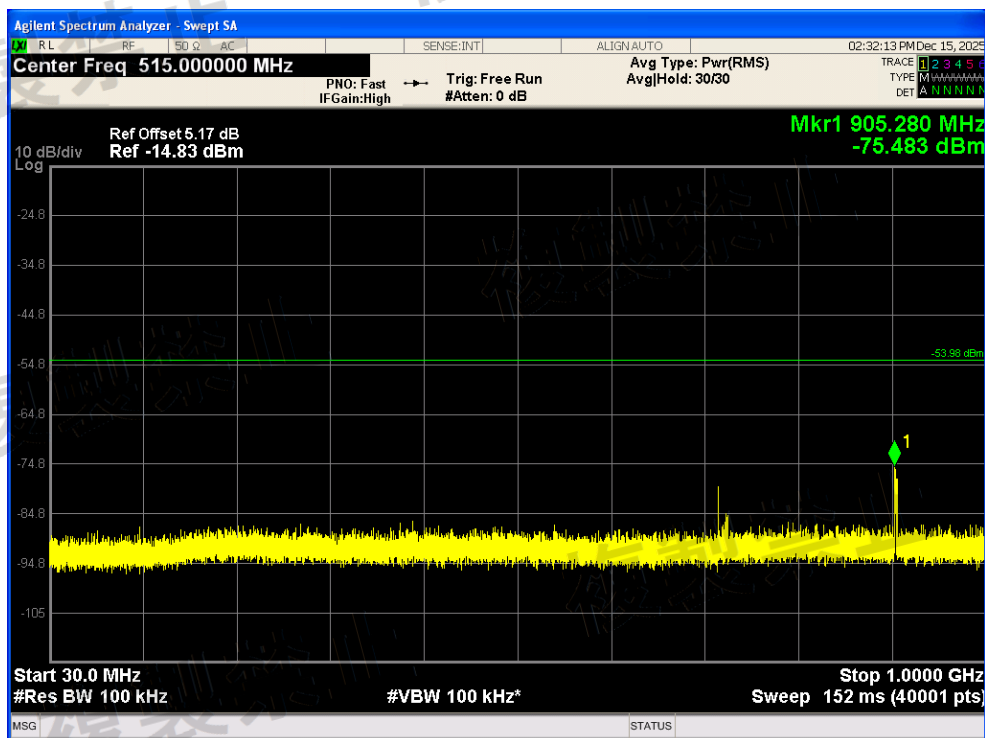


Rx. Spurious NVNT ac20 5320MHz Ant1 @ 1000MHz-26000MHz

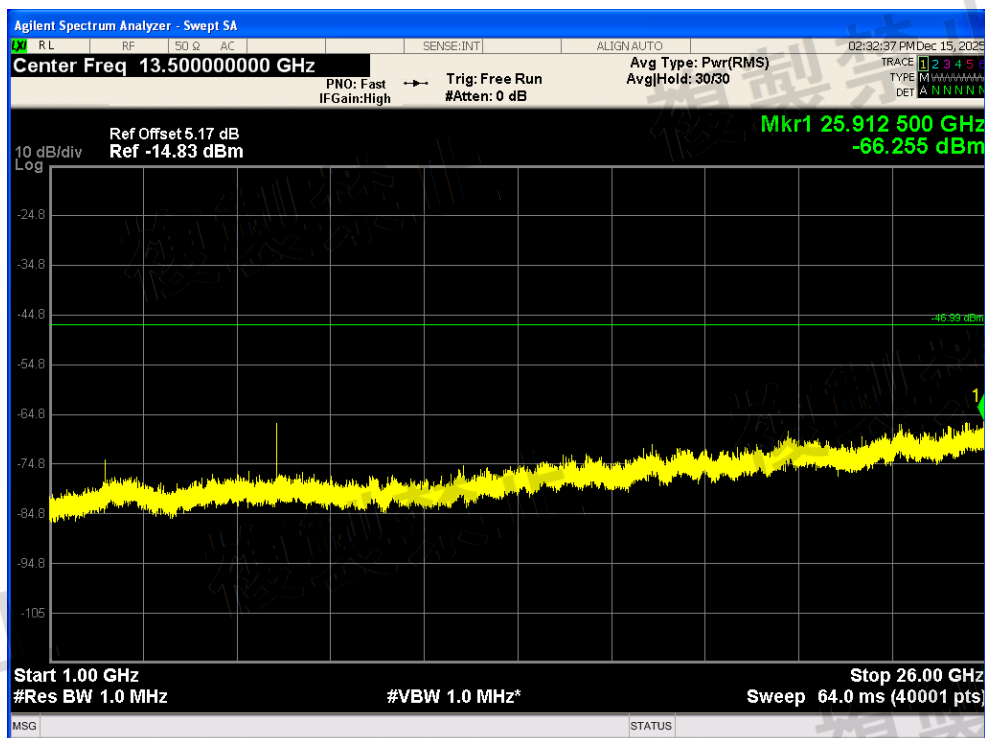


Rx. Spurious NVNT ac20 5260MHz Ant2 @ 30MHz-1000MHz

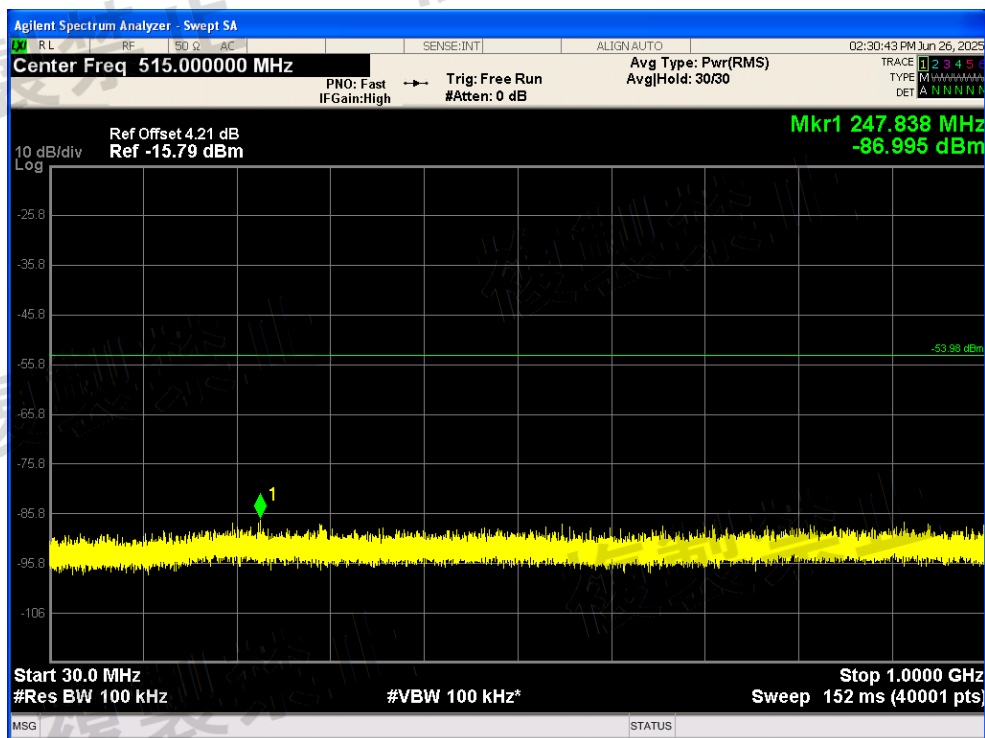


Rx. Spurious NVNT ac20 5260MHz Ant2 @ 1000MHz-26000MHz

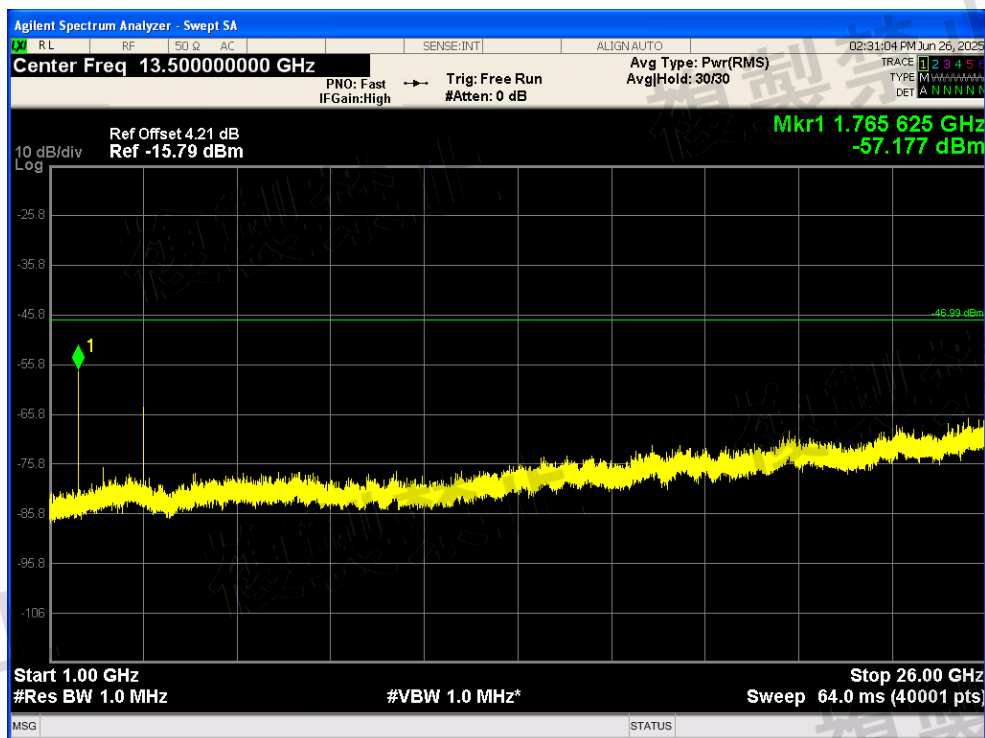


Rx. Spurious NVNT ac20 5280MHz Ant2 @ 30MHz-1000MHz

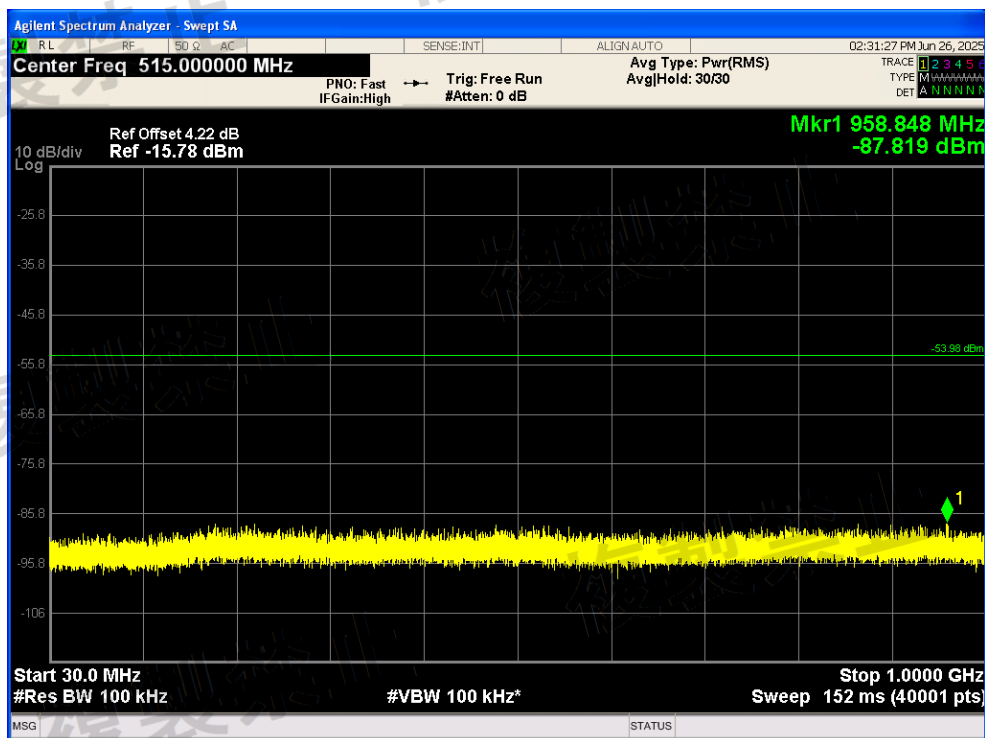


Rx. Spurious NVNT ac20 5280MHz Ant2 @ 1000MHz-26000MHz

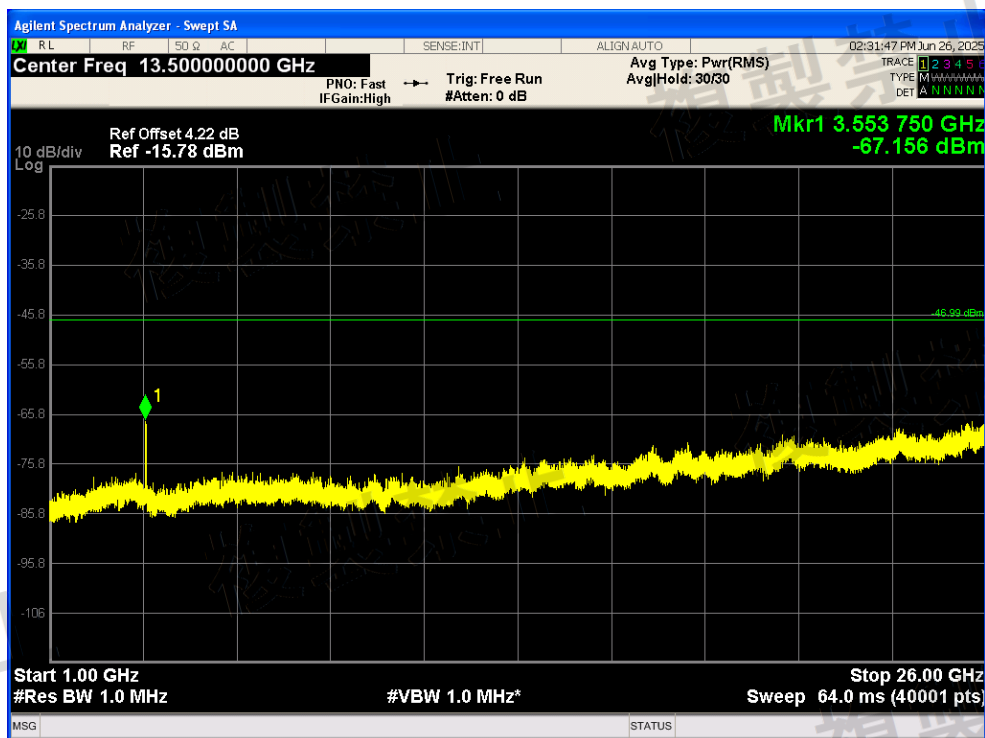


Rx. Spurious NVNT ac20 5320MHz Ant2 @ 30MHz-1000MHz

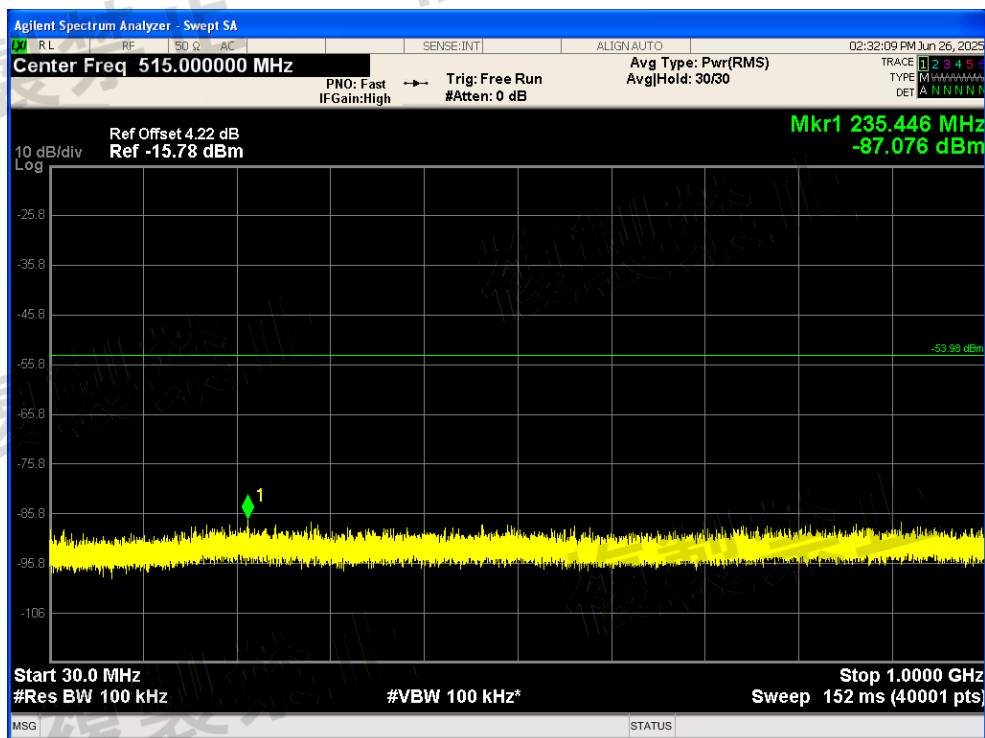


Rx. Spurious NVNT ac20 5320MHz Ant2 @ 1000MHz-26000MHz

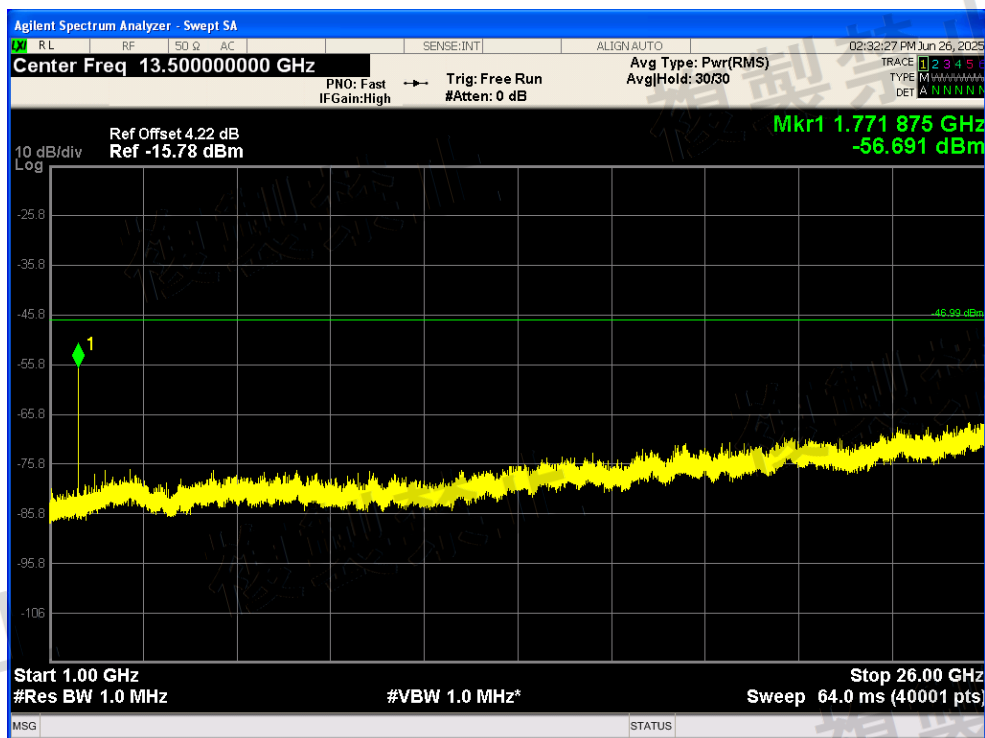


Rx. Spurious NVNT ac40 5270MHz Ant1 @ 30MHz-1000MHz

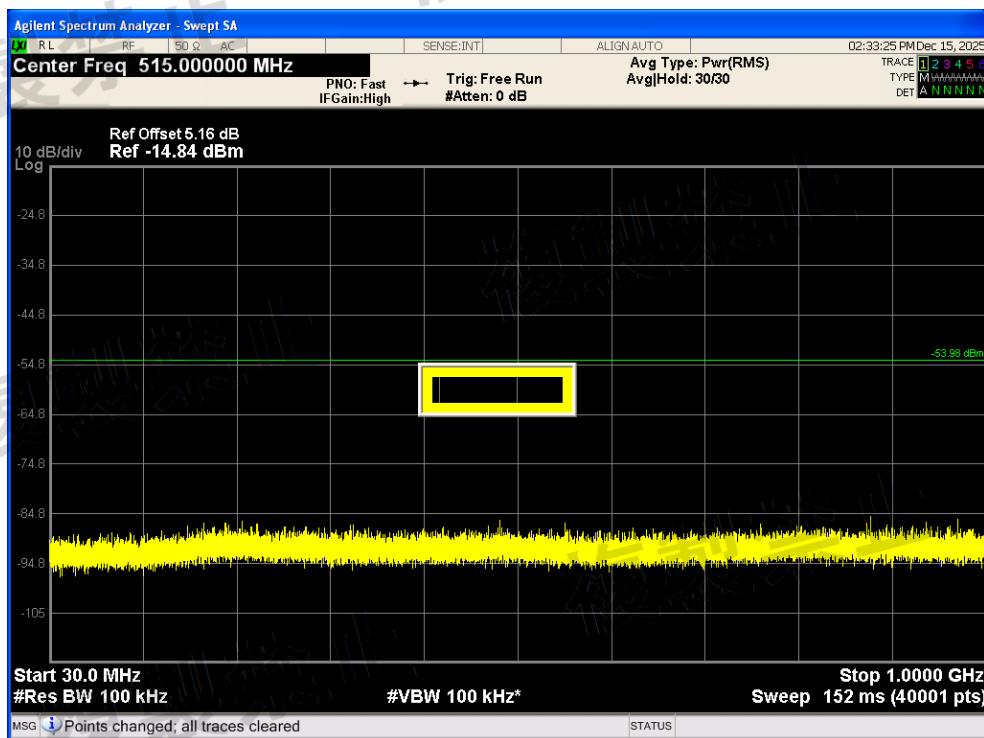


Rx. Spurious NVNT ac40 5270MHz Ant1 @ 1000MHz-26000MHz

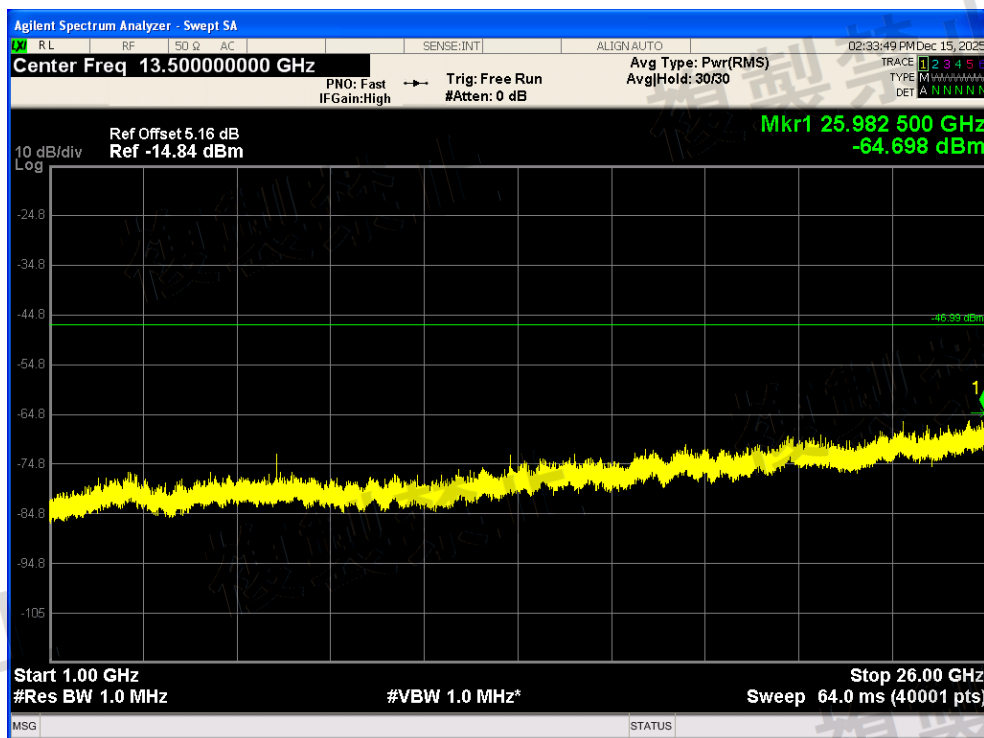


Rx. Spurious NVNT ac40 5310MHz Ant1 @ 30MHz-1000MHz

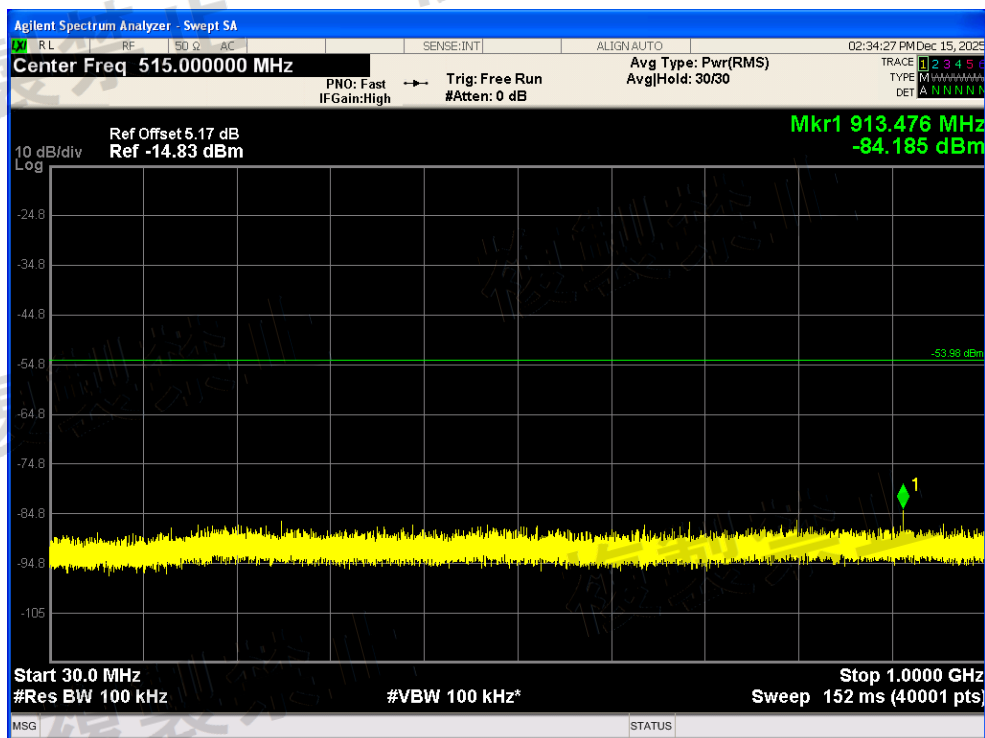


Rx. Spurious NVNT ac40 5310MHz Ant1 @ 1000MHz-26000MHz

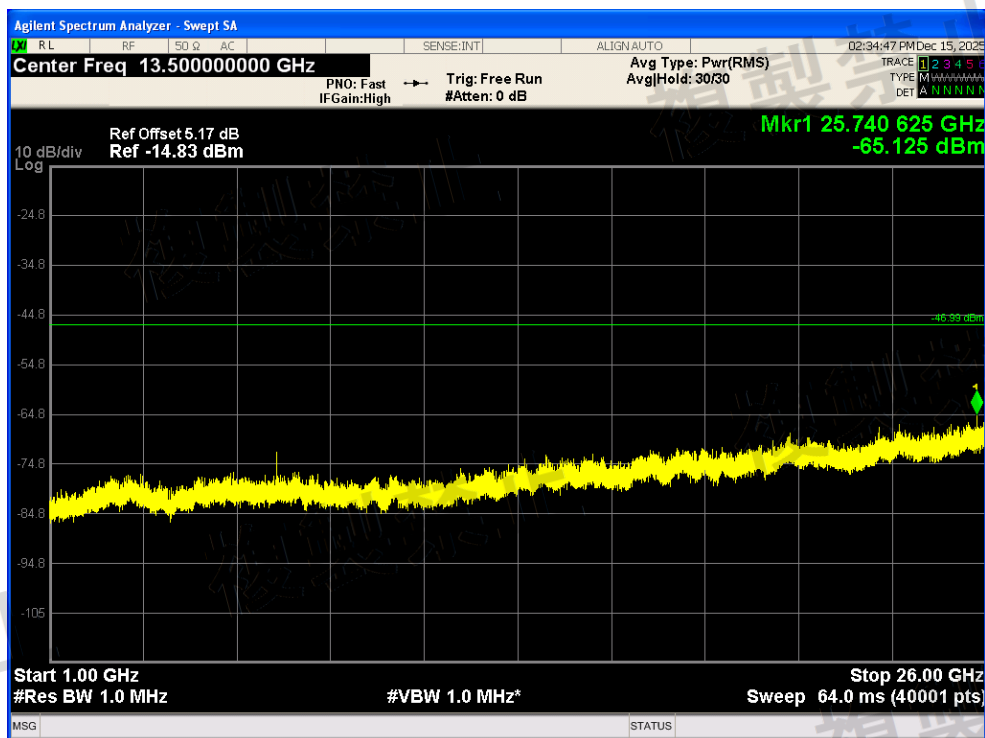


Rx. Spurious NVNT ac40 5270MHz Ant2 @ 30MHz-1000MHz

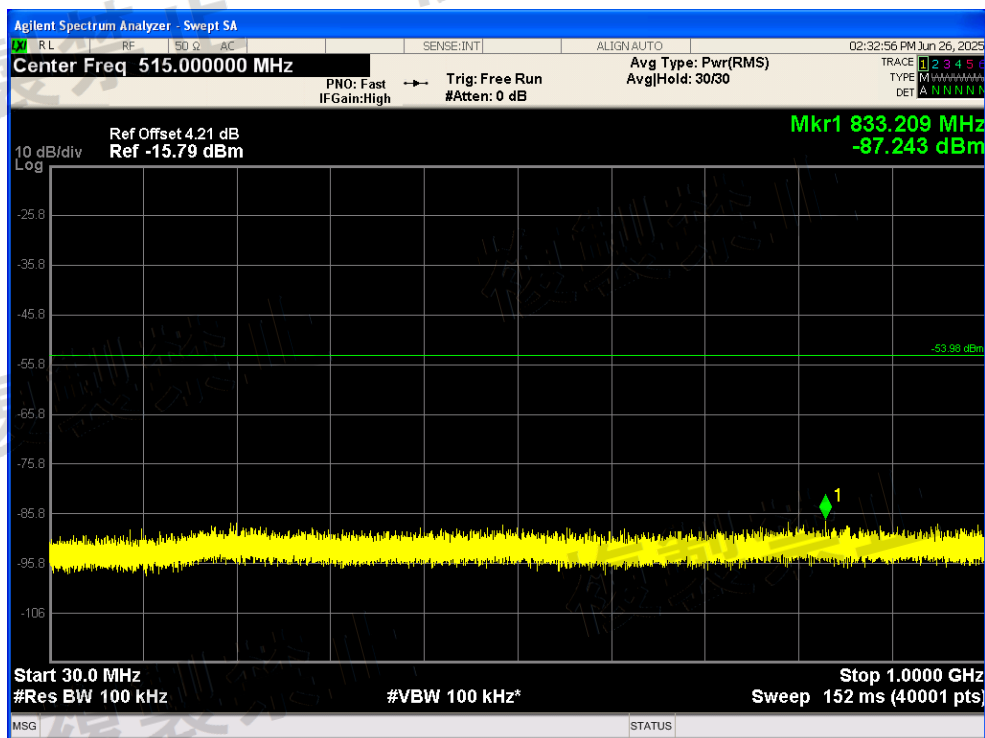


Rx. Spurious NVNT ac40 5270MHz Ant2 @ 1000MHz-26000MHz

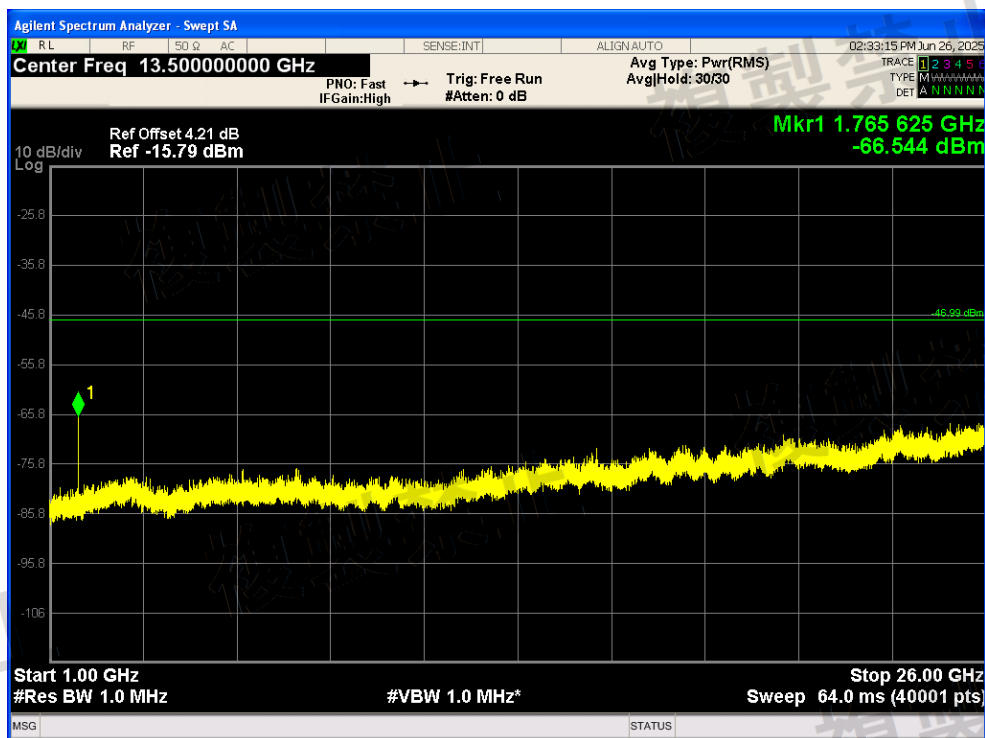


Rx. Spurious NVNT ac40 5310MHz Ant2 @ 30MHz-1000MHz

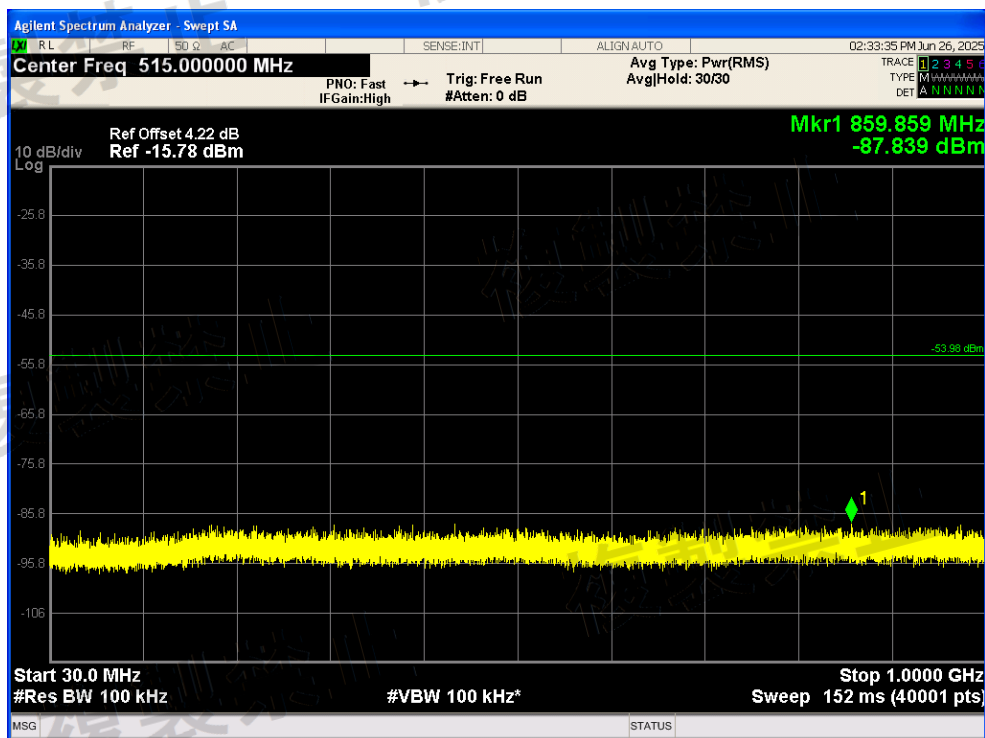


Rx. Spurious NVNT ac40 5310MHz Ant2 @ 1000MHz-26000MHz

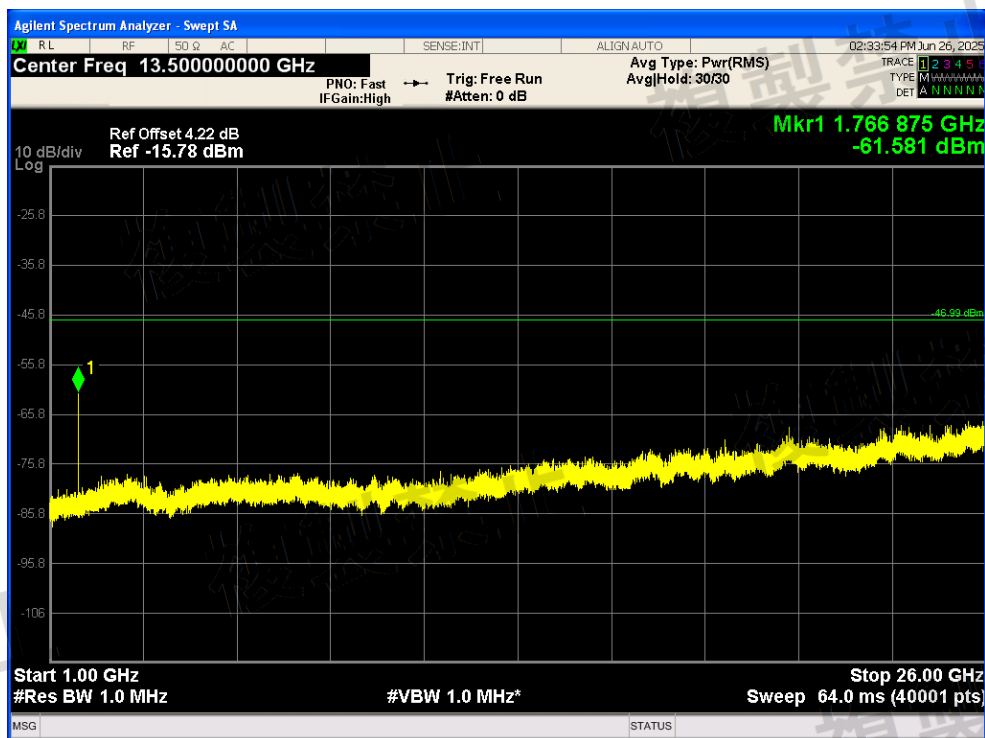


Rx. Spurious NVNT ac80 5290MHz Ant1 @ 30MHz-1000MHz

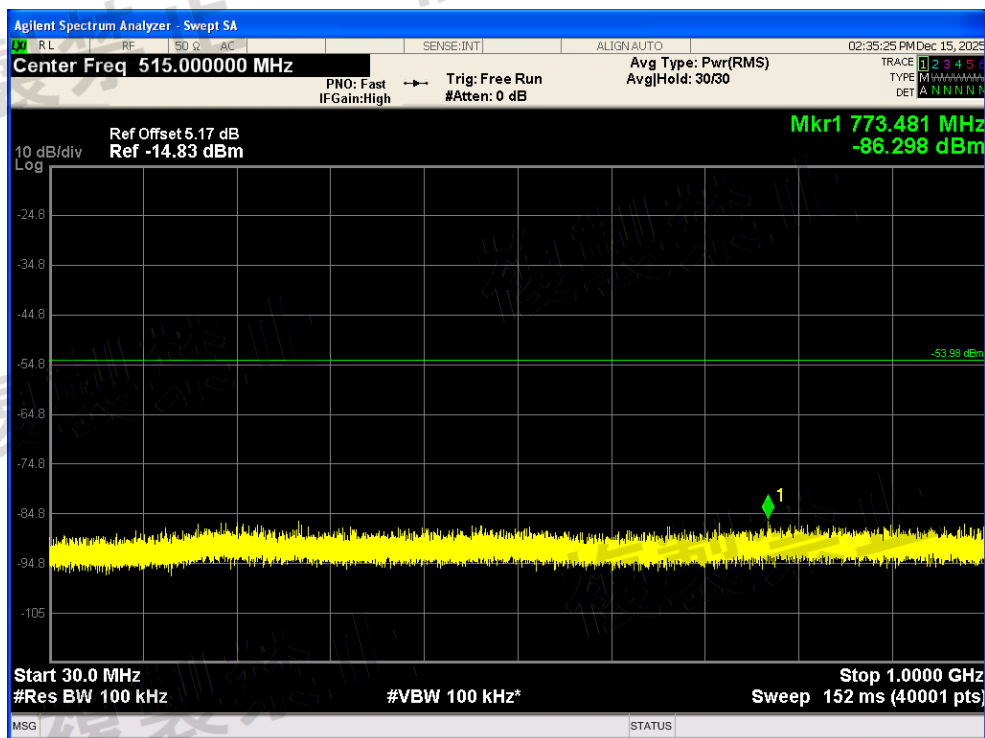


Rx. Spurious NVNT ac80 5290MHz Ant1 @ 1000MHz-26000MHz

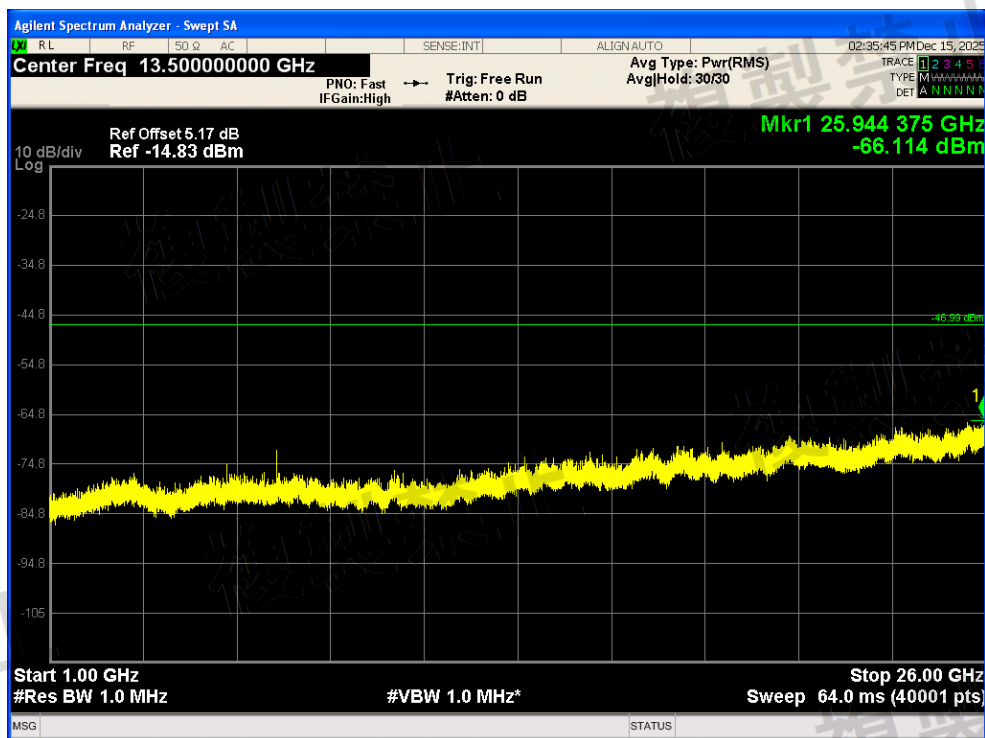


Rx. Spurious NVNT ac80 5290MHz Ant2 @ 30MHz-1000MHz

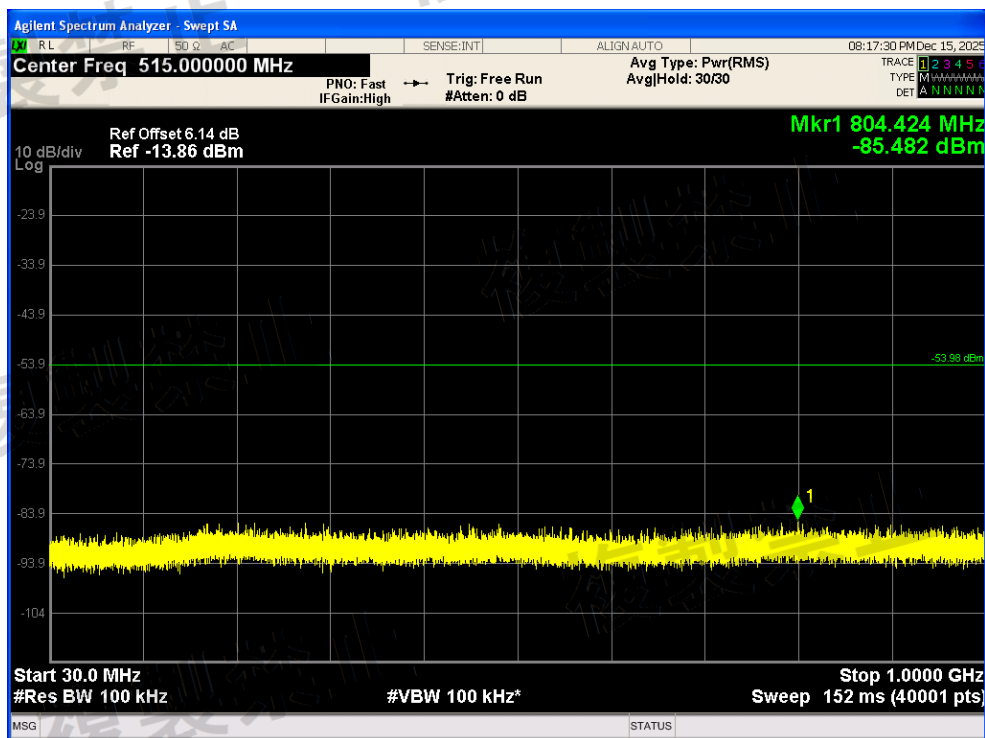


Rx. Spurious NVNT ac80 5290MHz Ant2 @ 1000MHz-26000MHz

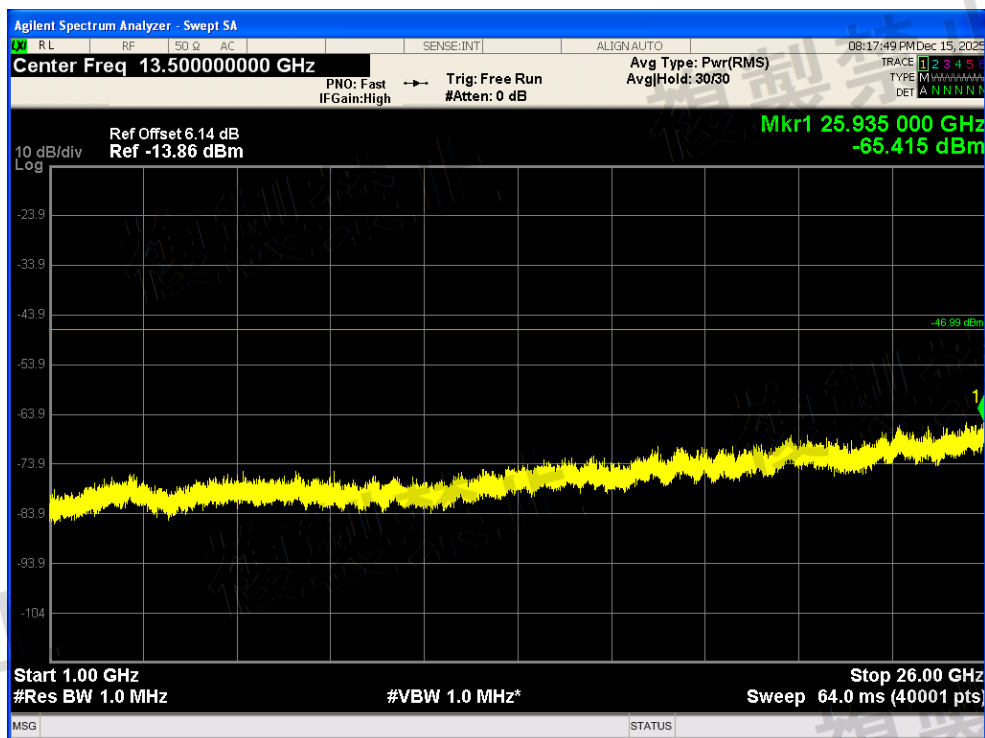


Rx. Spurious NVNT n20 5260MHz Ant1 @ 30MHz-1000MHz

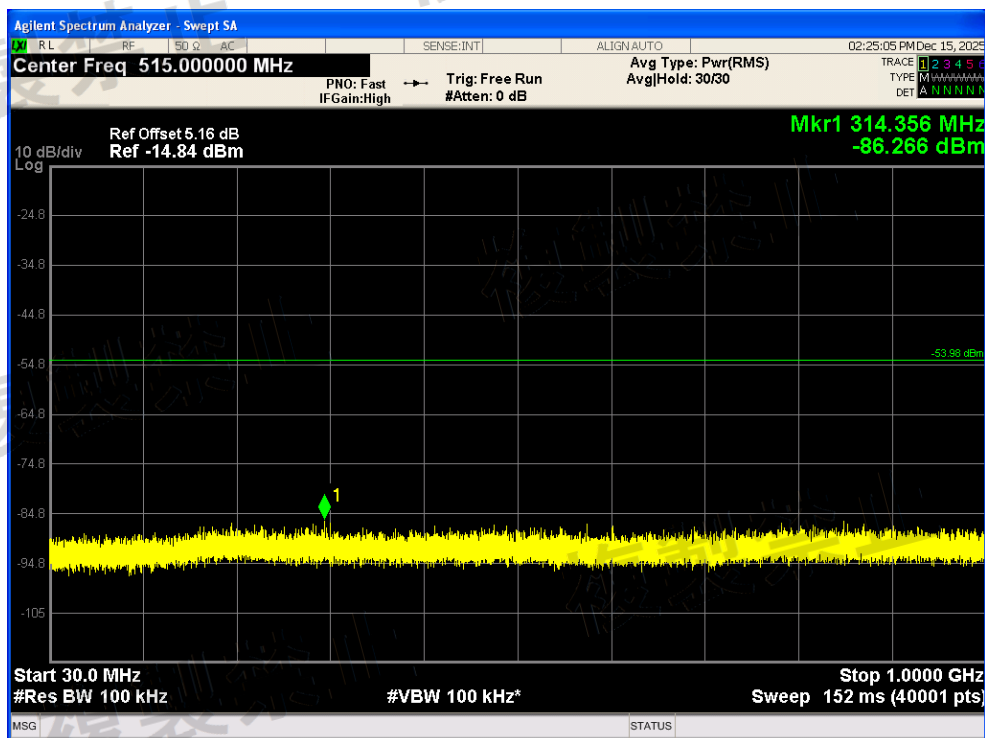


Rx. Spurious NVNT n20 5260MHz Ant1 @ 1000MHz-26000MHz

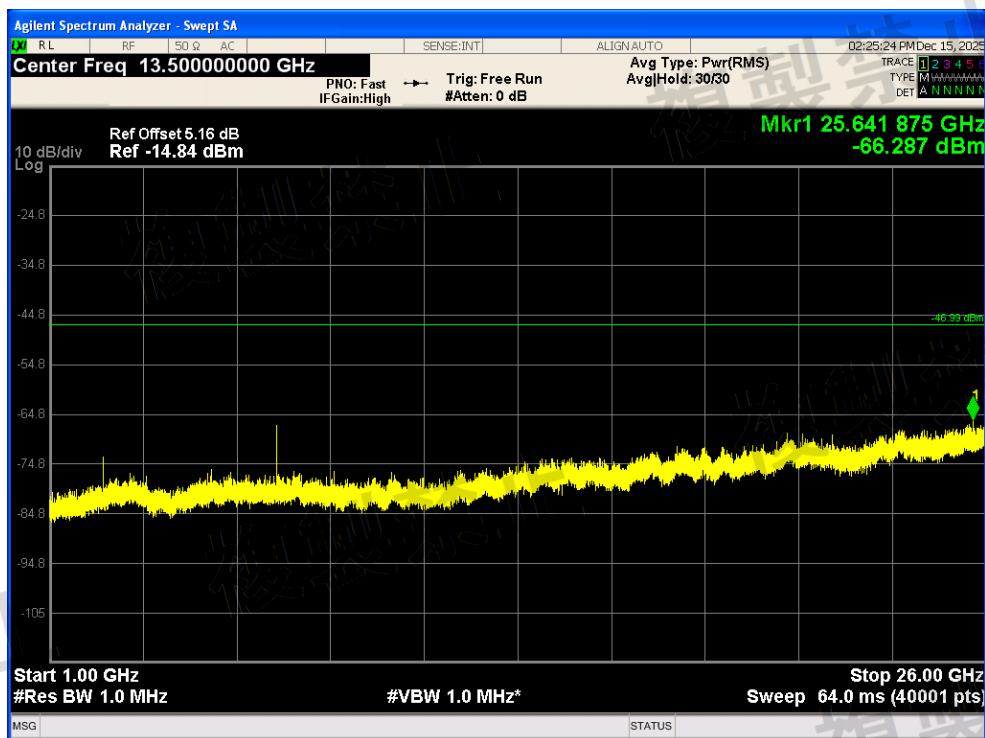


Rx. Spurious NVNT n20 5280MHz Ant1 @ 30MHz-1000MHz

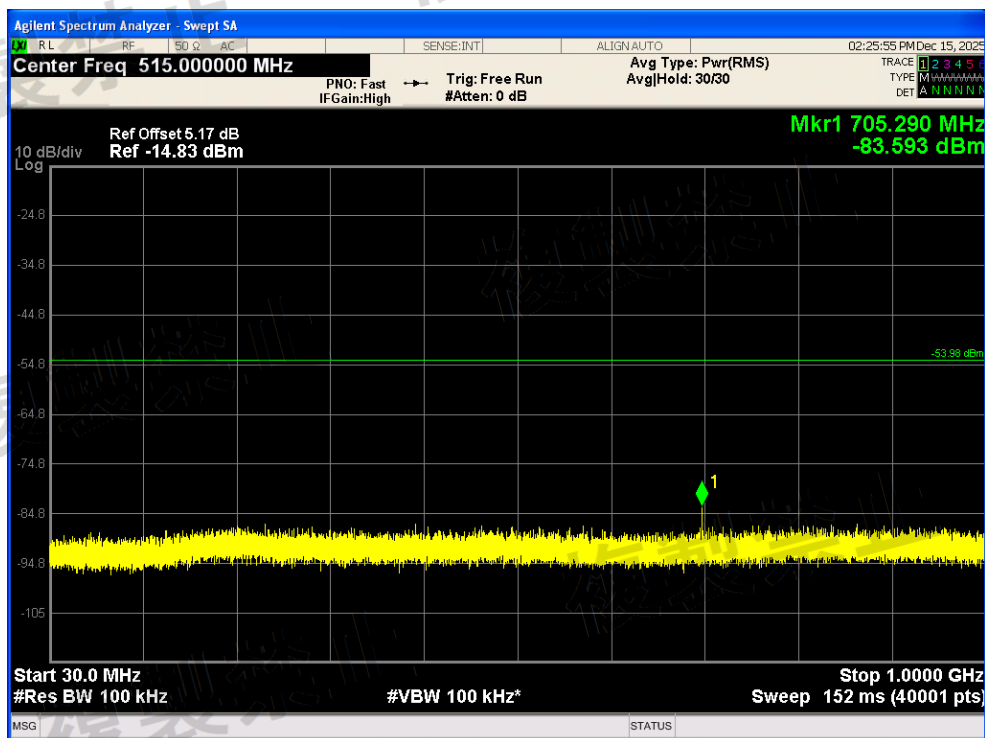


Rx. Spurious NVNT n20 5280MHz Ant1 @ 1000MHz-26000MHz

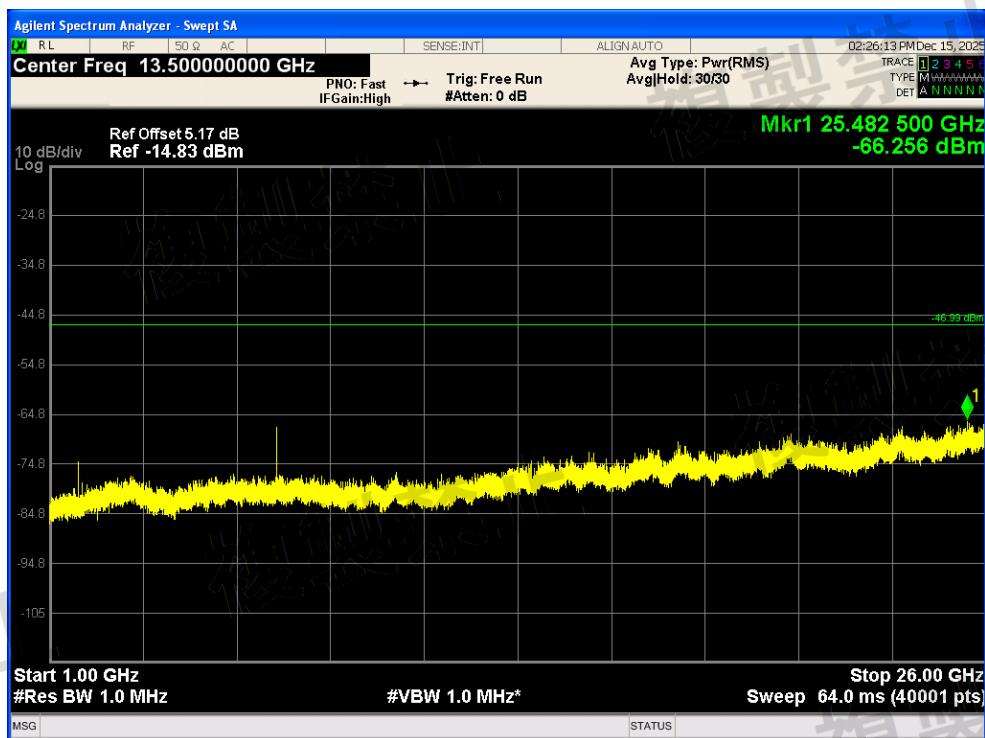


Rx. Spurious NVNT n20 5320MHz Ant1 @ 30MHz-1000MHz

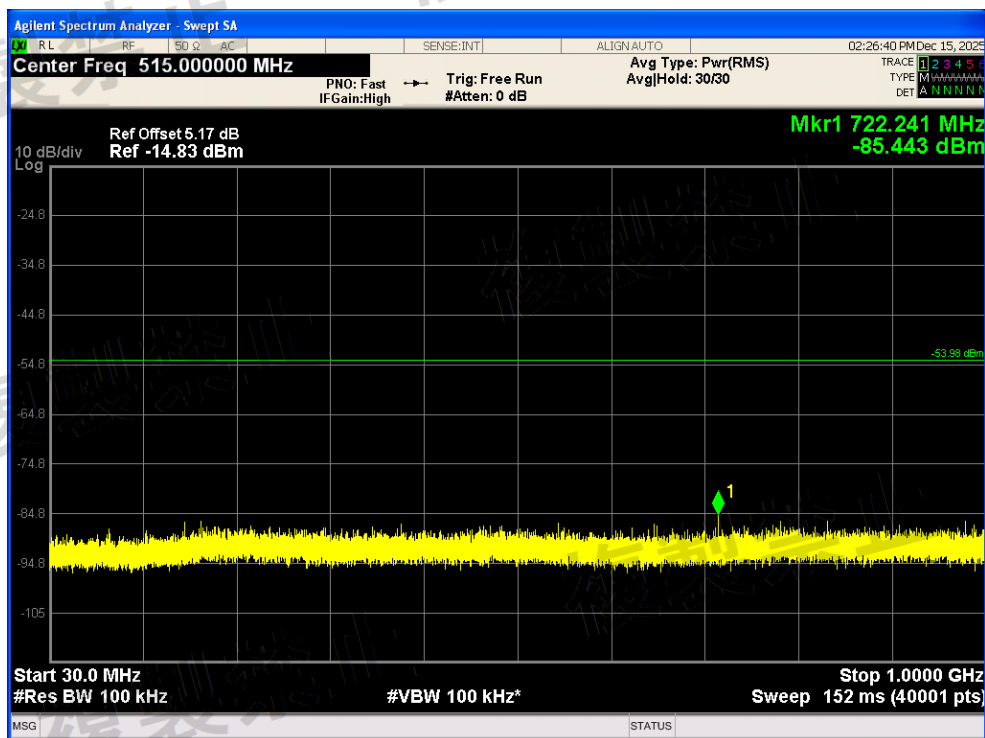


Rx. Spurious NVNT n20 5320MHz Ant1 @ 1000MHz-26000MHz

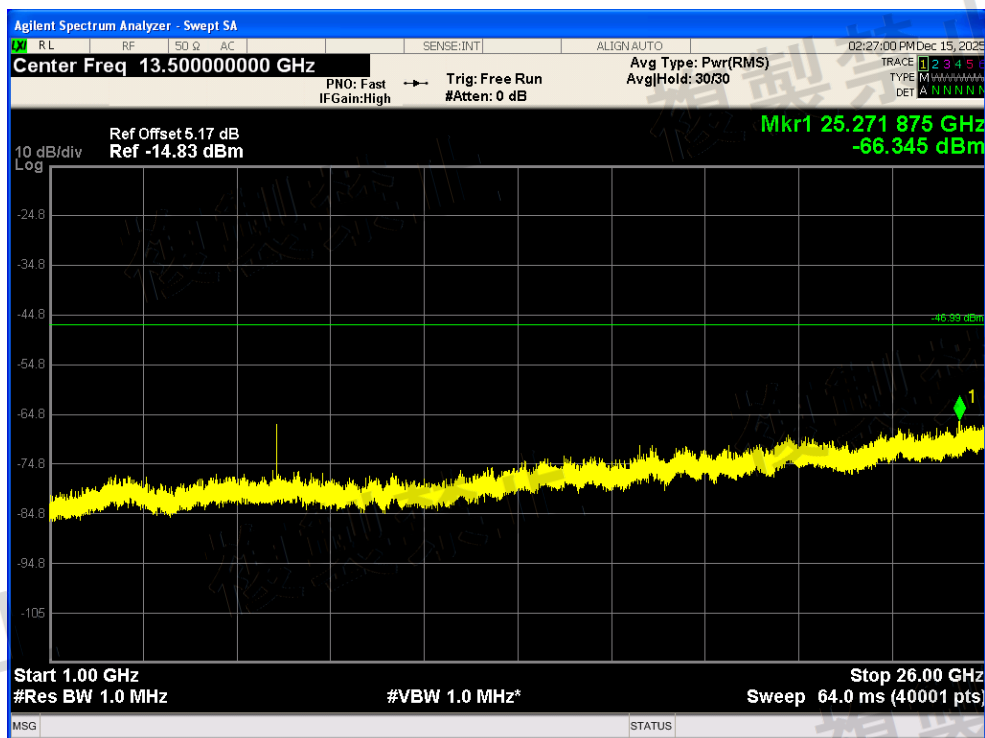


Rx. Spurious NVNT n20 5260MHz Ant2 @ 30MHz-1000MHz

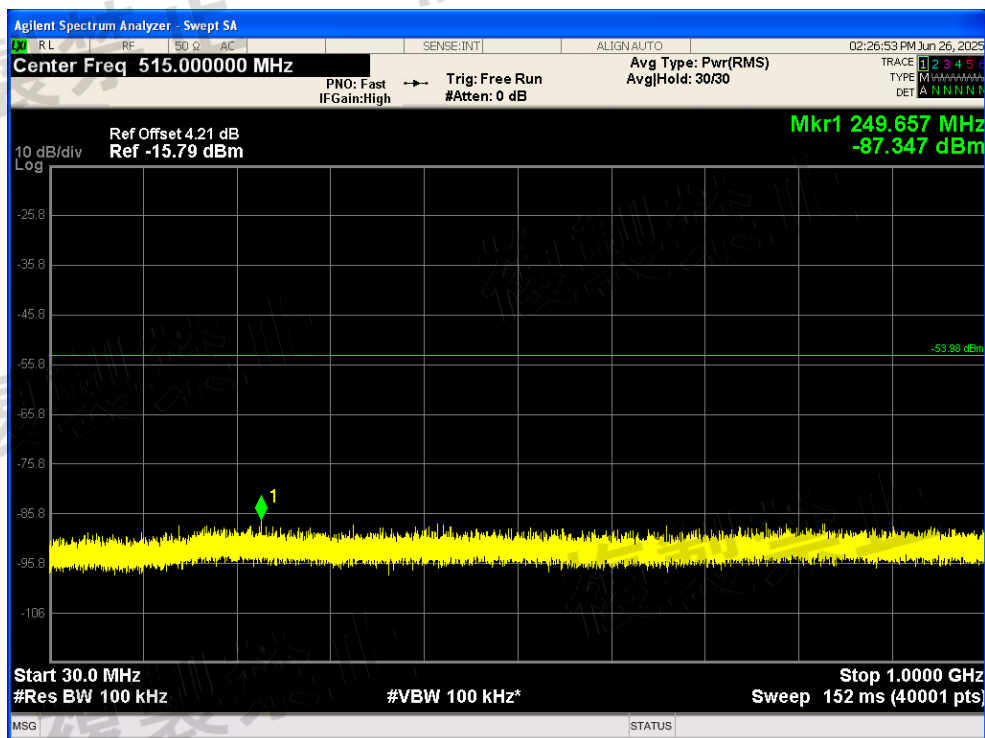


Rx. Spurious NVNT n20 5260MHz Ant2 @ 1000MHz-26000MHz

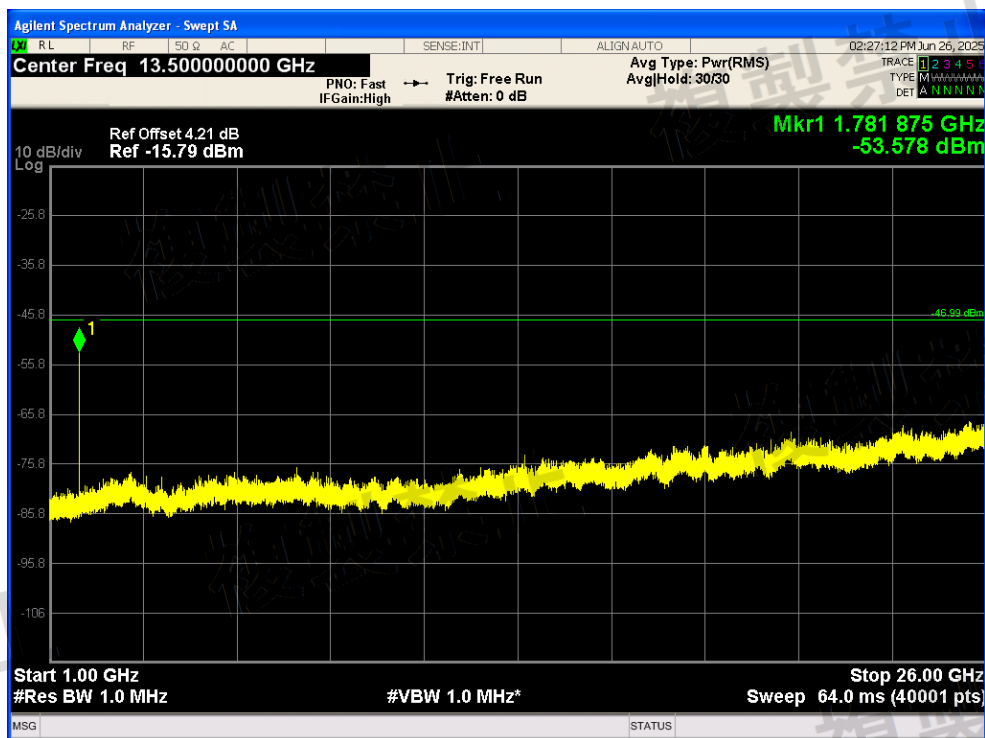


Rx. Spurious NVNT n20 5280MHz Ant2 @ 30MHz-1000MHz

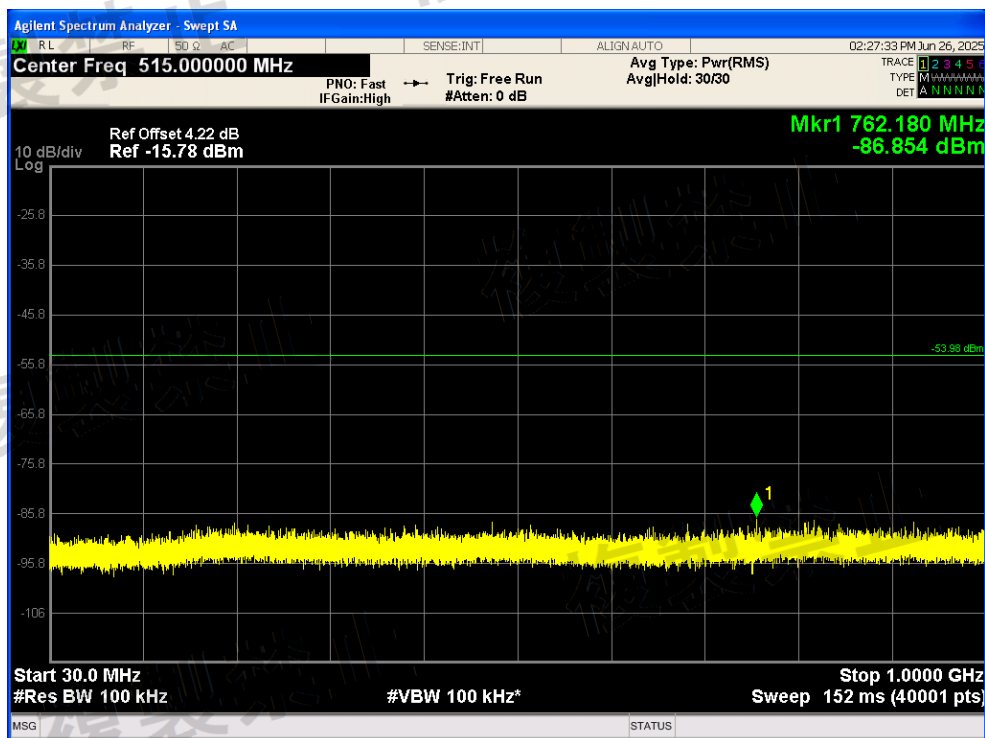


Rx. Spurious NVNT n20 5280MHz Ant2 @ 1000MHz-26000MHz

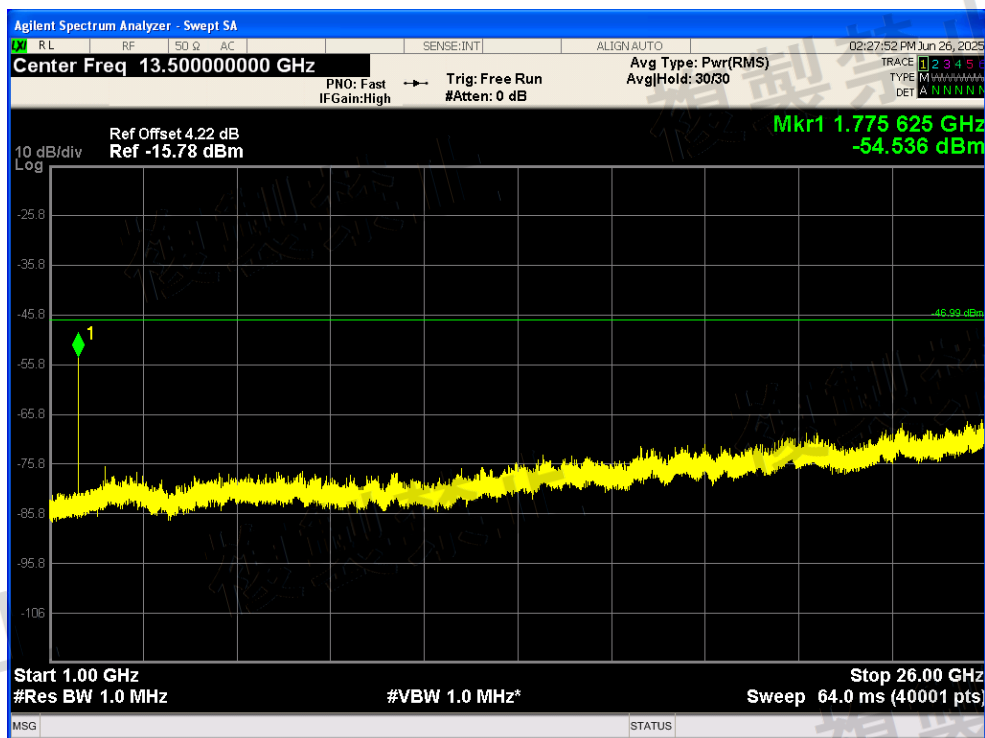


Rx. Spurious NVNT n20 5320MHz Ant2 @ 30MHz-1000MHz

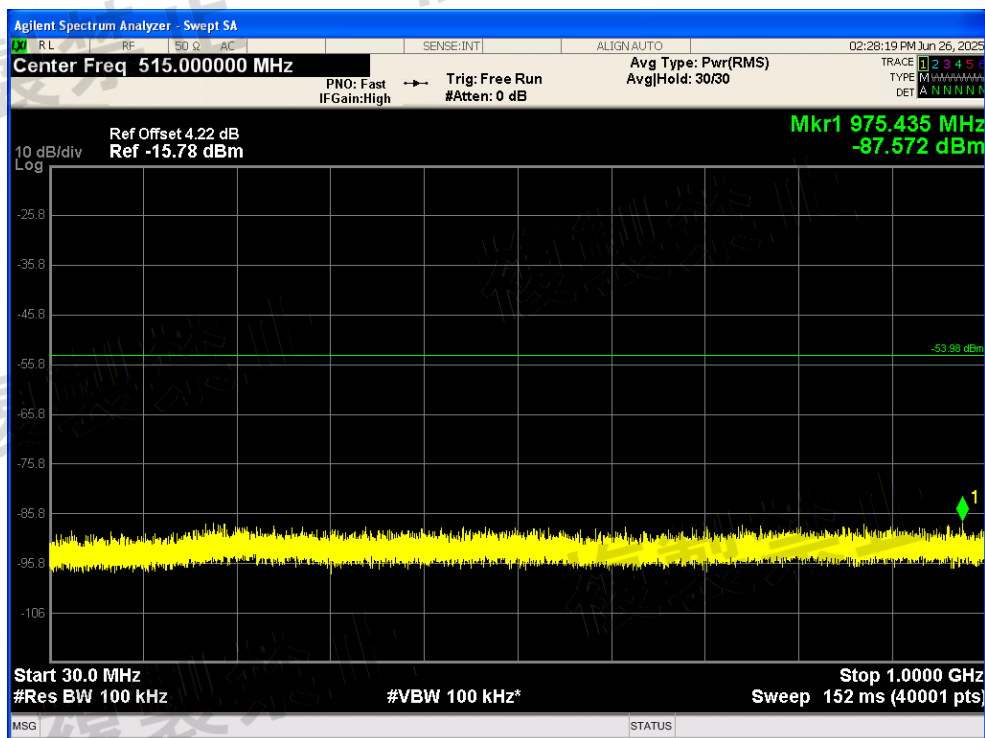


Rx. Spurious NVNT n20 5320MHz Ant2 @ 1000MHz-26000MHz

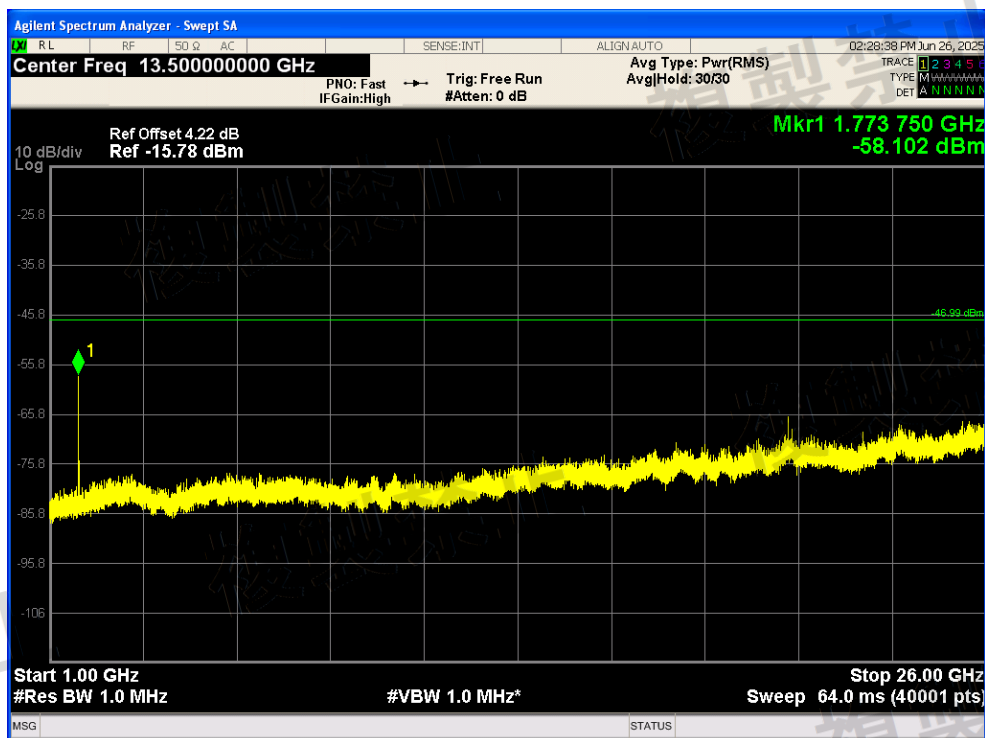


Rx. Spurious NVNT n40 5270MHz Ant1 @ 30MHz-1000MHz

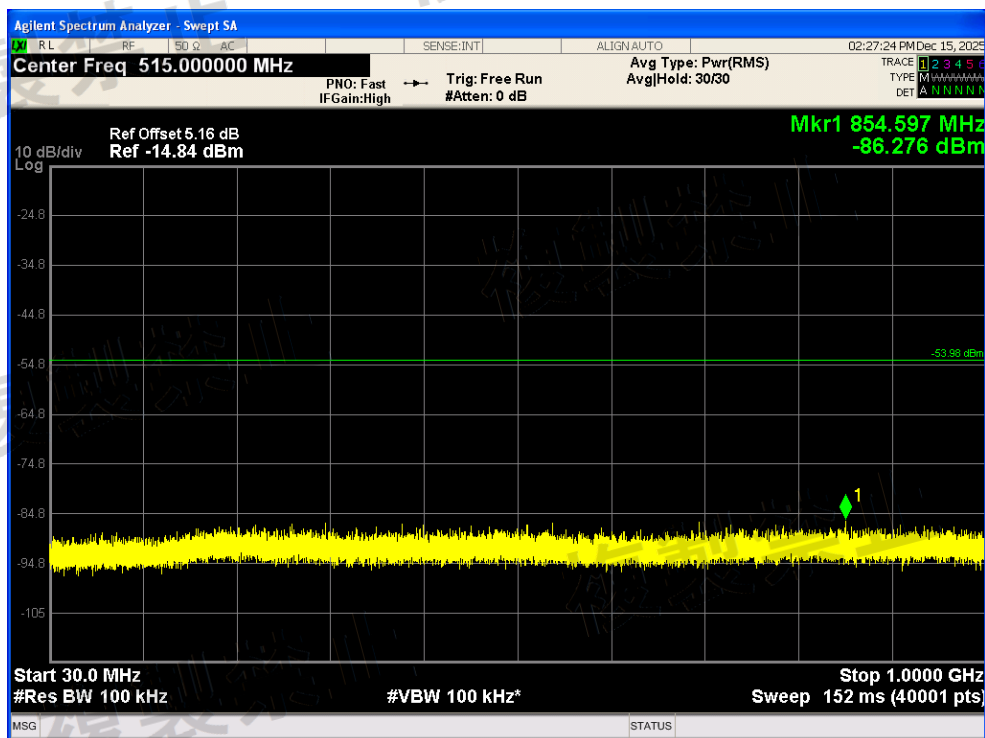


Rx. Spurious NVNT n40 5270MHz Ant1 @ 1000MHz-26000MHz

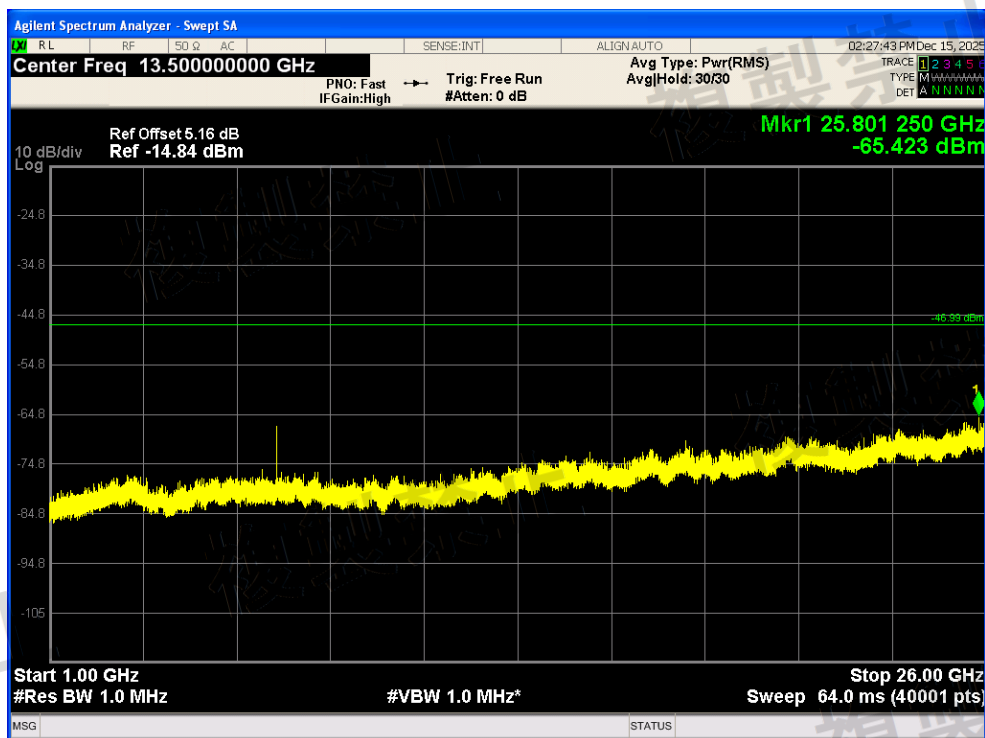


Rx. Spurious NVNT n40 5310MHz Ant1 @ 30MHz-1000MHz

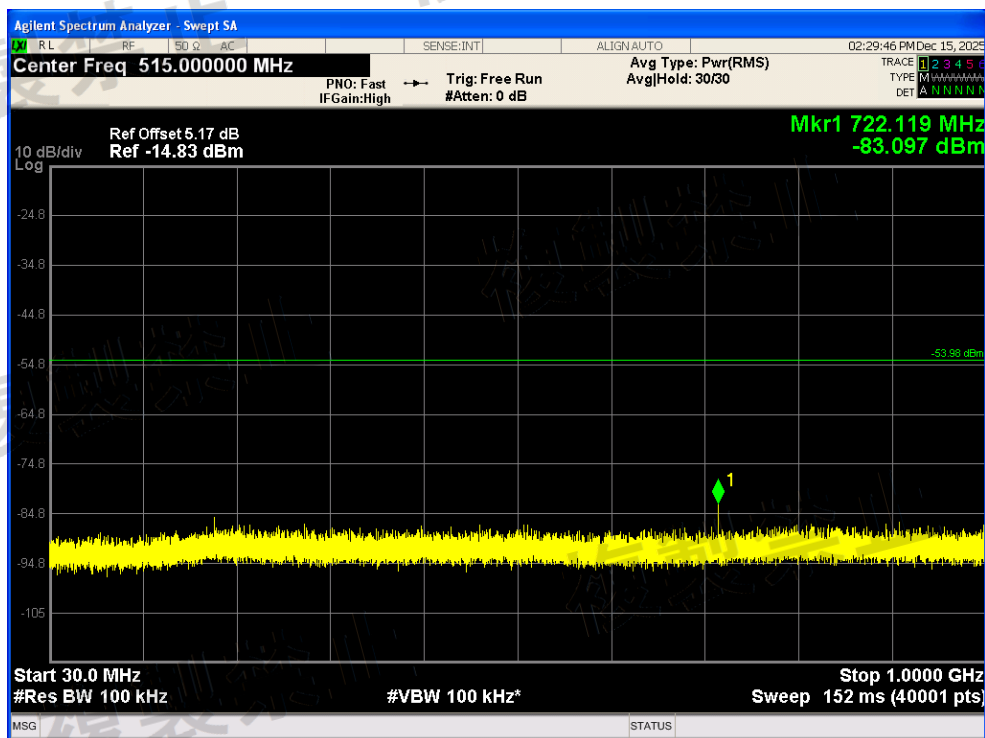


Rx. Spurious NVNT n40 5310MHz Ant1 @ 1000MHz-26000MHz

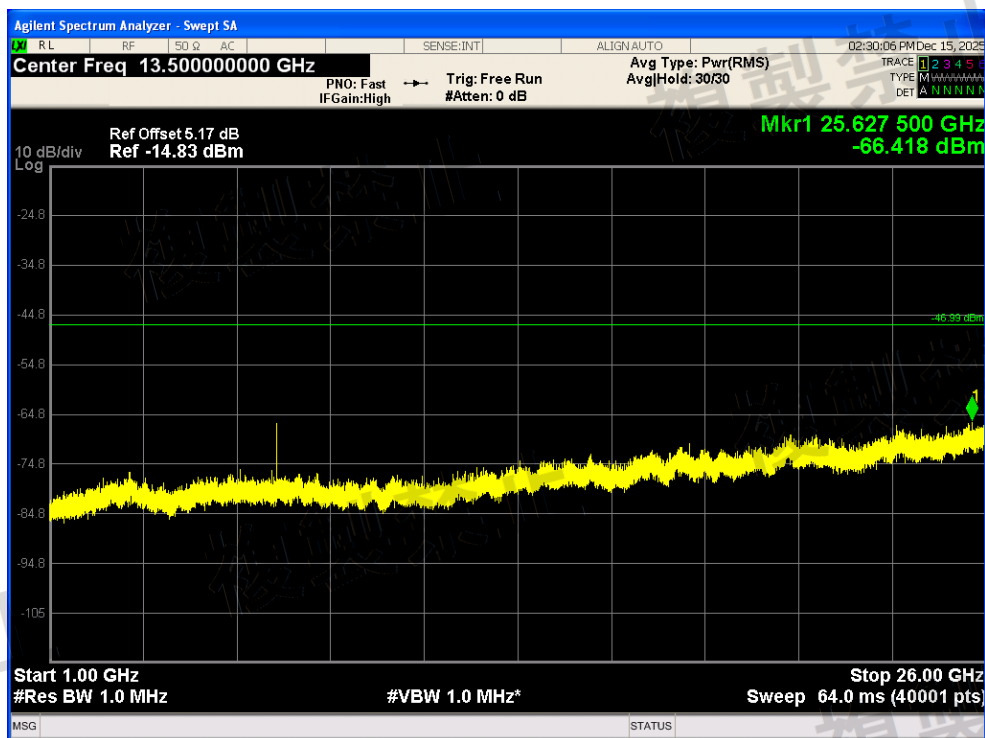


Rx. Spurious NVNT n40 5270MHz Ant2 @ 30MHz-1000MHz

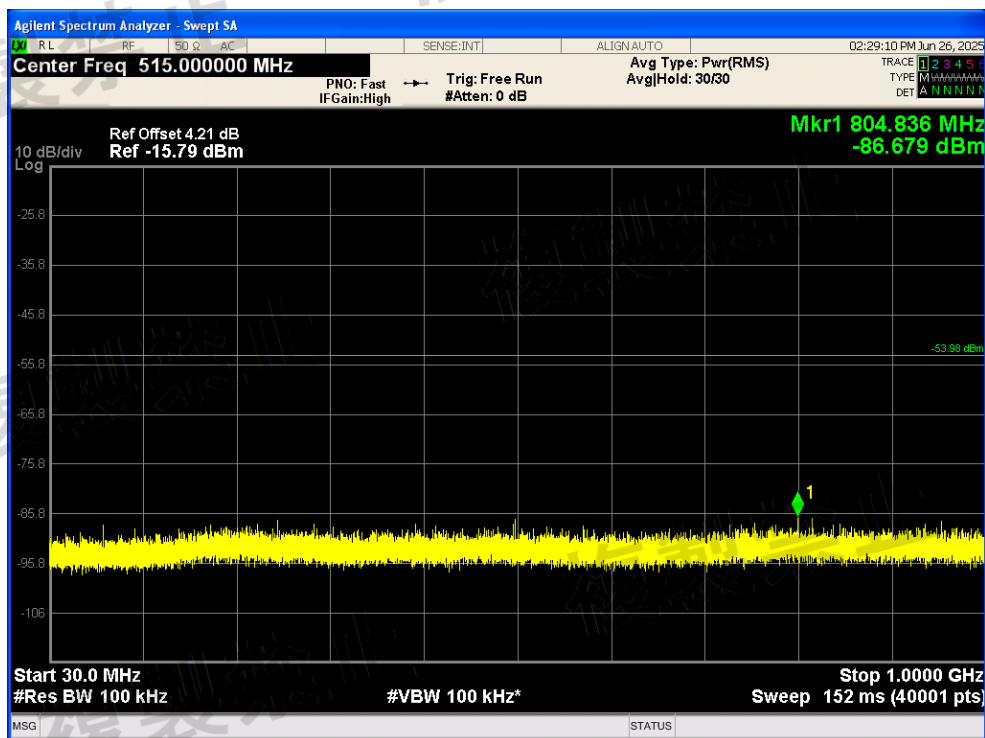


Rx. Spurious NVNT n40 5270MHz Ant2 @ 1000MHz-26000MHz

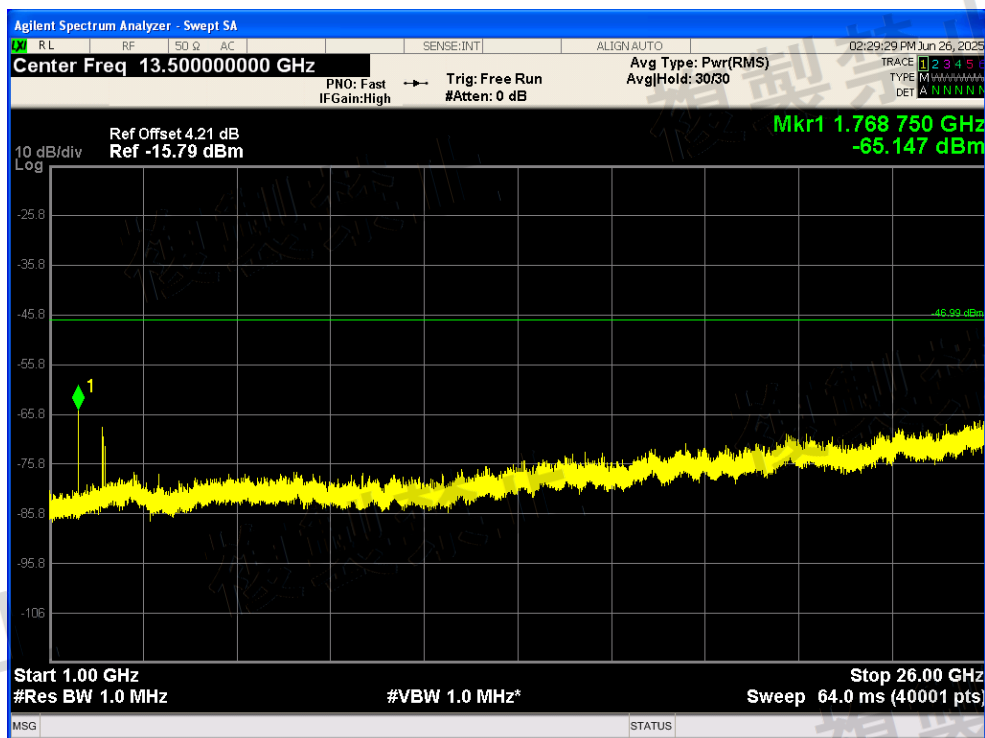

Rx. Spurious NVNT n40 5310MHz Ant2 @ 30MHz-1000MHz

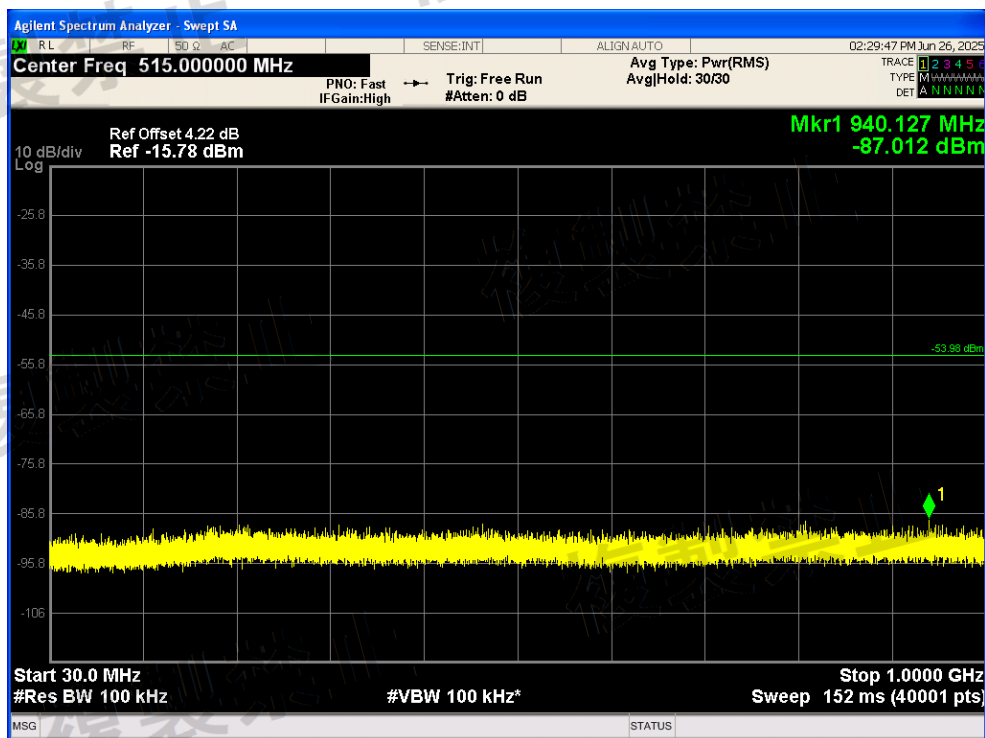

Rx. Spurious NVNT n40 5310MHz Ant2 @ 1000MHz-26000MHz

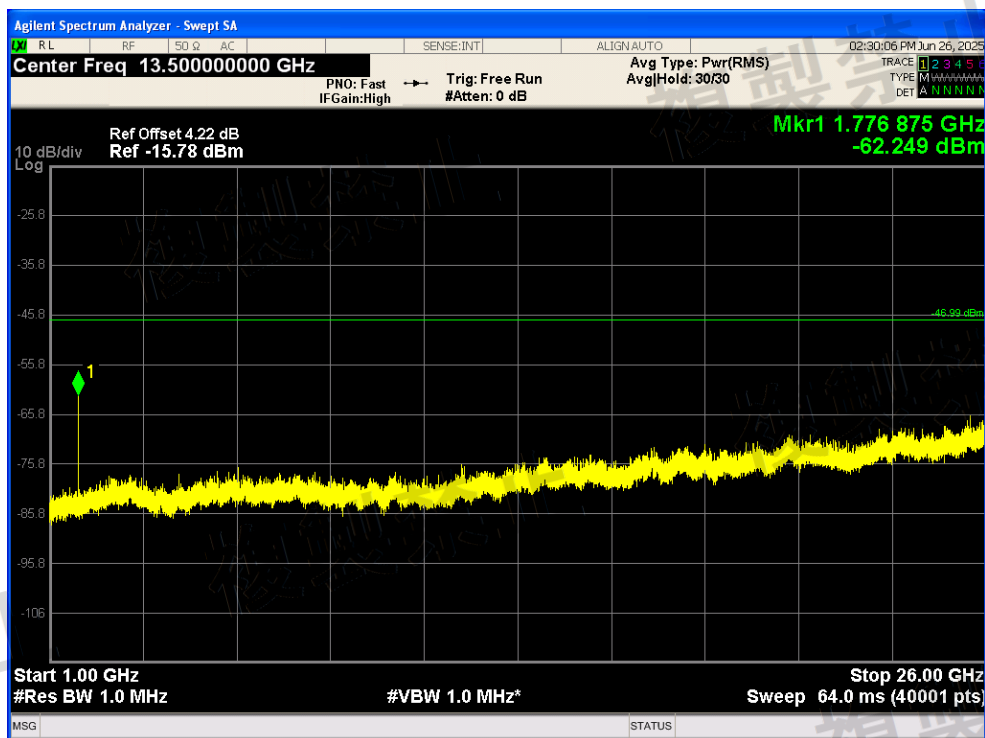


Adjacent Channel Emitted Power

Condition	Mode	Frequency (MHz)	Antenna	Offset (MHz)	Value (dBc)	Limit (dBc)	Verdict
NVNT	a	5260	Ant1	-20	-41.99	-25	Pass
NVNT	a	5260	Ant1	-40	-51.67	-40	Pass
NVNT	a	5260	Ant1	20	-43.74	-25	Pass
NVNT	a	5260	Ant1	40	-50.89	-40	Pass
NVNT	a	5280	Ant1	-20	-41.87	-25	Pass
NVNT	a	5280	Ant1	-40	-51.96	-40	Pass
NVNT	a	5280	Ant1	20	-43.67	-25	Pass
NVNT	a	5280	Ant1	40	-51.09	-40	Pass
NVNT	a	5320	Ant1	-20	-42.06	-25	Pass
NVNT	a	5320	Ant1	-40	-52.65	-40	Pass
NVNT	a	5320	Ant1	20	-43.56	-25	Pass
NVNT	a	5320	Ant1	40	-51.59	-40	Pass
NVNT	a	5260	Ant2	-20	-40.03	-25	Pass
NVNT	a	5260	Ant2	-40	-54.31	-40	Pass
NVNT	a	5260	Ant2	20	-41.79	-25	Pass
NVNT	a	5260	Ant2	40	-53.21	-40	Pass
NVNT	a	5280	Ant2	-20	-40.81	-25	Pass
NVNT	a	5280	Ant2	-40	-54.69	-40	Pass
NVNT	a	5280	Ant2	20	-40.71	-25	Pass
NVNT	a	5280	Ant2	40	-53.5	-40	Pass
NVNT	a	5320	Ant2	-20	-40.01	-25	Pass
NVNT	a	5320	Ant2	-40	-54.91	-40	Pass
NVNT	a	5320	Ant2	20	-37.92	-25	Pass
NVNT	a	5320	Ant2	40	-54.22	-40	Pass
NVNT	ac20	5260	Ant1	-20	-40.42	-25	Pass
NVNT	ac20	5260	Ant1	-40	-51.38	-40	Pass
NVNT	ac20	5260	Ant1	20	-41.97	-25	Pass
NVNT	ac20	5260	Ant1	40	-50.79	-40	Pass
NVNT	ac20	5280	Ant1	-20	-40.44	-25	Pass
NVNT	ac20	5280	Ant1	-40	-51.92	-40	Pass
NVNT	ac20	5280	Ant1	20	-41.81	-25	Pass
NVNT	ac20	5280	Ant1	40	-51.08	-40	Pass
NVNT	ac20	5320	Ant1	-20	-40.58	-25	Pass
NVNT	ac20	5320	Ant1	-40	-52.41	-40	Pass
NVNT	ac20	5320	Ant1	20	-41.74	-25	Pass
NVNT	ac20	5320	Ant1	40	-51.31	-40	Pass
NVNT	ac20	5260	Ant2	-20	-39.07	-25	Pass
NVNT	ac20	5260	Ant2	-40	-53.73	-40	Pass


NVNT	ac20	5260	Ant2	20	-40.75	-25	Pass
NVNT	ac20	5260	Ant2	40	-52.77	-40	Pass
NVNT	ac20	5280	Ant2	-20	-39.76	-25	Pass
NVNT	ac20	5280	Ant2	-40	-54.06	-40	Pass
NVNT	ac20	5280	Ant2	20	-40.61	-25	Pass
NVNT	ac20	5280	Ant2	40	-53.04	-40	Pass
NVNT	ac20	5320	Ant2	-20	-39.73	-25	Pass
NVNT	ac20	5320	Ant2	-40	-53.96	-40	Pass
NVNT	ac20	5320	Ant2	20	-38.42	-25	Pass
NVNT	ac20	5320	Ant2	40	-53.65	-40	Pass
NVNT	ac40	5270	Ant1	-40	-37.64	-25	Pass
NVNT	ac40	5270	Ant1	-80	-49.3	-40	Pass
NVNT	ac40	5270	Ant1	40	-38.21	-25	Pass
NVNT	ac40	5270	Ant1	80	-47.68	-40	Pass
NVNT	ac40	5310	Ant1	-40	-38.31	-25	Pass
NVNT	ac40	5310	Ant1	-80	-49.93	-40	Pass
NVNT	ac40	5310	Ant1	40	-38.63	-25	Pass
NVNT	ac40	5310	Ant1	80	-48.6	-40	Pass
NVNT	ac40	5270	Ant2	-40	-37.29	-25	Pass
NVNT	ac40	5270	Ant2	-80	-52.29	-40	Pass
NVNT	ac40	5270	Ant2	40	-37.58	-25	Pass
NVNT	ac40	5270	Ant2	80	-50.63	-40	Pass
NVNT	ac40	5310	Ant2	-40	-38.99	-25	Pass
NVNT	ac40	5310	Ant2	-80	-53.04	-40	Pass
NVNT	ac40	5310	Ant2	40	-37.55	-25	Pass
NVNT	ac40	5310	Ant2	80	-51.83	-40	Pass
NVNT	ac80	5290	Ant1	-80	-40.16	-25	Pass
NVNT	ac80	5290	Ant1	-160	-50.06	-40	Pass
NVNT	ac80	5290	Ant1	80	-40.39	-25	Pass
NVNT	ac80	5290	Ant1	160	-48.27	-40	Pass
NVNT	ac80	5290	Ant2	-80	-39.92	-25	Pass
NVNT	ac80	5290	Ant2	-160	-55.2	-40	Pass
NVNT	ac80	5290	Ant2	80	-38.78	-25	Pass
NVNT	ac80	5290	Ant2	160	-53.88	-40	Pass
NVNT	n20	5260	Ant1	-20	-40.71	-25	Pass
NVNT	n20	5260	Ant1	-40	-51.79	-40	Pass
NVNT	n20	5260	Ant1	20	-41.98	-25	Pass
NVNT	n20	5260	Ant1	40	-50.86	-40	Pass
NVNT	n20	5280	Ant1	-20	-40.54	-25	Pass
NVNT	n20	5280	Ant1	-40	-52.06	-40	Pass
NVNT	n20	5280	Ant1	20	-41.89	-25	Pass
NVNT	n20	5280	Ant1	40	-51.28	-40	Pass
NVNT	n20	5320	Ant1	-20	-40.88	-25	Pass
NVNT	n20	5320	Ant1	-40	-52.59	-40	Pass

NVNT	n20	5320	Ant1	20	-41.95	-25	Pass
NVNT	n20	5320	Ant1	40	-51.61	-40	Pass
NVNT	n20	5260	Ant2	-20	-38.89	-25	Pass
NVNT	n20	5260	Ant2	-40	-54.04	-40	Pass
NVNT	n20	5260	Ant2	20	-40.65	-25	Pass
NVNT	n20	5260	Ant2	40	-52.97	-40	Pass
NVNT	n20	5280	Ant2	-20	-39.64	-25	Pass
NVNT	n20	5280	Ant2	-40	-54.52	-40	Pass
NVNT	n20	5280	Ant2	20	-40.44	-25	Pass
NVNT	n20	5280	Ant2	40	-53.37	-40	Pass
NVNT	n20	5320	Ant2	-20	-39.56	-25	Pass
NVNT	n20	5320	Ant2	-40	-54.53	-40	Pass
NVNT	n20	5320	Ant2	20	-38.43	-25	Pass
NVNT	n20	5320	Ant2	40	-53.98	-40	Pass
NVNT	n40	5270	Ant1	-40	-36.99	-25	Pass
NVNT	n40	5270	Ant1	-80	-48.65	-40	Pass
NVNT	n40	5270	Ant1	40	-37.77	-25	Pass
NVNT	n40	5270	Ant1	80	-47.17	-40	Pass
NVNT	n40	5310	Ant1	-40	-37.67	-25	Pass
NVNT	n40	5310	Ant1	-80	-49.59	-40	Pass
NVNT	n40	5310	Ant1	40	-37.96	-25	Pass
NVNT	n40	5310	Ant1	80	-48.42	-40	Pass
NVNT	n40	5270	Ant2	-40	-36.53	-25	Pass
NVNT	n40	5270	Ant2	-80	-51.74	-40	Pass
NVNT	n40	5270	Ant2	40	-36.38	-25	Pass
NVNT	n40	5270	Ant2	80	-50.03	-40	Pass
NVNT	n40	5310	Ant2	-40	-36.84	-25	Pass
NVNT	n40	5310	Ant2	-80	-52.68	-40	Pass
NVNT	n40	5310	Ant2	40	-35.26	-25	Pass
NVNT	n40	5310	Ant2	80	-51.23	-40	Pass


ACEP NVNT a 5260MHz Ant1

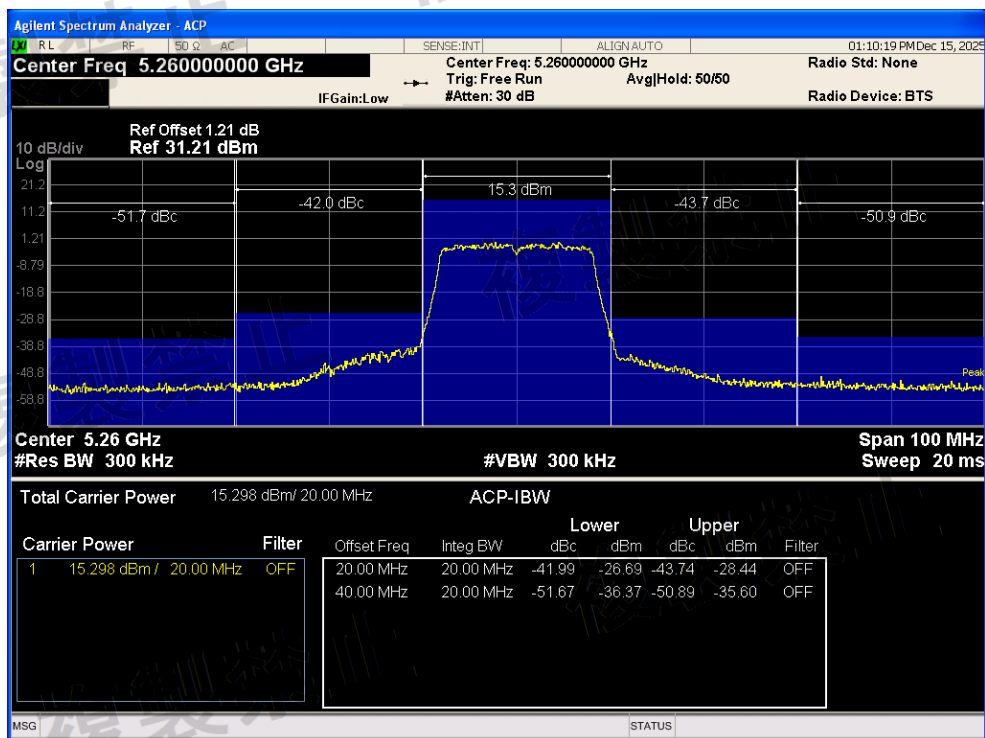


ACEP NVNT a 5280MHz Ant1

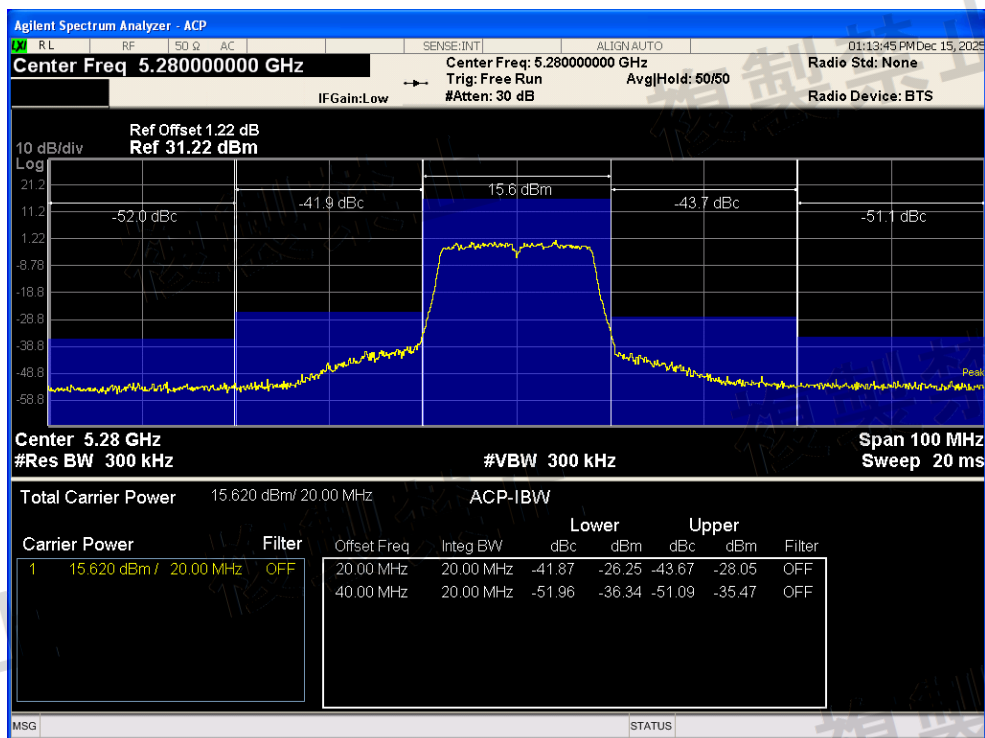


ACEP NVNT a 5320MHz Ant1

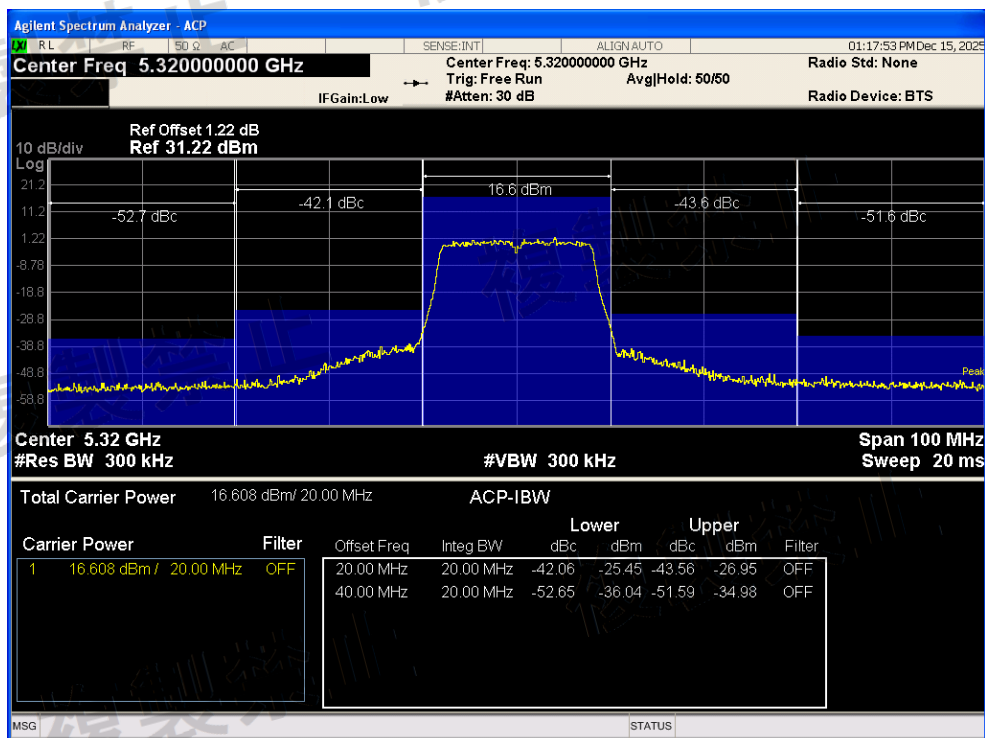


ACEP NVNT a 5260MHz Ant2

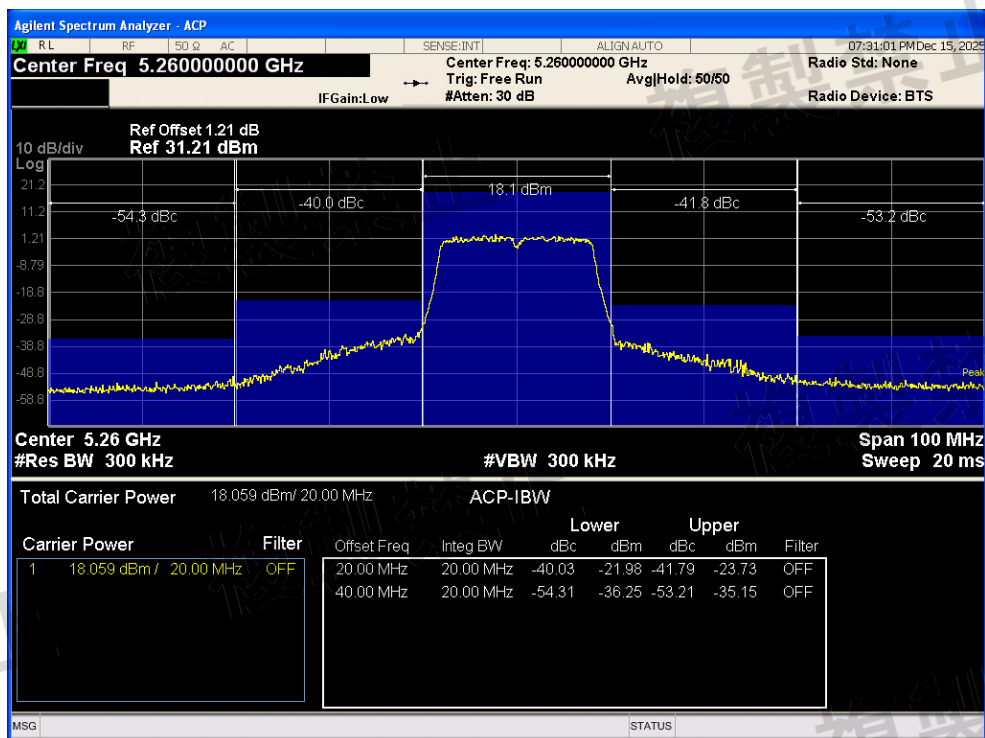


ACEP NVNT a 5280MHz Ant2

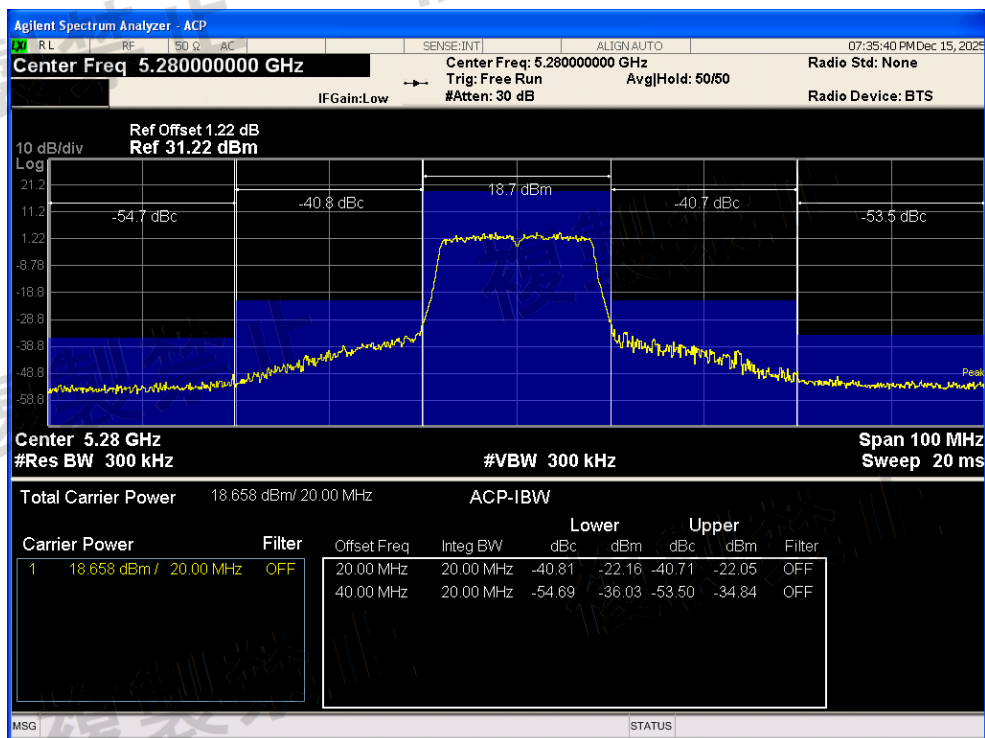


ACEP NVNT a 5320MHz Ant2

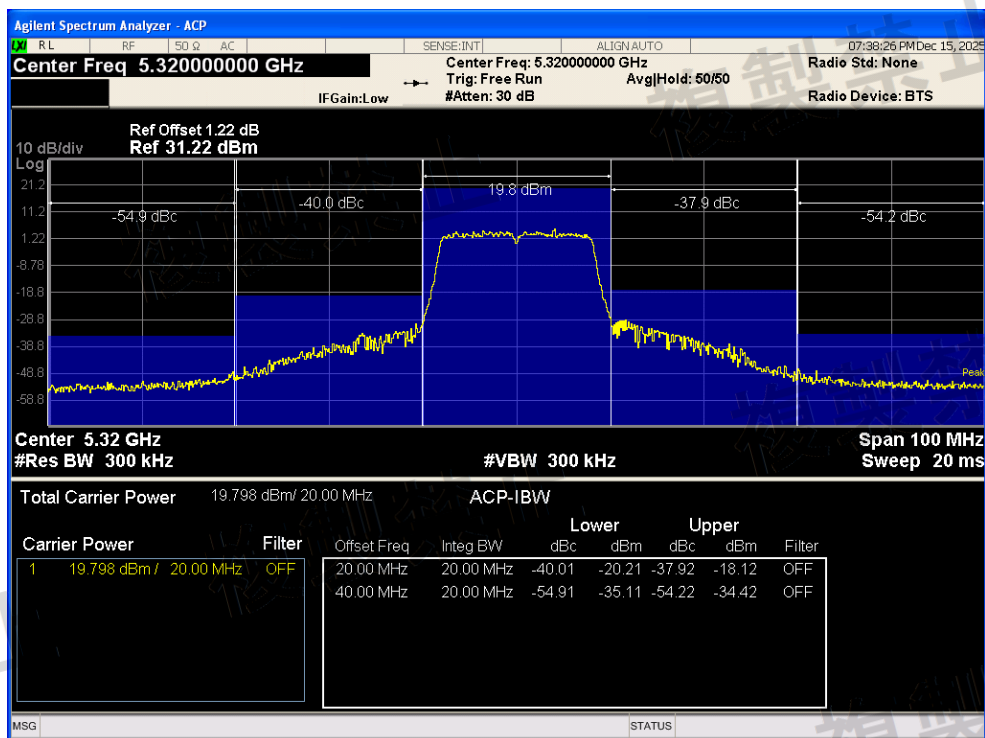


ACEP NVNT ac20 5260MHz Ant1

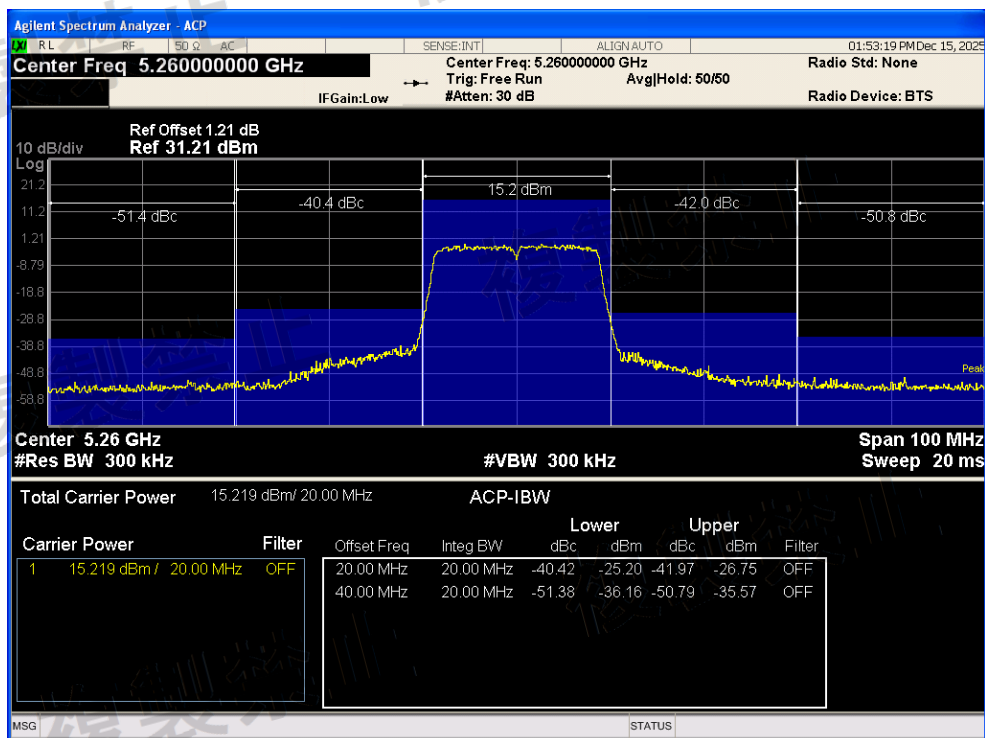


ACEP NVNT ac20 5280MHz Ant1

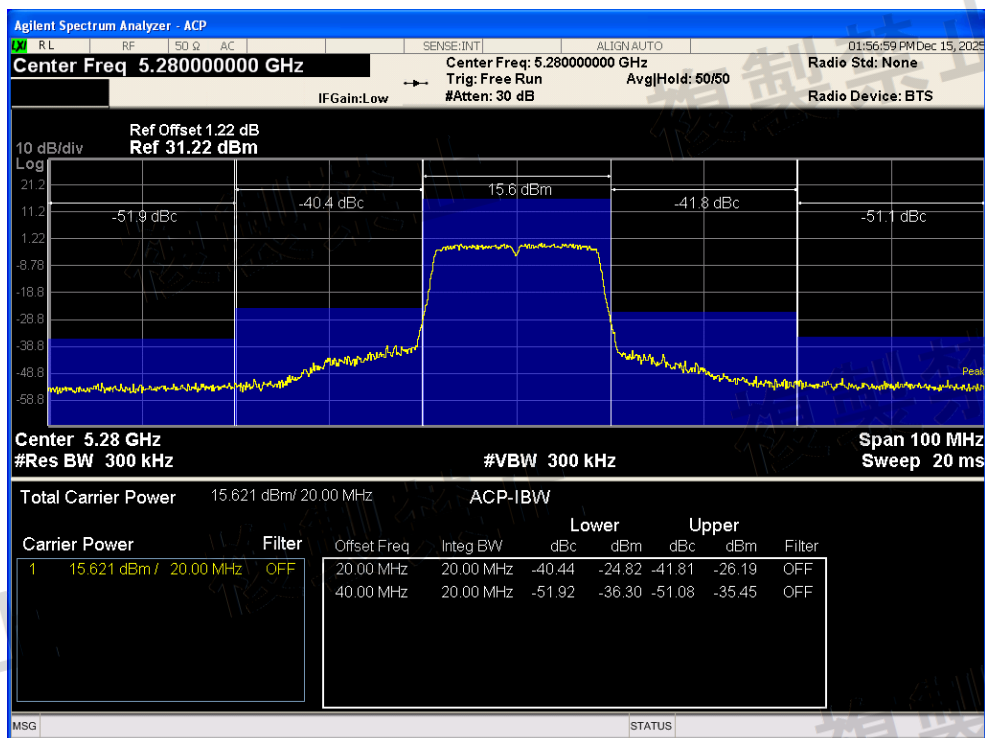


ACEP NVNT ac20 5320MHz Ant1

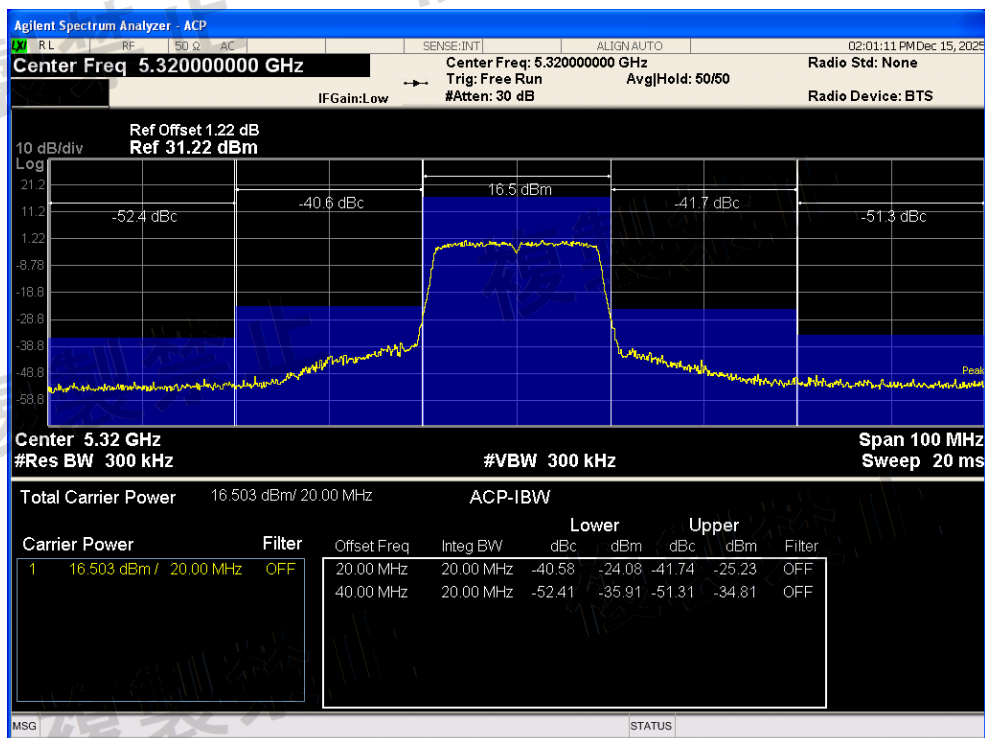


ACEP NVNT ac20 5260MHz Ant2

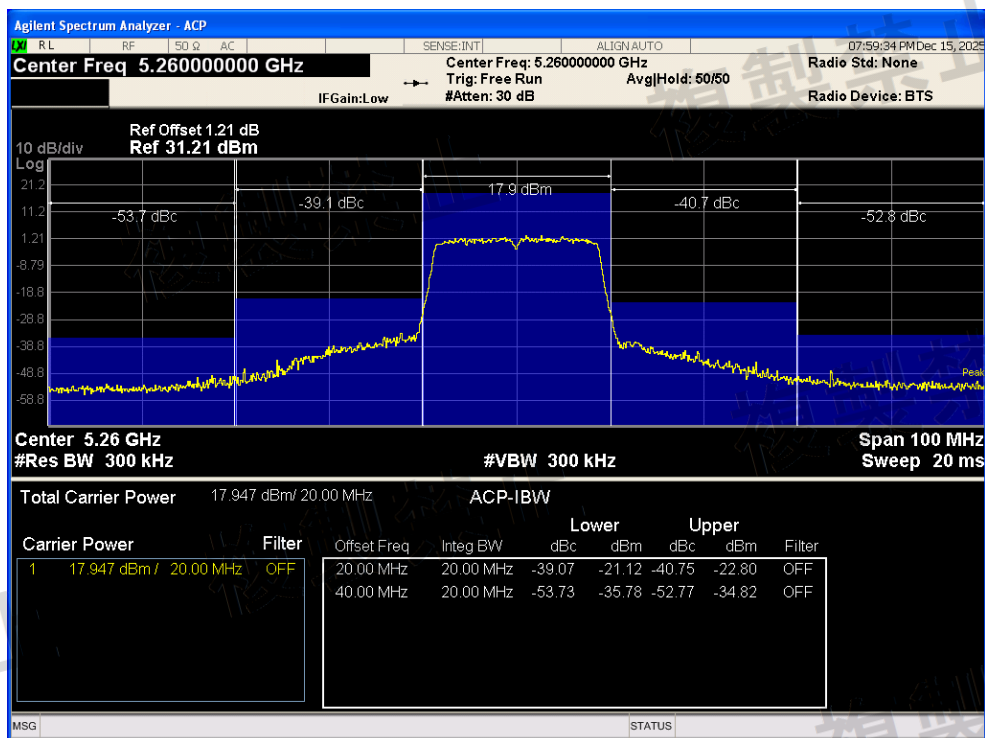


ACEP NVNT ac20 5280MHz Ant2

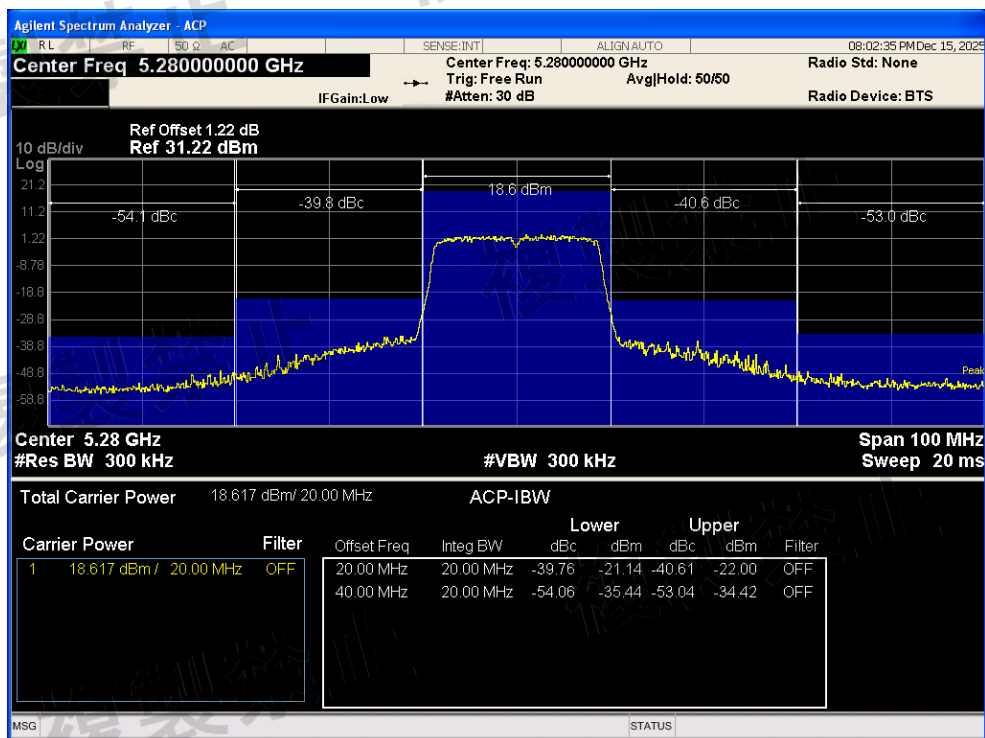


ACEP NVNT ac20 5320MHz Ant2

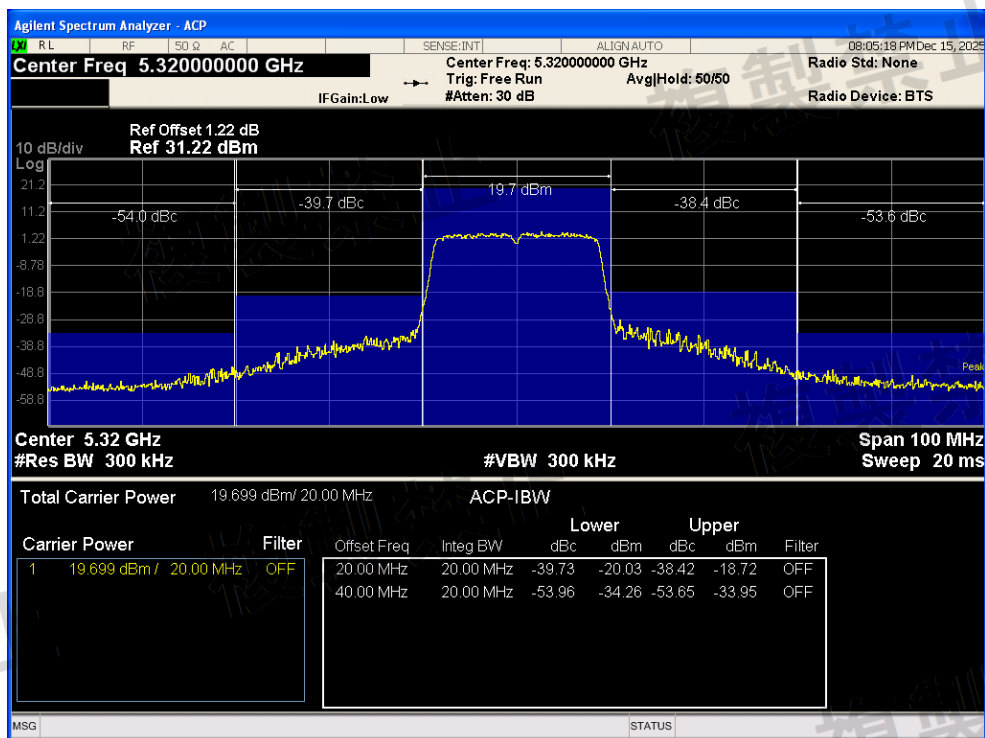


ACEP NVNT ac40 5270MHz Ant1

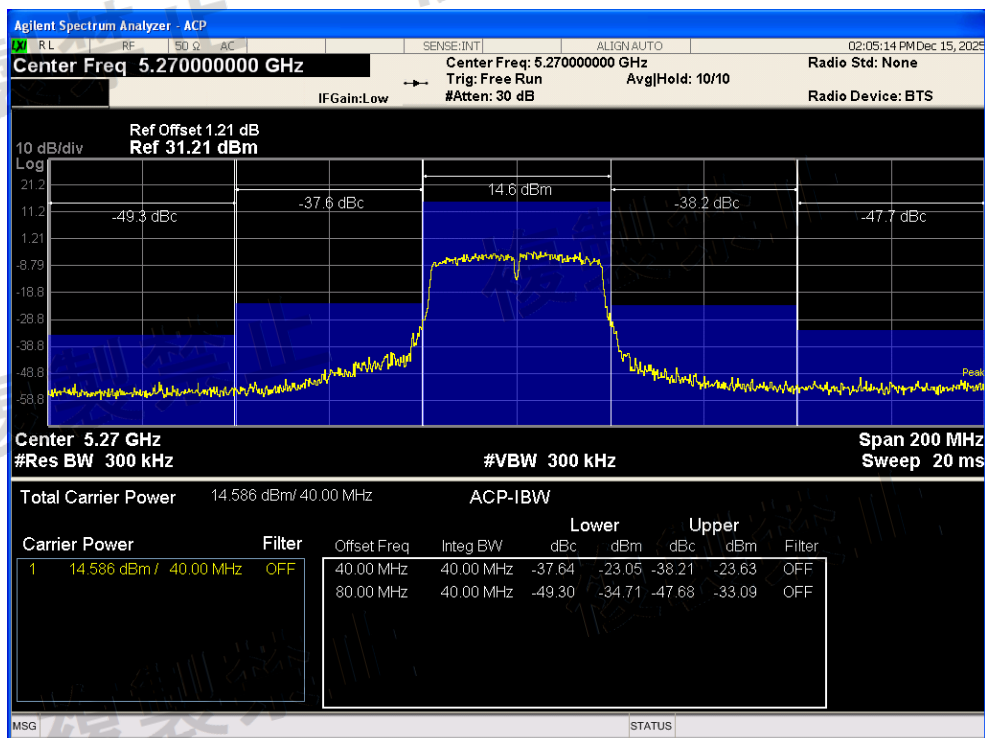


ACEP NVNT ac40 5310MHz Ant1

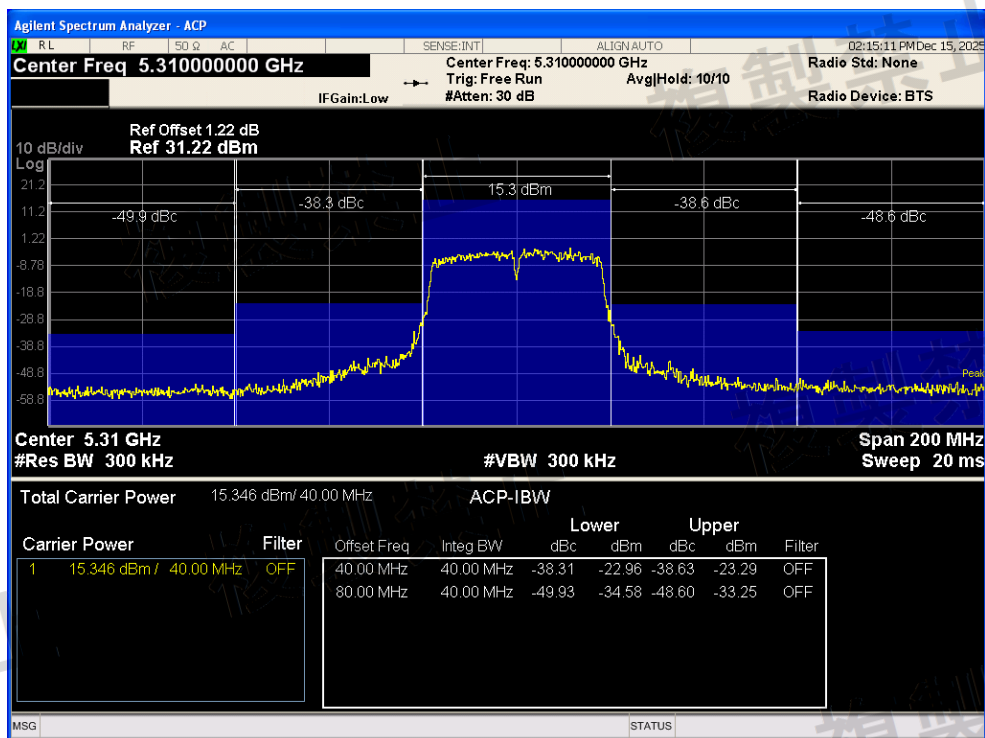


ACEP NVNT ac40 5270MHz Ant2

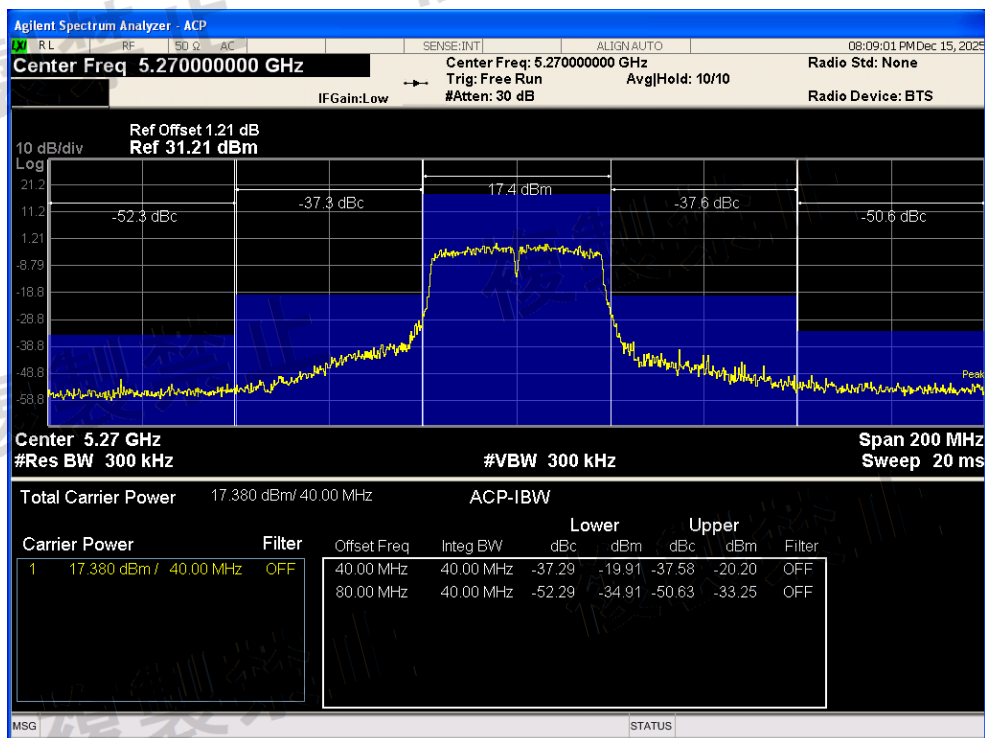


ACEP NVNT ac40 5310MHz Ant2

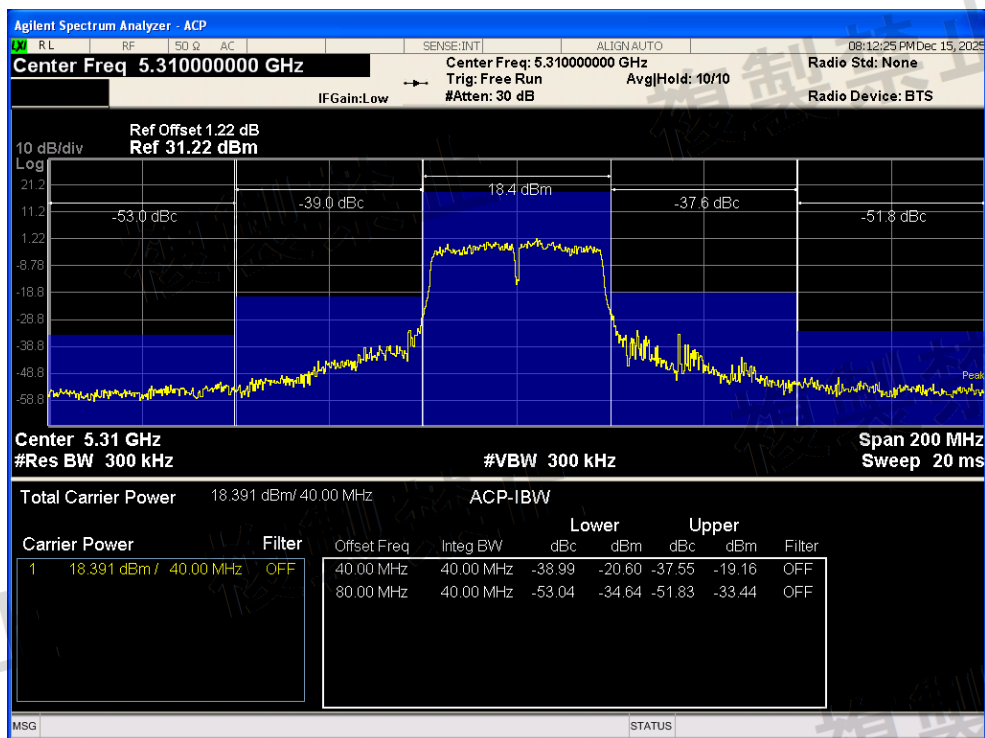


ACEP NVNT ac80 5290MHz Ant1

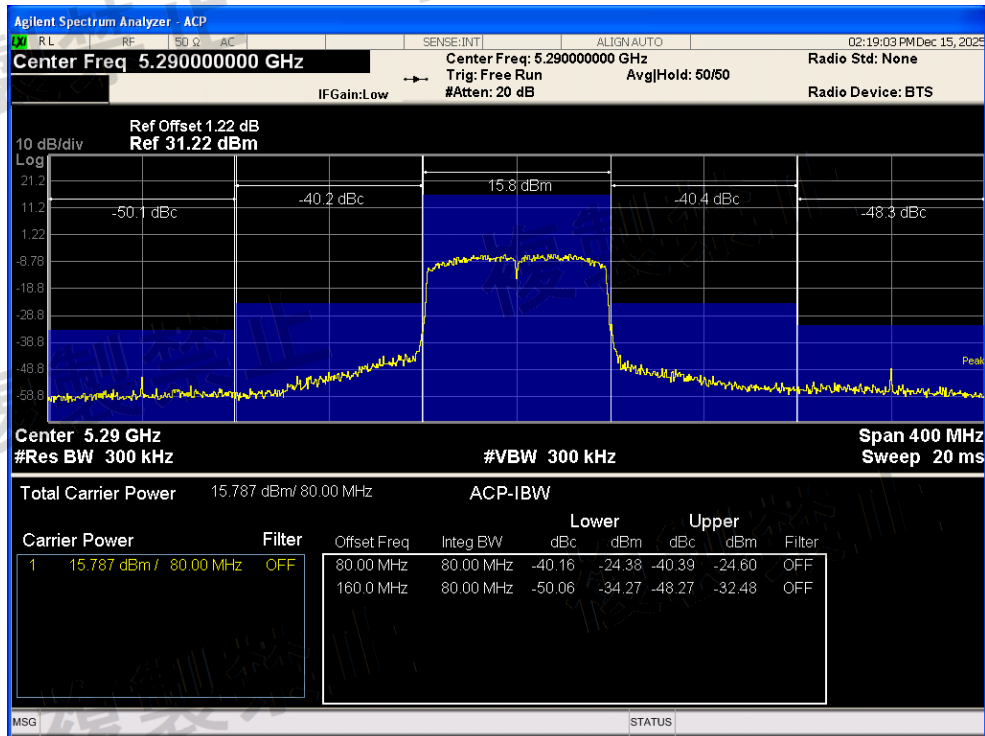


ACEP NVNT ac80 5290MHz Ant2

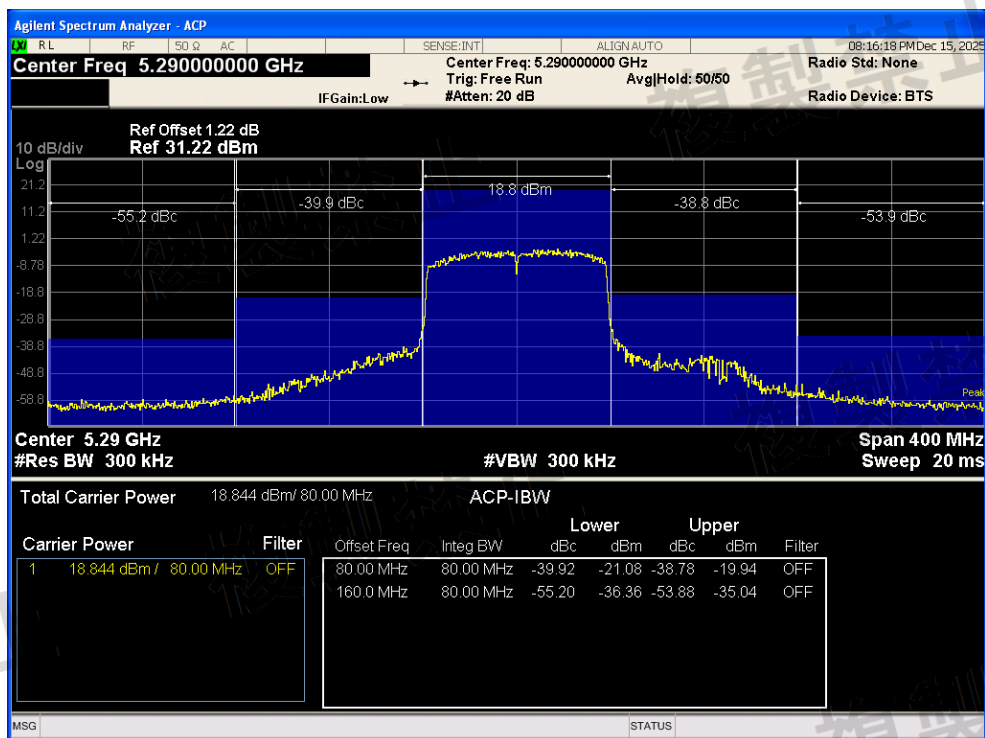


ACEP NVNT n20 5260MHz Ant1

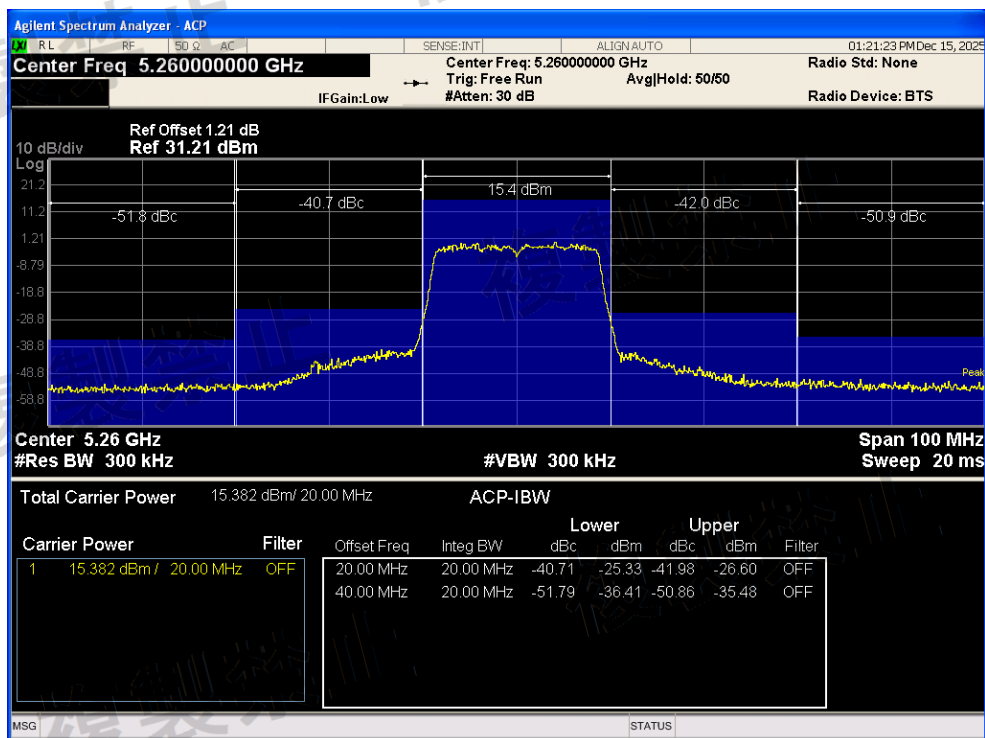


ACEP NVNT n20 5280MHz Ant1

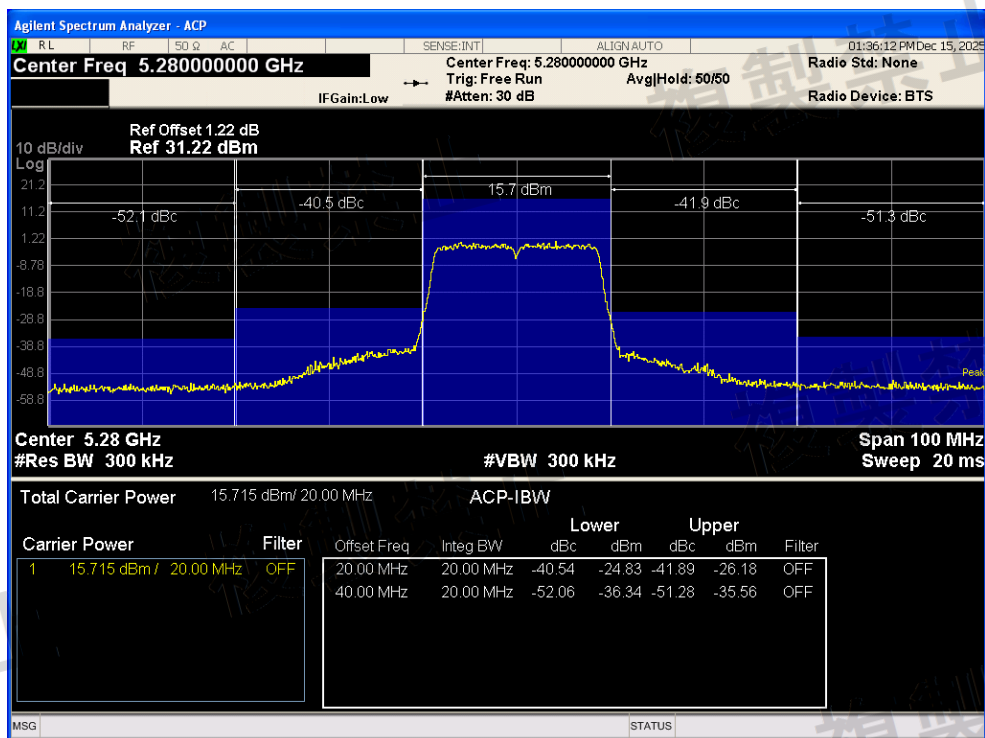


ACEP NVNT n20 5320MHz Ant1

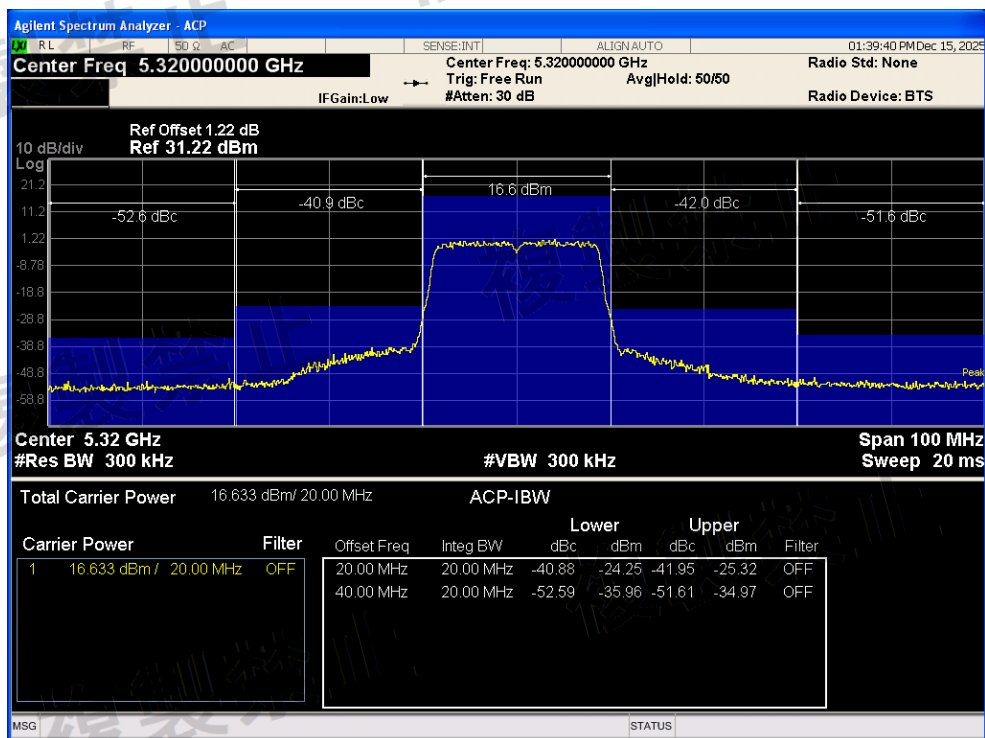


ACEP NVNT n20 5260MHz Ant2

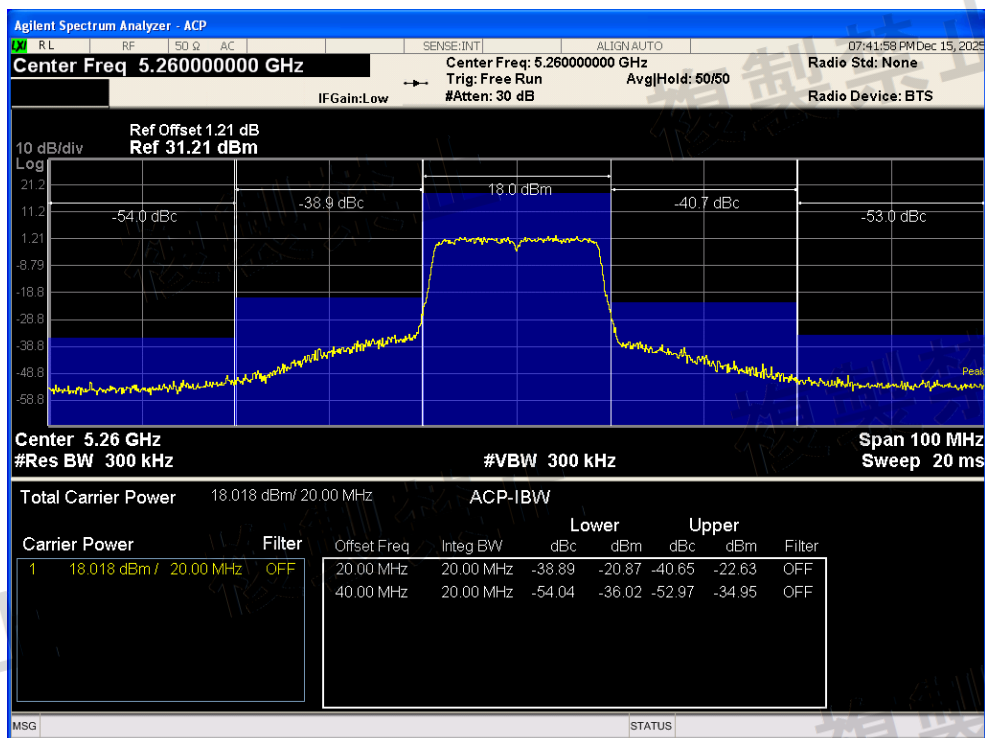


ACEP NVNT n20 5280MHz Ant2

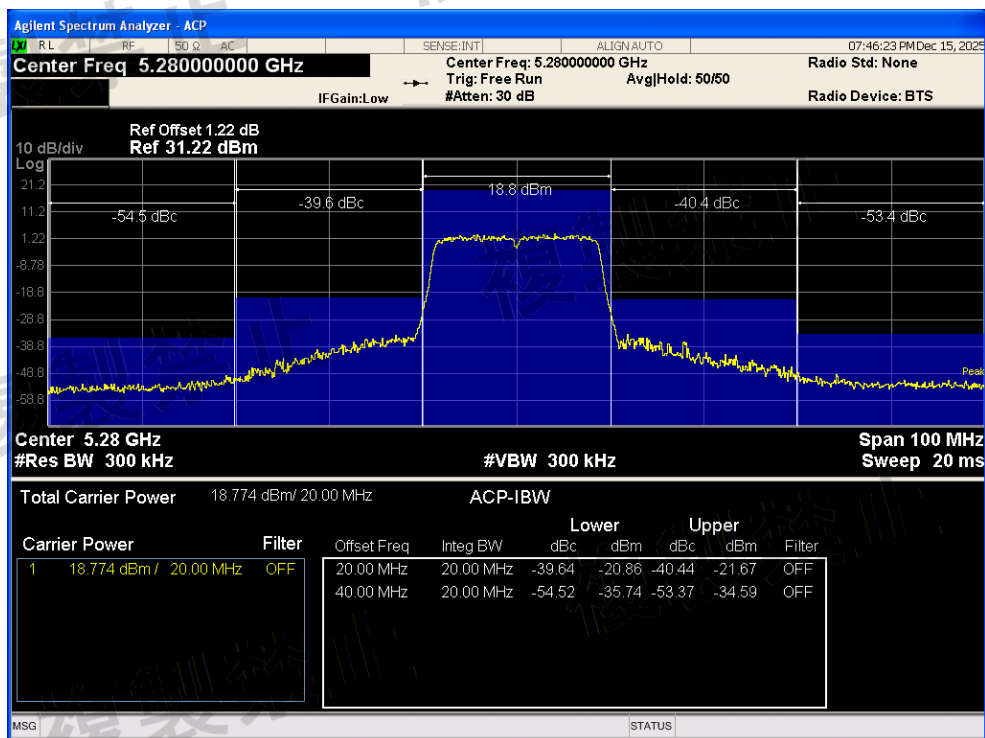


ACEP NVNT n20 5320MHz Ant2

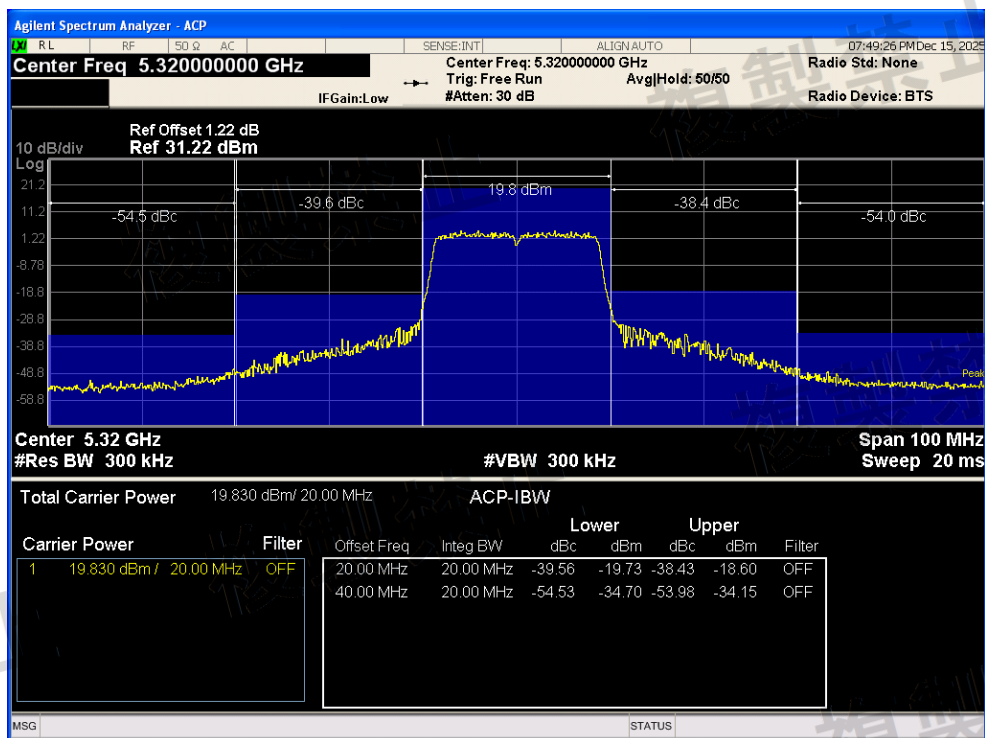


ACEP NVNT n40 5270MHz Ant1

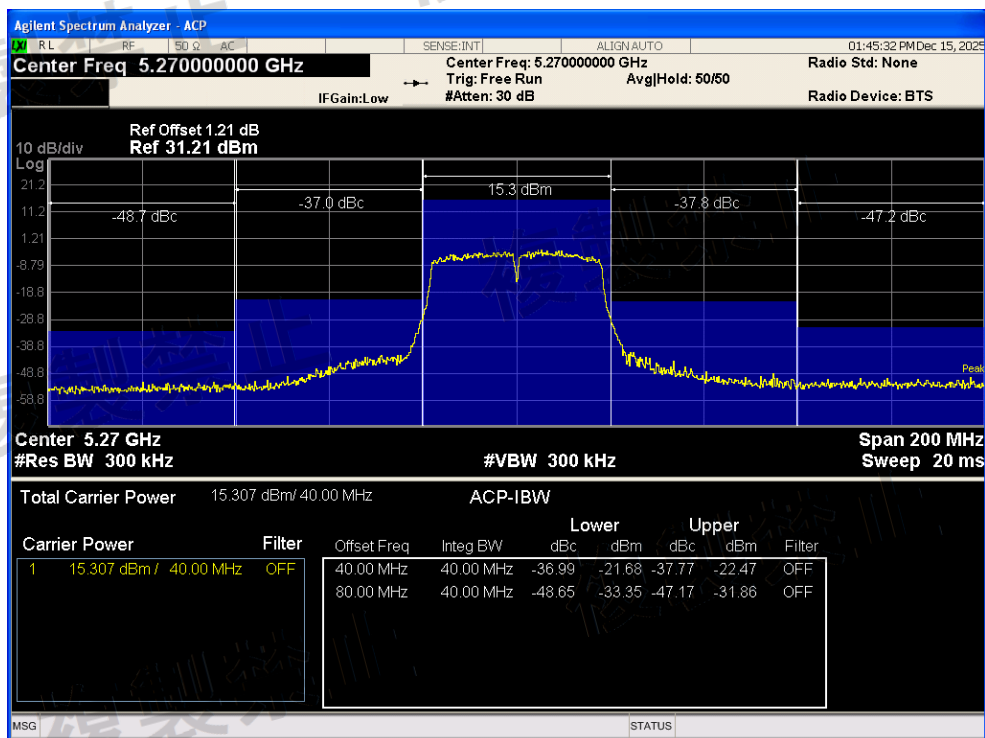


ACEP NVNT n40 5310MHz Ant1

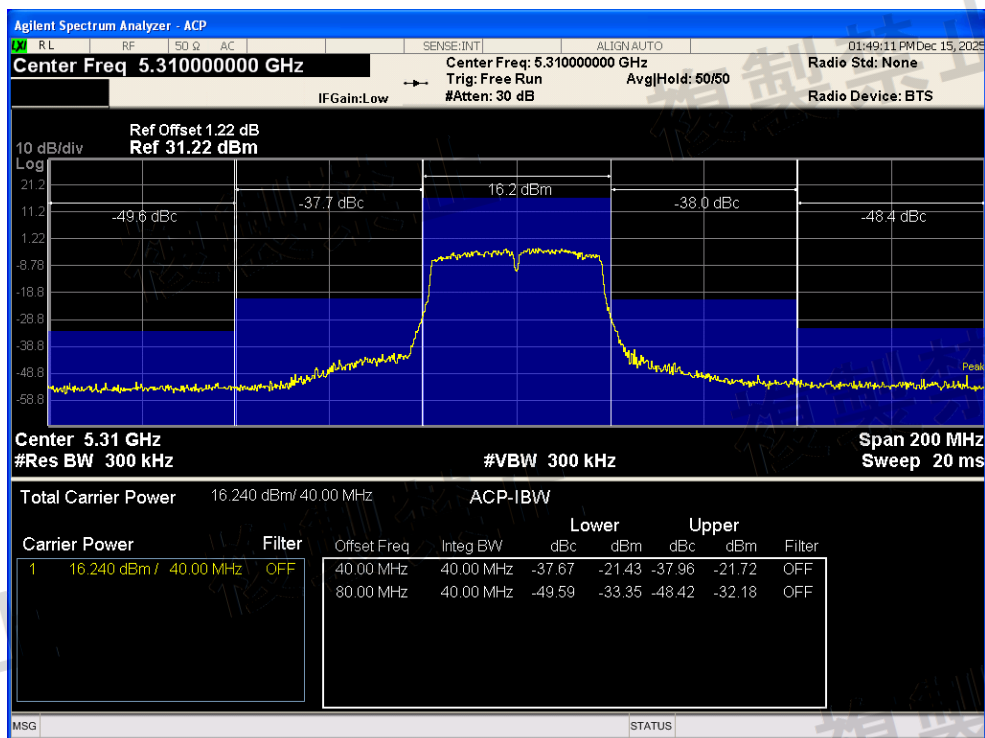

ACEP NVNT n40 5270MHz Ant2

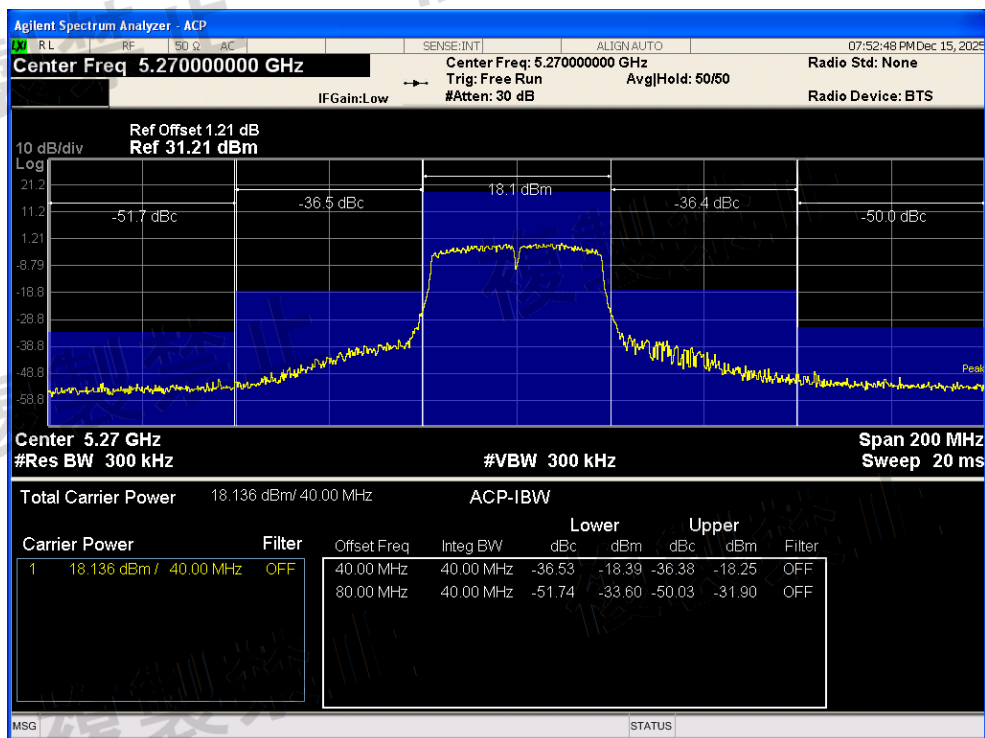


ACEP NVNT n40 5310MHz Ant2

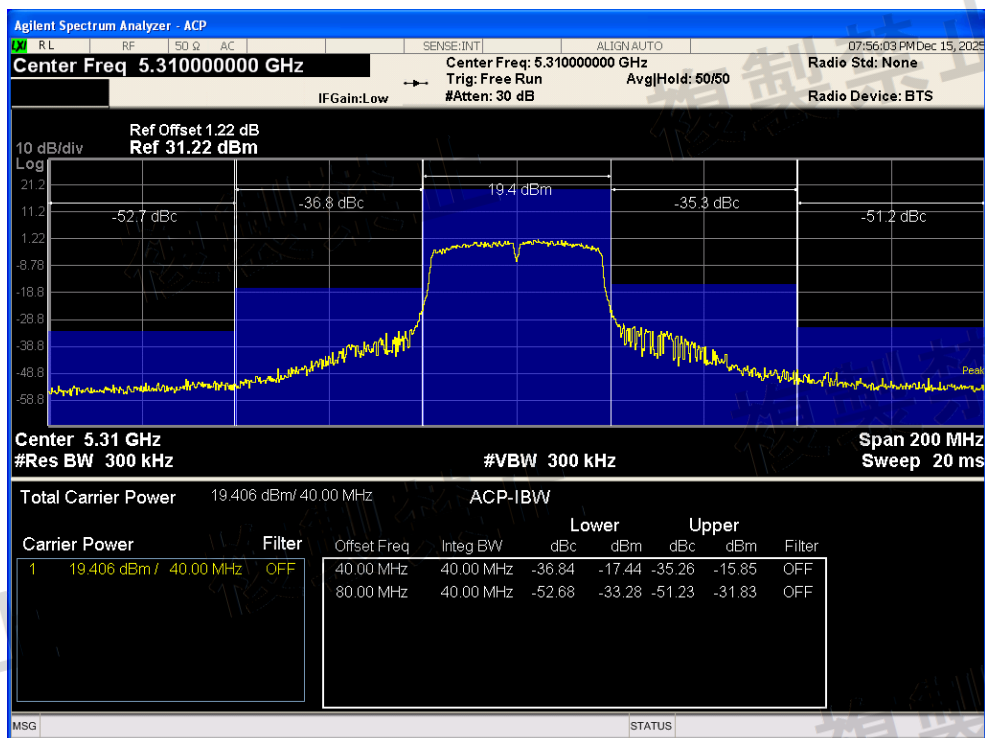


Frequency Error

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	user	5260	Ant1	5260	0	20	Pass
NVNT	user	5270	Ant1	5269.98	-3.8	20	Pass
NVNT	user	5280	Ant1	5280	0	20	Pass
NVNT	user	5290	Ant1	5290	0	20	Pass
NVNT	user	5310	Ant1	5309.98	-3.77	20	Pass
NVNT	user	5320	Ant1	5320.02	3.76	20	Pass
NVNT	user	5260	Ant2	5259.9	-19.01	20	Pass
NVNT	user	5270	Ant2	5269.98	-3.8	20	Pass
NVNT	user	5280	Ant2	5280.02	3.79	20	Pass
NVNT	user	5290	Ant2	5290	0	20	Pass
NVNT	user	5310	Ant2	5309.98	-3.77	20	Pass
NVNT	user	5320	Ant2	5319.93	-13.16	20	Pass


Freq. Error NVNT user 5260MHz Ant1

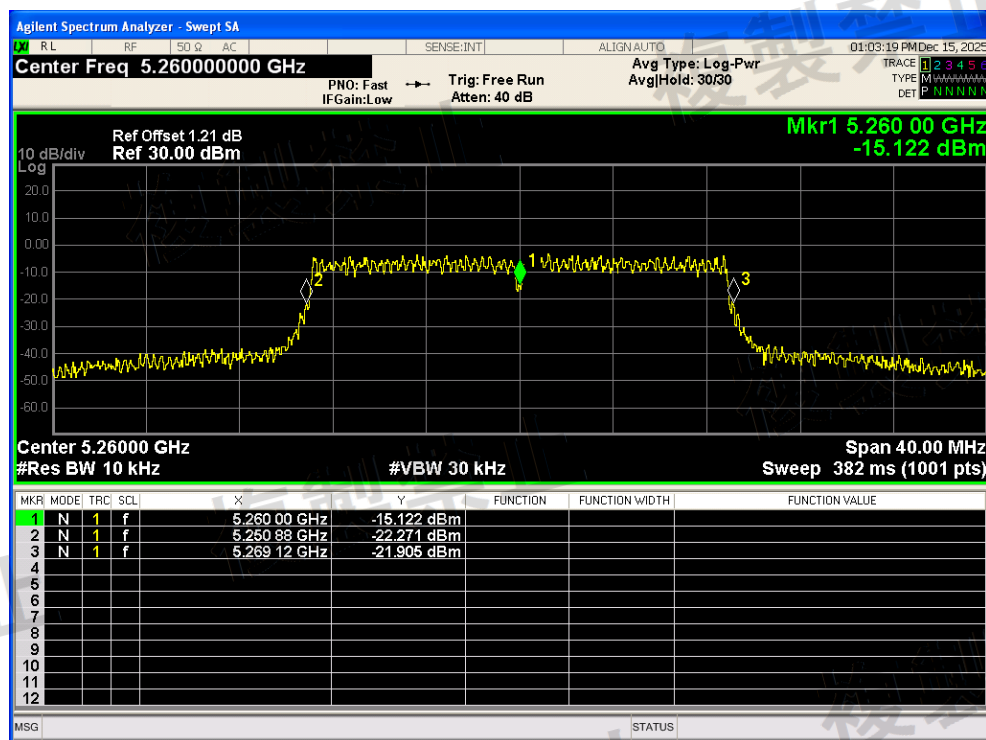


Freq. Error NVNT user 5270MHz Ant1

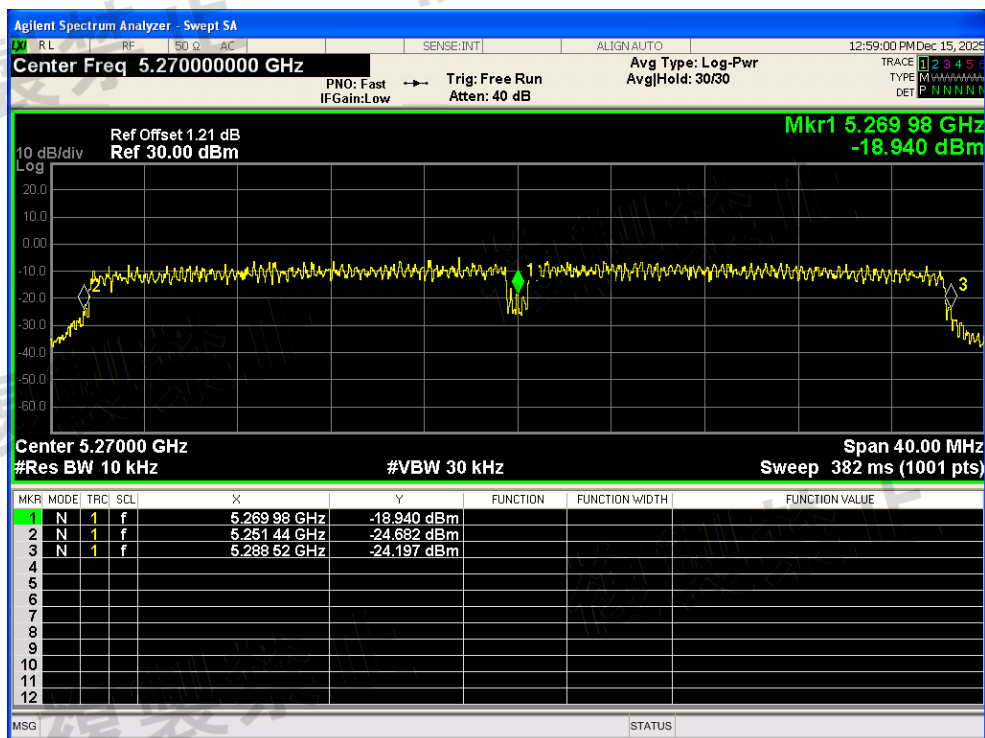


Freq. Error NVNT user 5280MHz Ant1

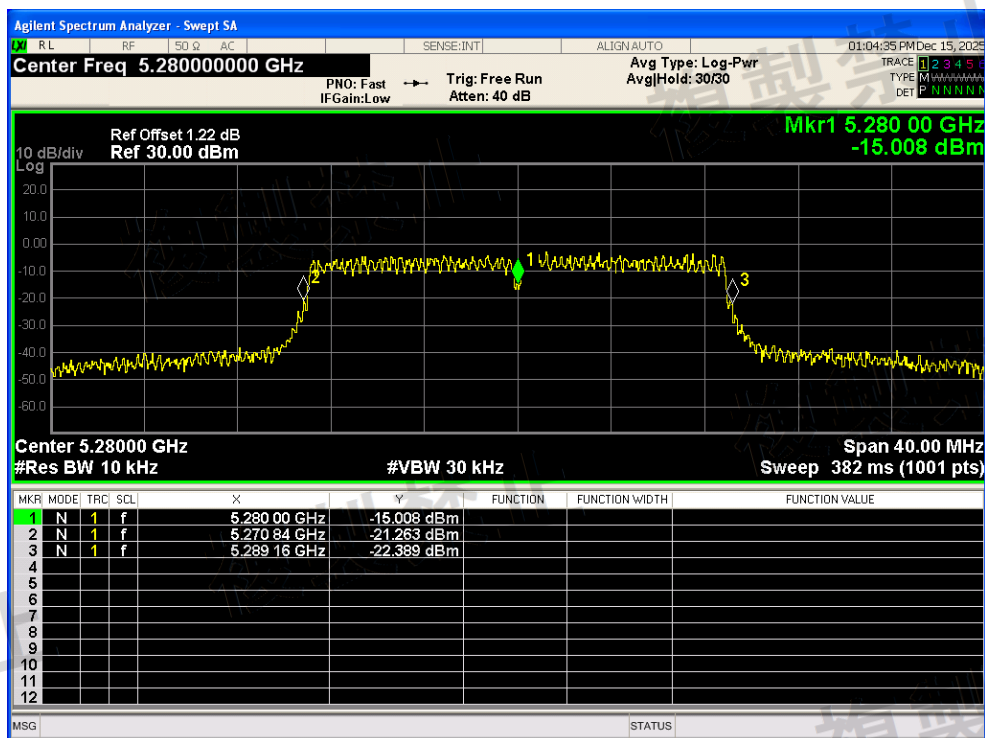


Freq. Error NVNT user 5290MHz Ant1

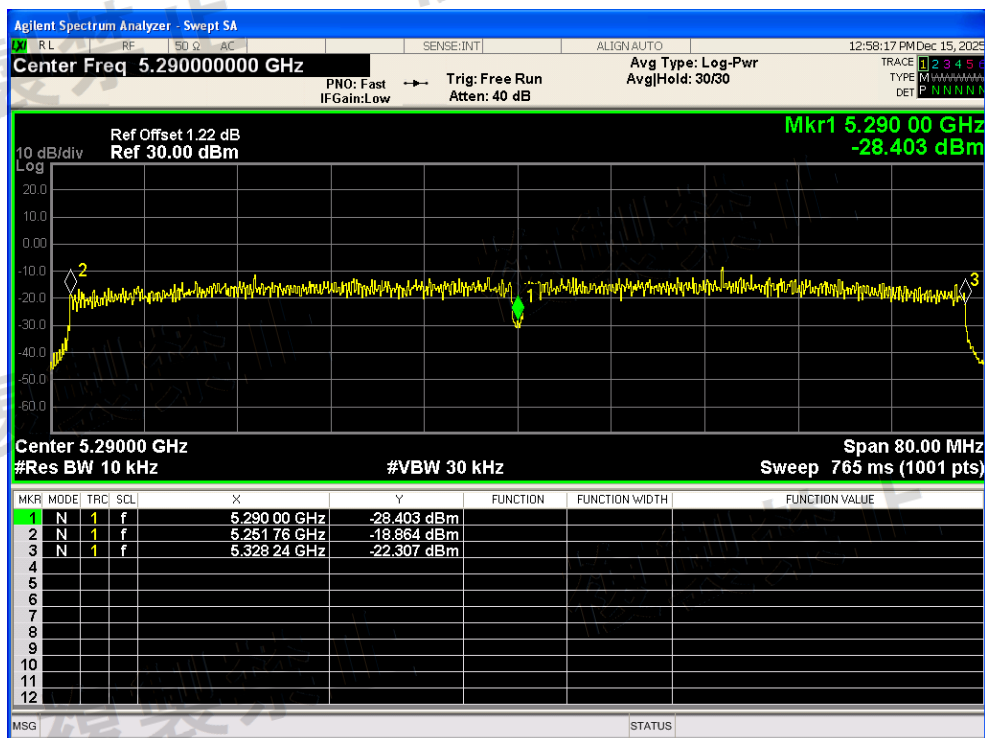


Freq. Error NVNT user 5310MHz Ant1

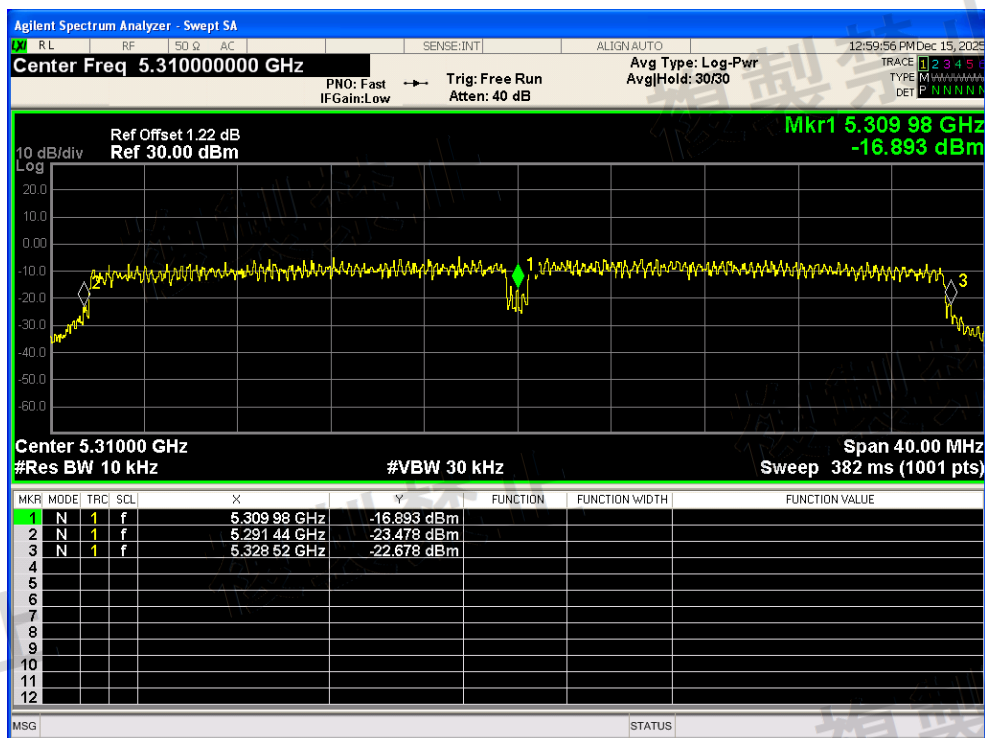


Freq. Error NVNT user 5320MHz Ant1

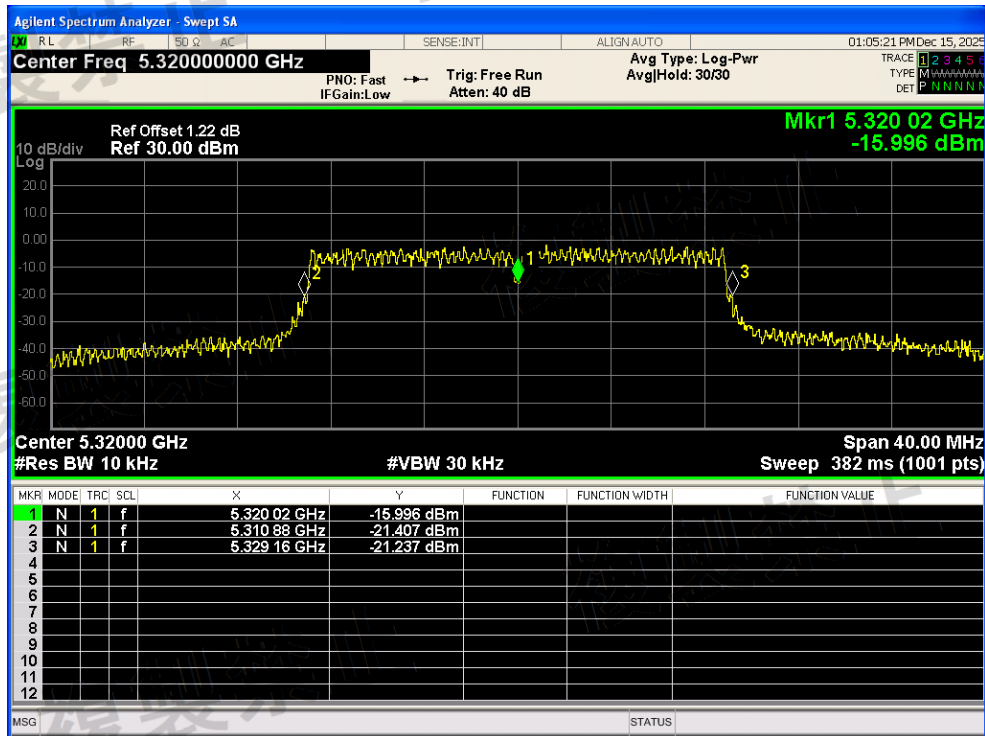


Freq. Error NVNT user 5260MHz Ant2

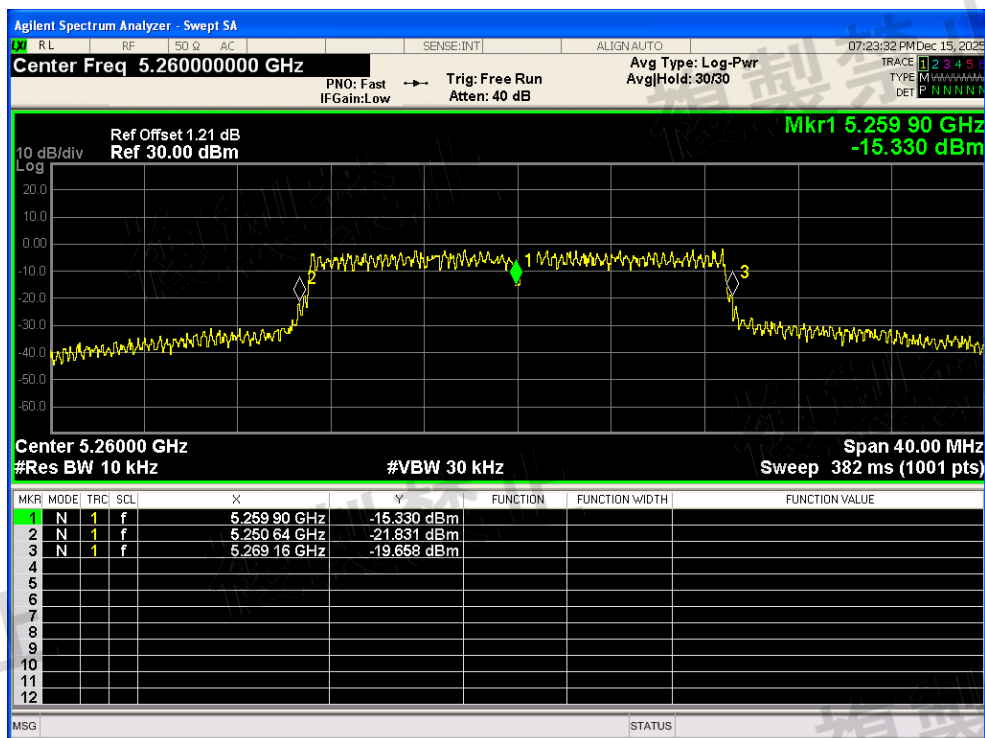


Freq. Error NVNT user 5270MHz Ant2

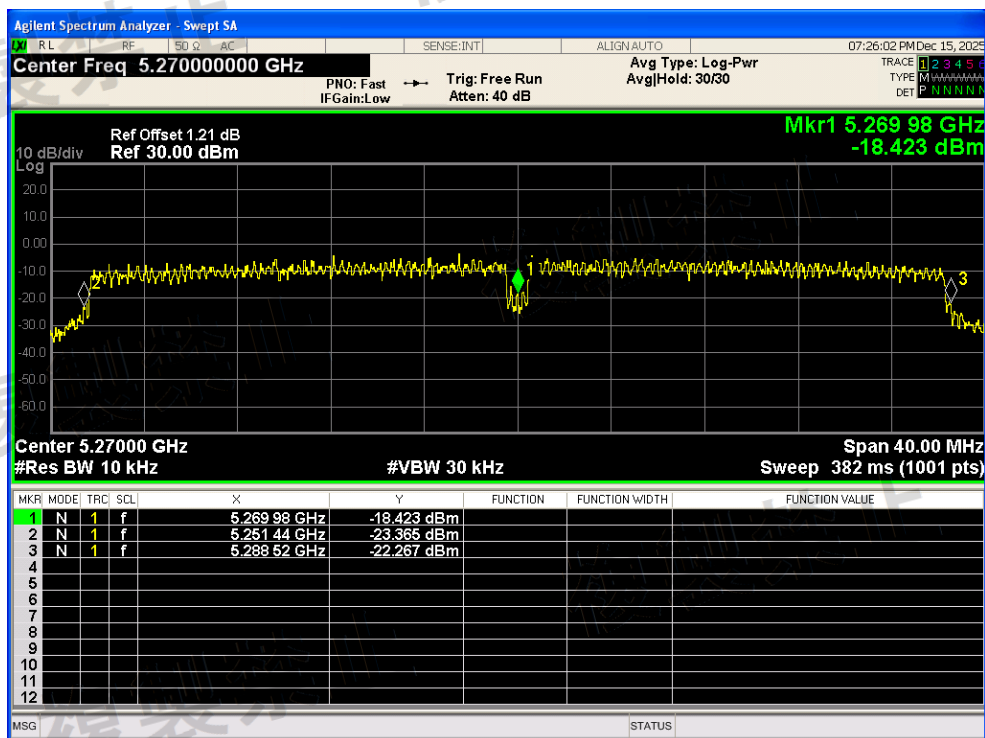


Freq. Error NVNT user 5280MHz Ant2

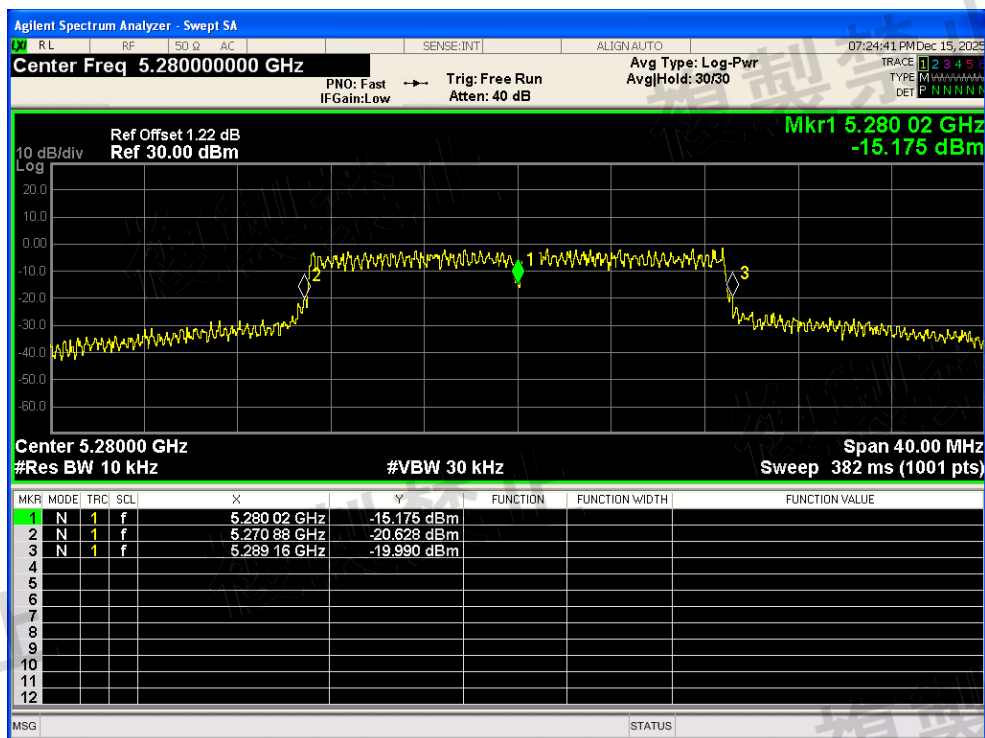


Freq. Error NVNT user 5290MHz Ant2

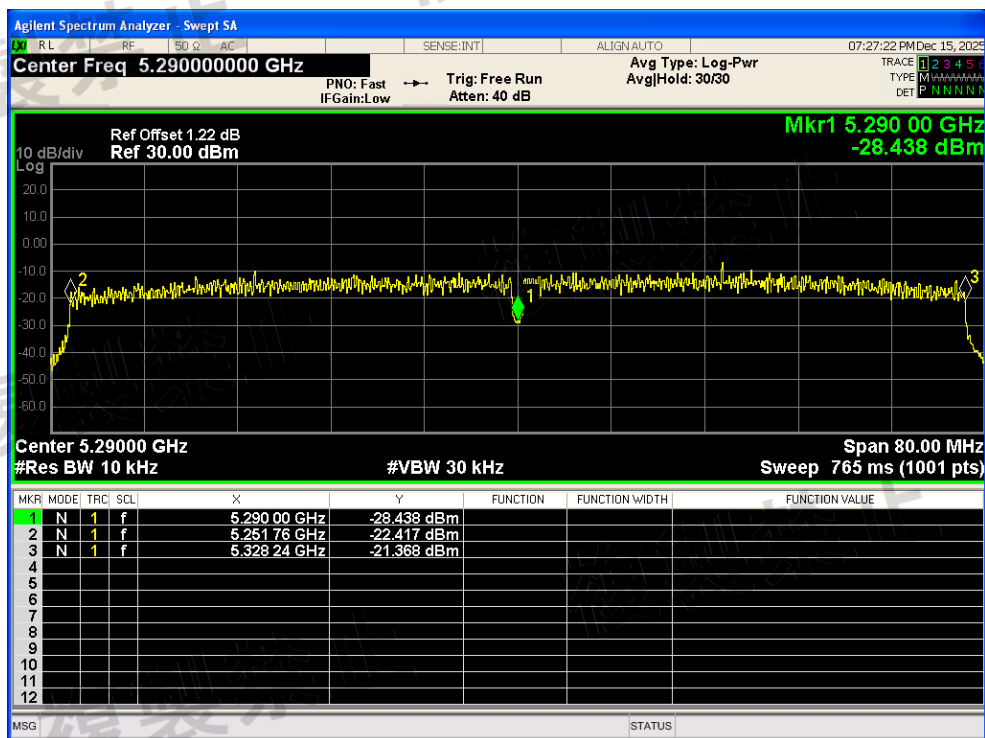

Freq. Error NVNT user 5310MHz Ant2

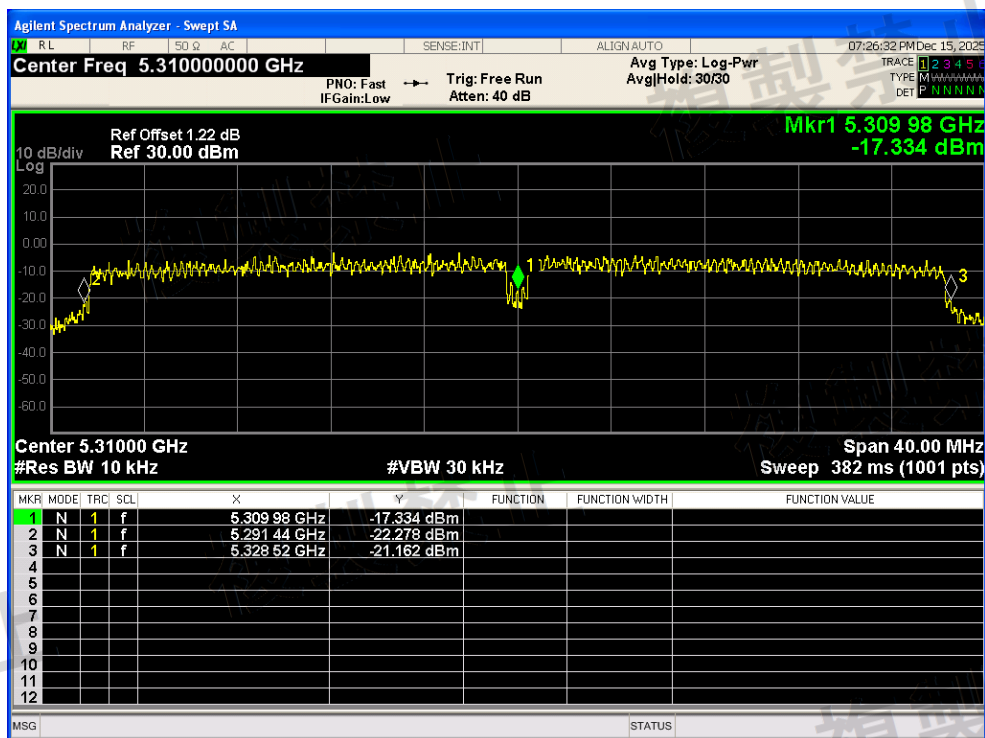

Freq. Error NVNT user 5320MHz Ant2

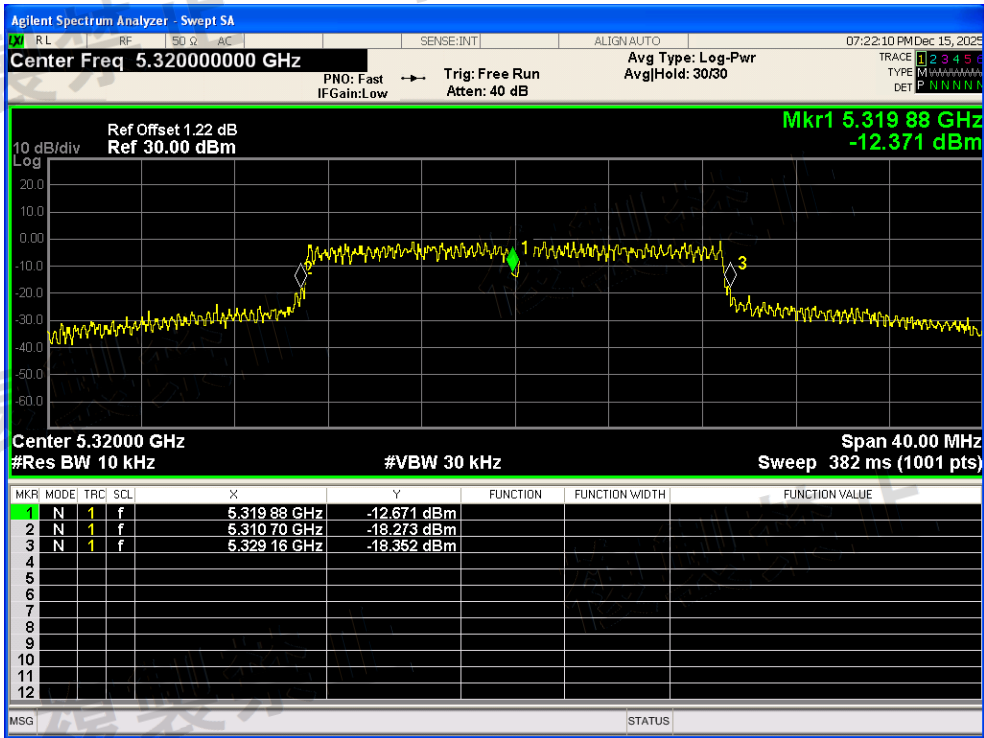


WIFI 5.6G

Antenna and EIRP Power


Condition	Mode	Frequency (MHz)	Antenna	Antenna Power (mW/MHz)	Total Antenna Power (mW/MHz)	Declared Power (mW/MHz)	Antenna Power Limit (mW/MHz)	Tolerance (%)	Upper Limit (%)	Lower Limit (%)	Verdict
NVNT	a	5500	Ant1	0.699	/	0.5	10	39.84	50	-50	Pass
NVNT	a	5600	Ant1	0.463	/	0.5	10	-7.31	50	-50	Pass
NVNT	a	5700	Ant1	0.511	/	0.5	10	2.22	50	-50	Pass
NVNT	a	5500	Ant2	0.444	/	0.5	10	-11.2	50	-50	Pass
NVNT	a	5600	Ant2	0.522	/	0.5	10	4.46	50	-50	Pass
NVNT	a	5700	Ant2	0.431	/	0.5	10	-13.74	50	-50	Pass
NVNT	ac20	5500	Ant1	0.642	1.101	1.2	10	-8.25	50	-50	Pass
NVNT	ac20	5500	Ant2	0.459			10		50	-50	Pass
NVNT	ac20	5600	Ant1	0.427	0.953	1.2	10	-20.58	50	-50	Pass
NVNT	ac20	5600	Ant2	0.526			10		50	-50	Pass
NVNT	ac20	5700	Ant1	0.476	1.201	1.2	10	0.08	50	-50	Pass
NVNT	ac20	5700	Ant2	0.725			10		50	-50	Pass
NVNT	ac40	5510	Ant1	0.272	0.474	0.5	5	-5.20	50	-50	Pass
NVNT	ac40	5510	Ant2	0.202			5		50	-50	Pass
NVNT	ac40	5590	Ant1	0.236	0.442	0.5	5	-11.60	50	-50	Pass
NVNT	ac40	5590	Ant2	0.206			5		50	-50	Pass
NVNT	ac40	5670	Ant1	0.183	0.392	0.5	5	-21.60	50	-50	Pass
NVNT	ac40	5670	Ant2	0.209			5		50	-50	Pass
NVNT	ac80	5530	Ant1	0.095	0.154	0.2	2.5	-23.00	50	-50	Pass
NVNT	ac80	5530	Ant2	0.059			2.5		50	-50	Pass
NVNT	ac80	5610	Ant1	0.065	0.131	0.2	2.5	-34.50	50	-50	Pass
NVNT	ac80	5610	Ant2	0.066			2.5		50	-50	Pass
NVNT	n20	5500	Ant1	0.646	1.1	1.2	10	-8.33	50	-50	Pass
NVNT	n20	5500	Ant2	0.454			10		50	-50	Pass
NVNT	n20	5600	Ant1	0.412	0.926	1.2	10	-22.83	50	-50	Pass
NVNT	n20	5600	Ant2	0.514			10		47	-50	Pass
NVNT	n20	5700	Ant1	0.48	1.2	1.2	10	0.00	50	-50	Pass
NVNT	n20	5700	Ant2	0.72			10		50	-50	Pass
NVNT	n40	5510	Ant1	0.271	0.464	0.5	5	-7.20	50	-50	Pass
NVNT	n40	5510	Ant2	0.193			5		50	-50	Pass
NVNT	n40	5590	Ant1	0.234	0.486	0.5	5	-2.80	50	-50	Pass
NVNT	n40	5590	Ant2	0.252			5		50	-50	Pass
NVNT	n40	5670	Ant2	0.18	0.48	0.5	5	-4.00	50	-50	Pass

NVNT	n40	5670	Ant1	0.3			5		50	-50	Pass
------	-----	------	------	-----	--	--	---	--	----	-----	------


Power NVNT a 5500MHz Ant1 Pre Scan

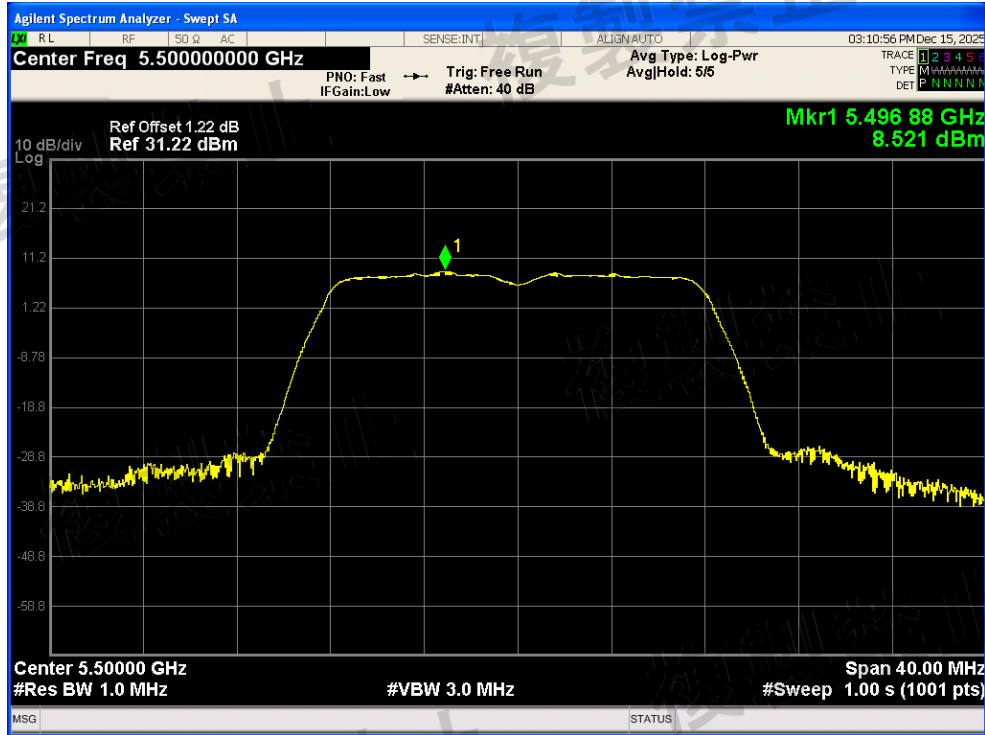


Power NVNT a 5500MHz Ant1 Zero Span

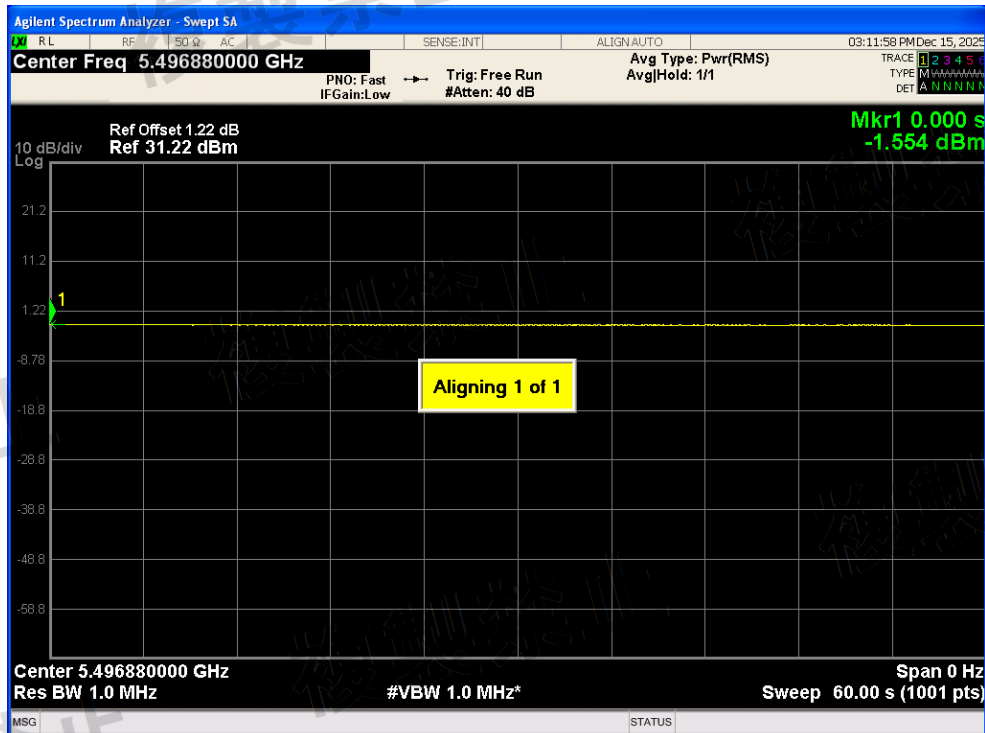


Power NVNT a 5600MHz Ant1 Pre Scan

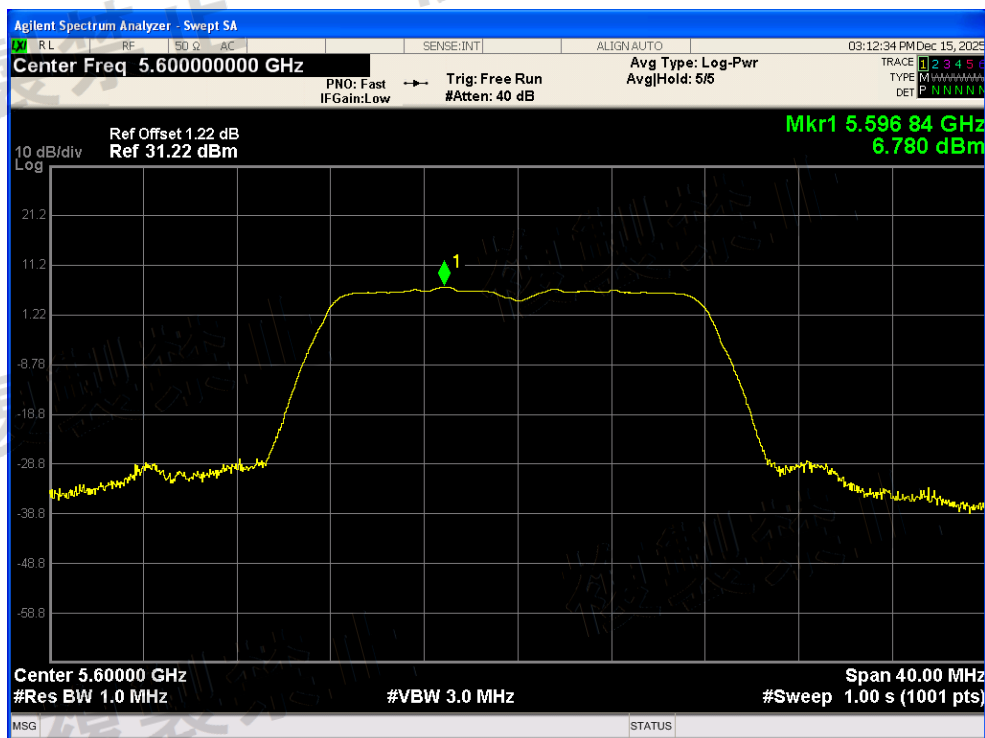


Power NVNT a 5600MHz Ant1 Zero Span

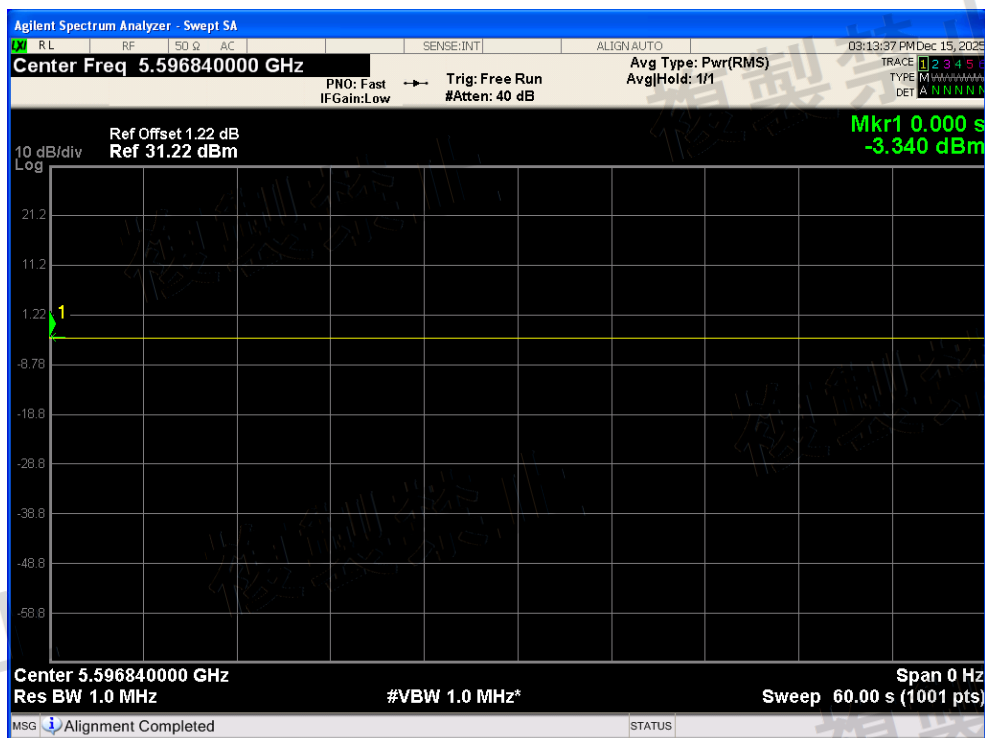


Power NVNT a 5700MHz Ant1 Pre Scan

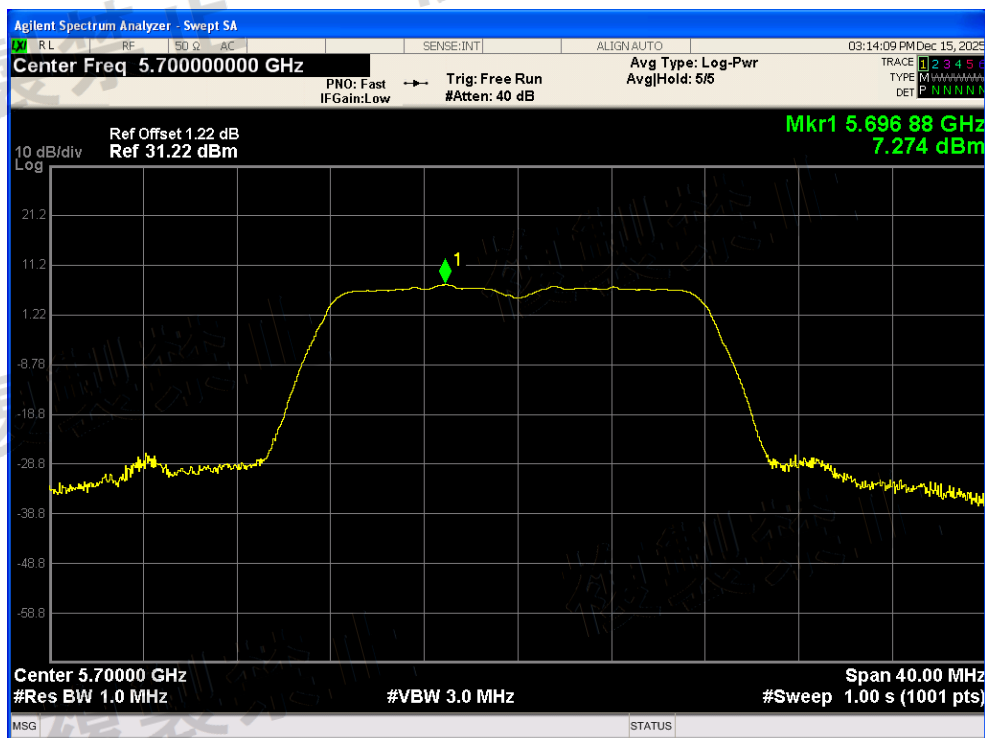


Power NVNT a 5700MHz Ant1 Zero Span

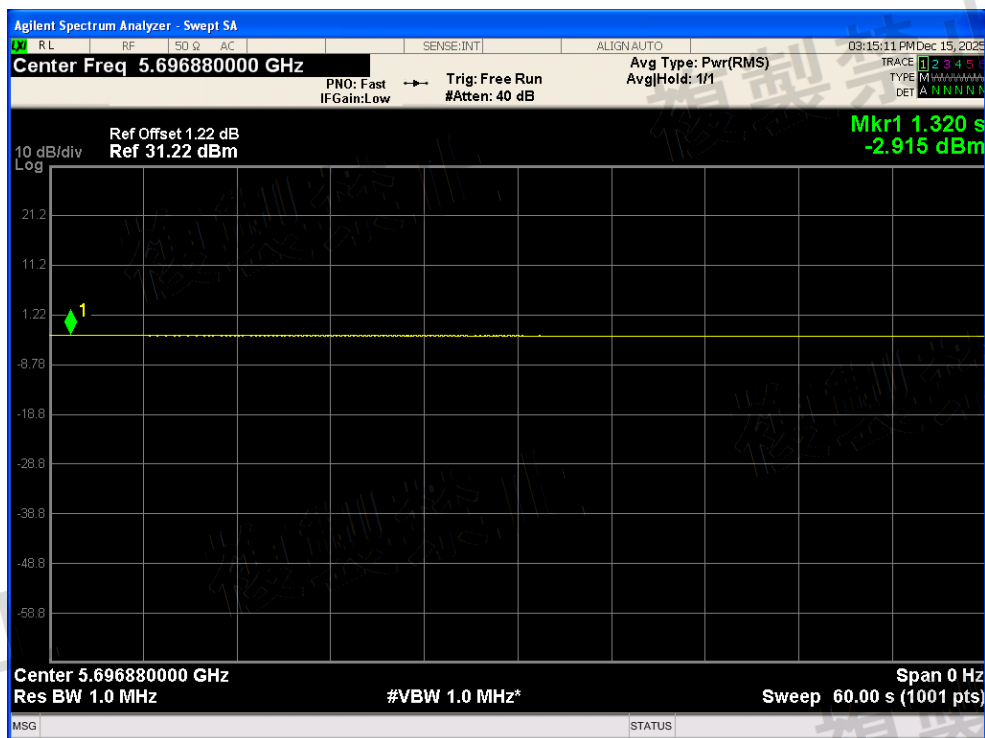


Power NVNT a 5500MHz Ant2 Pre Scan

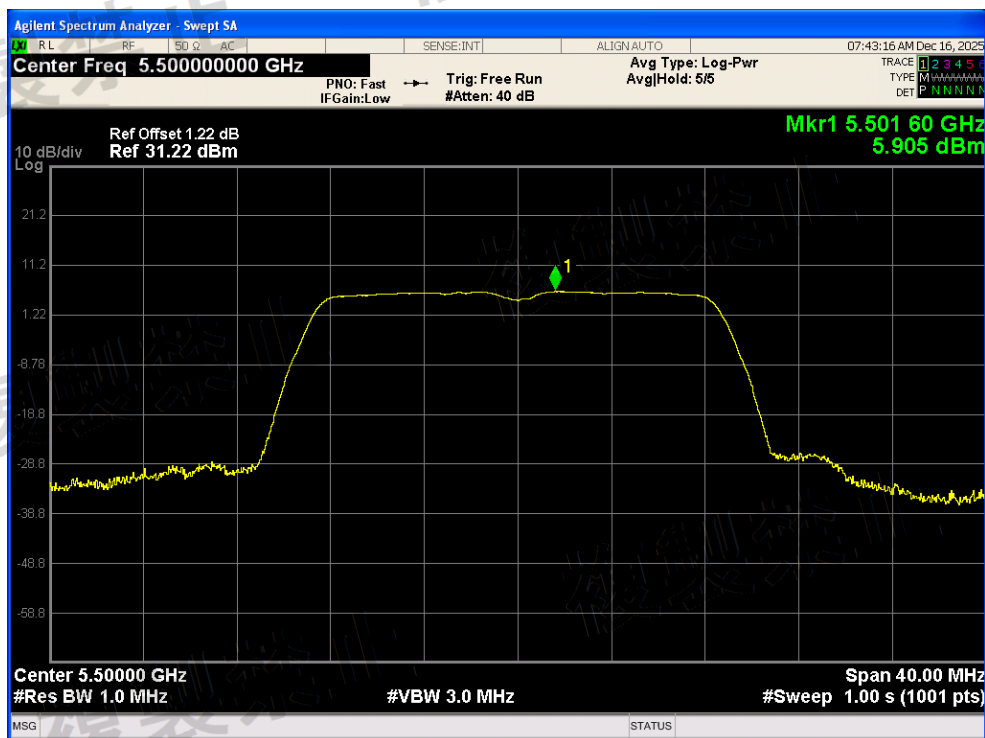


Power NVNT a 5500MHz Ant2 Zero Span

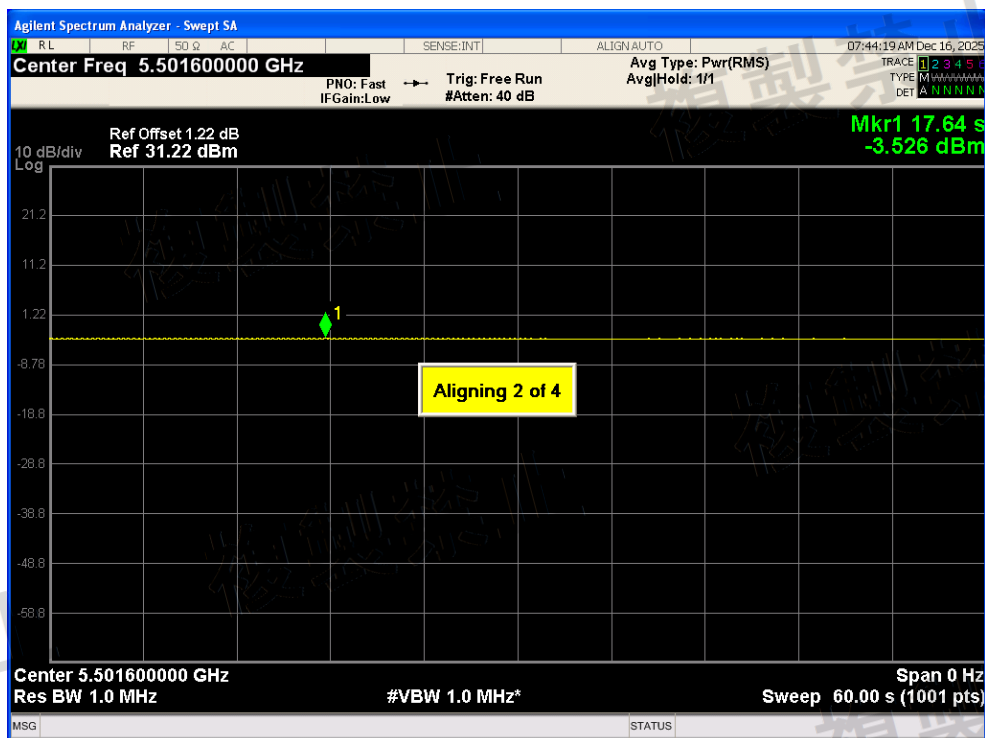


Power NVNT a 5600MHz Ant2 Pre Scan

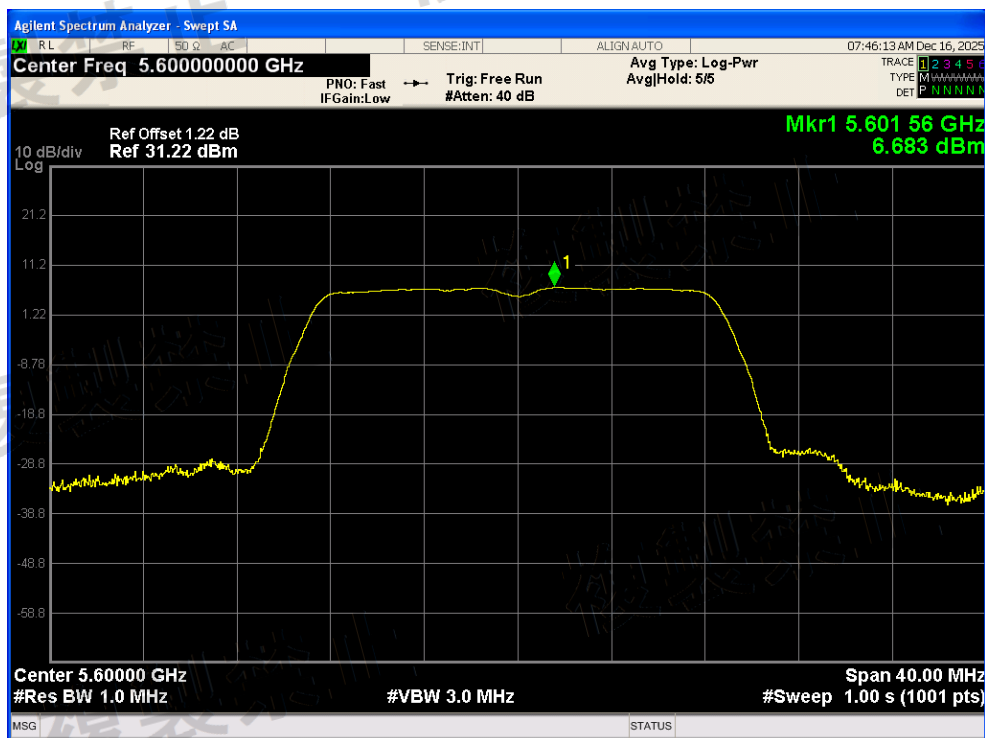


Power NVNT a 5600MHz Ant2 Zero Span

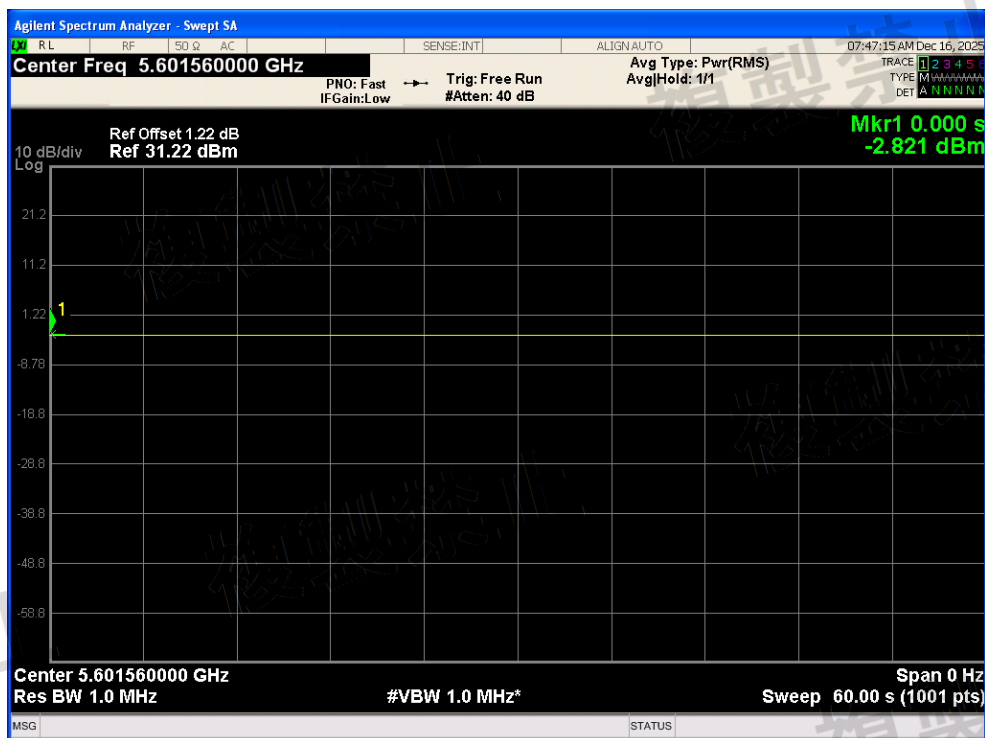


Power NVNT a 5700MHz Ant2 Pre Scan

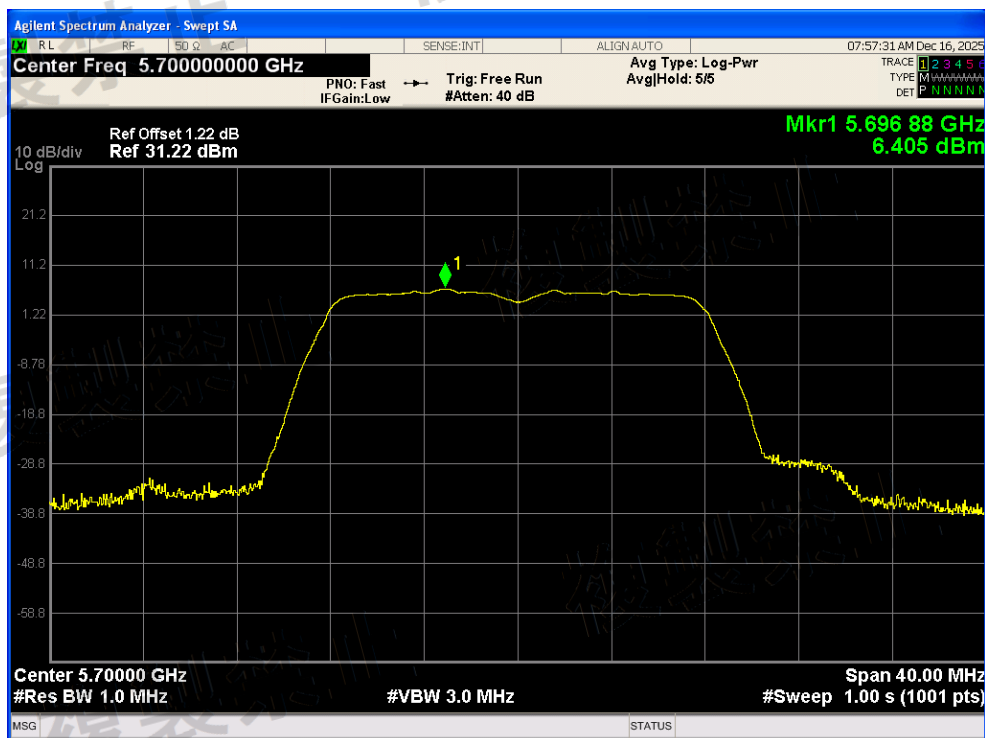


Power NVNT a 5700MHz Ant2 Zero Span

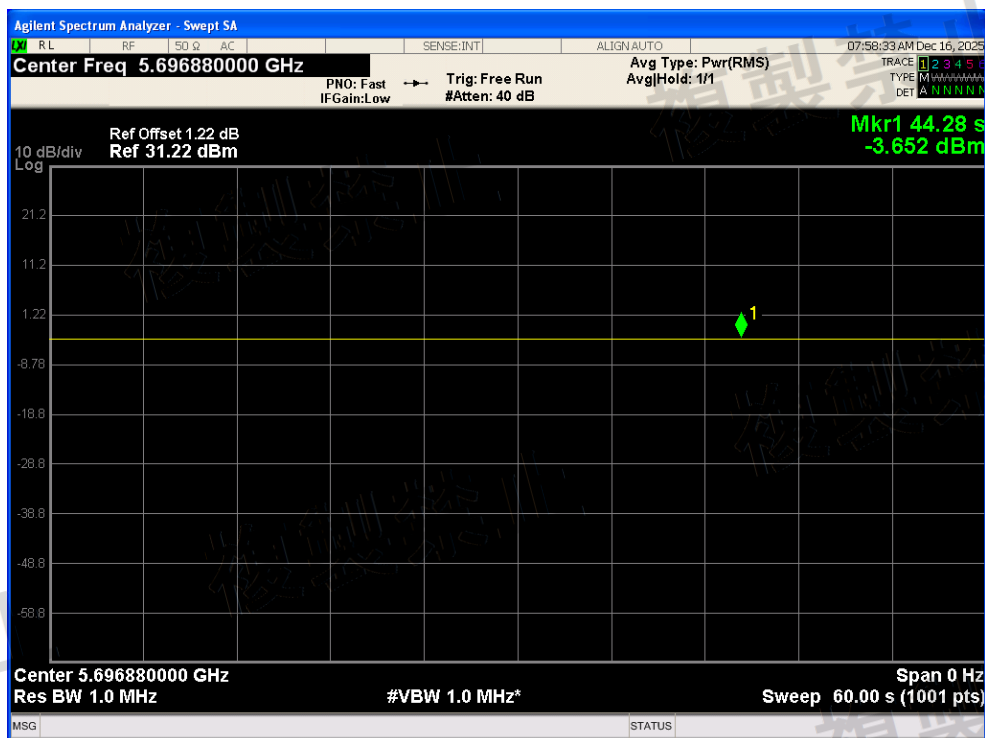

Power NVNT ac20 5500MHz Ant1 Pre Scan

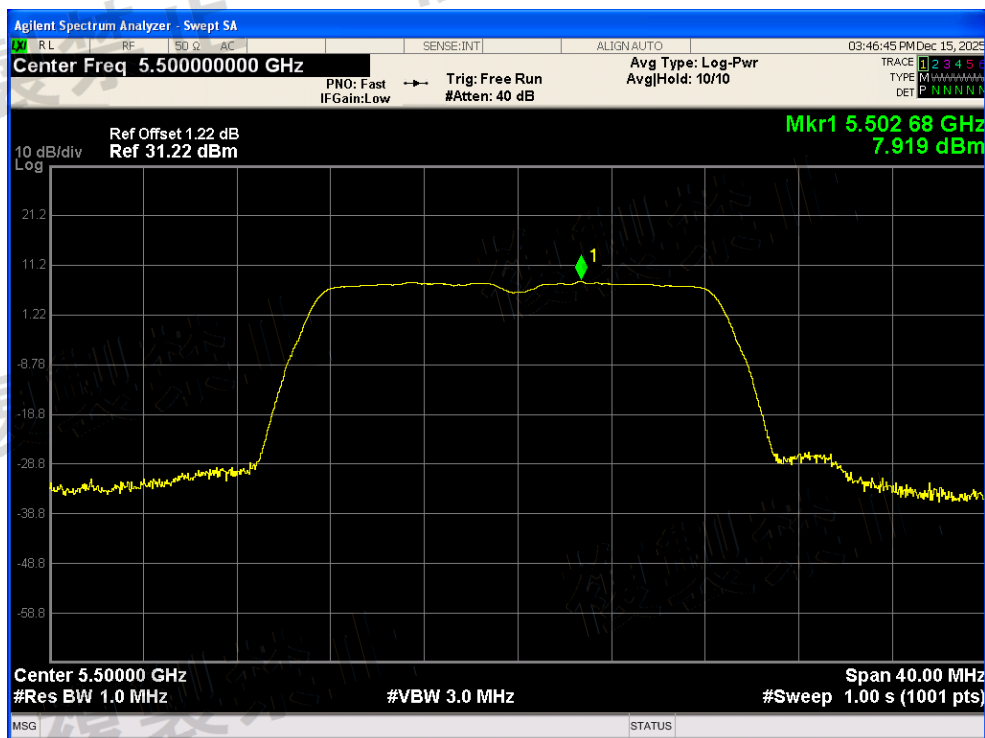

Power NVNT ac20 5500MHz Ant1 Zero Span

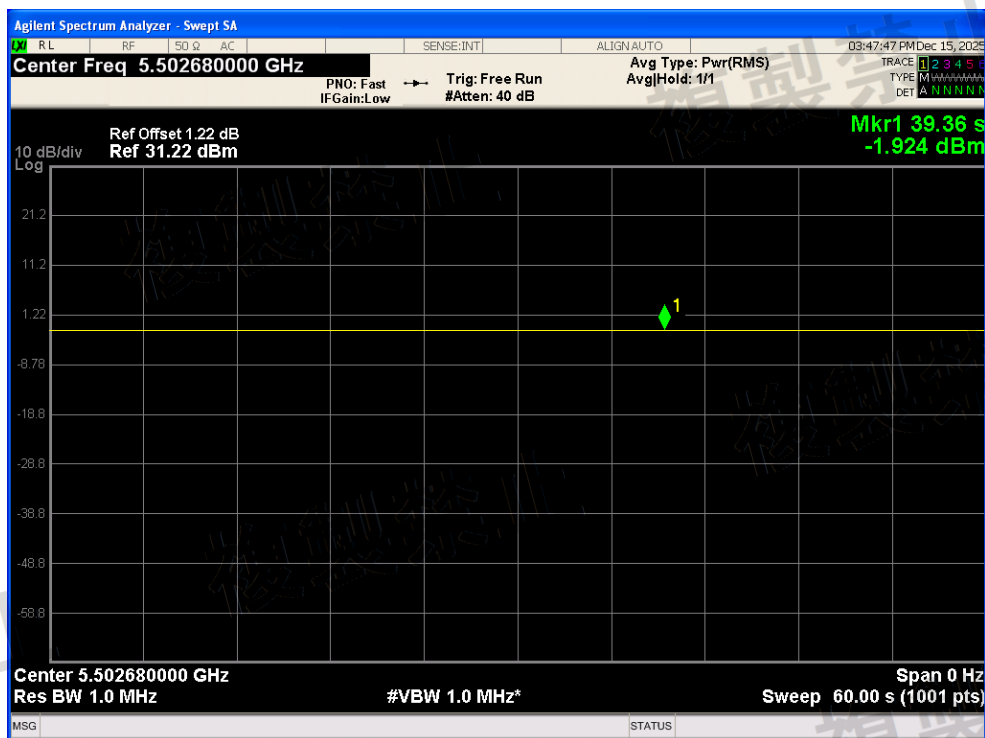

Power NVNT ac20 5600MHz Ant1 Pre Scan