






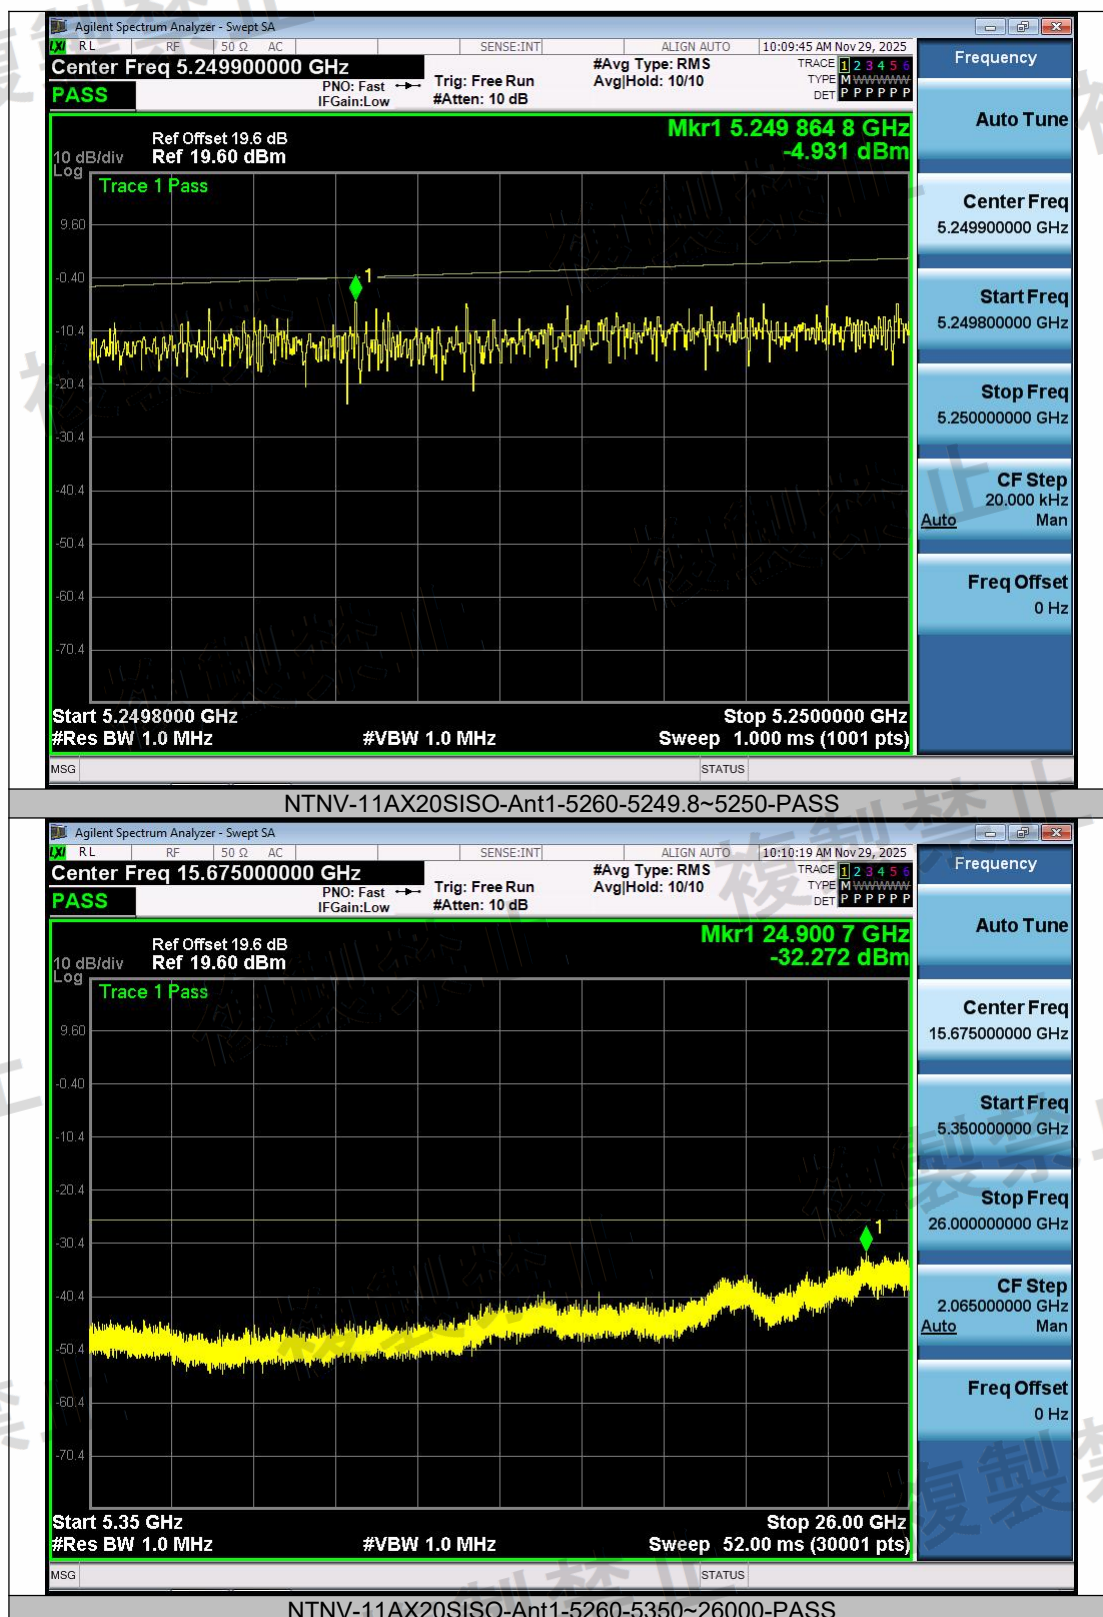


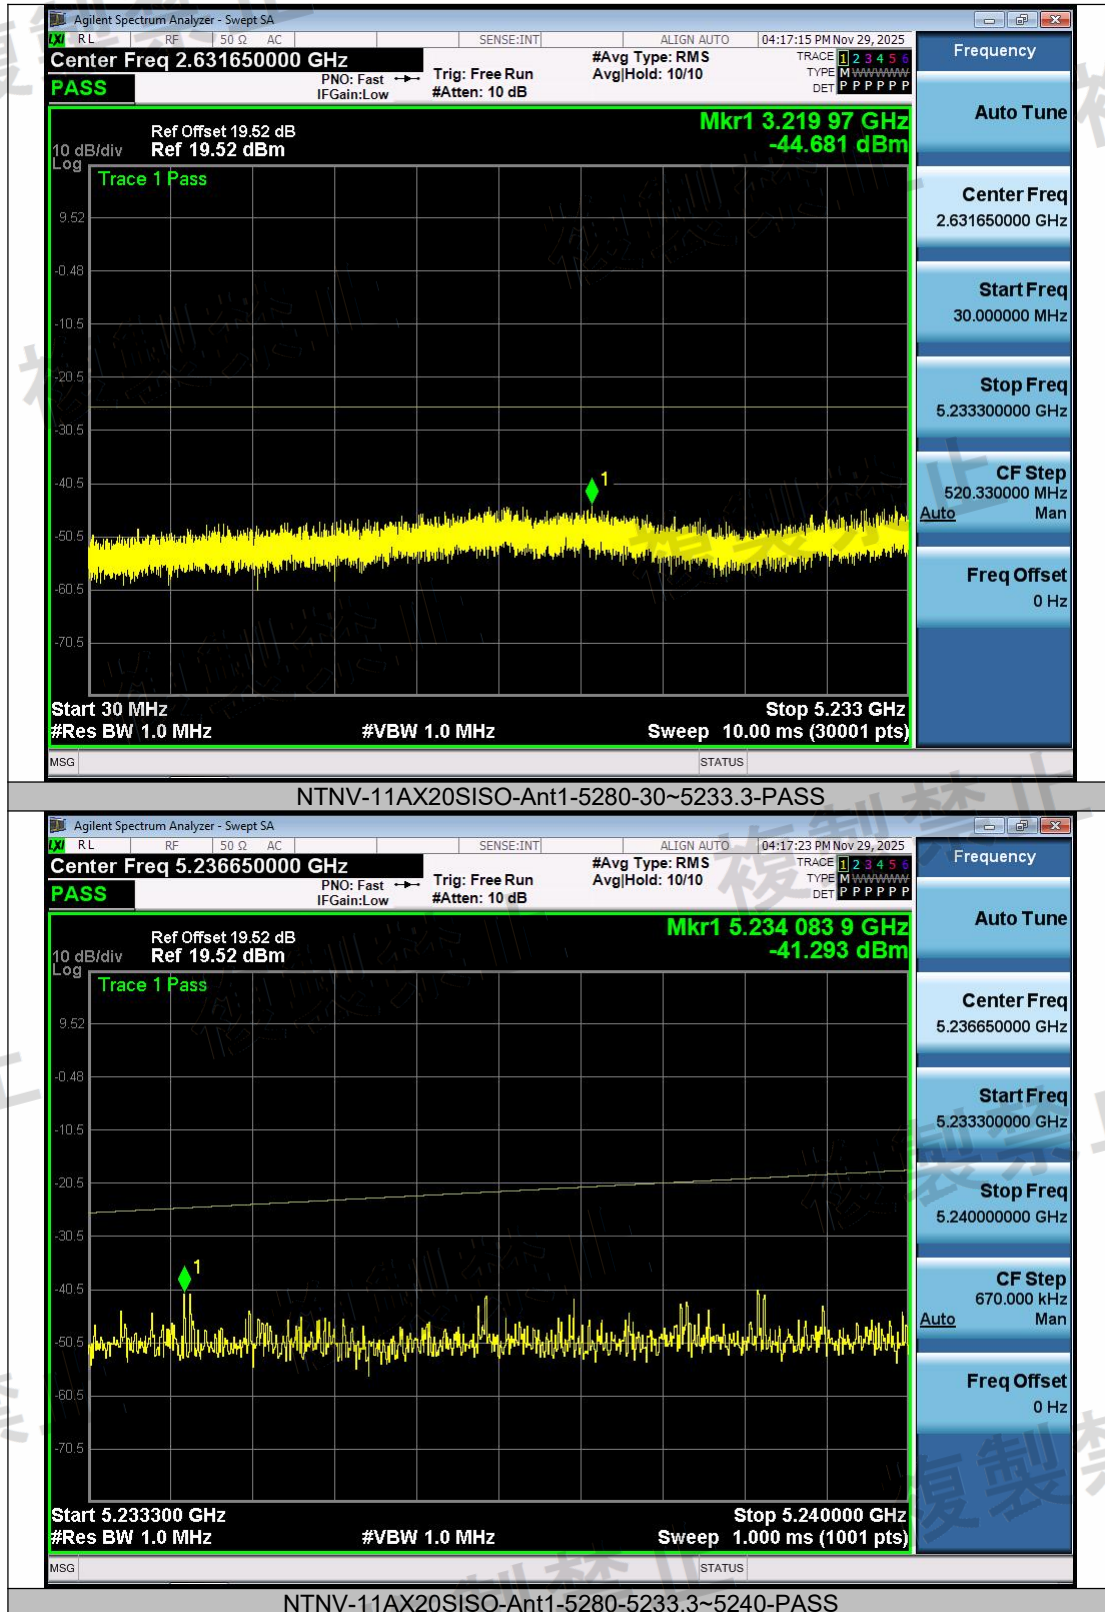


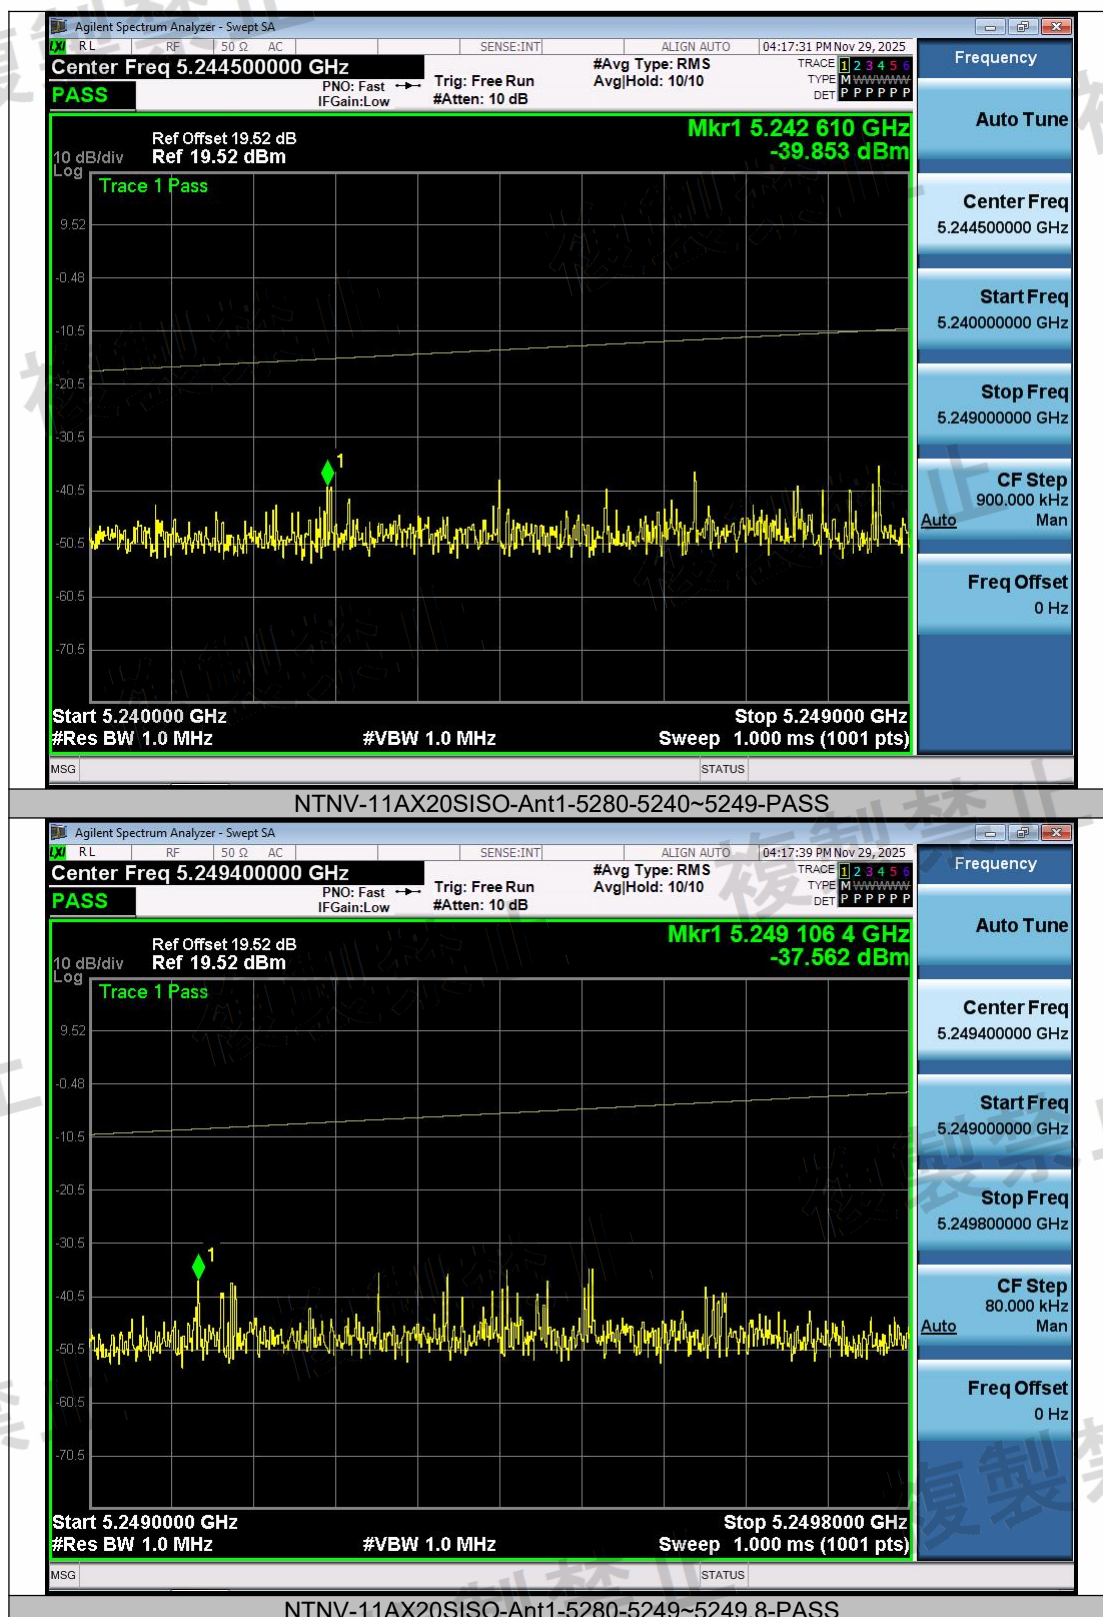


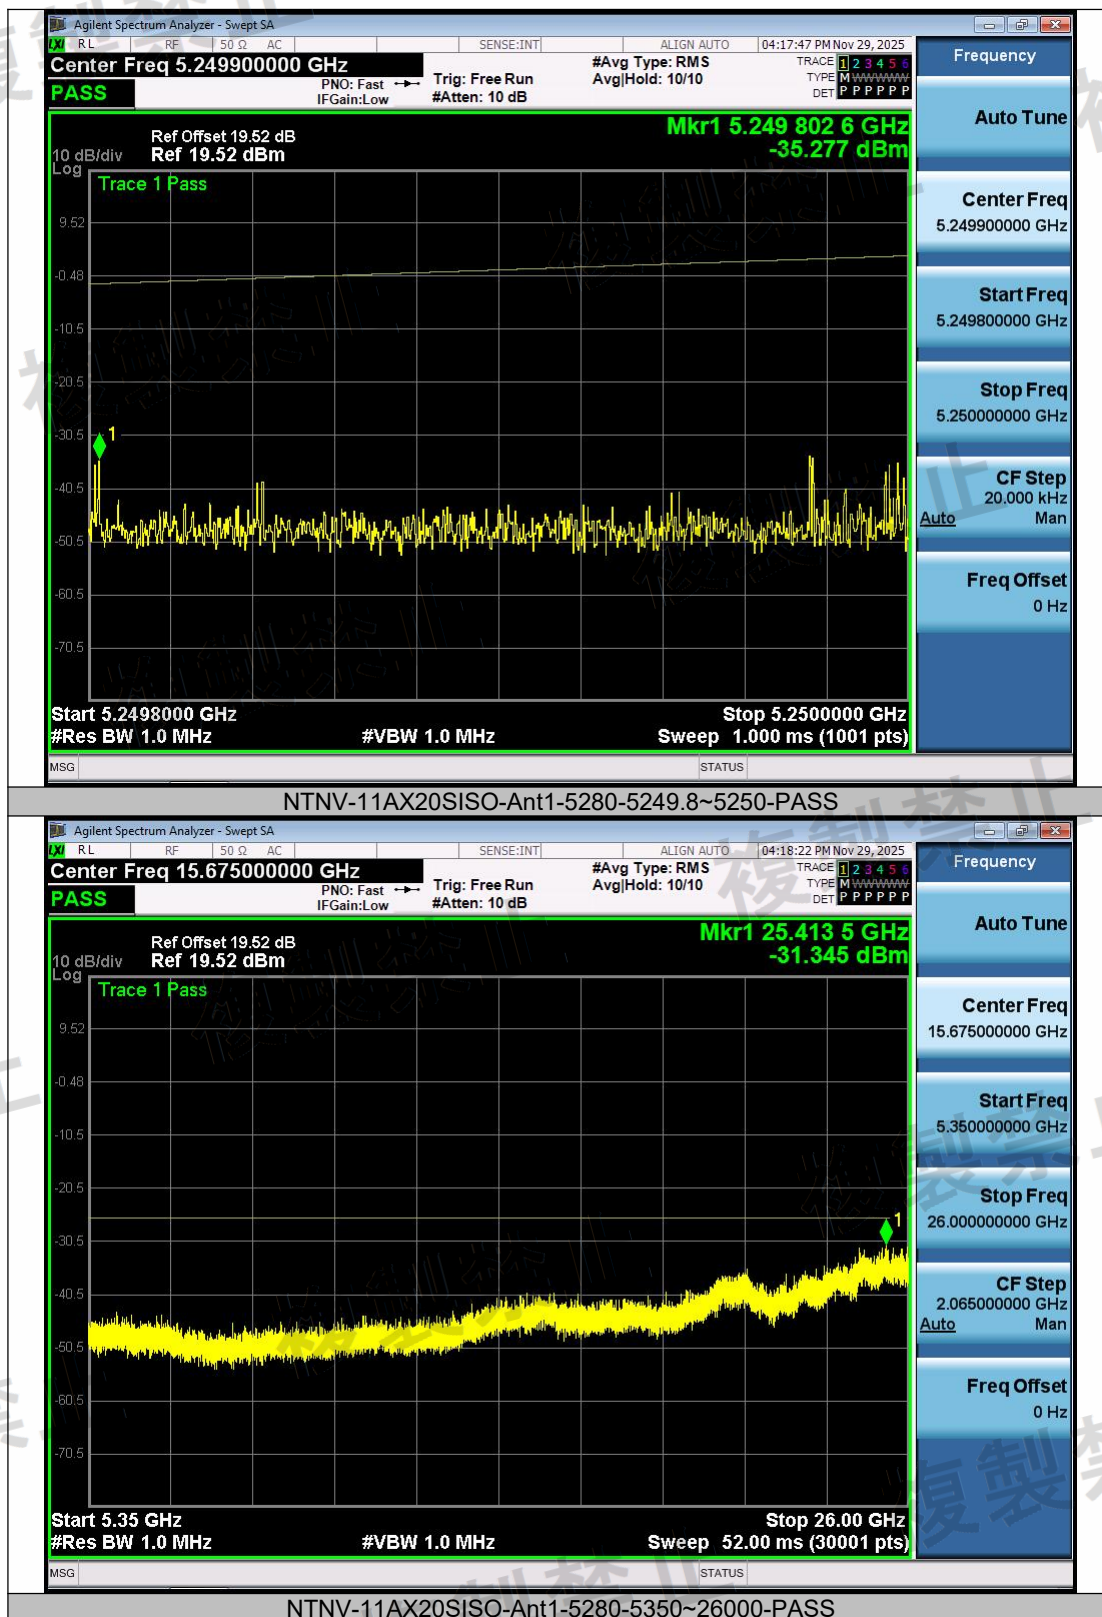


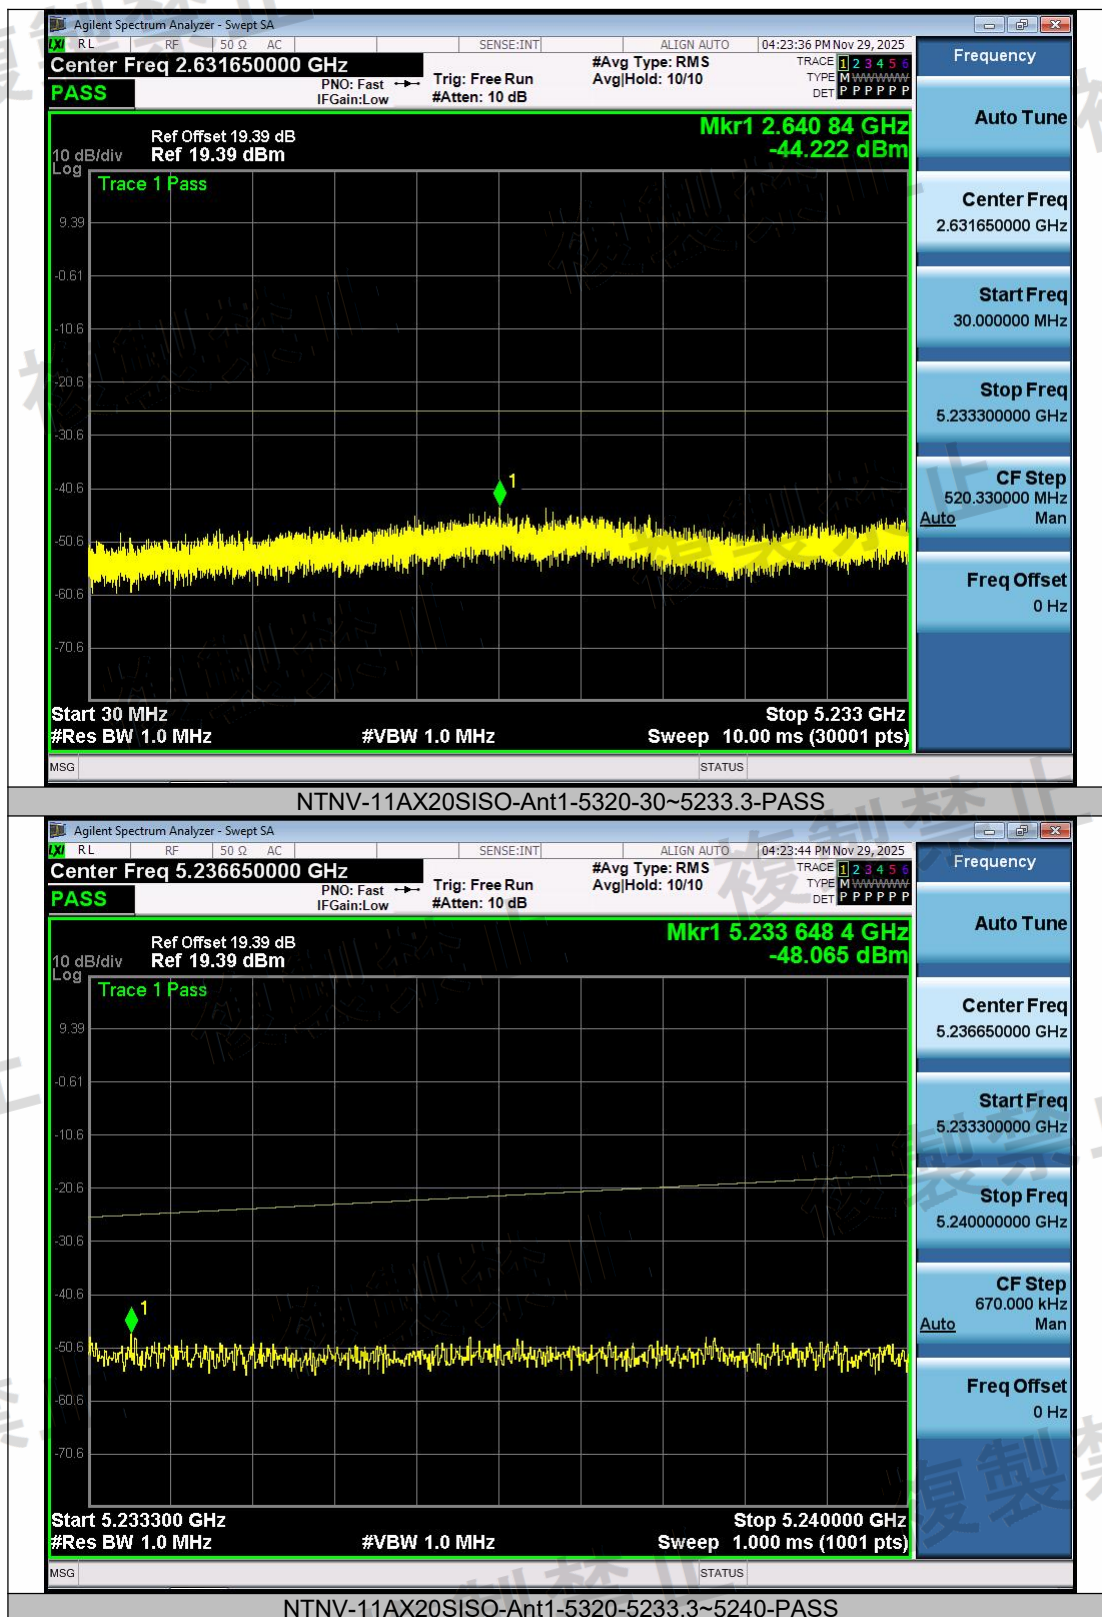


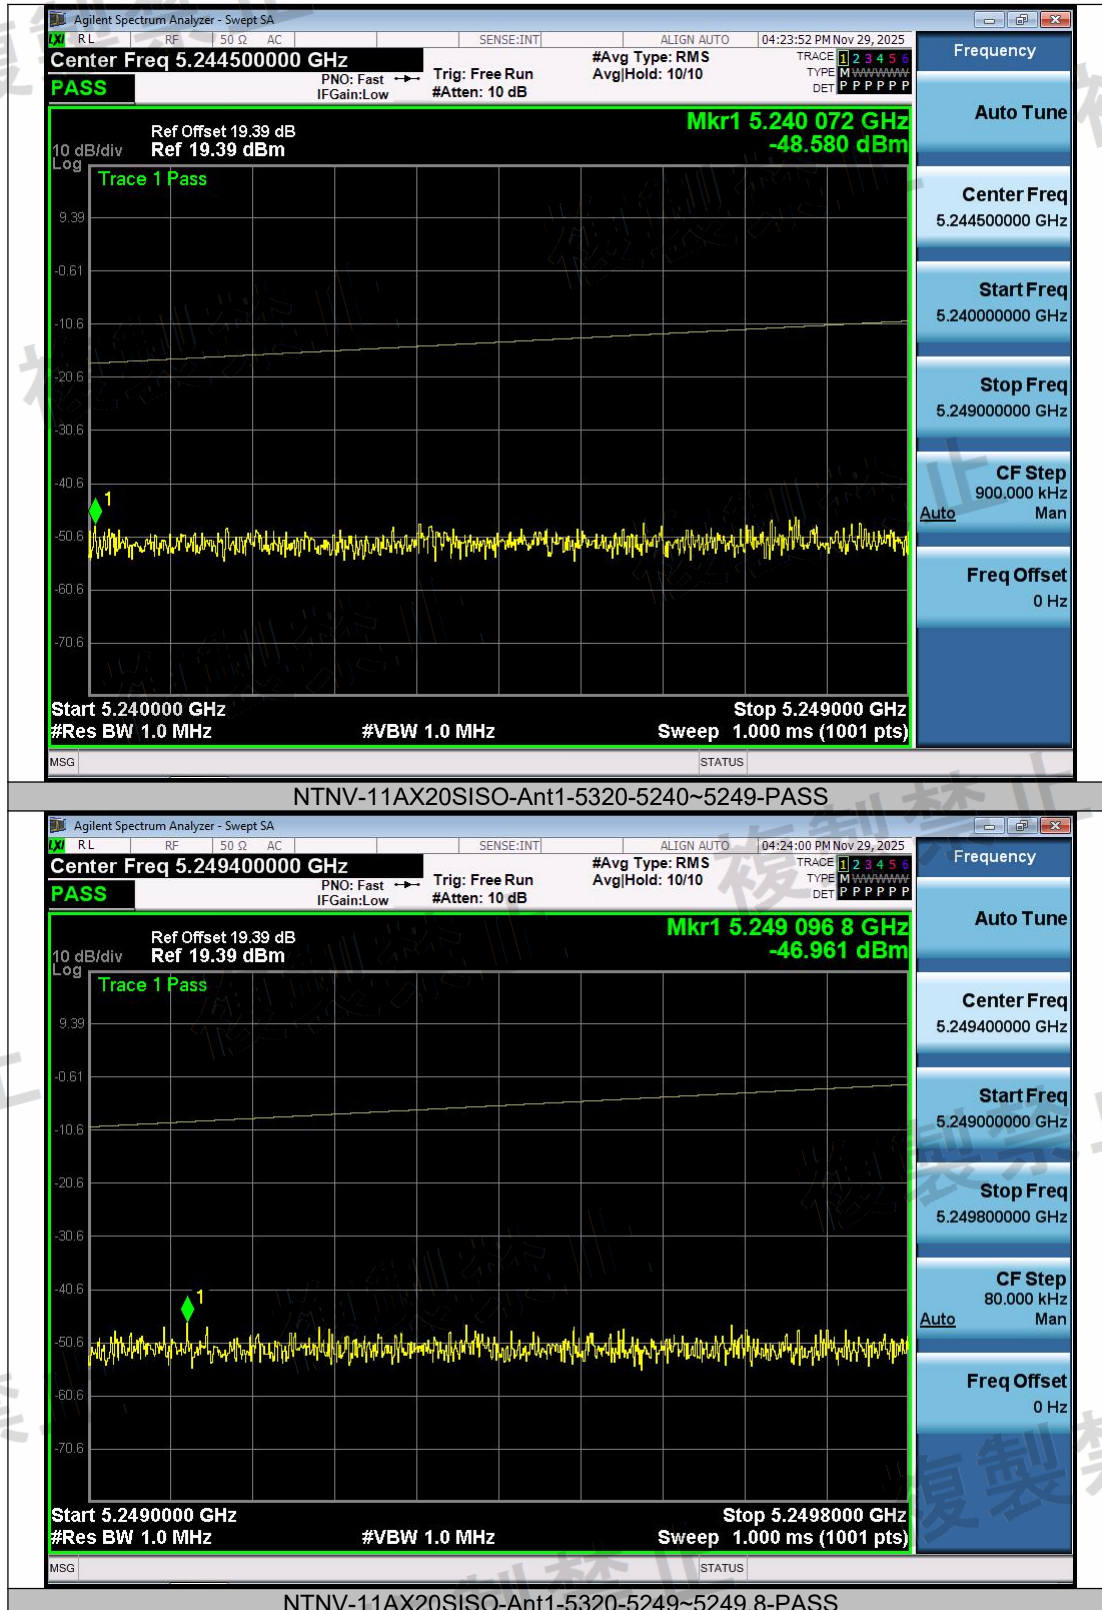

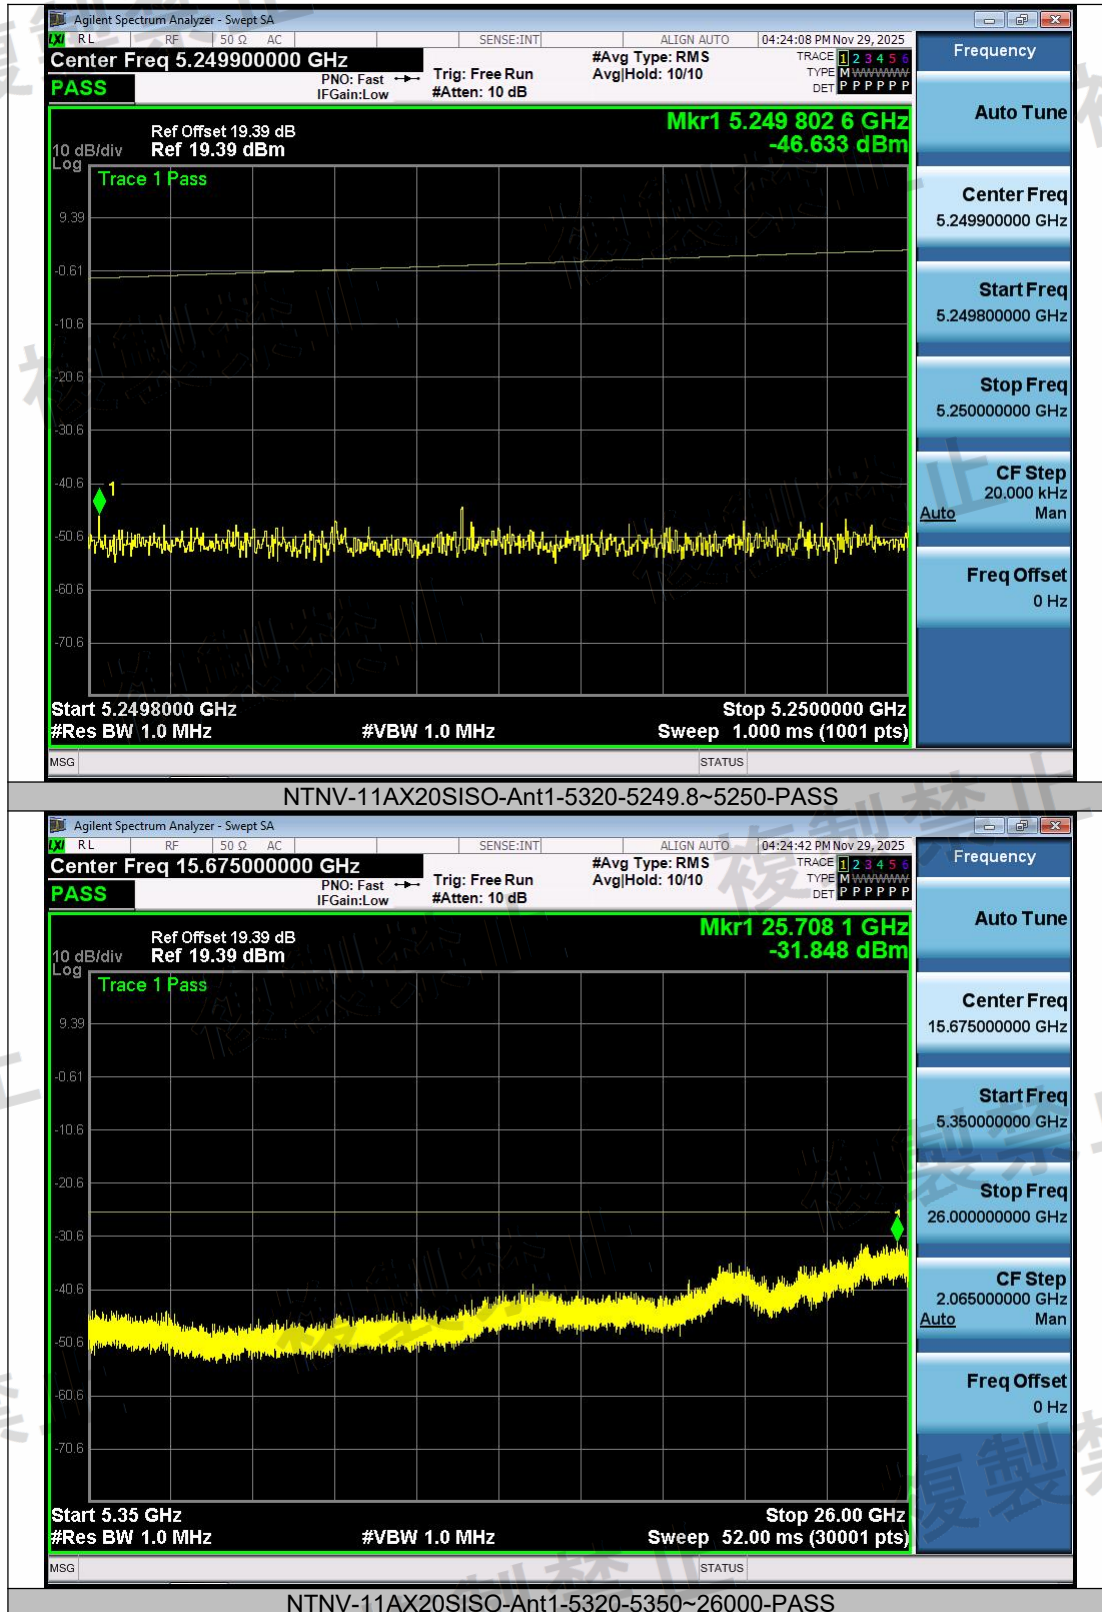


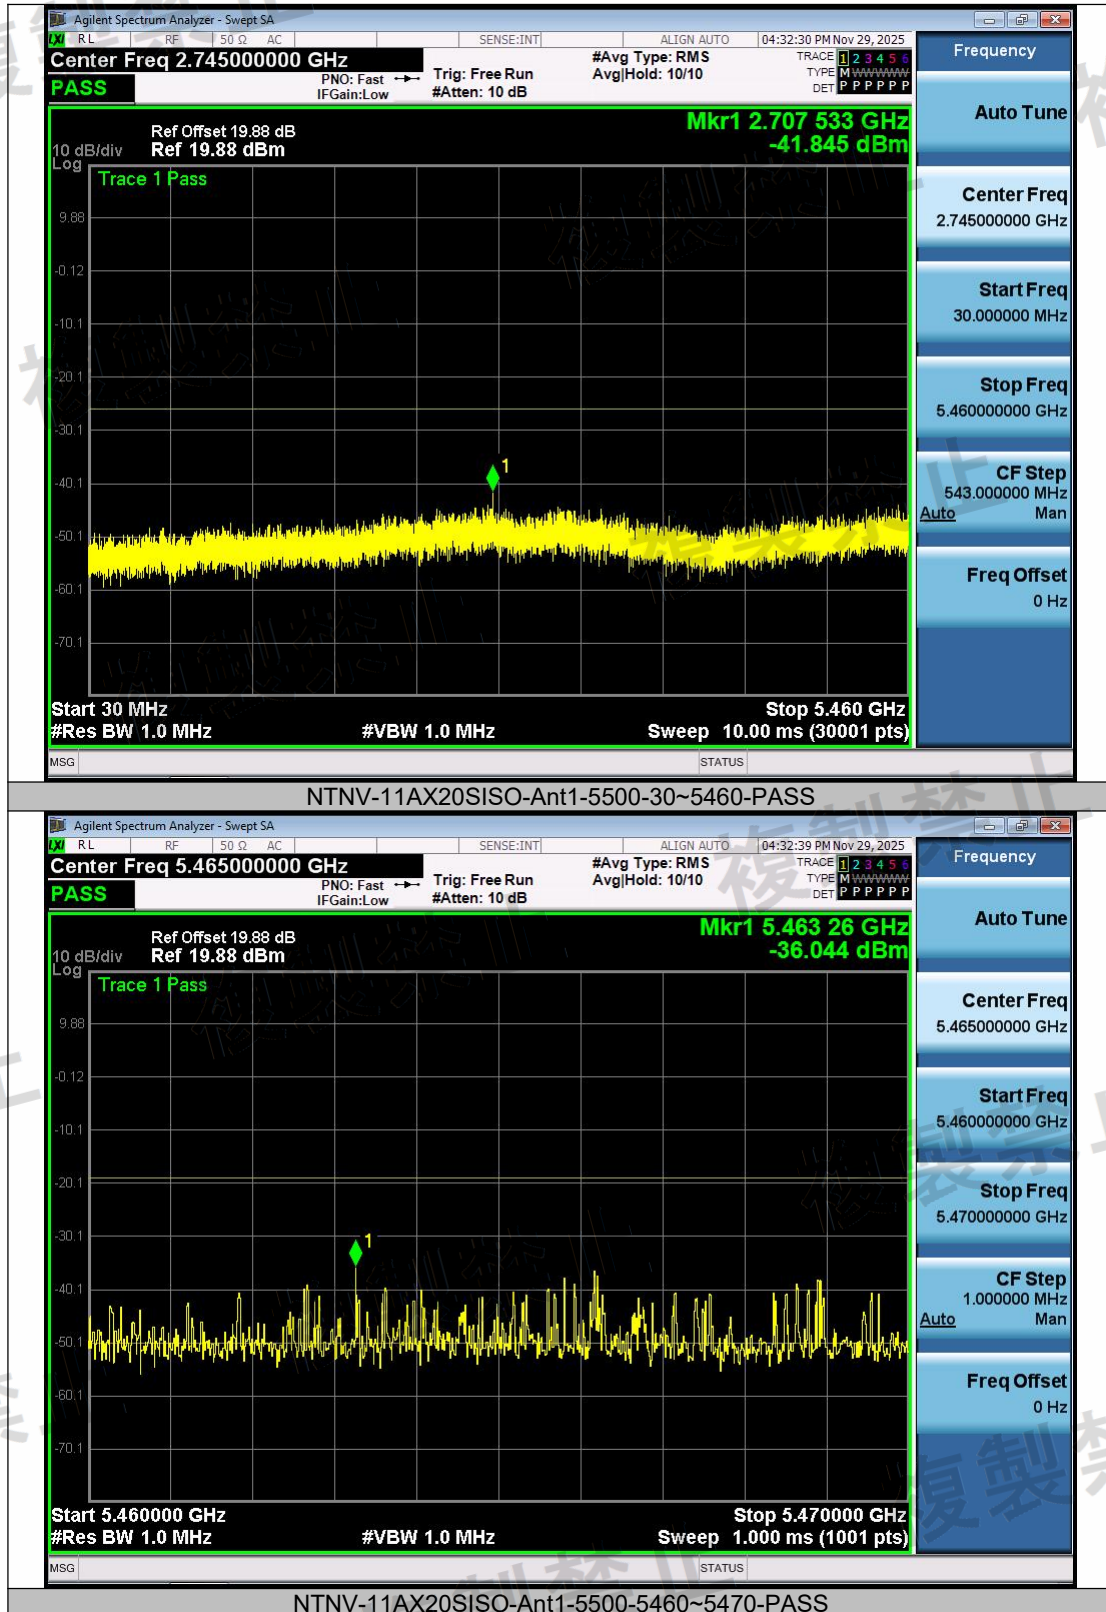

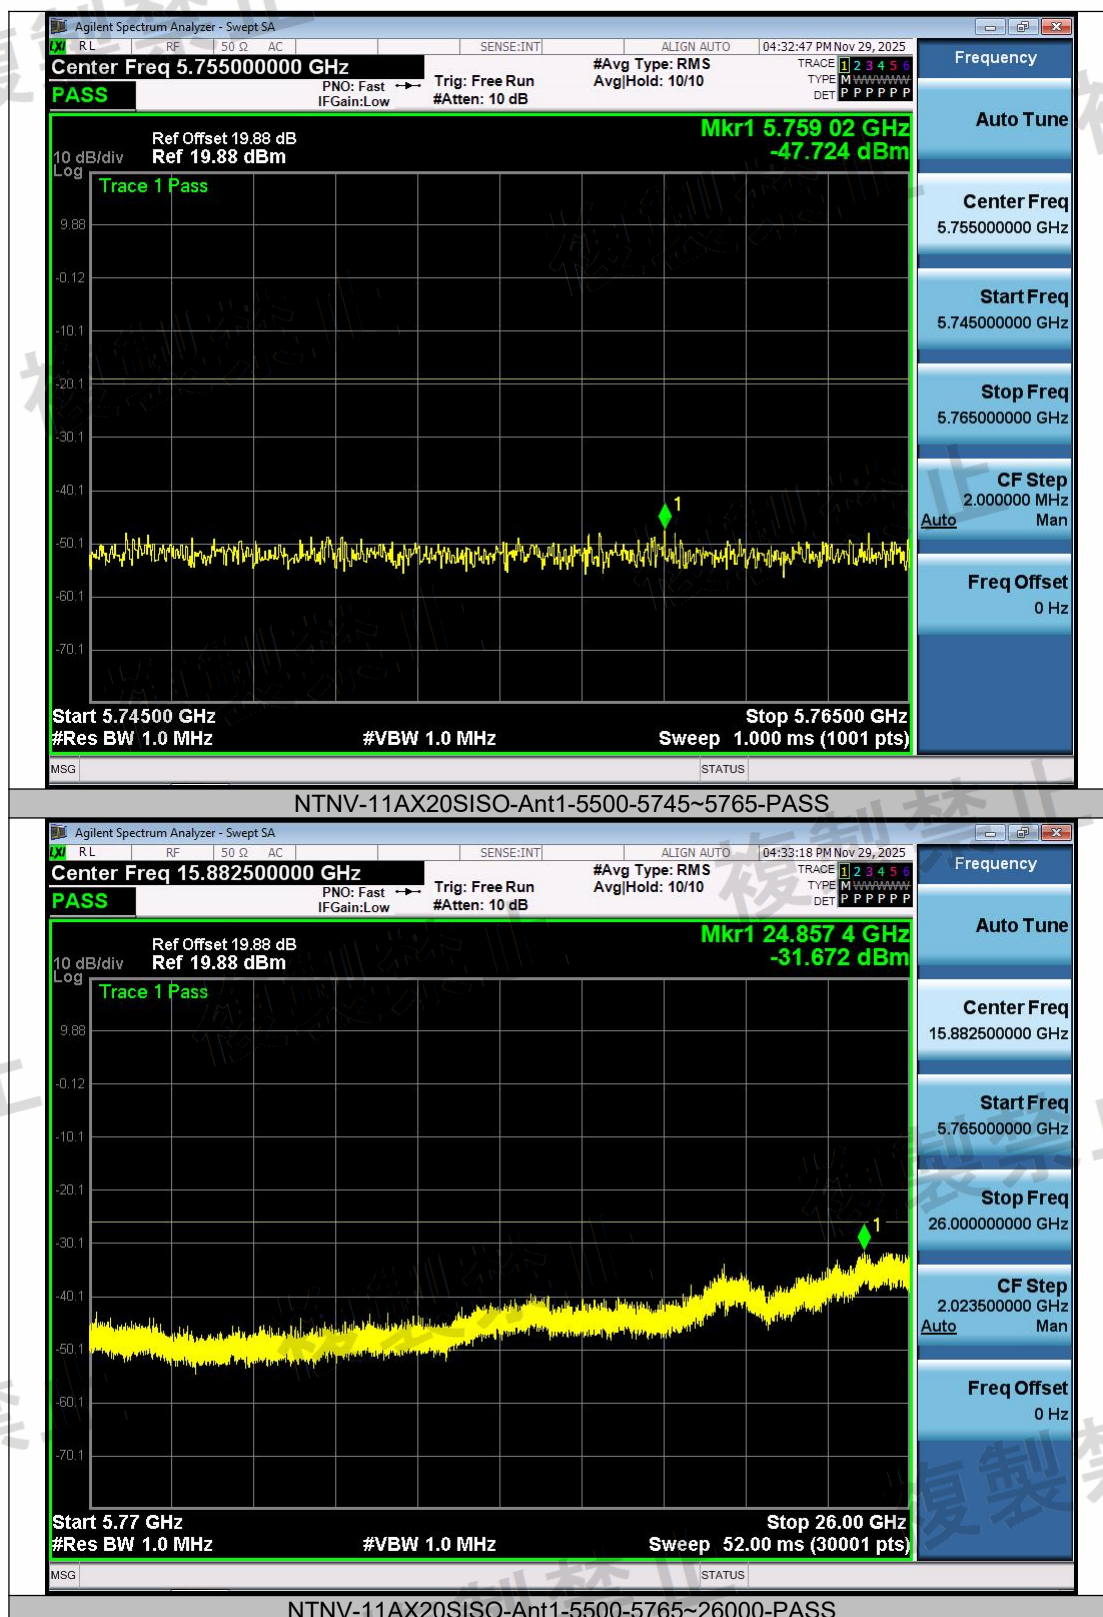


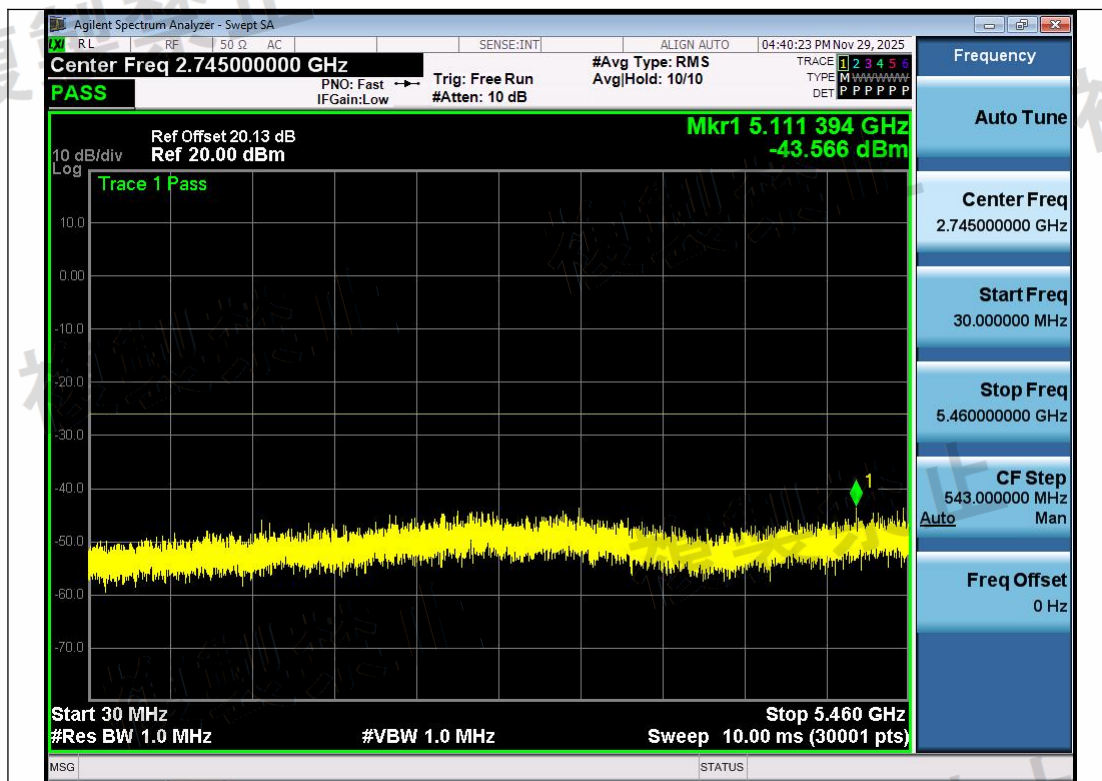



NTNV-11AX20SISO-Ant1-5580-30~5460-PASS

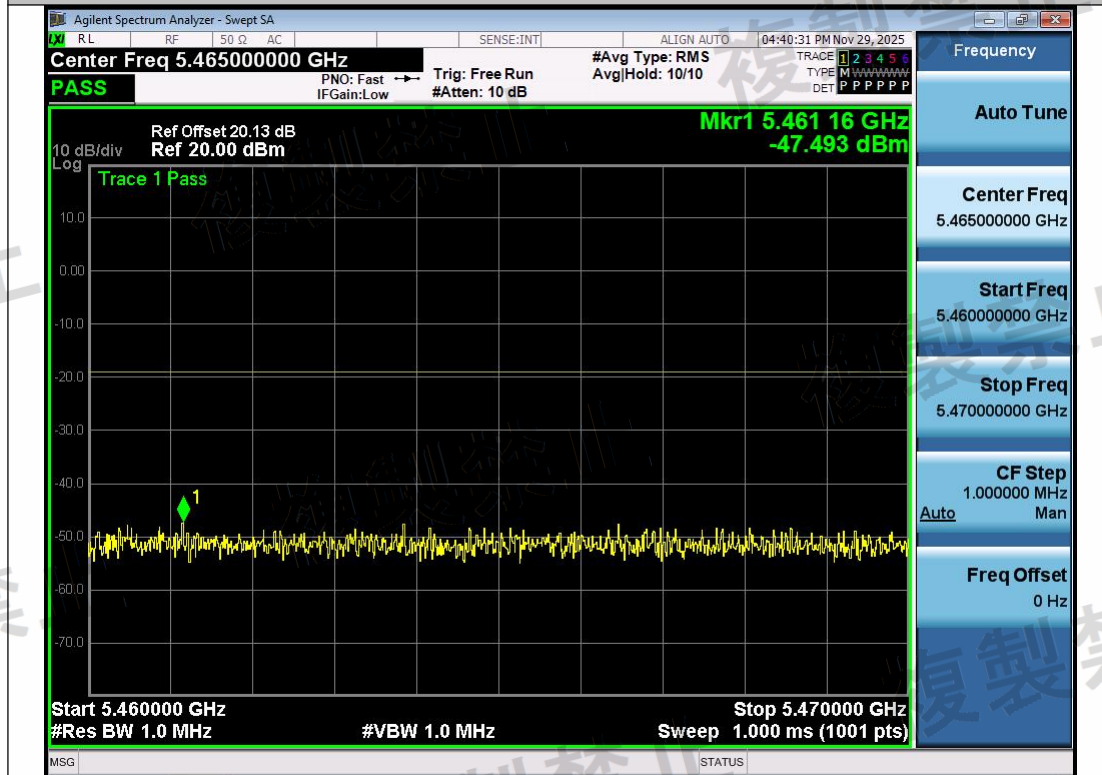



NTNV-11AX20SISO-Ant1-5580-5460~5470-PASS

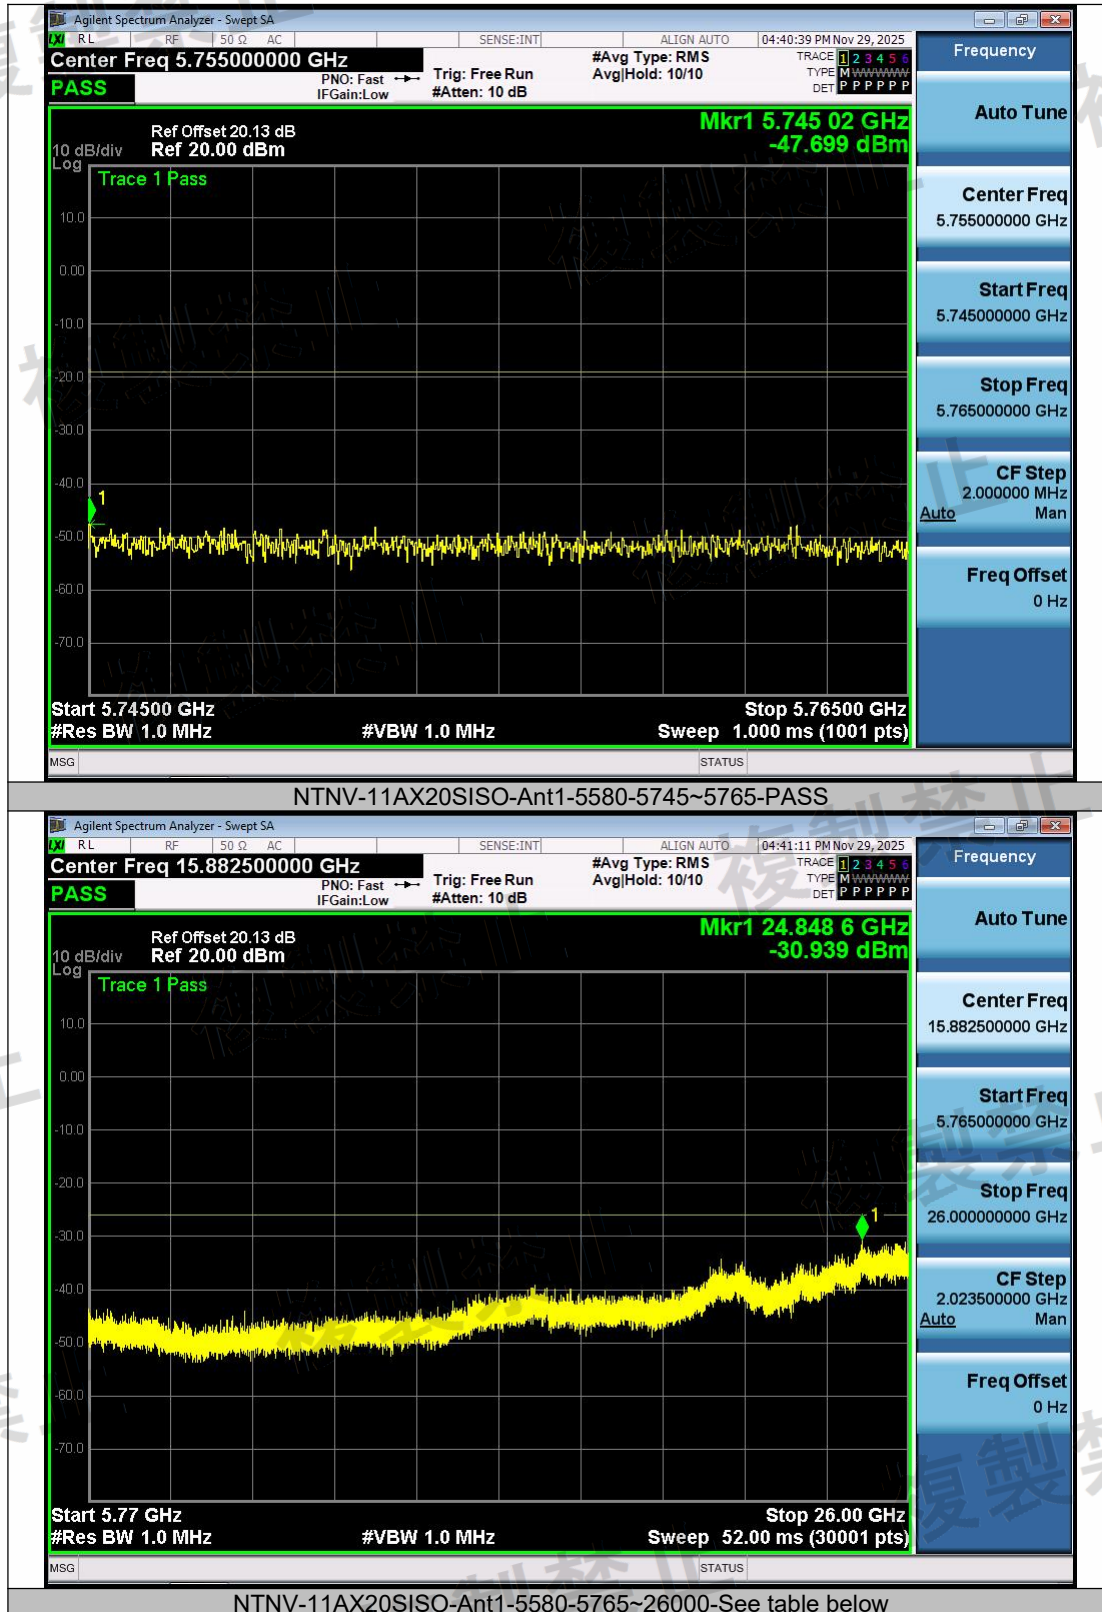


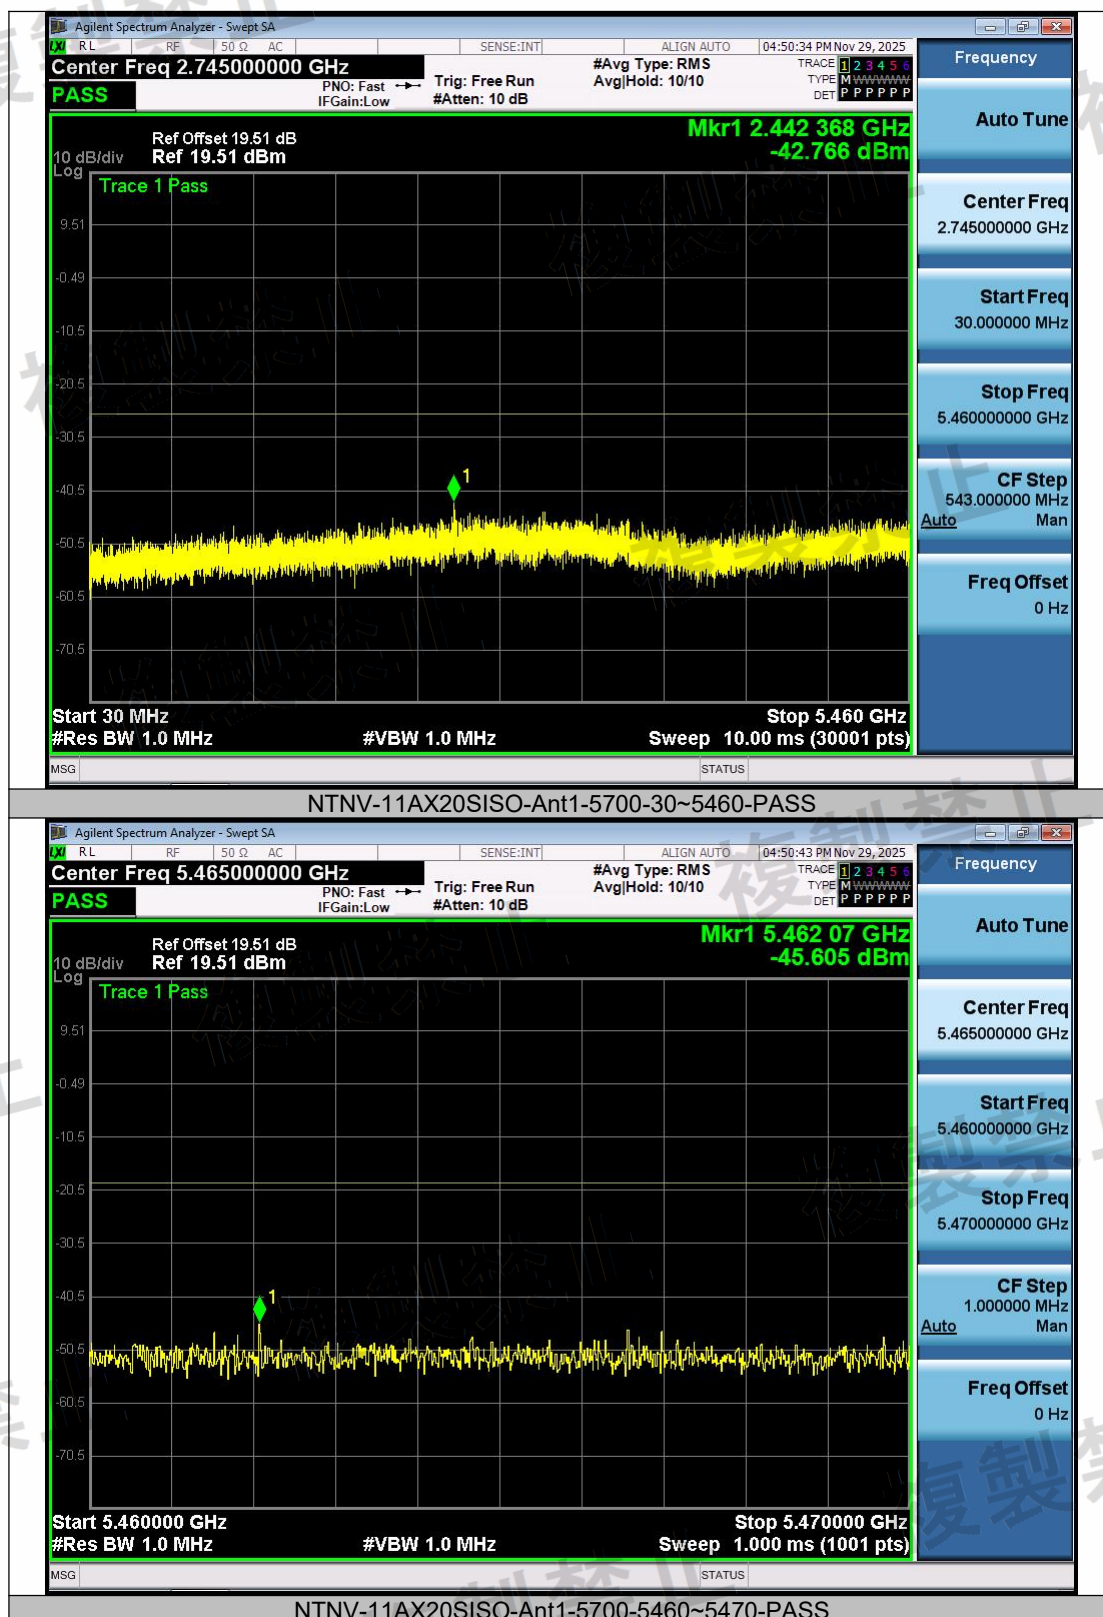

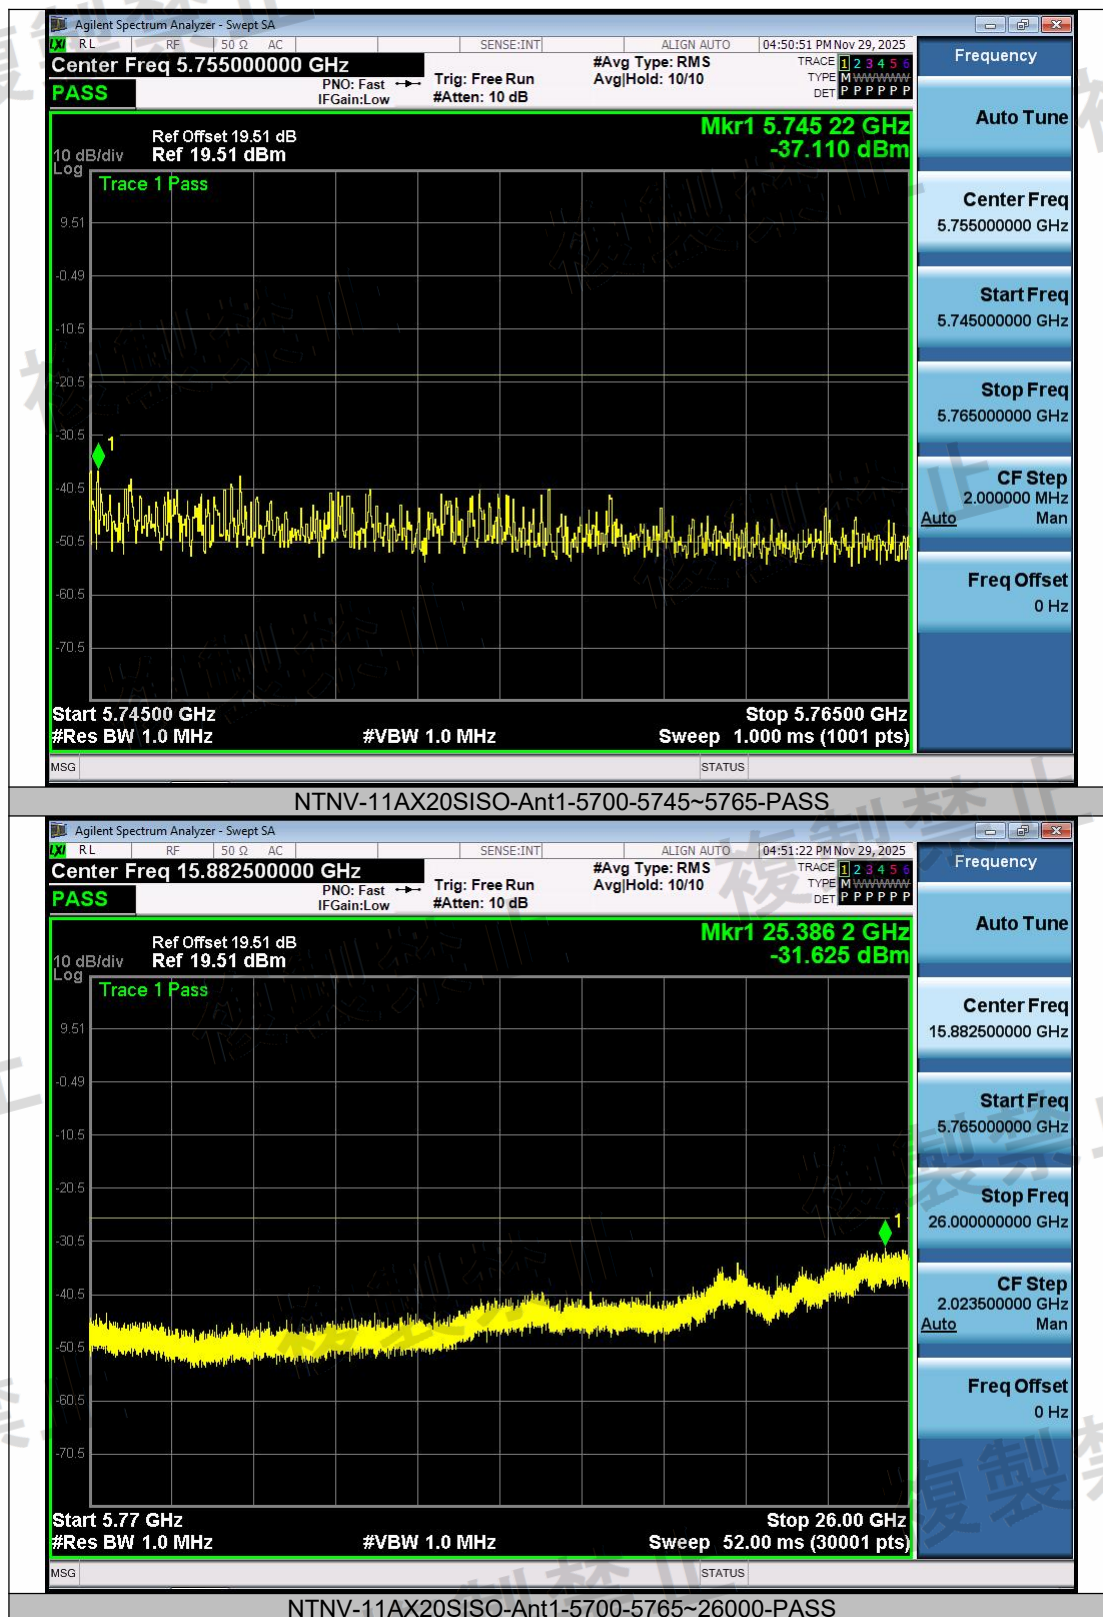

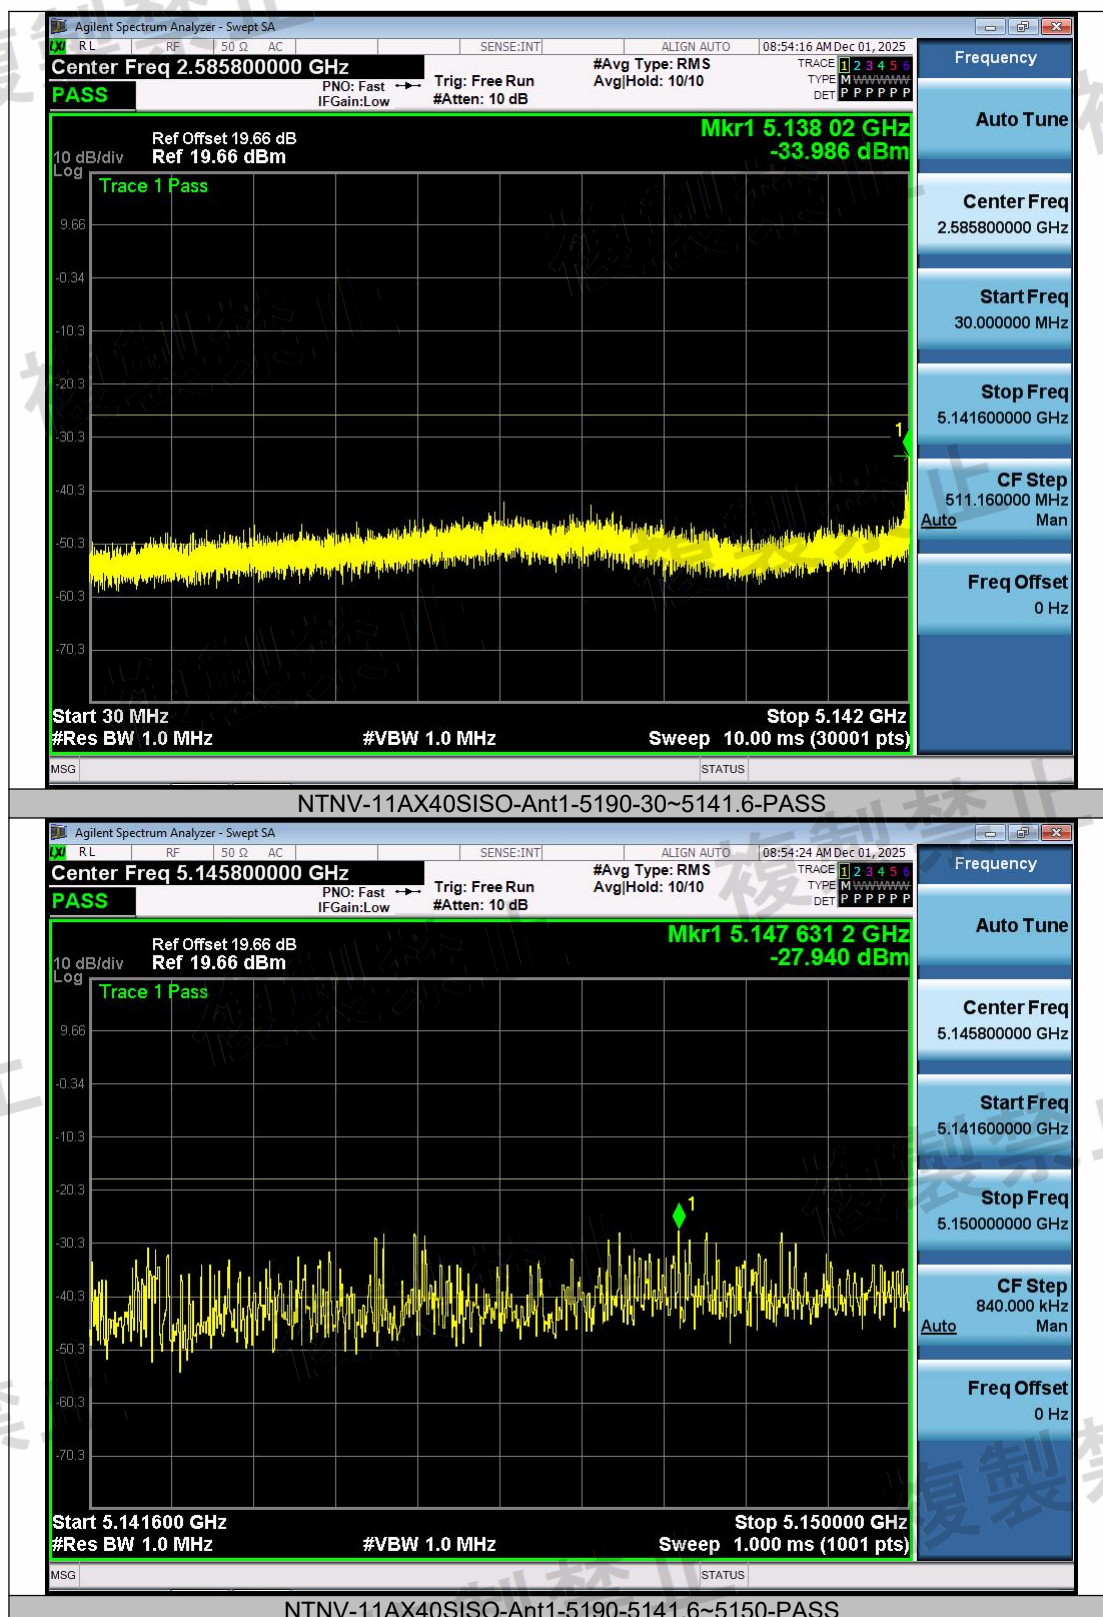

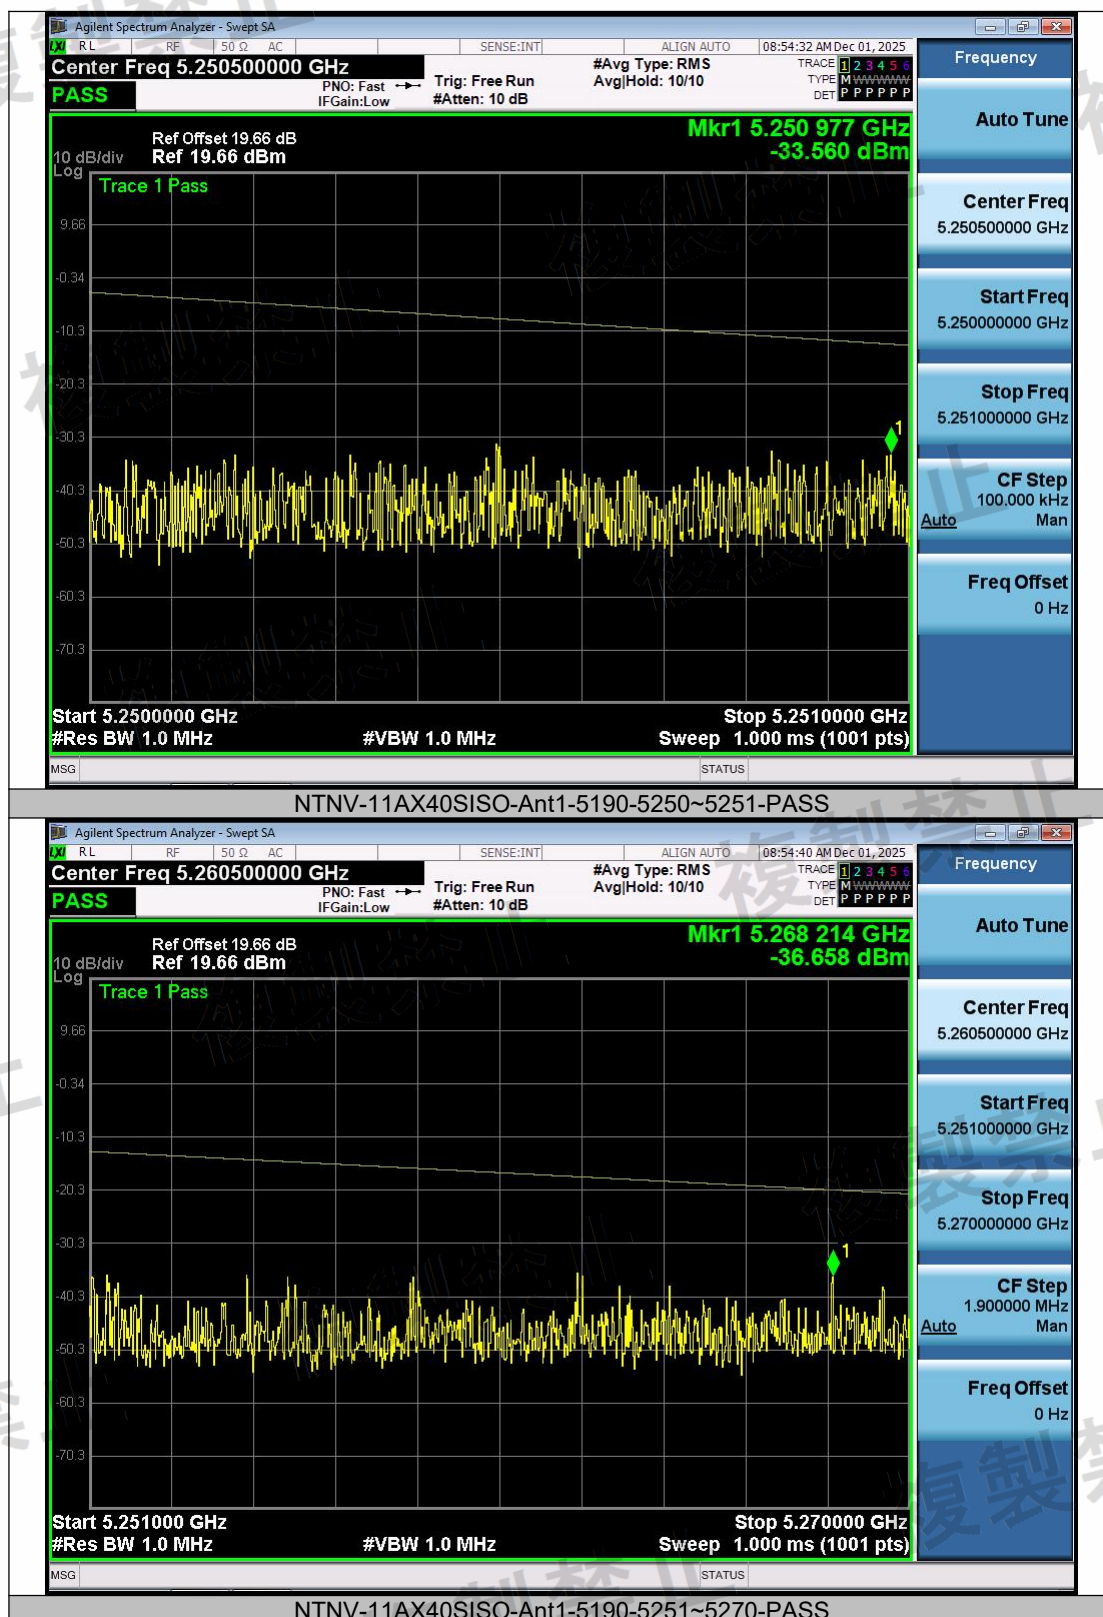


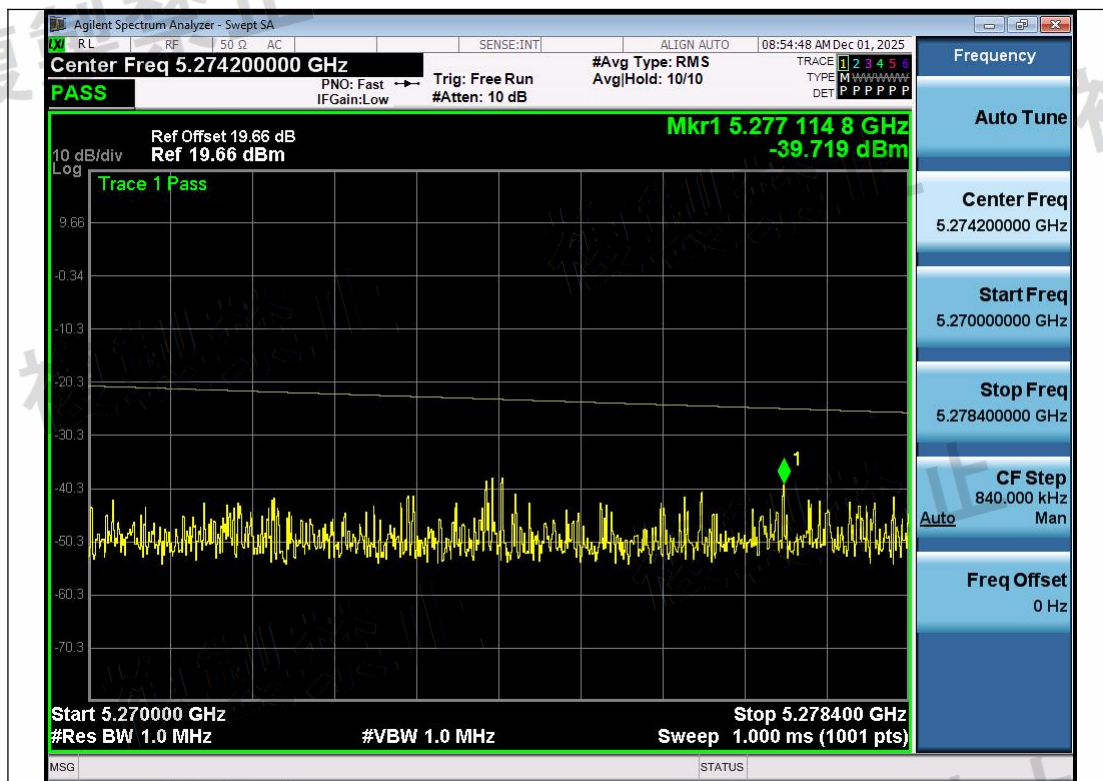


NTNV-11AX40SISO-Ant1-5190-5270~5278.4-PASS




NTNV-11AX40SISO-Ant1-5190-5278.4~26000-PASS

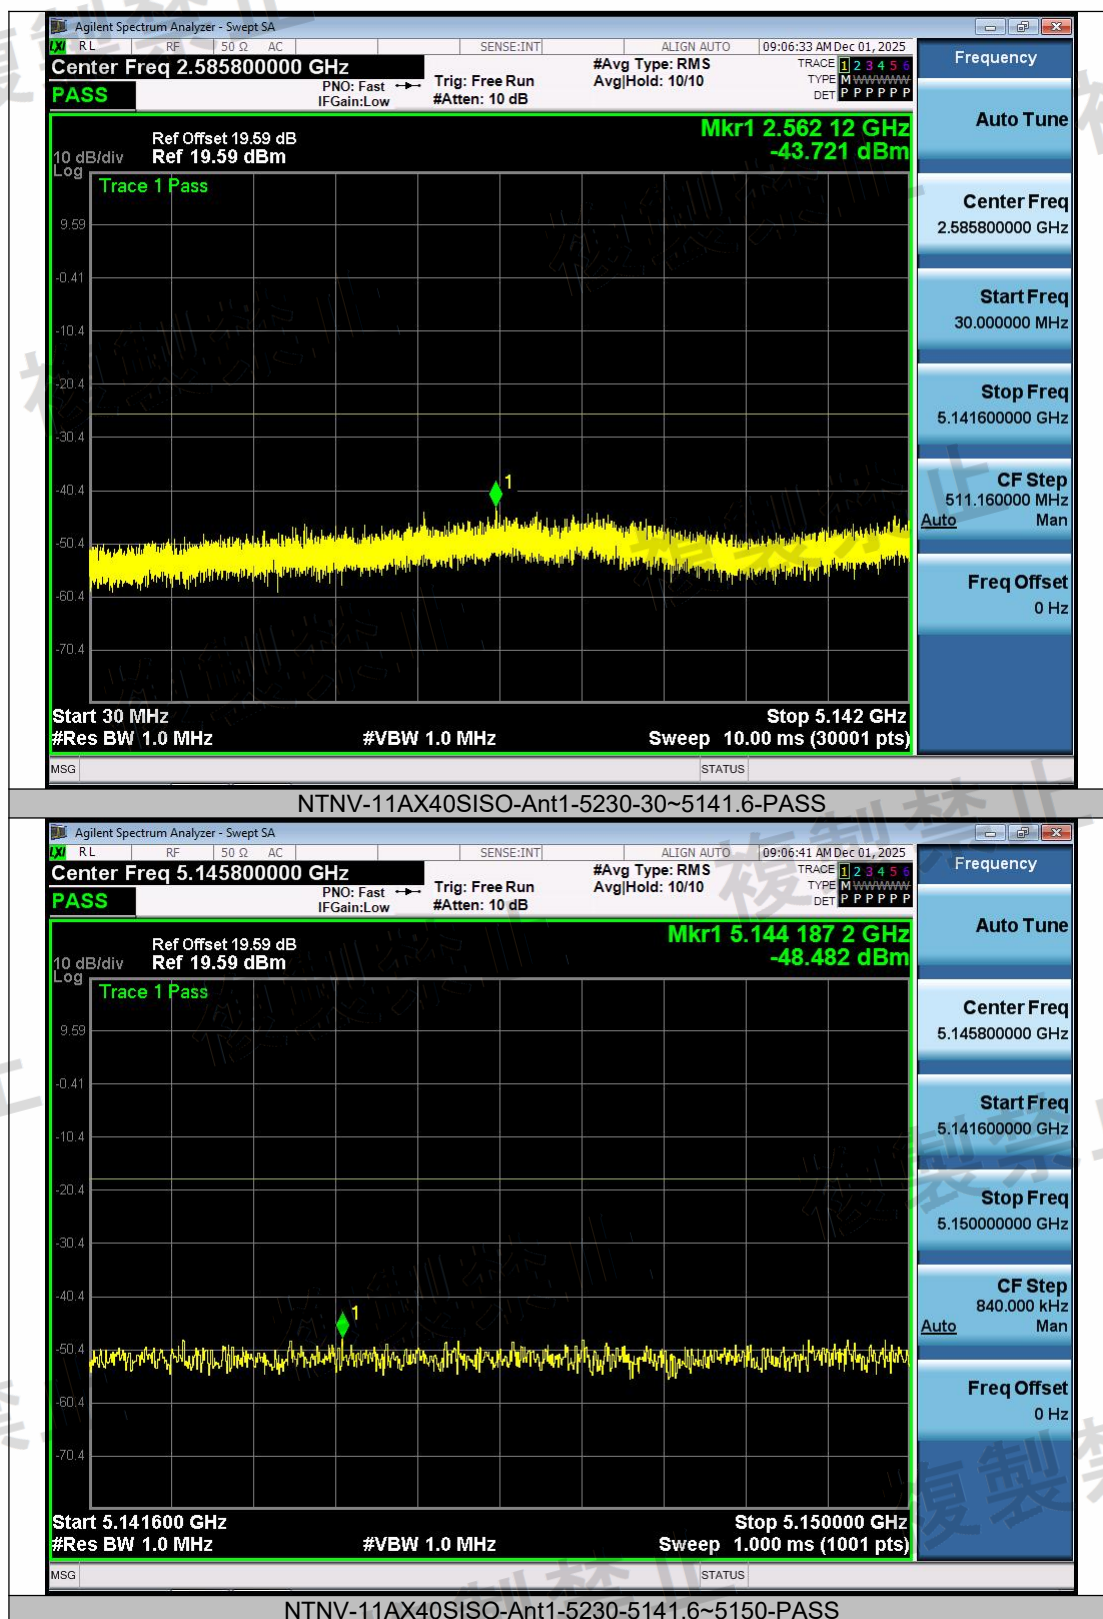


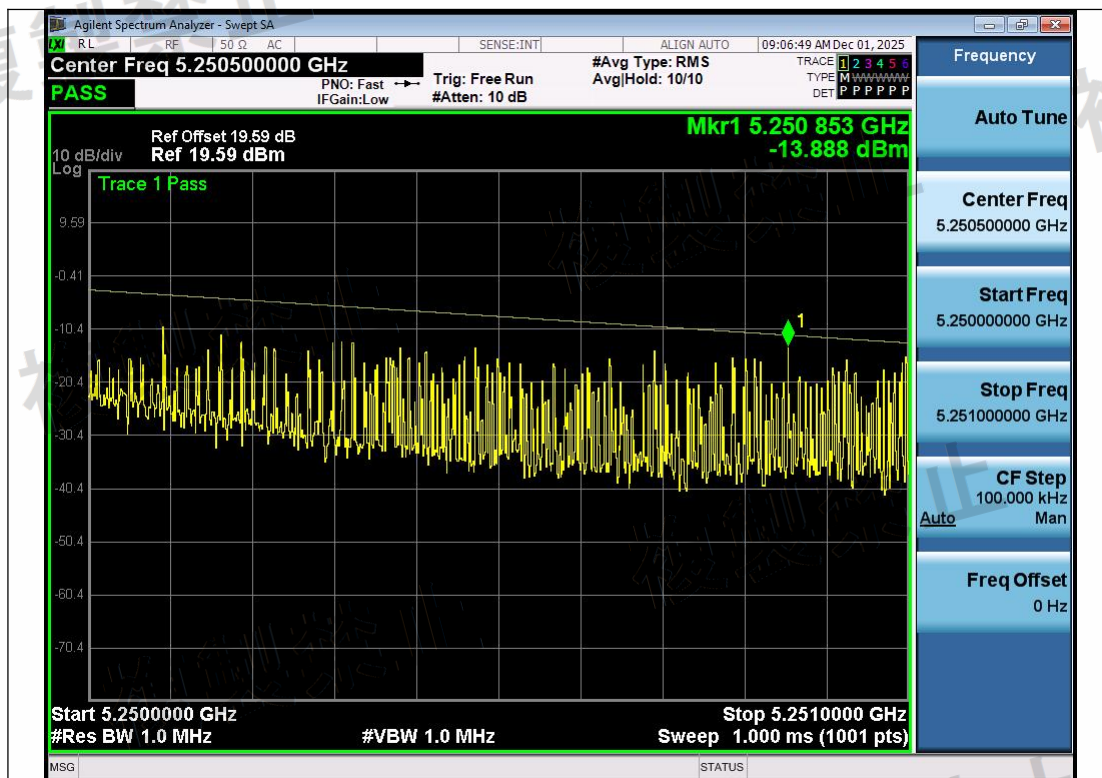



NTNV-11AX40SISO-Ant1-5230-5250~5251-See table below

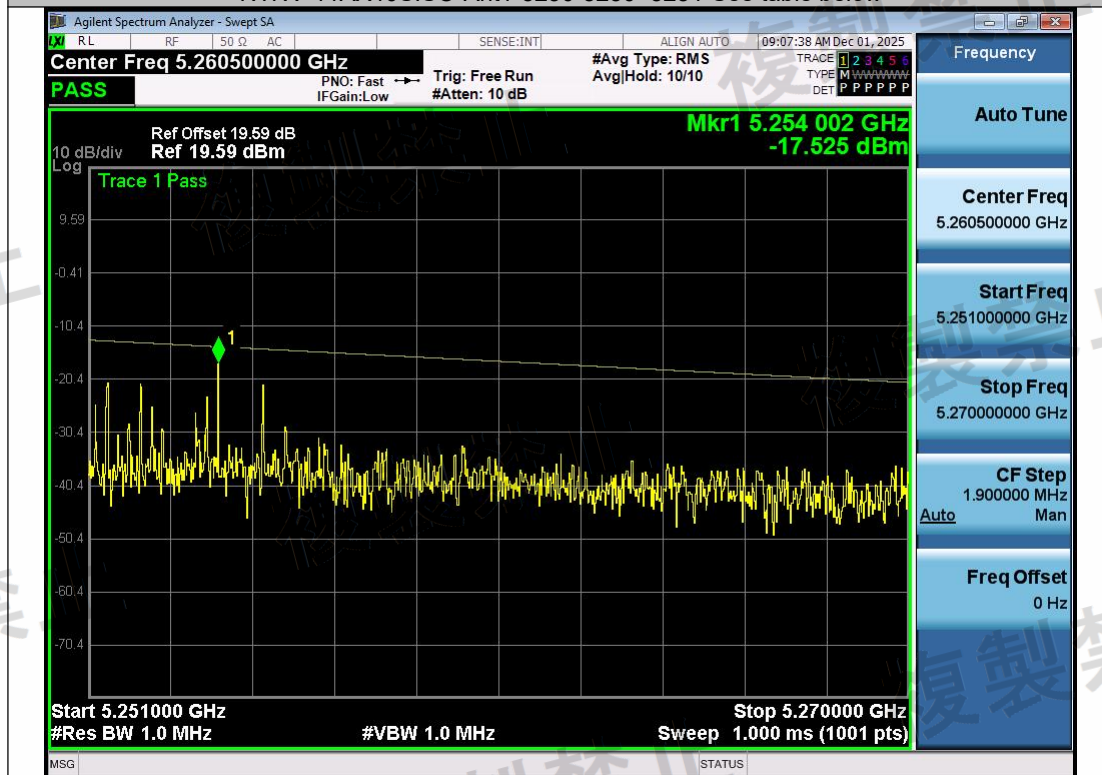


NTNV-11AX40SISO-Ant1-5230-5251~5270-See table below

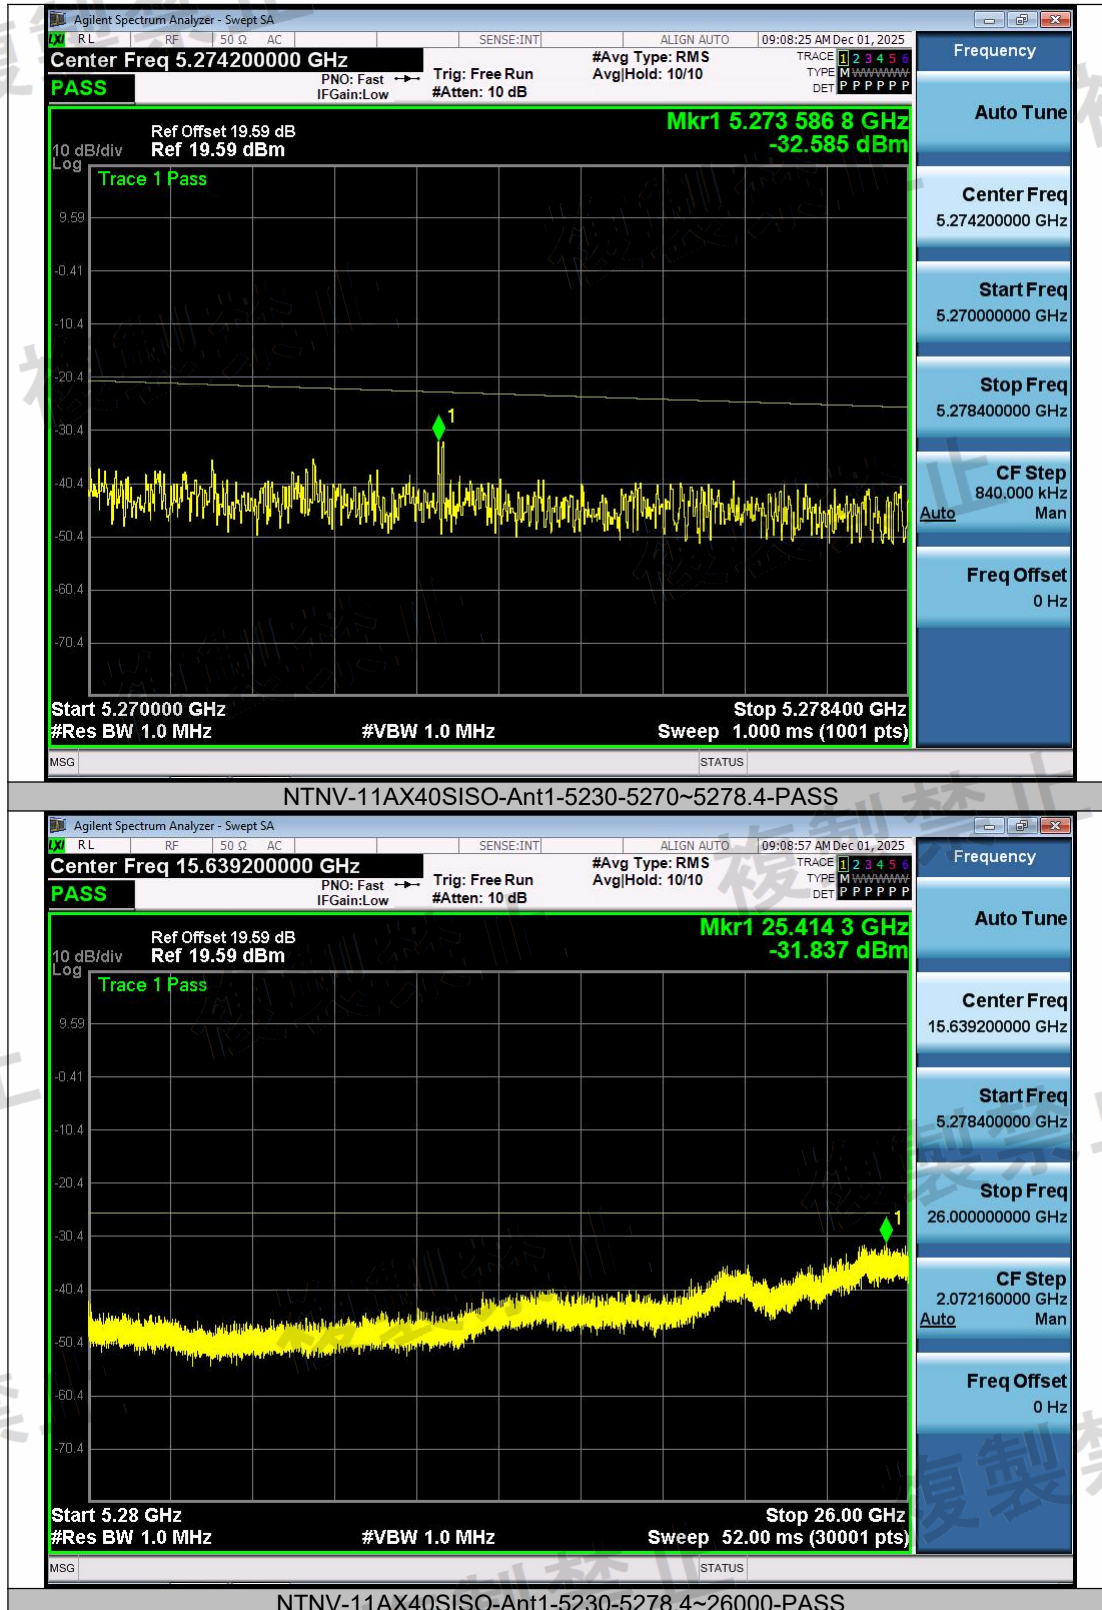

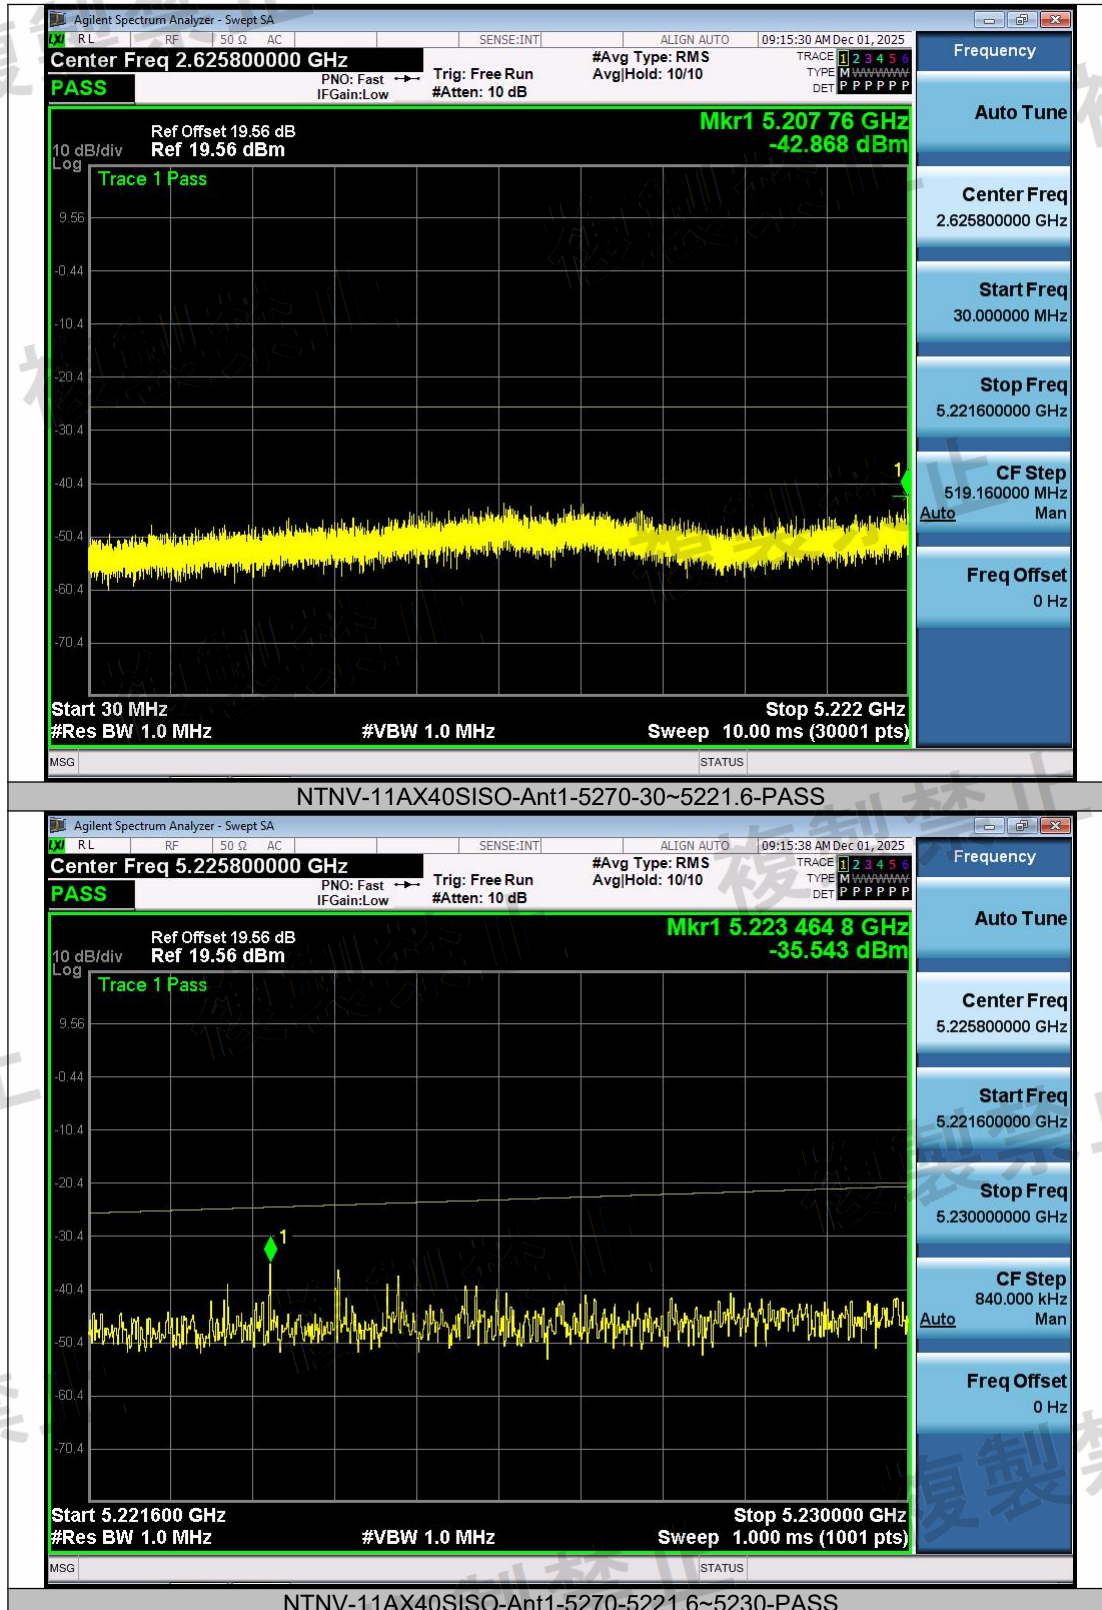


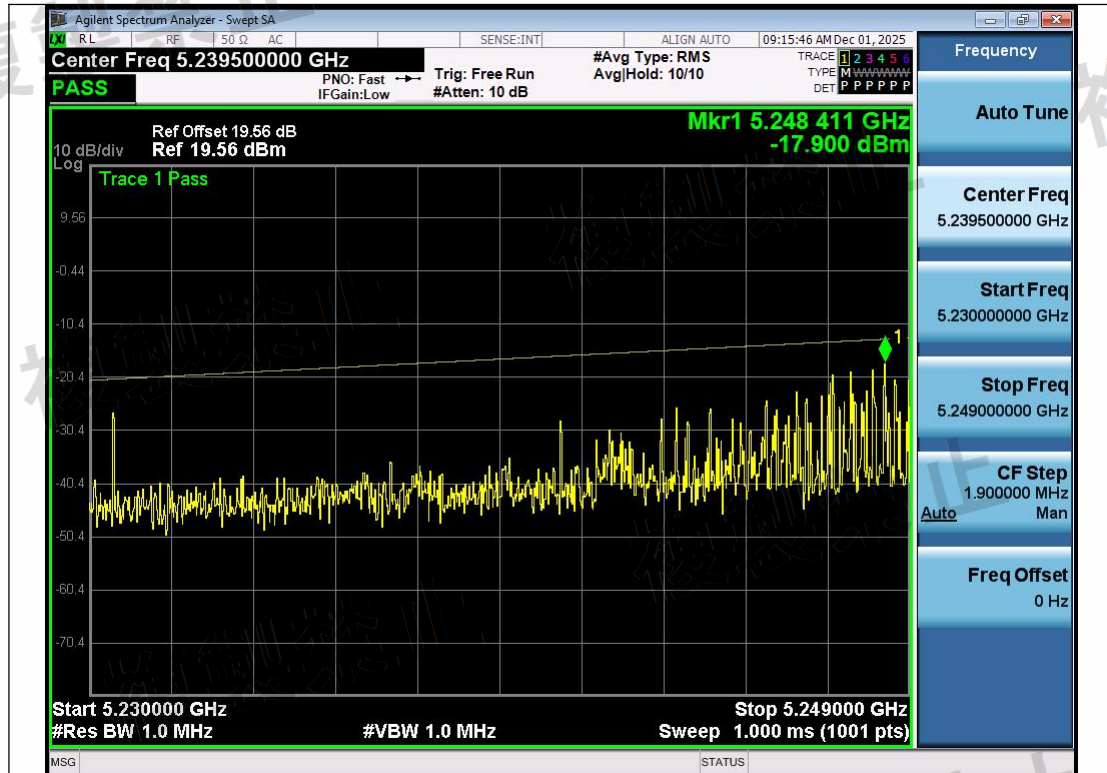



NTNV-11AX40SISO-Ant1-5270-5230~5249-PASS

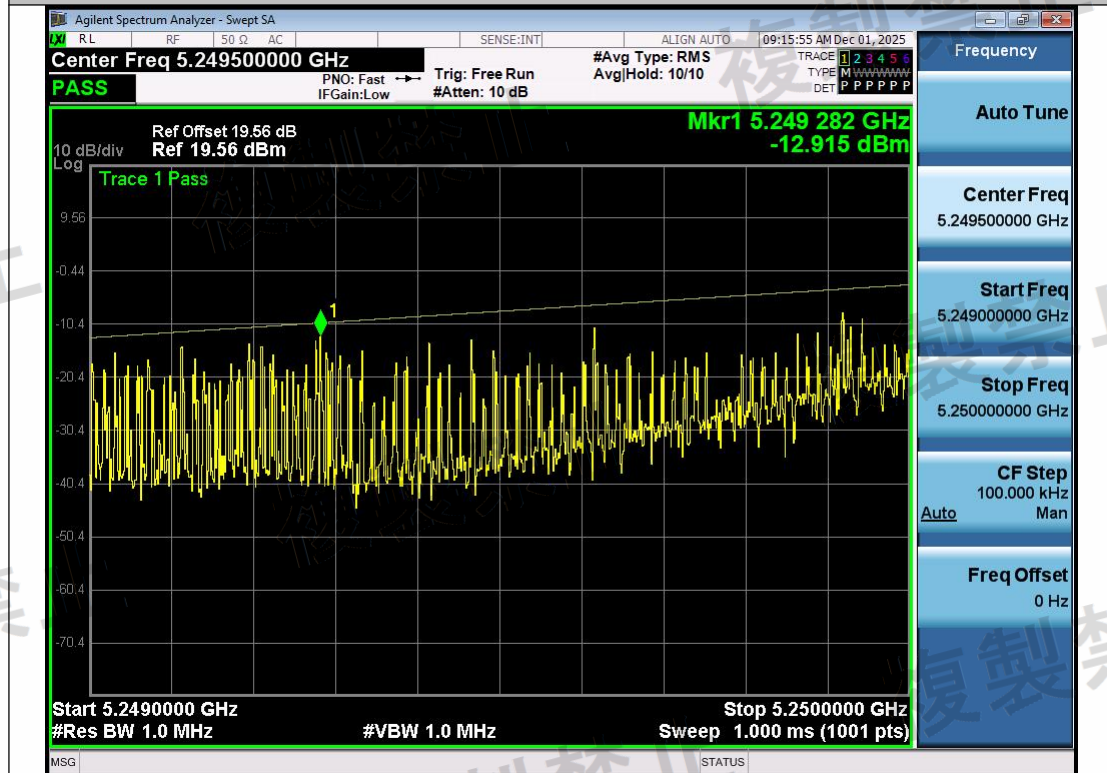



NTNV-11AX40SISO-Ant1-5270-5249~5250-See table below

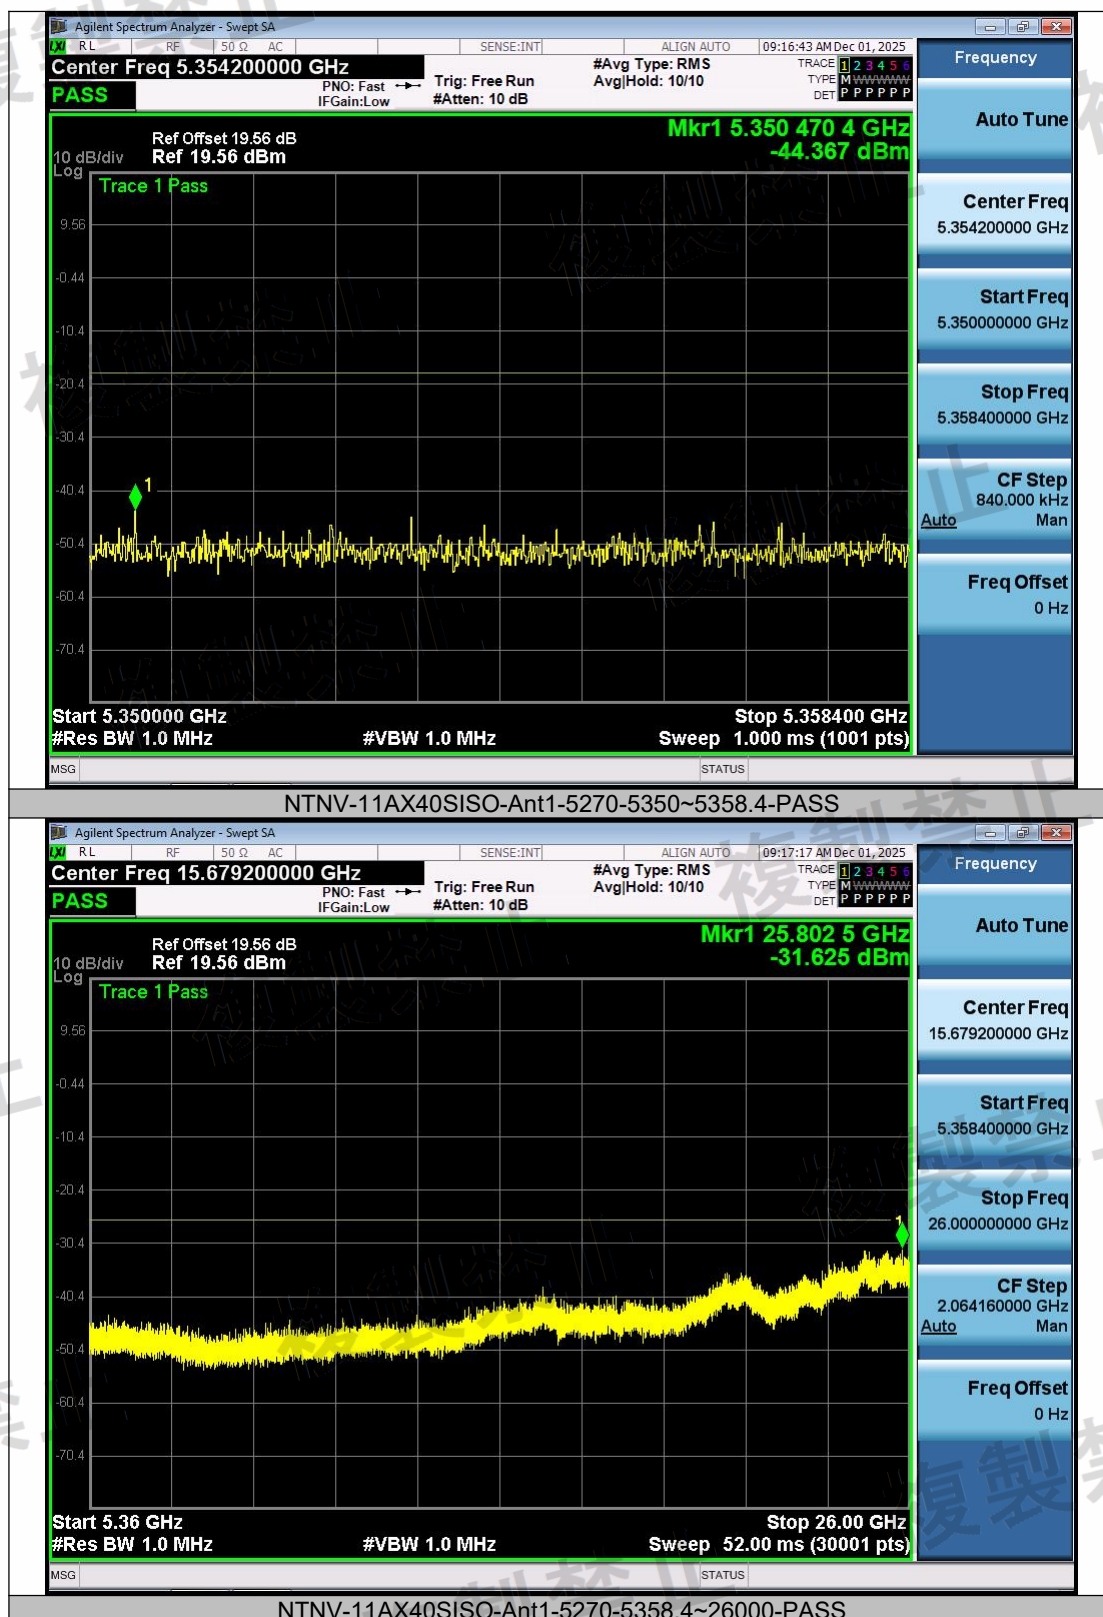


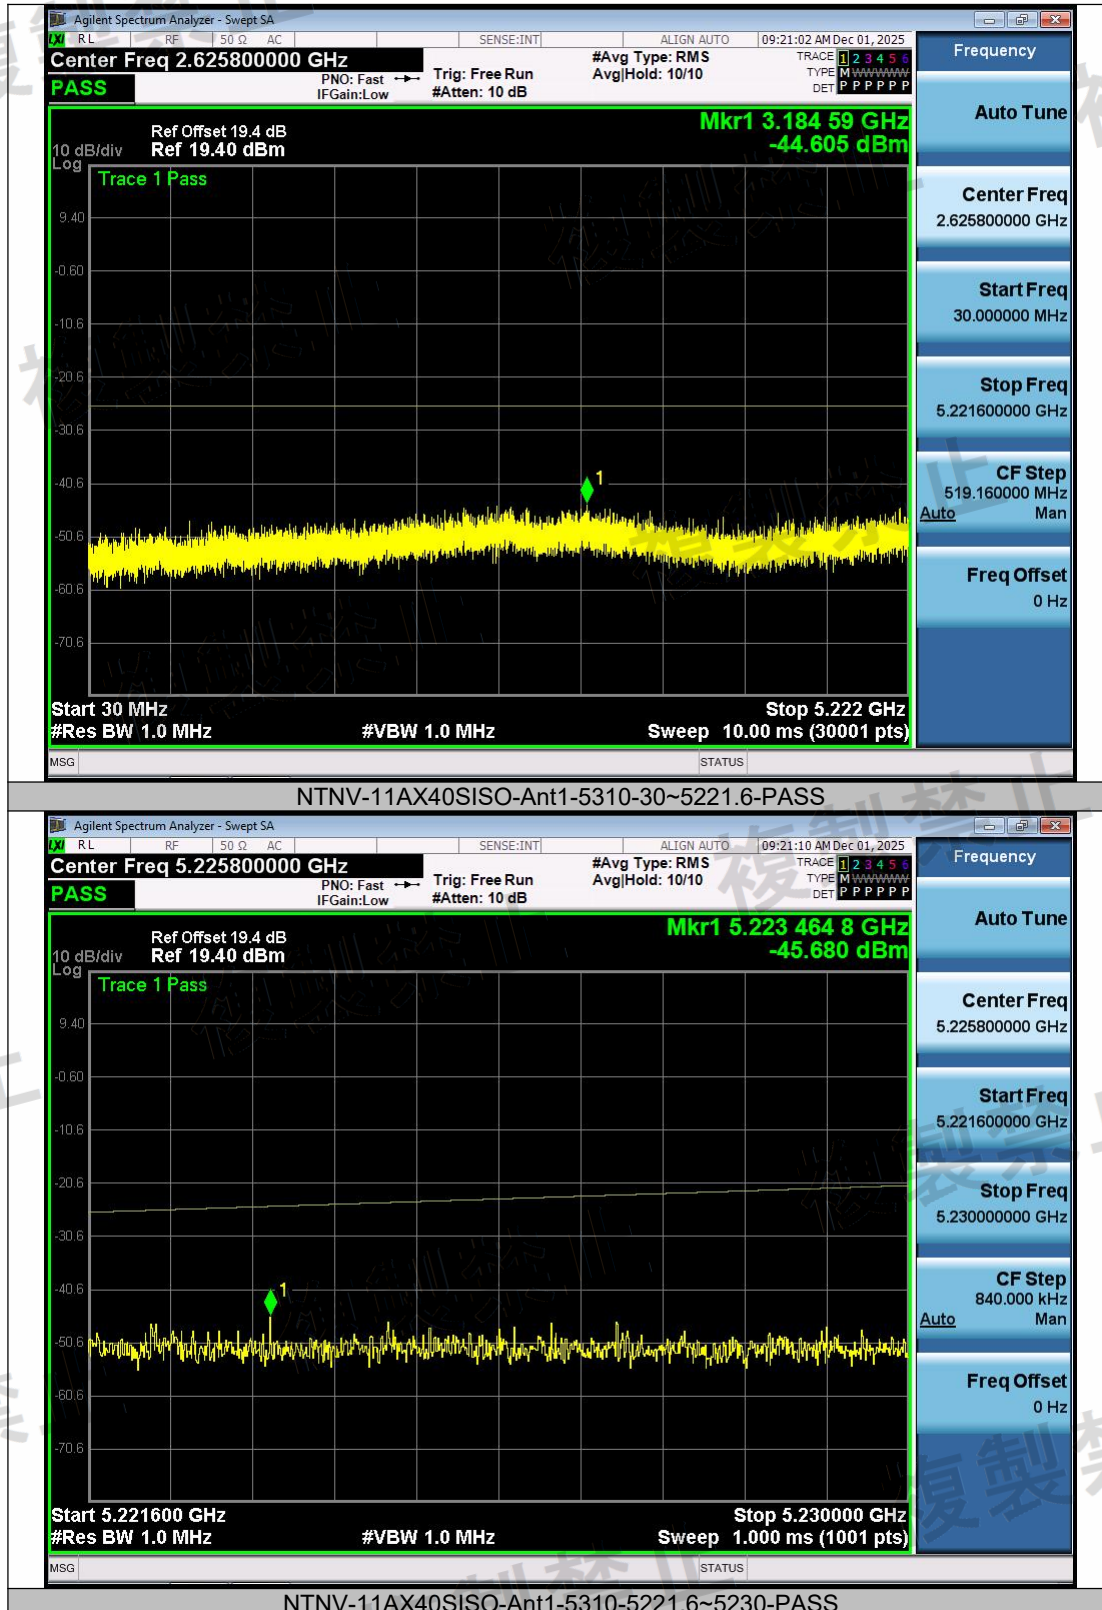


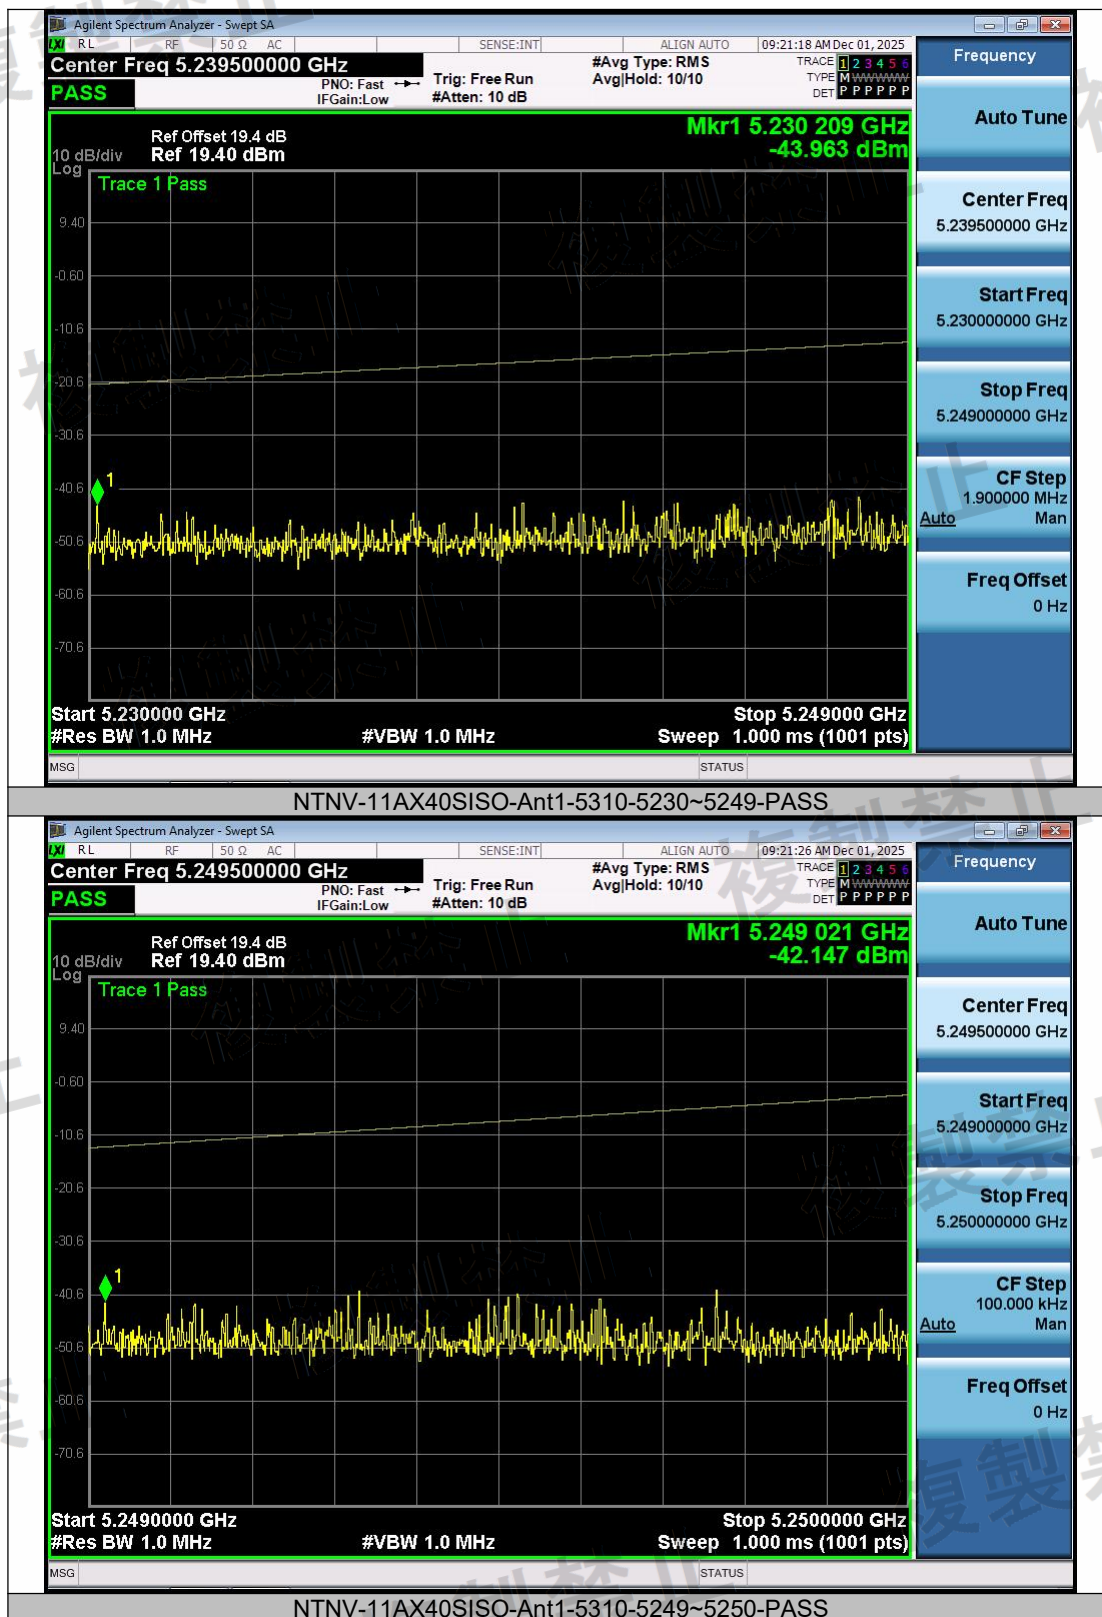

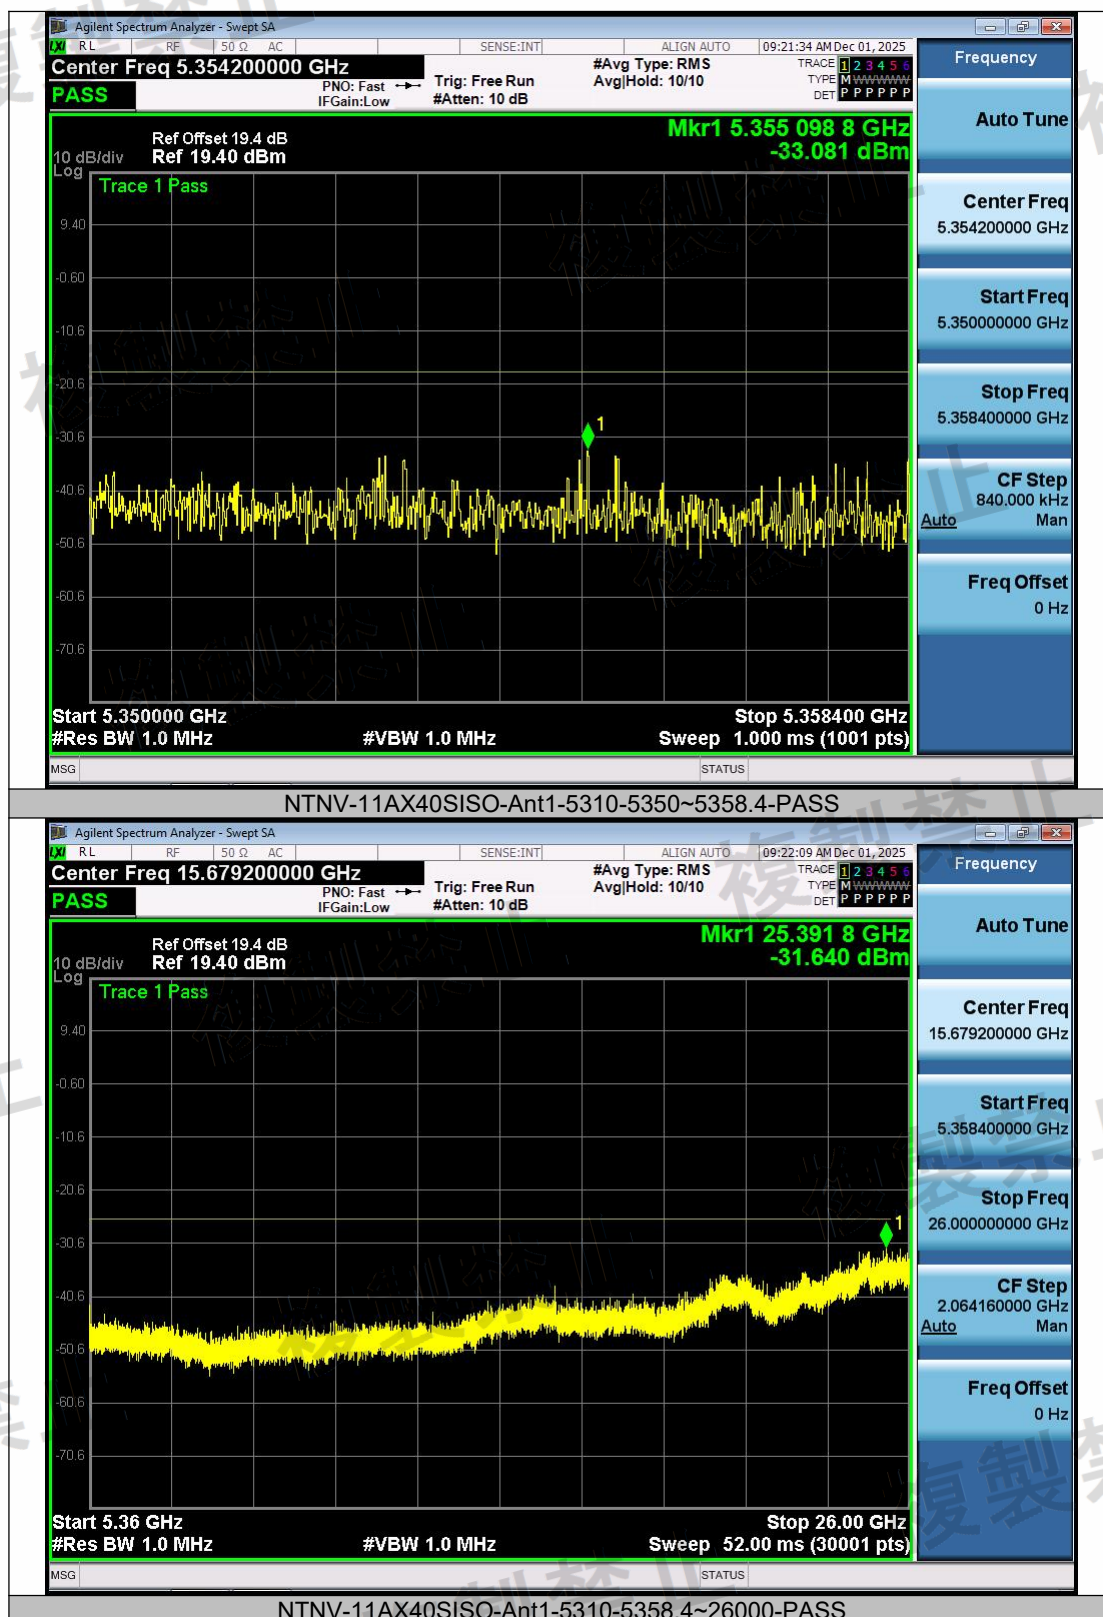


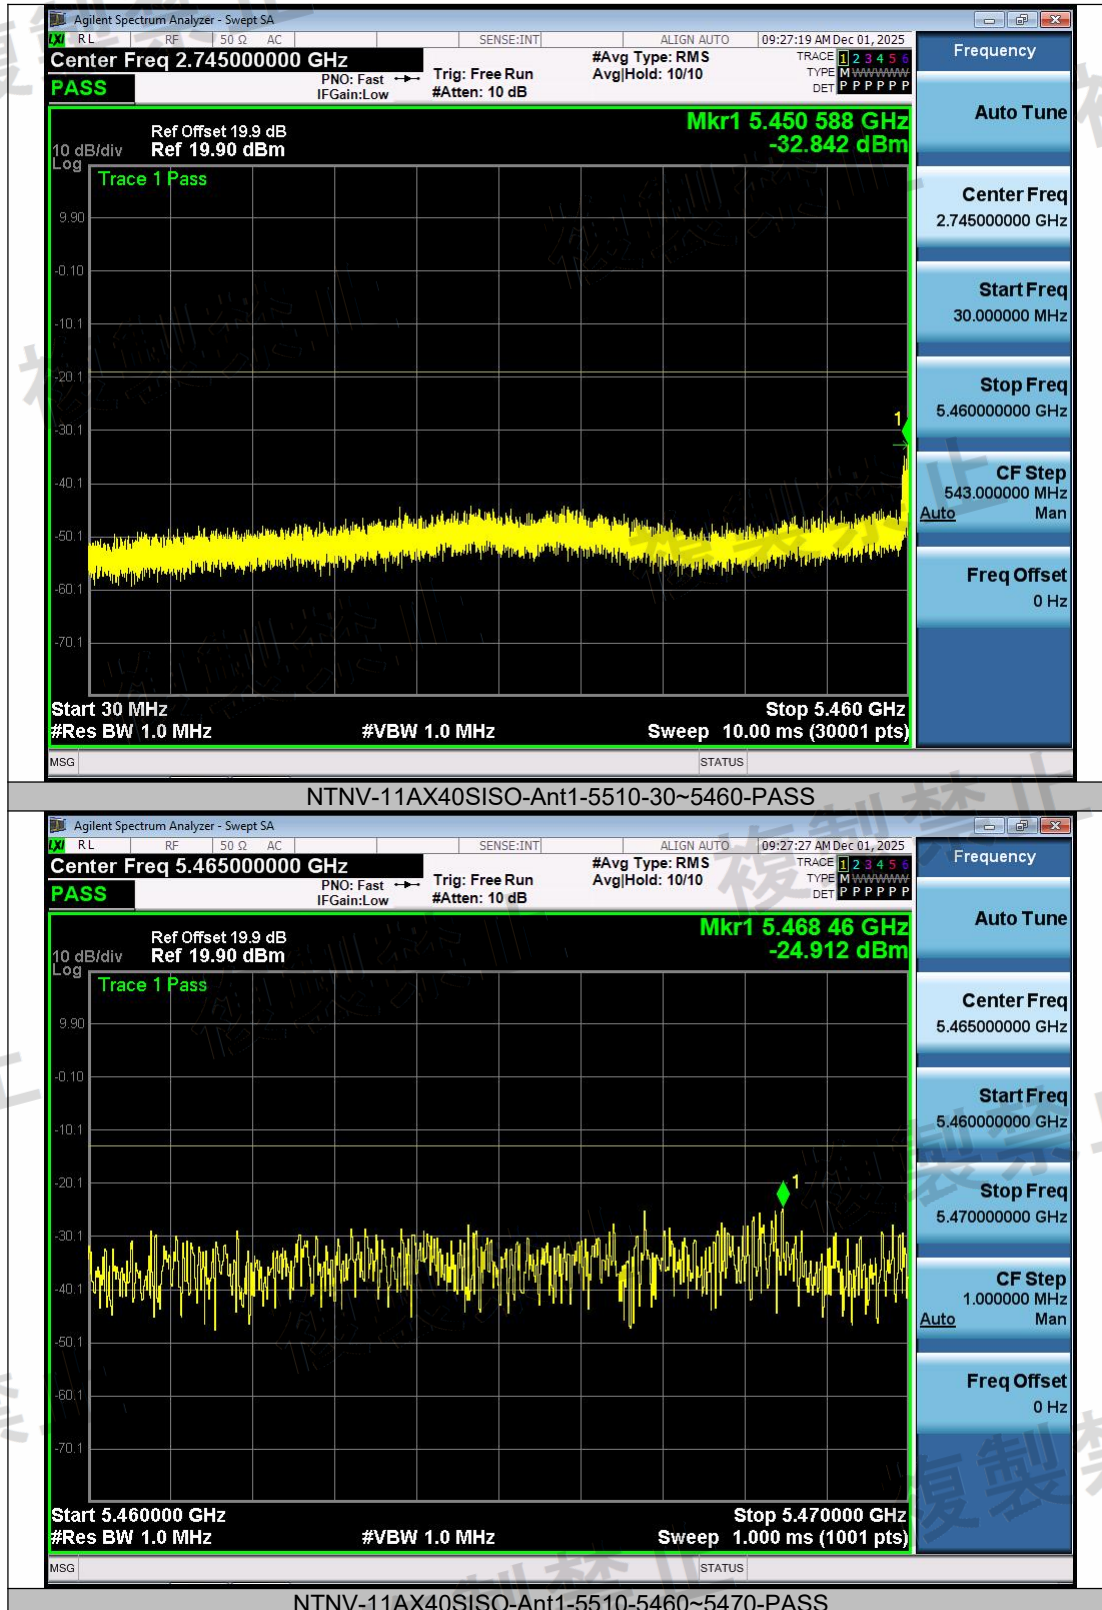

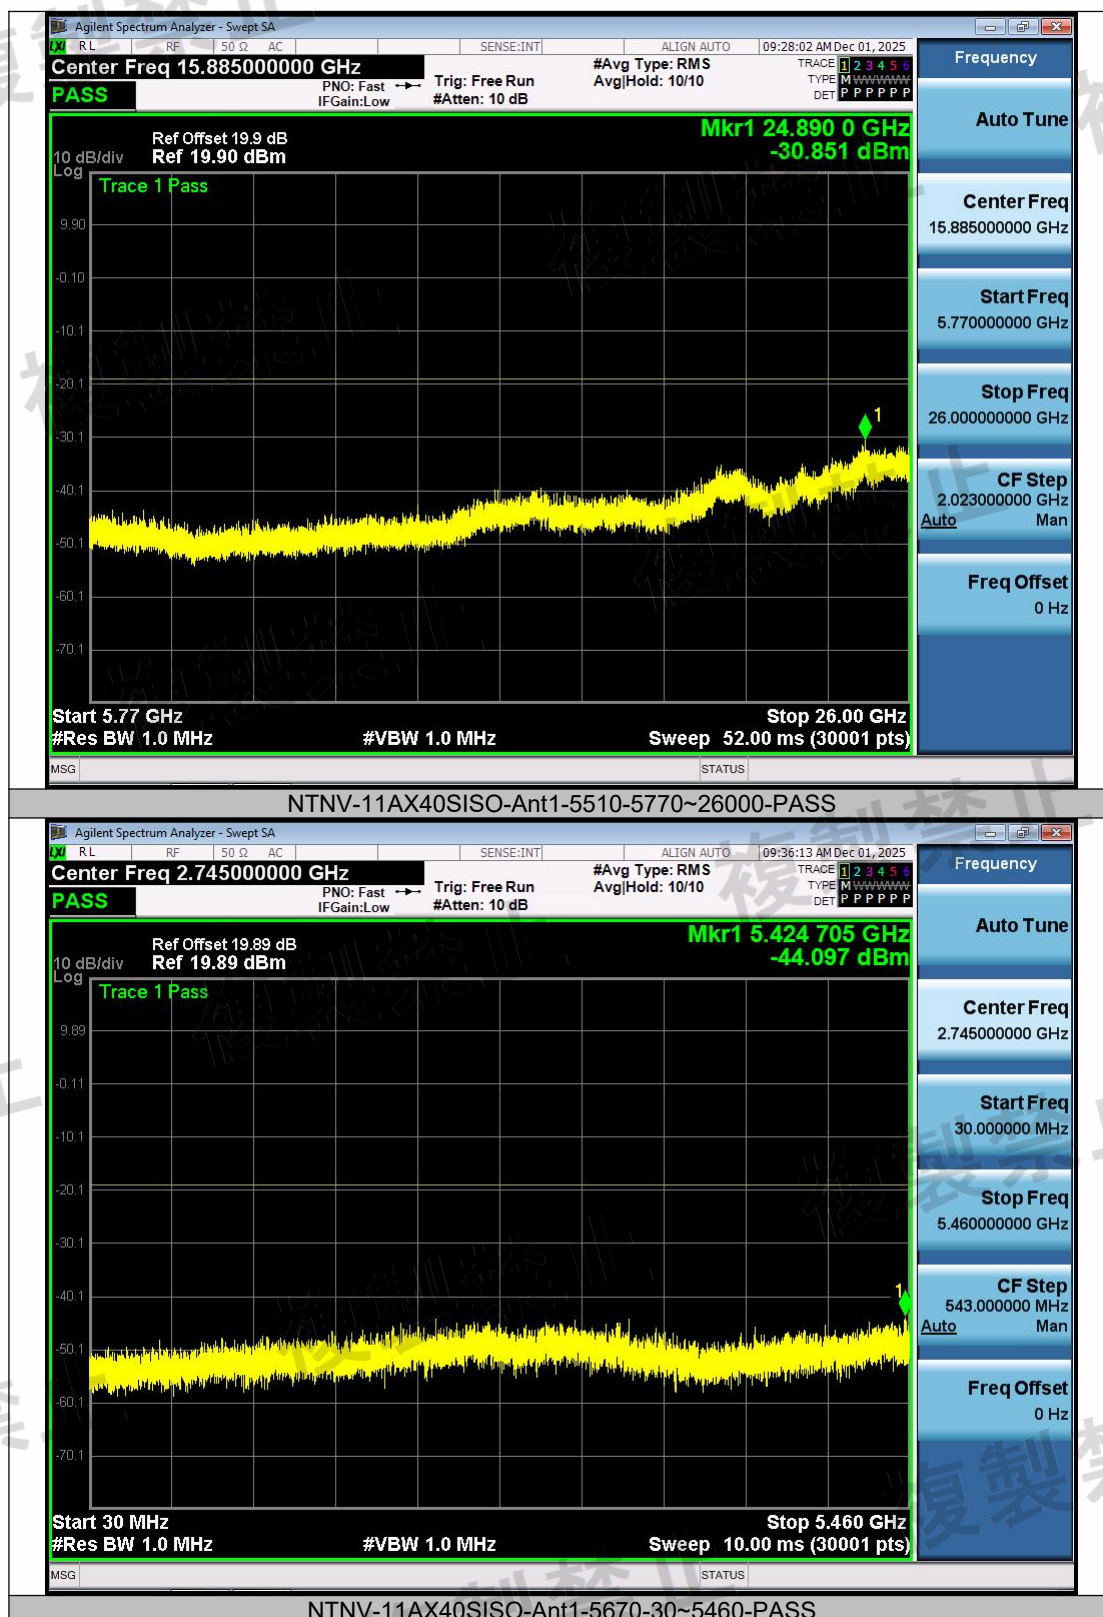


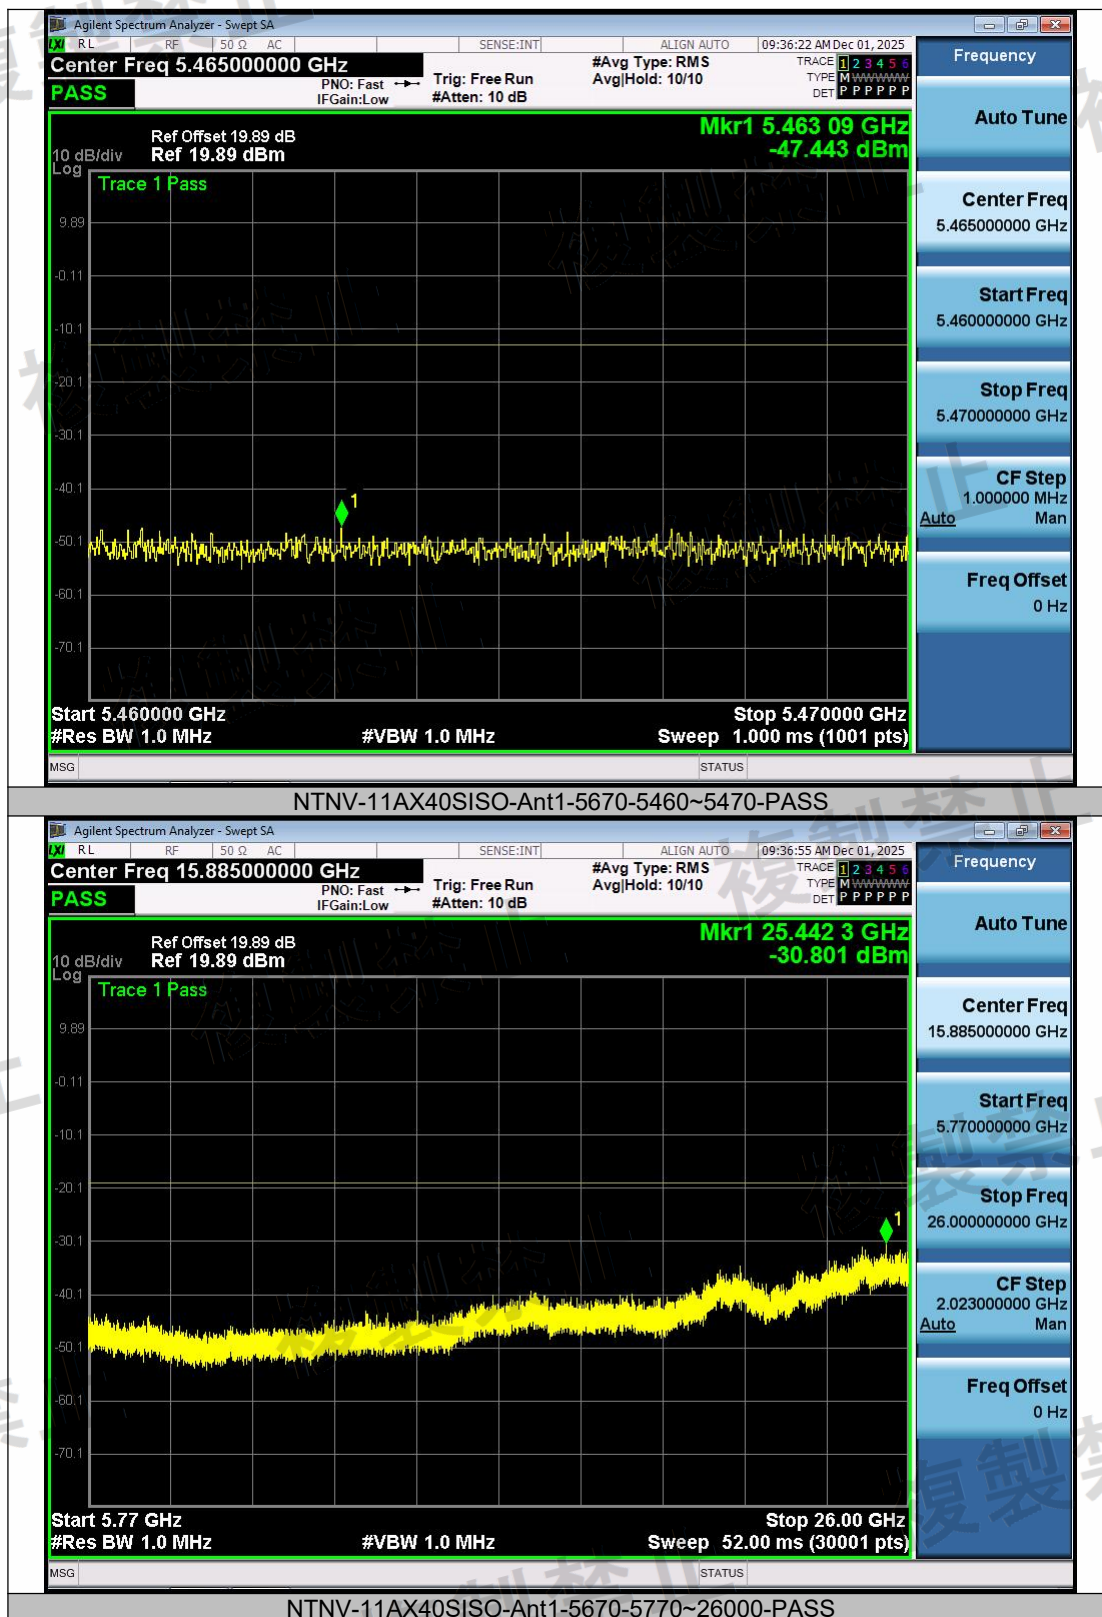



Step2

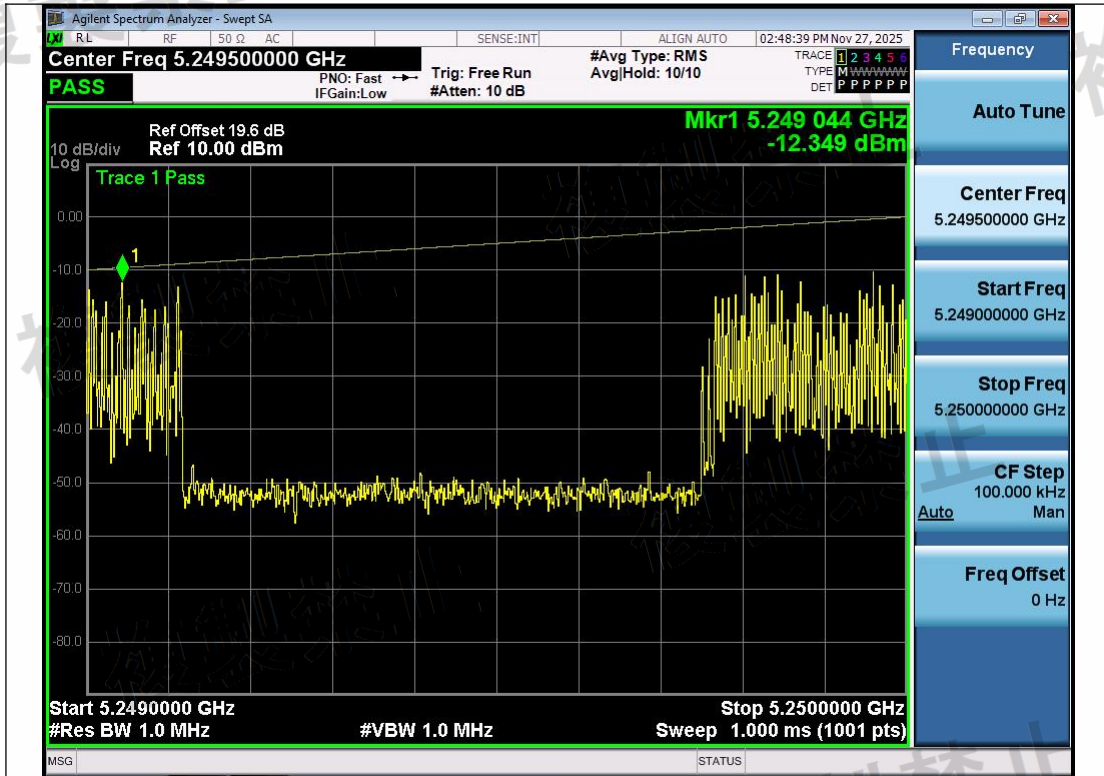



NTNV-11A-Ant1-5260-5249~5250-PASS

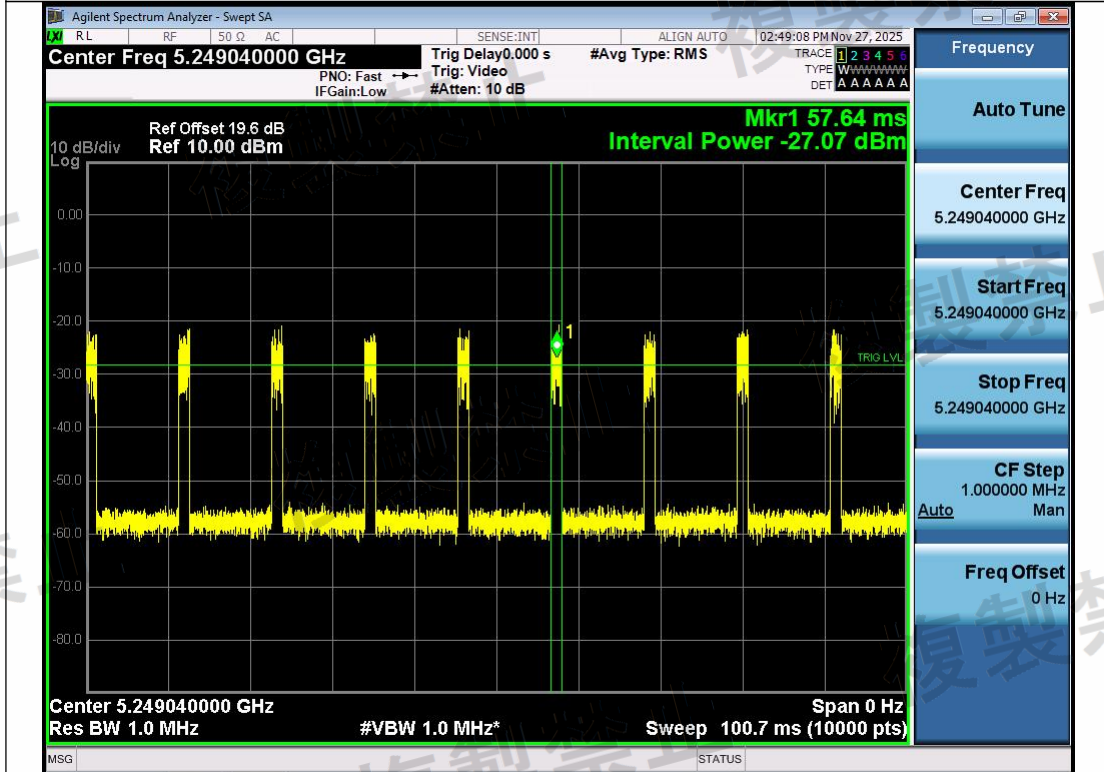


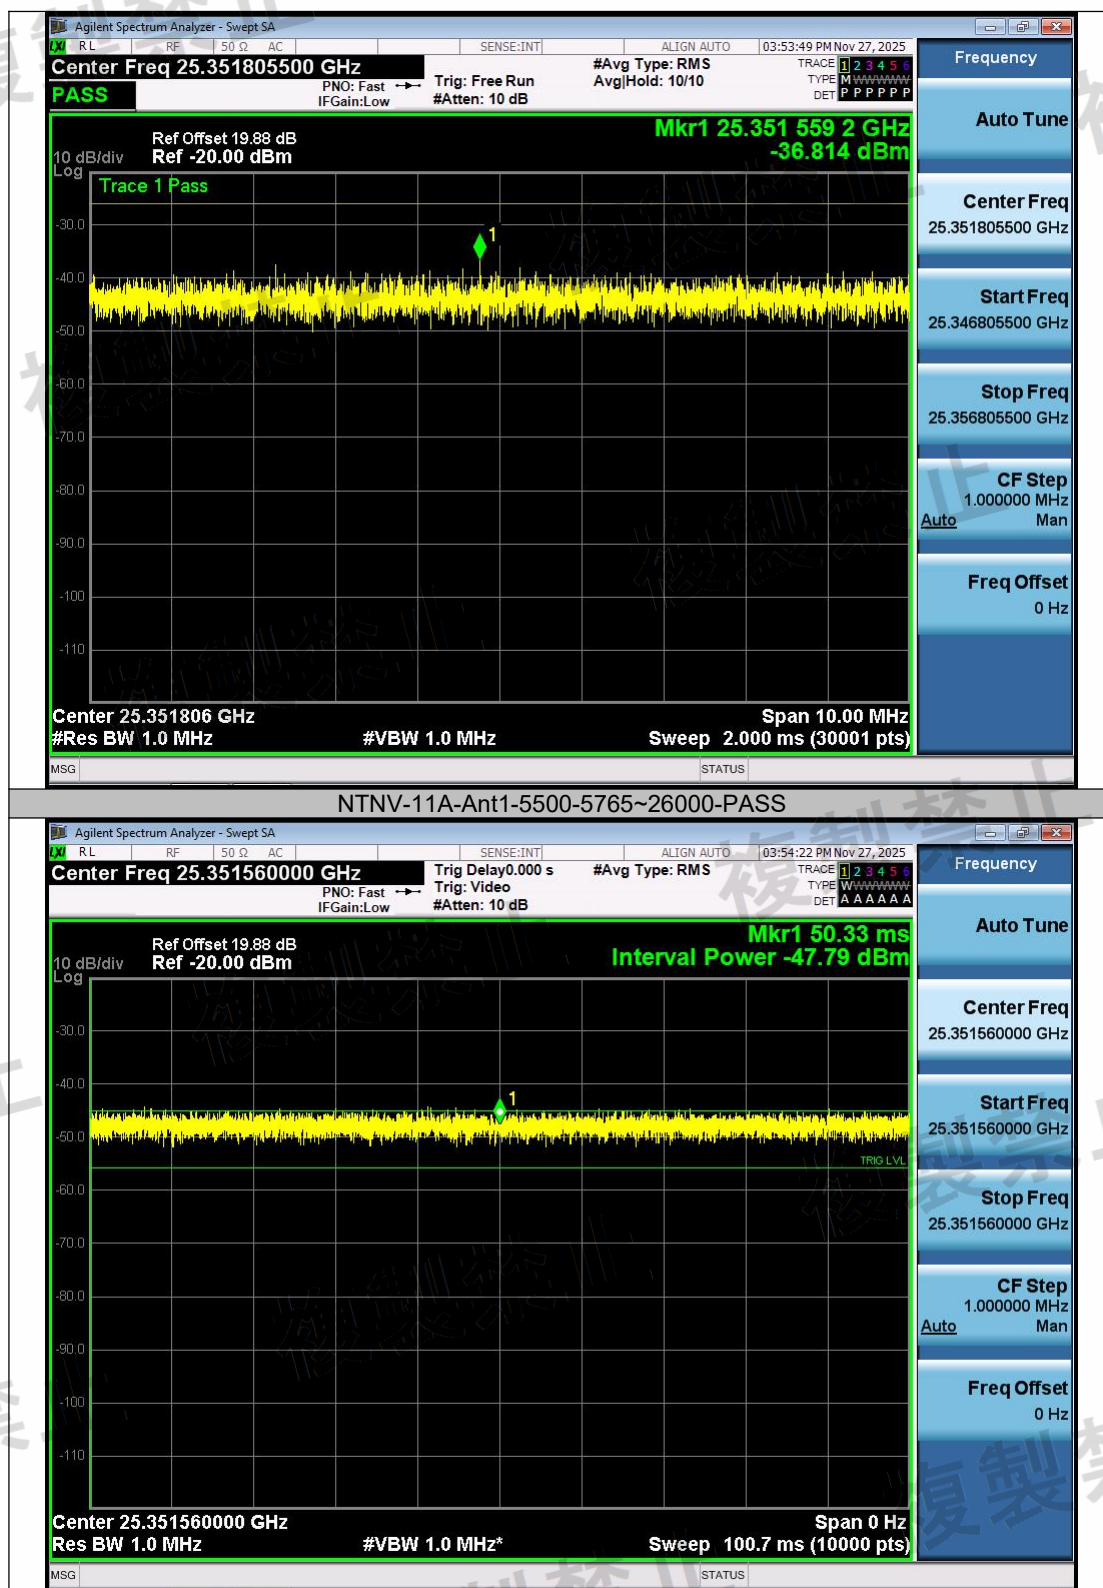


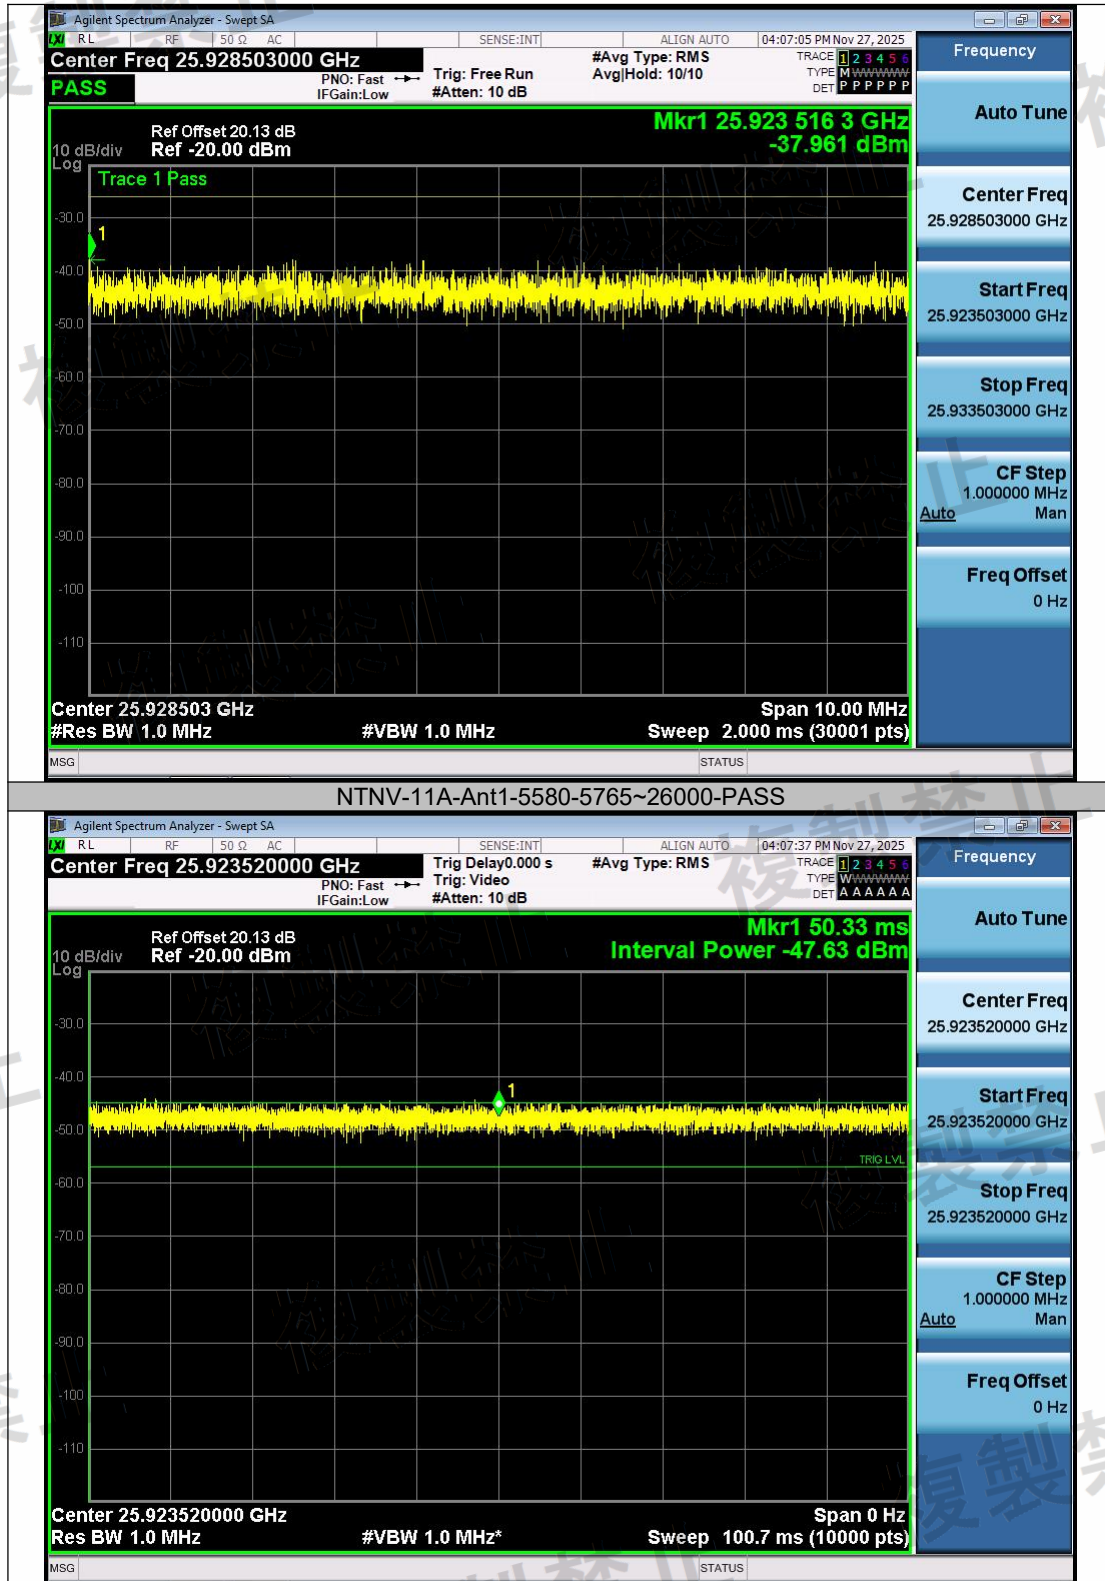


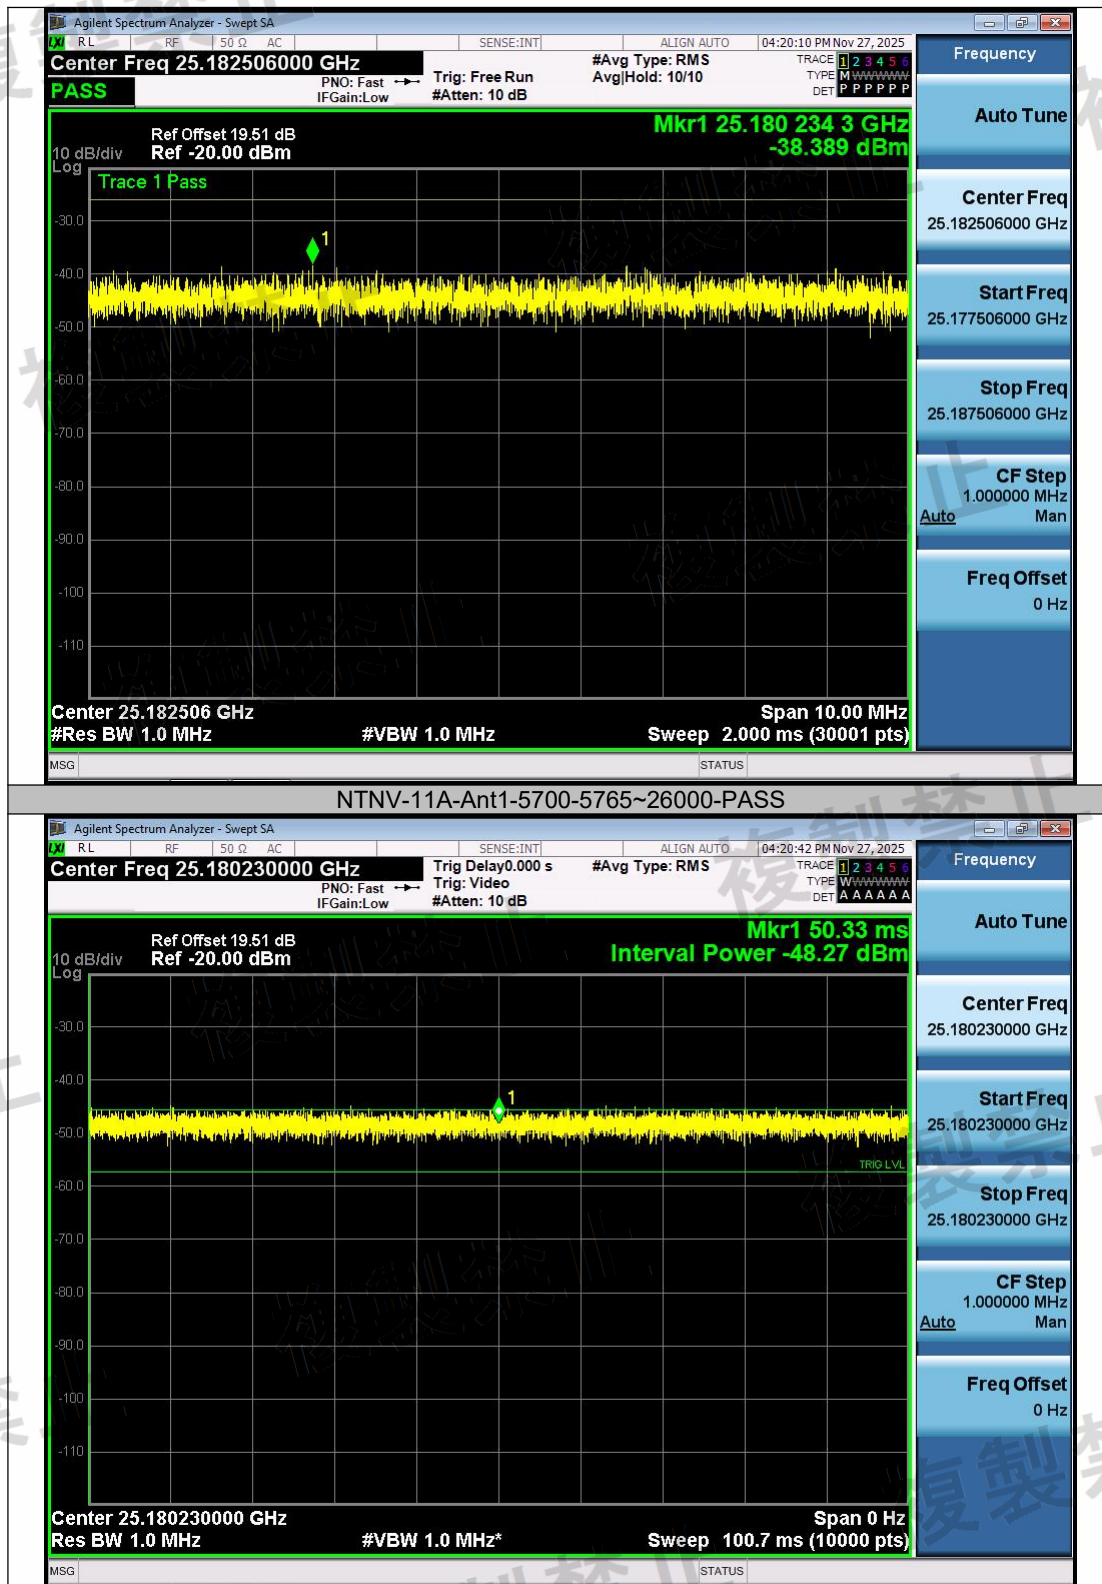


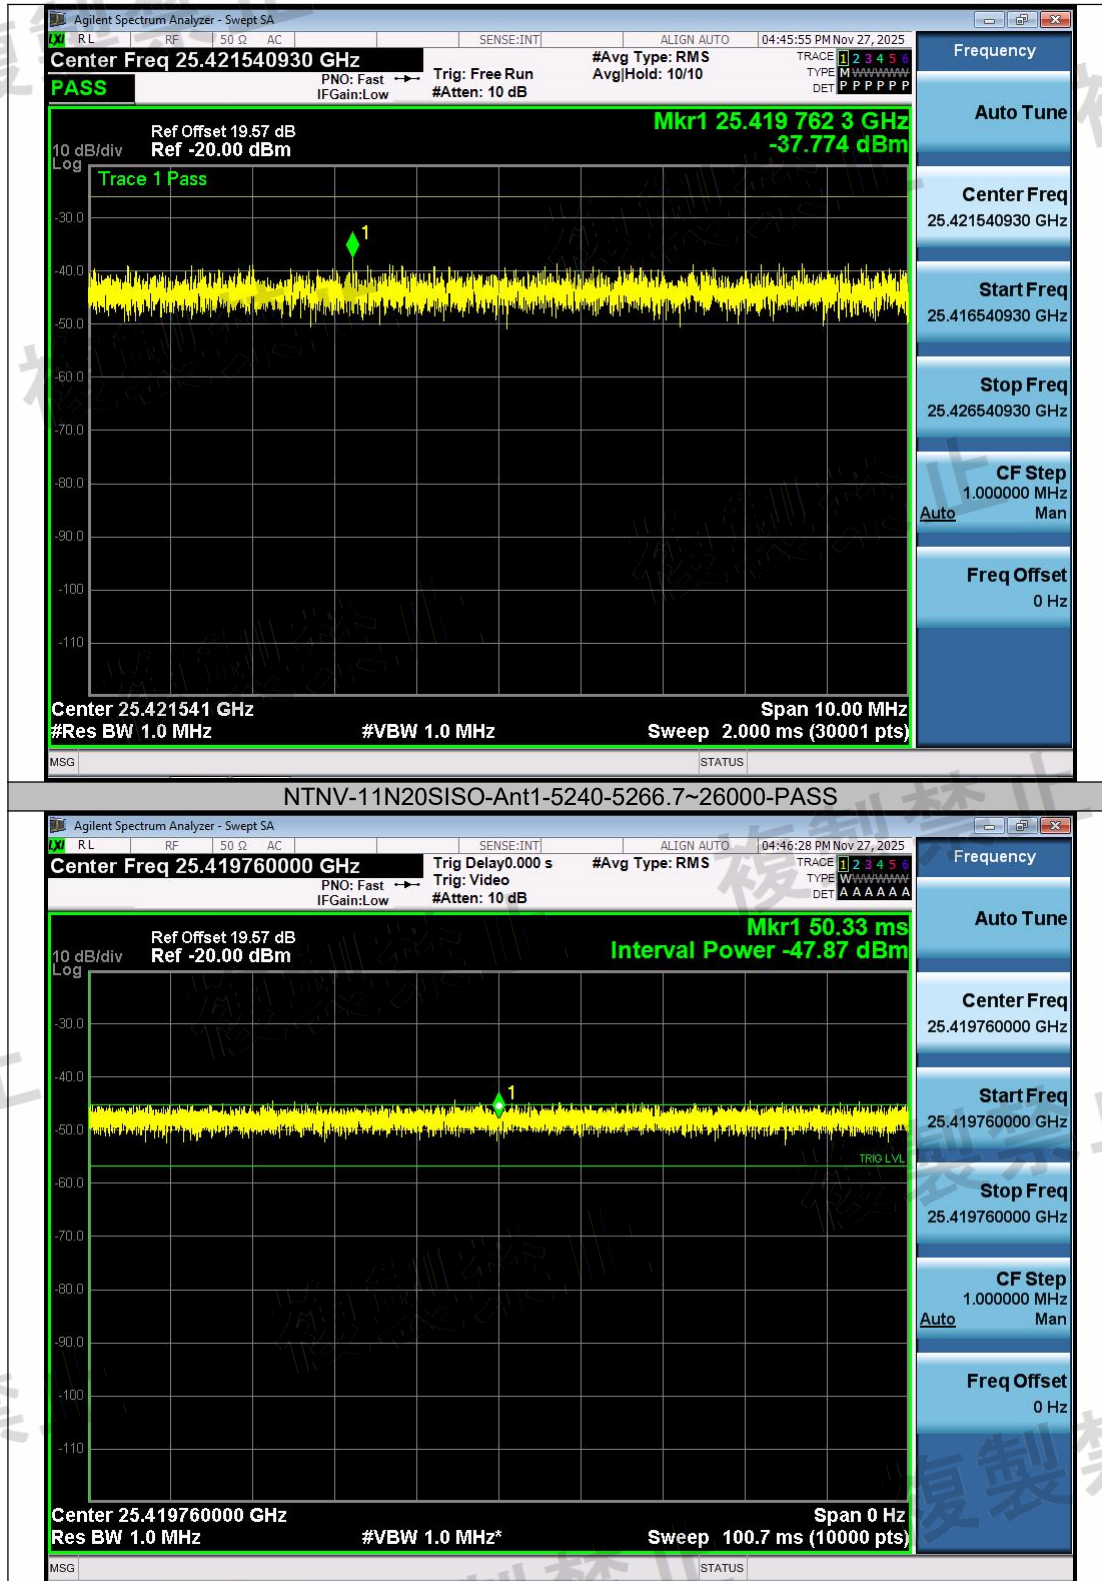


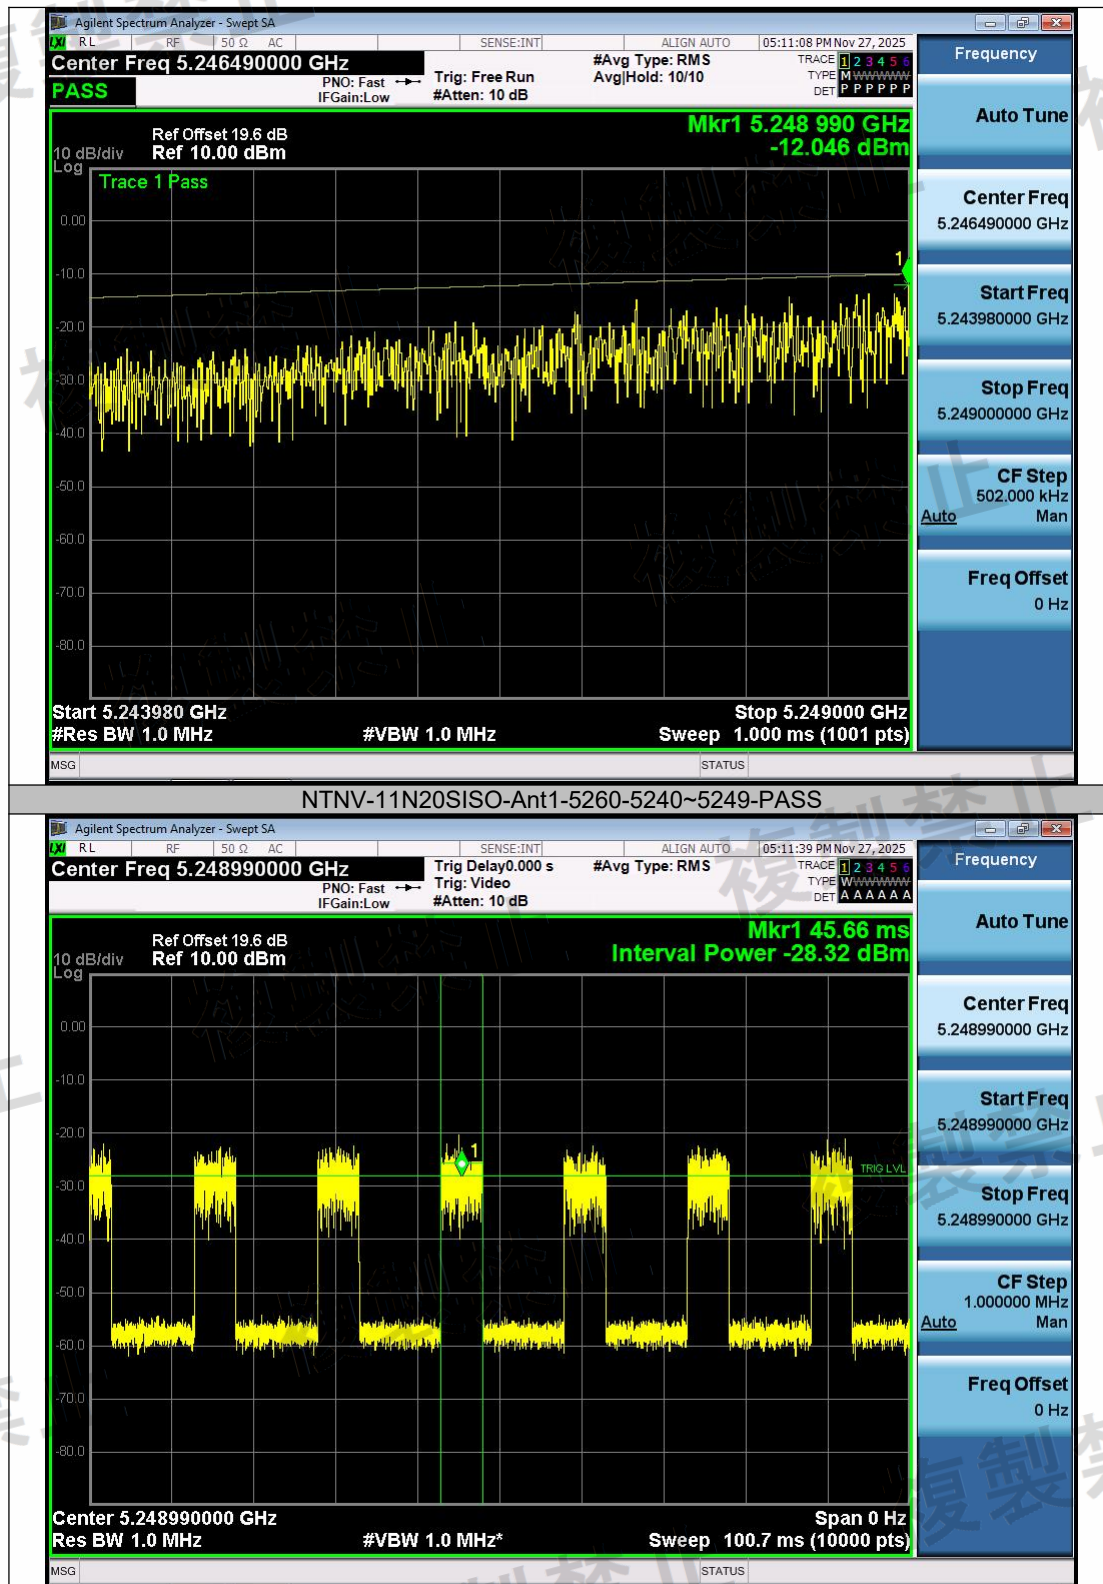


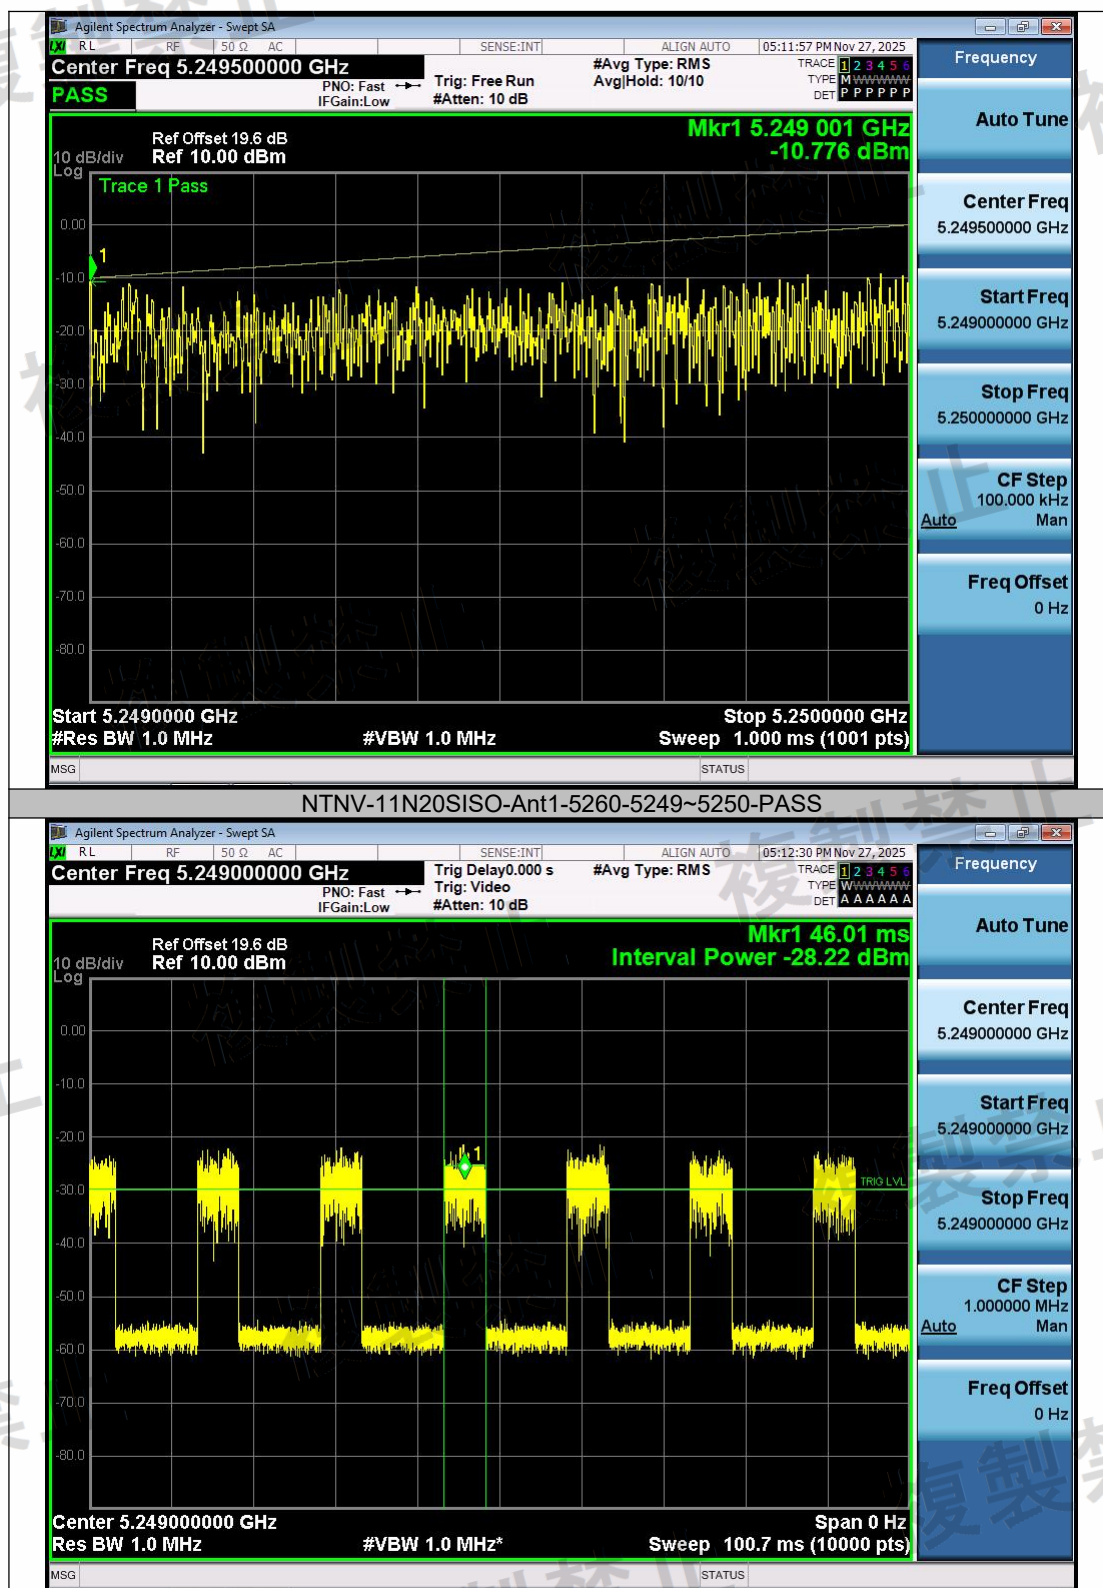


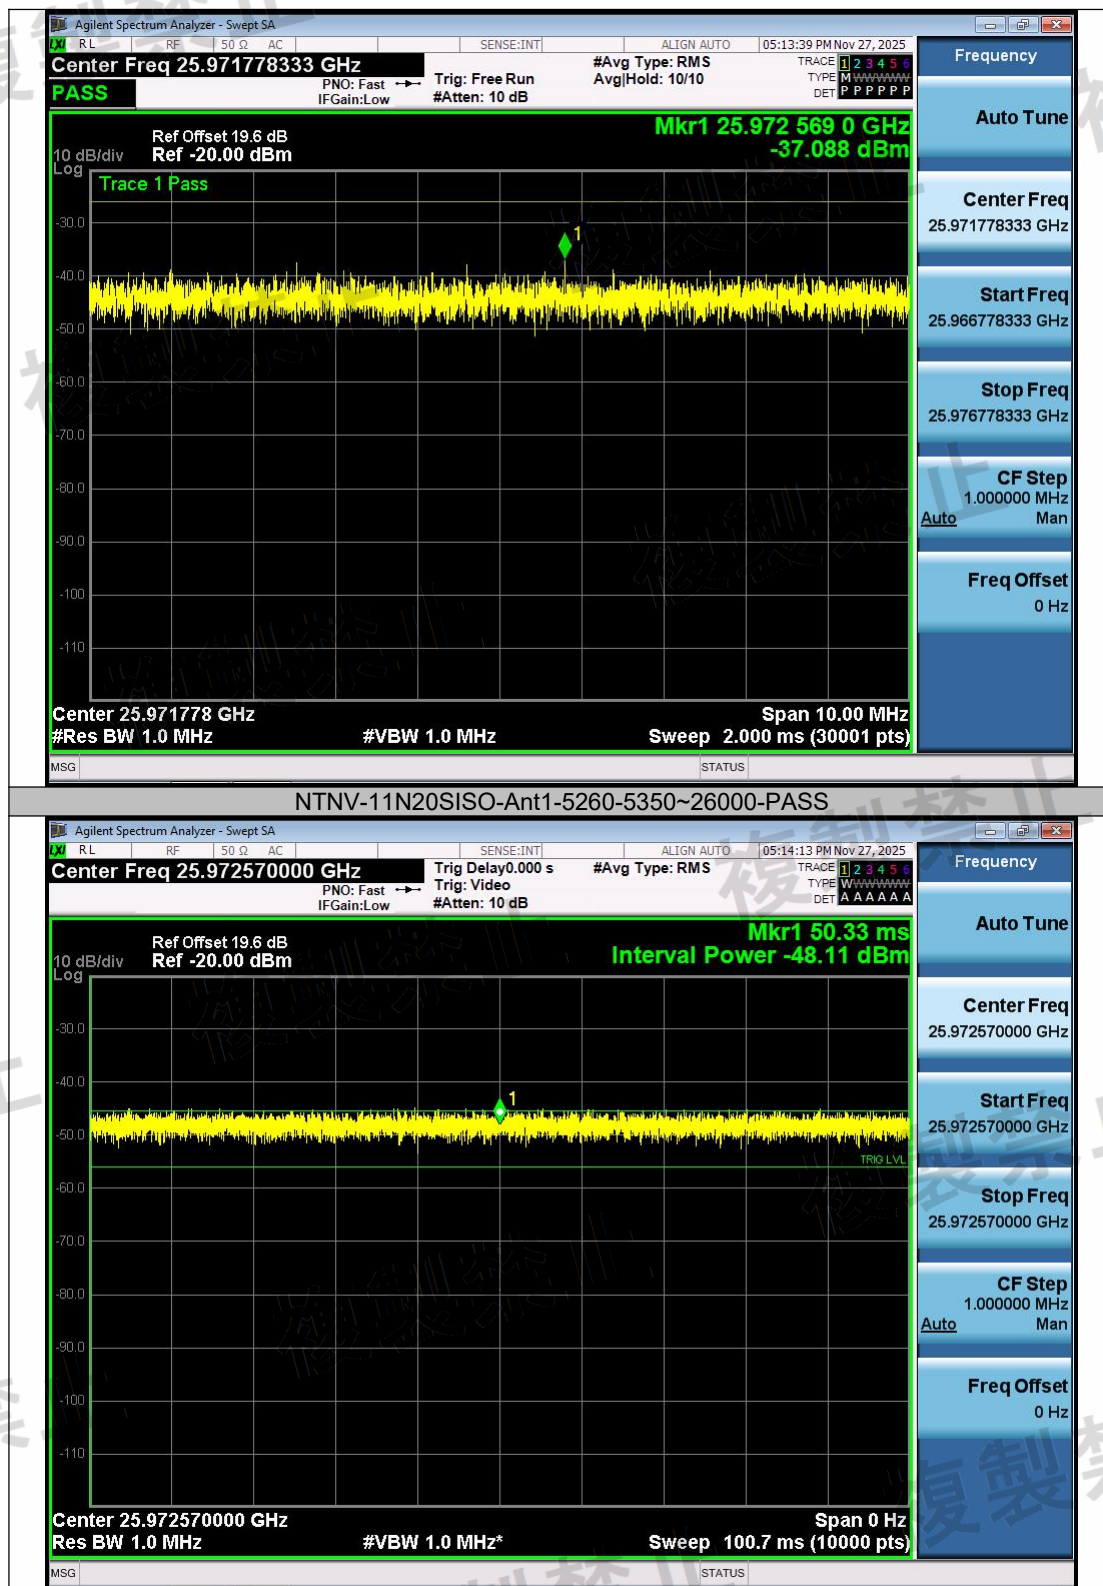


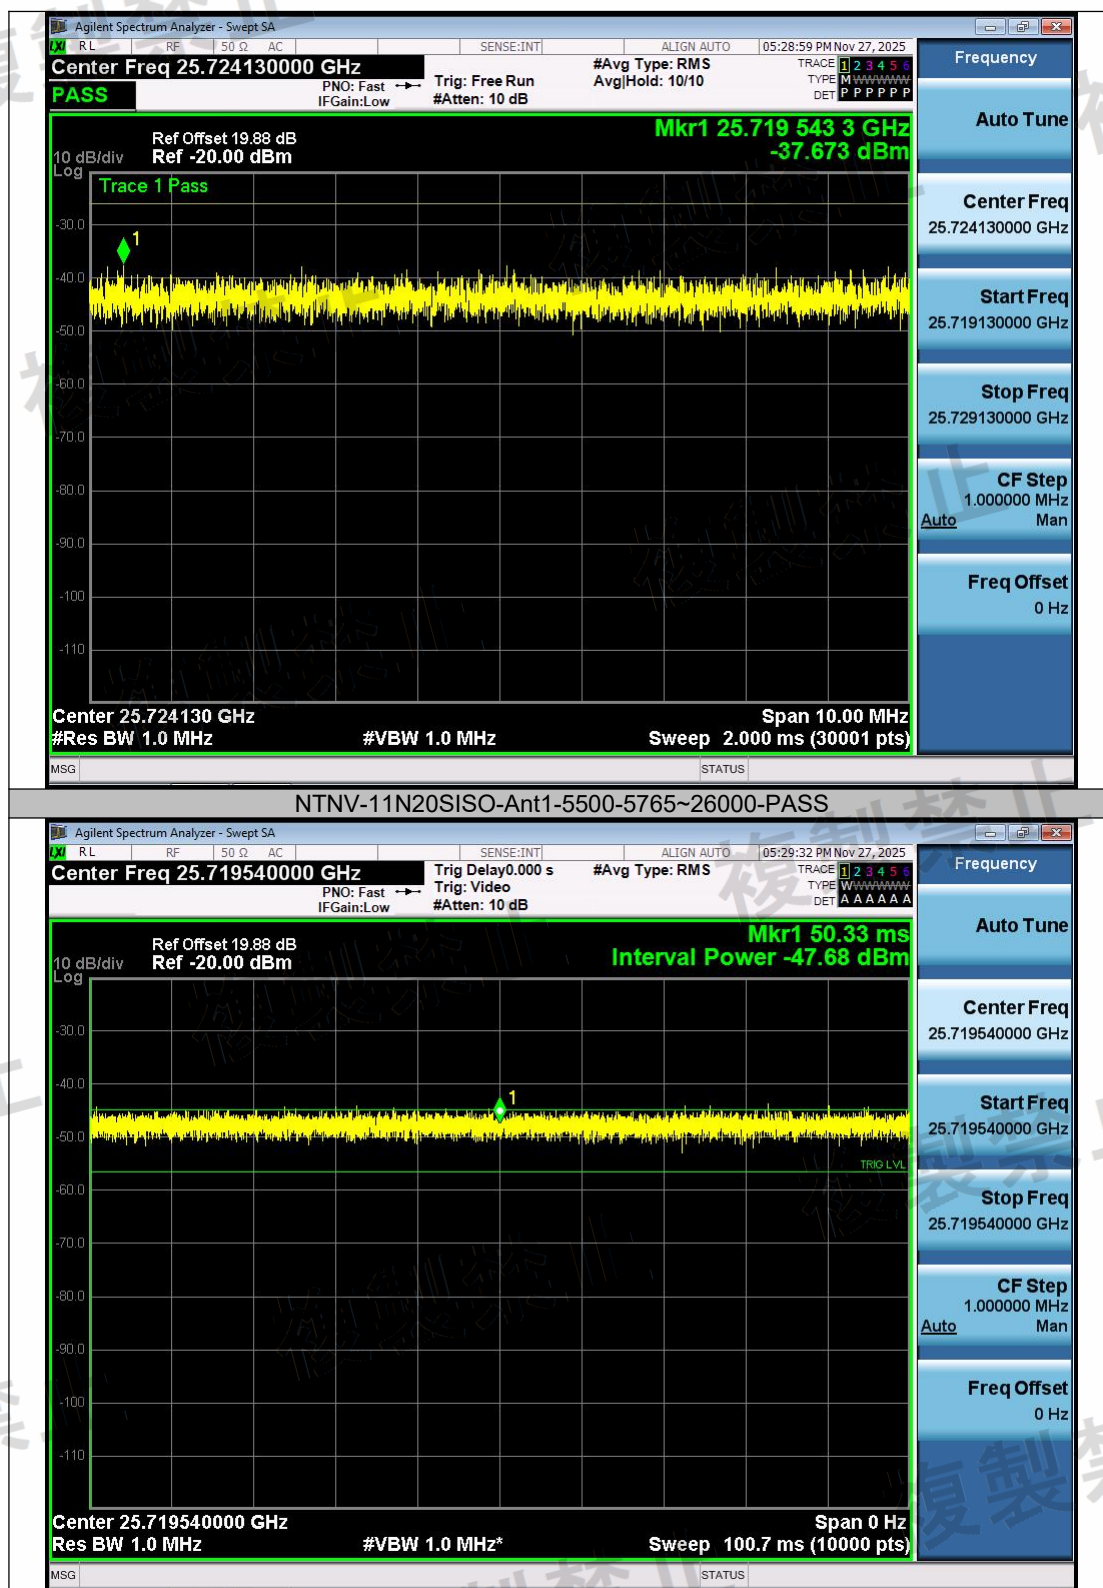


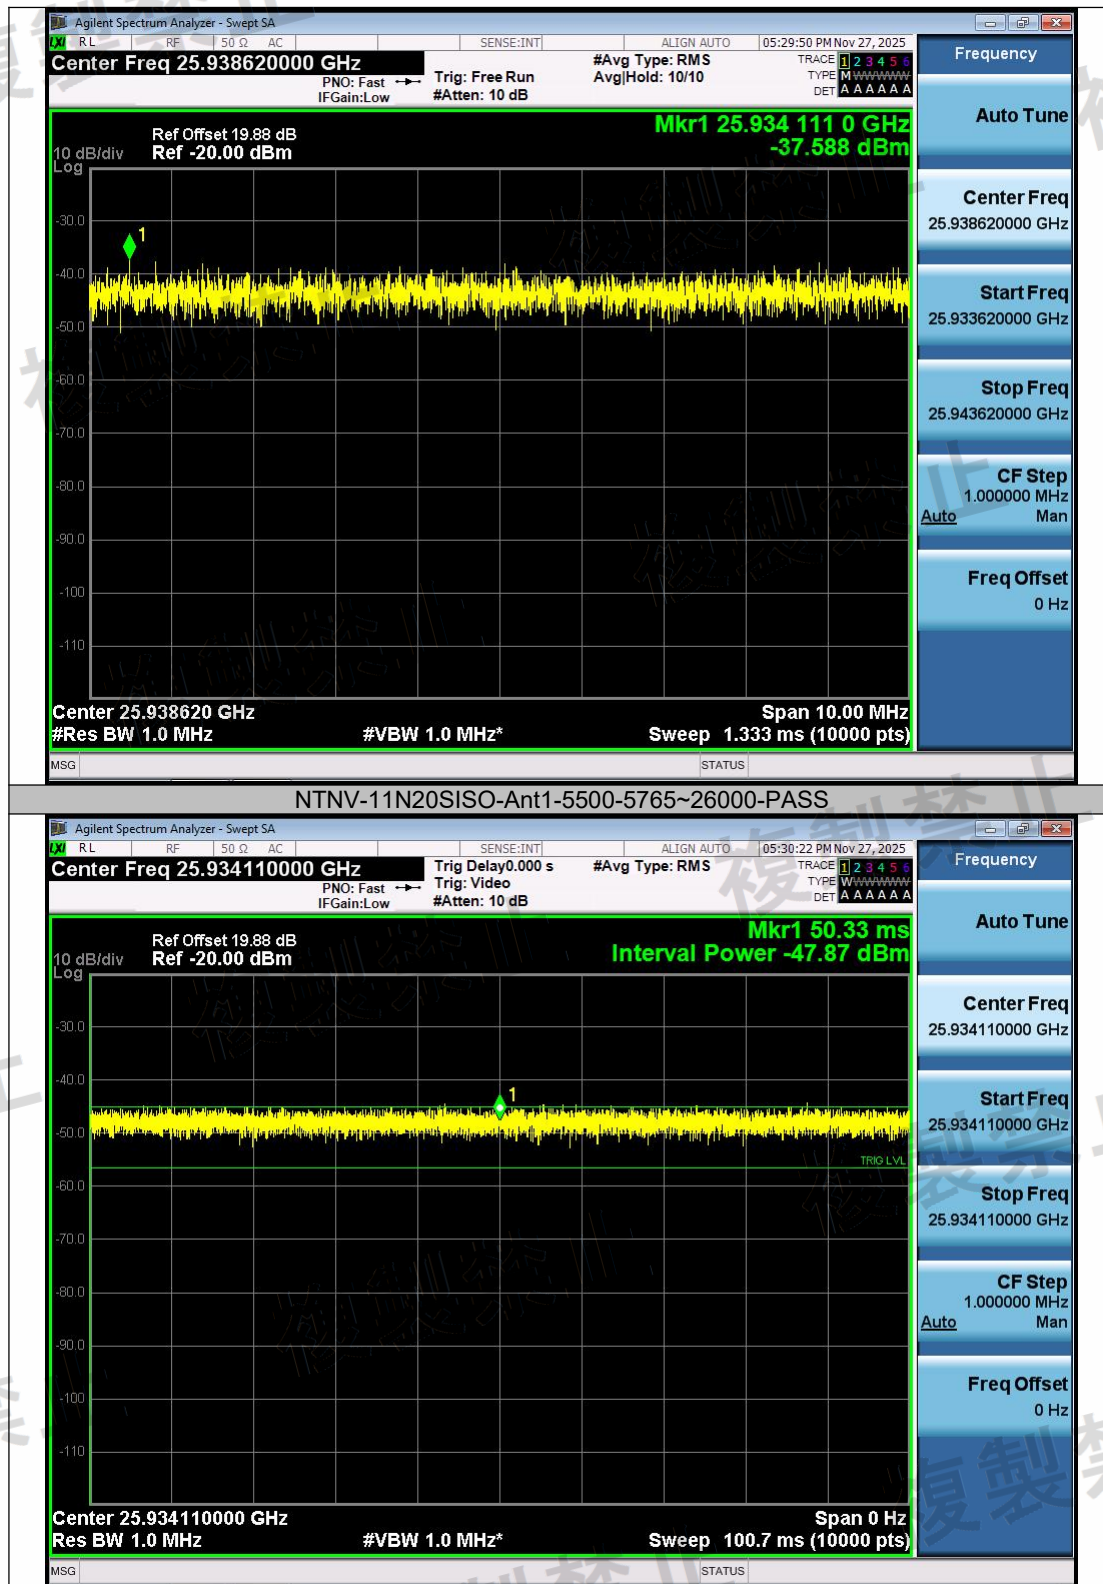


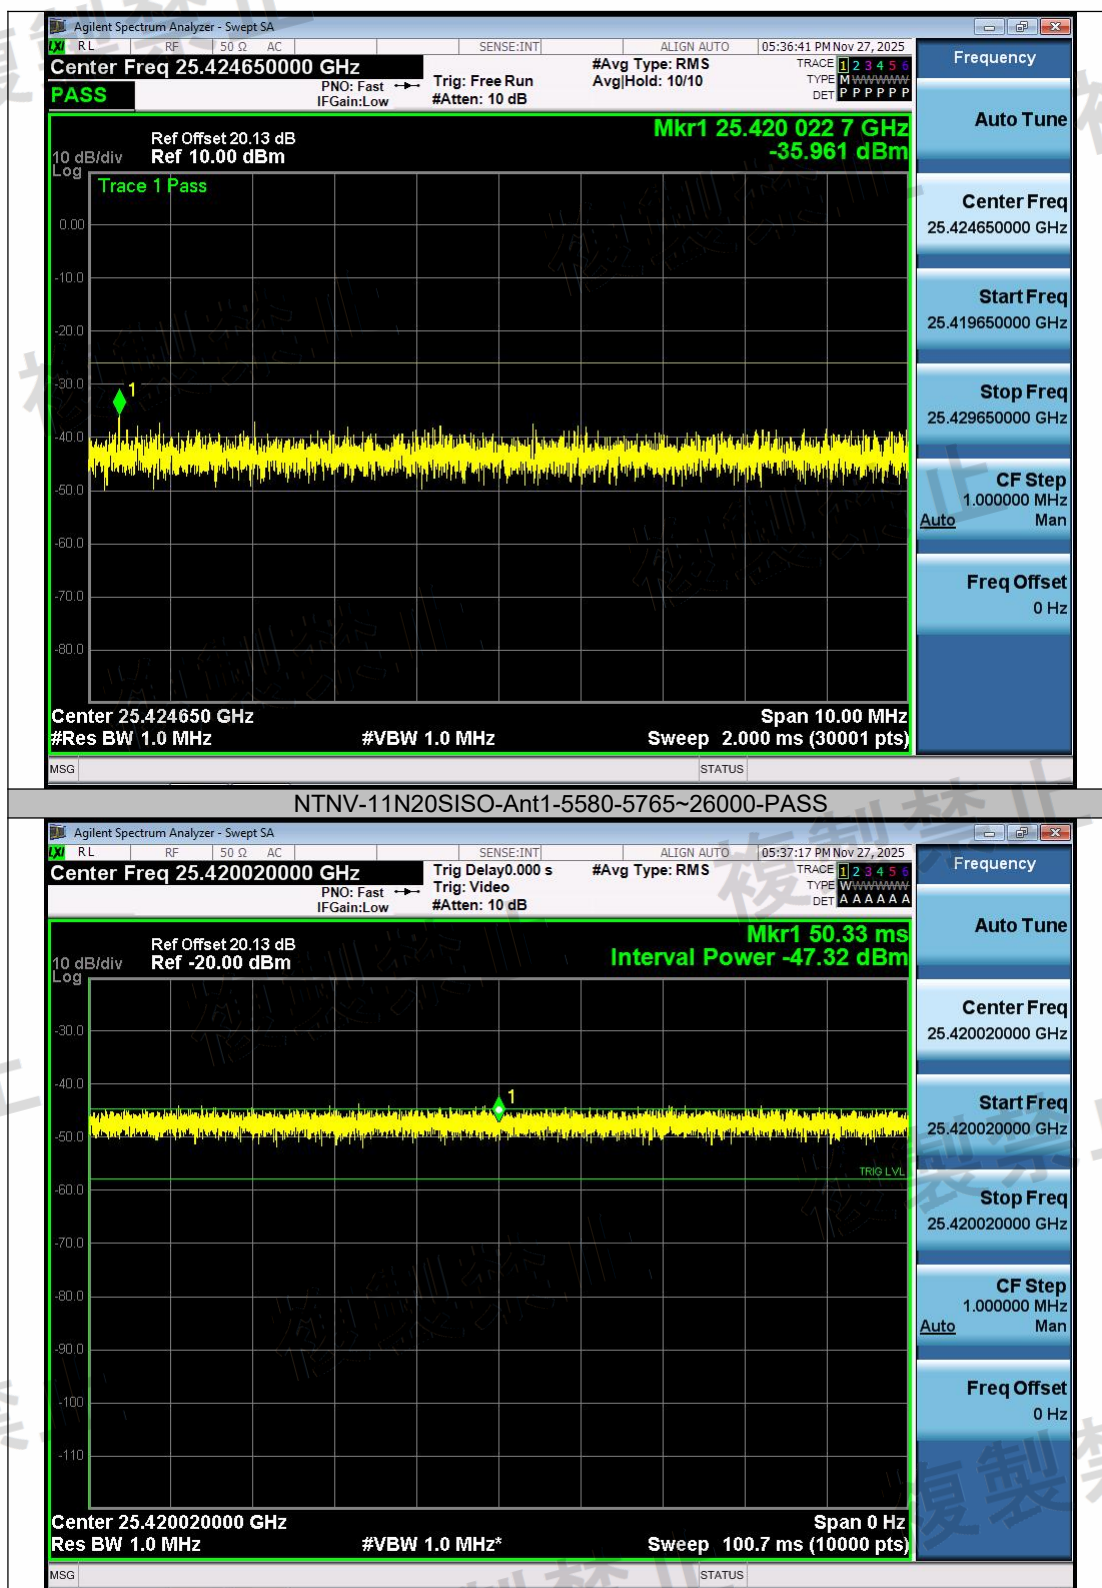


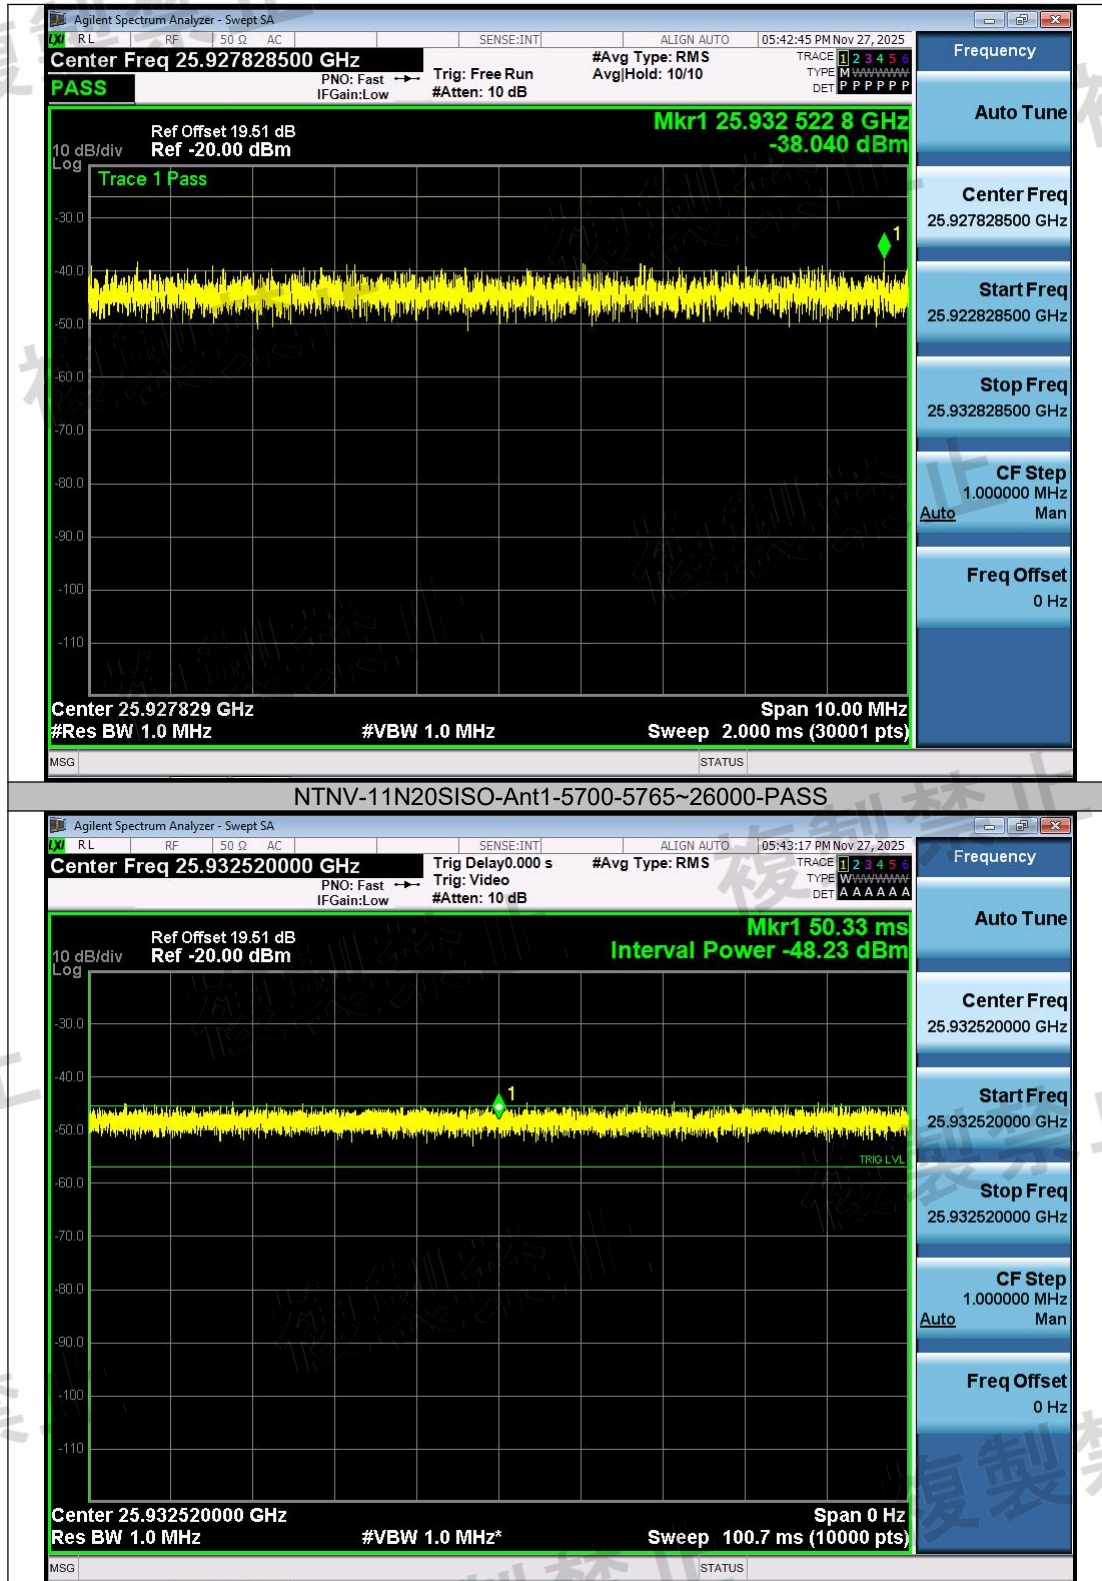


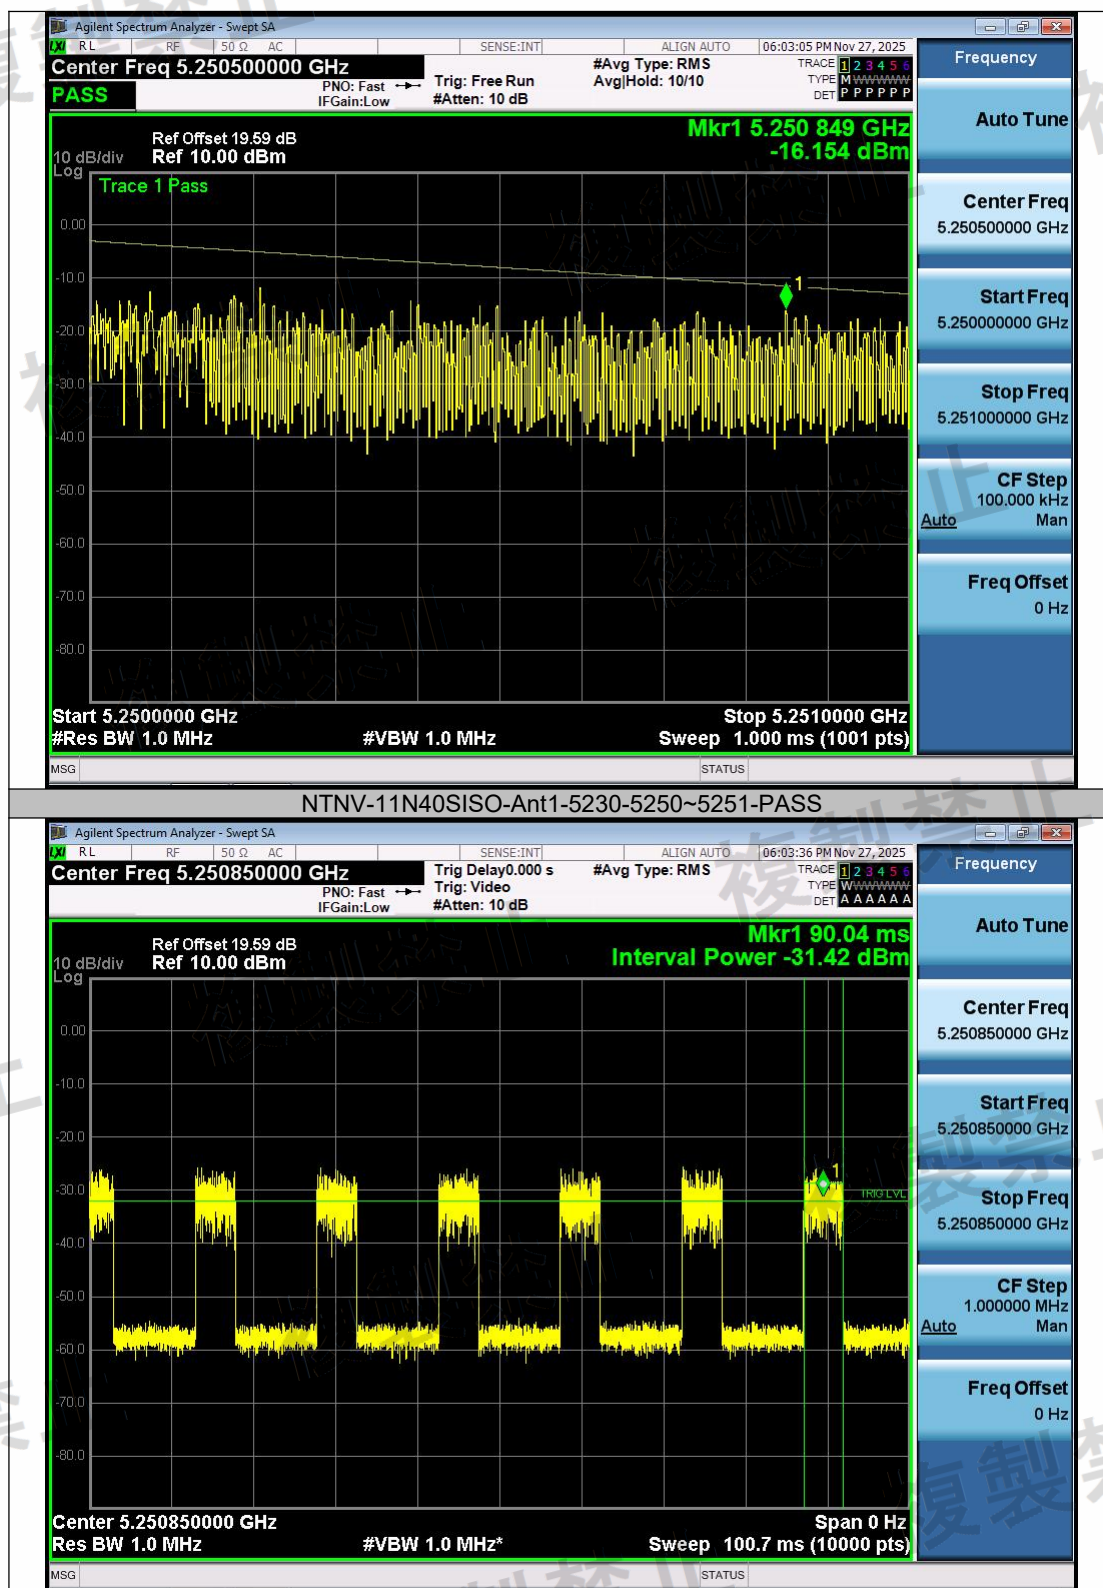


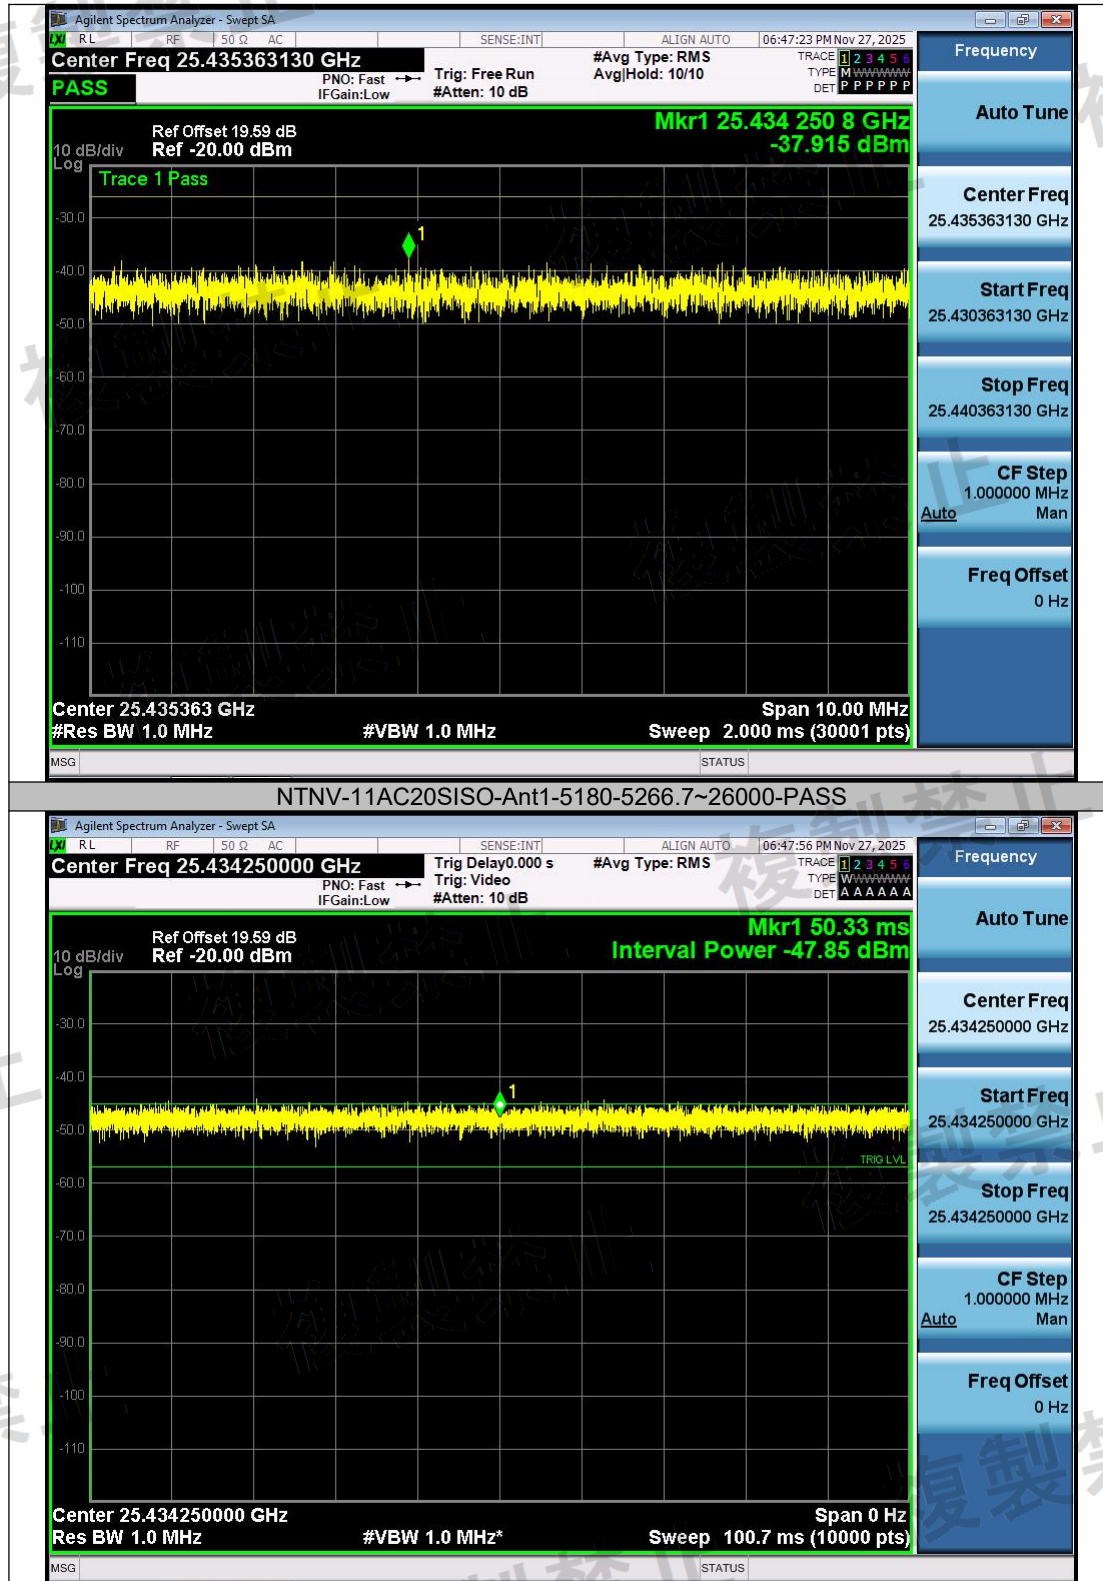


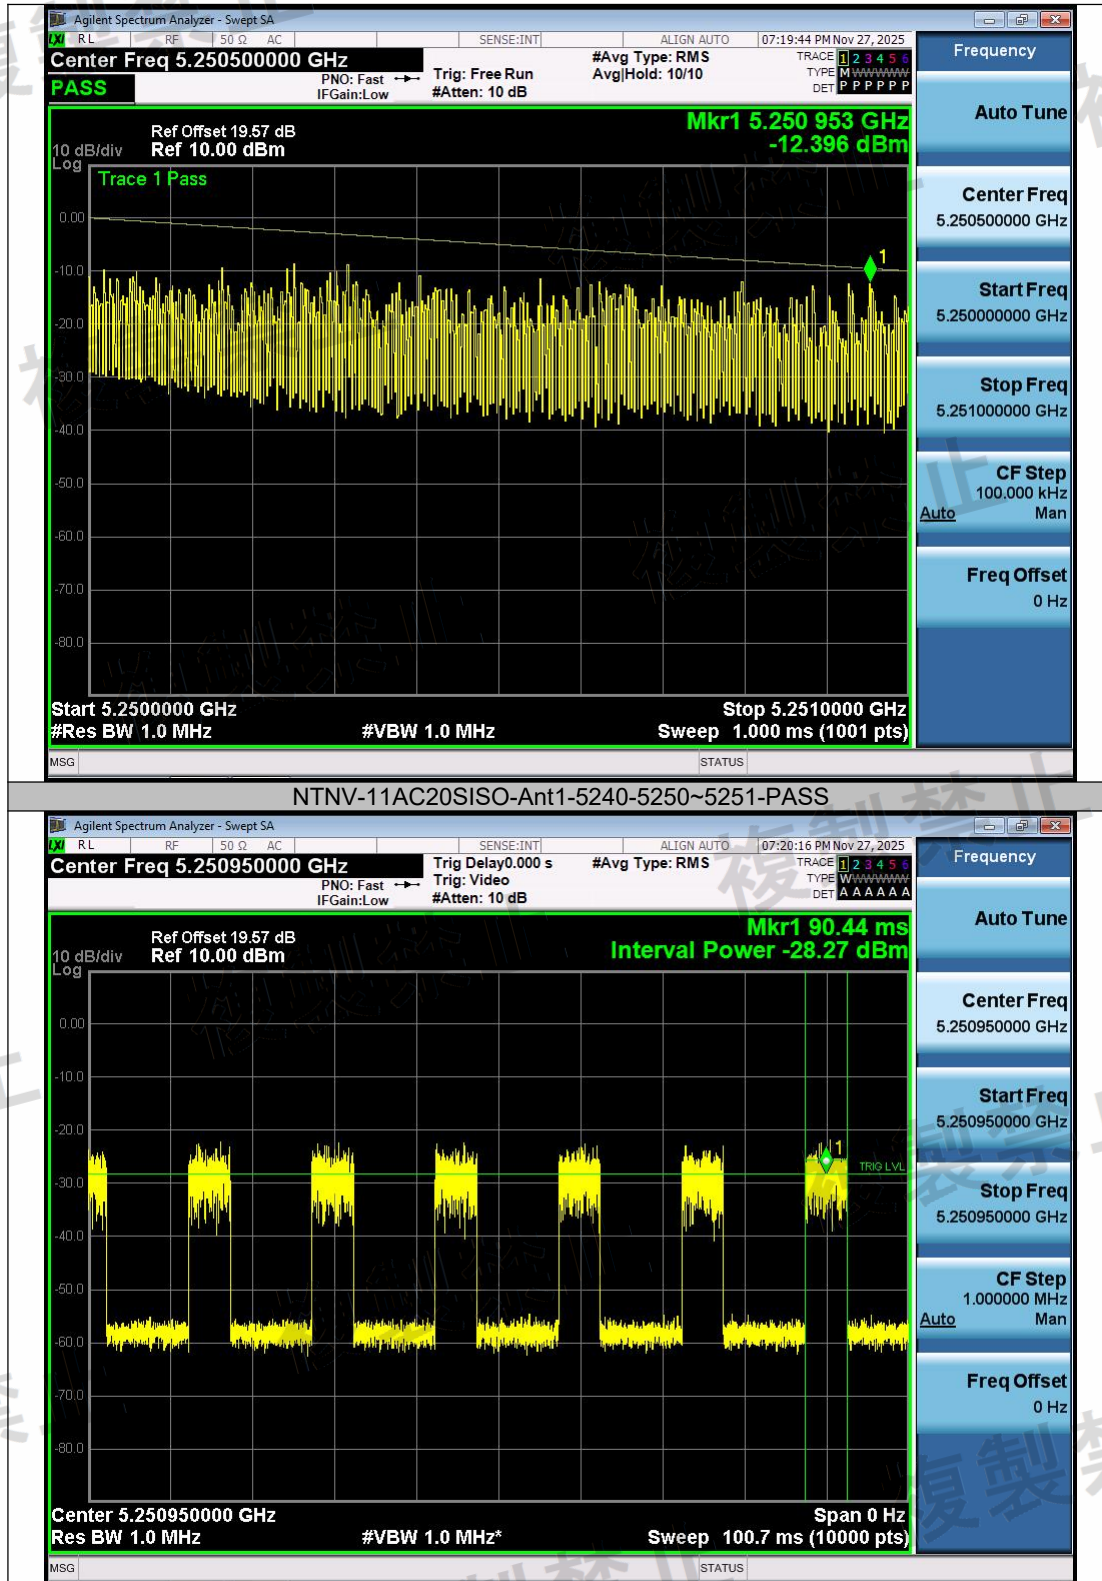


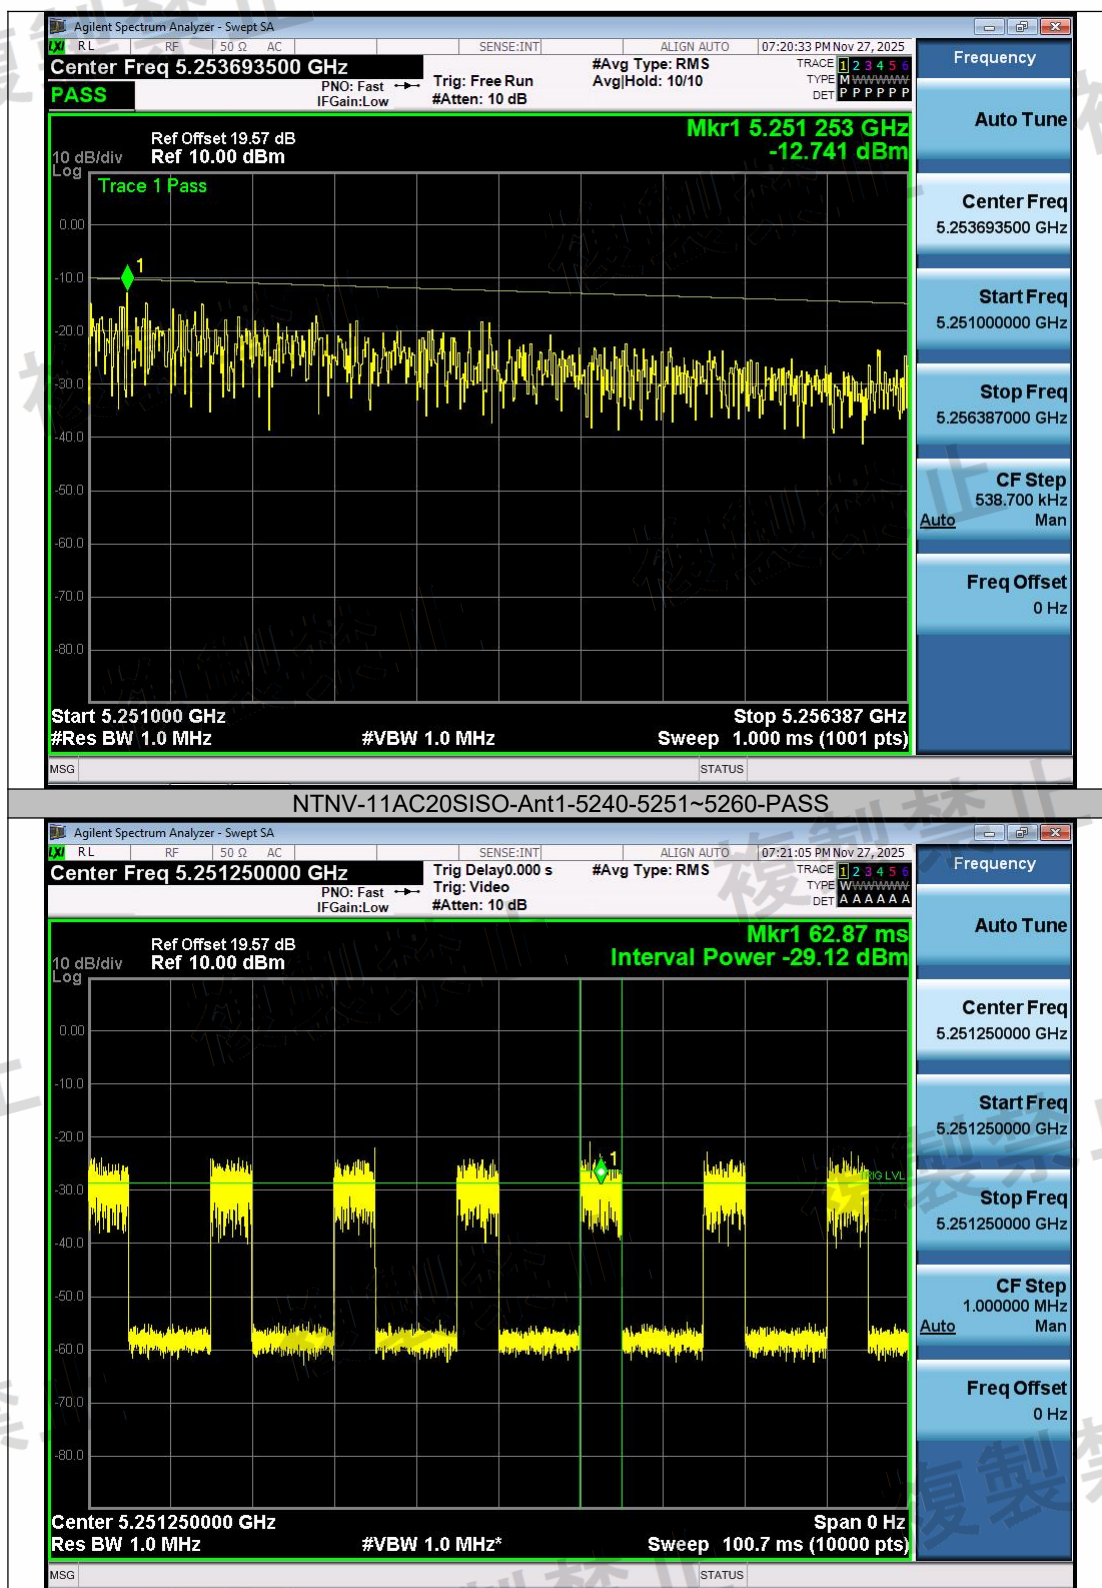


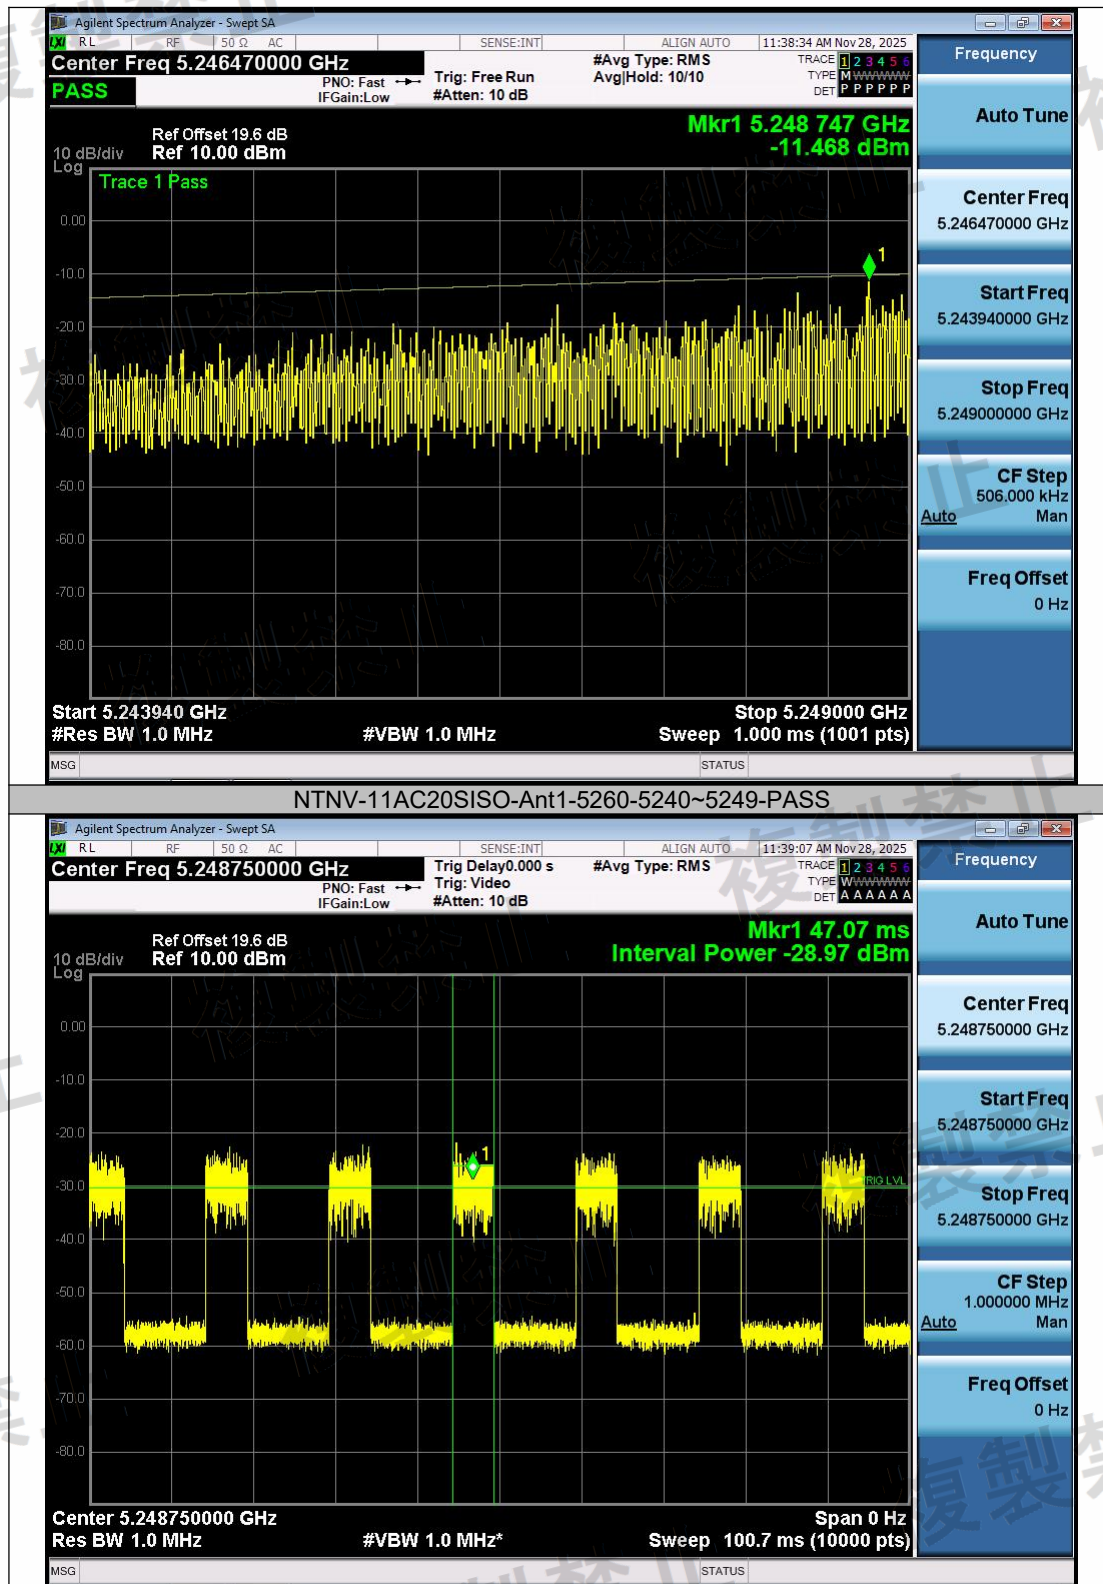


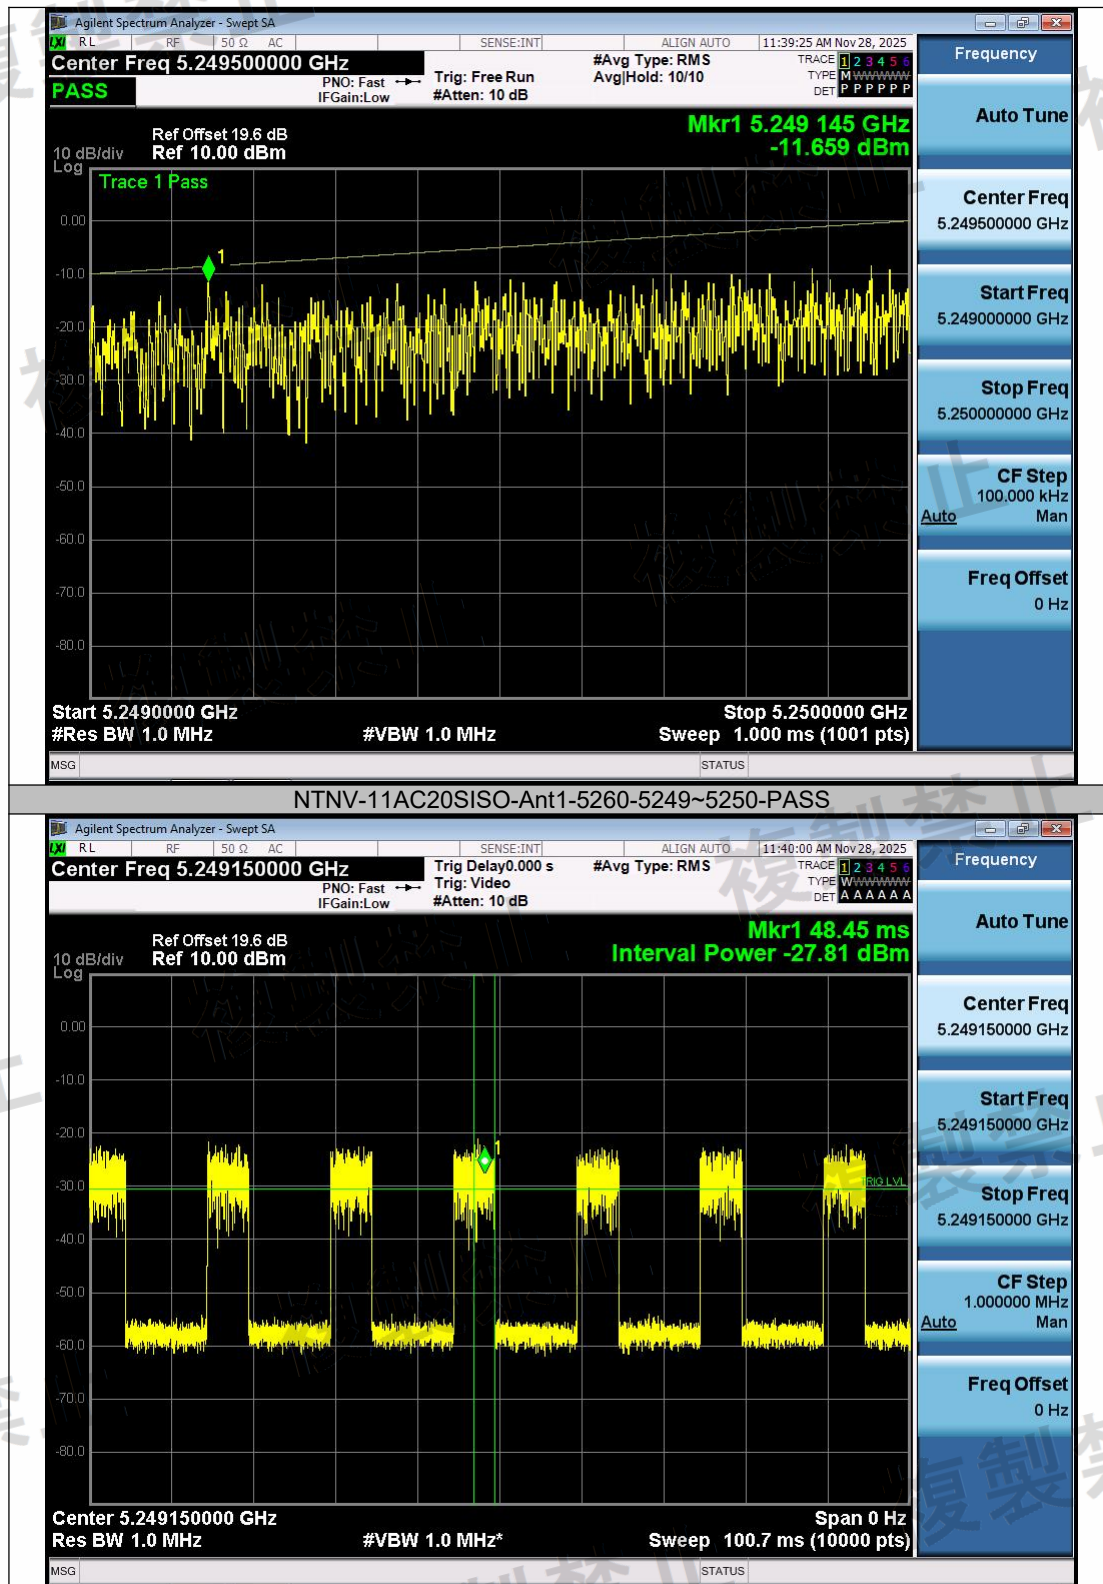


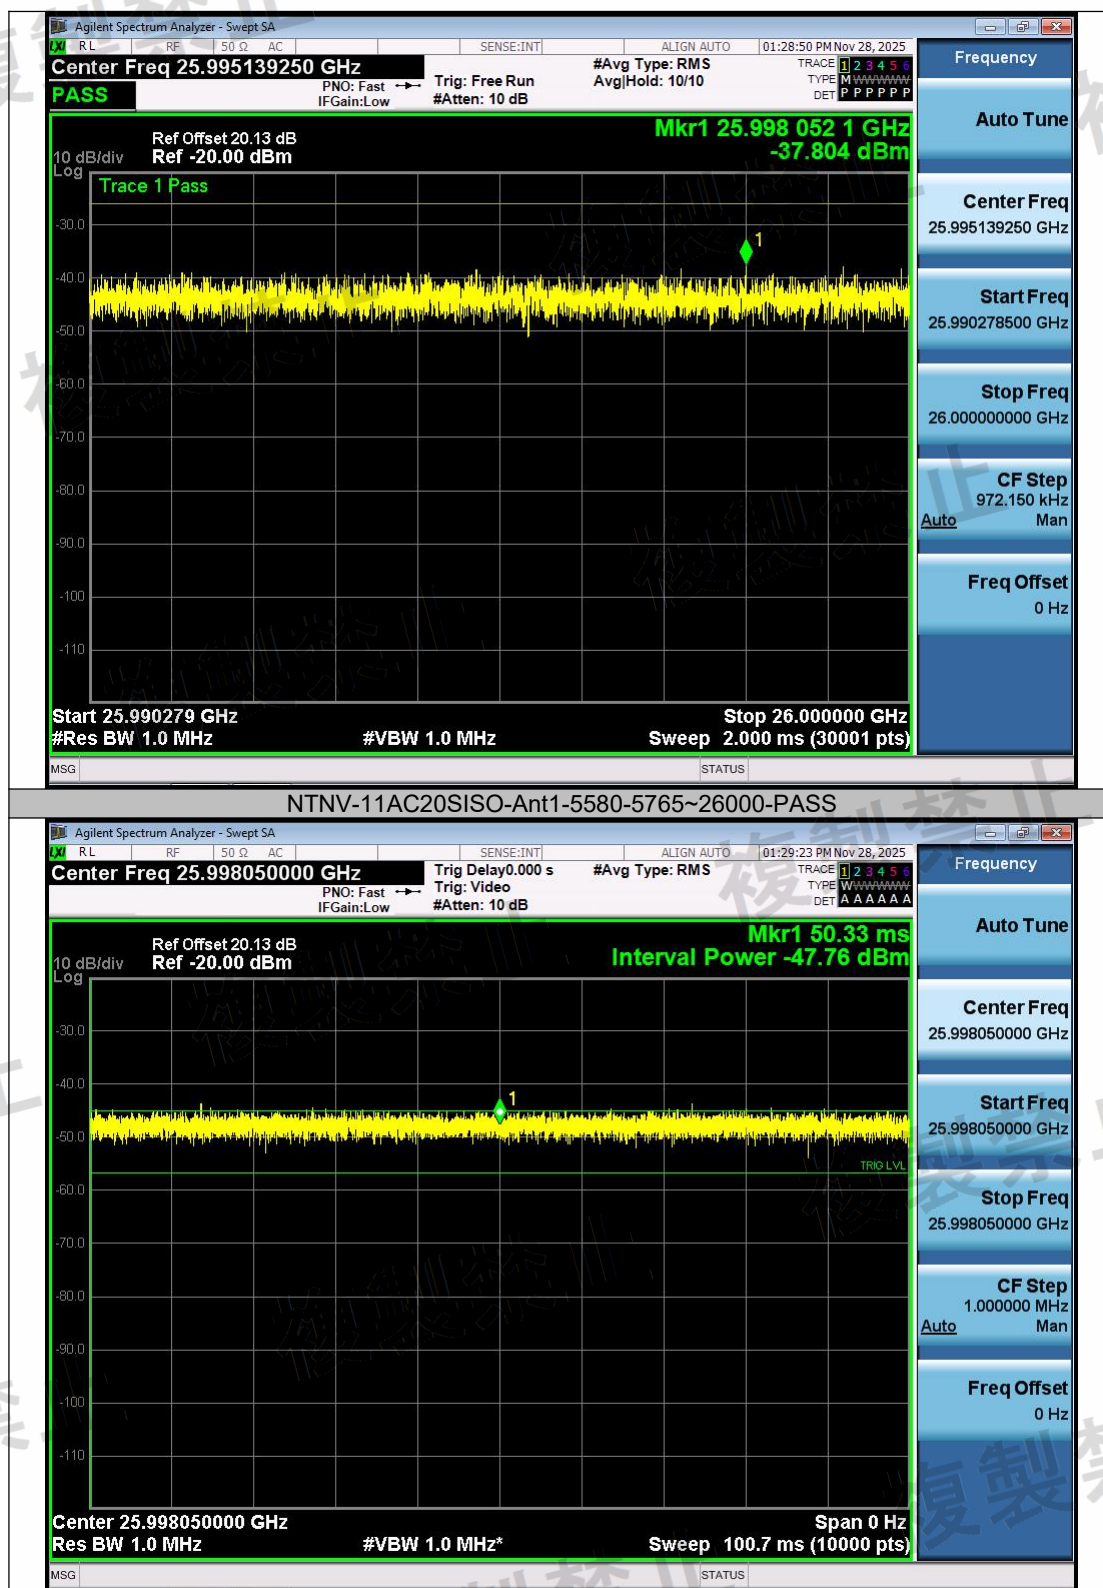


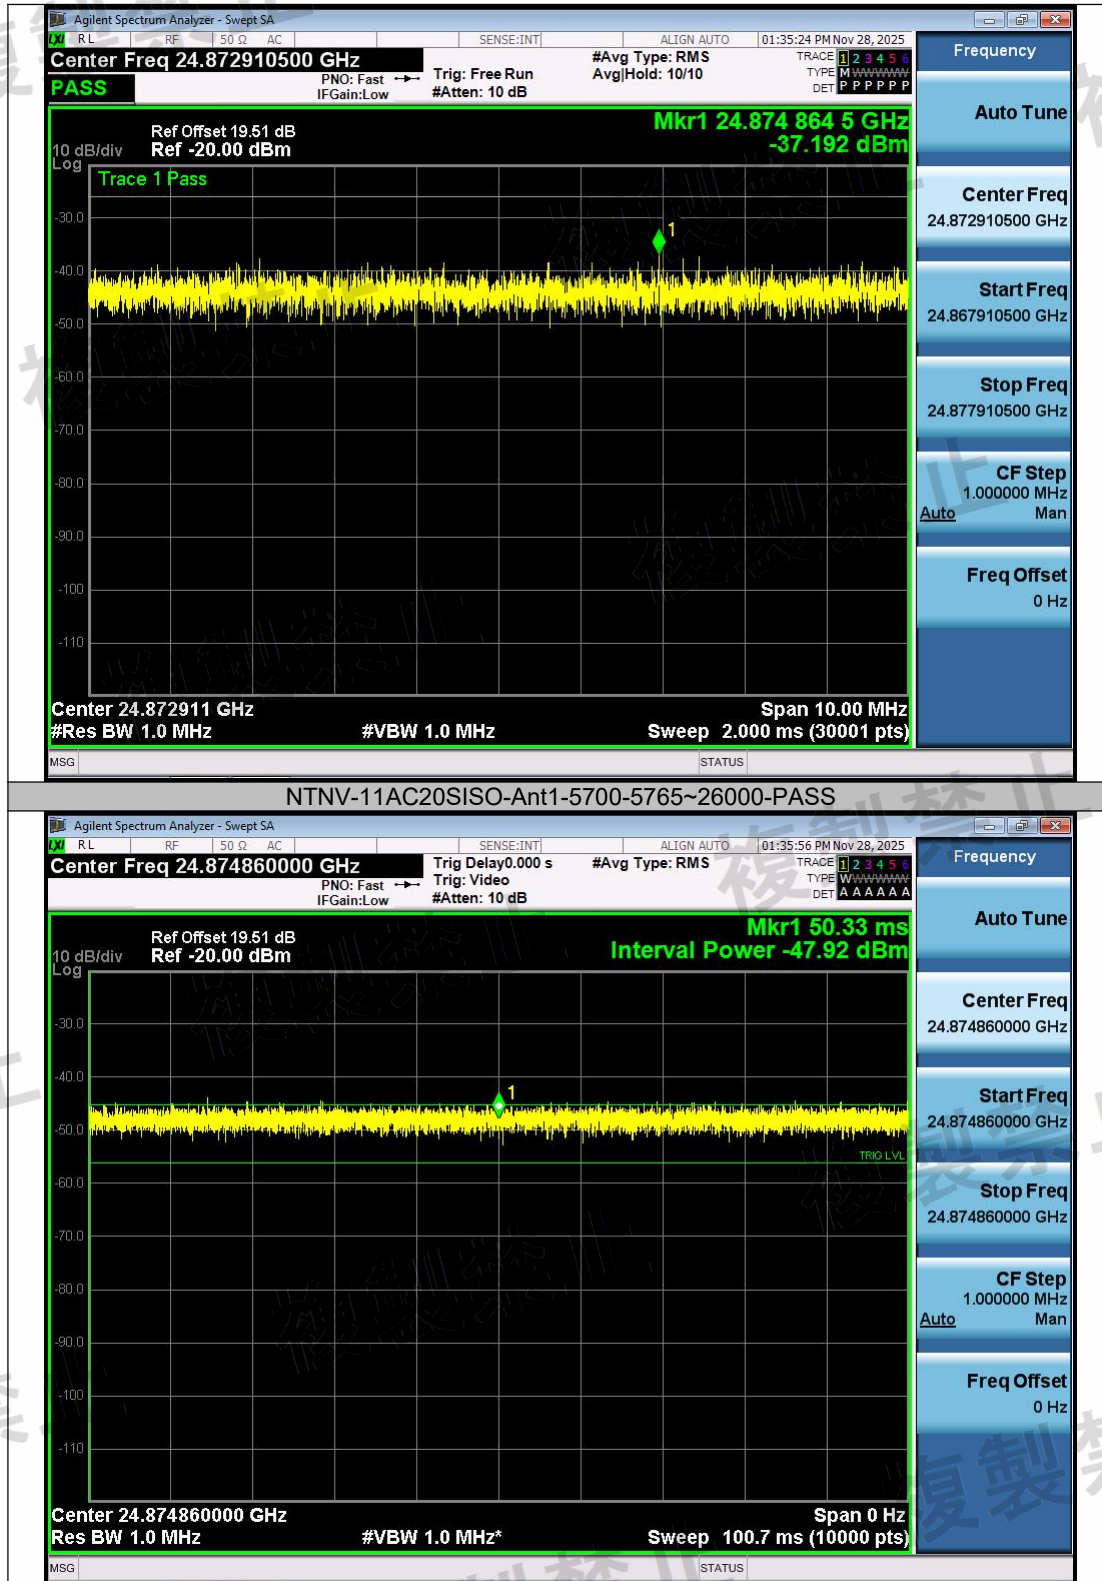


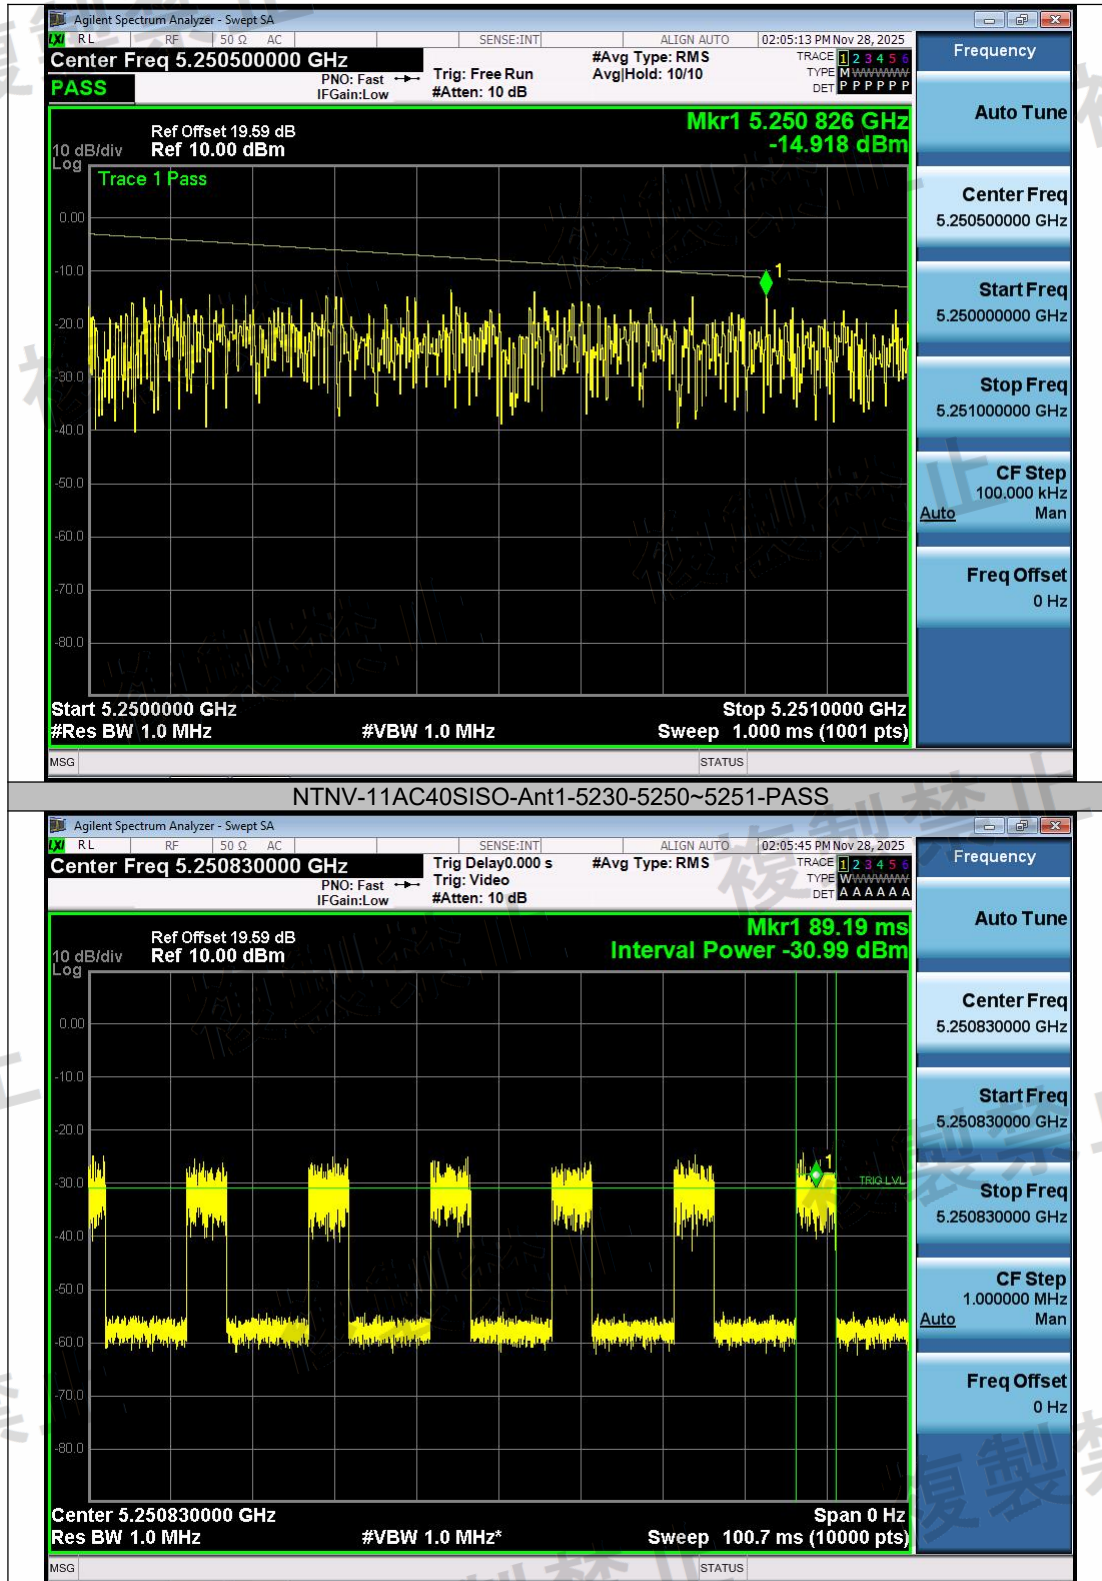


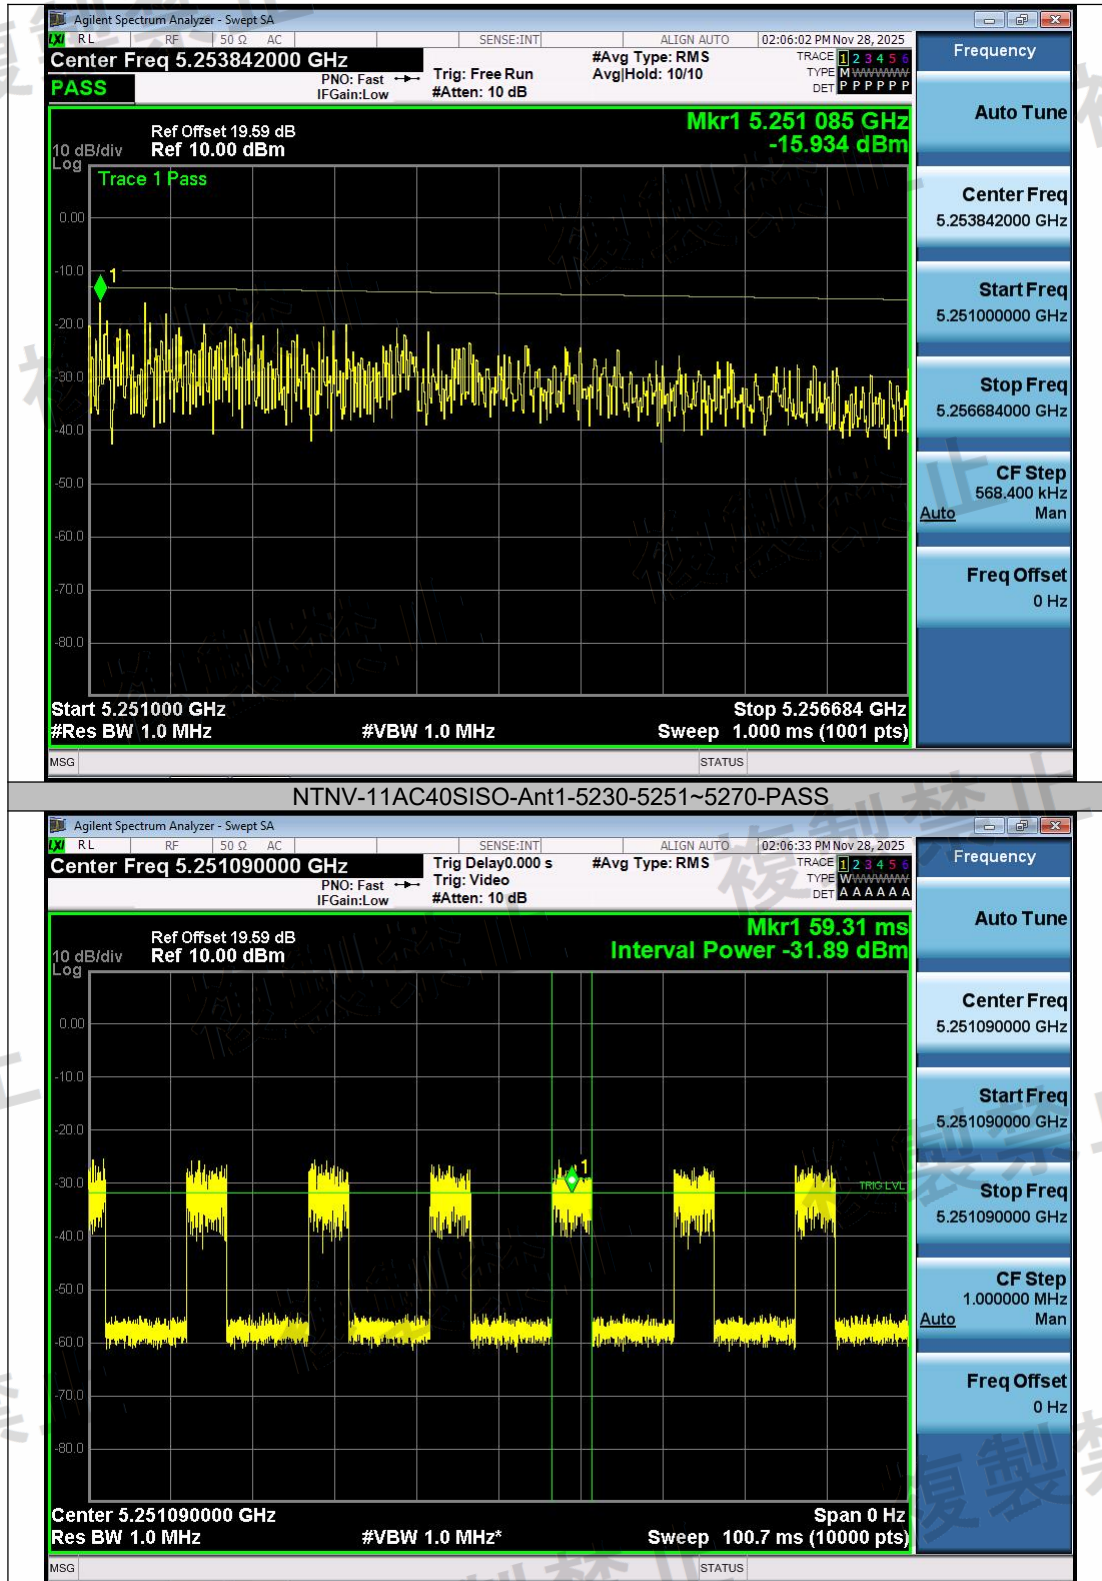


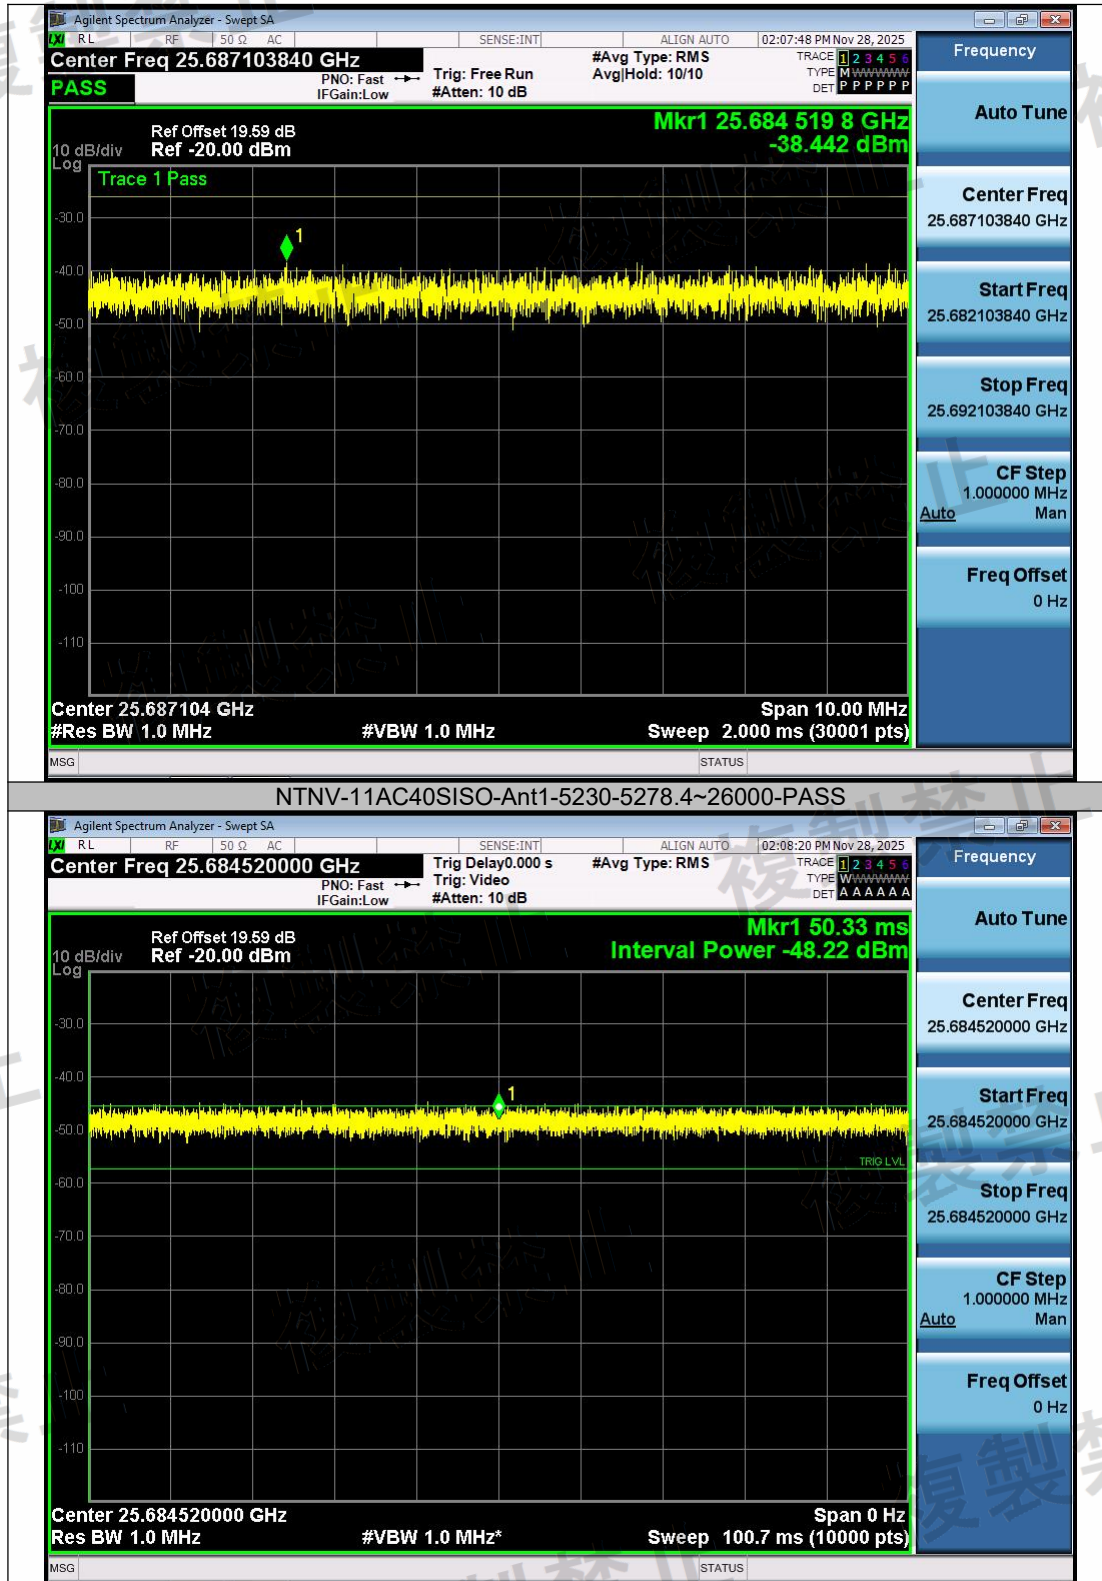


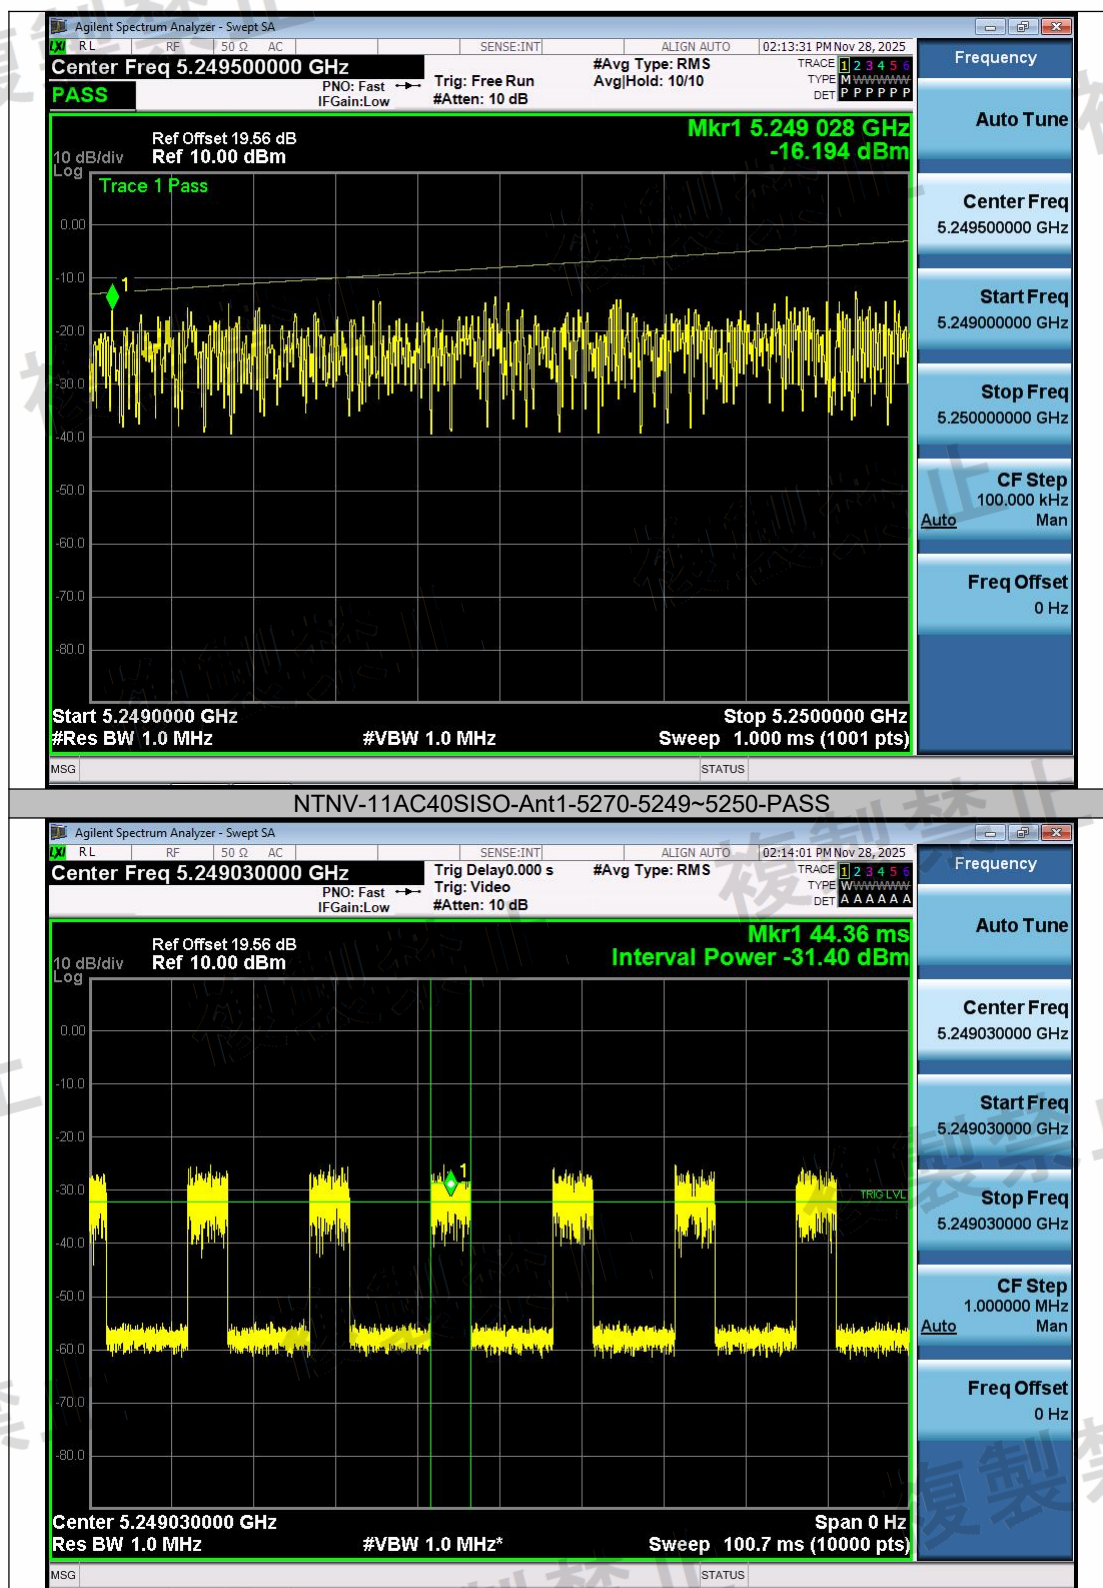


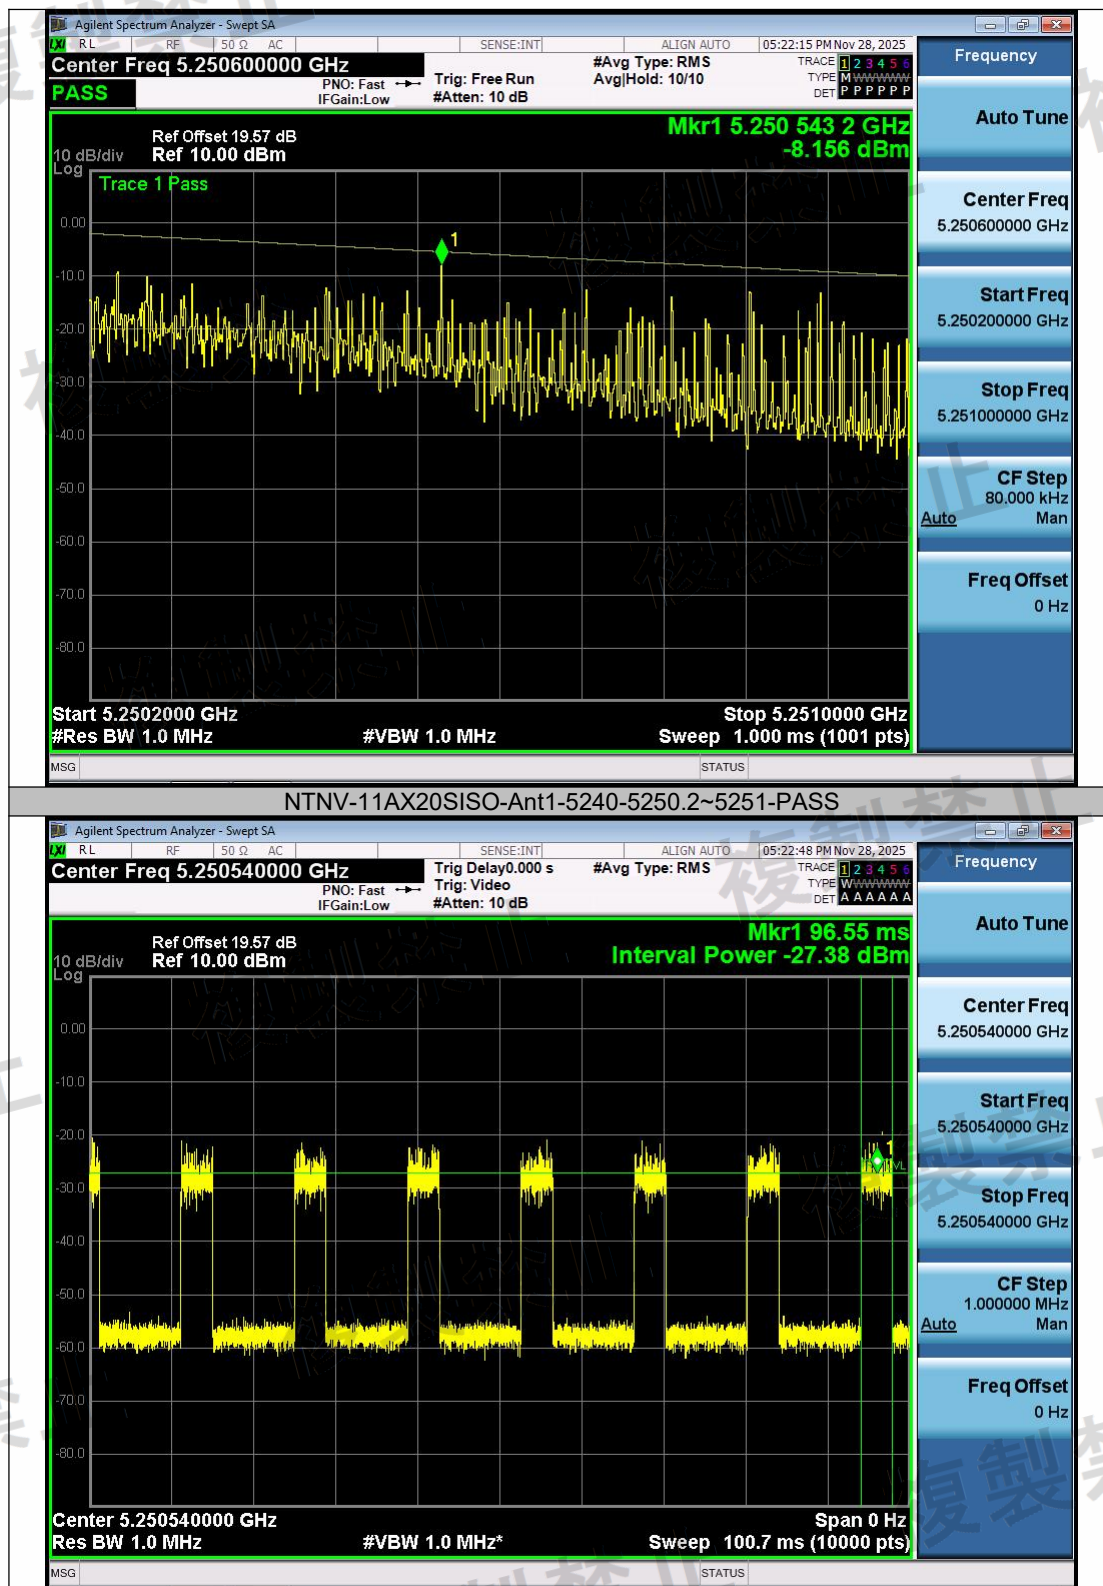


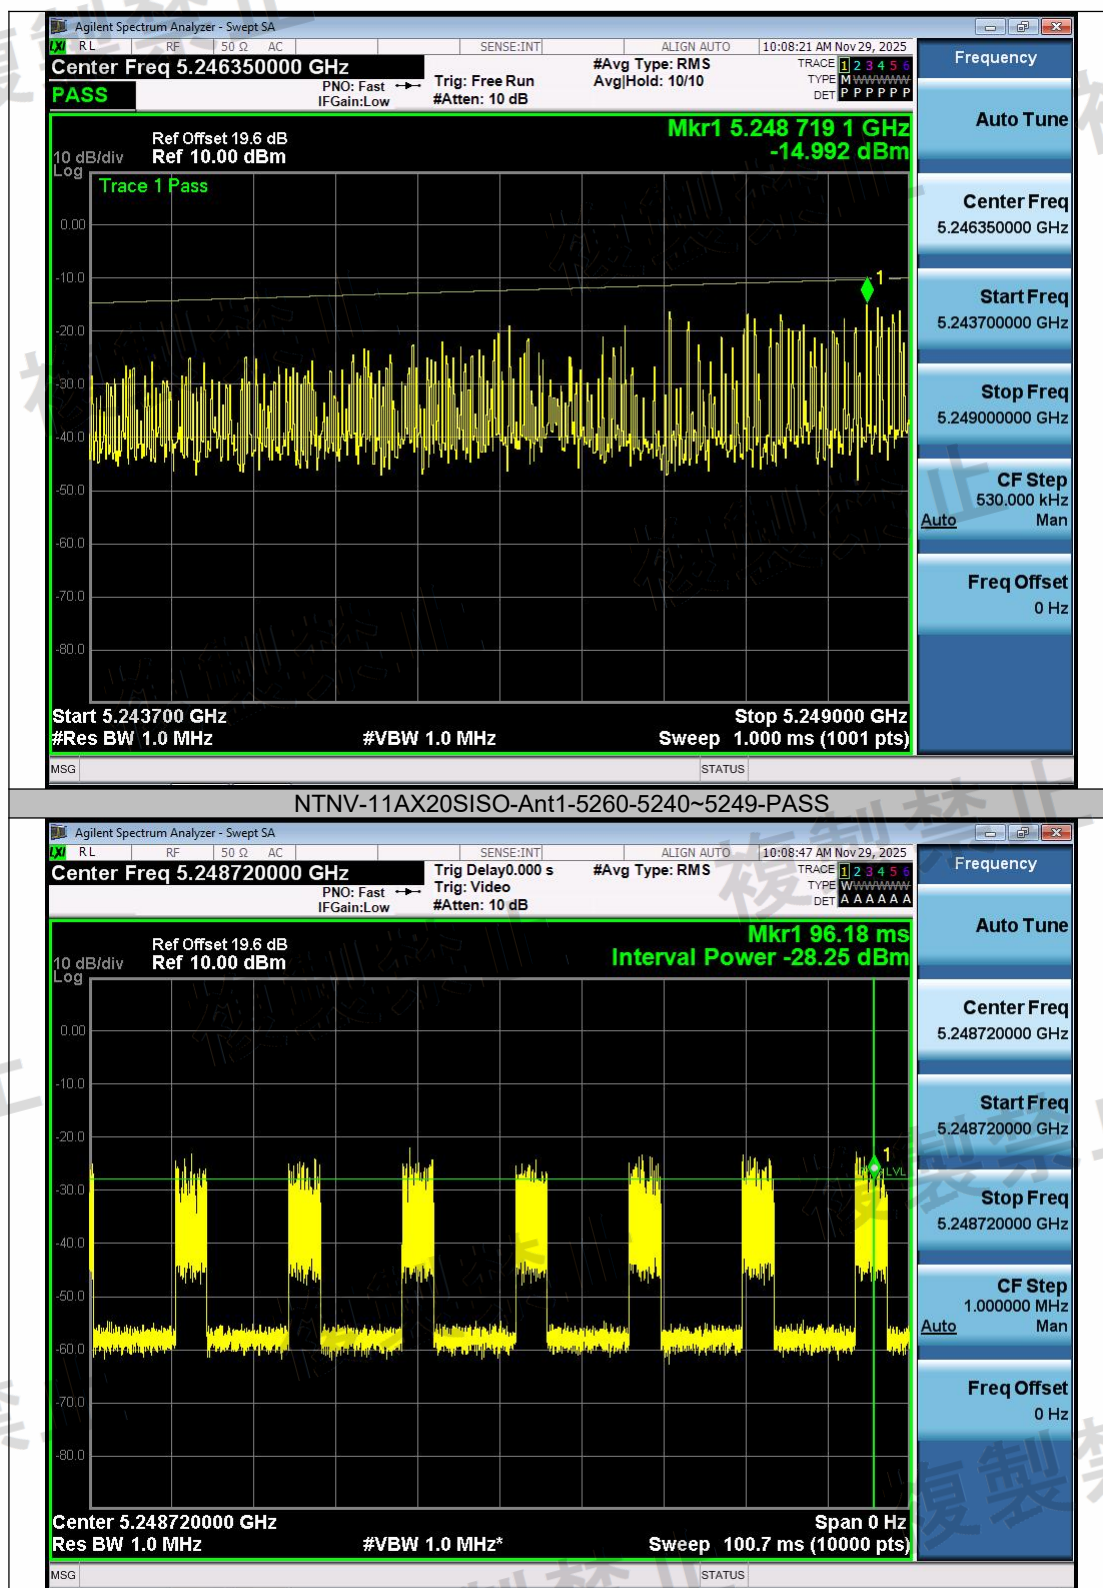


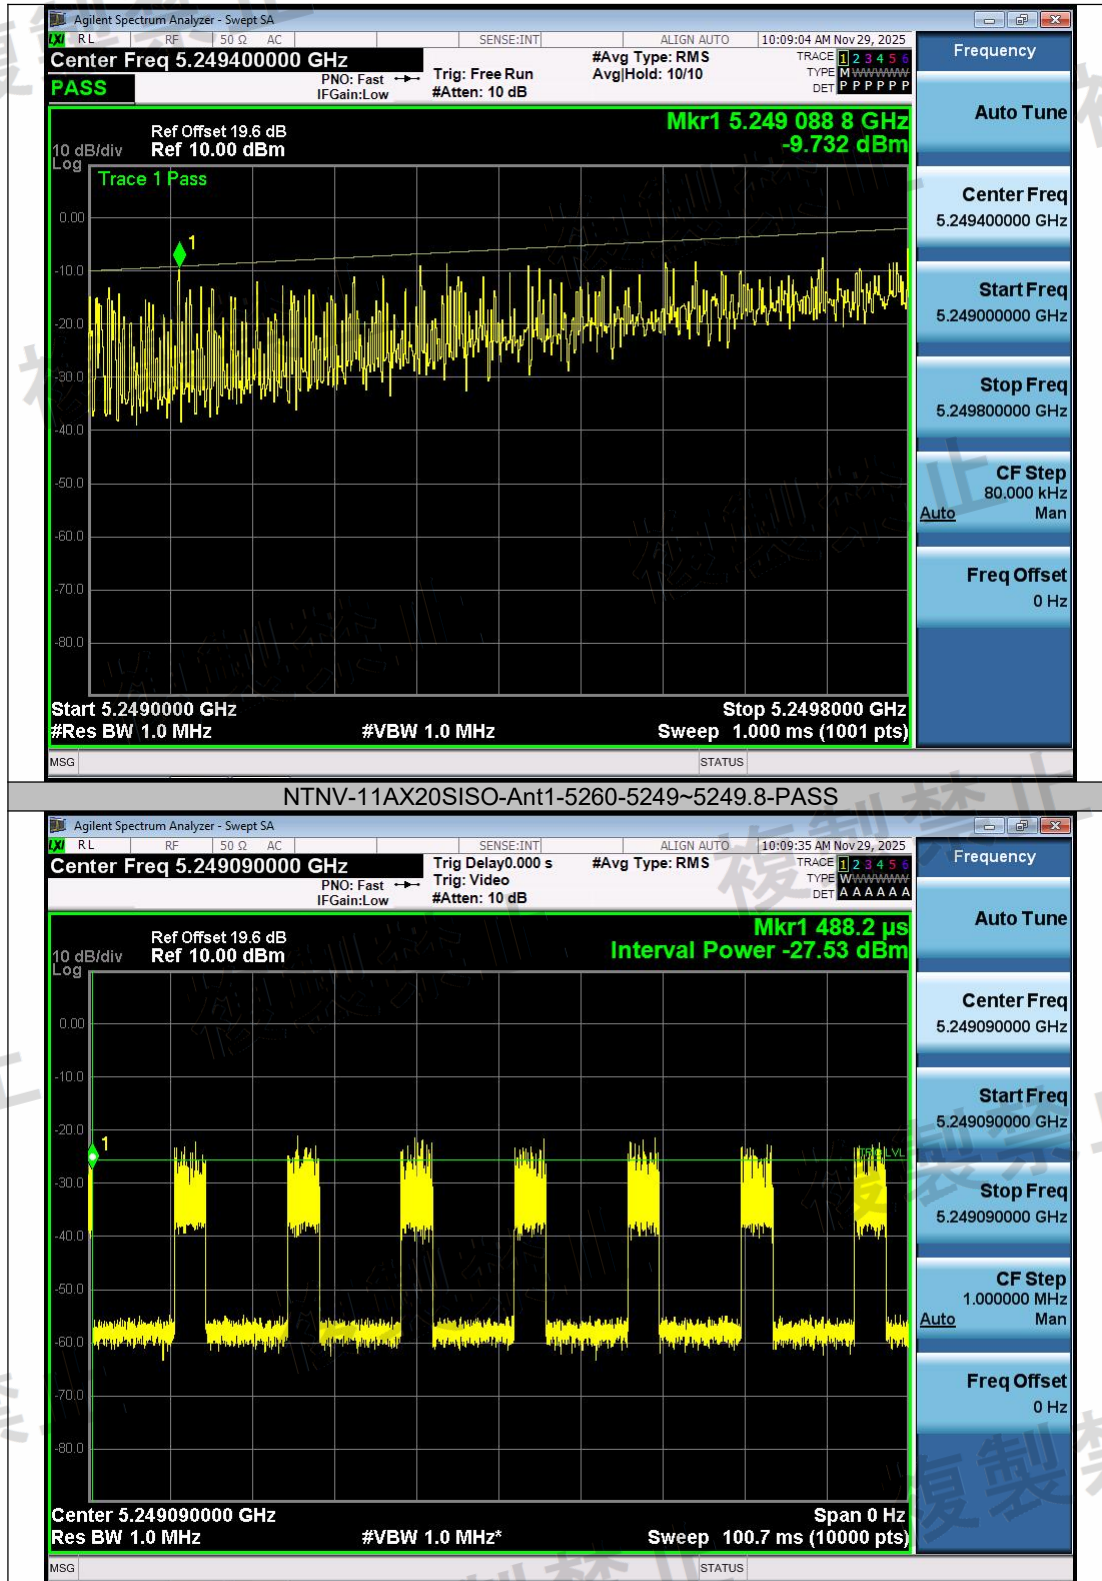


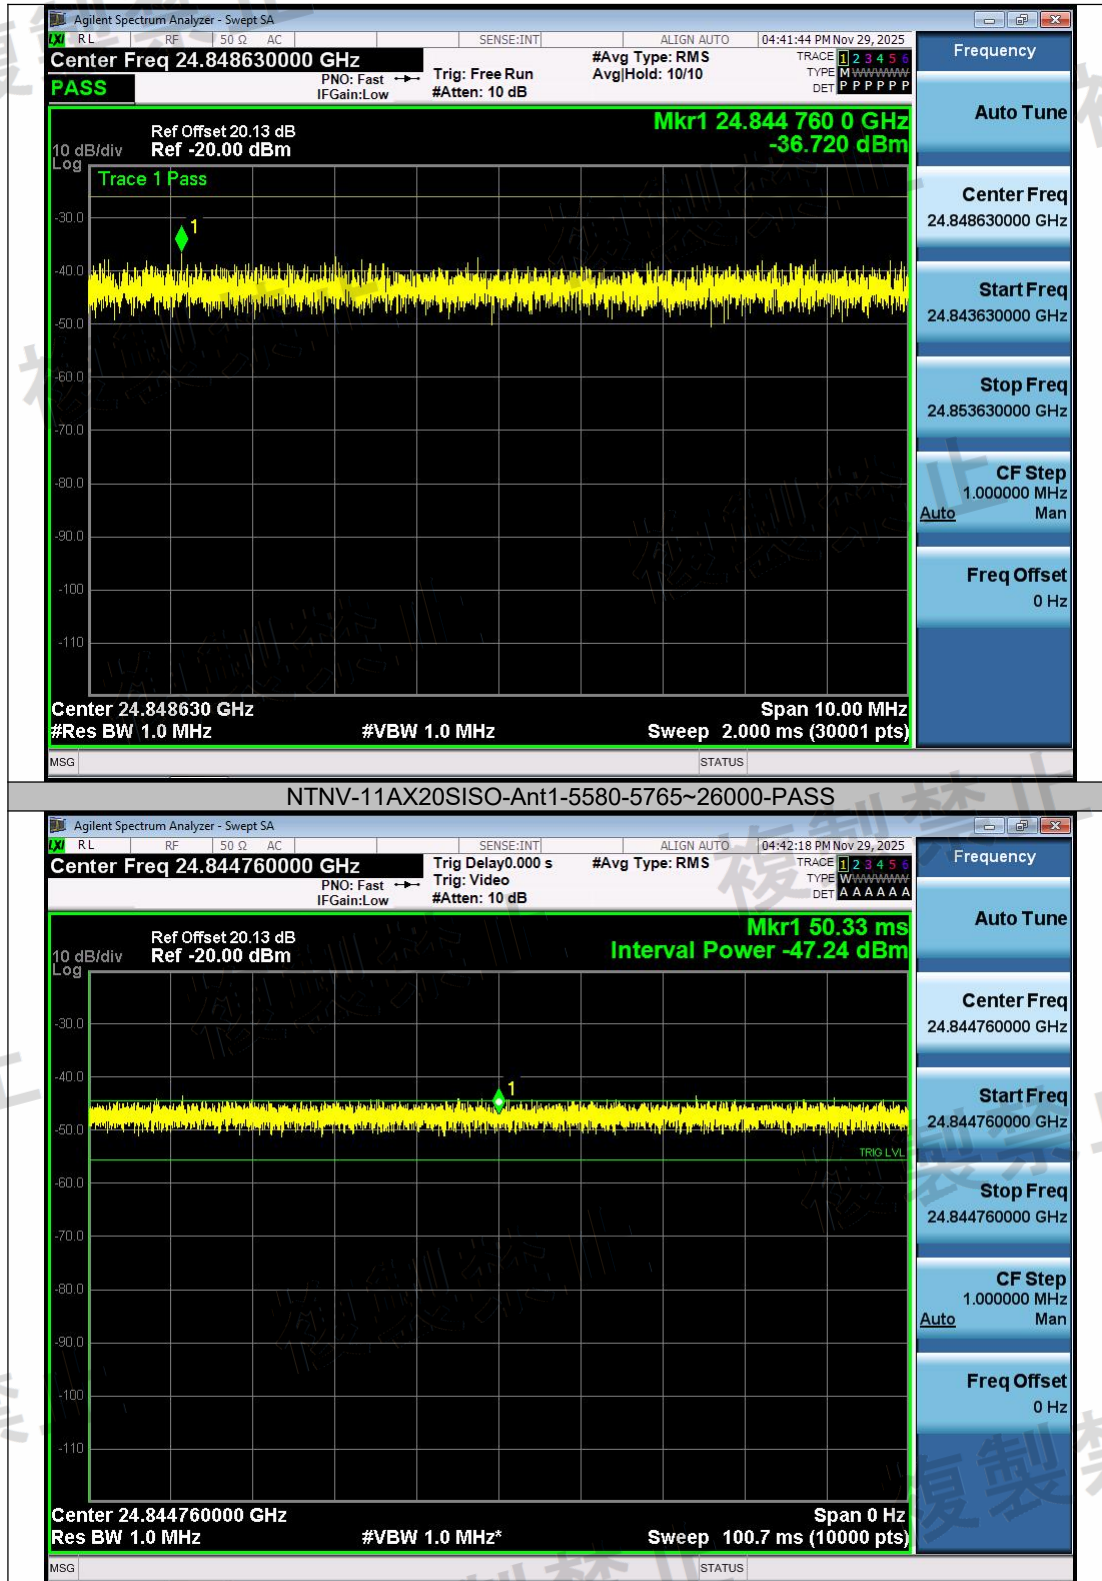

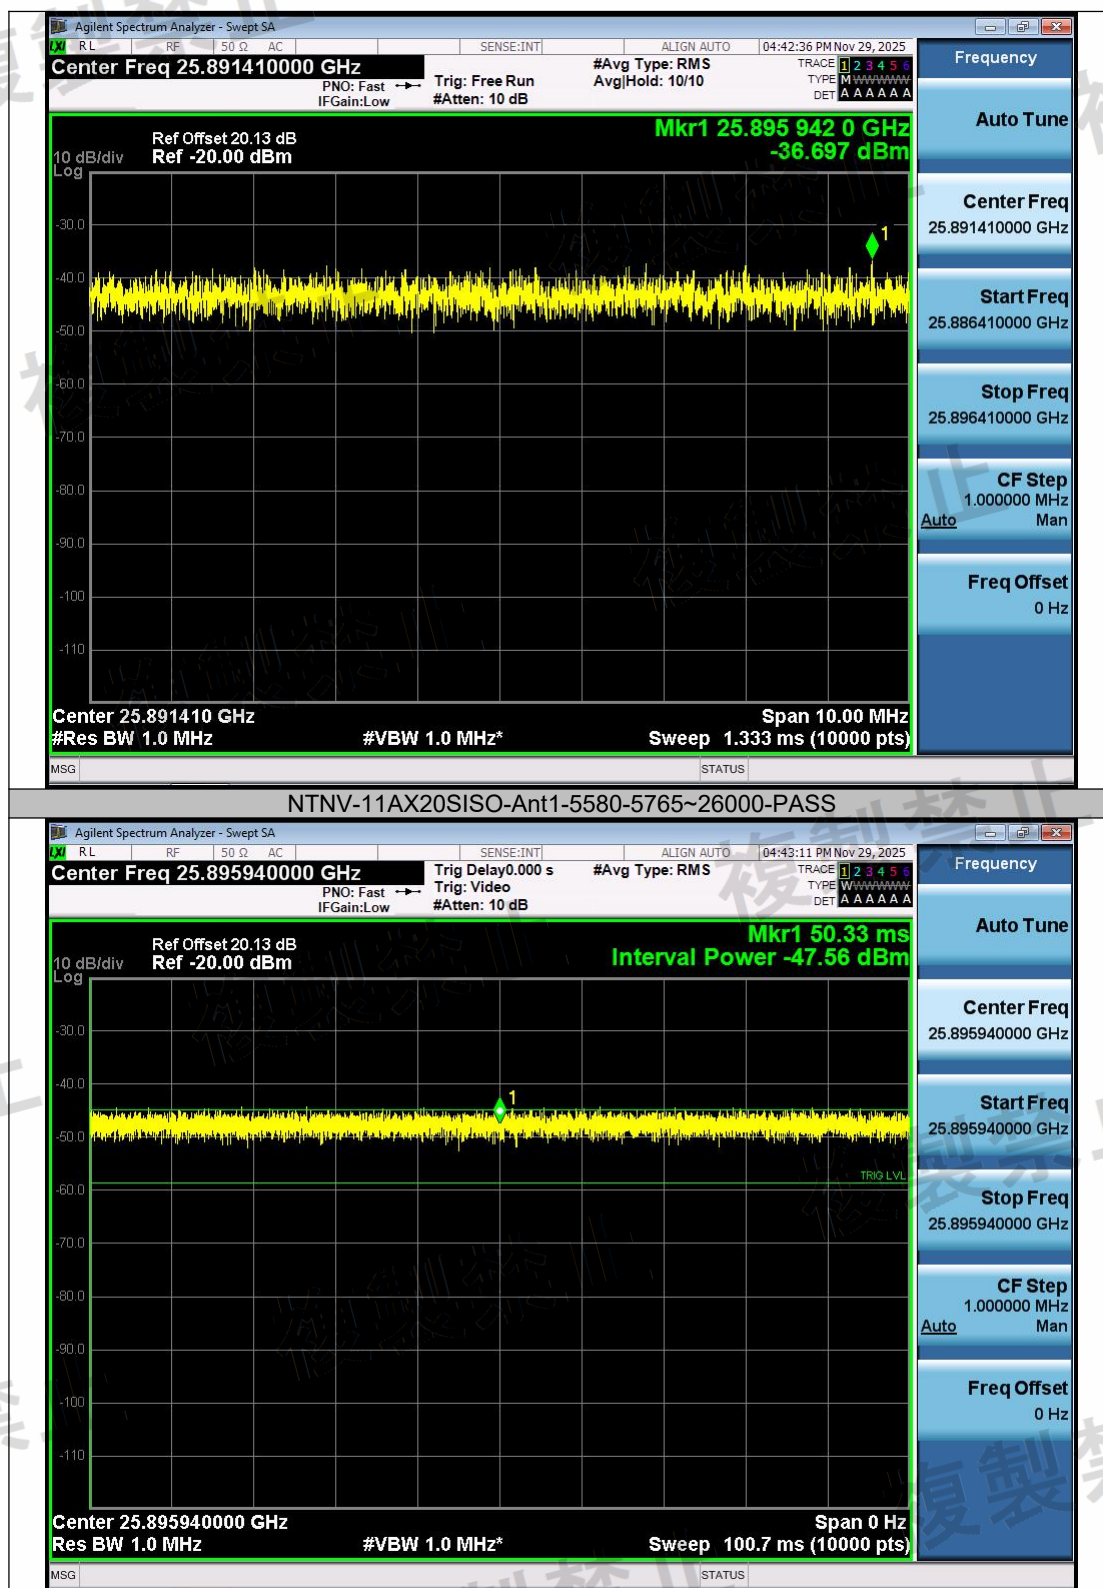

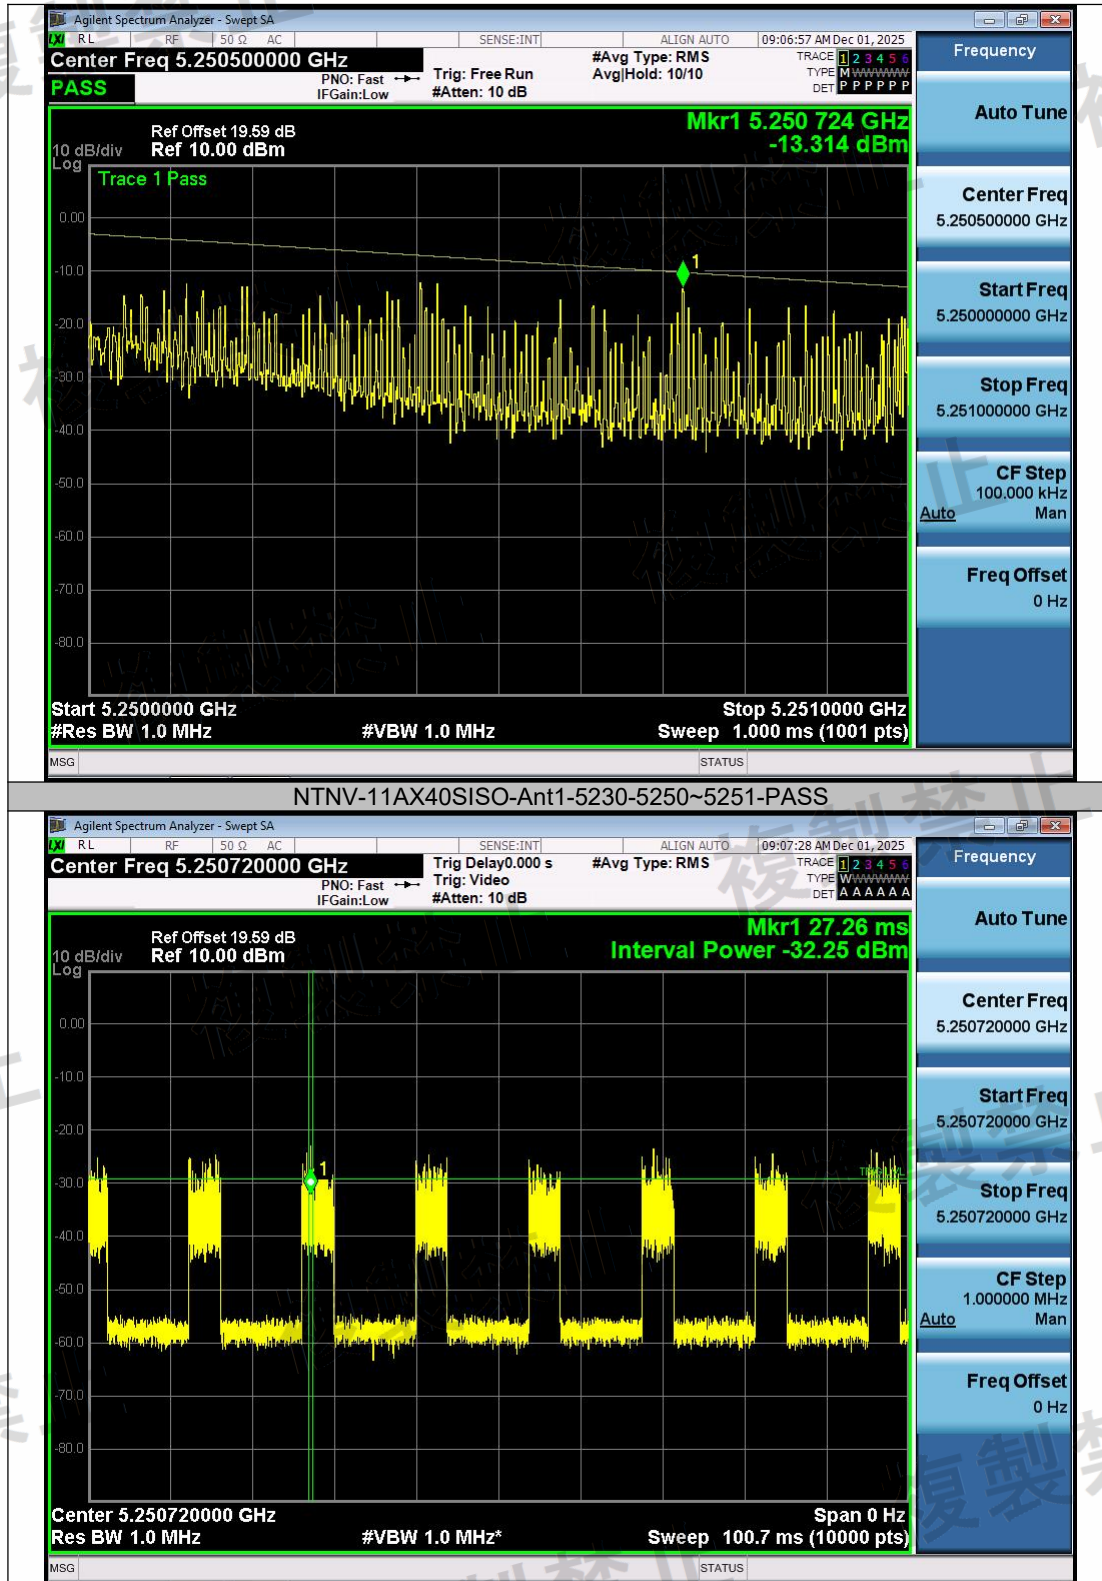

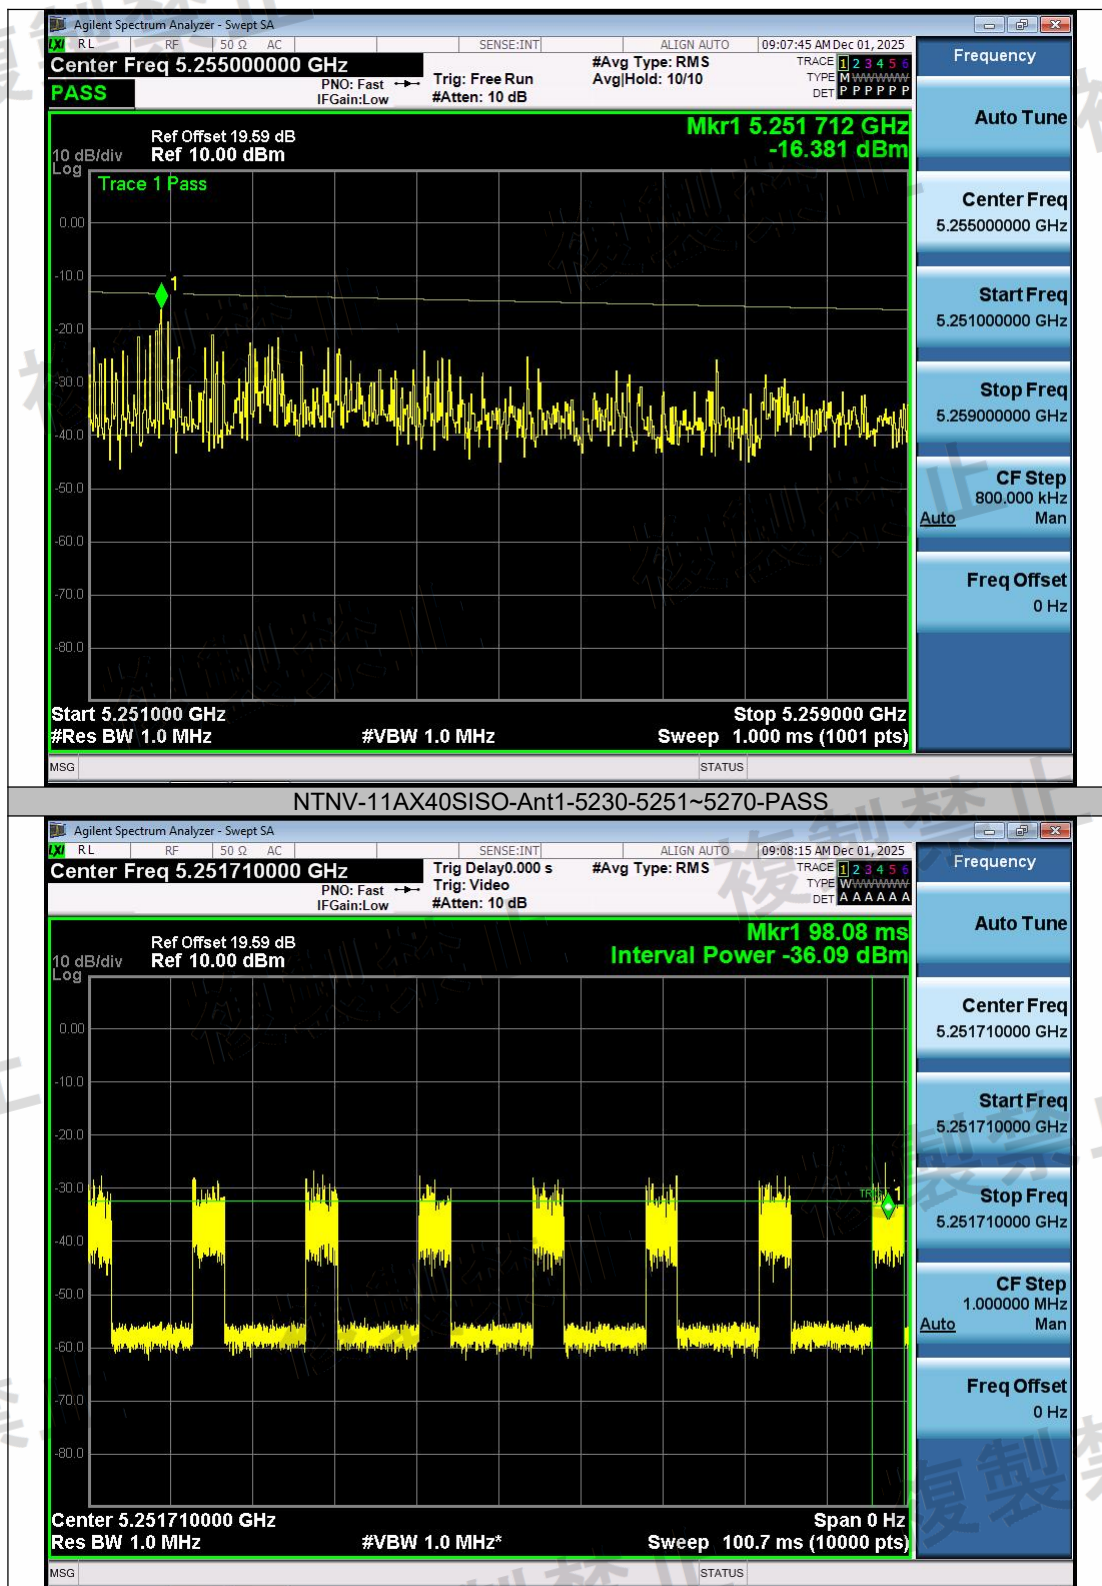

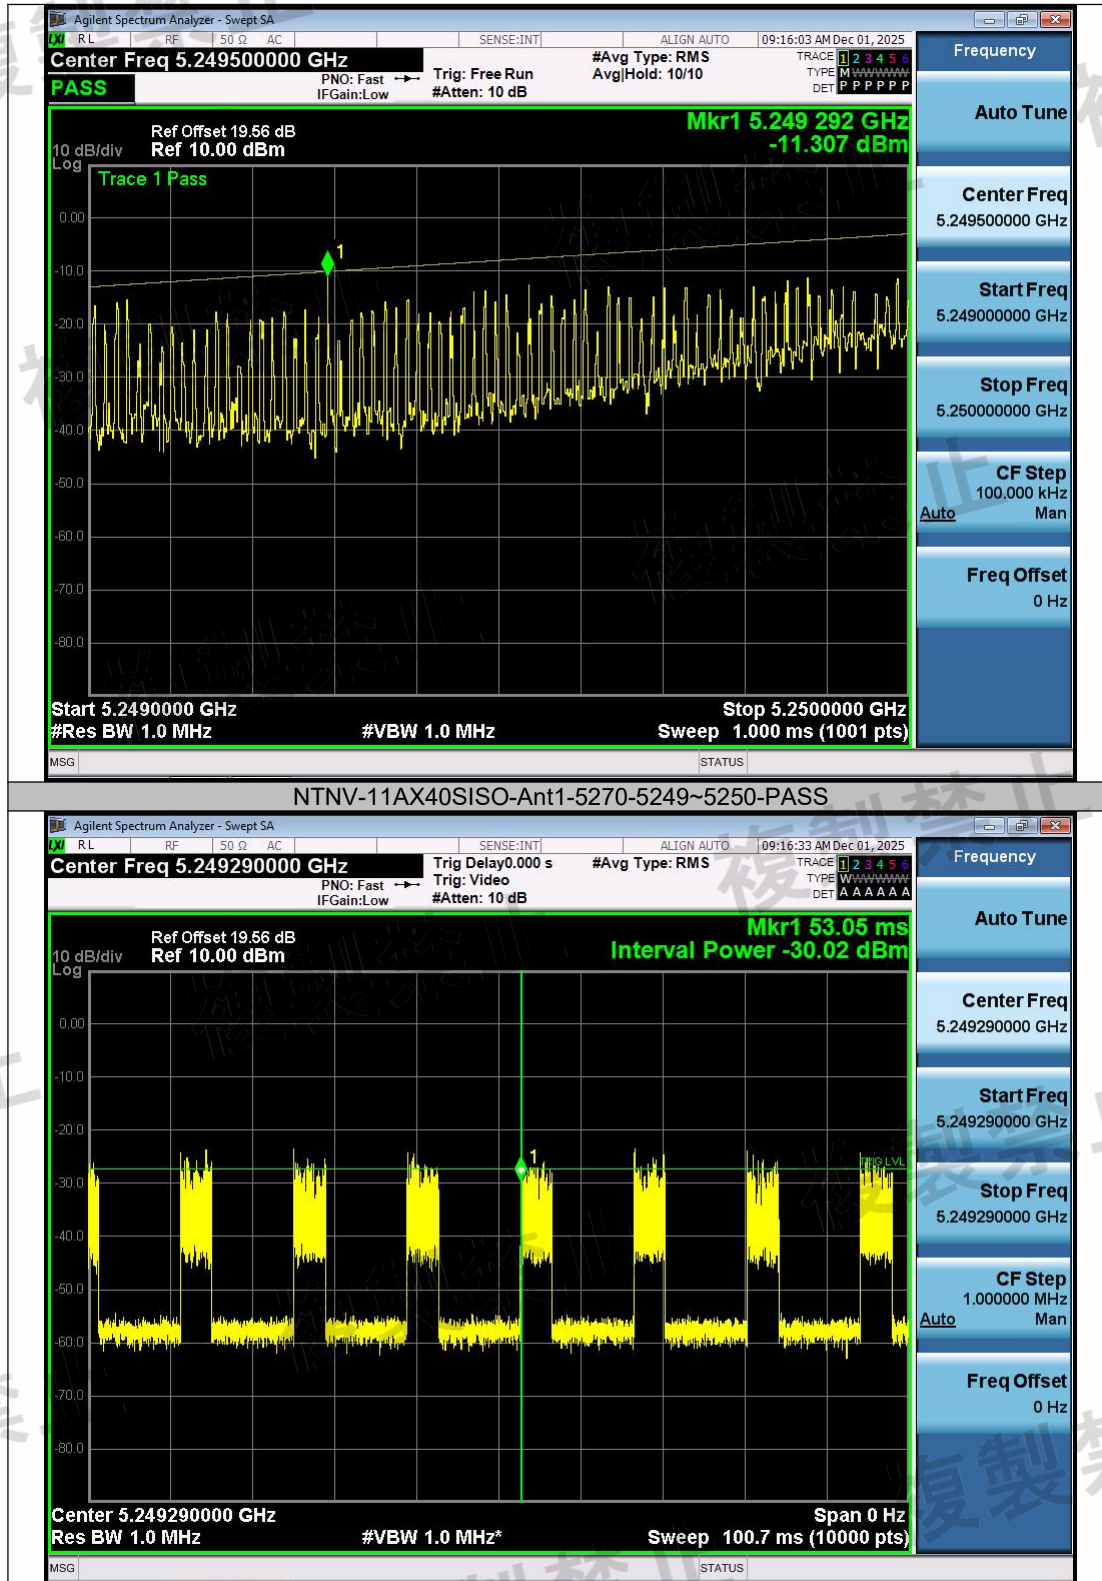

7.4. OCCUPIED BANDWIDTH (99%)

7.4.1. Limit

ARIB STD-T71, Clause 3.1.2 (11)

Mode	Occupied Bandwidth Limit(MHz)
802.11a	19MHz or less
802.11n(HT20)	19MHz or less
802.11ac(HT20)	19MHz or less
802.11n(HT40)	38MHz or less
802.11ac(HT40)	38MHz or less
802.11ac(VHT80)	78MHz or less

7.4.2. Test Procedure

Test Method for Radio Equipment mentioned in Certification Regulations Article 2, Item 19-3-2

MIC Notice No.88 Annex45 Clause 4

7.4.3. Test Configuration

Temperature and Voltage Measurement (under normal and extreme test conditions)



Remarks:


The spectrum analyzer could be connected to a monopole antenna or directly connected to the EUT, if the EUT has already employing an antenna connector.

7.4.4. TEST RESULT


802.11a/n(HT20)/ac(HT20))/ax(HE20) SPAN=50MHz, RBW=VBW=300KHz

802.11n(HT40)/ax(HE40) SPAN=80MHz, RBW=VBW=300KHz

TestCondition	TestMode	Antenna	Frequency[MHz]	Result [MHz]	Limit [MHz]	Verdict
NTNV	11A	Ant1	5180	16.764	≤20	PASS
NTNV	11A	Ant1	5200	16.398	≤20	PASS
NTNV	11A	Ant1	5240	16.574	≤20	PASS
NTNV	11A	Ant1	5260	16.496	≤20	PASS
NTNV	11A	Ant1	5280	16.469	≤20	PASS
NTNV	11A	Ant1	5320	16.557	≤20	PASS
NTNV	11A	Ant1	5500	16.570	≤20	PASS
NTNV	11A	Ant1	5580	16.499	≤20	PASS
NTNV	11A	Ant1	5700	16.508	≤20	PASS
NTNV	11N20SISO	Ant1	5180	17.786	≤20	PASS
NTNV	11N20SISO	Ant1	5200	17.790	≤20	PASS
NTNV	11N20SISO	Ant1	5240	17.932	≤20	PASS
NTNV	11N20SISO	Ant1	5260	17.843	≤20	PASS
NTNV	11N20SISO	Ant1	5280	17.861	≤20	PASS
NTNV	11N20SISO	Ant1	5320	17.784	≤20	PASS
NTNV	11N20SISO	Ant1	5500	17.872	≤20	PASS
NTNV	11N20SISO	Ant1	5580	17.799	≤20	PASS
NTNV	11N20SISO	Ant1	5700	17.720	≤20	PASS
NTNV	11N40SISO	Ant1	5190	36.148	≤40	PASS
NTNV	11N40SISO	Ant1	5230	36.164	≤40	PASS
NTNV	11N40SISO	Ant1	5270	36.087	≤40	PASS
NTNV	11N40SISO	Ant1	5310	36.177	≤40	PASS
NTNV	11N40SISO	Ant1	5510	36.198	≤40	PASS
NTNV	11N40SISO	Ant1	5670	36.493	≤40	PASS
NTNV	11AC20SISO	Ant1	5180	17.863	≤20	PASS
NTNV	11AC20SISO	Ant1	5200	17.841	≤20	PASS
NTNV	11AC20SISO	Ant1	5240	17.859	≤20	PASS
NTNV	11AC20SISO	Ant1	5260	17.755	≤20	PASS
NTNV	11AC20SISO	Ant1	5280	17.685	≤20	PASS
NTNV	11AC20SISO	Ant1	5320	17.793	≤20	PASS
NTNV	11AC20SISO	Ant1	5500	17.774	≤20	PASS
NTNV	11AC20SISO	Ant1	5580	17.748	≤20	PASS
NTNV	11AC20SISO	Ant1	5700	17.801	≤20	PASS
NTNV	11AC40SISO	Ant1	5190	36.084	≤40	PASS
NTNV	11AC40SISO	Ant1	5230	36.298	≤40	PASS
NTNV	11AC40SISO	Ant1	5270	36.191	≤40	PASS
NTNV	11AC40SISO	Ant1	5310	36.127	≤40	PASS
NTNV	11AC40SISO	Ant1	5510	36.071	≤40	PASS
NTNV	11AC40SISO	Ant1	5670	36.294	≤40	PASS
NTNV	11AX20SISO	Ant1	5180	18.996	≤20	PASS
NTNV	11AX20SISO	Ant1	5200	18.971	≤20	PASS
NTNV	11AX20SISO	Ant1	5240	18.830	≤20	PASS
NTNV	11AX20SISO	Ant1	5260	18.981	≤20	PASS
NTNV	11AX20SISO	Ant1	5280	18.935	≤20	PASS
NTNV	11AX20SISO	Ant1	5320	18.780	≤20	PASS
NTNV	11AX20SISO	Ant1	5500	18.999	≤20	PASS
NTNV	11AX20SISO	Ant1	5580	18.987	≤20	PASS
NTNV	11AX20SISO	Ant1	5700	19.049	≤20	PASS
NTNV	11AX40SISO	Ant1	5190	37.912	≤40	PASS
NTNV	11AX40SISO	Ant1	5230	37.645	≤40	PASS
NTNV	11AX40SISO	Ant1	5270	37.797	≤40	PASS
NTNV	11AX40SISO	Ant1	5310	37.757	≤40	PASS
NTNV	11AX40SISO	Ant1	5510	37.604	≤40	PASS
NTNV	11AX40SISO	Ant1	5670	37.873	≤40	PASS

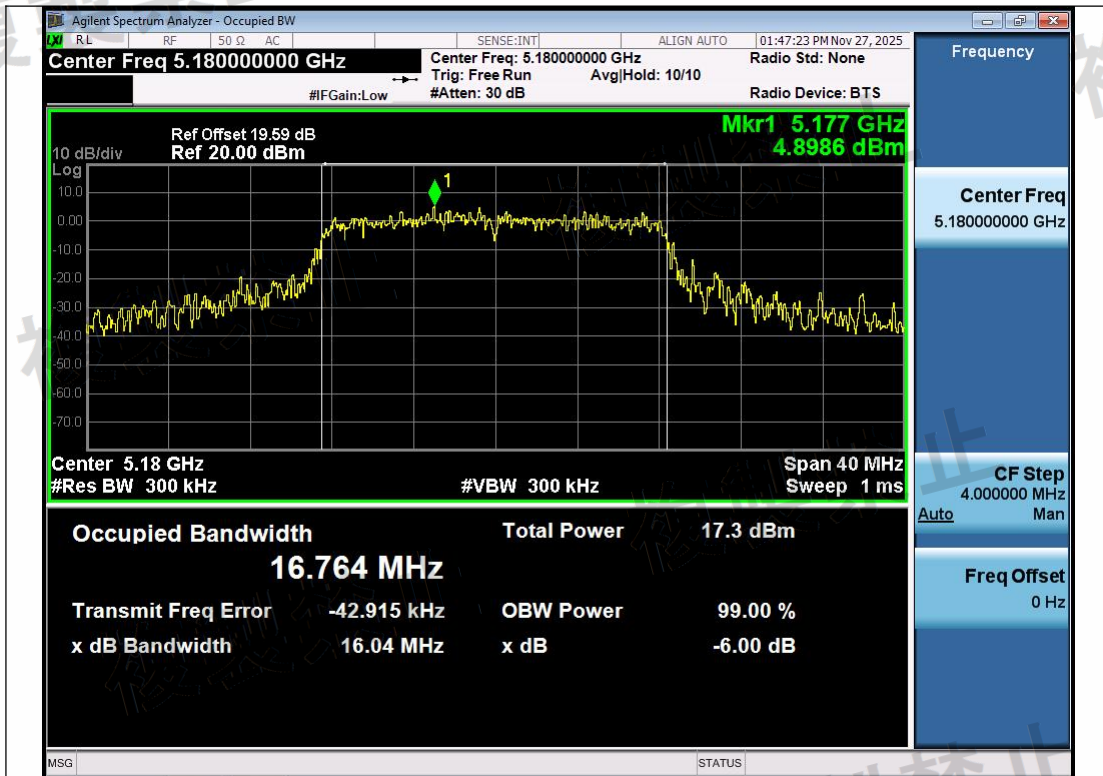

NTNV-11A-Ant1-5180-PASS

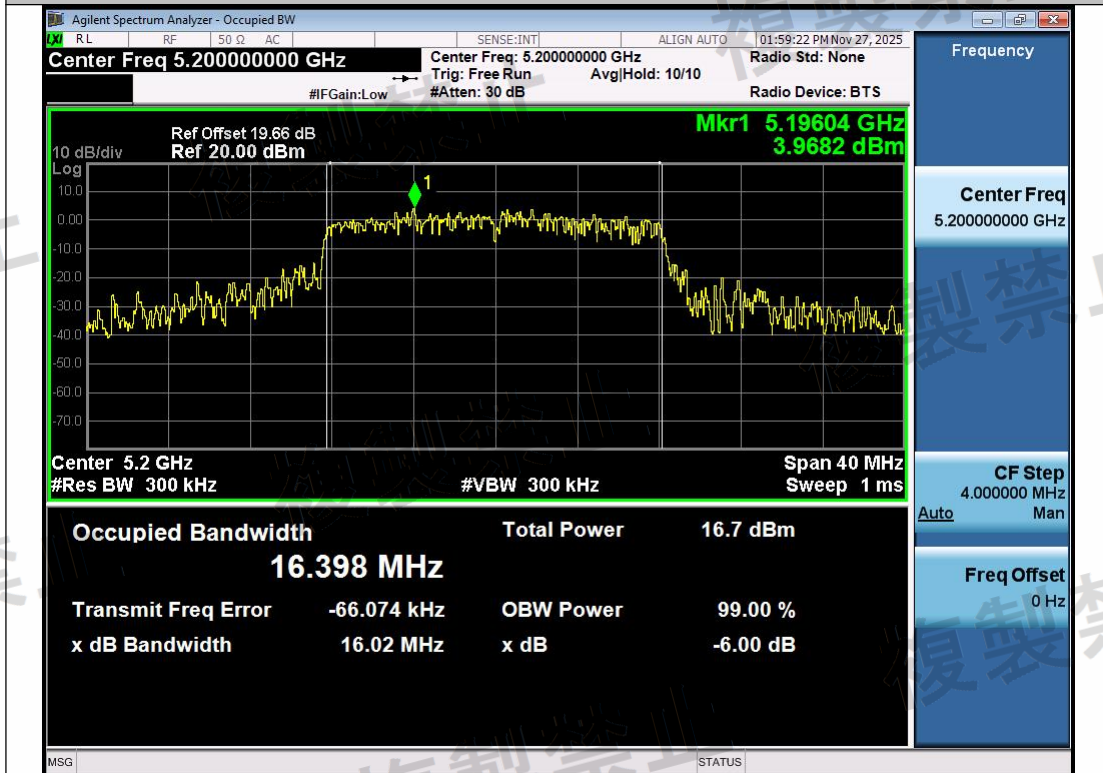

NTNV-11A-Ant1-5200-PASS

