




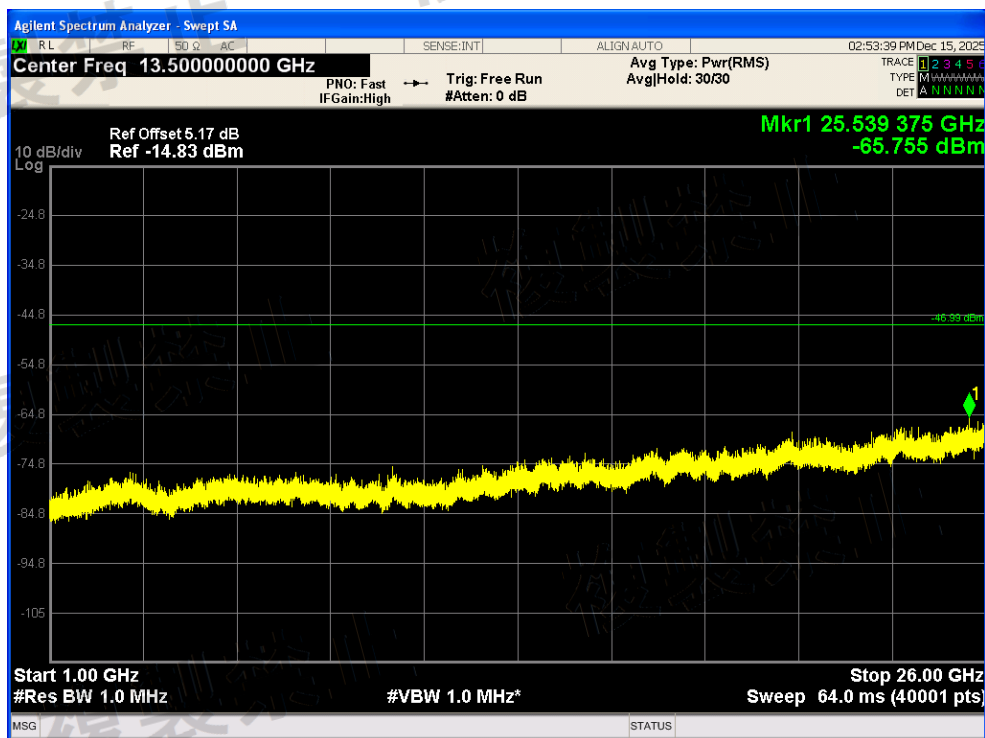


Rx. Spurious NVNT ac20 5700MHz Ant1 @ 30MHz-1000MHz

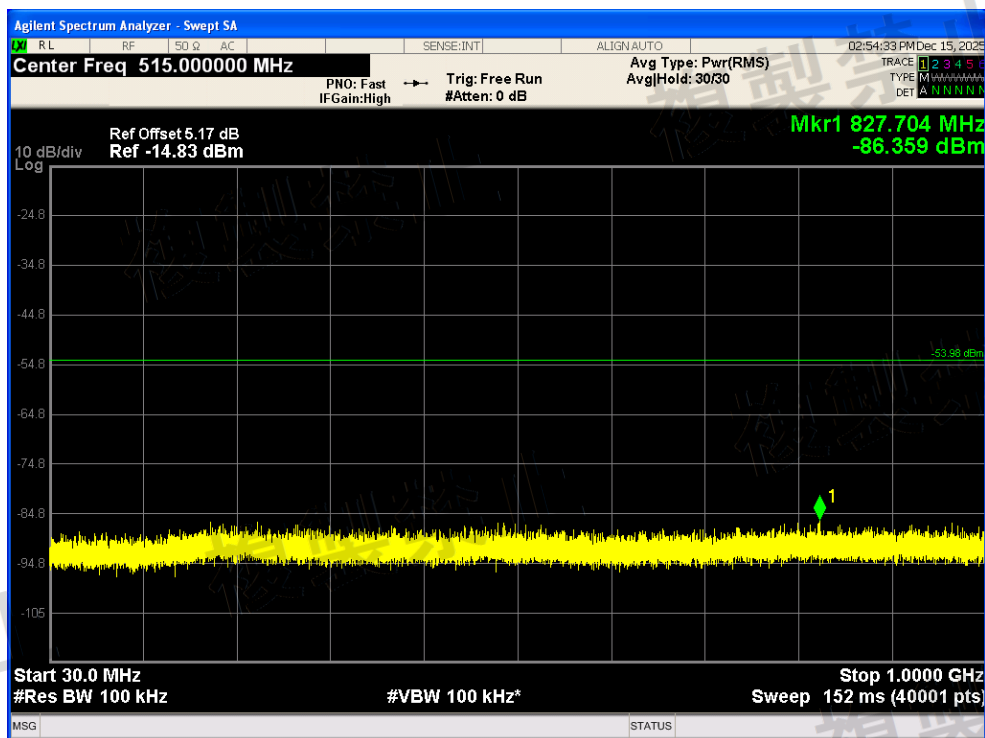


Rx. Spurious NVNT ac20 5700MHz Ant1 @ 1000MHz-26000MHz

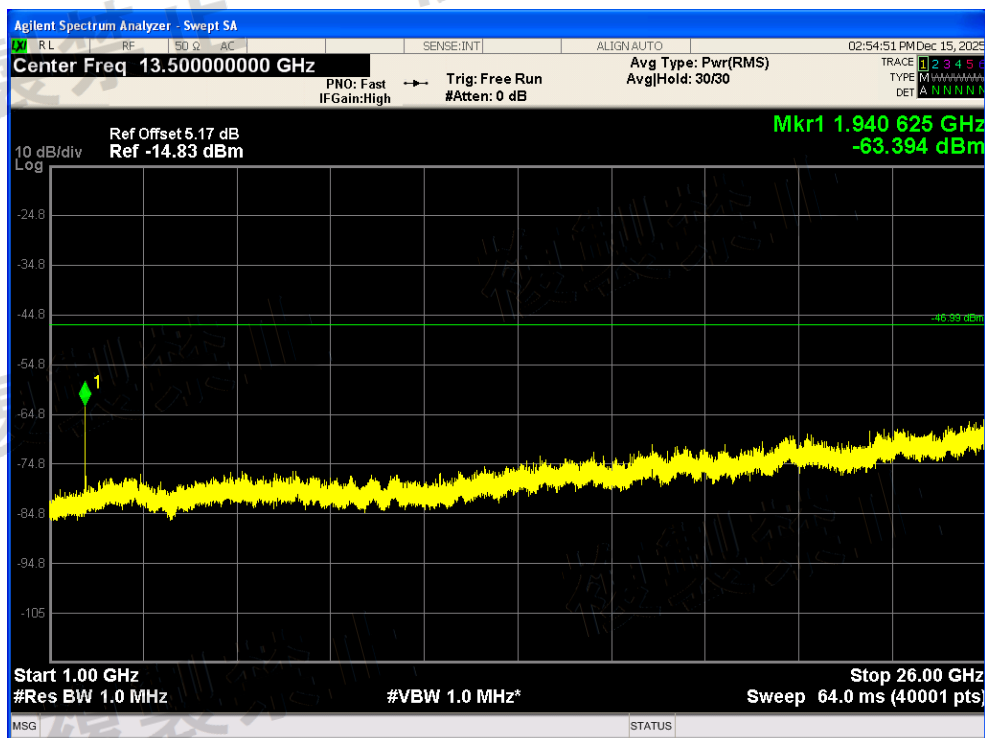


Rx. Spurious NVNT ac20 5500MHz Ant2 @ 30MHz-1000MHz

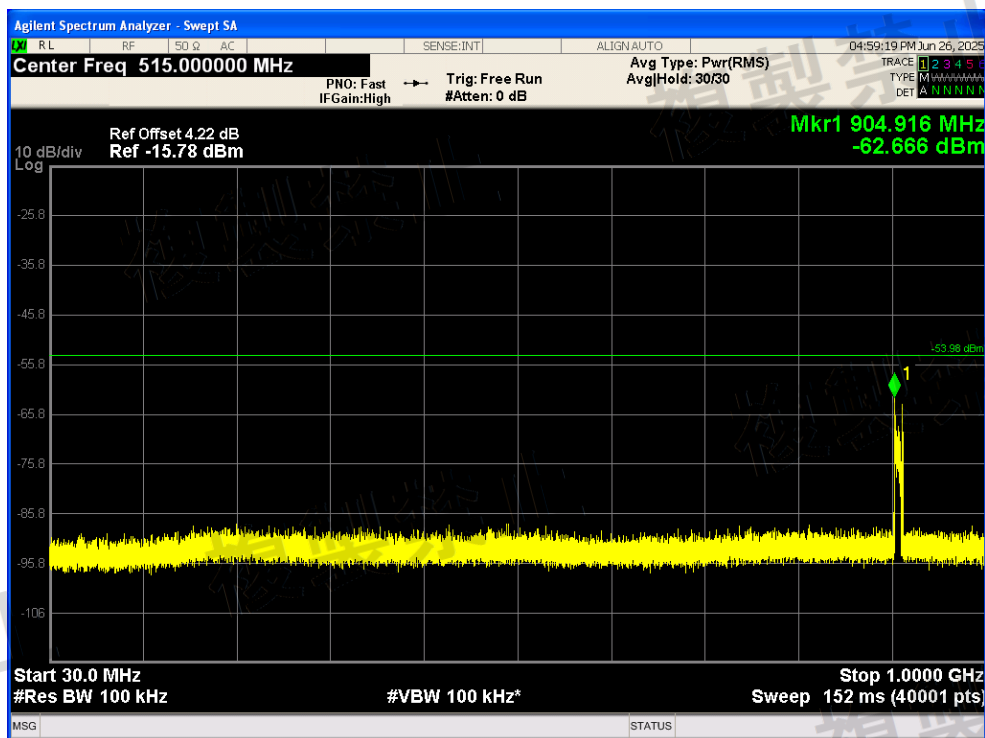


Rx. Spurious NVNT ac20 5500MHz Ant2 @ 1000MHz-26000MHz

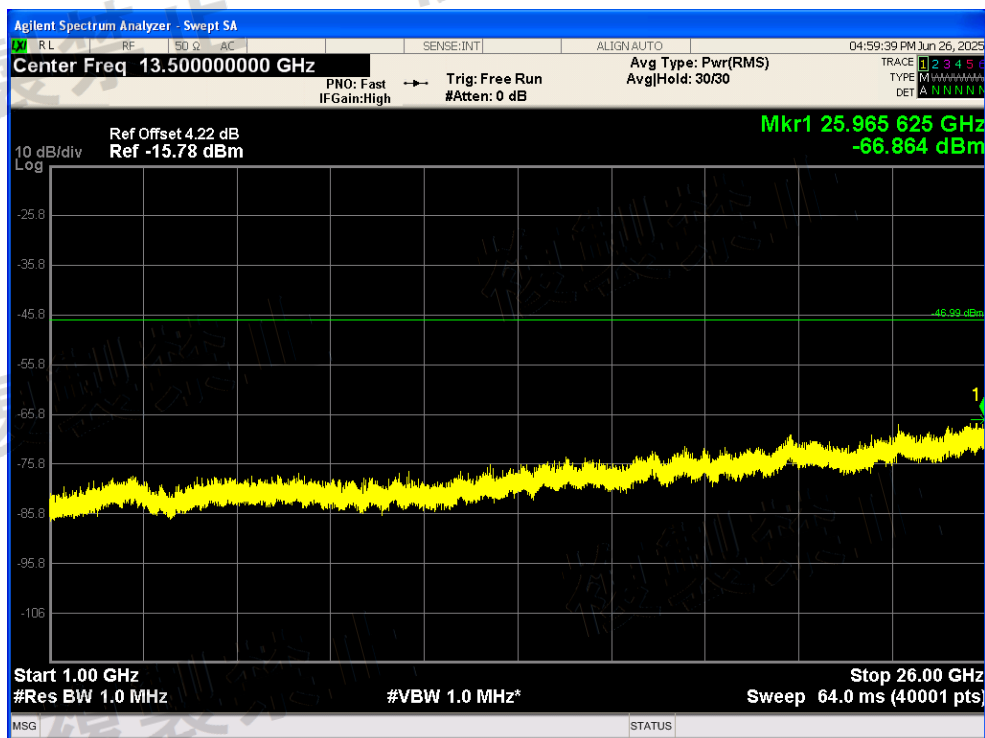


Rx. Spurious NVNT ac20 5600MHz Ant2 @ 30MHz-1000MHz

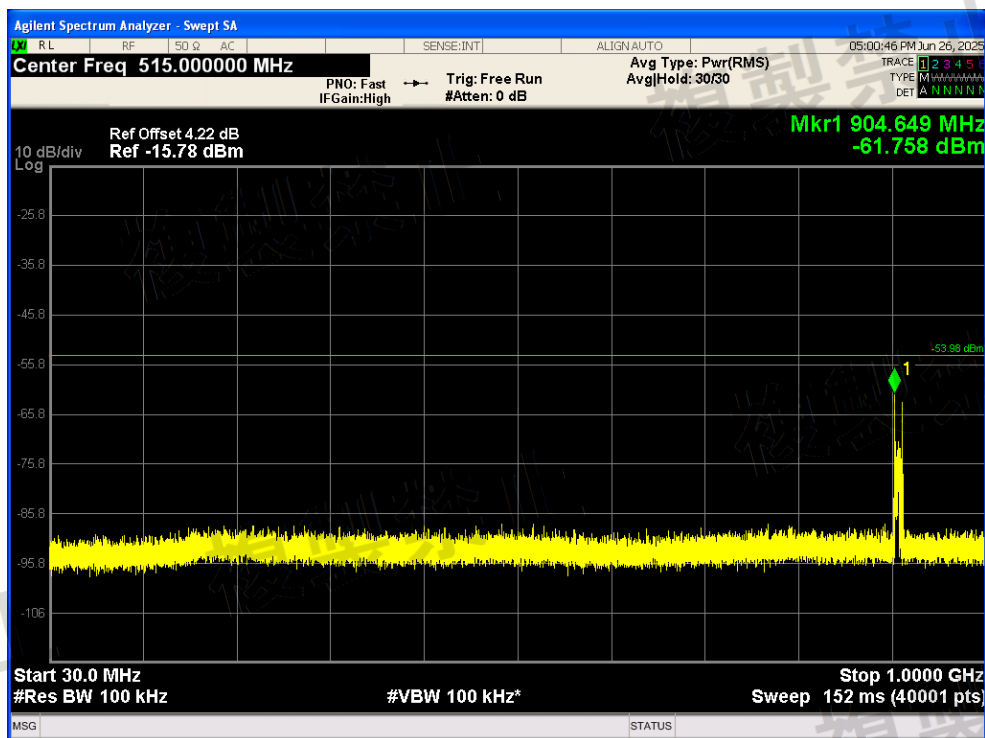


Rx. Spurious NVNT ac20 5600MHz Ant2 @ 1000MHz-26000MHz

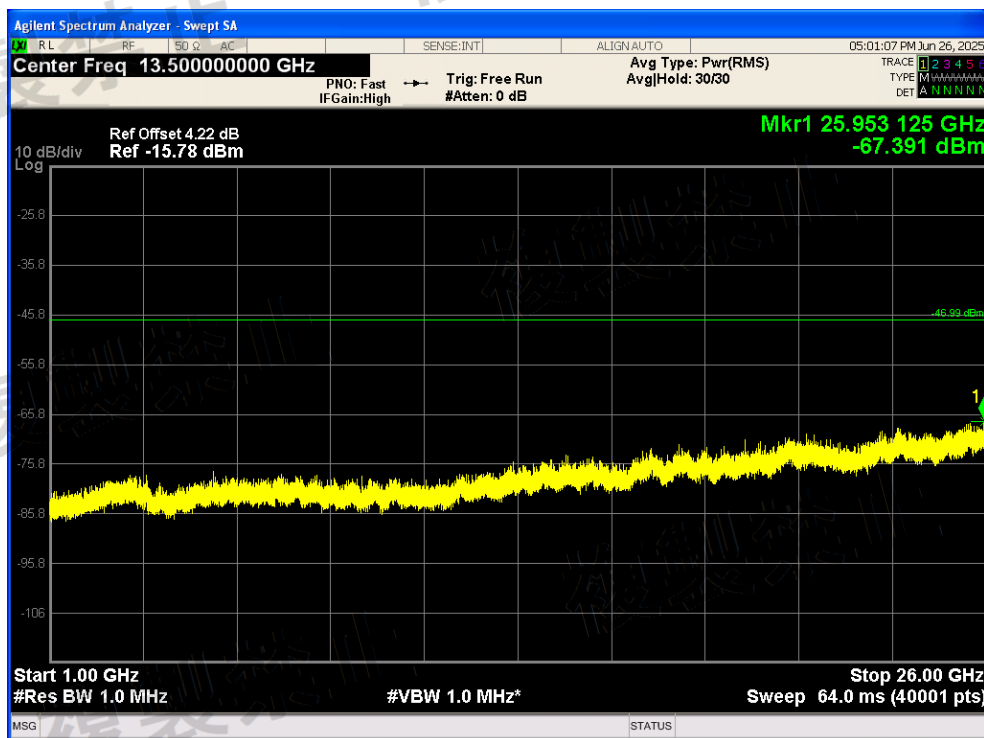


Rx. Spurious NVNT ac20 5700MHz Ant2 @ 30MHz-1000MHz

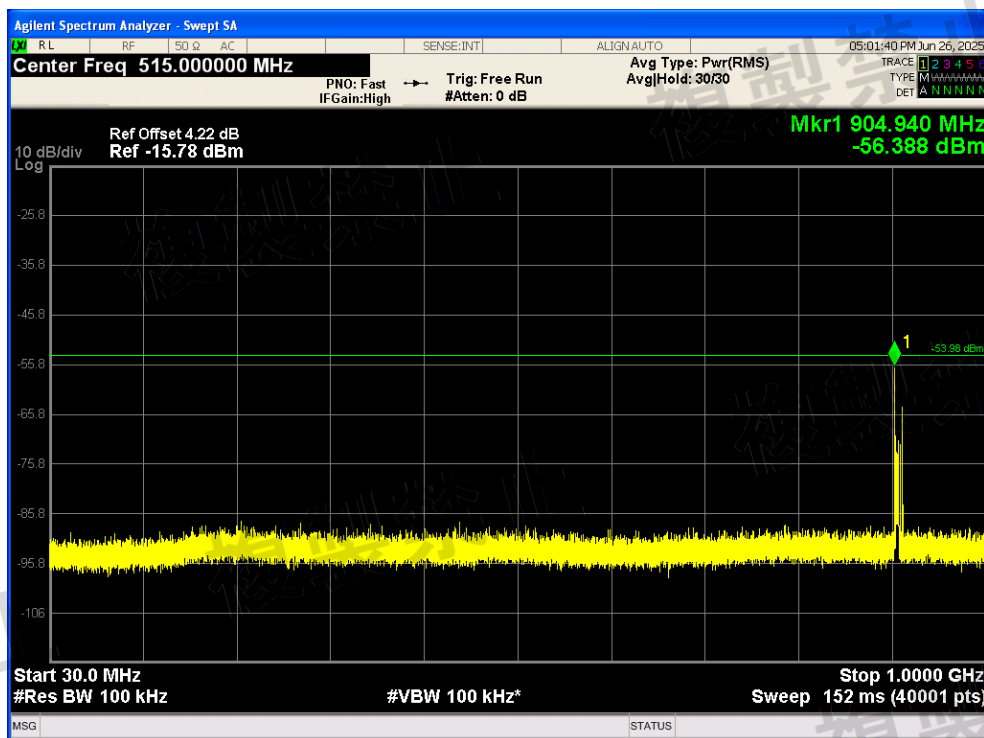


Rx. Spurious NVNT ac20 5700MHz Ant2 @ 1000MHz-26000MHz

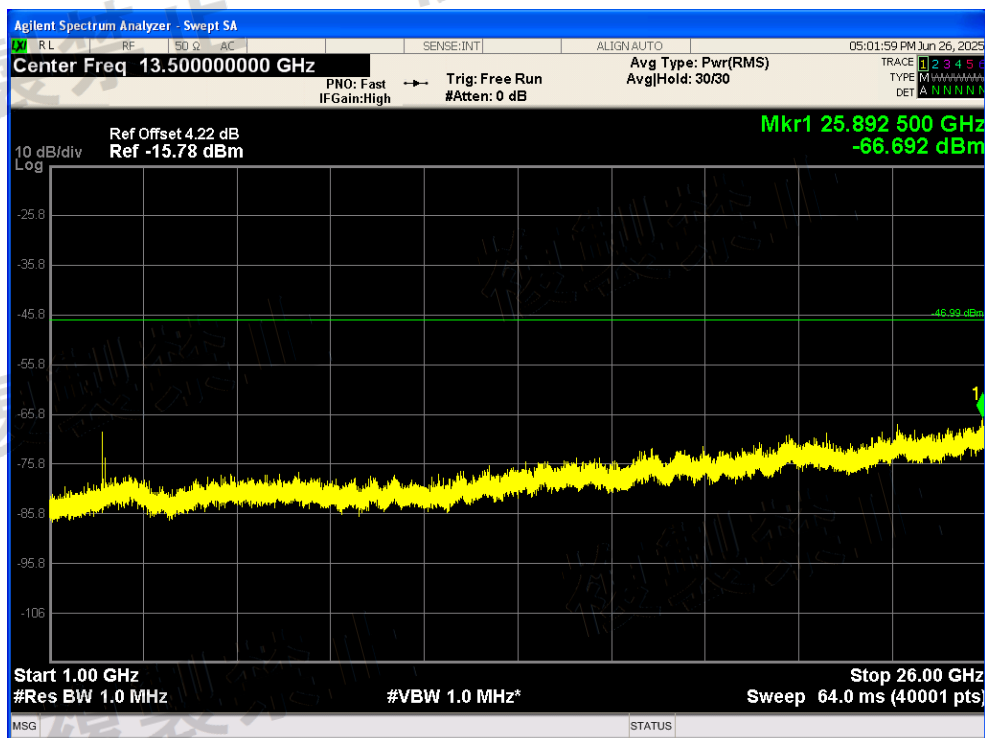


Rx. Spurious NVNT ac40 5510MHz Ant1 @ 30MHz-1000MHz

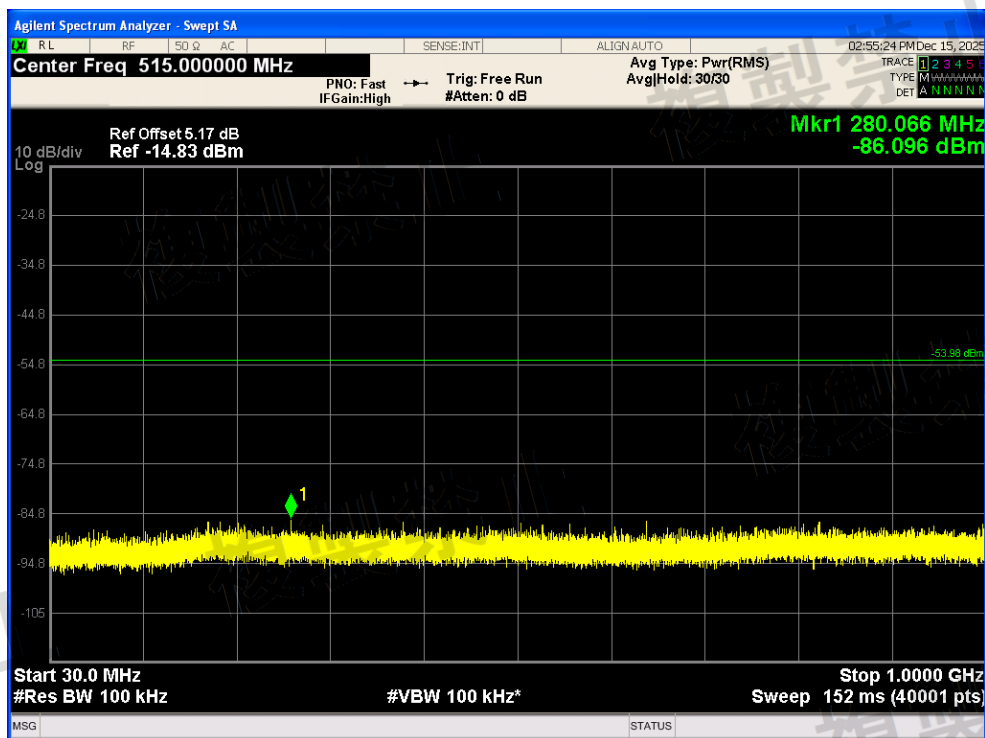


Rx. Spurious NVNT ac40 5510MHz Ant1 @ 1000MHz-26000MHz

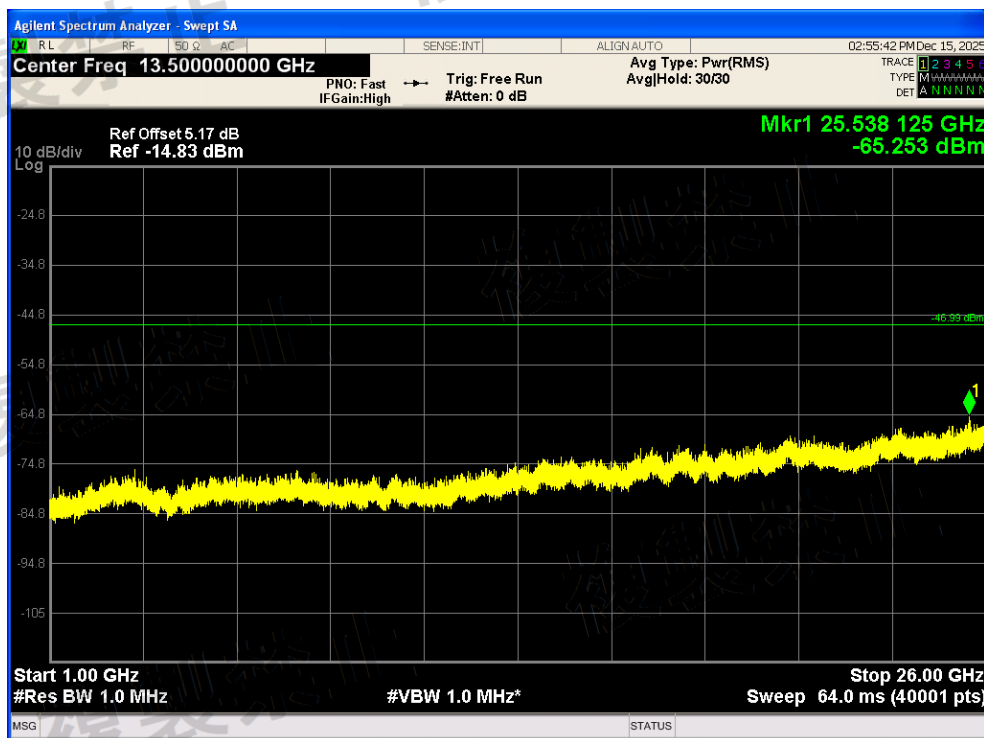


Rx. Spurious NVNT ac40 5590MHz Ant1 @ 30MHz-1000MHz

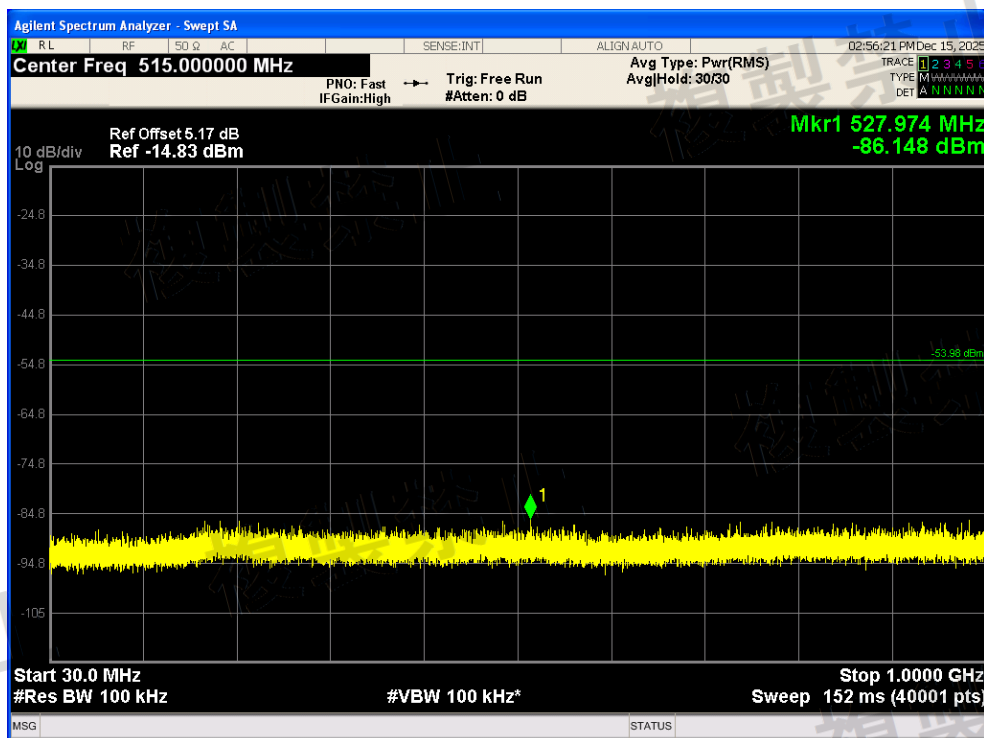


Rx. Spurious NVNT ac40 5590MHz Ant1 @ 1000MHz-26000MHz

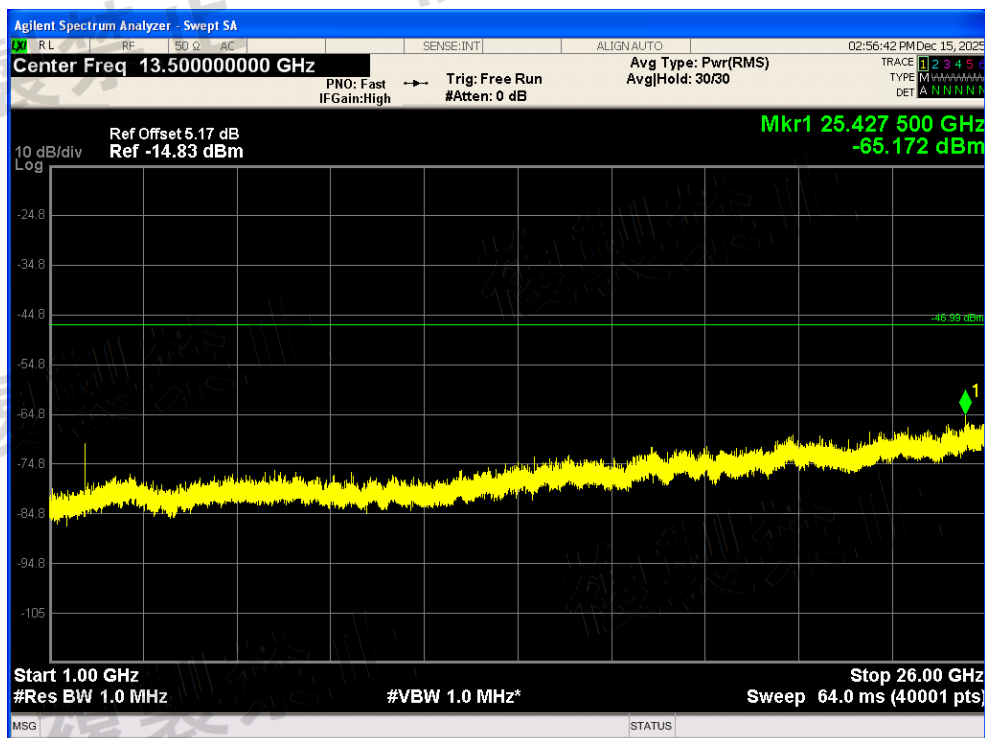


Rx. Spurious NVNT ac40 5670MHz Ant1 @ 30MHz-1000MHz

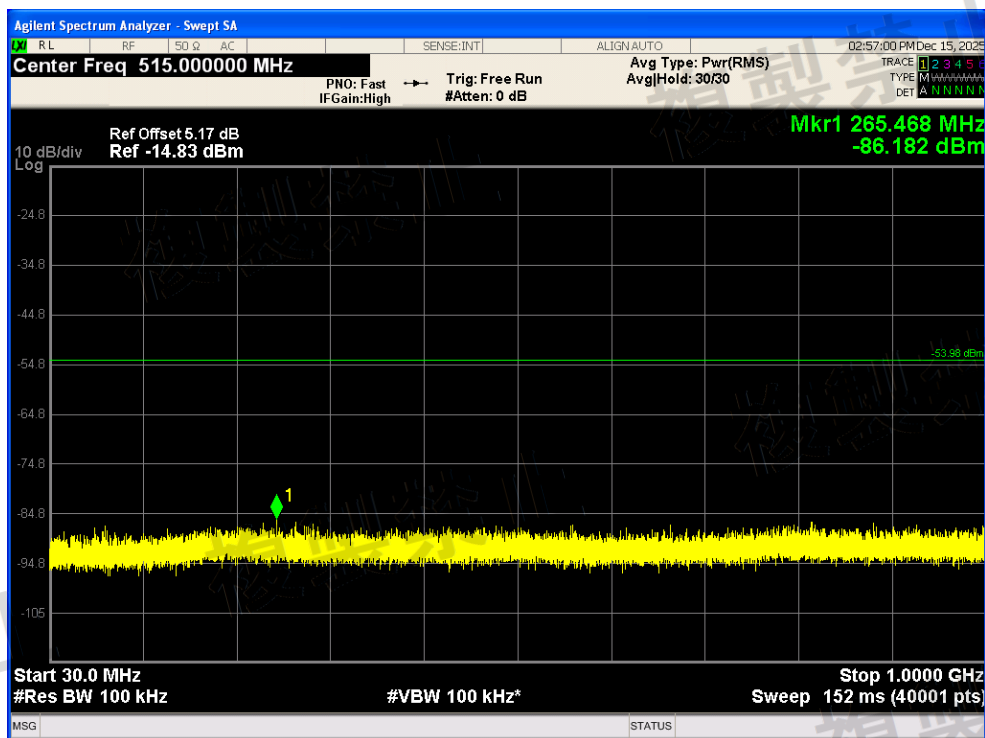


Rx. Spurious NVNT ac40 5670MHz Ant1 @ 1000MHz-26000MHz

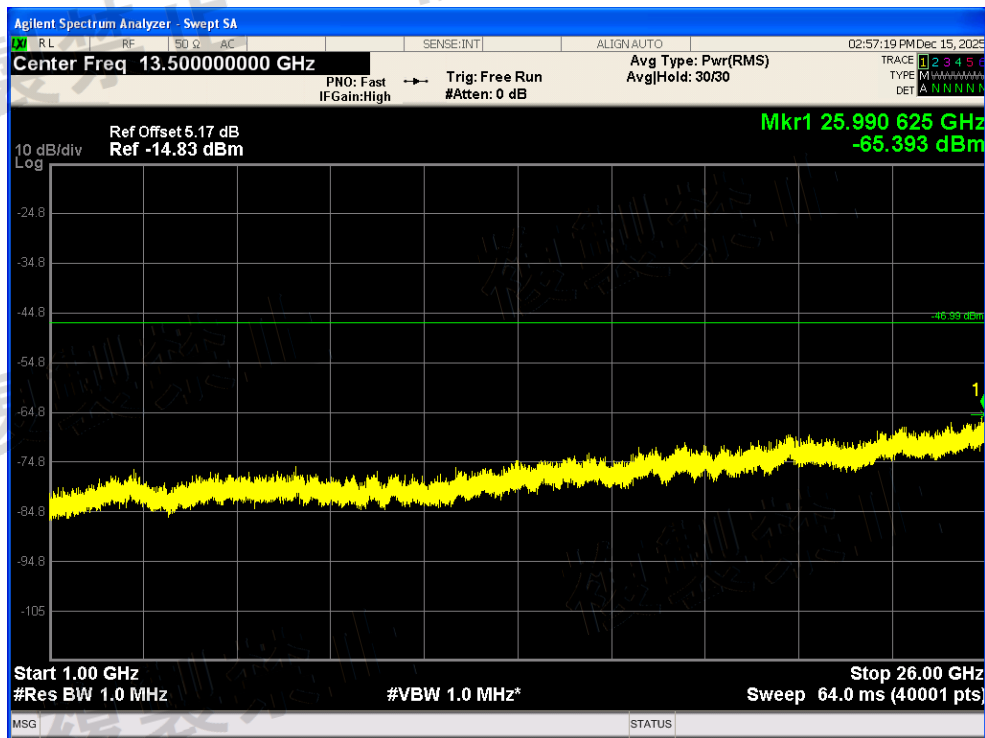


Rx. Spurious NVNT ac40 5510MHz Ant2 @ 30MHz-1000MHz

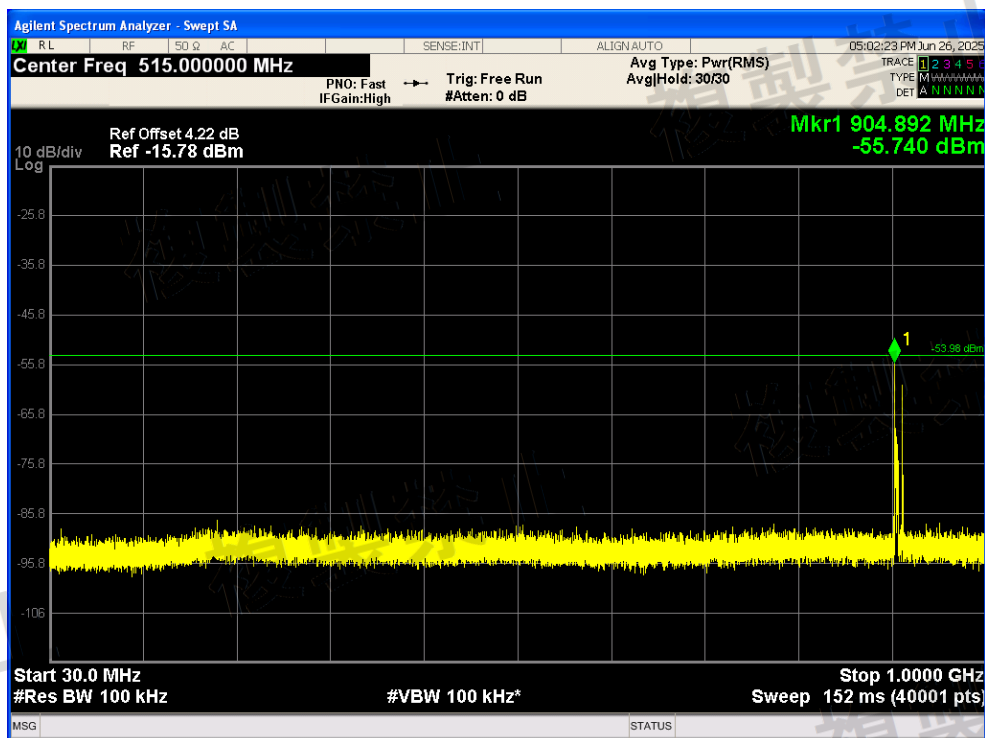


Rx. Spurious NVNT ac40 5510MHz Ant2 @ 1000MHz-26000MHz

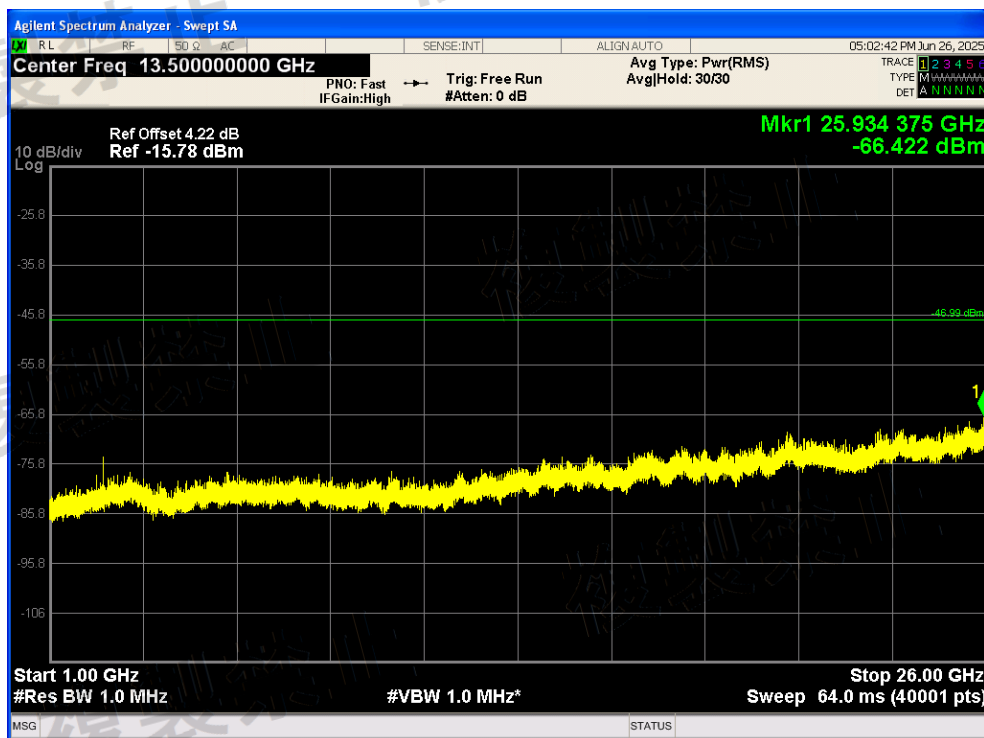


Rx. Spurious NVNT ac40 5590MHz Ant2 @ 30MHz-1000MHz

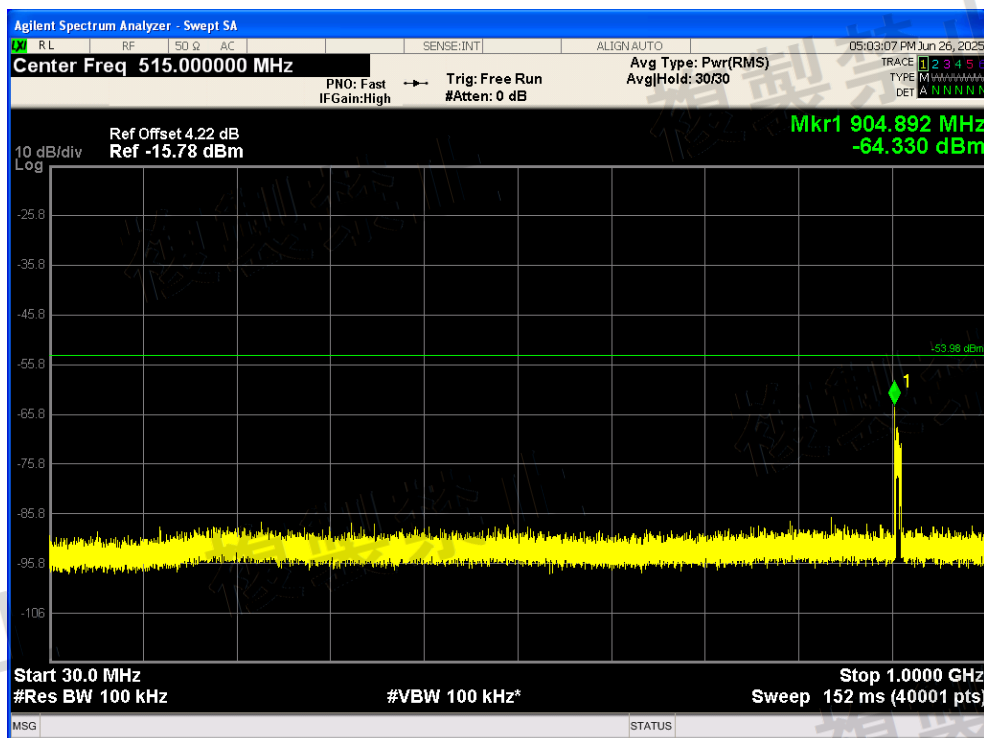


Rx. Spurious NVNT ac40 5590MHz Ant2 @ 1000MHz-26000MHz

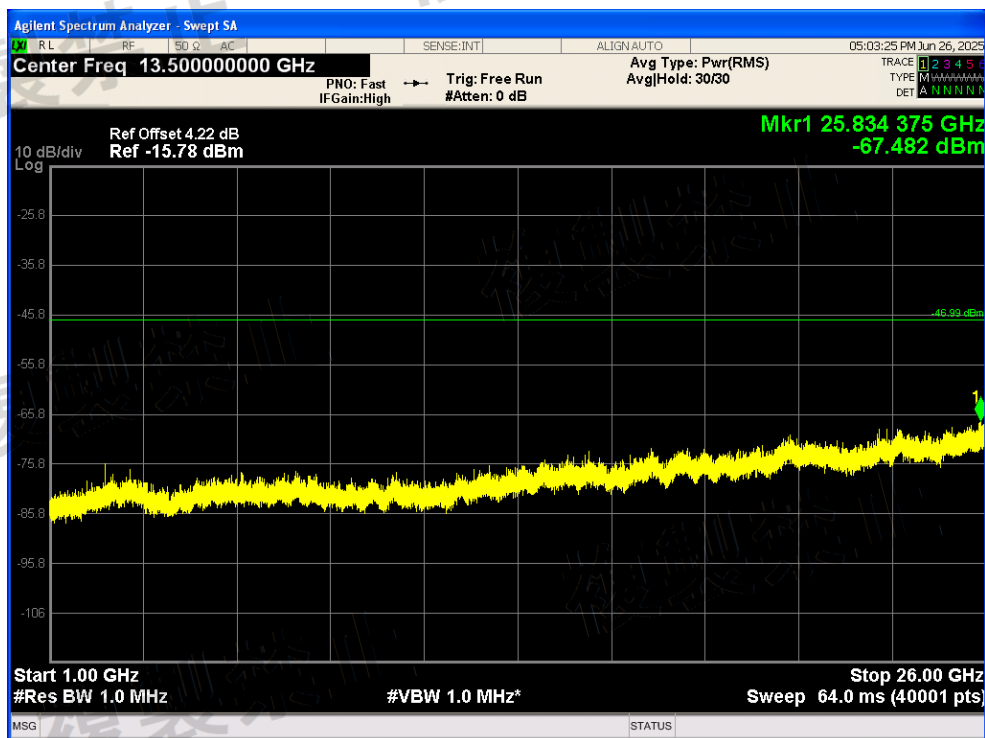


Rx. Spurious NVNT ac40 5670MHz Ant2 @ 30MHz-1000MHz

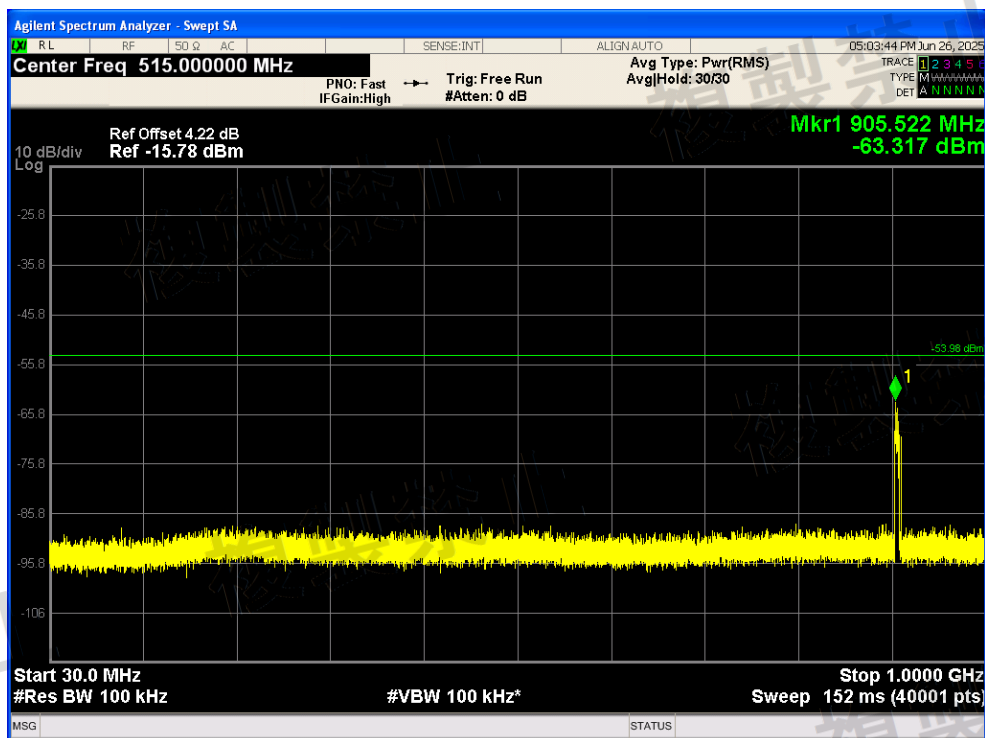


Rx. Spurious NVNT ac40 5670MHz Ant2 @ 1000MHz-26000MHz

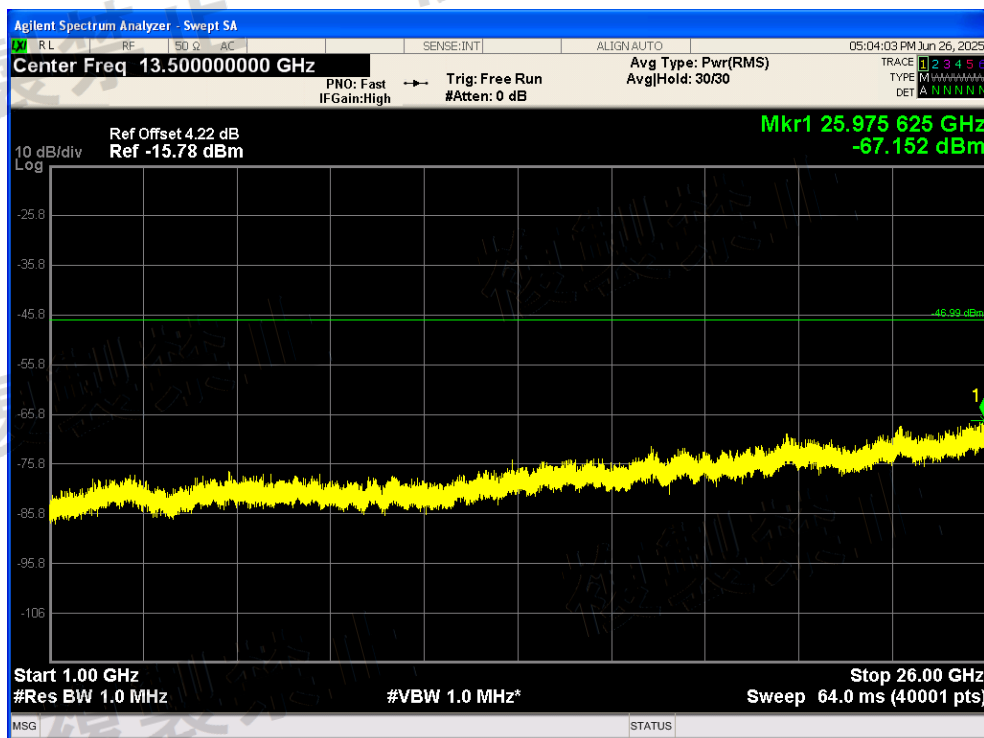


Rx. Spurious NVNT ac80 5530MHz Ant1 @ 30MHz-1000MHz

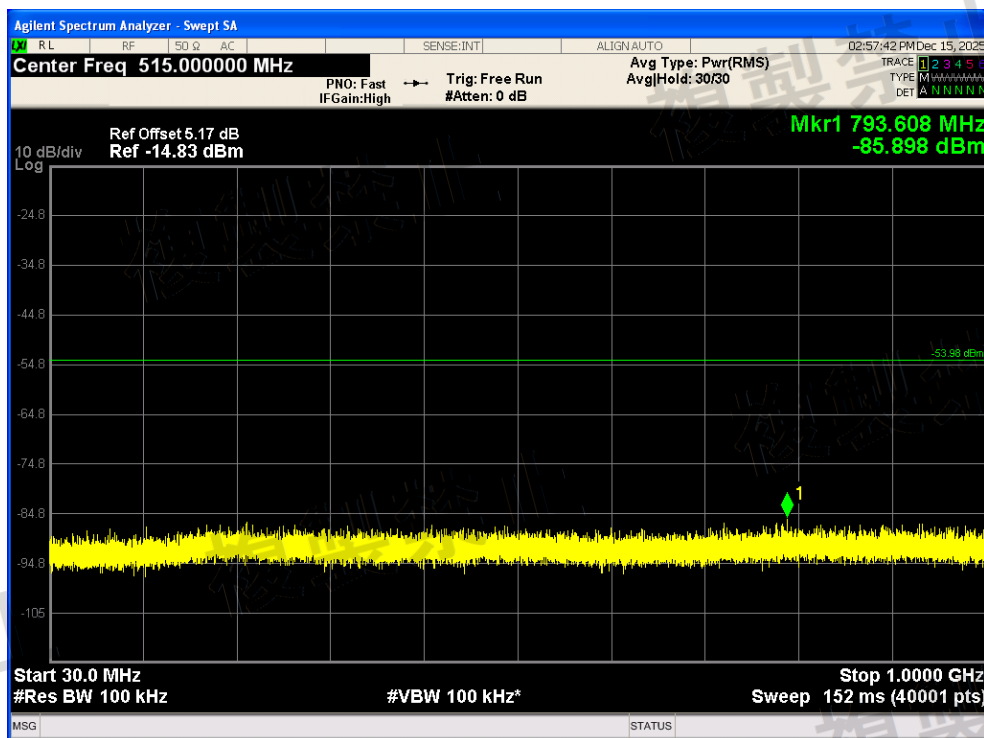


Rx. Spurious NVNT ac80 5530MHz Ant1 @ 1000MHz-26000MHz

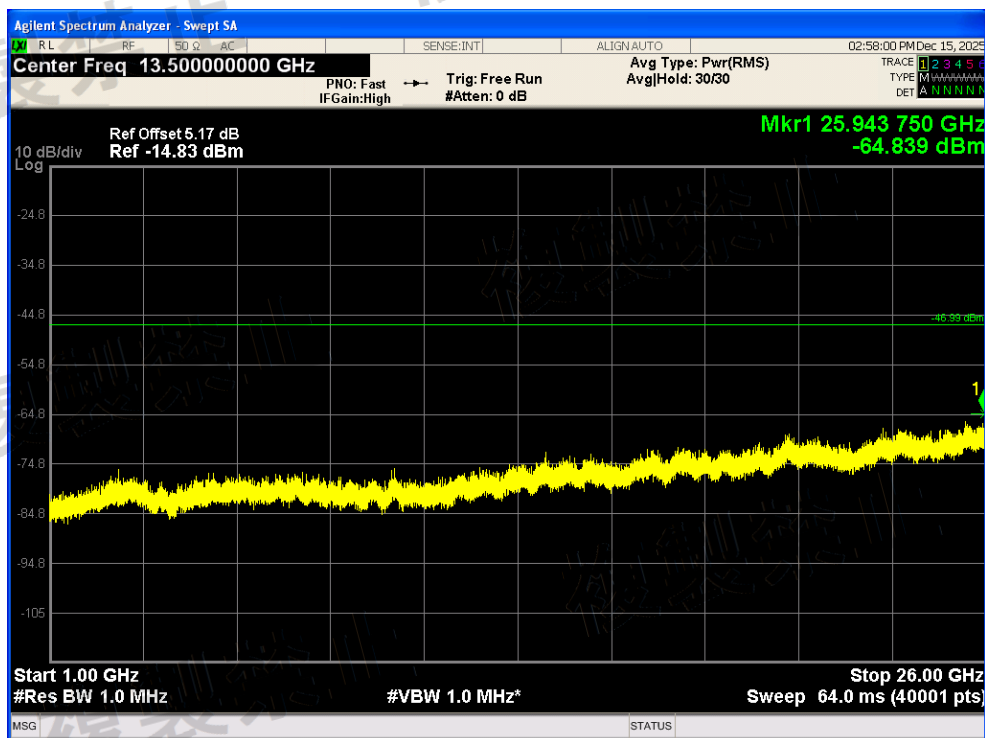


Rx. Spurious NVNT ac80 5610MHz Ant1 @ 30MHz-1000MHz

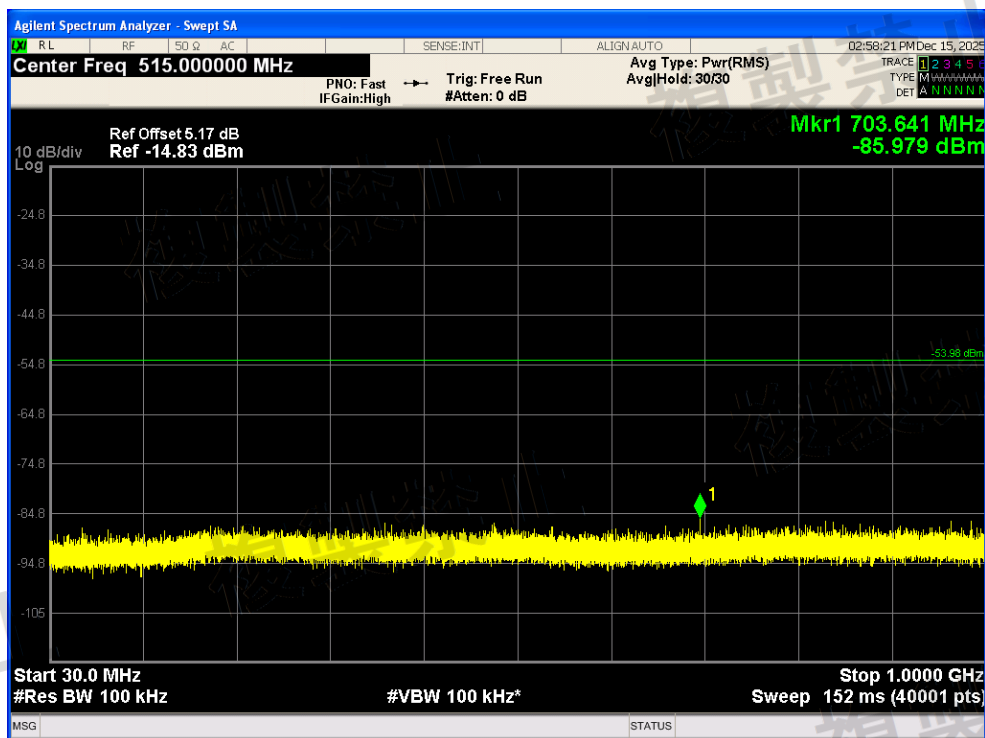


Rx. Spurious NVNT ac80 5610MHz Ant1 @ 1000MHz-26000MHz

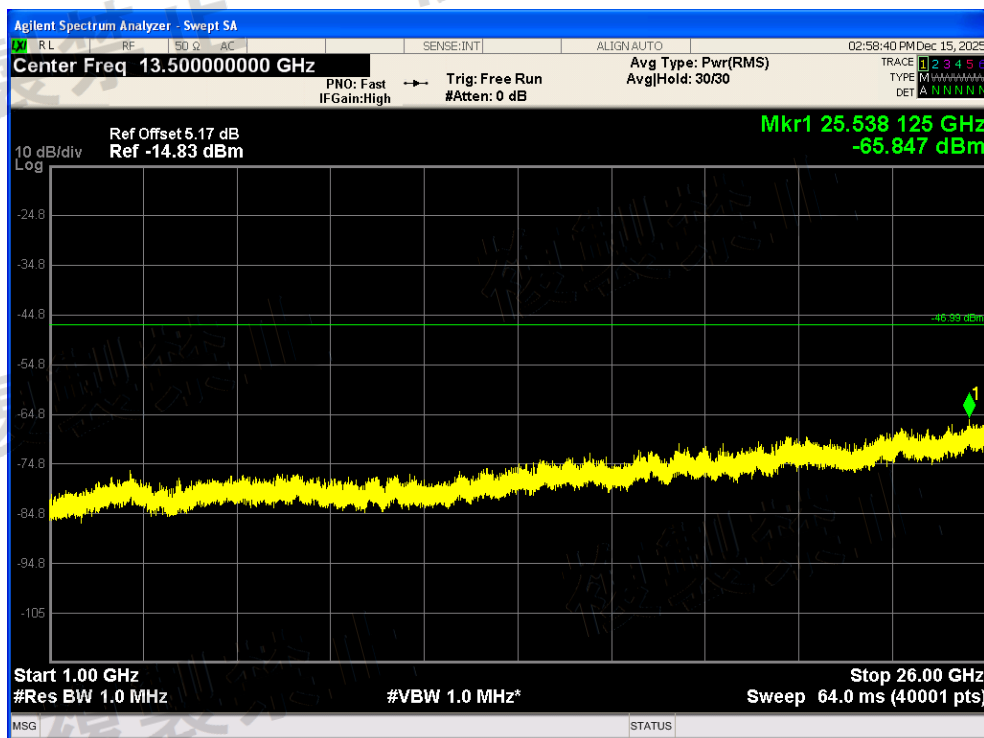


Rx. Spurious NVNT n20 5500MHz Ant1 @ 30MHz-1000MHz

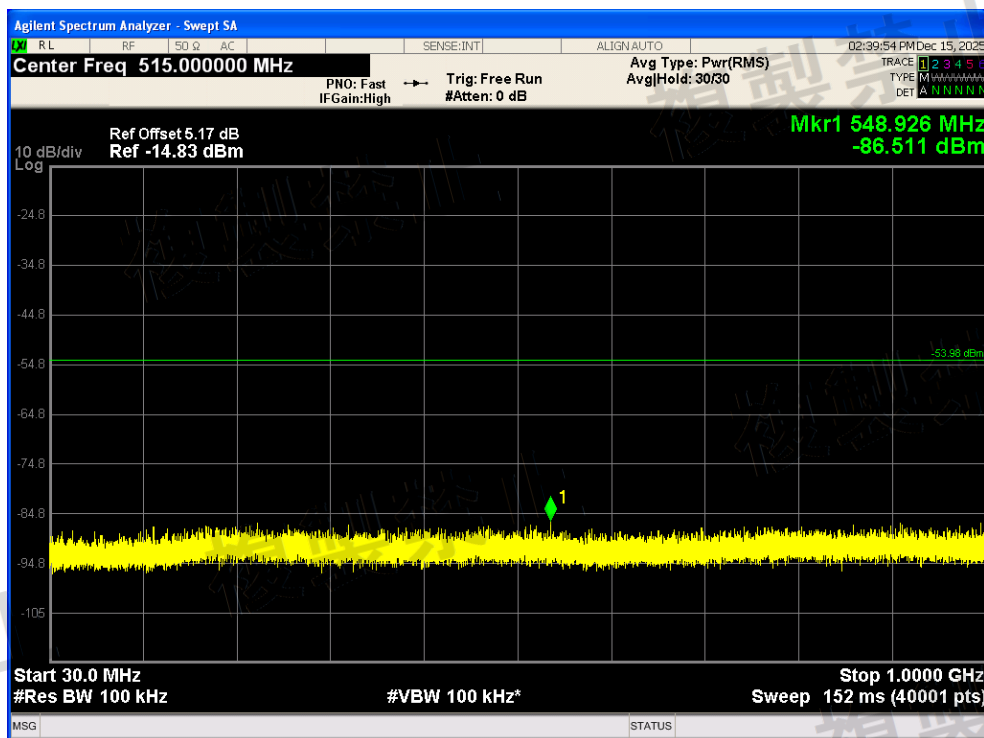


Rx. Spurious NVNT n20 5500MHz Ant1 @ 1000MHz-26000MHz

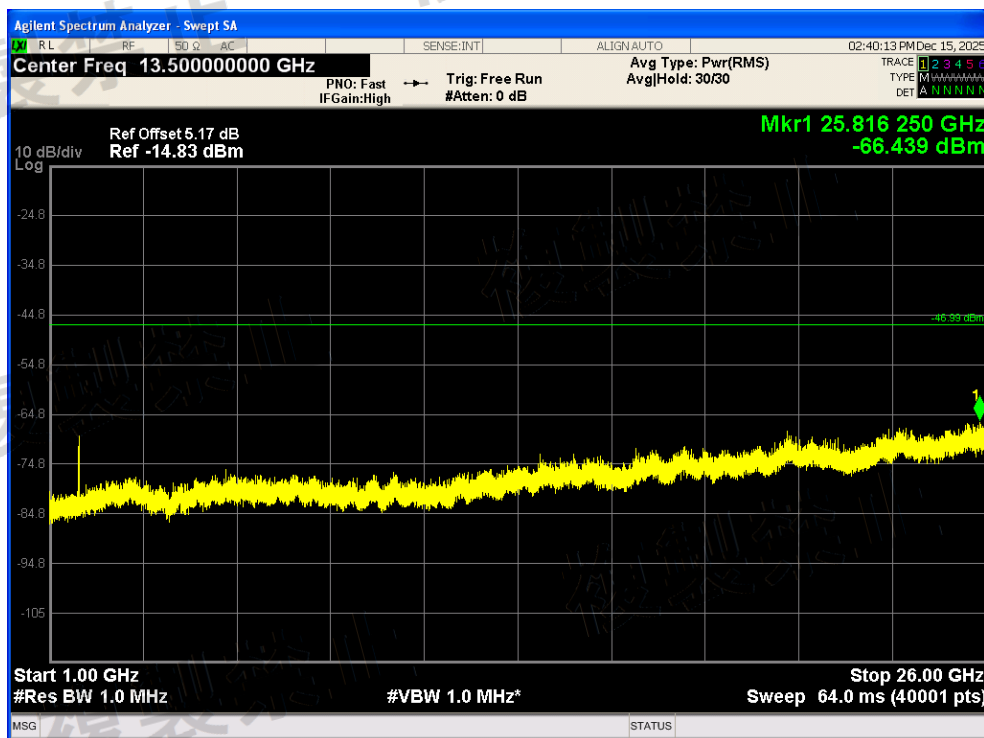


Rx. Spurious NVNT n20 5600MHz Ant1 @ 30MHz-1000MHz

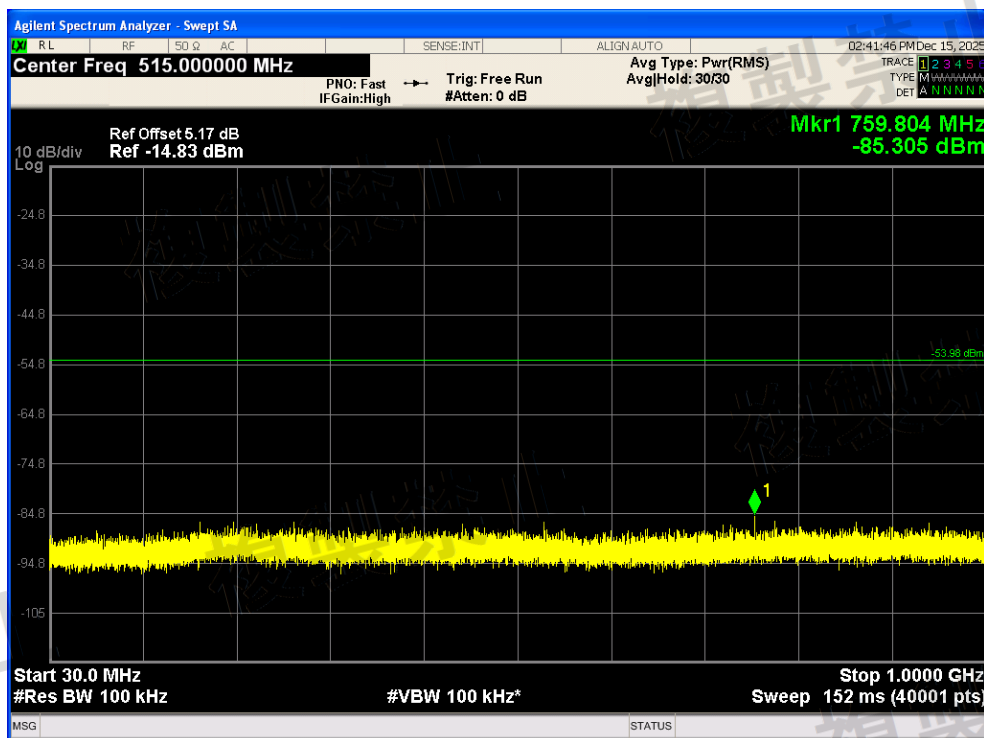


Rx. Spurious NVNT n20 5600MHz Ant1 @ 1000MHz-26000MHz

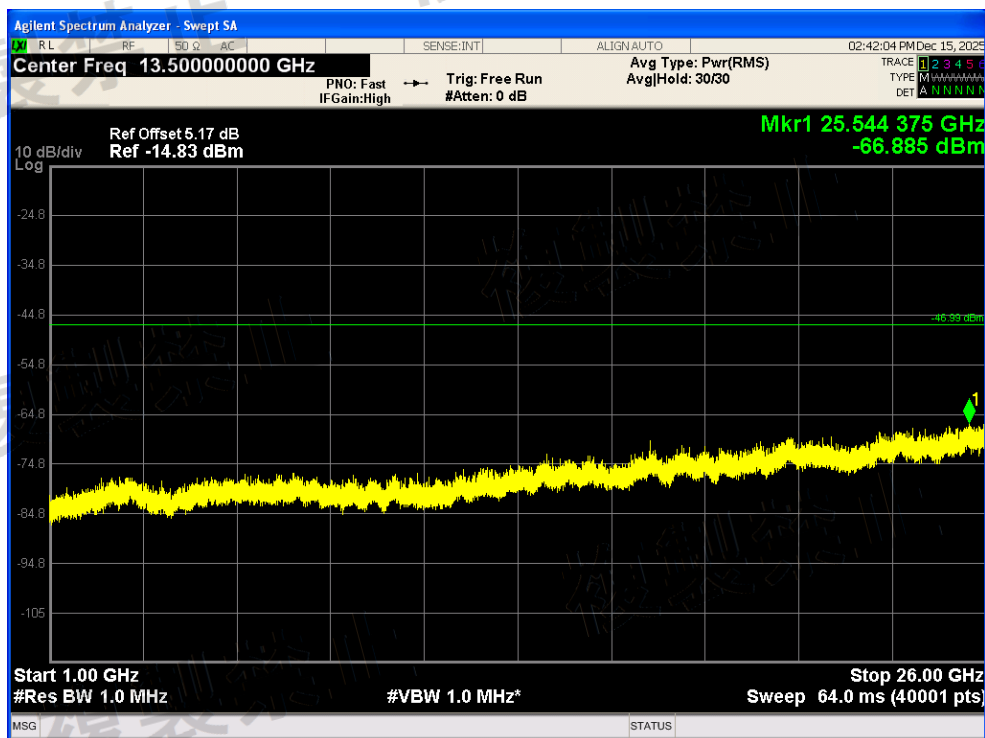


Rx. Spurious NVNT n20 5700MHz Ant1 @ 30MHz-1000MHz

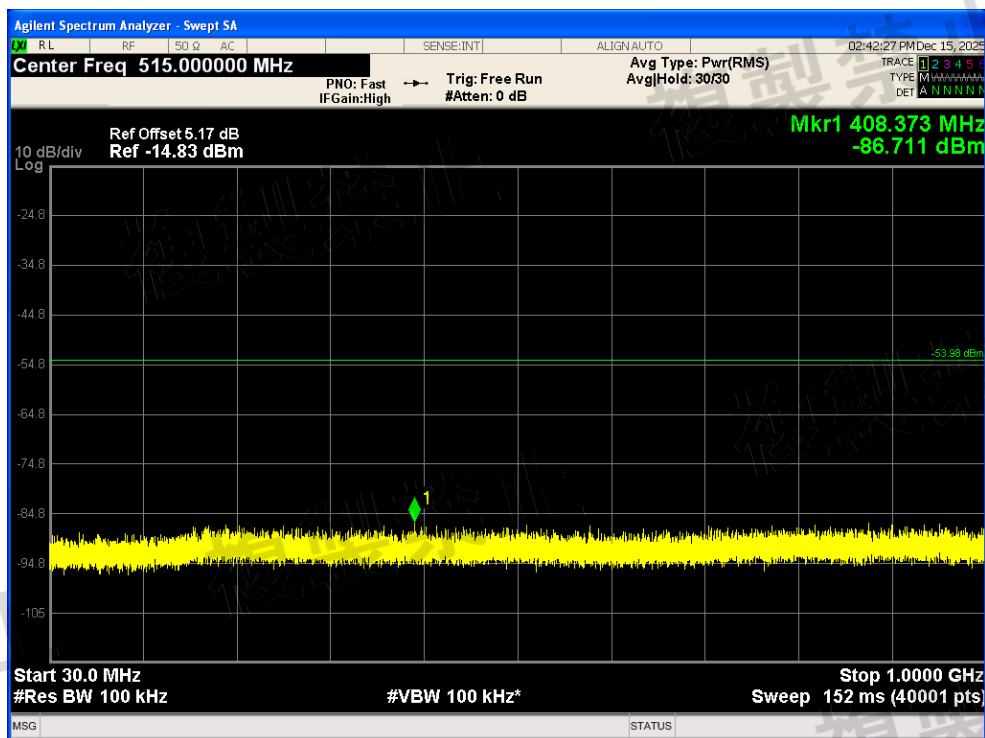


Rx. Spurious NVNT n20 5700MHz Ant1 @ 1000MHz-26000MHz

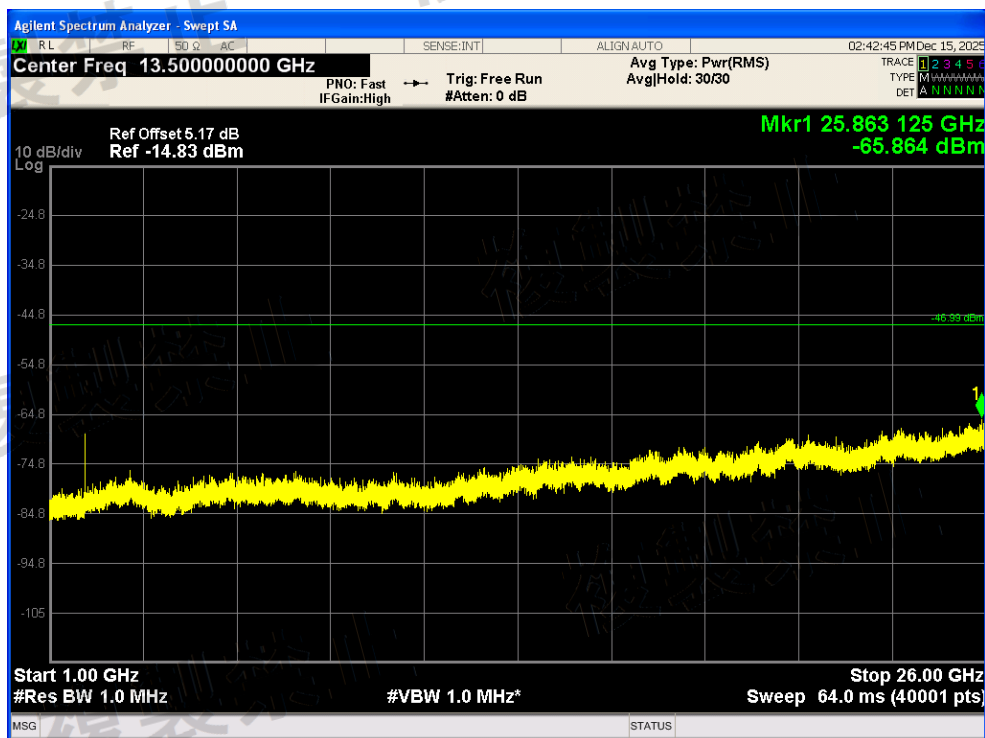


Rx. Spurious NVNT n20 5500MHz Ant2 @ 30MHz-1000MHz

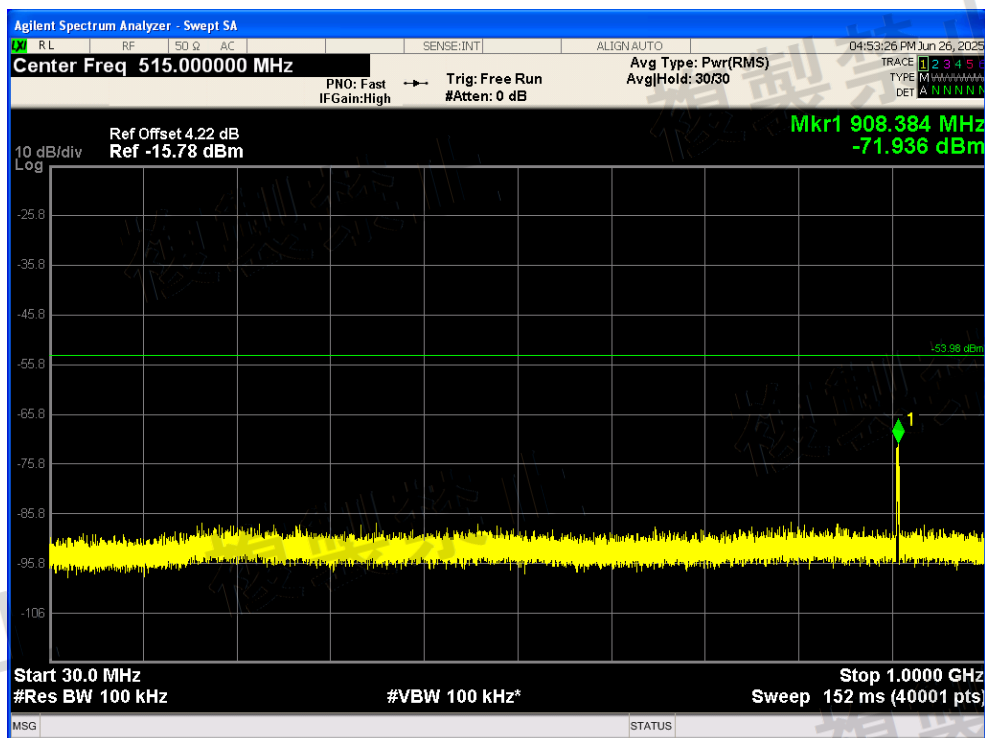


Rx. Spurious NVNT n20 5500MHz Ant2 @ 1000MHz-26000MHz

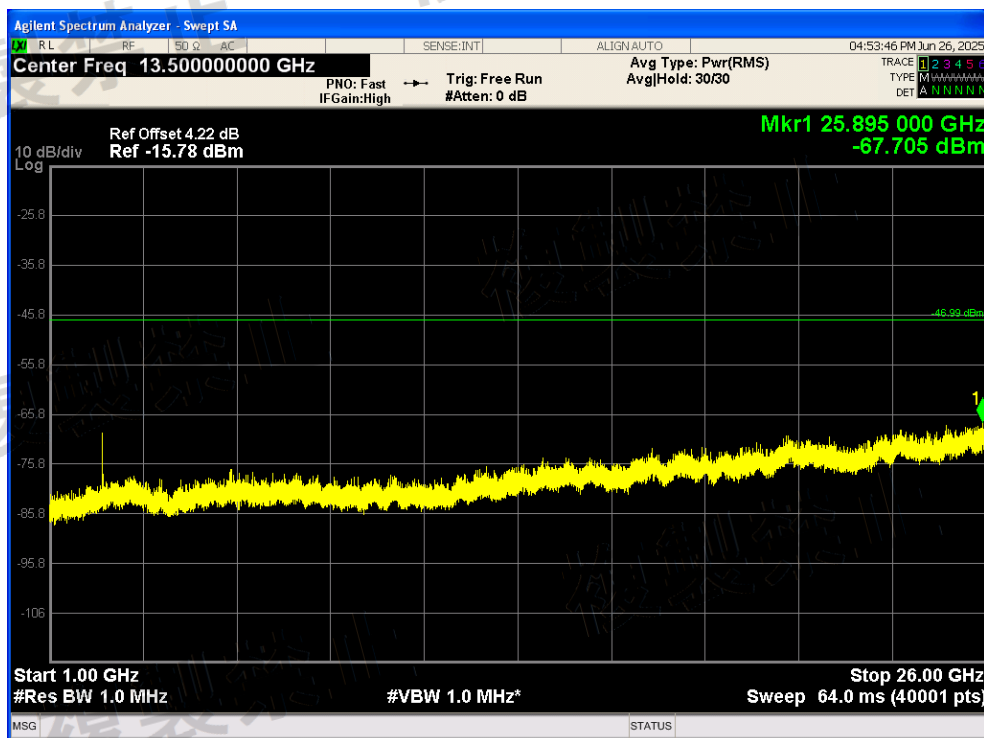


Rx. Spurious NVNT n20 5600MHz Ant2 @ 30MHz-1000MHz

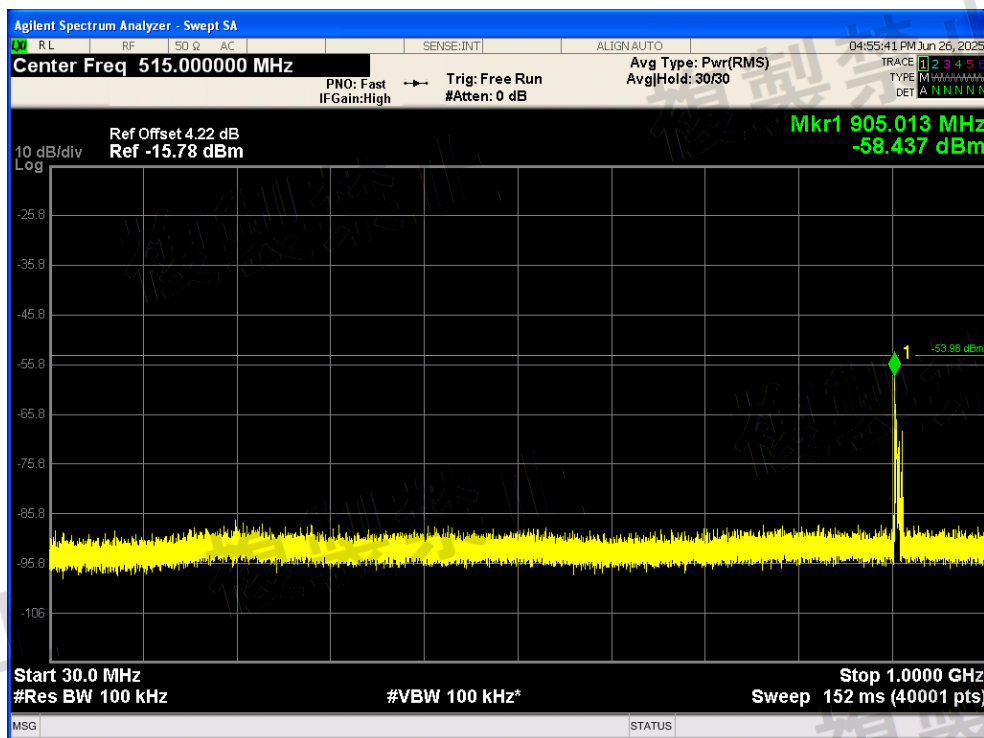


Rx. Spurious NVNT n20 5600MHz Ant2 @ 1000MHz-26000MHz

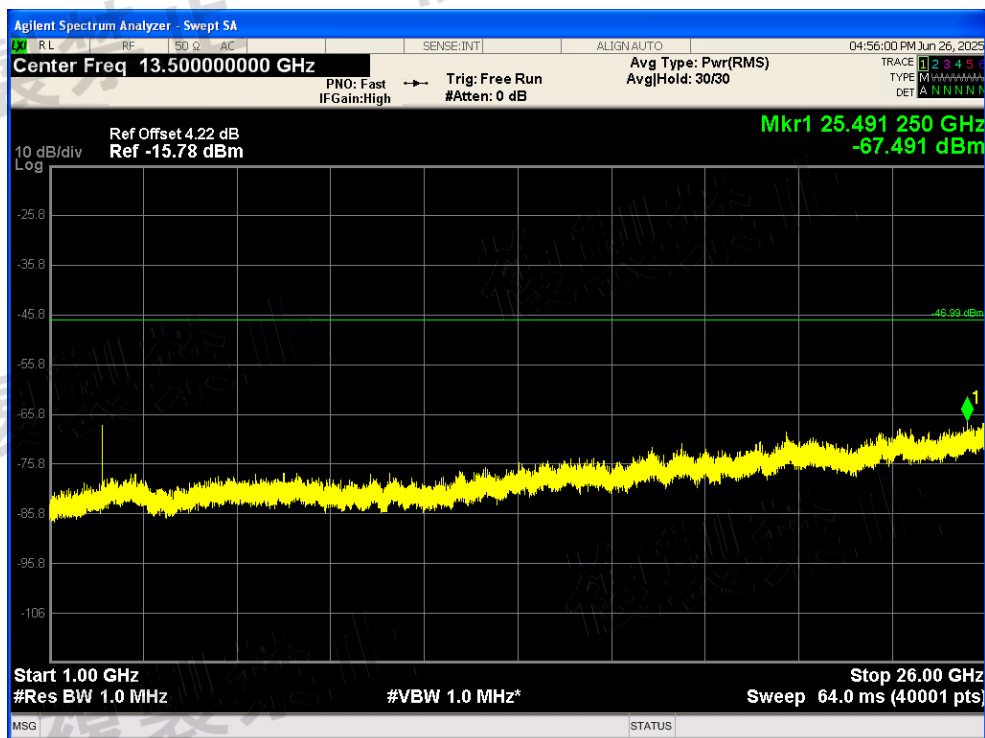


Rx. Spurious NVNT n20 5700MHz Ant2 @ 30MHz-1000MHz

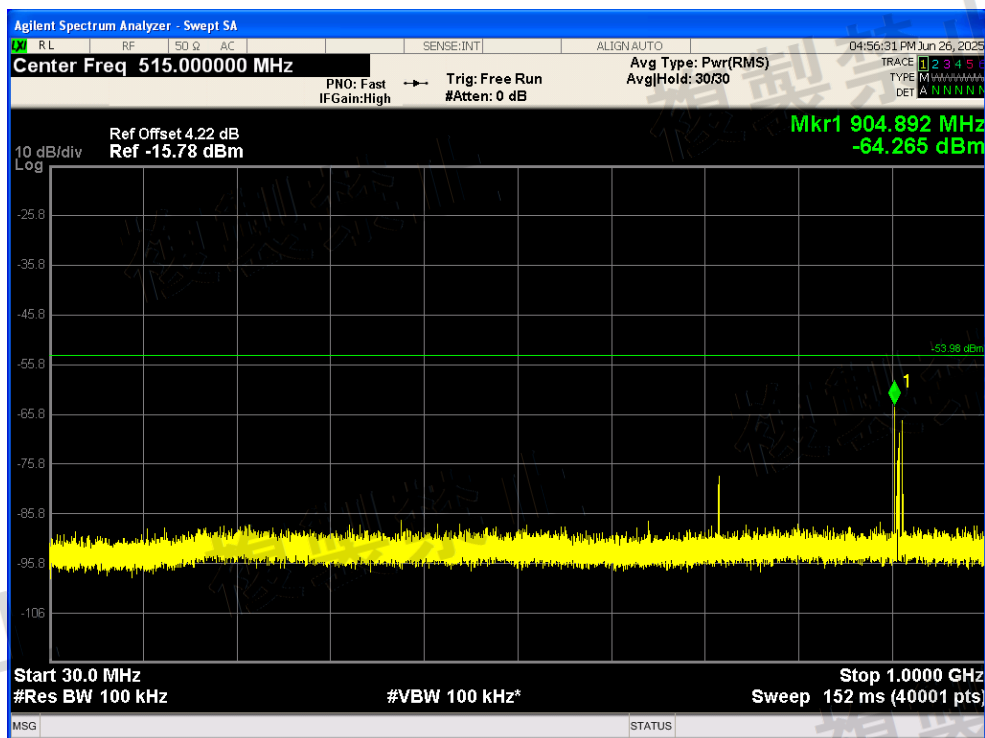


Rx. Spurious NVNT n20 5700MHz Ant2 @ 1000MHz-26000MHz

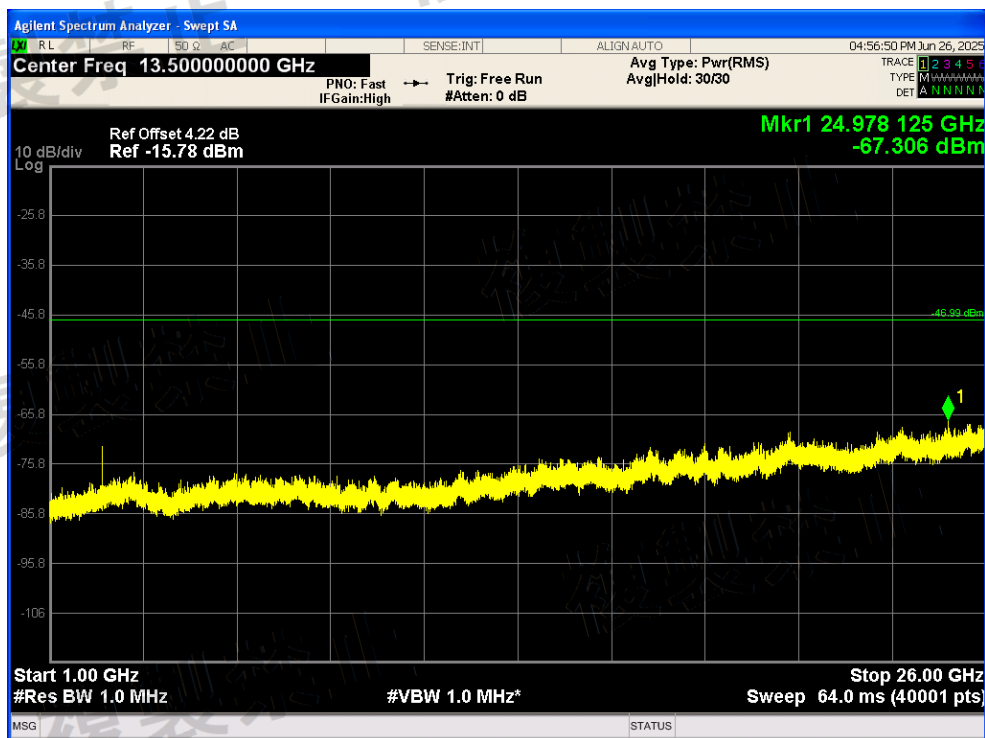


Rx. Spurious NVNT n40 5510MHz Ant1 @ 30MHz-1000MHz

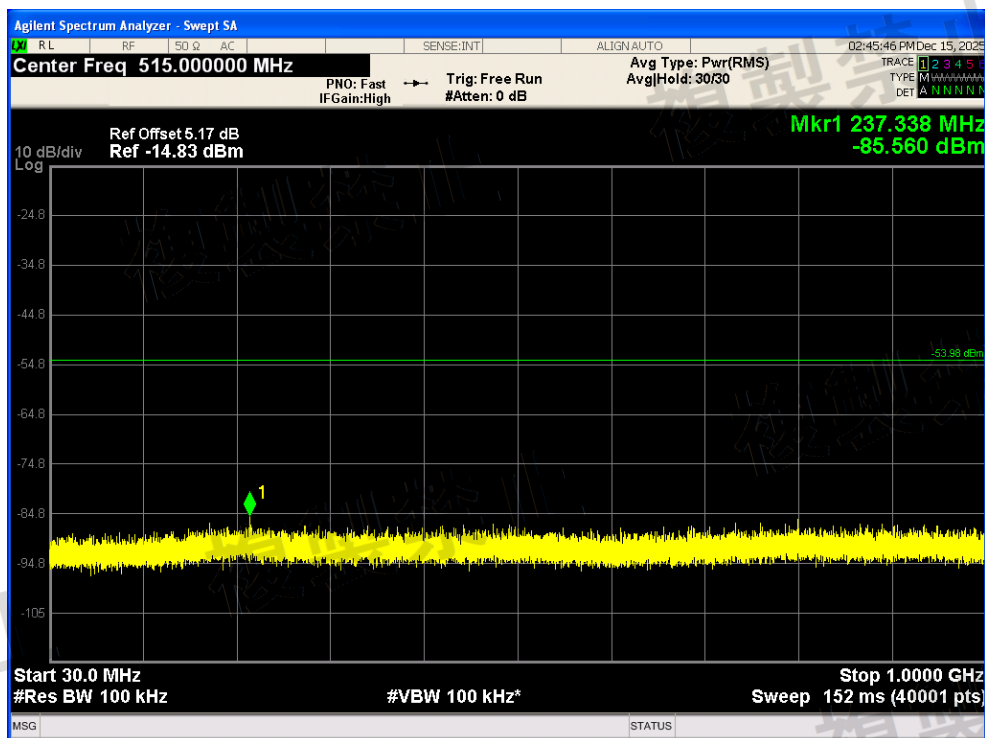


Rx. Spurious NVNT n40 5510MHz Ant1 @ 1000MHz-26000MHz

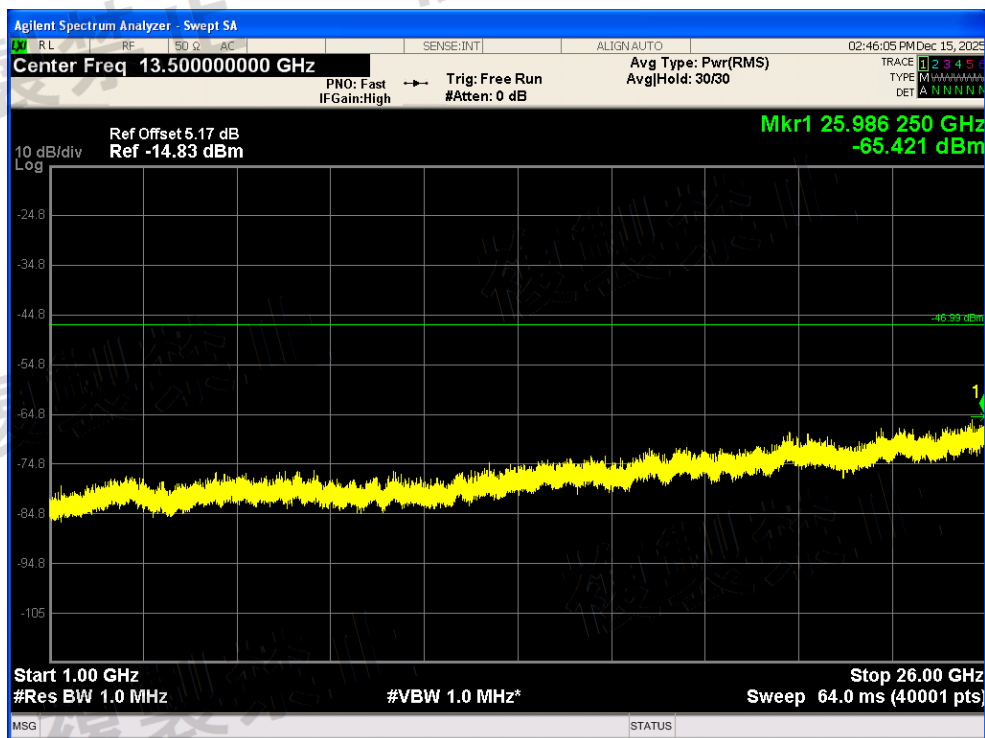


Rx. Spurious NVNT n40 5590MHz Ant1 @ 30MHz-1000MHz

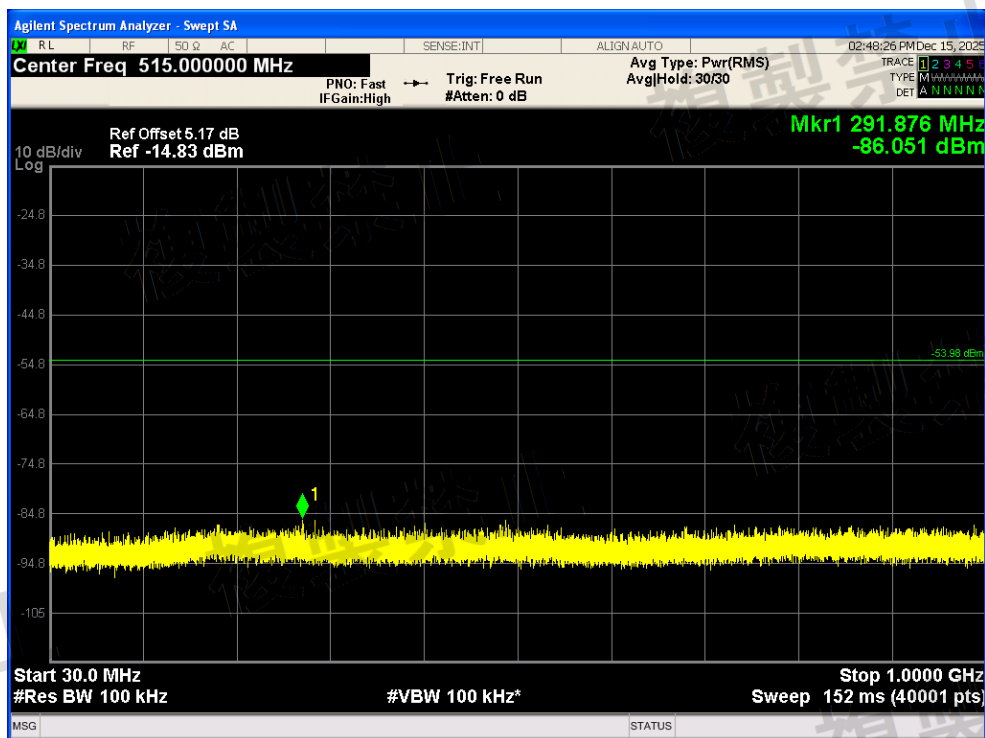


Rx. Spurious NVNT n40 5590MHz Ant1 @ 1000MHz-26000MHz

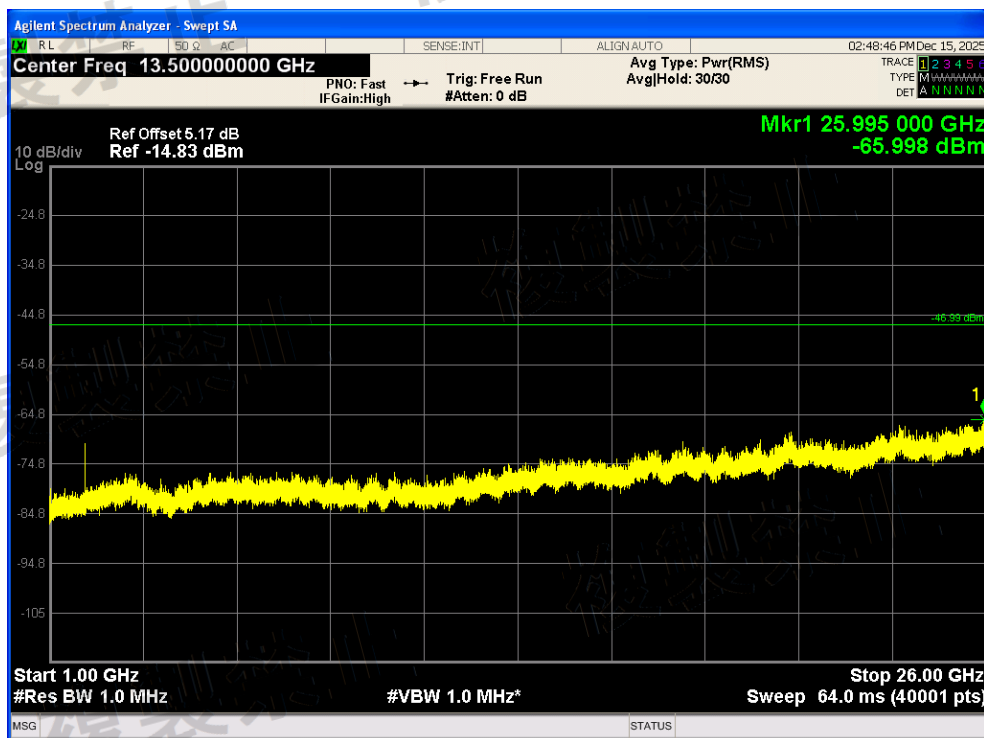


Rx. Spurious NVNT n40 5670MHz Ant1 @ 30MHz-1000MHz

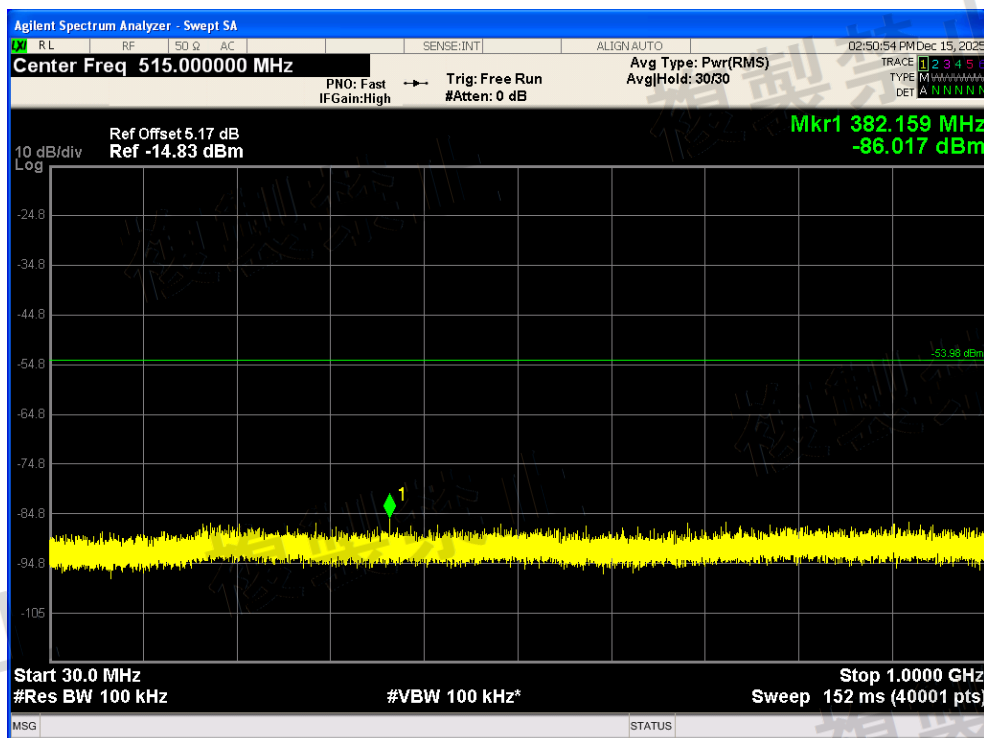


Rx. Spurious NVNT n40 5670MHz Ant1 @ 1000MHz-26000MHz

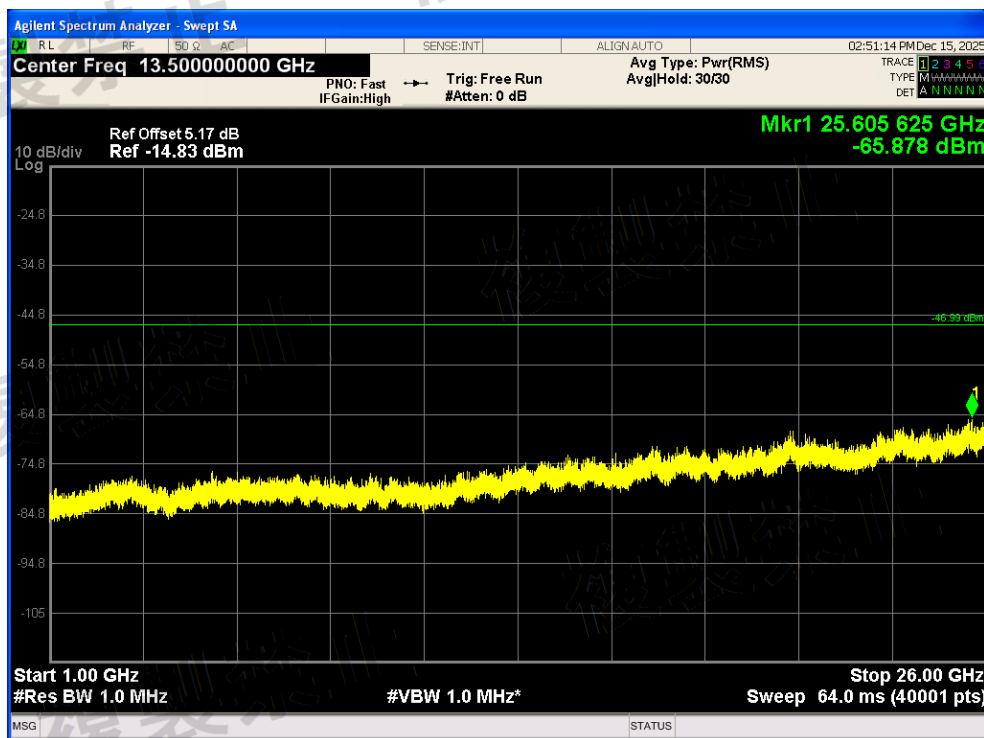


Rx. Spurious NVNT n40 5510MHz Ant2 @ 30MHz-1000MHz

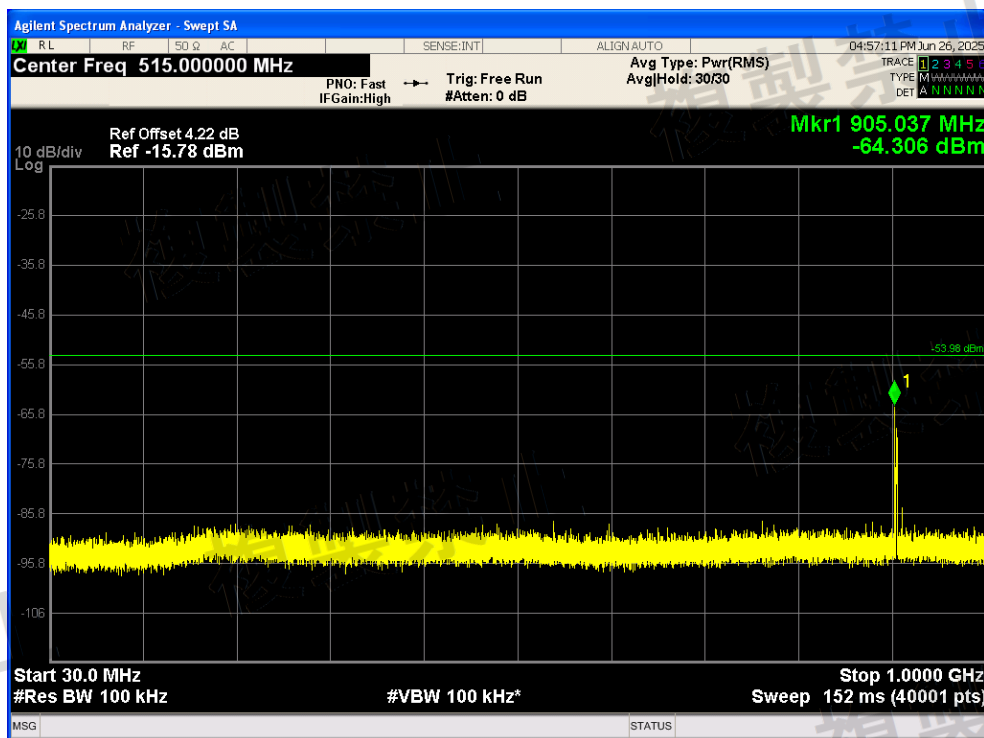


Rx. Spurious NVNT n40 5510MHz Ant2 @ 1000MHz-26000MHz

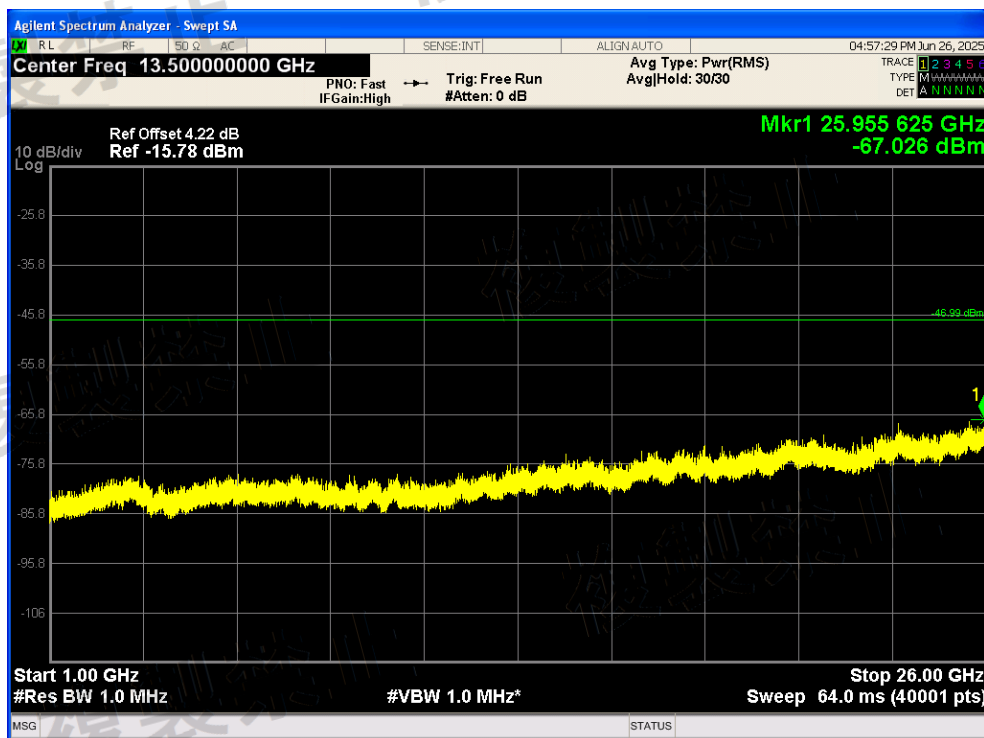


Rx. Spurious NVNT n40 5590MHz Ant2 @ 30MHz-1000MHz

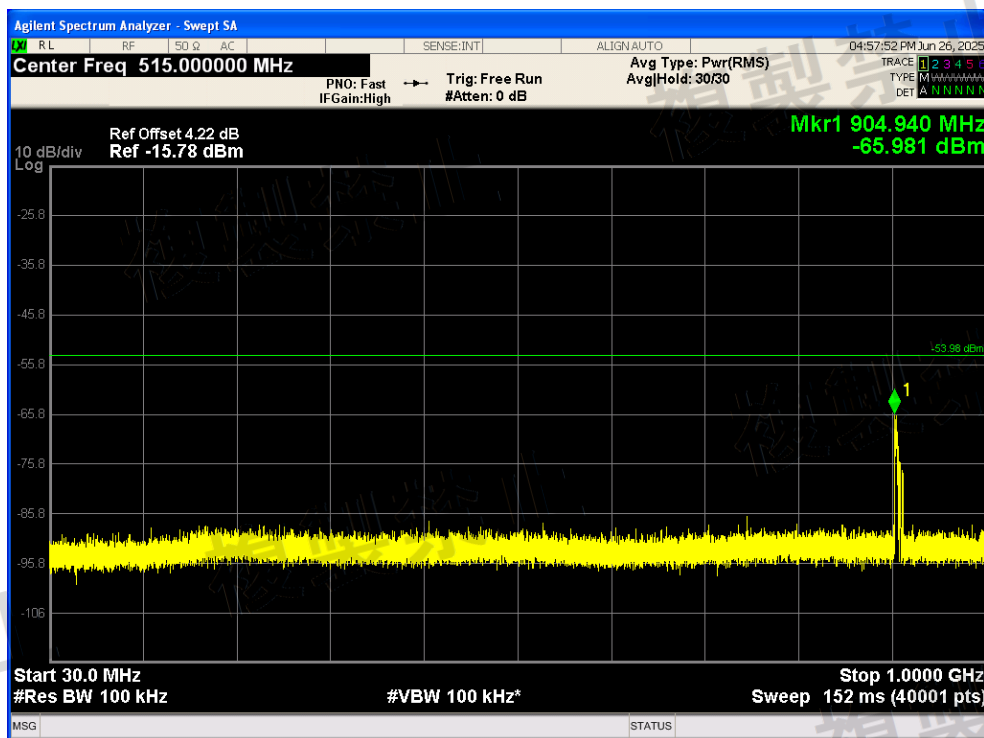


Rx. Spurious NVNT n40 5590MHz Ant2 @ 1000MHz-26000MHz

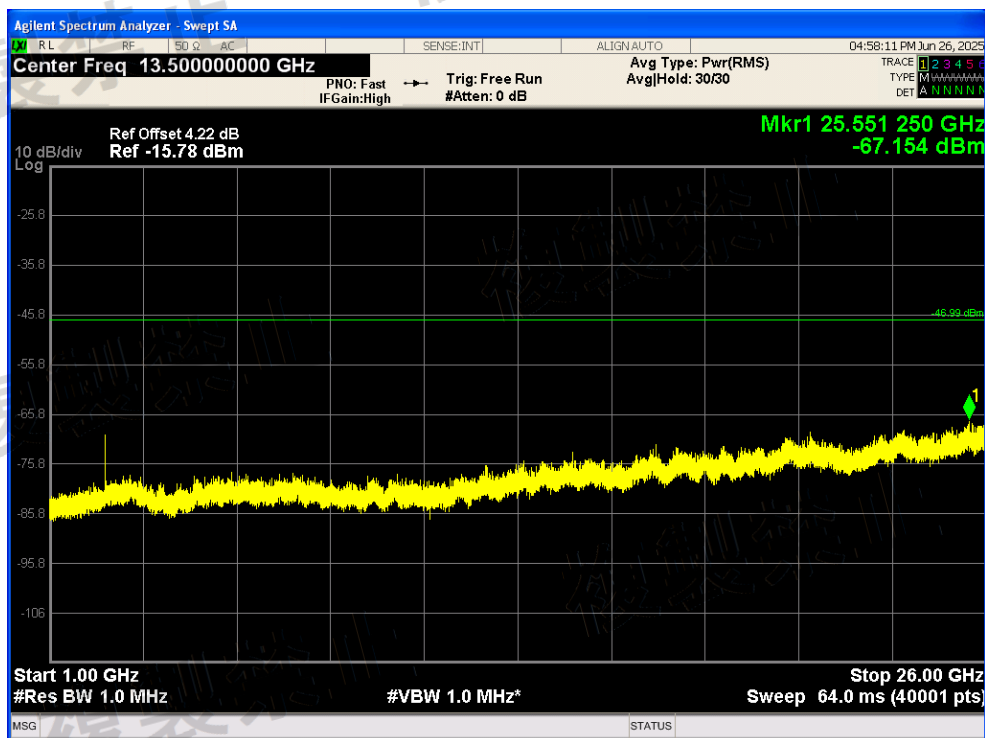

Rx. Spurious NVNT n40 5670MHz Ant2 @ 30MHz-1000MHz

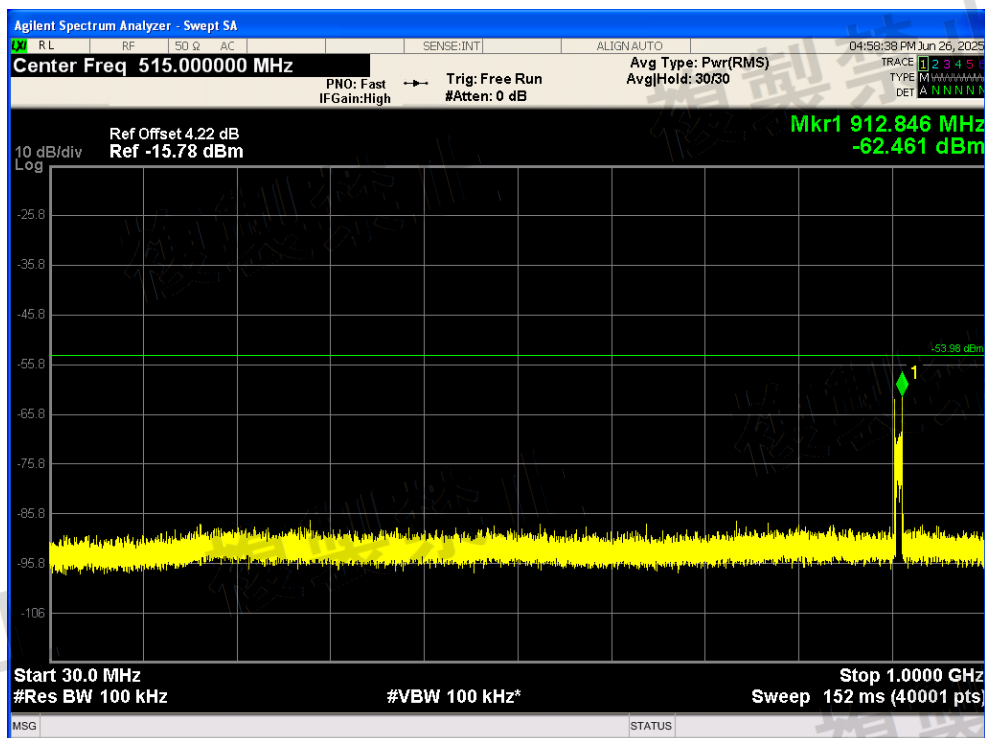

Rx. Spurious NVNT n40 5670MHz Ant2 @ 1000MHz-26000MHz

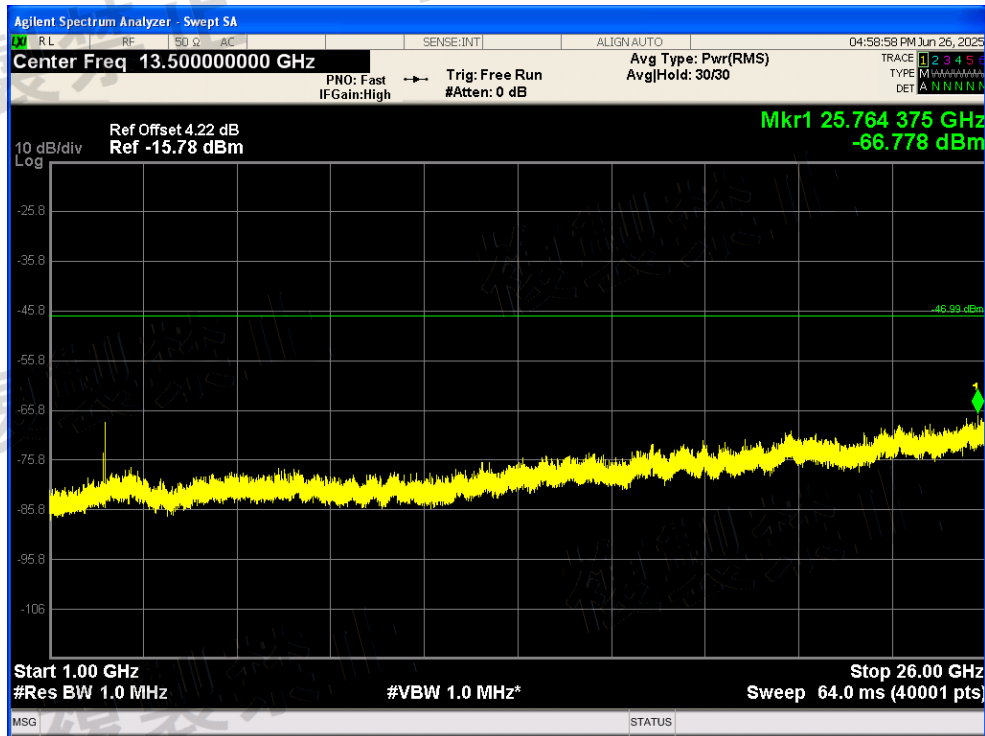

Adjacent Channel Emitted Power


Condition	Mode	Frequency (MHz)	Antenna	Offset (MHz)	Value (dBc)	Limit (dBc)	Verdict
NVNT	a	5500	Ant1	-20	-42.87	-25	Pass
NVNT	a	5500	Ant1	-40	-52.95	-40	Pass
NVNT	a	5500	Ant1	20	-43.66	-25	Pass
NVNT	a	5500	Ant1	40	-52.91	-40	Pass
NVNT	a	5600	Ant1	-20	-40.42	-25	Pass
NVNT	a	5600	Ant1	-40	-51.66	-40	Pass
NVNT	a	5600	Ant1	20	-42.68	-25	Pass
NVNT	a	5600	Ant1	40	-51.46	-40	Pass
NVNT	a	5700	Ant1	-20	-39.81	-25	Pass
NVNT	a	5700	Ant1	-40	-52	-40	Pass
NVNT	a	5700	Ant1	20	-41.58	-25	Pass
NVNT	a	5700	Ant1	40	-51.5	-40	Pass
NVNT	a	5500	Ant2	-20	-39.03	-25	Pass
NVNT	a	5500	Ant2	-40	-52.15	-40	Pass
NVNT	a	5500	Ant2	20	-40.81	-25	Pass
NVNT	a	5500	Ant2	40	-52.04	-40	Pass
NVNT	a	5600	Ant2	-20	-39.27	-25	Pass
NVNT	a	5600	Ant2	-40	-52.82	-40	Pass
NVNT	a	5600	Ant2	20	-40.62	-25	Pass
NVNT	a	5600	Ant2	40	-51.73	-40	Pass
NVNT	a	5700	Ant2	-20	-42.97	-25	Pass
NVNT	a	5700	Ant2	-40	-52.99	-40	Pass
NVNT	a	5700	Ant2	20	-42.66	-25	Pass
NVNT	a	5700	Ant2	40	-53.08	-40	Pass
NVNT	ac20	5500	Ant1	-20	-41.13	-25	Pass
NVNT	ac20	5500	Ant1	-40	-52.73	-40	Pass
NVNT	ac20	5500	Ant1	20	-41.95	-25	Pass
NVNT	ac20	5500	Ant1	40	-52.8	-40	Pass
NVNT	ac20	5600	Ant1	-20	-39.08	-25	Pass
NVNT	ac20	5600	Ant1	-40	-51.4	-40	Pass
NVNT	ac20	5600	Ant1	20	-41.21	-25	Pass
NVNT	ac20	5600	Ant1	40	-51.39	-40	Pass
NVNT	ac20	5700	Ant1	-20	-38.66	-25	Pass
NVNT	ac20	5700	Ant1	-40	-51.81	-40	Pass
NVNT	ac20	5700	Ant1	20	-40.38	-25	Pass
NVNT	ac20	5700	Ant1	40	-51.32	-40	Pass
NVNT	ac20	5500	Ant2	-20	-38.99	-25	Pass
NVNT	ac20	5500	Ant2	-40	-52.03	-40	Pass

NVNT	ac20	5500	Ant2	20	-40.35	-25	Pass
NVNT	ac20	5500	Ant2	40	-51.71	-40	Pass
NVNT	ac20	5600	Ant2	-20	-39.48	-25	Pass
NVNT	ac20	5600	Ant2	-40	-52.49	-40	Pass
NVNT	ac20	5600	Ant2	20	-40.47	-25	Pass
NVNT	ac20	5600	Ant2	40	-51.68	-40	Pass
NVNT	ac20	5700	Ant2	-20	-41.11	-25	Pass
NVNT	ac20	5700	Ant2	-40	-52.74	-40	Pass
NVNT	ac20	5700	Ant2	20	-41.9	-25	Pass
NVNT	ac20	5700	Ant2	40	-52.94	-40	Pass
NVNT	ac40	5510	Ant1	-40	-38.06	-25	Pass
NVNT	ac40	5510	Ant1	-80	-49.58	-40	Pass
NVNT	ac40	5510	Ant1	40	-38.16	-25	Pass
NVNT	ac40	5510	Ant1	80	-48.7	-40	Pass
NVNT	ac40	5590	Ant1	-40	-35.84	-25	Pass
NVNT	ac40	5590	Ant1	-80	-48.73	-40	Pass
NVNT	ac40	5590	Ant1	40	-38.56	-25	Pass
NVNT	ac40	5590	Ant1	80	-47.7	-40	Pass
NVNT	ac40	5670	Ant1	-40	-36.3	-25	Pass
NVNT	ac40	5670	Ant1	-80	-48.33	-40	Pass
NVNT	ac40	5670	Ant1	40	-37.49	-25	Pass
NVNT	ac40	5670	Ant1	80	-47.22	-40	Pass
NVNT	ac40	5510	Ant2	-40	-37.29	-25	Pass
NVNT	ac40	5510	Ant2	-80	-49.25	-40	Pass
NVNT	ac40	5510	Ant2	40	-37.03	-25	Pass
NVNT	ac40	5510	Ant2	80	-48.64	-40	Pass
NVNT	ac40	5590	Ant2	-40	-36.85	-25	Pass
NVNT	ac40	5590	Ant2	-80	-49.44	-40	Pass
NVNT	ac40	5590	Ant2	40	-37.28	-25	Pass
NVNT	ac40	5590	Ant2	80	-48.22	-40	Pass
NVNT	ac40	5670	Ant2	-40	-37.38	-25	Pass
NVNT	ac40	5670	Ant2	-80	-49.69	-40	Pass
NVNT	ac40	5670	Ant2	40	-38.05	-25	Pass
NVNT	ac40	5670	Ant2	80	-49.09	-40	Pass
NVNT	ac80	5530	Ant1	-80	-40.95	-25	Pass
NVNT	ac80	5530	Ant1	-160	-48.04	-40	Pass
NVNT	ac80	5530	Ant1	80	-40.36	-25	Pass
NVNT	ac80	5530	Ant1	160	-47.45	-40	Pass
NVNT	ac80	5610	Ant1	-80	-38.11	-25	Pass
NVNT	ac80	5610	Ant1	-160	-46.11	-40	Pass
NVNT	ac80	5610	Ant1	80	-39.91	-25	Pass
NVNT	ac80	5610	Ant1	160	-45.88	-40	Pass
NVNT	ac80	5530	Ant2	-80	-40.3	-25	Pass
NVNT	ac80	5530	Ant2	-160	-46.48	-40	Pass


NVNT	ac80	5530	Ant2	80	-39.73	-25	Pass
NVNT	ac80	5530	Ant2	160	-45.69	-40	Pass
NVNT	ac80	5610	Ant2	-80	-40.25	-25	Pass
NVNT	ac80	5610	Ant2	-160	-47.17	-40	Pass
NVNT	ac80	5610	Ant2	80	-39.22	-25	Pass
NVNT	ac80	5610	Ant2	160	-46.3	-40	Pass
NVNT	n20	5500	Ant1	-20	-41.52	-25	Pass
NVNT	n20	5500	Ant1	-40	-52.92	-40	Pass
NVNT	n20	5500	Ant1	20	-42.33	-25	Pass
NVNT	n20	5500	Ant1	40	-52.81	-40	Pass
NVNT	n20	5600	Ant1	-20	-39	-25	Pass
NVNT	n20	5600	Ant1	-40	-51.4	-40	Pass
NVNT	n20	5600	Ant1	20	-41.4	-25	Pass
NVNT	n20	5600	Ant1	40	-51.76	-40	Pass
NVNT	n20	5700	Ant1	-20	-38.55	-25	Pass
NVNT	n20	5700	Ant1	-40	-51.99	-40	Pass
NVNT	n20	5700	Ant1	20	-40.31	-25	Pass
NVNT	n20	5700	Ant1	40	-51.38	-40	Pass
NVNT	n20	5500	Ant2	-20	-38.99	-25	Pass
NVNT	n20	5500	Ant2	-40	-52.04	-40	Pass
NVNT	n20	5500	Ant2	20	-40.35	-25	Pass
NVNT	n20	5500	Ant2	40	-51.79	-40	Pass
NVNT	n20	5600	Ant2	-20	-39.57	-25	Pass
NVNT	n20	5600	Ant2	-40	-52.63	-40	Pass
NVNT	n20	5600	Ant2	20	-40.53	-25	Pass
NVNT	n20	5600	Ant2	40	-51.67	-40	Pass
NVNT	n20	5700	Ant2	-20	-41.33	-25	Pass
NVNT	n20	5700	Ant2	-40	-52.8	-40	Pass
NVNT	n20	5700	Ant2	20	-42.07	-25	Pass
NVNT	n20	5700	Ant2	40	-52.95	-40	Pass
NVNT	n40	5510	Ant1	-40	-37.65	-25	Pass
NVNT	n40	5510	Ant1	-80	-49.58	-40	Pass
NVNT	n40	5510	Ant1	40	-38.04	-25	Pass
NVNT	n40	5510	Ant1	80	-48.71	-40	Pass
NVNT	n40	5590	Ant1	-40	-35.94	-25	Pass
NVNT	n40	5590	Ant1	-80	-48.79	-40	Pass
NVNT	n40	5590	Ant1	40	-38.37	-25	Pass
NVNT	n40	5590	Ant1	80	-47.83	-40	Pass
NVNT	n40	5670	Ant1	-40	-36.61	-25	Pass
NVNT	n40	5670	Ant1	-80	-48.75	-40	Pass
NVNT	n40	5670	Ant1	40	-38.38	-25	Pass
NVNT	n40	5670	Ant1	80	-47.49	-40	Pass
NVNT	n40	5510	Ant2	-40	-37.2	-25	Pass
NVNT	n40	5510	Ant2	-80	-49.17	-40	Pass

NVNT	n40	5510	Ant2	40	-37.37	-25	Pass
NVNT	n40	5510	Ant2	80	-48.76	-40	Pass
NVNT	n40	5590	Ant2	-40	-36.24	-25	Pass
NVNT	n40	5590	Ant2	-80	-50.48	-40	Pass
NVNT	n40	5590	Ant2	40	-37.46	-25	Pass
NVNT	n40	5590	Ant2	80	-48.95	-40	Pass
NVNT	n40	5670	Ant2	-40	-37.12	-25	Pass
NVNT	n40	5670	Ant2	-80	-51.39	-40	Pass
NVNT	n40	5670	Ant2	40	-38.64	-25	Pass
NVNT	n40	5670	Ant2	80	-50.81	-40	Pass


ACEP NVNT a 5500MHz Ant1

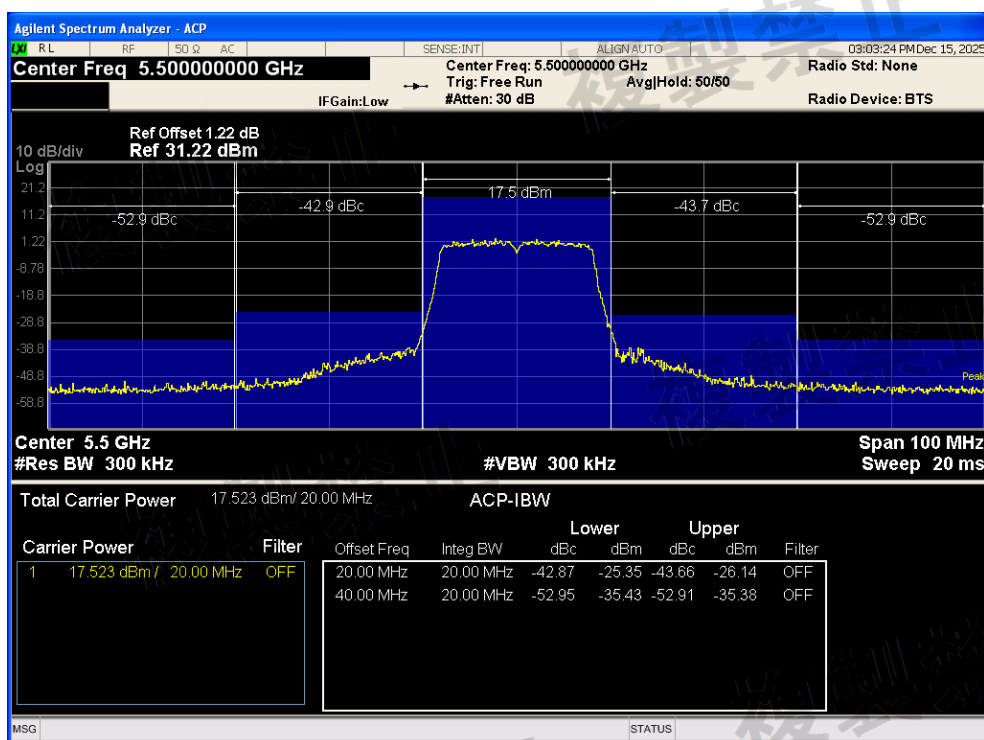


ACEP NVNT a 5600MHz Ant1

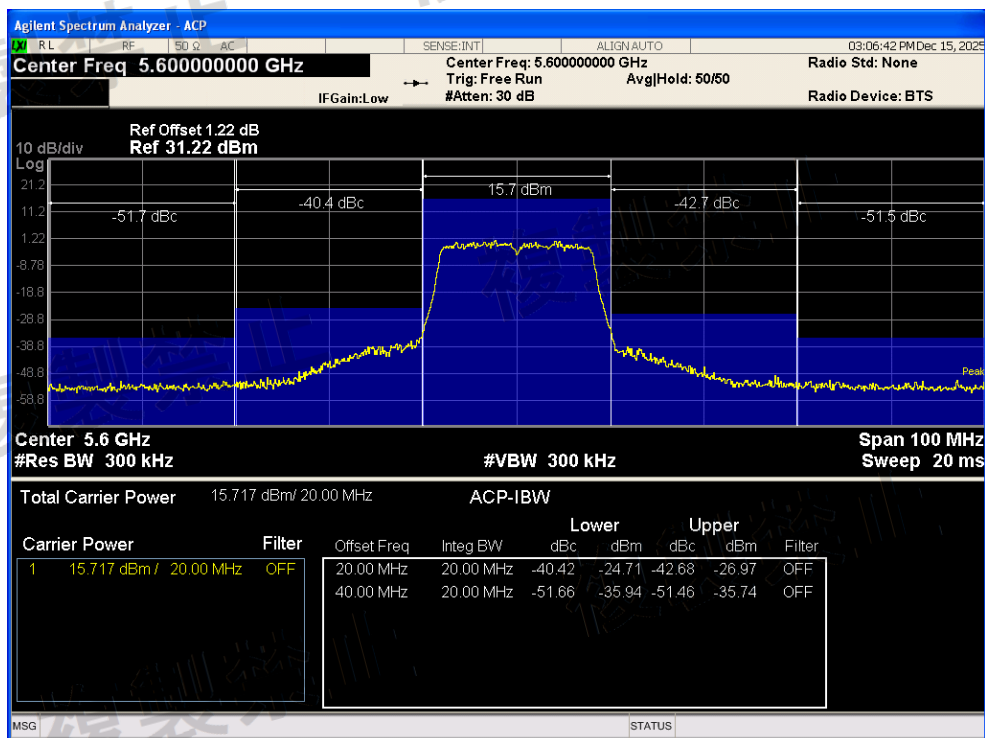


ACEP NVNT a 5700MHz Ant1

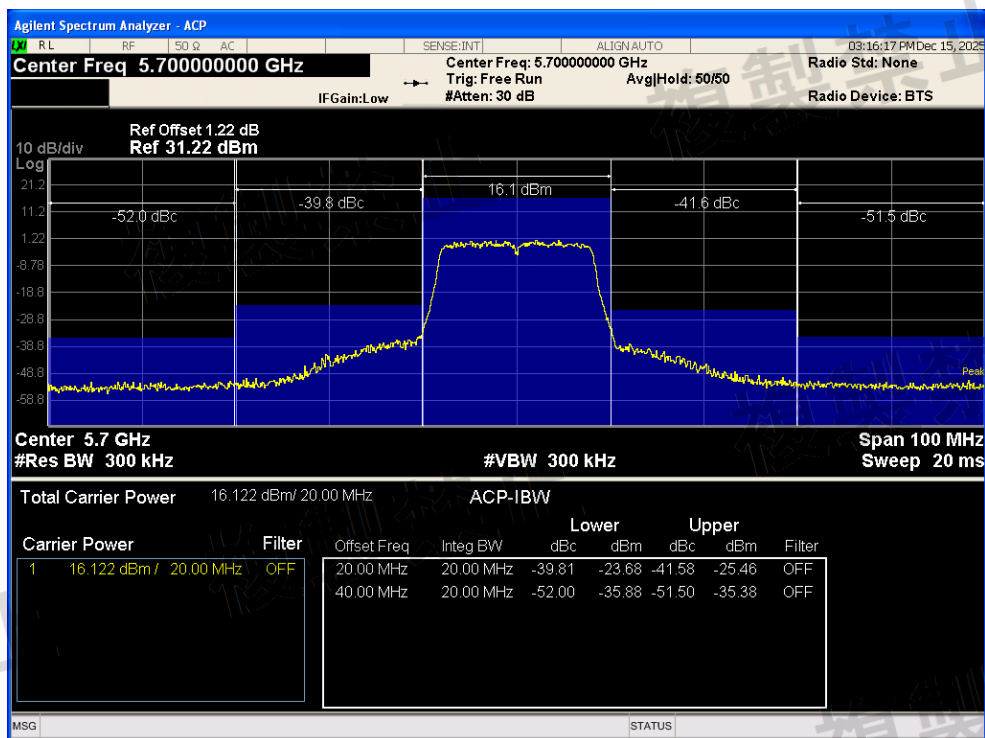


ACEP NVNT a 5500MHz Ant2

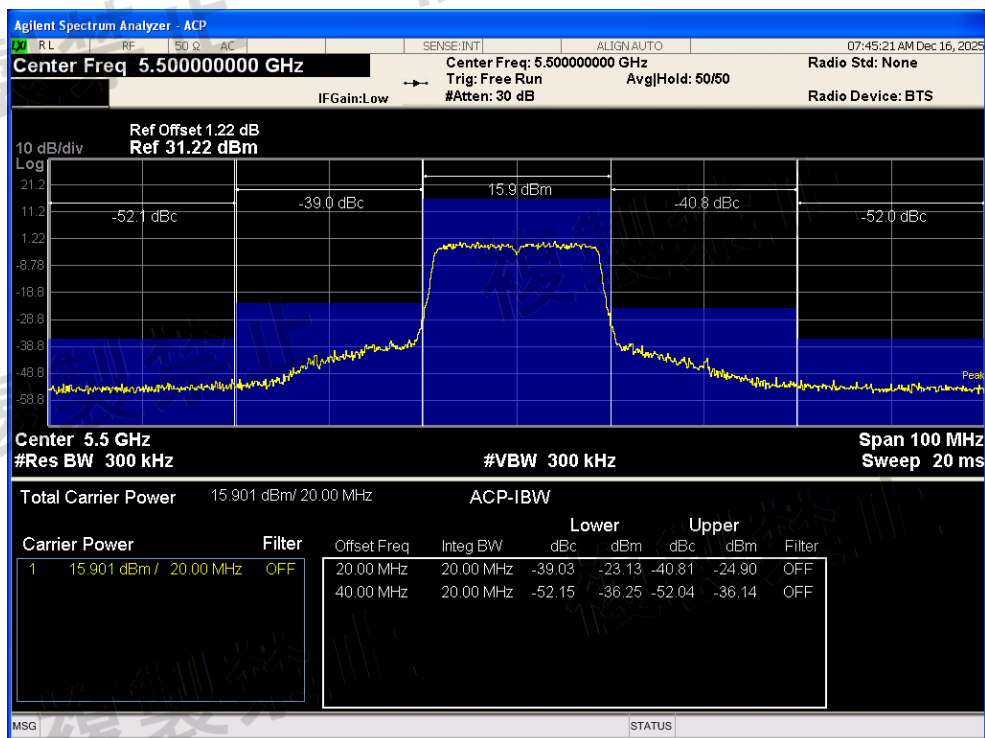


ACEP NVNT a 5600MHz Ant2

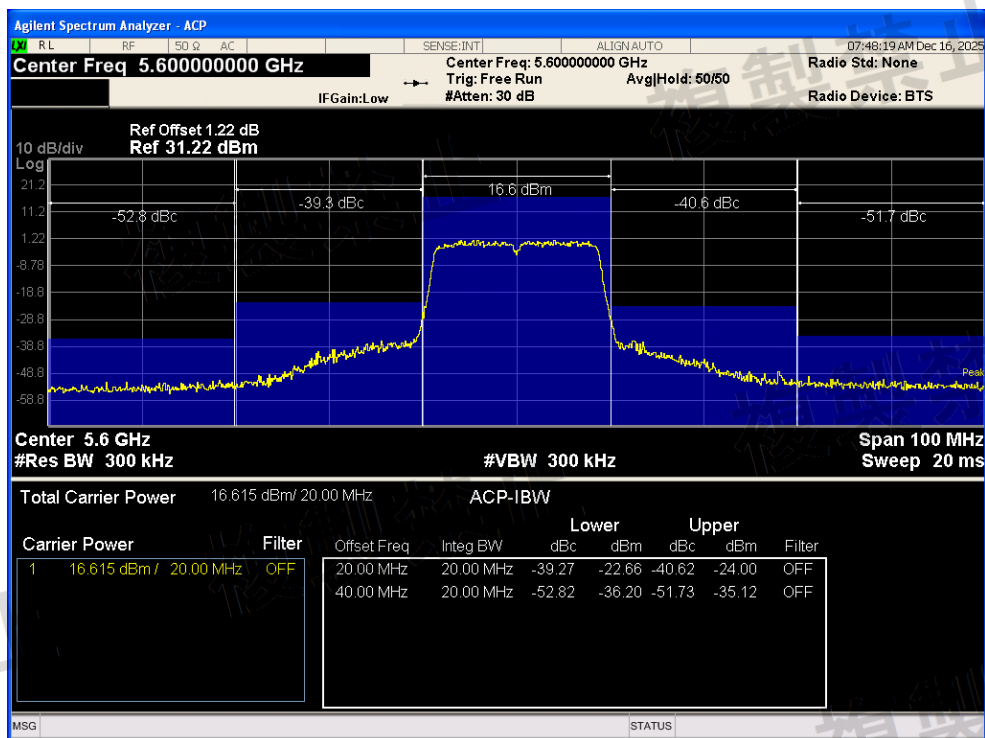


ACEP NVNT a 5700MHz Ant2

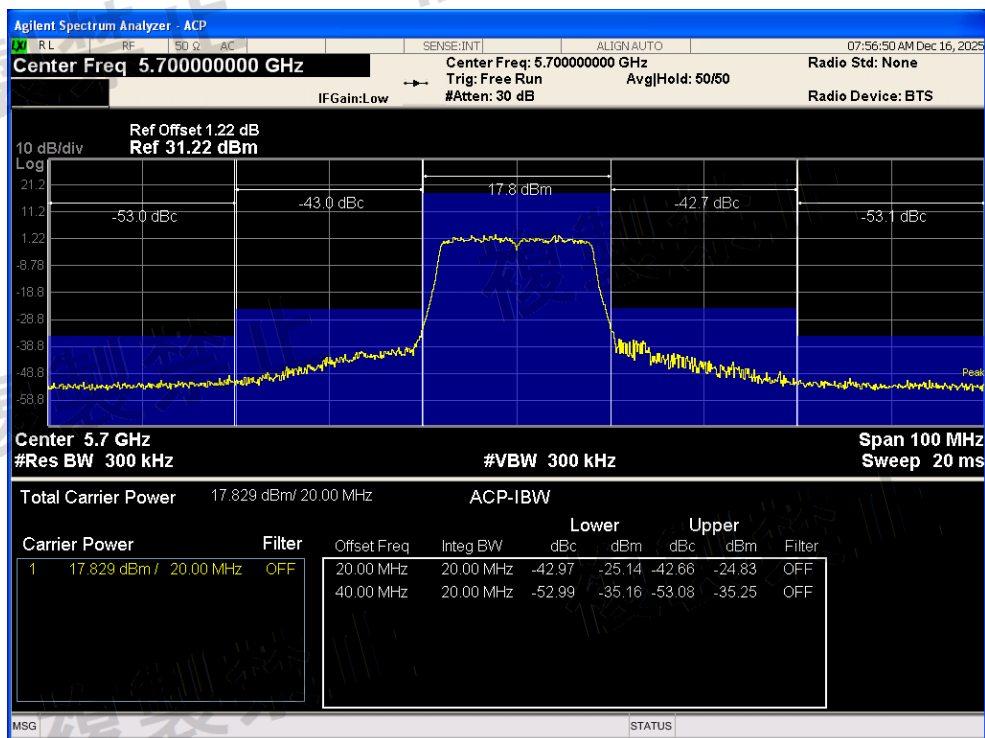


ACEP NVNT ac20 5500MHz Ant1

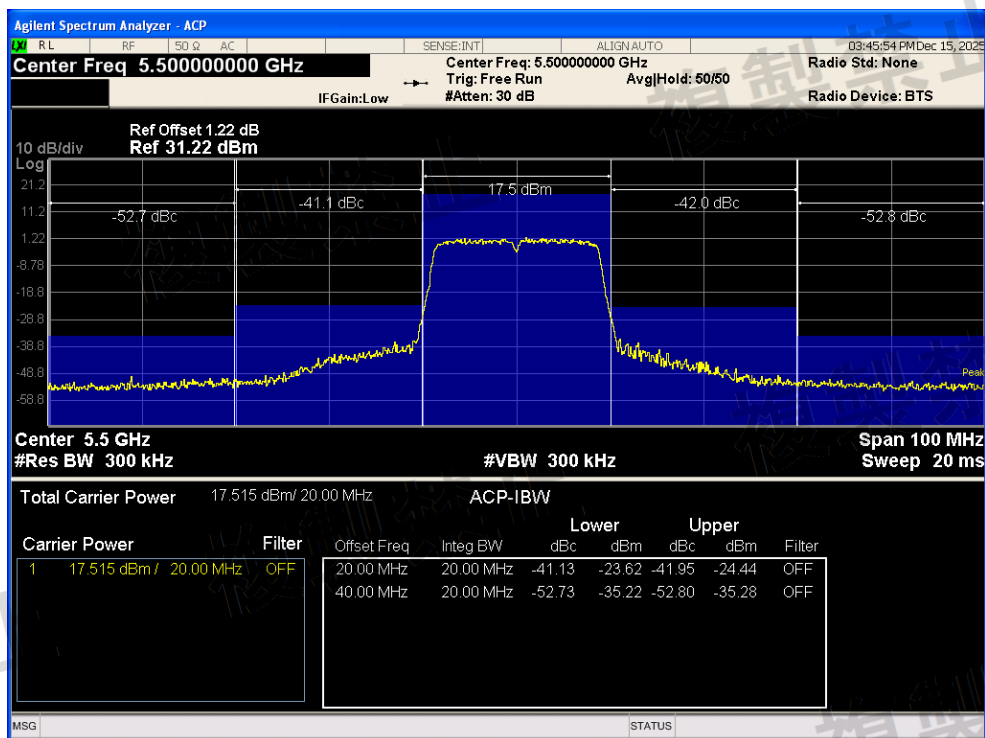


ACEP NVNT ac20 5600MHz Ant1

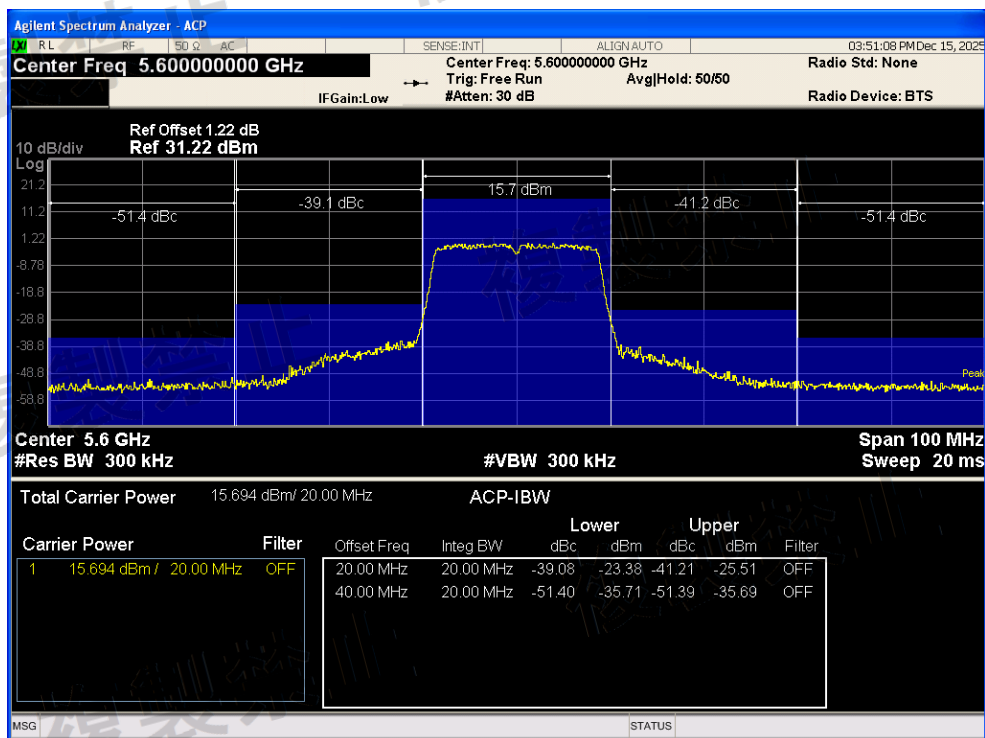


ACEP NVNT ac20 5700MHz Ant1

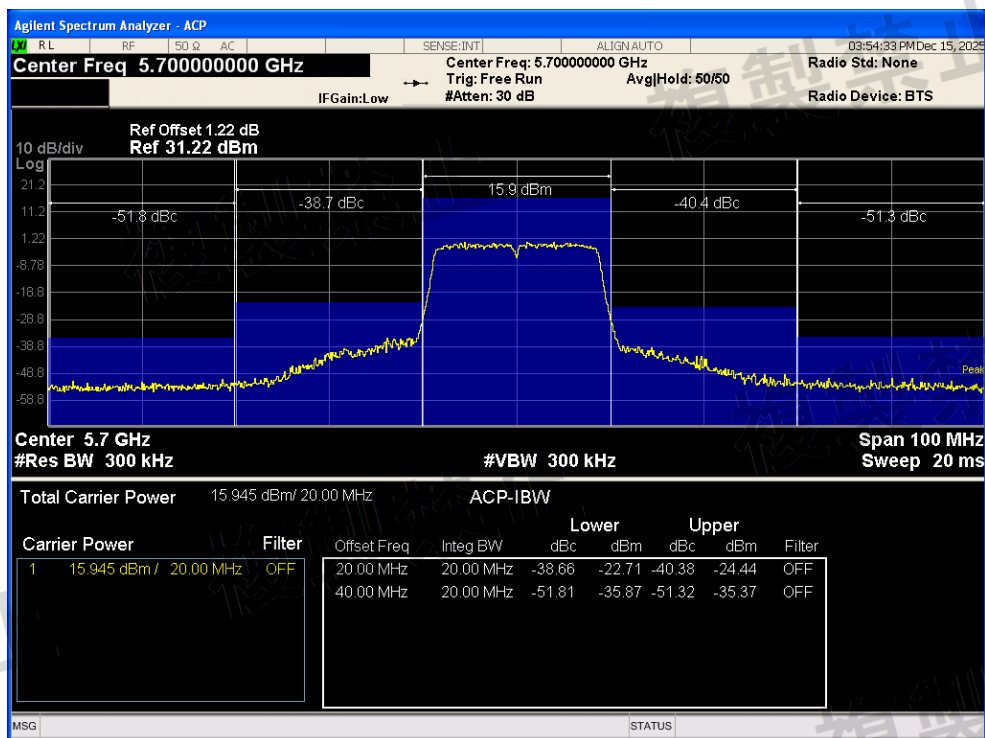


ACEP NVNT ac20 5500MHz Ant2

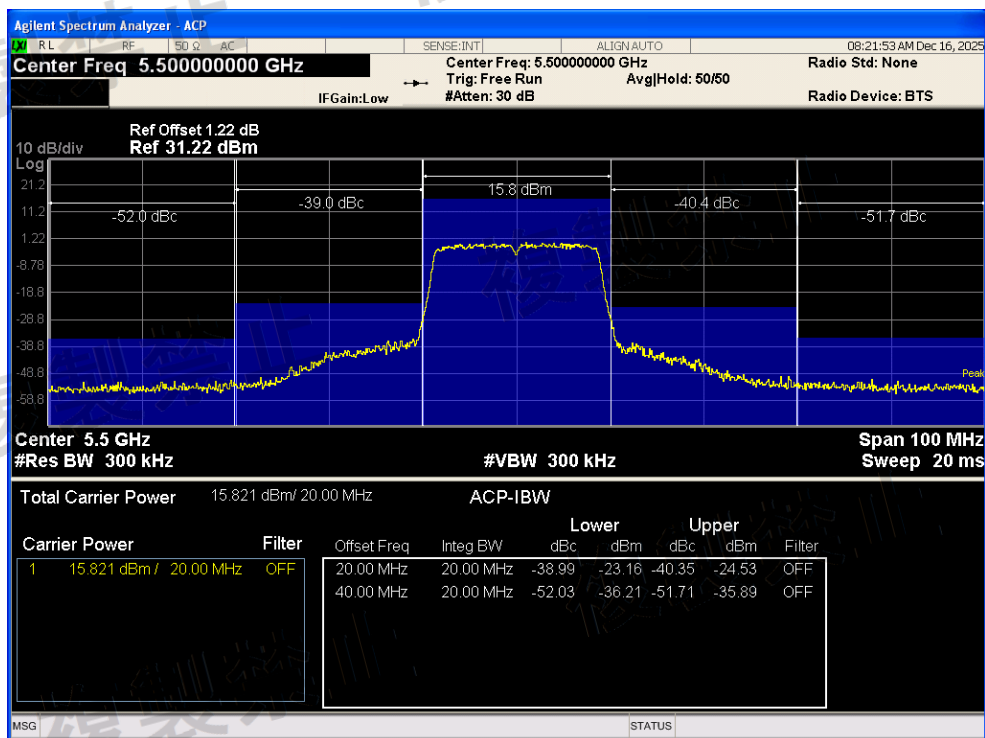


ACEP NVNT ac20 5600MHz Ant2

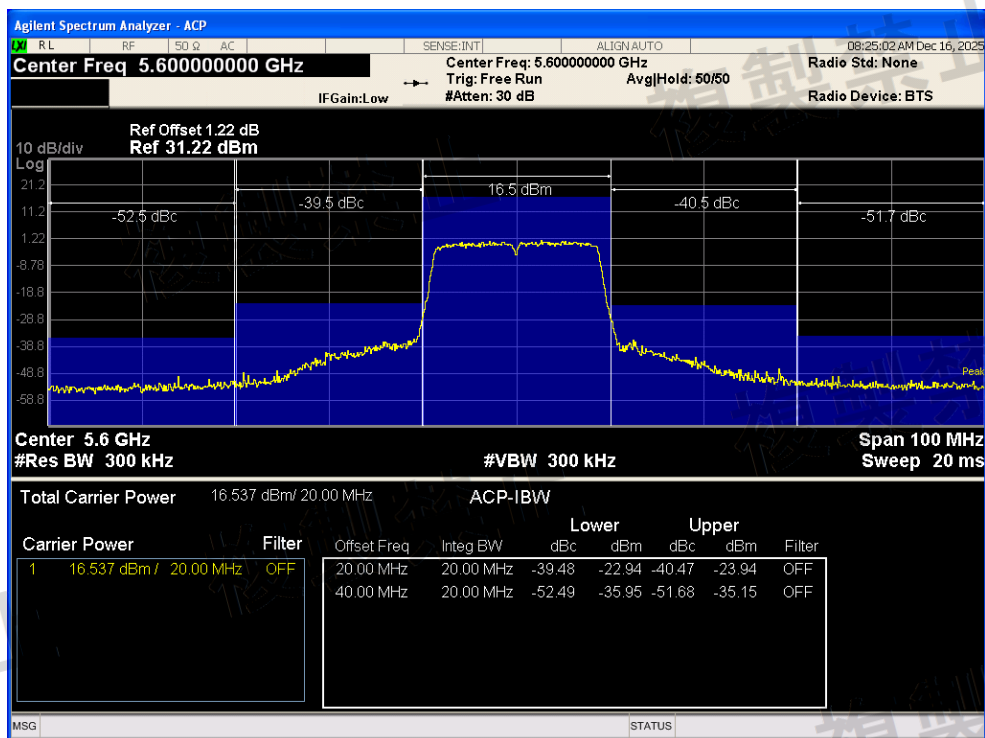


ACEP NVNT ac20 5700MHz Ant2

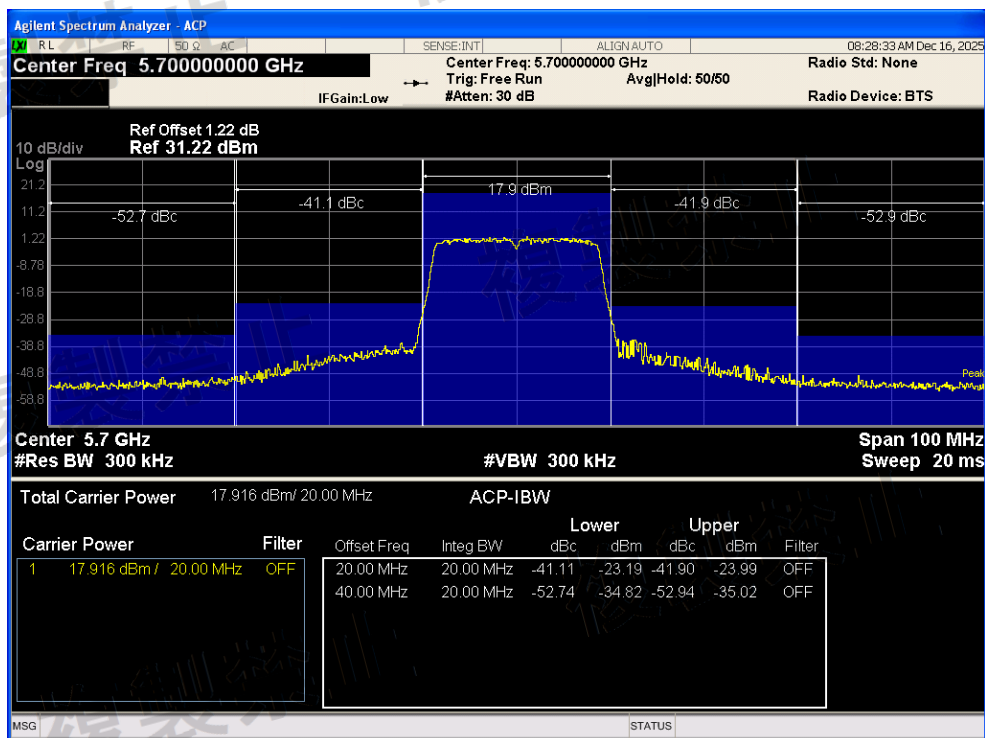


ACEP NVNT ac40 5510MHz Ant1

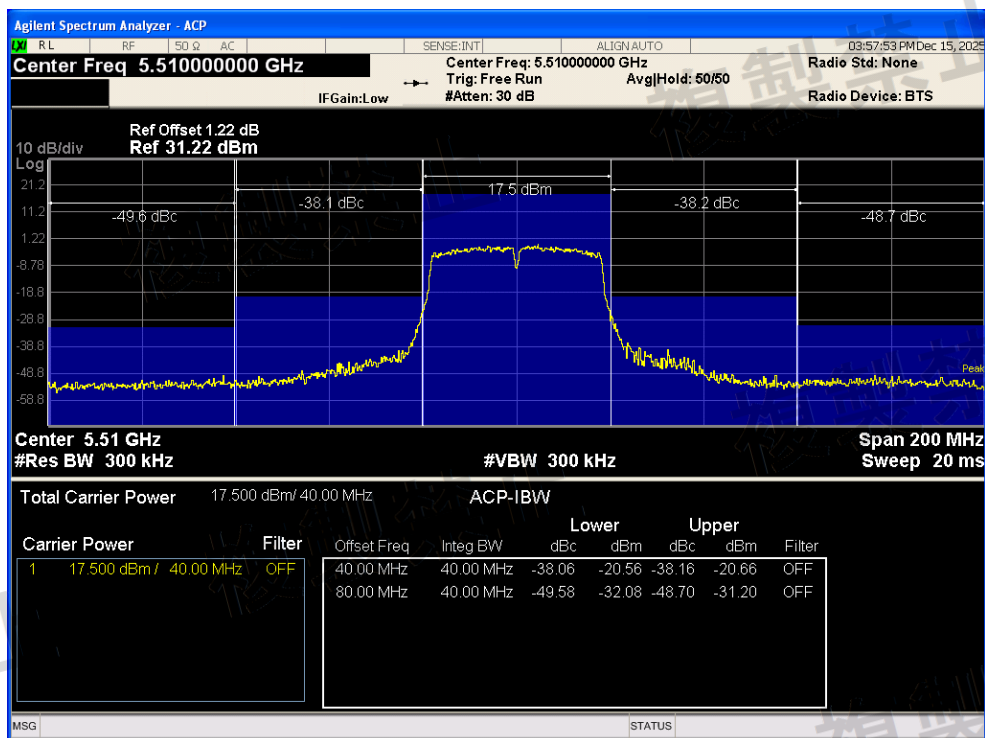


ACEP NVNT ac40 5590MHz Ant1

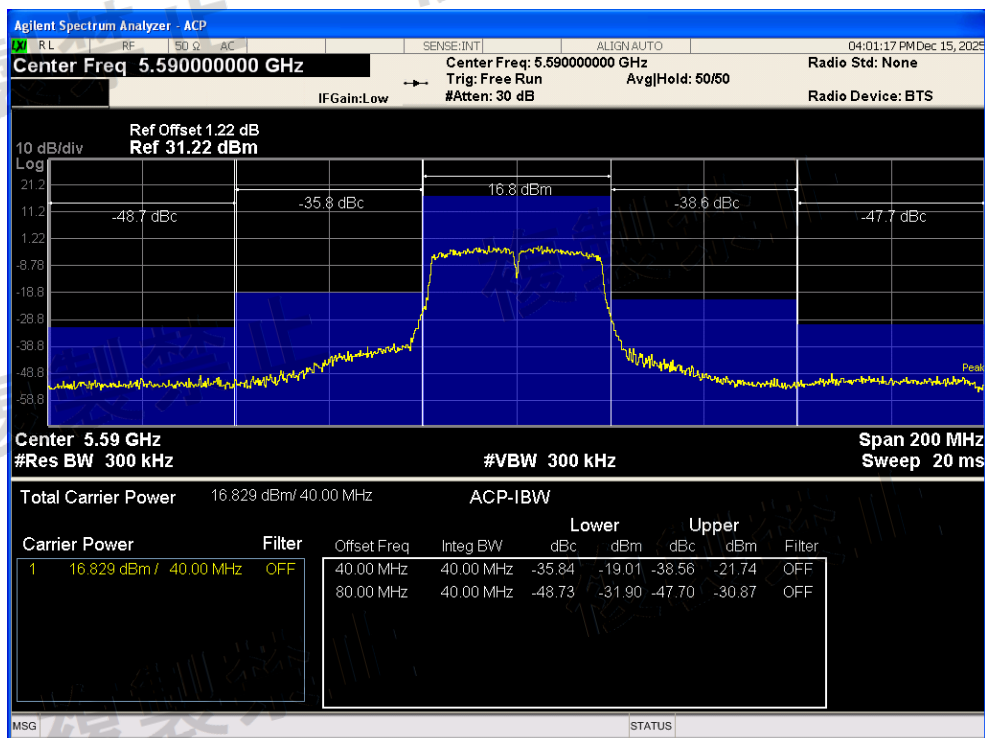


ACEP NVNT ac40 5670MHz Ant1

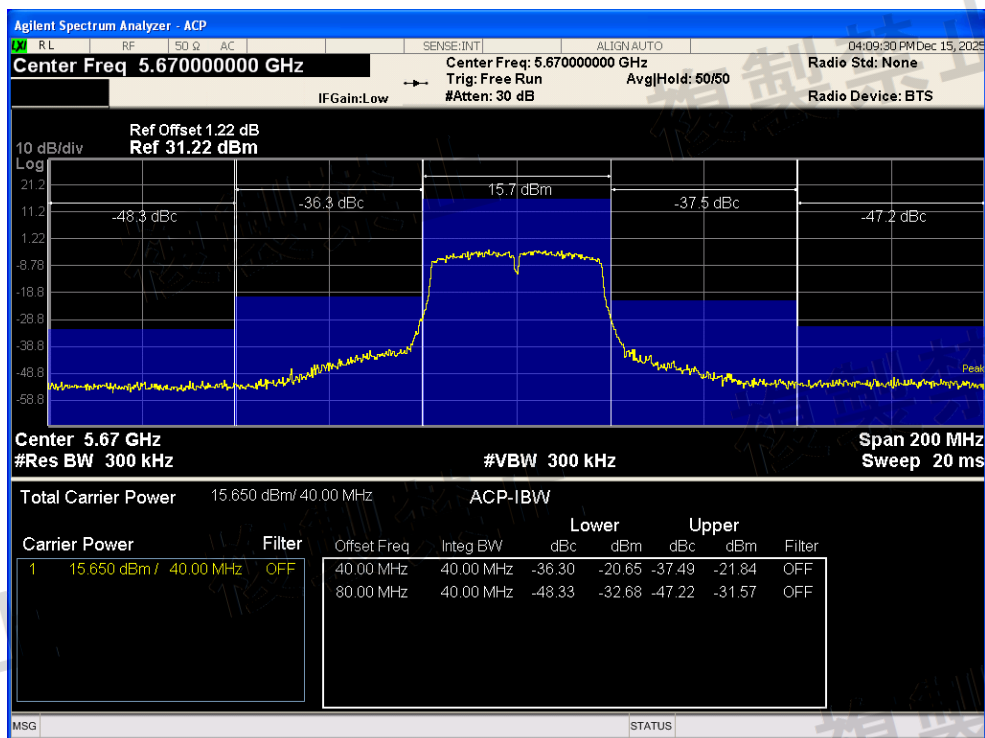


ACEP NVNT ac40 5510MHz Ant2

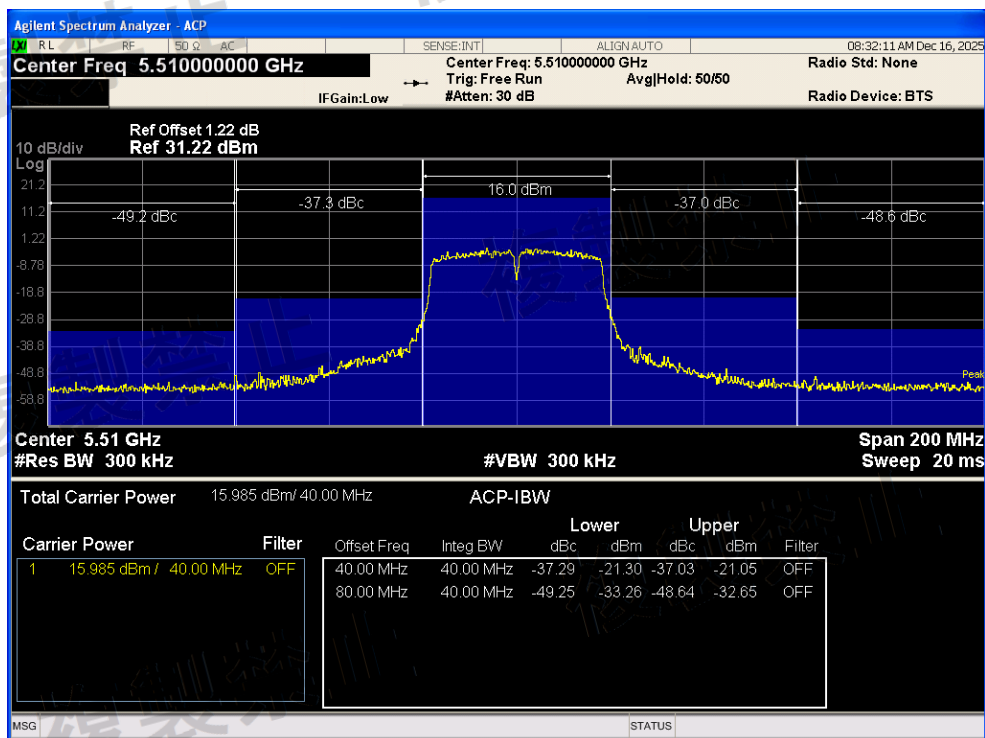


ACEP NVNT ac40 5590MHz Ant2

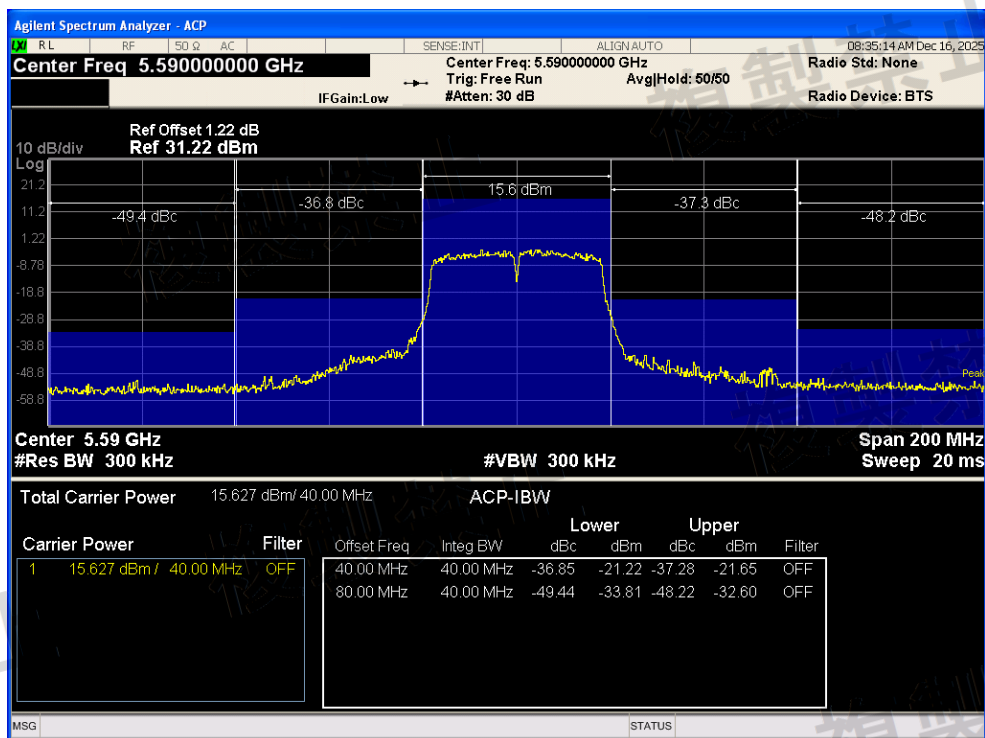


ACEP NVNT ac40 5670MHz Ant2

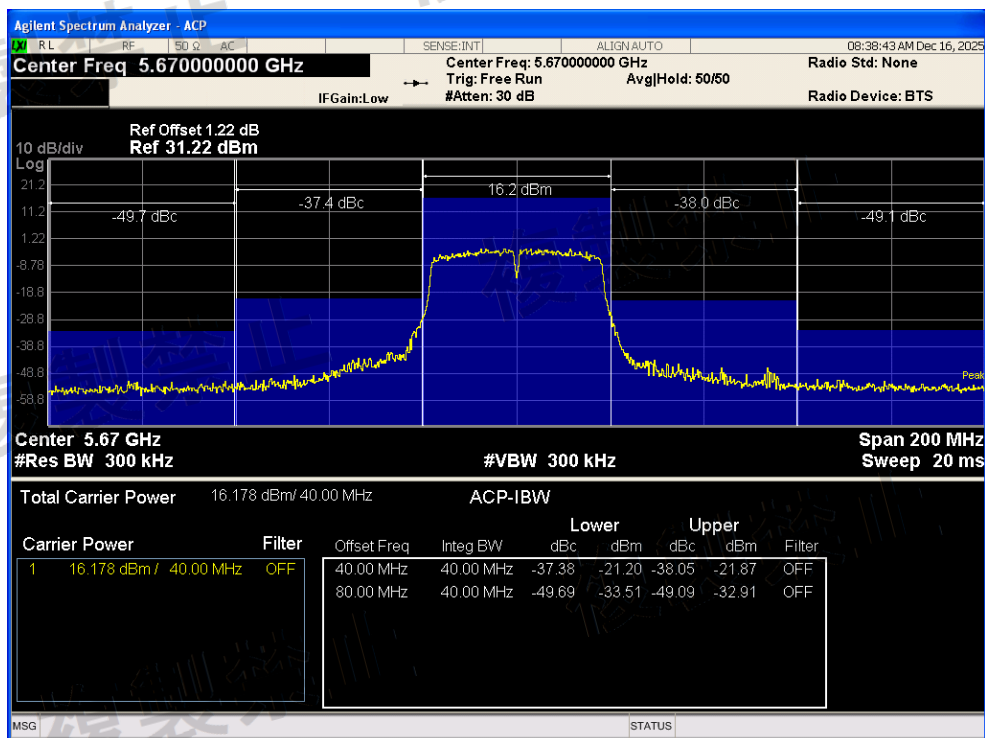


ACEP NVNT ac80 5530MHz Ant1

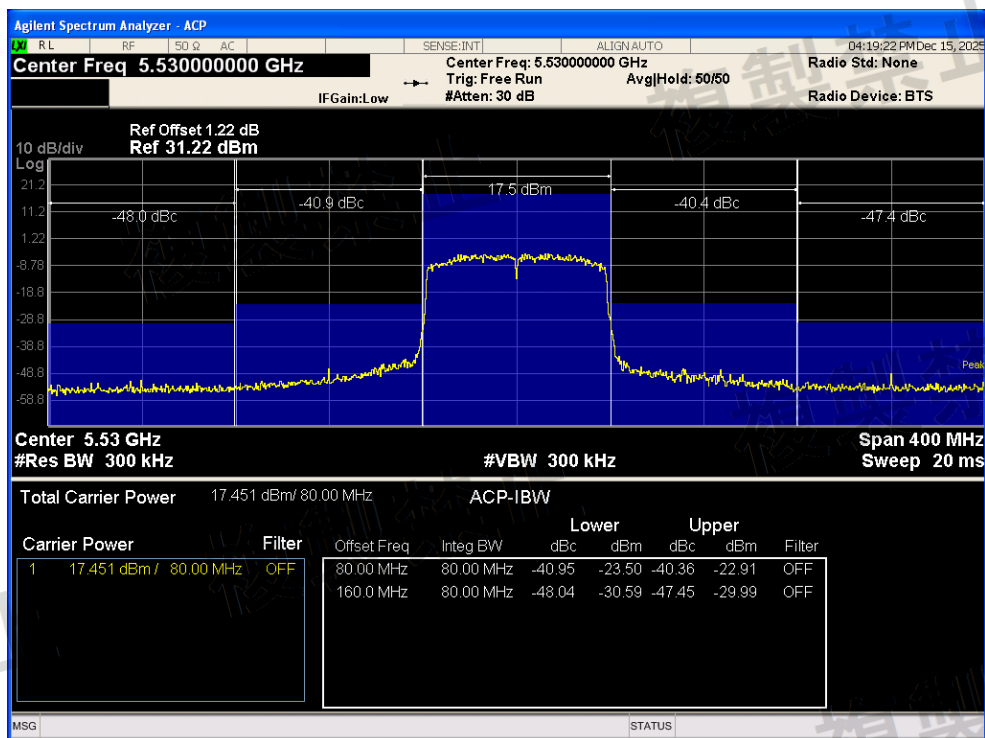


ACEP NVNT ac80 5610MHz Ant1

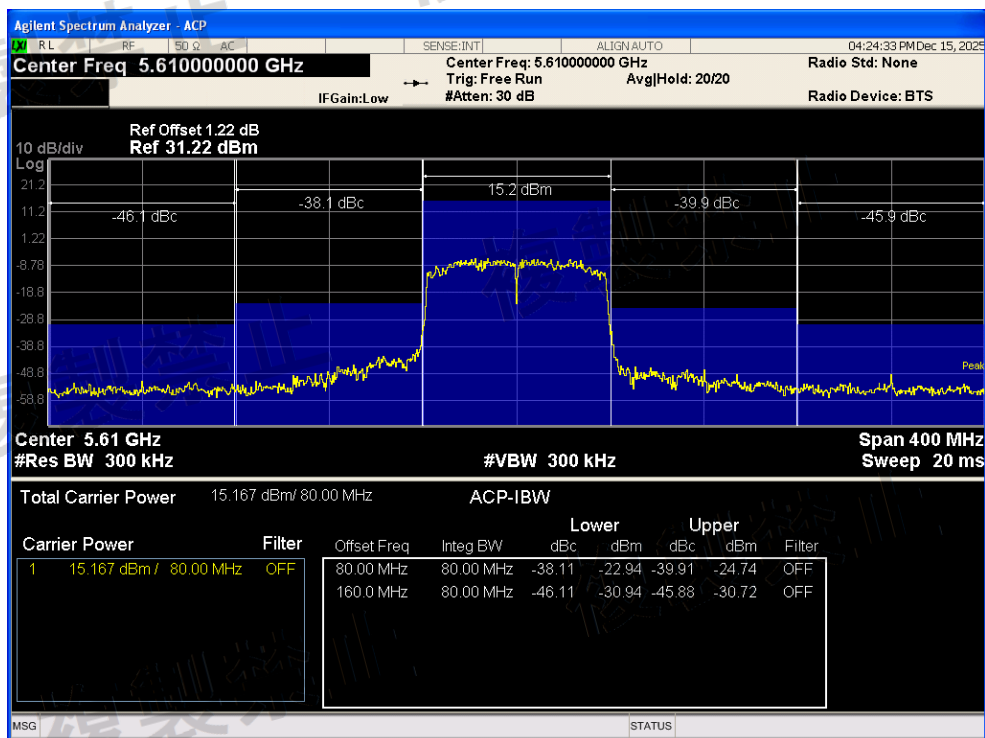


ACEP NVNT ac80 5530MHz Ant2

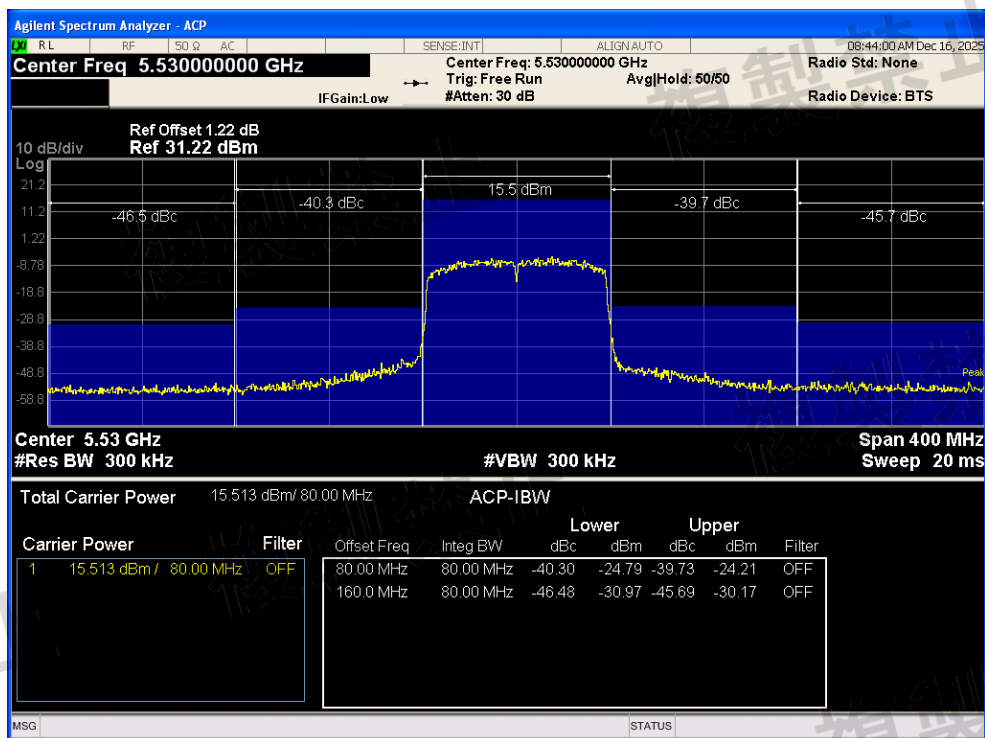


ACEP NVNT ac80 5610MHz Ant2

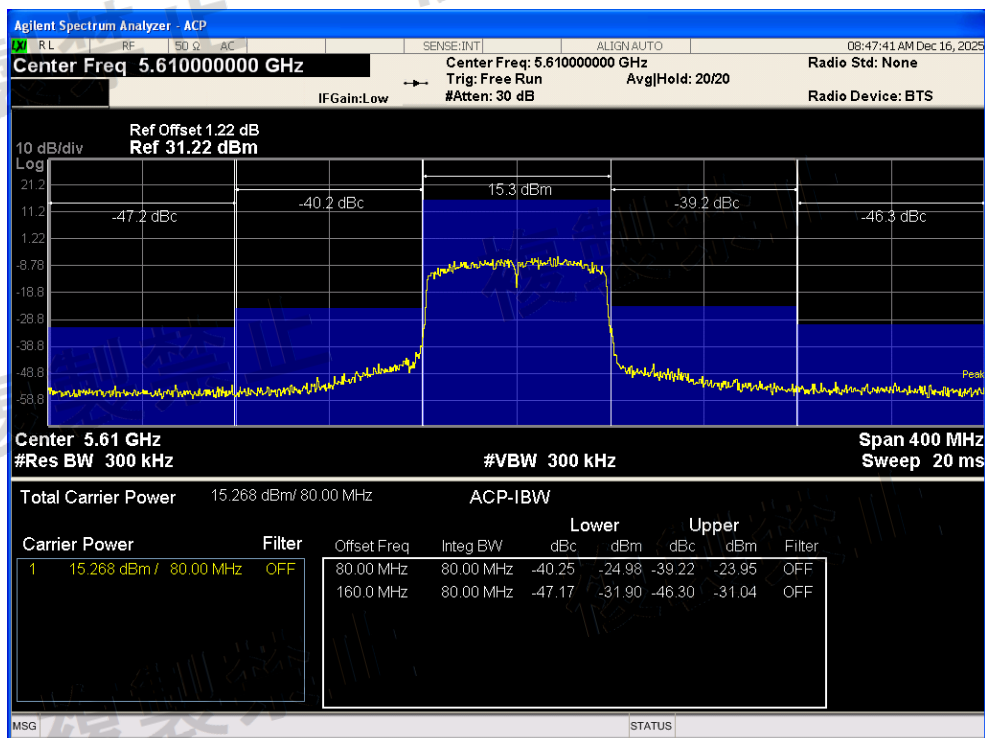


ACEP NVNT n20 5500MHz Ant1

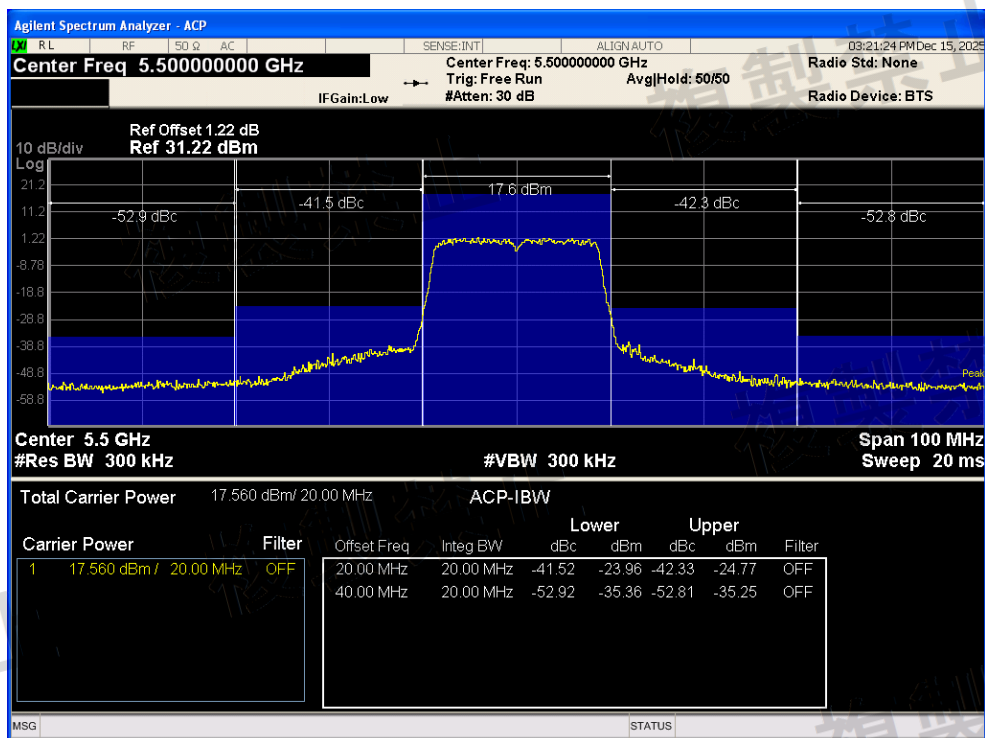


ACEP NVNT n20 5600MHz Ant1

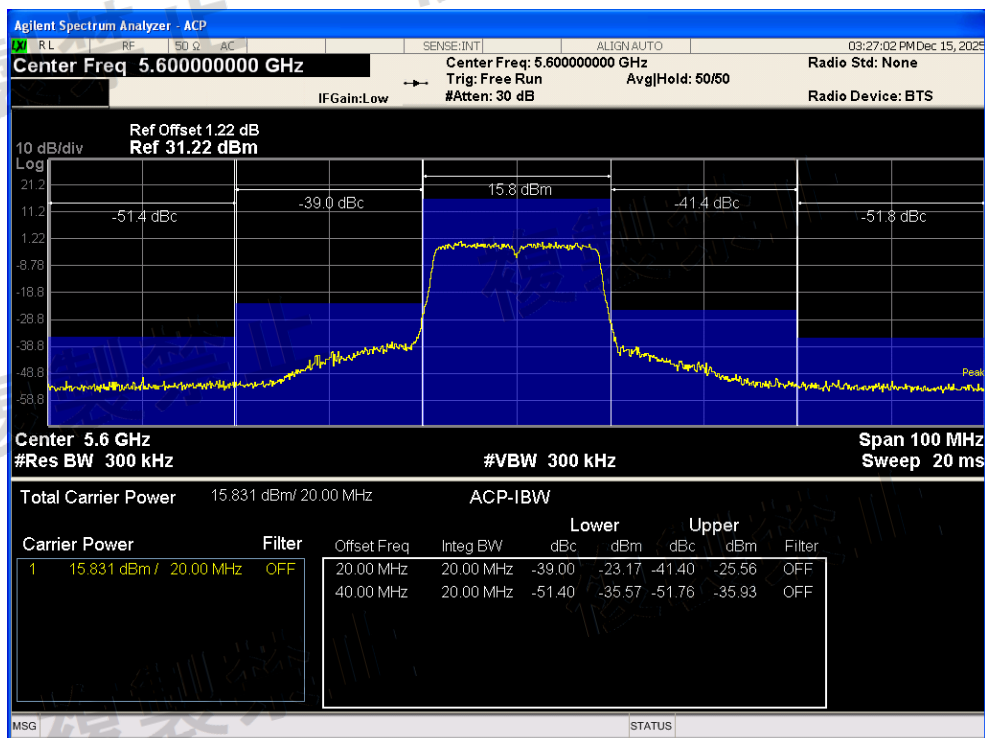


ACEP NVNT n20 5700MHz Ant1

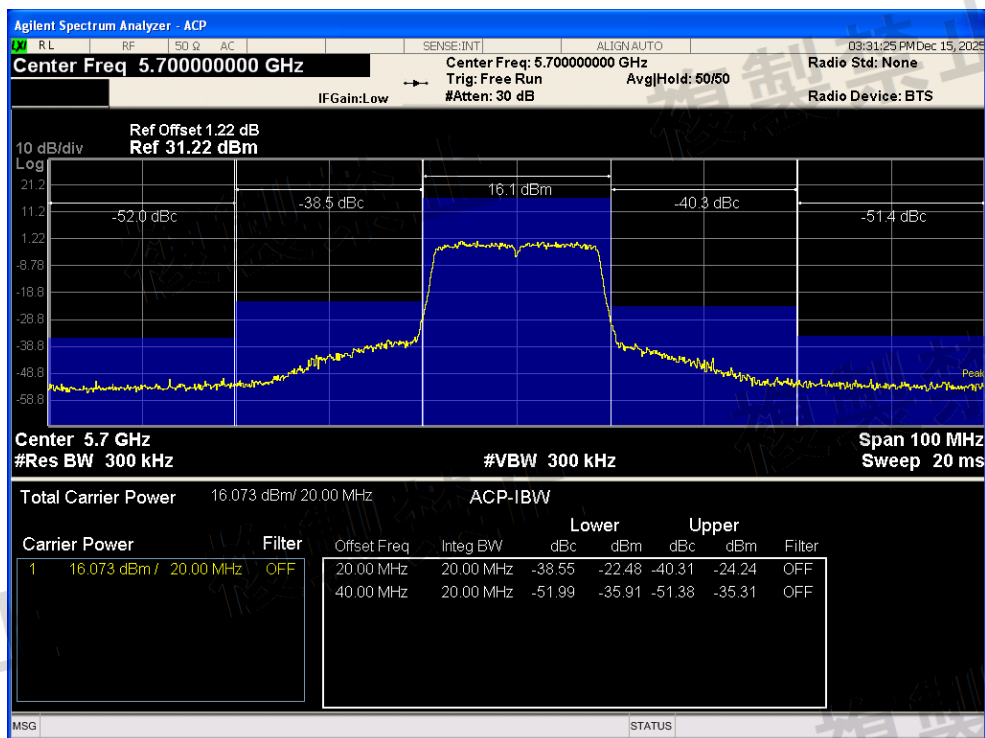


ACEP NVNT n20 5500MHz Ant2

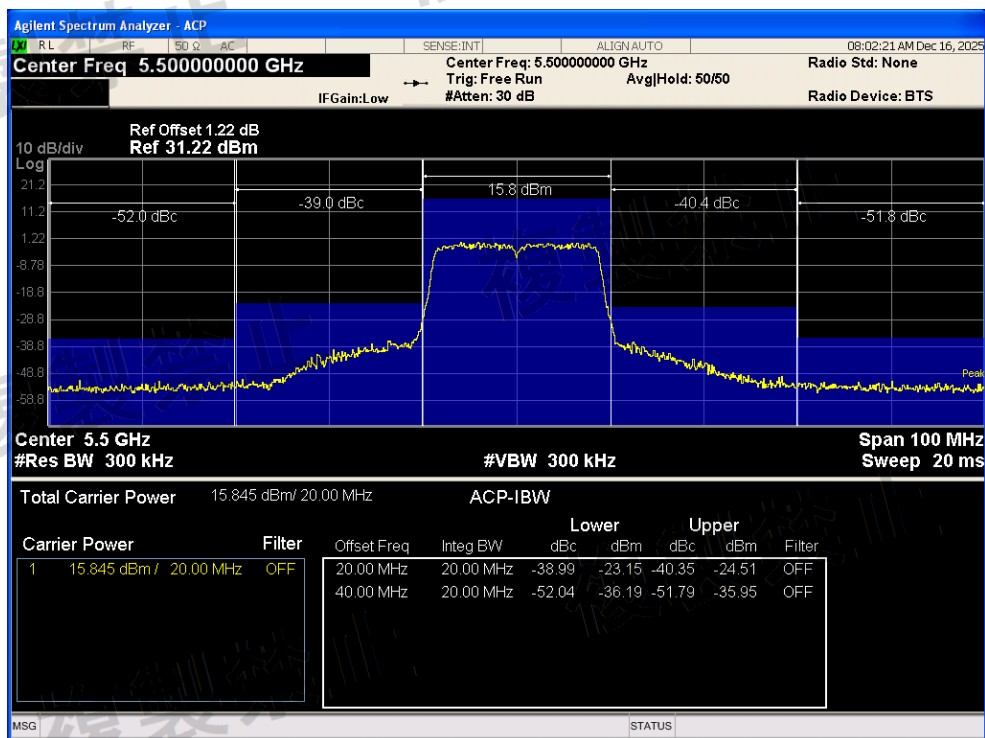


ACEP NVNT n20 5600MHz Ant2

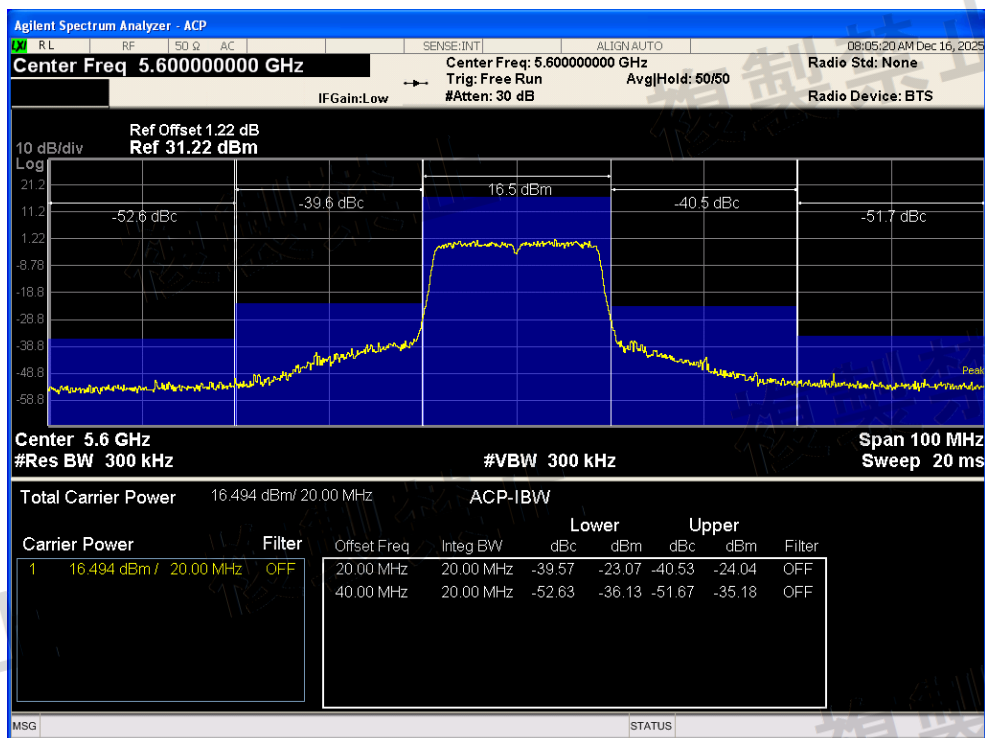


ACEP NVNT n20 5700MHz Ant2

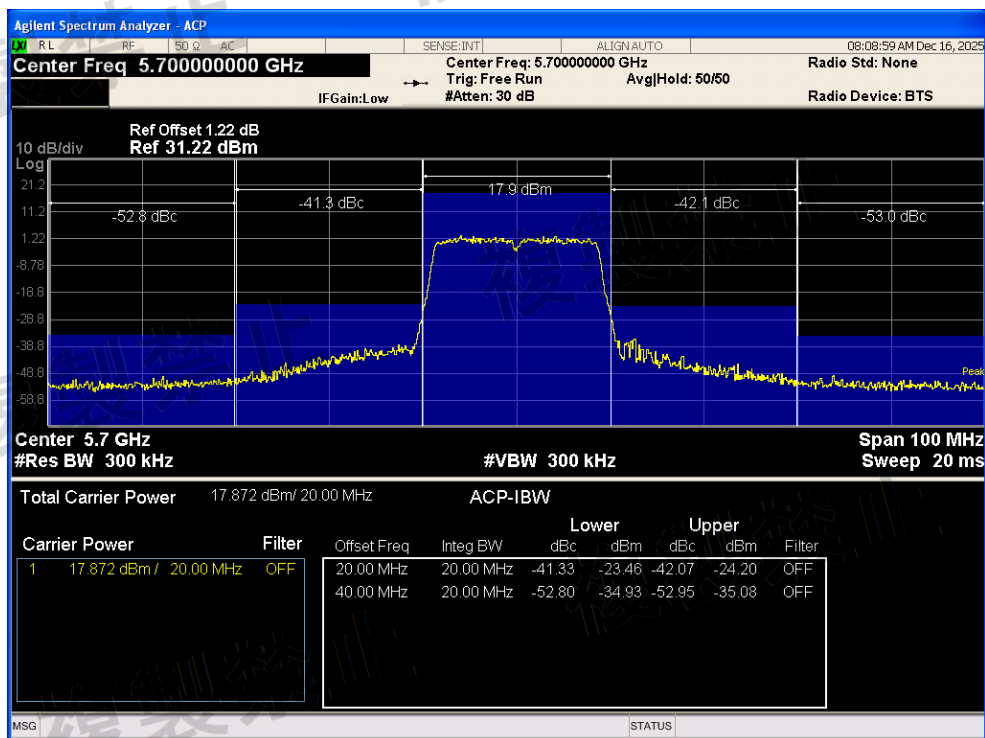


ACEP NVNT n40 5510MHz Ant1

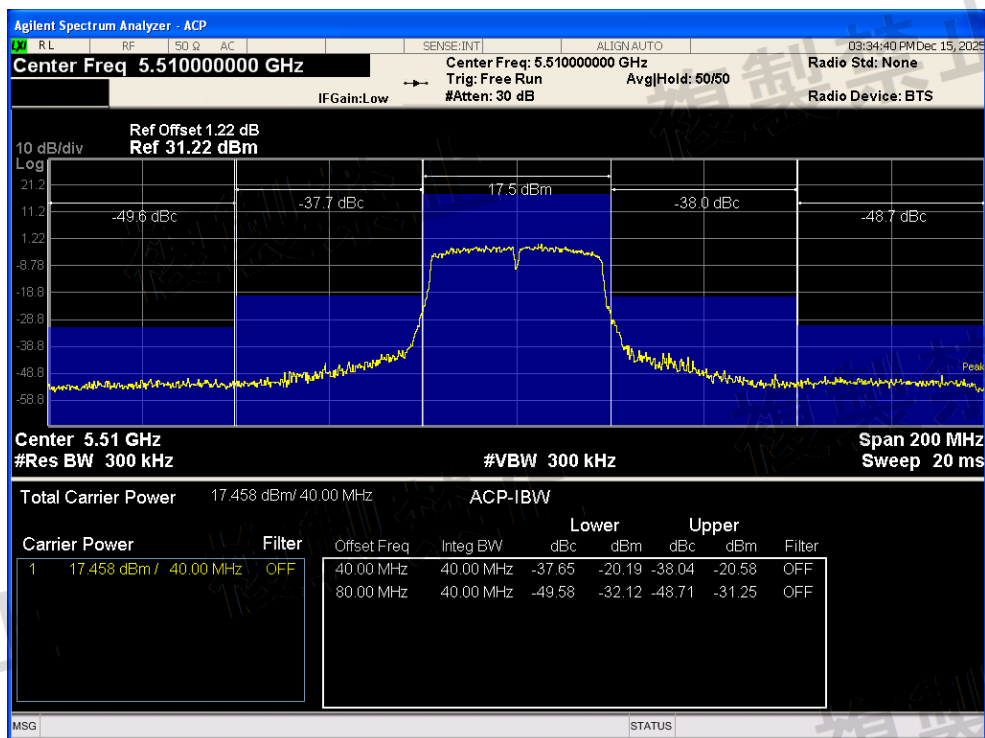


ACEP NVNT n40 5590MHz Ant1

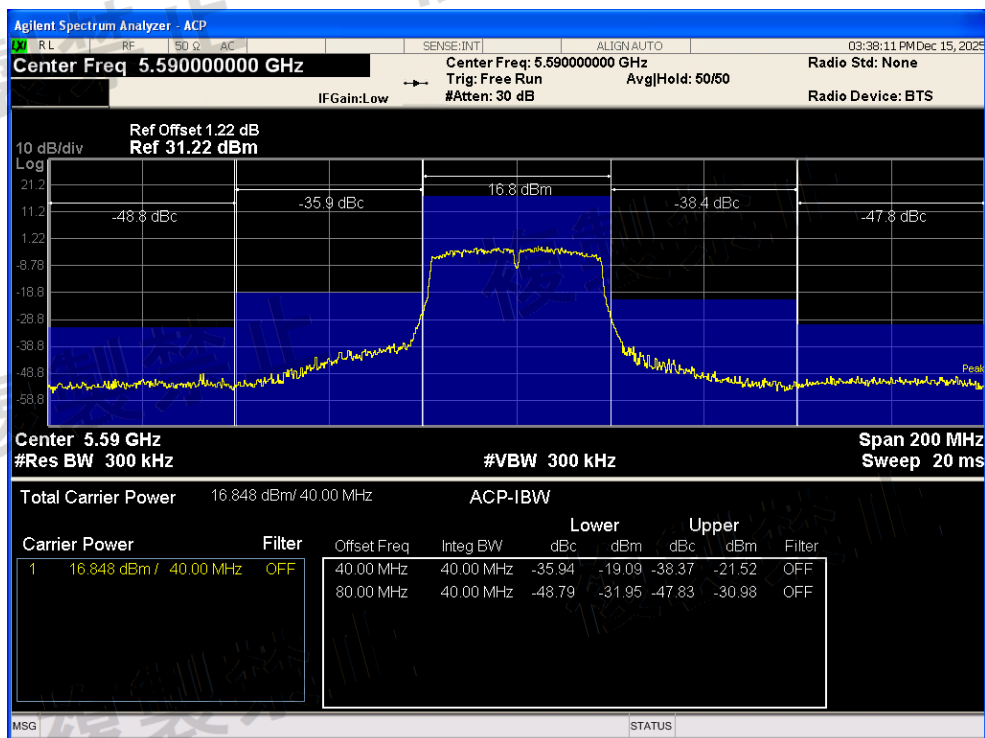


ACEP NVNT n40 5670MHz Ant1

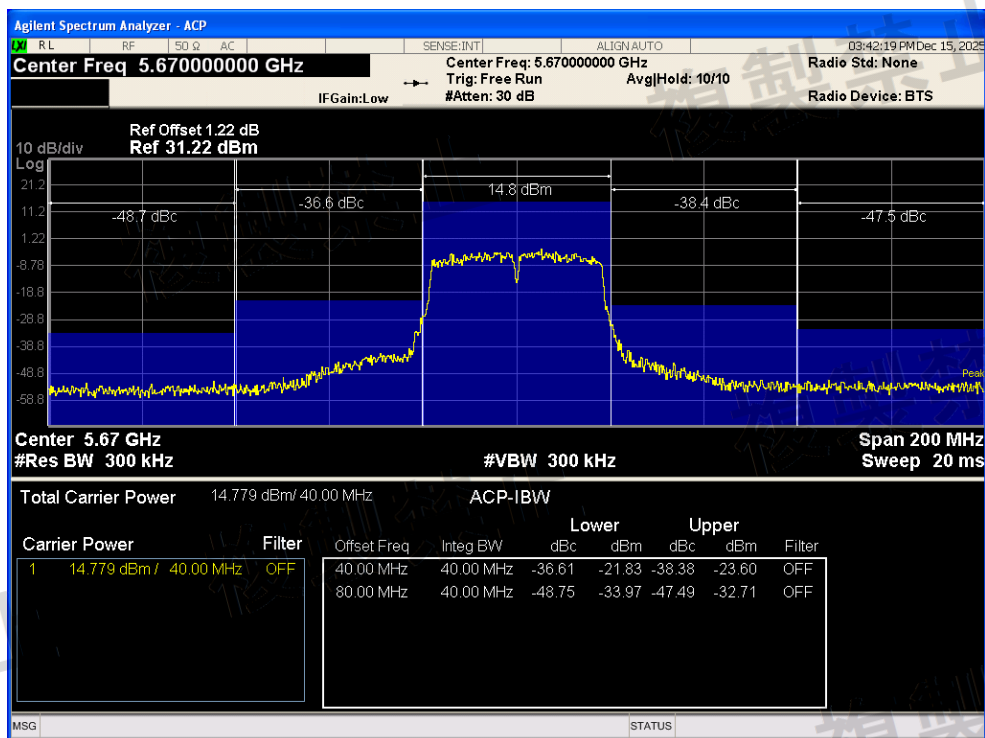


ACEP NVNT n40 5510MHz Ant2

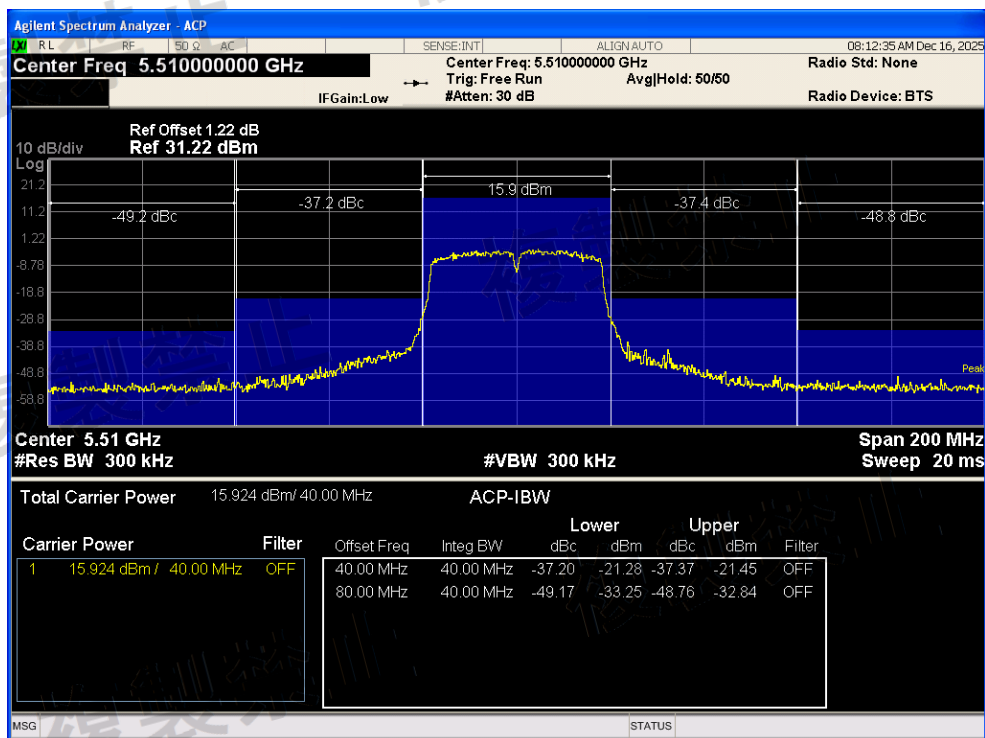

ACEP NVNT n40 5590MHz Ant2

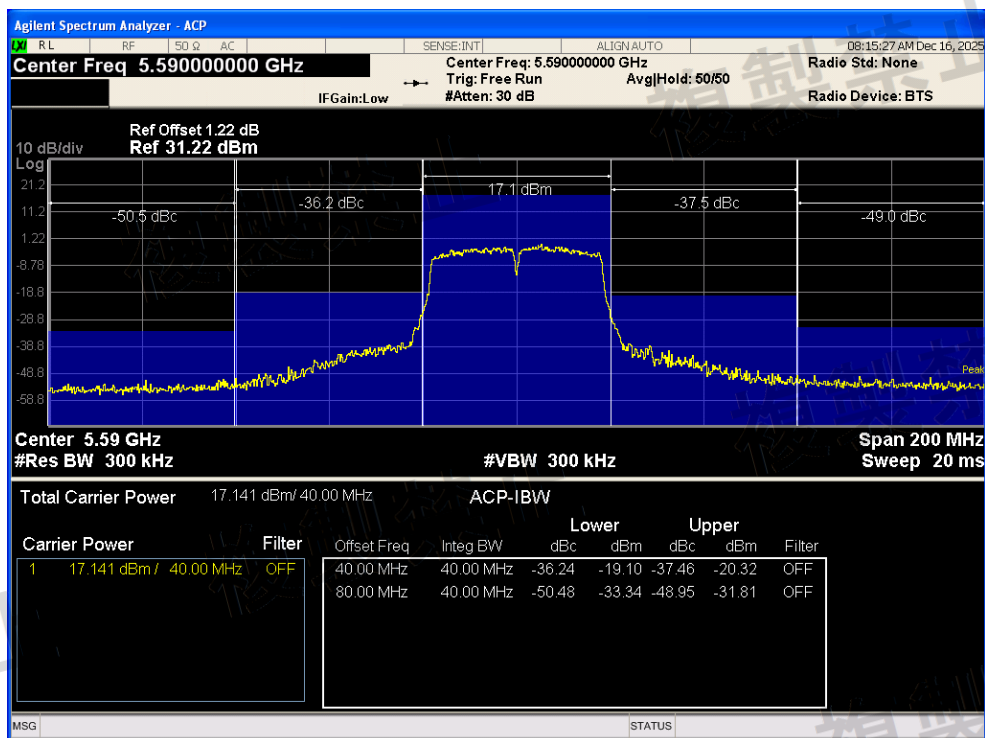


ACEP NVNT n40 5670MHz Ant2

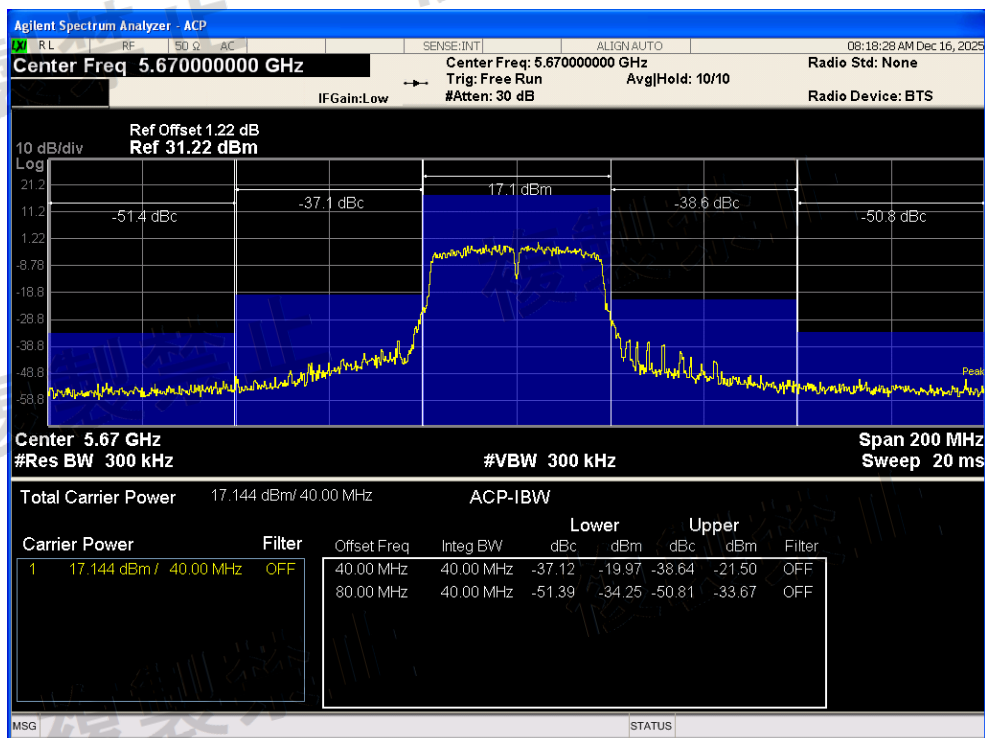


Frequency Error

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	user	5500	Ant1	5500	0	20	Pass
NVNT	user	5510	Ant1	5509.98	-3.63	20	Pass
NVNT	user	5530	Ant1	5529.96	-7.23	20	Pass
NVNT	user	5590	Ant1	5589.96	-7.16	20	Pass
NVNT	user	5600	Ant1	5600	0	20	Pass
NVNT	user	5610	Ant1	5609.96	-7.13	20	Pass
NVNT	user	5670	Ant1	5669.98	-3.53	20	Pass
NVNT	user	5700	Ant1	5699.98	-3.51	20	Pass
NVNT	user	5500	Ant2	5500.02	3.64	20	Pass
NVNT	user	5510	Ant2	5509.98	-3.63	20	Pass
NVNT	user	5530	Ant2	5529.92	-14.47	20	Pass
NVNT	user	5590	Ant2	5589.96	-7.16	20	Pass
NVNT	user	5600	Ant2	5600.06	10.71	20	Pass
NVNT	user	5610	Ant2	5610.04	7.13	20	Pass
NVNT	user	5670	Ant2	5670.02	3.53	20	Pass
NVNT	user	5700	Ant2	5699.92	-14.04	20	Pass


Freq. Error NVNT user 5500MHz Ant1

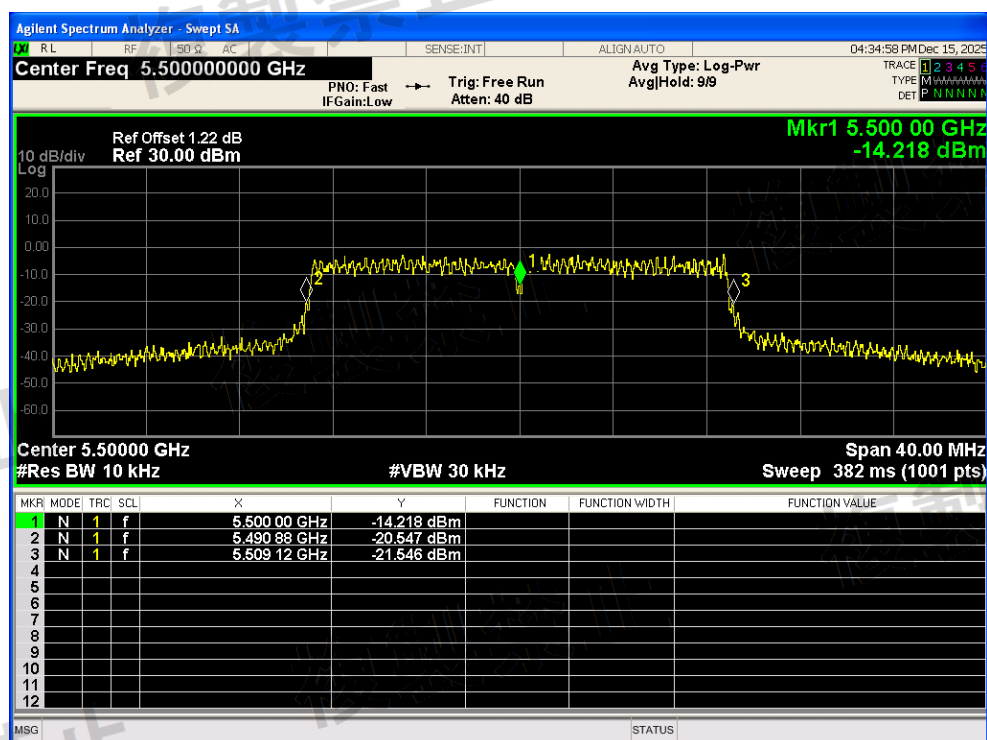


Freq. Error NVNT user 5510MHz Ant1

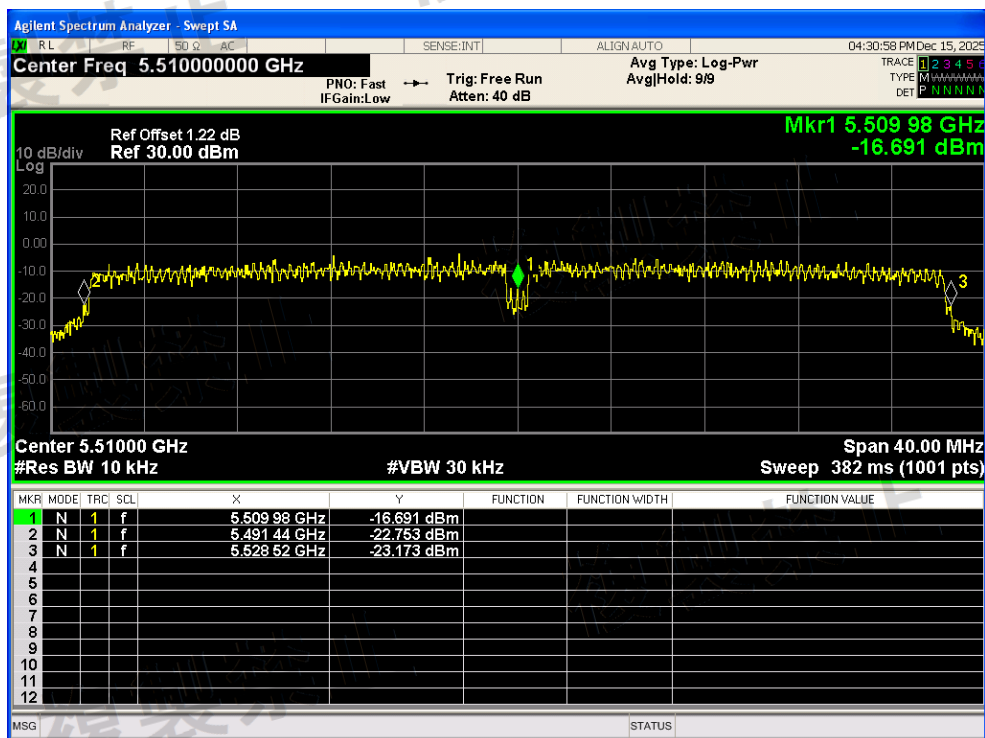


Freq. Error NVNT user 5530MHz Ant1

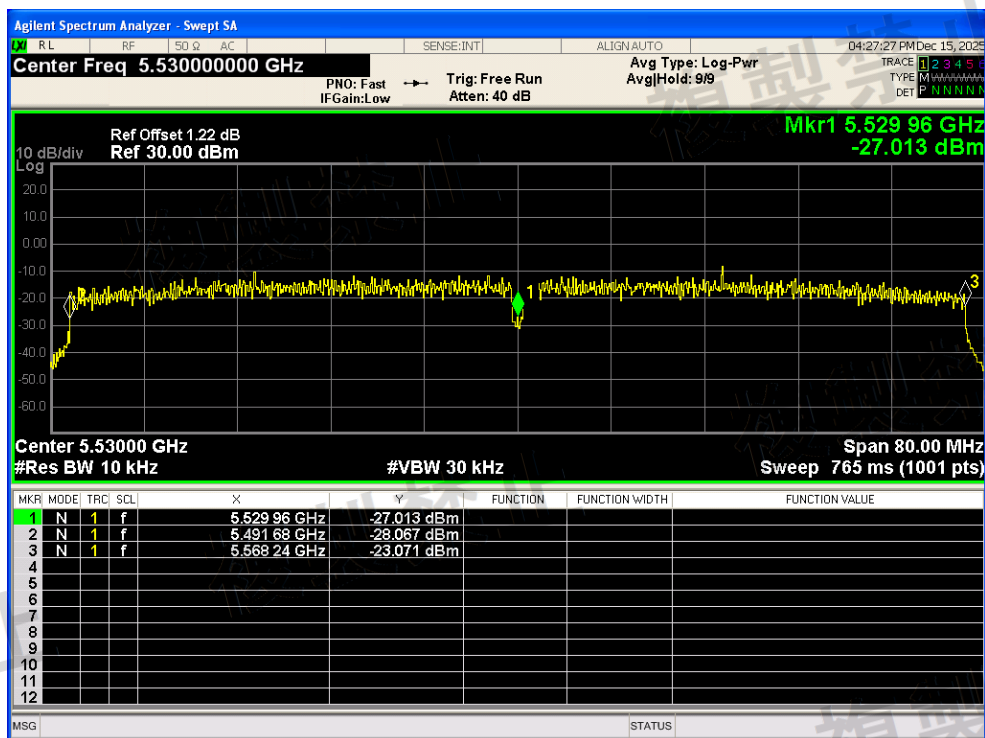


Freq. Error NVNT user 5590MHz Ant1

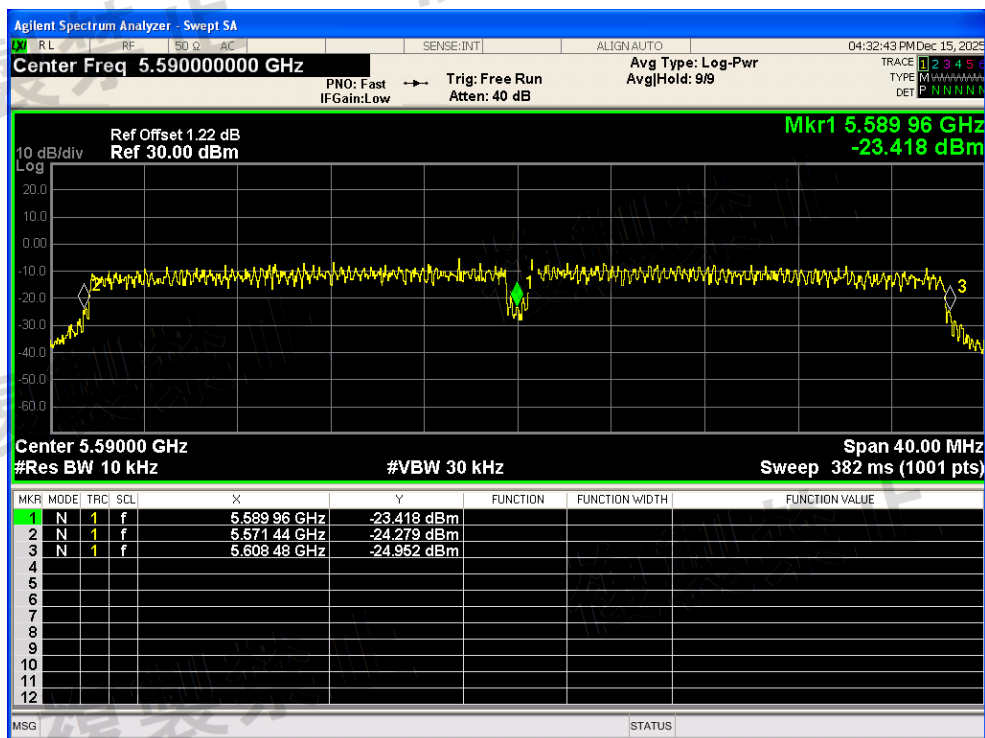


Freq. Error NVNT user 5600MHz Ant1

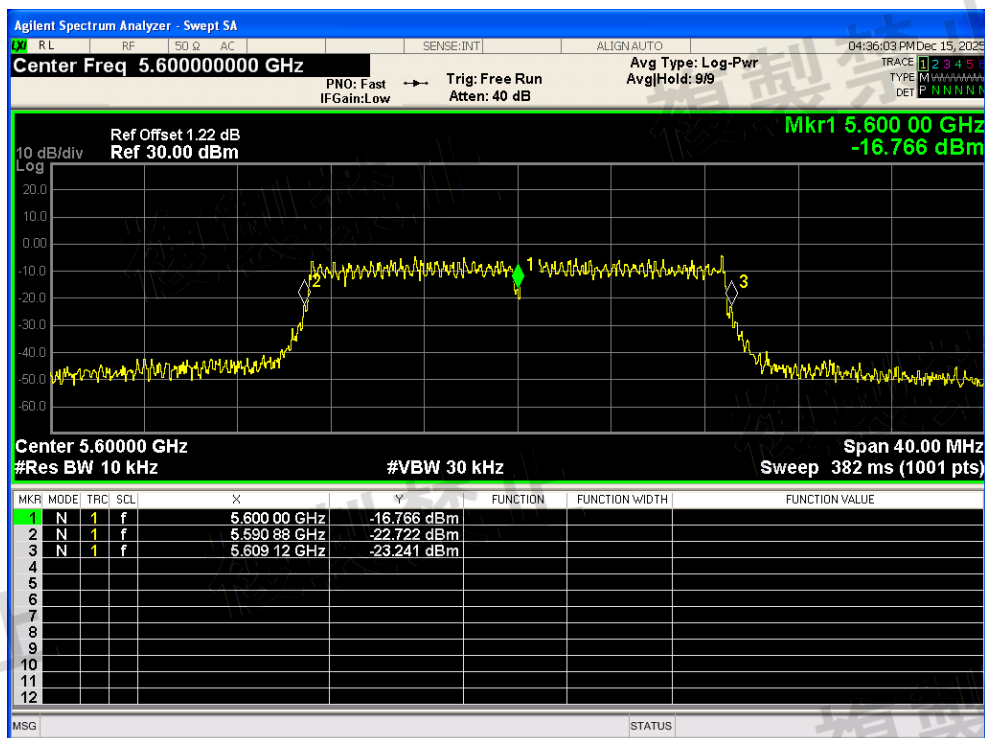


Freq. Error NVNT user 5610MHz Ant1

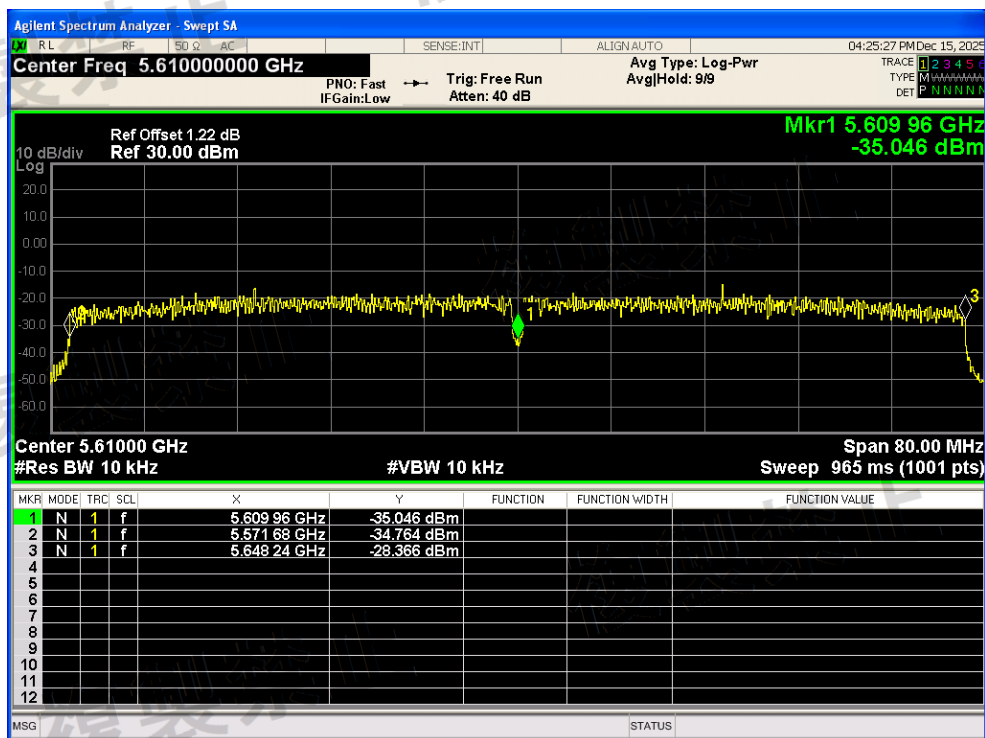


Freq. Error NVNT user 5670MHz Ant1

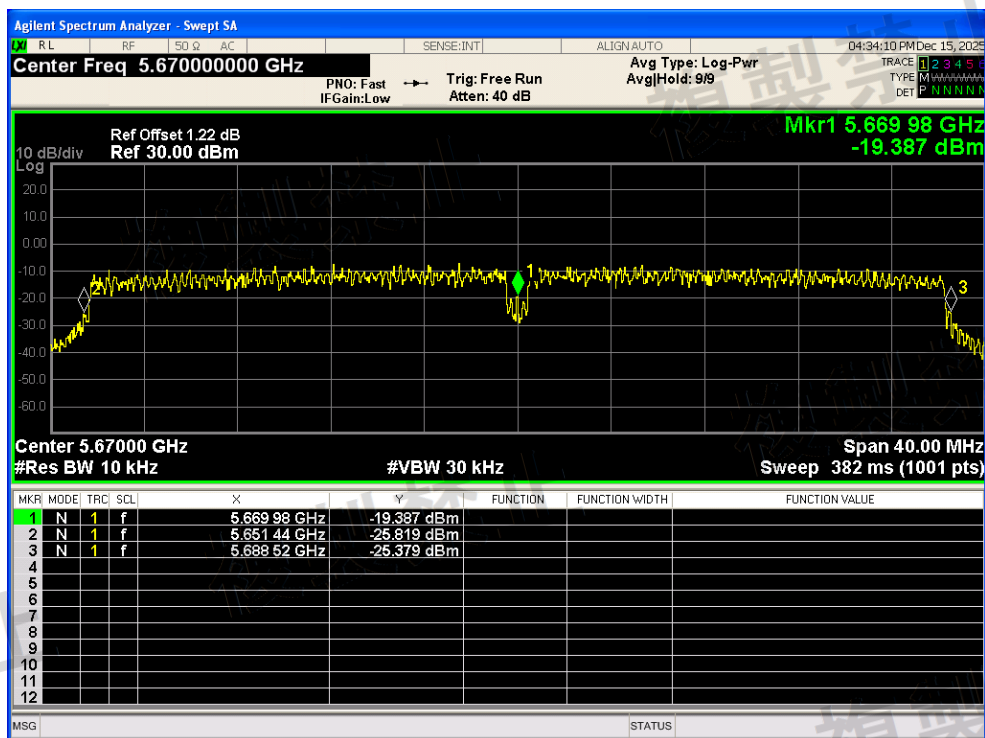


Freq. Error NVNT user 5700MHz Ant1

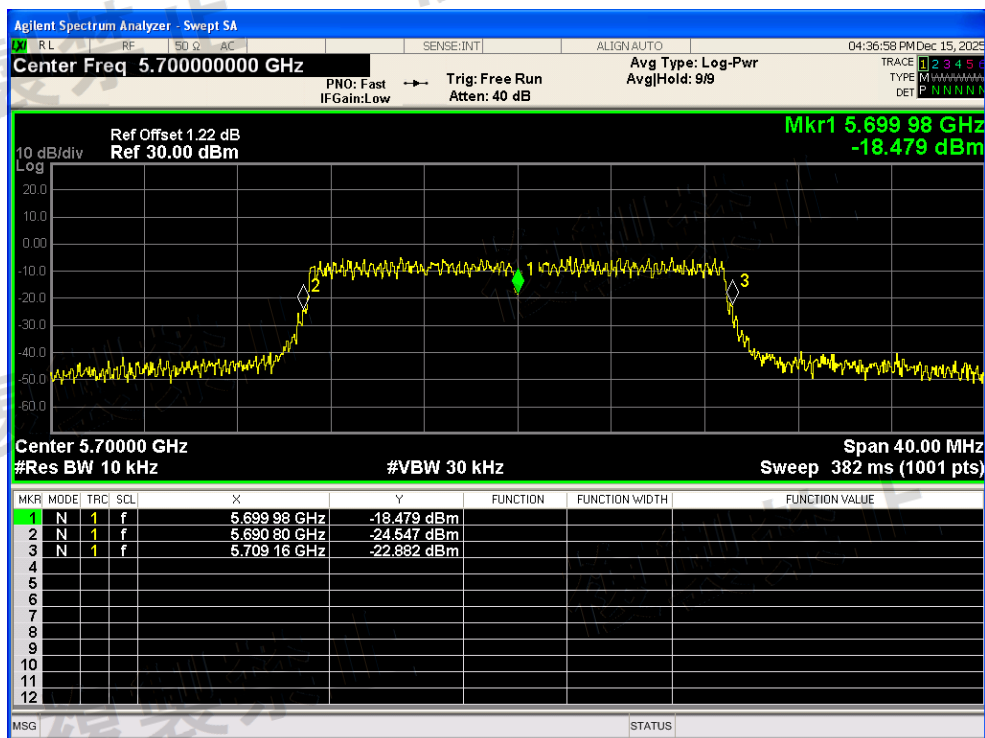


Freq. Error NVNT user 5500MHz Ant2

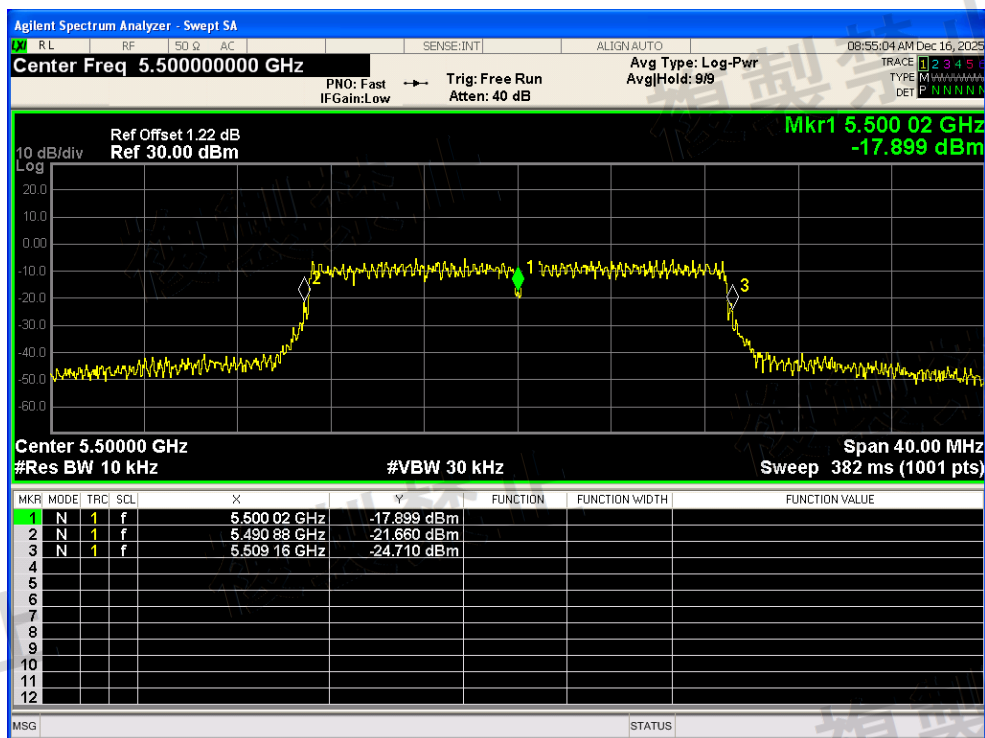


Freq. Error NVNT user 5510MHz Ant2

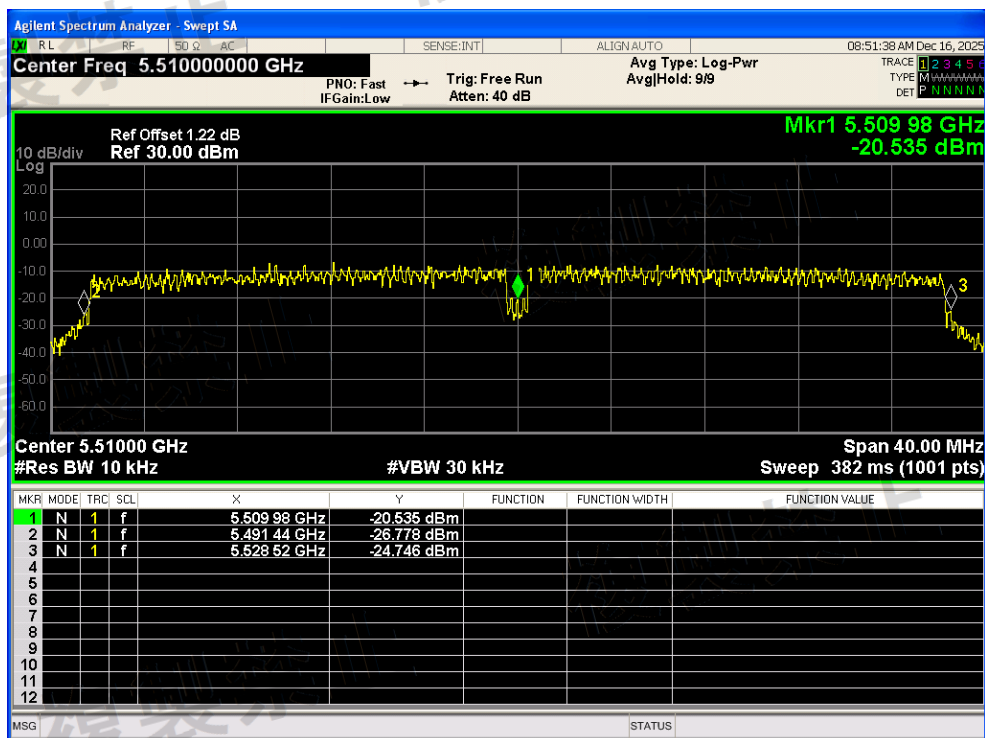


Freq. Error NVNT user 5530MHz Ant2

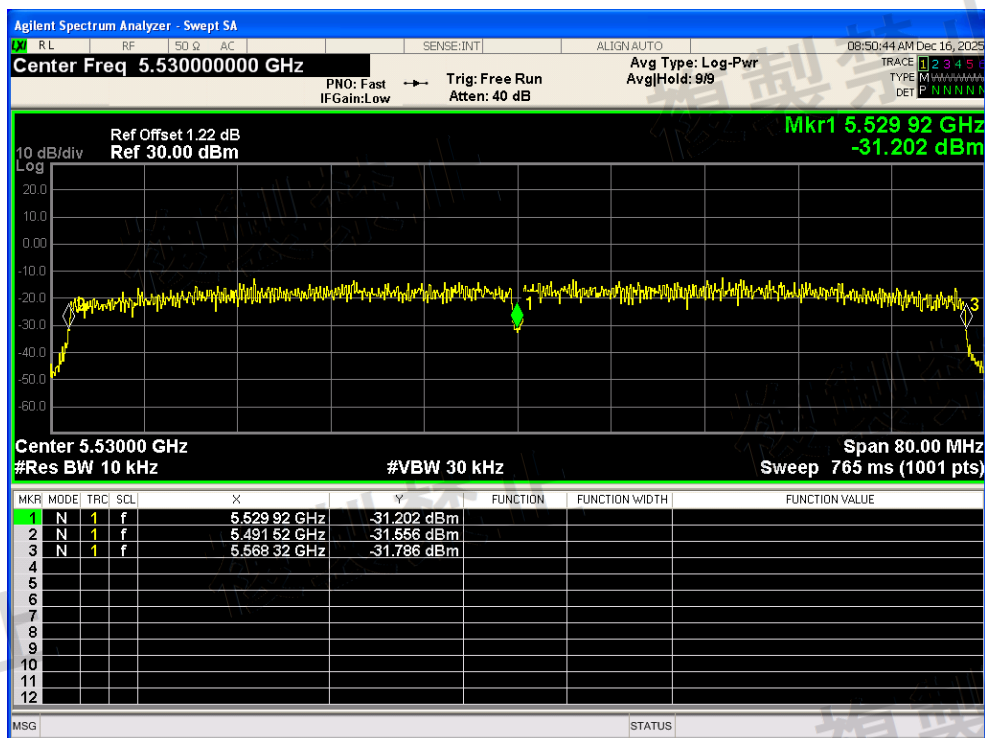


Freq. Error NVNT user 5590MHz Ant2

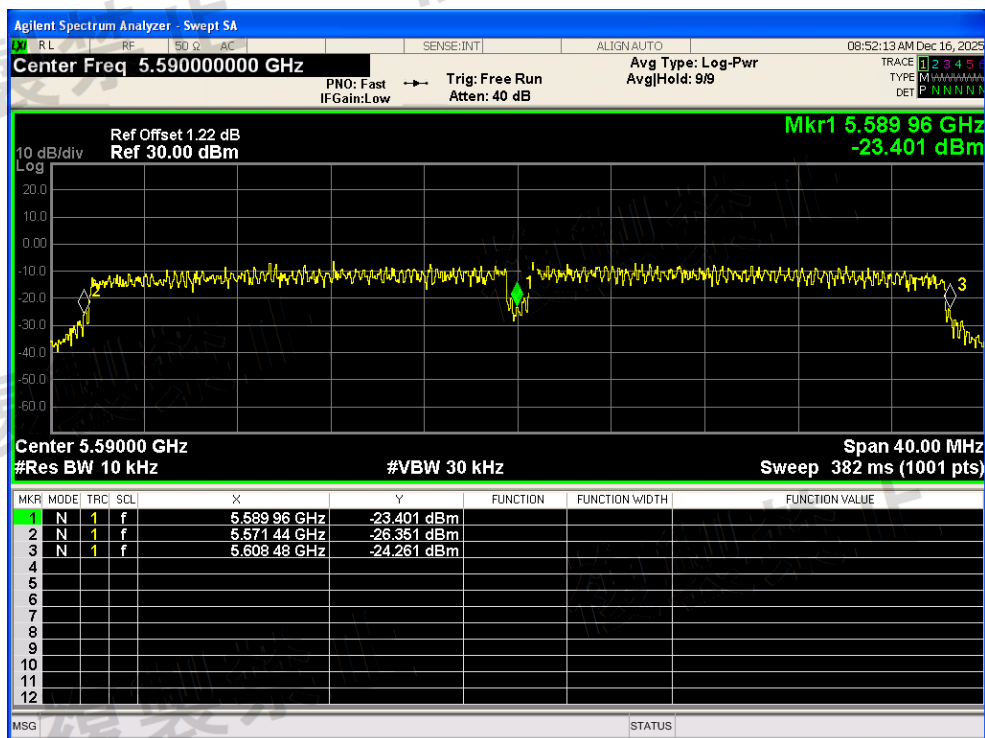


Freq. Error NVNT user 5600MHz Ant2

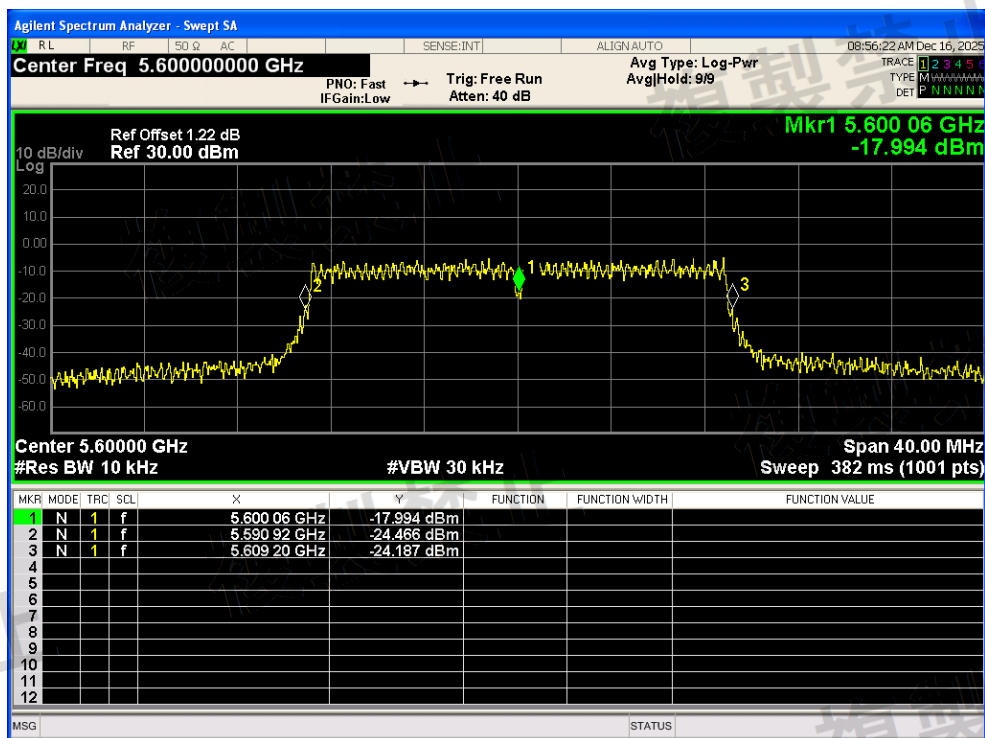


Freq. Error NVNT user 5610MHz Ant2

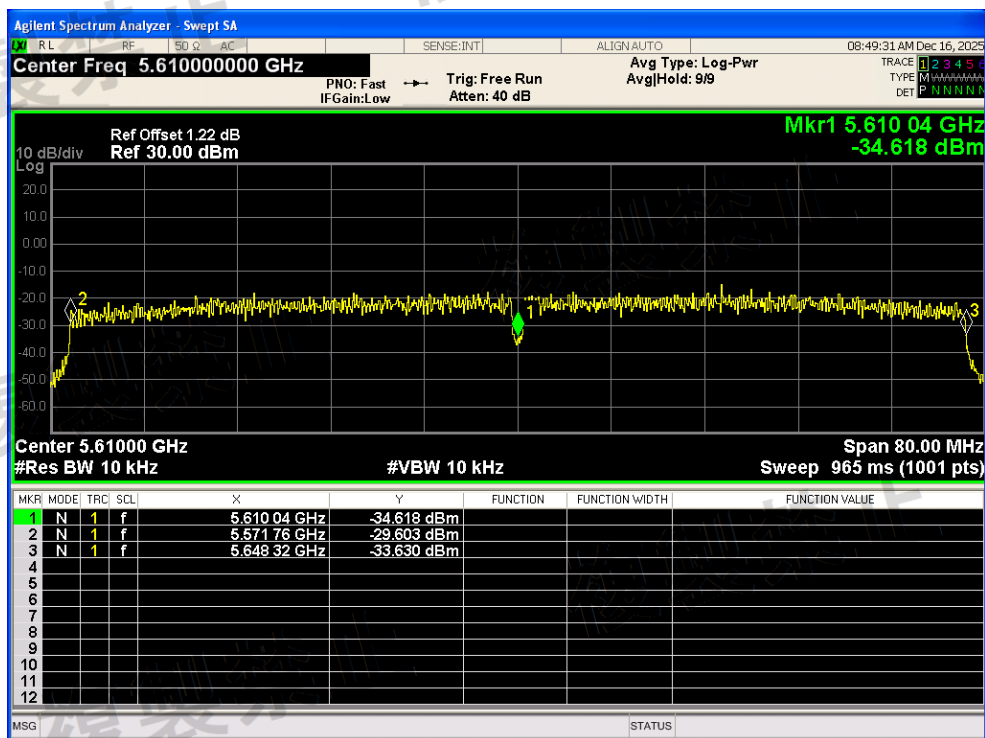

Freq. Error NVNT user 5670MHz Ant2

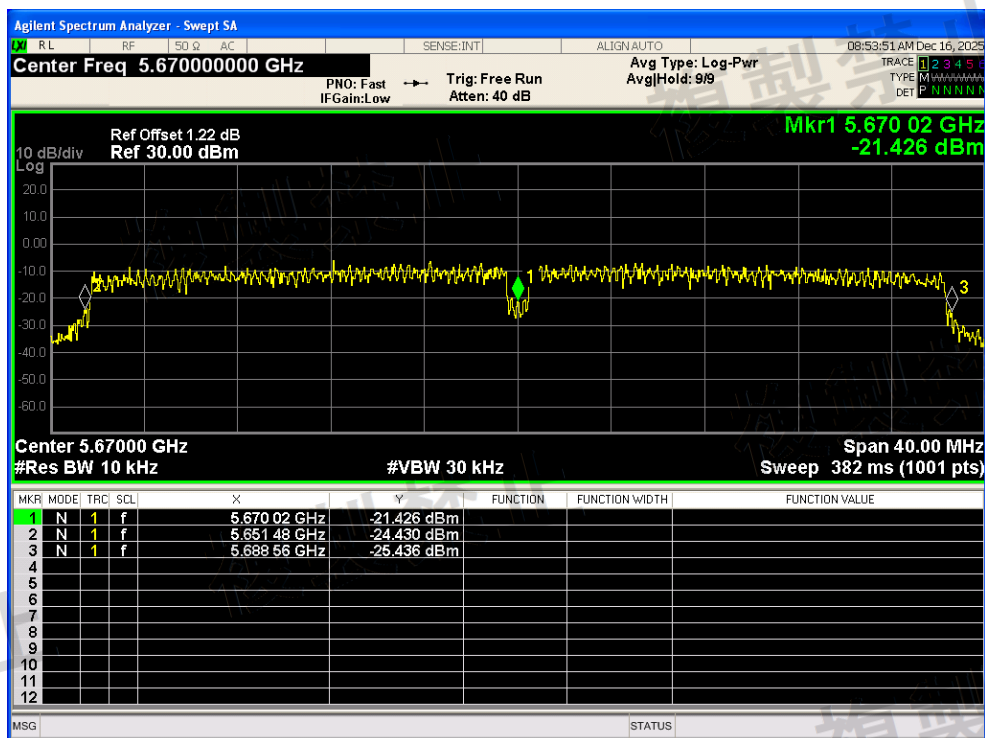

Freq. Error NVNT user 5700MHz Ant2

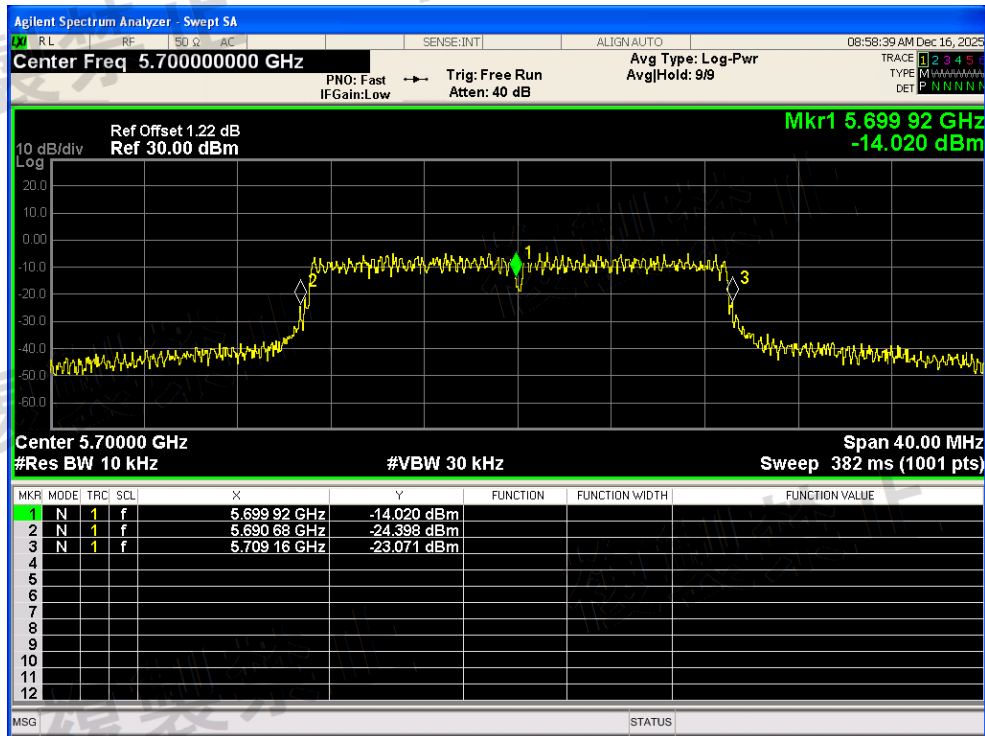


DFS

Calibration


5290MHz ac80 DFS_JP_Ref

Radar Calibration

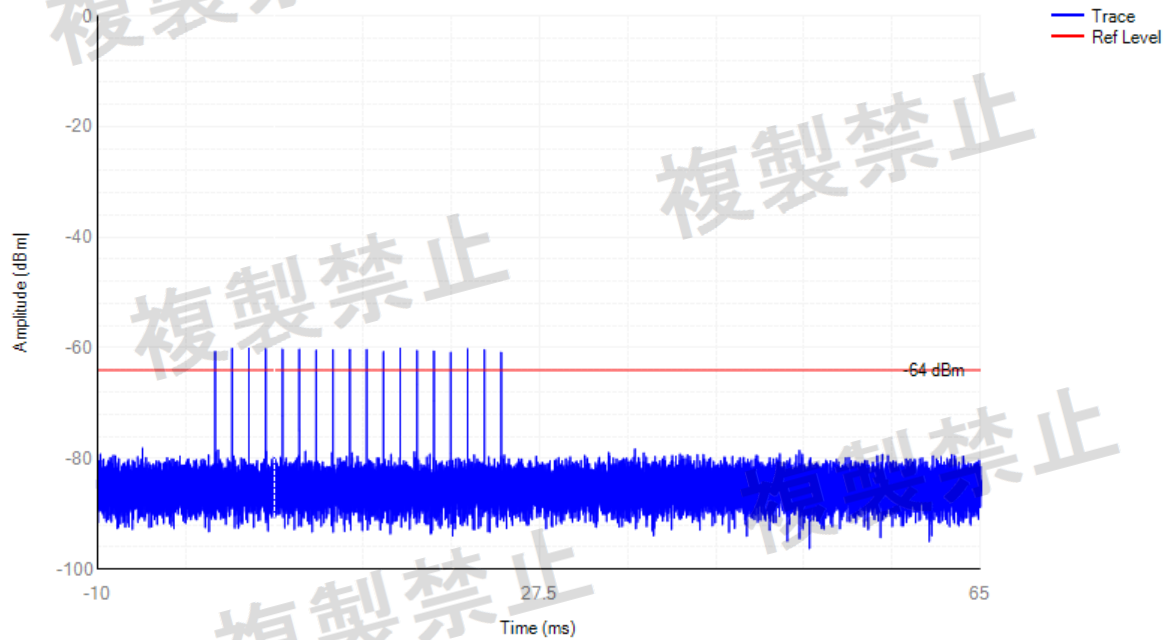


5530MHz ac80 DFS_JP_Ref


Radar Calibration

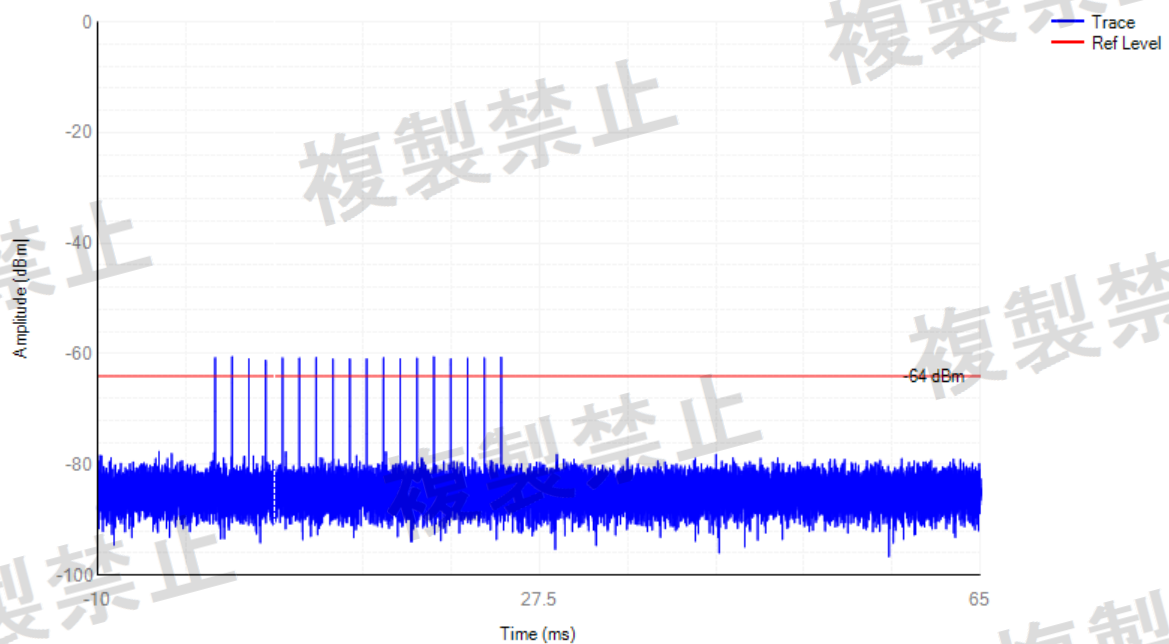

5310MHz n40 DFS_JP_Ref

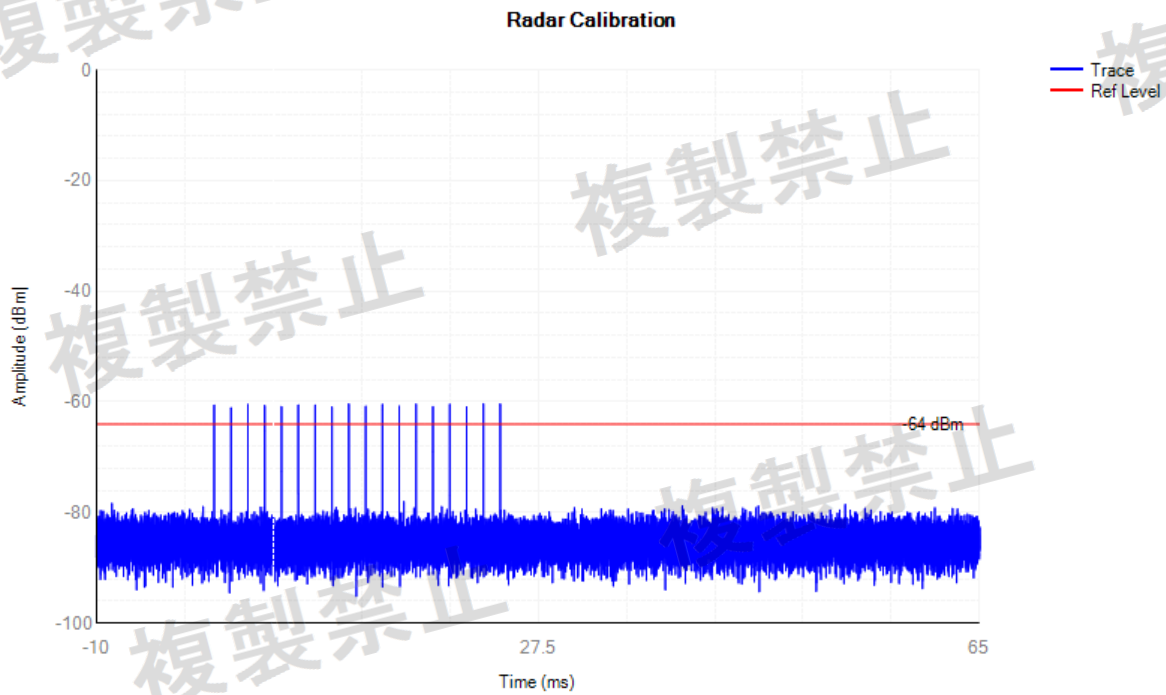


5510MHz n40 DFS_JP_Ref

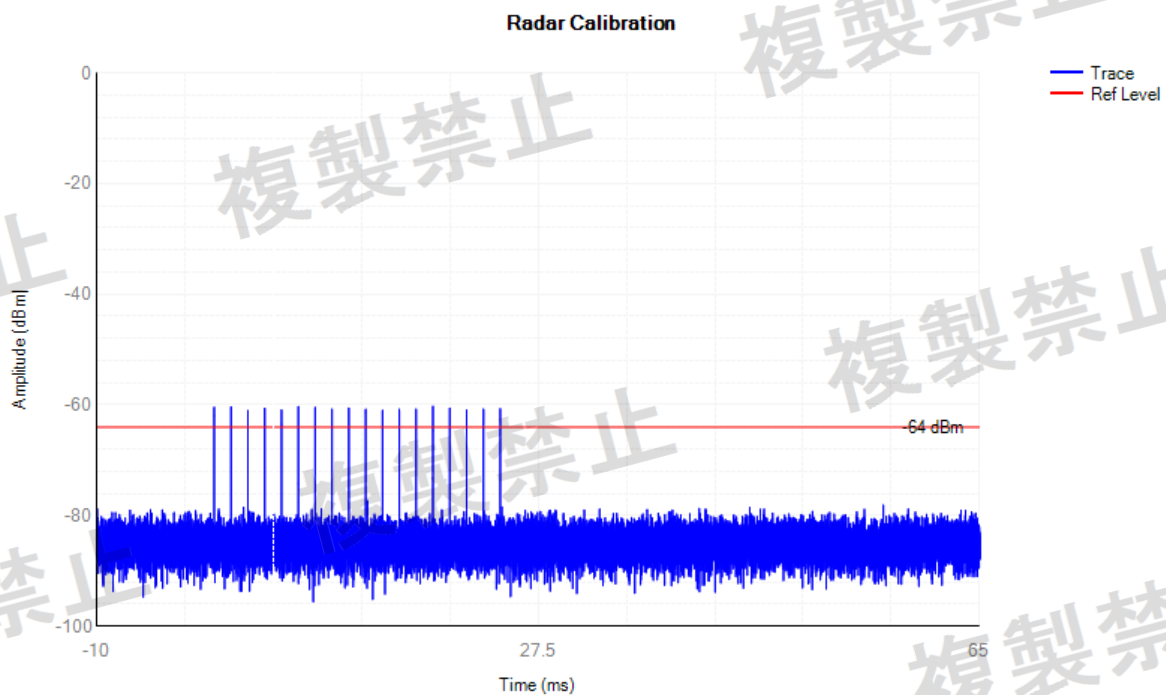


5320MHz a DFS_JP_Ref

Radar Calibration

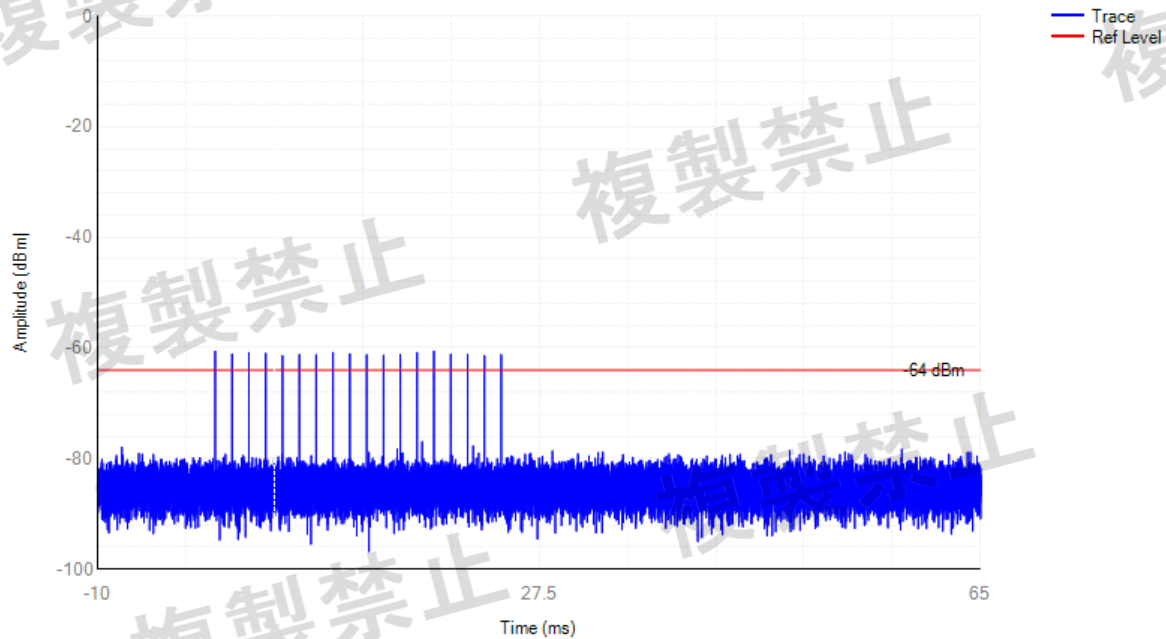

5500MHz a DFS_JP_Ref


Radar Calibration

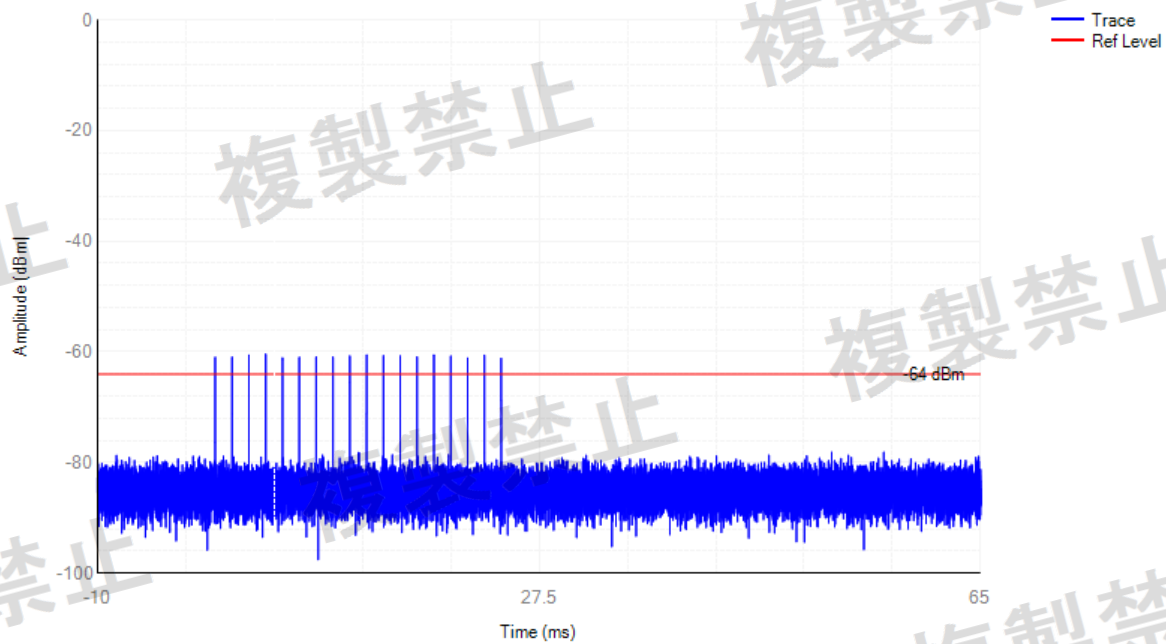

Non-Occupancy


5290MHz ac80 Non-Occupancy

Non-Occupancy period

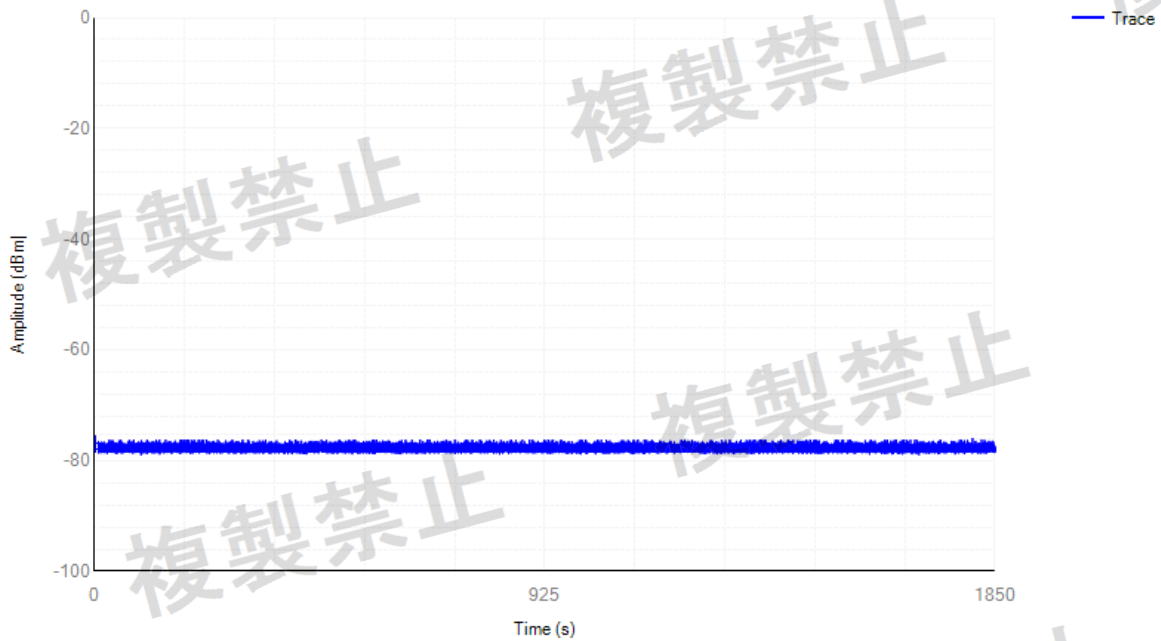


5310MHz n40 Non-Occupancy

Non-Occupancy period

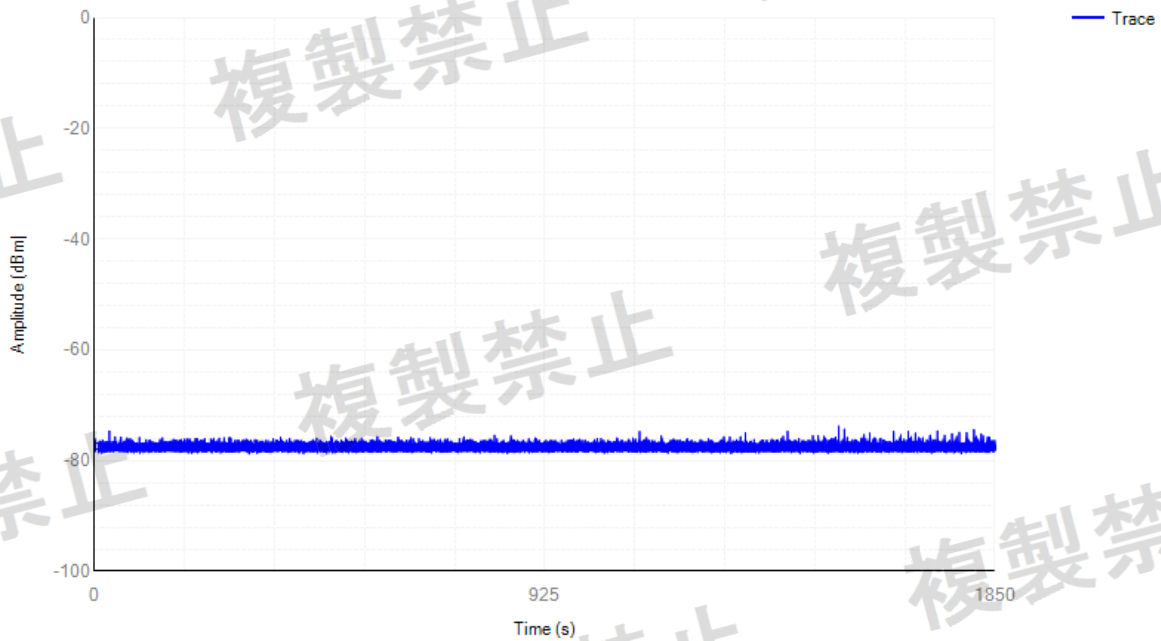


5530MHz ac80 Non-Occupancy

Non-Occupancy period

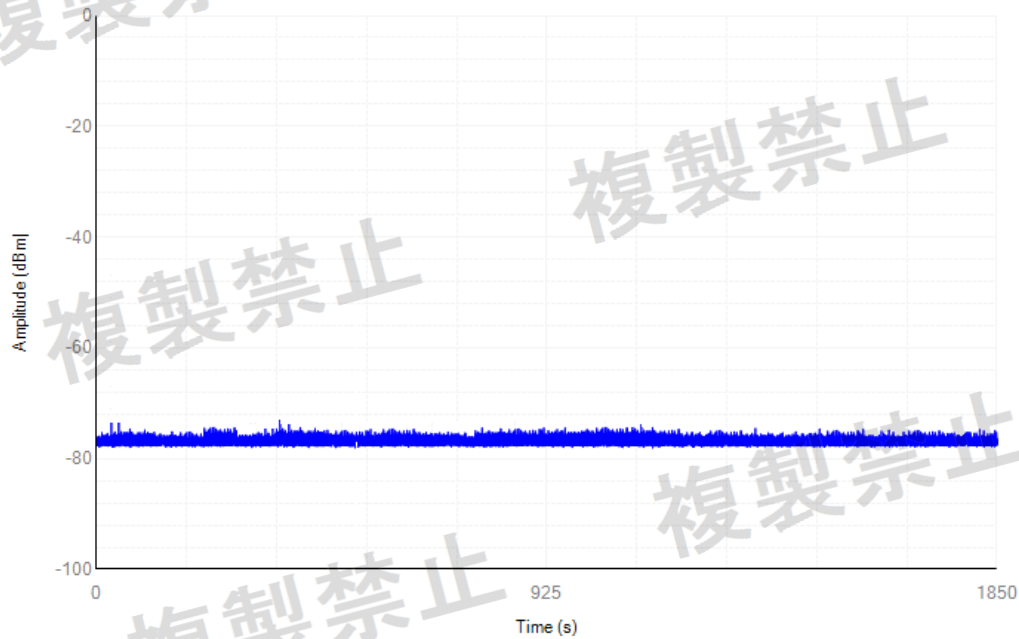


5320MHz a Non-Occupancy

Non-Occupancy period

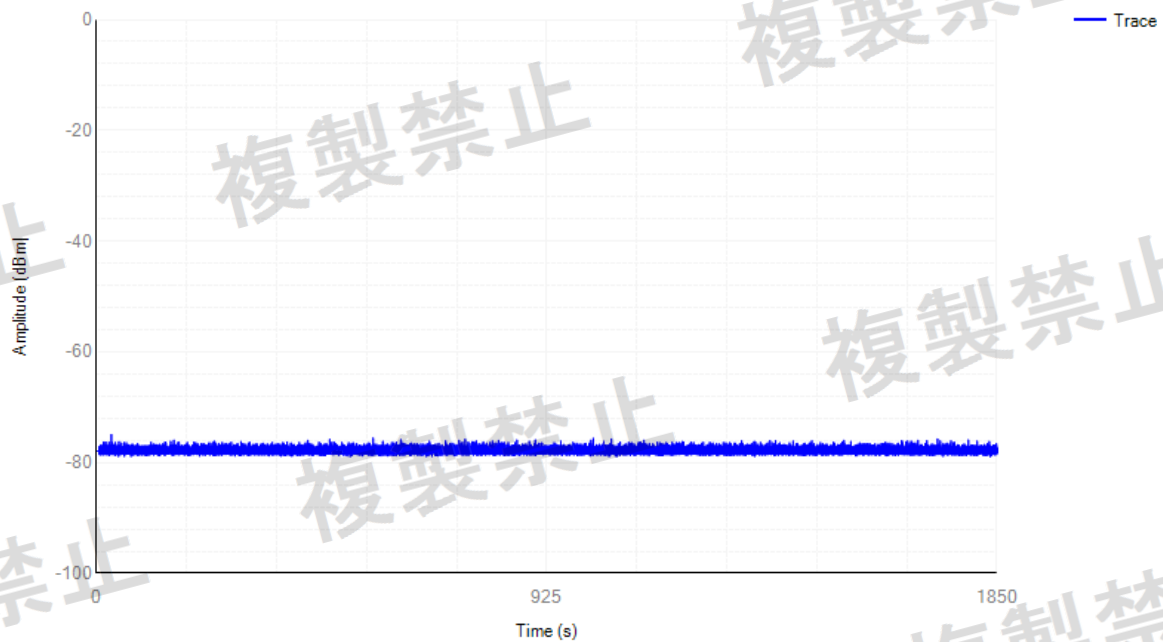


5510MHz n40 Non-Occupancy

Non-Occupancy period

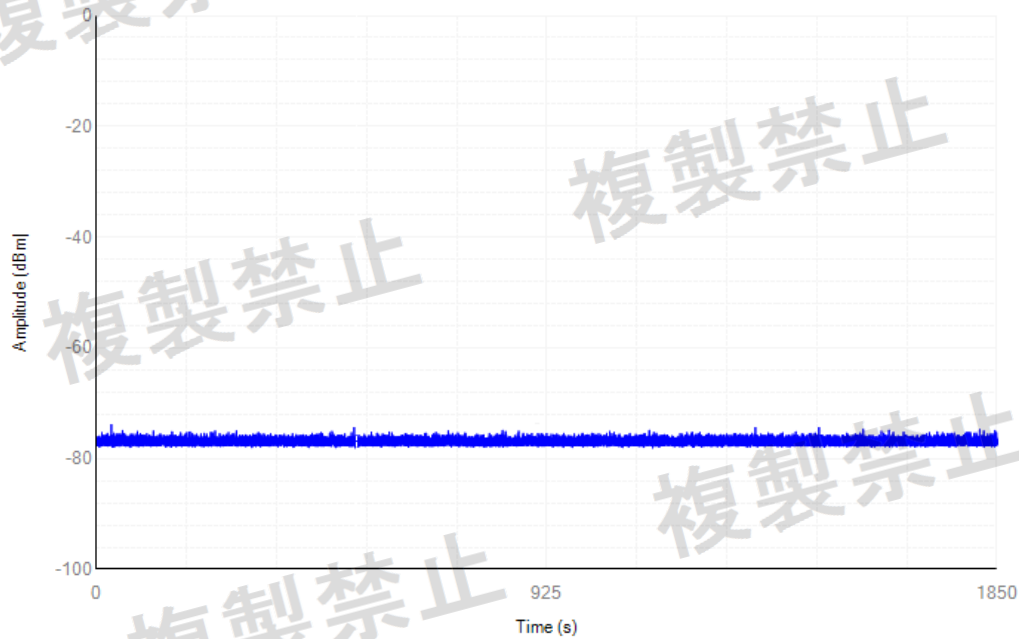

5500MHz a Non-Occupancy

Non-Occupancy period

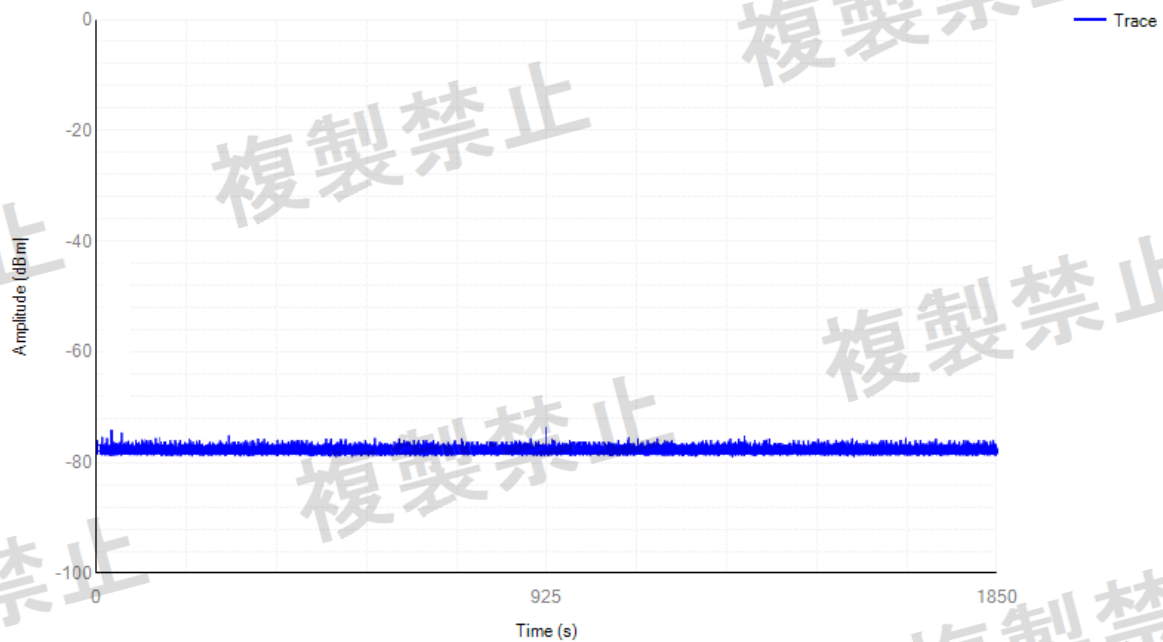


Shutdown Time


Mode	Frequency (MHz)	Channel Move Time (s)	Limit Channel Move Time (s)	Close Transmission Time (s)	Limit Close Transmission Time (s)	Verdict
ac80	5290	0.2896	10	0.0048	0.26	Pass
ac80	5530	0.2736	10	0.0056	0.26	Pass
n40	5310	0.031	10	0.0016	0.26	Pass
n40	5510	0.376	10	0.0072	0.26	Pass

a	5320	0.596	10	0.0268	0.26	Pass
a	5500	0.6276	10	0.0176	0.26	Pass

5290MHz ac80 Shutdown

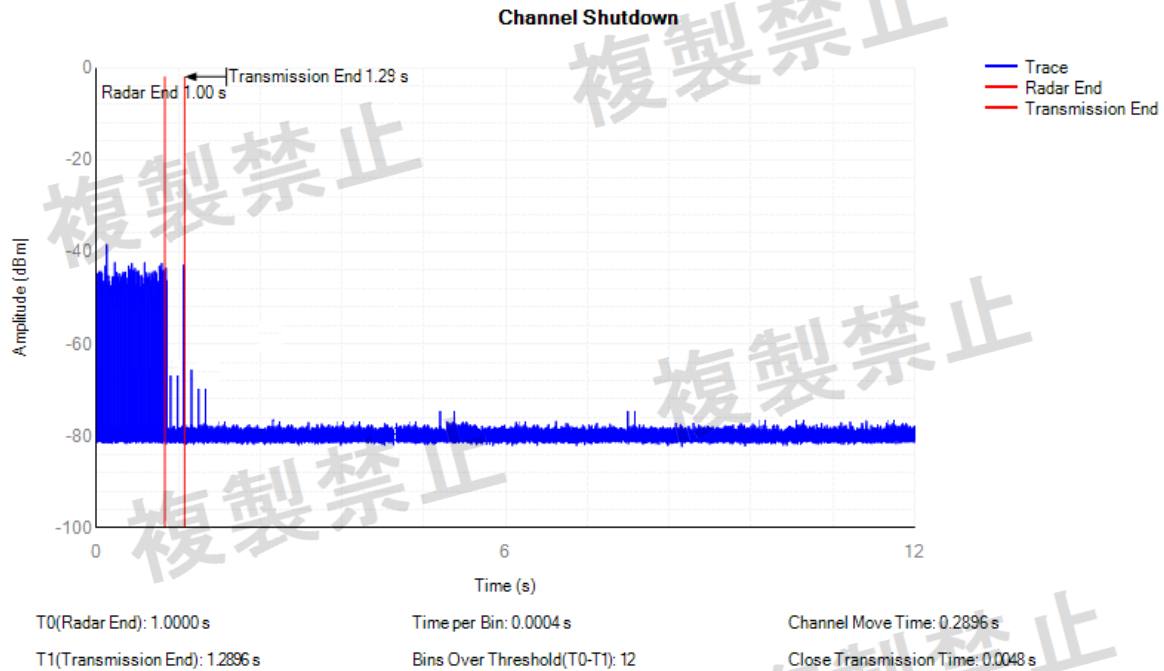


5530MHz ac80 Shutdown

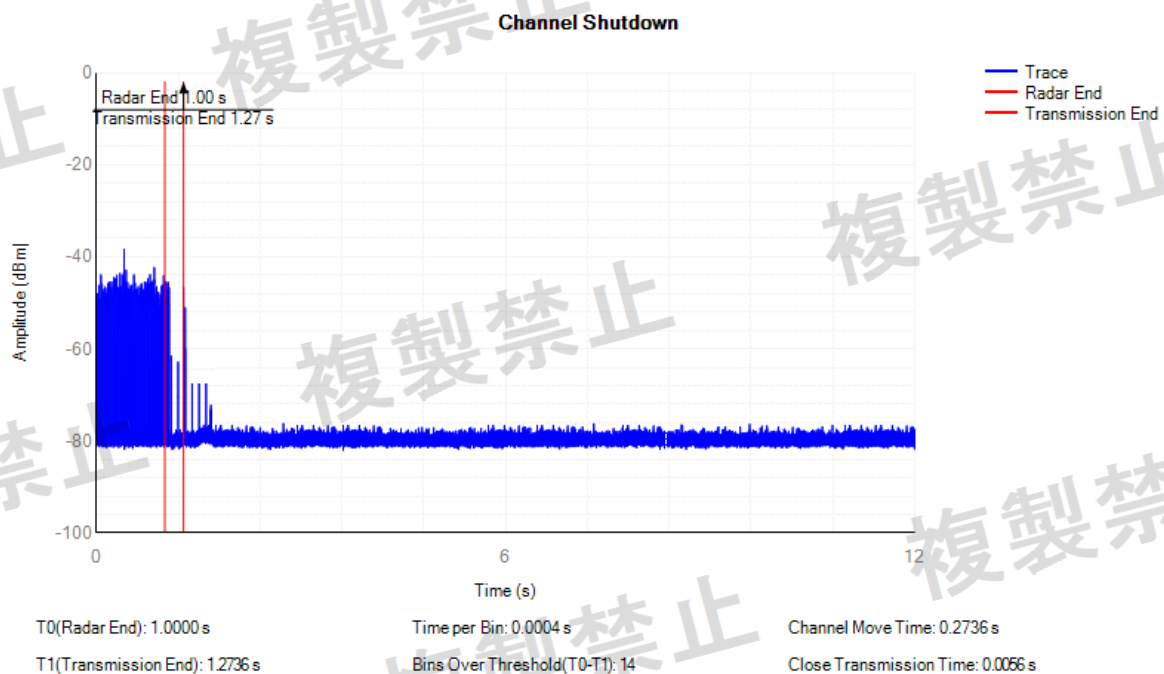


5310MHz n40 Shutdown

Channel Shutdown

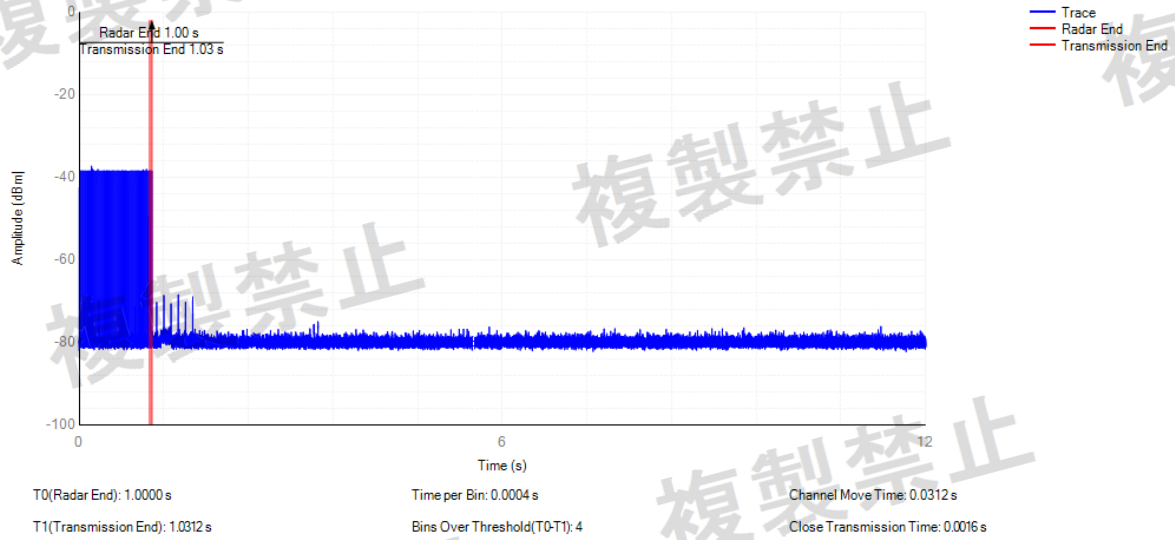


5510MHz n40 Shutdown

Channel Shutdown

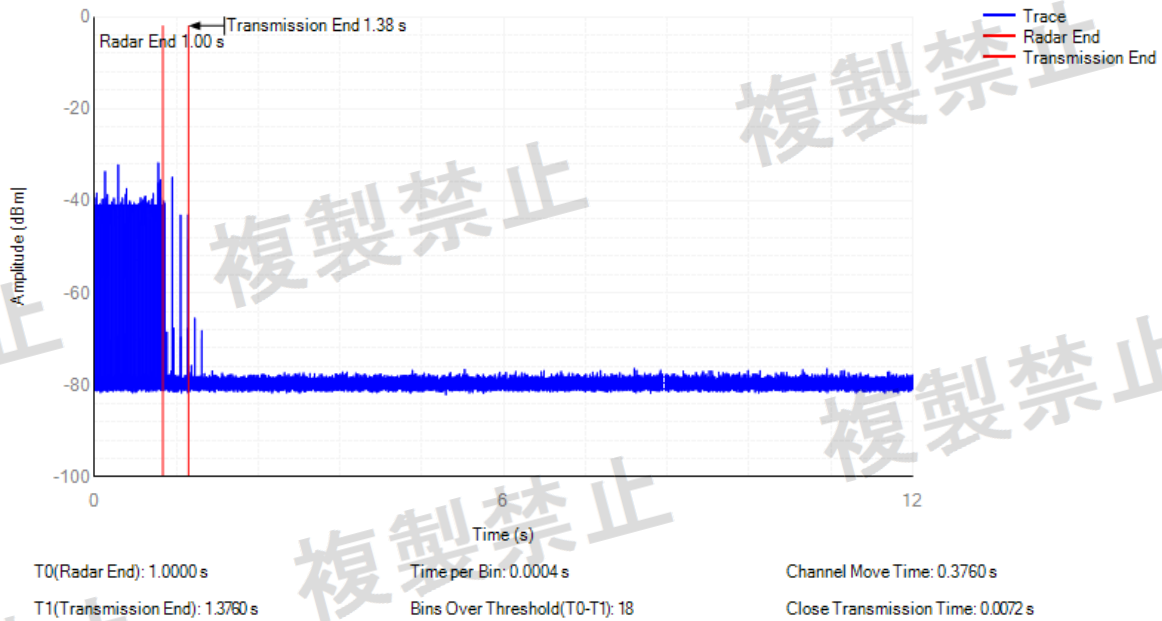

5320MHz a Shutdown

Channel Shutdown

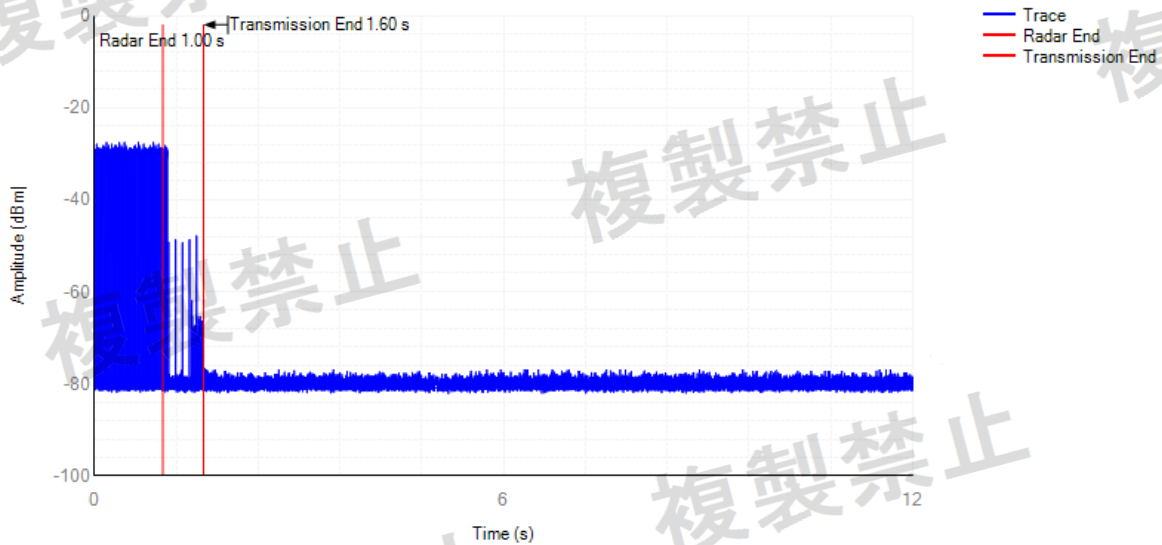

T0(Radar End): 1.0000 s

Time per Bin: 0.0004 s

Channel Move Time: 0.5960 s


T1(Transmission End): 1.5960 s

Bins Over Threshold(T0-T1): 67

Close Transmission Time: 0.0268 s

5500MHz a Shutdown

Channel Shutdown

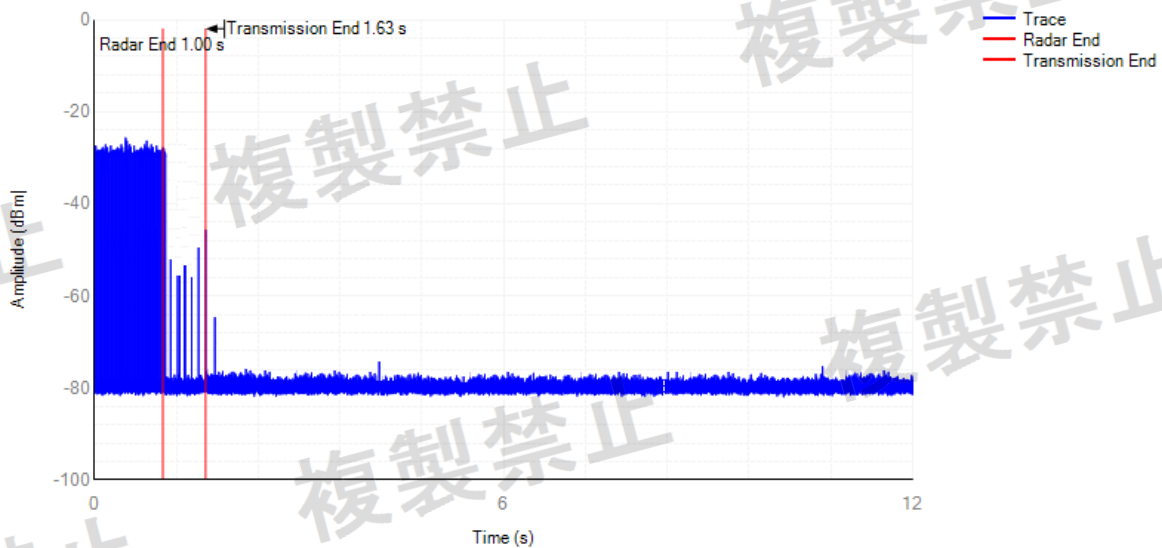

T0(Radar End): 1.0000 s

Time per Bin: 0.0004 s

Channel Move Time: 0.6276 s

T1(Transmission End): 1.6276 s

Bins Over Threshold(T0-T1): 44

Close Transmission Time: 0.0176 s