G710说明书:双面80g书写纸,表面不处理,单黑色双面印刷, 表面不做处理，展开尺寸：60X23cm，折叠成型尺寸：10x11.5cm

正面

G710游戏耳机用户手册
在使用时请保留本说明书，并妥善保存

SC

## 产品规格

蓝牙版本:V5.2
发射功率:CLASS2
无线连接范围:约10米
工作频率范围:2402~2480MHZ
耳机内置可充电锂电池容量:1000mAh
连接充电器规格:DC 5.0V 1000mA
正常充电时间:约3小时
耳机工作续航时间:约2小时(灯Logo灯状态下)
重量:≈285g(含保护)

## 产品功能

支持立体声音乐播放,播放/暂停,音量大小(上下选曲,麦克风关闭/开启等功能
支持电话:接听,挂断,拒接,来可重拨等常用功能
支持语音提示
实时耳机耳机重提示
支持HFP1.7, HSP1.2, A2DP1.3, AVRCP1.6
支持AAC, SBC音频解码
支持低延时游戏功能 (USB Dongle连接时)

## 耳机配套组成

1、耳机……1台
2、Type C充电线……1条
3、使用说明书……1份
4、USB蓝牙发射器……1只
5、麦克风杆……1支
6、单3.5mm插头连接线……1条

## 按键及接口定义

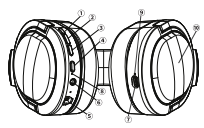


1、音量+/下一曲按键:
短按一次音量加一级;长按切换下一曲;音量达到最大时会有"Max volume"提示音。

2、多功能按键:
(1) 开机:长按约2秒开机,语音提示"Power on"。
(2) 关机:开机状态下,长按约1秒进行关机,语音提示"Power off"。
(3) 配对:关机状态下,长按约5秒进入配对状态,语音提示"Pairing"。
(4) 播放/暂停:在音乐播放时,单按一次为播放或暂停音乐。
(5) 接听/挂断来电:有来电时,短按一次为接听来电,长按1秒为拒接来电;通话时,短按一次为挂断当前通话。

3、音量-/上一曲按键:短按一次音量减一级,长按上一曲;音量减到最小时会有"Min volume"提示音。

4、麦克风开关/音效模式切换按键:
(1) 按一次为麦克风关闭,语音提示"MIC OFF";再按一次为麦克风打开,语音提示"MIC ON"。
(2) 游戏模式与音乐模式切换:长按3秒进行模式切换,有语音提示Gaming-mode或Music mode。

5、麦克风3.5mm接口:
需要插入麦克风杆才可正常使用麦克风功能。

6、Line IN 3.5mm音频输入接口:
连接入3.5mm音频头线,耳机即自动关机,耳机播放外设设备的信号。

7、Type C充电接口:
连接的充电器规格为DC5V/1000mA,插入充电时耳机会自动关机。

8、工作指示灯窗口:
(1) 开机显灯窗口
(2) 配对状态红蓝灯交替闪烁
(3) 来电时蓝灯快闪,接听电话后蓝灯长亮
(4) 低电量开机灯双闪3秒

9、充电状态指示窗口:
充电时长亮红灯,充满电后红灯熄灭,绿灯长亮。

10、左右耳壳灯光:
开机后按灯长亮,关机后熄灭。

## 基本操作说明

1、开机和配对
(1) 手动进入配对:在关机状态下,长按多功能键6秒,耳机开机后会直接进入配对状态。
(2) 在关机状态下,长按③按键约2秒后,蓝牙耳机进入开机状态(语音提示"Power on"),耳机开机后,有配对连接过的会先连入蓝牙,无配对连接过的则进入配对状态(语音提示Pairing),处配对状态下,手机等带蓝牙功能的设备可以搜索并连接耳机,连接成功后退出配对状态。
(3) 耳机进入配对状态后,工作指示灯窗口显示红蓝色指示灯交替快闪烁。打开手机的蓝牙功能,设置为可发现状态,并查询或搜索新设备,在搜索到设备清单中找到"G710",通过进行配对,随后耳机与手机连接成功,请按提示"Connected",即完成配对连接过程,连接成功后耳机的蓝色指示灯熄灭。
(4) 蓝牙发射器配对:蓝牙发射器插入到电脑的USB口,当设备识别完成之后,蓝色指示灯慢闪,再一直按住通过外壳的圆孔按压住内部的配对按键2秒,使蓝牙发射器进入配对状态,蓝色指示灯快闪,当蓝牙发射器与蓝牙耳机配对完成并成功连接后,请直接提示"Connected",蓝牙发射器的蓝色指示灯会长亮。
注:耳机进入"开"状,蓝牙耳机与蓝牙发射器已成配对时,相应开关射器插到电脑的USB口上,耳机开机后即会自动连接,无需手动连接即可使用,请勿上述步骤进行操作耳机或蓝牙发射器重新匹配连接。

2、关机
蓝牙耳机在开机状态,长按③按键约3秒,同时有"Power off"提示音,蓝牙耳机进入关机。

3、音量+/下一曲
在连接设备播放音乐状态下,短按①音量"+"按键1次,声音增加1格,音量达到最大时会有提示音"Max volume",长按住①音量"+"键,为音乐切换下一曲。

4、音量-/上一曲
在连接设备播放音乐状态下,短按②音量"-"按键1次,声音减少1级,音量达到最小时会有提示音"Min volume",长按住②音量"-"键,为音乐切换上一曲。

5、麦克风静音
通话状态时,按一次⑥为麦克风关闭,语音提示"MIC OFF",再按一次⑥为麦克风打开,语音提示"MIC ON"。

6、音效模式切换
游戏模式与音乐模式切换:长按④3秒进行模式切换,有语音提示Gaming mode或Music mode。

7、接打电话
当连接的手机有来电时,语音提示In coming call,耳机的蓝灯快闪,按③按键一次可实现接听来电,挂断电话时,耳机的蓝灯长亮,再按一次③则挂断电话,长按1秒为拒接来电功能。

8、尾号重拨
双击多功能按键③一次,本机通会自动重拨手机最后一个拨出去的电话号码。

9、低电提示
本机具有低电语音提示功能,当电池进入低电状态时,每隔4分钟就会有声音提示"Low Power",同时耳机的红色指示灯每3秒连续闪两次。

10、充电使用
耳机内置锂电池,建议您在首次使用耳机前对电池进行充电。
耳机使用中当电池电量过低时,耳机会听到"Low Power"提示音,请您及时充电。
将充电座头插入①充电Type C接口,耳机进入自动关机,此时充电指示窗口的红色指示灯长亮,充满电后,红色指示灯熄灭,并亮起绿色指示灯。

EN

## Product Specification

Bluetooth version:V5.0
Transmit power:CLASS2
Effective distance:≈10m
Frequency response:2402~2480MHZ
Lithium battery capacity:1000mAh
Charge port:DC 5.0V 1000mA
Charging time:≈ 3 h
Working time:≈28h (When the Logo light is on)
Weight:≈285g

## Product function

Support stereo sound,play/pause,volume up/down, previous/next track,mic on/off
Support phone: answer, hang up, reject, last number redial and other common functions
Support voice reminder operation
Support low battery reminder
Support HFP1.7, HSP1.2, A2DP1.3, AVRCP1.6
Support AAC, SBC audio decoding
Support low latency function(with USB Dongle connection)

## 售后服务

为不浪费您宝贵时间,在送修前请检查下列各项。

| 故障现象 | 可能原因 | 排除方法 |
|---|---|---|
| 无法开机 | 电池电量不足 | 及时给电池充电 |
| 无法配对 | 手机将未启动蓝牙功能或尚未打开"可发现"所状态 | 启动手机蓝牙功能并设置为"可发现"状态 |
| | 配对时,耳机离发射器距离太近 | 距离请不要超过1米 |
| | 电池电量不足 | 及时给电池充电 |
| 噪音大 | 电池电量不足 | 及时给电池充电 |
| 断音 | 1,耳机离发射器距离太远超出接收范围。<br>2,耳机离发射器距离之间有障碍物阻挡。 | 重新调整合适位置或环 |
| 接收距离短 | 1,发射器设备兼容性问题。<br>2,耳机离发射器距离之间有障碍物阻挡。 | 1,更换发射设备<br>2,重新调整合适位置或环 |

## 使用声明

1、充电过程中,请勿使用耳机。
2、在户外佩戴耳机时,请留安全的活动场地,道路,并调整合适的音量,注意交通安全。
3、请勿在驾驶机动车时使用耳机。

## 硕美科游戏耳机保修说明

### 保修条例

硕美科游戏耳机售后服务承诺:产格依据(中华人民共和国消费者权益保护法)、(修理人员共和国产品质量法)设计售后三包服务,服务内容如下:

在三包有效期内,您可依照本规定享受修理、换货、退货的权利。
修理、换货、退货的权利应出凭发票或有效销售凭证办理。

1. 自您签收日起7日内,产品出现品质问题,可享受退货、换货或者免费维修服务。
2. 自您签收日起8日-15日内,产品出现品质问题,可享受换货或者免费维修服务。
3. 自您签收日起12个月内,产品出现品质问题,可享受免费维修服务。

### 非保修条例

1. 已超过三包有效期;
2. 无法提供发票或有效销售凭证;
3. 发票或有效销售凭证上的产品信息与实物不相符;
4. 未经授权打维修,装卸或改造人为因素或因不可抗力造成的损坏。

## 注意事项

1. 本产品兼容微软Windows7/8/10,安卓Android,苹果MAC与IOS操作系统。
适配XBOX与PS4主机。如果在本列明的操作系统和设备上使用,导致无法正常工作,可联系售后服务寻求解决。
2. 产品使用过程中,如果出现部件受损,如线缆破皮等,请停止使用并寻找有维修资质的人员或售后服务解决,以免造成不必要的损失;
3. 本产品可能与部分品牌的延长线声卡不适配,如果因使用延长线而引起冲突,可联系售后服务寻求解决;
4. 使用本产品时,如果遇到驱动兼容性问题,可联系售后服务寻求解决。

## 产品保修卡

尊敬的顾客:
您好!申请售后时,请根据您的实际情况填写产品保修卡,并把产品与产品保修卡一同寄回类型所购产品的商家处,谢谢!

1. 请勾选进行售后的原因:
☐功能不好 ☐不够美观 ☐佩戴不舒适
其他:_____
2. 请勾选您所购的售后选项:
☐换机 ☐维修 ☐退货
3. 请您给我们提供宝贵的意见:_____
注:具体售后政策请咨询商家。

请填写以下资料(以下均为必填)

产品信息
产品型号:_____
产品序列号:_____
购机信息
订单编号:_____
购买账号:_____
用户姓名:_____
联系电话:_____
回邮地址:_____

Headphone accessory

Headset……1pcs
Type C cable……1pcs
manual……1pcs
USB dongle……1pcs
MIC Boom……1pcs
3.5mm cable……1pcs

Button instruction

背面

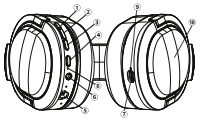


## Headphone accessory

1. Volume "+" button:short press the volume plus level 1, long press to switch the next song; the maximum volume has a "Max volume" prompt sound.

2. multi-function button "MFB":
(1) Turn on: long press about 2 seconds on, voice prompt "Power on"
(2) Turn off: when turn on status, shut down for about 3 seconds, voice prompt "Power off".
(3) Pairing: under the shutdown state, press for about 6 seconds to enter the pairing state, with the voice prompt "Pairing".
(4) Play / pause: When the music is played, press once to play or pause the music.
(5) Answer / hang up calls: when there is a call, press once to answer the call, 1 second to refuse to call; when call, press once to hang up the current call.

3. Volume "-" button: short press the volume reduction level 1, long press to switch to a song; volume reduction to the hour will have "Min volume" prompt.

4. Microphone mute button:
(1) press once to close the microphone, voice prompt "MIC OFF";
press to open the microphone again, voice prompt "MIC ON".
(2) Press long for 2 seconds to switch between game mode and music mode, with a voice prompt of "Gaming mode" or "Music mode".

5. MIC 3.5mm interface: Need to insert MIC boom can only use MIC function.

6. Line IN 3.5mm audio input interface:When the 3.5mm plug line is inserted, the headset is automatically turned off, and the headset plays the signal of the external device.

7. Type C charging interface:The connected charger specification is automatically shutdown when DC5V, is plugged into charging.

8. Headset working indicator light:
(1) Power on the blue light will slow flash.
(2) During Paring status,red&blue light will alternative flash.
(3) Blue light will fast flash when phone incoming call while it will keep lighting when answer the phone.
(4) Red light will double flash every 3s in low battery .

9. Charging status indicator:When in charging the indicator light will show red color all the time while it turns into green color after full charge.

10. Left/Right earlap logo LED light:When turn on the headphone,the logo LED light will automatic lighting.

## Basic Operation Instruction

1. Turn on&Paring.
(1) Manually enter matching: In the shutdown state, long press the "multi-function" button for 6 seconds, the headset will directly enter the pairing state after it is turned on.
(2) Hold down the "multi-function" button for about 2 seconds in shutdown mode, the Bluetooth headset enters the power-on state (voice prompt "Power on"). When the headset is powered on, Paired will be connected firstly; those never paired enter pairing state (voice prompt Pairing). In the pairing state, devices with Bluetooth function, such as mobile phones, can search for and connect to the headset, and exit the pairing state after the connection is successful.
(3) After the earphone enters the pairing state, the red and blue indicator light flashes alternately in the work indicator window. Turn on the Bluetooth function of the mobile phone, set it to discoverable state, and add or search for a new device. Find "G710" in the device list, and select pair. Then the headset connects to the mobile phone successfully, and the voice prompt "Connected" is displayed, that is, the pairing process is complete.
(4) Bluetooth transmitter pairing:Bluetooth transmitter is inserted into the computer USB port, when the equipment identification is completed, the blue lights flash slowly, with a thimble by pairing inside the shell of the round hole pressing button for 2 seconds, pairing bluetooth transmitter into the state, the blue indicator light flash, when the bluetooth transmitters and bluetooth headset paired and Connected successfully finished, voice prompt "Connected", The blue light on the Bluetooth transmitter will light up.

Remark: The Bluetooth headset and the Bluetooth transmitter have been paired at the factory settings. Plug the Bluetooth adapter into the USB port of the computer, and the headset will automatically connect after it is turned on.If it can't match,pls follow previous step to re-match again for headphone and USB dongle.

2. Power off
When the Bluetooth headset is on, long press the "⏻" button for about 3 seconds, and at the same time, there will be a prompt tone of "Power off", and the Bluetooth headset will turn off.

3. Volume +/ Next track
When the device is connected to play music, press the volume "+" button once to increase the sound level by one level. When the volume reaches the maximum, there will be a prompt sound "Max volume". Hold the volume "+" key long to switch to the next track for the music.

4. Volume -/ Last song
When the device is connected to play music, press the volume "-" button once to reduce the sound level by 1. When the volume reaches the minimum, there will be a prompt sound "Min Volume". Hold down the volume "-" button long to switch to the previous track.

5. Mute MIC
During a call, press the "🎤" button once to turn OFF the microphone, and the voice prompt "MIC OFF" will be displayed. Press the "🎤" button again to open the microphone, and the voice prompt "MIC ON" will be displayed.

6. Mute MIC
Hold down the "🎤" button for 2 seconds to switch modes. A voice prompt will prompt Gaming mode or Music Mode.

7. Calls
When the connected mobile phone has an incoming call, the voice prompts "In coming call", and the blue light of the headset flashes.Press "⏻" button once to answer the call. When answering the call, the blue light of the headset will be always lighting, press "⏻" button again to hang up the call, press and hold "⏻" for 1 second to reject the call.

8. Last number redial
Short press the "⏻" multifunction button twice in succession, the machine will automatically redial the last phone number dialed by the mobile phone.

9. Low power warning
This machine has a low-power voice prompt function. When the battery enters a low-power state, there will be a voice prompt "low power" every 4 minutes, and the red indicator light of the headset flashes twice every 3 seconds.

10. Charging instructions
(1) The headset has a lithium battery, and it is recommended for you to charge the battery before first using the headset.
(2) When the battery power of the headset is too low during use, there will be a "Low Power" prompt sound, please charge it in time.
(3) Insert the charging plug into the TypeC port and the headset will automatically shut down. At this time, the charging red indicator light will be on. When it is fully charged, the red indicator light will turn off and the green indicator light will stay on.

11. Bluetooth transmitter instructions
(1) The Bluetooth headset and the Bluetooth transmitter have been paired at the factory settings. Plug the Bluetooth adapter into the USB port of the computer, and the headset will automatically connect after it is turned on. If you cannot connect, please confirm whether the headset is connected to your mobile phone. If it is connected to the mobile phone, please disconnect the Bluetooth connection of the mobile phone, then insert the bluetooth transmitter into the USB of the computer and reconnect the headset.

(2) How to re-pair the Bluetooth transmitter with the headset: Insert the Bluetooth transmitter into the USB port of the computer. After the device is recognized, the blue indicator light flashes every 2 seconds. Use a paperclip to press the internal pairing button through the small hole of the shell 2 seconds to make the Bluetooth transmitter enter the mandatory pairing state (the blue indicator light of the Bluetooth transmitter flashes every 0.5 seconds).
When the headset is turned off, press and hold the "MBF" button for 6 seconds to make the headset enter the pairing state.
After the Bluetooth transmitter and the Bluetooth headset are paired and successfully connected, there.
will be a voice prompt "Connected", and the blue indicator light of the Bluetooth transmitter will be on.

12. Headset restores the factory setting
under the shutdown state, long press "MFB" button for 10 seconds to sound the prompt "beep" when the factory setting is completed. The blue light and red light of the headset double flash 3 times at the same time.(Note: Headphone recovery from factory settings removes all previous pairing information)

Warm tips:
To maintain the normal life of the battery, ensure that the product is used at least once or more in 2 weeks and replenish the power after use.

## Notes

1. Do not use the headphones during charging.
2. When wearing headphones outdoors, choose a safe sports field, road, and adjust the appropriate volume, pay attention to traffic safety
3. Do not use headphones while driving a motor vehicle.

## Basic Operation Instruction

To avoid wasting your valuable time, pls check the following before sending repairs.

| Fault phenomenon | Possible reasons | Exclusion method |
|---|---|---|
| Unable to boot | The battery power is insufficient. | Charge the battery in time. |
| Unable to Paring | The phone has not yet enabled the Bluetooth function or has not yet opened the discoverable status. | Start Bluetooth and set to discoverable. |
| | When paired, the headphones are too far from the transmitter. | Please do not distance to more than 1 meter. |
| | The battery power is insufficient. | Charge the battery in time. |
| The noise is large | The battery power is insufficient. | Charge the battery in time. |
| Staccato | 1. The headset is too far from the transmitter, beyond the receiving range.<br>2. There is an obstacle between the headphones from the transmitter. | Resweak properly to listen. |
| The receiving distance is short | 1. Transmitter equipment compatibility issues.<br>2. There is an obstacle between the headphones from the transmitter. | 1. Replace the transmitting equipment<br>2. Reset the appropriate location to listen |

## Product Features

1. Headset is available in three connectivity modes (normal Bluetooth mode, Bluetooth low latency mode (with a transmitter) and 3.5mm wired mode) for a variety of scenarios and devices.
2. Headset has two sound modes of game and music, both listening to songs and games.
3. Thanks to 35ms super low latency,you can enjoy the game experience of audio and video synchronization.
4. Headphone microphone is a retractable microphone that can be adjusted according to the usage scenarios.
5. Headset is built-in 1000mA capacity battery with super long life and up to 50 hours without LED.
6. Headsets are ergonomic designed, tough appearance and domineering appearance.
7. Headphones feature large skin-click leather earcases for comfortable wear.

## Note

1. This product is compatible with Microsoft Windows 7/8/10, Apple Mac OS system, Android system and IOS system;
2. If it is not available on the operating system or equipment that is not listed, you can contact the after-sales service for a solution;
3. During the use of the product, if there is no sound from the microphone or headset, it may be caused by compatibility problems or improper use, and you can contact the after-sales service to find a solution;
4. During the use of the product, if any part is damaged, such as a broken cable, please stop using it and contact the after-sales service for a solution to avoid unnecessary losses.
5. During the use of the product, if the headset does not respond for a long time, you can use a sharp object such as a paper clip to press the headset reset button for 1 second, and the headset can be forced to shut down.
6. If you want to know more information, please visit Somic's official website www.itsomic.com.

G710 Manual Instruction
Please read this manual carefully when using it and save it

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.
Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.
NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.
If this equipment does cause harmful interference to radio or television reception,
which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:
-- Reorient or relocate the receiving antenna.
-- Increase the separation between the equipment and receiver.
-- Connect the equipment into an outlet on a circuit different
from that to which the receiver is connected.
-- Consult the dealer or an experienced radio/TV technician for help.
The device has been evaluated to meet general RF exposure requirement. The device can be u sed in portable exposure condition without restriction