Duty Cycle NVNT ax40 5190MHz Ant2

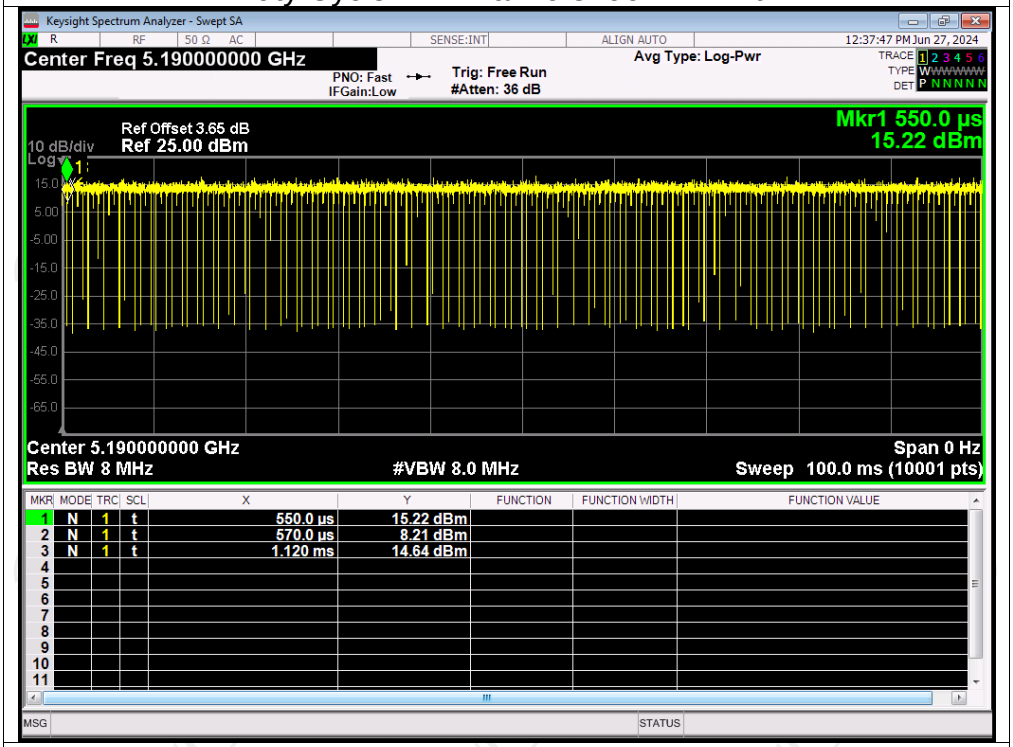

Duty Cycle NVNT ax40 5230MHz Ant2

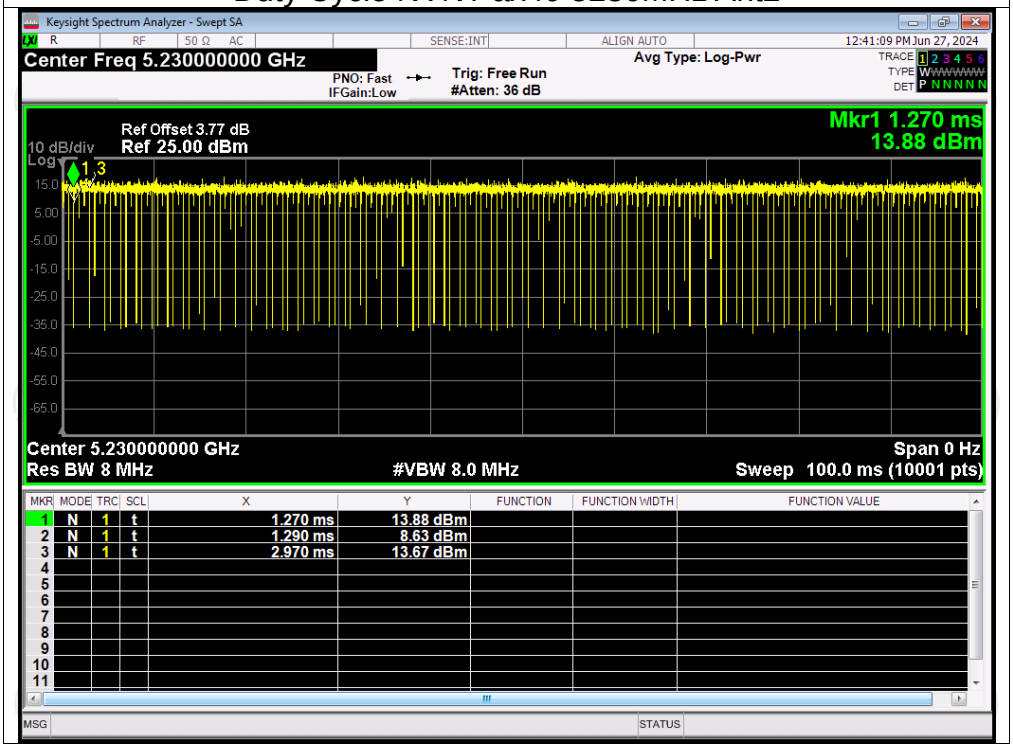

Duty Cycle NVNT ax80 5210MHz Ant2

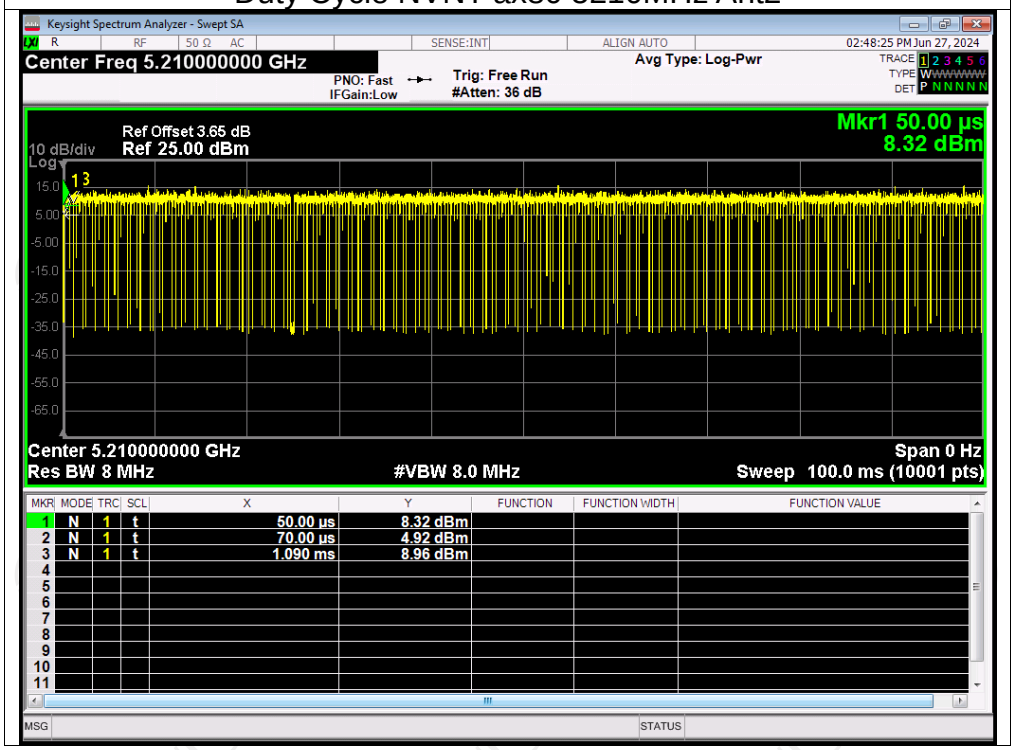

Test Graphs

Duty Cycle NVNT a 5260MHz Ant2

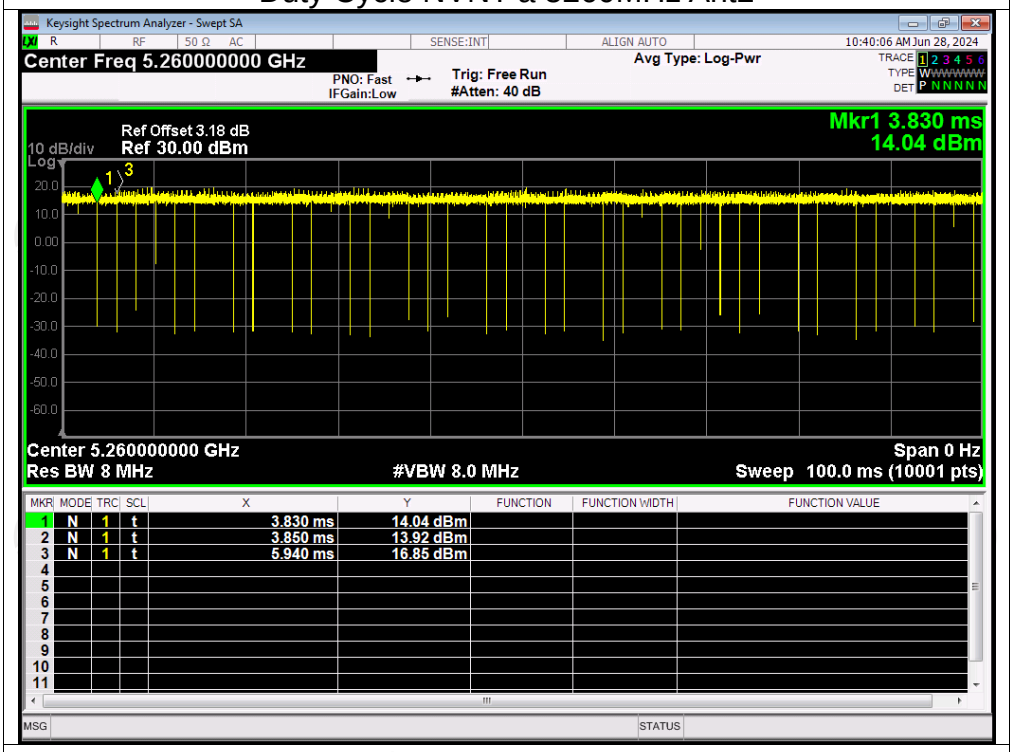

Duty Cycle NVNT a 5300MHz Ant2

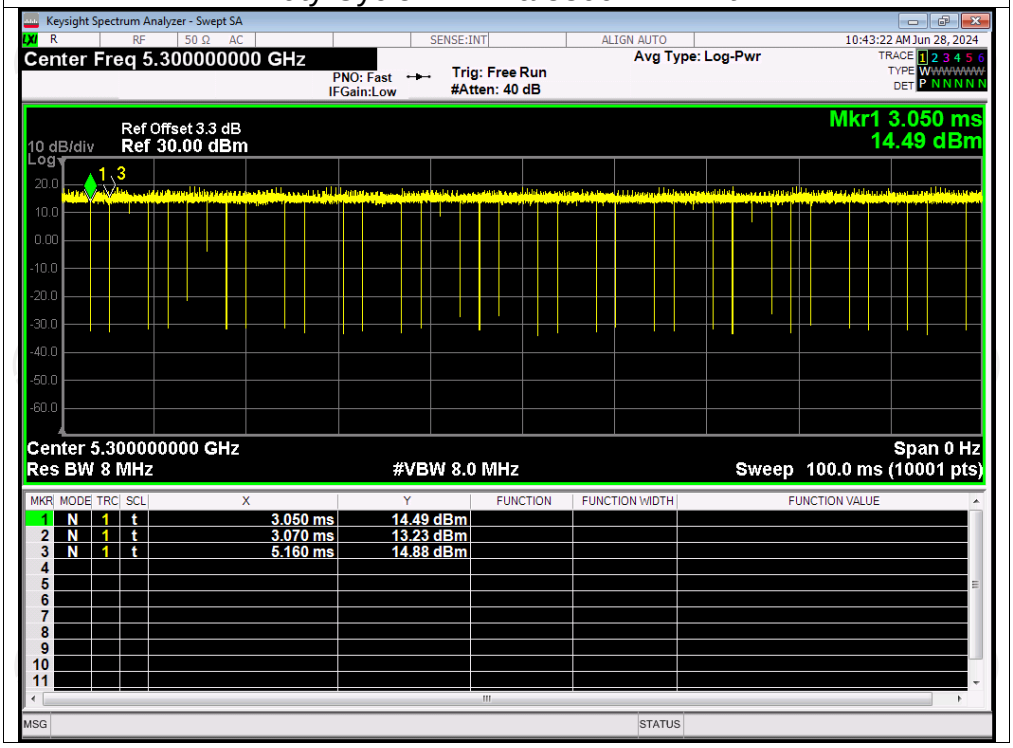

Duty Cycle NVNT a 5320MHz Ant2

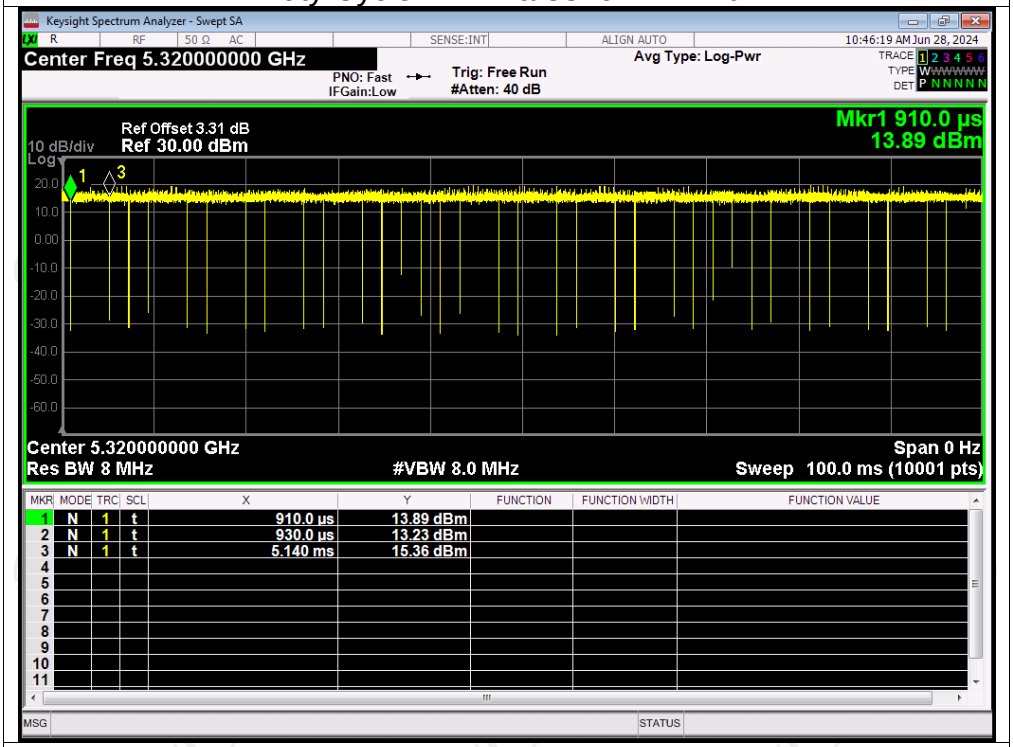

Duty Cycle NVNT n20 5260MHz Ant2

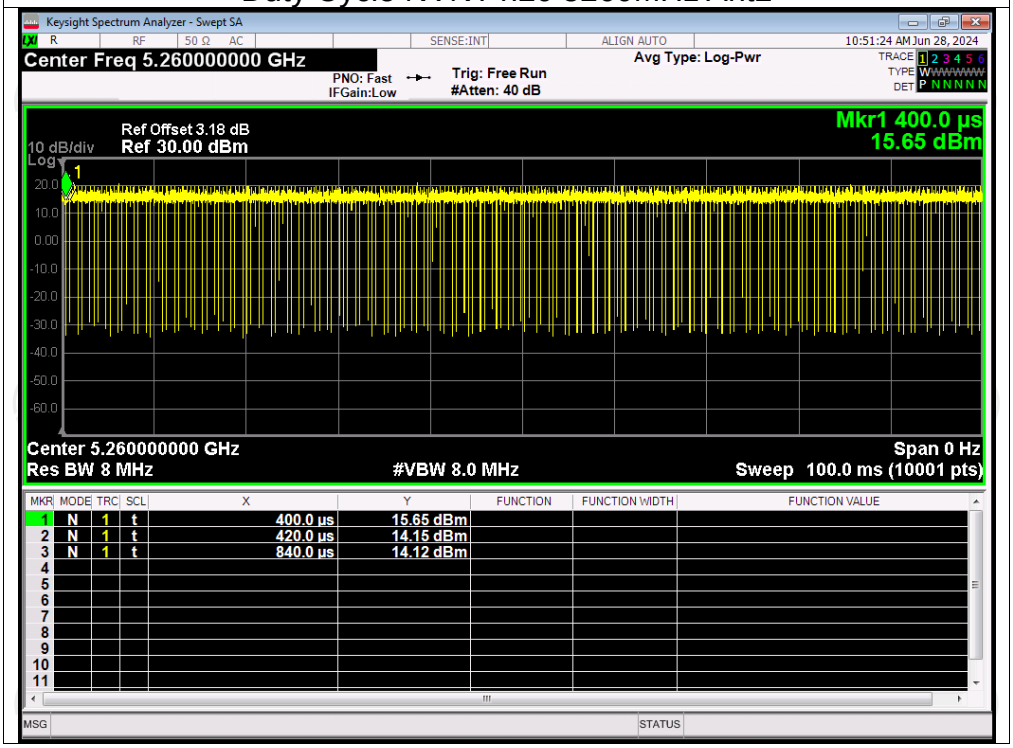

Duty Cycle NVNT n20 5300MHz Ant2

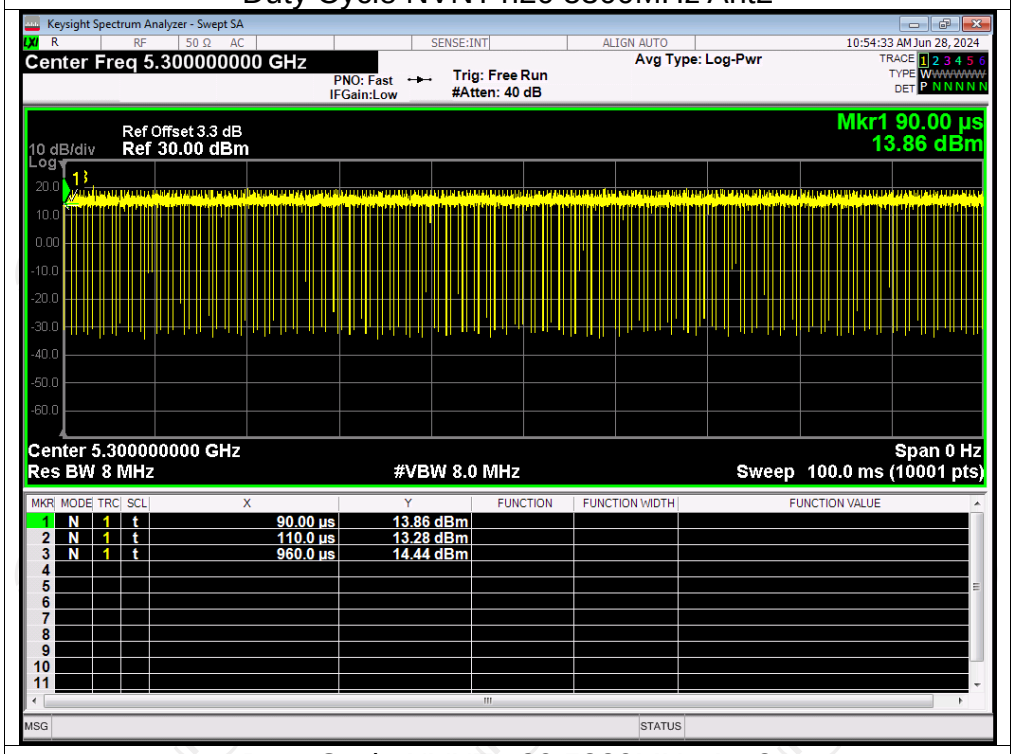

Duty Cycle NVNT n20 5320MHz Ant2

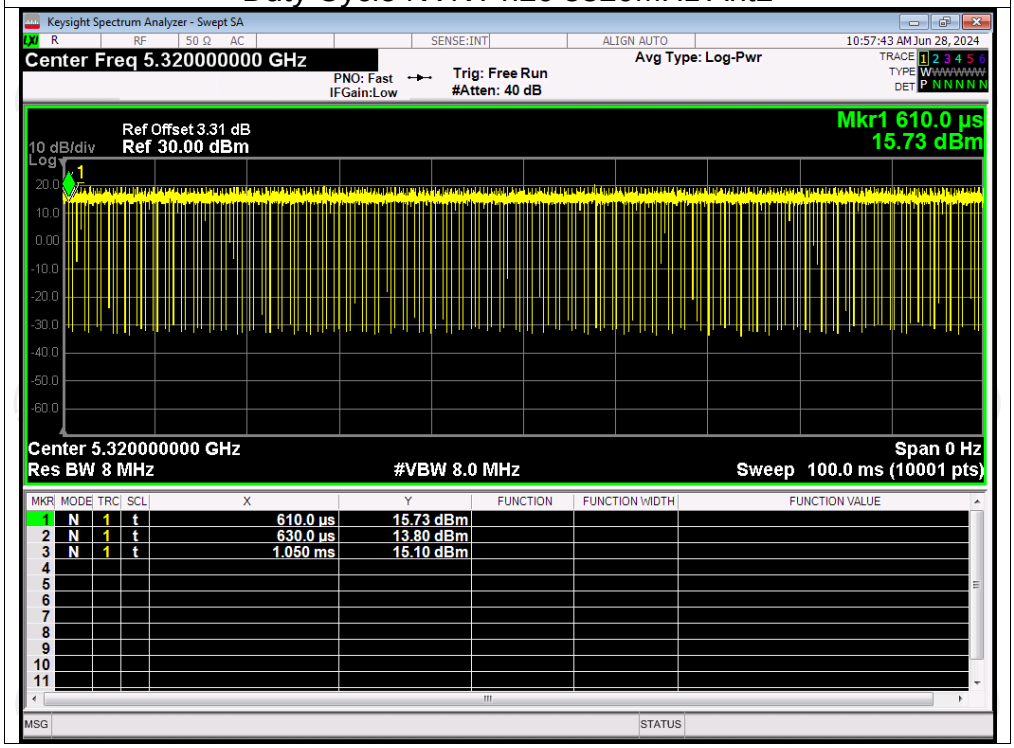

Duty Cycle NVNT n40 5270MHz Ant2

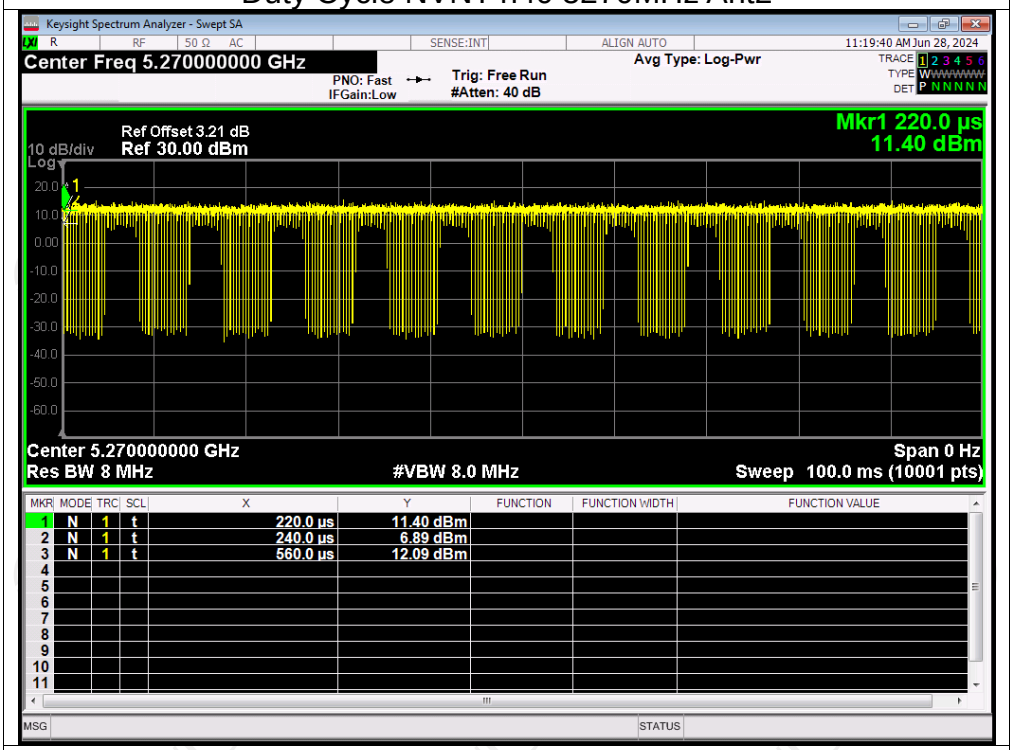

Duty Cycle NVNT n40 5310MHz Ant2

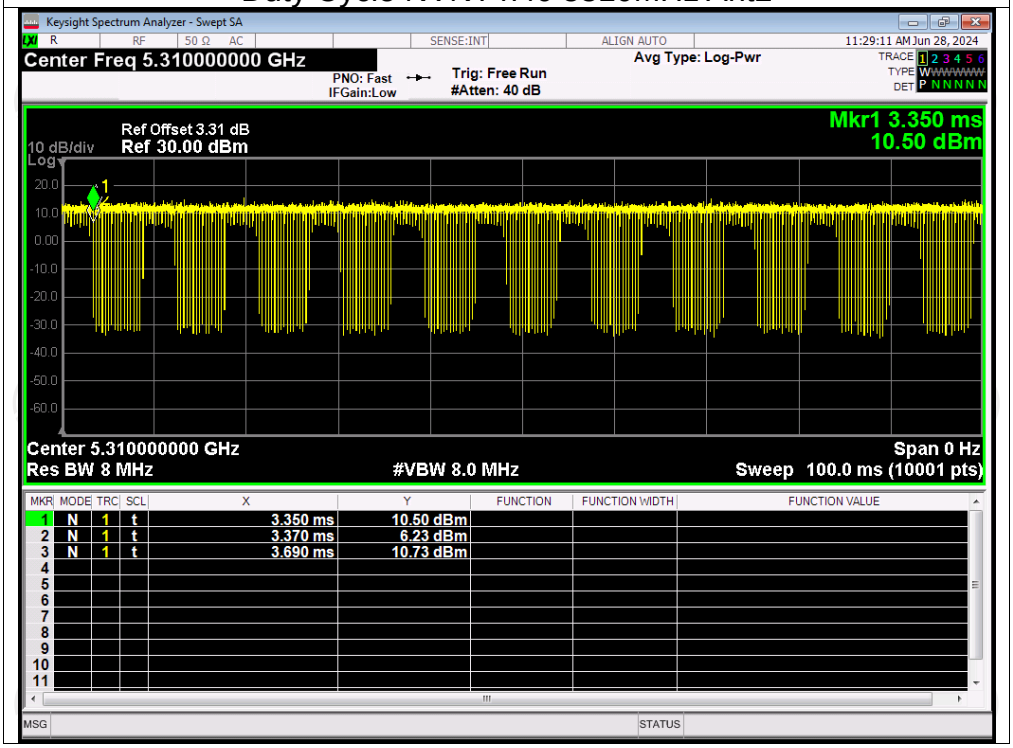

Duty Cycle NVNT ac20 5260MHz Ant2

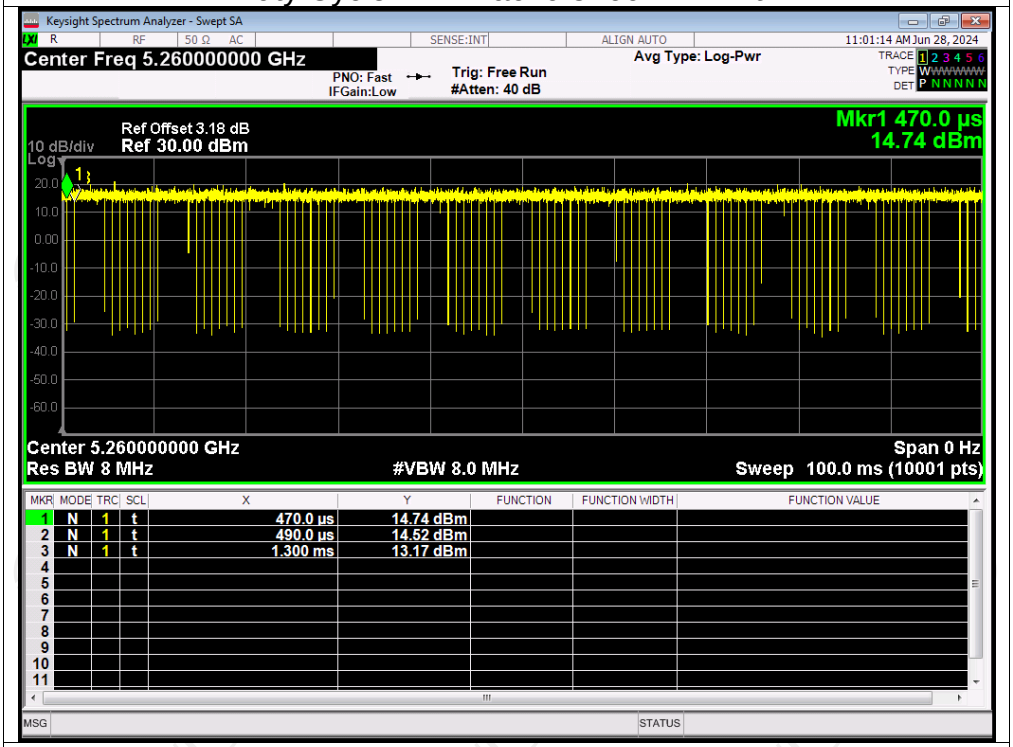

Duty Cycle NVNT ac20 5300MHz Ant2

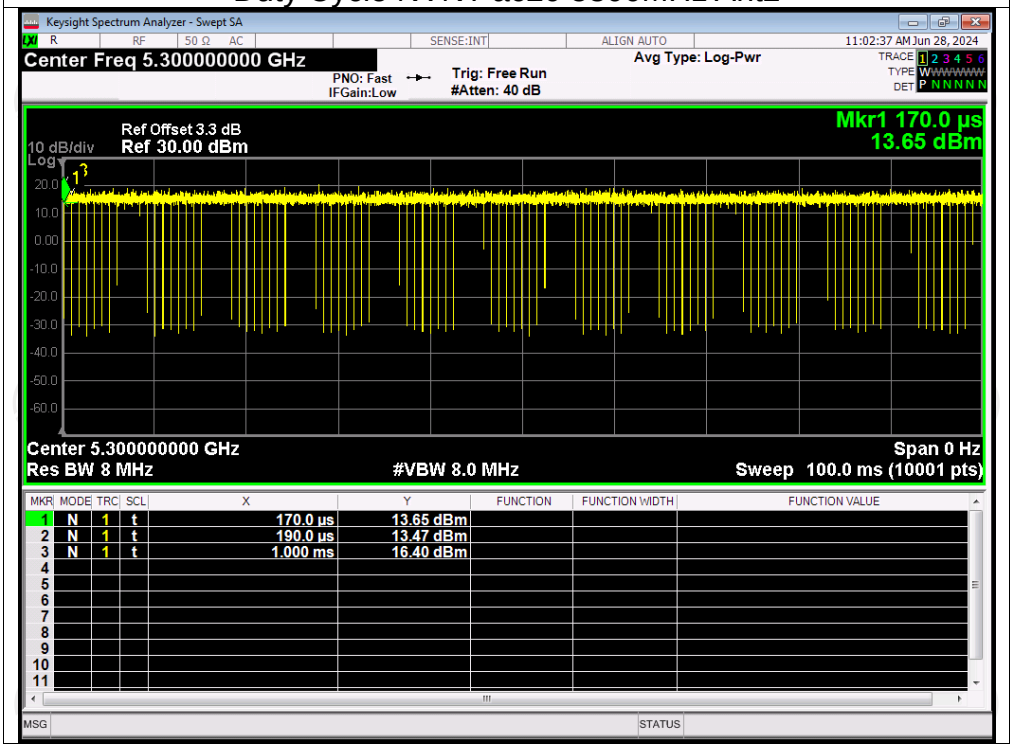

Duty Cycle NVNT ac20 5320MHz Ant2

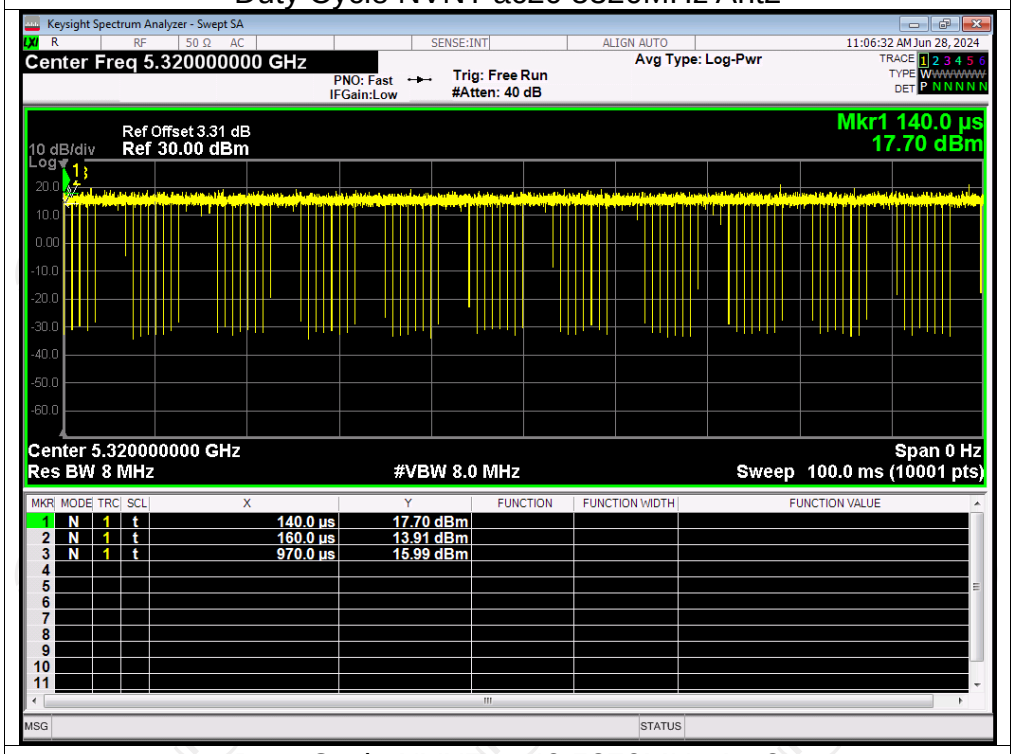

Duty Cycle NVNT ac40 5270MHz Ant2

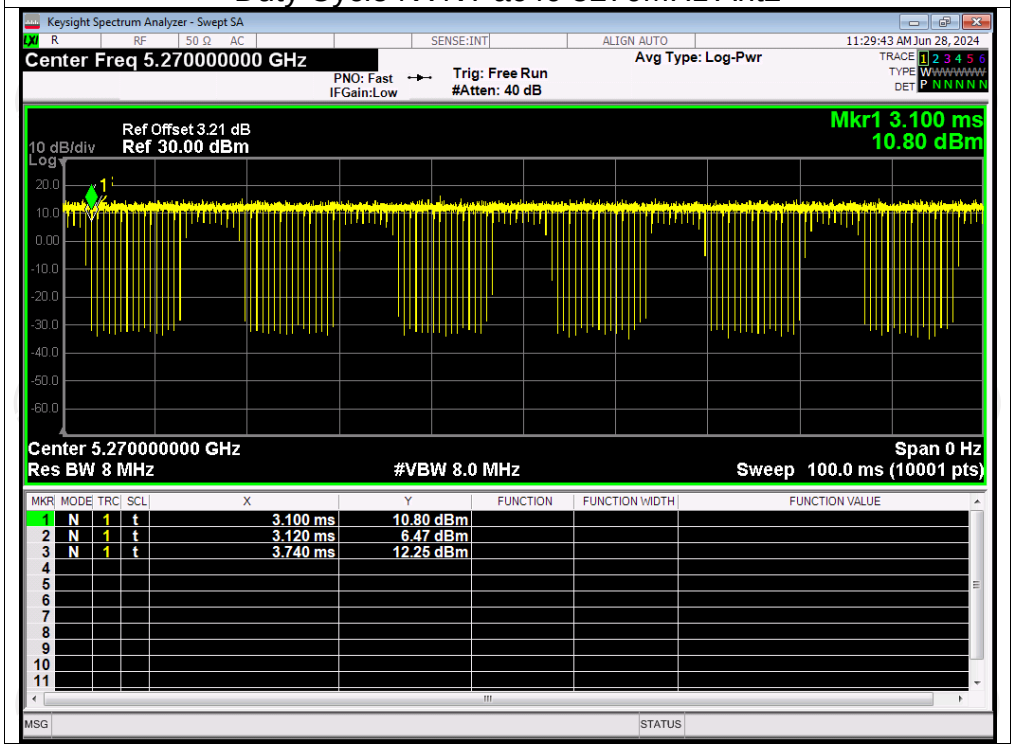

Duty Cycle NVNT ac40 5310MHz Ant2

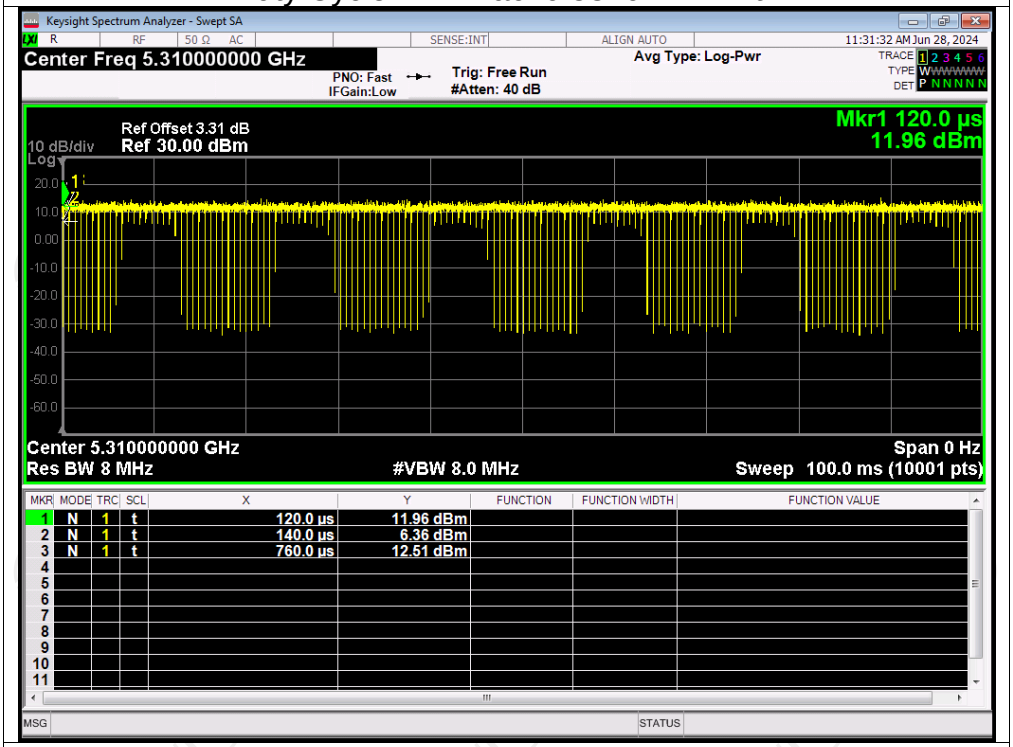

Duty Cycle NVNT ac80 5290MHz Ant2

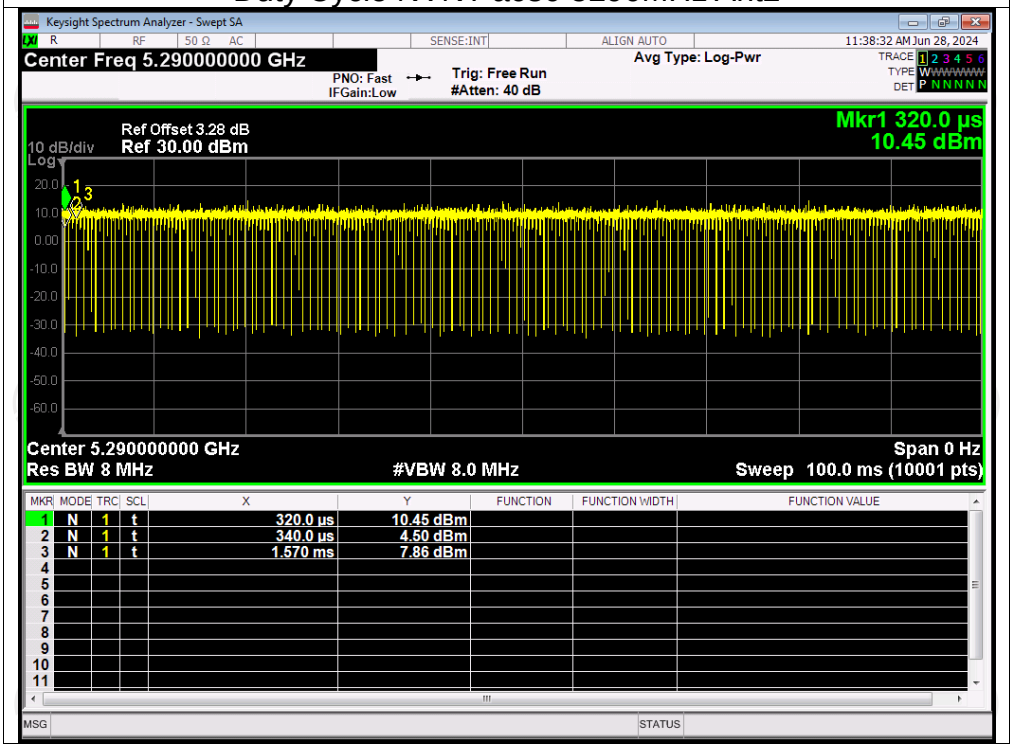

Duty Cycle NVNT ax20 5260MHz Ant2

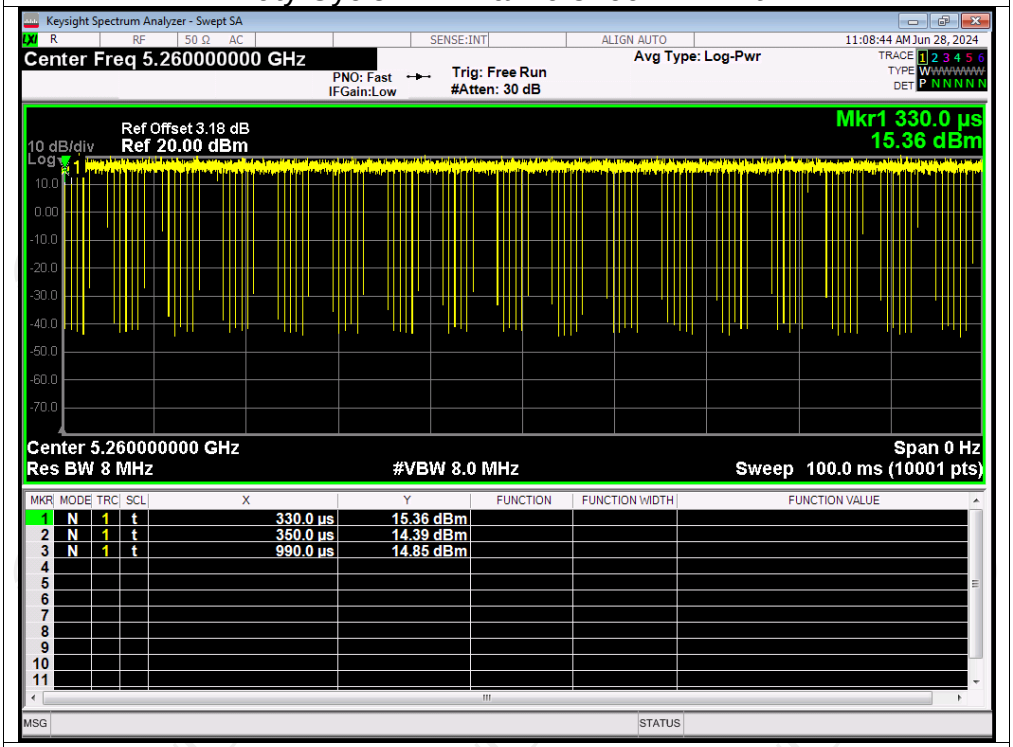

Duty Cycle NVNT ax20 5300MHz Ant2

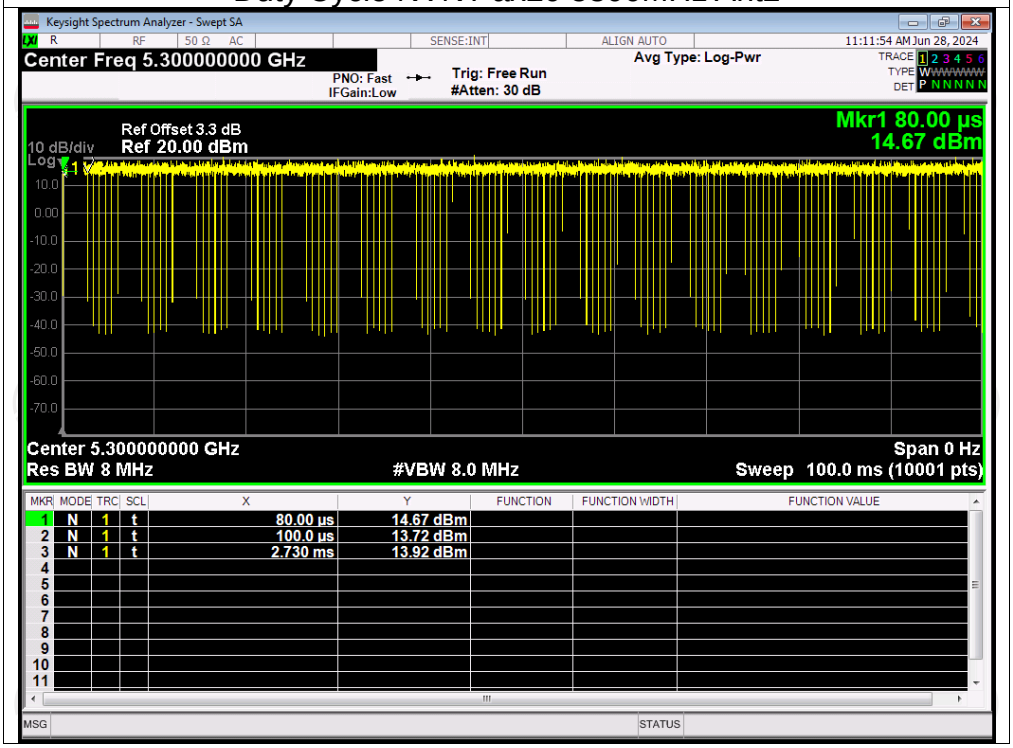

Duty Cycle NVNT ax20 5320MHz Ant2

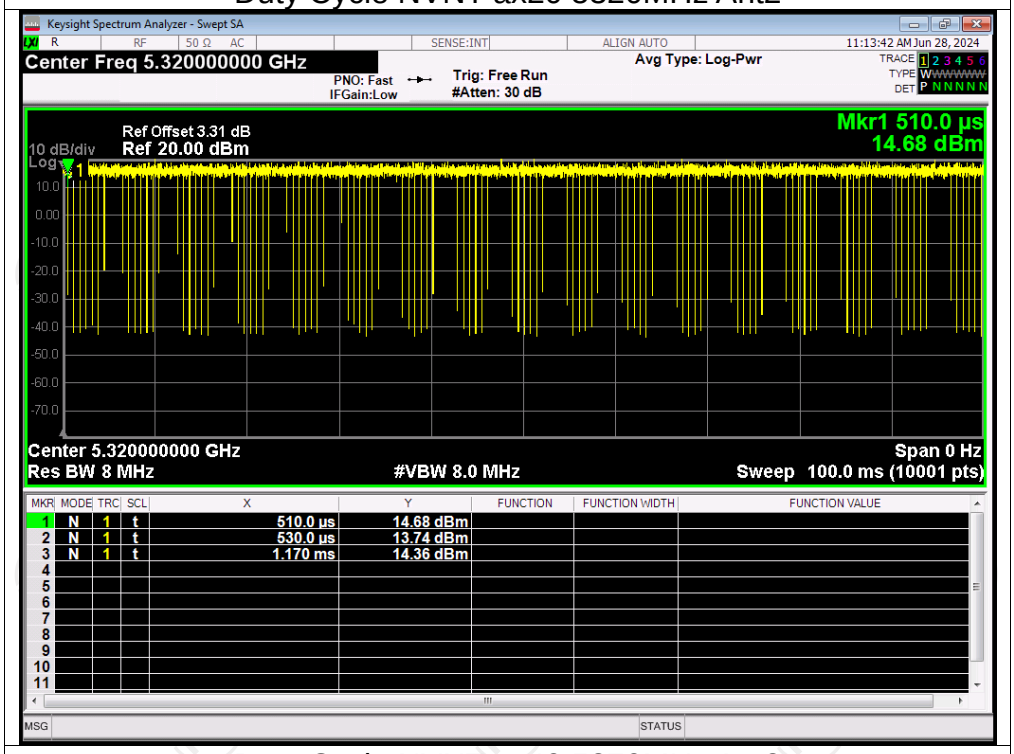

Duty Cycle NVNT ax40 5270MHz Ant2

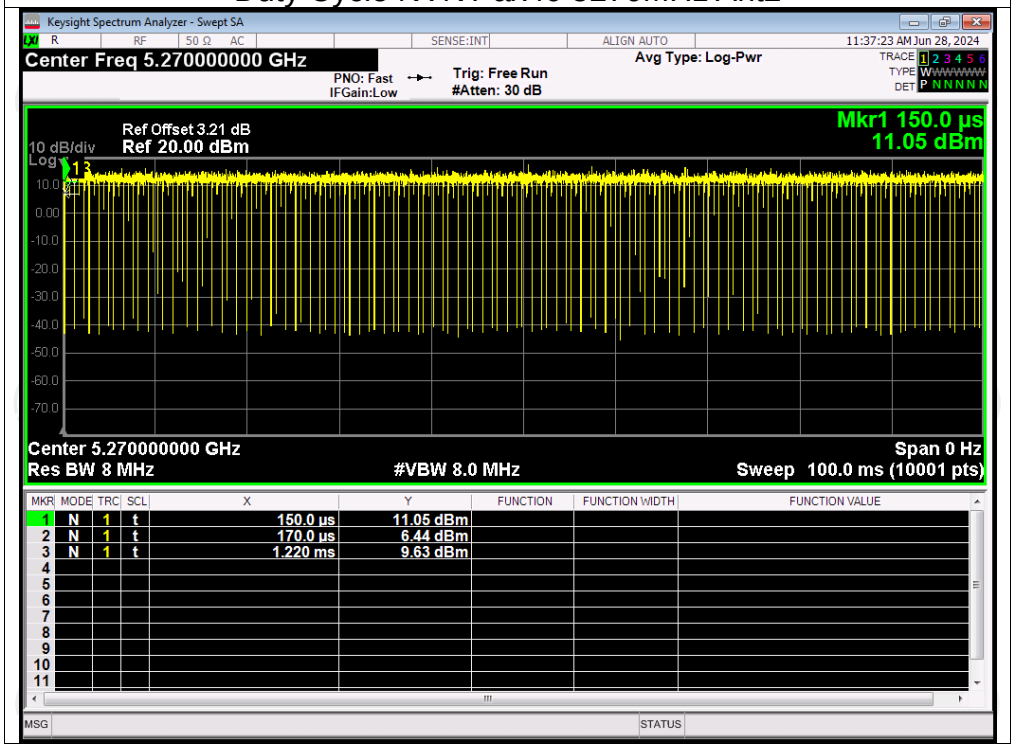

Duty Cycle NVNT ax40 5310MHz Ant2

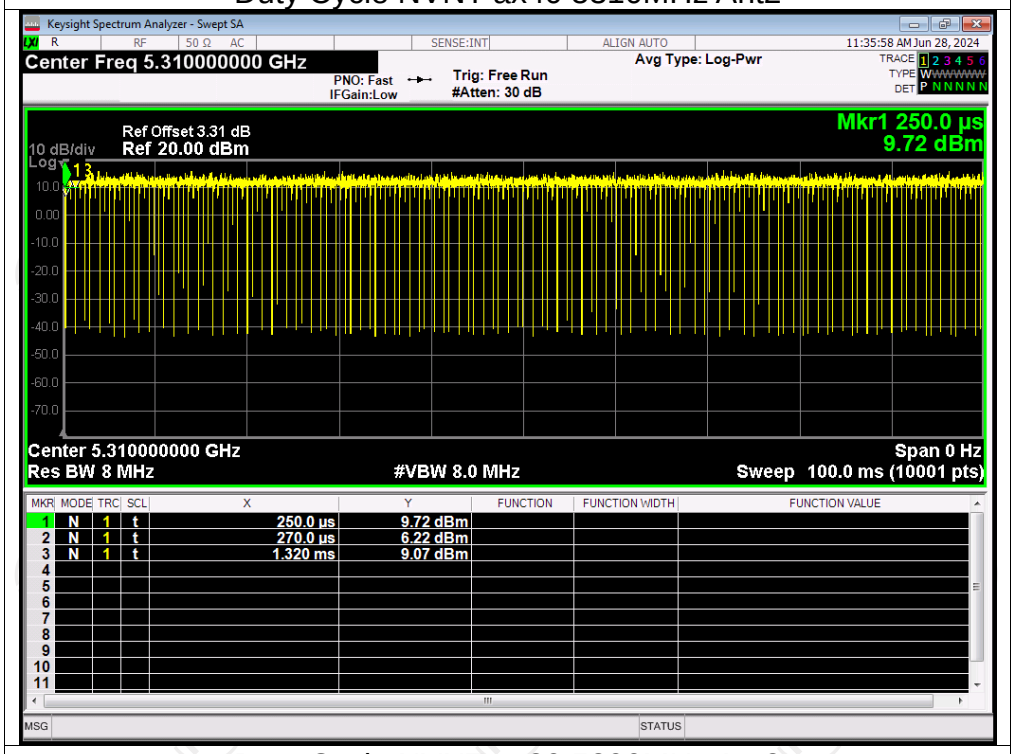

Duty Cycle NVNT ax80 5290MHz Ant2

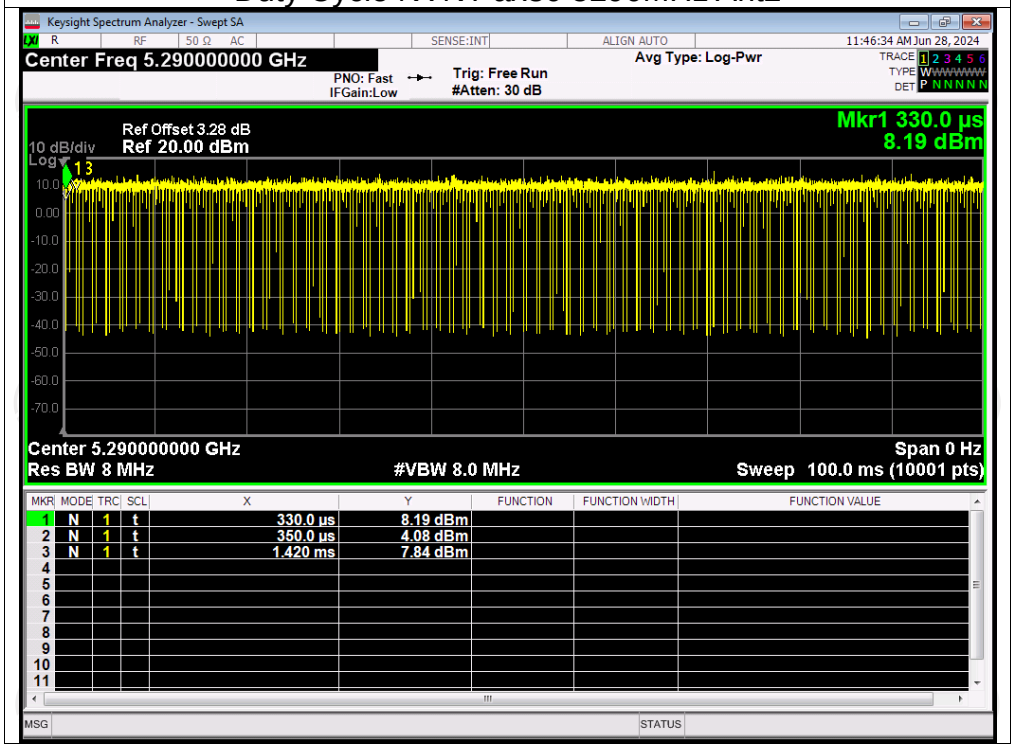

Test Graphs

Duty Cycle NVNT a 5500MHz Ant2

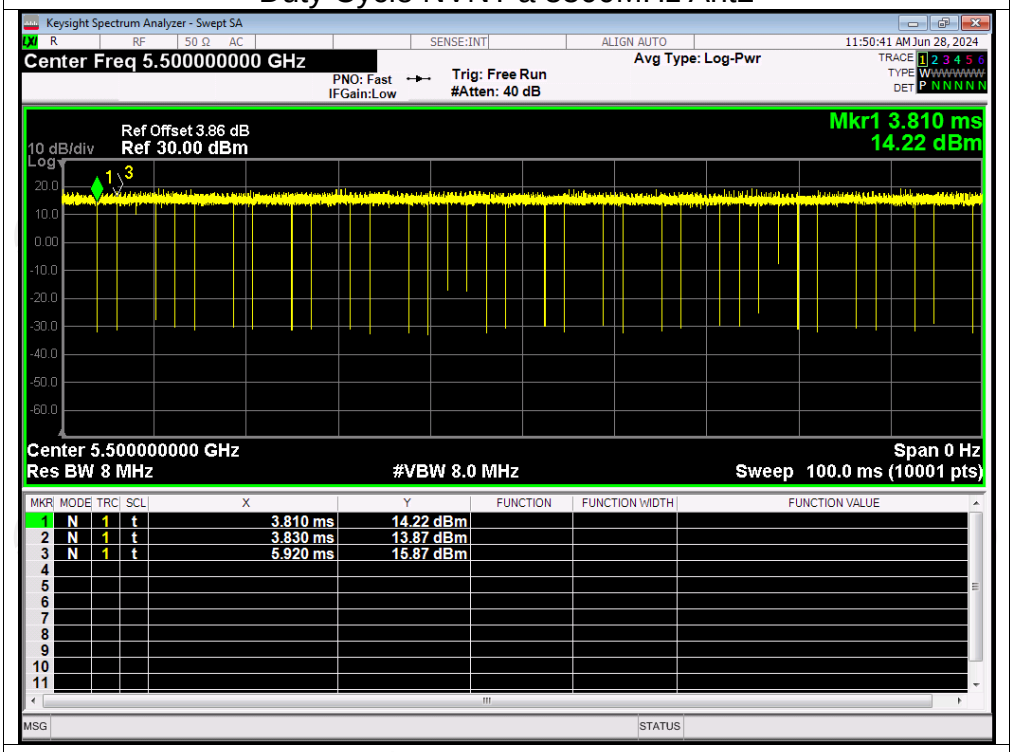

Duty Cycle NVNT a 5600MHz Ant2

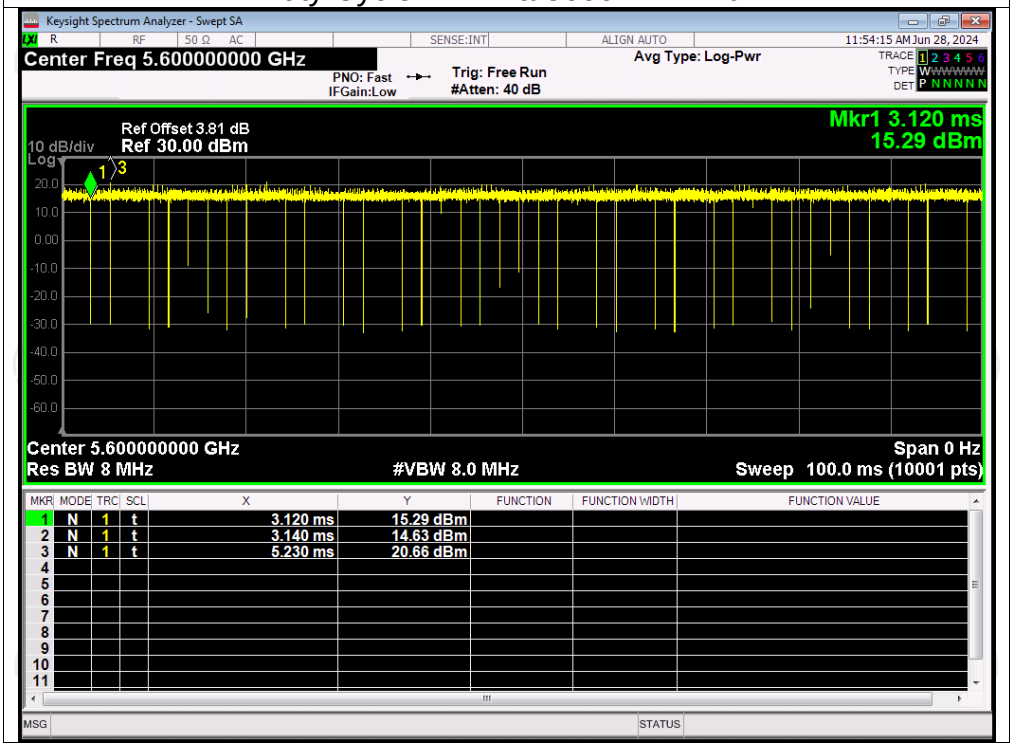

Duty Cycle NVNT a 5700MHz Ant2

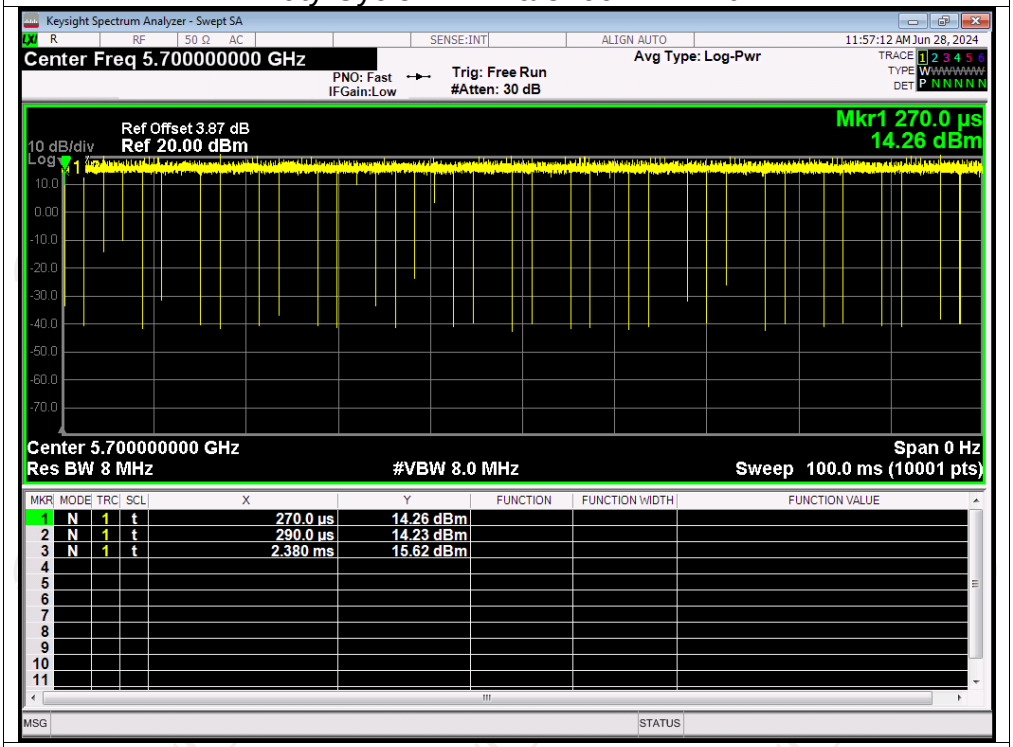

Duty Cycle NVNT n20 5500MHz Ant2

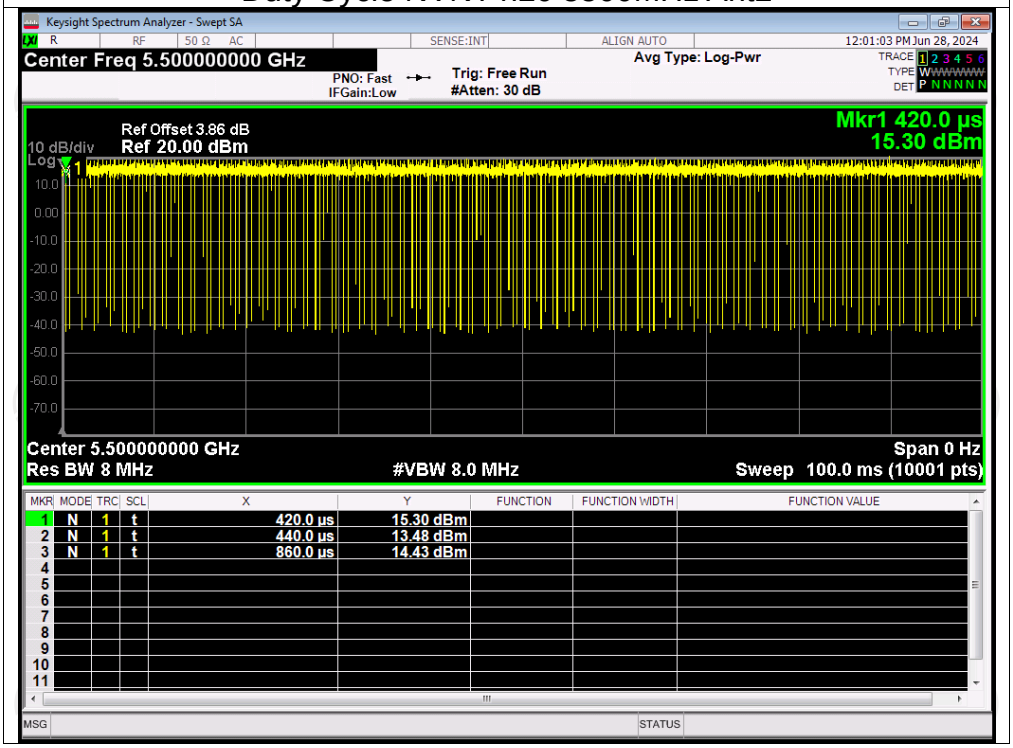

Duty Cycle NVNT n20 5600MHz Ant2

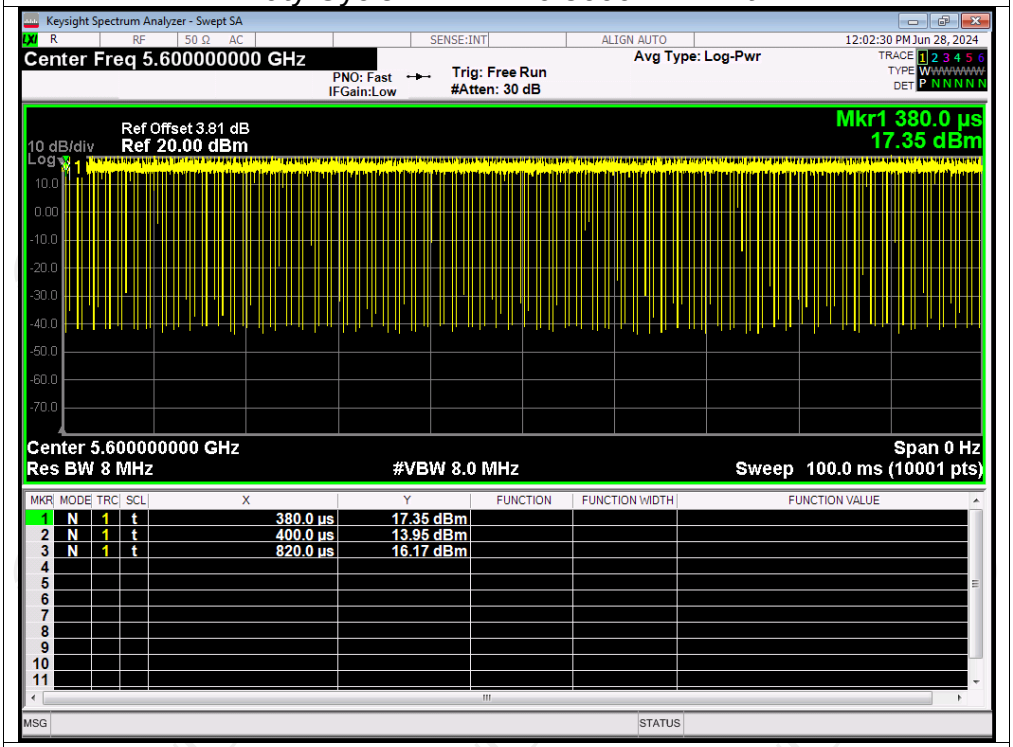

Duty Cycle NVNT n20 5700MHz Ant2

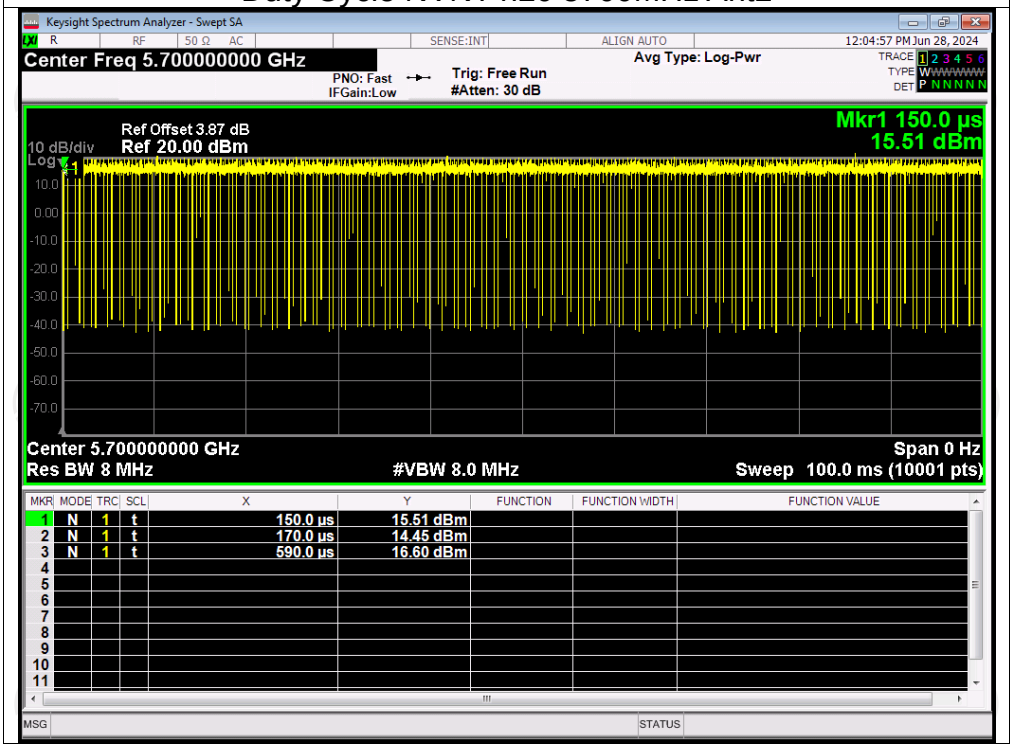

Duty Cycle NVNT n40 5510MHz Ant2

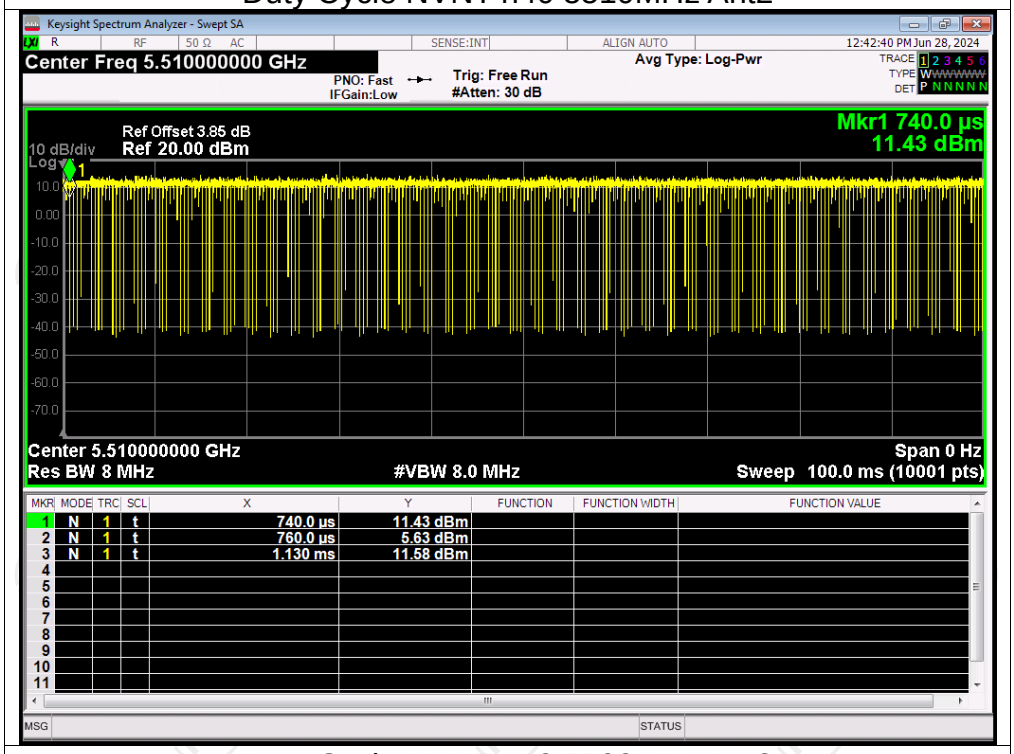

Duty Cycle NVNT n40 5590MHz Ant2

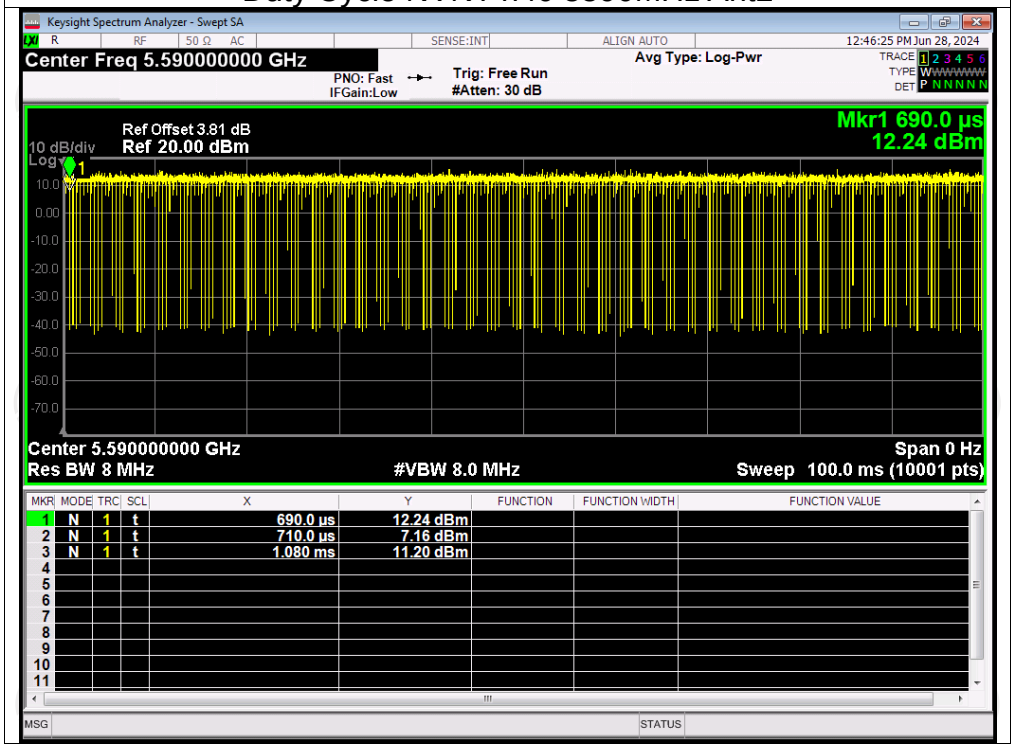

Duty Cycle NVNT n40 5670MHz Ant2

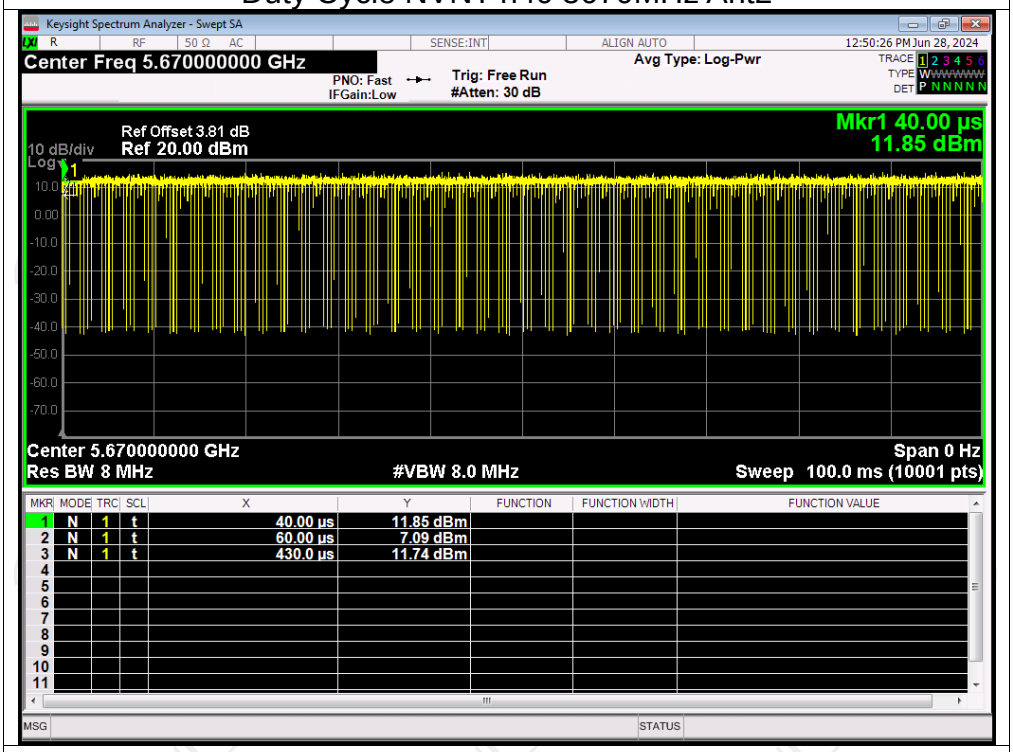

Duty Cycle NVNT ac20 5500MHz Ant2

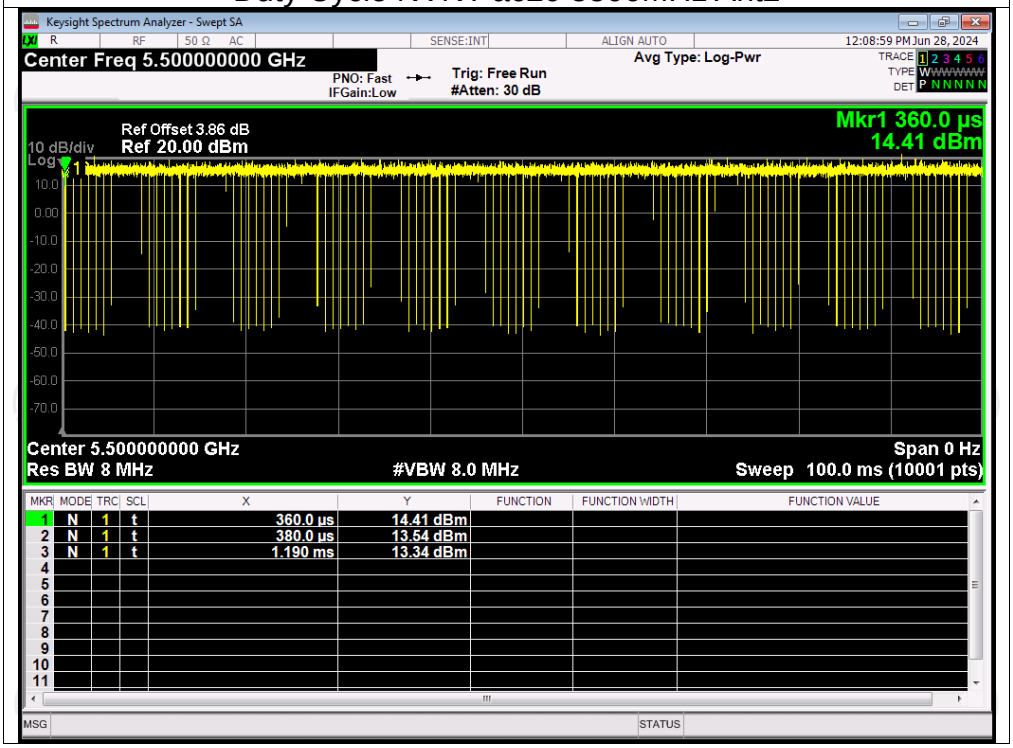

Duty Cycle NVNT ac20 5600MHz Ant2

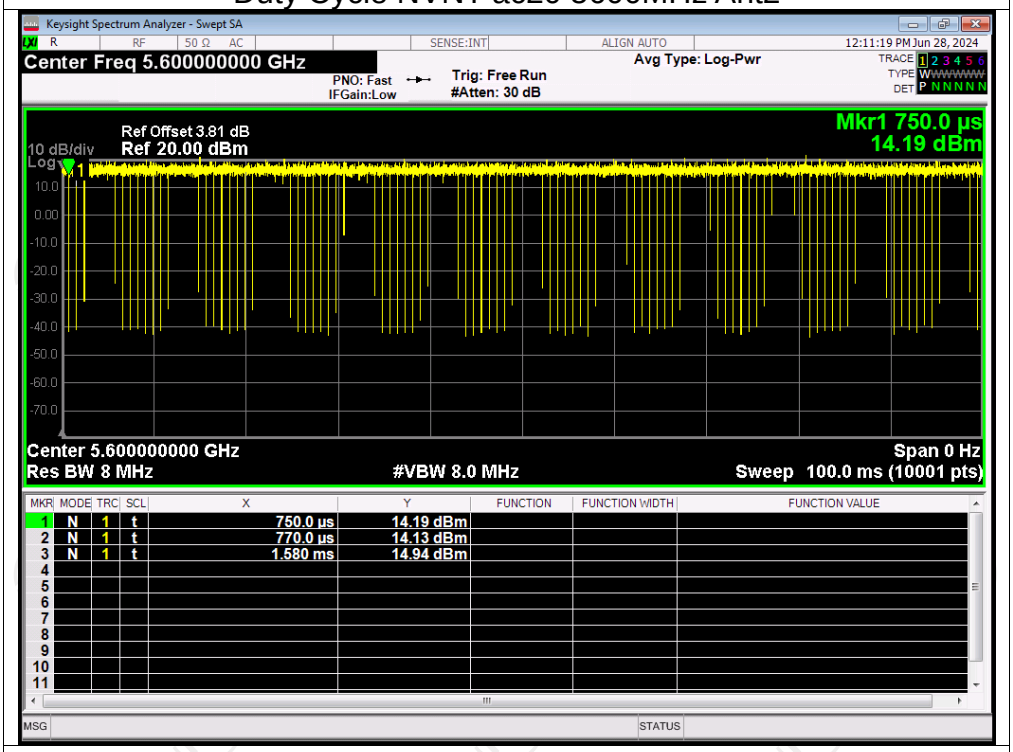

Duty Cycle NVNT ac20 5700MHz Ant2

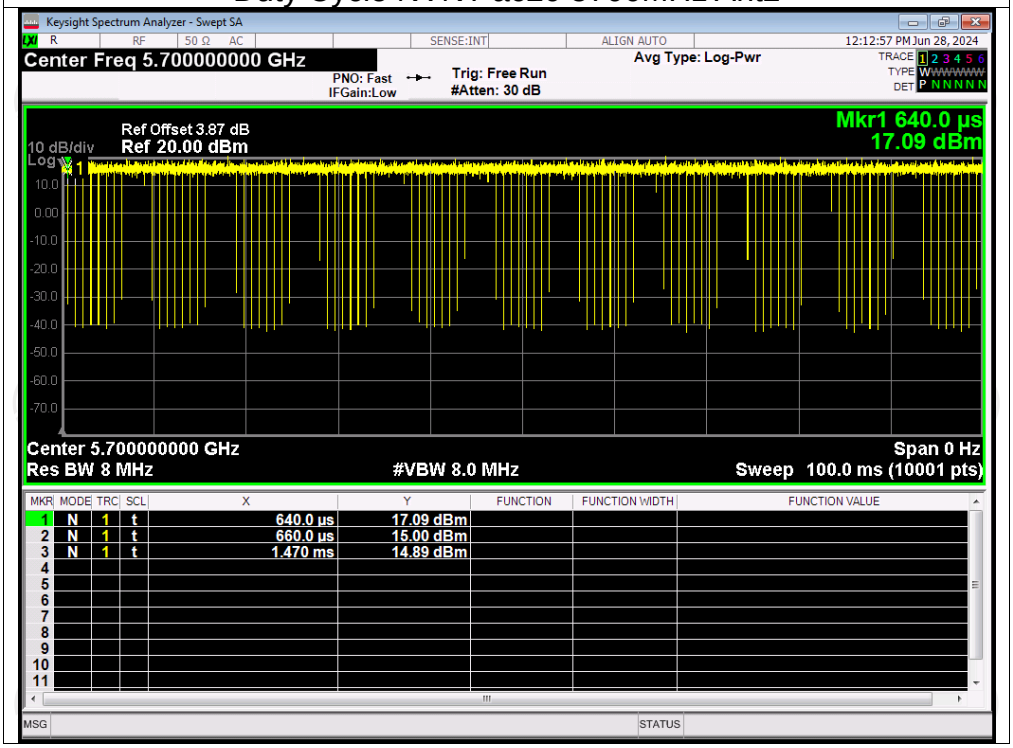

Duty Cycle NVNT ac40 5510MHz Ant2

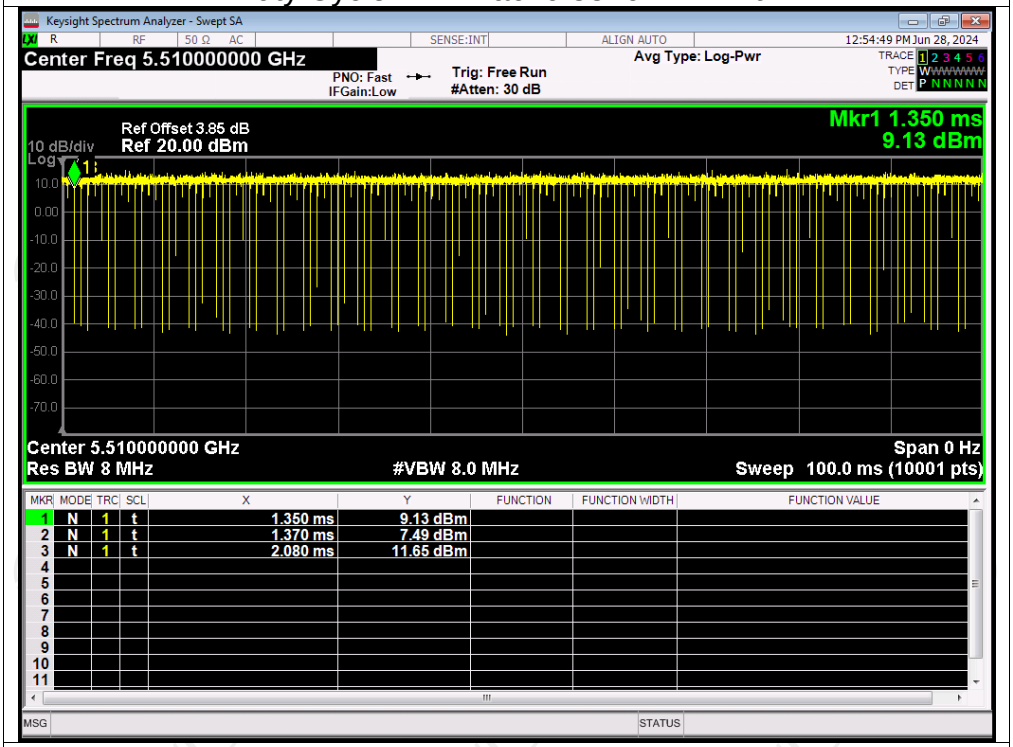

Duty Cycle NVNT ac40 5590MHz Ant2

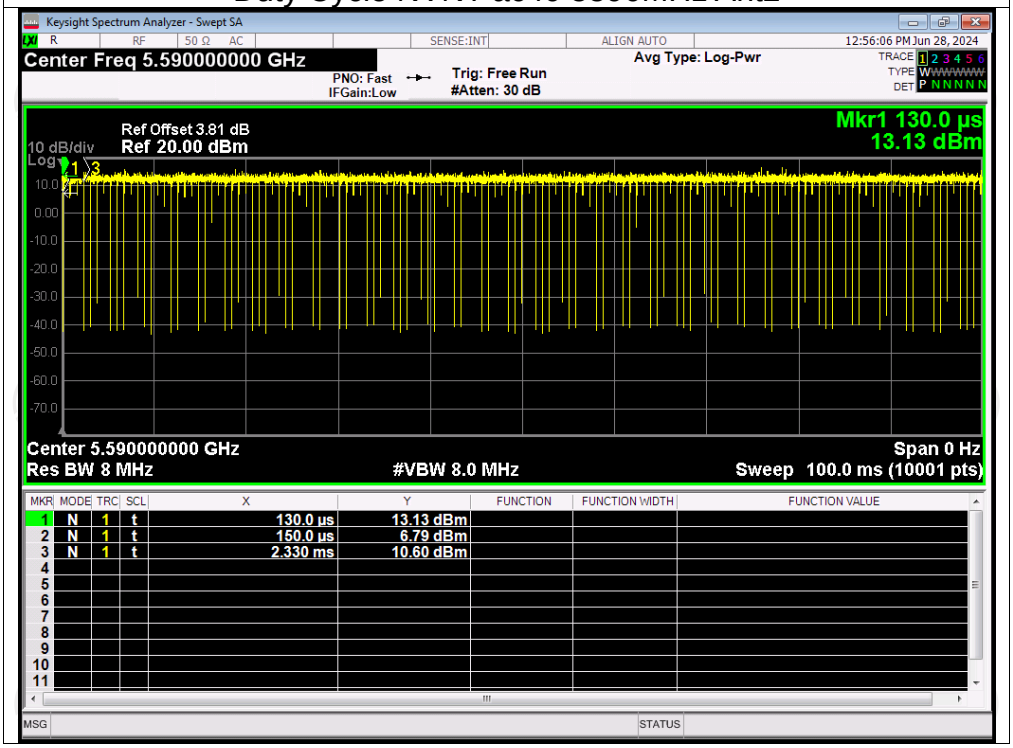

Duty Cycle NVNT ac40 5670MHz Ant2

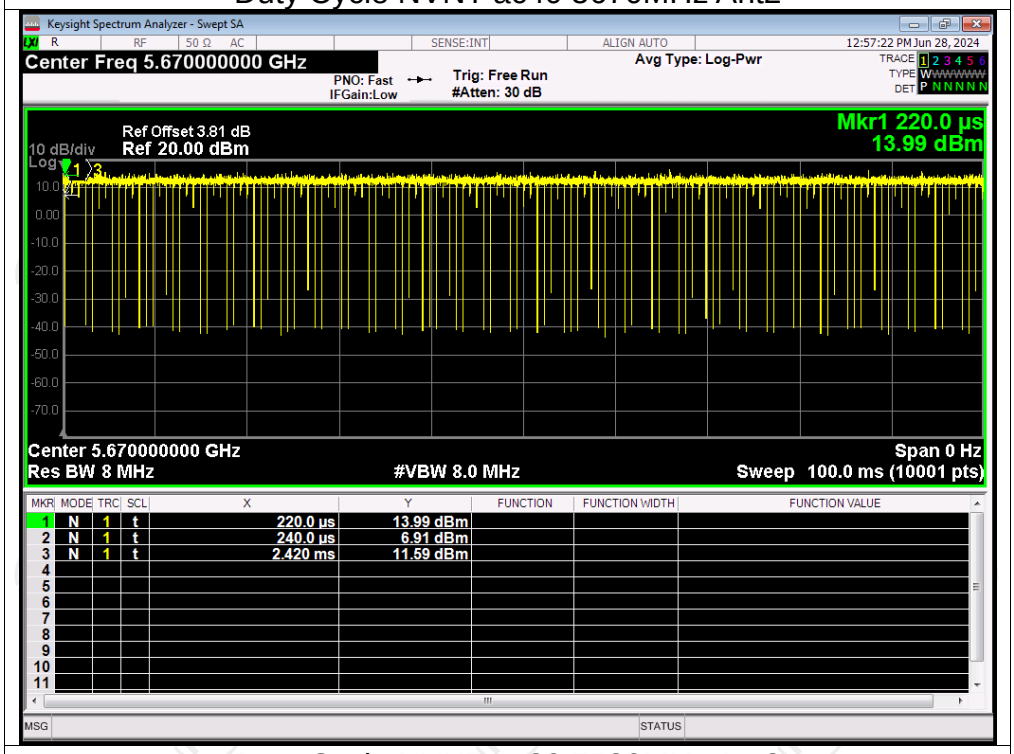

Duty Cycle NVNT ac80 5530MHz Ant2

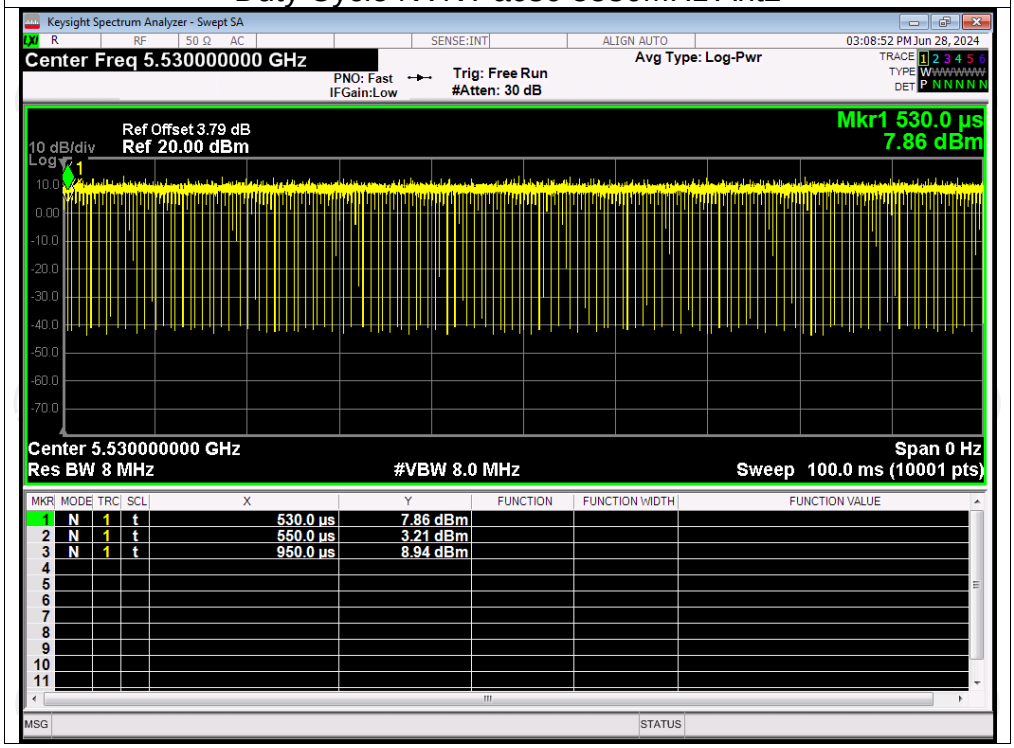

Duty Cycle NVNT ac80 5610MHz Ant2

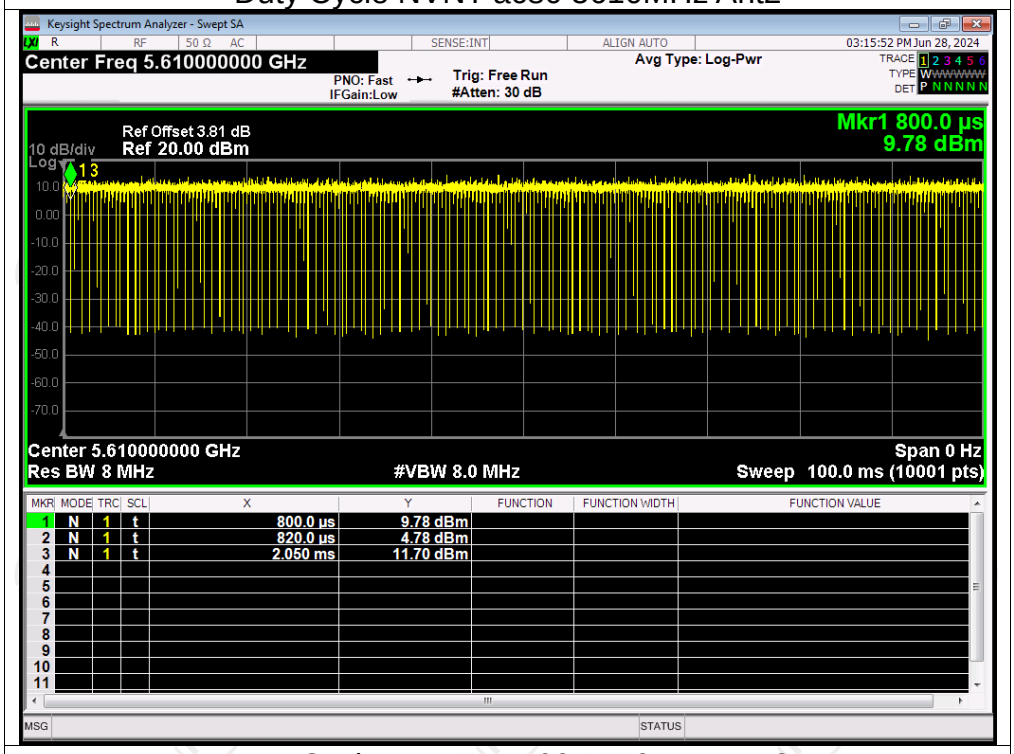

Duty Cycle NVNT ax160 5570MHz Ant2

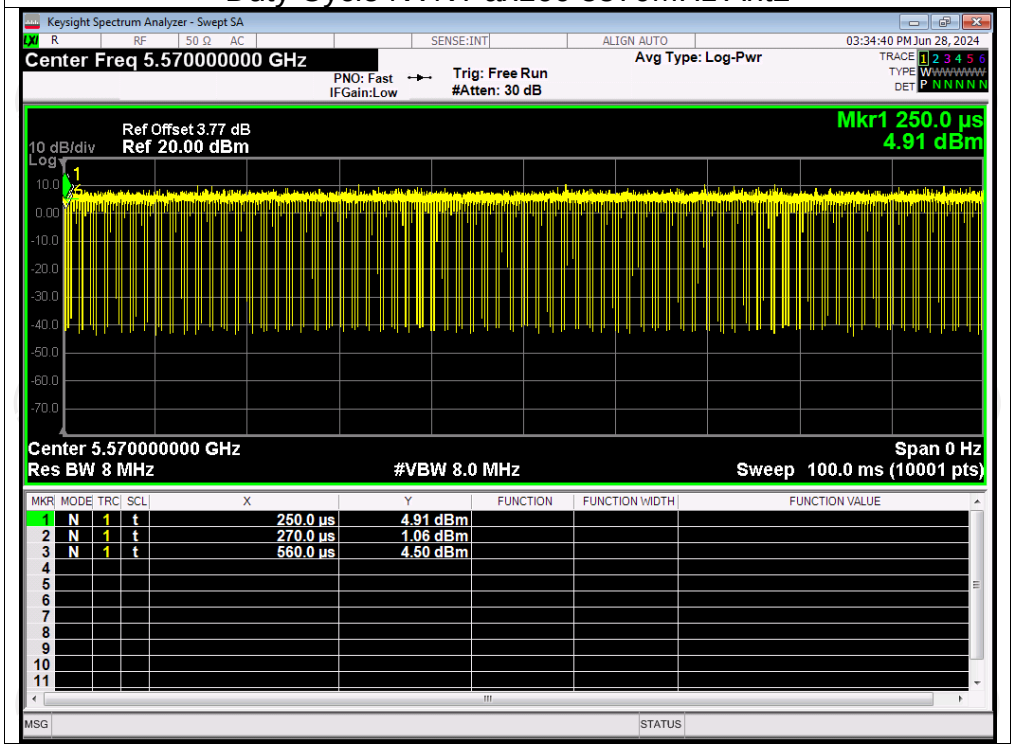

Duty Cycle NVNT ax20 5500MHz Ant2

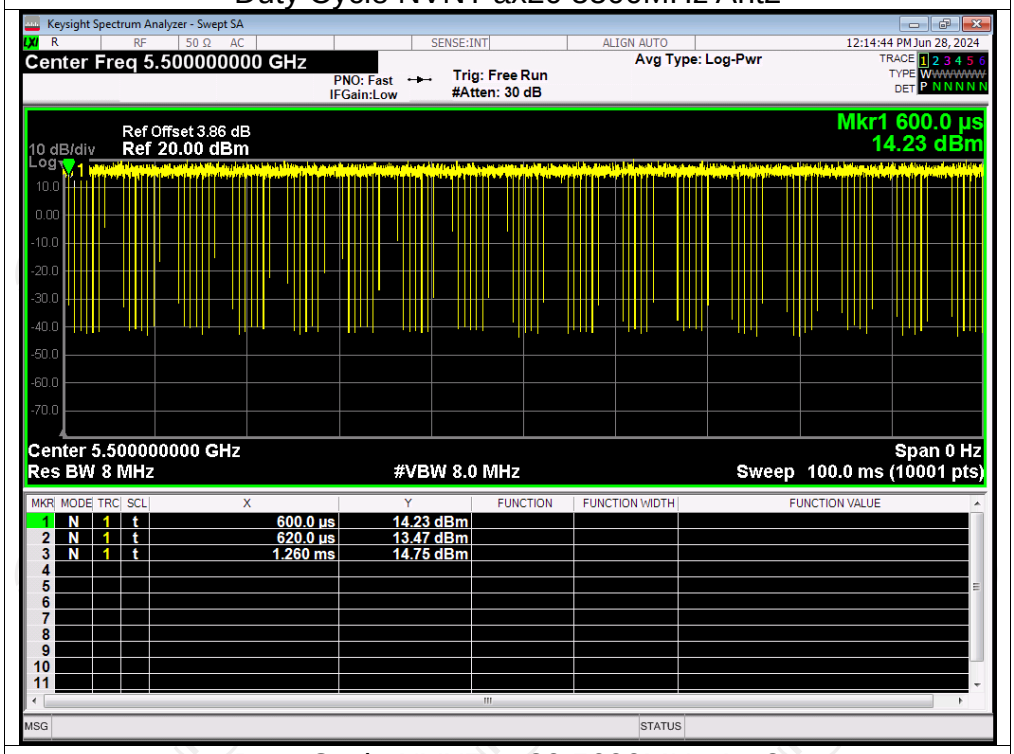

Duty Cycle NVNT ax20 5600MHz Ant2

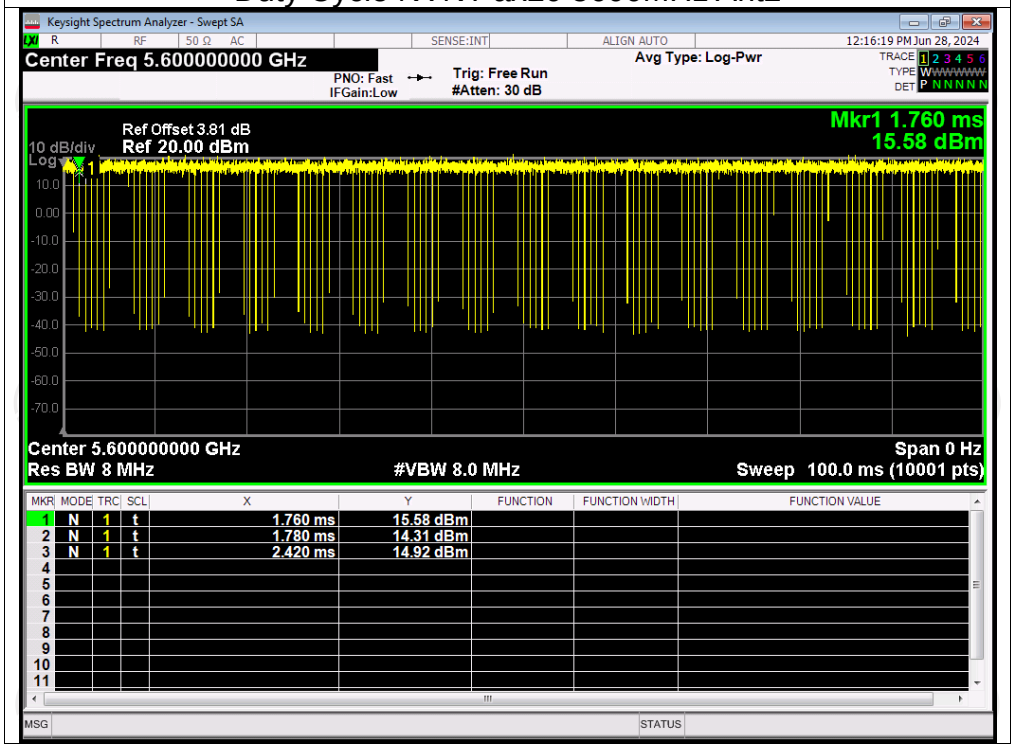

Duty Cycle NVNT ax20 5700MHz Ant2

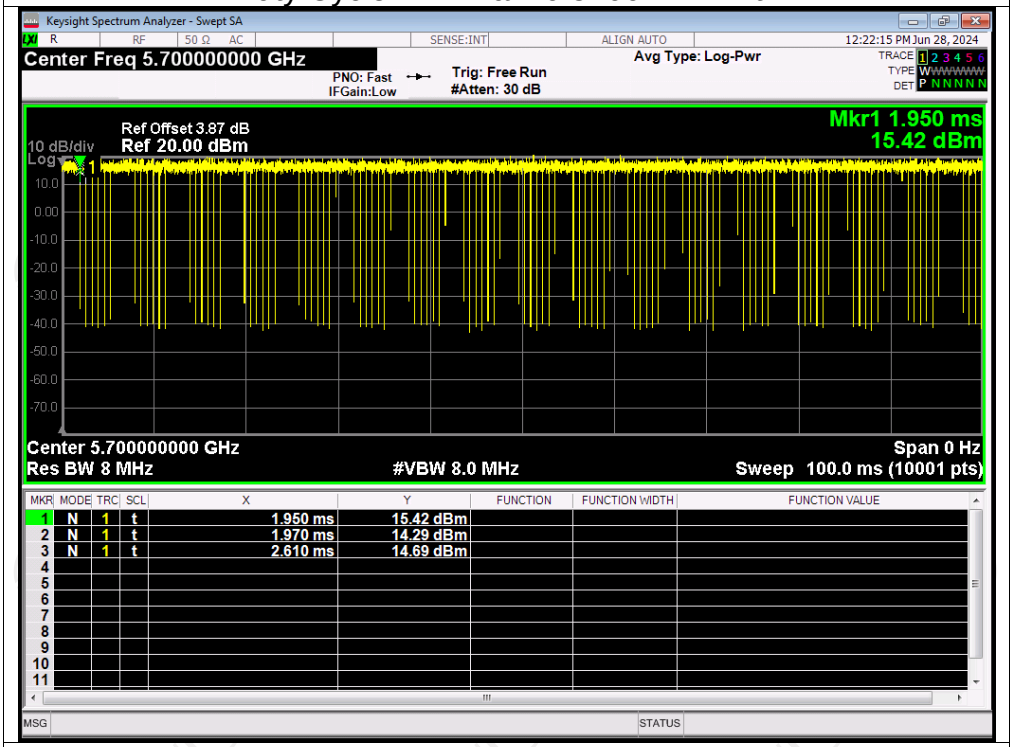

Duty Cycle NVNT ax40 5510MHz Ant2

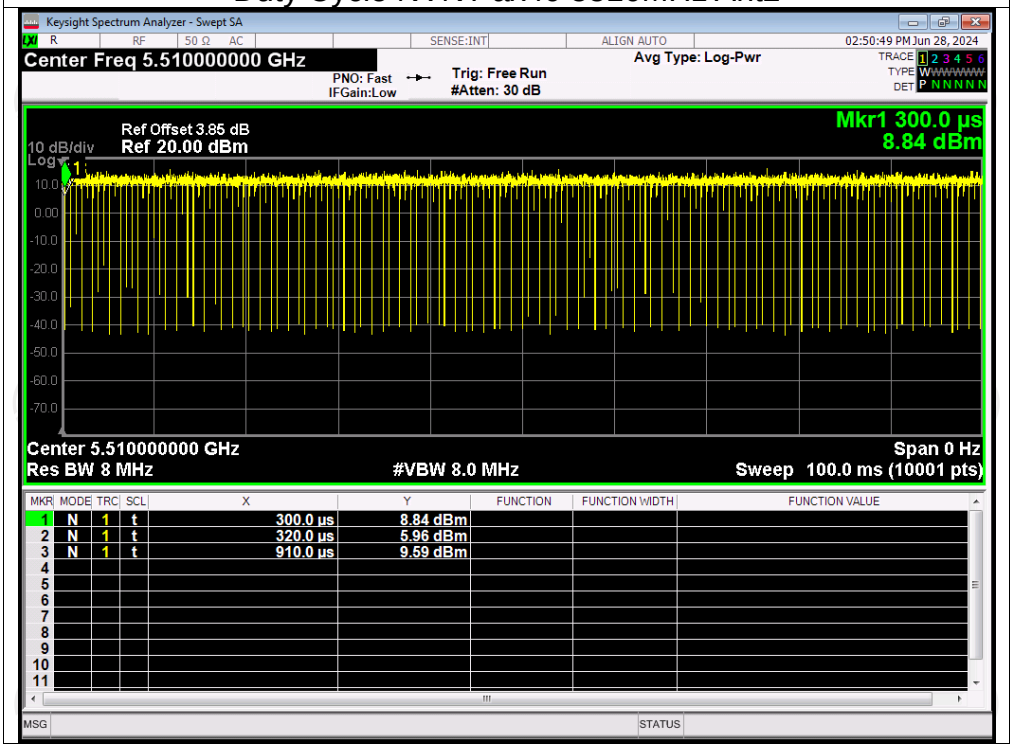

Duty Cycle NVNT ax40 5590MHz Ant2

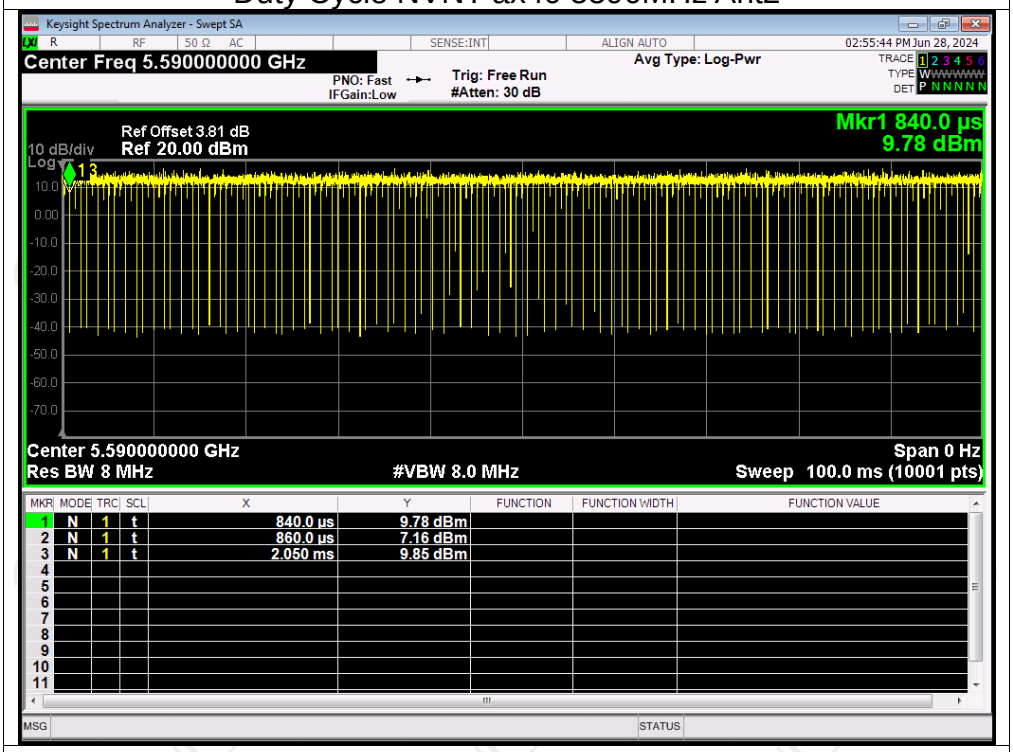

Duty Cycle NVNT ax40 5670MHz Ant2

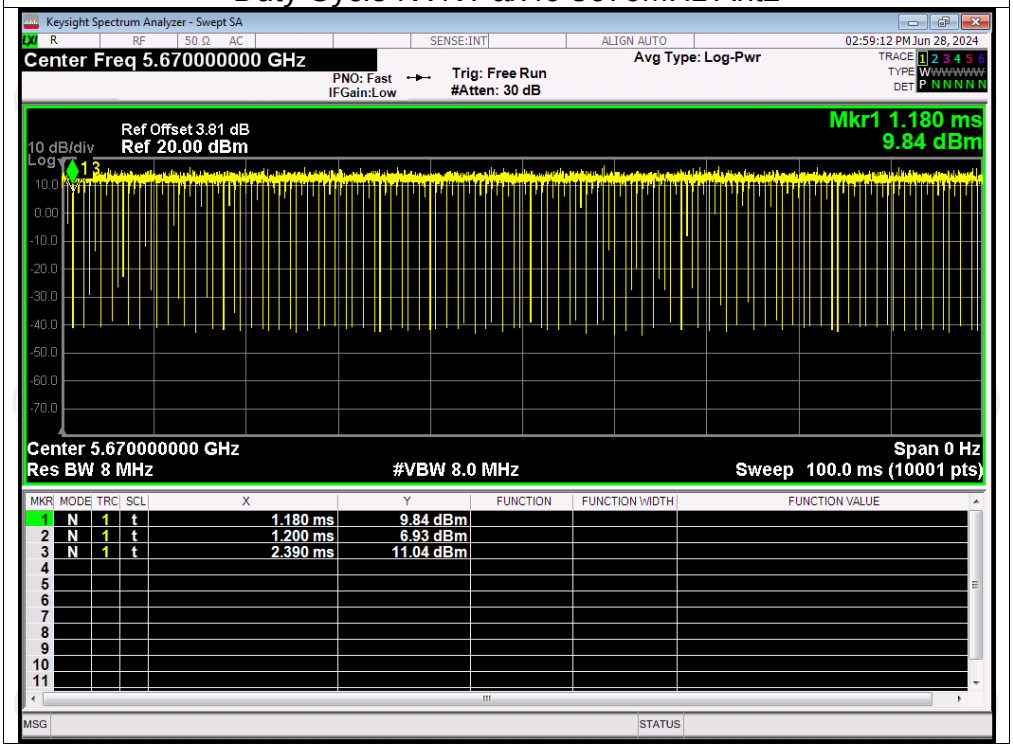

Duty Cycle NVNT ax80 5530MHz Ant2

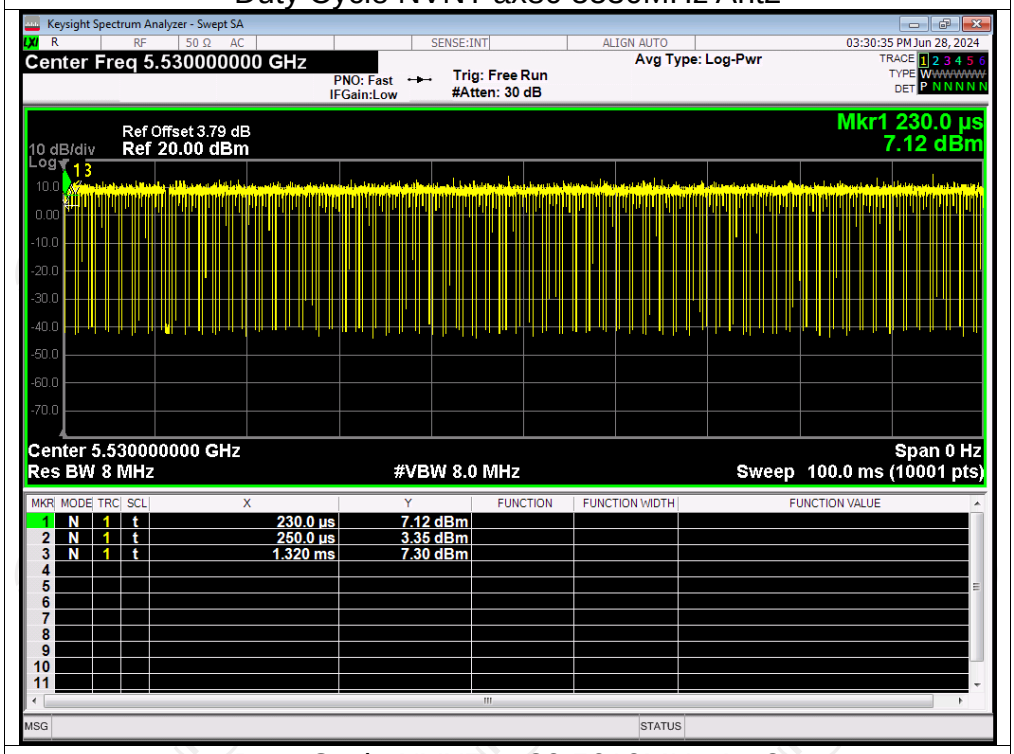

Duty Cycle NVNT ax80 5610MHz Ant2

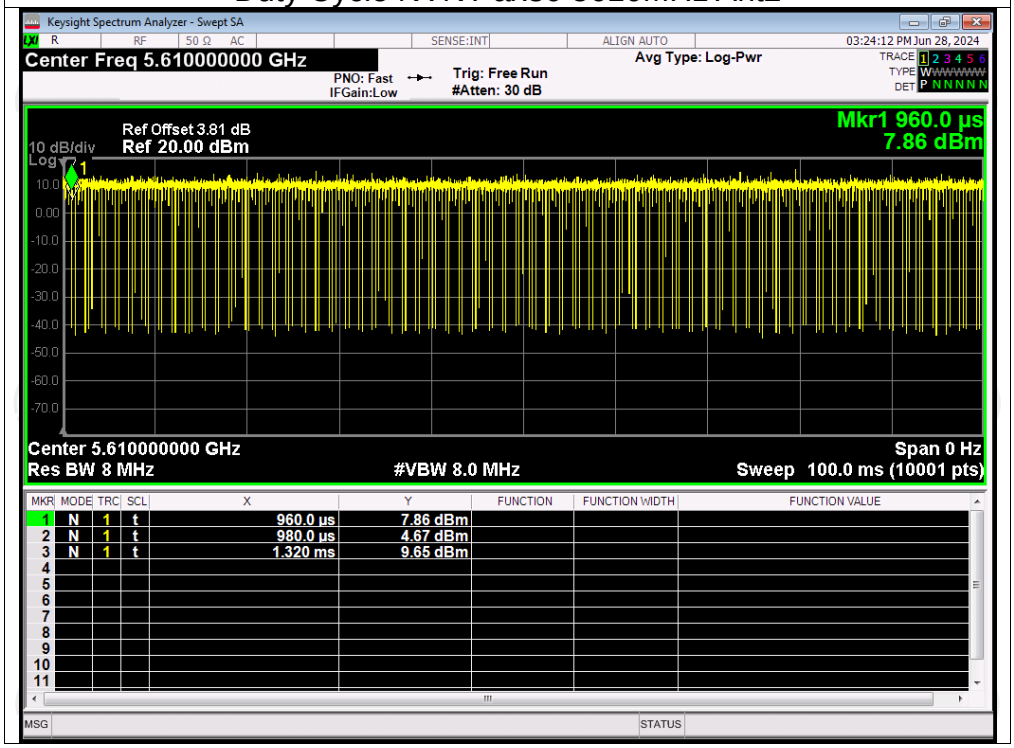

Test Graphs

Duty Cycle NVNT a 5745MHz Ant2

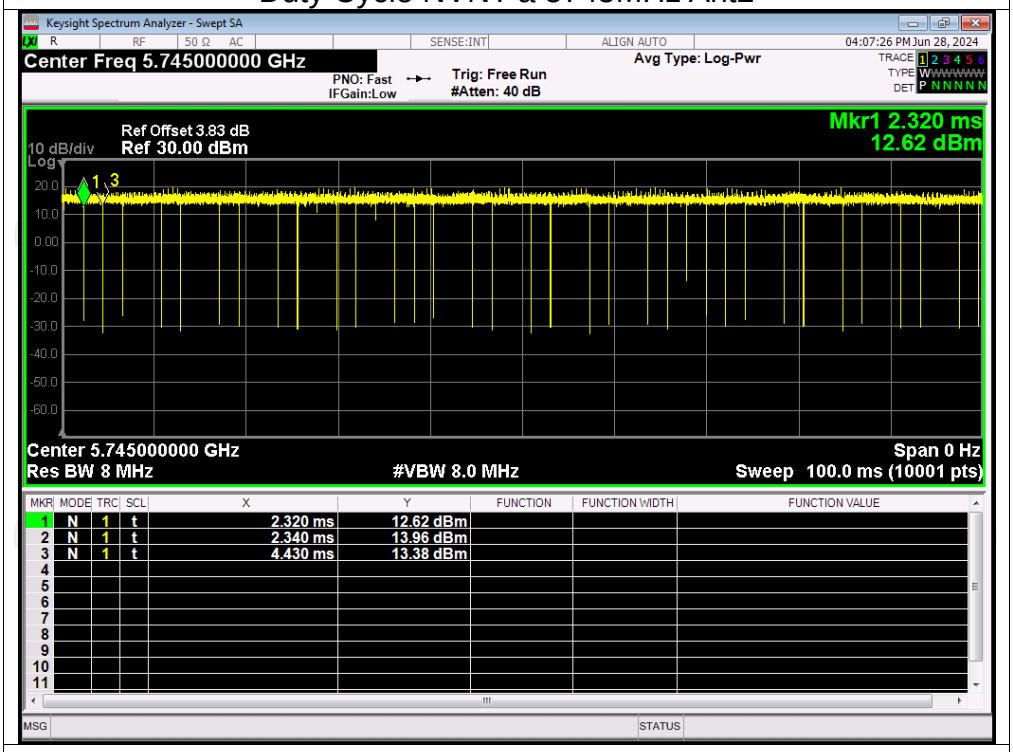

Duty Cycle NVNT a 5785MHz Ant2

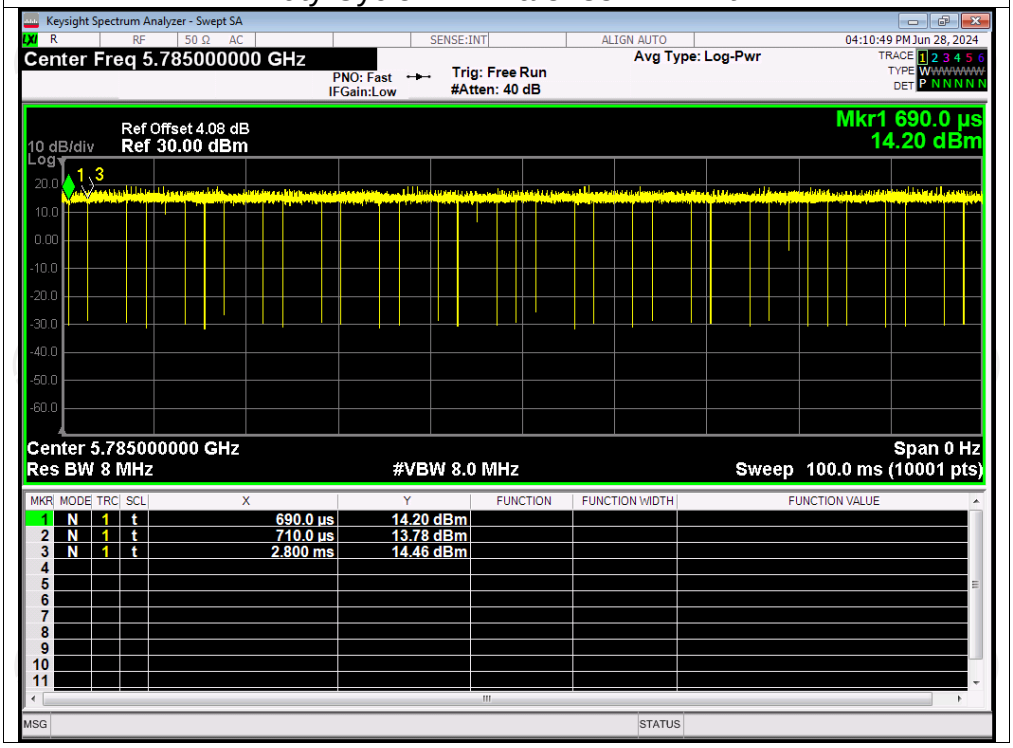

Duty Cycle NVNT a 5825MHz Ant2

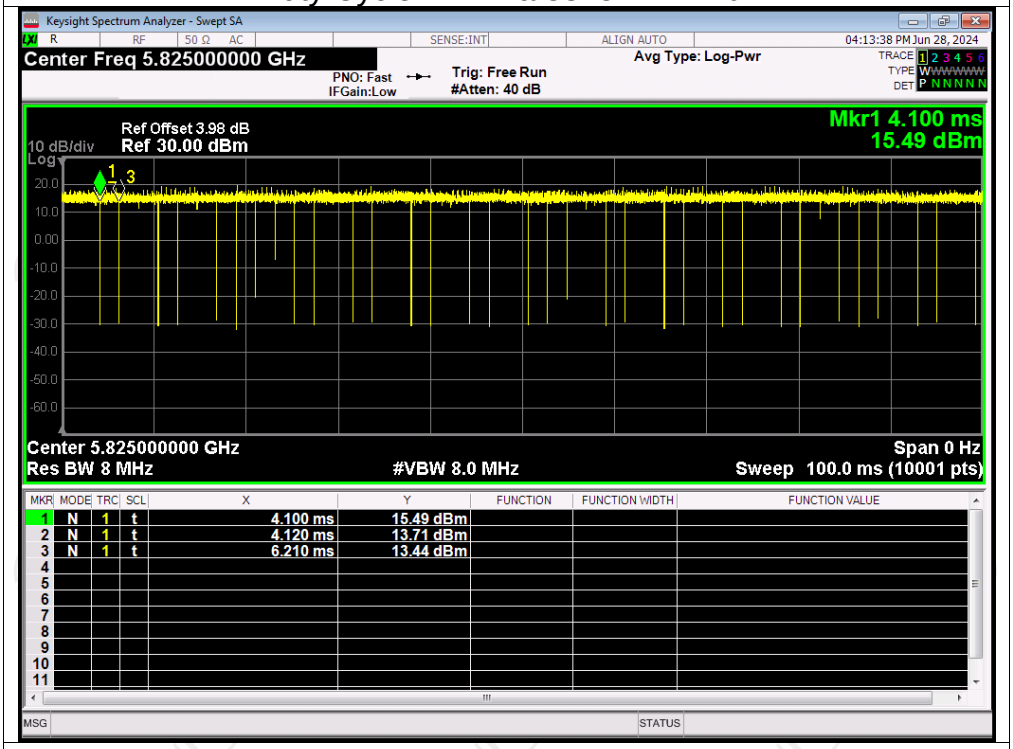

Duty Cycle NVNT n20 5745MHz Ant2

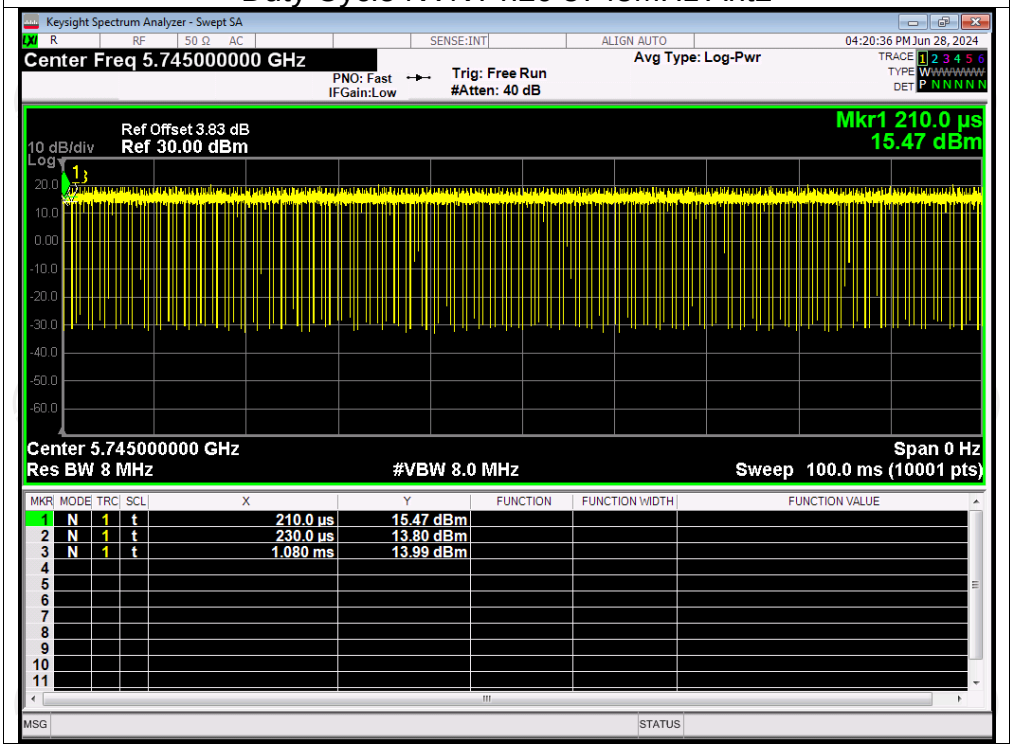

Duty Cycle NVNT n20 5785MHz Ant2

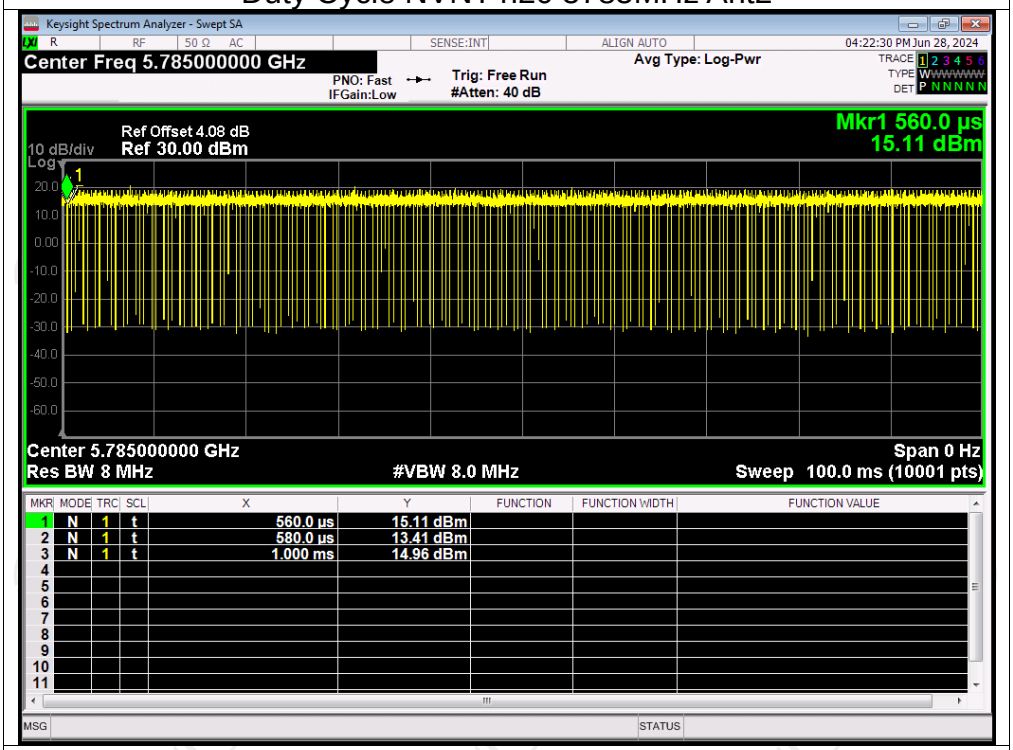

Duty Cycle NVNT n20 5825MHz Ant2

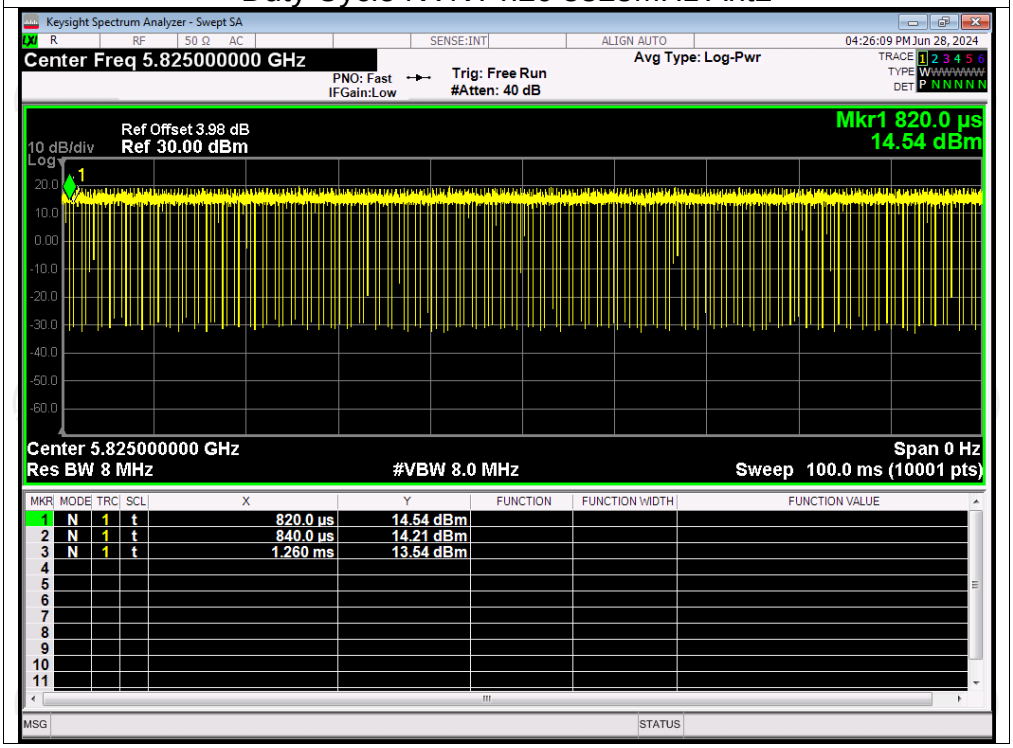

Duty Cycle NVNT n40 5755MHz Ant2

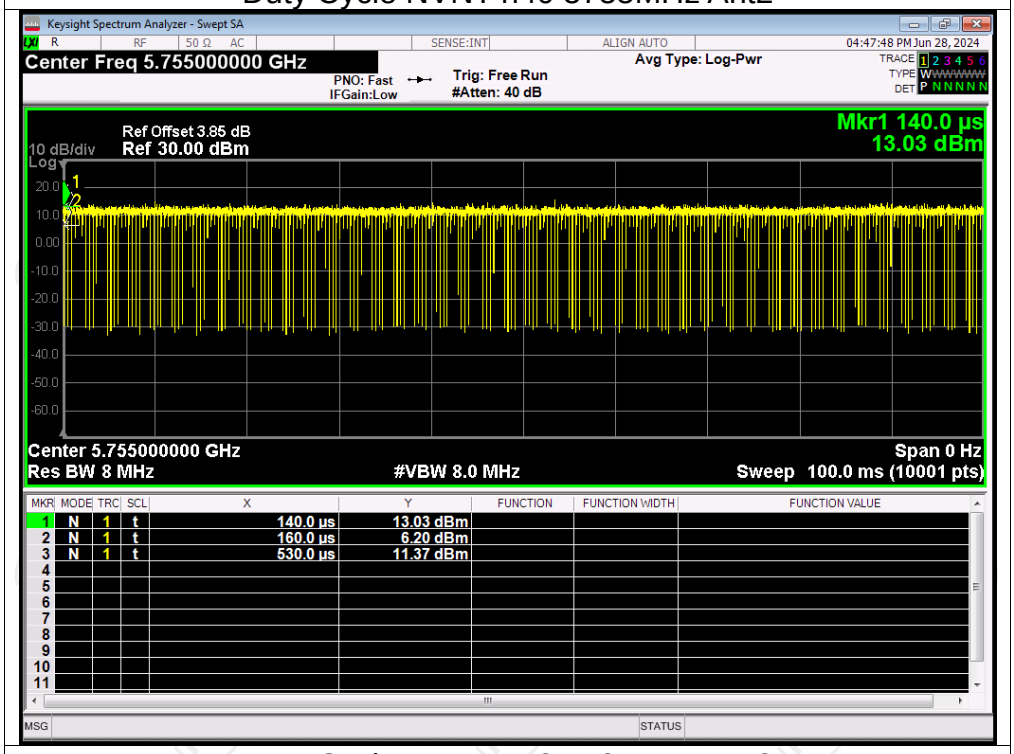

Duty Cycle NVNT n40 5795MHz Ant2

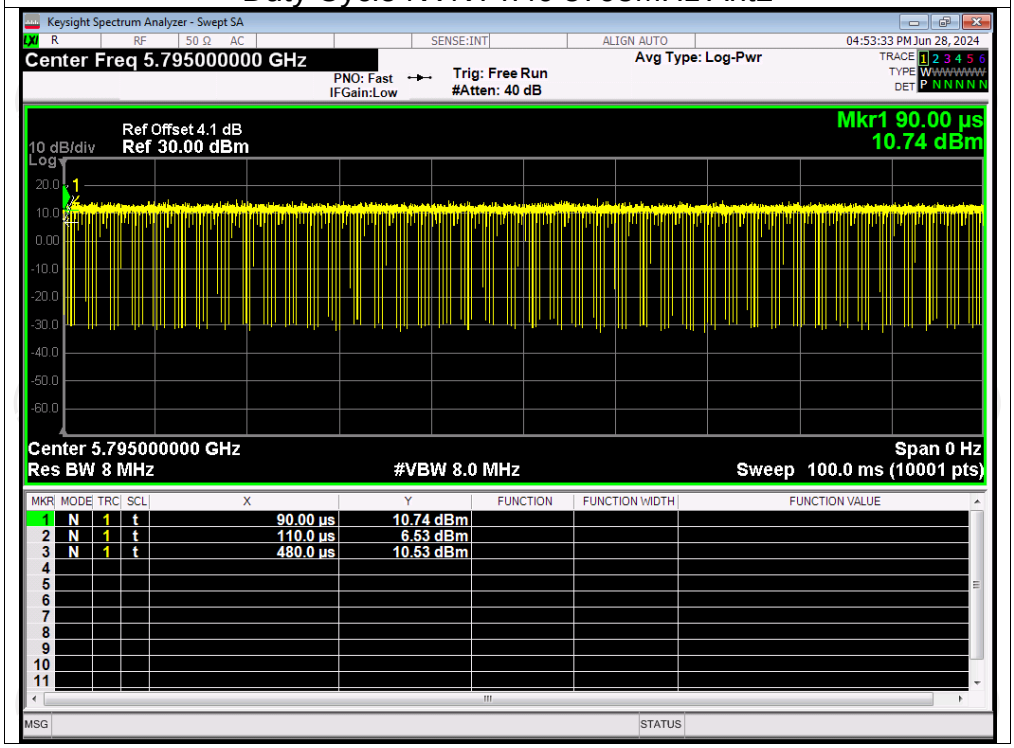

Duty Cycle NVNT ac20 5745MHz Ant2

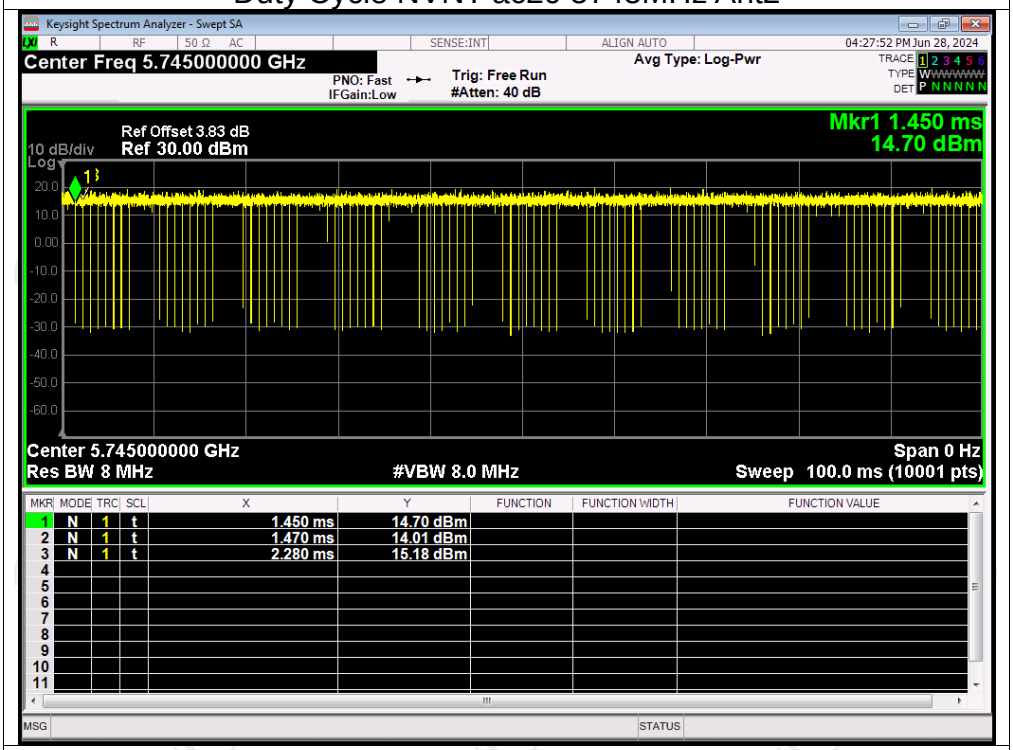

Duty Cycle NVNT ac20 5785MHz Ant2

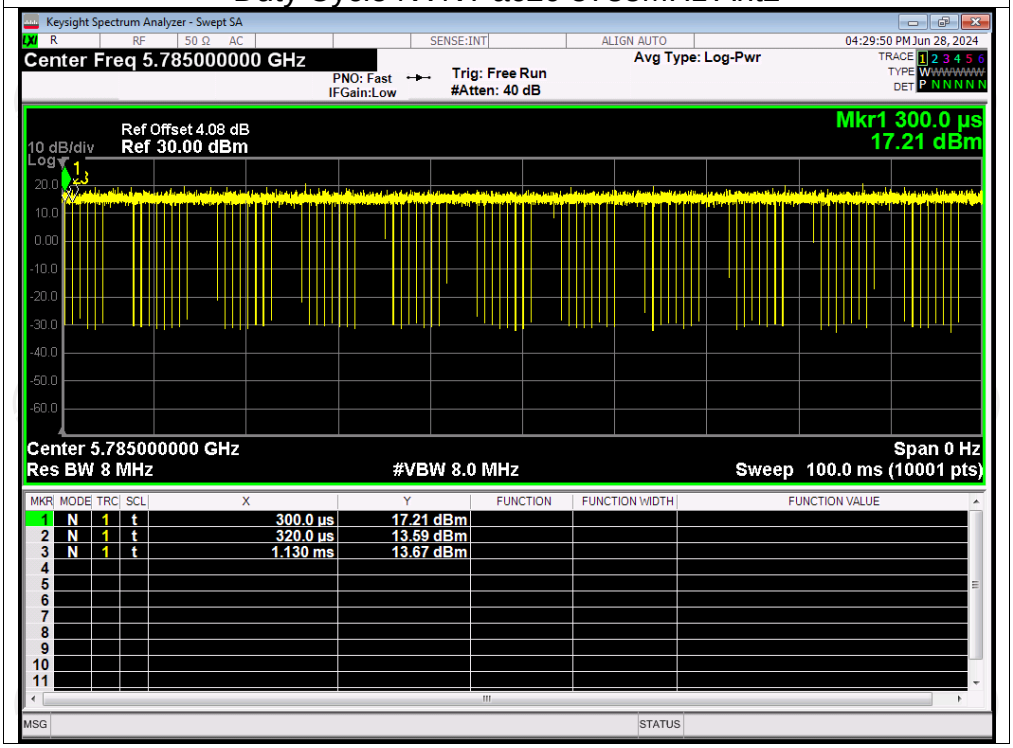

Duty Cycle NVNT ac20 5825MHz Ant2

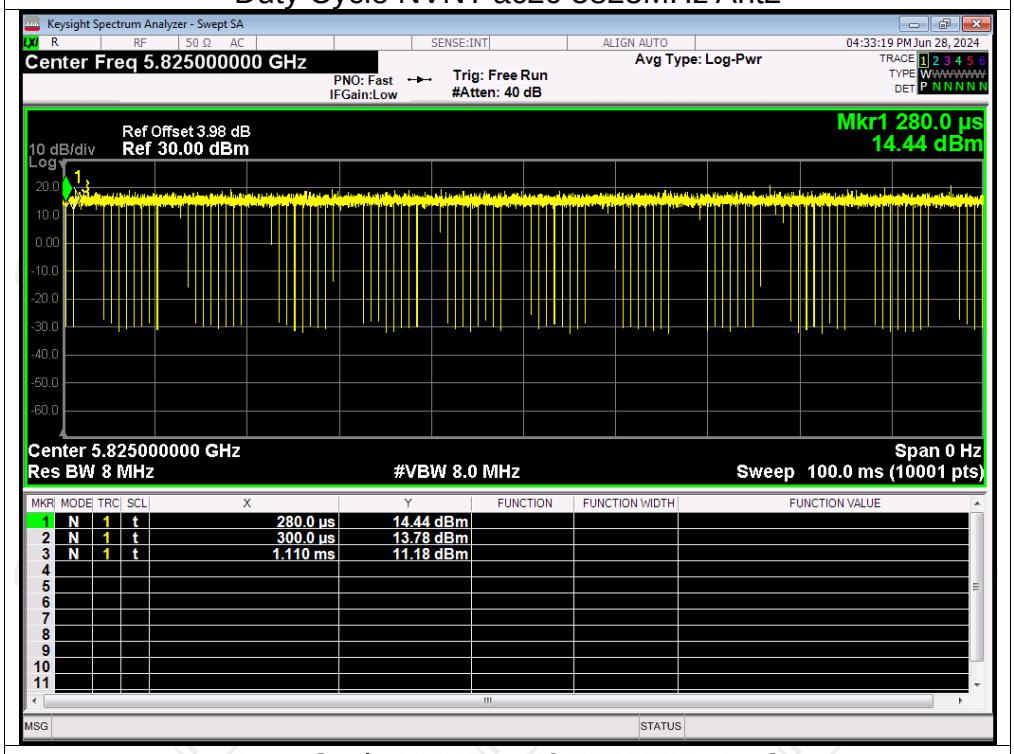

Duty Cycle NVNT ac40 5755MHz Ant2

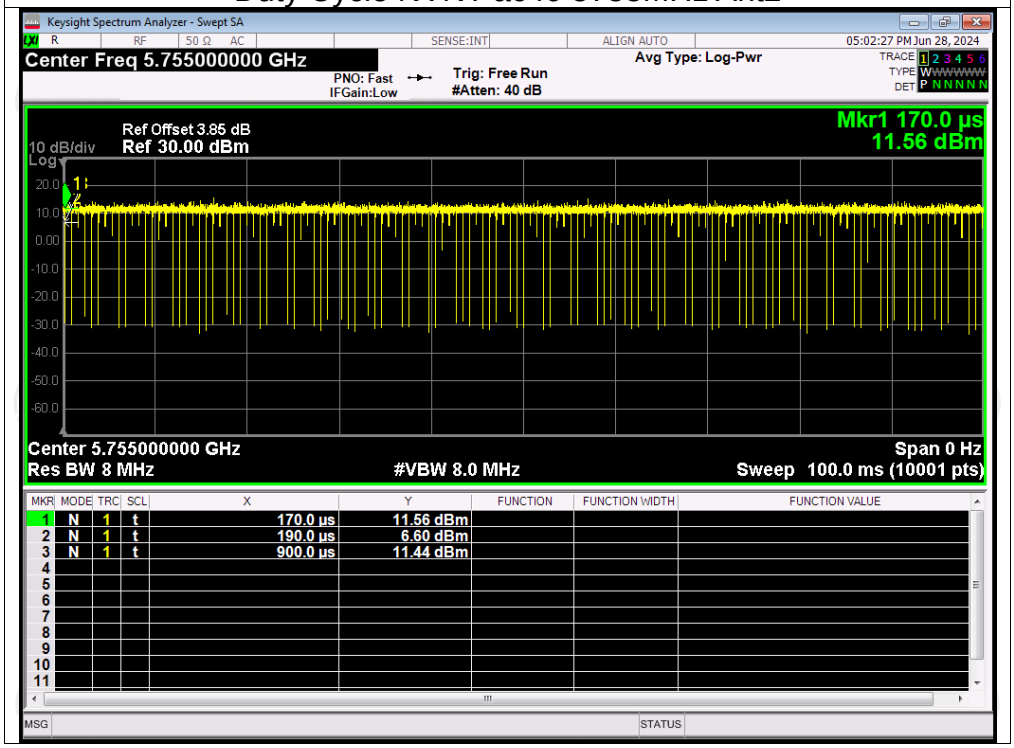

Duty Cycle NVNT ac40 5795MHz Ant2

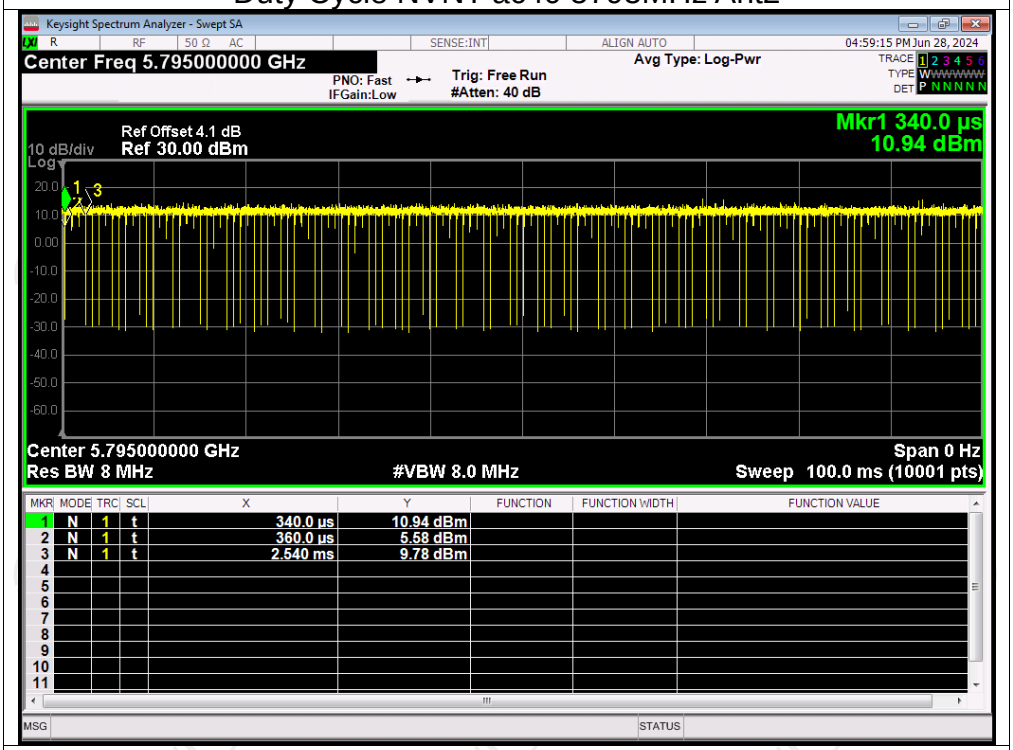

Duty Cycle NVNT ac80 5775MHz Ant2

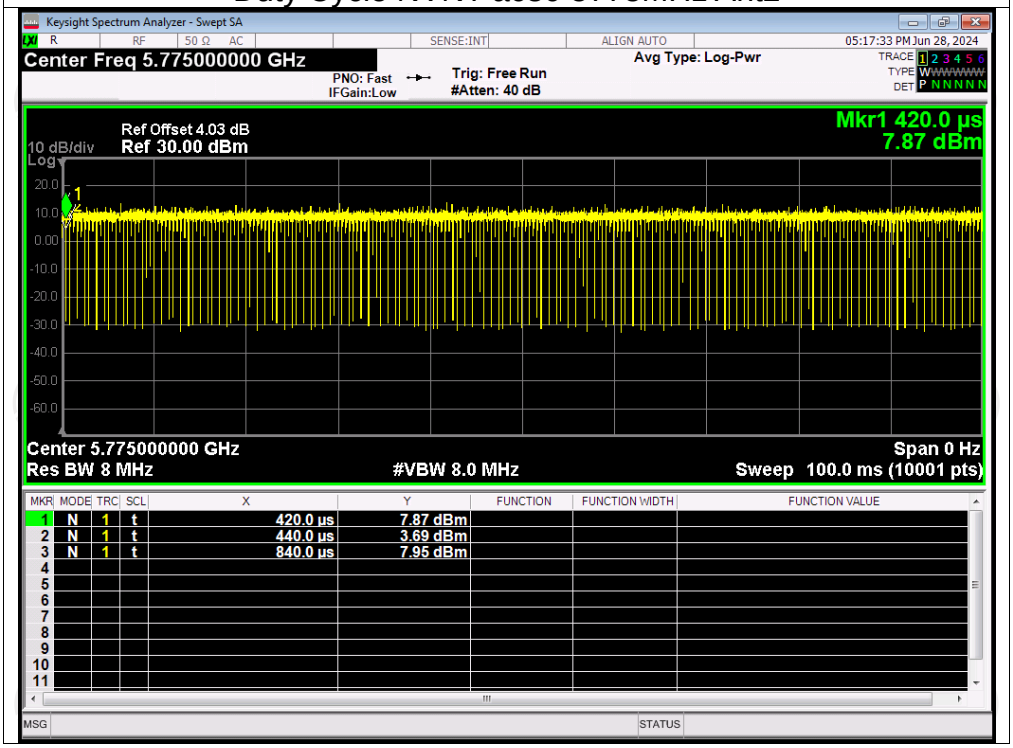

Duty Cycle NVNT ax20 5745MHz Ant2

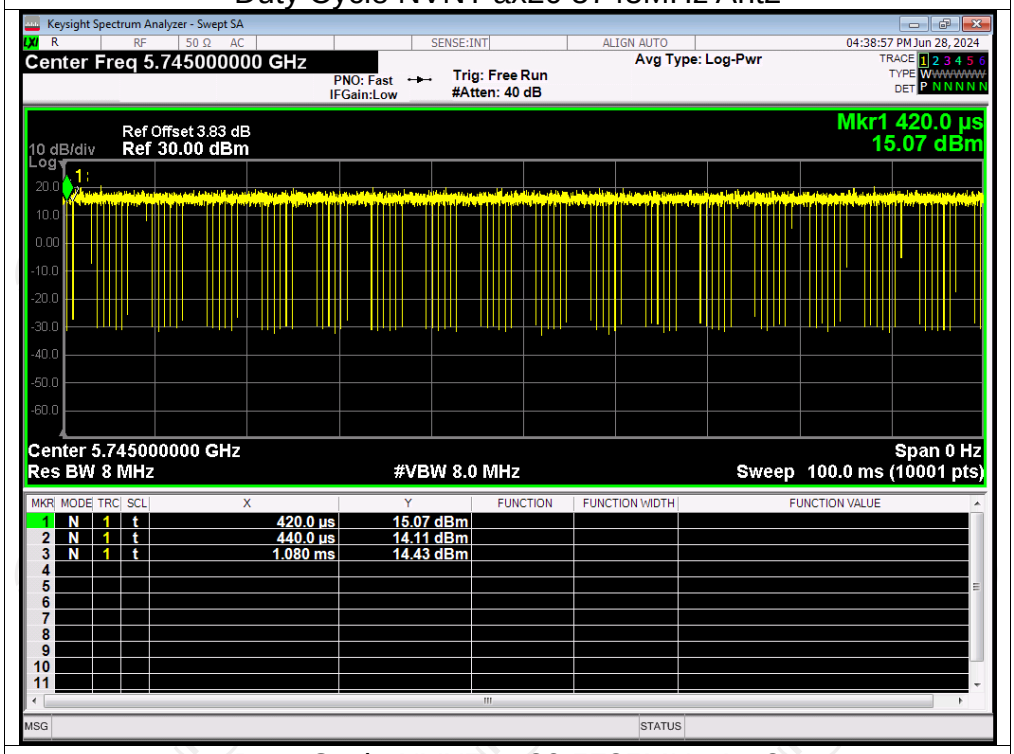

Duty Cycle NVNT ax20 5785MHz Ant2

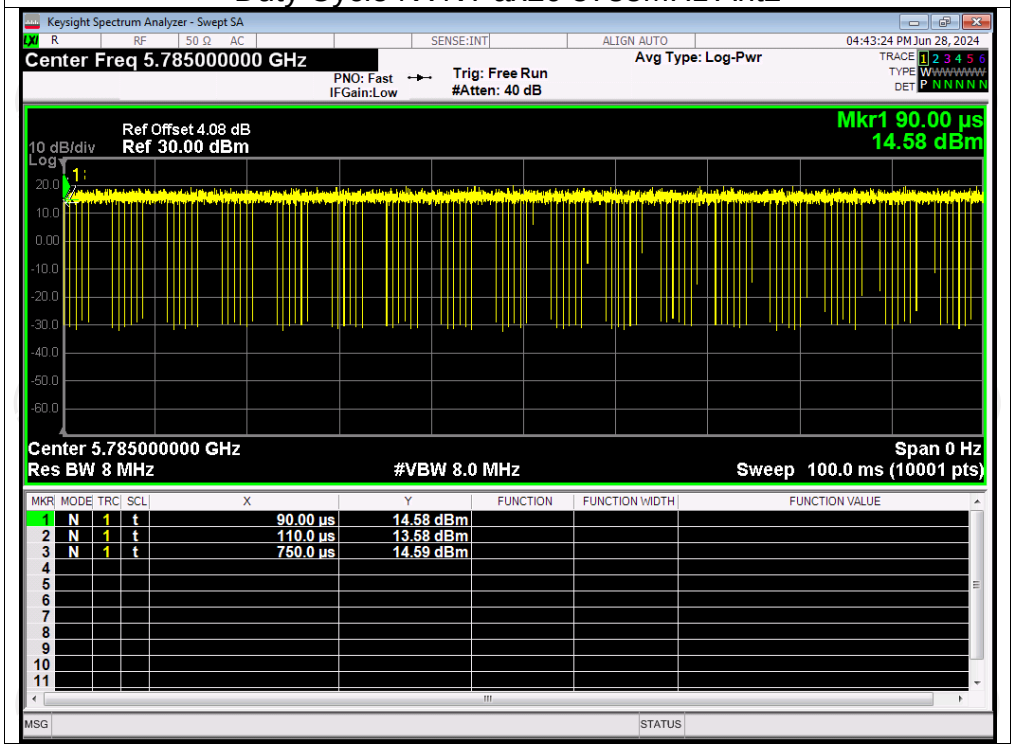

Duty Cycle NVNT ax20 5825MHz Ant2

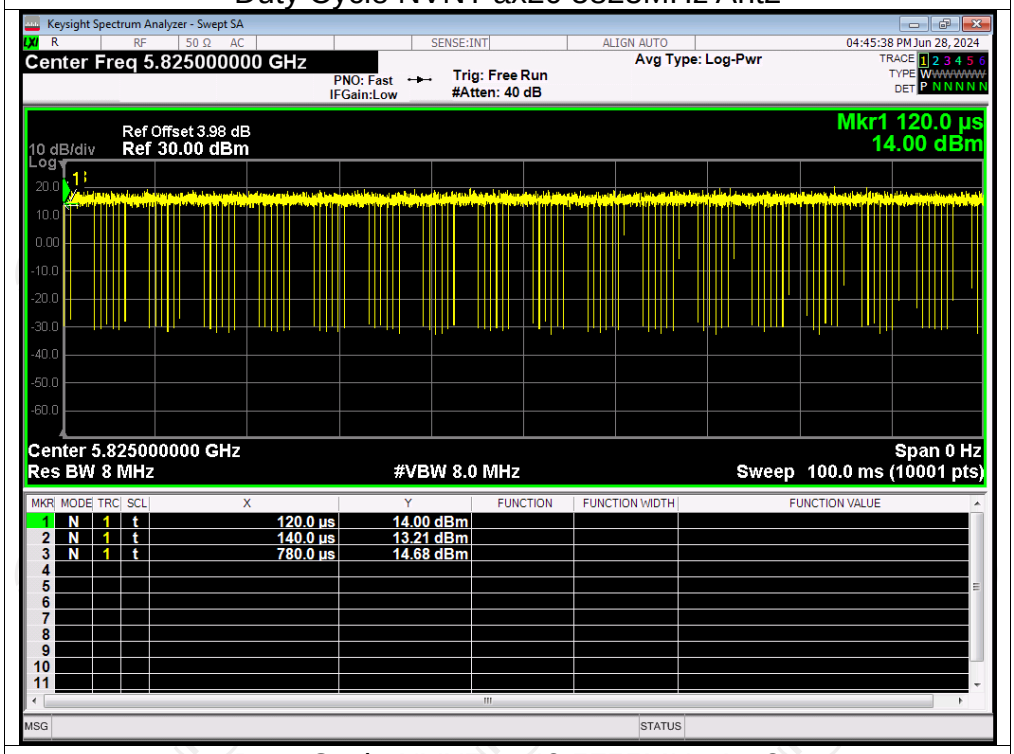

Duty Cycle NVNT ax40 5755MHz Ant2

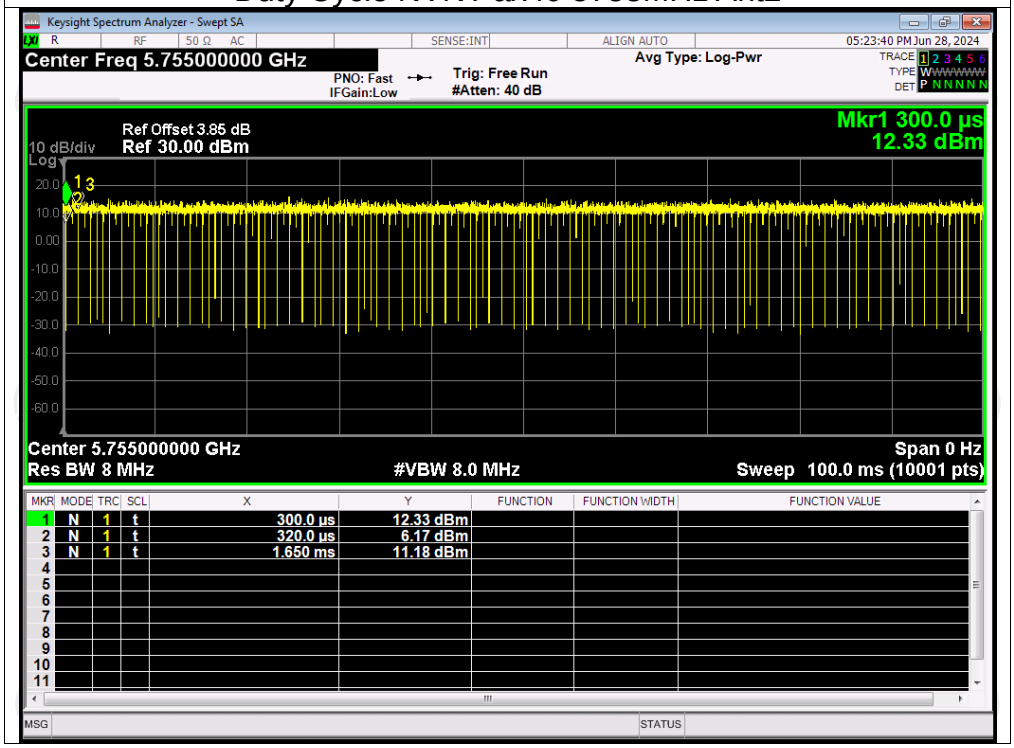

Duty Cycle NVNT ax40 5795MHz Ant2

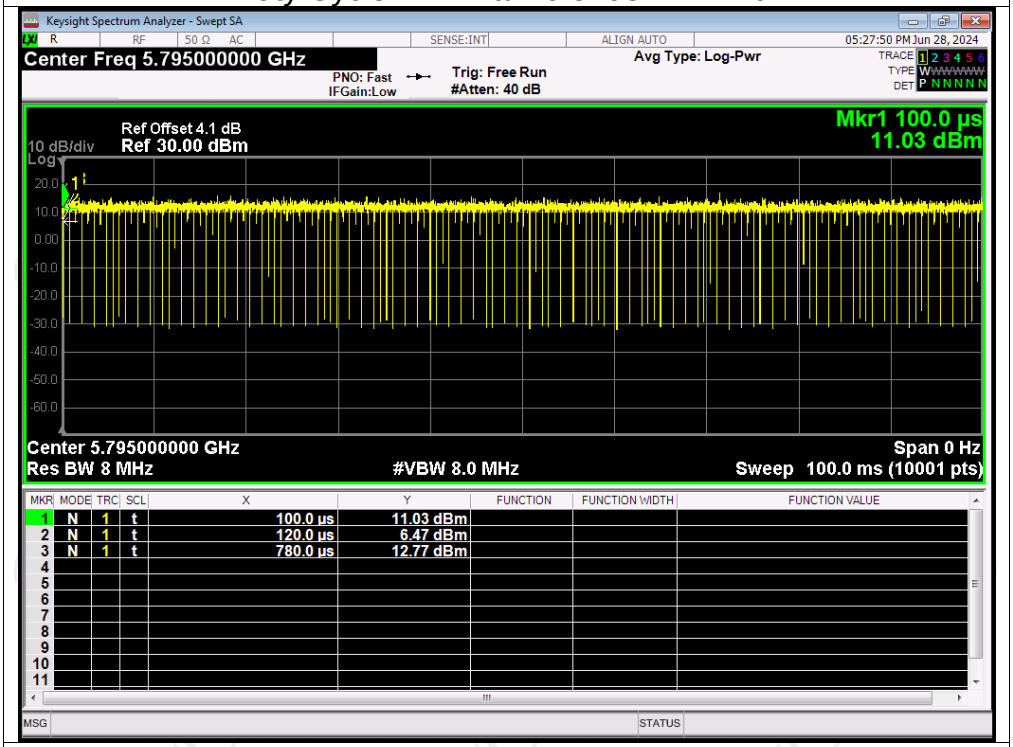

Duty Cycle NVNT ax80 5775MHz Ant2

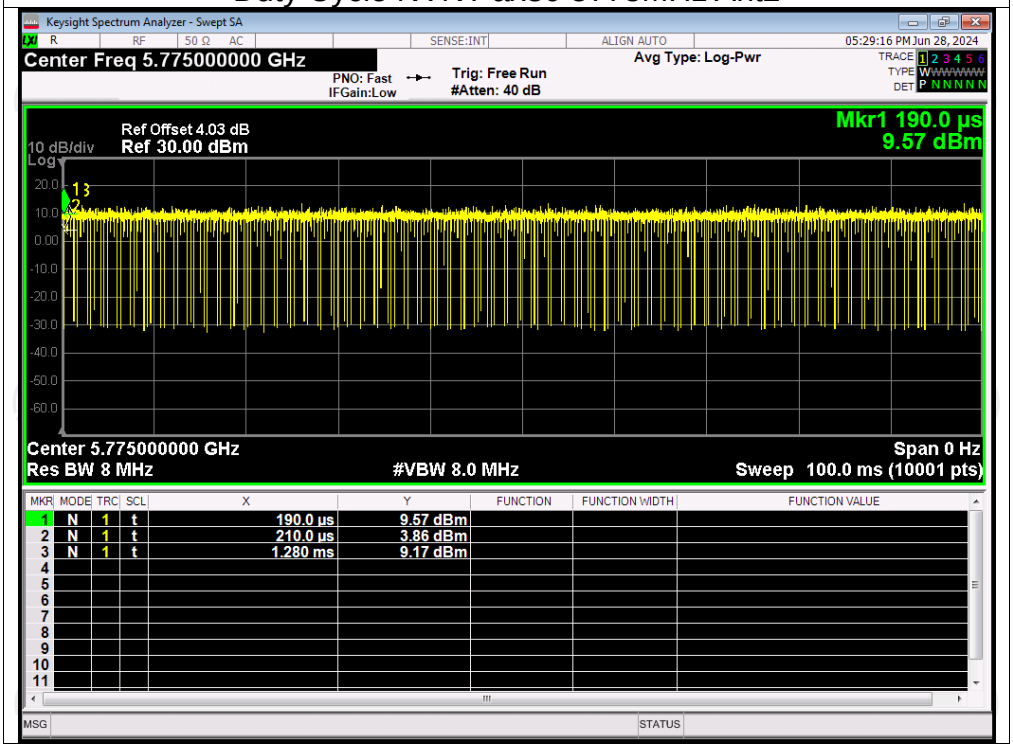

Maximum Conducted Output Power

Condition	Mode	Frequency (MHz)	Antenna	Conducted Power (dBm)	Limit (dBm)	Verdict
NVNT	a	5180	Ant2	13.82	24	Pass
NVNT	a	5200	Ant2	13.92	24	Pass
NVNT	a	5240	Ant2	13.65	24	Pass
NVNT	n20	5180	Ant2	13.81	24	Pass
NVNT	n20	5200	Ant2	13.81	24	Pass
NVNT	n20	5240	Ant2	13.49	24	Pass
NVNT	n40	5190	Ant2	13.95	24	Pass
NVNT	n40	5230	Ant2	13.90	24	Pass
NVNT	ac20	5180	Ant2	13.84	24	Pass
NVNT	ac20	5200	Ant2	13.89	24	Pass
NVNT	ac20	5240	Ant2	13.55	24	Pass
NVNT	ac40	5190	Ant2	14.07	24	Pass
NVNT	ac40	5230	Ant2	14.03	24	Pass
NVNT	ac80	5210	Ant2	13.63	24	Pass
NVNT	ax160	5250	Ant2	13.38	24	Pass
NVNT	ax20	5180	Ant2	14.04	24	Pass
NVNT	ax20	5200	Ant2	14.05	24	Pass
NVNT	ax20	5240	Ant2	13.67	24	Pass
NVNT	ax40	5190	Ant2	13.85	24	Pass
NVNT	ax40	5230	Ant2	13.80	24	Pass
NVNT	ax80	5210	Ant2	13.57	24	Pass
NVNT	a	5260	Ant2	12.66	24	Pass
NVNT	a	5300	Ant2	12.05	24	Pass
NVNT	a	5320	Ant2	12.23	24	Pass
NVNT	n20	5260	Ant2	12.52	24	Pass
NVNT	n20	5300	Ant2	11.85	24	Pass
NVNT	n20	5320	Ant2	12.05	24	Pass
NVNT	n40	5270	Ant2	12.65	24	Pass
NVNT	n40	5310	Ant2	12.10	24	Pass
NVNT	ac20	5260	Ant2	12.62	24	Pass
NVNT	ac20	5300	Ant2	11.95	24	Pass
NVNT	ac20	5320	Ant2	12.11	24	Pass
NVNT	ac40	5270	Ant2	12.76	24	Pass
NVNT	ac40	5310	Ant2	12.21	24	Pass
NVNT	ac80	5290	Ant2	12.57	24	Pass
NVNT	ax20	5260	Ant2	12.73	24	Pass
NVNT	ax20	5300	Ant2	12.03	24	Pass
NVNT	ax20	5320	Ant2	12.17	24	Pass
NVNT	ax40	5270	Ant2	12.56	24	Pass
NVNT	ax40	5310	Ant2	12.02	24	Pass
NVNT	ax80	5290	Ant2	12.38	24	Pass
NVNT	a	5500	Ant2	11.91	24	Pass
NVNT	a	5600	Ant2	12.77	24	Pass
NVNT	a	5700	Ant2	12.42	24	Pass

NVNT	n20	5500	Ant2	11.65	24	Pass
NVNT	n20	5600	Ant2	12.60	24	Pass
NVNT	n20	5700	Ant2	12.32	24	Pass
NVNT	n40	5510	Ant2	11.63	24	Pass
NVNT	n40	5590	Ant2	12.52	24	Pass
NVNT	n40	5670	Ant2	12.42	24	Pass
NVNT	ac20	5500	Ant2	11.76	24	Pass
NVNT	ac20	5600	Ant2	12.72	24	Pass
NVNT	ac20	5700	Ant2	12.42	24	Pass
NVNT	ac40	5510	Ant2	11.73	24	Pass
NVNT	ac40	5590	Ant2	12.69	24	Pass
NVNT	ac40	5670	Ant2	12.67	24	Pass
NVNT	ac80	5530	Ant2	11.59	24	Pass
NVNT	ac80	5610	Ant2	12.78	24	Pass
NVNT	ax160	5570	Ant2	12.20	24	Pass
NVNT	ax20	5500	Ant2	11.81	24	Pass
NVNT	ax20	5600	Ant2	12.85	24	Pass
NVNT	ax20	5700	Ant2	12.59	24	Pass
NVNT	ax40	5510	Ant2	11.54	24	Pass
NVNT	ax40	5590	Ant2	12.52	24	Pass
NVNT	ax40	5670	Ant2	12.49	24	Pass
NVNT	ax80	5530	Ant2	11.52	24	Pass
NVNT	ax80	5610	Ant2	12.45	24	Pass
NVNT	a	5745	Ant2	12.22	30	Pass
NVNT	a	5785	Ant2	12.16	30	Pass
NVNT	a	5825	Ant2	12.03	30	Pass
NVNT	n20	5745	Ant2	11.85	30	Pass
NVNT	n20	5785	Ant2	11.91	30	Pass
NVNT	n20	5825	Ant2	11.81	30	Pass
NVNT	n40	5755	Ant2	11.65	30	Pass
NVNT	n40	5795	Ant2	11.92	30	Pass
NVNT	ac20	5745	Ant2	11.94	30	Pass
NVNT	ac20	5785	Ant2	12.00	30	Pass
NVNT	ac20	5825	Ant2	12.00	30	Pass
NVNT	ac40	5755	Ant2	11.73	30	Pass
NVNT	ac40	5795	Ant2	12.02	30	Pass
NVNT	ac80	5775	Ant2	11.89	30	Pass
NVNT	ax20	5745	Ant2	11.98	30	Pass
NVNT	ax20	5785	Ant2	11.99	30	Pass
NVNT	ax20	5825	Ant2	12.06	27	Pass
NVNT	ax40	5755	Ant2	11.62	30	Pass
NVNT	ax40	5795	Ant2	11.85	30	Pass
NVNT	ax80	5775	Ant2	11.61	30	Pass

Test Graphs

Power NVNT a 5180MHz Ant2

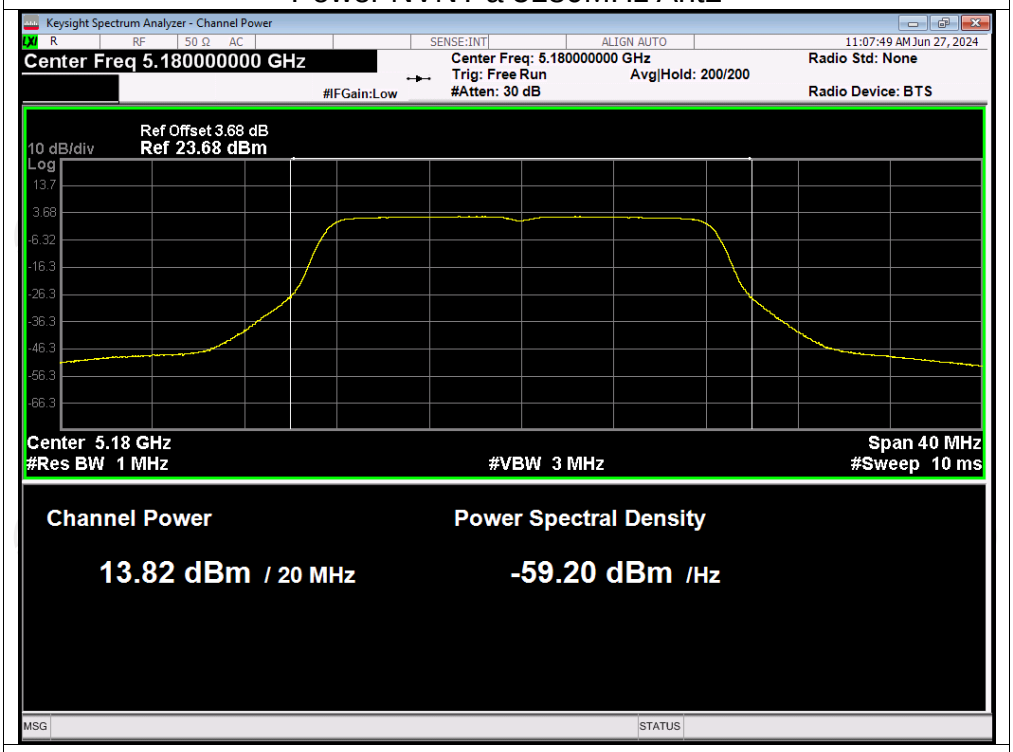

Power NVNT a 5200MHz Ant2

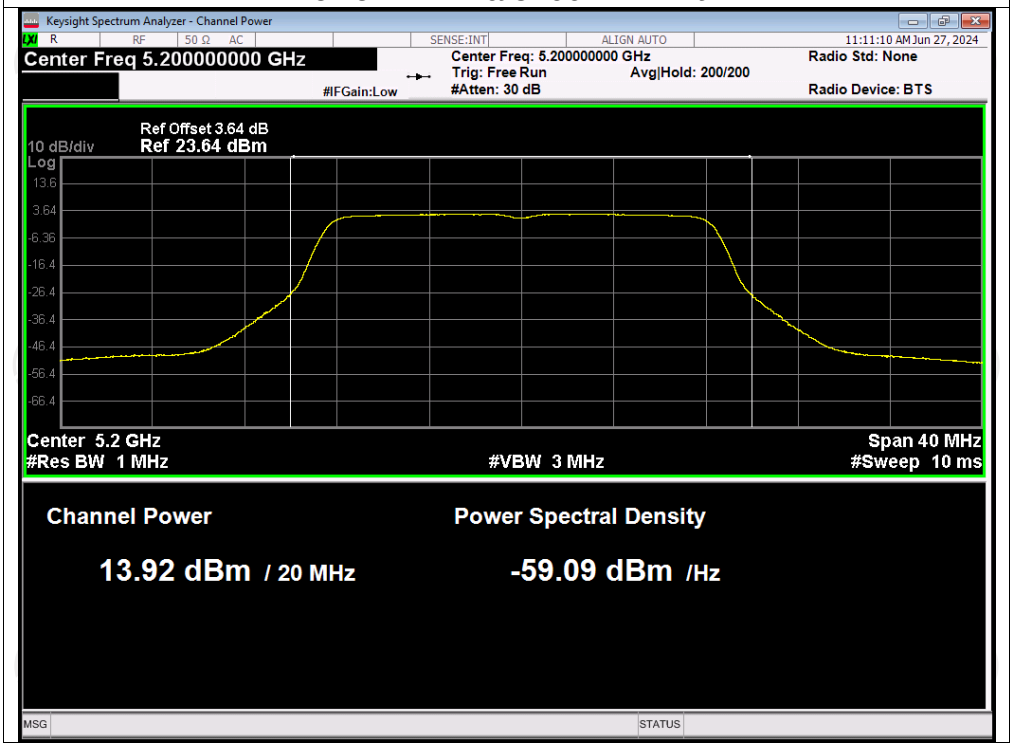

Power NVNT a 5240MHz Ant2

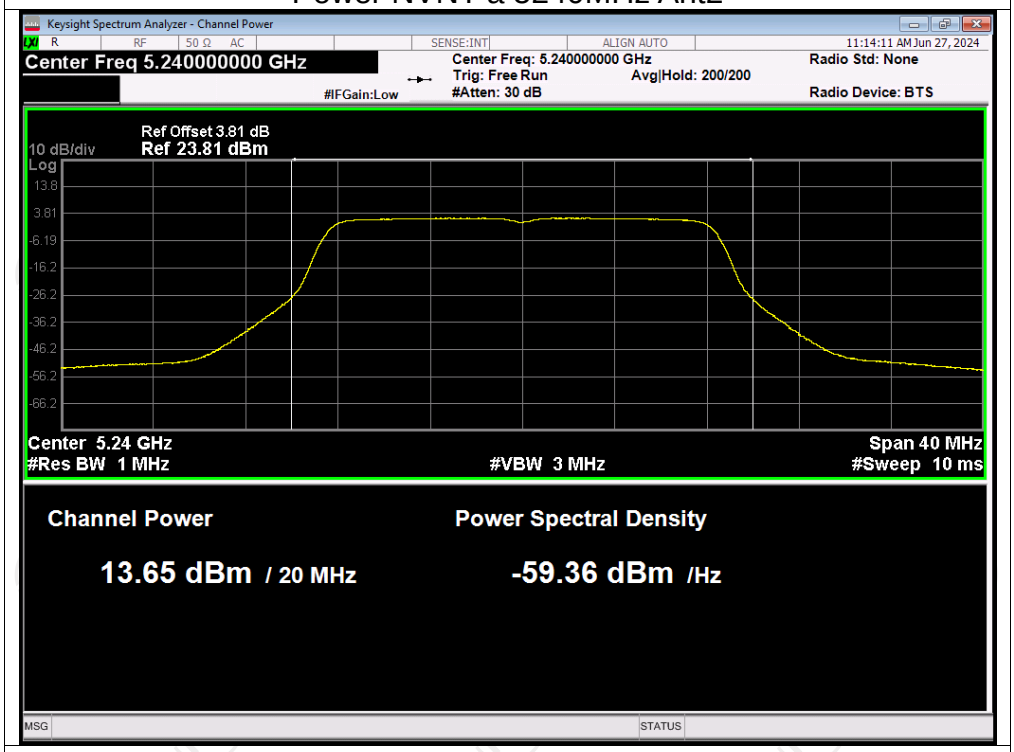

Power NVNT n20 5180MHz Ant2

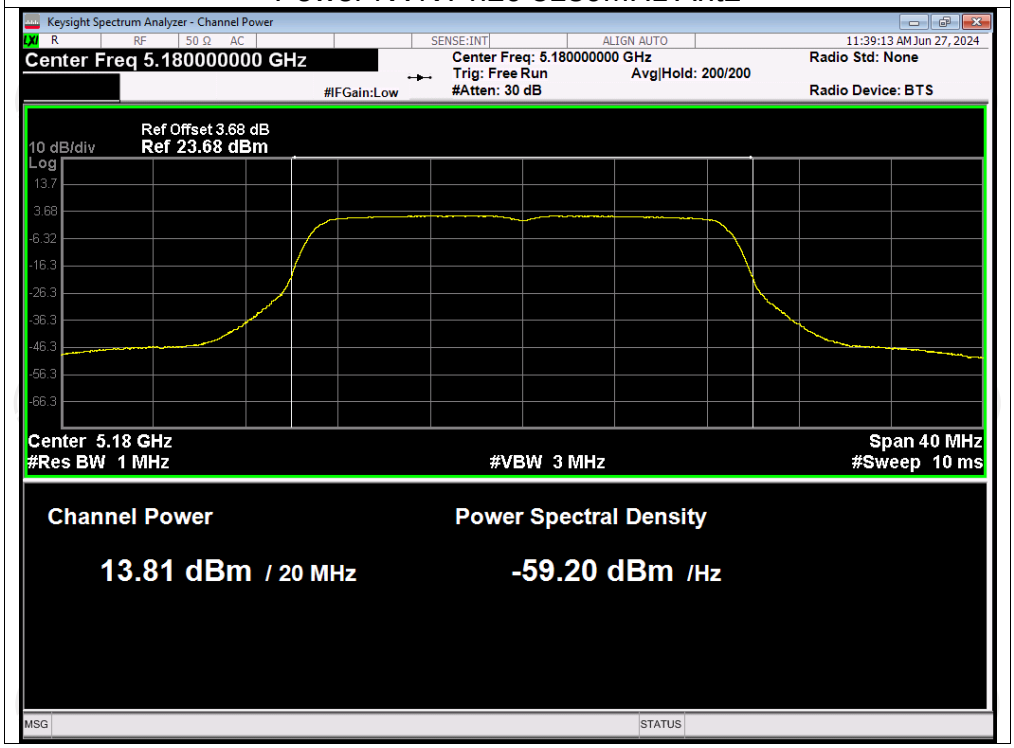

Power NVNT n20 5200MHz Ant2

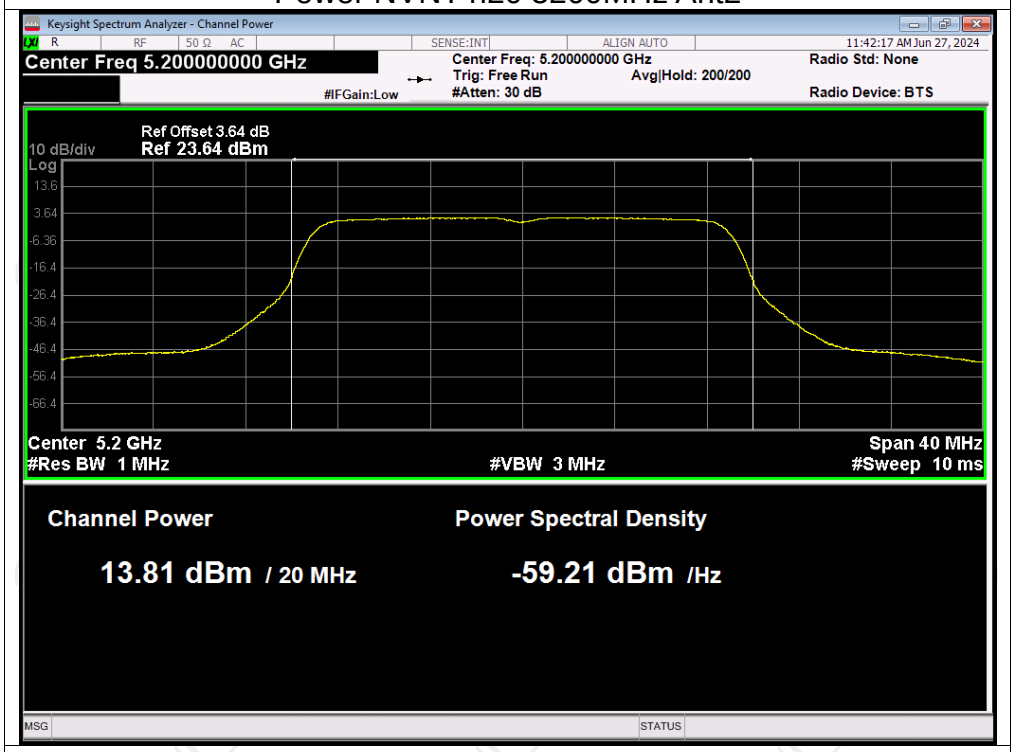

Power NVNT n20 5240MHz Ant2

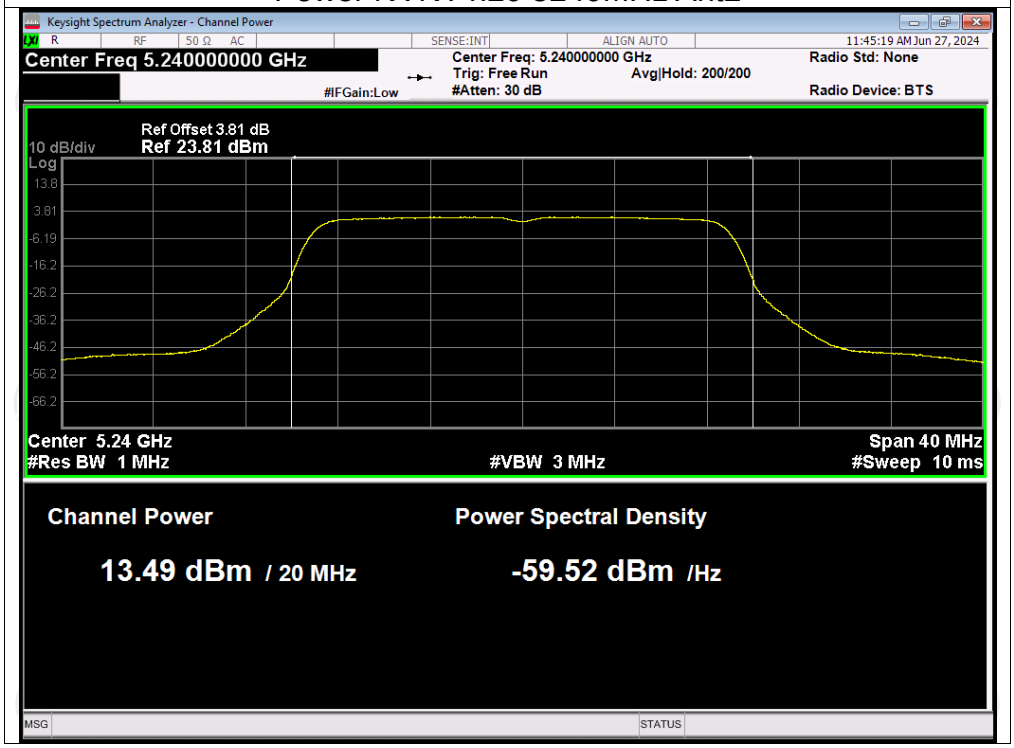

Power NVNT n40 5190MHz Ant2

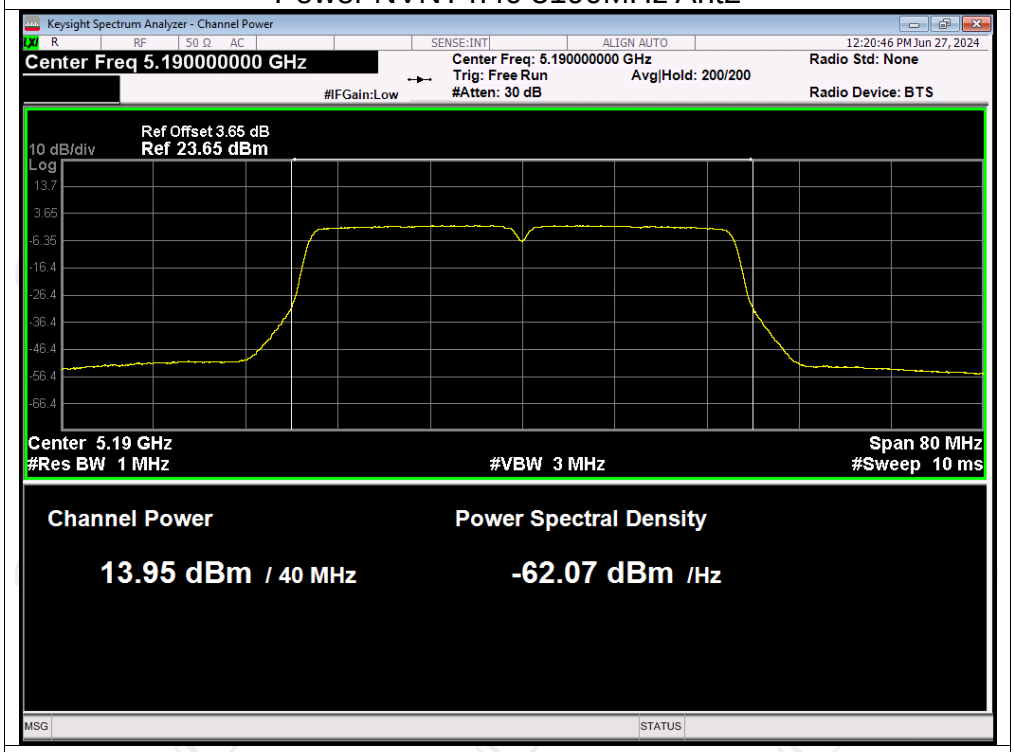

Power NVNT n40 5230MHz Ant2

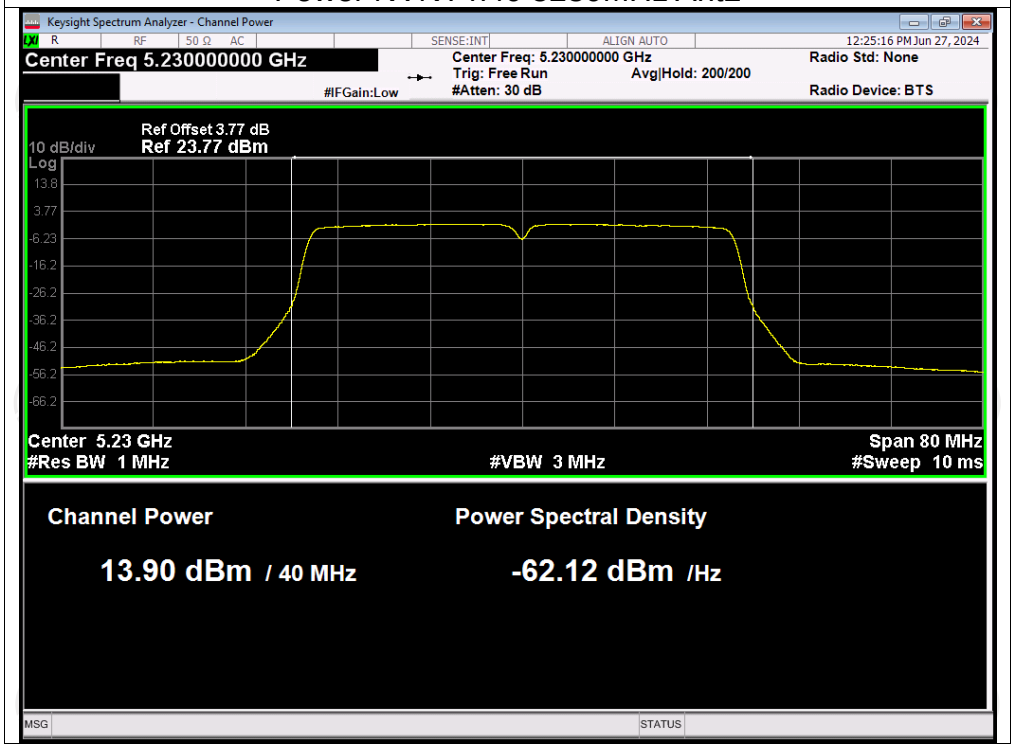

Power NVNT ac20 5180MHz Ant2

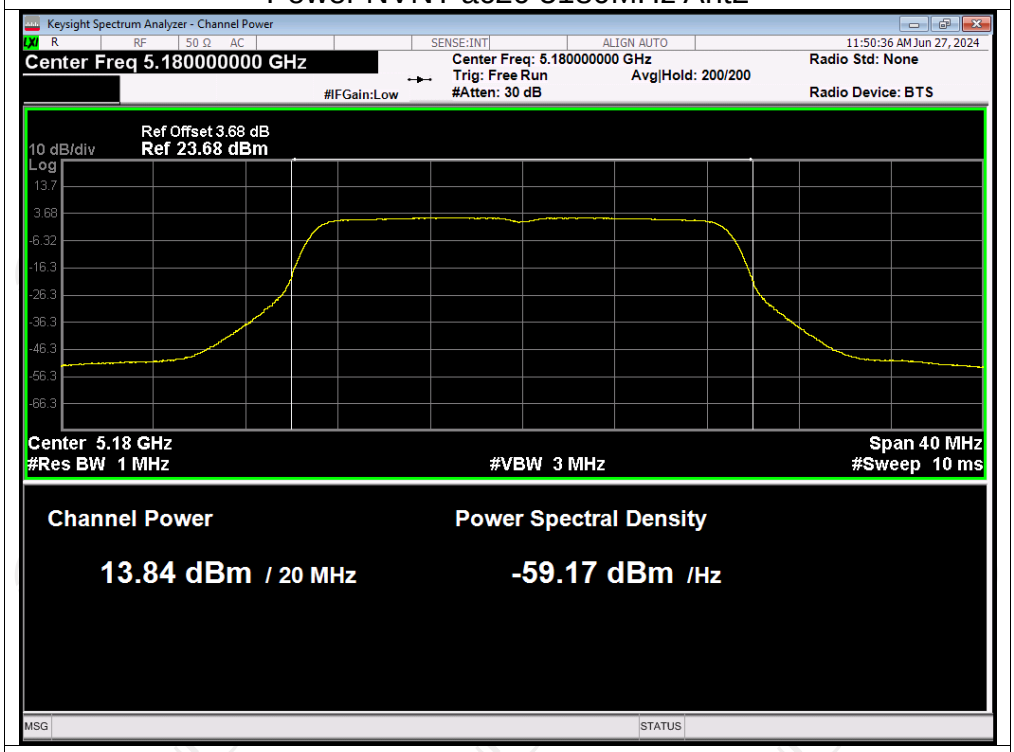

Power NVNT ac20 5200MHz Ant2

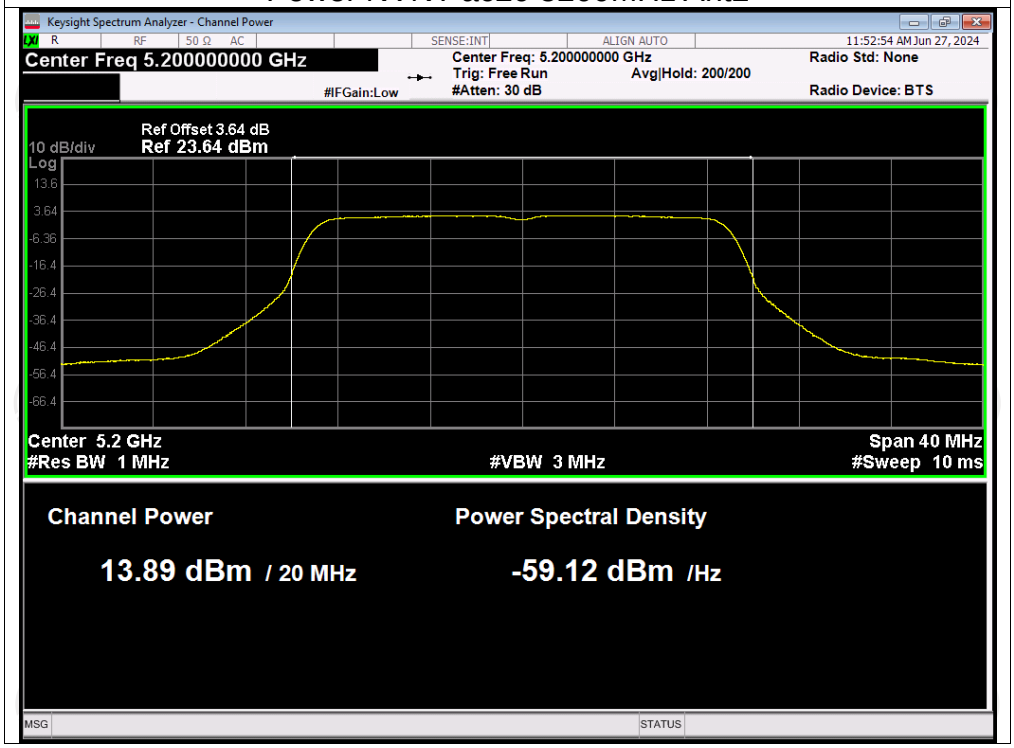

Power NVNT ac20 5240MHz Ant2

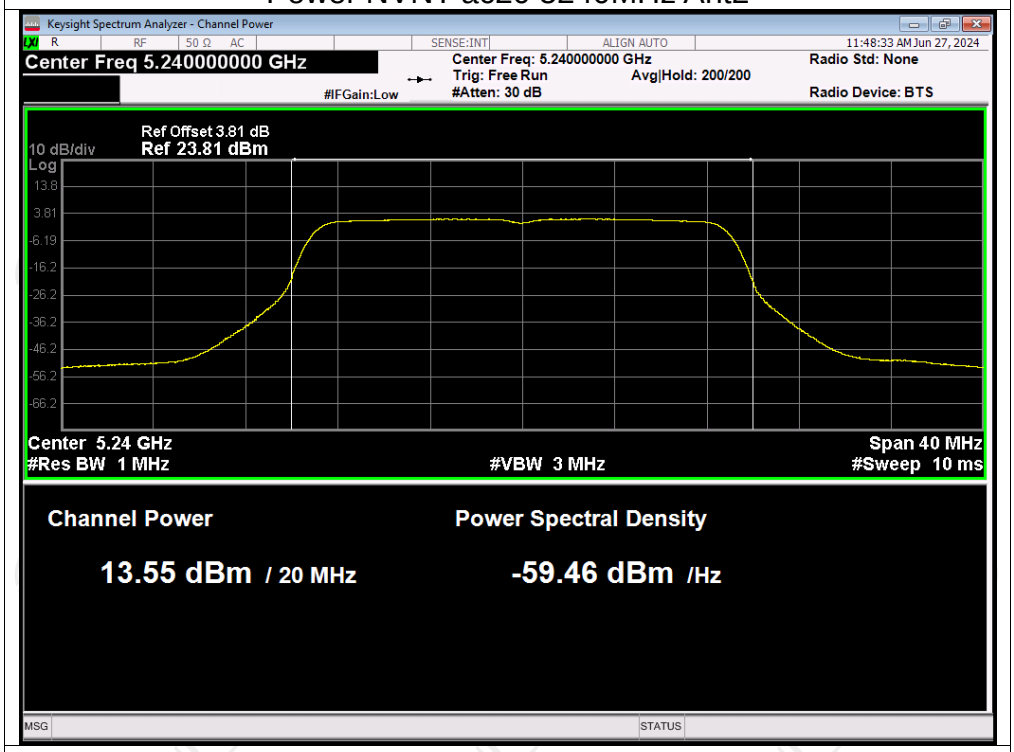

Power NVNT ac40 5190MHz Ant2

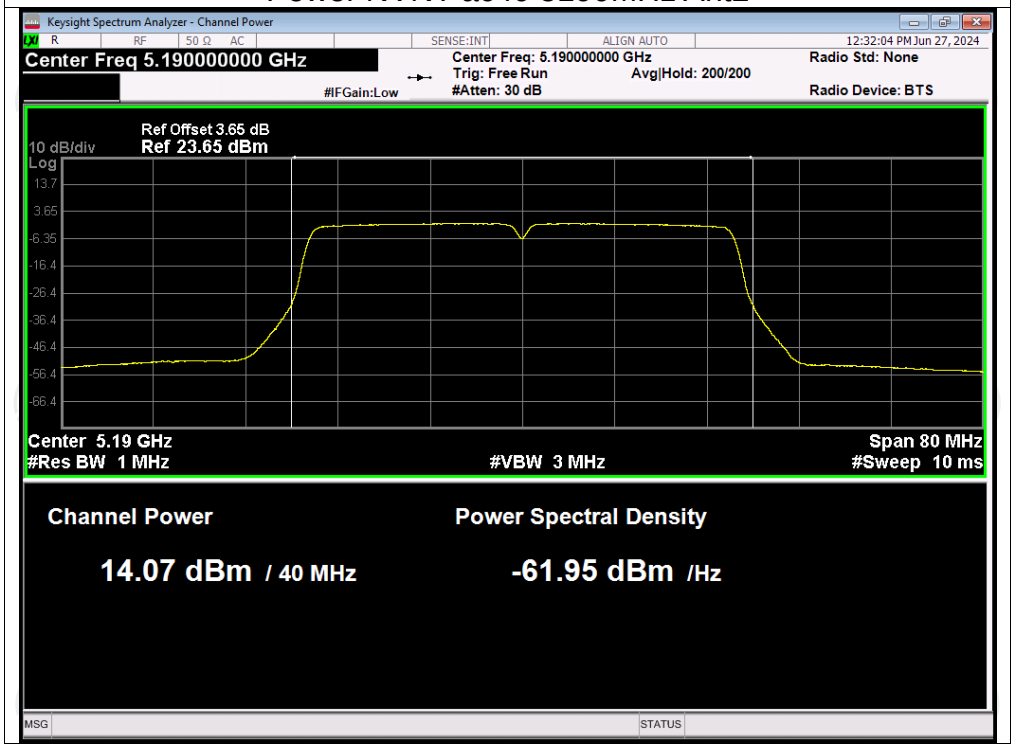

Power NVNT ac40 5230MHz Ant2

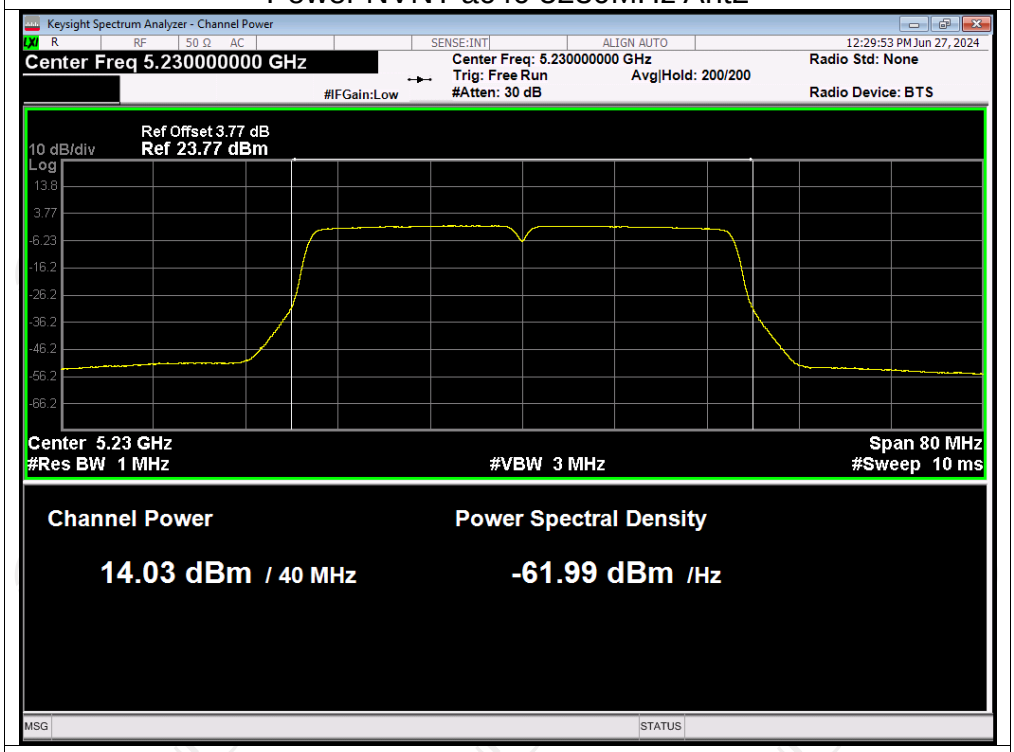

Power NVNT ac80 5210MHz Ant2

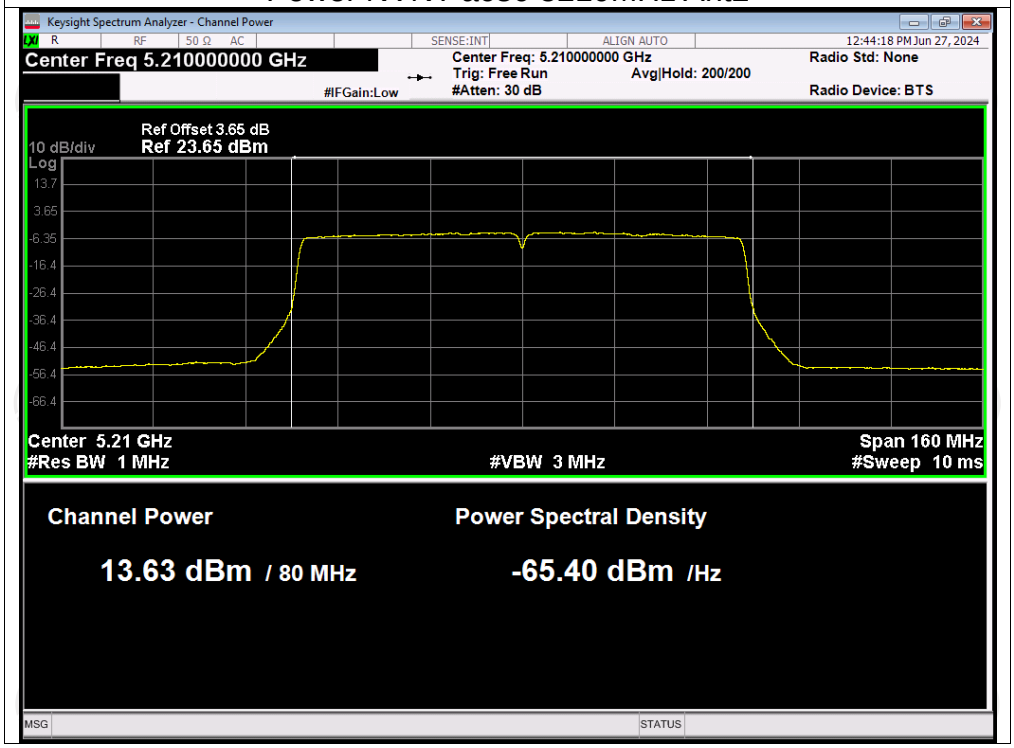

Power NVNT ax160 5250MHz Ant2

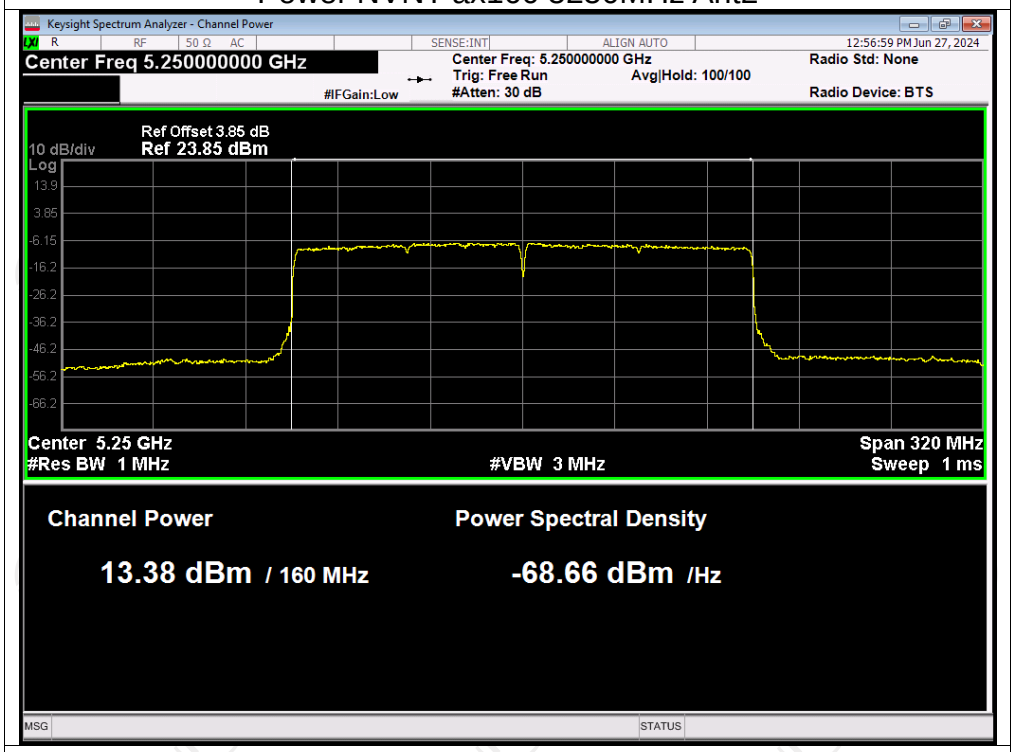

Power NVNT ax20 5180MHz Ant2

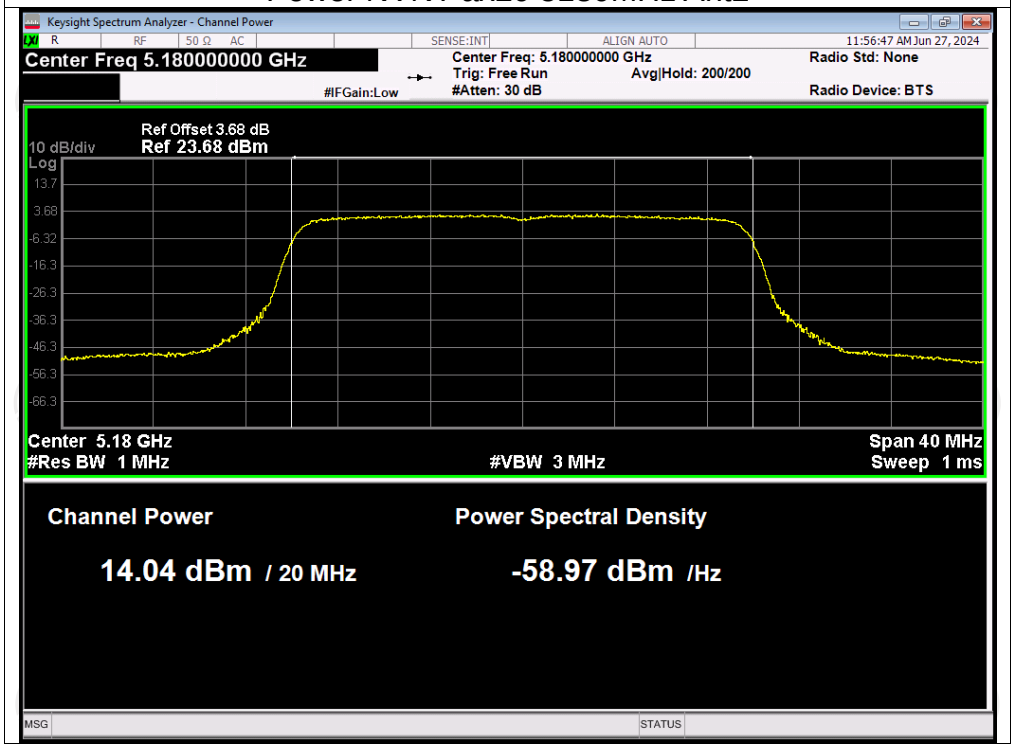

Power NVNT ax20 5200MHz Ant2

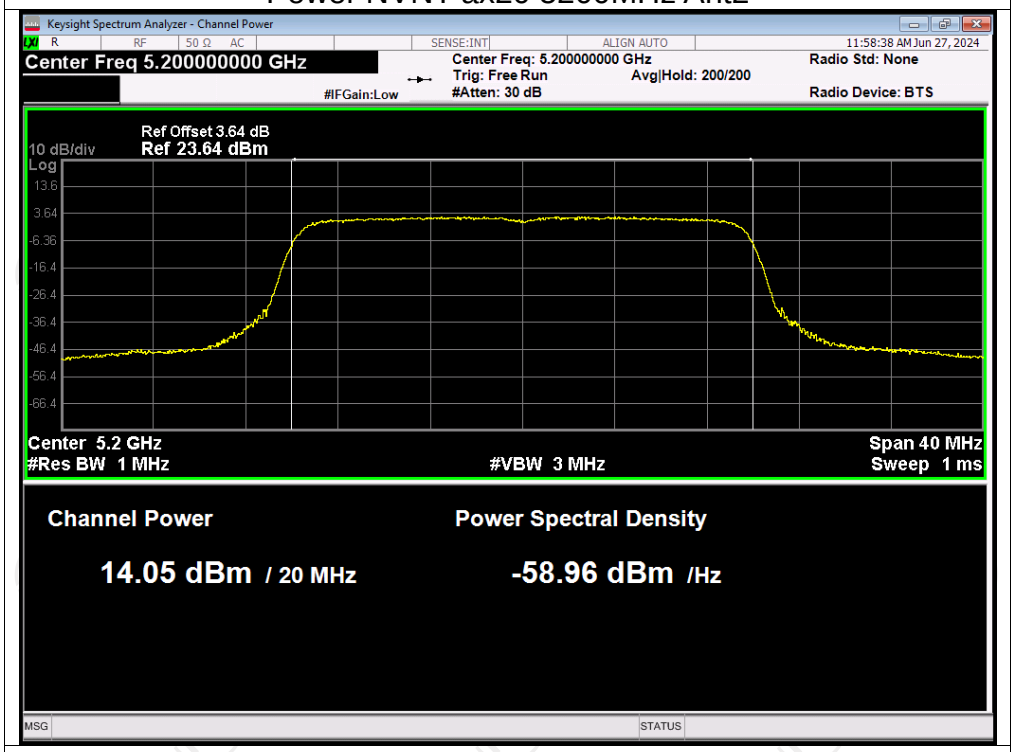

Power NVNT ax20 5240MHz Ant2

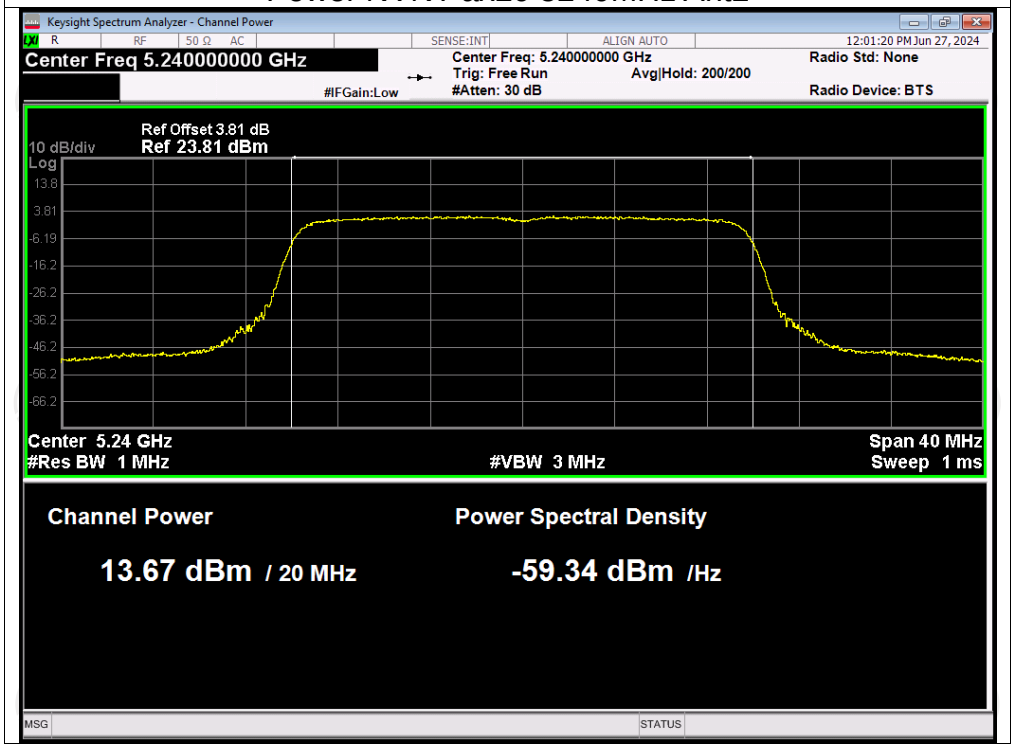

Power NVNT ax40 5190MHz Ant2

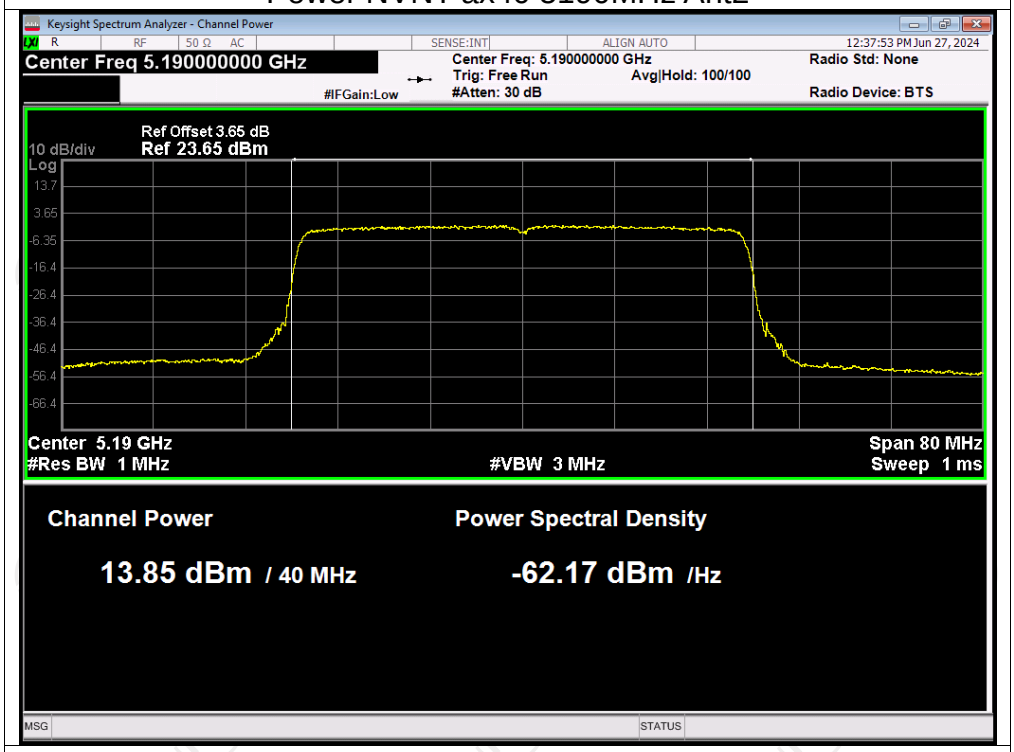

Power NVNT ax40 5230MHz Ant2

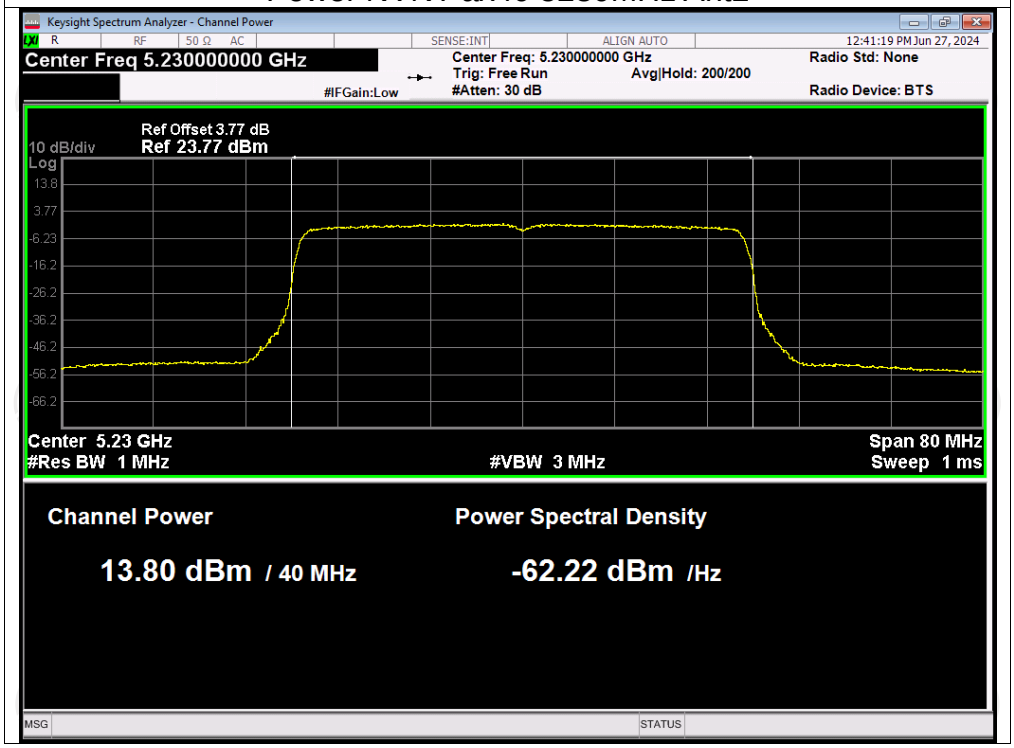

Power NVNT ax80 5210MHz Ant2

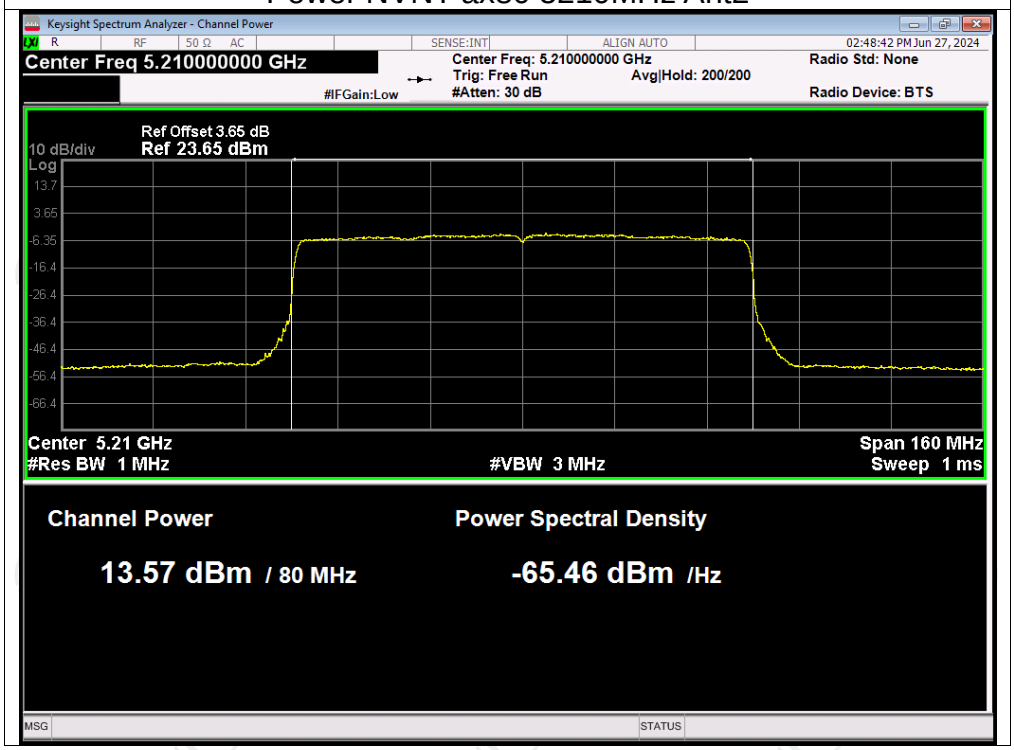

Test Graphs

Power NVNT a 5260MHz Ant2

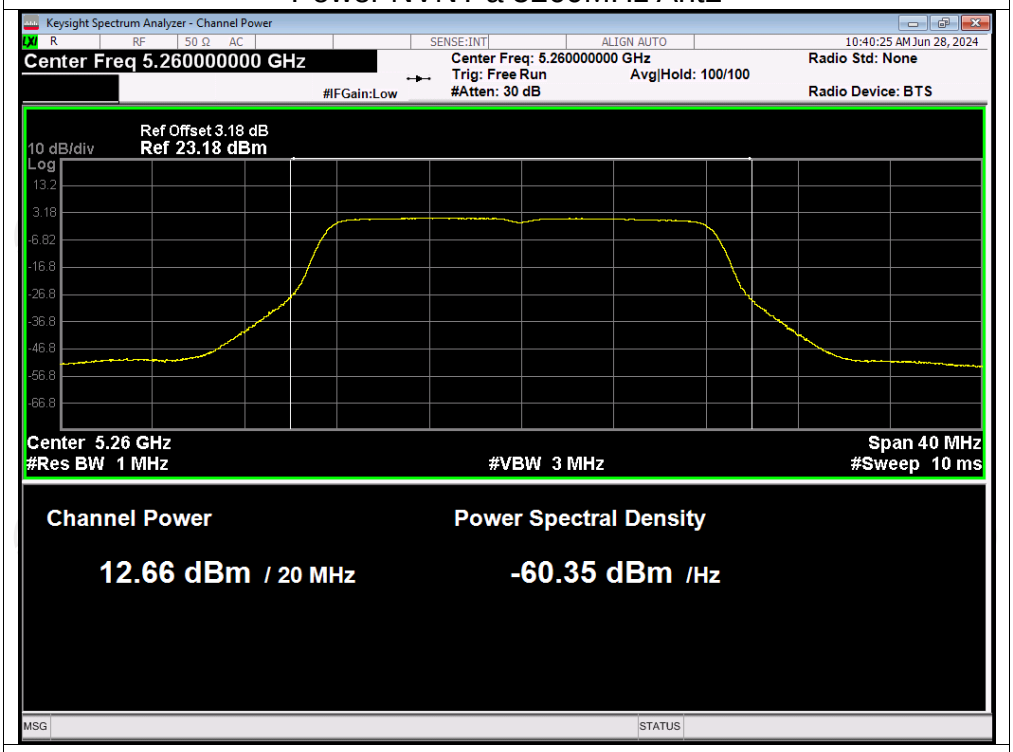

Power NVNT a 5300MHz Ant2

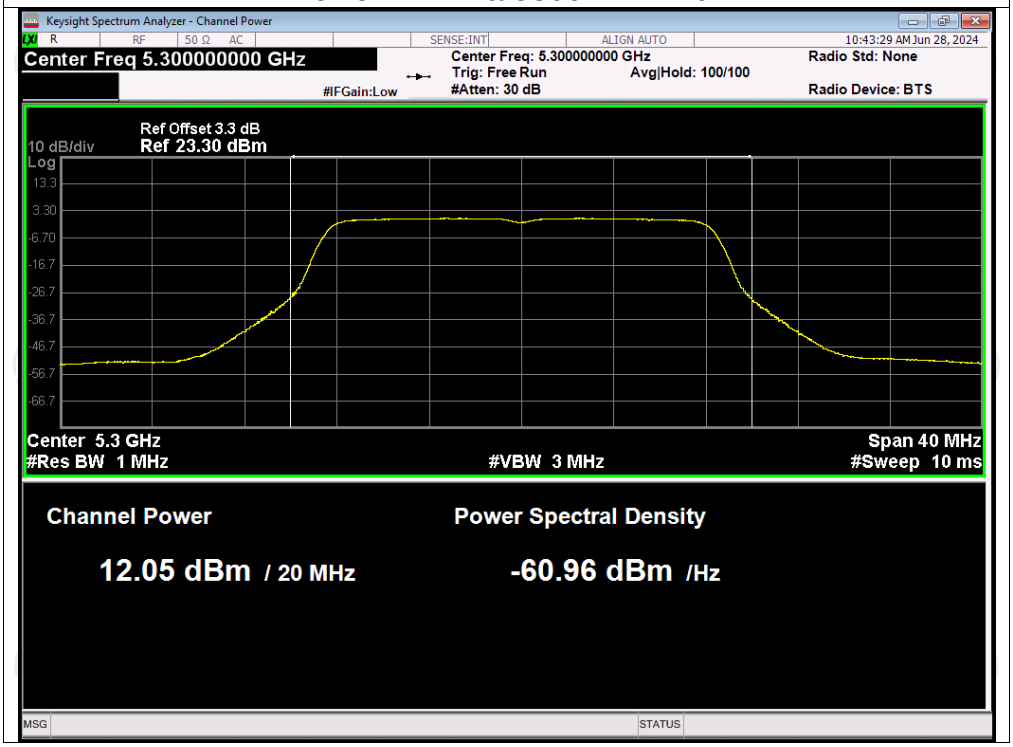

Power NVNT a 5320MHz Ant2

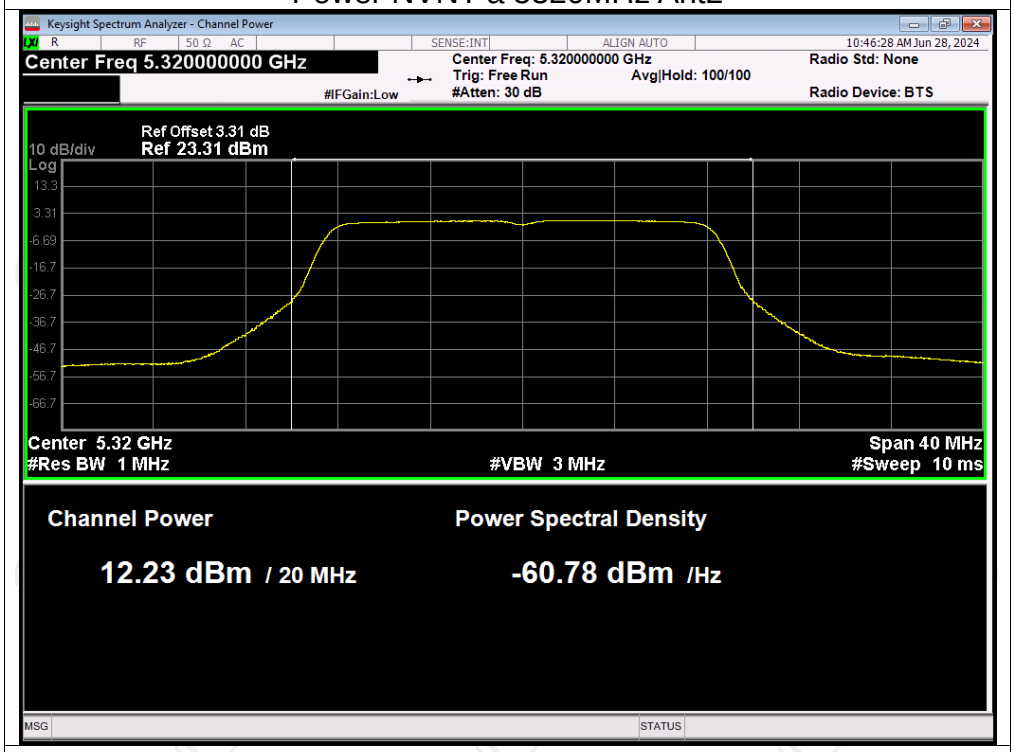

Power NVNT n20 5260MHz Ant2

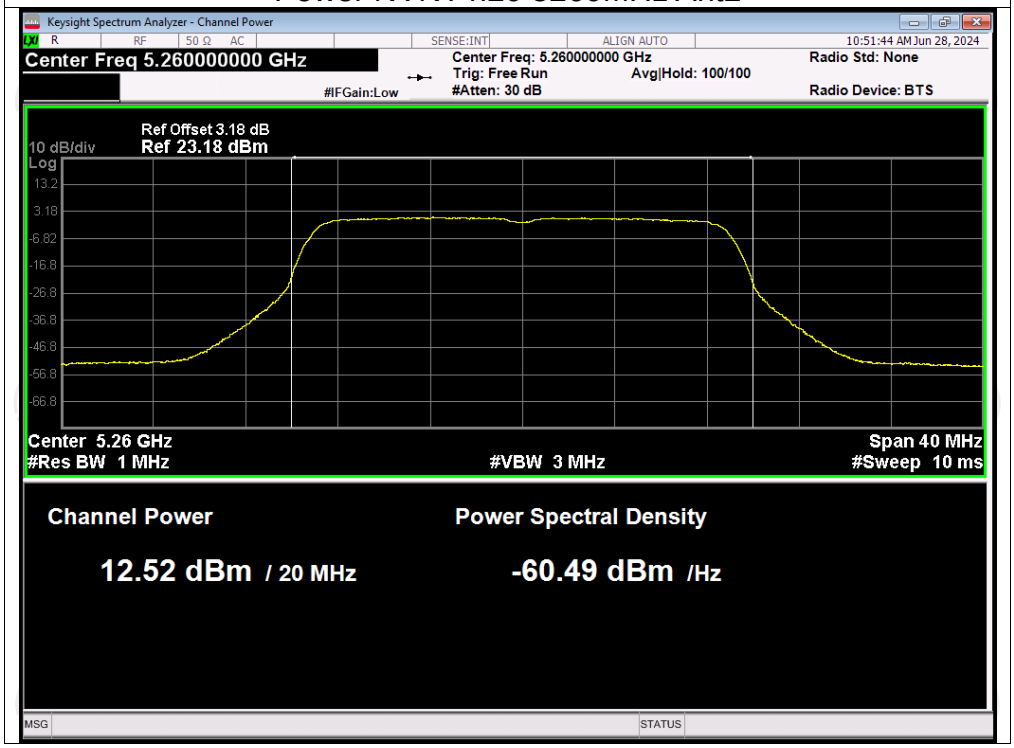

Power NVNT n20 5300MHz Ant2

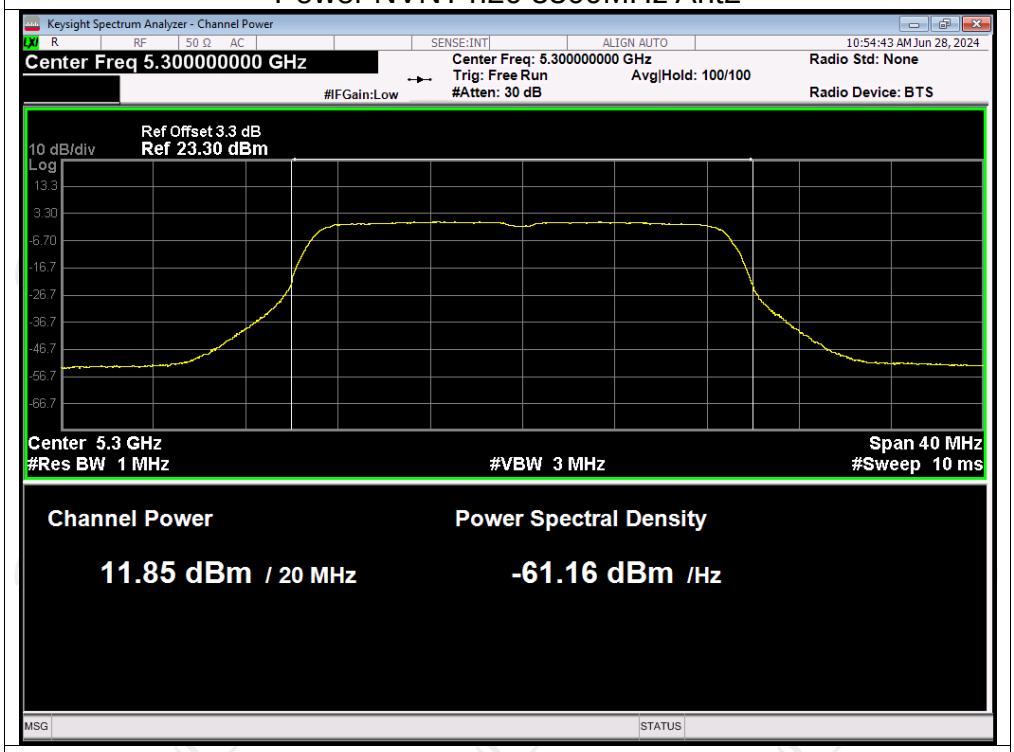

Power NVNT n20 5320MHz Ant2

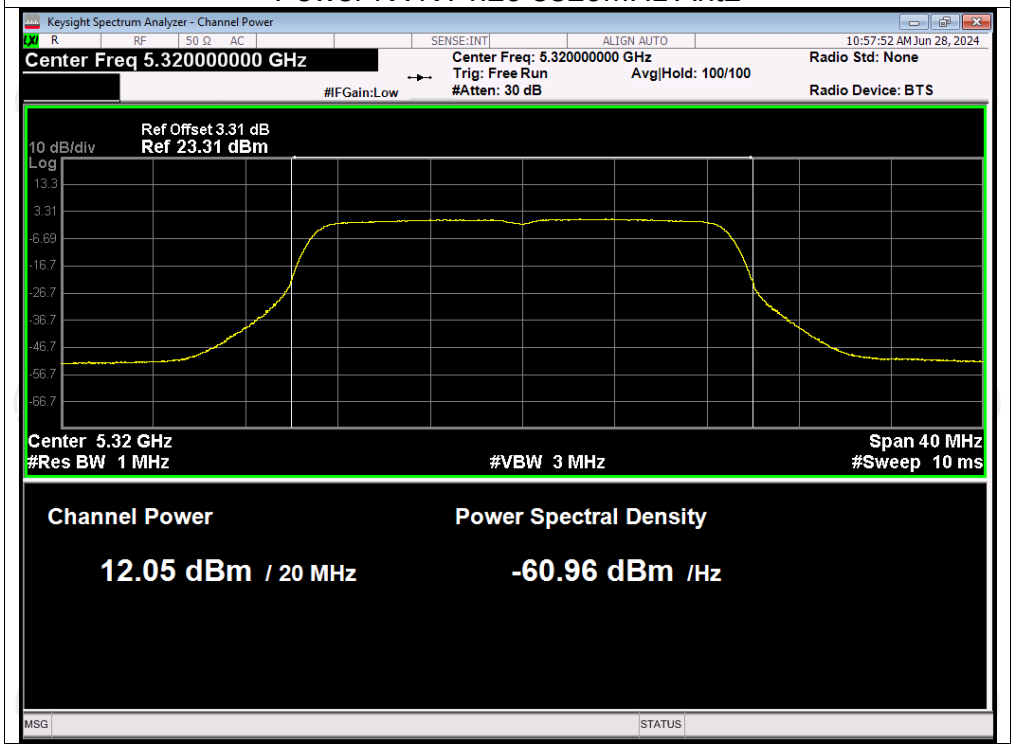

Power NVNT n40 5270MHz Ant2

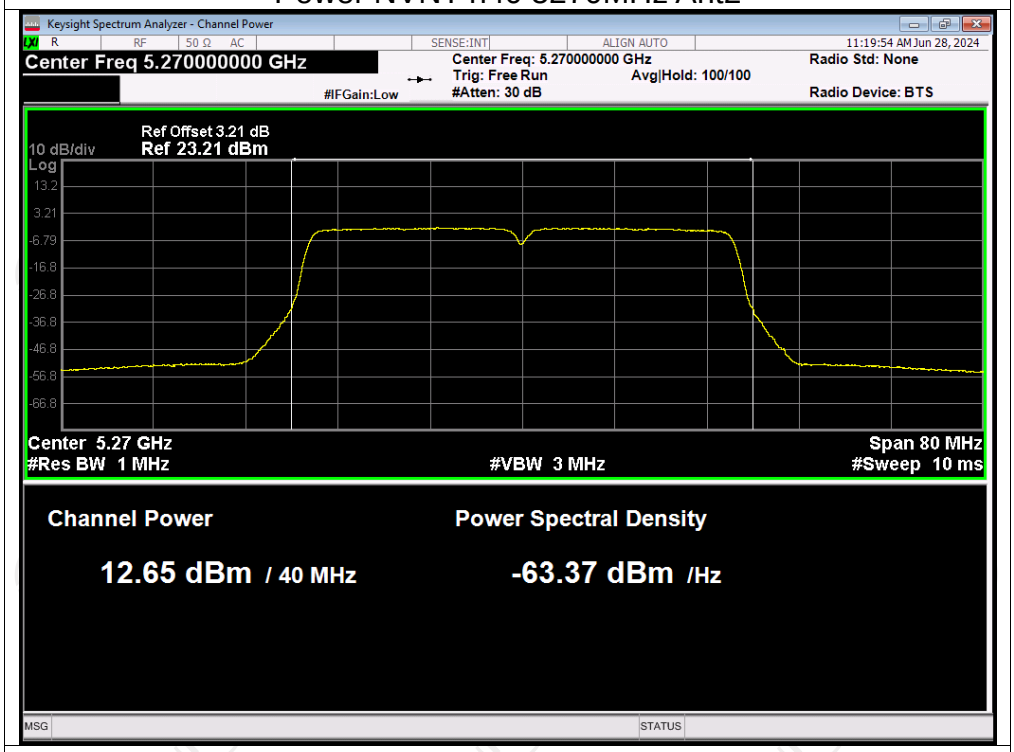

Power NVNT n40 5310MHz Ant2

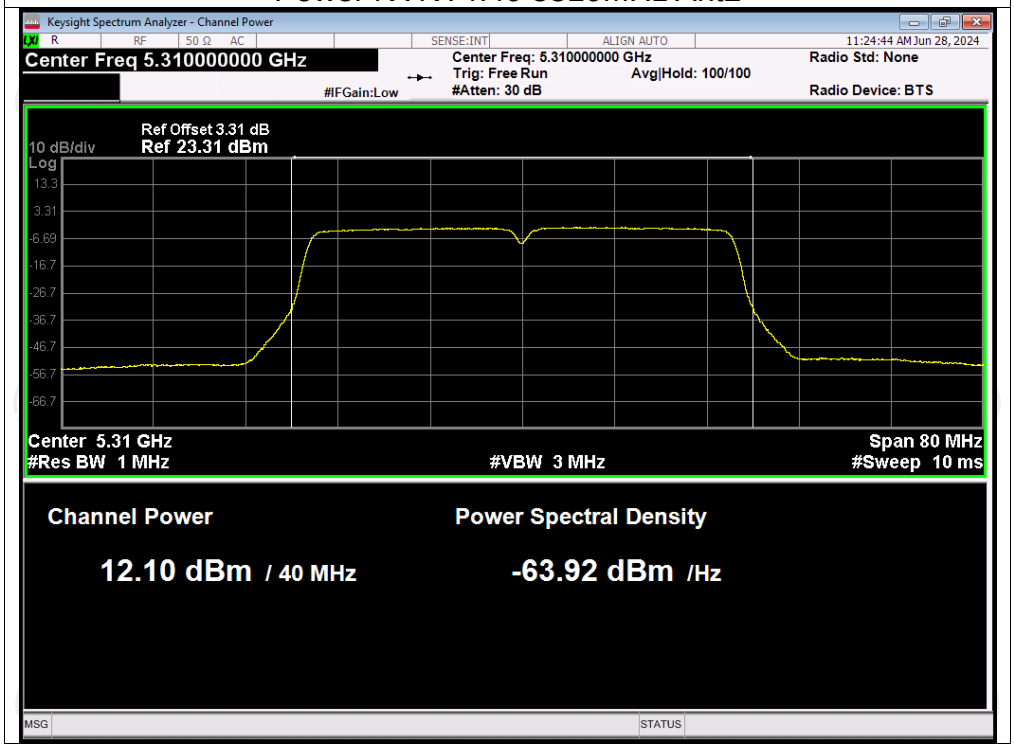

Power NVNT ac20 5260MHz Ant2

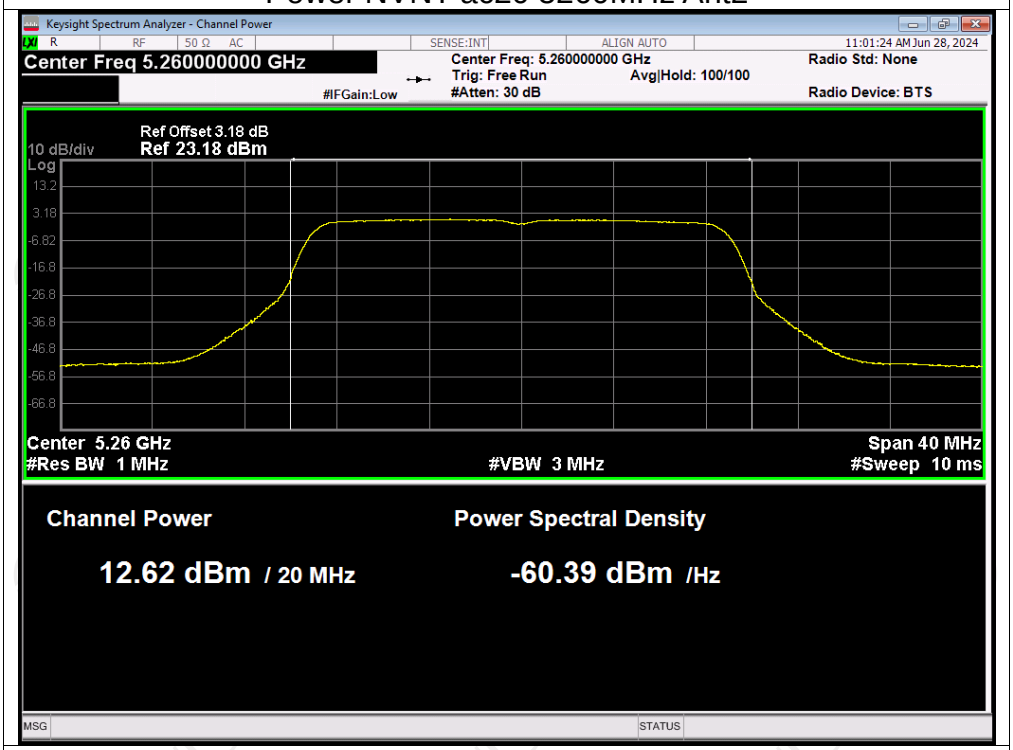

Power NVNT ac20 5300MHz Ant2

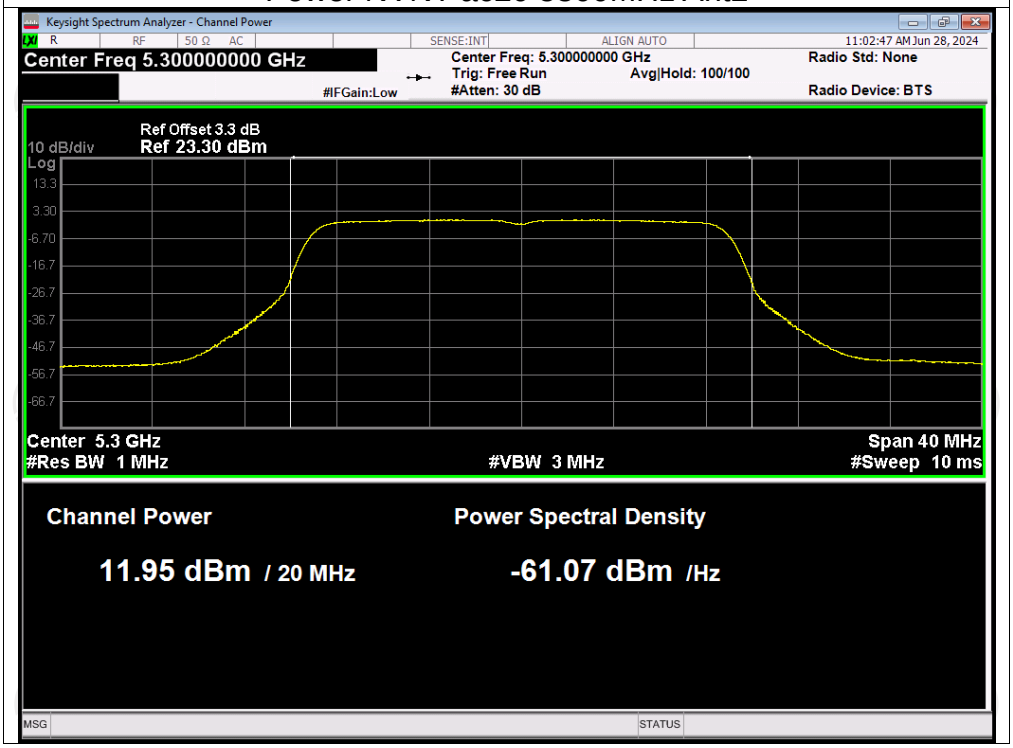

Power NVNT ac20 5320MHz Ant2

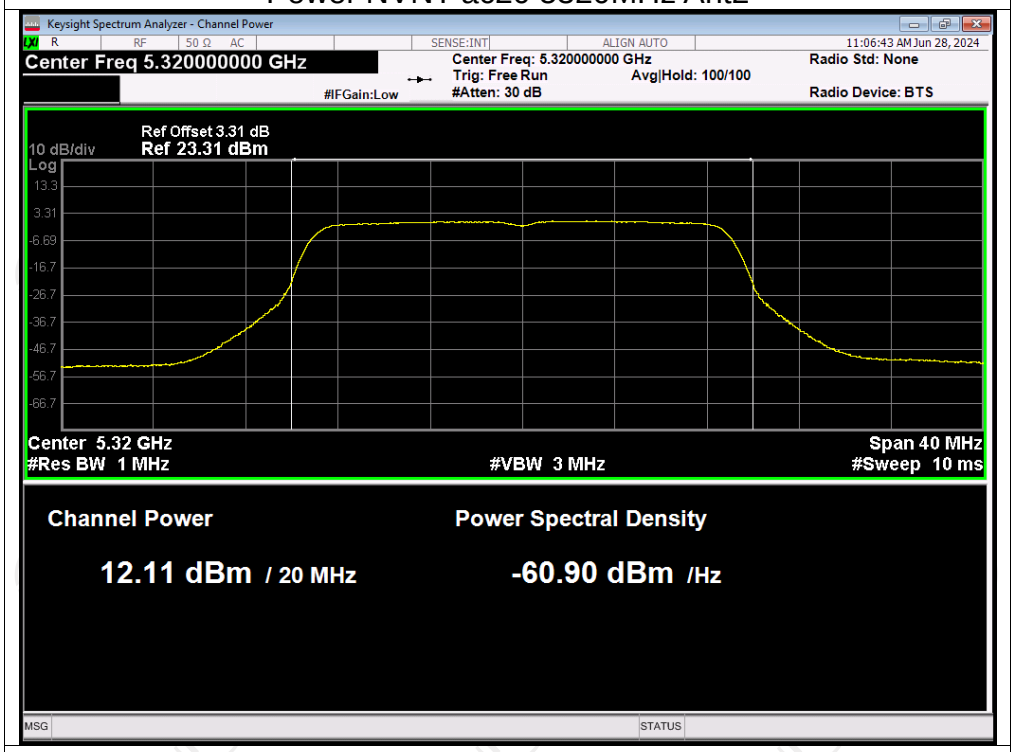

Power NVNT ac40 5270MHz Ant2

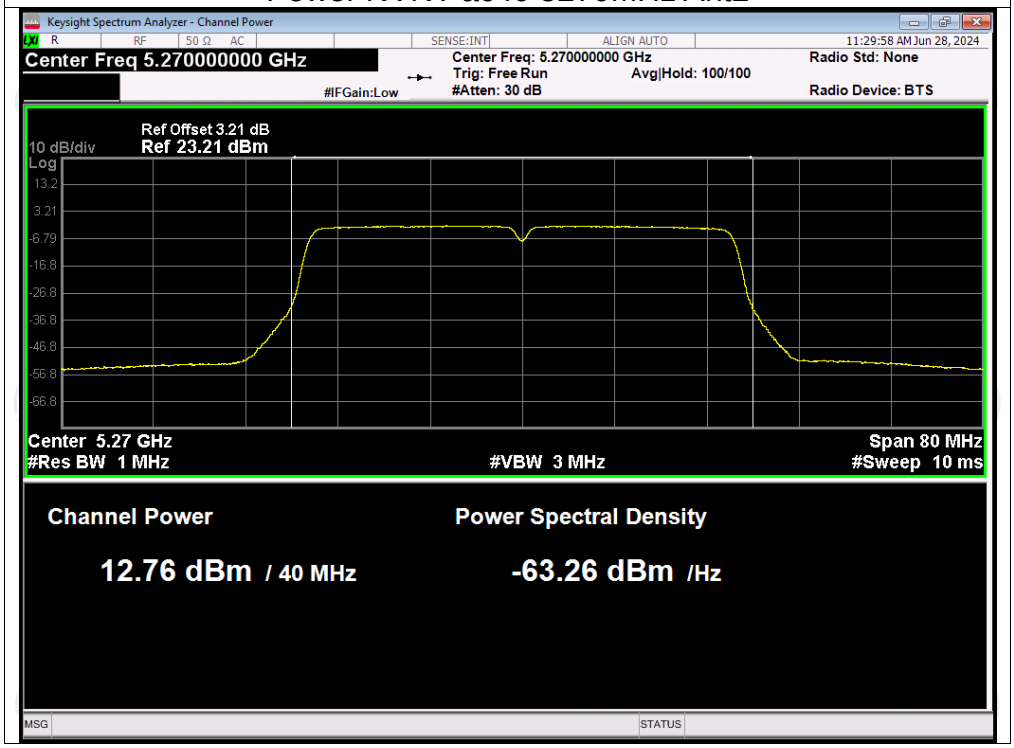

Power NVNT ac40 5310MHz Ant2

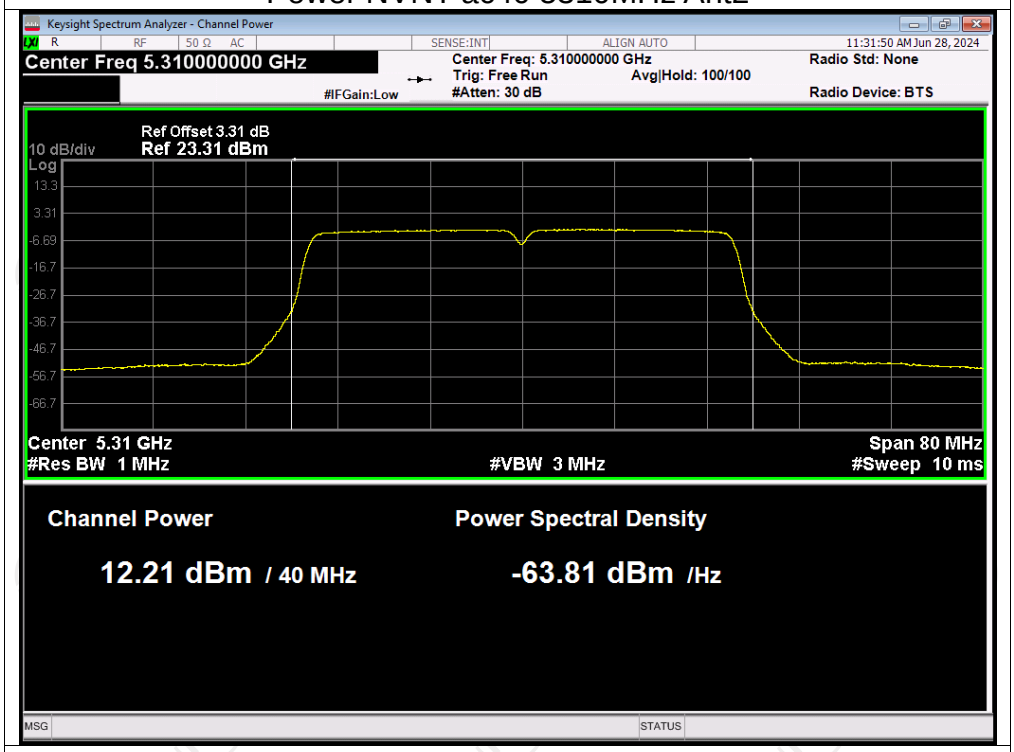

Power NVNT ac80 5290MHz Ant2

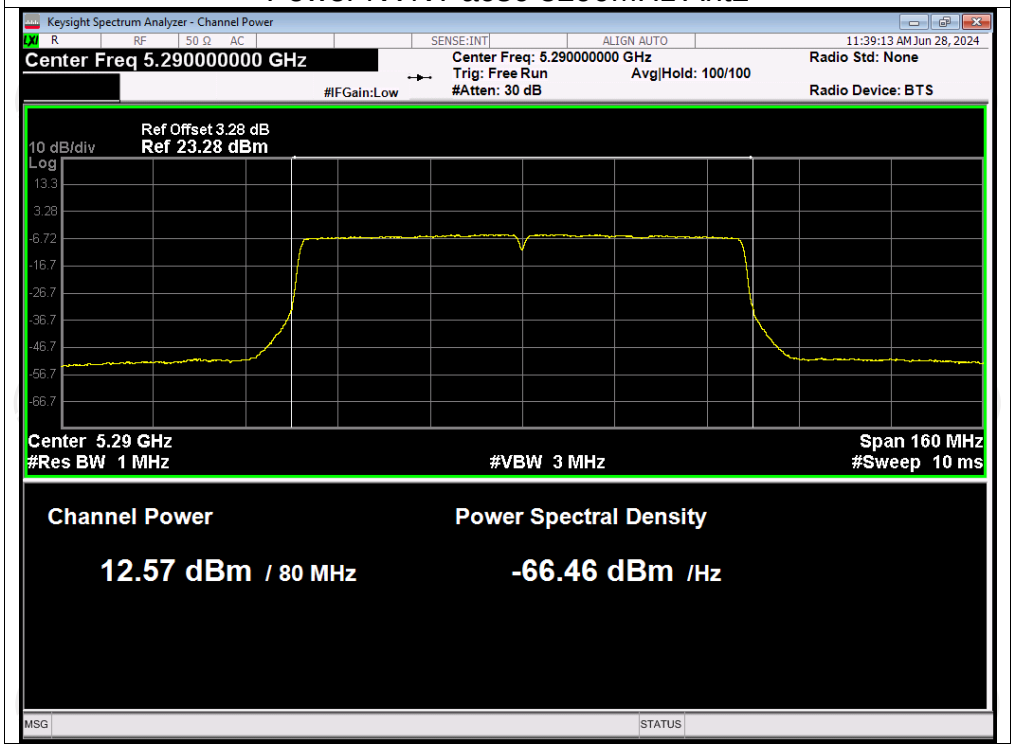

Power NVNT ax20 5260MHz Ant2

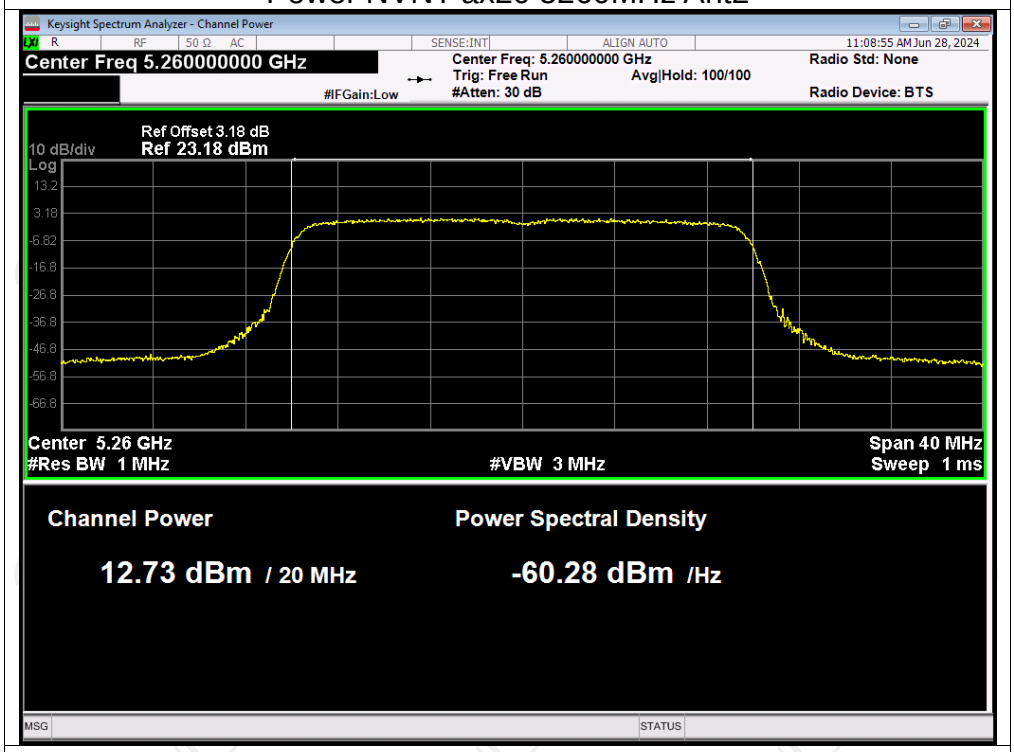

Power NVNT ax20 5300MHz Ant2

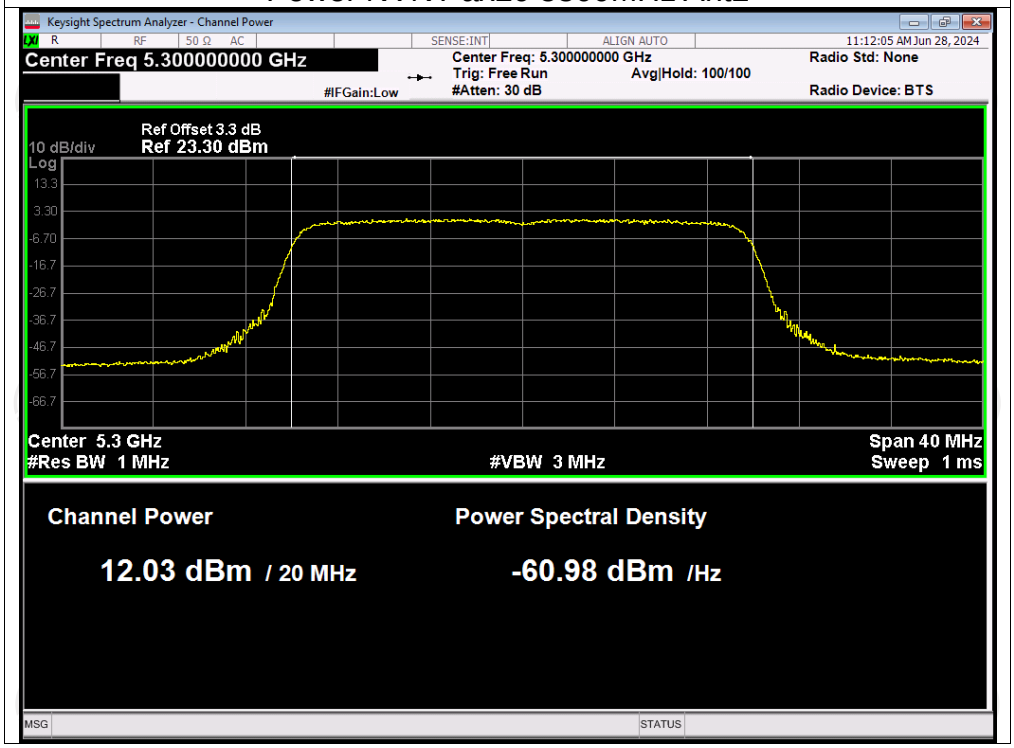

Power NVNT ax20 5320MHz Ant2

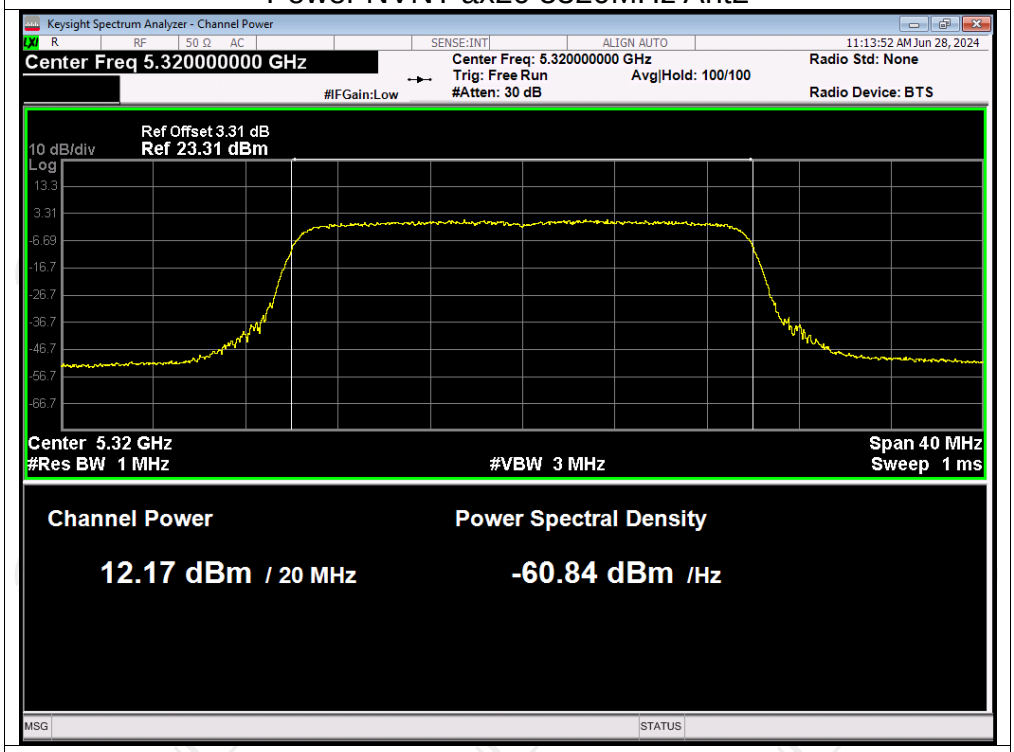

Power NVNT ax40 5270MHz Ant2

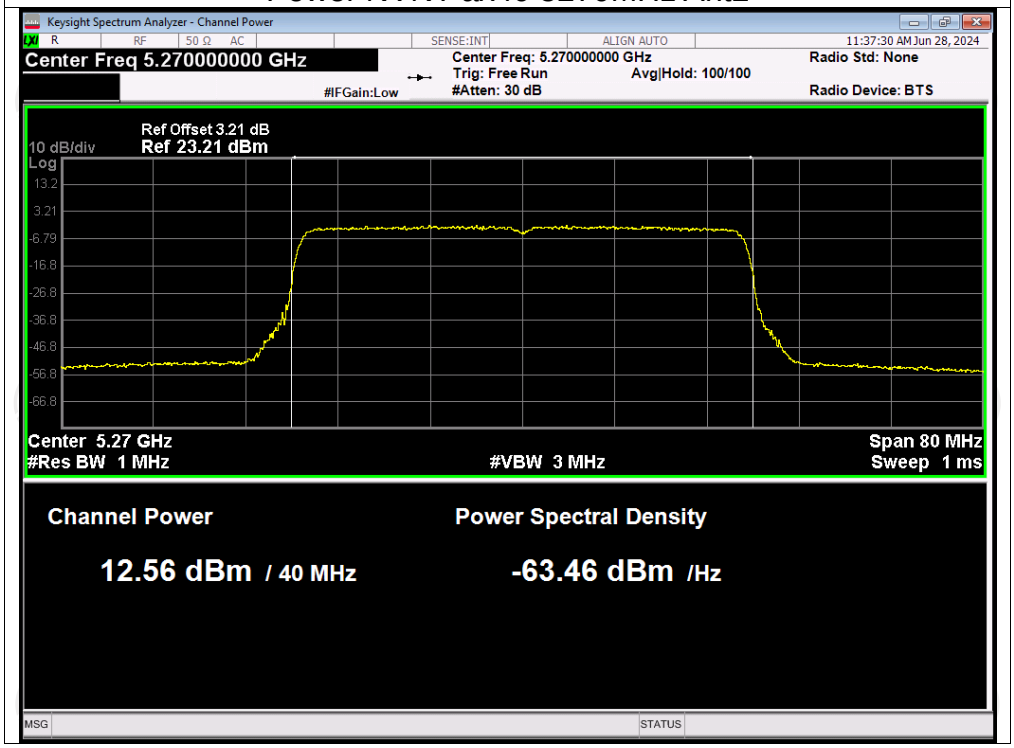

Power NVNT ax40 5310MHz Ant2

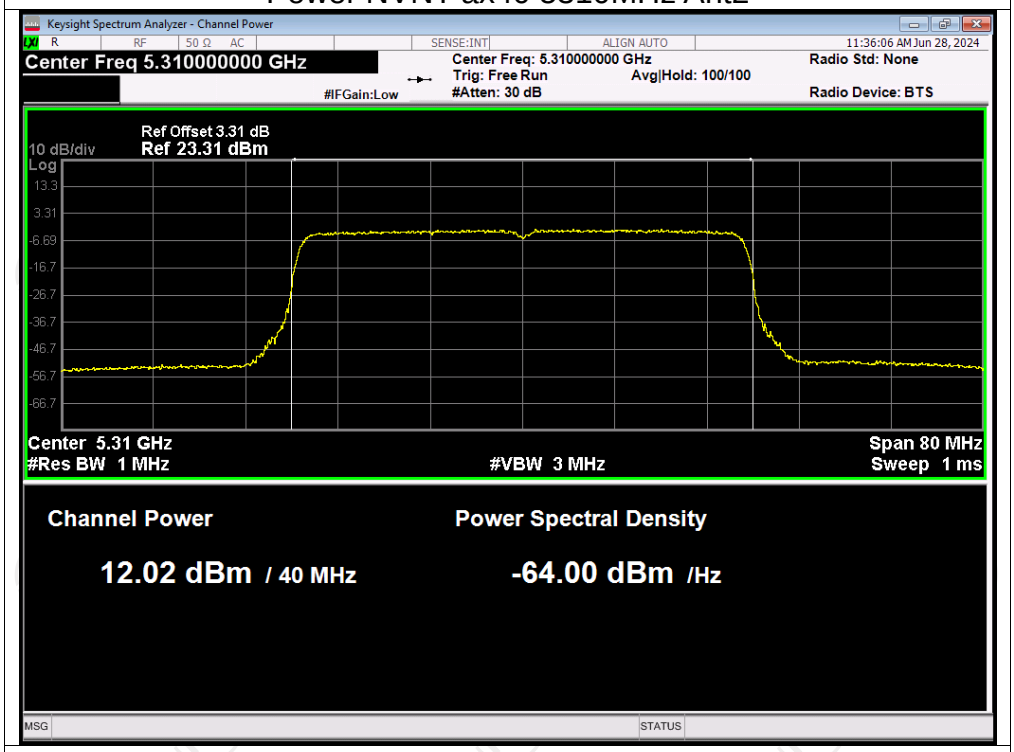

Power NVNT ax80 5290MHz Ant2

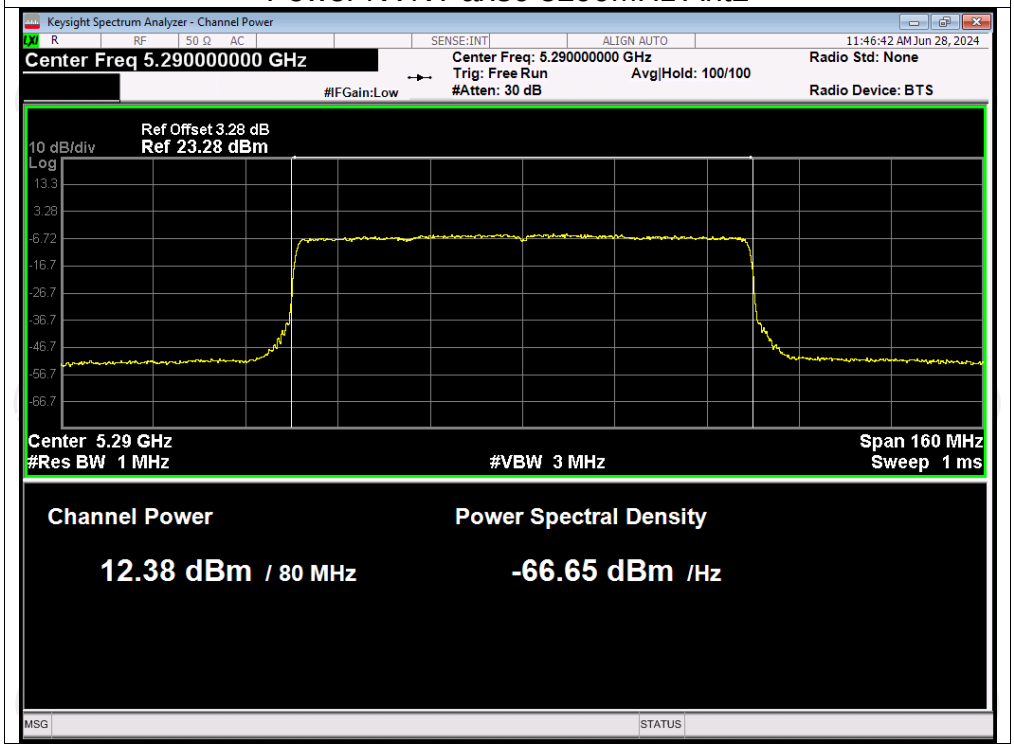

Test Graphs

Power NVNT a 5500MHz Ant2

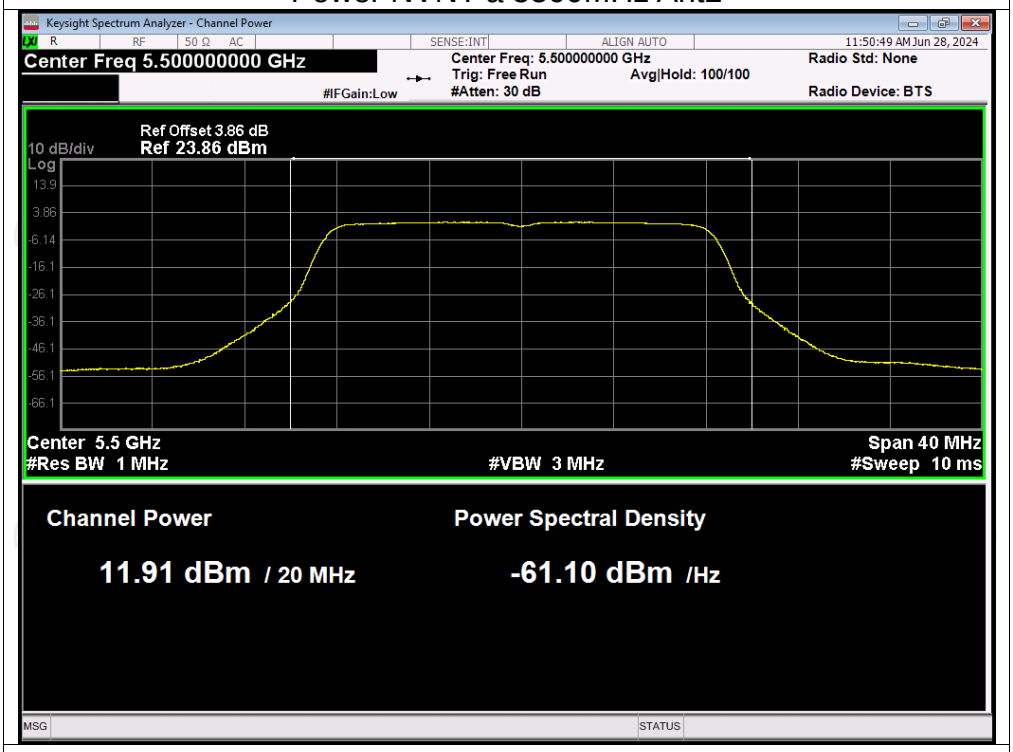

Power NVNT a 5600MHz Ant2

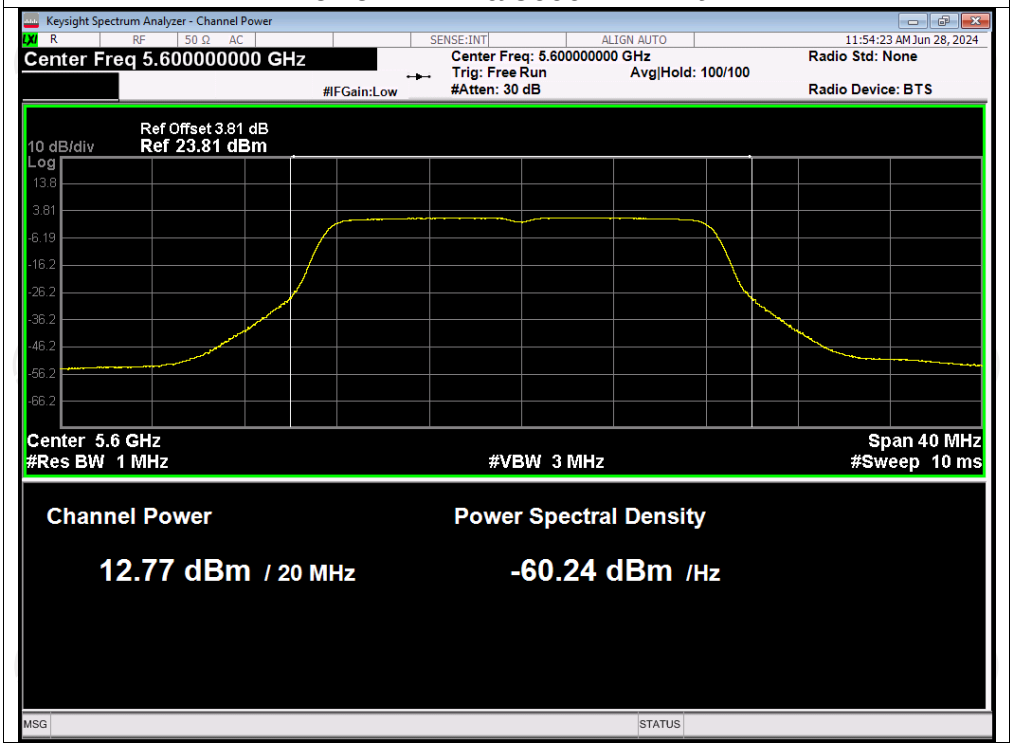

Power NVNT a 5700MHz Ant2

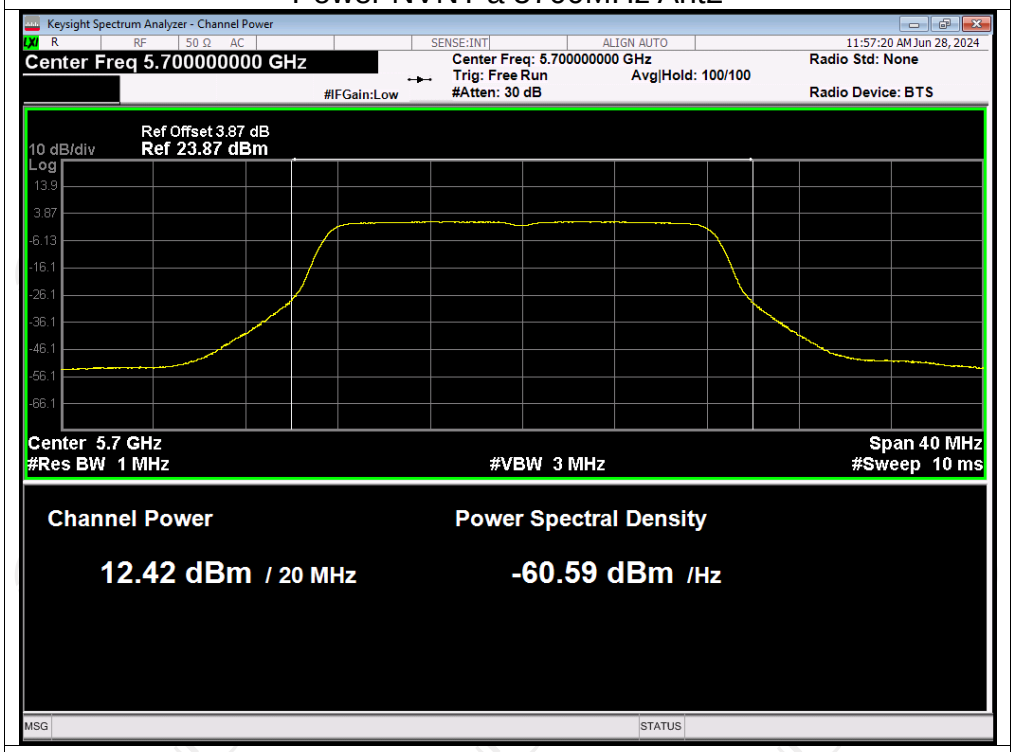

Power NVNT n20 5500MHz Ant2

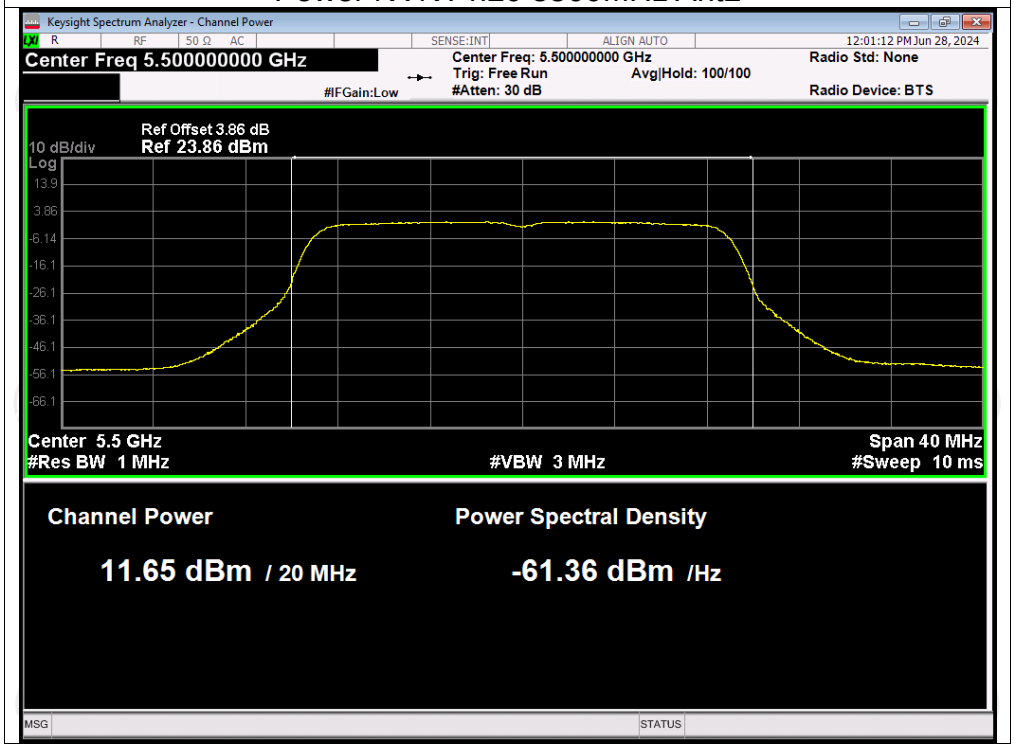

Power NVNT n20 5600MHz Ant2

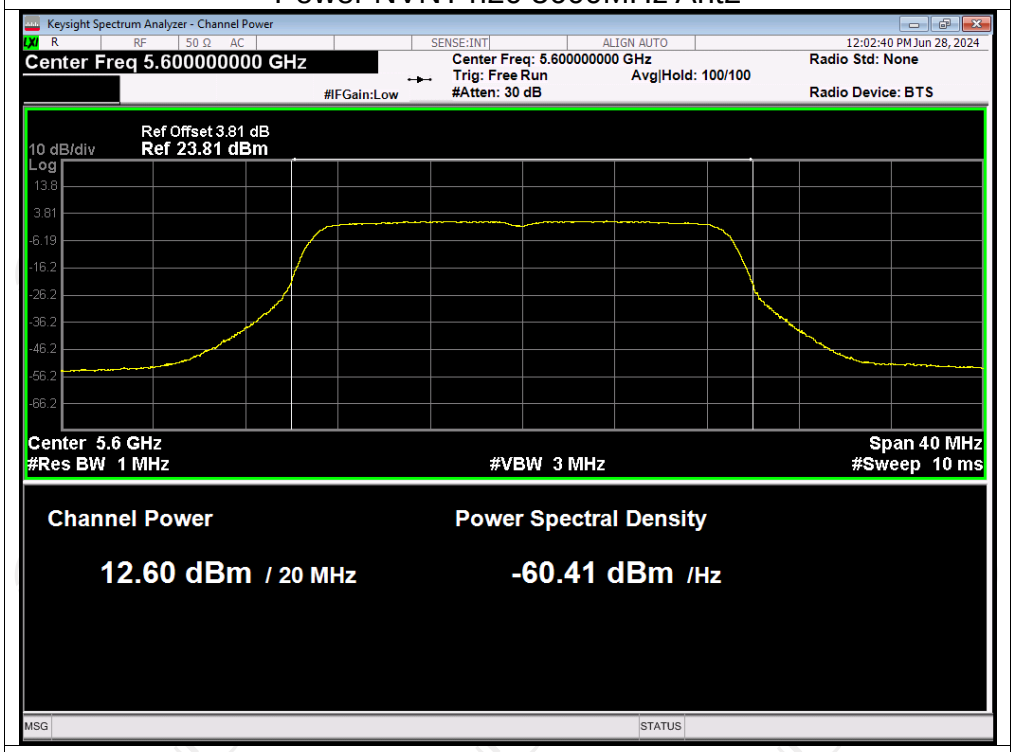

Power NVNT n20 5700MHz Ant2

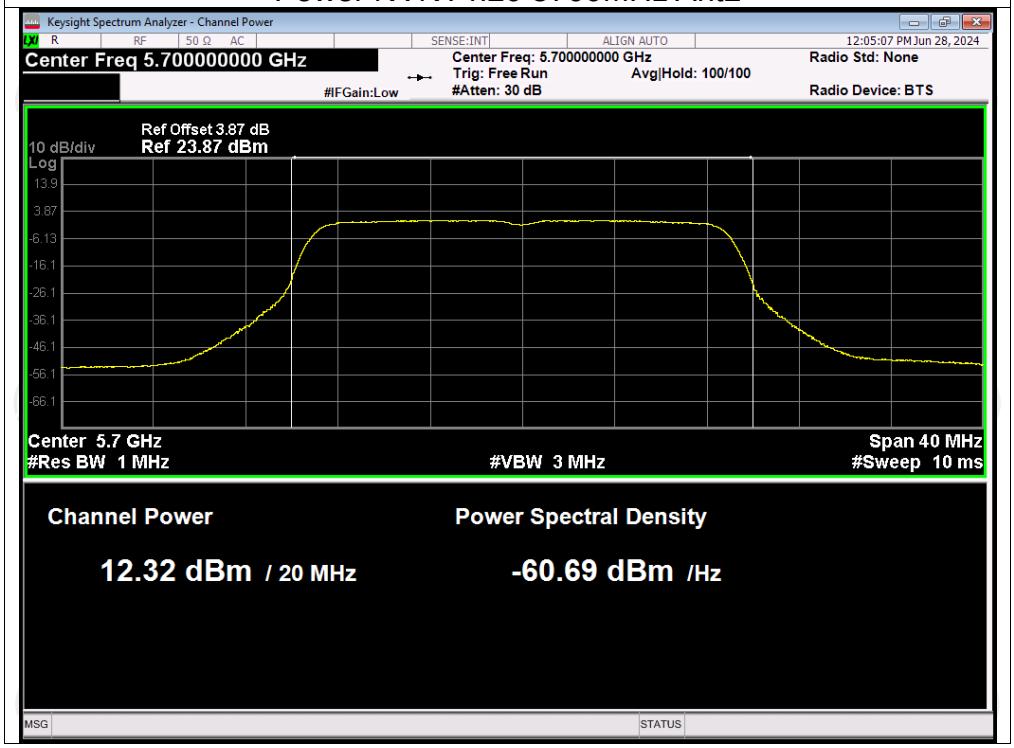

Power NVNT n40 5510MHz Ant2

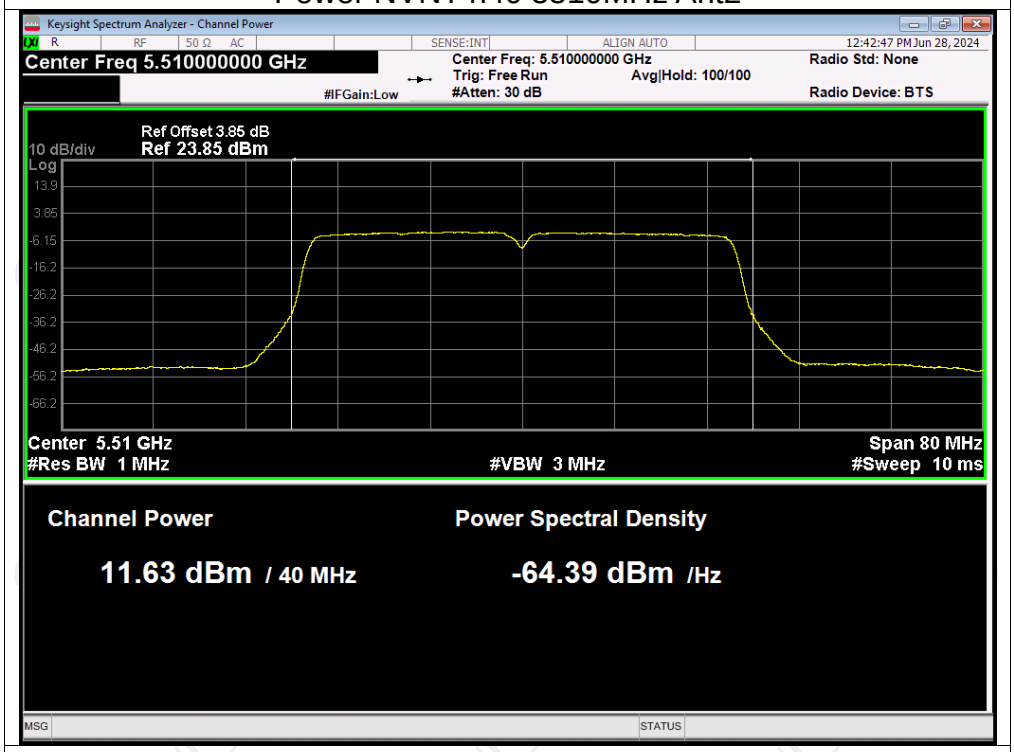

Power NVNT n40 5590MHz Ant2

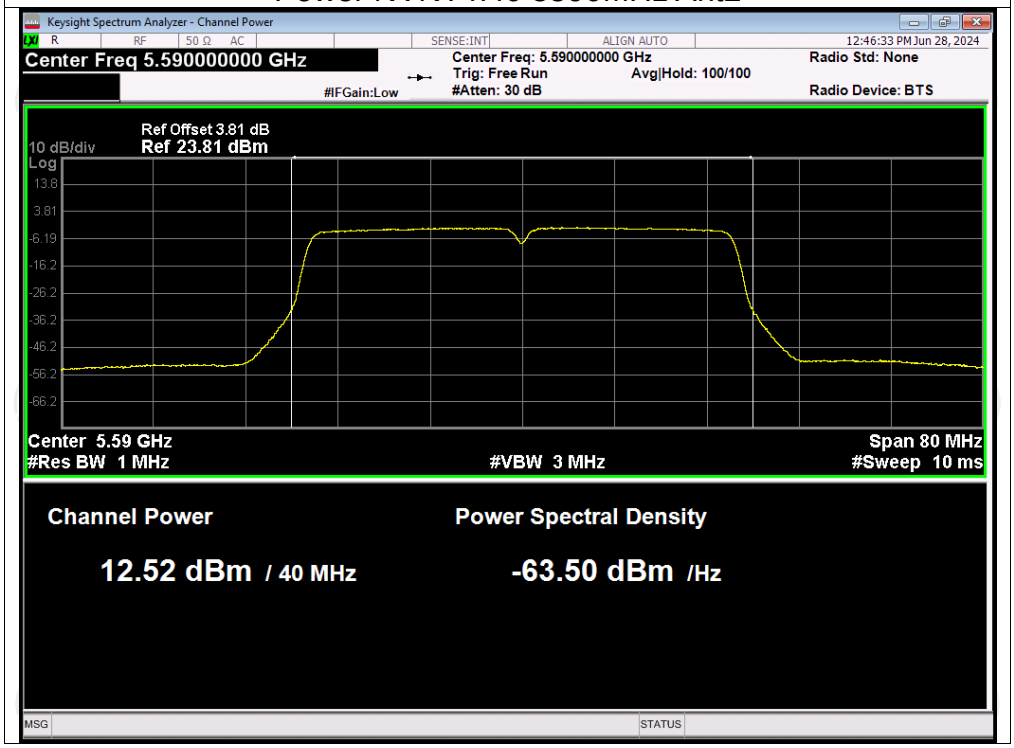

Power NVNT n40 5670MHz Ant2

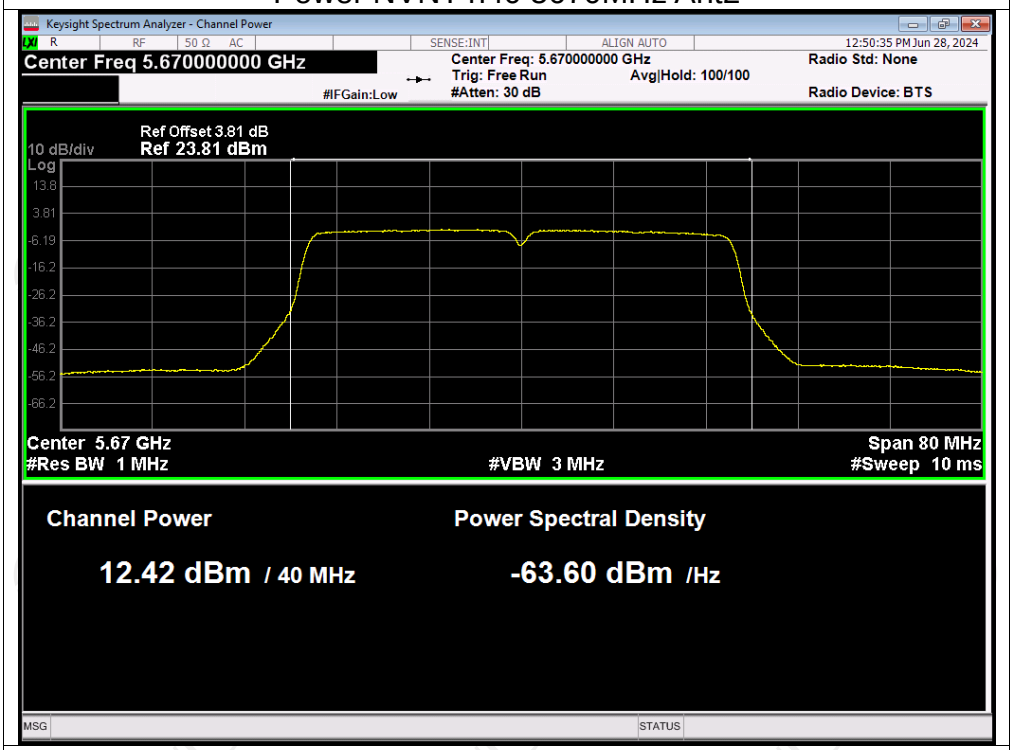

Power NVNT ac20 5500MHz Ant2

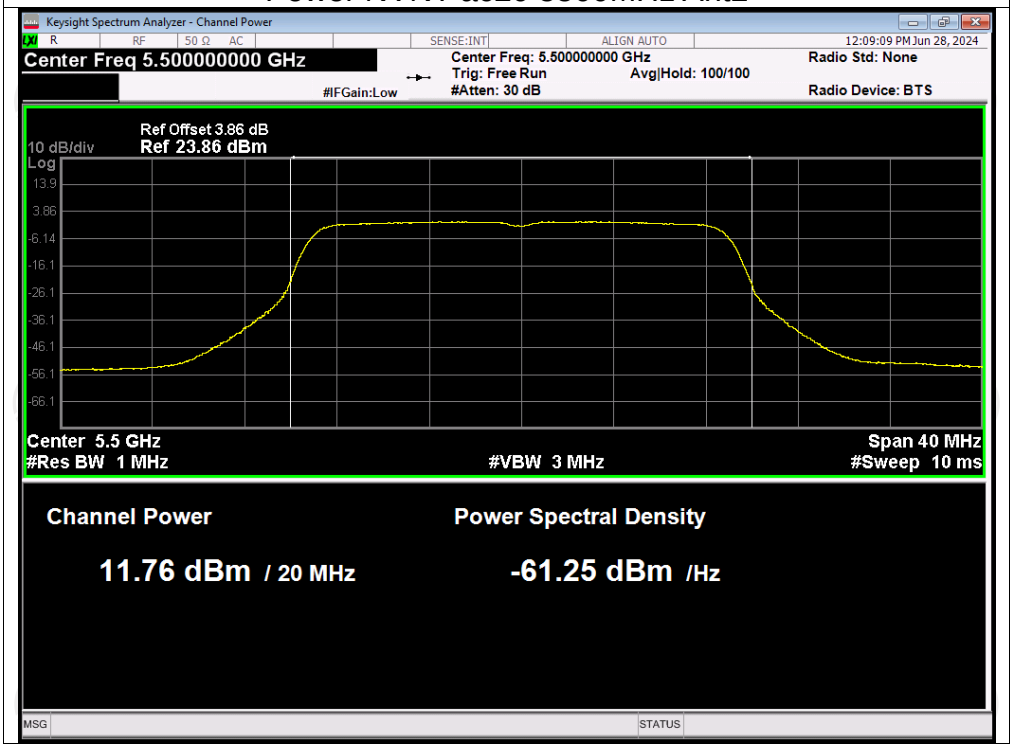

Power NVNT ac20 5600MHz Ant2

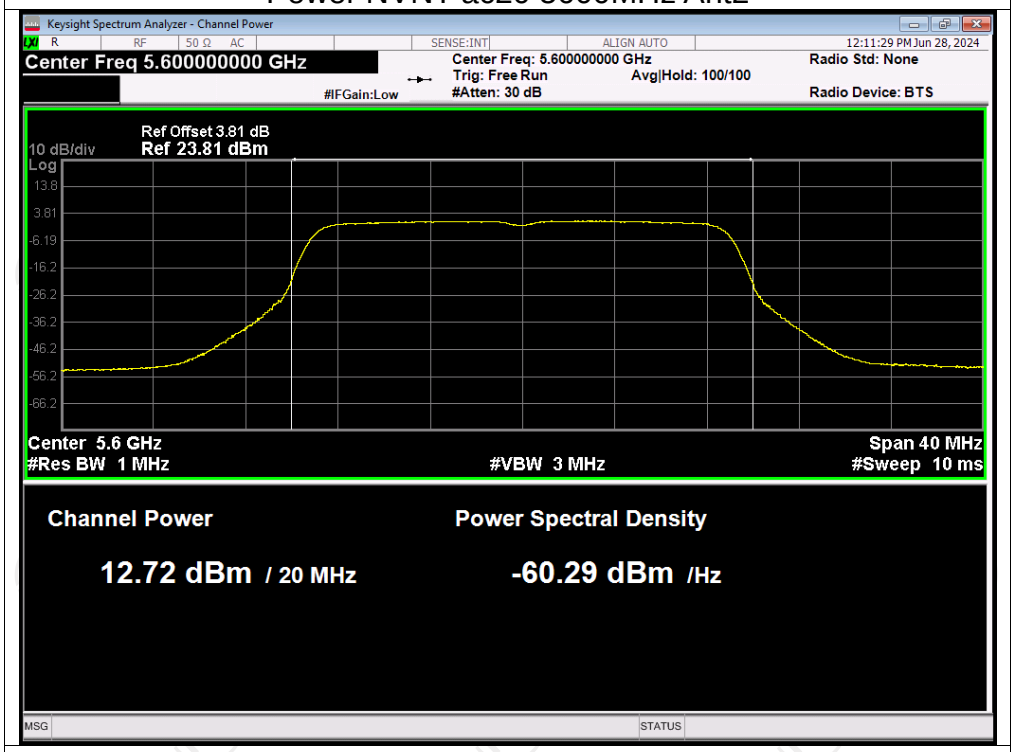

Power NVNT ac20 5700MHz Ant2

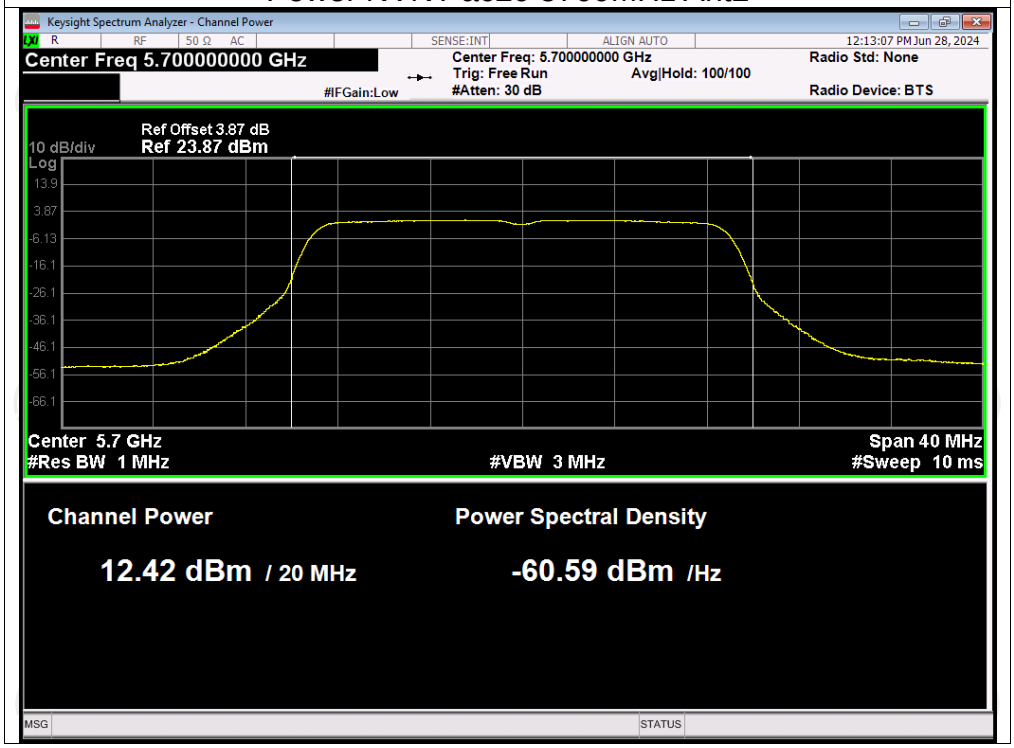

Power NVNT ac40 5510MHz Ant2

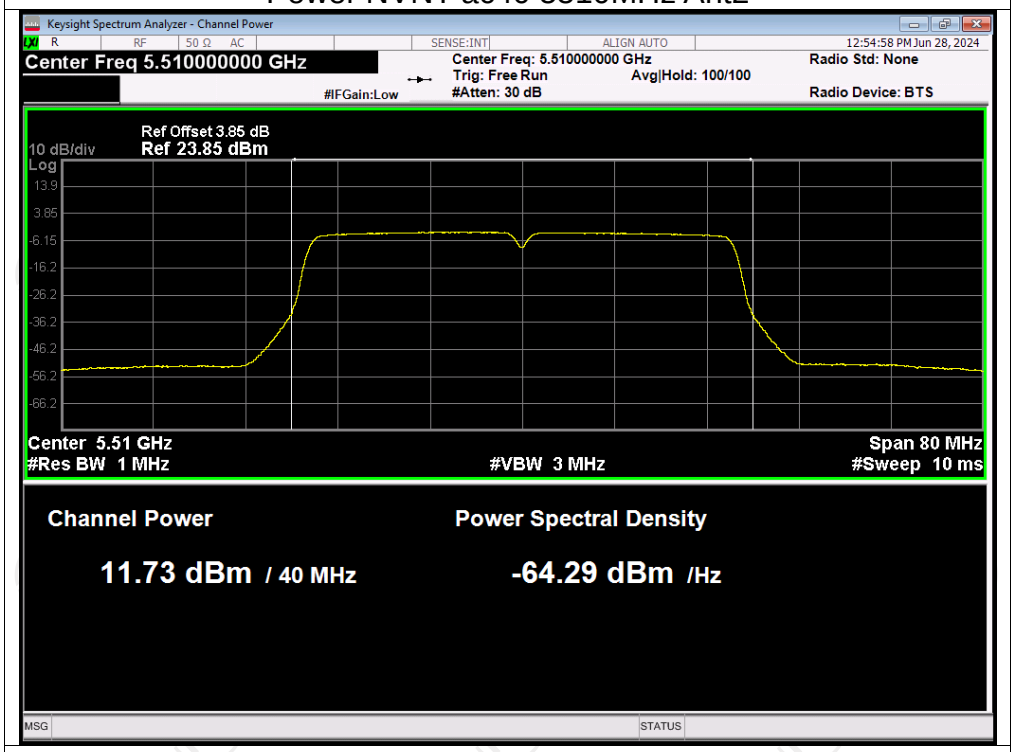

Power NVNT ac40 5590MHz Ant2

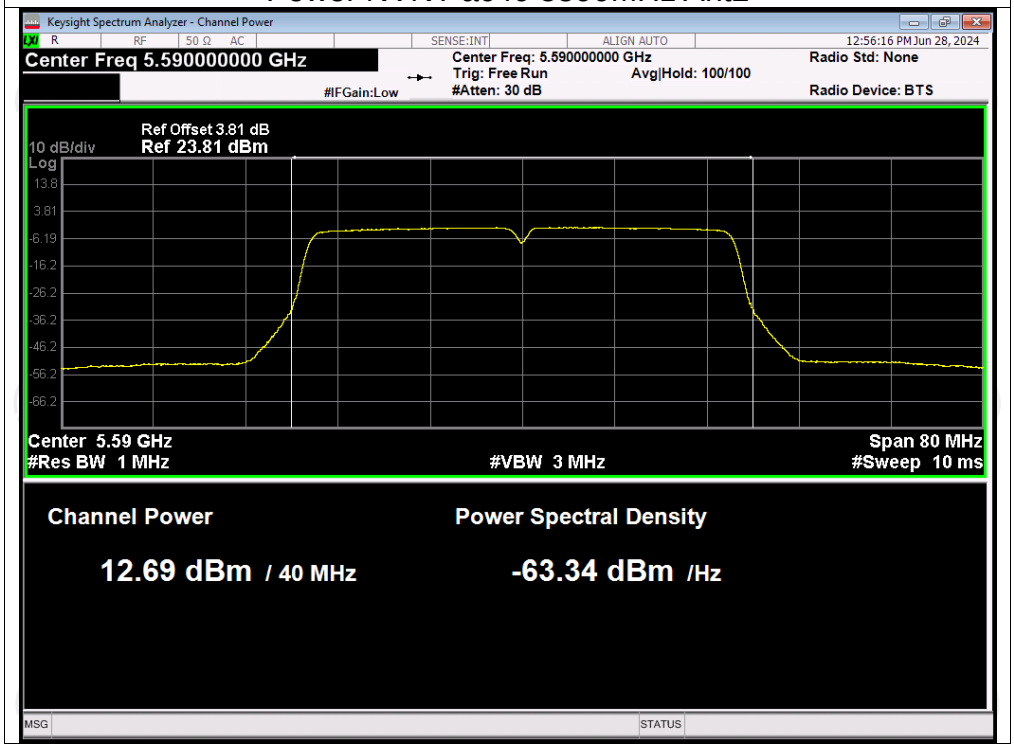

Power NVNT ac40 5670MHz Ant2

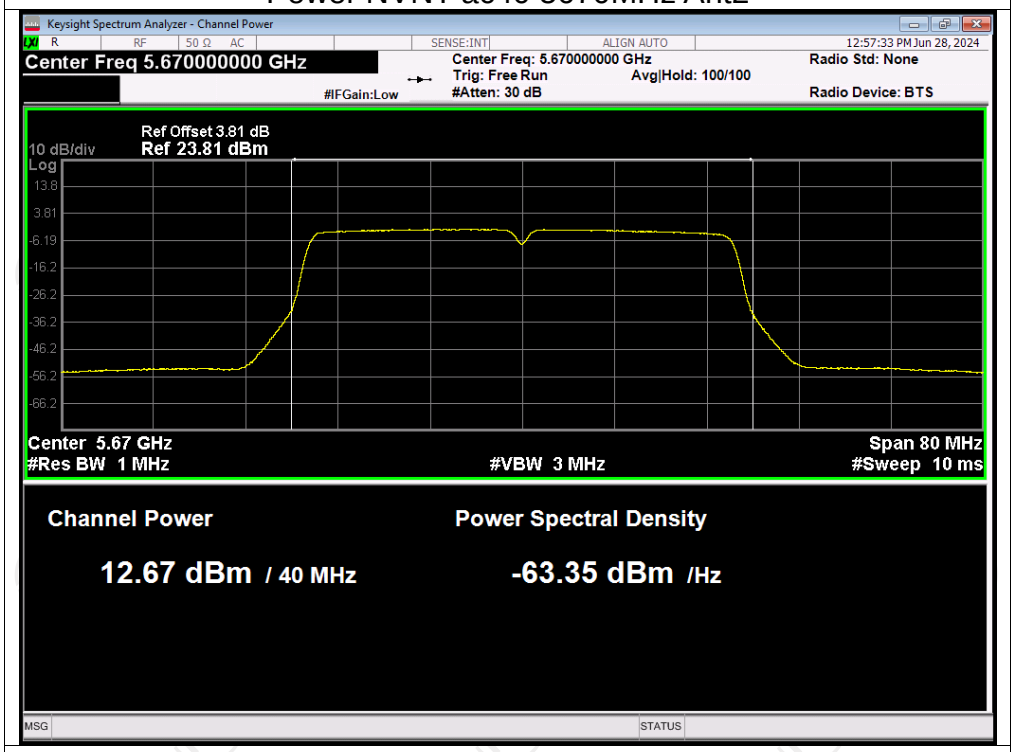

Power NVNT ac80 5530MHz Ant2

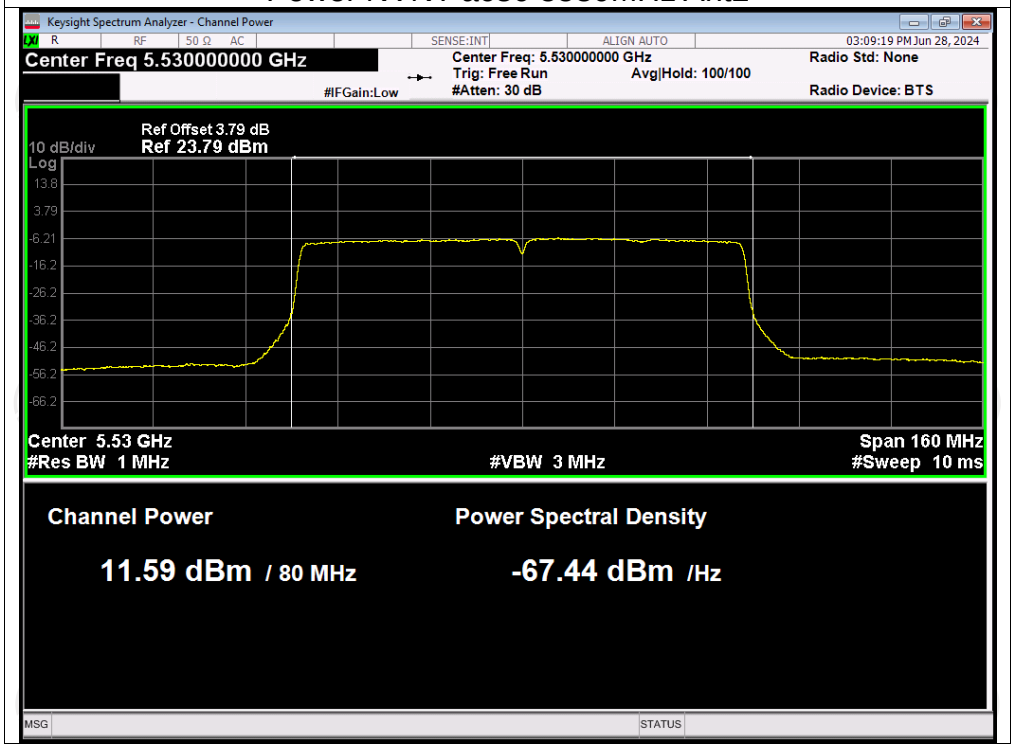

Power NVNT ac80 5610MHz Ant2

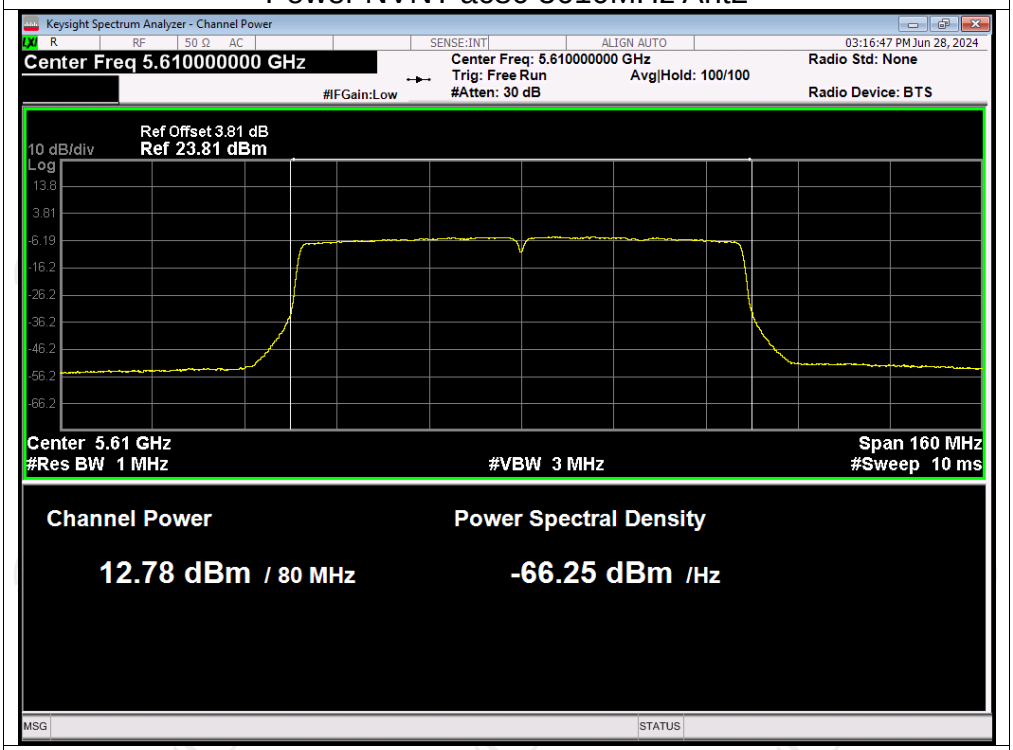

Power NVNT ax160 5570MHz Ant2

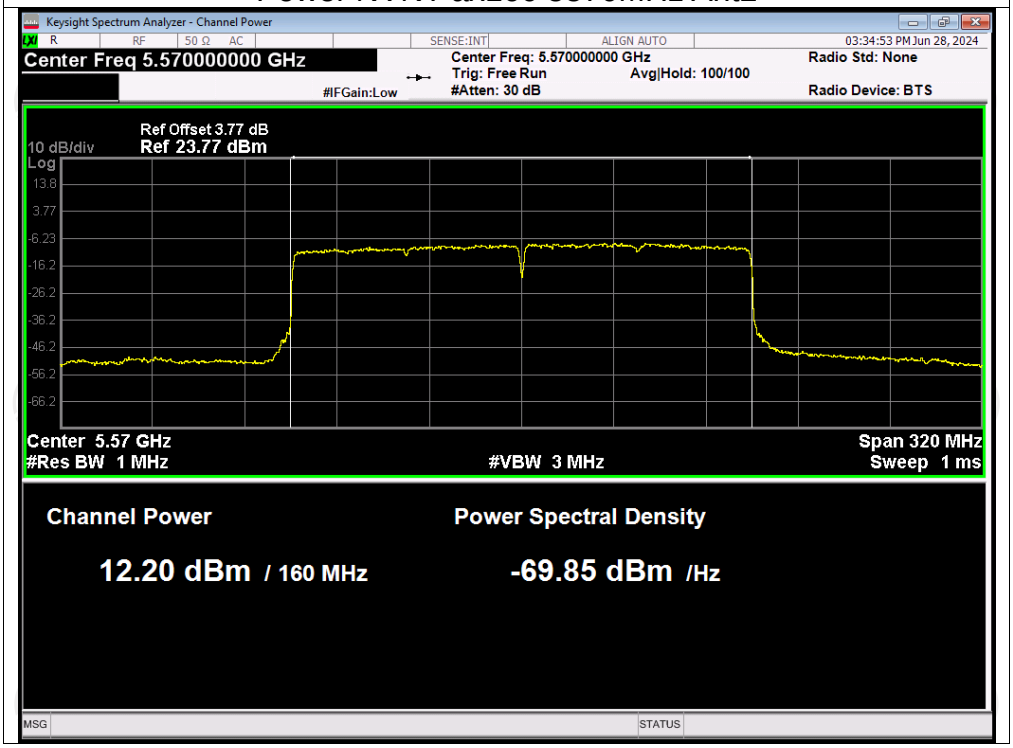

Power NVNT ax20 5500MHz Ant2

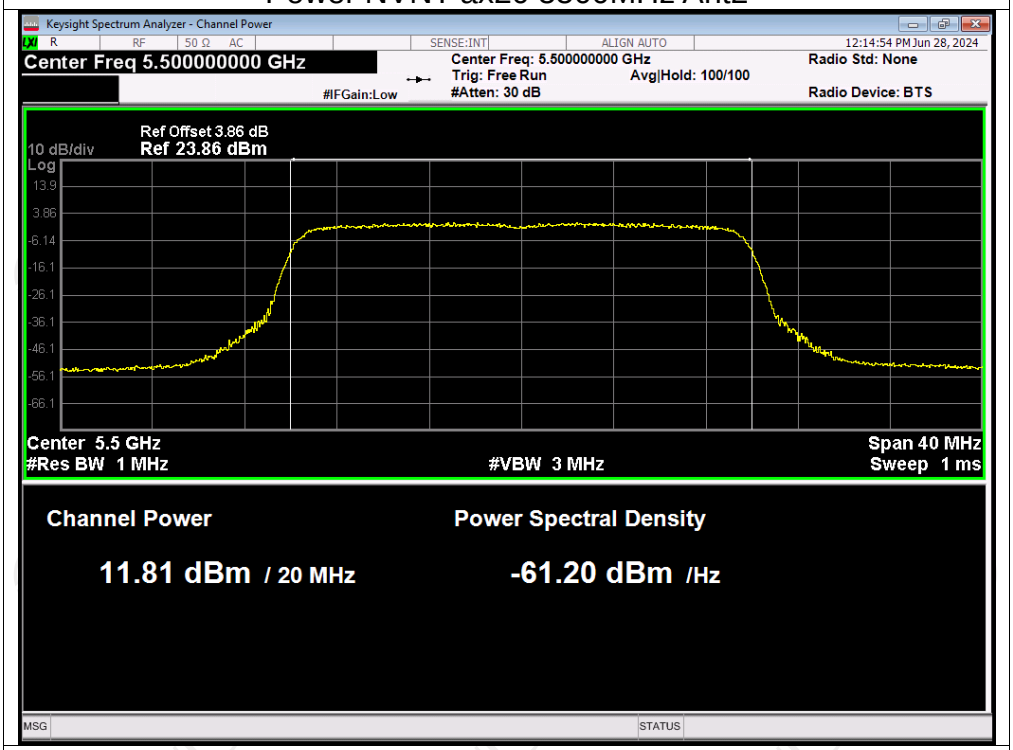

Power NVNT ax20 5600MHz Ant2

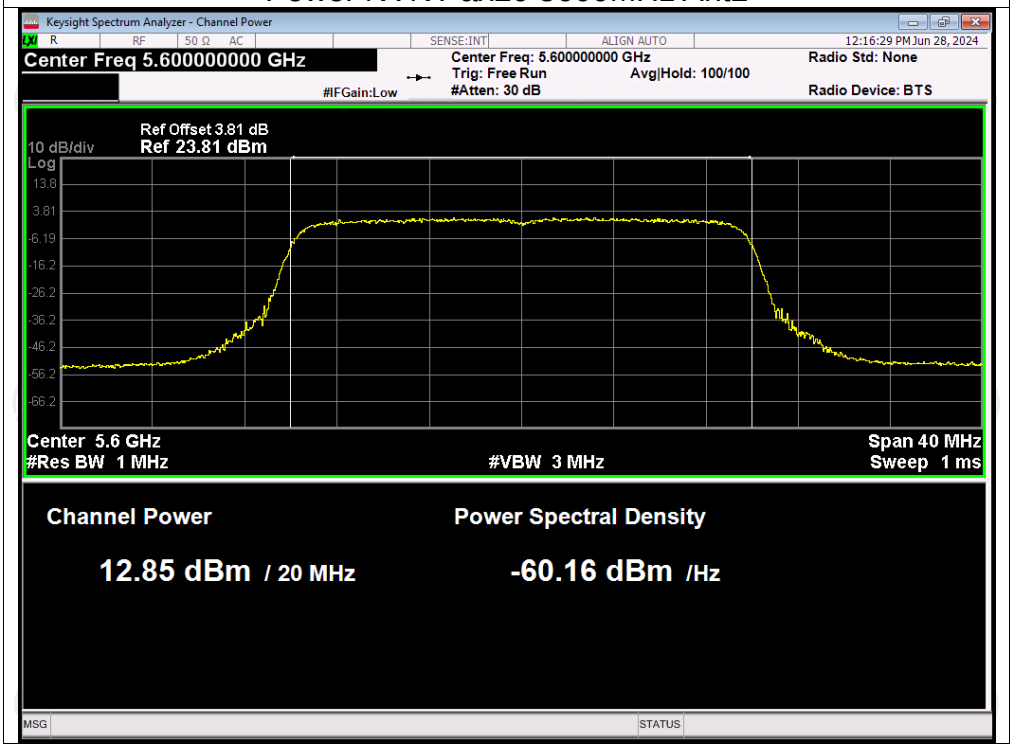

Power NVNT ax20 5700MHz Ant2

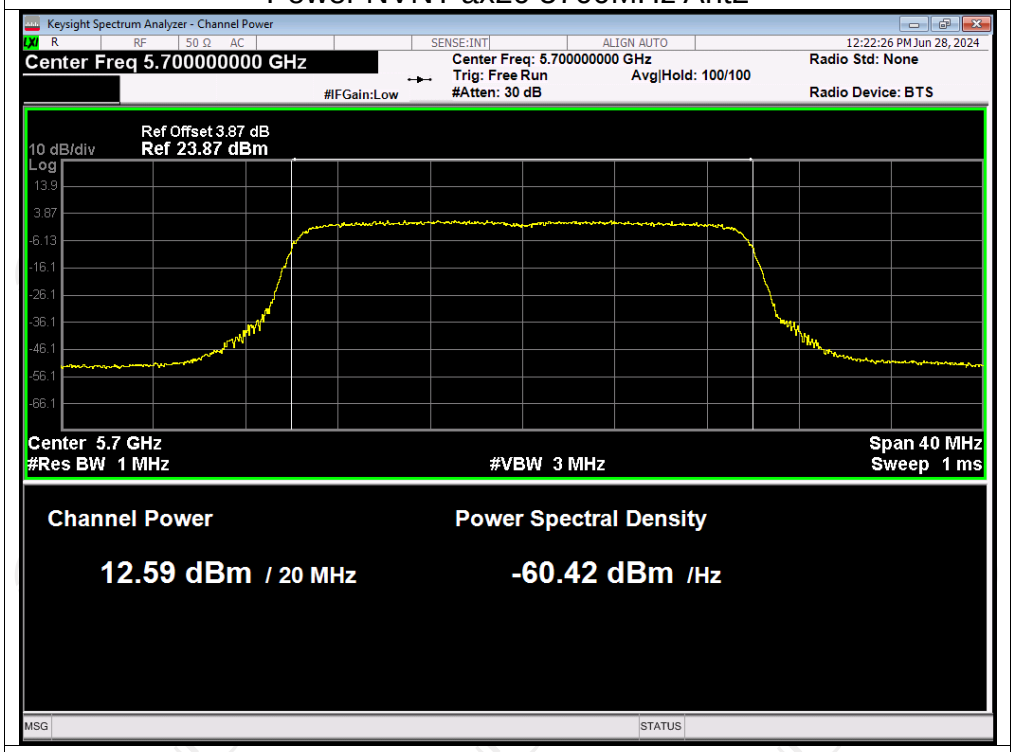
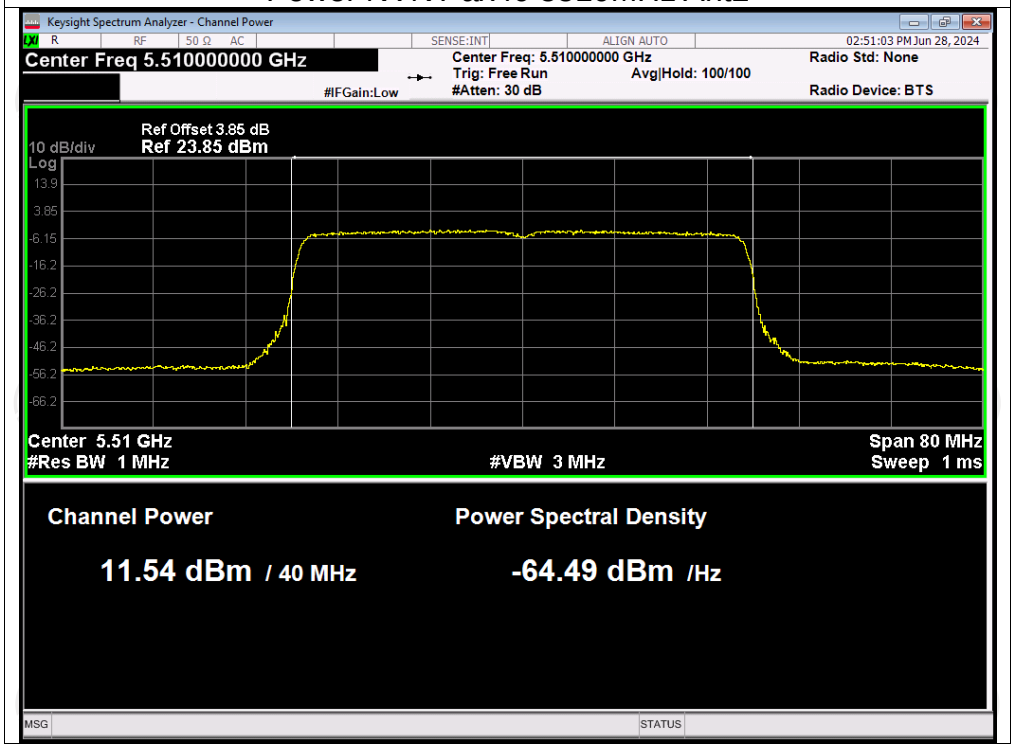
Power NVNT ax40 5510MHz Ant2