Test Graphs

Freq. Stability NVNT n40 5190MHz Ant1

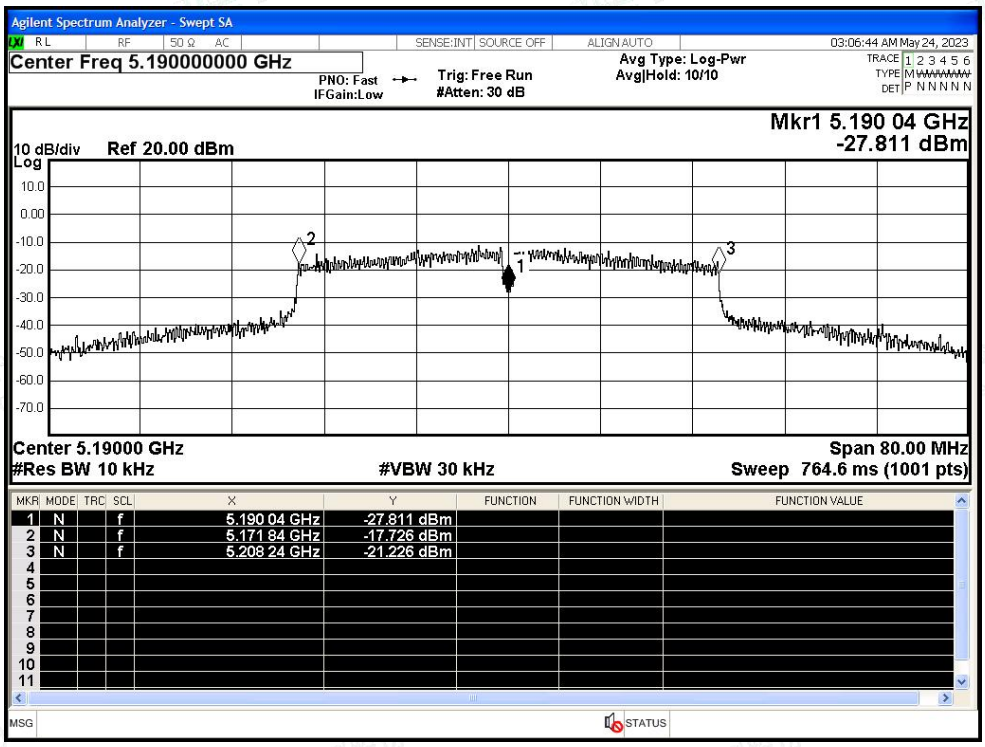

Freq. Stability NVNT n40 5230MHz Ant1

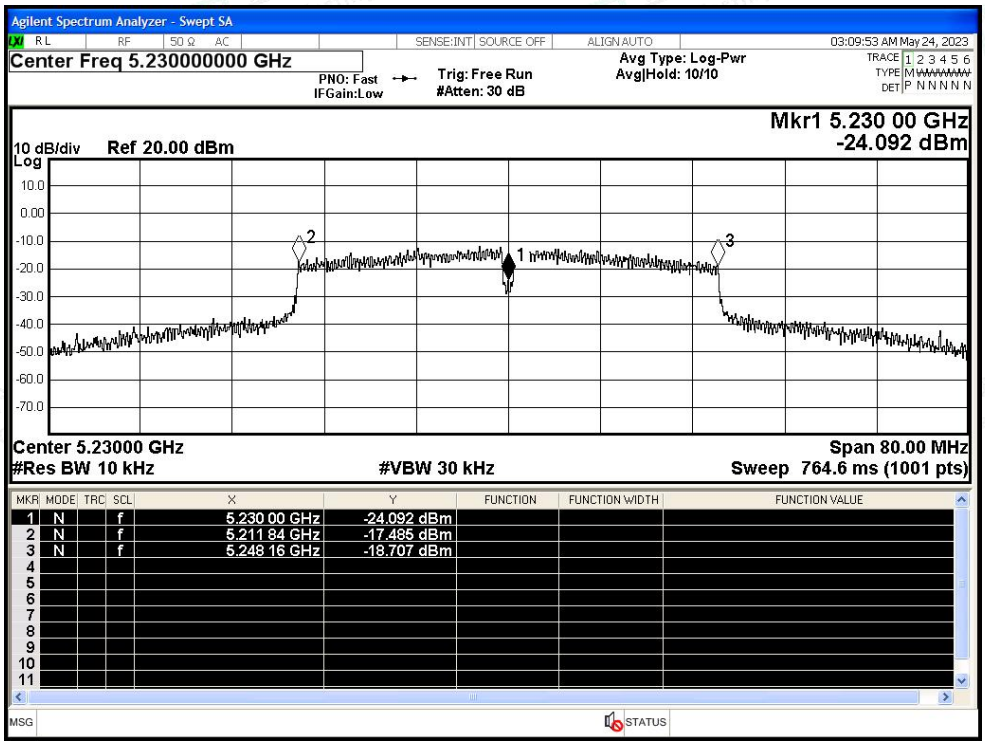

Freq. Stability NVNT ac20 5180MHz Ant1

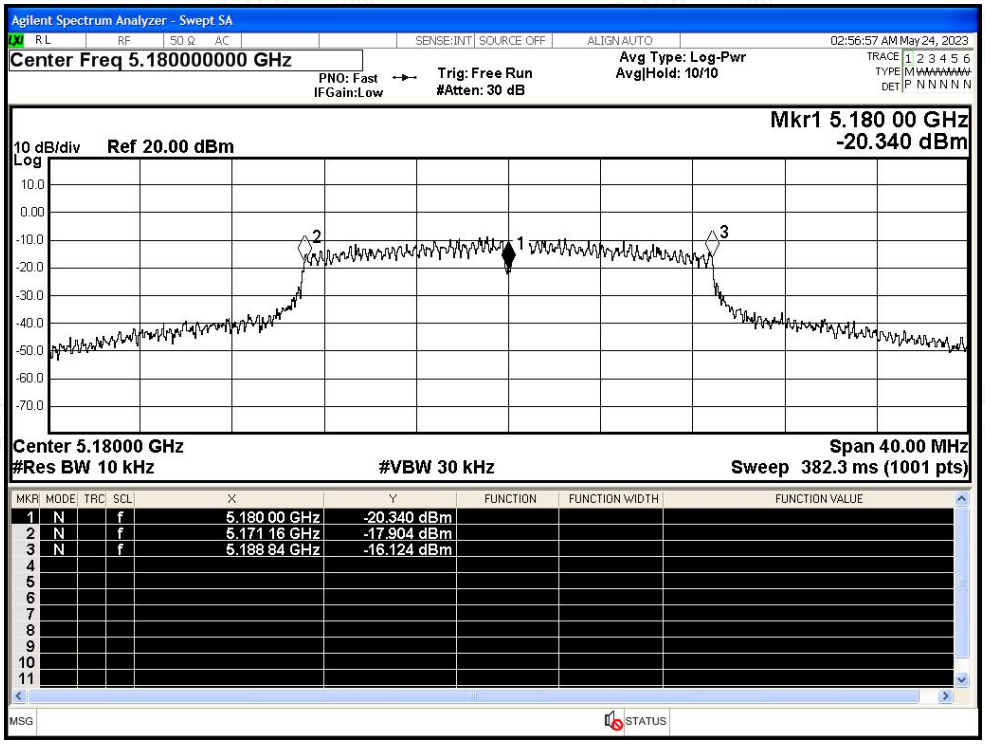

Freq. Stability NVNT ac20 5200MHz Ant1

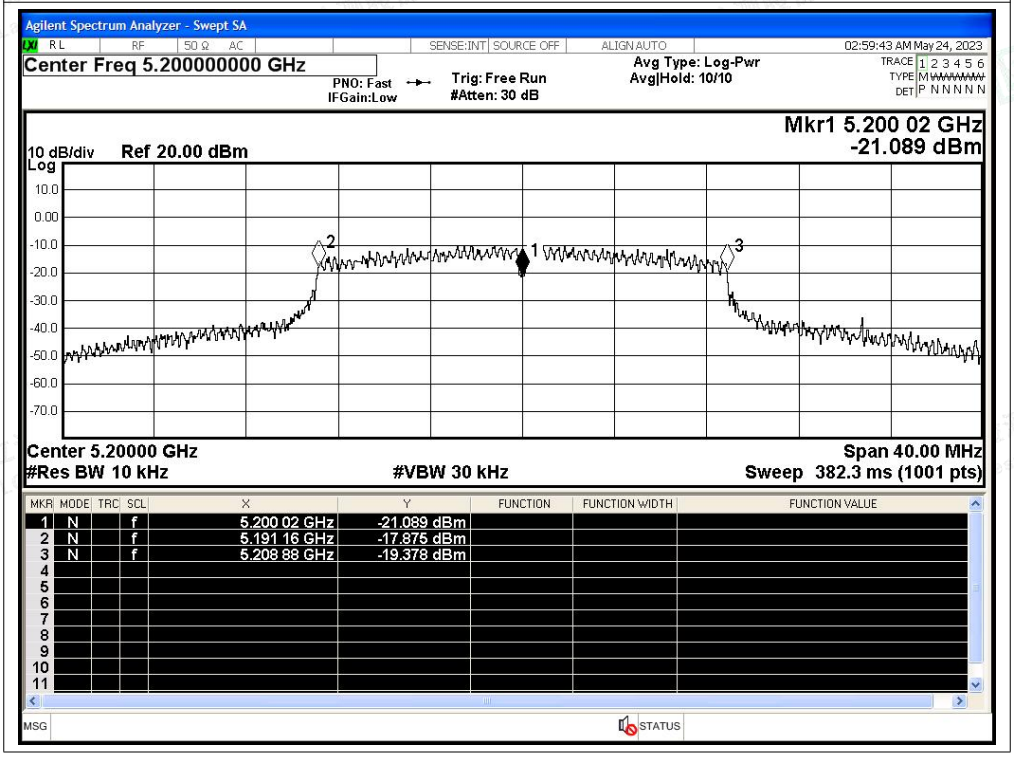

Freq. Stability NVNT ac20 5240MHz Ant1

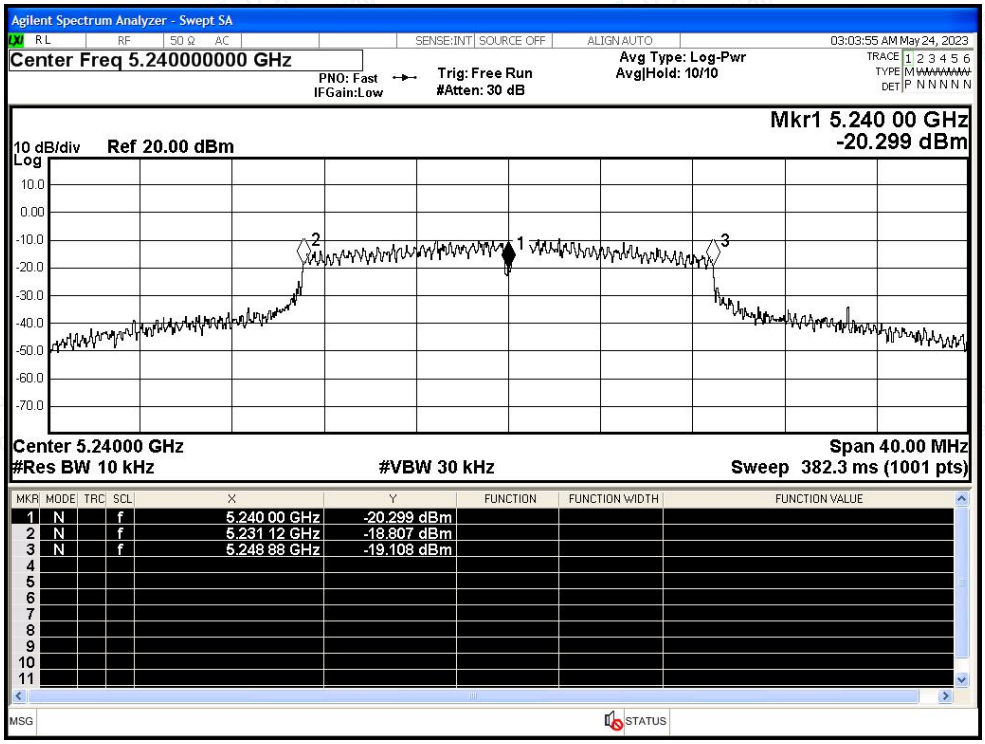

Freq. Stability NVNT ac40 5190MHz Ant1

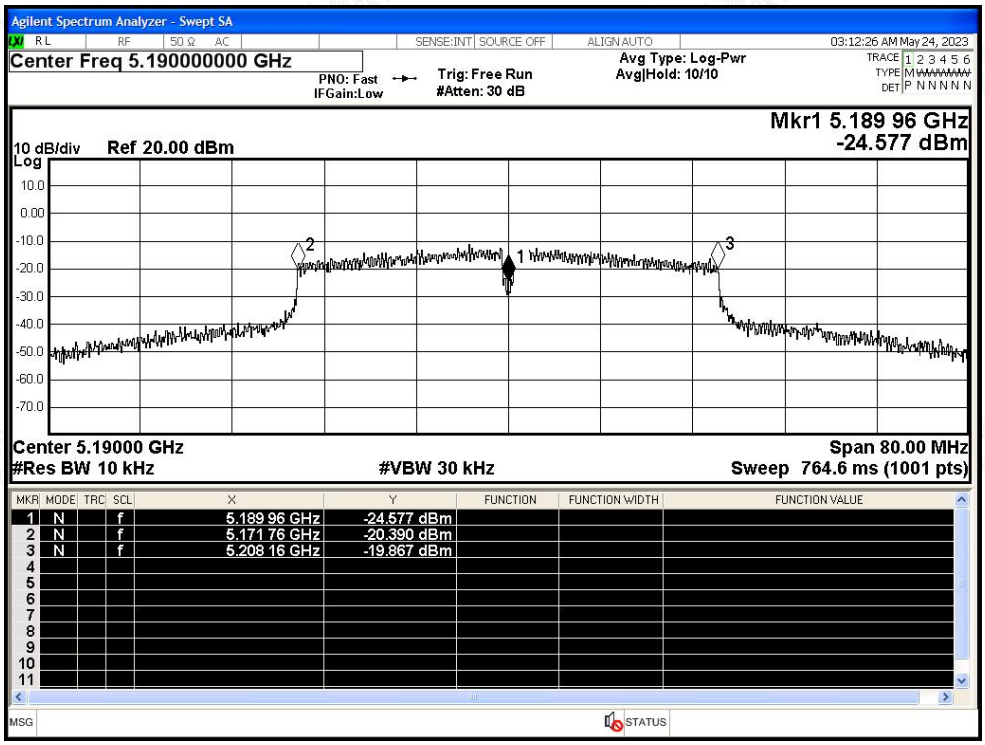

Freq. Stability NVNT ac40 5230MHz Ant1

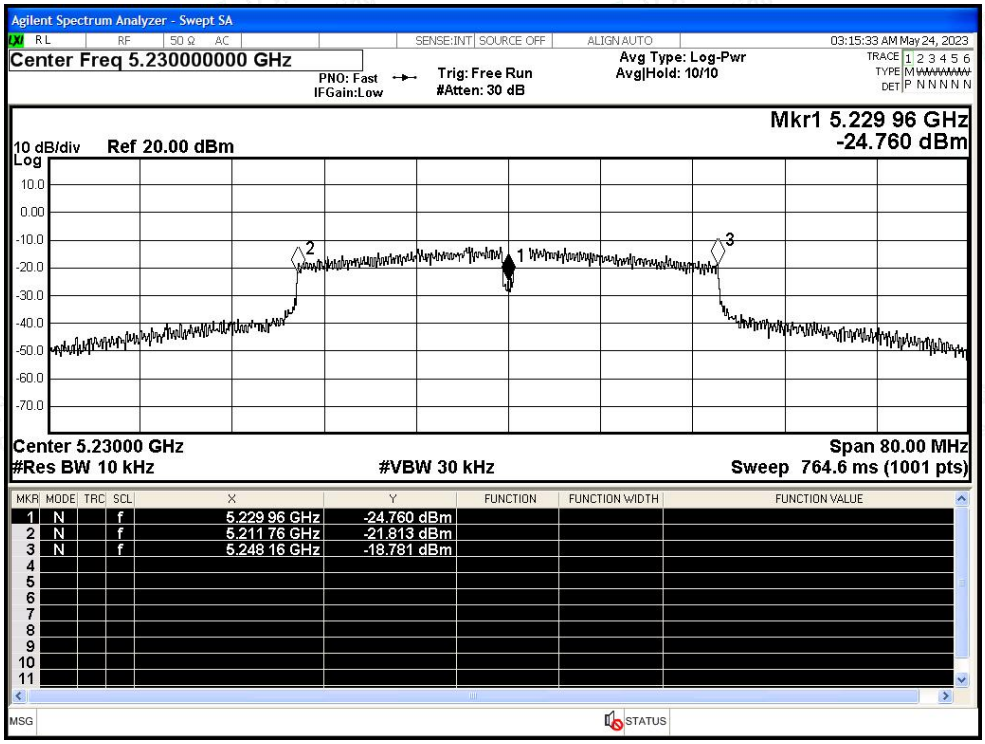

Freq. Stability NVNT ac80 5210MHz Ant1

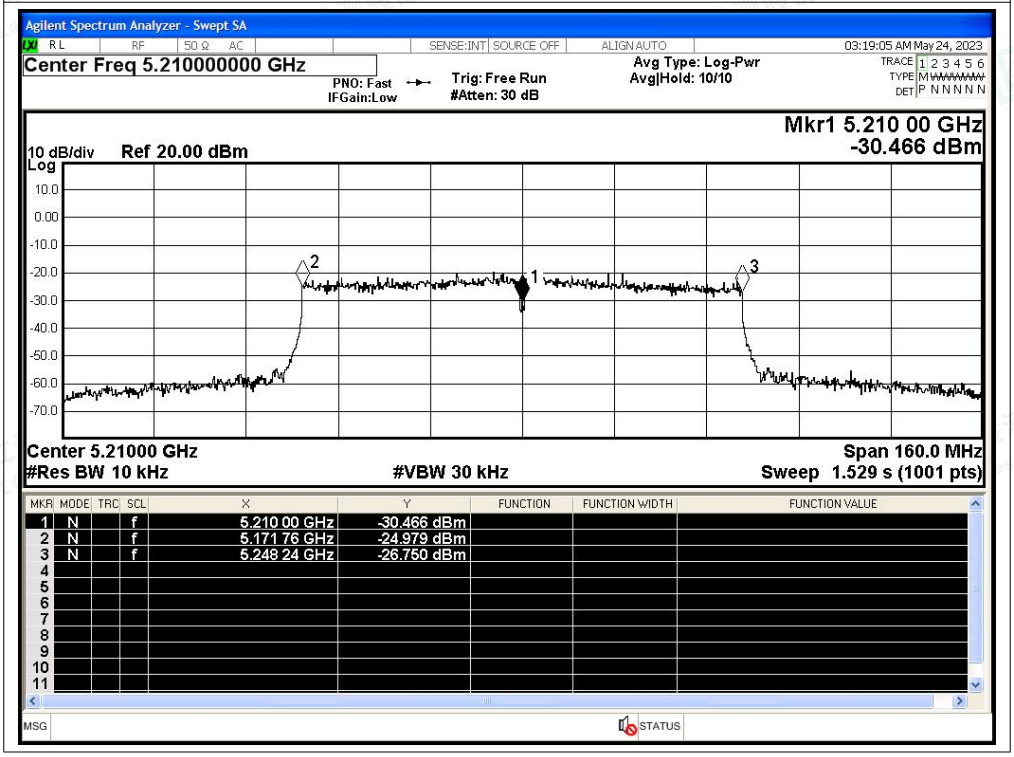

D.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	Ant0	96.94	0.13	0.72
NVNT	a	5200	Ant0	96.94	0.13	0.72
NVNT	a	5240	Ant0	96.87	0.14	0.72
NVNT	n20	5180	Ant0	96.65	0.15	0.77
NVNT	n20	5200	Ant0	96.73	0.14	0.77
NVNT	n20	5240	Ant0	96.73	0.14	0.77
NVNT	n40	5190	Ant0	93.64	0.29	1.54
NVNT	n40	5230	Ant0	93.64	0.29	1.54
NVNT	ac20	5180	Ant0	96.77	0.14	0.76
NVNT	ac20	5200	Ant0	96.76	0.14	0.76
NVNT	ac20	5240	Ant0	96.76	0.14	0.76
NVNT	ac40	5190	Ant0	93.68	0.28	1.53
NVNT	ac40	5230	Ant0	93.68	0.28	1.53
NVNT	ac80	5210	Ant0	88.04	0.55	3.09

Test Graphs

Duty Cycle NVNT a 5180MHz Ant0

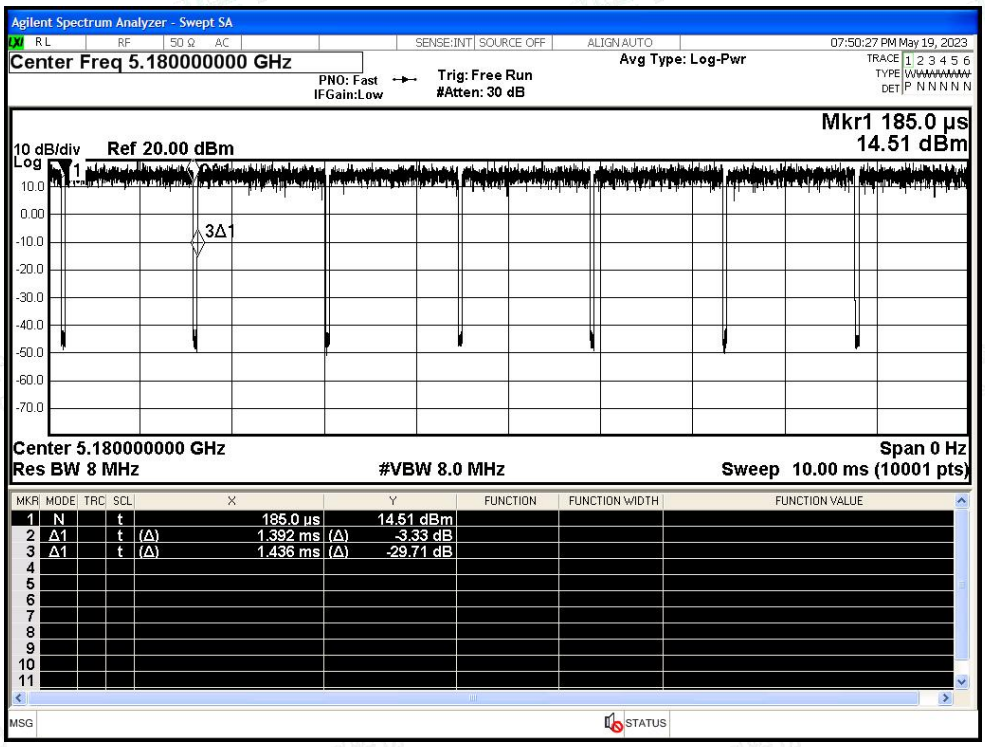

Duty Cycle NVNT a 5200MHz Ant0

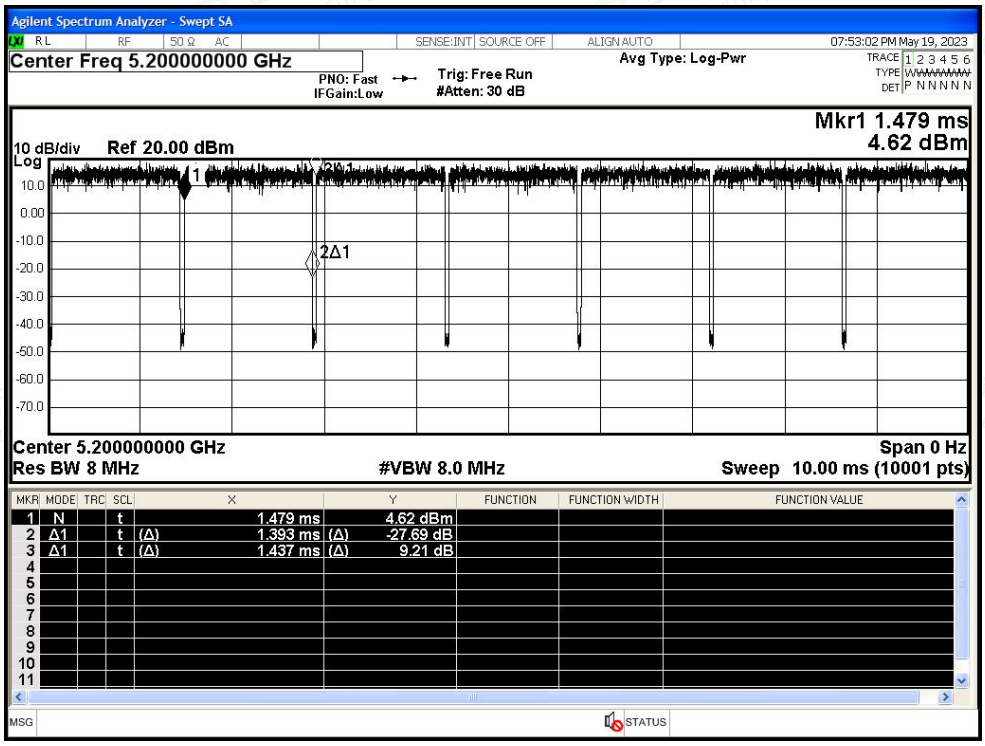

Duty Cycle NVNT a 5240MHz Ant0

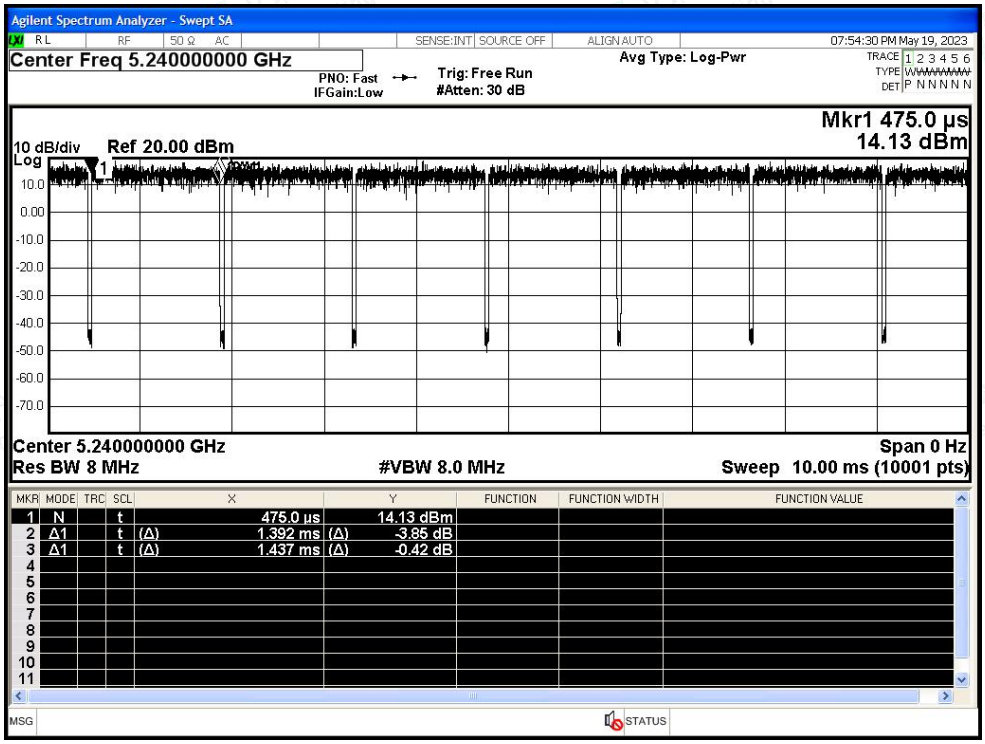

Duty Cycle NVNT n20 5180MHz Ant0

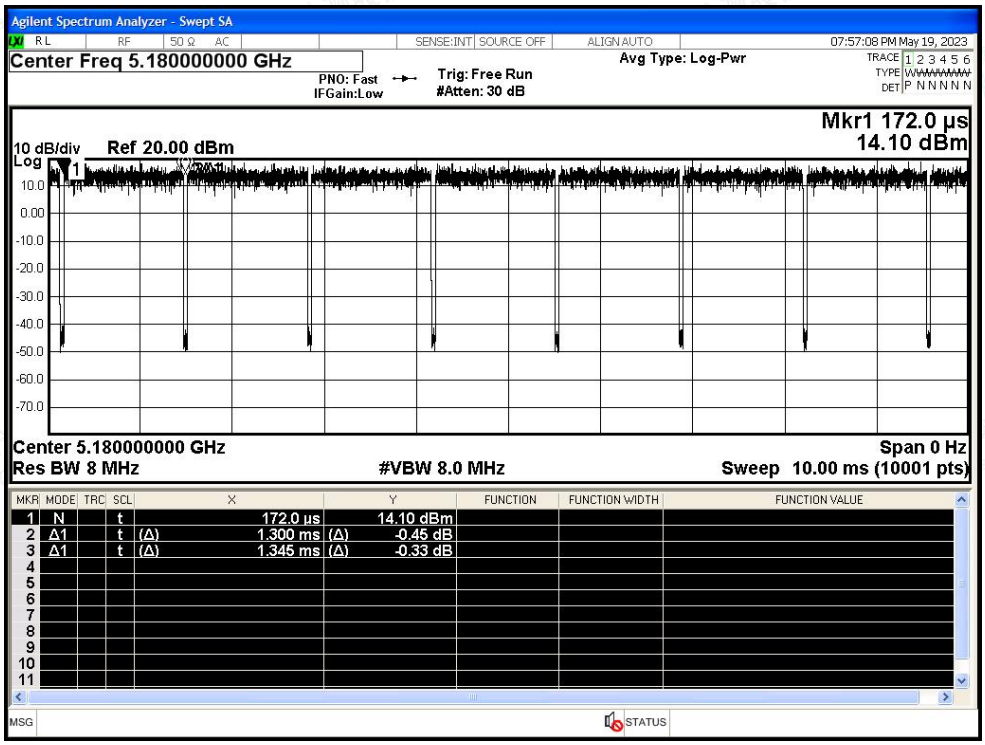

Duty Cycle NVNT n20 5200MHz Ant0

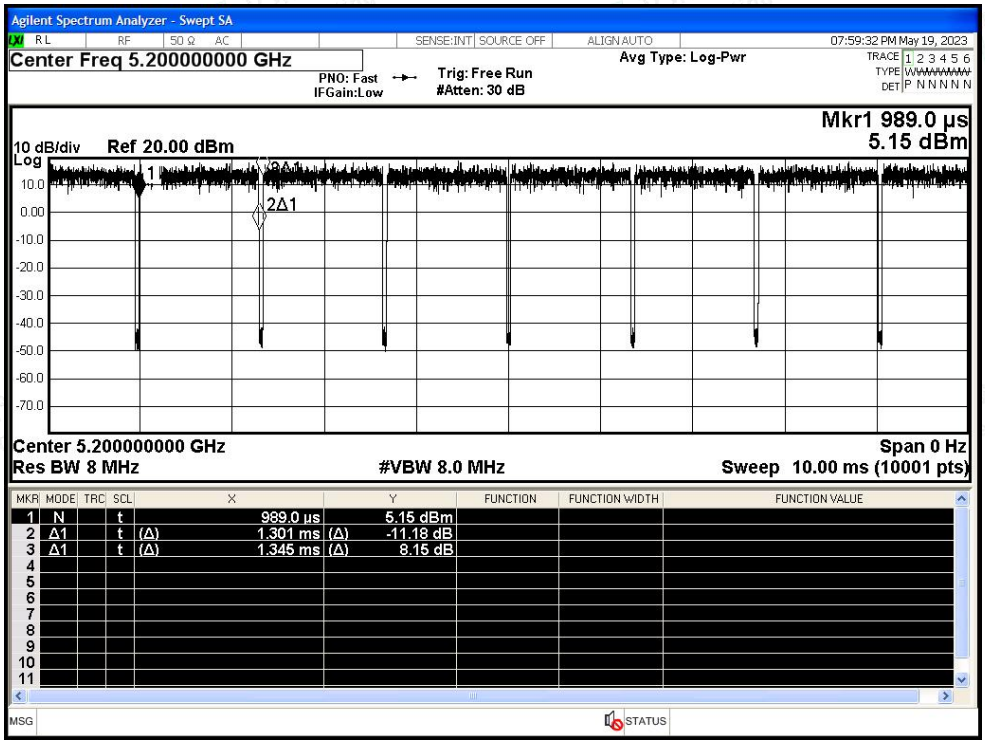

Duty Cycle NVNT n20 5240MHz Ant0

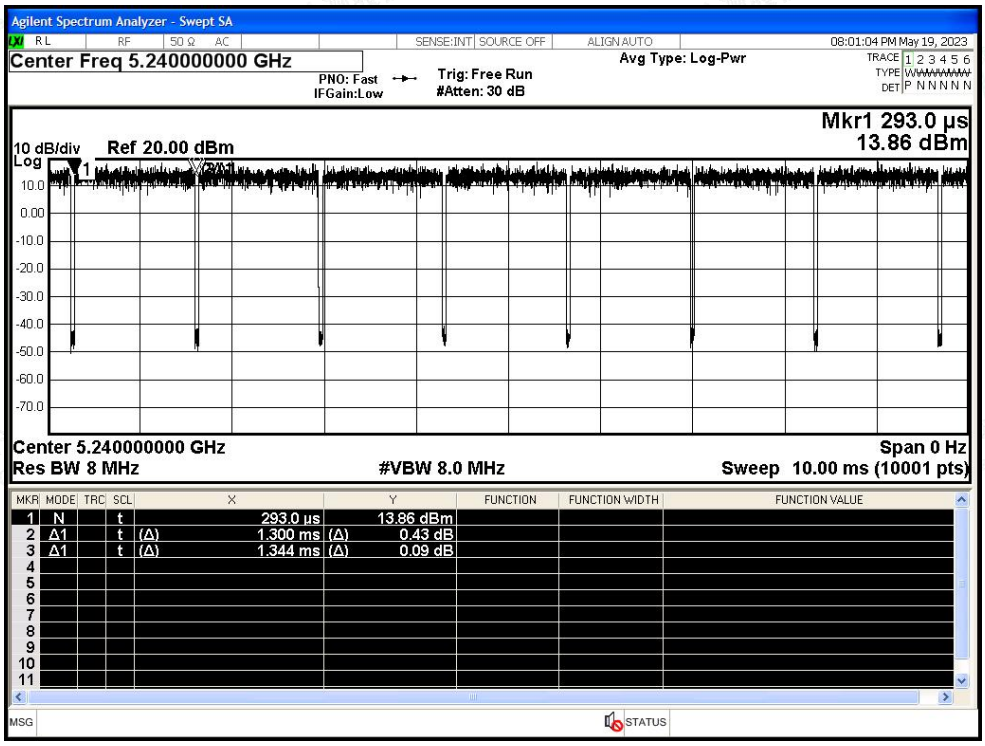

Duty Cycle NVNT n40 5190MHz Ant0

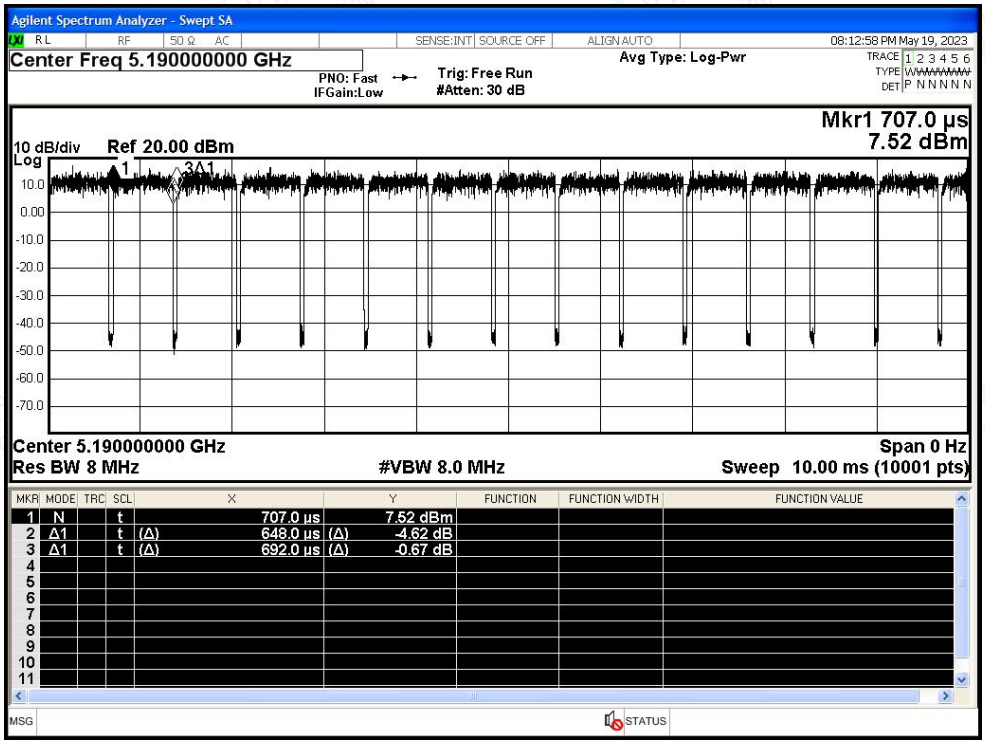

Duty Cycle NVNT n40 5230MHz Ant0

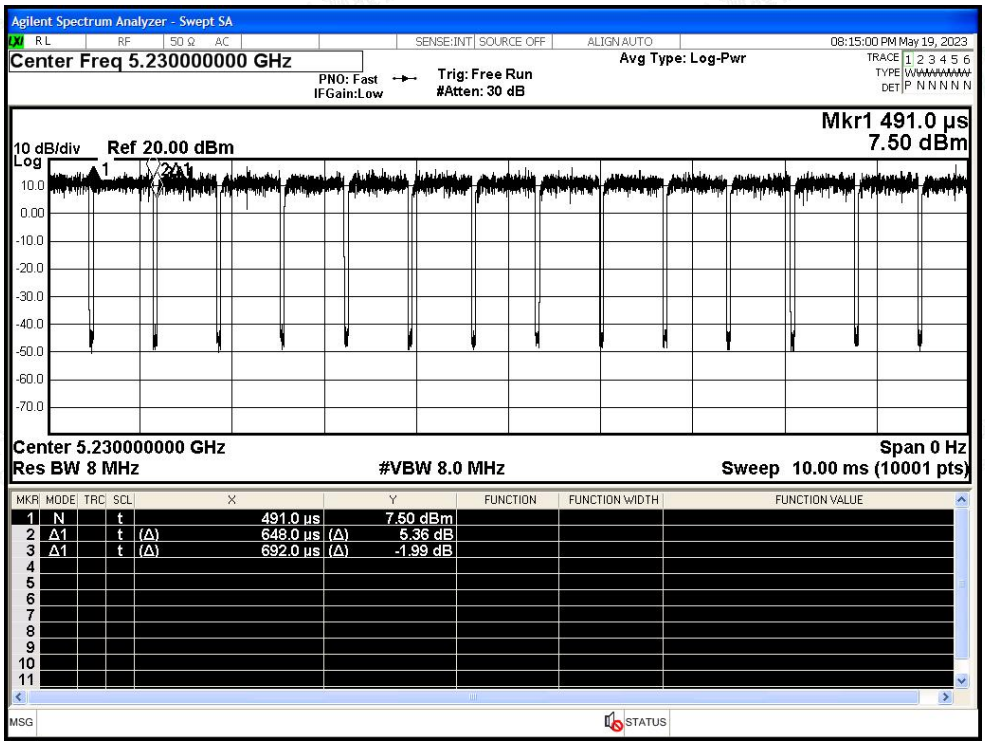

Duty Cycle NVNT ac20 5180MHz Ant0

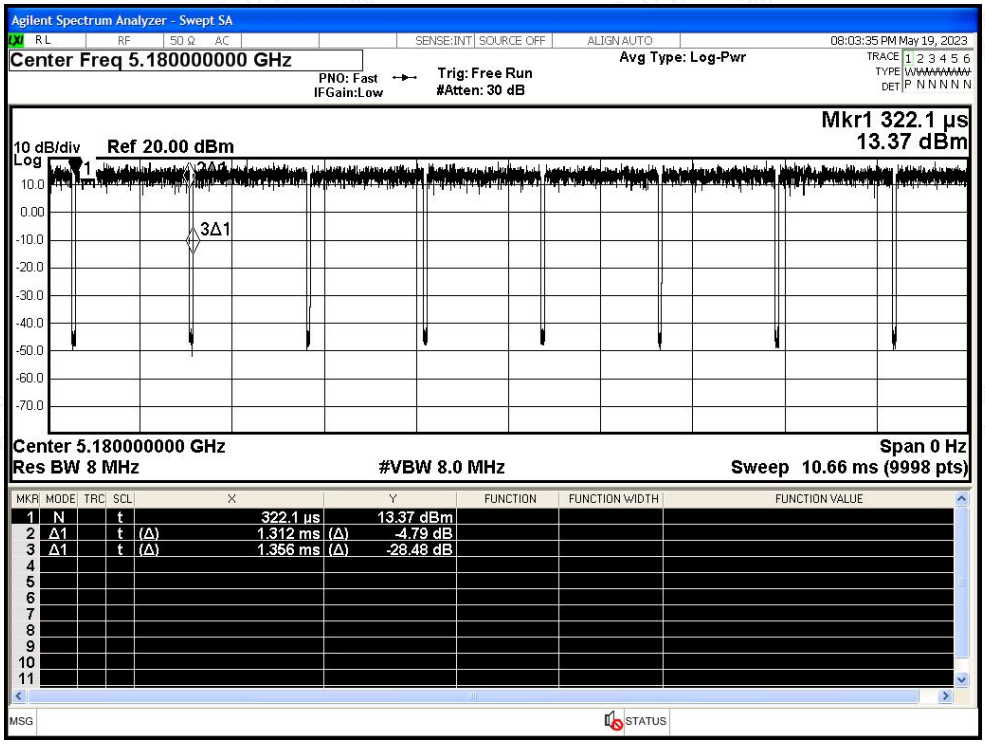

Duty Cycle NVNT ac20 5200MHz Ant0

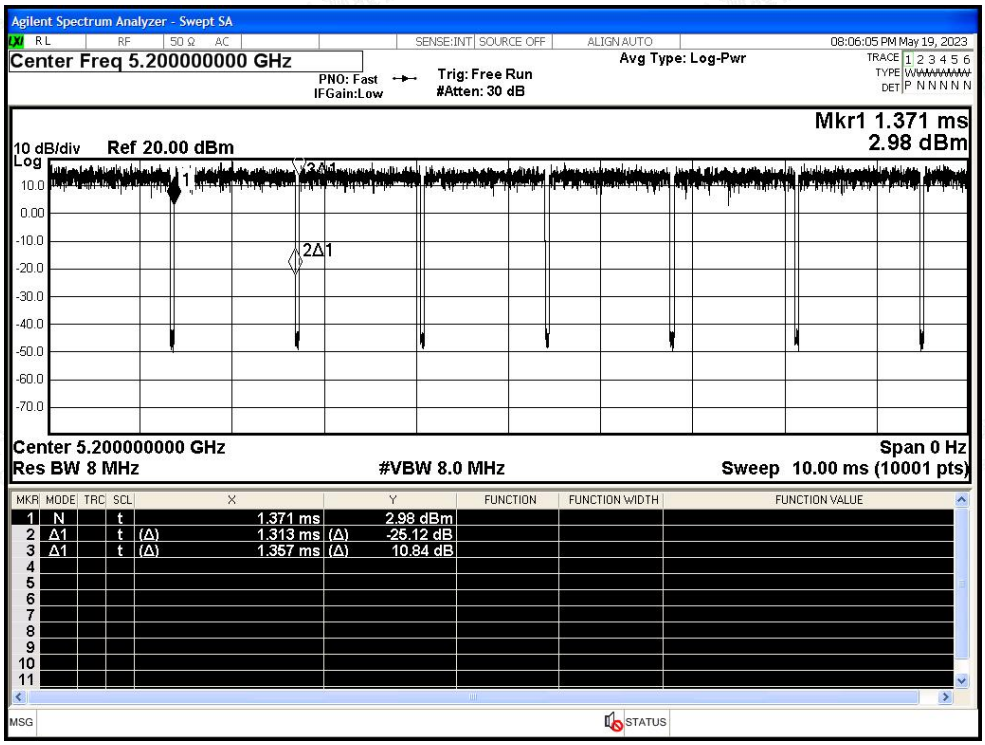

Duty Cycle NVNT ac20 5240MHz Ant0

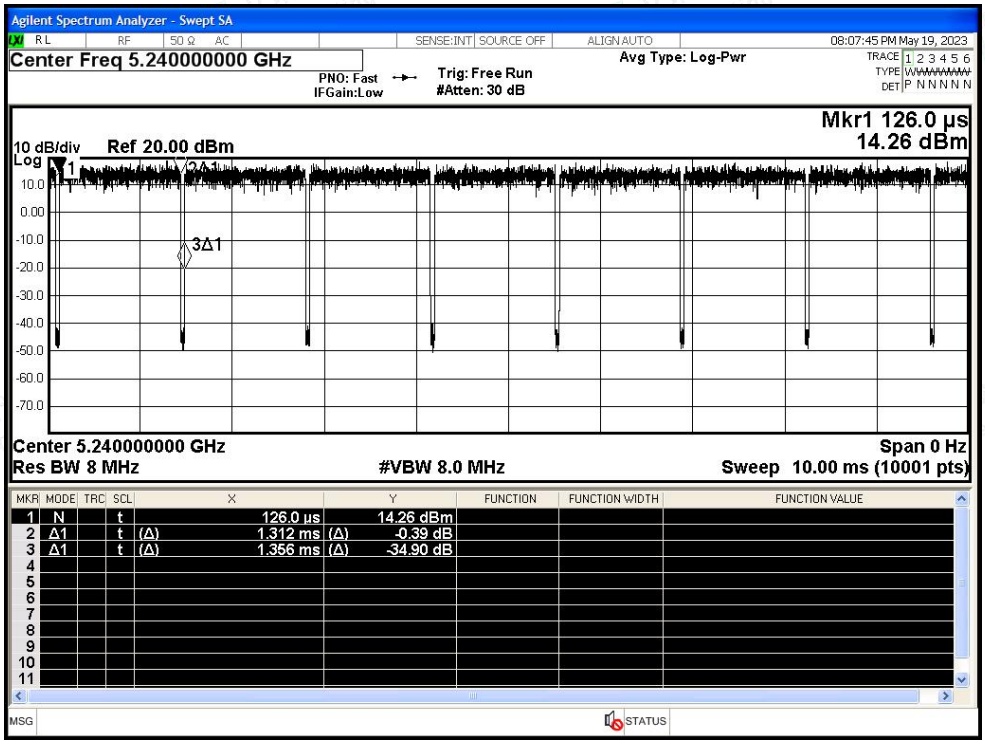

Duty Cycle NVNT ac40 5190MHz Ant0

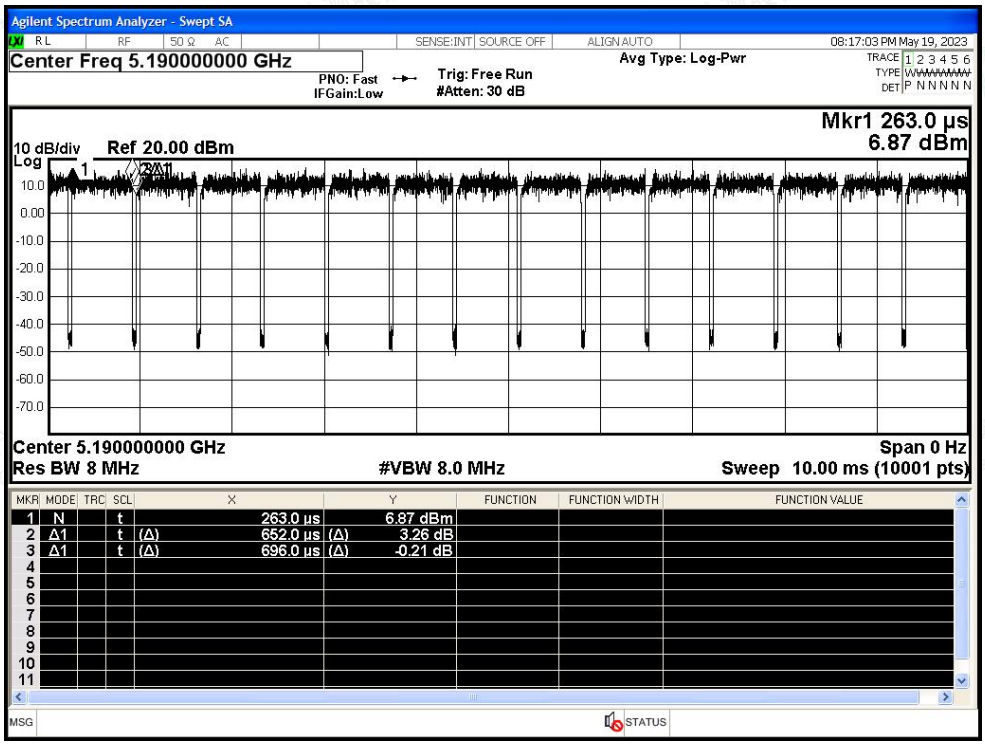

Duty Cycle NVNT ac40 5230MHz Ant0

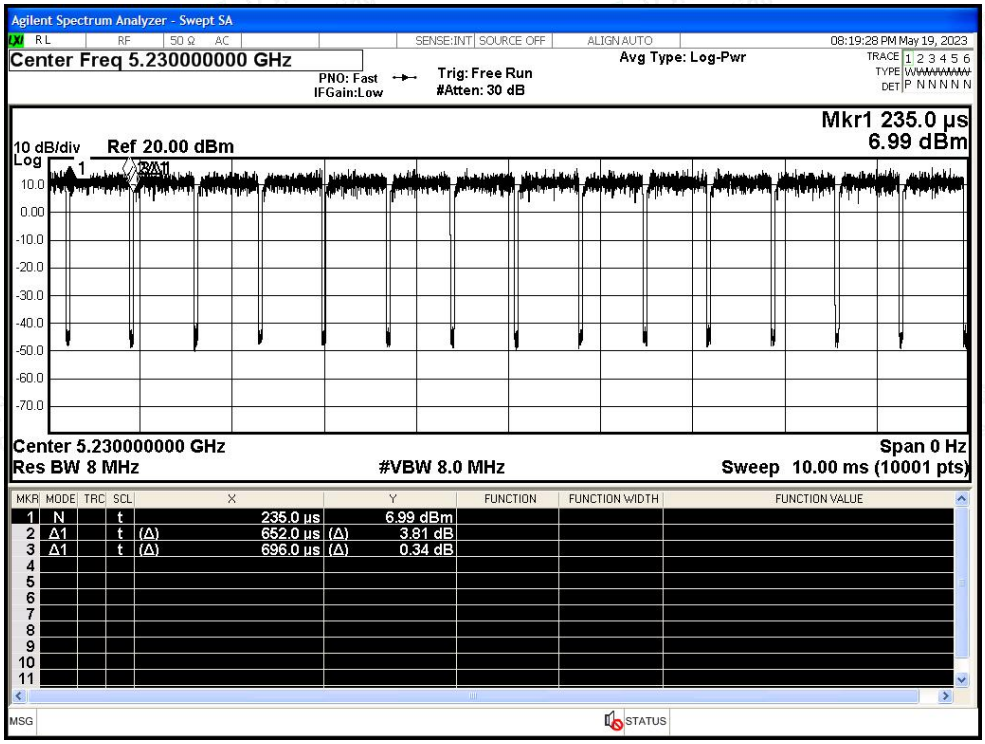

Duty Cycle NVNT ac80 5210MHz Ant0

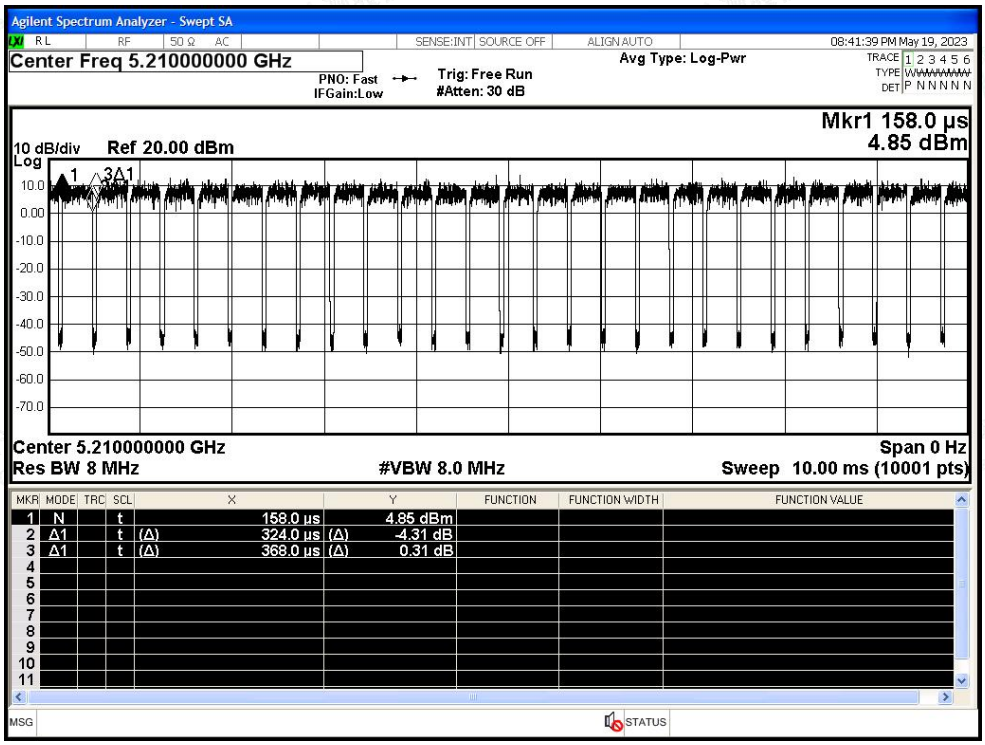

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	Ant1	97.48	0.11	0.72
NVNT	a	5200	Ant1	97.48	0.11	0.72
NVNT	a	5240	Ant1	97.55	0.11	0.72
NVNT	n20	5180	Ant1	97.38	0.12	0.77
NVNT	n20	5200	Ant1	97.31	0.12	0.77
NVNT	n20	5240	Ant1	97.31	0.12	0.77
NVNT	n40	5190	Ant1	94.88	0.23	1.54
NVNT	n40	5230	Ant1	94.74	0.23	1.54
NVNT	ac20	5180	Ant1	97.31	0.12	0.76
NVNT	ac20	5200	Ant1	97.33	0.12	0.76
NVNT	ac20	5240	Ant1	97.33	0.12	0.76
NVNT	ac40	5190	Ant1	94.91	0.23	1.53
NVNT	ac40	5230	Ant1	94.91	0.23	1.53
NVNT	ac80	5210	Ant1	90.25	0.45	3.09

Test Graphs

Duty Cycle NVNT a 5180MHz Ant1

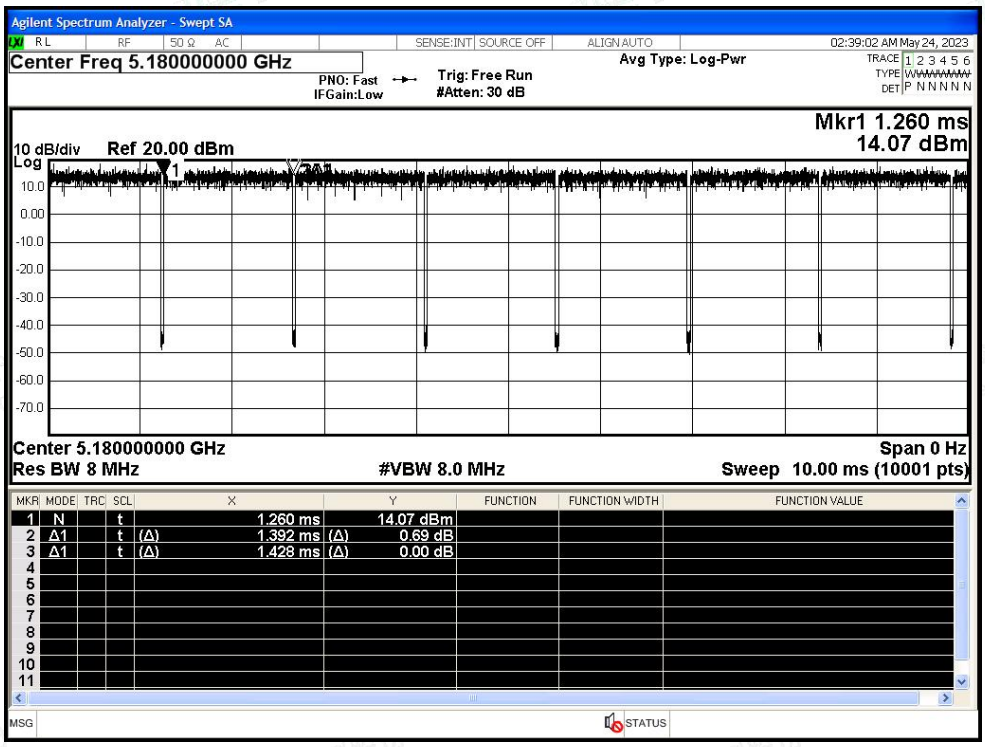

Duty Cycle NVNT a 5200MHz Ant1

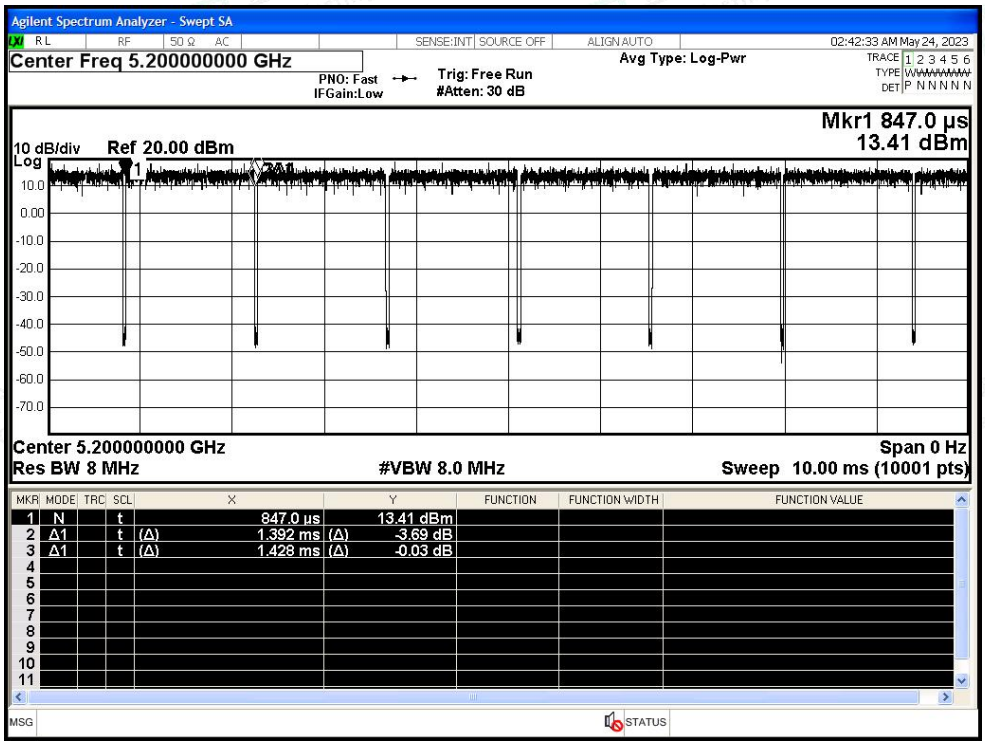

Duty Cycle NVNT a 5240MHz Ant1

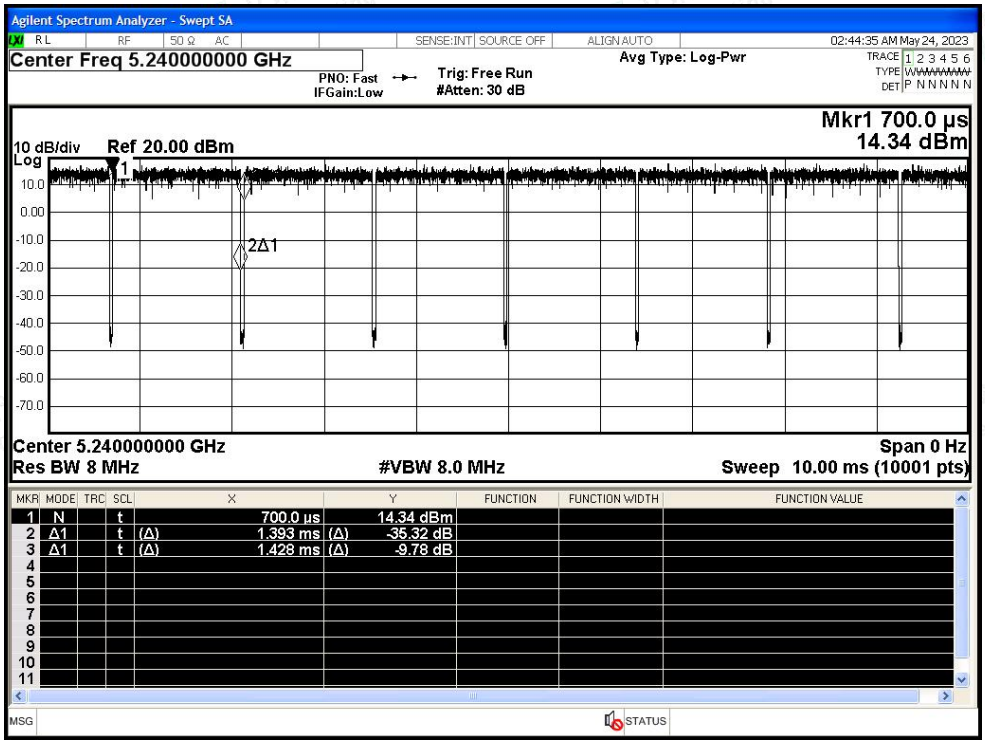

Duty Cycle NVNT n20 5180MHz Ant1

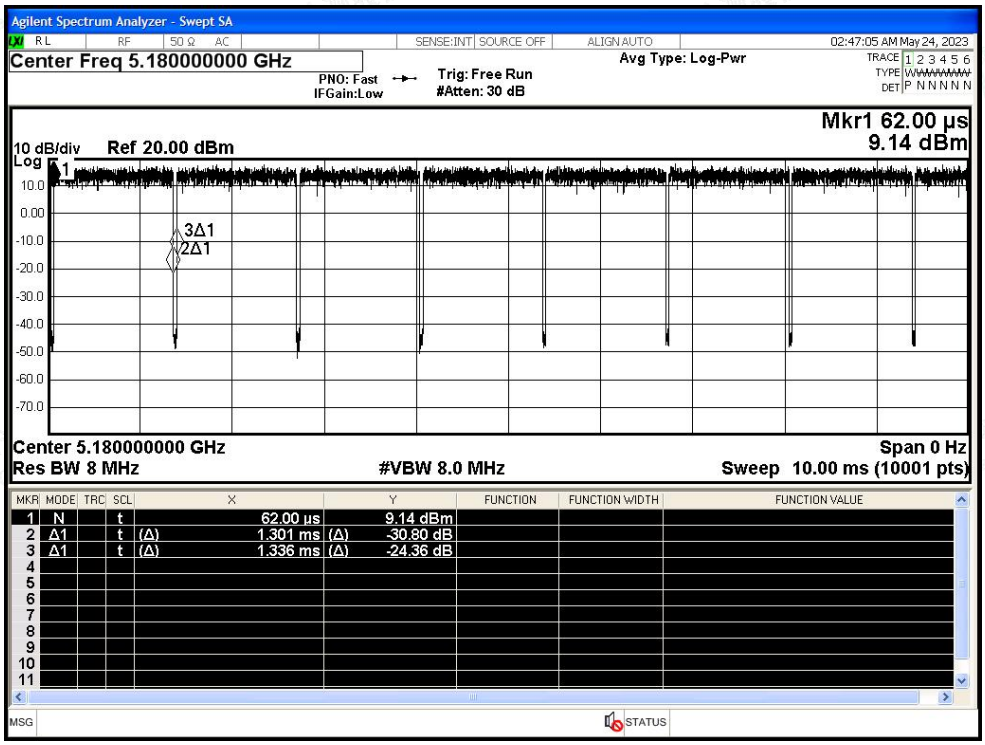

Duty Cycle NVNT n20 5200MHz Ant1

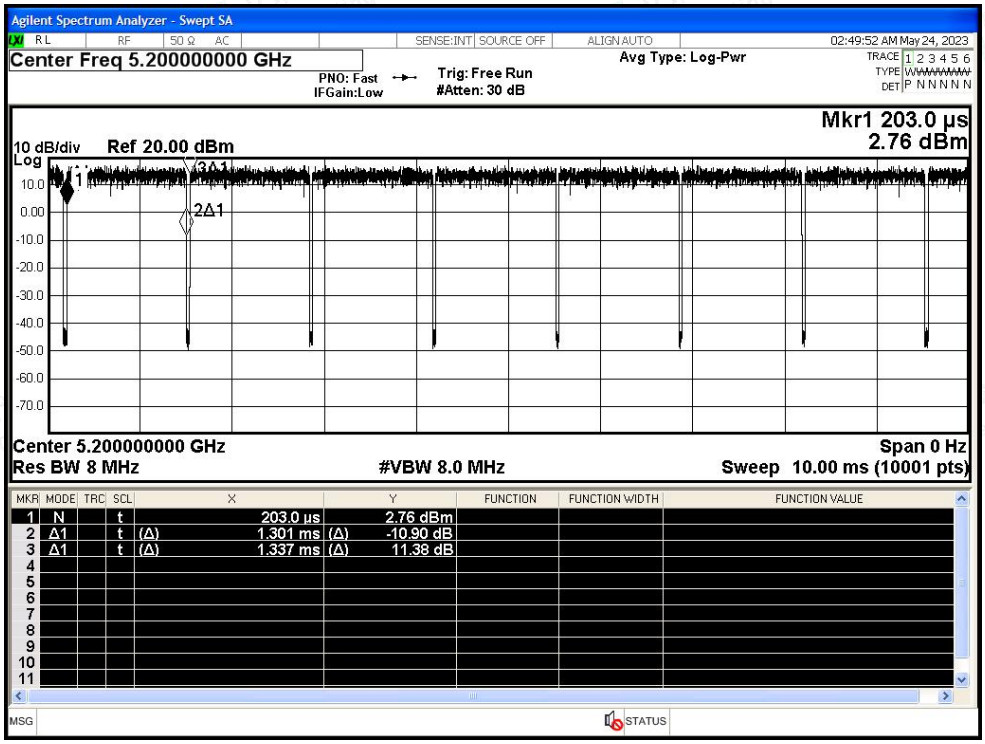

Duty Cycle NVNT n20 5240MHz Ant1

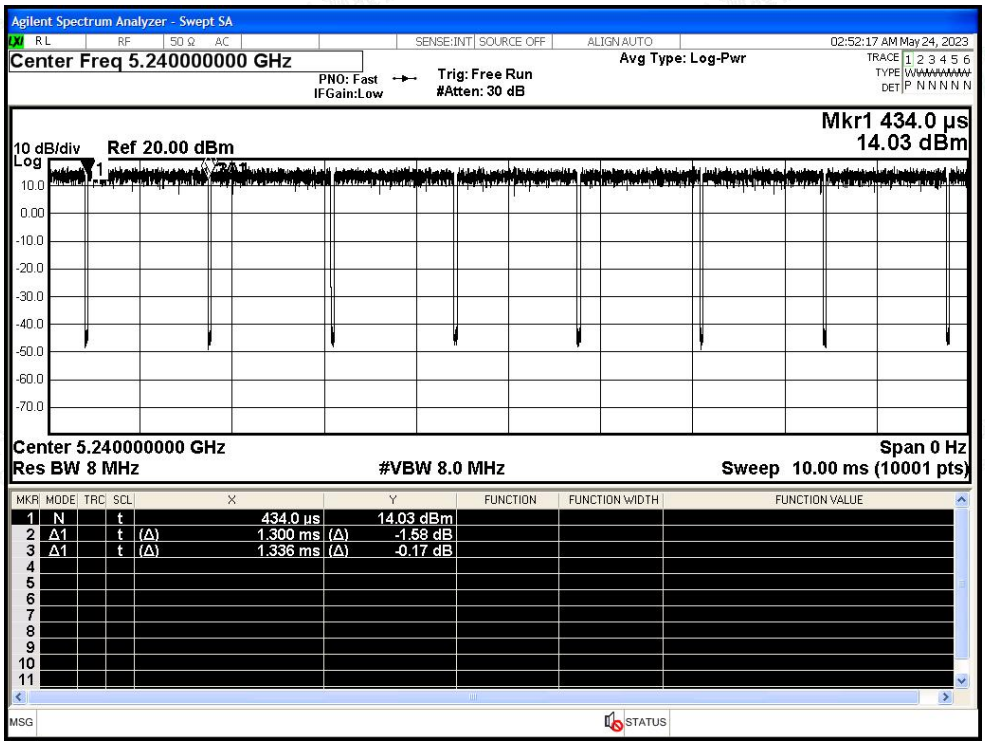

Duty Cycle NVNT n40 5190MHz Ant1

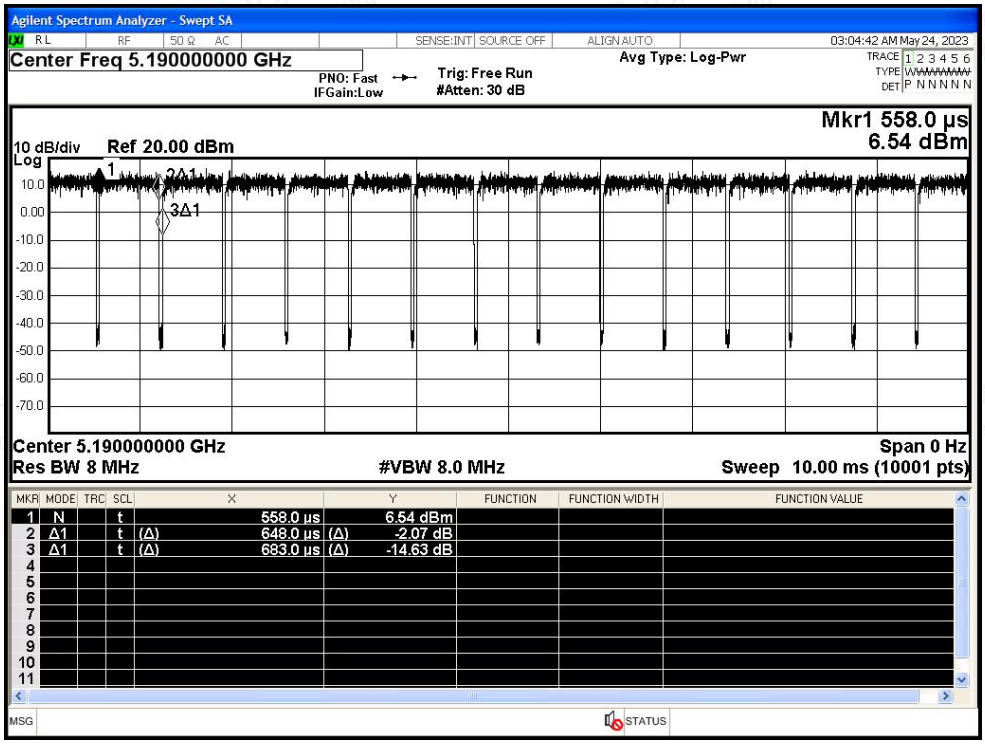

Duty Cycle NVNT n40 5230MHz Ant1

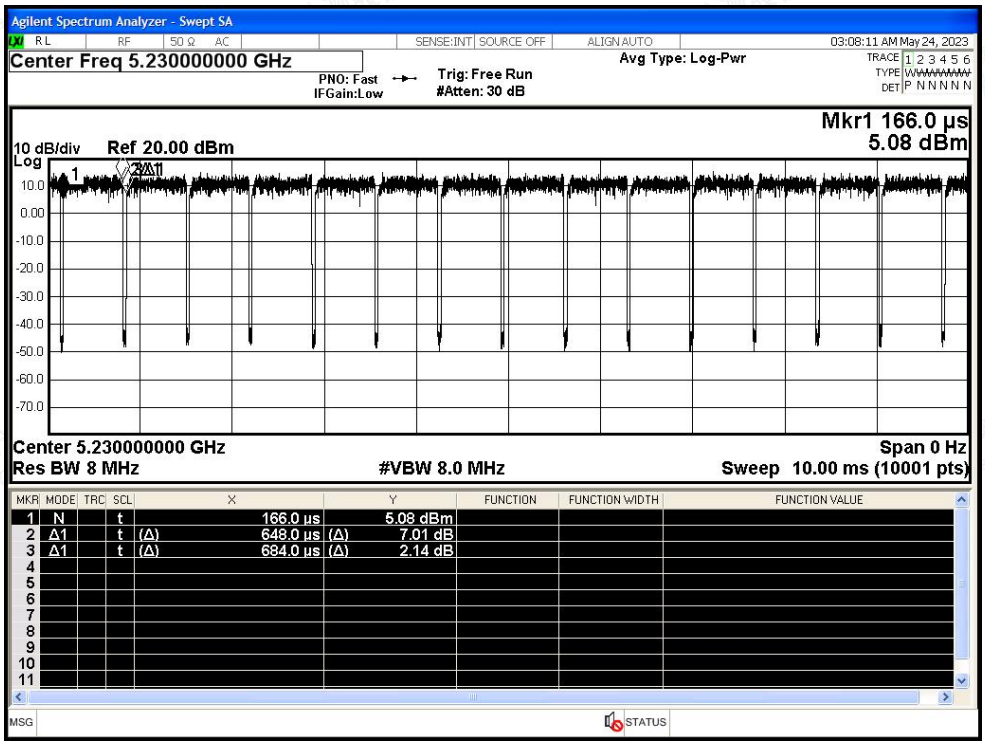

Duty Cycle NVNT ac20 5180MHz Ant1

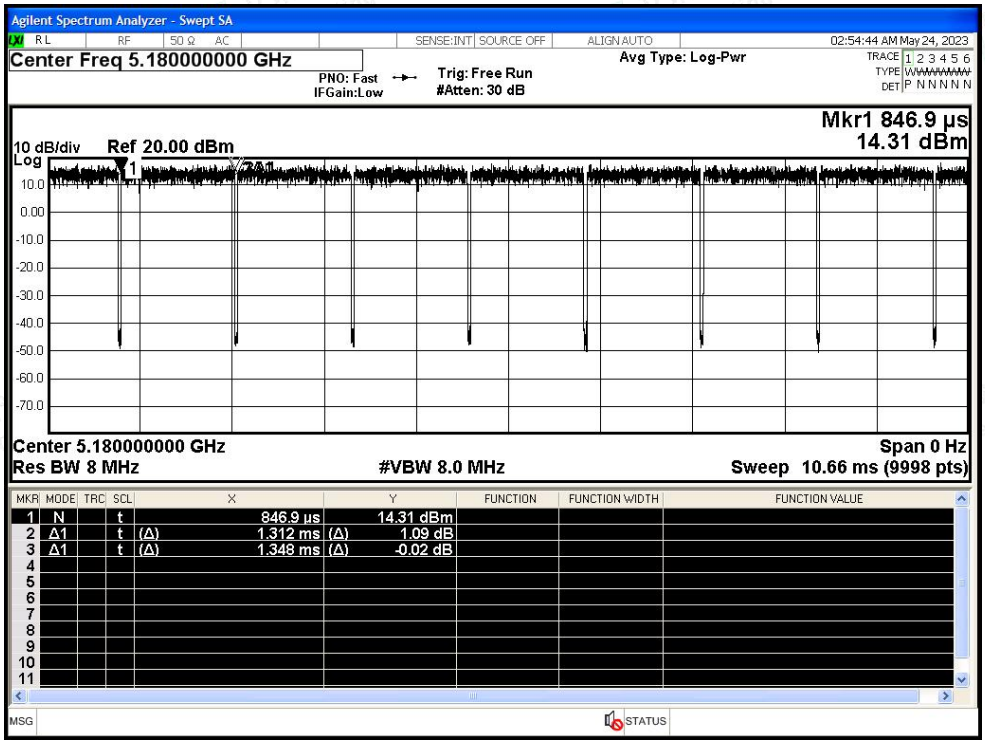

Duty Cycle NVNT ac20 5200MHz Ant1

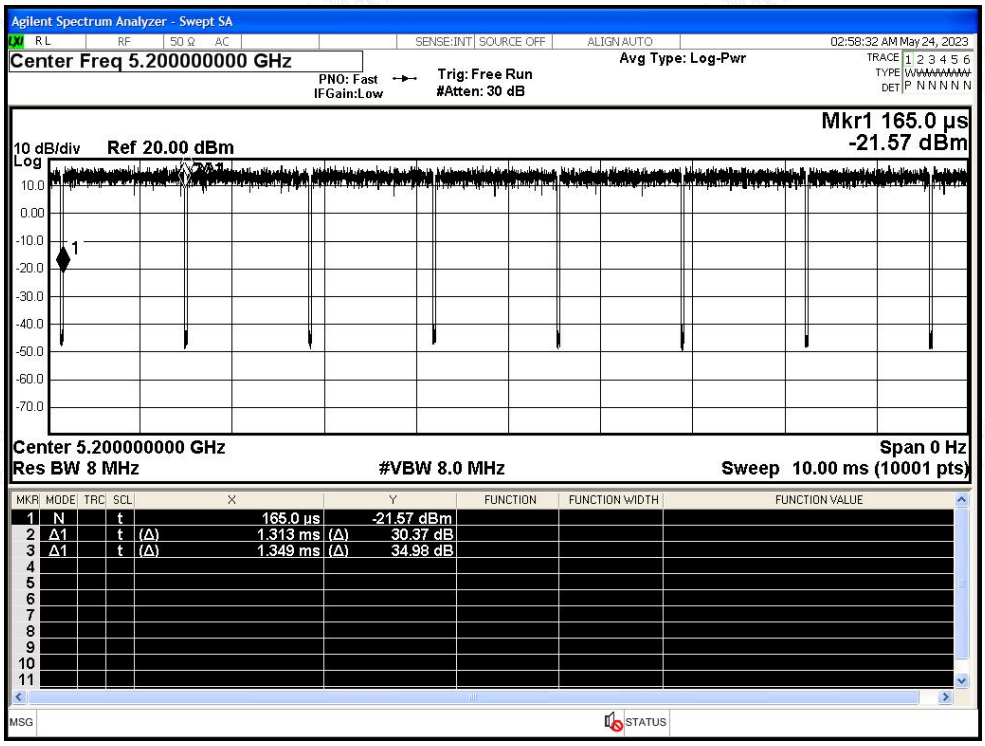

Duty Cycle NVNT ac20 5240MHz Ant1

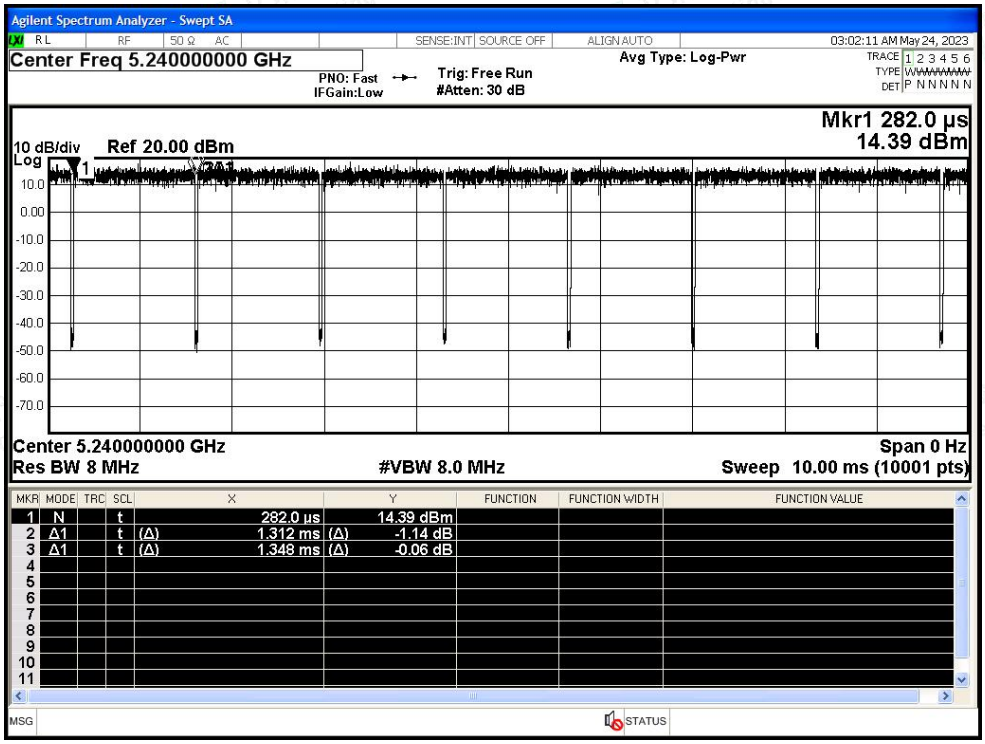

Duty Cycle NVNT ac40 5190MHz Ant1

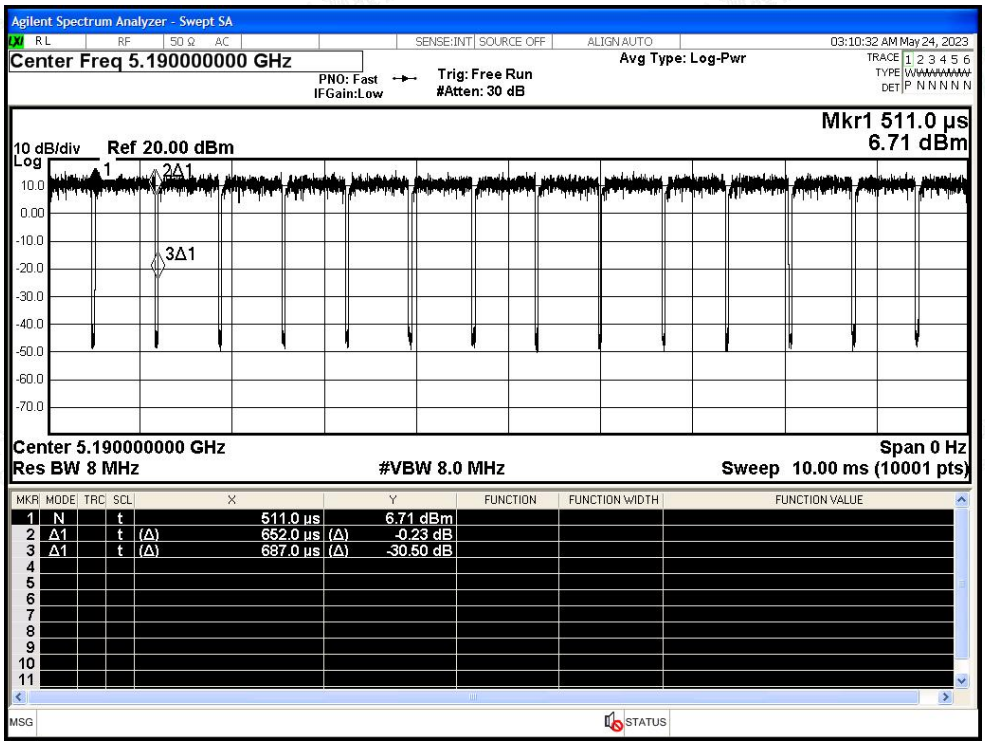

Duty Cycle NVNT ac40 5230MHz Ant1

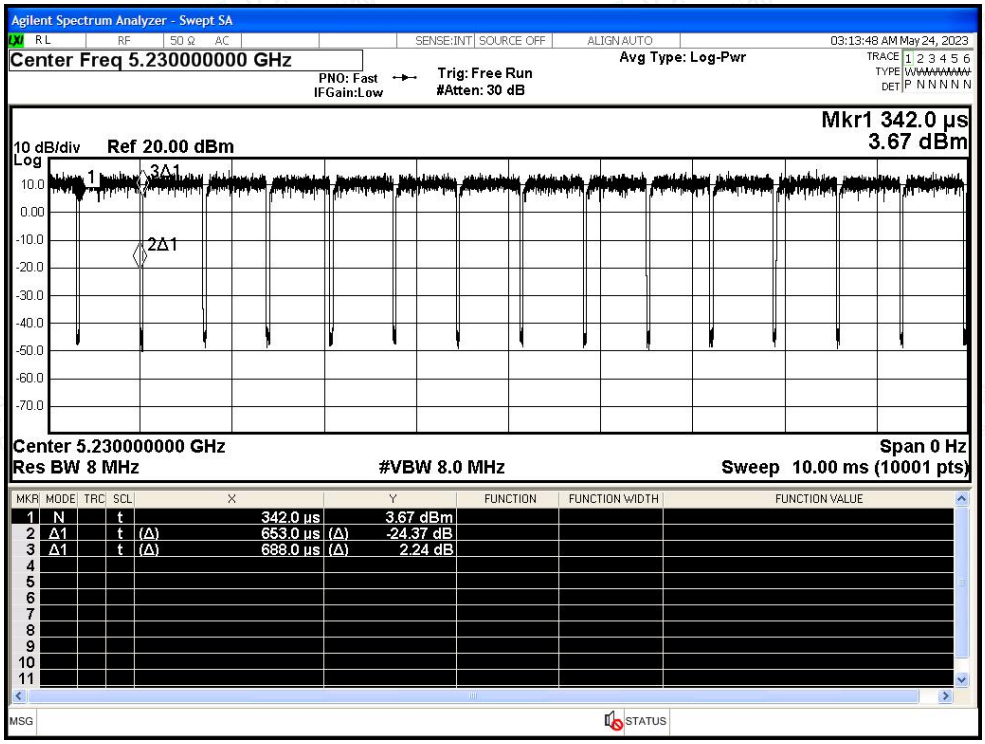
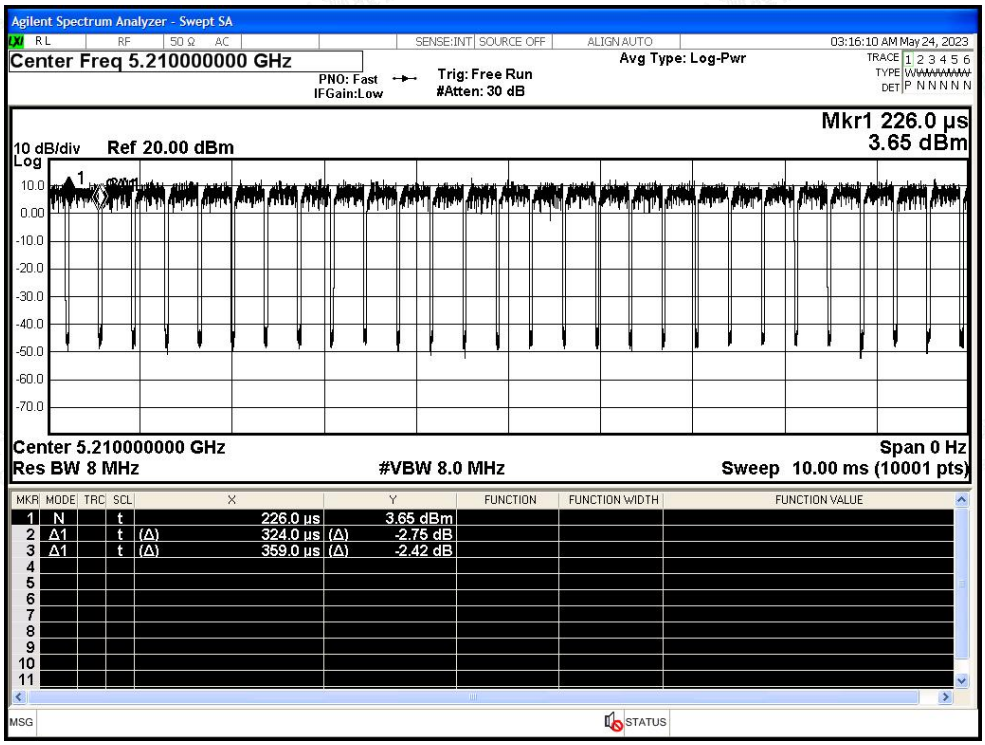
Duty Cycle NVNT ac80 5210MHz Ant1