Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5240MHz
TEST BY :Sam

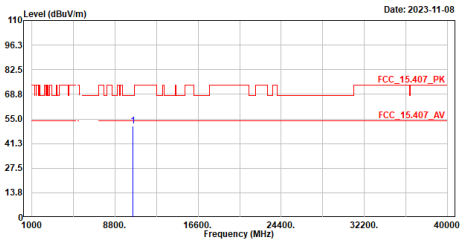

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	51.02	68.22	-17.20	59.95	-8.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5240MHz
TEST BY :Sam

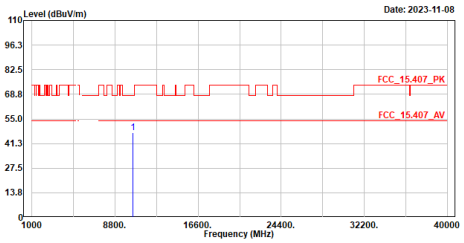

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	47.53	68.22	-20.69	56.46	-8.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
TEST BY :Sam

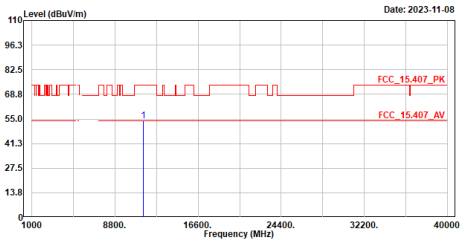

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	53.95	74.00	-20.05	61.21	-7.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
TEST BY :Sam

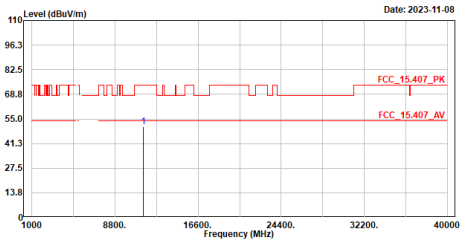

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	50.76	74.00	-23.24	58.02	-7.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5785MHz
TEST BY :Sam

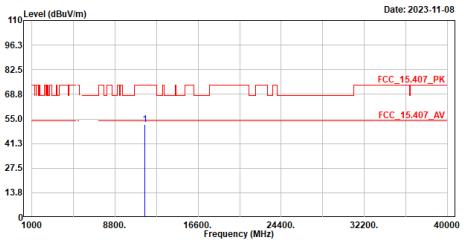

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	51.92	74.00	-22.08	59.20	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5785MHz
TEST BY :Sam

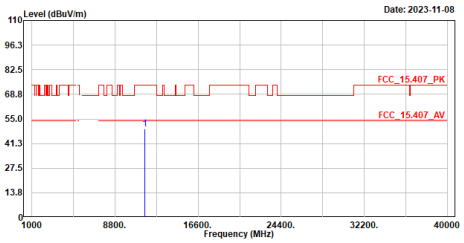

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	49.23	74.00	-24.77	56.51	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5825MHz
TEST BY :Sam

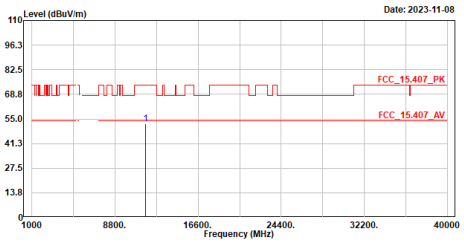

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	52.37	74.00	-21.63	59.64	-7.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5825MHz
TEST BY :Sam

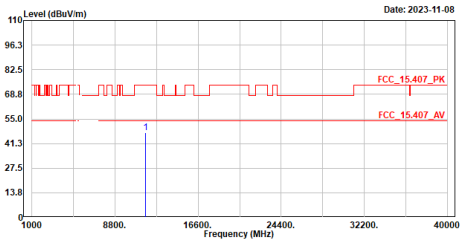

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	47.48	74.00	-26.52	54.75	-7.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5180MHz
TEST BY :Sam

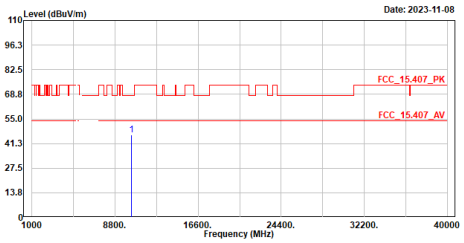

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10360.000	45.96	68.22	-22.26	55.00	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac20_5180MHz
TEST BY :Sam

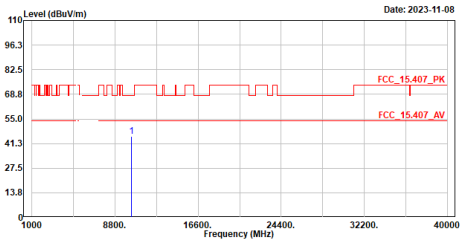

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10360.000	45.31	68.22	-22.91	54.35	-9.04	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5220MHz
TEST BY :Sam

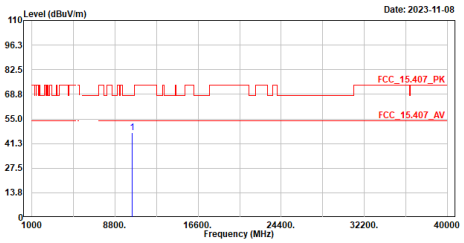

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10440.000	47.29	68.22	-20.93	56.27	-8.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac20_5220MHz
TEST BY :Sam

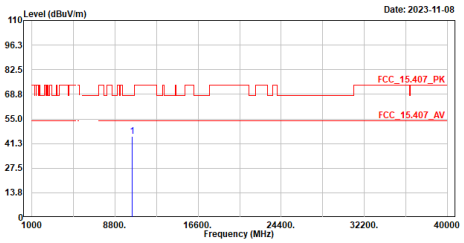

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10440.000	45.16	68.22	-23.06	54.14	-8.98	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5240MHz
TEST BY :Sam

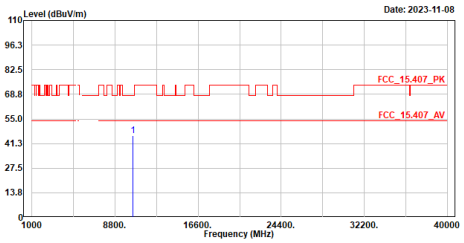

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	45.83	68.22	-22.39	54.76	-8.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac20_5240MHz
TEST BY :Sam

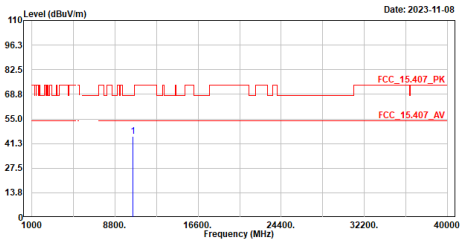

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10480.000	45.09	68.22	-23.13	54.02	-8.93	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5745MHz
TEST BY :Caster

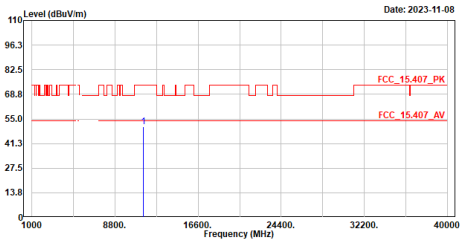

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	50.74	74.00	-23.26	58.00	-7.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac20_5745MHz
TEST BY :Caster

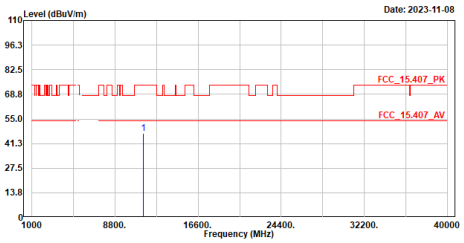

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11490.000	46.78	74.00	-27.22	54.04	-7.26	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5785MHz
TEST BY :Caster

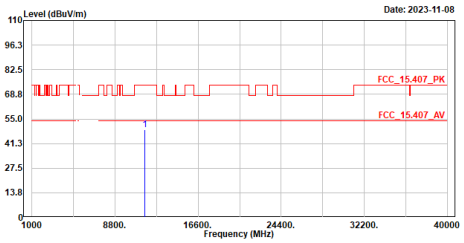

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	49.02	74.00	-24.98	56.30	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac20_5785MHz
TEST BY :Caster

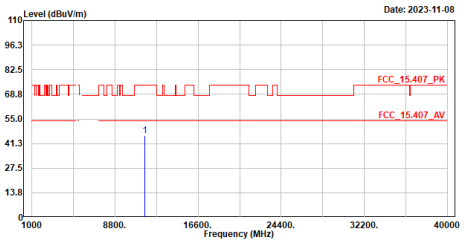

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11570.000	45.70	74.00	-28.30	52.98	-7.28	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac20_5825MHz
TEST BY :Caster

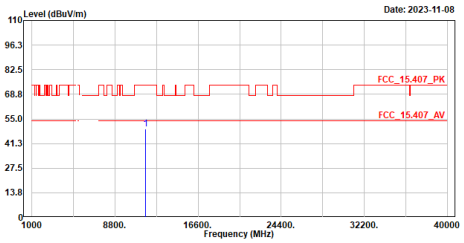

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	49.27	74.00	-24.73	56.54	-7.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac20_5825MHz
TEST BY :Caster

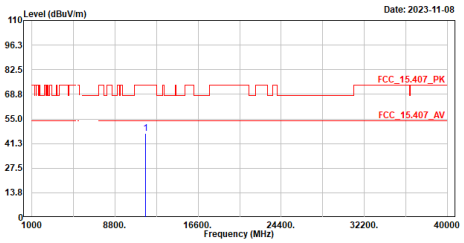

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11650.000	46.97	74.00	-27.03	54.24	-7.27	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5190MHz
TEST BY :Caster

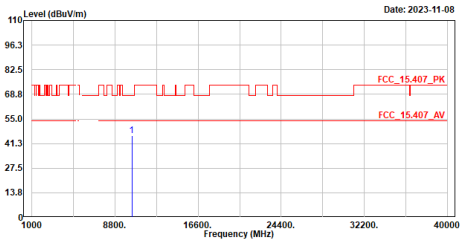

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	45.57	68.22	-22.65	54.60	-9.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac40_5190MHz
TEST BY :Caster

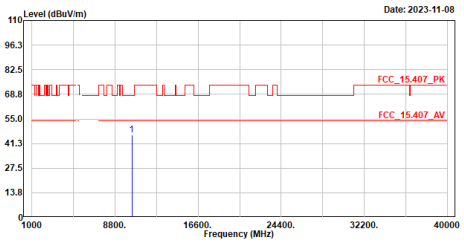

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10380.000	45.91	68.22	-22.31	54.94	-9.03	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5230MHz
TEST BY :Caster

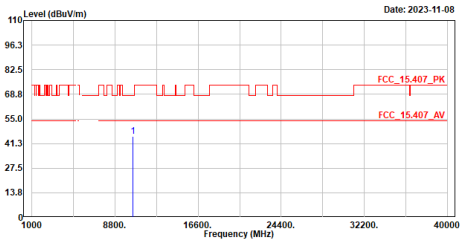

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	45.21	68.22	-23.01	54.16	-8.95	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac40_5230MHz
TEST BY :Caster

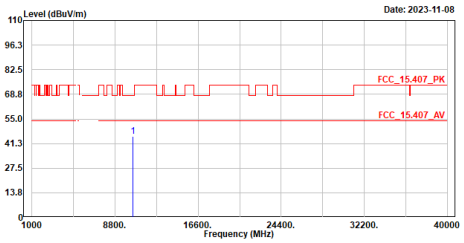

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	10460.000	45.29	68.22	-22.93	54.24	-8.95	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5755MHz
TEST BY :Caster

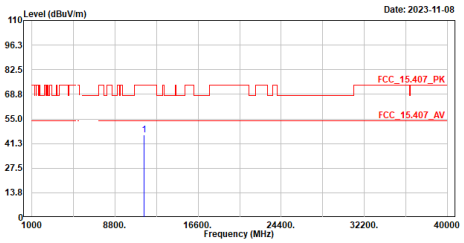

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	46.14	74.00	-27.86	53.39	-7.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac40_5755MHz
TEST BY :Caster

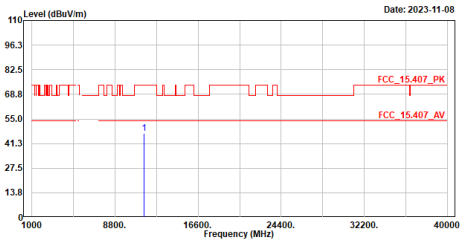

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11510.000	46.92	74.00	-27.08	54.17	-7.25	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5795MHz
TEST BY :Caster

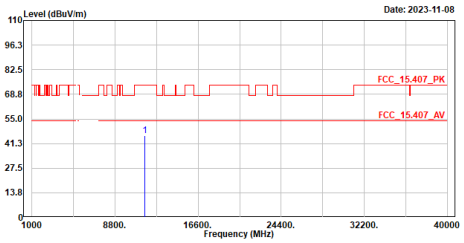

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	45.81	74.00	-28.19	53.13	-7.32	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac40_5795MHz
TEST BY :Caster

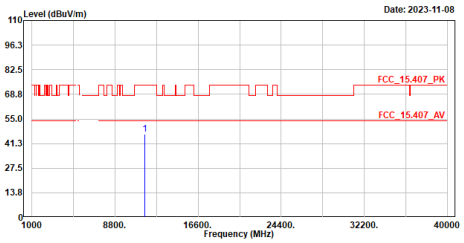

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	11590.000	46.33	74.00	-27.67	53.65	-7.32	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_ac40_5795MHz
TEST BY :Caster

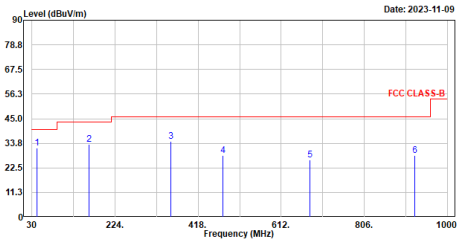

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	42.610	31.62	40.00	-8.38	55.07	-23.45	QP
2	162.890	33.14	43.50	-10.36	56.87	-23.73	QP
3	353.980	34.48	46.00	-11.52	56.14	-21.66	QP
4	476.200	28.17	46.00	-17.83	46.48	-18.31	QP
5	678.930	26.08	46.00	-19.92	40.51	-14.43	QP
6	924.340	28.26	46.00	-17.74	39.17	-10.91	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_ac40_5795MHz
TEST BY :Caster

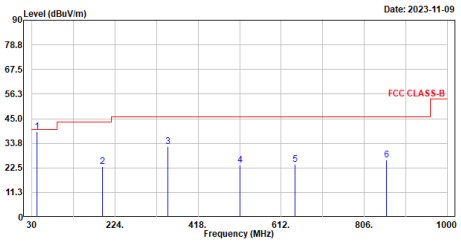

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	42.610	39.01	40.00	-0.99	62.46	-23.45	QP
2	193.930	23.11	43.50	-20.39	49.67	-26.56	QP
3	348.160	32.14	46.00	-13.86	53.87	-21.73	QP
4	515.970	23.66	46.00	-22.34	41.10	-17.44	QP
5	644.010	24.27	46.00	-21.73	39.11	-14.84	QP
6	858.380	26.09	46.00	-19.91	37.97	-11.88	QP

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission under 30MHz was not included since the emission levels are very low against the limit.

6. Band Edge

6.1. Test Setup

RF Conducted Measurement:

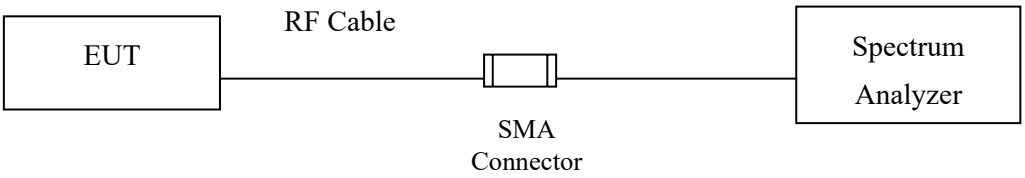

RF Radiated Measurement:

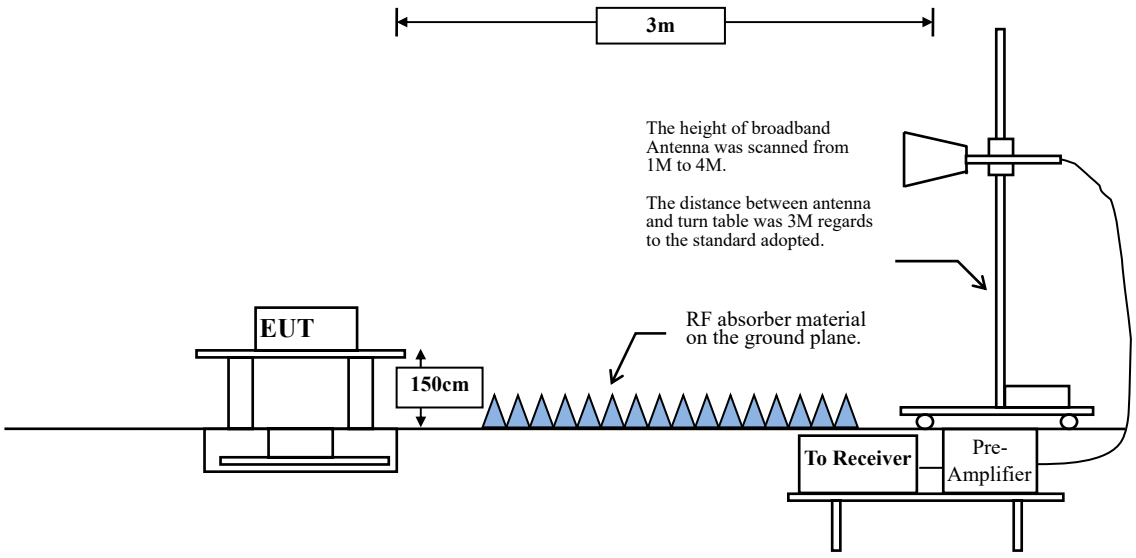

6.2. Limits

The provisions of Section 15.205 of this part apply to intentional radiators operating under this section. Radiated emissions which fall in the restricted bands, as defined in Section 15.205, must also comply with the radiated emission limits specified in Section 15.209:

FCC Part 15 Subpart C Paragraph 15.209 Limits		
Frequency MHz	μV/m @3m	dBμV/m@3m
30-88	100	40
88-216	150	43.5
216-960	200	46
Above 960	500	54

Remarks : 1. RF Voltage (dBμV) = 20 log RF Voltage (μV)

2. In the Above Table, the tighter limit applies at the band edges.

3. Distance refers to the distance in meters between the measuring instrument antenna and the closed point of any part of the device or system.

- For transmitters operating in the 5.15-5.25 GHz band: All emissions outside of the 5.15-5.35 GHz band shall not exceed an e.i.r.p. of −27 dBm/MHz.
- For transmitters operating in the 5.25-5.35 GHz band: All emissions outside of the 5.15-5.35 GHz band shall not exceed an e.i.r.p. of −27 dBm/MHz.
- For transmitters operating in the 5.47-5.725 GHz band: All emissions outside of the 5.47-5.725 GHz band shall not exceed an e.i.r.p. of −27 dBm/MHz.
- For transmitters operating in the 5.725-5.85 GHz band:
  All emissions shall be limited to a level of −27 dBm/MHz at 75 MHz or more above or below the band edge increasing linearly to 10 dBm/MHz at 25 MHz above or below the band edge, and from 25 MHz above or below the band edge increasing linearly to a level of 15.6 dBm/MHz at 5 MHz above or below the band edge, and from 5 MHz above or below the band edge increasing linearly to a level of 27 dBm/MHz at the band edge.
- For transmitters operating in the 5.850-5.895 GHz band:
  (i) For an indoor access point or subordinate device, all emissions at or above 5.895 GHz shall not exceed an e.i.r.p. of 15 dBm/MHz and shall decrease linearly to an e.i.r.p. of −7 dBm/MHz at or above 5.925 GHz.
  (ii) For a client device, all emissions at or above 5.895 GHz shall not exceed an e.i.r.p. of −5 dBm/MHz and shall decrease linearly to an e.i.r.p. of −27 dBm/MHz at or above 5.925 GHz.
  (iii) For a client device or indoor access point or subordinate device, all emissions below 5.725 GHz shall not exceed an e.i.r.p. of −27 dBm/MHz at 5.65 GHz increasing linearly to 10 dBm/MHz at 5.7 GHz, and from 5.7 GHz increasing linearly to a level of 15.6 dBm/MHz at 5.72 GHz, and from 5.72 GHz increasing linearly to a level of 27 dBm/MHz at 5.725 GHz.
- For transmitters operating within the 5.925-7.125 GHz band: Any emissions outside of the 5.925-7.125 GHz band must not exceed an e.i.r.p. of −27 dBm/MHz.

Based on ANSI C63.10-2013 Section 12.7.3 d) provides the conversion formula between field strength and EIRP, if distance is 3m, -27dBm is equivalent to 68.22dBuV/m.

6.3. Test Procedure

The EUT is placed on a turn table which is 1.5 meter above ground. The turn table can rotate 360 degrees to determine the position of the maximum emission level. The EUT was positioned such that the distance from antenna to the EUT was 3 meters.

The antenna can move up and down between 1 meter and 4 meters to find out the maximum emission level.

Both horizontal and vertical polarization of the antenna are set on measurement. In order to find the maximum emission, all of the interface cables must be manipulated according to ANSI C63.10:2013 on radiated measurement.

The bandwidth below 1 GHz setting on the field strength meter is 120 kHz, above 1 GHz are 1 MHz.

The EUT was setup to ANSI C63.10, 2013; tested to UNII test procedure of FCC KDB-789033 for compliance to FCC 47CFR Subpart E requirements.

RBW and VBW Parameter setting:

According to KDB 789033 section II.G.5 Procedure for Unwanted Maximum Emissions Measurements above 1000 MHz.

RBW = 1 MHz.

VBW ≥ 3 MHz.

According to KDB 789033 section II.G.6 Procedures for Average Unwanted Emissions Measurements above 1000 MHz.

RBW = 1 MHz.

VBW = 10 Hz, when duty cycle ≥ 98 %

VBW ≥ 1/T, when duty cycle < 98 %

(T refers to the minimum transmission duration over which the transmitter is on and is transmitting at its maximum power control level for the tested mode of operation.)

5 GHz band	Duty Cycle (%)	T (ms)	1/T (Hz)	VBW (Hz)
802.11a	98.10	2.0640	484	10
802.11ac-20 MHz	96.11	0.9880	1012	2000
802.11ac-40 MHz	92.91	0.4980	2008	3000

Note: Duty Cycle Refer to Section 8.

6.4. Test Result of Band Edge

NA2_ Sample ID 03

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Caster

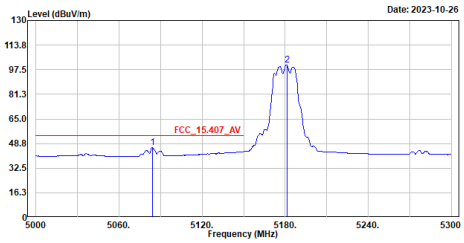

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5084.000	46.13	54.00	-7.87	31.40	14.73	Average
2	5181.200	100.60	------	------	85.79	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Caster

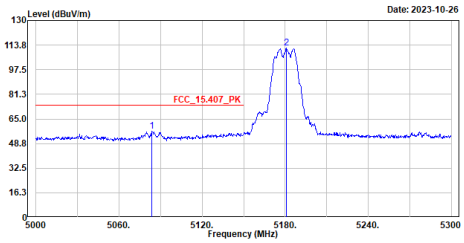

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5083.700	56.97	74.00	-17.03	42.24	14.73	Peak
2	5180.900	111.68	------	------	96.87	14.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Caster

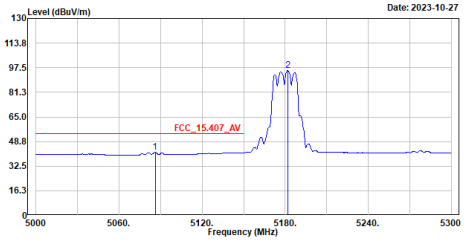

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5086.100	41.53	54.00	-12.47	26.79	14.74	Average
2	5181.800	95.60	------	------	80.79	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Caster

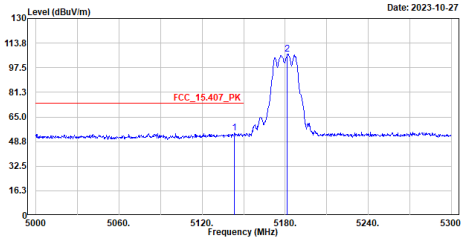

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5143.400	54.31	74.00	-19.69	39.54	14.77	Peak
2	5181.500	106.38	------	------	91.57	14.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Sam

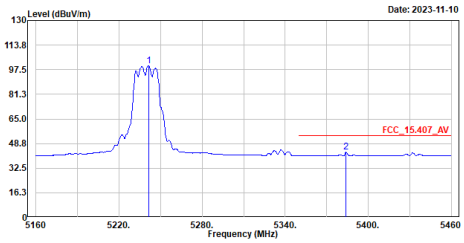

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5241.300	100.03	------	------	85.26	14.77	Average
2	5384.100	42.97	54.00	-11.03	28.14	14.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Sam

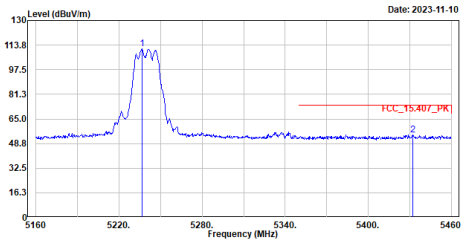

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5236.800	111.21	------	------	96.43	14.78	Peak
2	5432.100	54.31	74.00	-19.69	39.43	14.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Sam

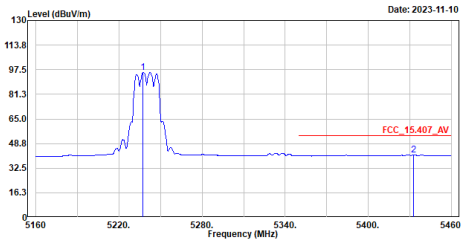

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5237.400	95.69	------	------	80.91	14.78	Average
2	5432.700	41.41	54.00	-12.59	26.52	14.89	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Sam

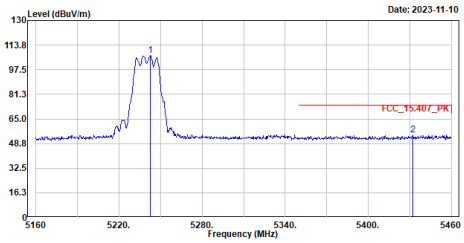

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5242.800	106.78	------	------	92.02	14.76	Peak
2	5432.100	54.48	74.00	-19.52	39.60	14.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5745MHz
TEST BY :Caster

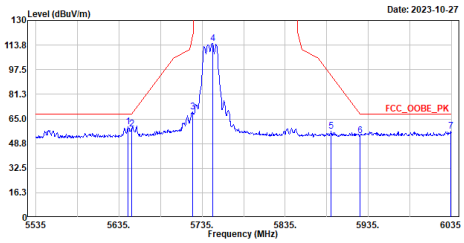

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5645.500	59.80	68.22	-8.42	43.77	16.03	Peak
2	5650.000	58.26	68.23	-9.97	42.19	16.07	Peak
3	5724.000	69.75	119.92	-50.17	53.17	16.58	Peak
4	5747.500	114.74	------	------	98.13	16.61	Peak
5	5890.500	57.01	93.74	-36.73	40.31	16.70	Peak
6	5925.000	53.96	68.23	-14.27	37.26	16.70	Peak
7	6034.500	56.91	68.22	-11.31	40.08	16.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5745MHz
TEST BY :Caster

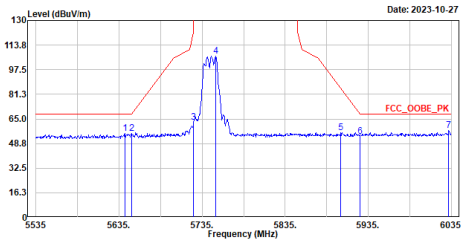

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5642.000	55.32	68.22	-12.90	39.31	16.01	Peak
2	5650.000	55.51	68.23	-12.72	39.44	16.07	Peak
3	5725.000	62.66	122.20	-59.54	46.08	16.58	Peak
4	5751.500	106.64	------	------	90.01	16.63	Peak
5	5902.000	55.96	85.23	-29.27	39.27	16.69	Peak
6	5925.000	53.59	68.23	-14.64	36.89	16.70	Peak
7	6032.000	57.22	68.22	-11.00	40.41	16.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,HORIZONTAL
Mode :TX_a_5825MHz
TEST BY :Caster

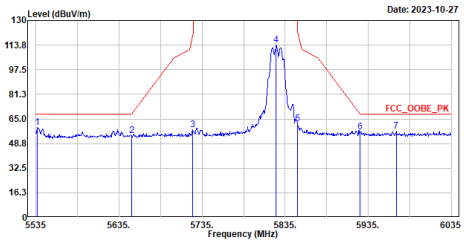

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5537.000	59.32	68.22	-8.90	43.91	15.41	Peak
2	5650.000	53.94	68.23	-14.29	37.87	16.07	Peak
3	5724.000	57.65	119.92	-62.27	41.07	16.58	Peak
4	5824.000	113.58	------	------	96.90	16.68	Peak
5	5850.000	61.90	122.20	-60.30	45.20	16.70	Peak
6	5925.000	56.25	68.23	-11.98	39.55	16.70	Peak
7	5968.500	56.99	68.22	-11.23	40.35	16.64	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,VERTICAL
Mode :TX_a_5825MHz
TEST BY :Caster

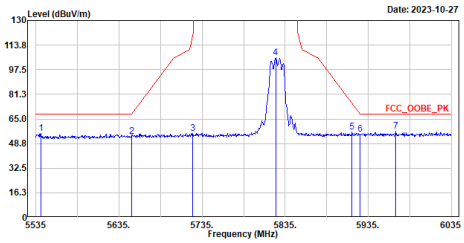

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5541.000	55.58	68.22	-12.64	40.17	15.41	Peak
2	5650.000	53.45	68.23	-14.78	37.38	16.07	Peak
3	5724.000	55.65	119.92	-64.27	39.07	16.58	Peak
4	5823.500	105.46	------	------	88.78	16.68	Peak
5	5915.500	56.55	75.25	-18.70	39.85	16.70	Peak
6	5925.000	54.74	68.23	-13.49	38.04	16.70	Peak
7	5968.000	56.70	68.22	-11.52	40.06	16.64	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5180MHz
TEST BY :Sam

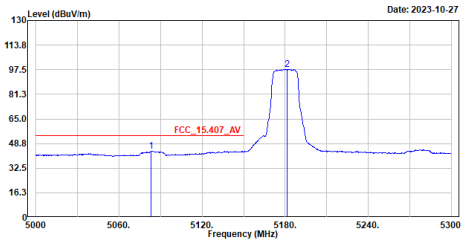

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5083.400	43.68	54.00	-10.32	28.95	14.73	Average
2	5181.200	97.85	------	------	83.04	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5180MHz
TEST BY :Sam

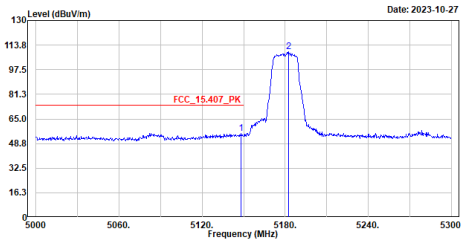

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5147.900	55.51	74.00	-18.49	40.73	14.78	Peak
2	5182.400	109.51	------	------	94.70	14.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
TEST BY :Sam

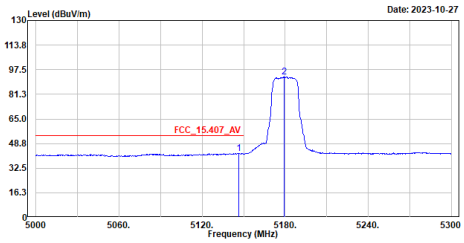

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5146.700	42.24	54.00	-11.76	27.47	14.77	Average
2	5179.100	92.81	------	------	78.01	14.80	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
TEST BY :Sam

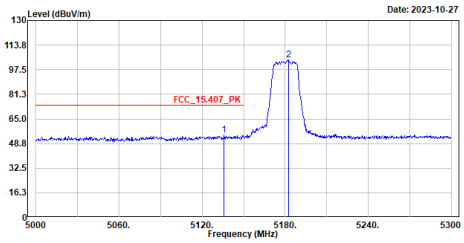

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5135.900	54.24	74.00	-19.76	39.47	14.77	Peak
2	5182.400	104.16	------	------	89.35	14.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5240MHz
TEST BY :Sam

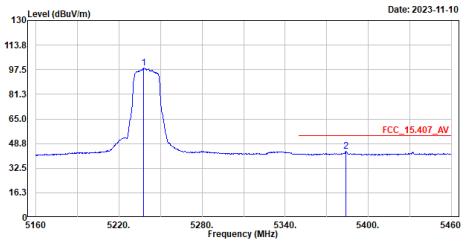

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5237.700	98.65	------	------	83.88	14.77	Average
2	5384.100	43.69	54.00	-10.31	28.86	14.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5240MHz
TEST BY :Sam

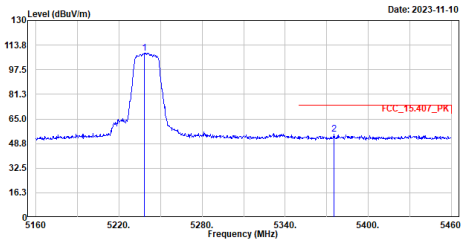

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5238.300	108.55	------	------	93.78	14.77	Peak
2	5375.400	54.89	74.00	-19.11	40.05	14.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5240MHz
TEST BY :Sam

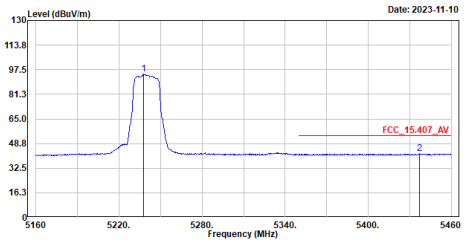

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5237.700	94.75	------	------	79.98	14.77	Average
2	5437.200	41.98	54.00	-12.02	27.08	14.90	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5240MHz
TEST BY :Sam

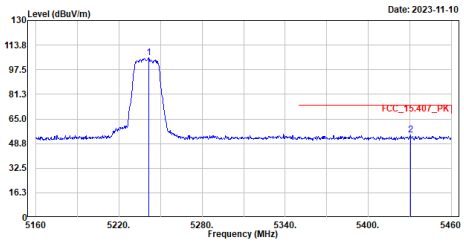

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5241.300	105.51	------	------	90.74	14.77	Peak
2	5430.600	54.27	74.00	-19.73	39.39	14.88	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5745MHz
TEST BY :Sam

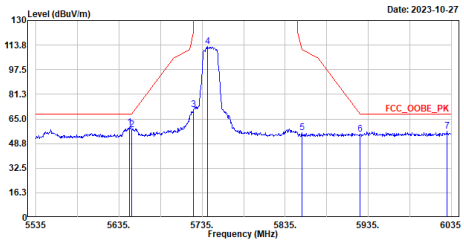

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5648.000	59.38	68.22	-8.84	43.33	16.05	Peak
2	5650.000	57.86	68.23	-10.37	41.79	16.07	Peak
3	5725.000	71.26	122.20	-50.94	54.68	16.58	Peak
4	5742.000	112.64	------	------	96.03	16.61	Peak
5	5855.000	55.76	110.80	-55.04	39.06	16.70	Peak
6	5925.000	54.91	68.23	-13.32	38.21	16.70	Peak
7	6030.000	56.75	68.22	-11.47	39.96	16.79	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5745MHz
TEST BY :Sam

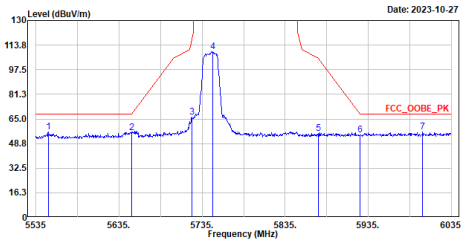

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5550.000	56.21	68.22	-12.01	40.76	15.45	Peak
2	5650.000	55.85	68.23	-12.38	39.78	16.07	Peak
3	5722.500	66.36	116.50	-50.14	49.78	16.58	Peak
4	5747.500	109.41	------	------	92.80	16.61	Peak
5	5875.000	55.60	105.20	-49.60	38.90	16.70	Peak
6	5925.000	54.51	68.23	-13.72	37.81	16.70	Peak
7	6000.500	56.40	68.22	-11.82	39.84	16.56	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5825MHz
TEST BY :Sam

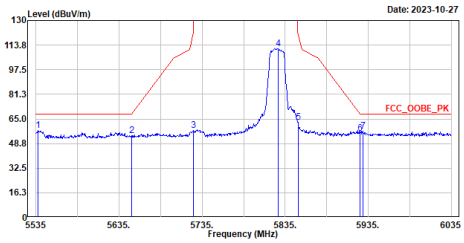

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5537.500	57.23	68.22	-10.99	41.82	15.41	Peak
2	5650.000	54.18	68.23	-14.05	38.11	16.07	Peak
3	5725.000	57.29	122.20	-64.91	40.71	16.58	Peak
4	5826.500	111.55	------	------	94.87	16.68	Peak
5	5850.500	62.60	121.06	-58.46	45.90	16.70	Peak
6	5925.000	55.19	68.23	-13.04	38.49	16.70	Peak
7	5928.500	56.87	68.22	-11.35	40.17	16.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5825MHz
TEST BY :Sam

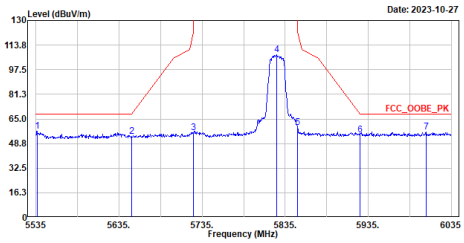

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5536.500	56.80	68.22	-11.42	41.39	15.41	Peak
2	5650.000	53.40	68.23	-14.83	37.33	16.07	Peak
3	5724.500	55.97	121.06	-65.09	39.39	16.58	Peak
4	5824.500	107.48	------	------	90.80	16.68	Peak
5	5850.000	59.44	122.20	-62.76	42.74	16.70	Peak
6	5925.000	54.26	68.23	-13.97	37.56	16.70	Peak
7	6005.000	56.61	68.22	-11.61	40.01	16.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
TEST BY :Sam

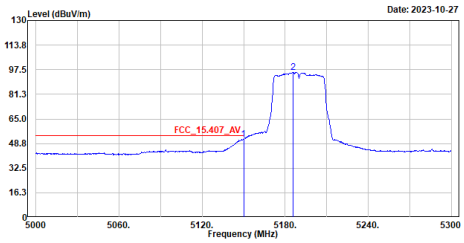

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	51.59	54.00	-2.41	36.81	14.78	Average
2	5185.700	95.67	------	------	80.86	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
TEST BY :Sam

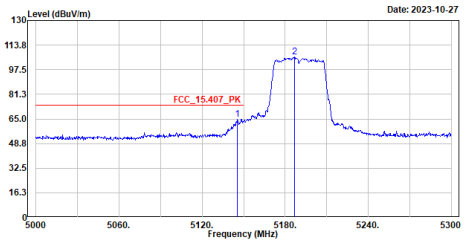

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5145.500	64.65	74.00	-9.35	49.88	14.77	Peak
2	5186.600	105.79	------	------	90.97	14.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
TEST BY :Sam

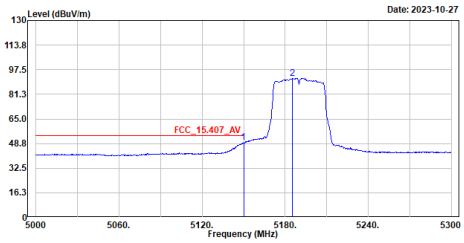

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	49.40	54.00	-4.60	34.62	14.78	Average
2	5185.400	91.81	------	------	77.00	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
TEST BY :Sam

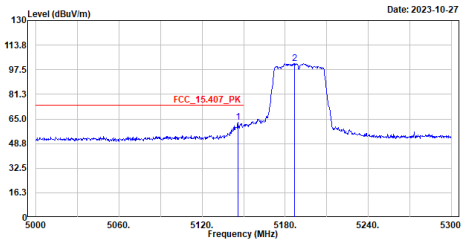

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5145.800	62.60	74.00	-11.40	47.83	14.77	Peak
2	5186.600	101.57	------	------	86.75	14.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5230MHz
TEST BY :Sam

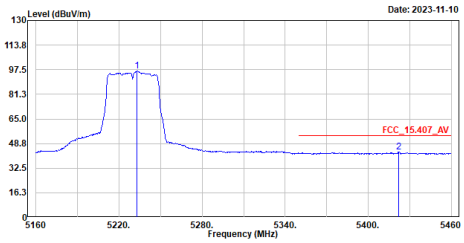

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5233.200	96.67	------	------	81.90	14.77	Average
2	5422.200	43.18	54.00	-10.82	28.35	14.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5230MHz
TEST BY :Sam

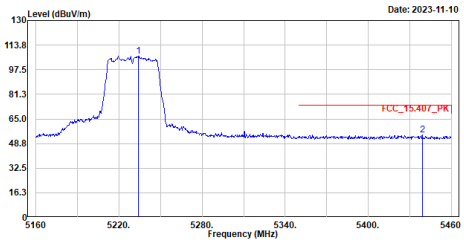

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5234.100	106.69	------	------	91.92	14.77	Peak
2	5439.000	54.57	74.00	-19.43	39.66	14.91	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5230MHz
TEST BY :Sam

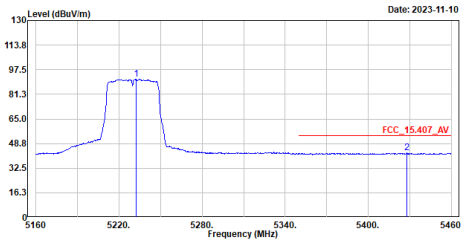

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5232.300	91.18	------	------	76.40	14.78	Average
2	5427.900	42.48	54.00	-11.52	27.62	14.86	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5230MHz
TEST BY :Sam

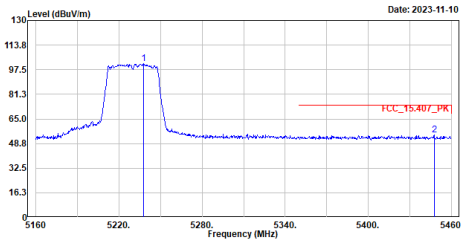

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5237.700	101.52	------	------	86.75	14.77	Peak
2	5447.700	54.37	74.00	-19.63	39.42	14.95	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5755MHz
TEST BY :Sam

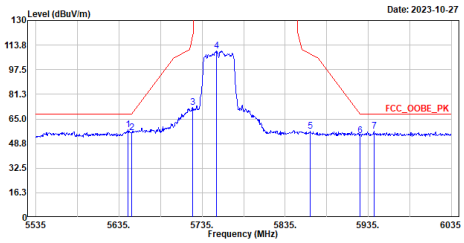

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5645.500	57.85	68.22	-10.37	41.82	16.03	Peak
2	5650.000	55.85	68.23	-12.38	39.78	16.07	Peak
3	5723.500	72.83	118.78	-45.95	56.25	16.58	Peak
4	5752.500	109.88	------	------	93.25	16.63	Peak
5	5865.500	56.67	107.86	-51.19	39.97	16.70	Peak
6	5925.000	54.20	68.23	-14.03	37.50	16.70	Peak
7	5942.000	57.04	68.22	-11.18	40.35	16.69	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5755MHz
TEST BY :Sam

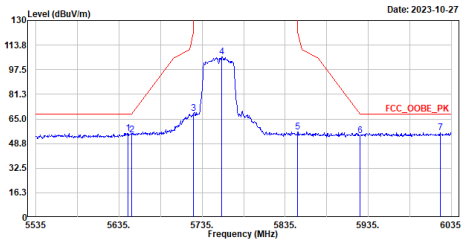

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5646.000	55.48	68.22	-12.74	39.45	16.03	Peak
2	5650.000	54.62	68.23	-13.61	38.55	16.07	Peak
3	5725.000	68.91	122.20	-53.29	52.33	16.58	Peak
4	5759.000	106.12	------	------	89.50	16.62	Peak
5	5850.000	56.41	122.20	-65.79	39.71	16.70	Peak
6	5925.000	53.76	68.23	-14.47	37.06	16.70	Peak
7	6022.000	56.12	68.22	-12.10	39.40	16.72	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5795MHz
TEST BY :Sam

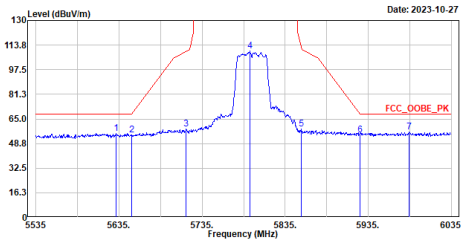

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5631.500	55.64	68.22	-12.58	39.71	15.93	Peak
2	5650.000	54.63	68.23	-13.60	38.56	16.07	Peak
3	5716.000	58.21	109.68	-51.47	41.64	16.57	Peak
4	5793.000	109.69	------	------	93.04	16.65	Peak
5	5854.000	58.28	113.08	-54.80	41.58	16.70	Peak
6	5925.000	54.51	68.23	-13.72	37.81	16.70	Peak
7	5984.500	56.40	68.22	-11.82	39.80	16.60	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5795MHz
TEST BY :Sam

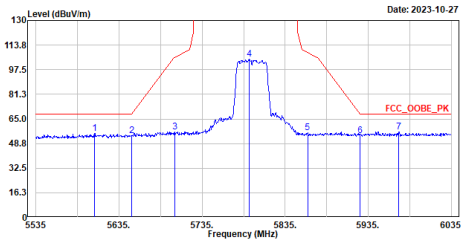

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5605.500	55.29	68.22	-12.93	39.57	15.72	Peak
2	5650.000	54.00	68.23	-14.23	37.93	16.07	Peak
3	5702.000	56.53	105.76	-49.23	39.99	16.54	Peak
4	5792.000	104.36	------	------	87.71	16.65	Peak
5	5862.000	55.70	108.84	-53.14	39.00	16.70	Peak
6	5925.000	53.78	68.23	-14.45	37.08	16.70	Peak
7	5972.000	56.59	68.22	-11.63	39.95	16.64	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

NA1_ Sample ID 01

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Sam

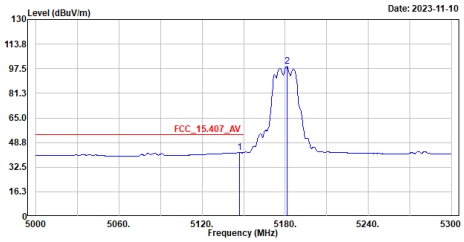

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5147.000	42.21	54.00	-11.79	27.43	14.78	Average
2	5181.200	98.89	------	------	84.08	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5180MHz
TEST BY :Sam

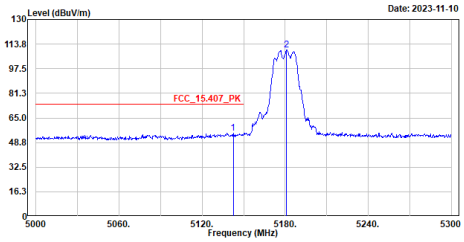

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5142.500	55.04	74.00	-18.96	40.27	14.77	Peak
2	5180.900	109.78	------	------	94.97	14.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Sam

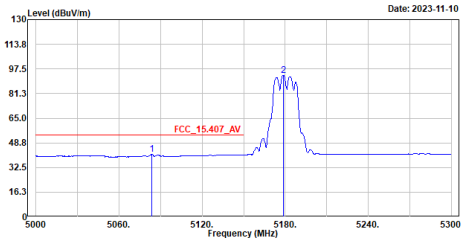

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5083.700	41.28	54.00	-12.72	26.55	14.73	Average
2	5178.800	93.37	------	------	78.57	14.80	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5180MHz
TEST BY :Sam

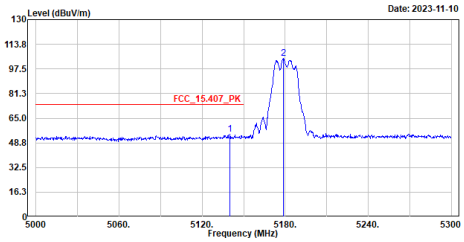

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5140.100	54.32	74.00	-19.68	39.55	14.77	Peak
2	5178.500	104.48	------	------	89.68	14.80	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Sam

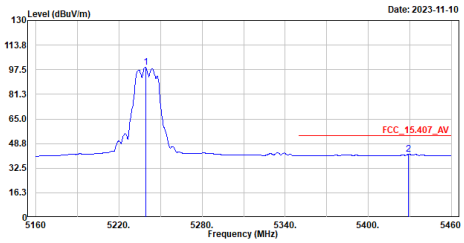

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5239.200	99.09	------	------	84.32	14.77	Average
2	5429.100	41.69	54.00	-12.31	26.83	14.86	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5240MHz
TEST BY :Sam

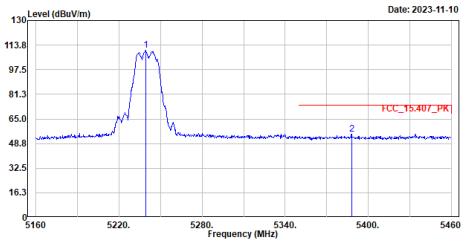

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5239.200	110.15	------	------	95.38	14.77	Peak
2	5388.000	54.85	74.00	-19.15	40.02	14.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Sam

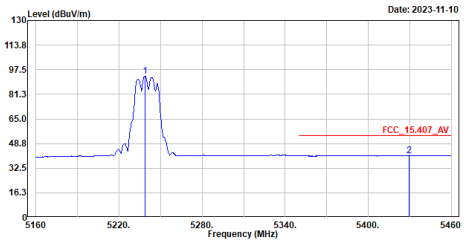

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5238.900	93.43	------	------	78.66	14.77	Average
2	5429.700	40.90	54.00	-13.10	26.03	14.87	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5240MHz
TEST BY :Sam

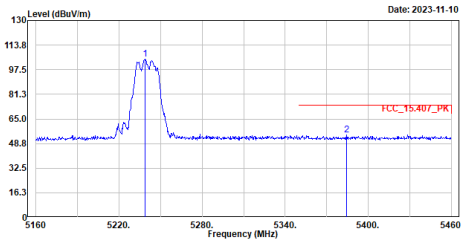

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5238.900	104.62	------	------	89.85	14.77	Peak
2	5384.400	54.63	74.00	-19.37	39.80	14.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5745MHz
TEST BY :Sam

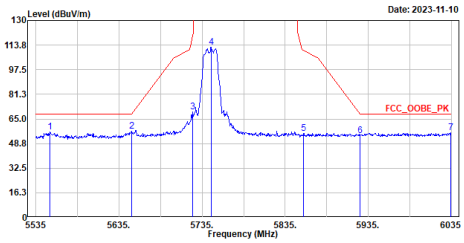

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5552.000	56.49	68.22	-11.73	41.03	15.46	Peak
2	5650.000	56.70	68.23	-11.53	40.63	16.07	Peak
3	5723.500	69.49	118.78	-49.29	52.91	16.58	Peak
4	5746.000	112.28	------	------	95.67	16.61	Peak
5	5857.000	55.45	110.24	-54.79	38.76	16.69	Peak
6	5925.000	53.85	68.23	-14.38	37.15	16.70	Peak
7	6034.000	56.11	68.22	-12.11	39.29	16.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5745MHz
TEST BY :Sam

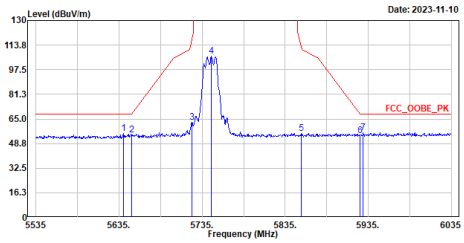

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5640.500	55.34	68.22	-12.88	39.35	15.99	Peak
2	5650.000	54.30	68.23	-13.93	38.23	16.07	Peak
3	5723.000	63.01	117.64	-54.63	46.43	16.58	Peak
4	5746.500	106.32	------	------	89.71	16.61	Peak
5	5854.000	55.52	113.08	-57.56	38.82	16.70	Peak
6	5925.000	54.19	68.23	-14.04	37.49	16.70	Peak
7	5929.000	56.15	68.22	-12.07	39.45	16.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_a_5825MHz
TEST BY :Sam

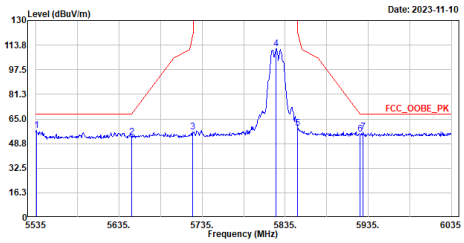

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5535.500	57.45	68.22	-10.77	42.05	15.40	Peak
2	5650.000	52.89	68.23	-15.34	36.82	16.07	Peak
3	5723.500	56.56	118.78	-62.22	39.98	16.58	Peak
4	5824.000	111.52	------	------	94.84	16.68	Peak
5	5850.000	59.04	122.20	-63.16	42.34	16.70	Peak
6	5925.000	55.03	68.23	-13.20	38.33	16.70	Peak
7	5929.000	56.33	68.22	-11.89	39.63	16.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_a_5825MHz
TEST BY :Sam

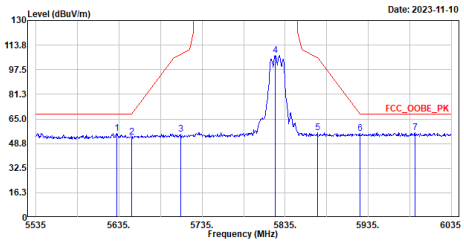

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5632.000	55.64	68.22	-12.58	39.71	15.93	Peak
2	5650.000	53.01	68.23	-15.22	36.94	16.07	Peak
3	5709.000	54.88	107.72	-52.84	38.31	16.57	Peak
4	5823.000	107.18	------	------	90.50	16.68	Peak
5	5874.000	55.96	105.48	-49.52	39.26	16.70	Peak
6	5925.000	55.36	68.23	-12.87	38.66	16.70	Peak
7	5991.000	56.11	68.22	-12.11	39.52	16.59	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5180MHz
TEST BY :Sam

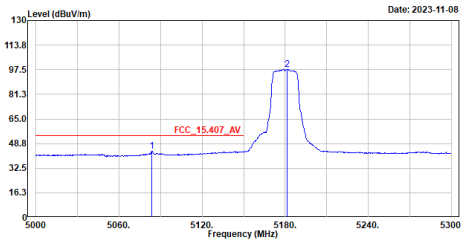

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5083.700	43.74	54.00	-10.26	29.01	14.73	Average
2	5181.500	97.71	------	------	82.90	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5180MHz
TEST BY :Sam

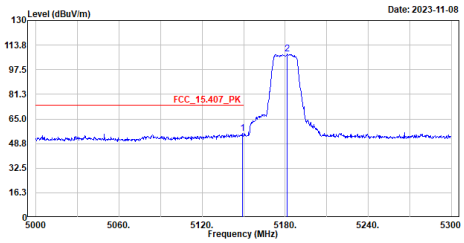

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.400	55.42	74.00	-18.58	40.64	14.78	Peak
2	5181.500	107.80	------	------	92.99	14.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
TEST BY :Sam

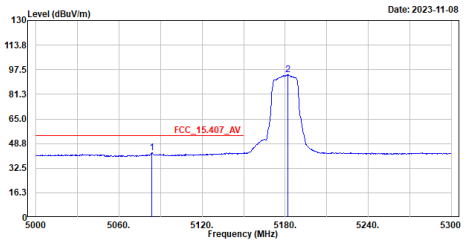

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5083.700	42.71	54.00	-11.29	27.98	14.73	Average
2	5182.100	94.34	------	------	79.53	14.81	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5180MHz
TEST BY :Sam

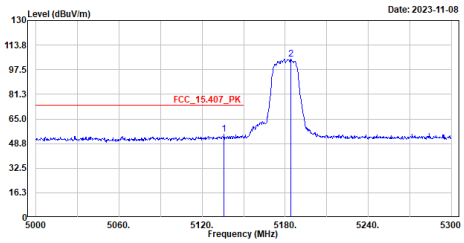

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5135.900	55.00	74.00	-19.00	40.23	14.77	Peak
2	5184.200	104.60	------	------	89.79	14.81	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5240MHz
TEST BY :Sam

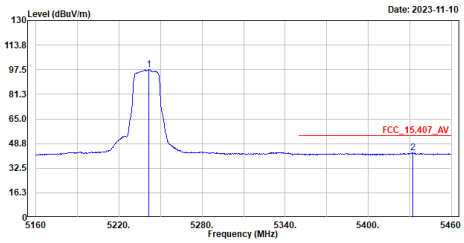

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5241.300	97.52	------	------	82.75	14.77	Average
2	5432.100	42.47	54.00	-11.53	27.59	14.88	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5240MHz
TEST BY :Sam

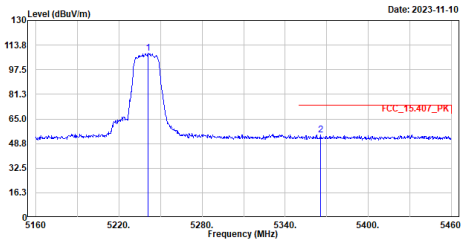

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5241.000	108.32	------	------	93.55	14.77	Peak
2	5365.800	54.65	74.00	-19.35	39.80	14.85	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5240MHz
TEST BY :Sam

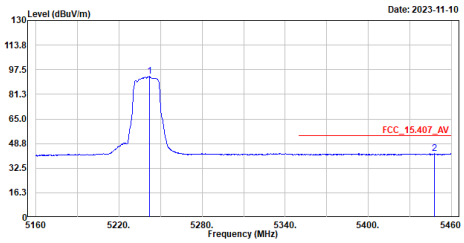

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5241.900	93.08	------	------	78.31	14.77	Average
2	5448.000	42.07	54.00	-11.93	27.12	14.95	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5240MHz
TEST BY :Sam

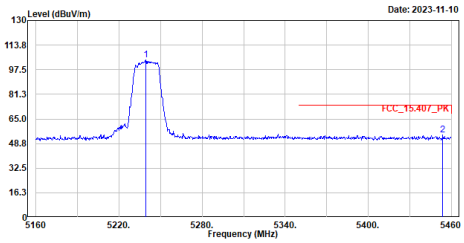

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5239.200	104.05	------	------	89.28	14.77	Peak
2	5453.700	54.55	74.00	-19.45	39.58	14.97	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5745MHz
TEST BY :Sam

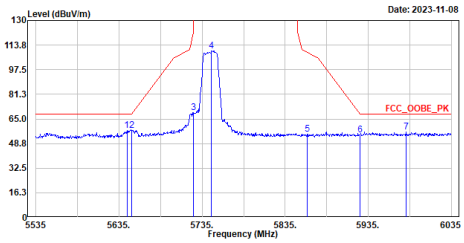

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5644.500	57.25	68.22	-10.97	41.22	16.03	Peak
2	5650.000	57.50	68.23	-10.73	41.43	16.07	Peak
3	5724.500	69.40	121.06	-51.66	52.82	16.58	Peak
4	5746.500	109.88	------	------	93.27	16.61	Peak
5	5861.500	55.06	108.98	-53.92	38.36	16.70	Peak
6	5925.000	54.47	68.23	-13.76	37.77	16.70	Peak
7	5981.000	56.41	68.22	-11.81	39.80	16.61	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5745MHz
TEST BY :Sam

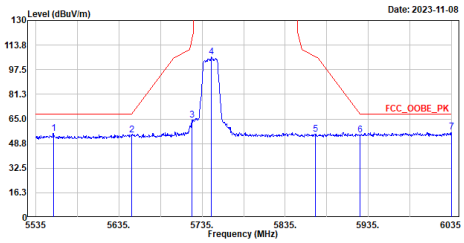

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5556.000	55.28	68.22	-12.94	39.81	15.47	Peak
2	5650.000	54.61	68.23	-13.62	38.54	16.07	Peak
3	5723.000	64.22	117.64	-53.42	47.64	16.58	Peak
4	5746.500	106.15	------	------	89.54	16.61	Peak
5	5871.000	55.09	106.32	-51.23	38.39	16.70	Peak
6	5925.000	54.51	68.23	-13.72	37.81	16.70	Peak
7	6035.000	56.32	68.22	-11.90	39.48	16.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac20_5825MHz
TEST BY :Sam

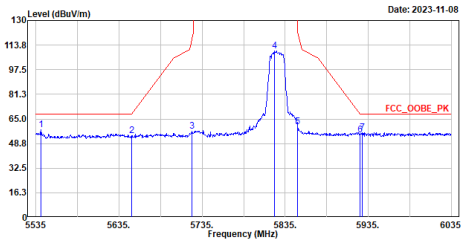

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5541.500	57.88	68.22	-10.34	42.46	15.42	Peak
2	5650.000	53.80	68.23	-14.43	37.73	16.07	Peak
3	5722.500	56.91	116.50	-59.59	40.33	16.58	Peak
4	5822.000	109.92	------	------	93.24	16.68	Peak
5	5850.000	59.90	122.20	-62.30	43.20	16.70	Peak
6	5925.000	54.67	68.23	-13.56	37.97	16.70	Peak
7	5928.000	56.08	68.22	-12.14	39.38	16.70	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac20_5825MHz
TEST BY :Sam

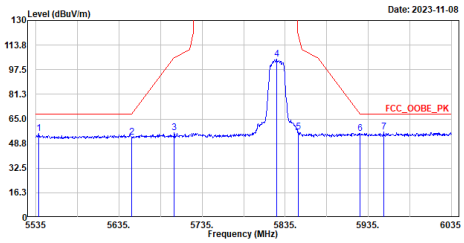

No.	Frequency MHz	Level dBuV/m	Limit Line dBuV/m	Over Limit dB	Read Level dBuV	Factor dB/m	Remark
1	5538.500	55.43	68.22	-12.79	40.02	15.41	Peak
2	5650.000	52.83	68.23	-15.40	36.76	16.07	Peak
3	5701.500	55.72	105.62	-49.90	39.17	16.55	Peak
4	5824.500	104.52	------	------	87.84	16.68	Peak
5	5851.000	56.19	119.92	-63.73	39.49	16.70	Peak
6	5925.000	55.23	68.23	-13.00	38.53	16.70	Peak
7	5953.500	56.22	68.22	-12.00	39.54	16.68	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
TEST BY :Sam

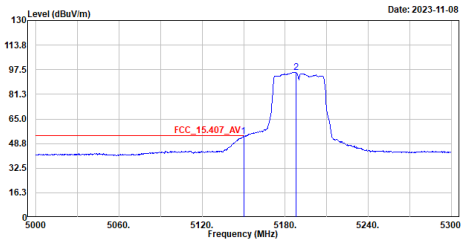

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	53.47	54.00	-0.53	38.69	14.78	Average
2	5187.800	95.87	------	------	81.05	14.82	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5190MHz
TEST BY :Sam

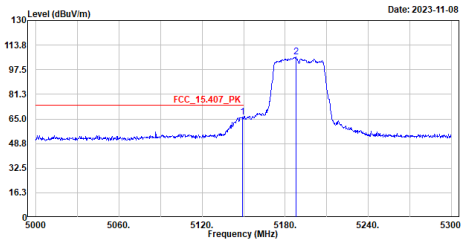

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5149.100	66.18	74.00	-7.82	51.40	14.78	Peak
2	5187.800	105.81	------	------	90.99	14.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
TEST BY :Sam

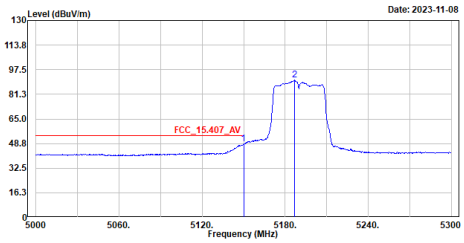

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	48.55	54.00	-5.45	33.77	14.78	Average
2	5186.600	90.68	------	------	75.86	14.82	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5190MHz
TEST BY :Sam

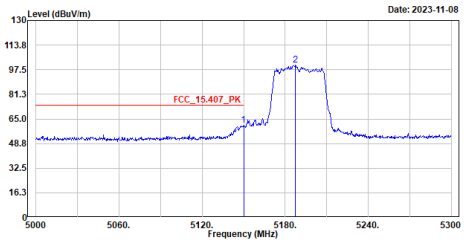

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5150.000	60.62	74.00	-13.38	45.84	14.78	Peak
2	5187.500	100.35	------	------	85.53	14.82	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5230MHz
TEST BY :Sam

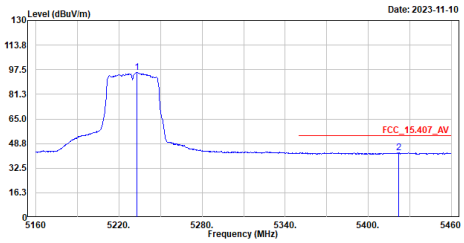

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5233.200	95.54	------	------	80.77	14.77	Average
2	5422.200	42.80	54.00	-11.20	27.97	14.83	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5230MHz
TEST BY :Sam

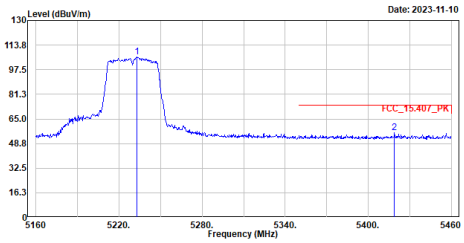

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5232.900	106.00	------	------	91.23	14.77	Peak
2	5418.900	56.11	74.00	-17.89	41.28	14.83	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5230MHz
TEST BY :Sam

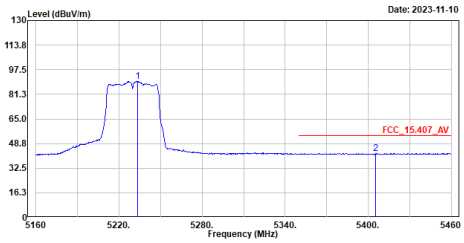

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5233.500	89.92	------	------	75.15	14.77	Average
2	5405.400	42.39	54.00	-11.61	27.57	14.82	Average

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5230MHz
TEST BY :Sam

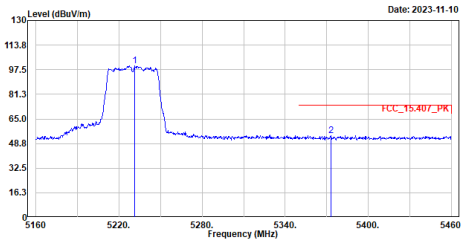

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5231.400	100.07	------	------	85.29	14.78	Peak
2	5373.000	53.90	74.00	-20.10	39.06	14.84	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5755MHz
TEST BY :Sam

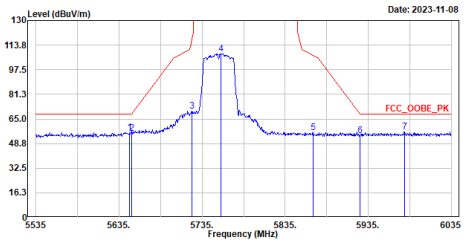

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5648.000	56.10	68.22	-12.12	40.05	16.05	Peak
2	5650.000	55.20	68.23	-13.03	39.13	16.07	Peak
3	5722.500	70.13	116.50	-46.37	53.55	16.58	Peak
4	5758.000	108.00	------	------	91.38	16.62	Peak
5	5868.500	55.79	107.02	-51.23	39.09	16.70	Peak
6	5925.000	54.11	68.23	-14.12	37.41	16.70	Peak
7	5978.500	56.31	68.22	-11.91	39.70	16.61	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5755MHz
TEST BY :Sam

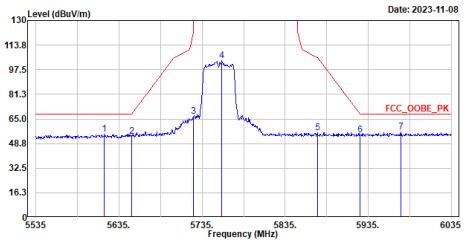

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5617.500	55.12	68.22	-13.10	39.31	15.81	Peak
2	5650.000	53.68	68.23	-14.55	37.61	16.07	Peak
3	5725.000	66.68	122.20	-55.52	50.10	16.58	Peak
4	5759.000	103.30	------	------	86.68	16.62	Peak
5	5874.000	55.73	105.48	-49.75	39.03	16.70	Peak
6	5925.000	54.45	68.23	-13.78	37.75	16.70	Peak
7	5974.500	56.37	68.22	-11.85	39.74	16.63	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Horizontal
Mode :TX_ac40_5795MHz
TEST BY :Sam

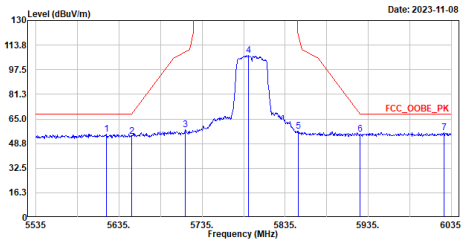

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5619.500	55.15	68.22	-13.07	39.32	15.83	Peak
2	5650.000	53.61	68.23	-14.62	37.54	16.07	Peak
3	5715.000	57.65	109.40	-51.75	41.08	16.57	Peak
4	5791.000	106.86	------	------	90.22	16.64	Peak
5	5851.000	57.00	119.92	-62.92	40.30	16.70	Peak
6	5925.000	54.86	68.23	-13.37	38.16	16.70	Peak
7	6026.000	56.09	68.22	-12.13	39.33	16.76	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

Site :HY-CB01
Condition :3m ,Vertical
Mode :TX_ac40_5795MHz
TEST BY :Sam

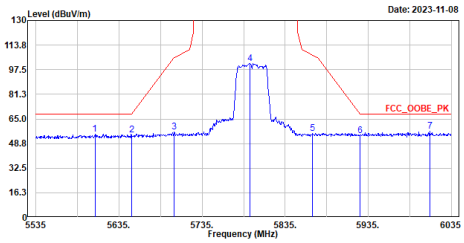

No.	Frequency	Level	Limit Line	Over Limit	Read Level	Factor	Remark
	MHz	dBuV/m	dBuV/m	dB	dBuV	dB/m	
1	5606.000	54.95	68.22	-13.27	39.23	15.72	Peak
2	5650.000	54.42	68.23	-13.81	38.35	16.07	Peak
3	5701.000	56.39	105.48	-49.09	39.84	16.55	Peak
4	5792.500	101.77	------	------	85.12	16.65	Peak
5	5868.000	55.60	107.16	-51.56	38.90	16.70	Peak
6	5925.000	54.14	68.23	-14.09	37.44	16.70	Peak
7	6009.000	56.73	68.22	-11.49	40.11	16.62	Peak

Note:
1. Level = Read Level + Factor
2. Factor = Antenna Factor + Cable Loss - Preamp Factor
3. Over Limit = Level - Limit Line
4. The emission levels of other frequencies are very lower than the limit and not show in test report.

7. 6dB Bandwidth

7.1. Test Setup

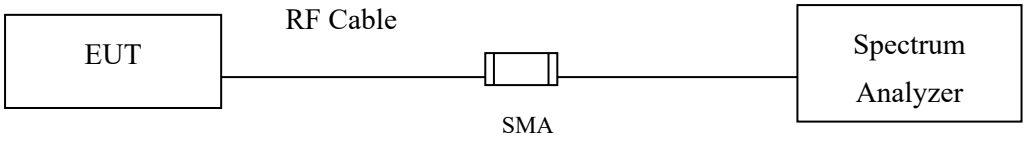

7.2. Limits

For the 5.725-5.85 GHz band, the minimum 6 dB bandwidth of U-NII devices shall be at least 500 kHz.

7.3. Test Procedure

The EUT was setup to ANSI C63.10, 2013; tested to UNII test procedure of FCC KDB-789033 for compliance to FCC 47CFR Subpart E requirements.

7.4. Test Result of 6dB Bandwidth

Product : Multimedia device with Bluetooth and WLAN
Test Item : 6dB Bandwidth
Test Mode : Transmit (802.11a)
Test Date : 2023/10/19
Test Sample : ID 02

Channel No.	Frequency (MHz)	Chain	Measurement Level (kHz)	Required Limit (kHz)	Result
149	5745	A	15624	>500	Pass
157	5785	A	15984	>500	Pass
165	5825	A	16304	>500	Pass
149	5745	B	15664	>500	Pass
157	5785	B	15025	>500	Pass
165	5825	B	15704	>500	Pass

Channel 157 (Chain B)

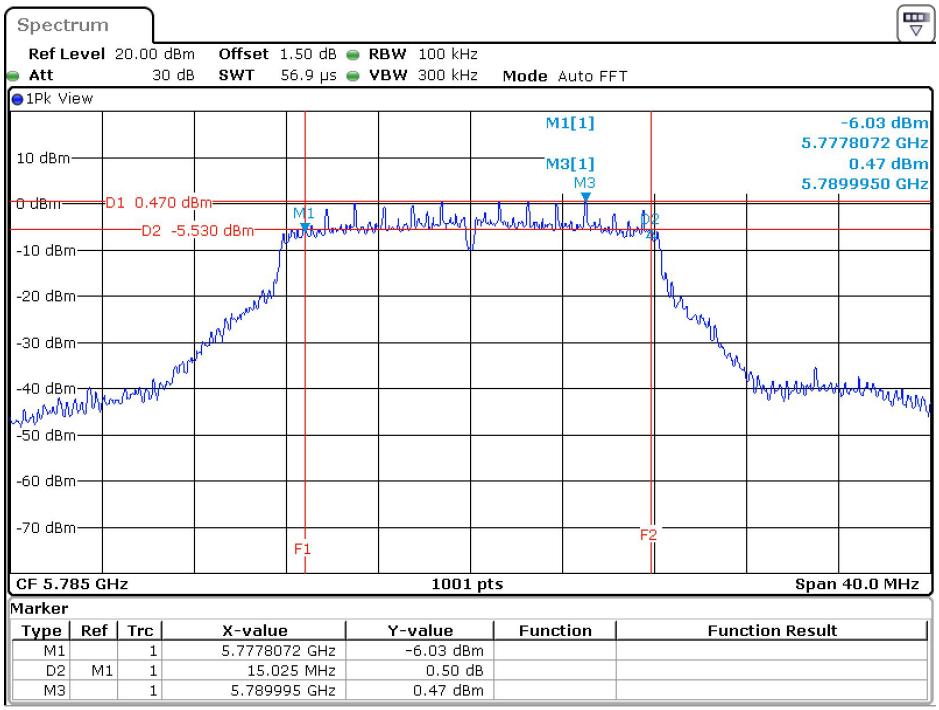

Product : Multimedia device with Bluetooth and WLAN
Test Item : 6dB Bandwidth
Test Mode : Transmit (802.11ac-20 MHz)
Test Date : 2023/10/19
Test Sample : ID 02

Channel No.	Frequency (MHz)	Chain	Measurement Level (kHz)	Required Limit (kHz)	Result
149	5745	A	16224	>500	Pass
157	5785	A	16144	>500	Pass
165	5825	A	16144	>500	Pass
149	5745	B	17183	>500	Pass
157	5785	B	16503	>500	Pass
165	5825	B	16144	>500	Pass

Channel 157 (Chain A)

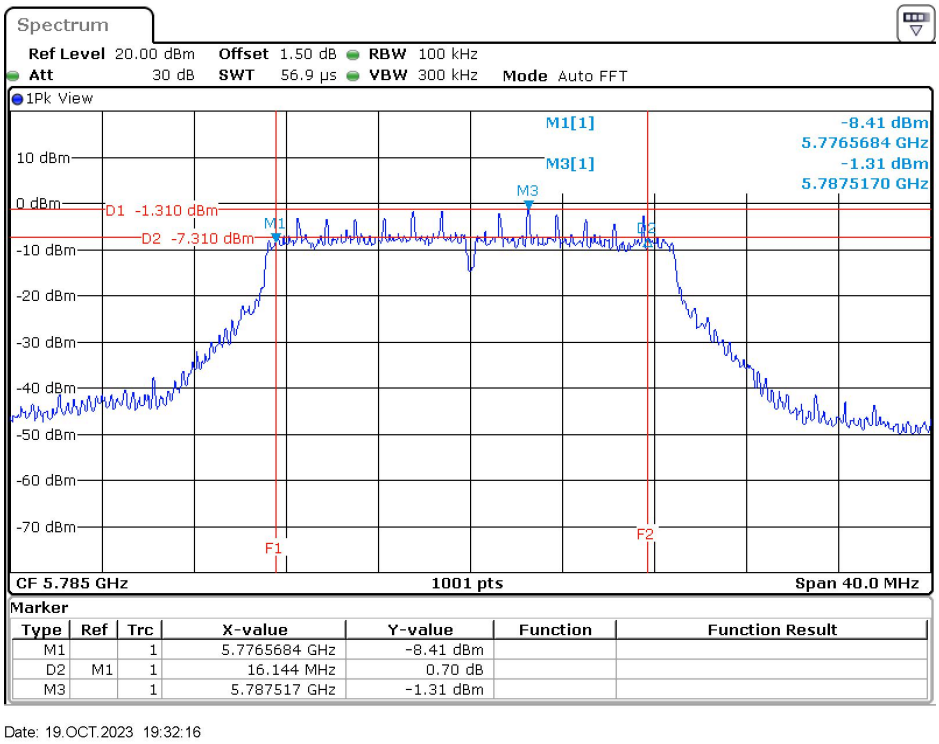

Date: 19.OCT.2023 19:32:16

Product : Multimedia device with Bluetooth and WLAN
Test Item : 6dB Bandwidth
Test Mode : Transmit (802.11ac-40 MHz)
Test Date : 2023/10/19
Test Sample : ID 02

Channel No.	Frequency (MHz)	Chain	Measurement Level (kHz)	Required Limit (kHz)	Result
151	5755	A	35165	>500	Pass
159	5795	A	35405	>500	Pass
151	5755	B	35165	>500	Pass
159	5795	B	35165	>500	Pass

Channel 151 (Chain A)

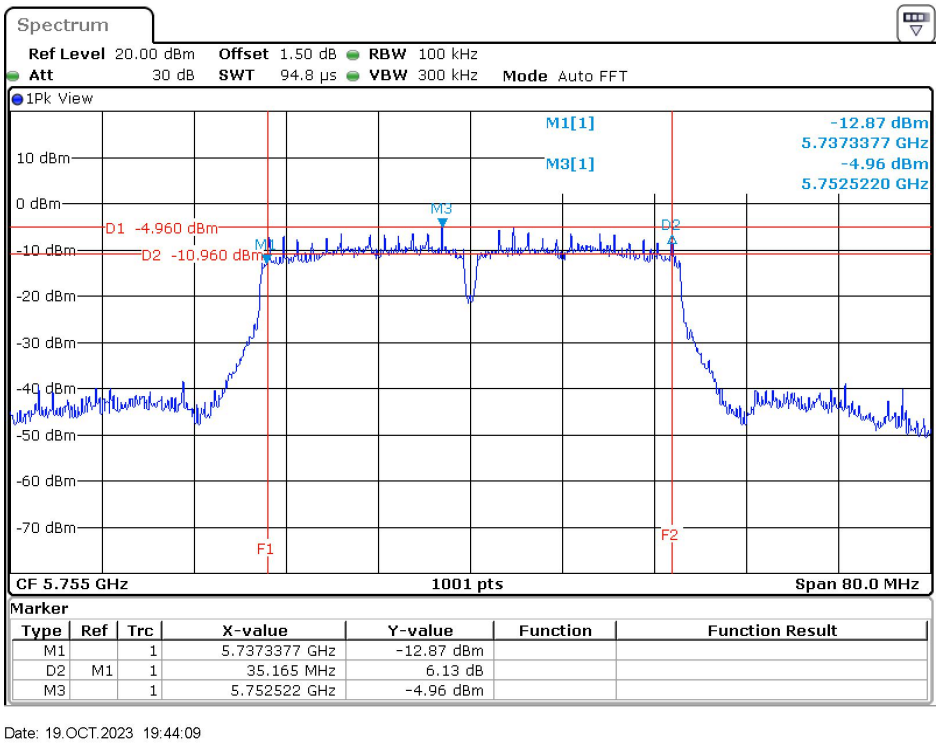

Date: 19.OCT.2023 19:44:09

8. Duty Cycle

8.1. Test Setup

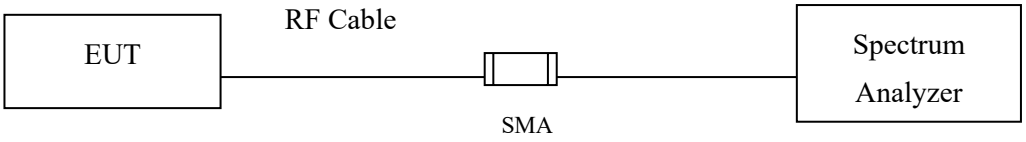

8.2. Test Procedure

The EUT was setup according to ANSI C63.10 2013; tested according to U-NII test procedure of KDB789033 for compliance to FCC 47CFR 15.407 requirements.

8.3. Test Result of Duty Cycle

Product : Multimedia device with Bluetooth and WLAN
Test Item : Duty Cycle
Test Mode : Transmit
Test Sample : ID 02

Duty Cycle Formula:

Duty Cycle = Ton / (Ton + Toff)

Duty Factor = 10 Log (1/Duty Cycle)

Results:

5 GHz band	Time On (ms)	Time On + Time Off (ms)	Duty Cycle (%)	Duty Factor (dB)
802.11a	2.0640	2.1040	98.10	0.08
802.11ac-20 MHz	0.9880	1.0280	96.11	0.17
802.11ac-40 MHz	0.4980	0.5360	92.91	0.32

802.11a

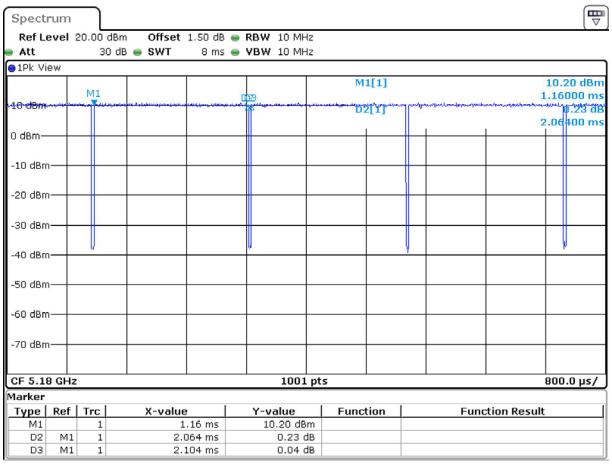

Date: 19.OCT.2023 19:08:02

802.11ac-20 MHz

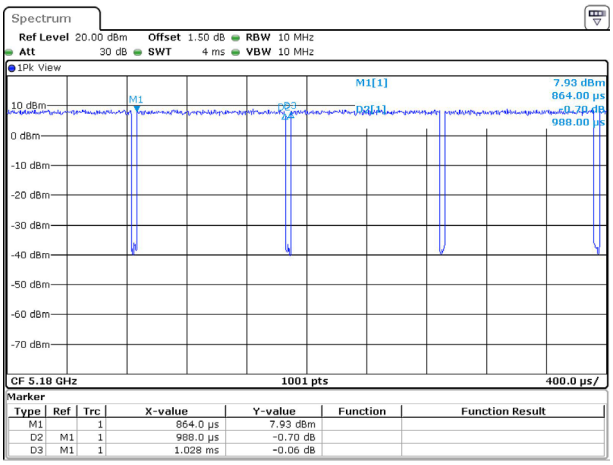

Date: 19.OCT.2023 19:46:53

802.11ac-40 MHz

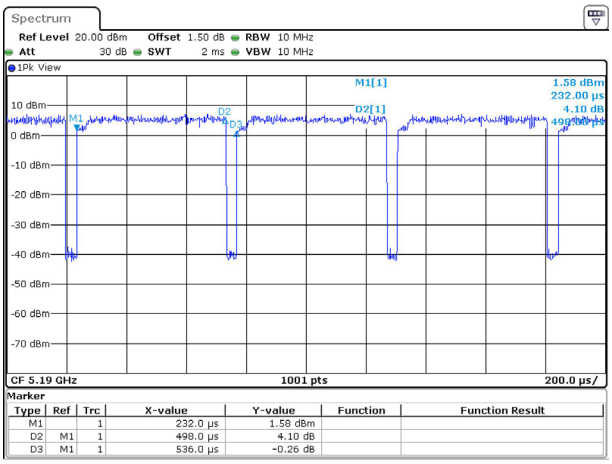

Date: 19.OCT.2023 19:58:57