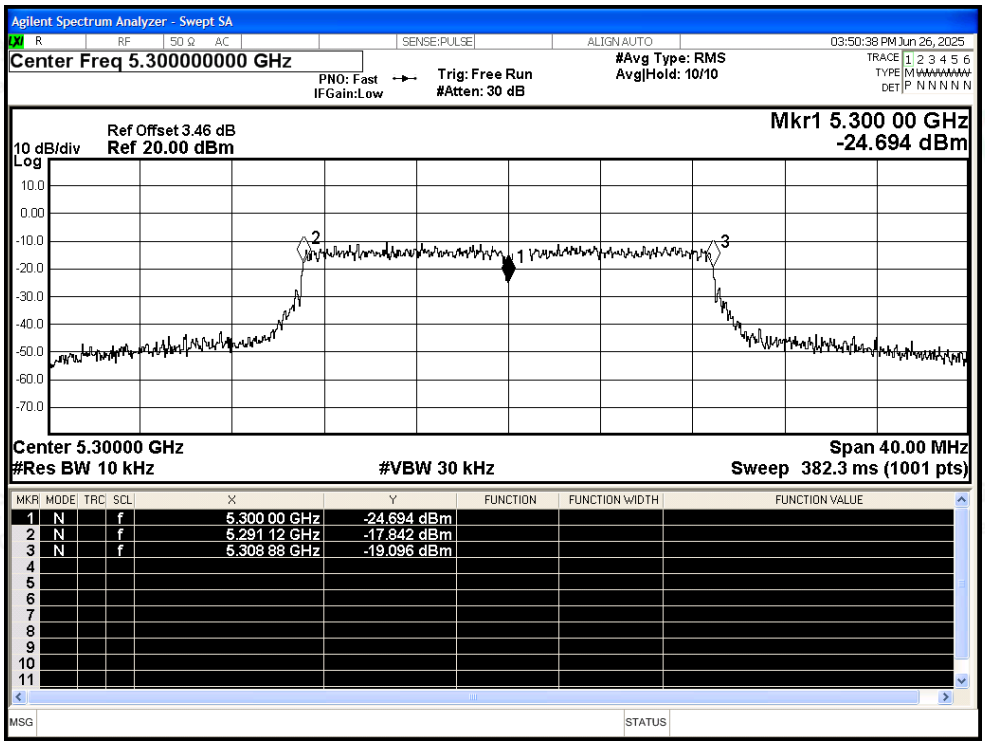

Freq. Stability NVNT ax20 5320MHz Ant1

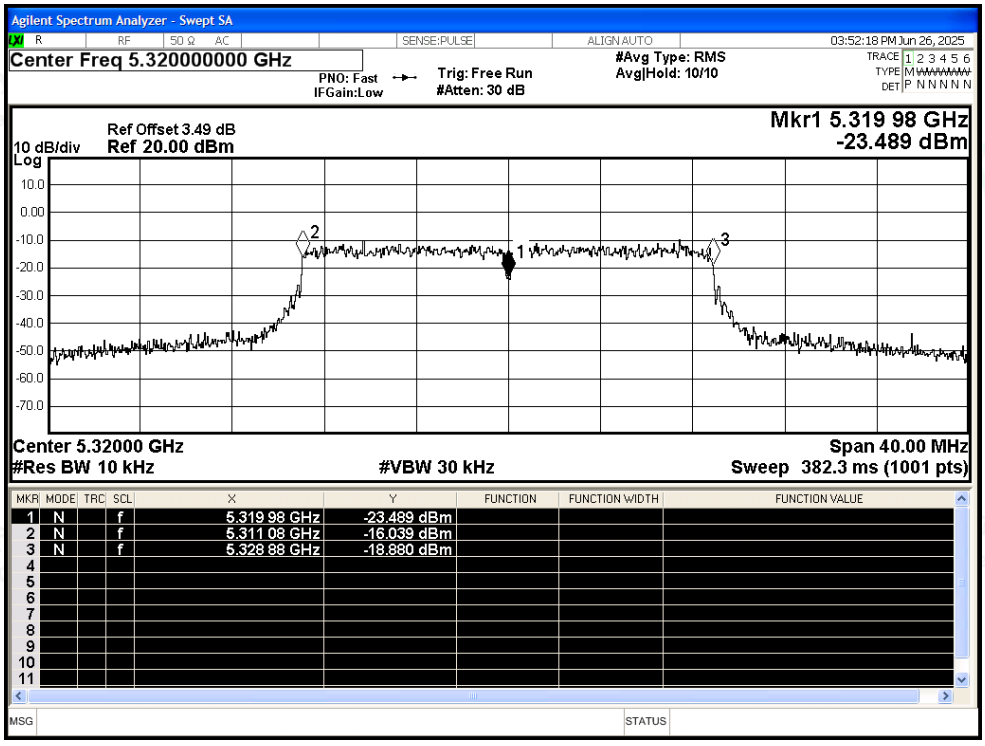

Freq. Stability NVNT ax40 5270MHz Ant1

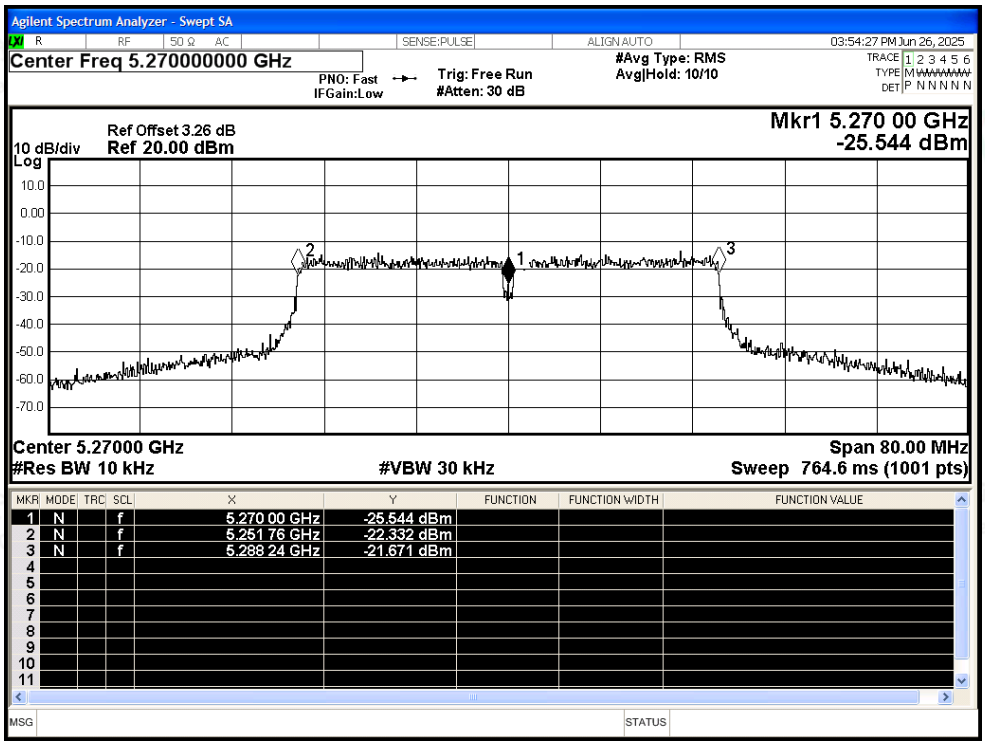

Freq. Stability NVNT ax40 5310MHz Ant1

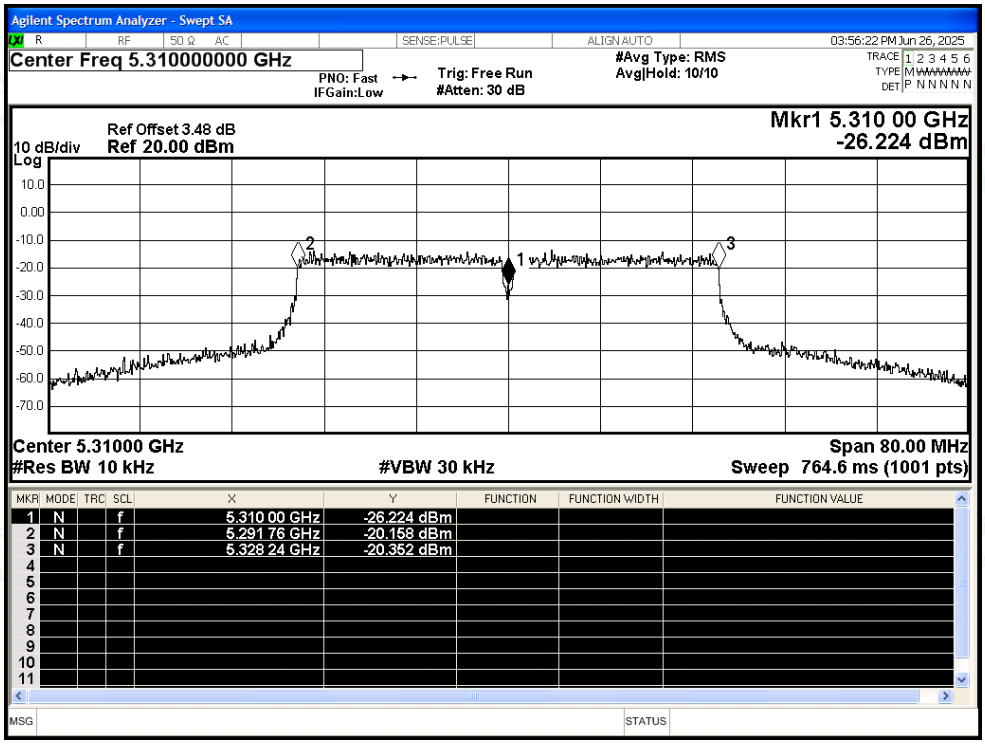

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5260	Ant2	5260	0	0	25	Pass
NVNT	a	5300	Ant2	5300	0	0	25	Pass
NVNT	a	5320	Ant2	5319.98	-20000	-3.76	25	Pass
NVNT	n20	5260	Ant2	5259.98	-20000	-3.8	25	Pass
NVNT	n20	5300	Ant2	5299.98	-20000	-3.77	25	Pass
NVNT	n20	5320	Ant2	5319.98	-20000	-3.76	25	Pass
NVNT	n40	5270	Ant2	5270	0	0	25	Pass
NVNT	n40	5310	Ant2	5310	0	0	25	Pass
NVNT	ac20	5260	Ant2	5260.02	20000	3.8	25	Pass
NVNT	ac20	5300	Ant2	5299.98	-20000	-3.77	25	Pass
NVNT	ac20	5320	Ant2	5320	0	0	25	Pass
NVNT	ac40	5270	Ant2	5270	0	0	25	Pass
NVNT	ac40	5310	Ant2	5309.96	-40000	-7.53	25	Pass
NVNT	ax20	5260	Ant2	5260	0	0	25	Pass
NVNT	ax20	5300	Ant2	5300	0	0	25	Pass
NVNT	ax20	5320	Ant2	5320	0	0	25	Pass
NVNT	ax40	5270	Ant2	5269.96	-40000	-7.59	25	Pass
NVNT	ax40	5310	Ant2	5310	0	0	25	Pass

Test Graphs

Freq. Stability NVNT a 5260MHz Ant2

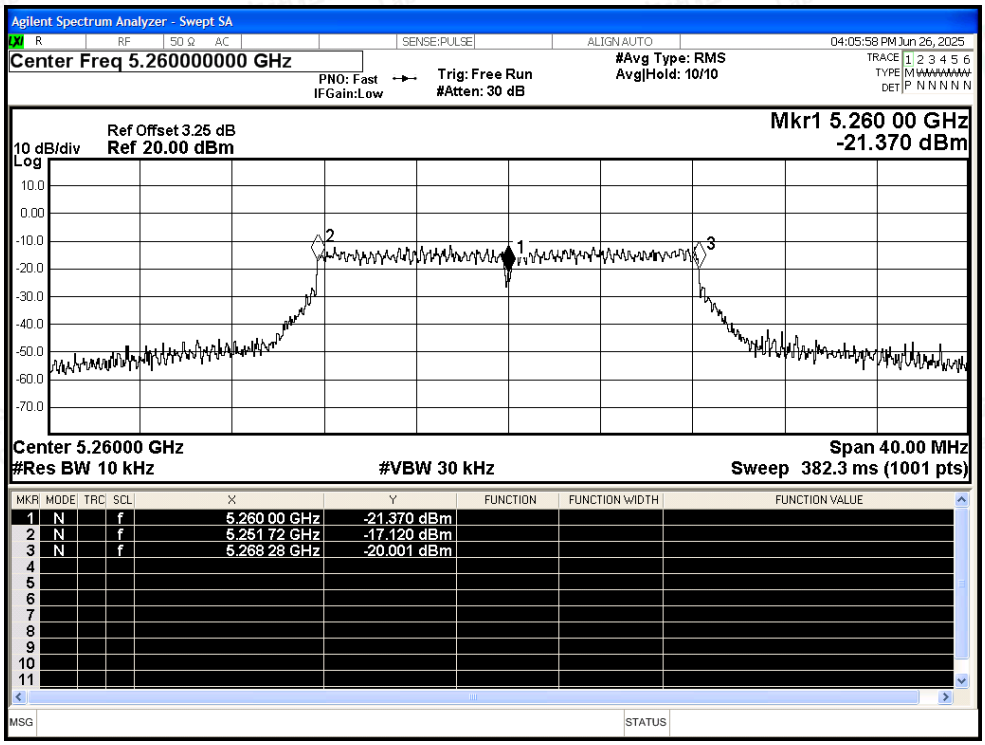

Freq. Stability NVNT a 5300MHz Ant2

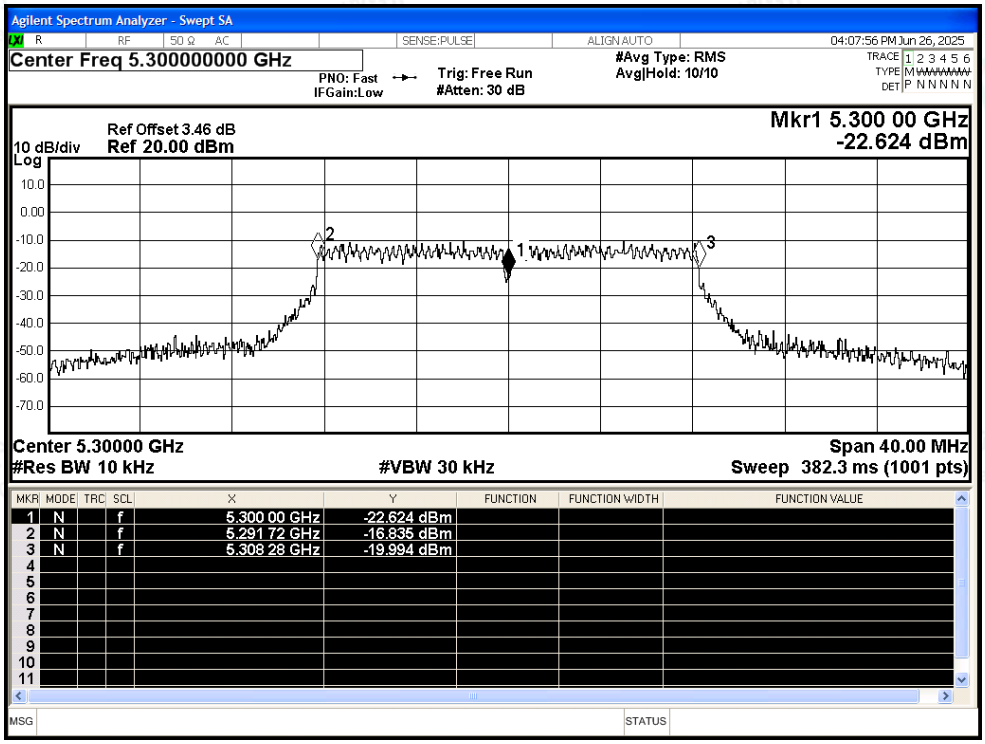

Freq. Stability NVNT a 5320MHz Ant2

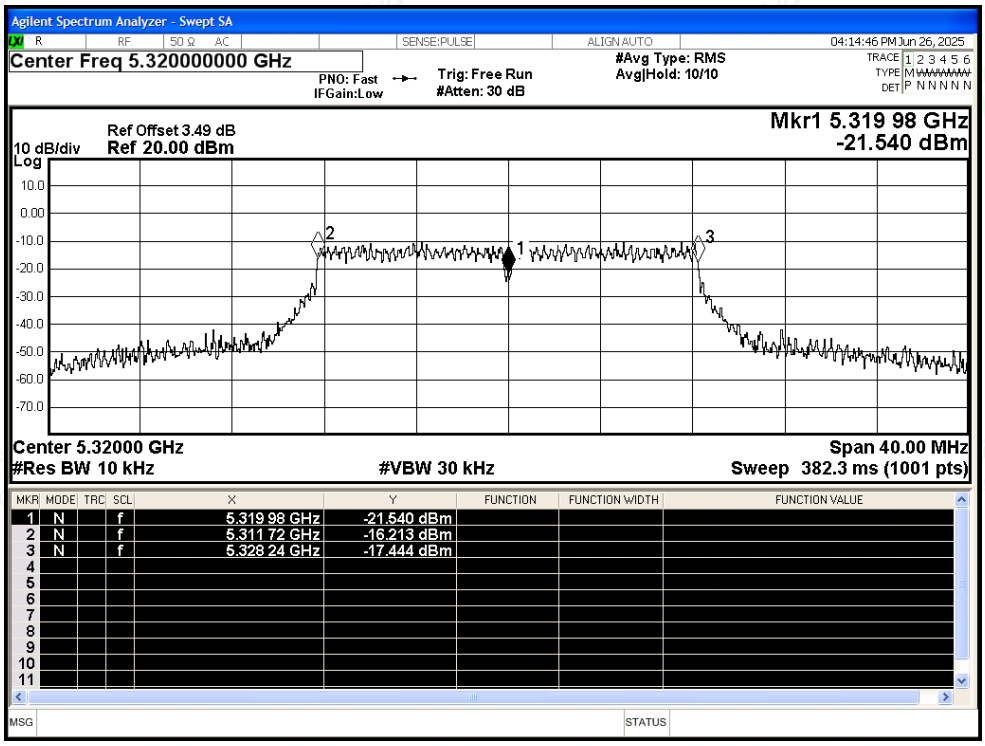

Freq. Stability NVNT n20 5260MHz Ant2

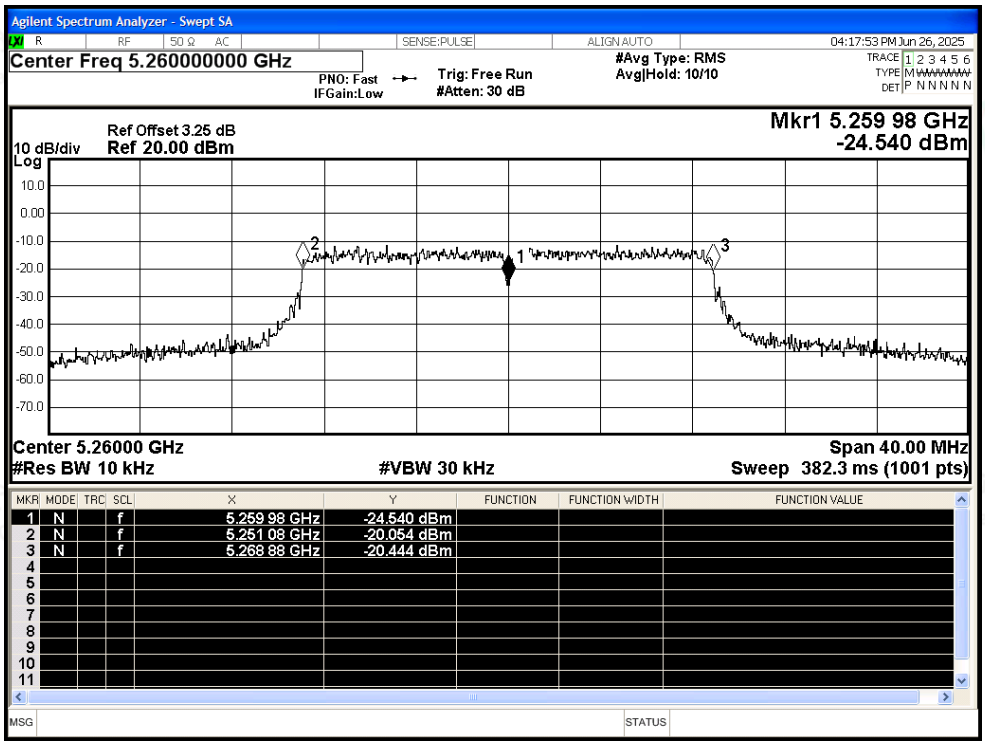

Freq. Stability NVNT n20 5300MHz Ant2

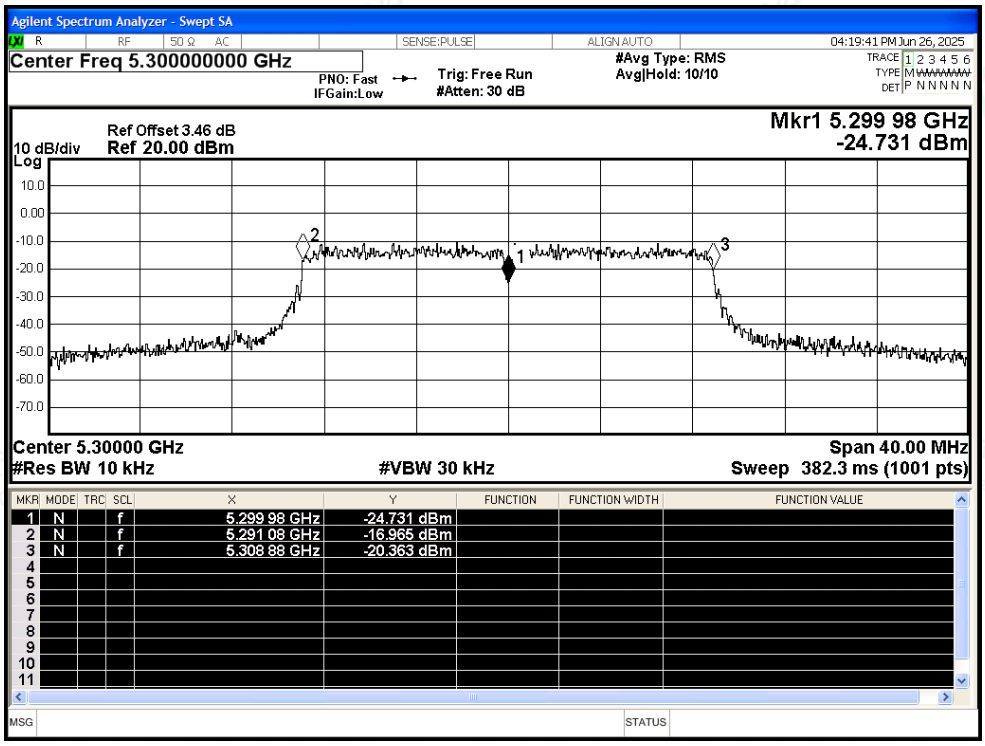

Freq. Stability NVNT n20 5320MHz Ant2

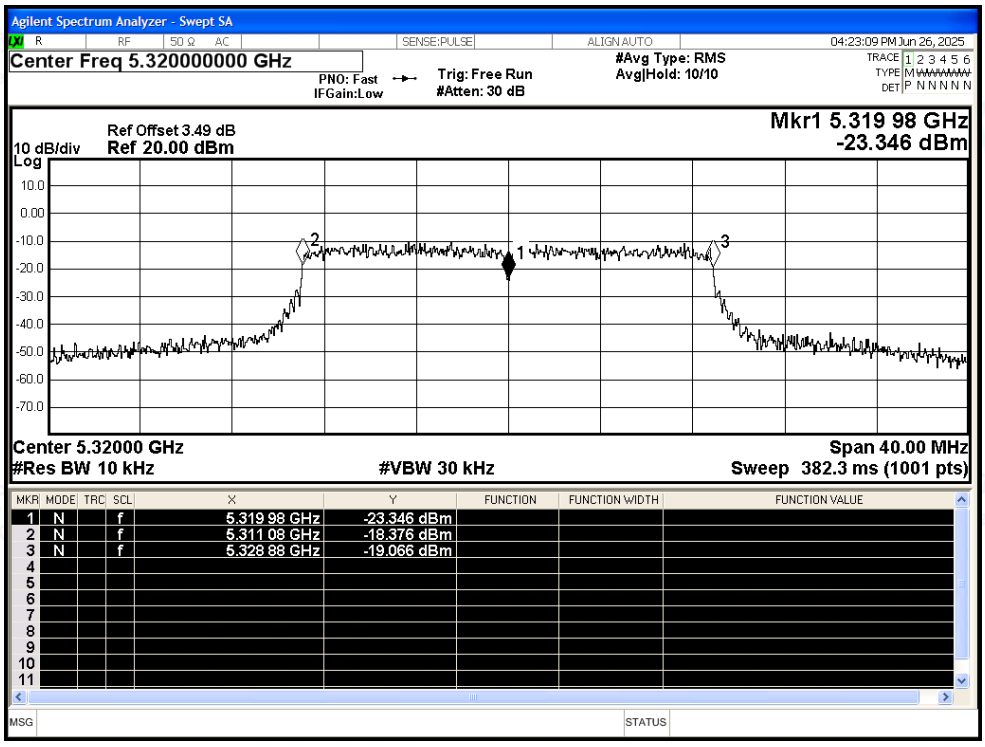

Freq. Stability NVNT n40 5270MHz Ant2

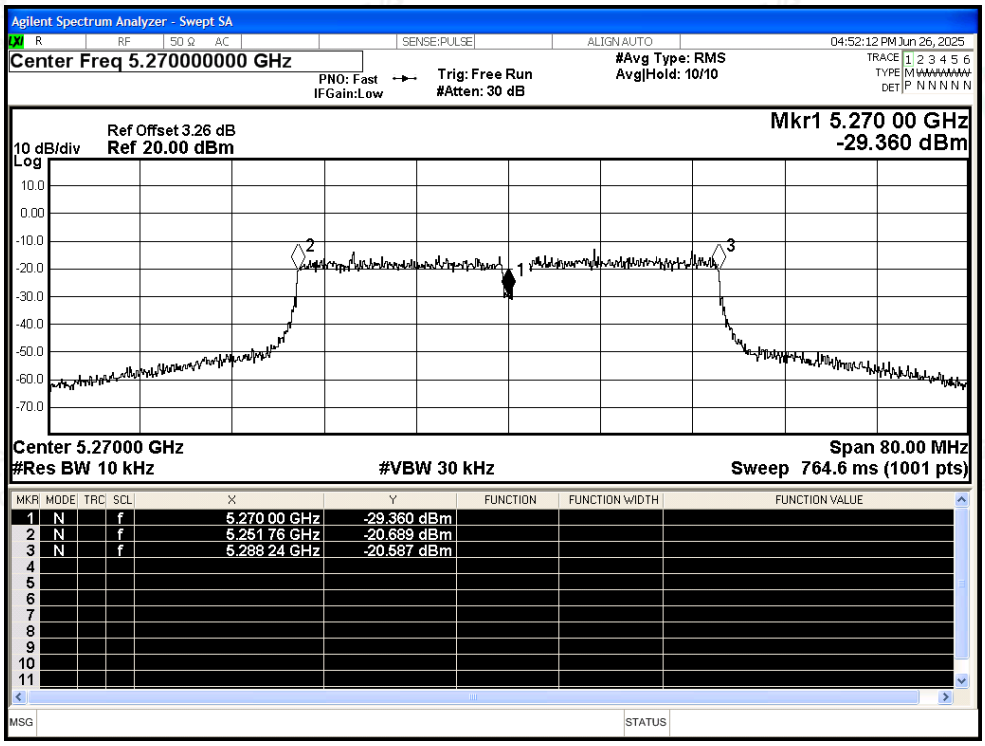

Freq. Stability NVNT n40 5310MHz Ant2

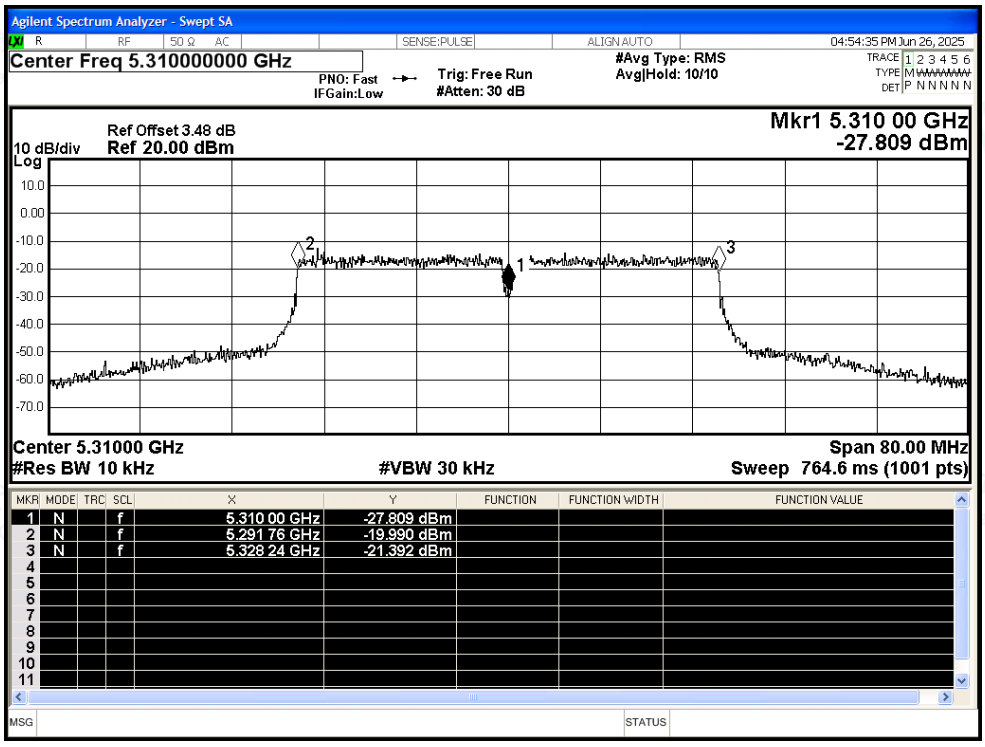

Freq. Stability NVNT ac20 5260MHz Ant2

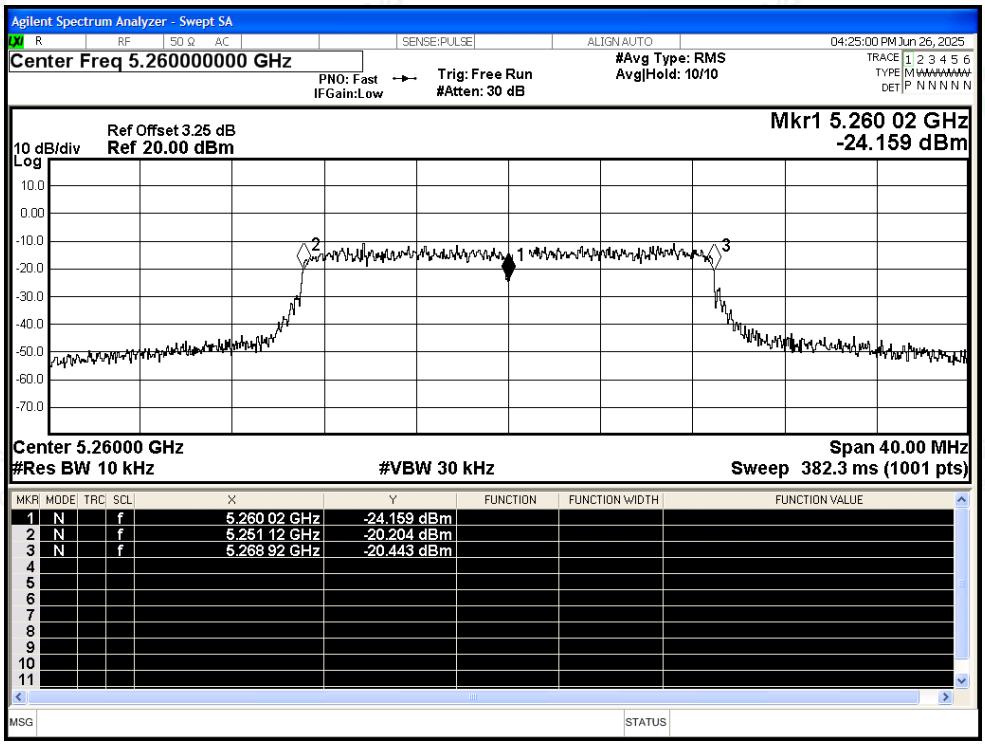

Freq. Stability NVNT ac20 5300MHz Ant2

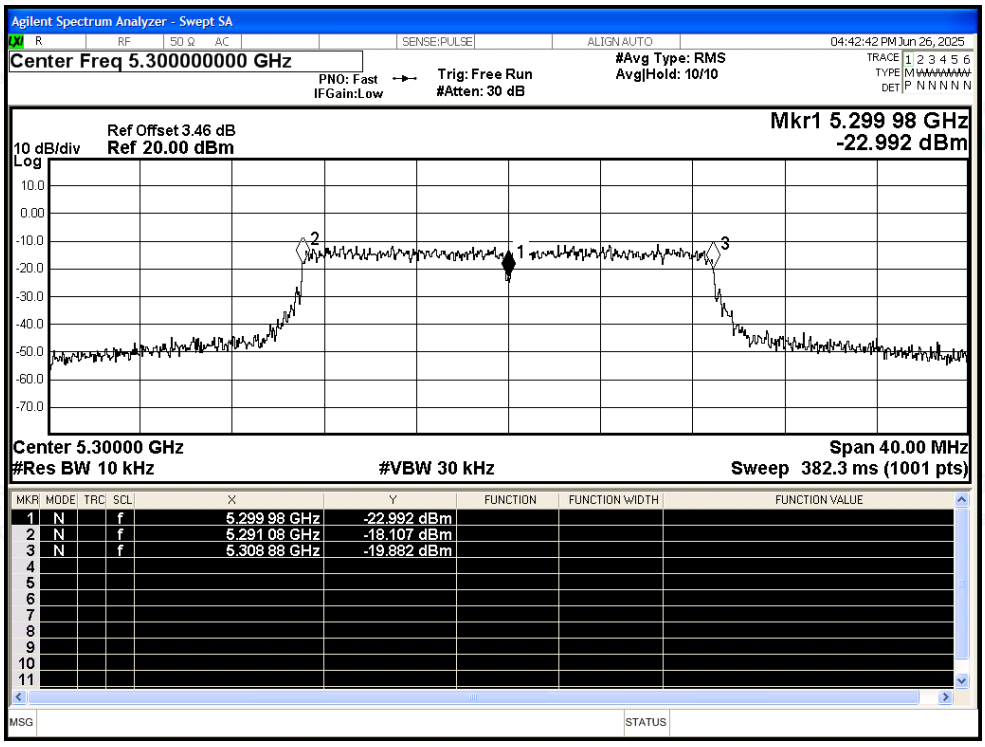

Freq. Stability NVNT ac20 5320MHz Ant2

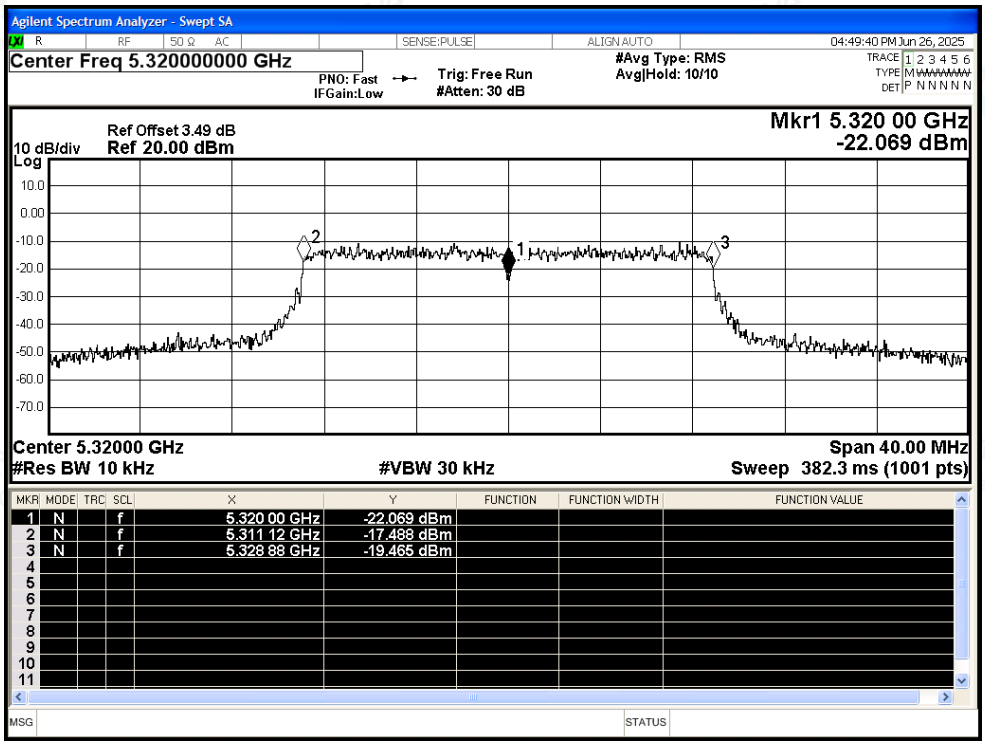

Freq. Stability NVNT ac40 5270MHz Ant2

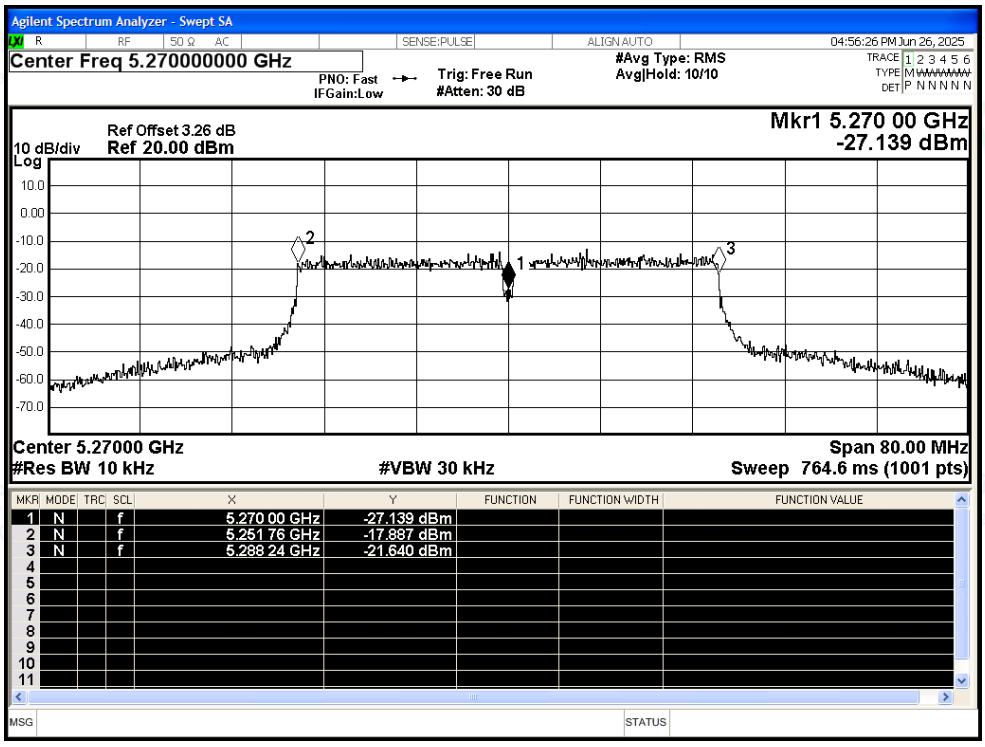

Freq. Stability NVNT ac40 5310MHz Ant2

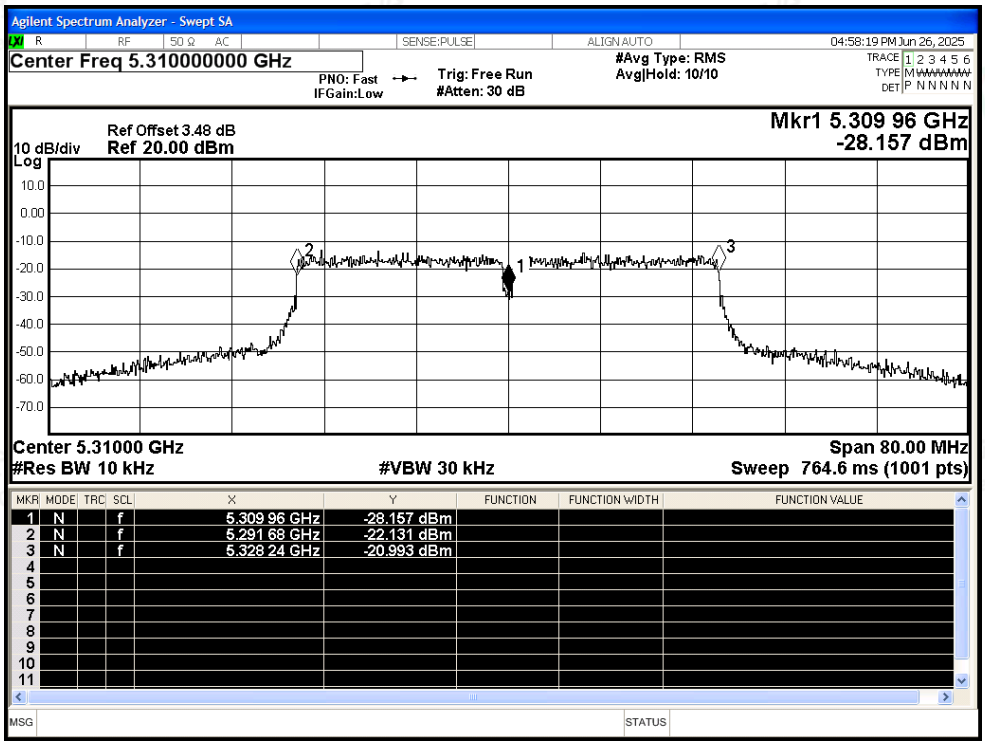

Freq. Stability NVNT ax20 5260MHz Ant2

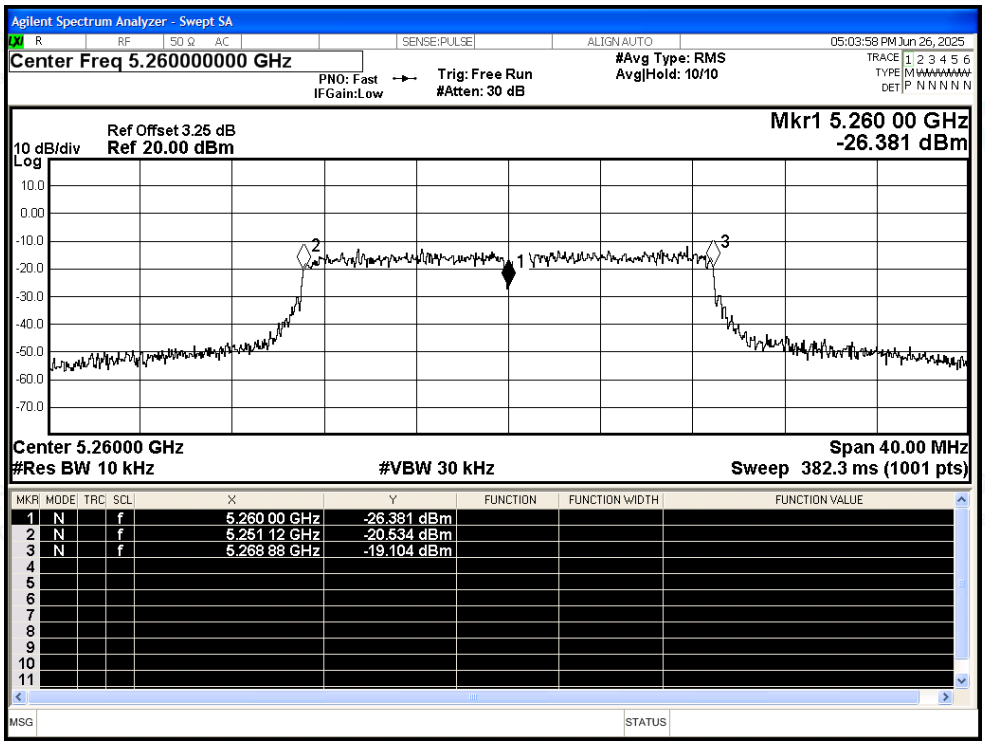

Freq. Stability NVNT ax20 5300MHz Ant2

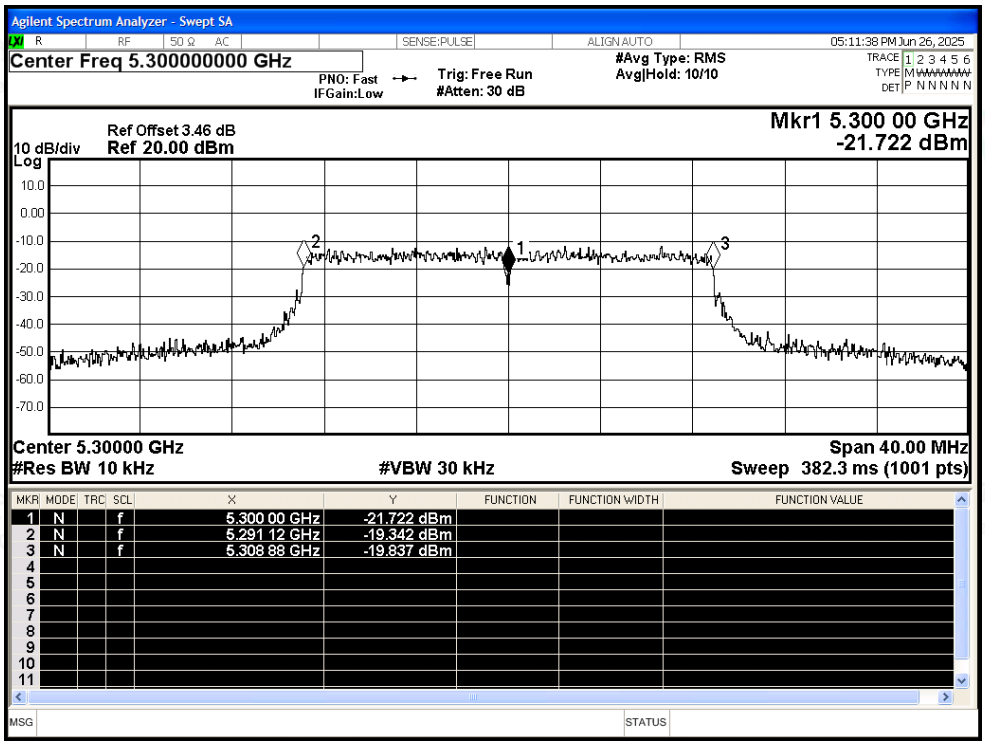

Freq. Stability NVNT ax20 5320MHz Ant2

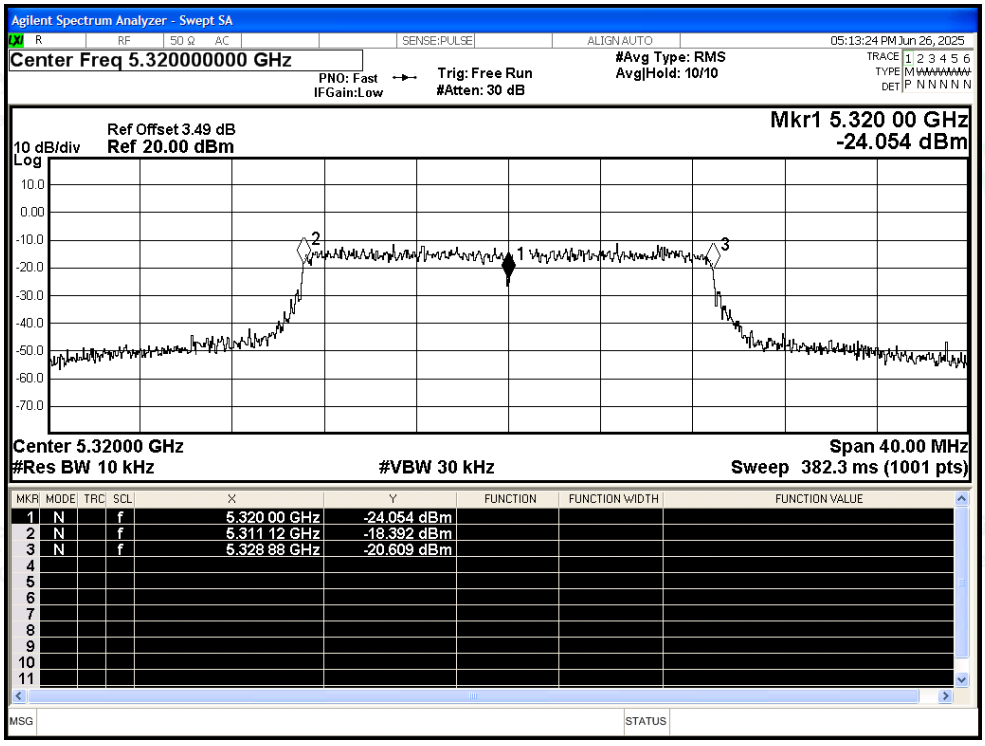

Freq. Stability NVNT ax40 5270MHz Ant2

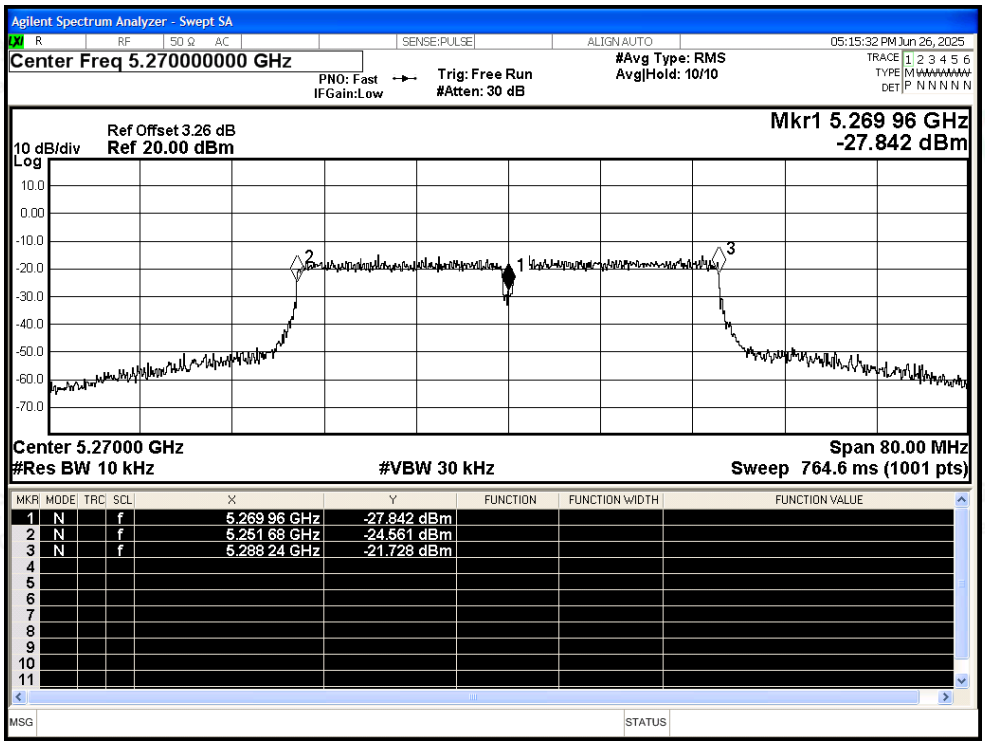

Freq. Stability NVNT ax40 5310MHz Ant2

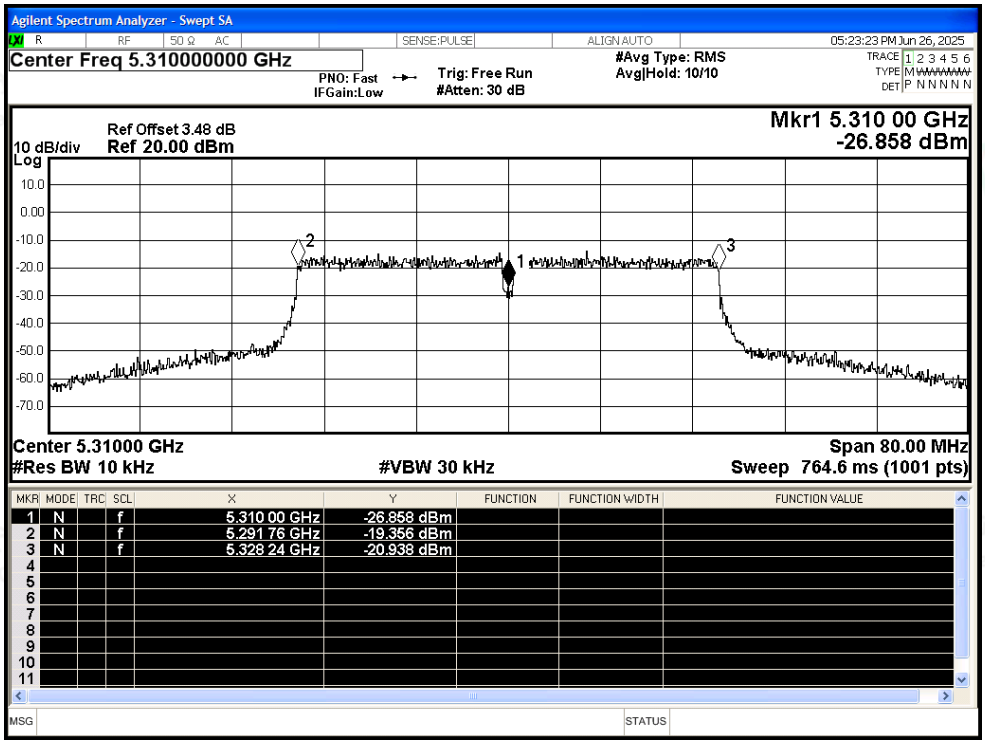

E.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	Ant1	95.68	0.19	0.72
NVNT	a	5300	Ant1	95.68	0.19	0.72
NVNT	a	5320	Ant1	95.68	0.19	0.72
NVNT	n20	5260	Ant1	94.94	0.23	0.85
NVNT	n20	5300	Ant1	94.94	0.23	0.85
NVNT	n20	5320	Ant1	95.02	0.22	0.85
NVNT	n40	5270	Ant1	90.45	0.44	1.7
NVNT	n40	5310	Ant1	90.45	0.44	1.7
NVNT	ac20	5260	Ant1	95.04	0.22	0.84
NVNT	ac20	5300	Ant1	95.04	0.22	0.84
NVNT	ac20	5320	Ant1	95.04	0.22	0.84
NVNT	ac40	5270	Ant1	90.41	0.44	1.68
NVNT	ac40	5310	Ant1	90.56	0.43	1.68
NVNT	ax20	5260	Ant1	95.04	0.22	0.84
NVNT	ax20	5300	Ant1	94.96	0.22	0.84
NVNT	ax20	5320	Ant1	95.04	0.22	0.84
NVNT	ax40	5270	Ant1	90.56	0.43	1.68
NVNT	ax40	5310	Ant1	90.56	0.43	1.68

Test Graphs

Duty Cycle NVNT a 5260MHz Ant1

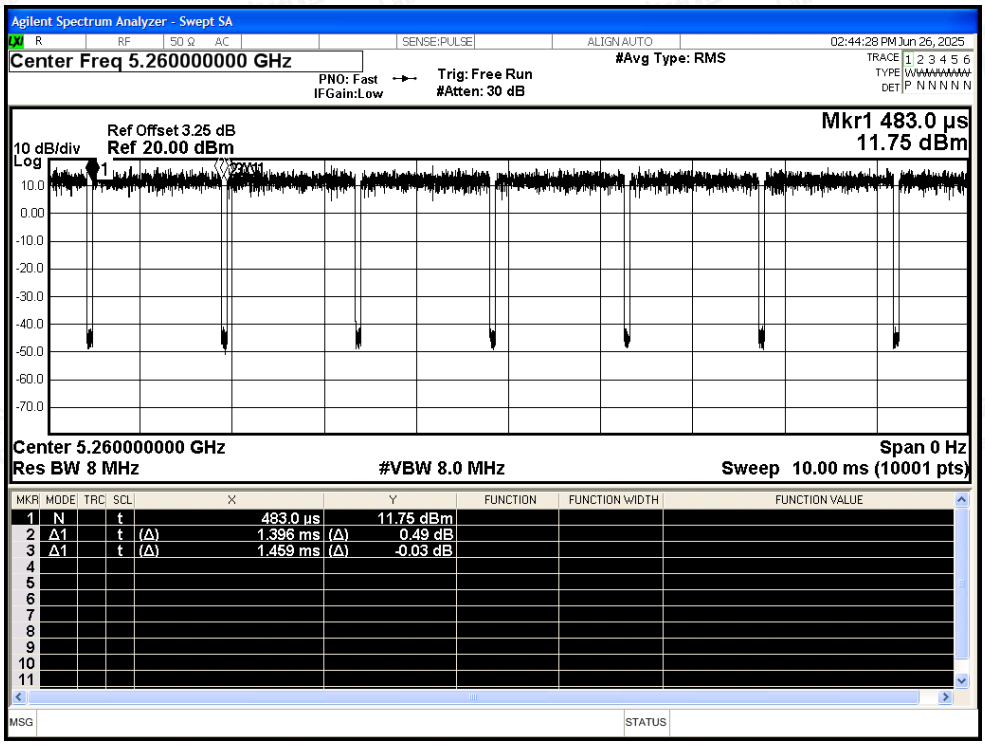

Duty Cycle NVNT a 5300MHz Ant1

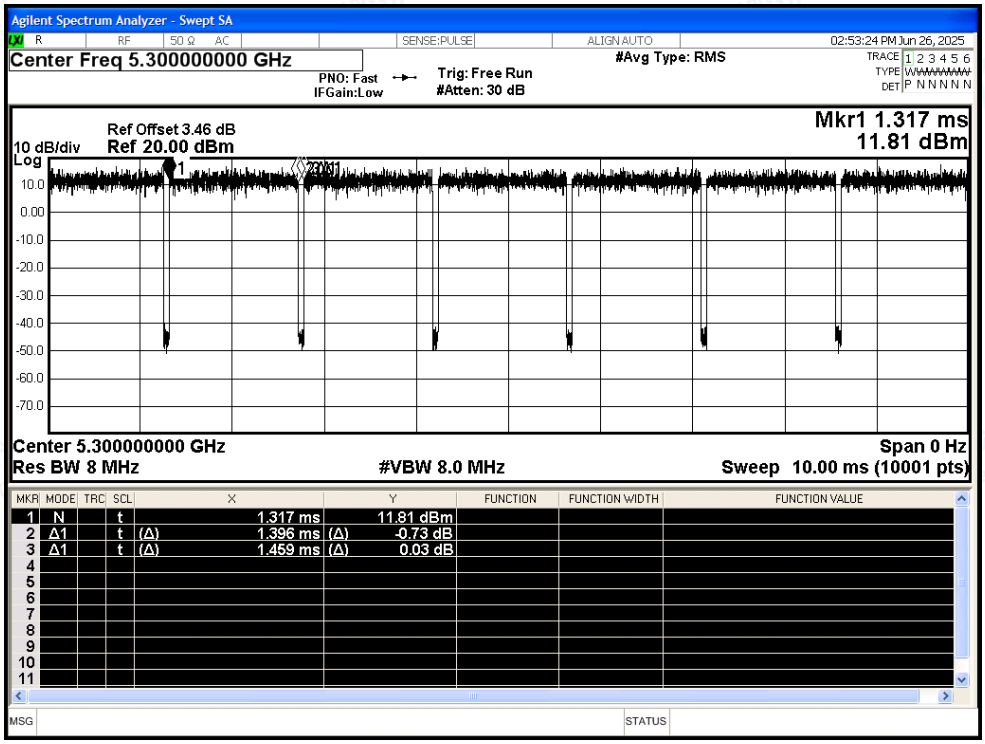

Duty Cycle NVNT a 5320MHz Ant1

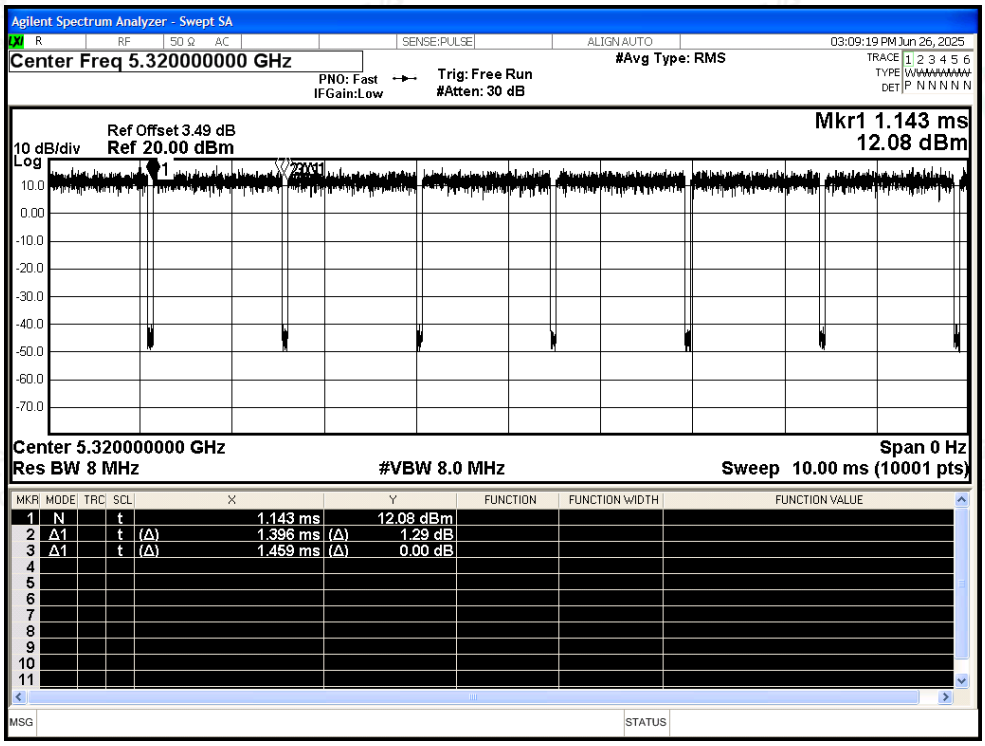

Duty Cycle NVNT n20 5260MHz Ant1

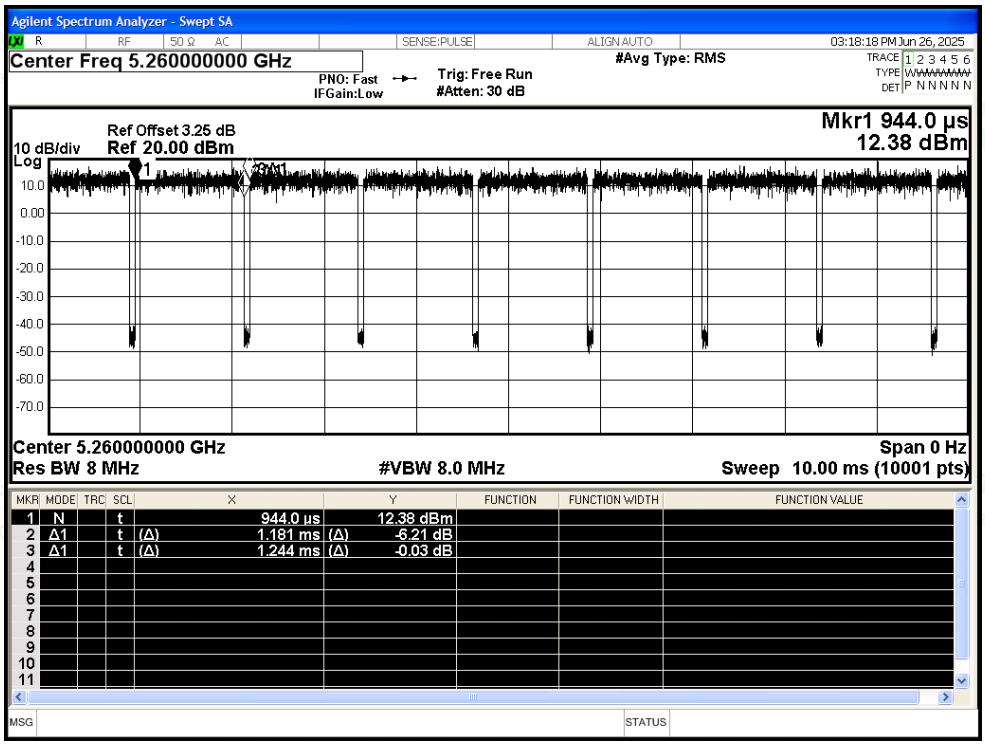

Duty Cycle NVNT n20 5300MHz Ant1

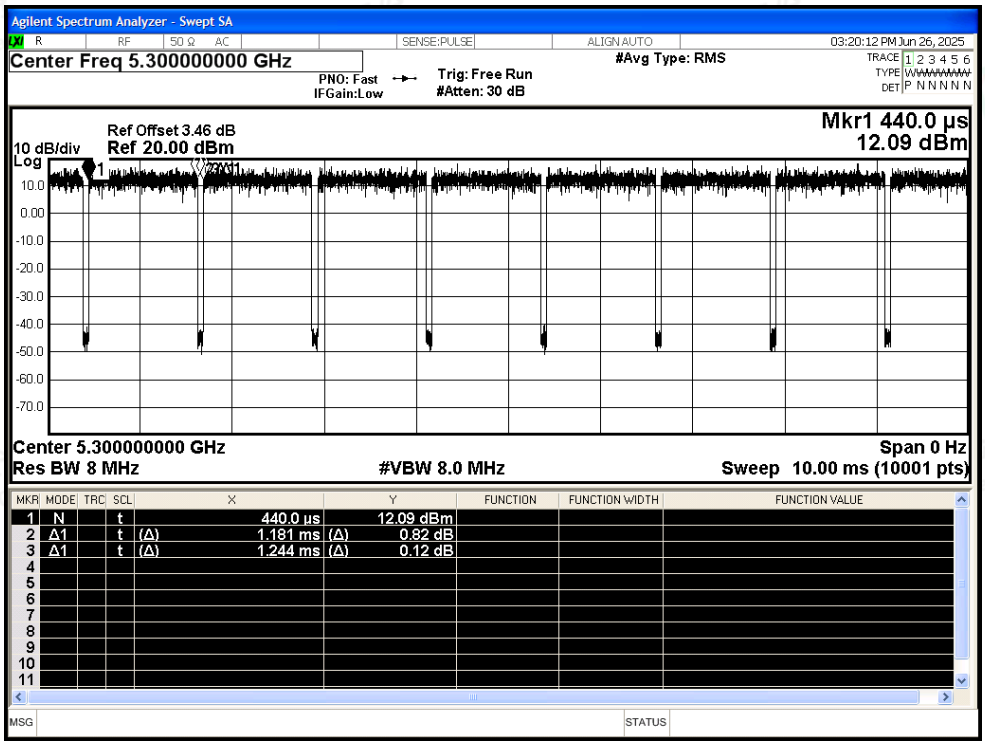

Duty Cycle NVNT n20 5320MHz Ant1

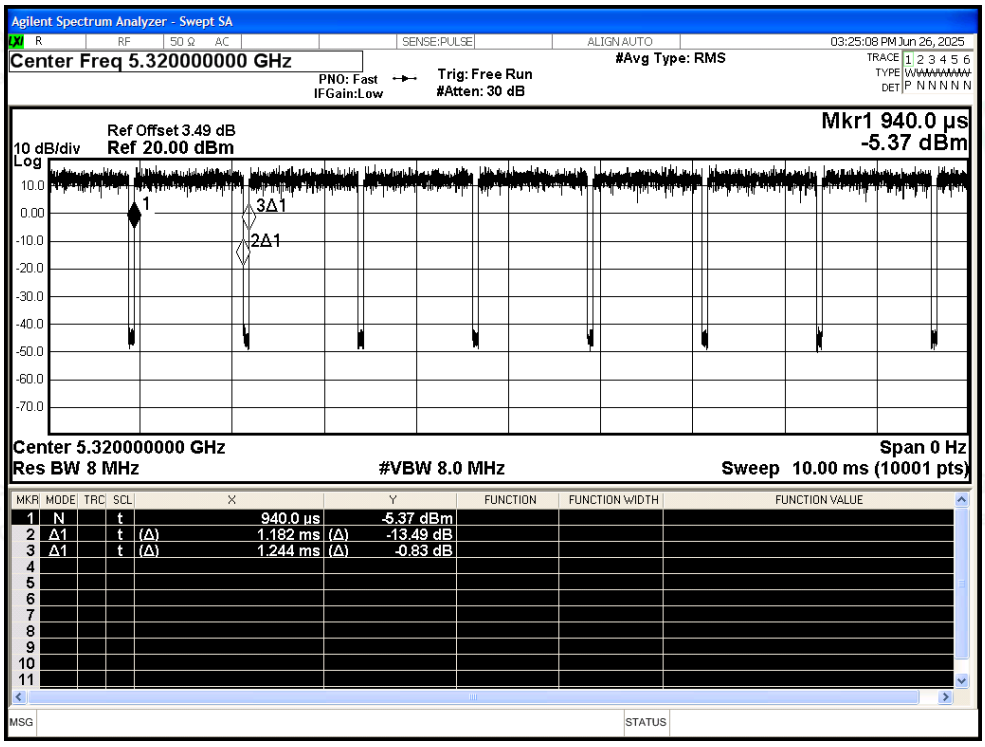

Duty Cycle NVNT n40 5270MHz Ant1

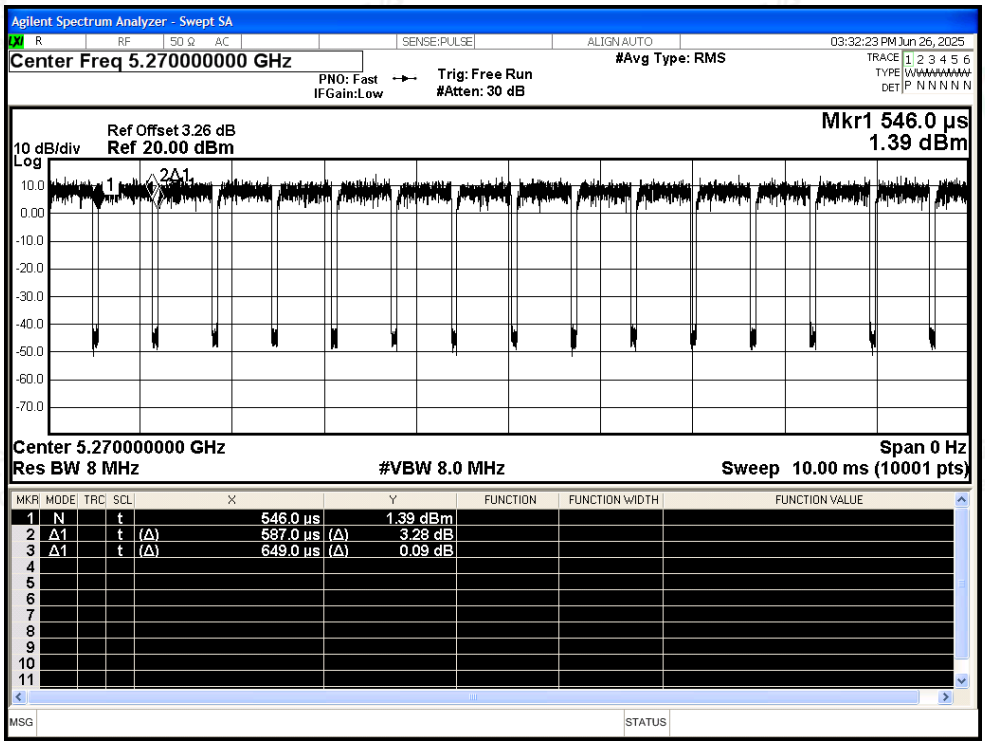

Duty Cycle NVNT n40 5310MHz Ant1

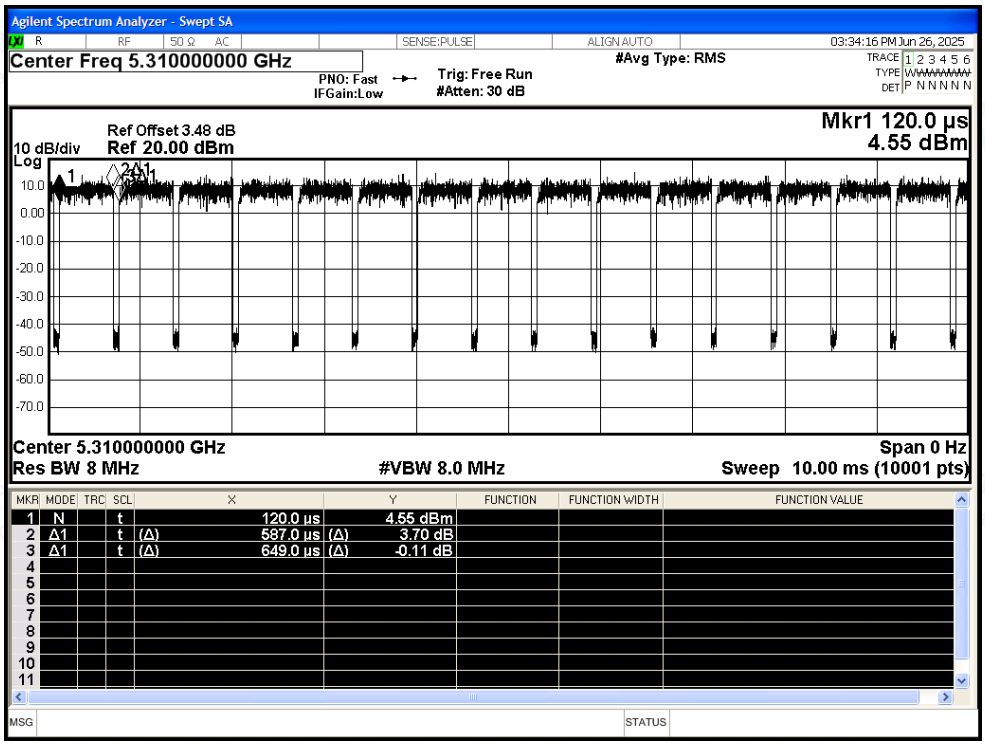

Duty Cycle NVNT ac20 5260MHz Ant1

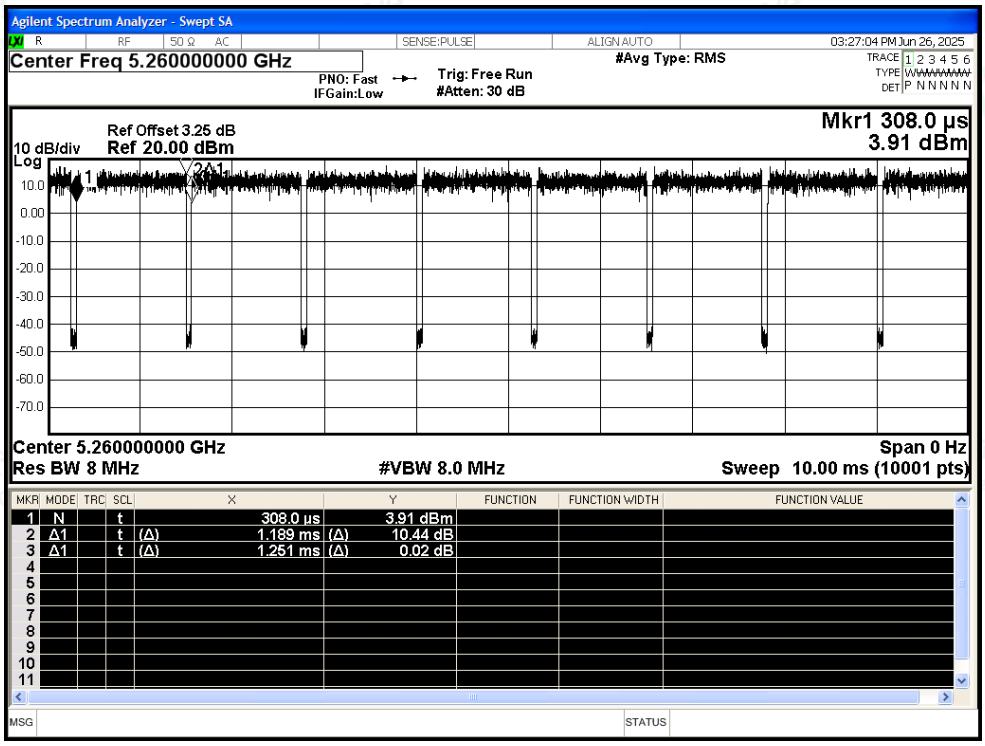

Duty Cycle NVNT ac20 5300MHz Ant1

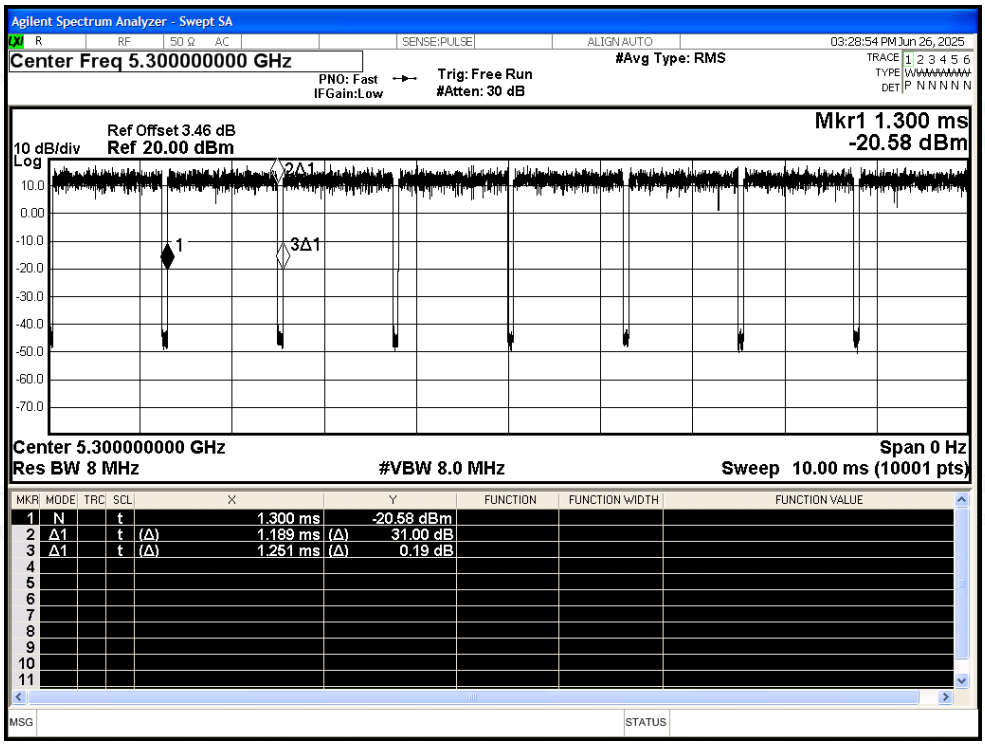

Duty Cycle NVNT ac20 5320MHz Ant1

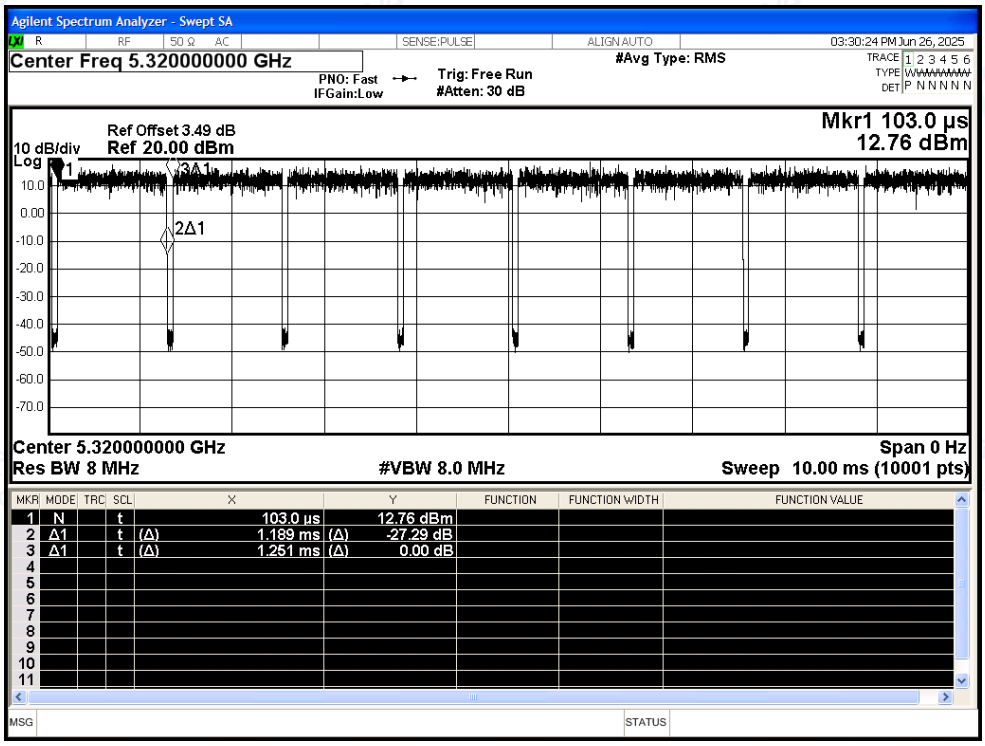

Duty Cycle NVNT ac40 5270MHz Ant1

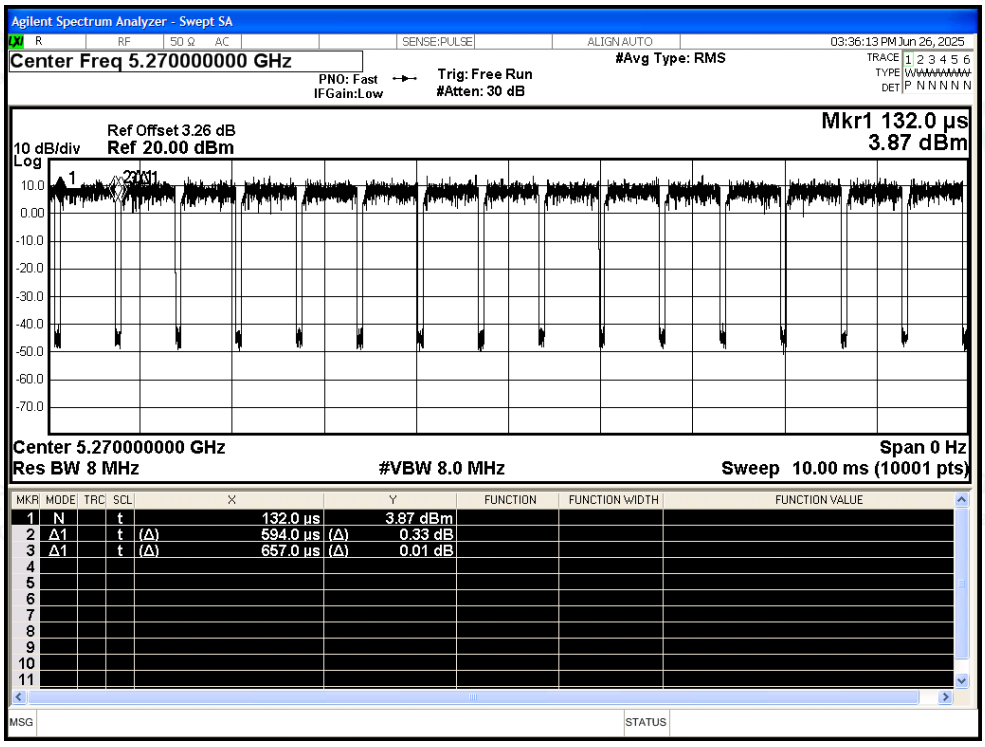

Duty Cycle NVNT ac40 5310MHz Ant1

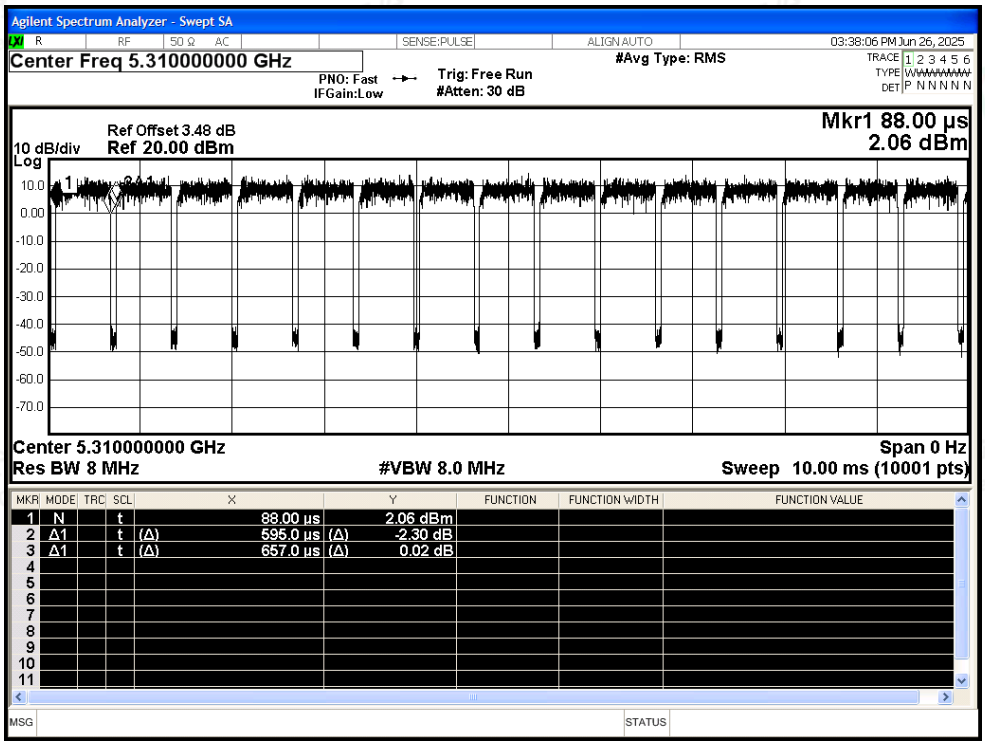

Duty Cycle NVNT ax20 5260MHz Ant1

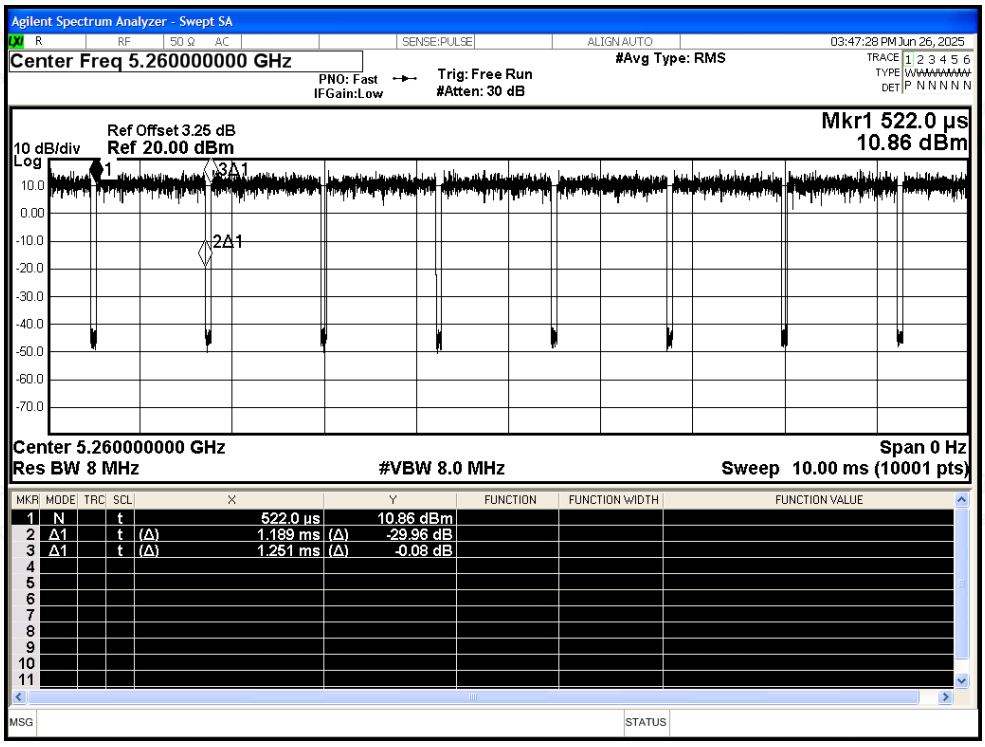

Duty Cycle NVNT ax20 5300MHz Ant1

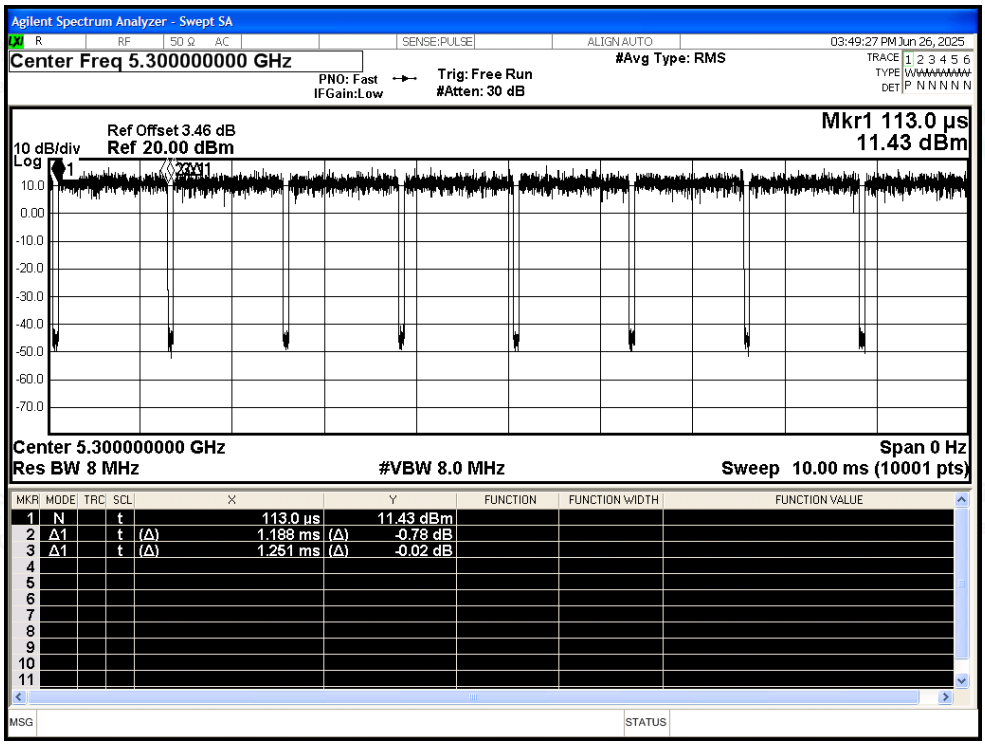

Duty Cycle NVNT ax20 5320MHz Ant1

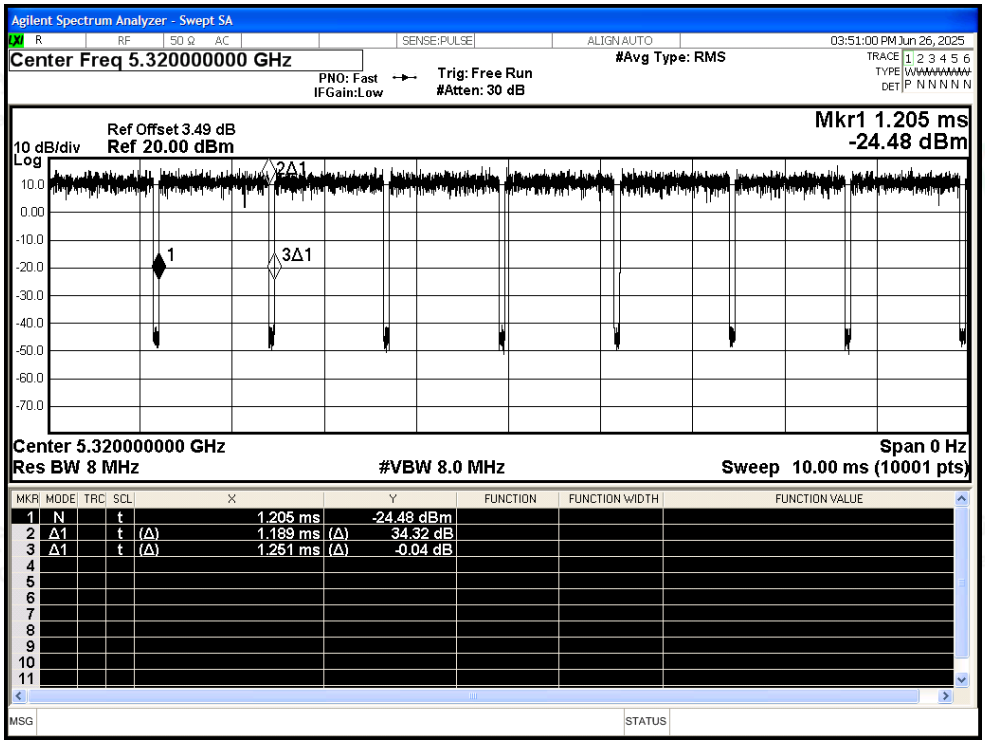

Duty Cycle NVNT ax40 5270MHz Ant1

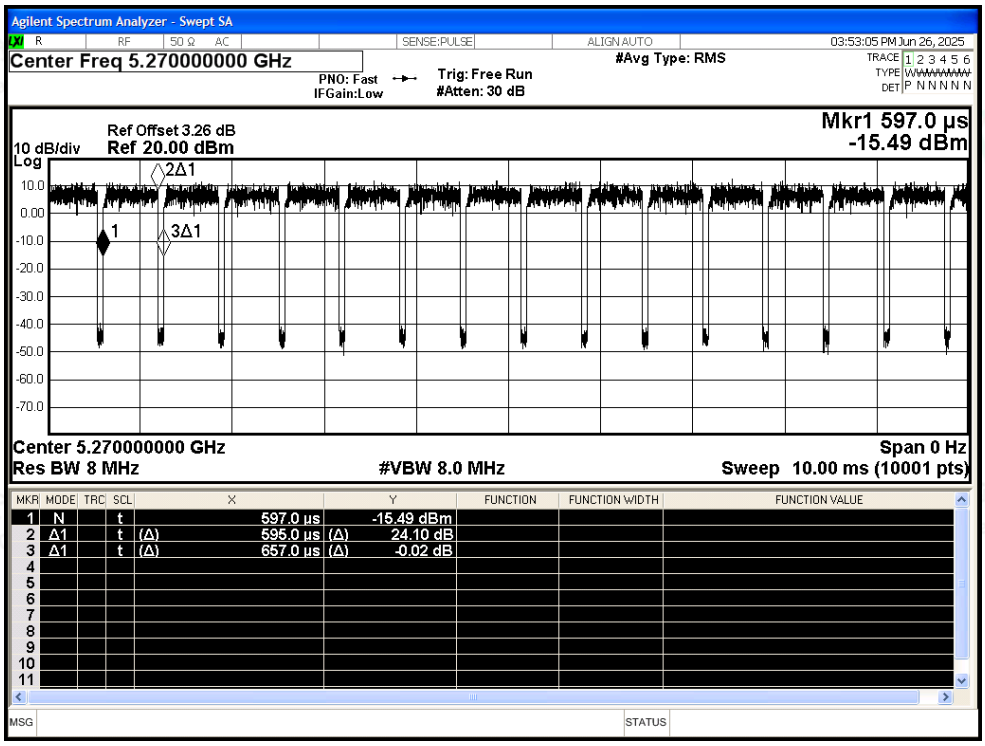

Duty Cycle NVNT ax40 5310MHz Ant1

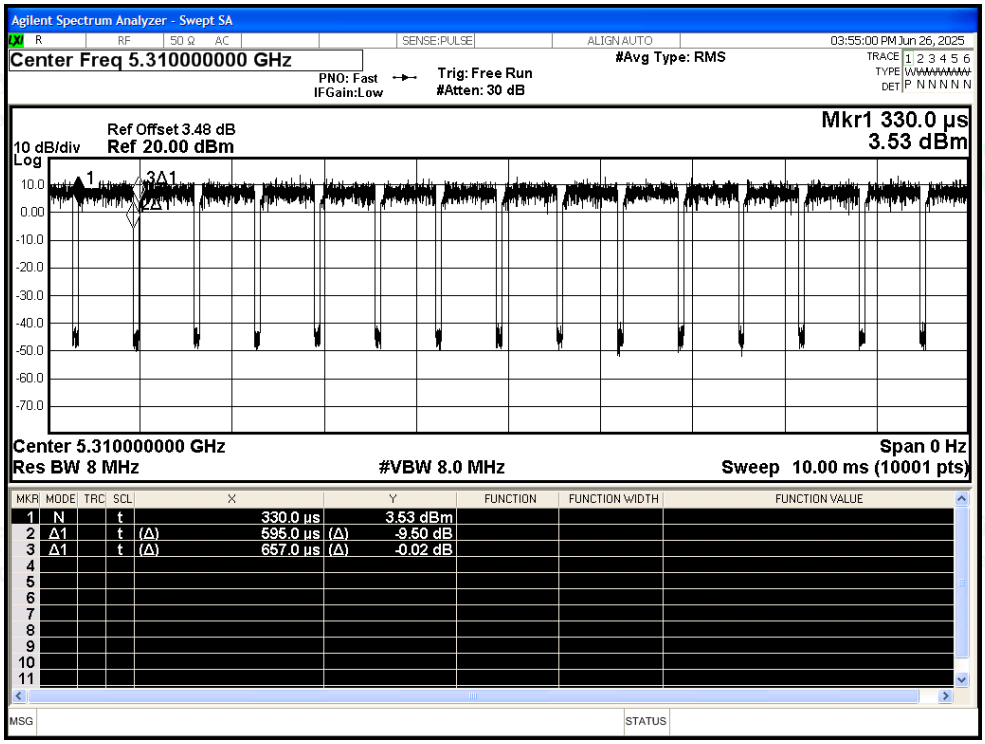

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5260	Ant2	95.68	0.19	0.72
NVNT	a	5300	Ant2	95.68	0.19	0.72
NVNT	a	5320	Ant2	95.75	0.19	0.72
NVNT	n20	5260	Ant2	95.02	0.22	0.85
NVNT	n20	5300	Ant2	94.94	0.23	0.85
NVNT	n20	5320	Ant2	94.94	0.23	0.85
NVNT	n40	5270	Ant2	90.45	0.44	1.7
NVNT	n40	5310	Ant2	90.45	0.44	1.7
NVNT	ac20	5260	Ant2	95.04	0.22	0.84
NVNT	ac20	5300	Ant2	94.96	0.22	0.84
NVNT	ac20	5320	Ant2	95.04	0.22	0.84
NVNT	ac40	5270	Ant2	90.41	0.44	1.68
NVNT	ac40	5310	Ant2	90.56	0.43	1.68
NVNT	ax20	5260	Ant2	95.04	0.22	0.84
NVNT	ax20	5300	Ant2	95.04	0.22	0.84
NVNT	ax20	5320	Ant2	95.04	0.22	0.84
NVNT	ax40	5270	Ant2	90.56	0.43	1.68
NVNT	ax40	5310	Ant2	90.56	0.43	1.68

Test Graphs

Duty Cycle NVNT a 5260MHz Ant2

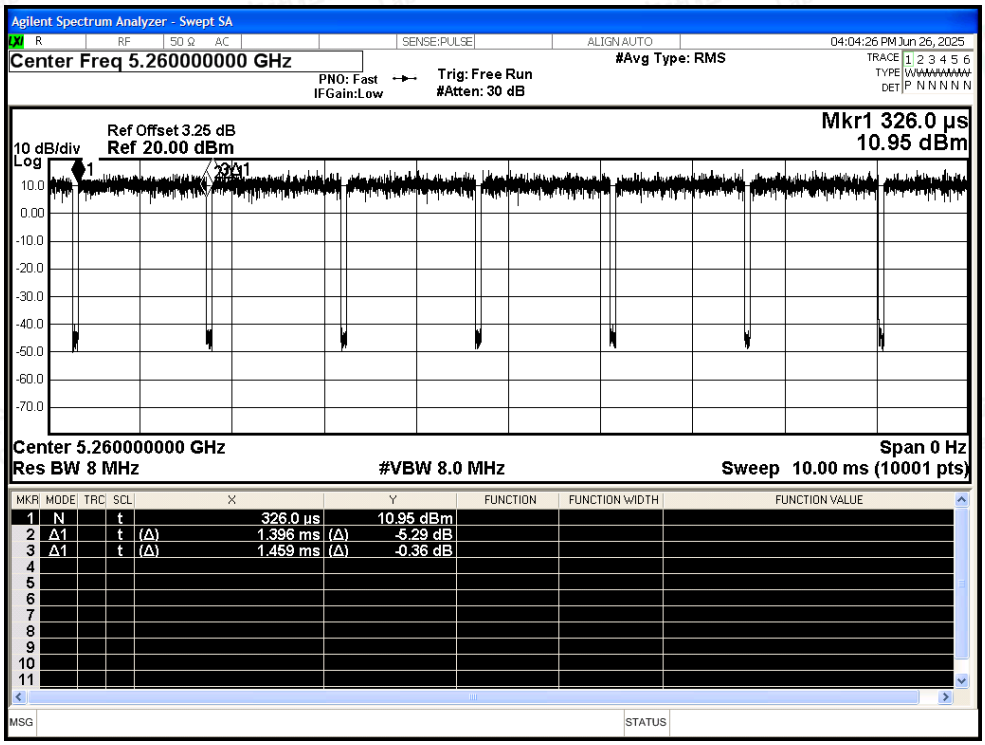

Duty Cycle NVNT a 5300MHz Ant2

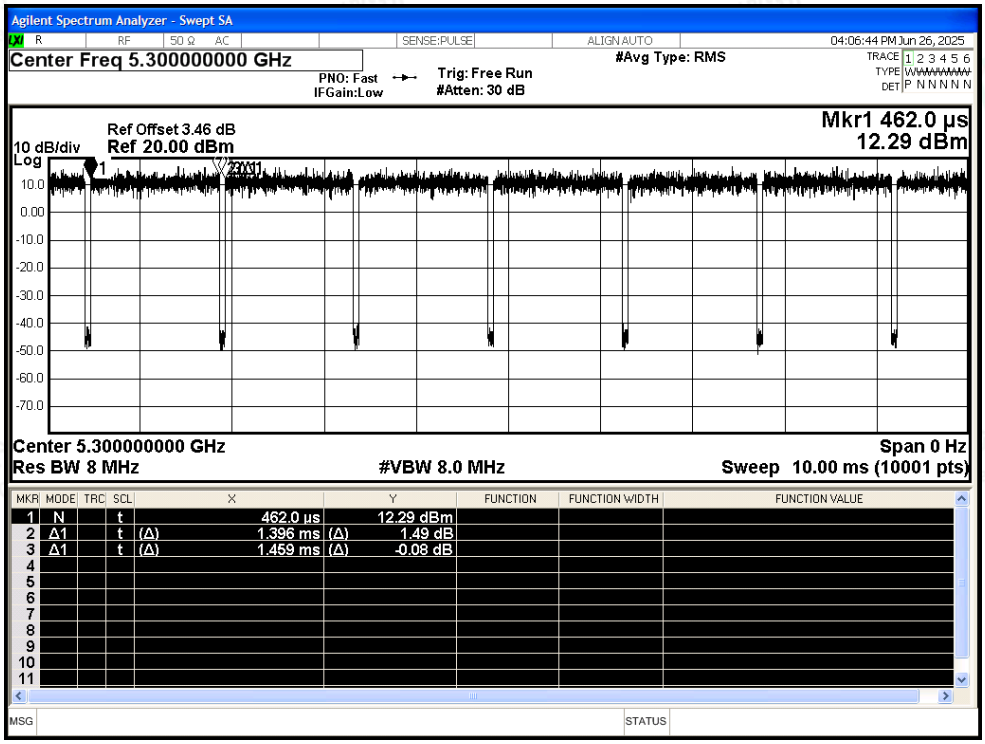

Duty Cycle NVNT a 5320MHz Ant2

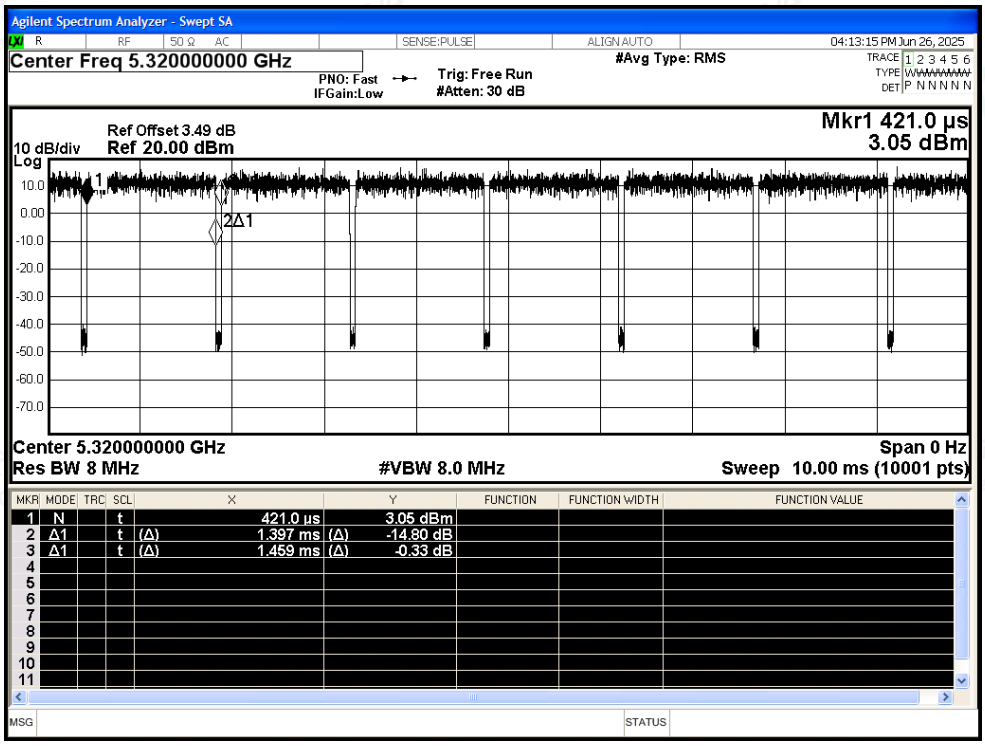

Duty Cycle NVNT n20 5260MHz Ant2

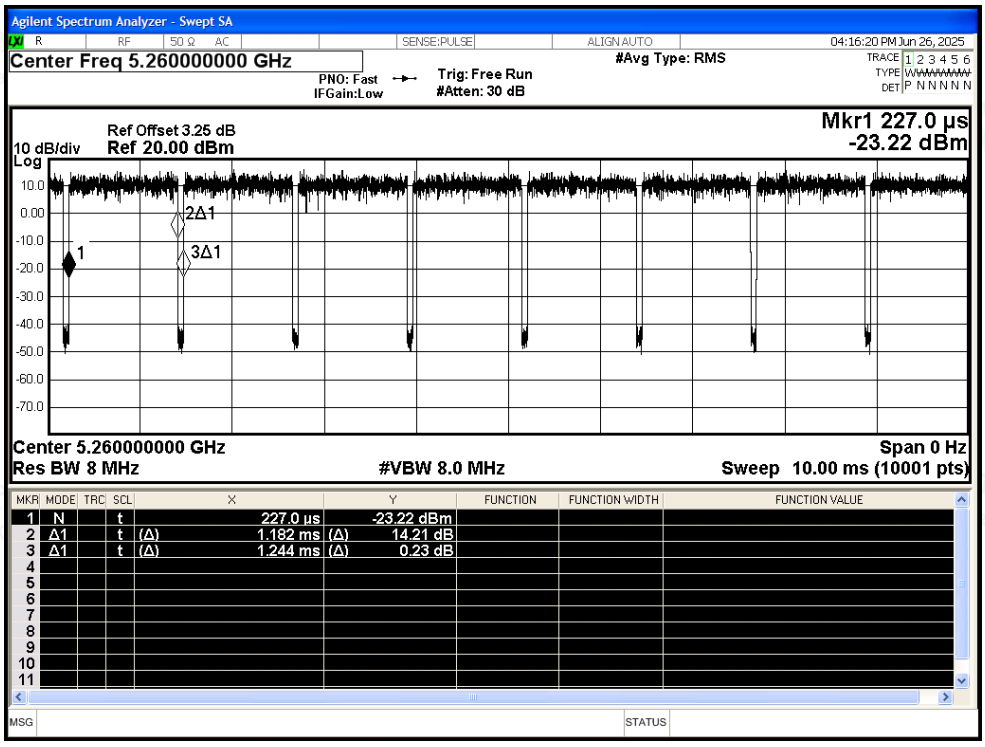

Duty Cycle NVNT n20 5300MHz Ant2

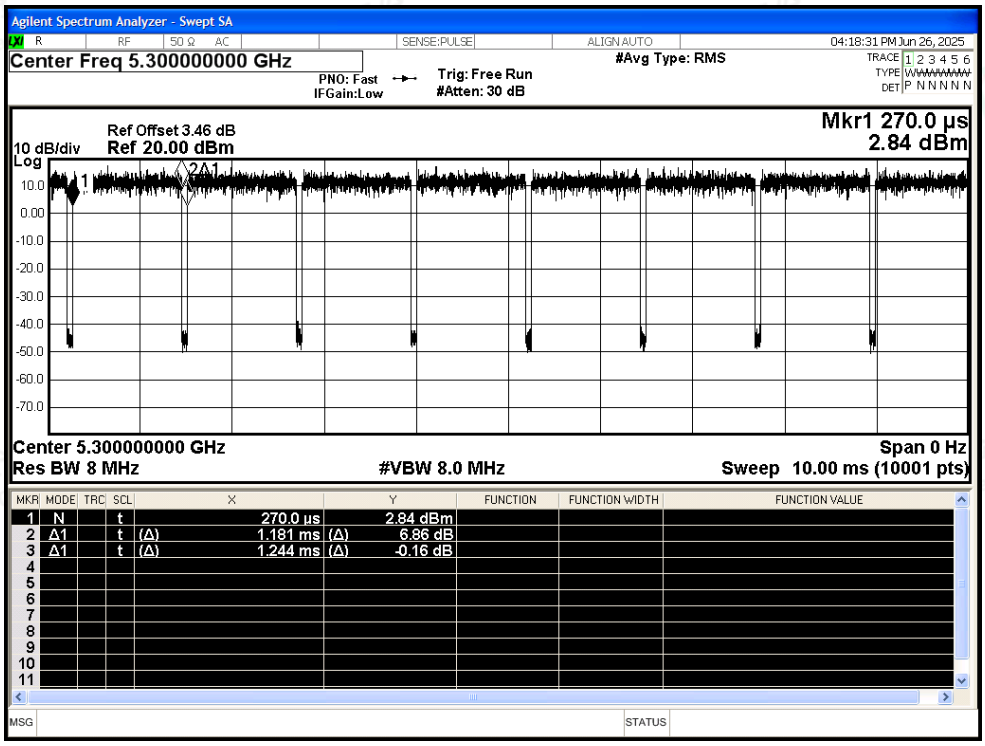

Duty Cycle NVNT n20 5320MHz Ant2

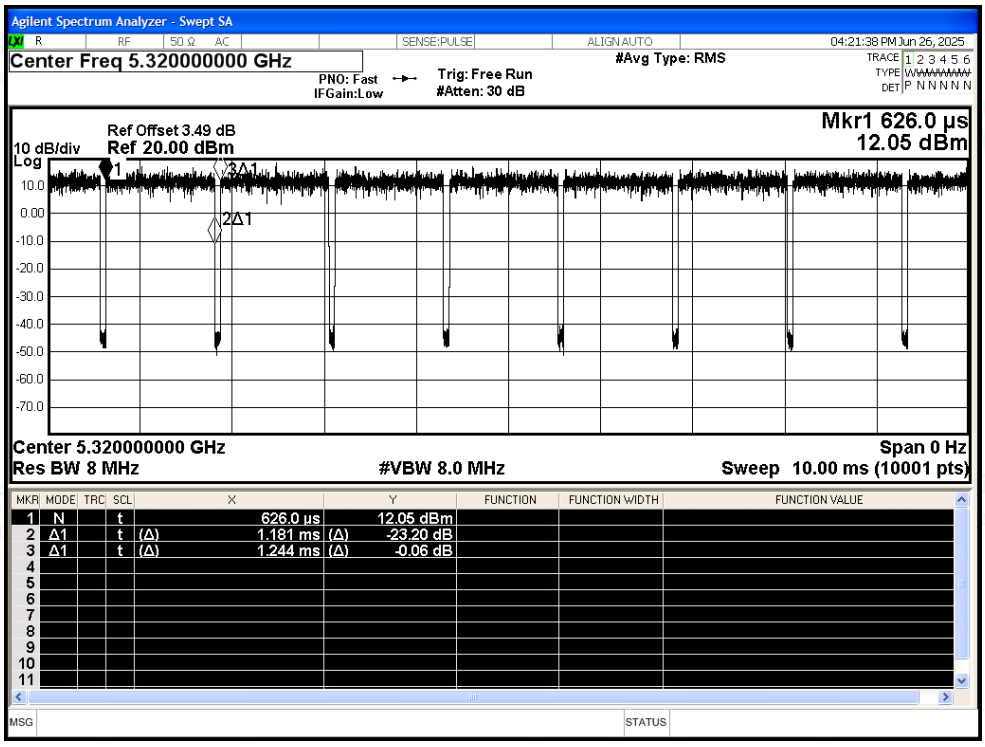

Duty Cycle NVNT n40 5270MHz Ant2

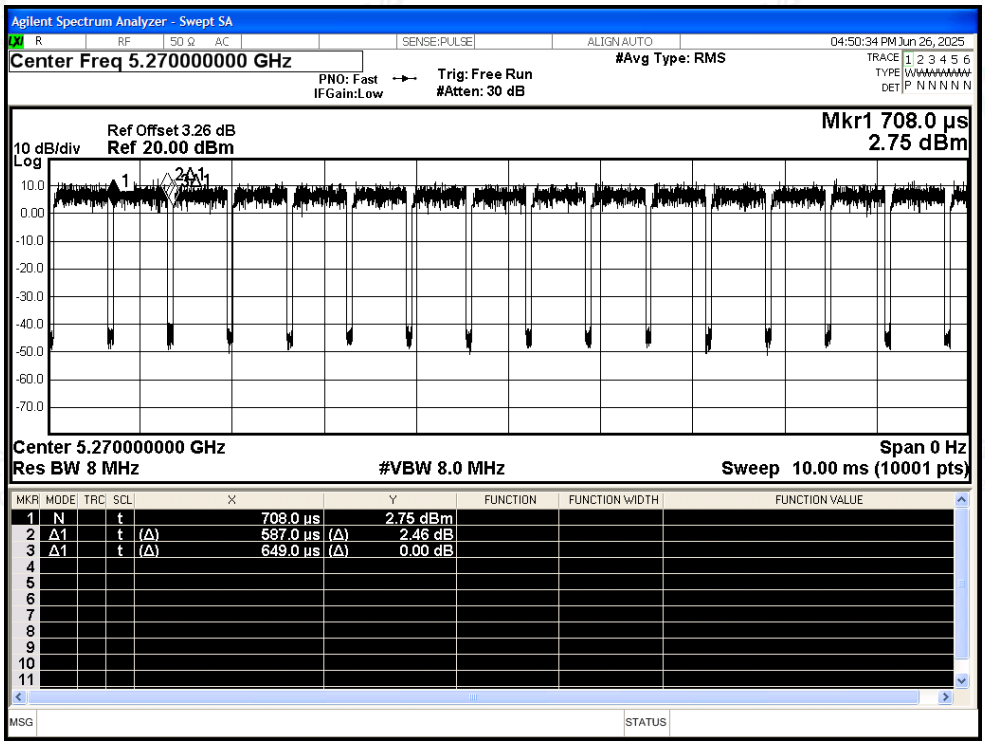

Duty Cycle NVNT n40 5310MHz Ant2

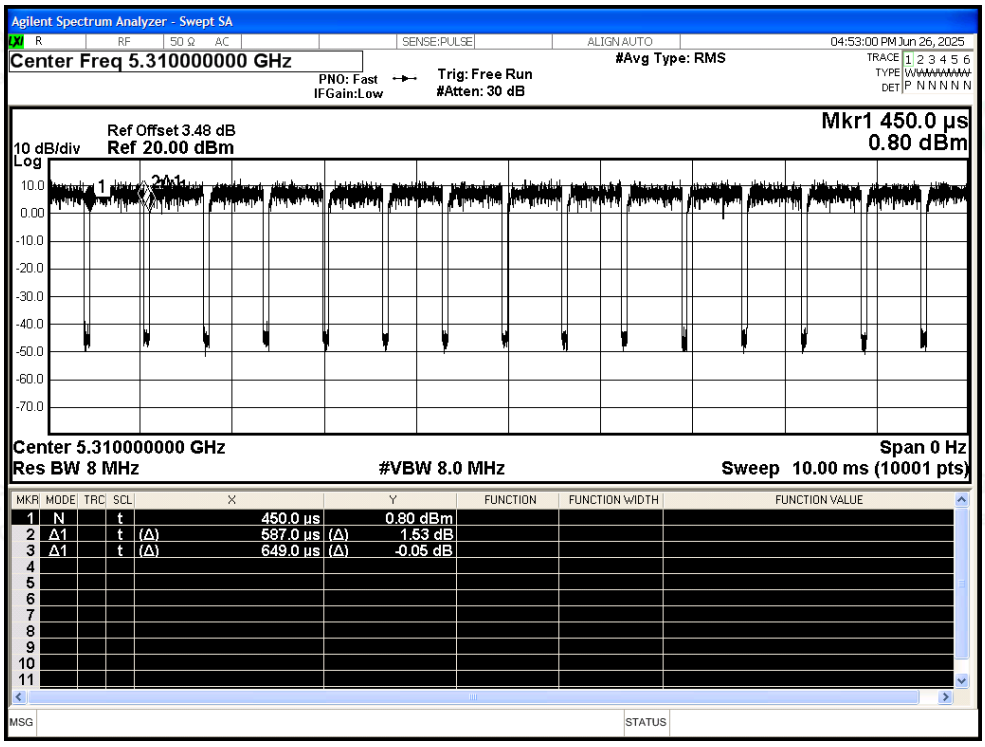

Duty Cycle NVNT ac20 5260MHz Ant2

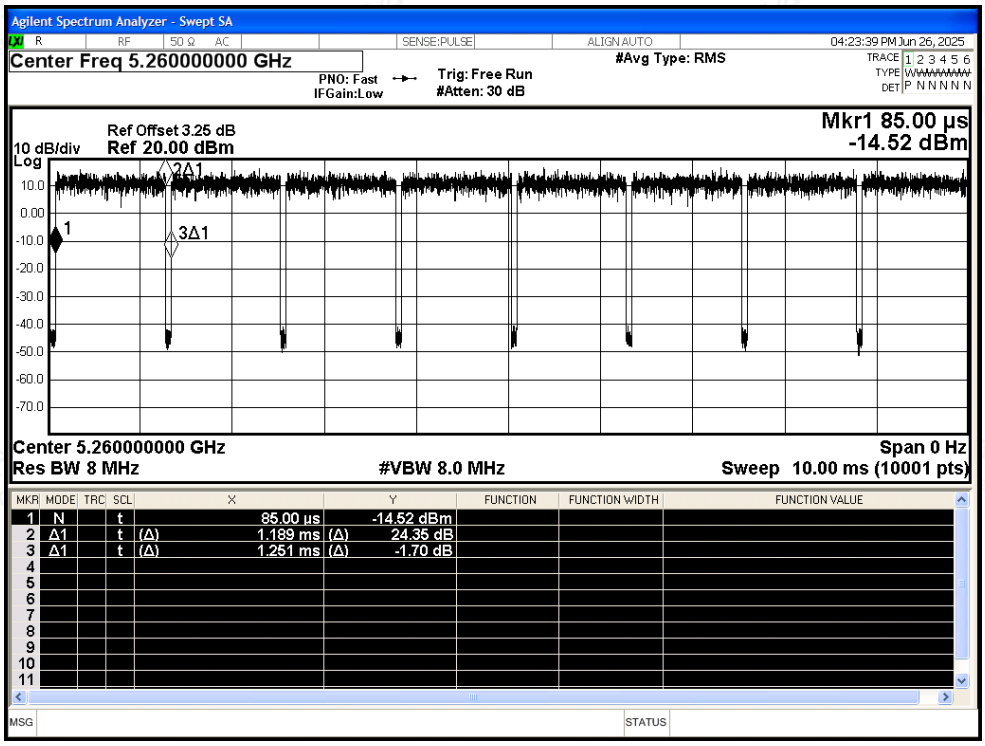

Duty Cycle NVNT ac20 5300MHz Ant2

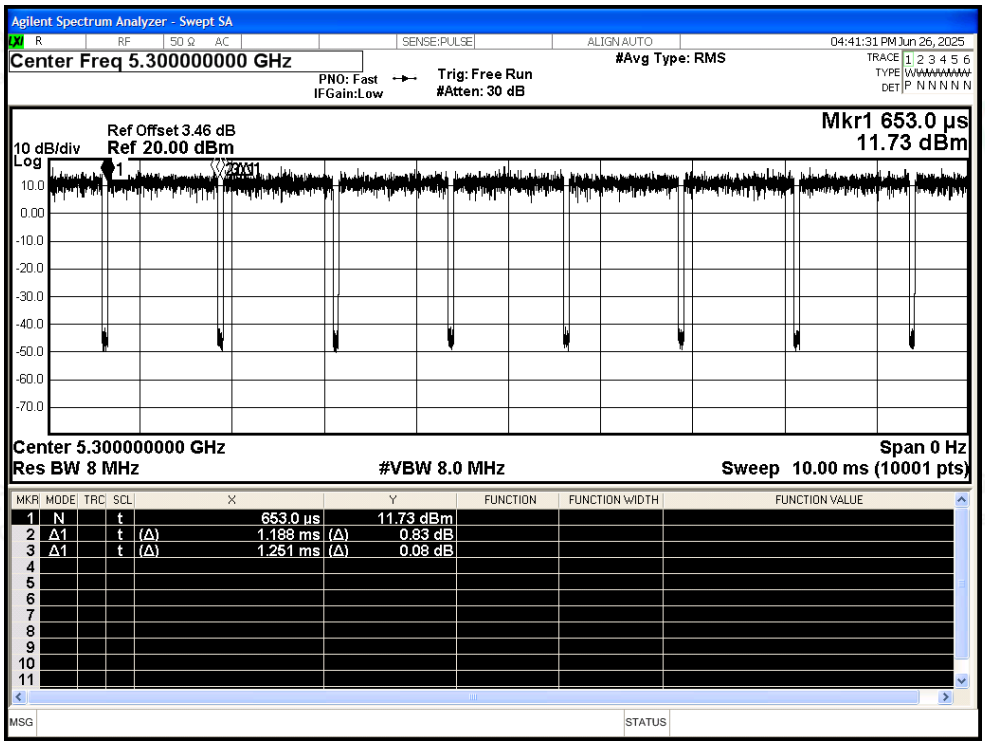

Duty Cycle NVNT ac20 5320MHz Ant2

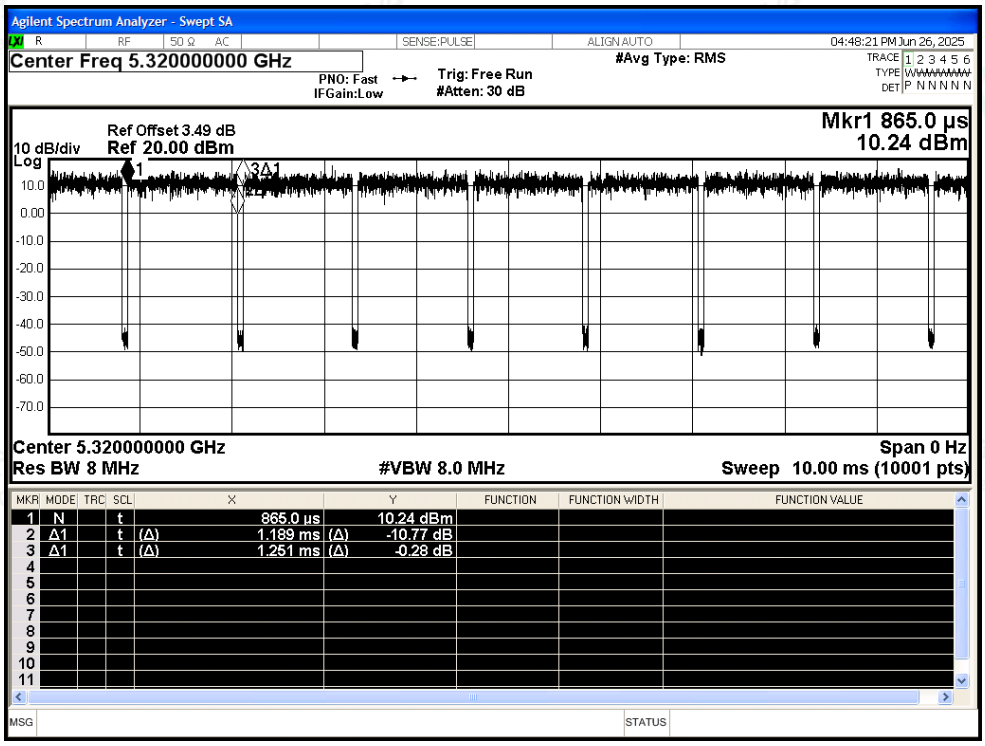

Duty Cycle NVNT ac40 5270MHz Ant2

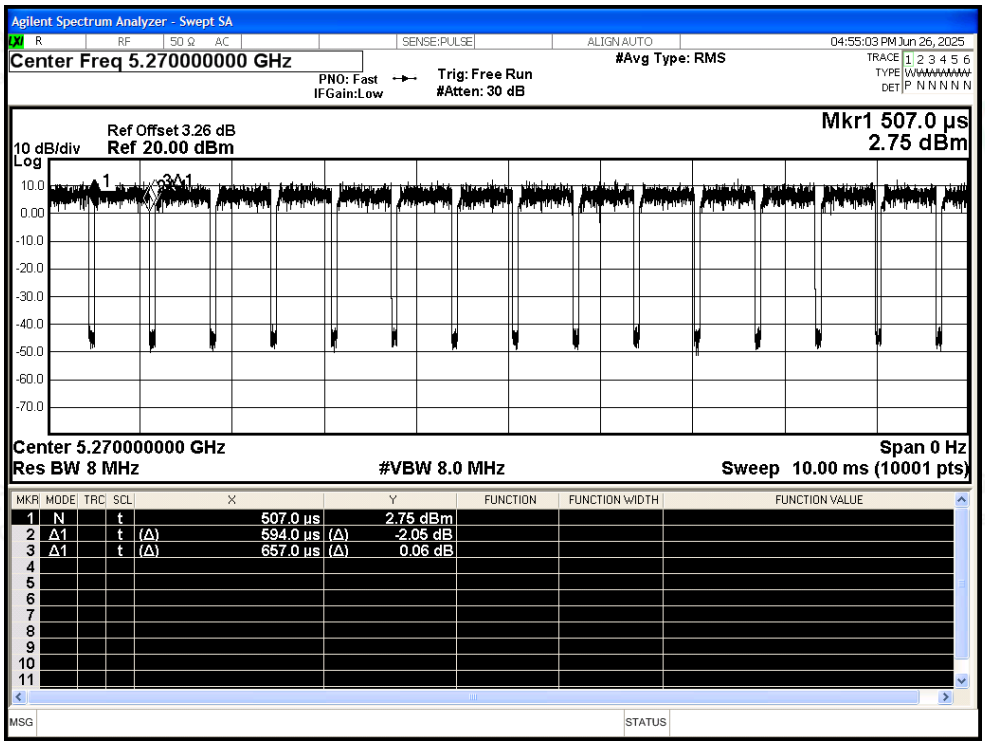

Duty Cycle NVNT ac40 5310MHz Ant2

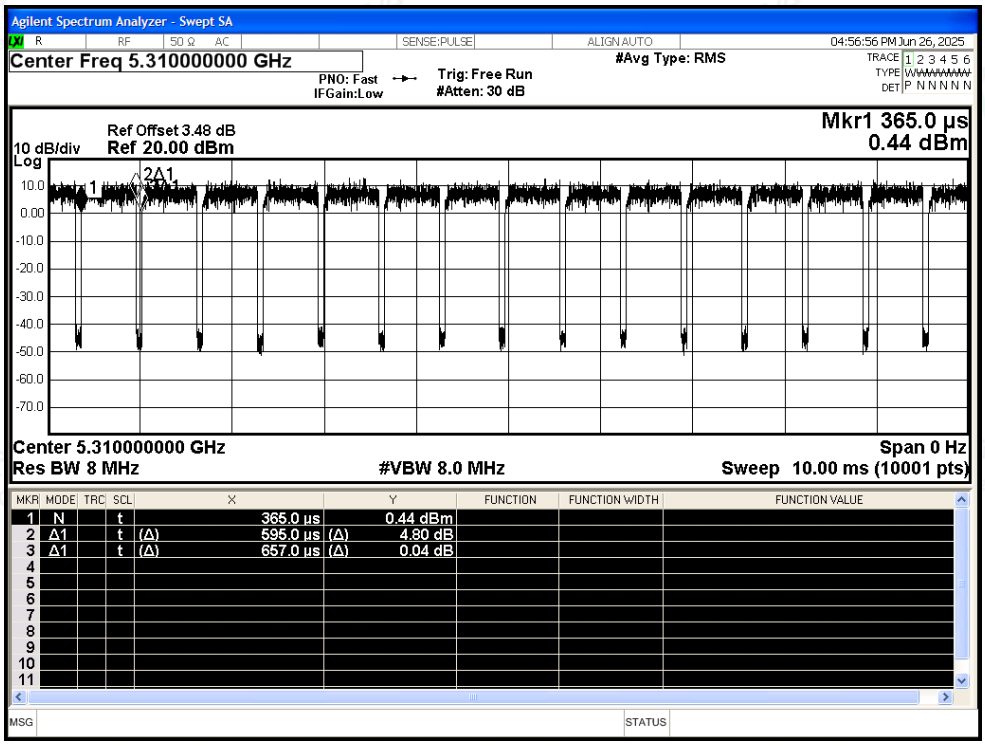

Duty Cycle NVNT ax20 5260MHz Ant2

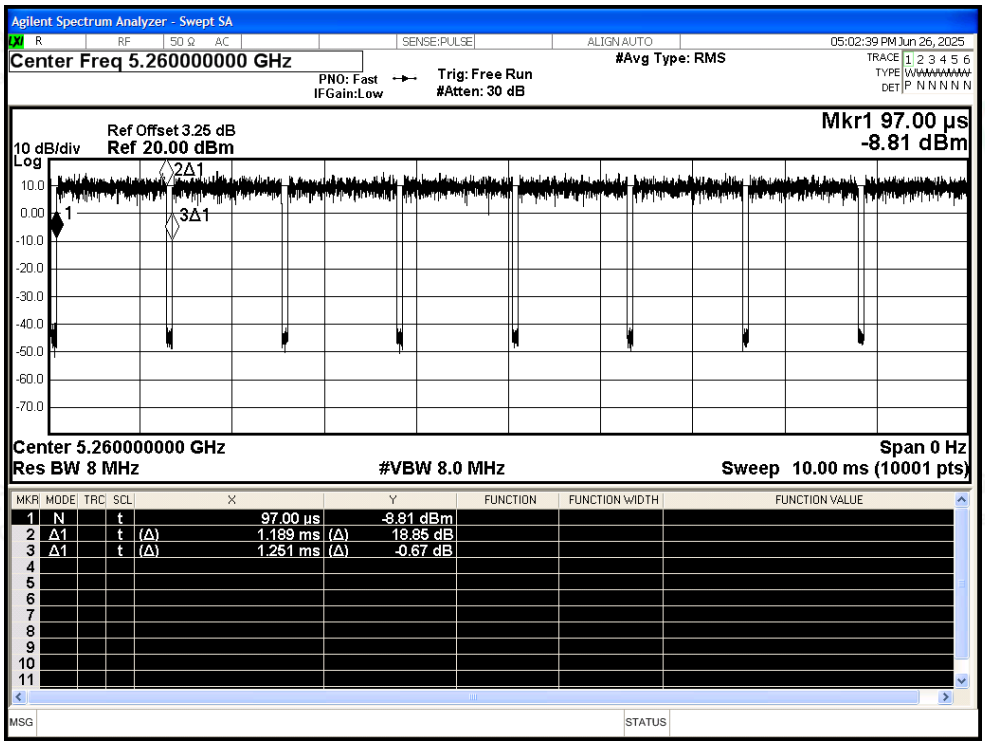

Duty Cycle NVNT ax20 5300MHz Ant2

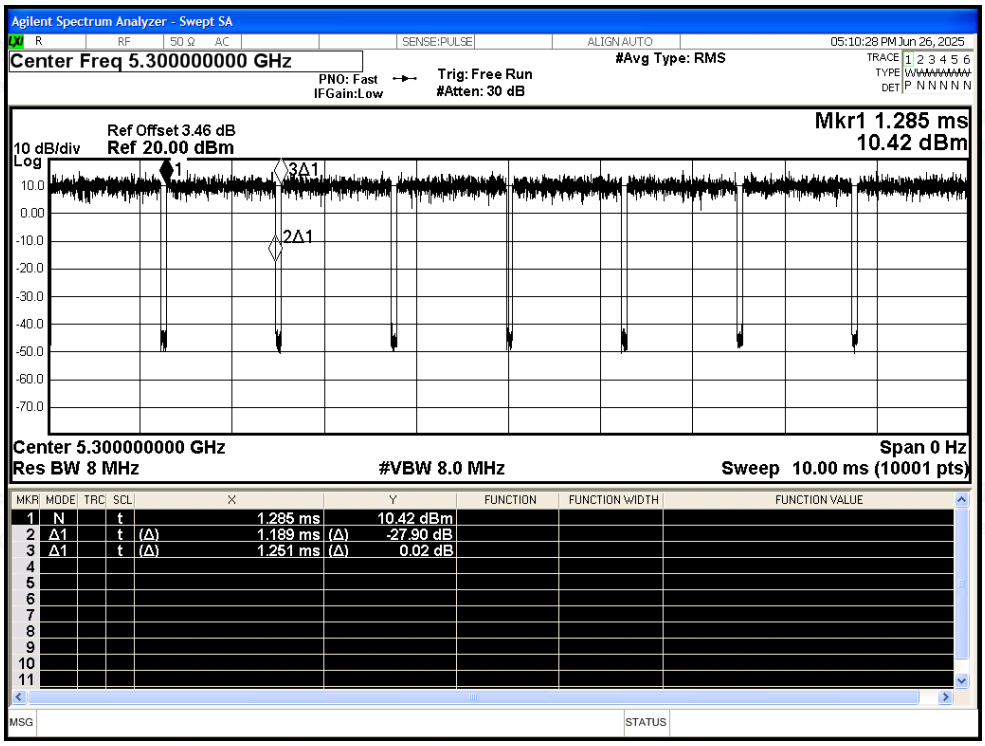

Duty Cycle NVNT ax20 5320MHz Ant2

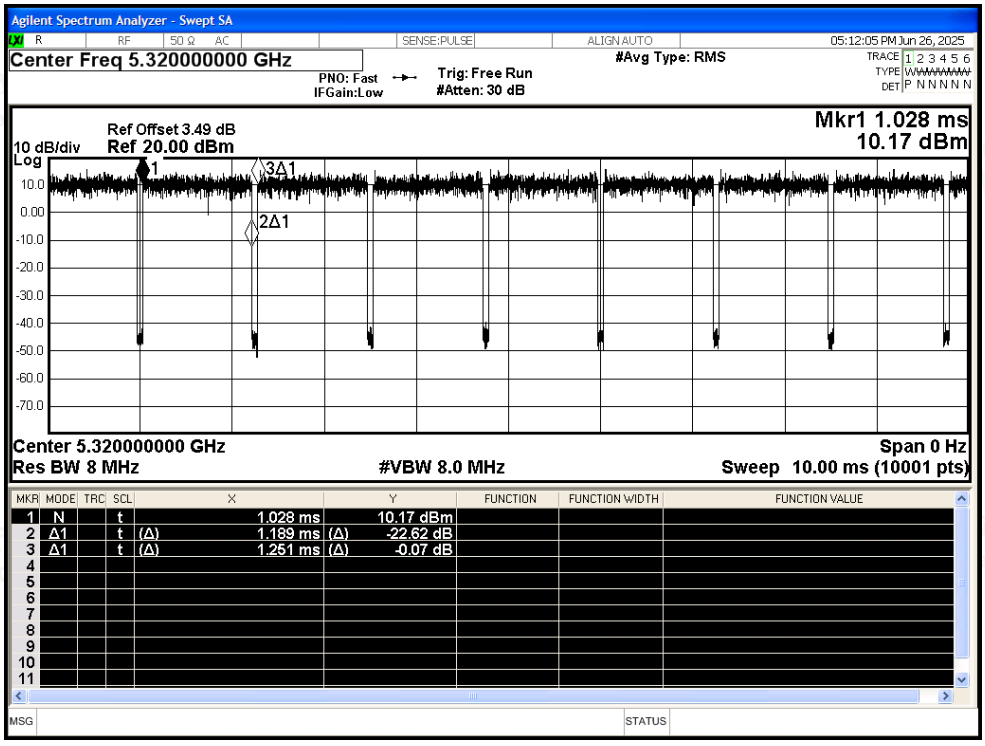

Duty Cycle NVNT ax40 5270MHz Ant2

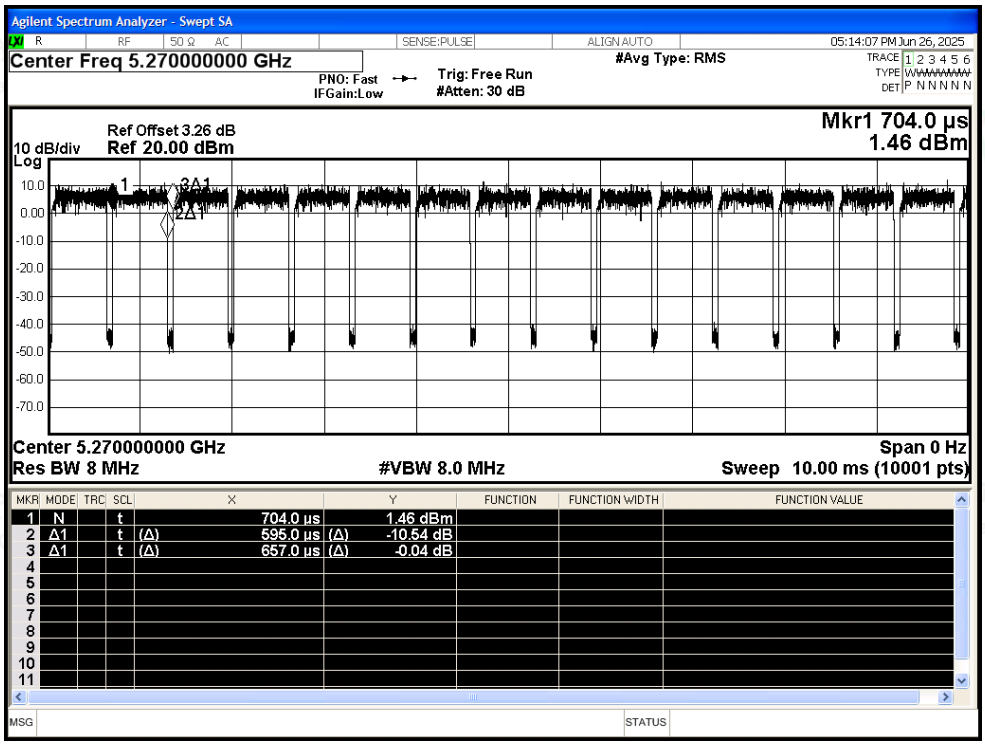
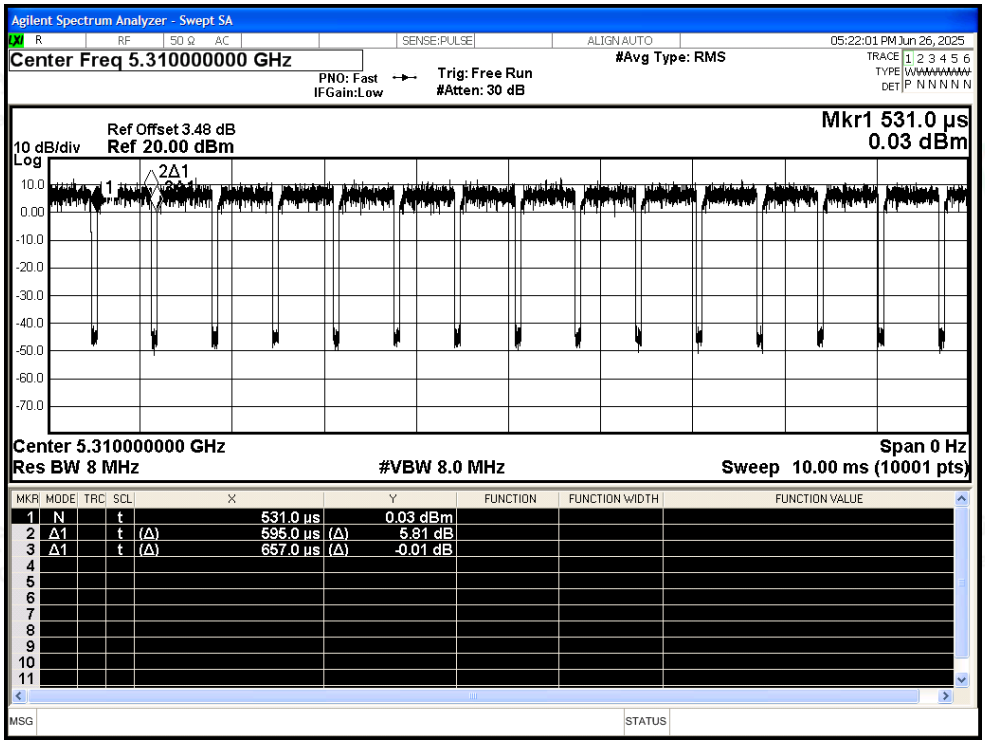
Duty Cycle NVNT ax40 5310MHz Ant2