Restrict Band NVNT ac80 5210MHz Ant1 Peak

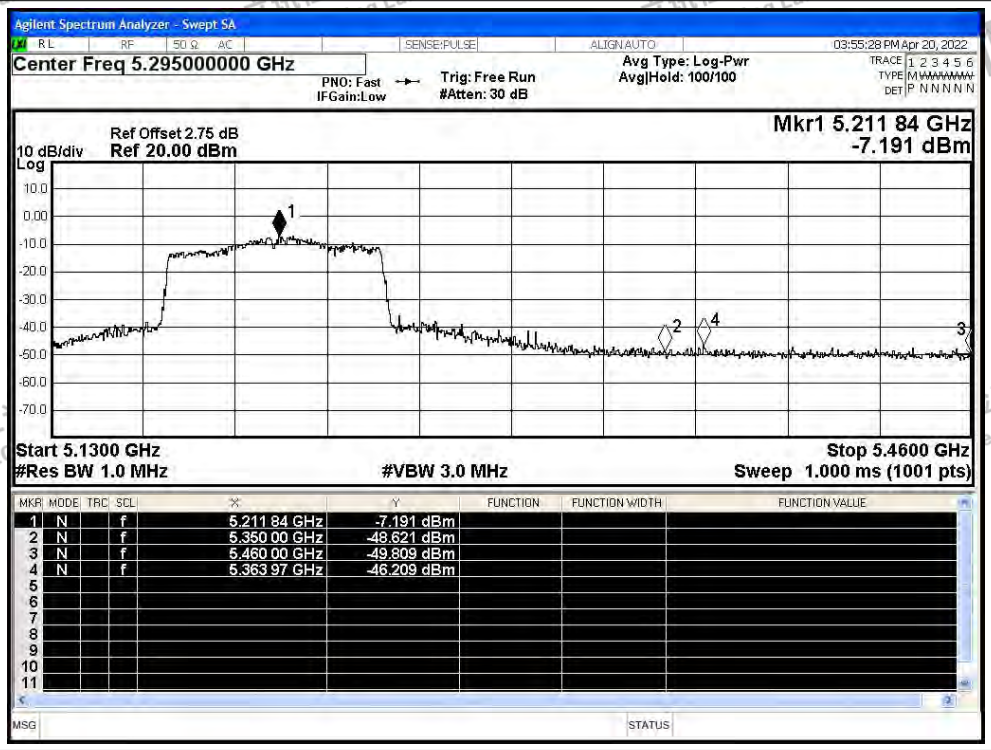

Restrict Band NVNT ac80 5210MHz Ant1 Average

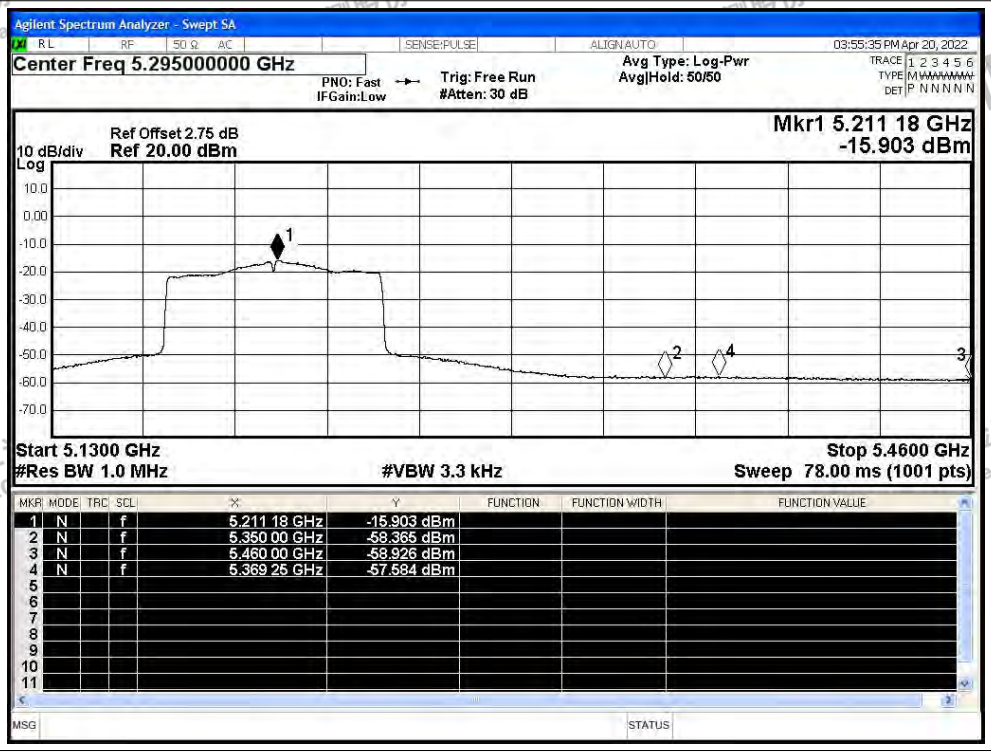

Restrict Band NVNT ac80 5210MHz Ant1 Peak

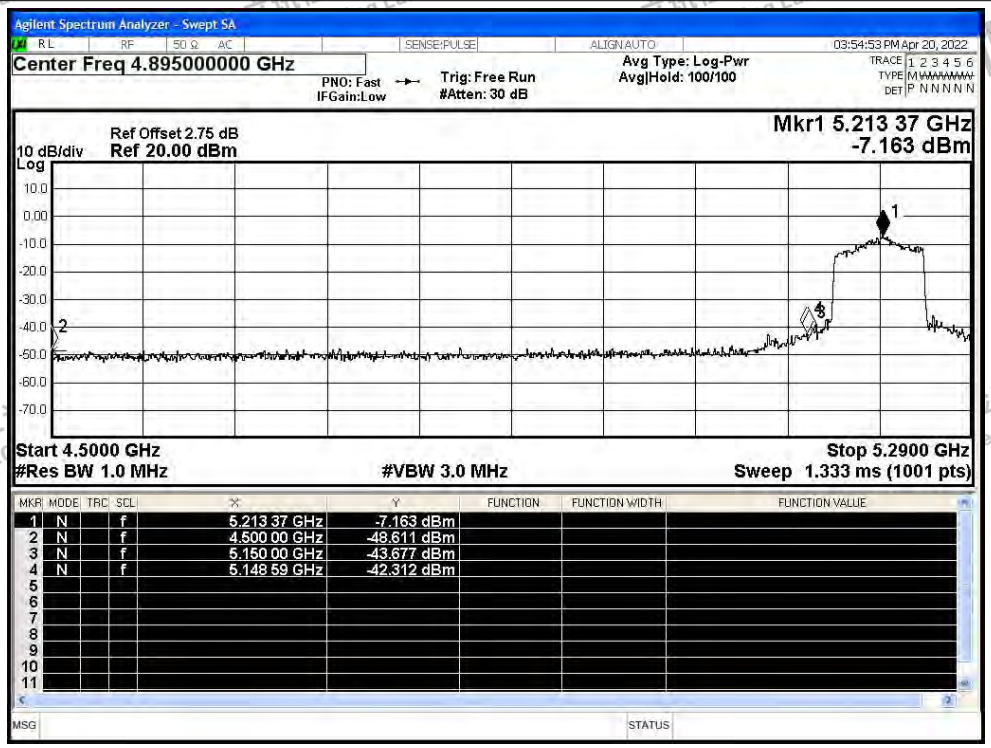

Restrict Band NVNT ac80 5210MHz Ant1 Average

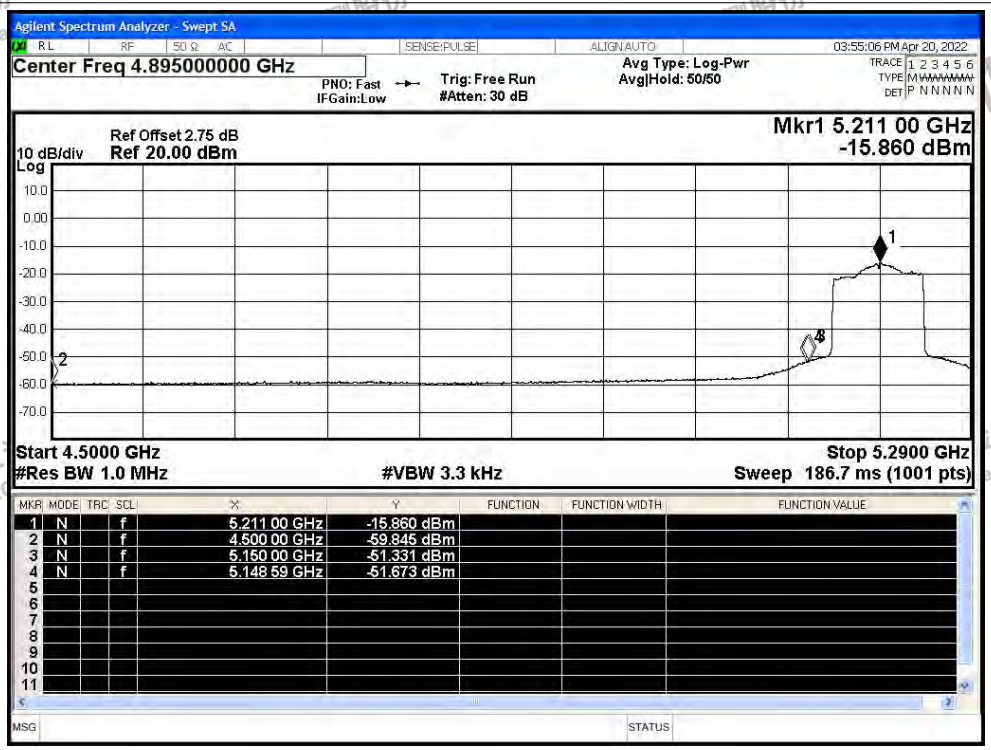

D.5 Frequency Stability

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5180	Ant0	5180.02	20000	3.86	25	Pass
NVNT	a	5200	Ant0	5200	0	0	25	Pass
NVNT	a	5240	Ant0	5240.02	20000	3.82	25	Pass
NVNT	n20	5180	Ant0	5180	0	0	25	Pass
NVNT	n20	5200	Ant0	5200.02	20000	3.85	25	Pass
NVNT	n20	5240	Ant0	5240	0	0	25	Pass
NVNT	n40	5190	Ant0	5189.96	-40000	-7.71	25	Pass
NVNT	n40	5230	Ant0	5230	0	0	25	Pass
NVNT	ac20	5180	Ant0	5180	0	0	25	Pass
NVNT	ac20	5200	Ant0	5199.98	-20000	-3.85	25	Pass
NVNT	ac20	5240	Ant0	5240	0	0	25	Pass
NVNT	ac40	5190	Ant0	5190	0	0	25	Pass
NVNT	ac40	5230	Ant0	5230	0	0	25	Pass
NVNT	ac80	5210	Ant0	5210	0	0	25	Pass

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5180	Ant1	5180	0	0	25	Pass
NVNT	a	5200	Ant1	5200	0	0	25	Pass
NVNT	a	5240	Ant1	5240	0	0	25	Pass
NVNT	n20	5180	Ant1	5180	0	0	25	Pass
NVNT	n20	5200	Ant1	5200	0	0	25	Pass
NVNT	n20	5240	Ant1	5240	0	0	25	Pass
NVNT	n40	5190	Ant1	5190	0	0	25	Pass
NVNT	n40	5230	Ant1	5230	0	0	25	Pass
NVNT	ac20	5180	Ant1	5179.98	-20000	-3.86	25	Pass
NVNT	ac20	5200	Ant1	5200	0	0	25	Pass
NVNT	ac20	5240	Ant1	5240.02	20000	3.82	25	Pass
NVNT	ac40	5190	Ant1	5190	0	0	25	Pass
NVNT	ac40	5230	Ant1	5230	0	0	25	Pass
NVNT	ac80	5210	Ant1	5210	0	0	25	Pass

D.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	Ant0	92.94	0.32	0.76
NVNT	a	5200	Ant0	92.87	0.32	0.76
NVNT	a	5240	Ant0	92.87	0.32	0.76
NVNT	n20	5180	Ant0	92.87	0.32	0.76
NVNT	n20	5200	Ant0	92.88	0.32	0.76
NVNT	n20	5240	Ant0	92.87	0.32	0.76
NVNT	n40	5190	Ant0	86.92	0.61	1.54
NVNT	n40	5230	Ant0	86.92	0.61	1.52
NVNT	ac20	5180	Ant0	92.88	0.32	0.76
NVNT	ac20	5200	Ant0	92.94	0.32	0.76
NVNT	ac20	5240	Ant0	92.87	0.32	0.76
NVNT	ac40	5190	Ant0	86.19	0.65	1.62
NVNT	ac40	5230	Ant0	86.67	0.62	1.54
NVNT	ac80	5210	Ant0	76.94	1.14	3.06

Test Graphs

Duty Cycle NVNT a 5180MHz Ant0

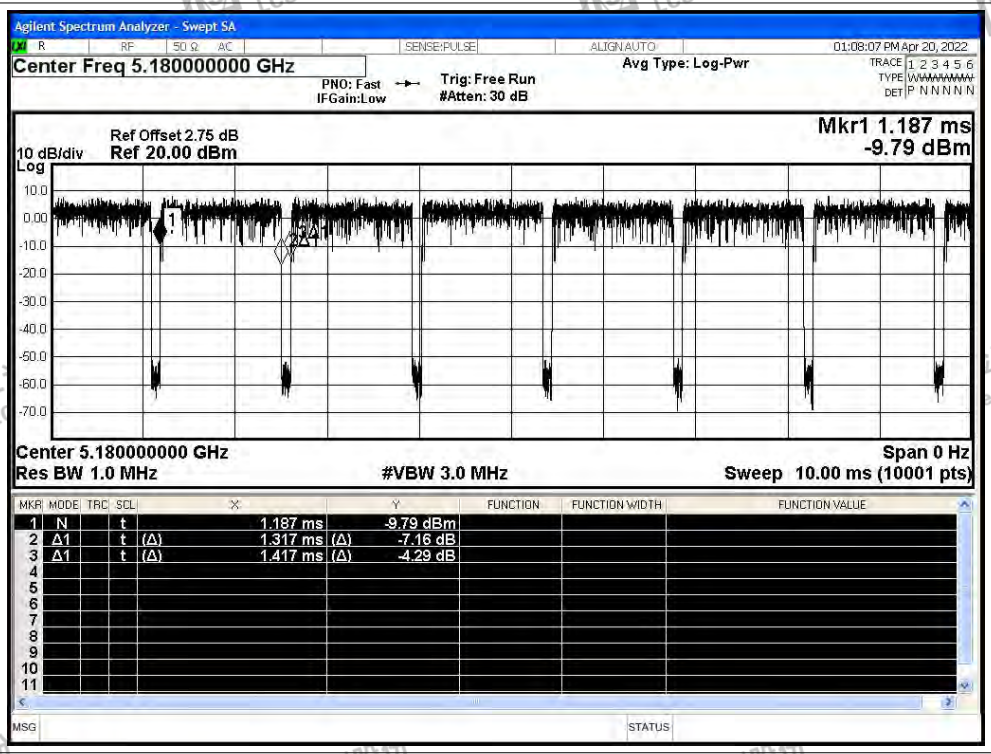

Duty Cycle NVNT a 5200MHz Ant0

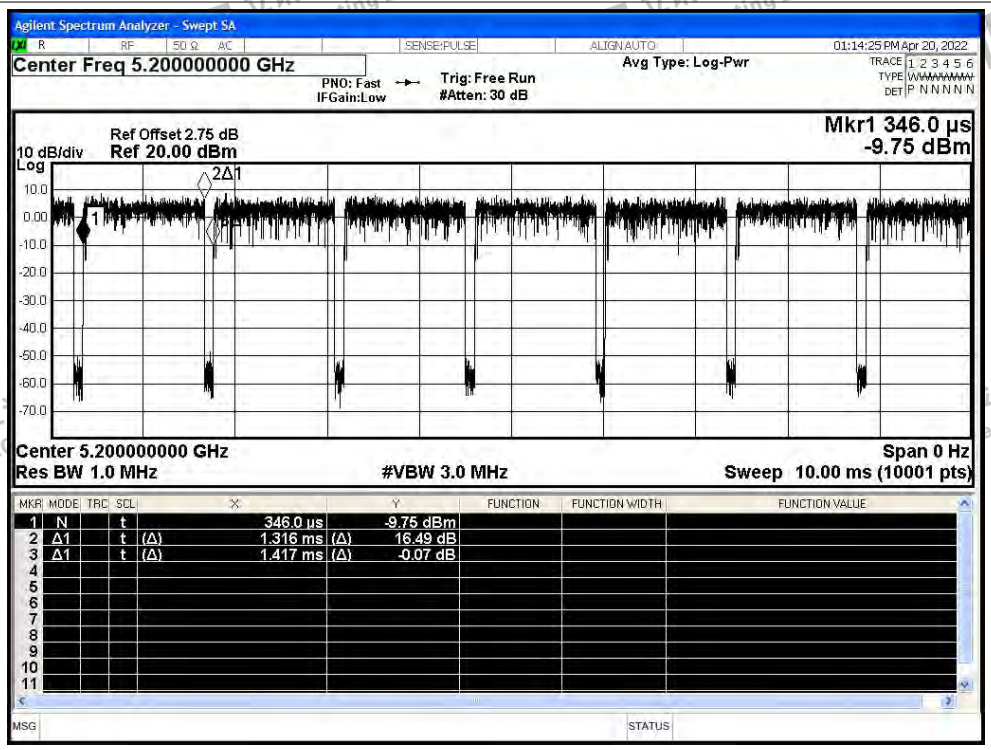

Duty Cycle NVNT a 5240MHz Ant0

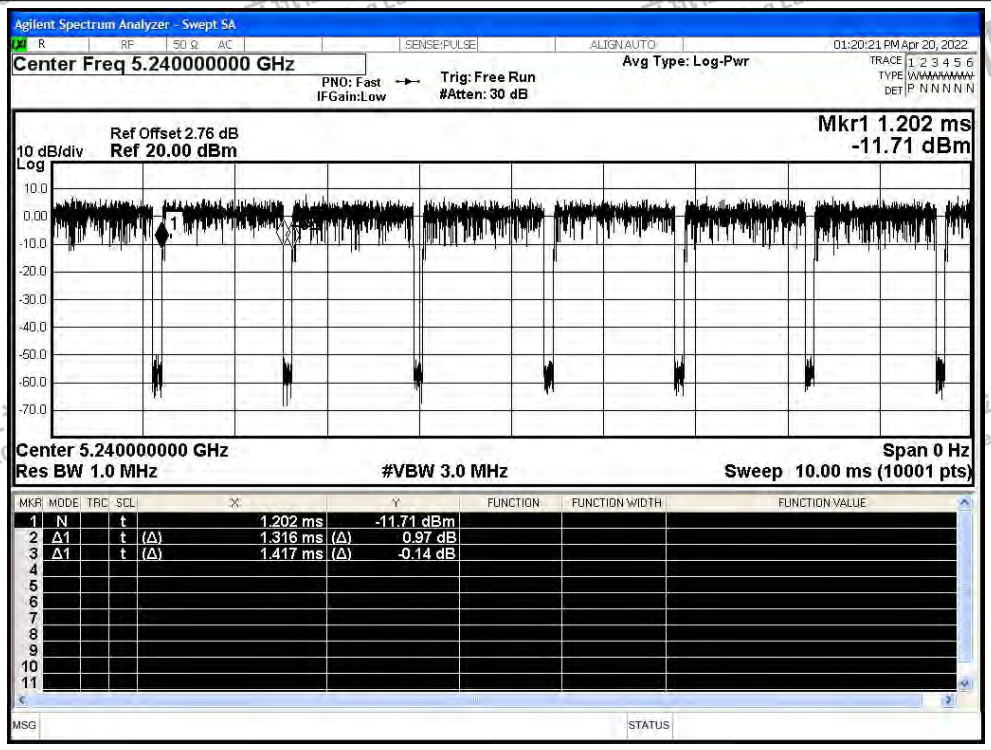

Duty Cycle NVNT n20 5180MHz Ant0

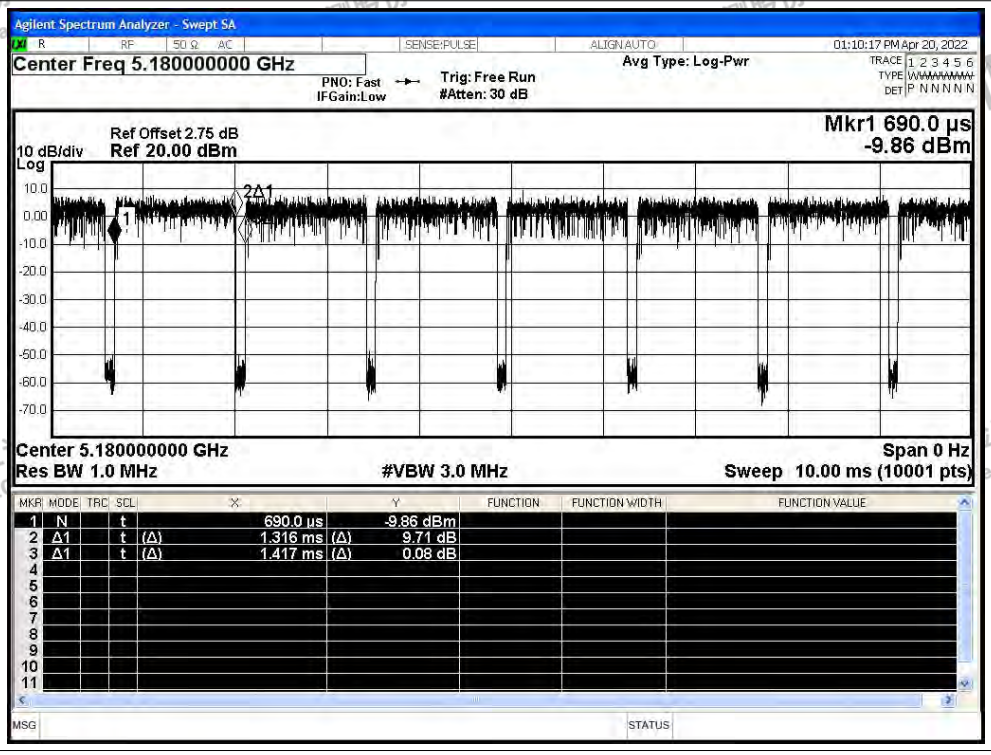

Duty Cycle NVNT n20 5200MHz Ant0

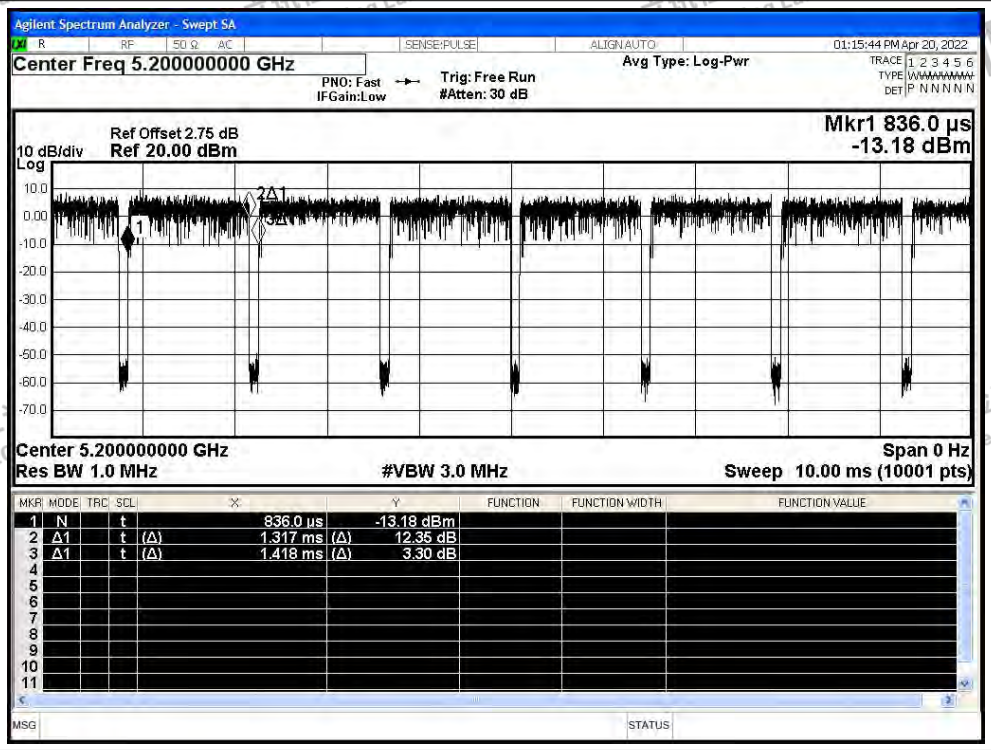

Duty Cycle NVNT n20 5240MHz Ant0

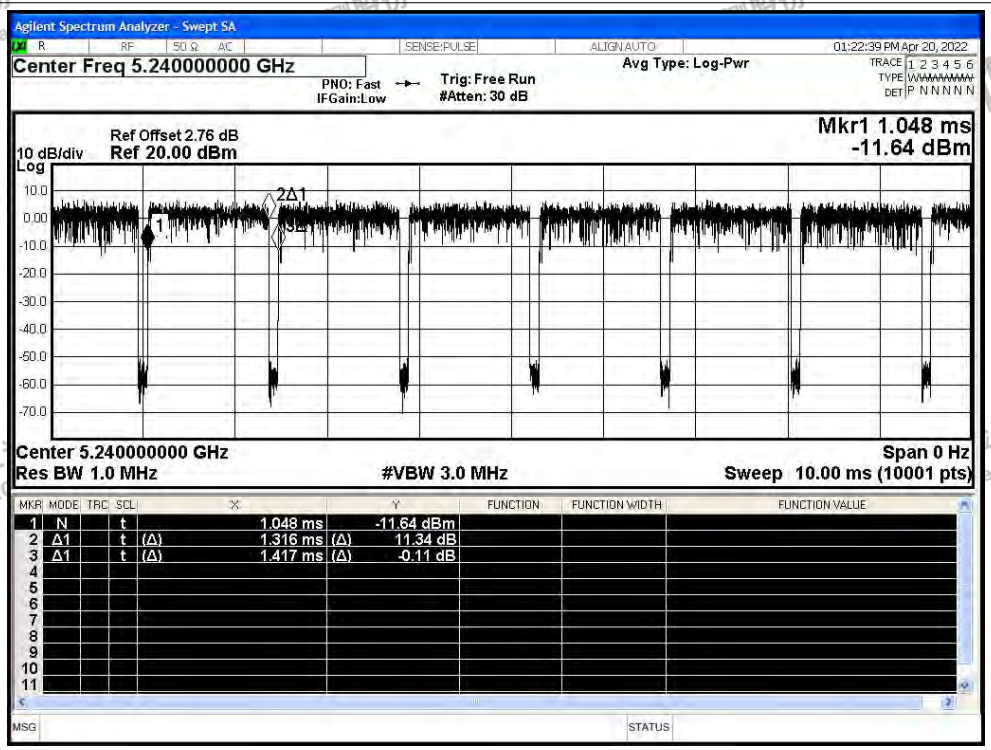

Duty Cycle NVNT n40 5190MHz Ant0

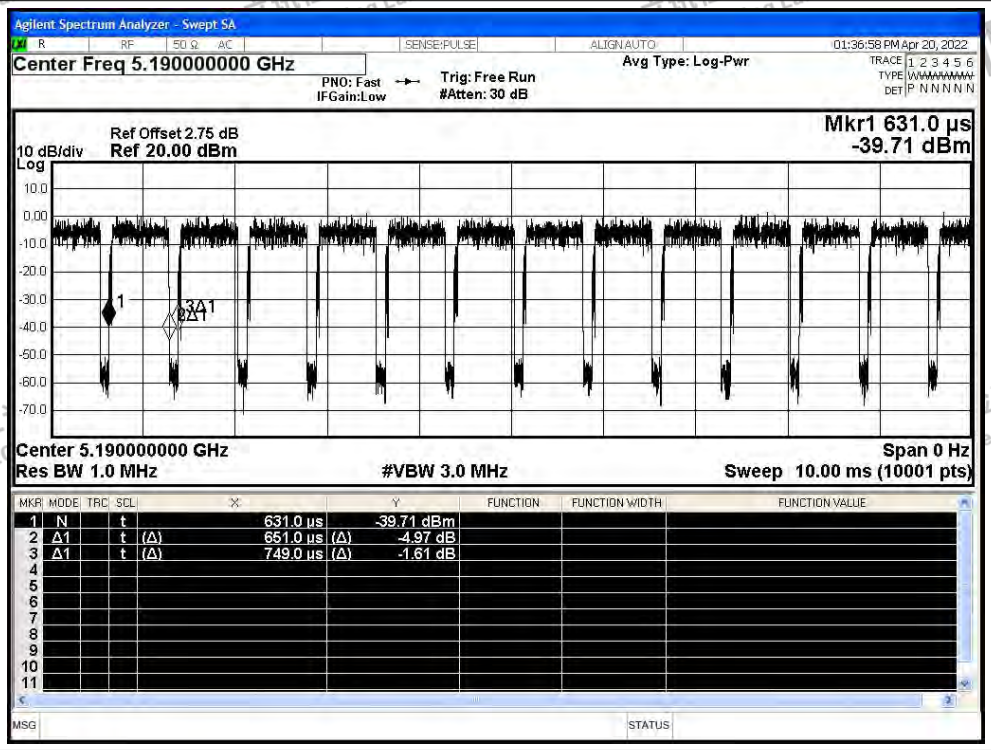

Duty Cycle NVNT n40 5230MHz Ant0

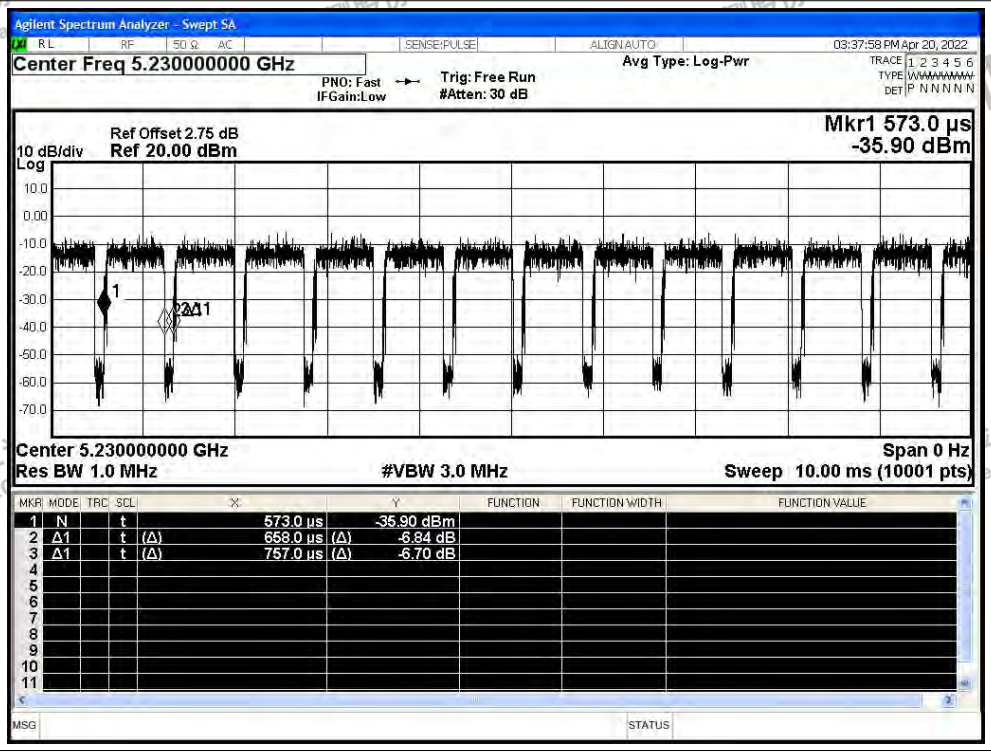

Duty Cycle NVNT ac20 5180MHz Ant0

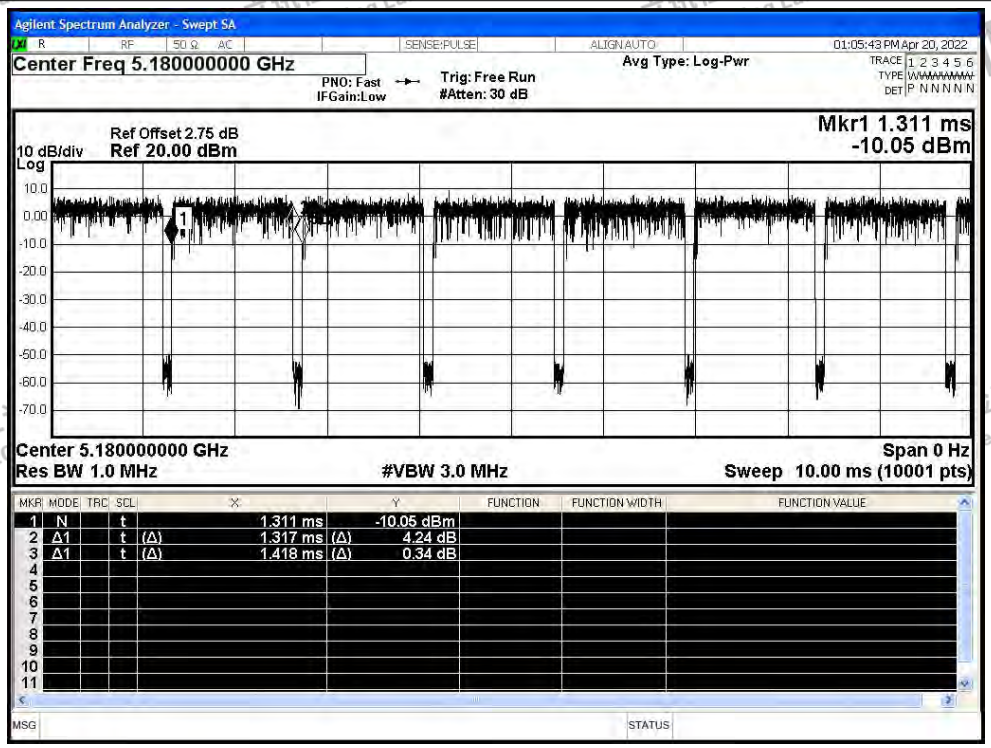

Duty Cycle NVNT ac20 5200MHz Ant0

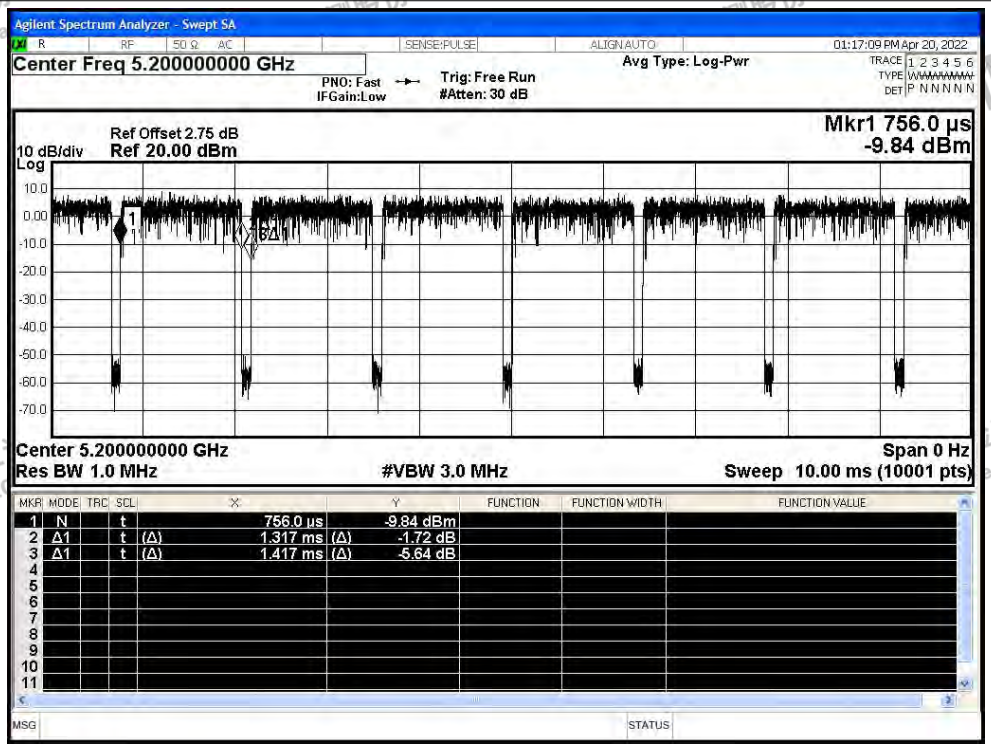

Duty Cycle NVNT ac20 5240MHz Ant0

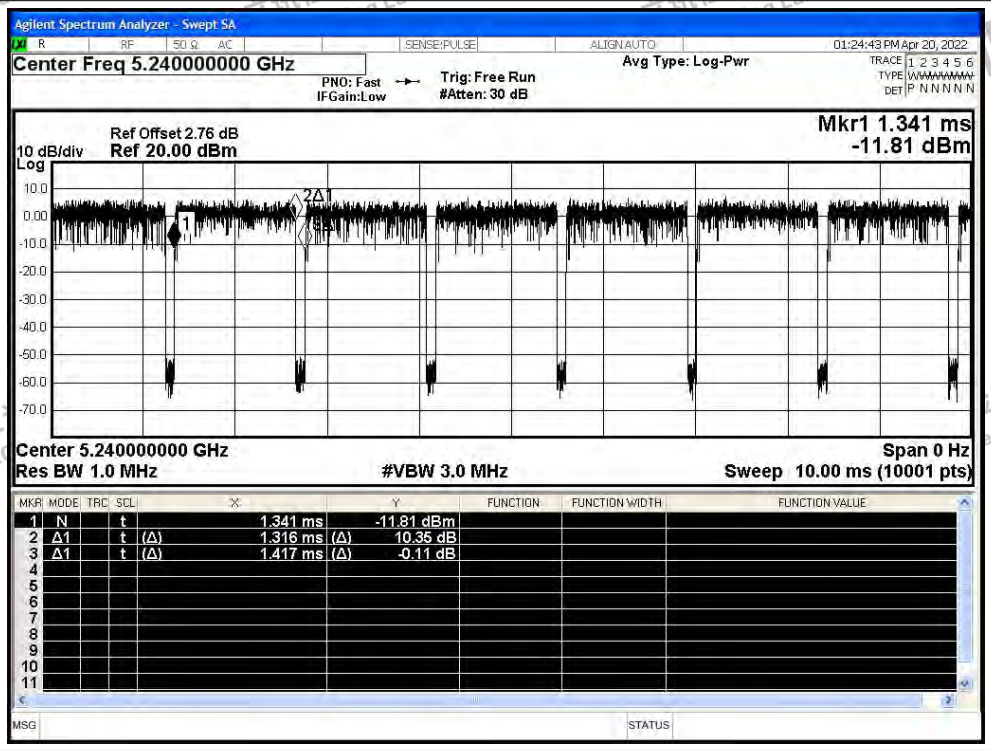

Duty Cycle NVNT ac40 5190MHz Ant0

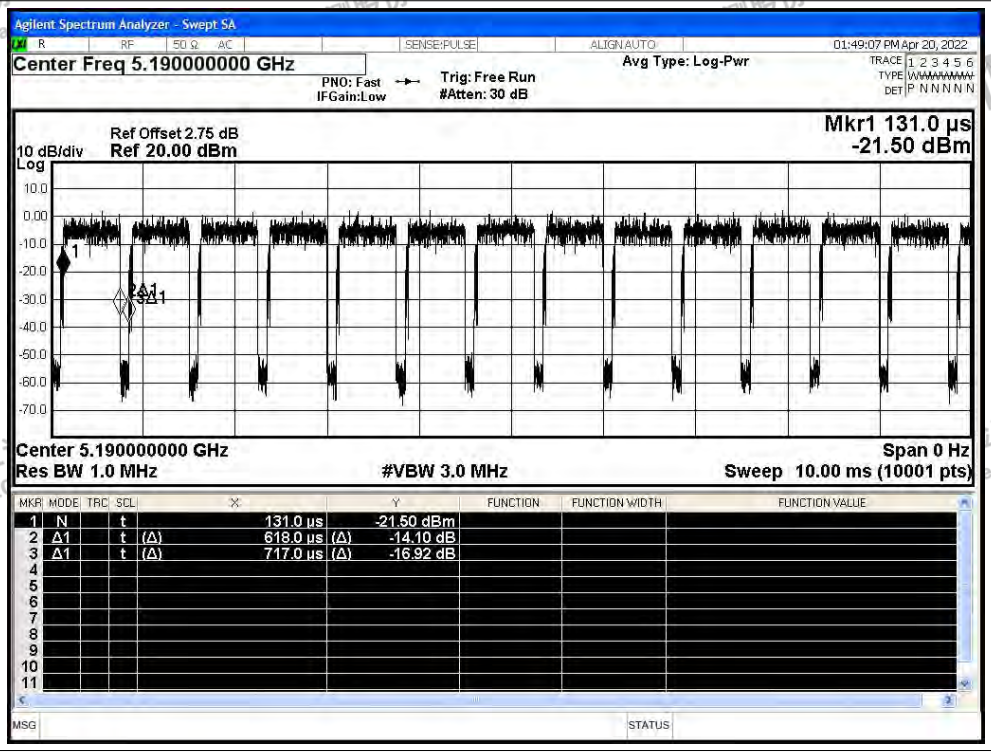

Duty Cycle NVNT ac40 5230MHz Ant0

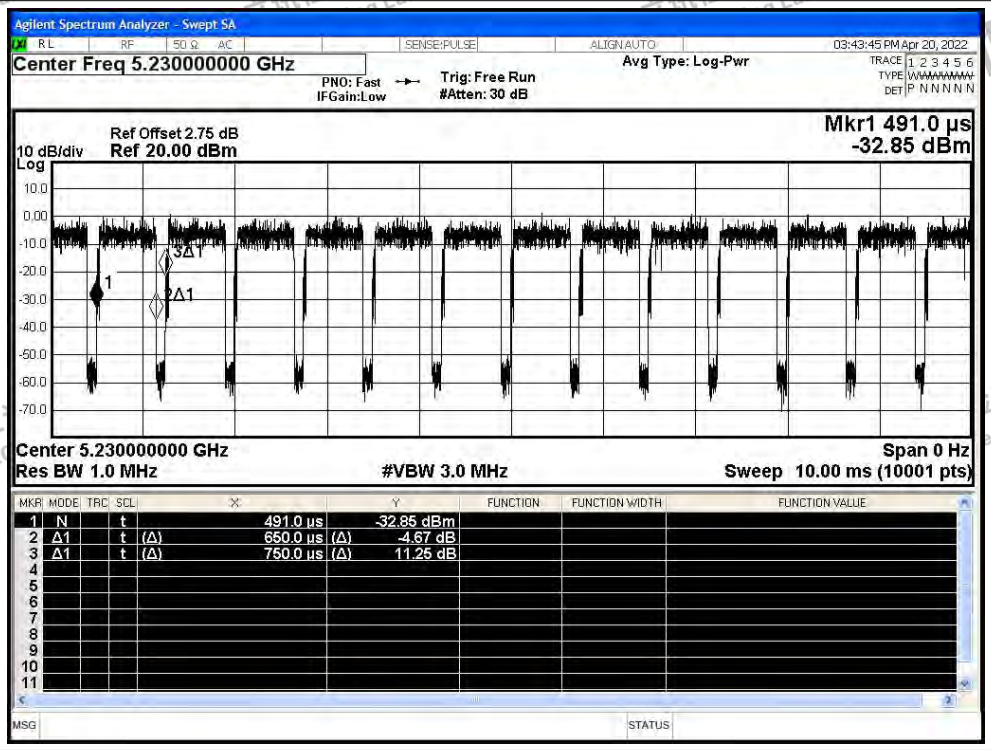

Duty Cycle NVNT ac80 5210MHz Ant0

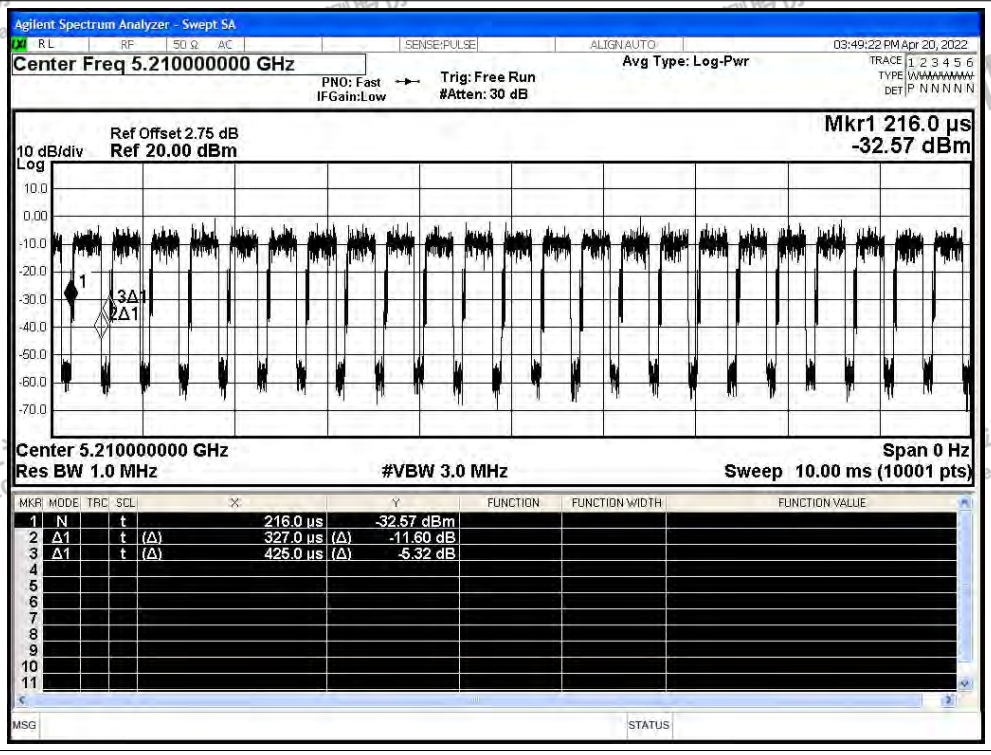

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5180	Ant1	92.88	0.32	0.76
NVNT	a	5200	Ant1	92.87	0.32	0.76
NVNT	a	5240	Ant1	92.88	0.32	0.76
NVNT	n20	5180	Ant1	92.87	0.32	0.76
NVNT	n20	5200	Ant1	92.94	0.32	0.76
NVNT	n20	5240	Ant1	92.88	0.32	0.76
NVNT	n40	5190	Ant1	86.94	0.61	1.52
NVNT	n40	5230	Ant1	86.94	0.61	1.52
NVNT	ac20	5180	Ant1	92.88	0.32	0.76
NVNT	ac20	5200	Ant1	92.94	0.32	0.76
NVNT	ac20	5240	Ant1	92.87	0.32	0.76
NVNT	ac40	5190	Ant1	86.92	0.61	1.52
NVNT	ac40	5230	Ant1	86.79	0.62	1.52
NVNT	ac80	5210	Ant1	76.76	1.15	3.06

Test Graphs

Duty Cycle NVNT a 5180MHz Ant1

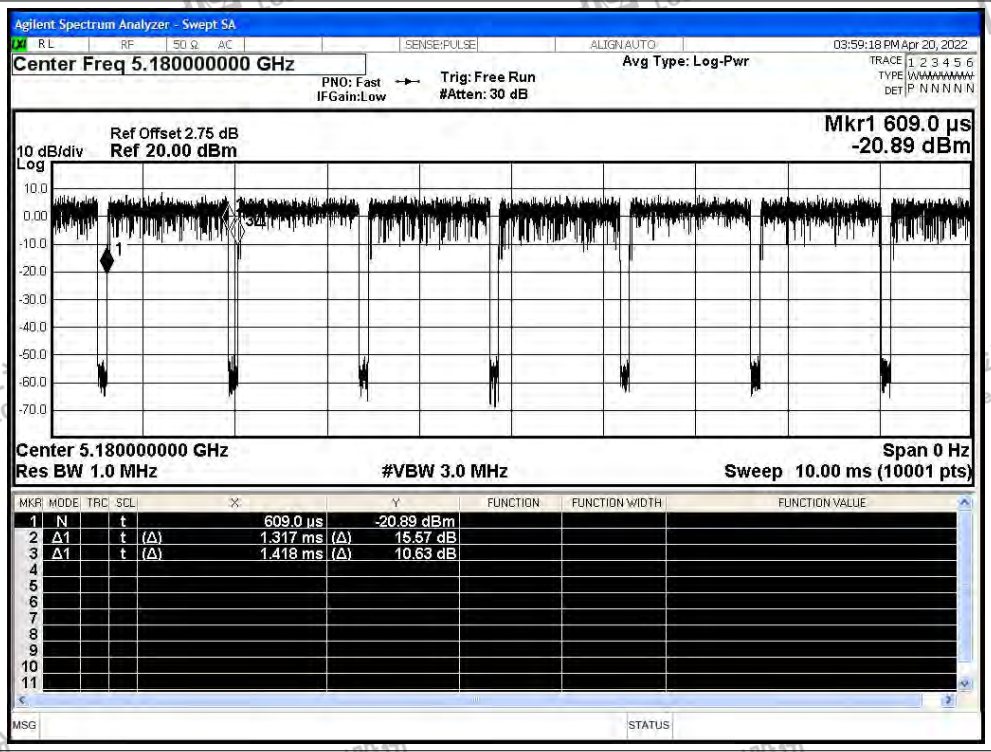

Duty Cycle NVNT a 5200MHz Ant1

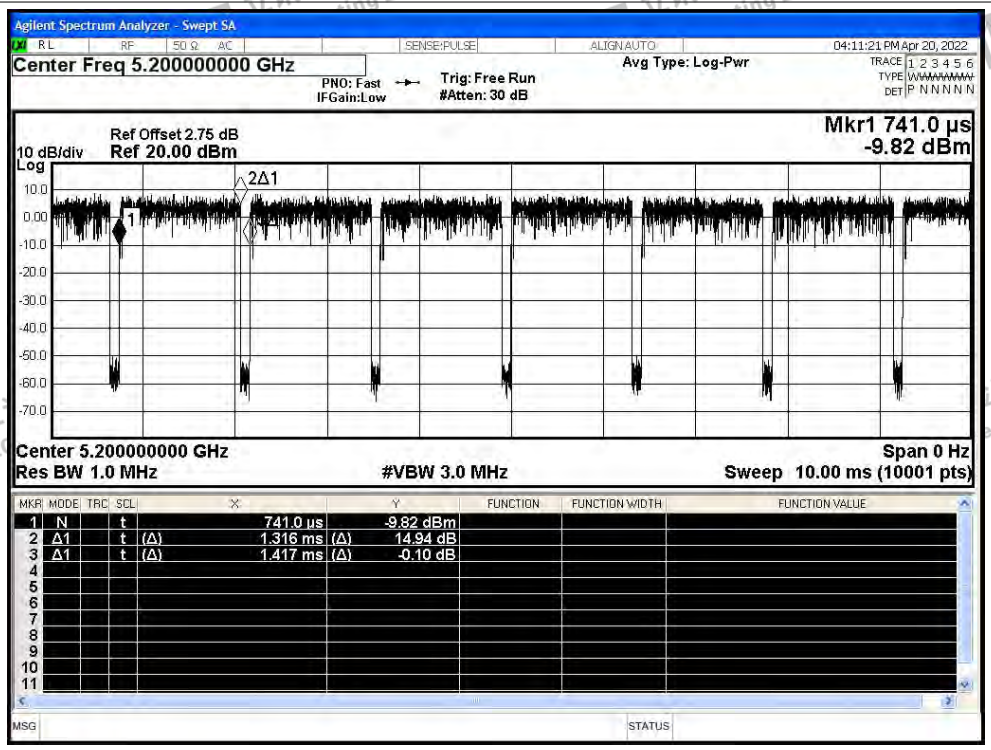

Duty Cycle NVNT a 5240MHz Ant1

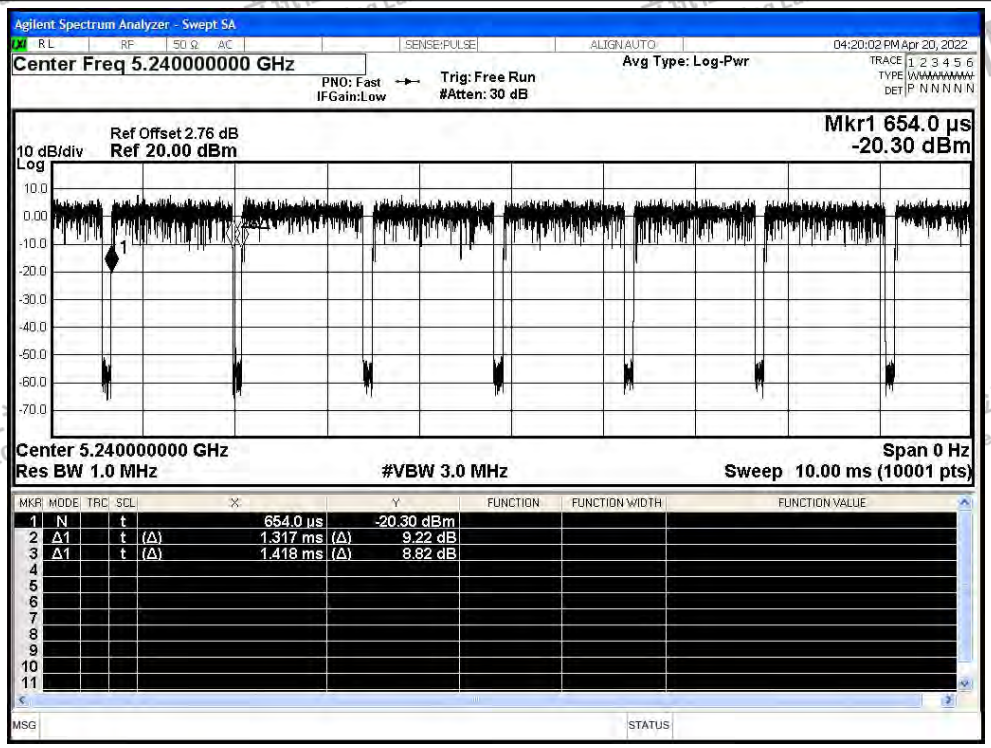

Duty Cycle NVNT n20 5180MHz Ant1

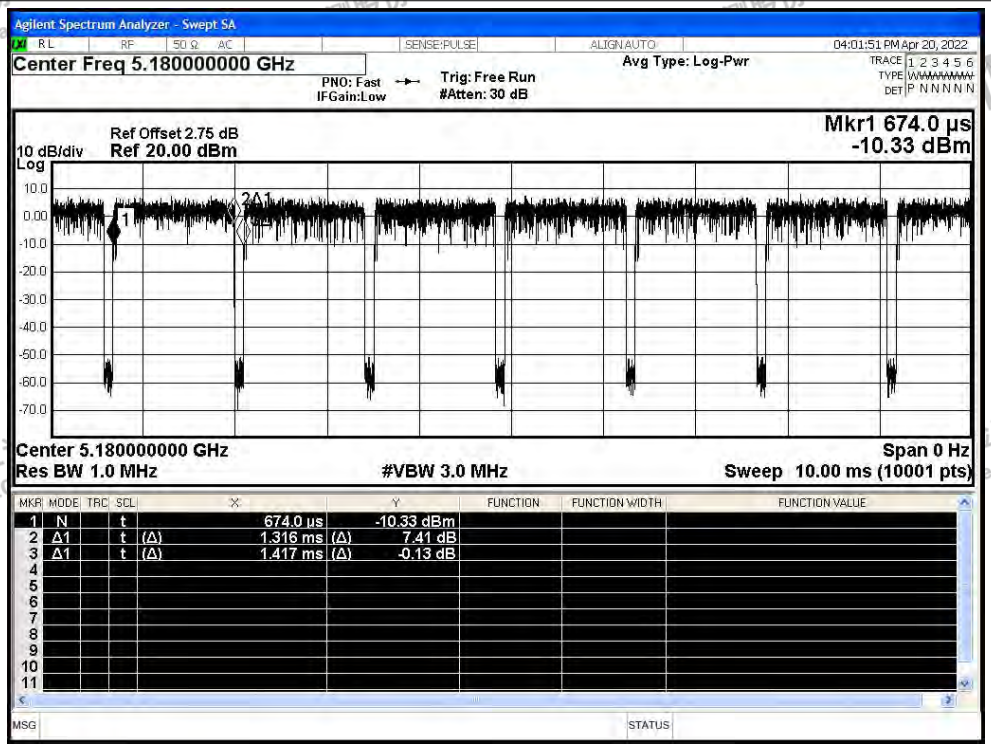

Duty Cycle NVNT n20 5200MHz Ant1

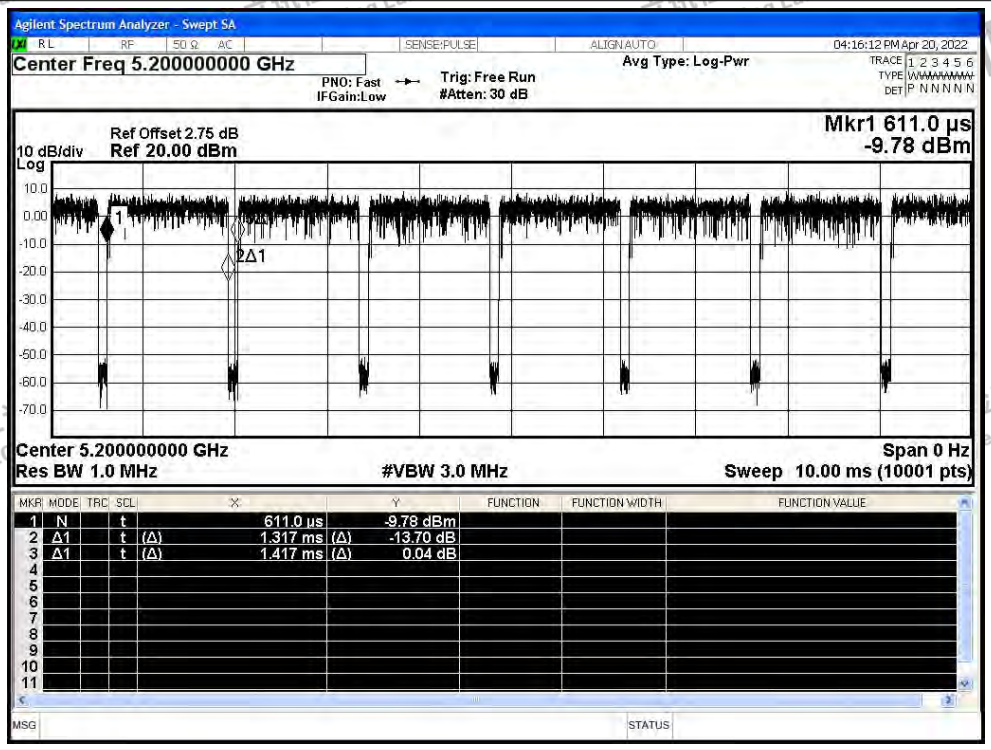

Duty Cycle NVNT n20 5240MHz Ant1

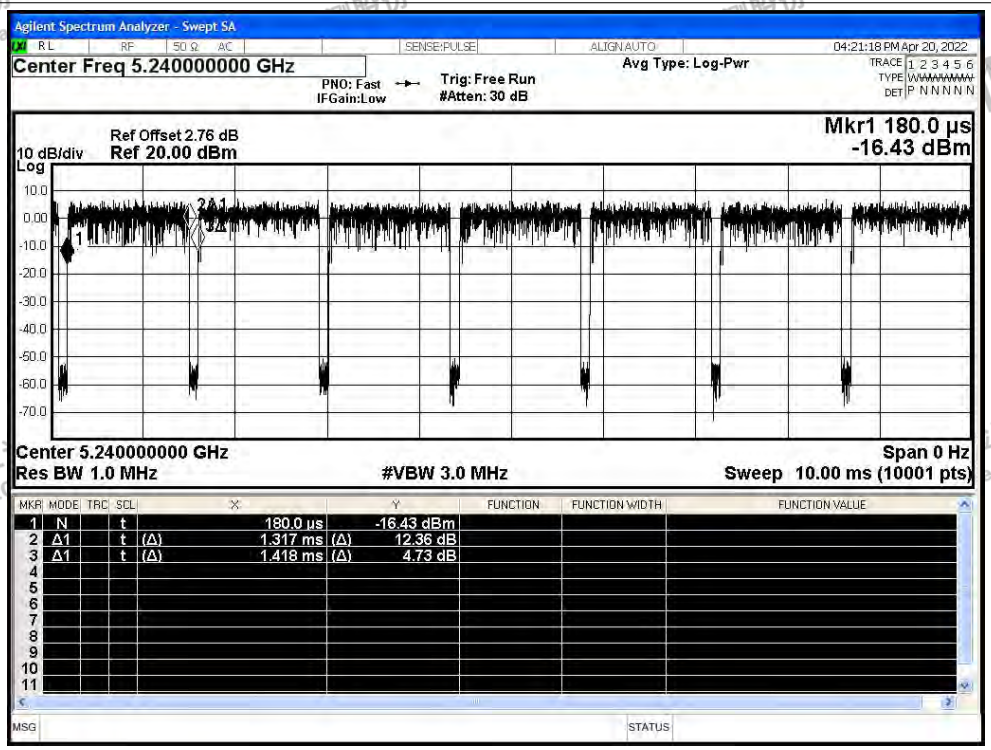

Duty Cycle NVNT n40 5190MHz Ant1

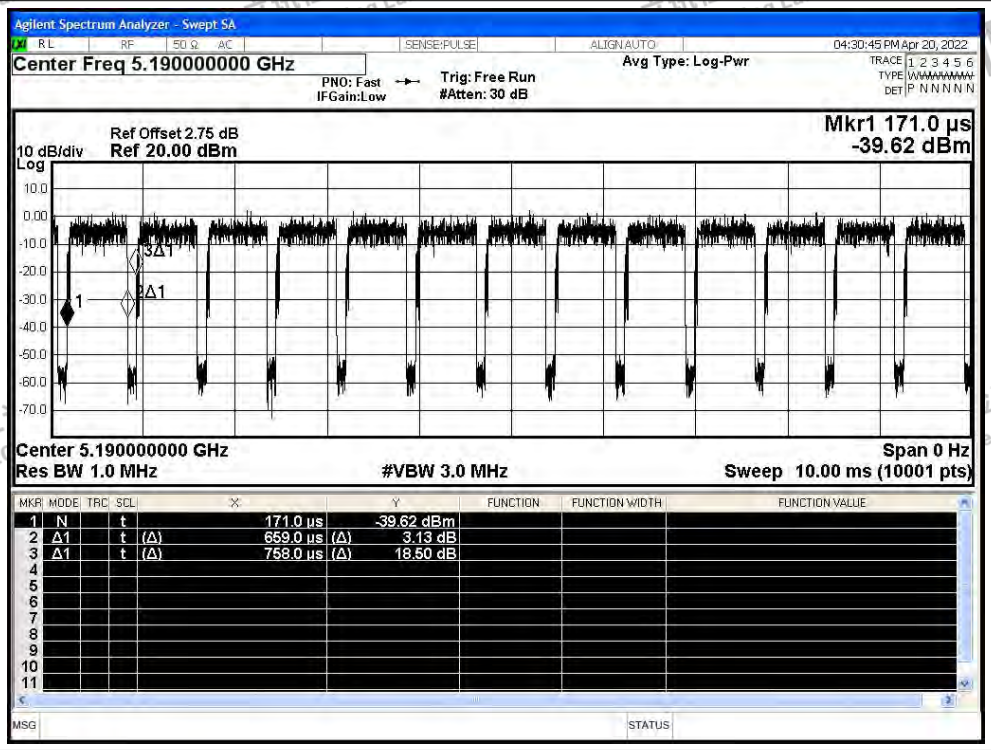

Duty Cycle NVNT n40 5230MHz Ant1

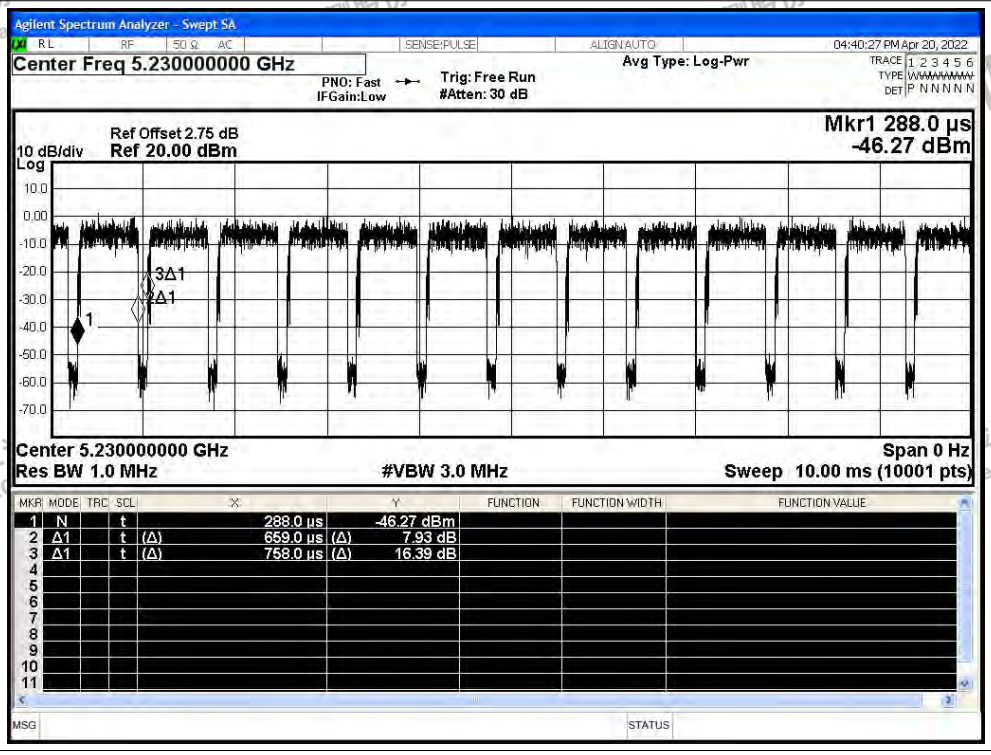

Duty Cycle NVNT ac20 5180MHz Ant1

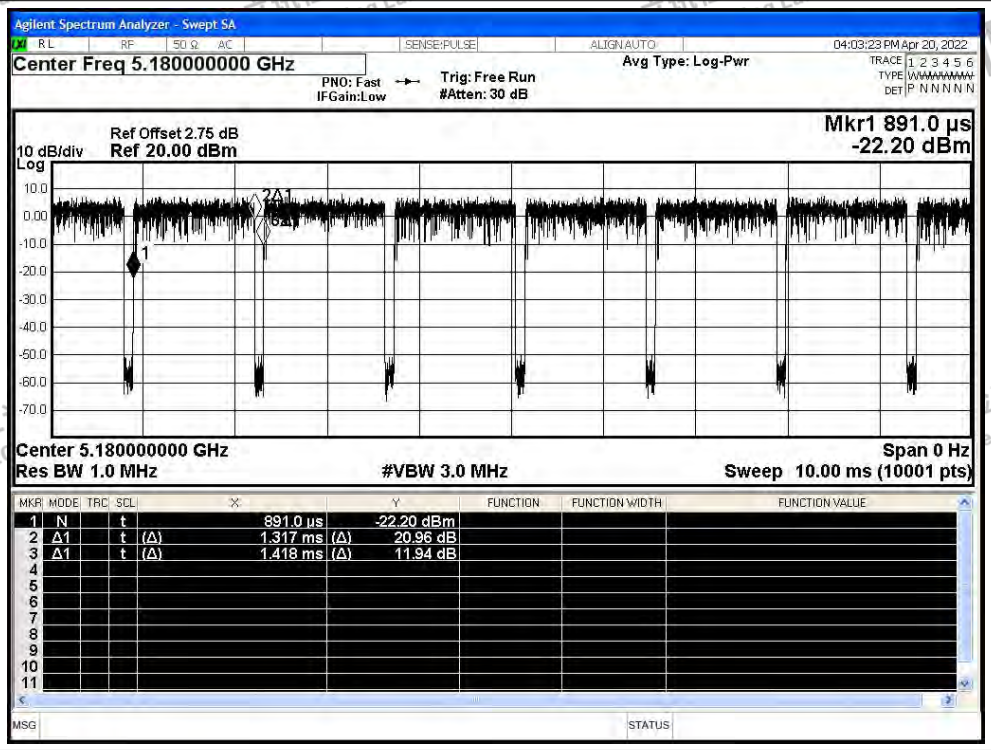

Duty Cycle NVNT ac20 5200MHz Ant1

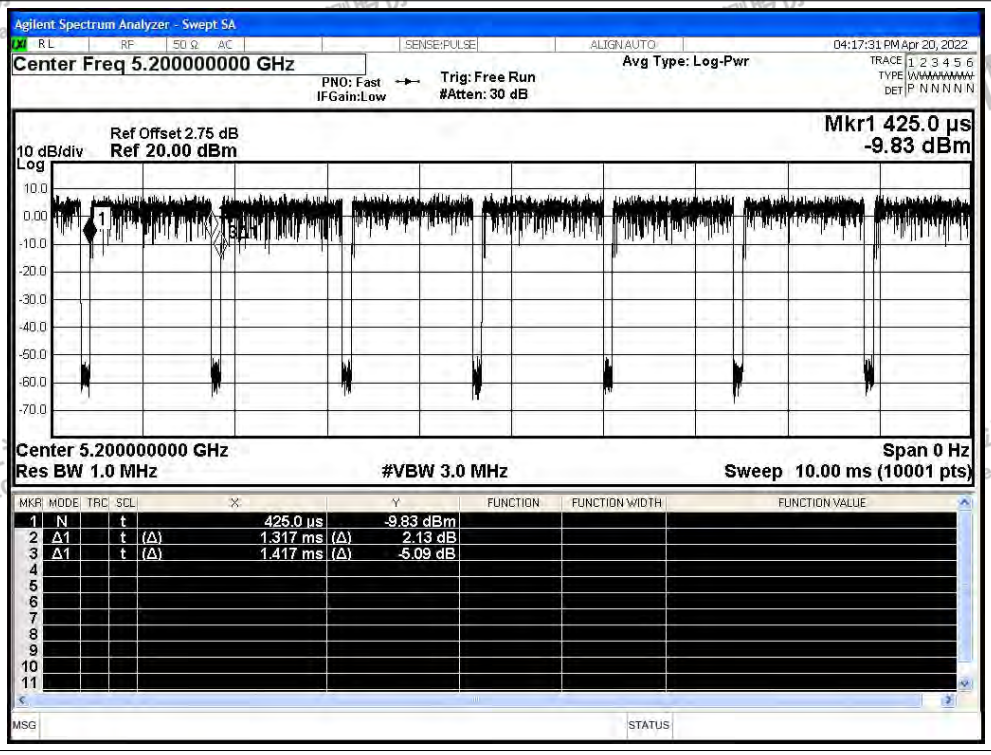

Duty Cycle NVNT ac20 5240MHz Ant1

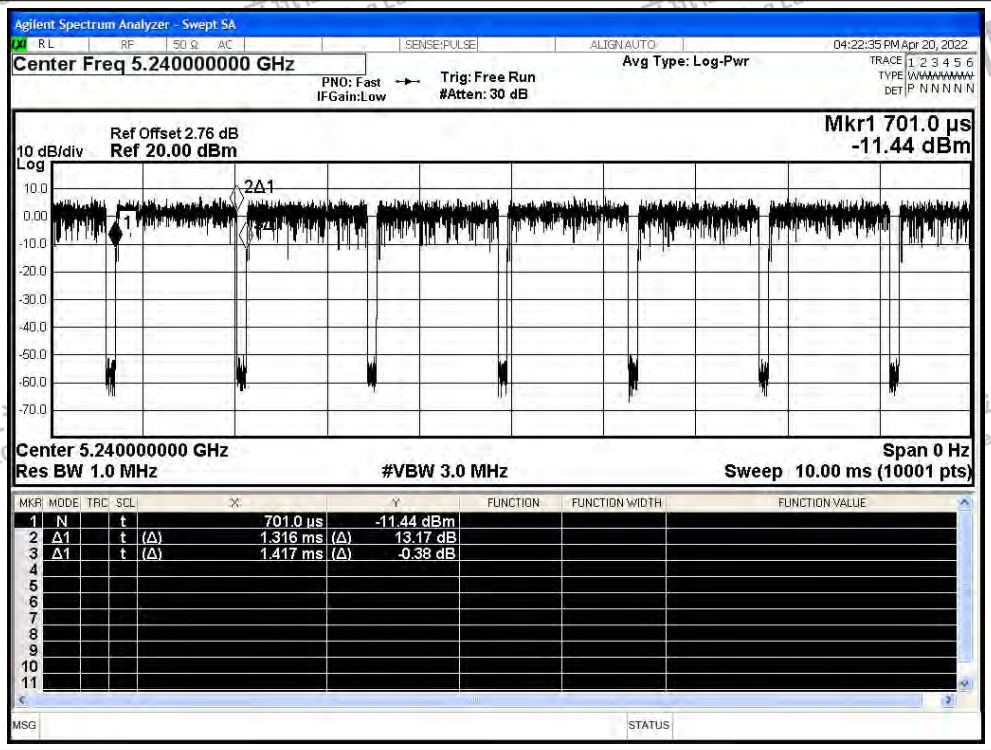

Duty Cycle NVNT ac40 5190MHz Ant1

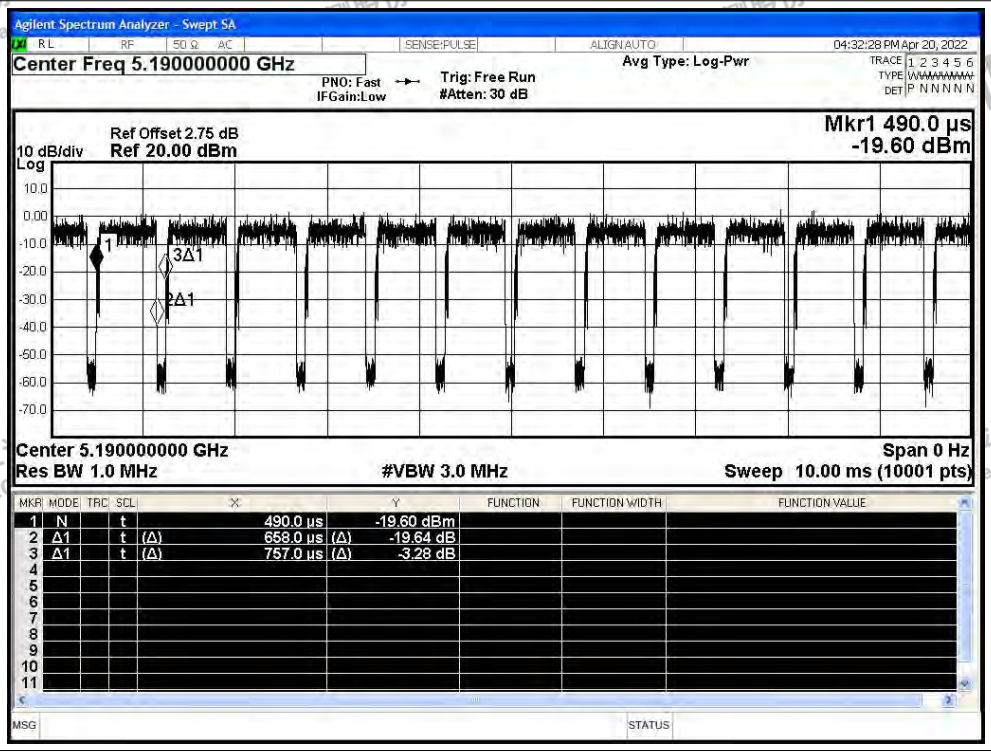

Duty Cycle NVNT ac40 5230MHz Ant1

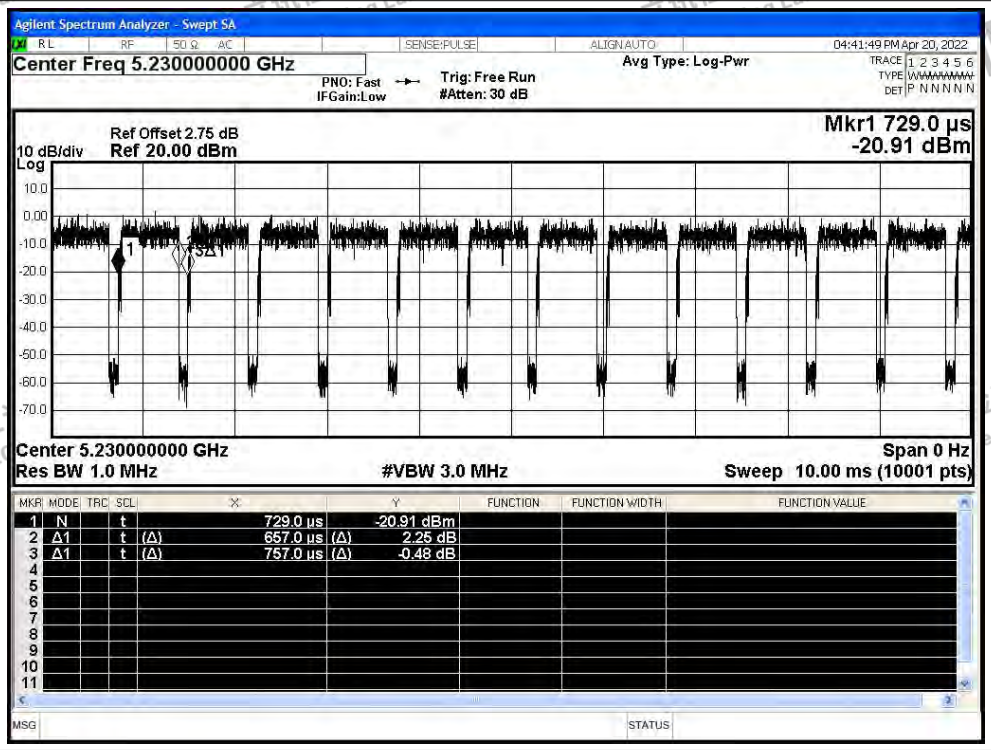
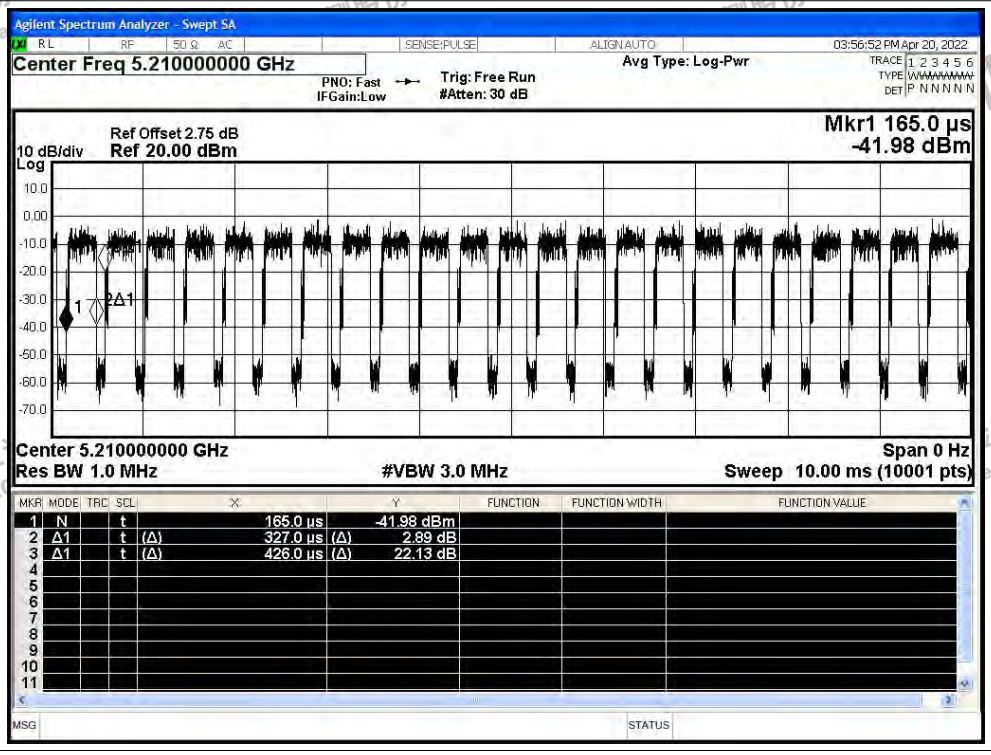
Duty Cycle NVNT ac80 5210MHz Ant1