Duty Cycle NVNT n40 5755MHz Ant1

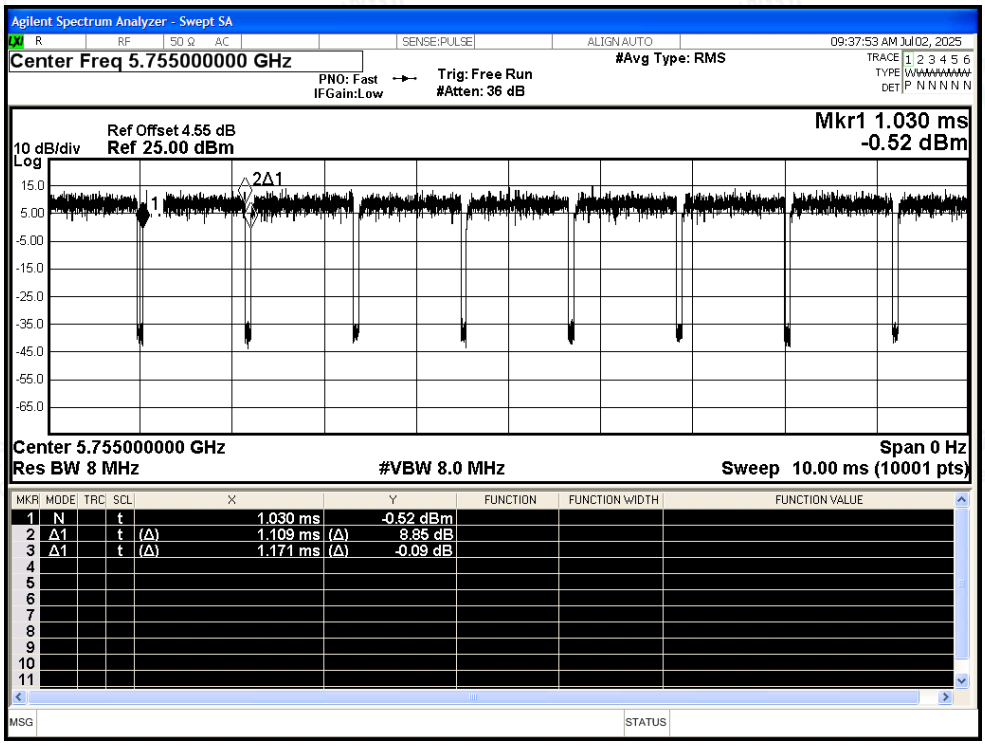

Duty Cycle NVNT n40 5795MHz Ant1

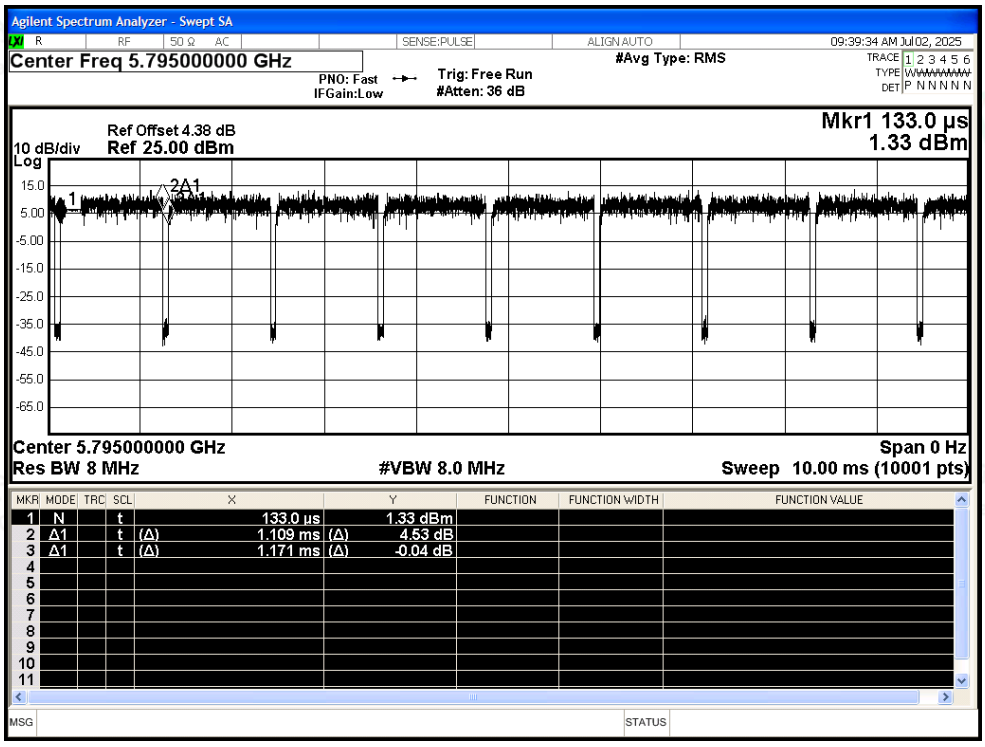

Duty Cycle NVNT ac20 5745MHz Ant1

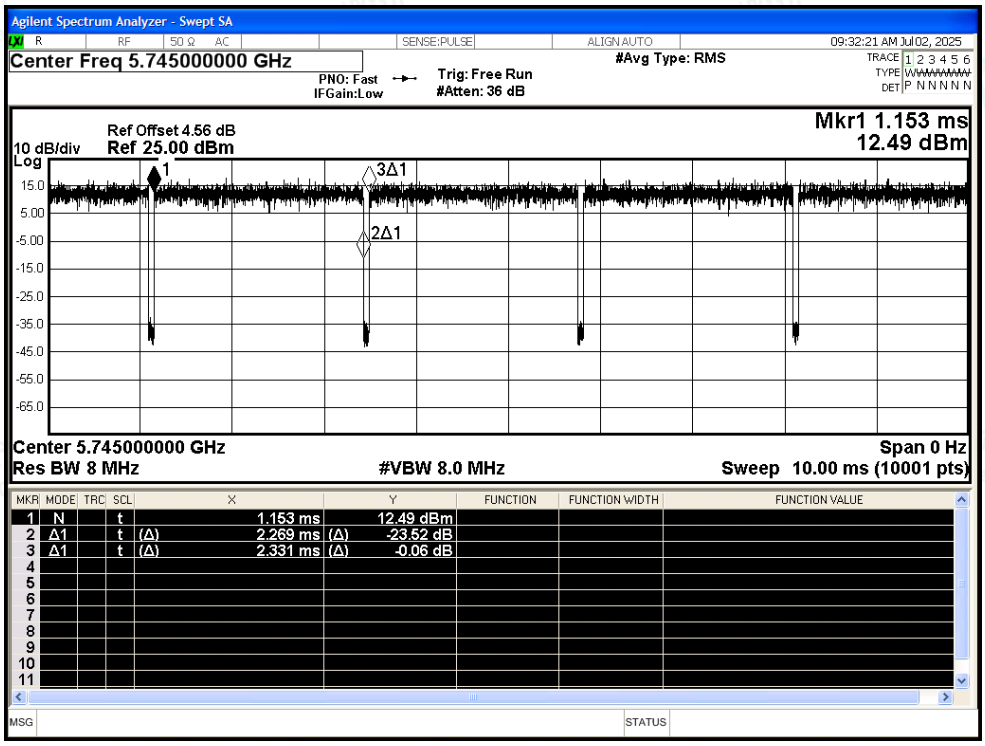

Duty Cycle NVNT ac20 5785MHz Ant1

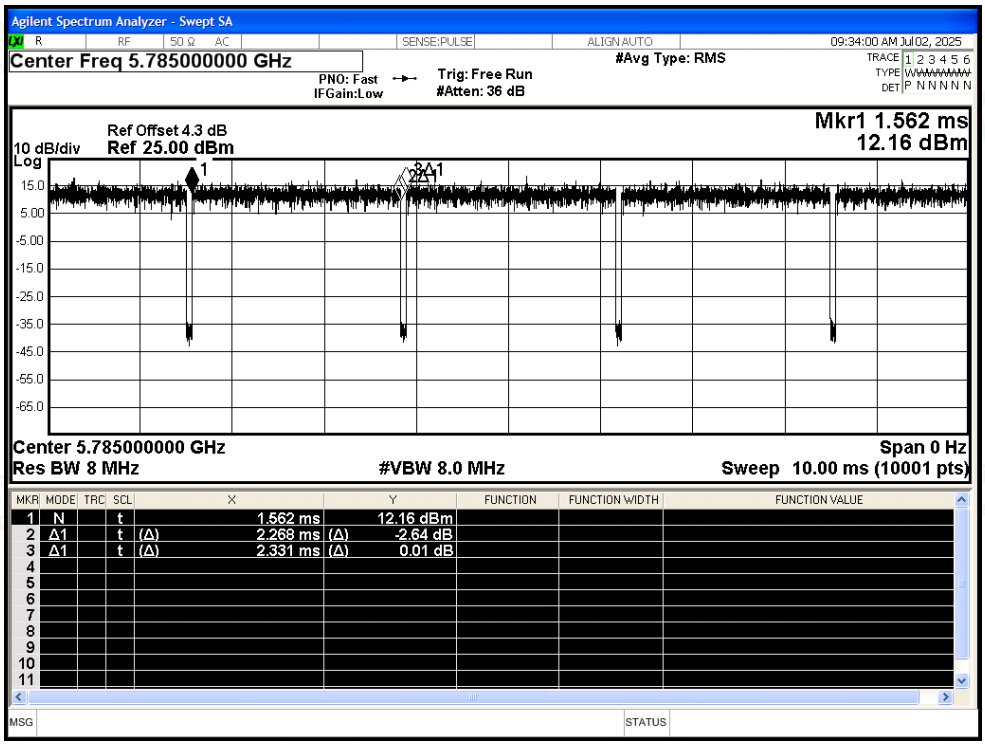

Duty Cycle NVNT ac20 5825MHz Ant1

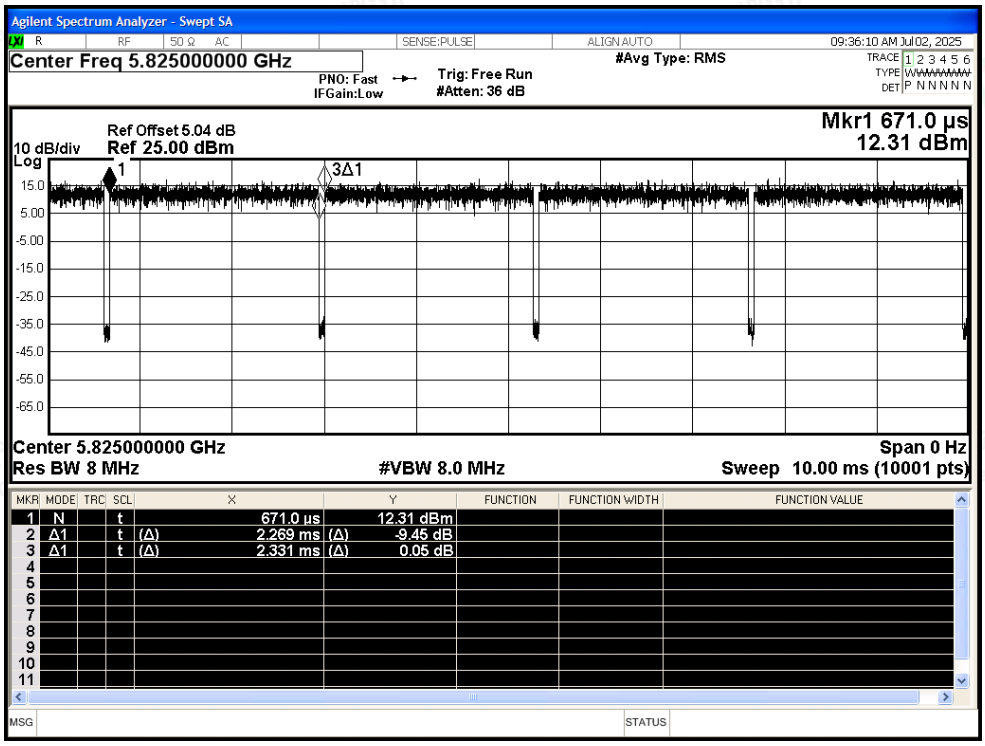

Duty Cycle NVNT ac40 5755MHz Ant1

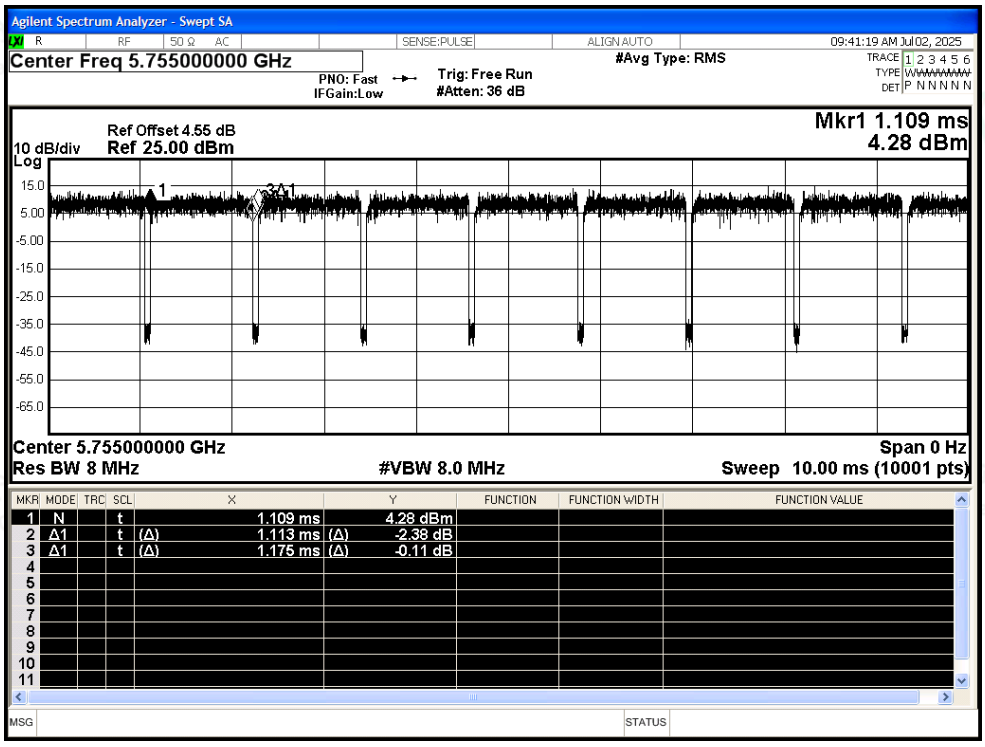

Duty Cycle NVNT ac40 5795MHz Ant1

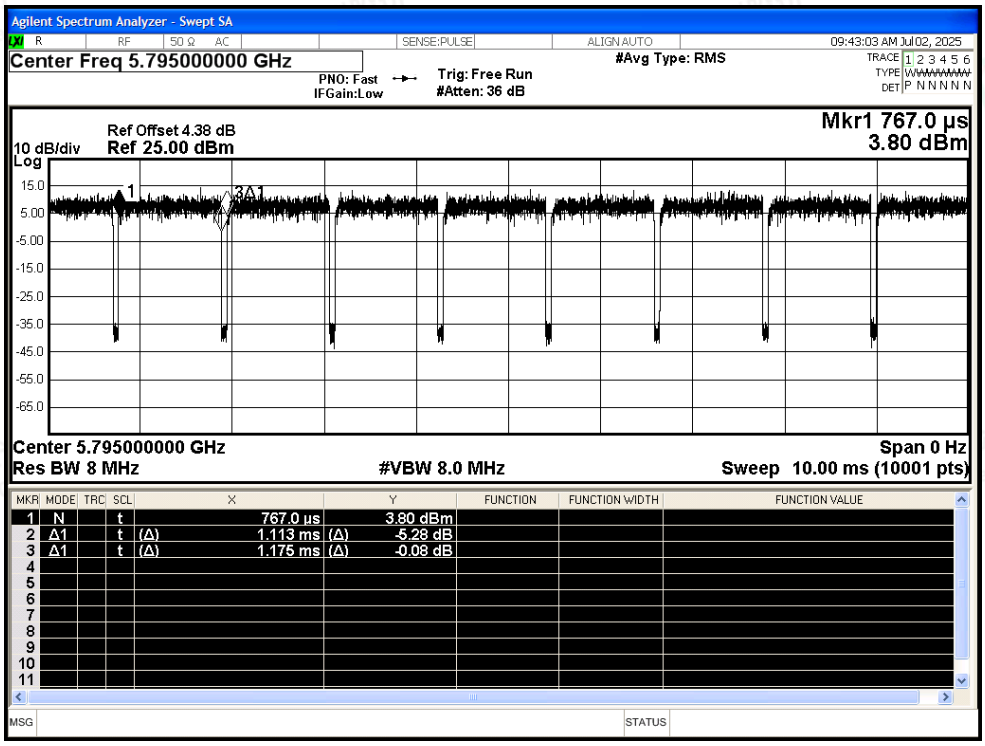

Duty Cycle NVNT ac80 5775MHz Ant1

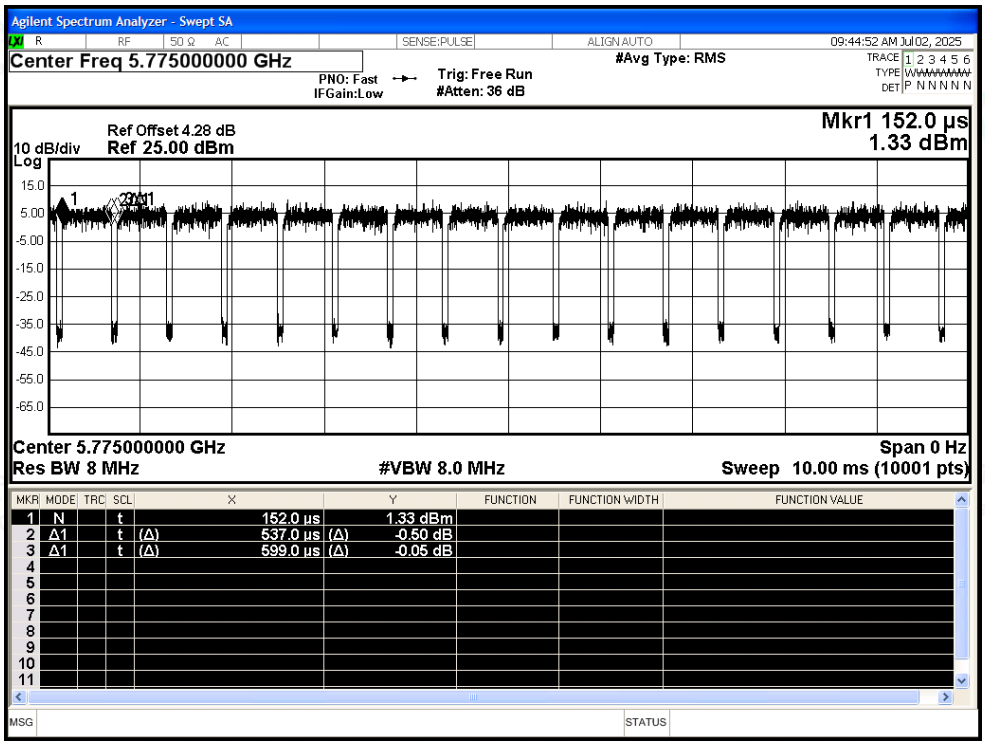

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant2	94.56	0.24	0.91
NVNT	a	5785	Ant2	94.56	0.24	0.91
NVNT	a	5825	Ant2	94.65	0.24	0.91
NVNT	n20	5745	Ant2	93.77	0.28	1.07
NVNT	n20	5785	Ant2	93.67	0.28	1.07
NVNT	n20	5825	Ant2	93.67	0.28	1.07
NVNT	n40	5755	Ant2	94.71	0.24	0.9
NVNT	n40	5795	Ant2	94.71	0.24	0.9
NVNT	ac20	5745	Ant2	97.34	0.12	0.44
NVNT	ac20	5785	Ant2	97.34	0.12	0.44
NVNT	ac20	5825	Ant2	97.34	0.12	0.44
NVNT	ac40	5755	Ant2	94.72	0.24	0.9
NVNT	ac40	5795	Ant2	94.72	0.24	0.9
NVNT	ac80	5775	Ant2	89.65	0.47	1.86

Test Graphs

Duty Cycle NVNT a 5745MHz Ant2

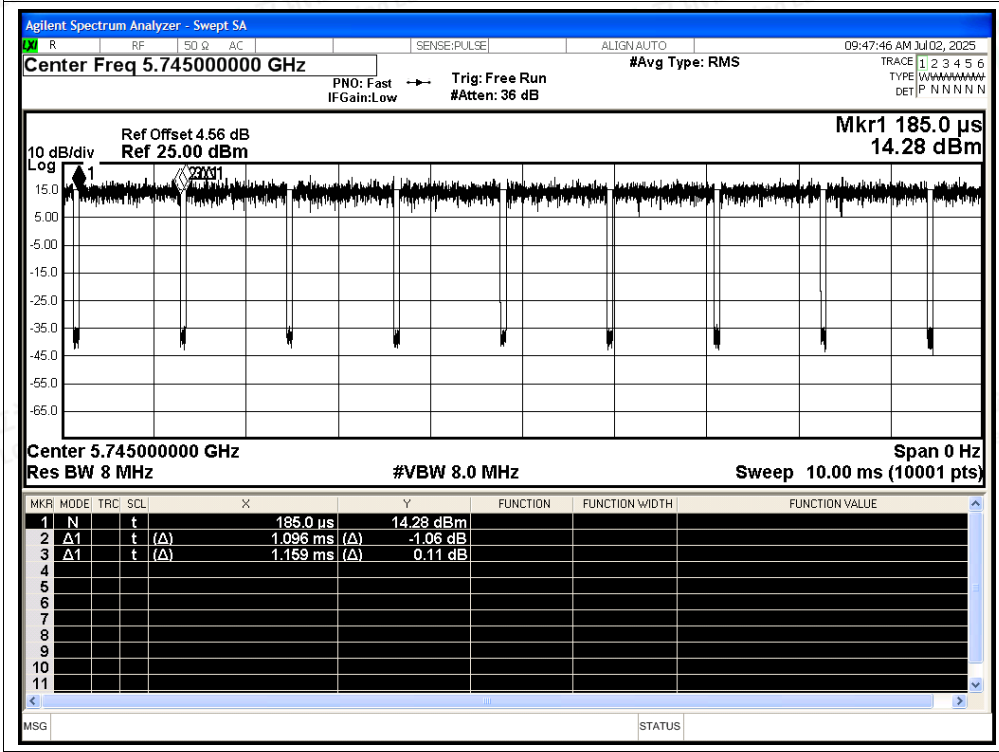

Duty Cycle NVNT a 5785MHz Ant2

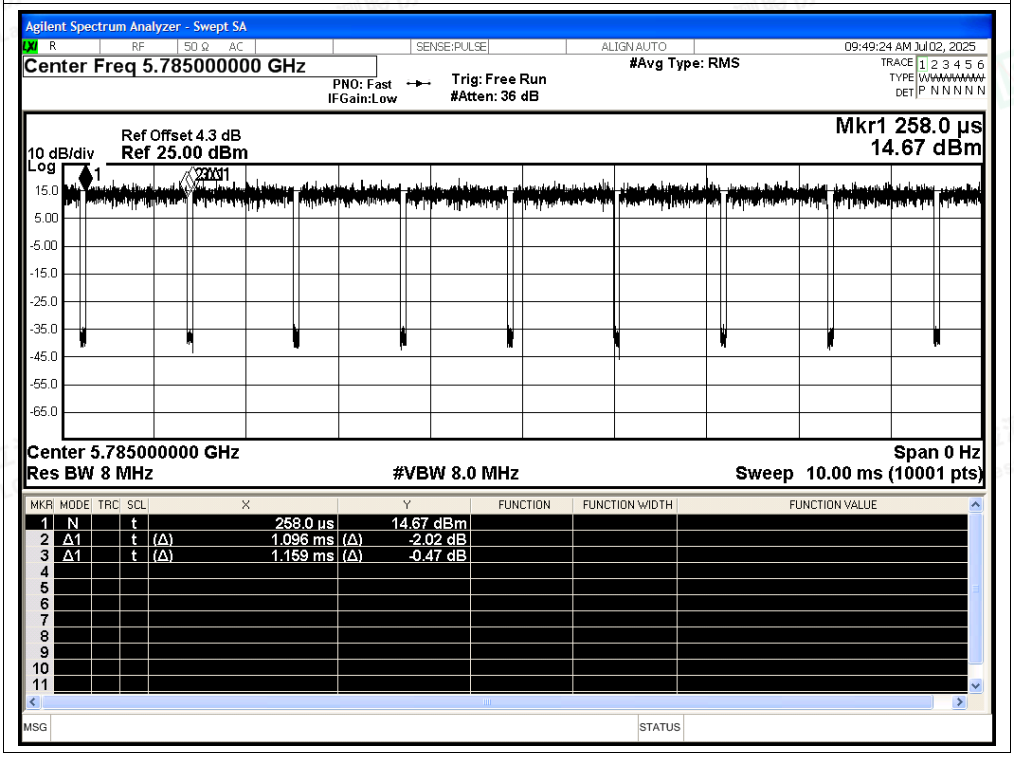

Duty Cycle NVNT a 5825MHz Ant2

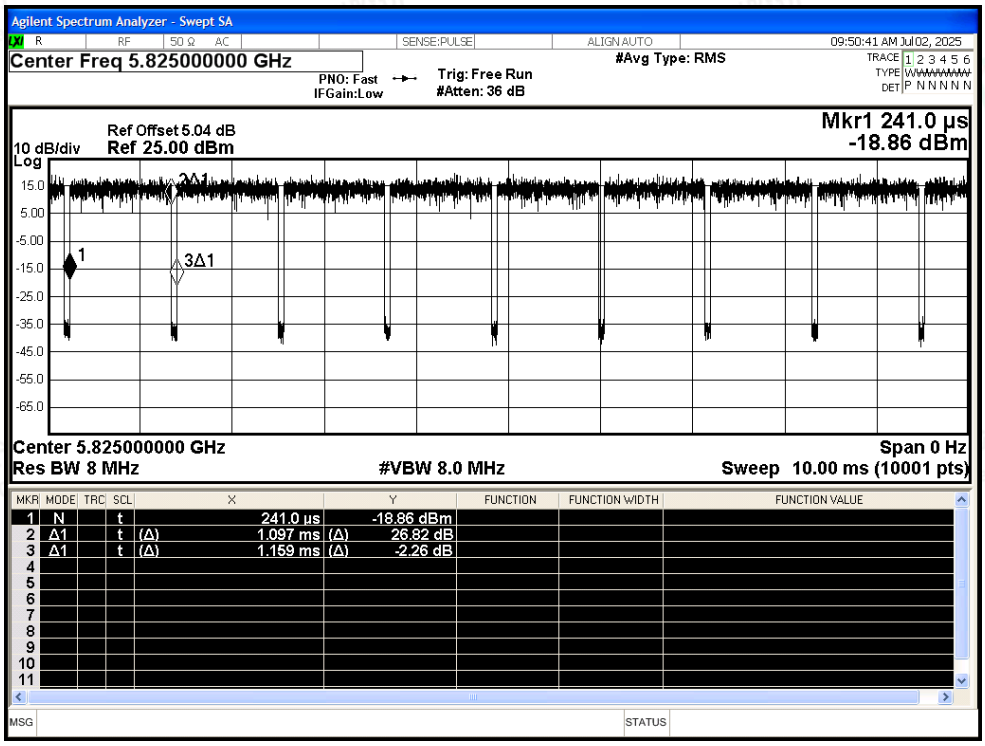

Duty Cycle NVNT n20 5745MHz Ant2

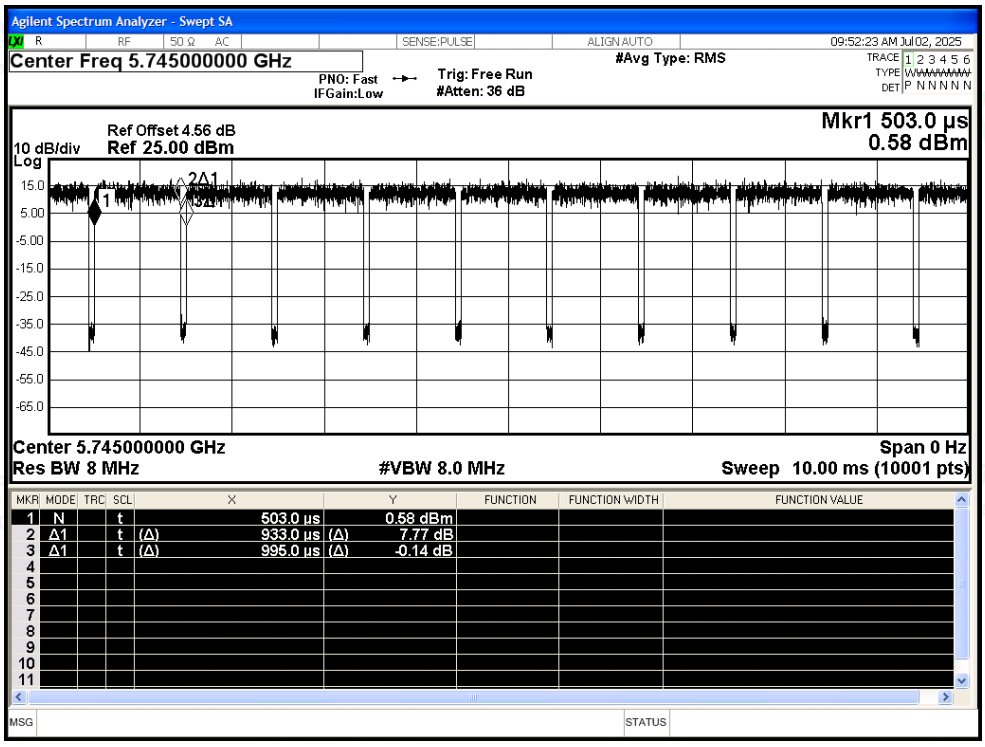

Duty Cycle NVNT n20 5785MHz Ant2

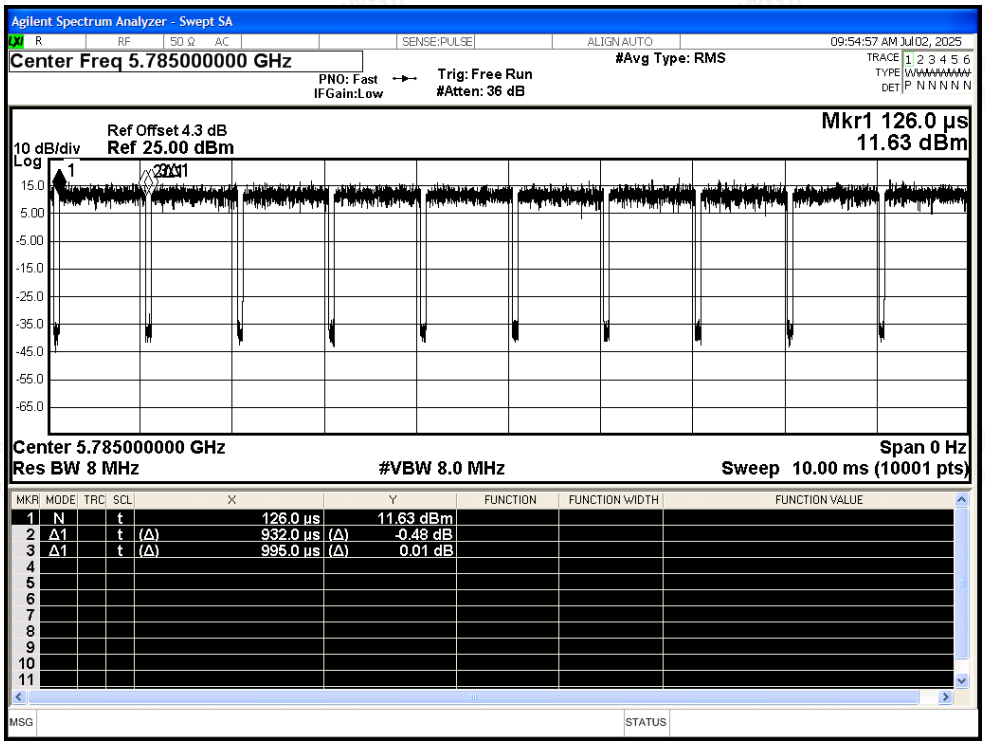

Duty Cycle NVNT n20 5825MHz Ant2

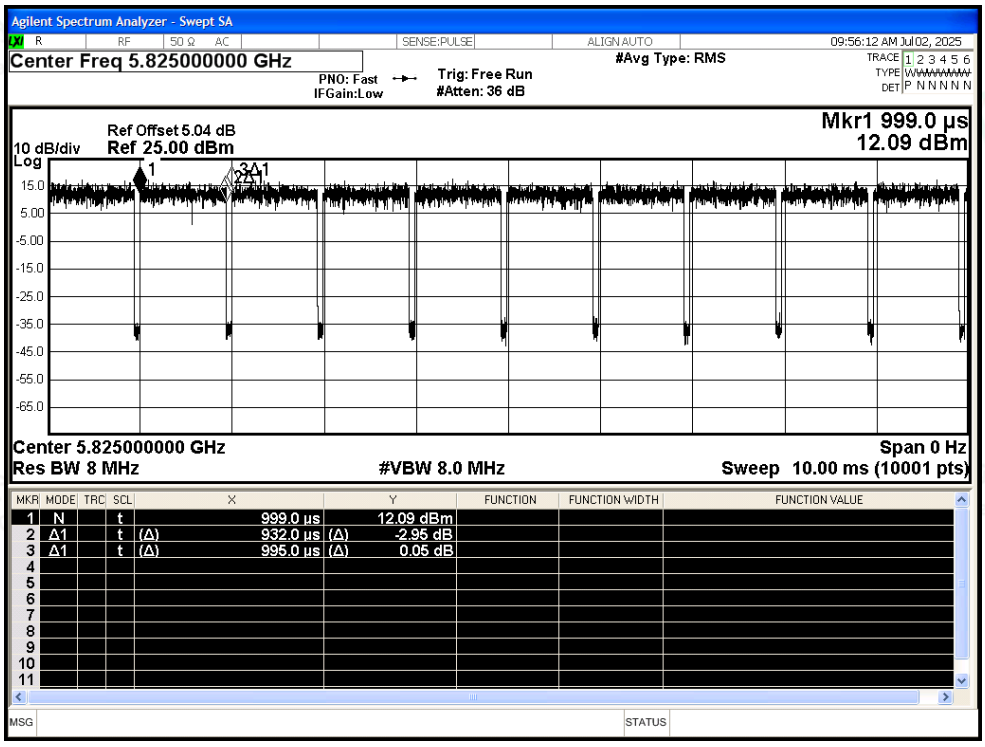

Duty Cycle NVNT n40 5755MHz Ant2

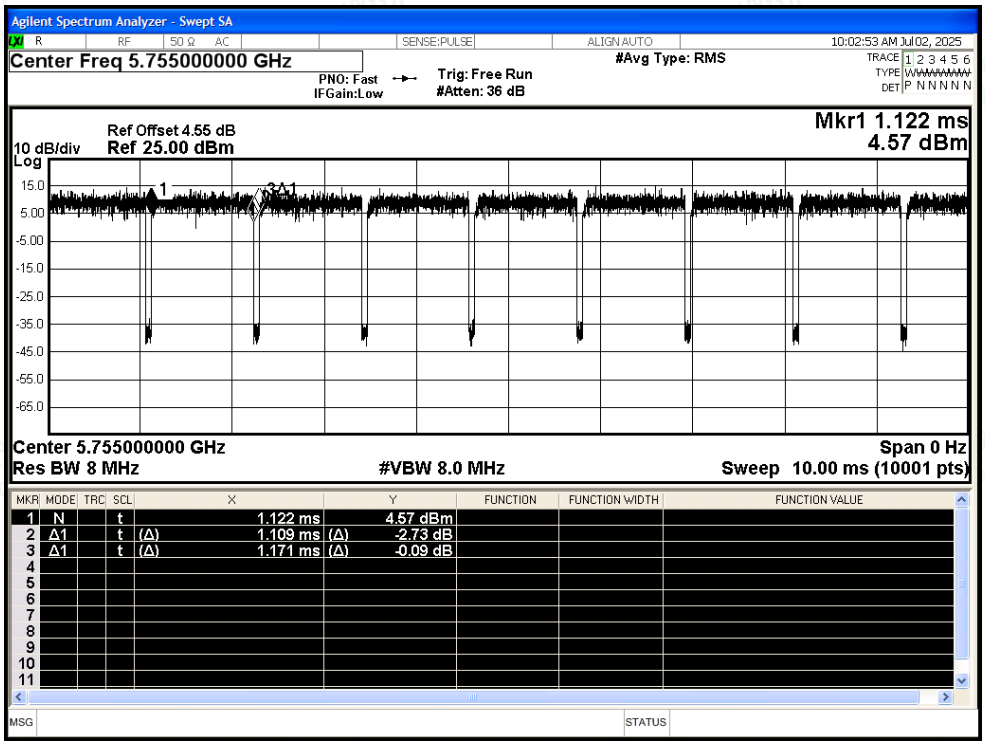

Duty Cycle NVNT n40 5795MHz Ant2

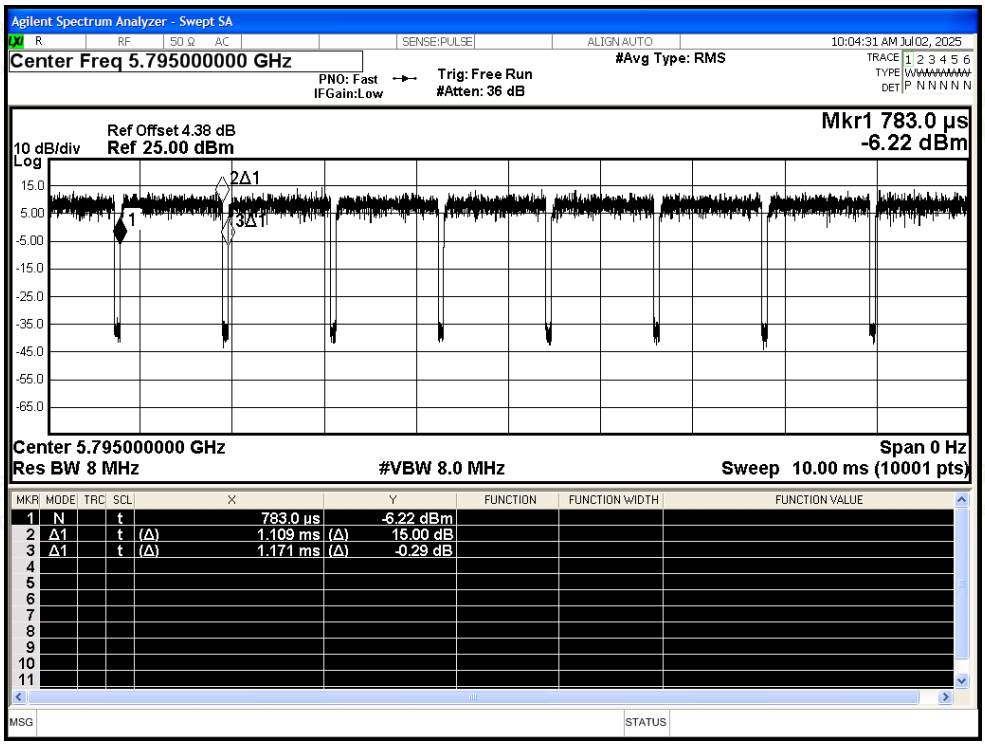

Duty Cycle NVNT ac20 5745MHz Ant2

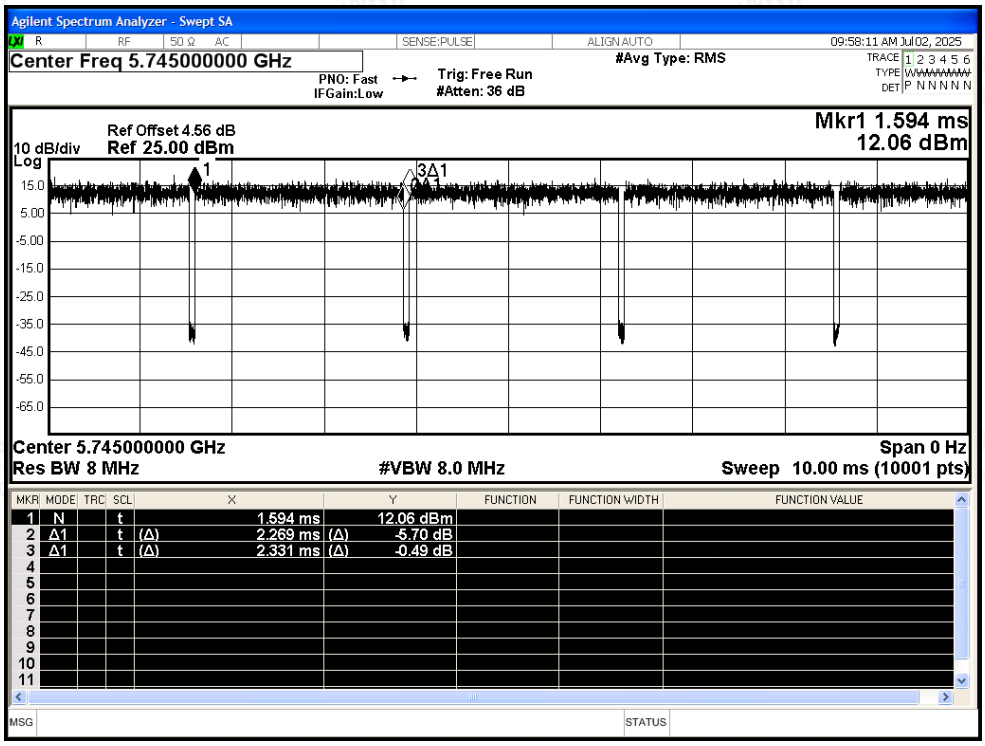

Duty Cycle NVNT ac20 5785MHz Ant2

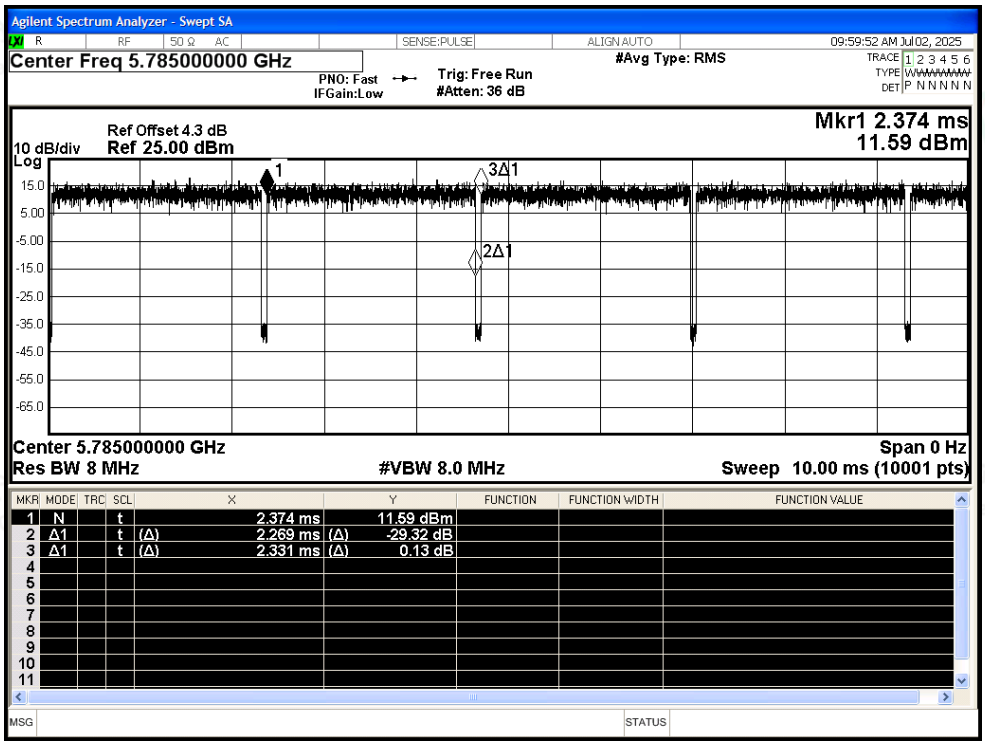

Duty Cycle NVNT ac20 5825MHz Ant2

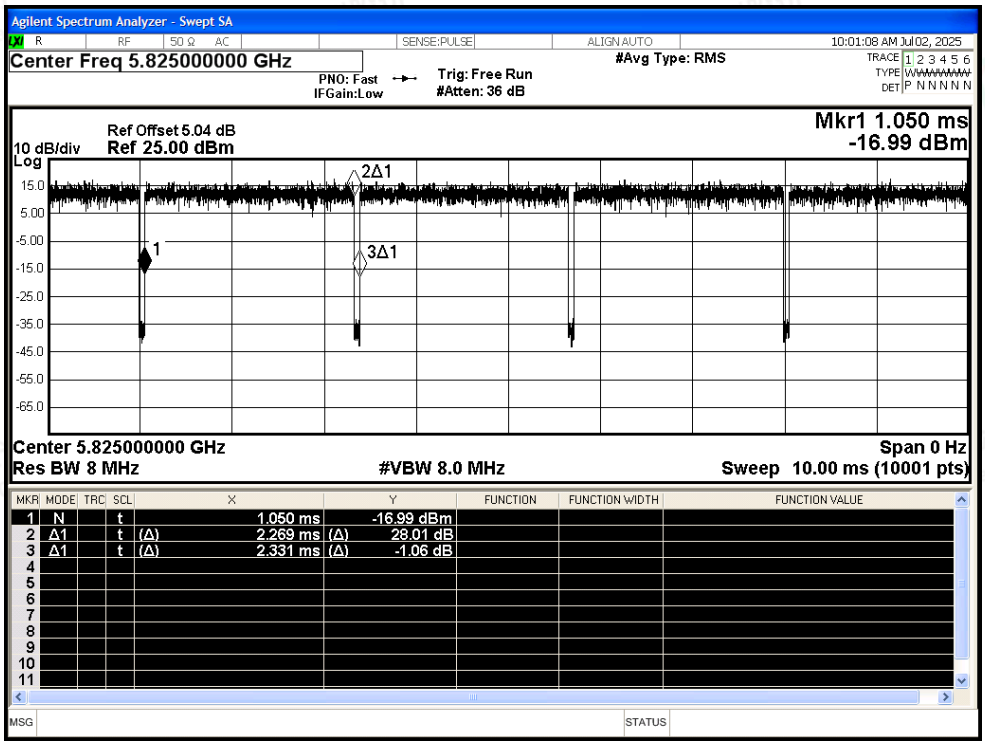

Duty Cycle NVNT ac40 5755MHz Ant2

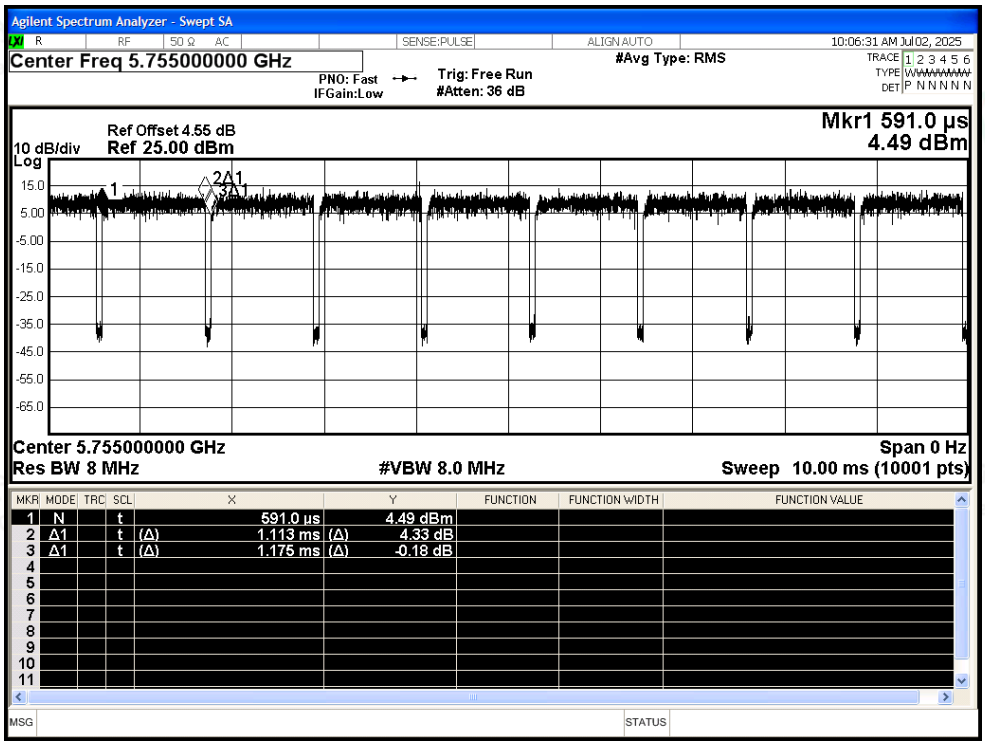

Duty Cycle NVNT ac40 5795MHz Ant2

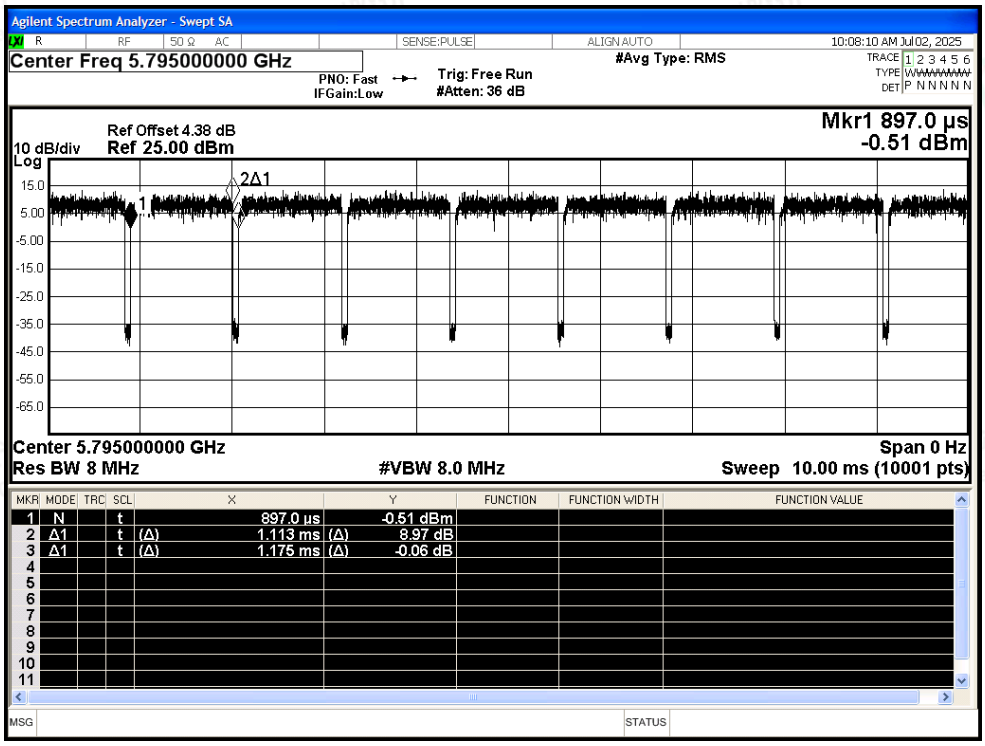
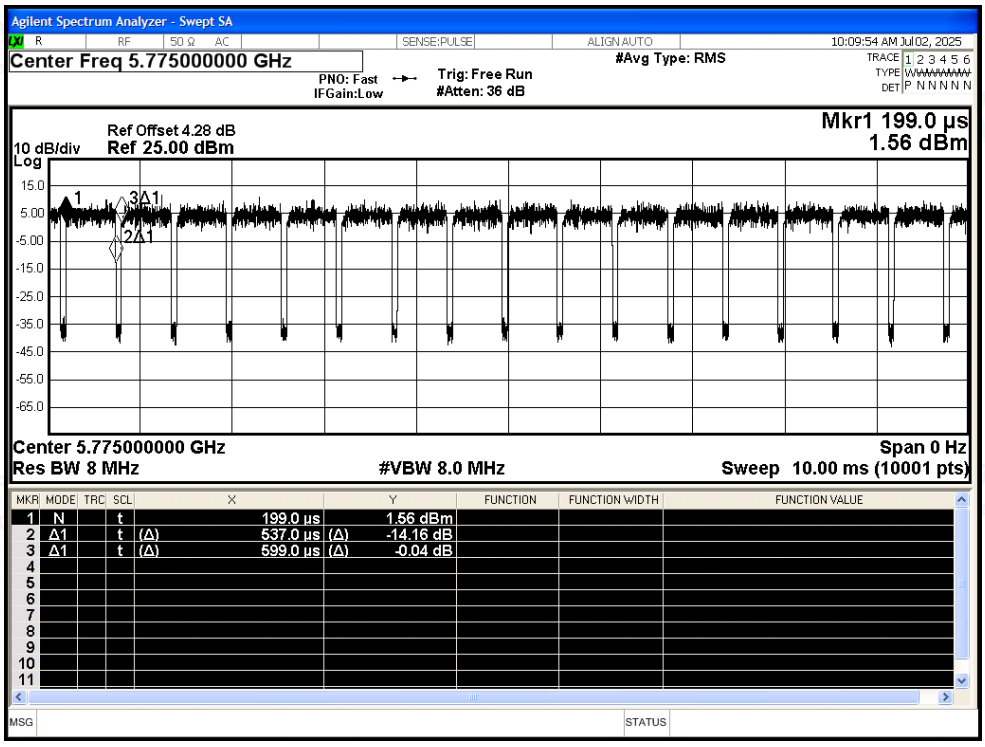
Duty Cycle NVNT ac80 5775MHz Ant2