-20dB Bandwidth NVNT 3-DH5 2402MHz Ant1

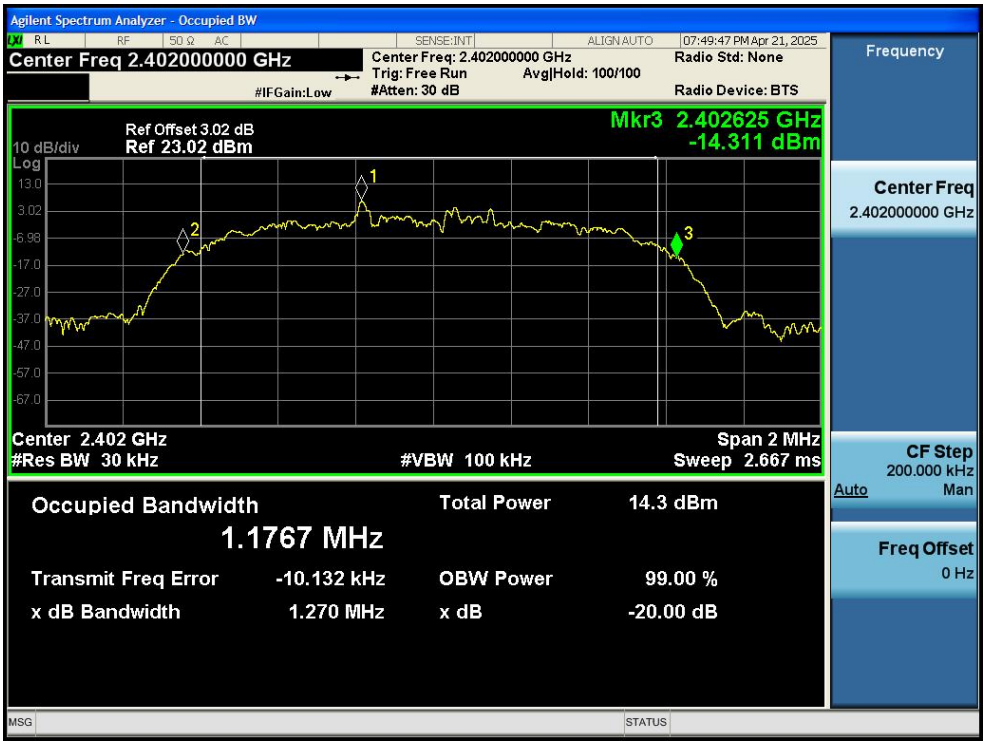

-20dB Bandwidth NVNT 3-DH5 2440MHz Ant1

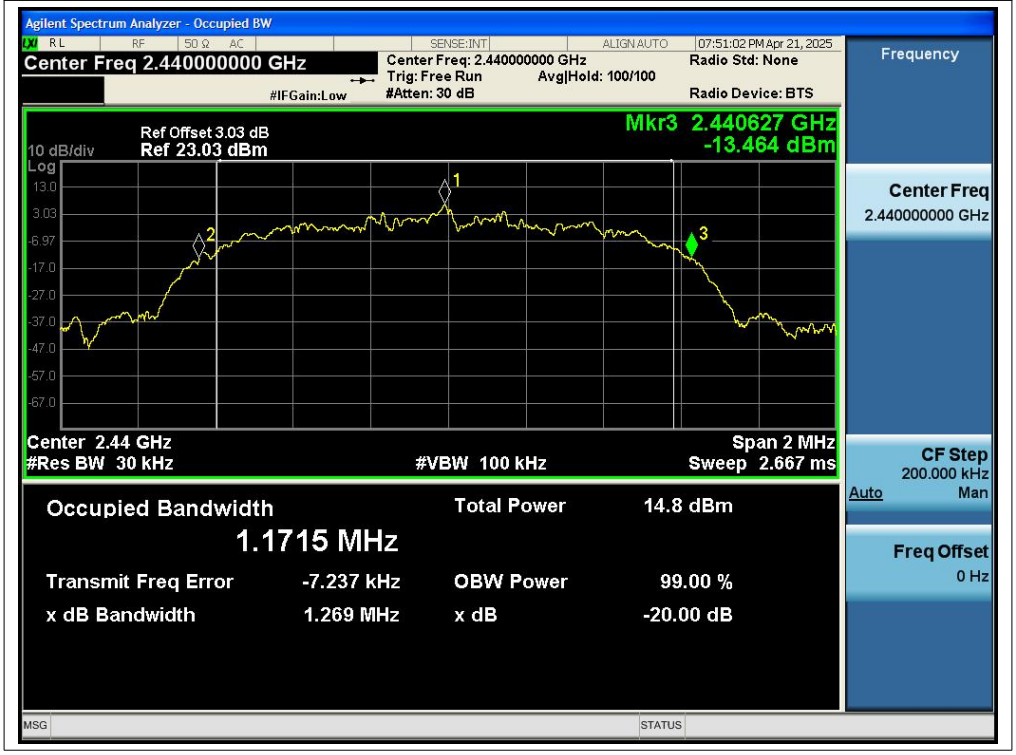

-20dB Bandwidth NVNT 3-DH5 2480MHz Ant1

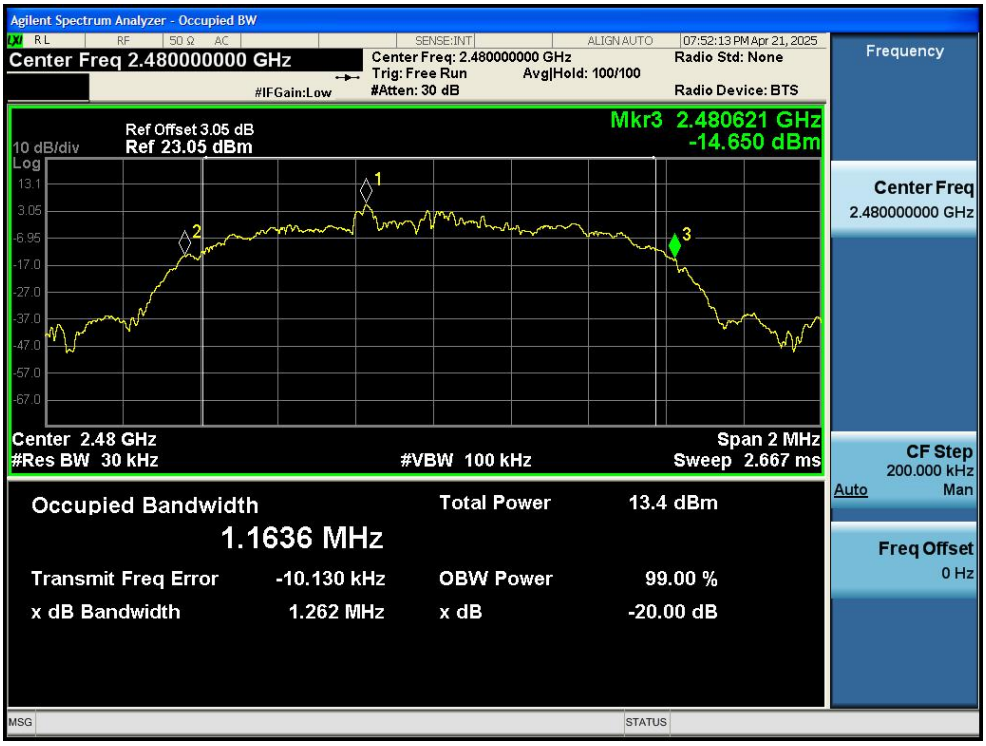

11. Carrier Frequencies Separation

11.1 Standard and Limit

According to FCC 15.247(a)(1), frequency hopping systems operating in the 2400-2483.5 MHz band may have hopping channel carrier frequencies that are separated by 25 kHz or two-thirds of the 20 dB bandwidth of the hopping channel, and frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels.

11.2 Test Procedure

1) Remove the antenna from the EUT and connect to the spectrum analyzer via a low loss RF cable.
2) Set the spectrum analyzer to any one measured frequency within its operating range.
3) Set RBW = 30kHz, VBW = 100kHz, Sweep = Auto, Detector = Peak.
4) By using the Max Hold function, record the separation of two adjacent channels.
5) Measure the frequency difference of these two adjacent channels by spectrum analyzer mark function. and then plot the result on the screen of the spectrum analyzer.
6) Repeat above procedures until all frequencies measured were complete.

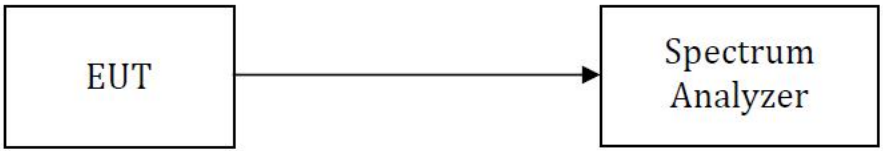

Test Setup Block Diagram

11.3 Test Data and Results

Test Mode	Test Channel	Test Freq. 1 (MHz)	Test Freq. 2 (MHz)	CFS (MHz)	Limit (MHz)
GFSK	Lowest	2401.828	2402.82	0.992	0.639
	Middle	2439.824	2440.91	1.086	0.637
	Highest	2478.918	2480.164	1.246	0.633
Pi/4 DQPSK	Lowest	2401.822	2402.96	1.138	0.815
	Middle	2439.944	2440.952	1.008	0.877
	Highest	2478.834	2479.83	0.996	0.846
8DPSK	Lowest	2401.944	2403.15	1.206	0.847
	Middle	2439.942	2440.95	1.008	0.846
	Highest	2478.944	2479.842	0.898	0.841

Note: CFS(Channel Frequency Separation) = Test Freq. 2 - Test Freq. 1

Test Graphs

CFS NVNT 1-DH5 2402MHz Ant1

CFS NVNT 1-DH5 2440MHz Ant1

CFS NVNT 1-DH5 2480MHz Ant1

CFS NVNT 2-DH5 2402MHz Ant1

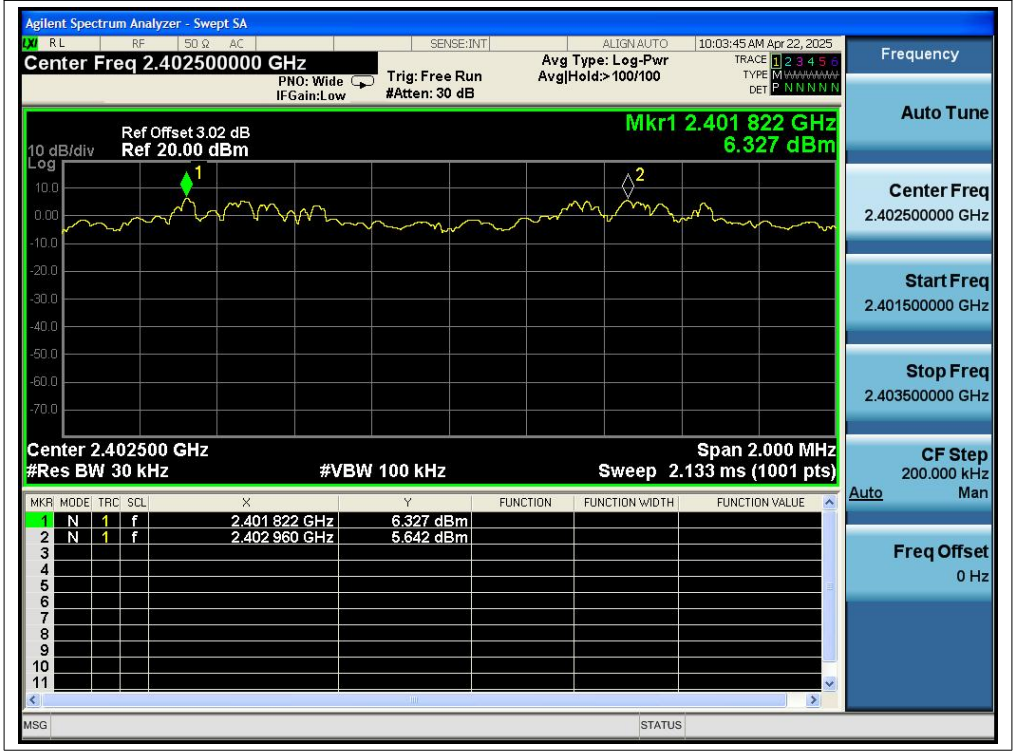

CFS NVNT 2-DH5 2440MHz Ant1

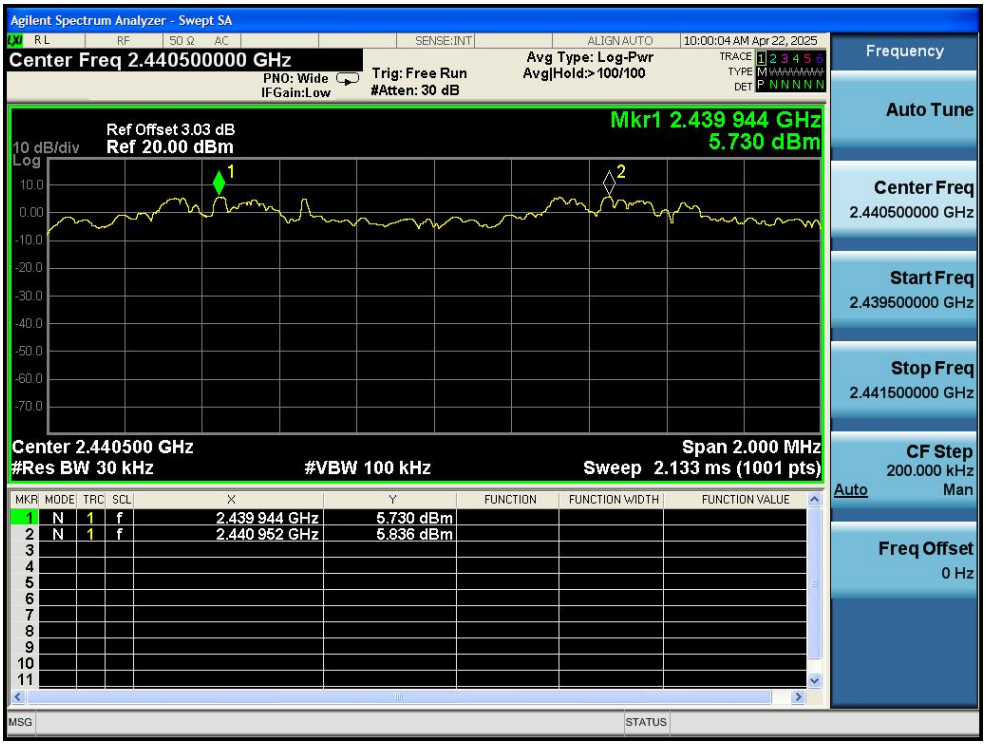

CFS NVNT 2-DH5 2480MHz Ant1

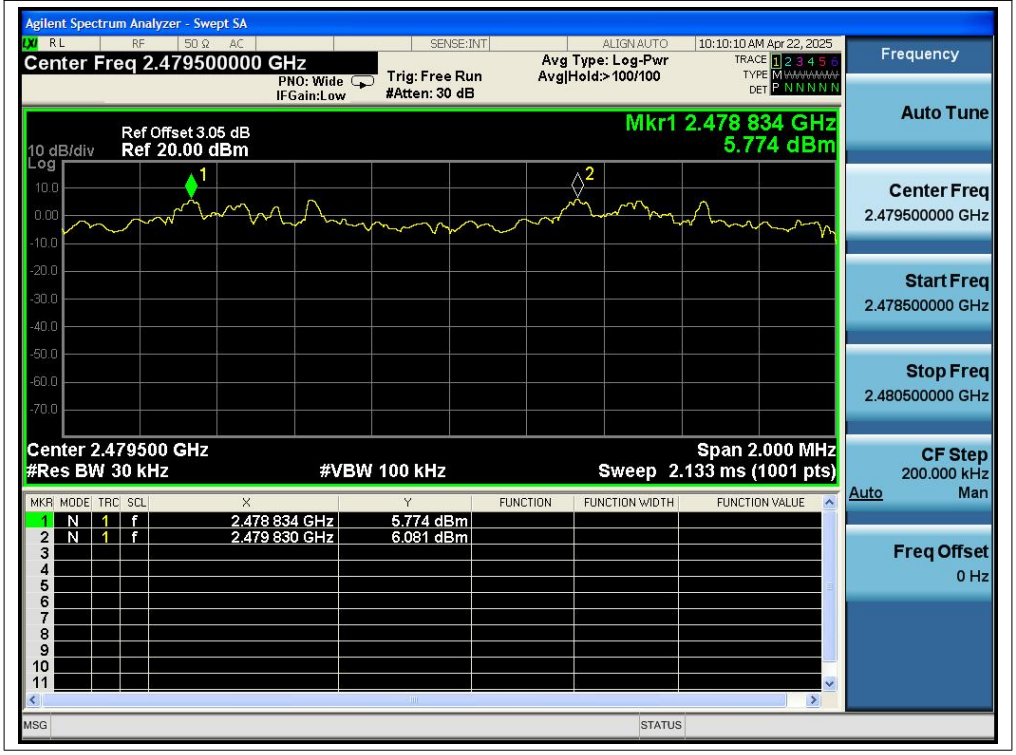

CFS NVNT 3-DH5 2402MHz Ant1

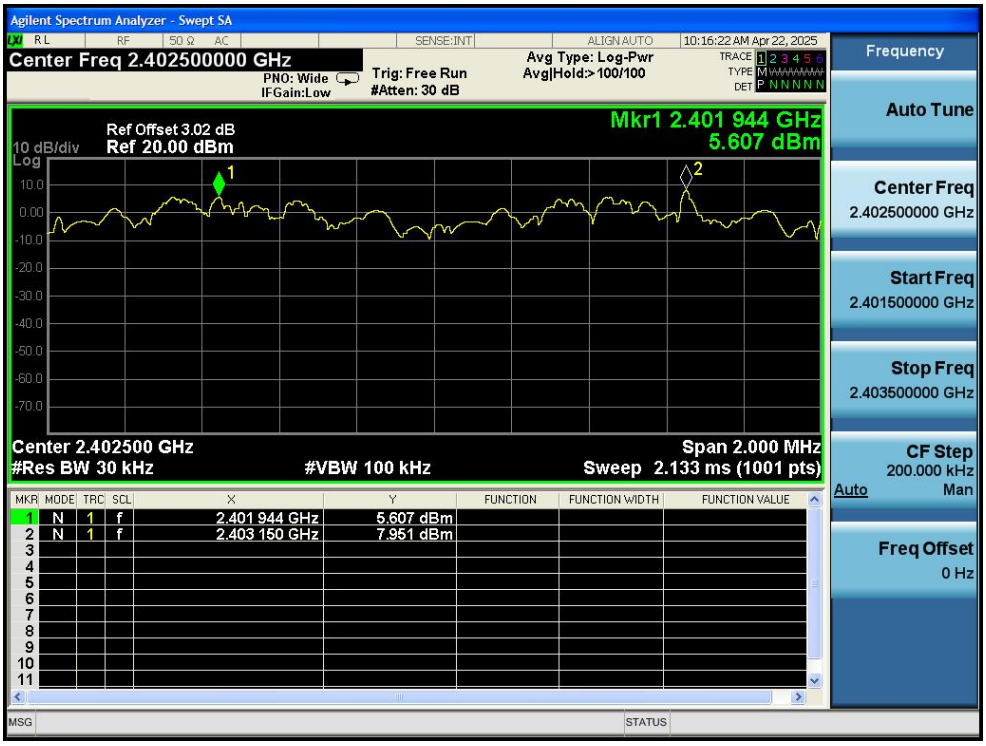

CFS NVNT 3-DH5 2440MHz Ant1

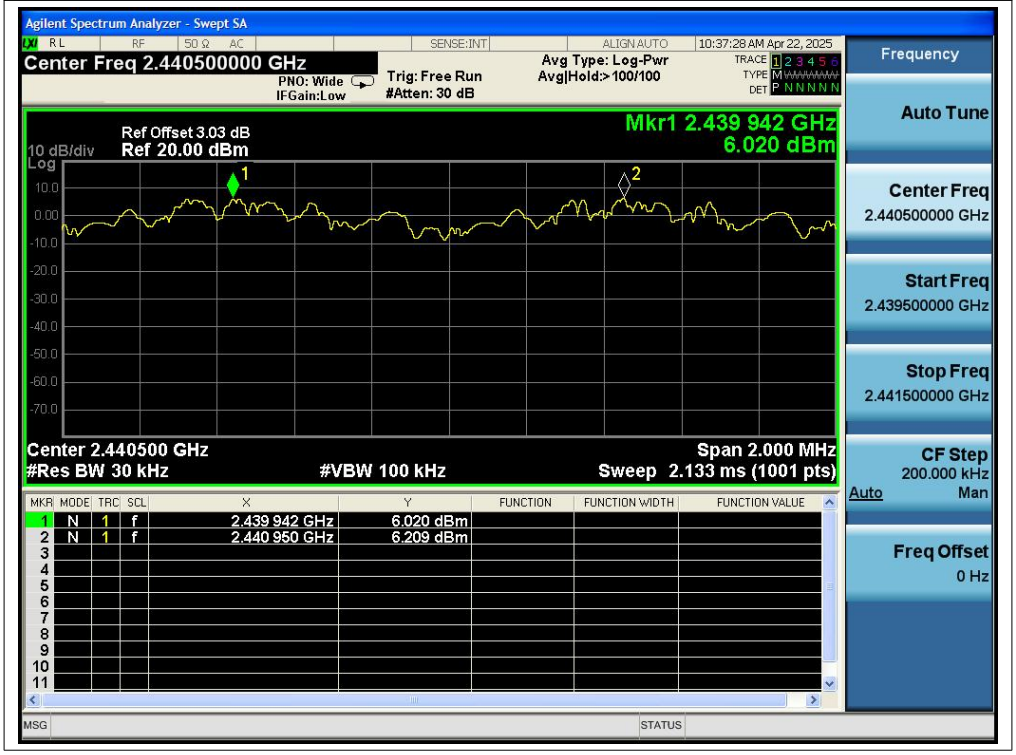

CFS NVNT 3-DH5 2480MHz Ant1

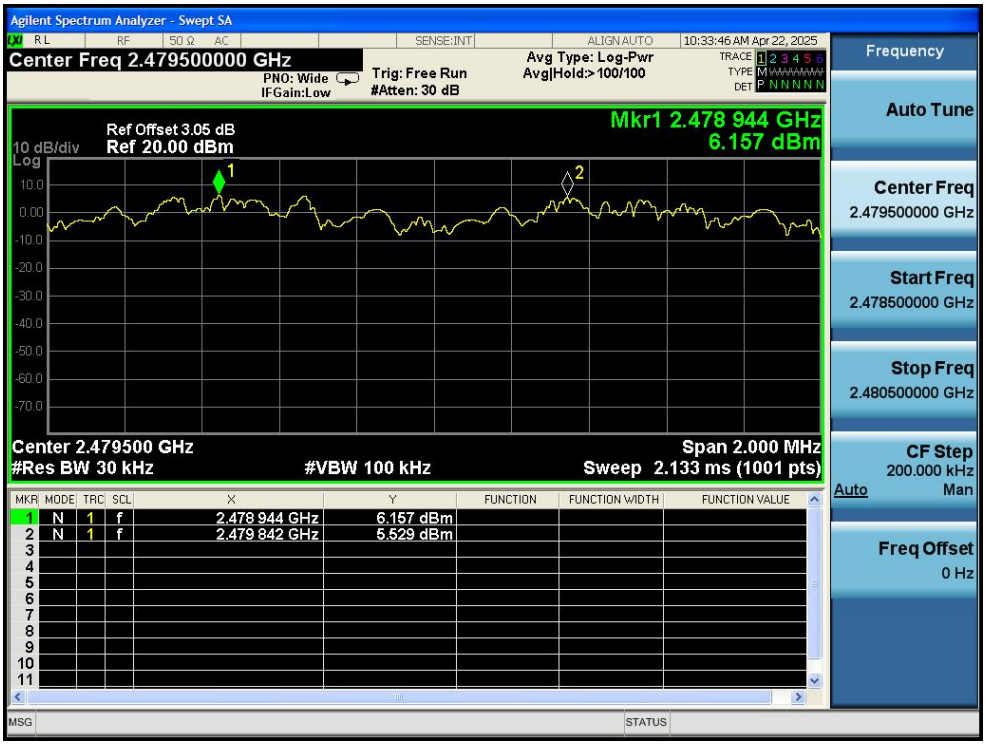

12. Number of Hopping Channel

12.1 Standard and Limit

According to FCC 15.247(a)(1), frequency hopping systems operating in the 2400-2483.5 MHz band may have hopping channel carrier frequencies that are separated by 25 kHz or two-thirds of the 20 dB bandwidth of the hopping channel, and frequency hopping systems in the 2400-2483.5 MHz band shall use at least 15 channels.

12.2 Test Procedure

1) Remove the antenna from the EUT and connect to the spectrum analyzer via a low loss RF cable.
2) Set the spectrum analyzer to any one measured frequency within its operating range.
3) Set RBW = 100kHz, VBW = 300kHz, Sweep = Auto, Detector = Peak.
4) Set the spectrum analyzer on Max hold mode, and then keep the EUT in hopping mode. Record all the signals from each channel until each one has been recorded.
5) Set the spectrum analyzer on View mode and then plot the result on the screen of the spectrum analyzer.
6) Repeat the above procedures until all frequencies measured were complete.

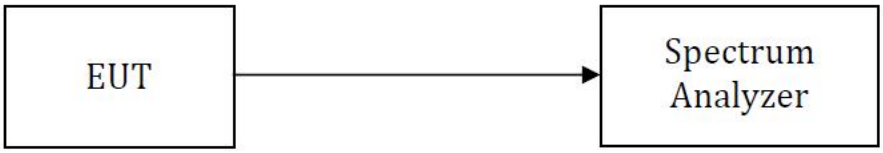

Test Setup Block Diagram

12.3 Test Data and Results

Test Mode	Number of Hopping Channel	Limit	Test Result
GFSK	79	15	Pass
Pi/4 DQPSK	79	15	Pass
8DPSK	79	15	Pass

Number of Hopping Channel
GFSK 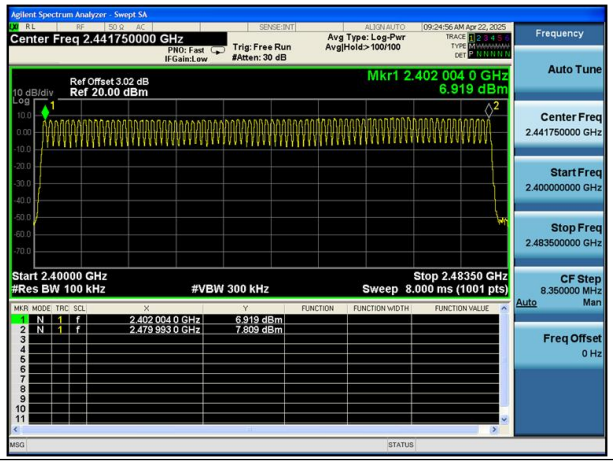
Pi/4 DQPSK 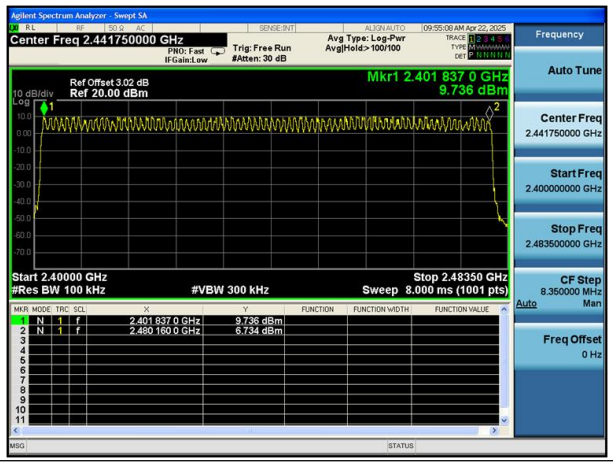
8DPSK 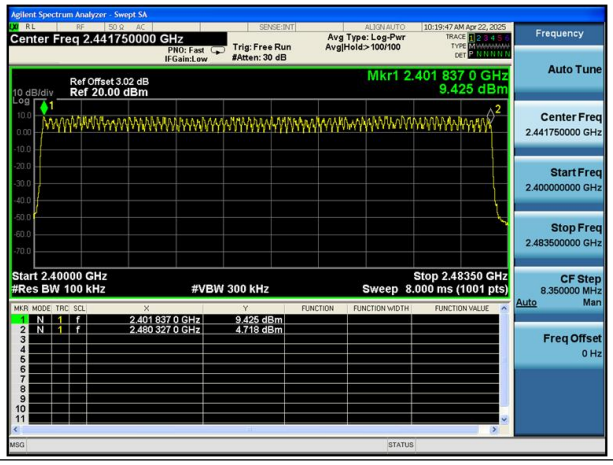

13. Band-edge Emission(Conducted)

13.1 Standard and Limit

According to §15.247(d), In any 100 kHz bandwidth outside the frequency band in which the spread spectrum or digitally modulated intentional radiator is operating, the radio frequency power that is produced by the intentional radiator shall be at least 20 dB below that in the 100 kHz bandwidth within the band that contains the highest level of the desired power, based on either an RF conducted or a radiated measurement, provided the transmitter demonstrates compliance with the peak conducted power limits. If the transmitter complies with the conducted power limits based on the use of RMS averaging over a time interval, as permitted under paragraph (b)(3) of this section, the attenuation required under this paragraph shall be 30 dB instead of 20 dB. Attenuation below the general limits specified in § 15.209(a) is not required. In addition, radiated emissions which fall in the restricted bands, as defined in § 15.205(a), must also comply with the radiated emission limits specified in § 15.209(a) (see § 15.205(c)).

13.2 Test Procedure

Test is conducting under the description of ANSI C63.10 - 2013 section 6.10.

1) Remove the antenna from the EUT and connect to the spectrum analyzer via a low loss RF cable.
2) Set the spectrum analyzer to any one measured frequency within its operating range.
3) Set RBW = 100kHz, VBW = 300kHz, Sweep = Auto, Detector = Peak.
4) Measure the highest amplitude appearing on spectral display and set it as a reference level.
5) Set a convenient frequency span including 100 kHz bandwidth from band edge.
6) Measure the emission and marking the edge frequency.
7) Repeat above procedures until all frequencies measured were complete.

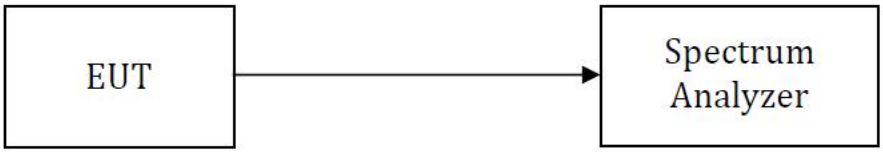

Test Setup Block Diagram

13.3 Test Data and Results

Test Mode	Band-edge	Test Channel (MHz)	Max. Value (dBc)	Limit (dBc)	Test Result
No-Hopping					
GFSK	Lowest	2402	-54.32	-20	Pass
	Highest	2480	-59.8	-20	Pass
Pi/4 DQPSK	Lowest	2402	-56.2	-20	Pass
	Highest	2480	-63.58	-20	Pass
8DPSK	Lowest	2402	-55.76	-20	Pass
	Highest	2480	-60.65	-20	Pass
Hopping					
GFSK	Lowest	2402	-55.21	-20	Pass
	Highest	2480	-58.68	-20	Pass
Pi/4 DQPSK	Lowest	2402	-56.17	-20	Pass
	Highest	2480	-56.91	-20	Pass
8DPSK	Lowest	2402	-56.68	-20	Pass
	Highest	2480	-61.49	-20	Pass

Test Graphs

Band Edge NVNT 1-DH5 2402MHz Ant1 No-Hopping Ref

Band Edge NVNT 1-DH5 2402MHz Ant1 No-Hopping Emission

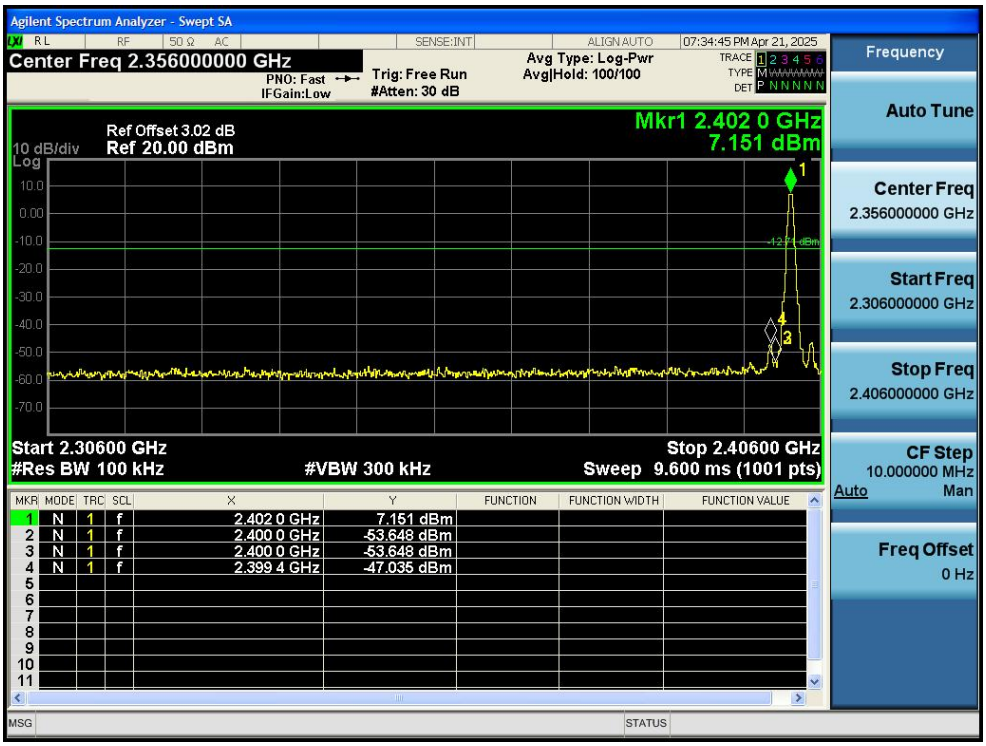

Band Edge NVNT 1-DH5 2480MHz Ant1 No-Hopping Ref

Band Edge NVNT 1-DH5 2480MHz Ant1 No-Hopping Emission

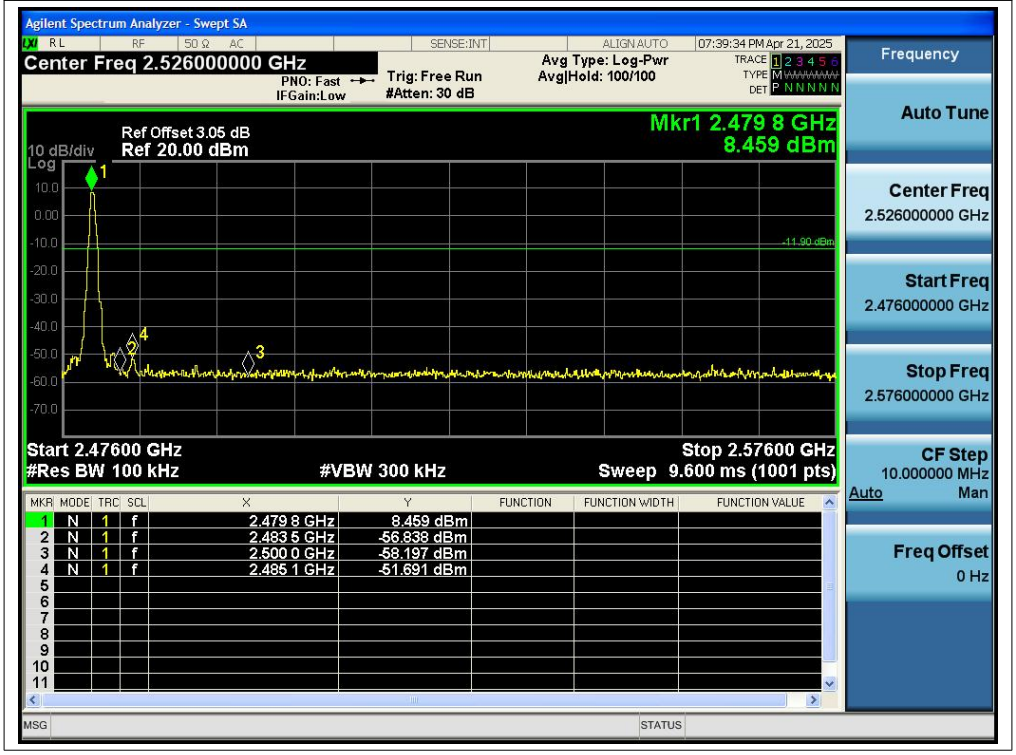

Band Edge NVNT 2-DH5 2402MHz Ant1 No-Hopping Ref

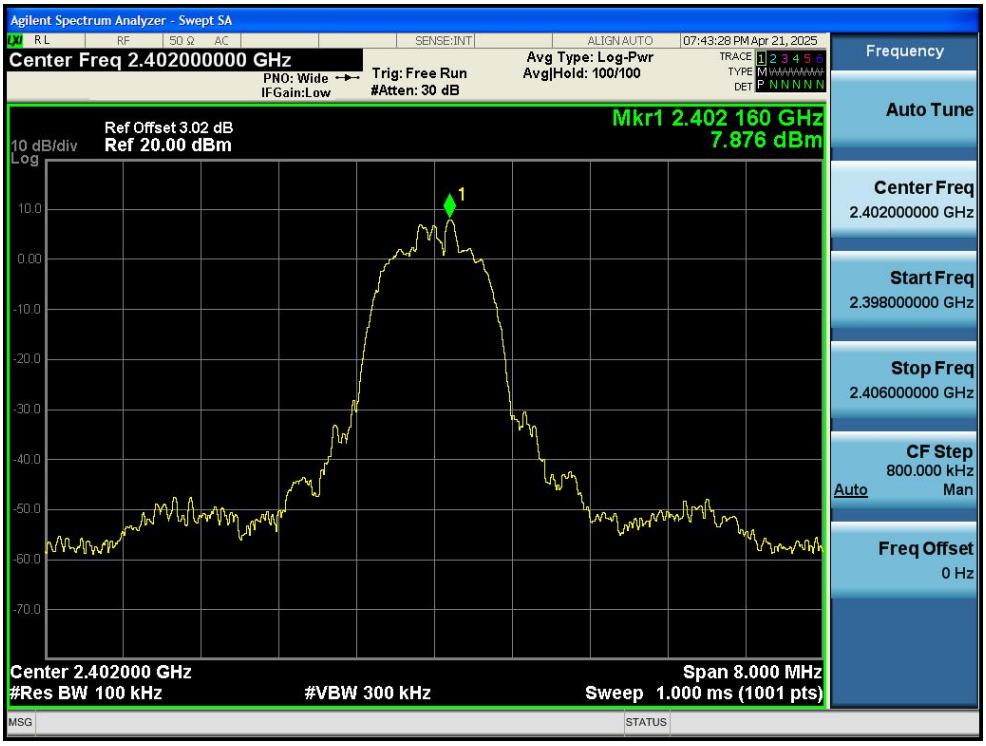

Band Edge NVNT 2-DH5 2402MHz Ant1 No-Hopping Emission

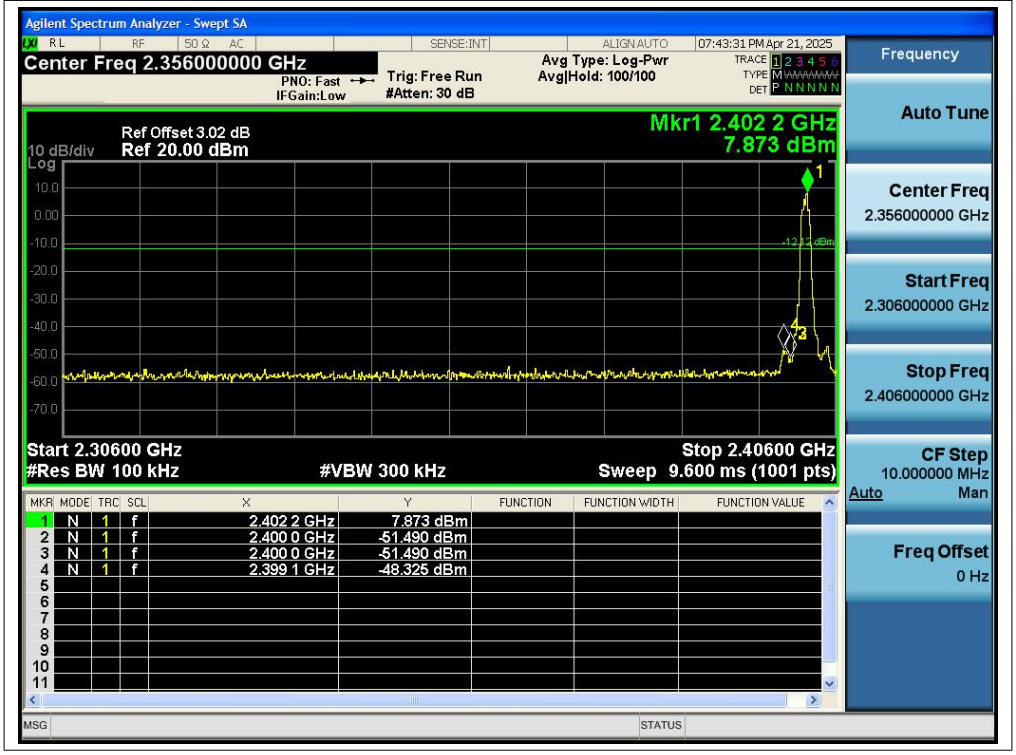

Band Edge NVNT 2-DH5 2480MHz Ant1 No-Hopping Ref

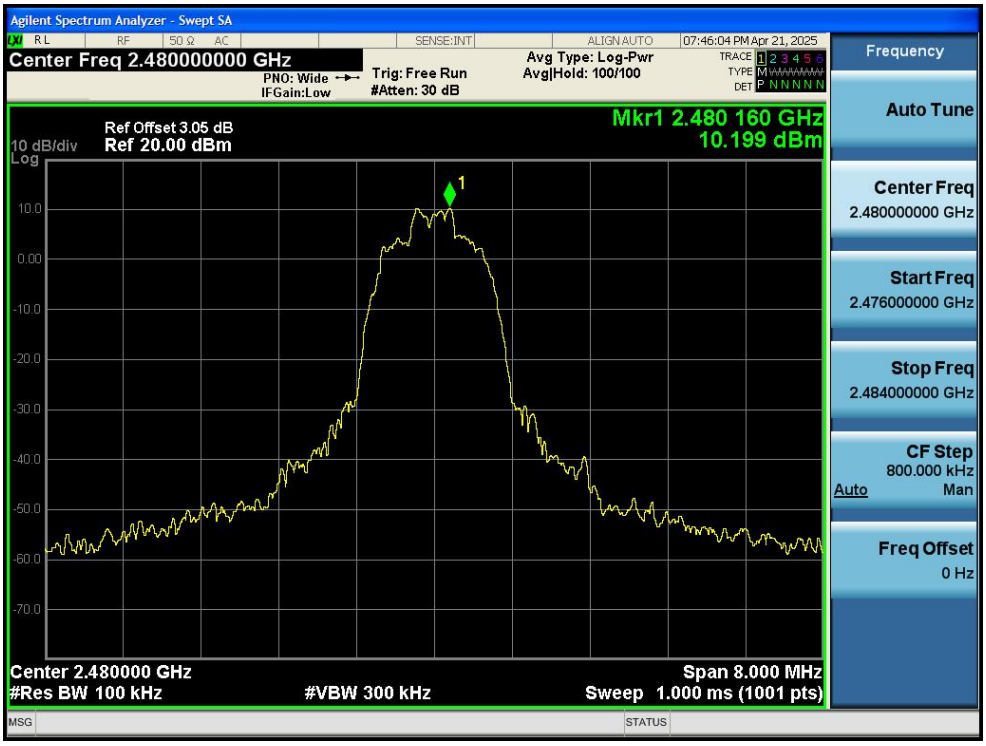

Band Edge NVNT 2-DH5 2480MHz Ant1 No-Hopping Emission

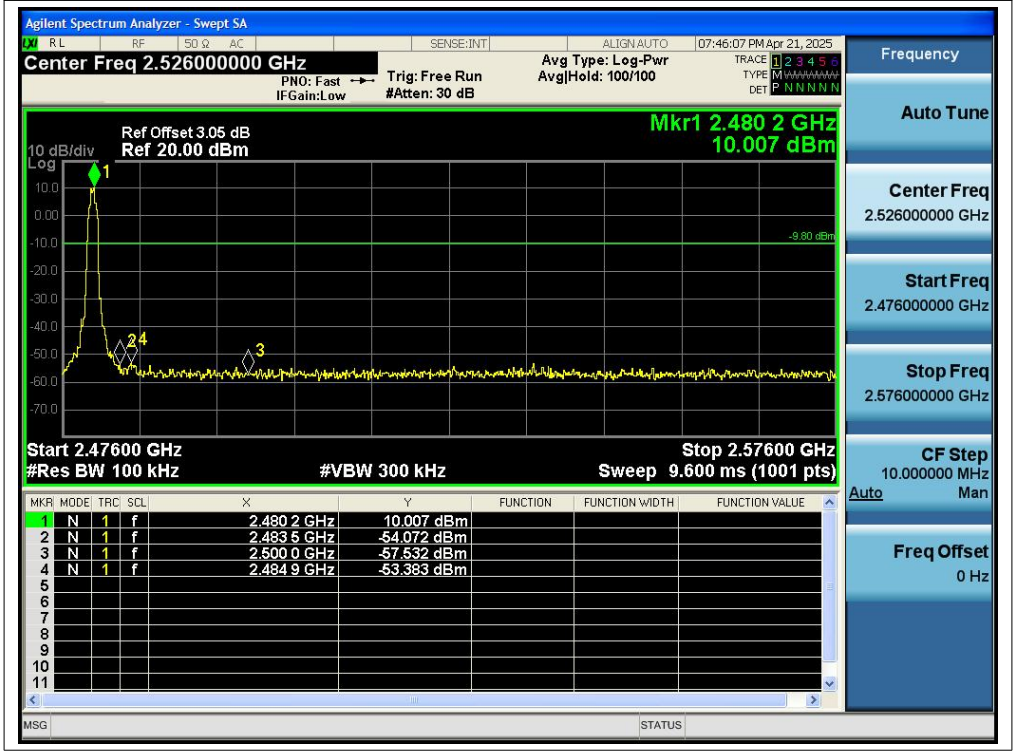

Band Edge NVNT 3-DH5 2402MHz Ant1 No-Hopping Ref

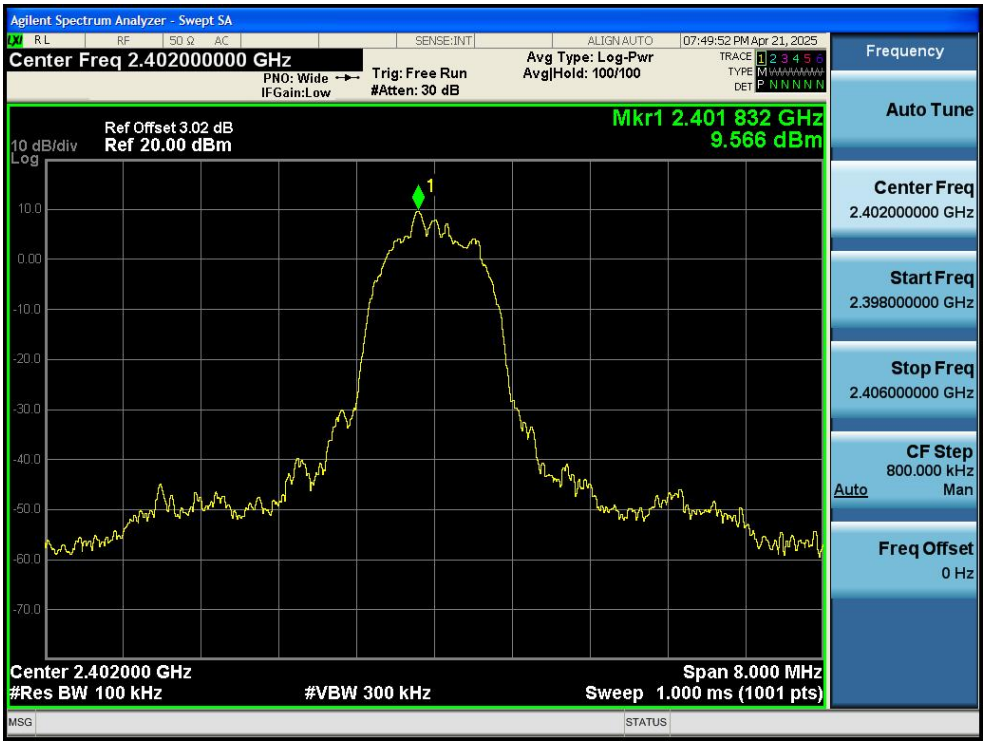

Band Edge NVNT 3-DH5 2402MHz Ant1 No-Hopping Emission

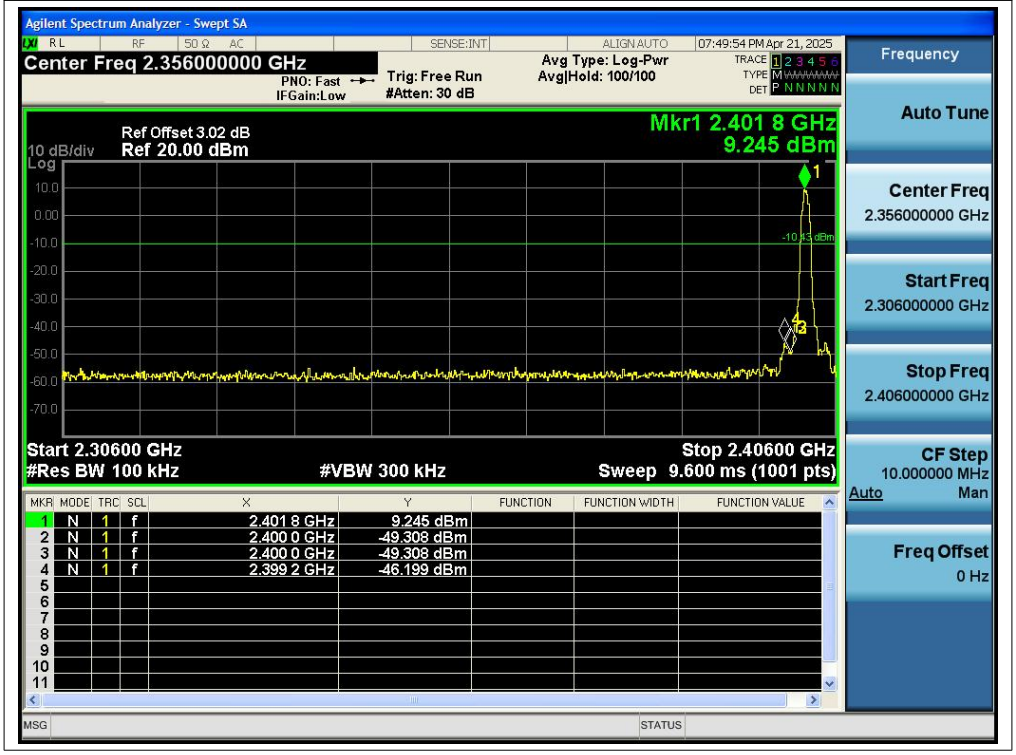

Band Edge NVNT 3-DH5 2480MHz Ant1 No-Hopping Ref

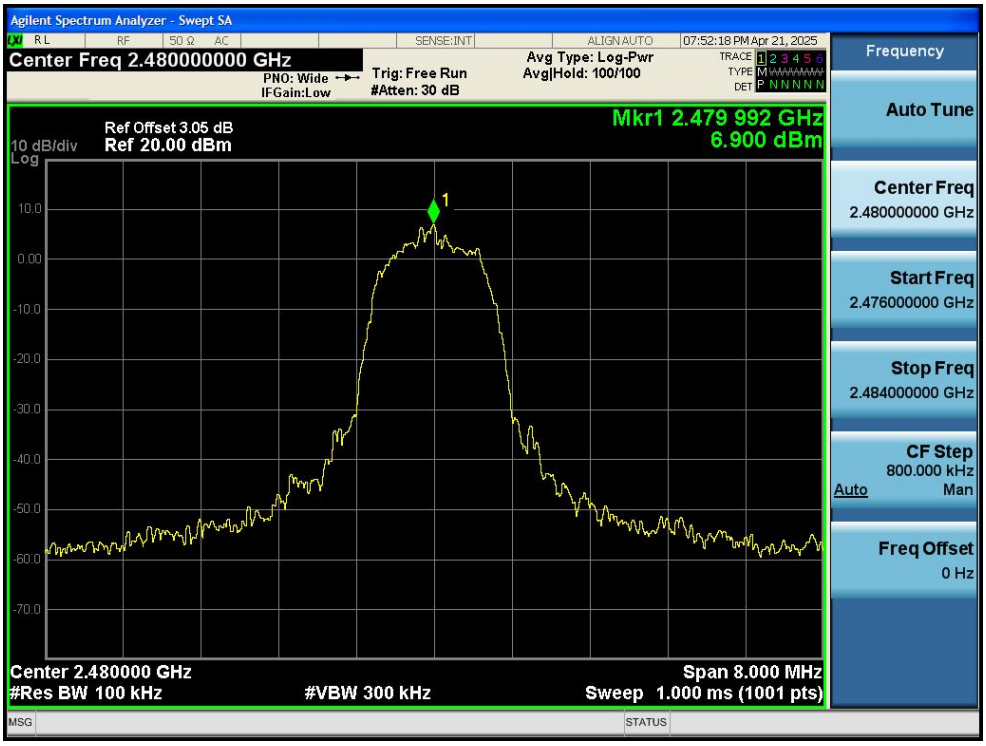

Band Edge NVNT 3-DH5 2480MHz Ant1 No-Hopping Emission

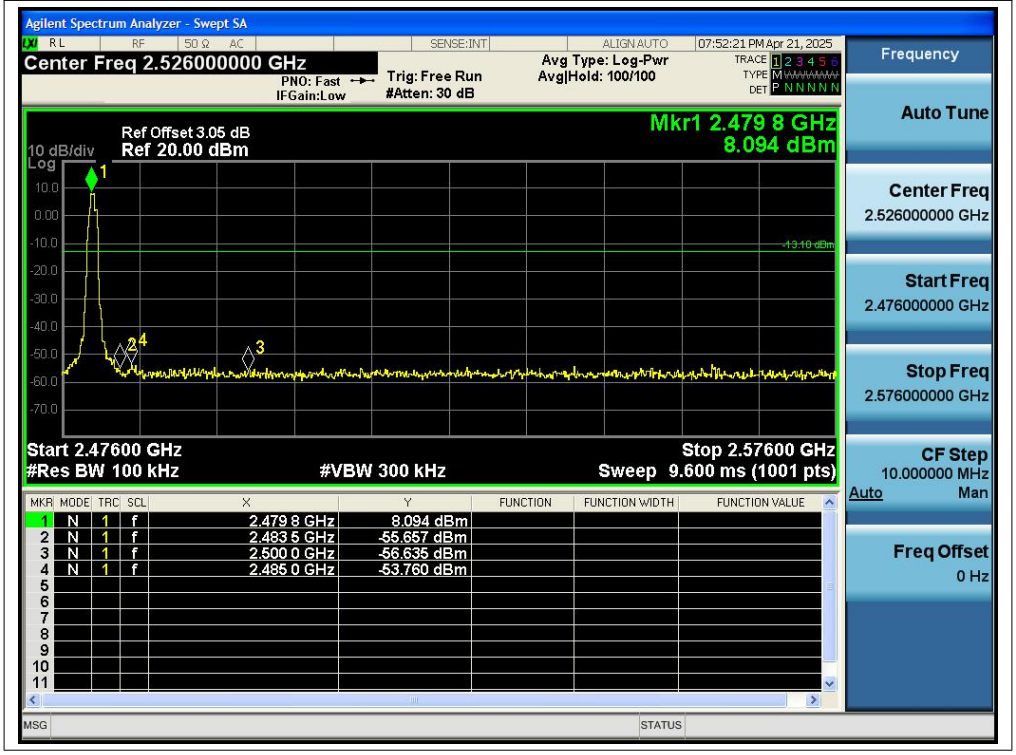

Test Graphs

Band Edge(Hopping) NVNT 1-DH5 2402MHz Ant1 Hopping Ref

Band Edge(Hopping) NVNT 1-DH5 2402MHz Ant1 Hopping Emission

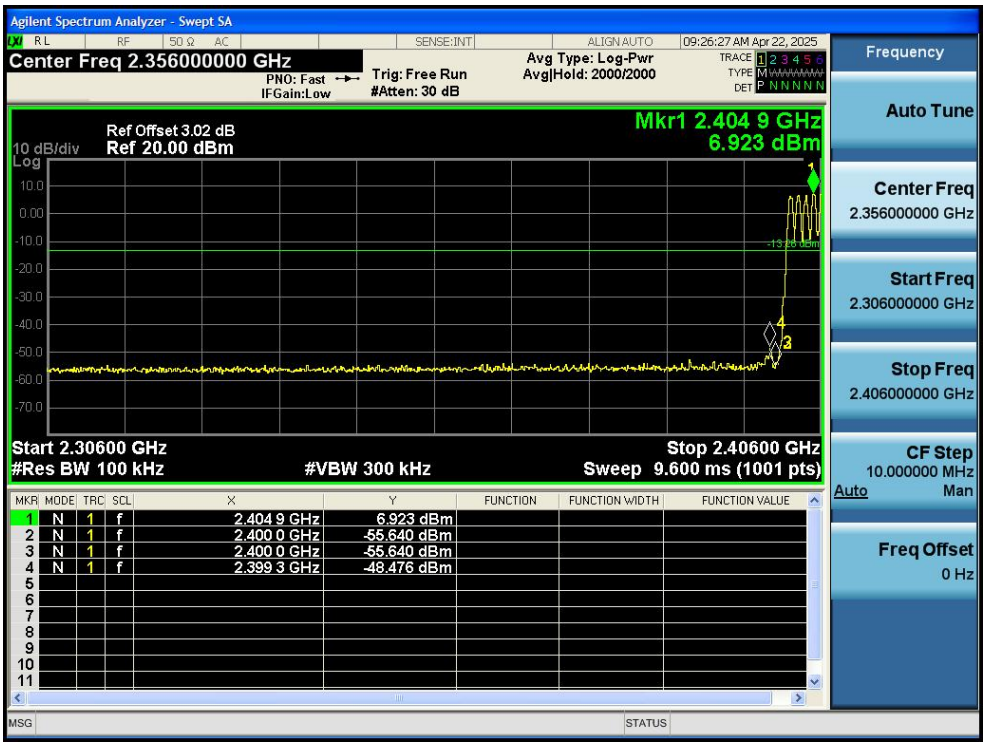

Band Edge(Hopping) NVNT 1-DH5 2480MHz Ant1 Hopping Ref

Band Edge(Hopping) NVNT 1-DH5 2480MHz Ant1 Hopping Emission

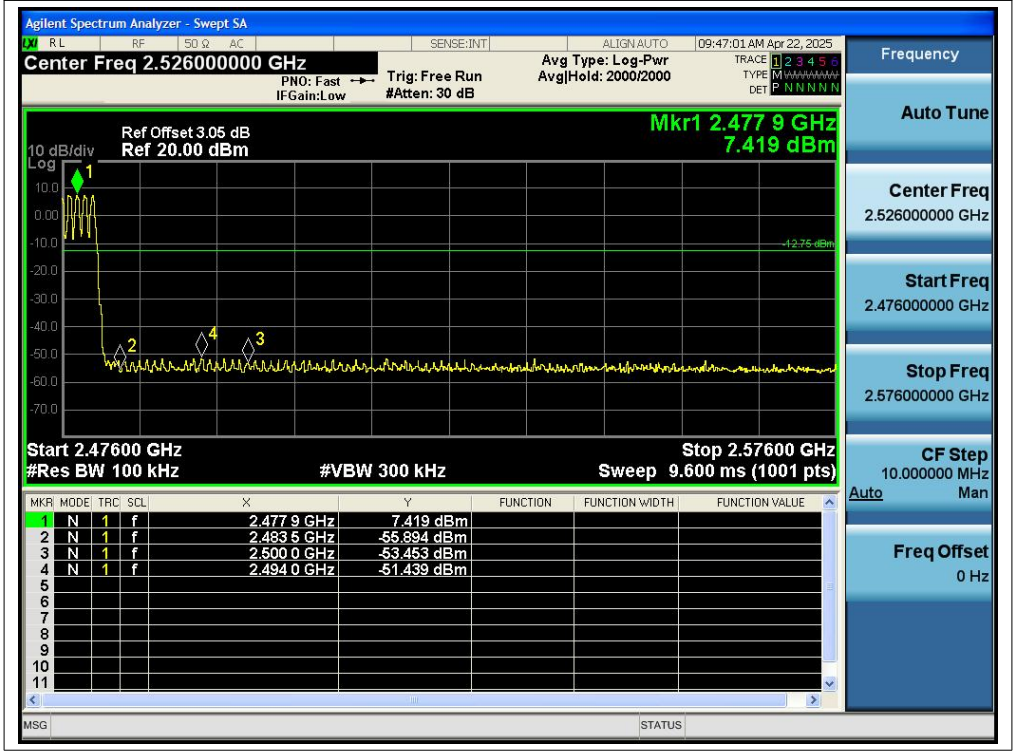

Band Edge(Hopping) NVNT 2-DH5 2402MHz Ant1 Hopping Ref

Band Edge(Hopping) NVNT 2-DH5 2402MHz Ant1 Hopping Emission

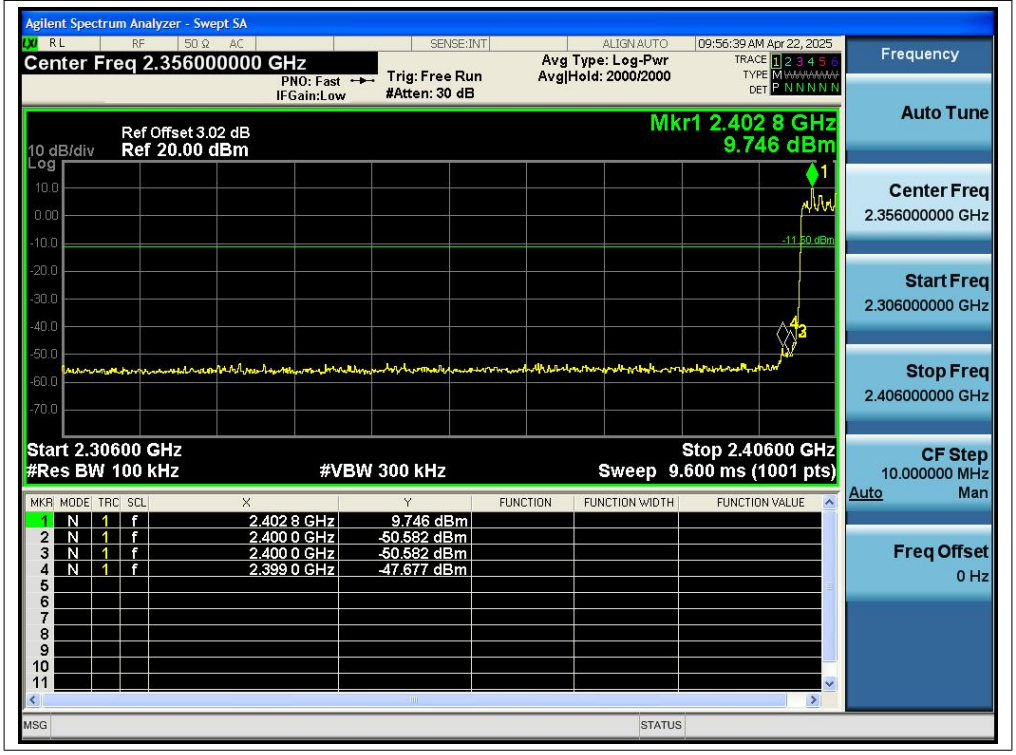

Band Edge(Hopping) NVNT 2-DH5 2480MHz Ant1 Hopping Ref
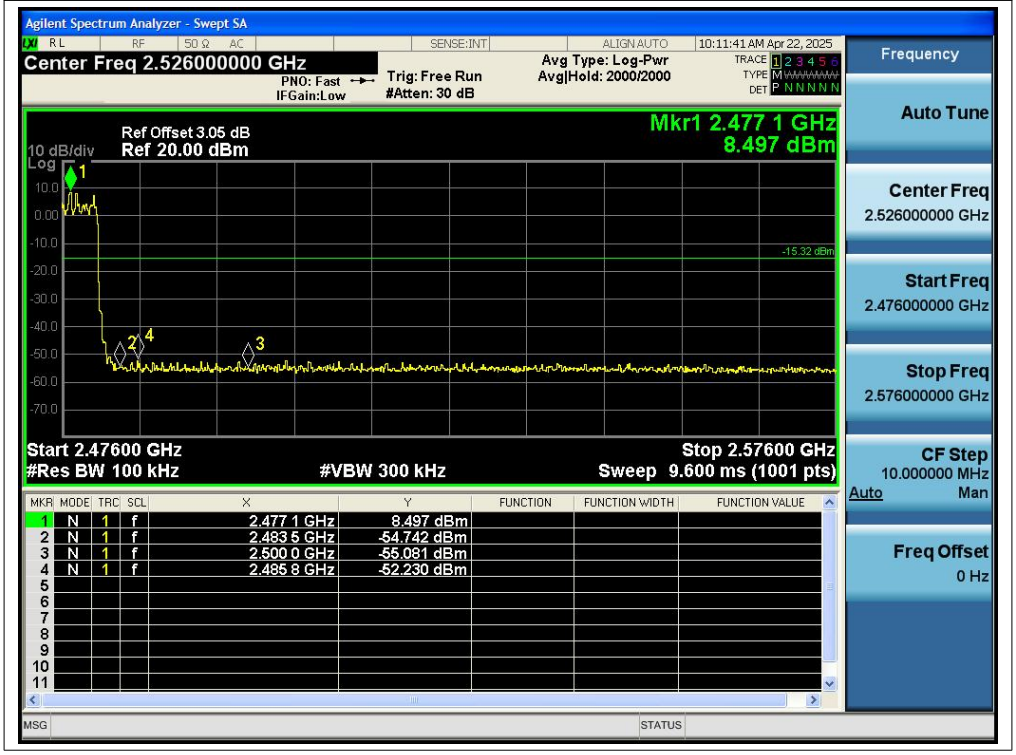
Band Edge(Hopping) NVNT 2-DH5 2480MHz Ant1 Hopping Emission