6.2.2 B2_3MHz

Band2_3MHz_QPSK_LCH_1851.5MHz_RB_1_0_NTNV

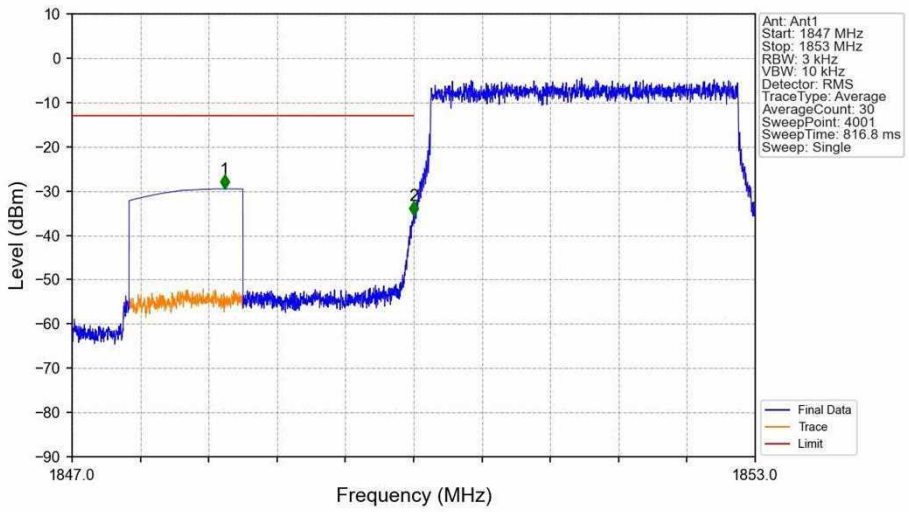

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1847	1849	1	CHP	1	1848.340	-29.50	-13	Pass
1849	1850	0.003	/	2	1849.998	-35.47	-13	Pass
1850	1853	0.003	/	/	/	/	/	/

Band2_3MHz_QPSK_LCH_1851.5MHz_RB_1_0_NTNV

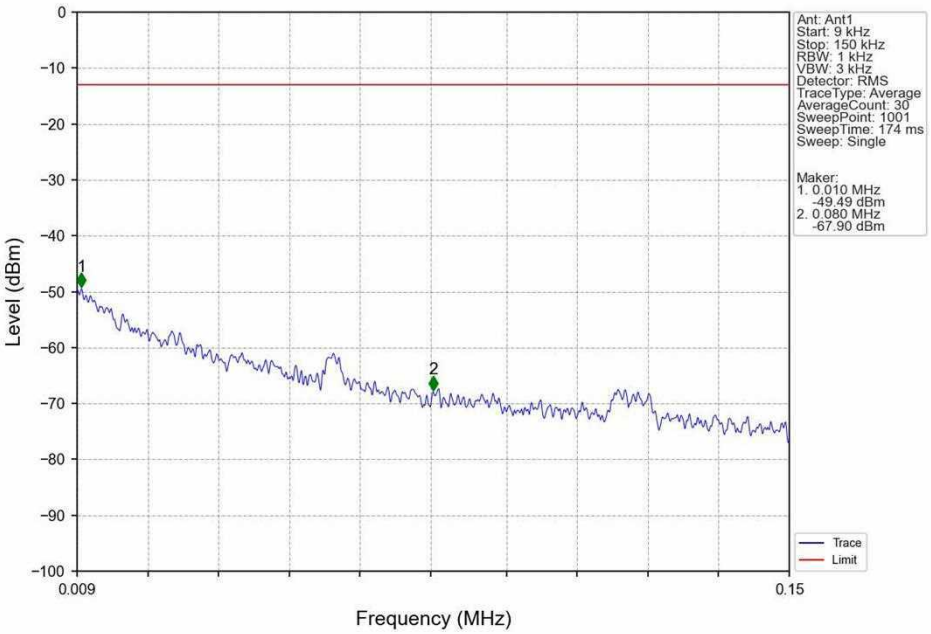

Band2_3MHz_QPSK_LCH_1851.5MHz_RB_1_0_NTNV

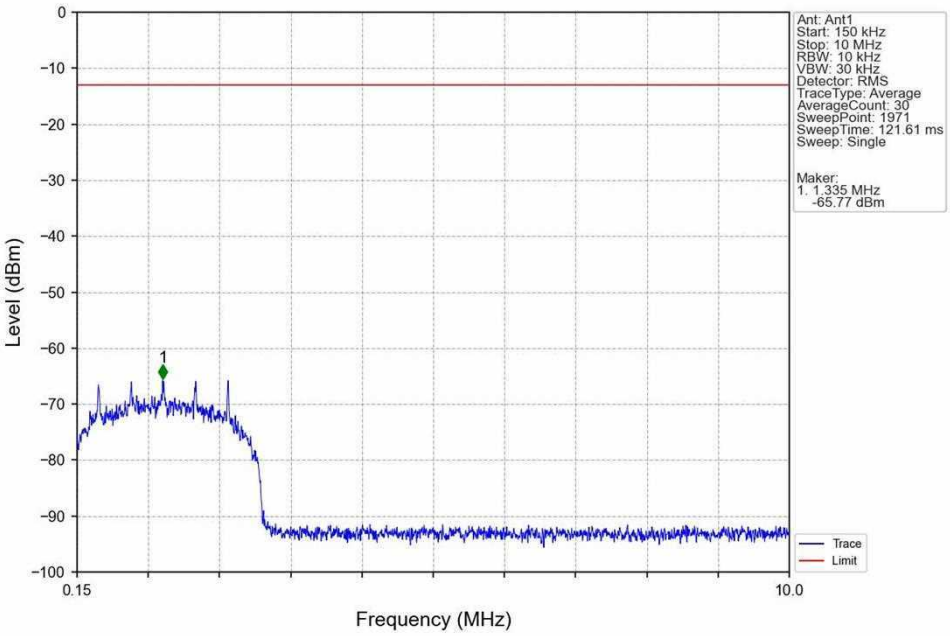

Band2_3MHz_QPSK_LCH_1851.5MHz_RB_1_0_NTNV

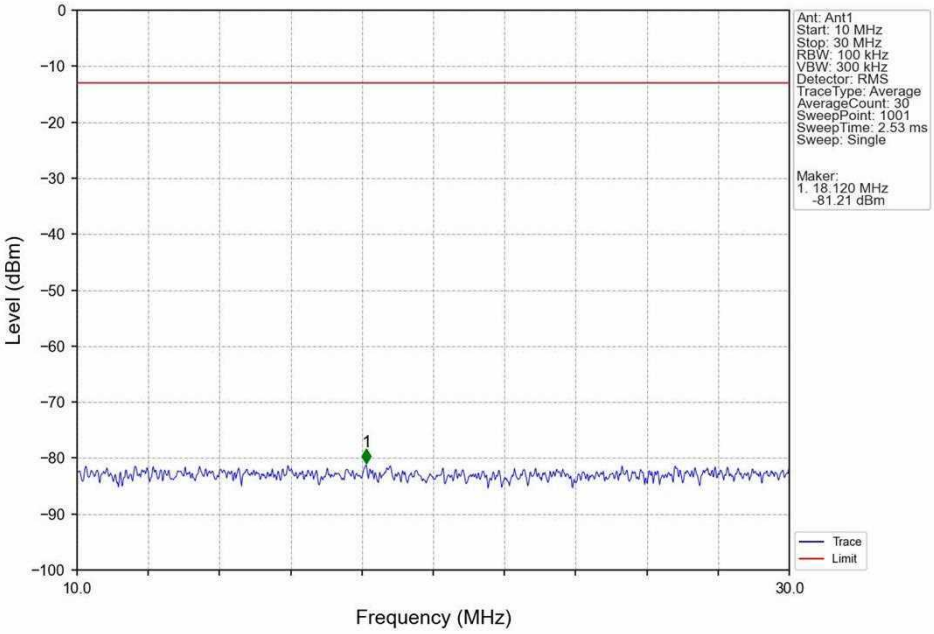

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_3MHz_QPSK_LCH_1851.5MHz_RB_1_0_NTNV

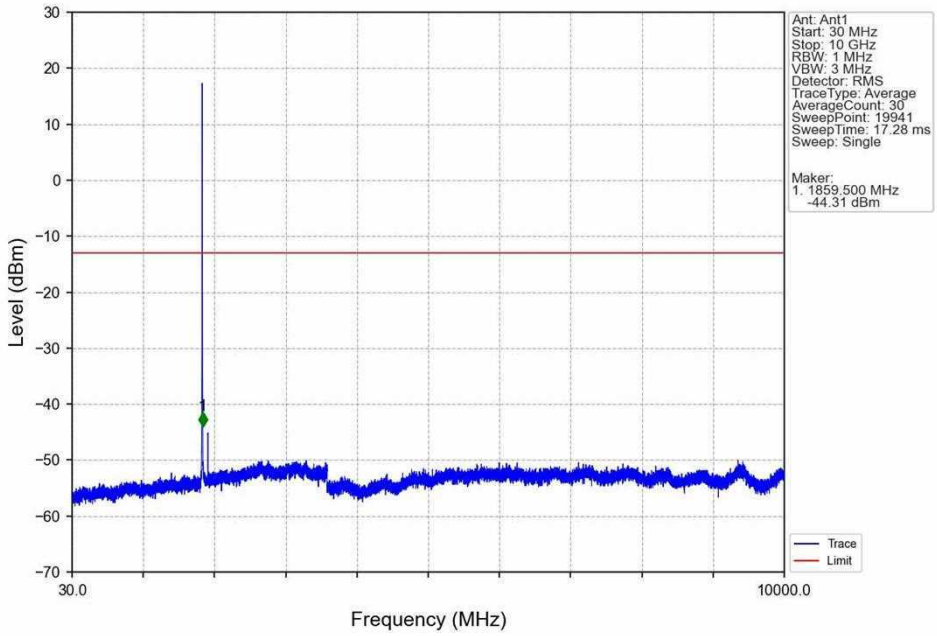

Band2_3MHz_QPSK_LCH_1851.5MHz_RB_1_0_NTNV

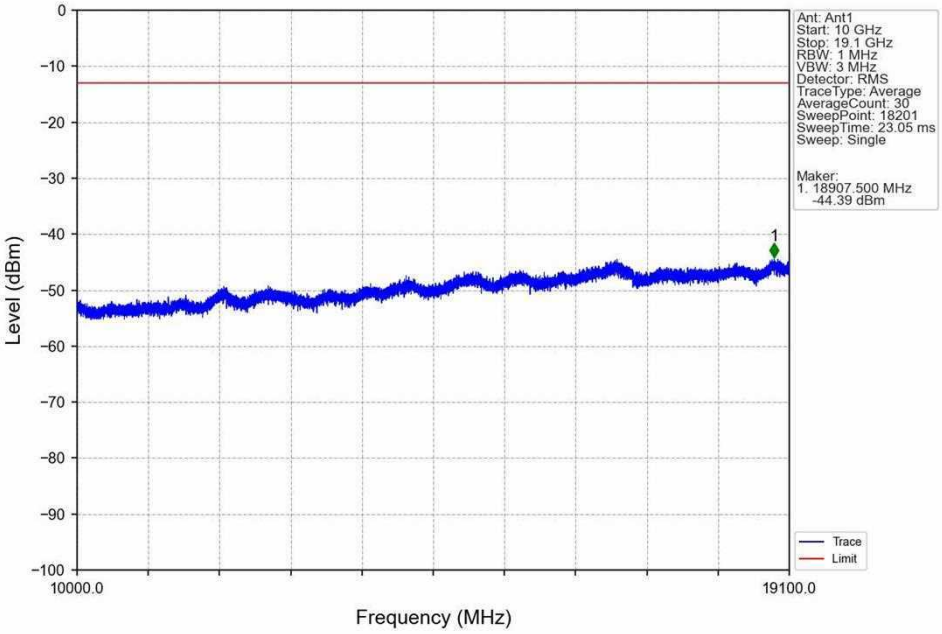

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_3MHz_QPSK_LCH_1851.5MHz_RB_15_0_NTNV

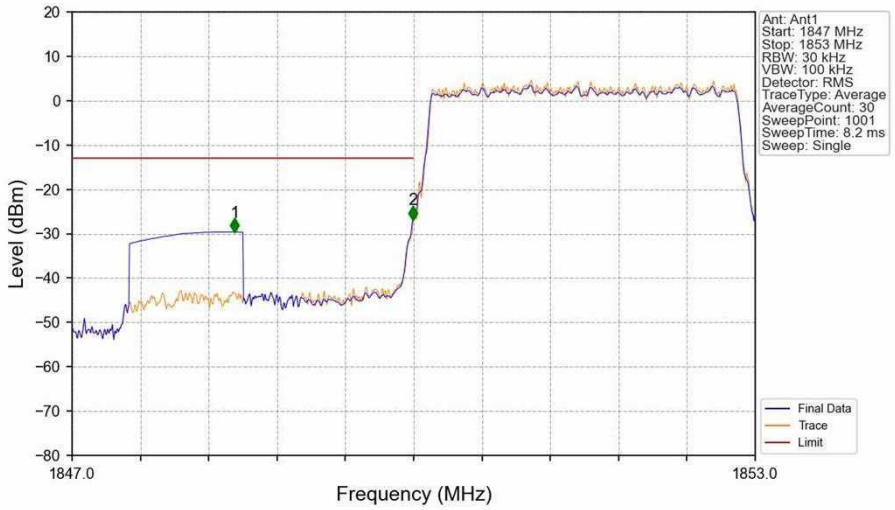

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1847	1849	1	CHP	1	1848.428	-29.60	-13	Pass
1849	1850	0.031	CHP	2	1849.994	-26.85	-13	Pass
1850	1853	0.031	CHP	/	/	/	/	/

Band2_3MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

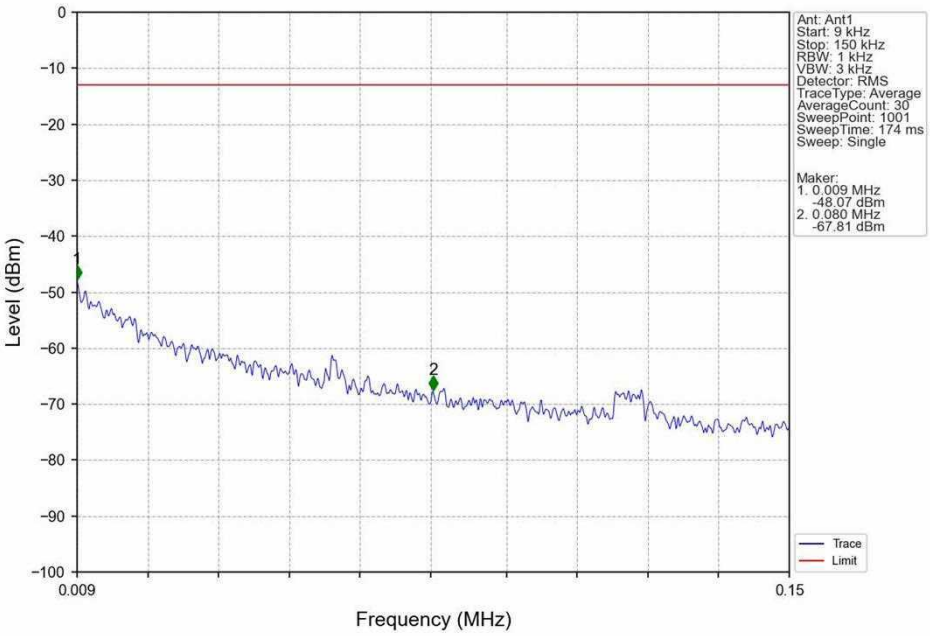

Band2_3MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

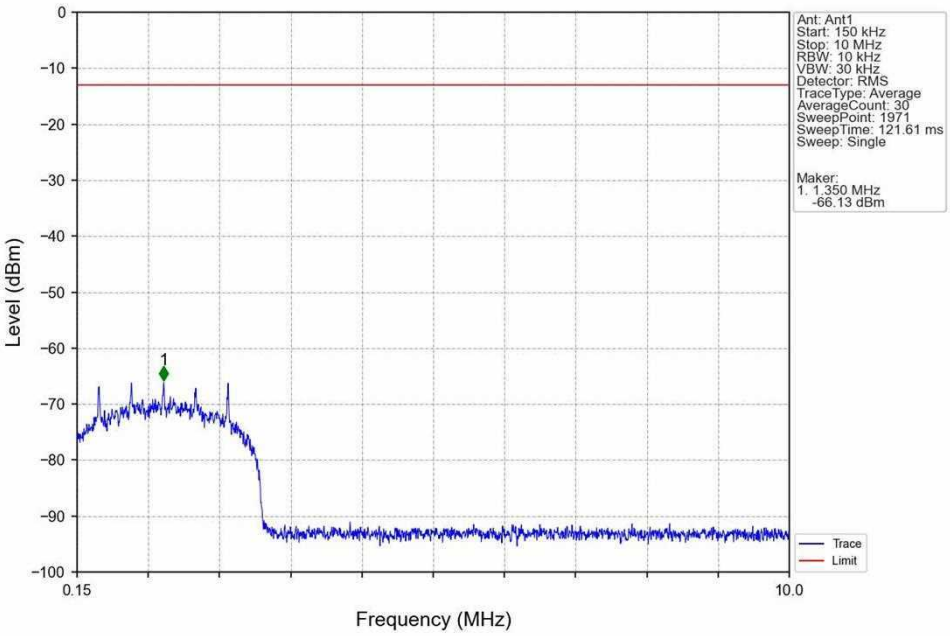

Band2_3MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

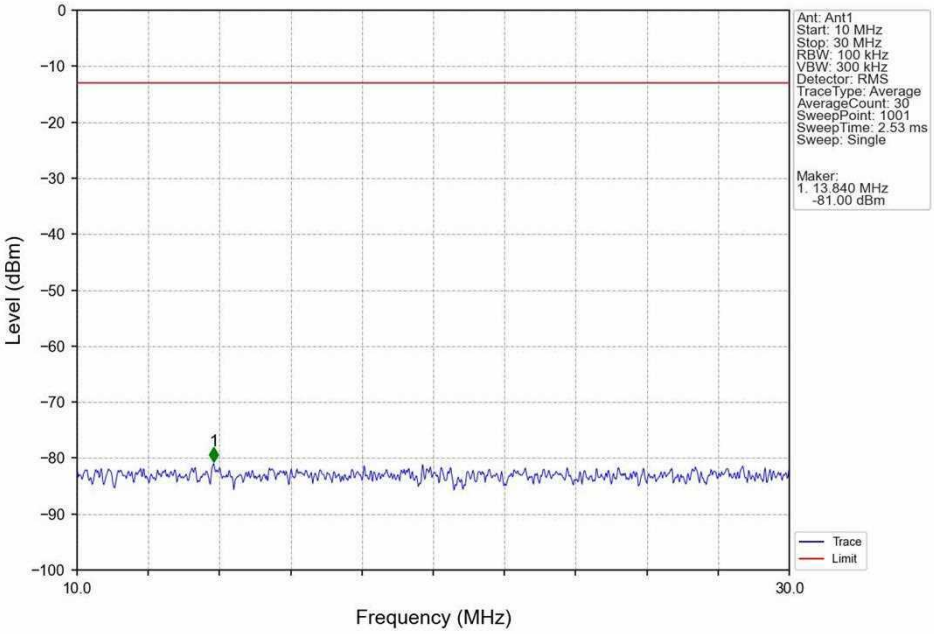

Band2_3MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

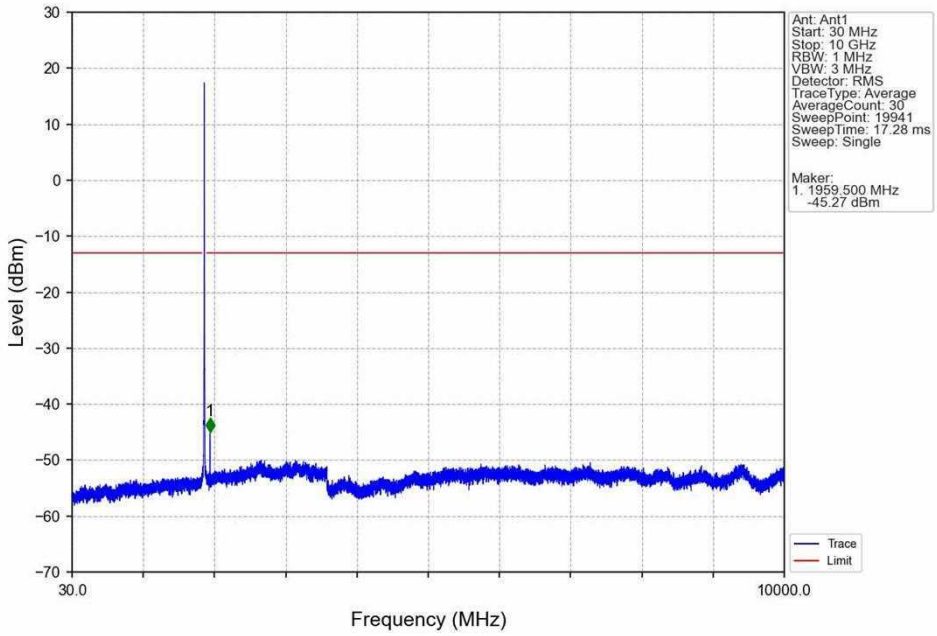

Band2_3MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

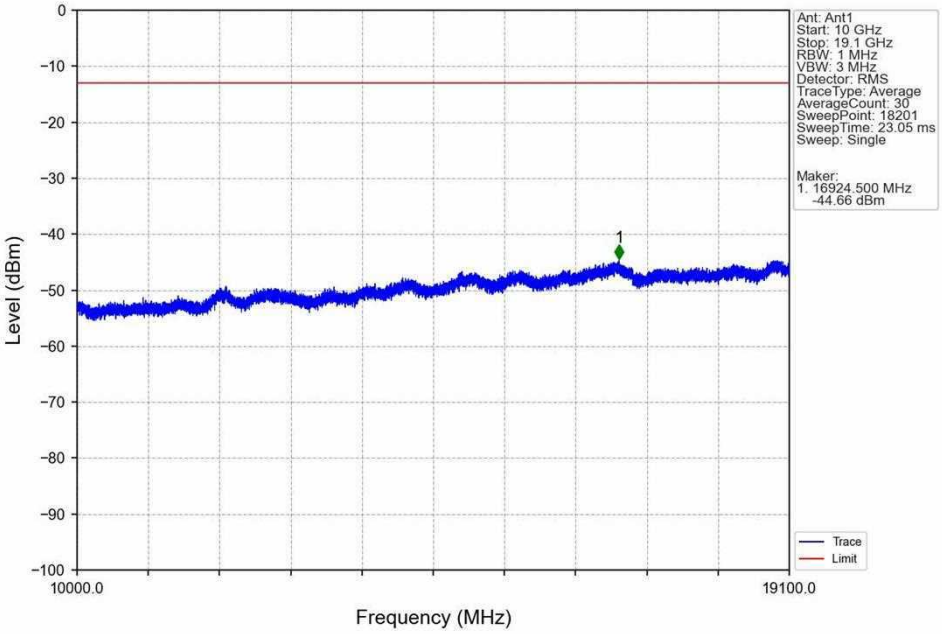

Band2_3MHz_QPSK_HCH_1908.5MHz_RB_1_0_NTNV

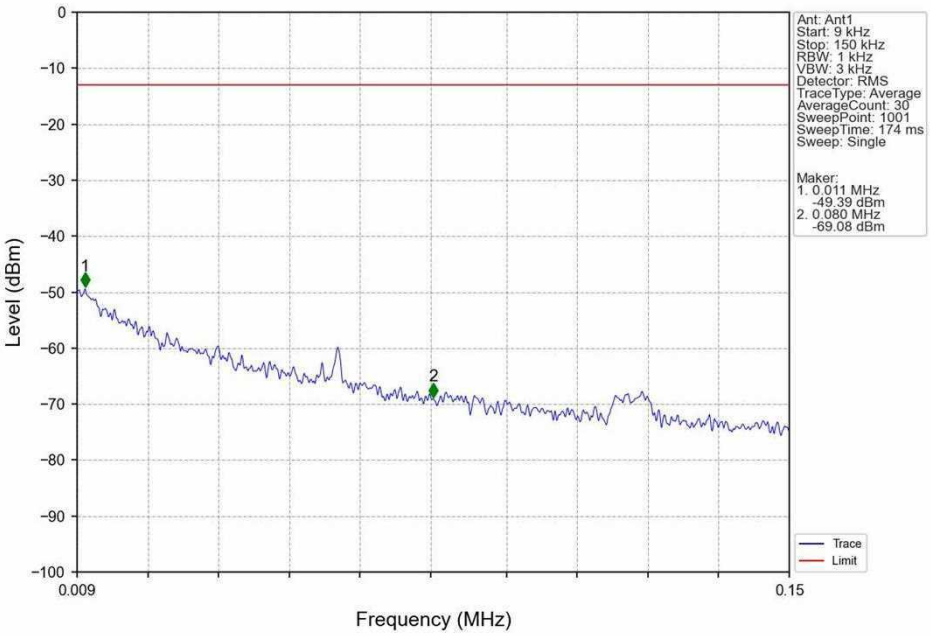

Band2_3MHz_QPSK_HCH_1908.5MHz_RB_1_0_NTNV

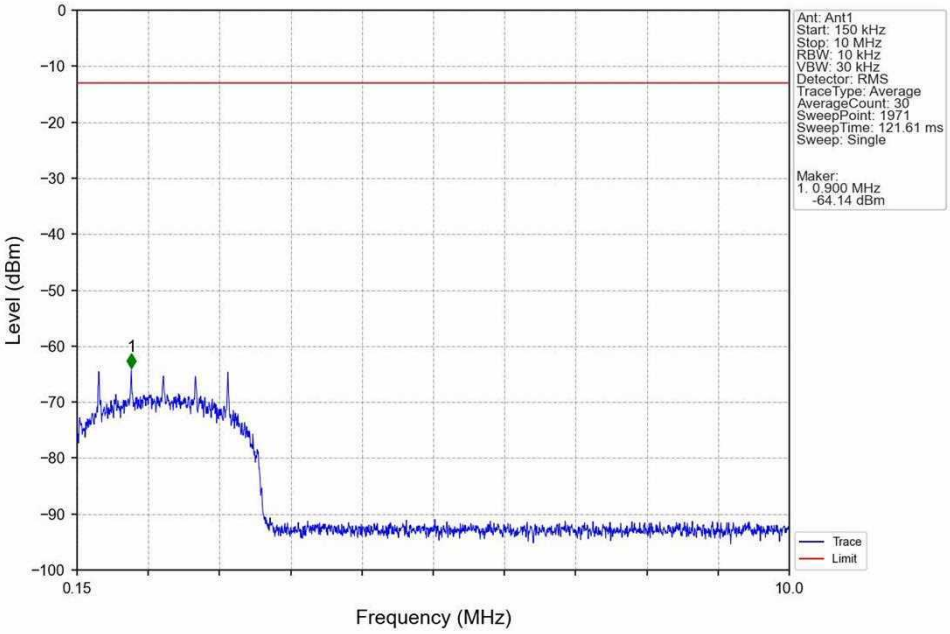

Band2_3MHz_QPSK_HCH_1908.5MHz_RB_1_0_NTNV

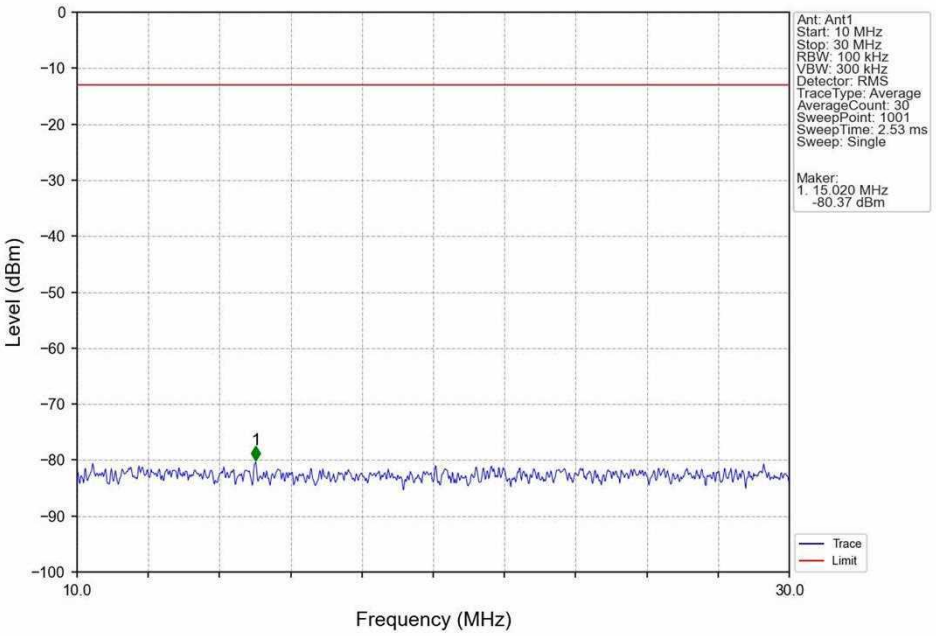

Band2_3MHz_QPSK_HCH_1908.5MHz_RB_1_0_NTNV

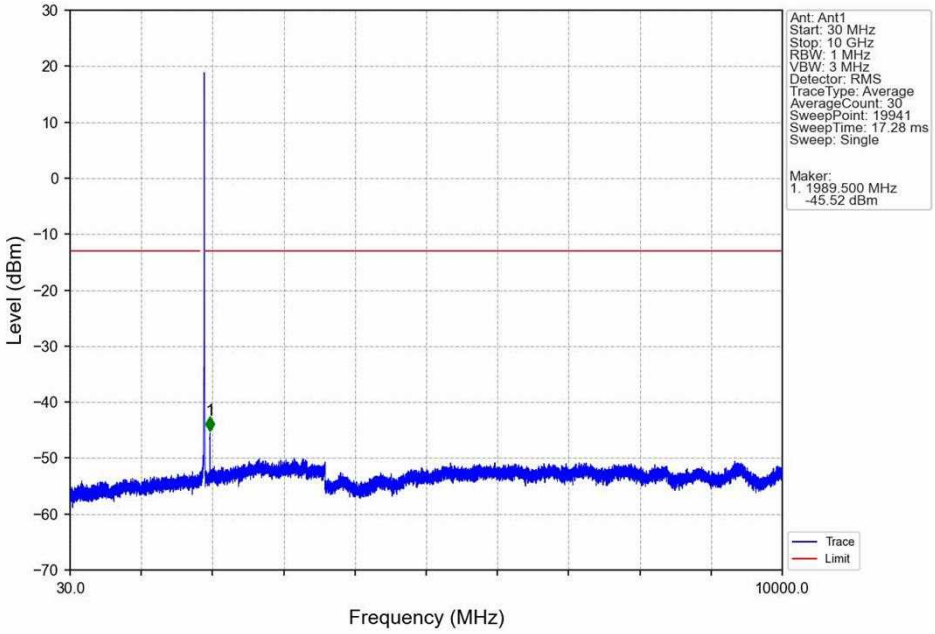

Band2_3MHz_QPSK_HCH_1908.5MHz_RB_1_0_NTNV

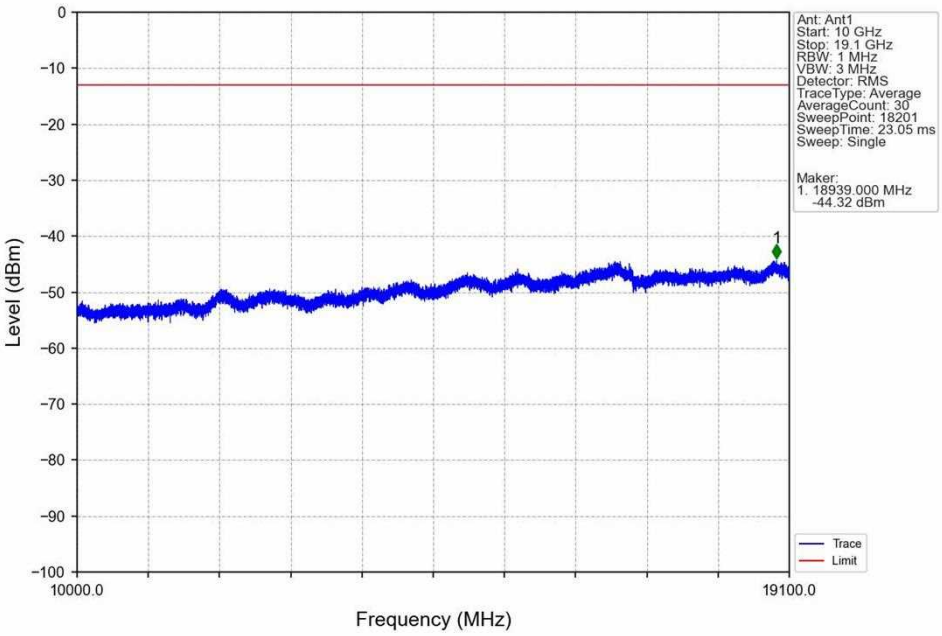

Band2_3MHz_QPSK_HCH_1908.5MHz_RB_1_14_NTNV

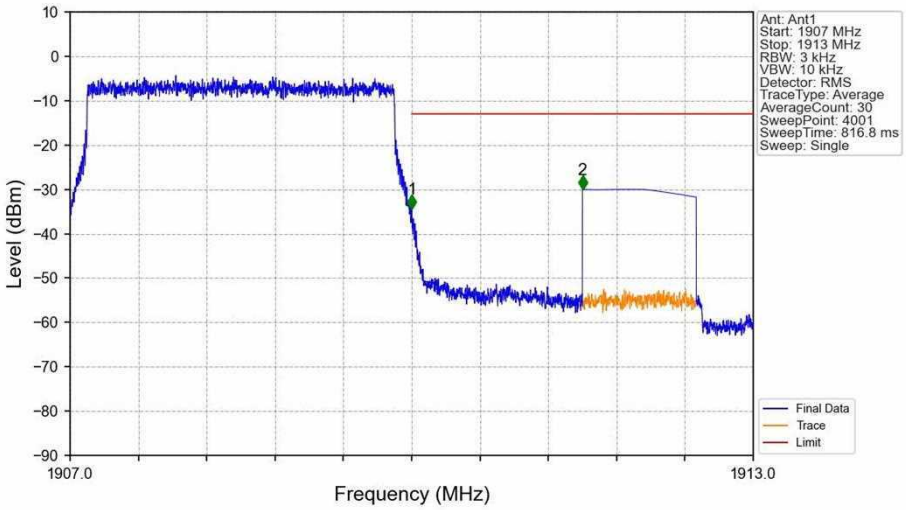

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1907	1910	0.003	/	/	/	/	/	/
1910	1911	0.003	/	1	1910.002	-34.36	-13	Pass
1911	1913	1	CHP	2	1911.500	-30.02	-13	Pass

Band2_3MHz_QPSK_HCH_1908.5MHz_RB_15_0_NTNV

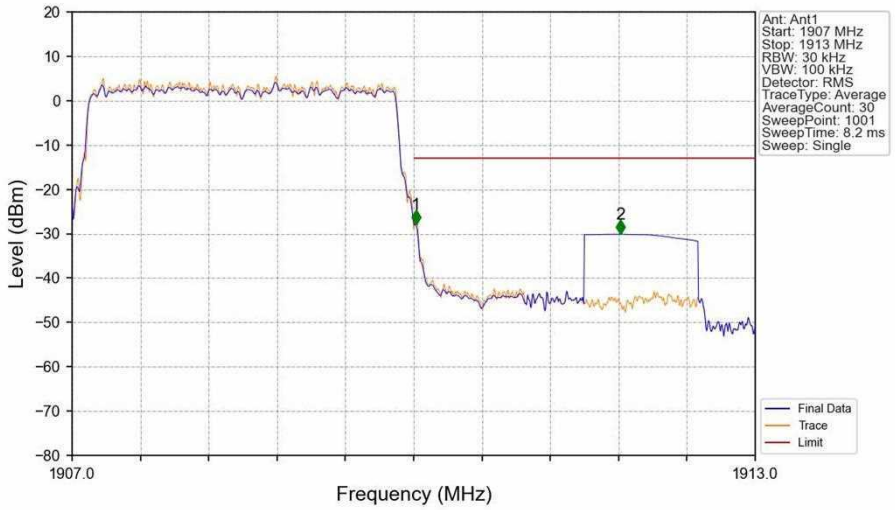

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1907	1910	0.031	CHP	/	/	/	/	/
1910	1911	0.031	CHP	1	1910.018	-27.91	-13	Pass
1911	1913	1	CHP	2	1911.818	-30.11	-13	Pass

Band2_3MHz_16QAM_LCH_1851.5MHz_RB_1_0_NTNV

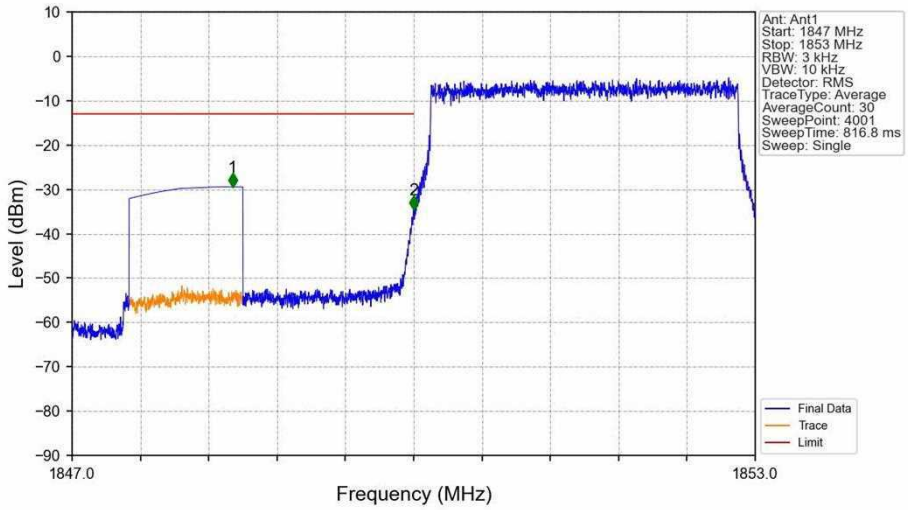

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1847	1849	1	CHP	1	1848.410	-29.44	-13	Pass
1849	1850	0.003	/	2	1849.998	-34.55	-13	Pass
1850	1853	0.003	/	/	/	/	/	/

Total or partial reproduction of this document without permission of the Laboratory is not allowed.

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_3MHz_16QAM_LCH_1851.5MHz_RB_1_0_NTNV

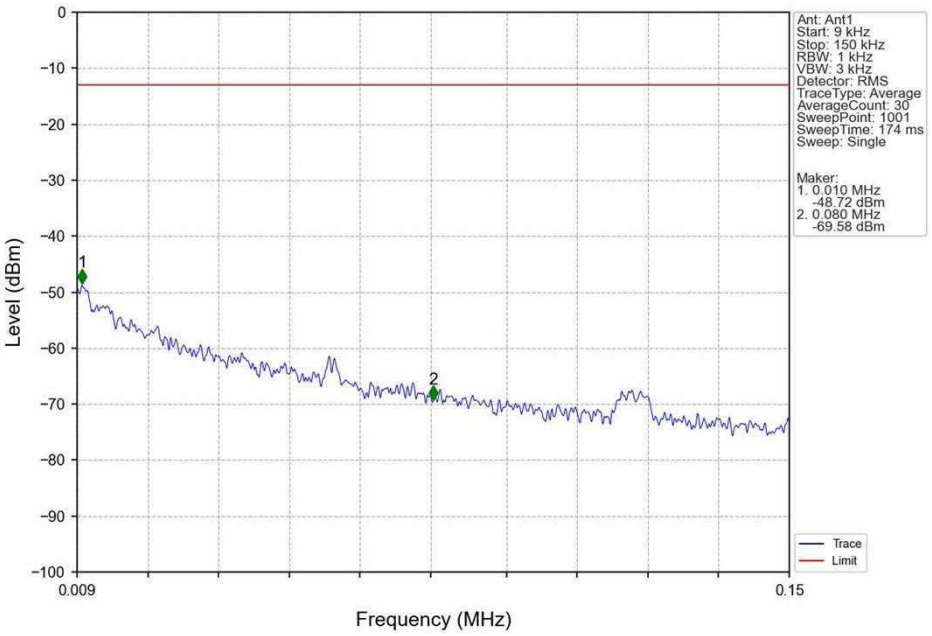

Band2_3MHz_16QAM_LCH_1851.5MHz_RB_1_0_NTNV

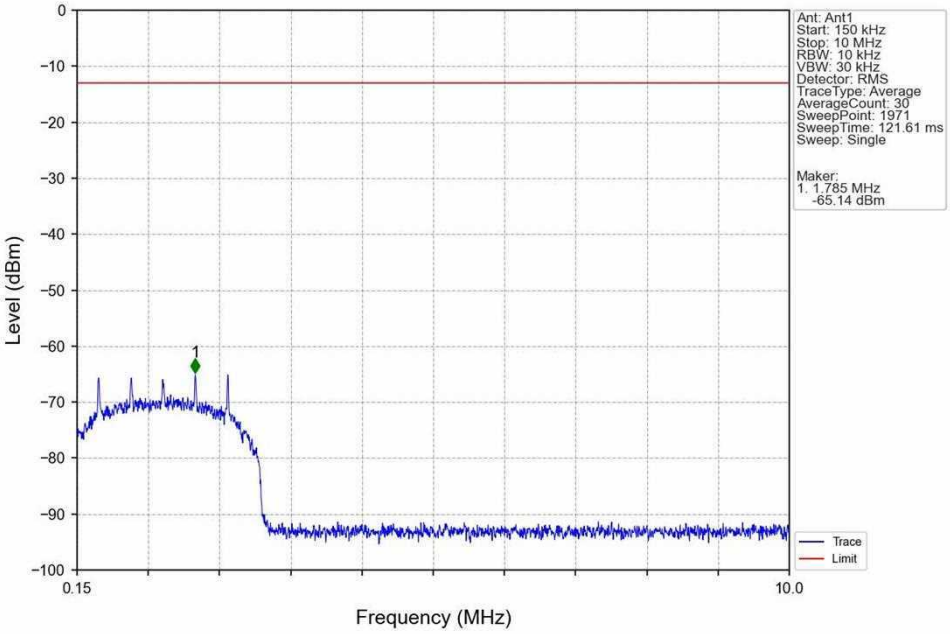

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_3MHz_16QAM_LCH_1851.5MHz_RB_1_0_NTNV

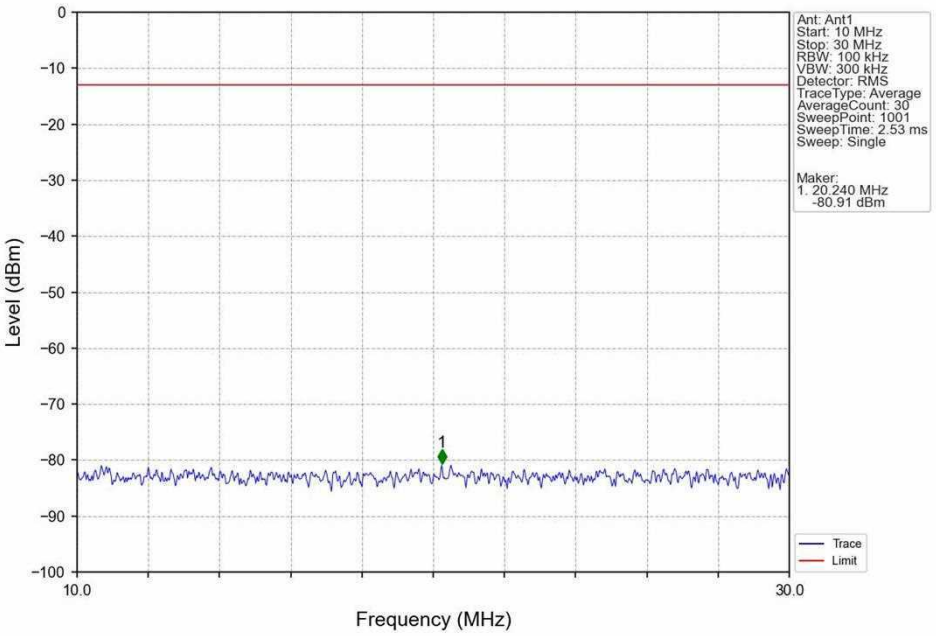

Band2_3MHz_16QAM_LCH_1851.5MHz_RB_1_0_NTNV

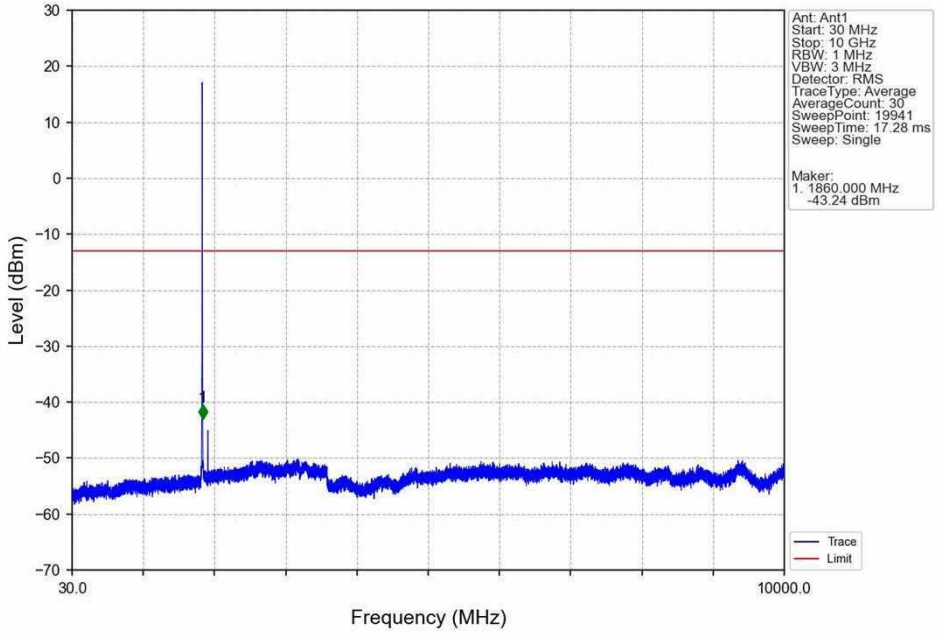

Band2_3MHz_16QAM_LCH_1851.5MHz_RB_1_0_NTNV

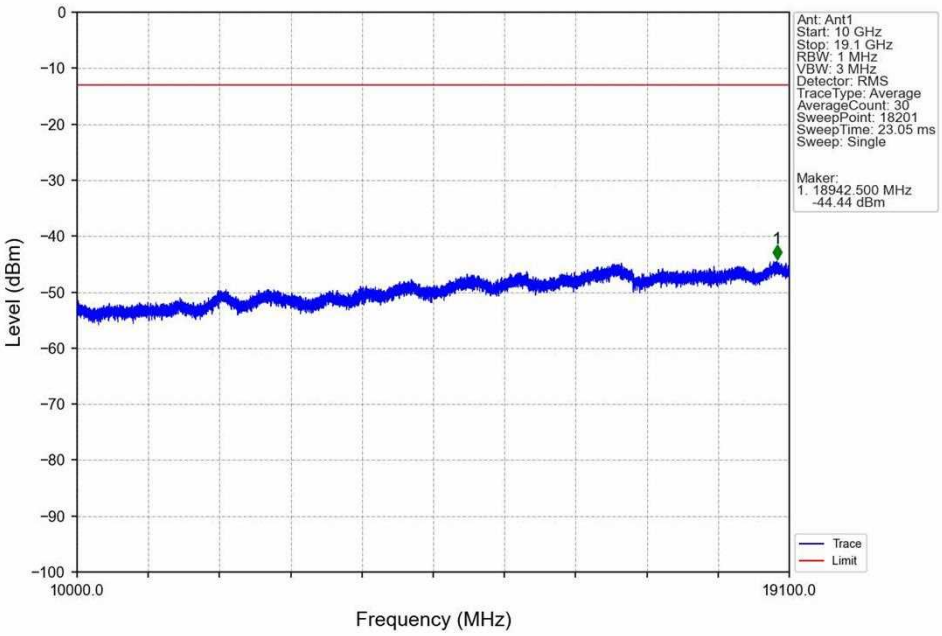

Band2_3MHz_16QAM_LCH_1851.5MHz_RB_15_0_NTNV

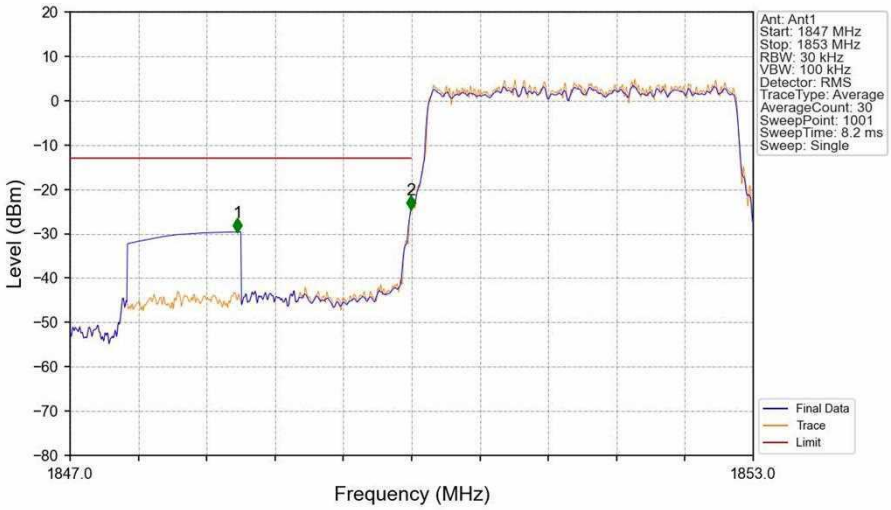

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1847	1849	1	CHP	1	1848.470	-29.62	-13	Pass
1849	1850	0.031	CHP	2	1849.994	-24.59	-13	Pass
1850	1853	0.031	CHP	/	/	/	/	/

Total or partial reproduction of this document without permission of the Laboratory is not allowed.

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_3MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

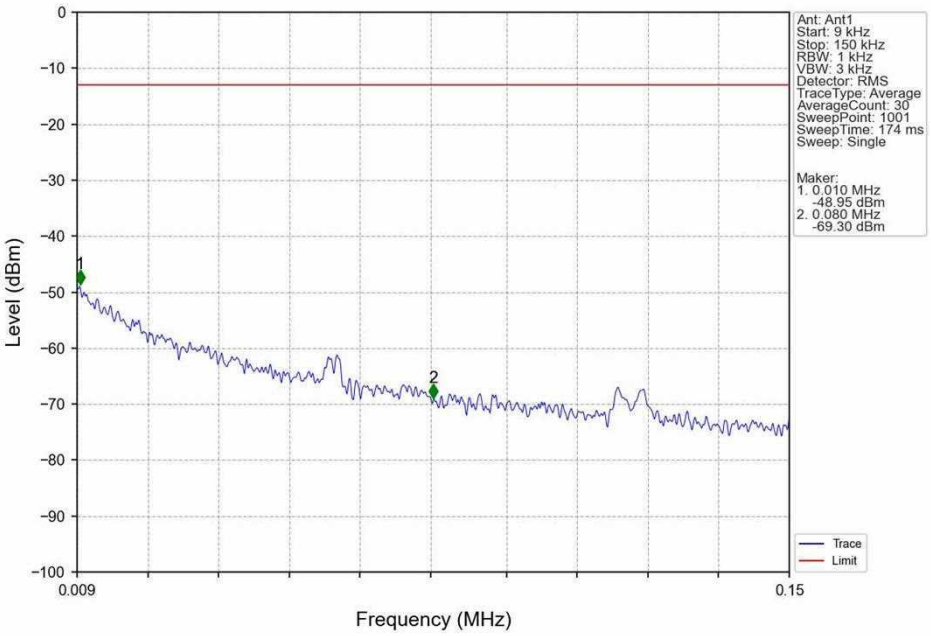

Band2_3MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

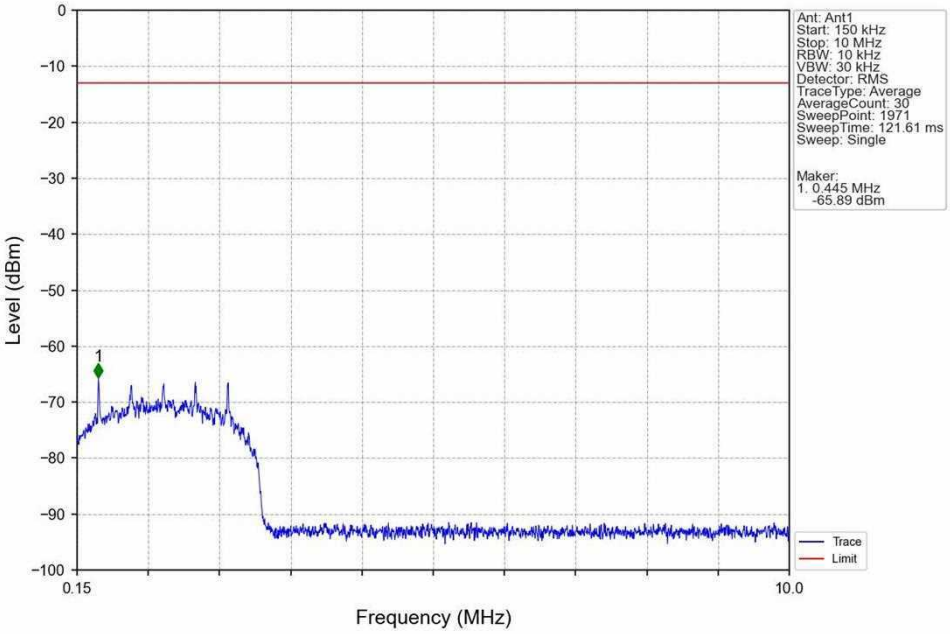

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_3MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

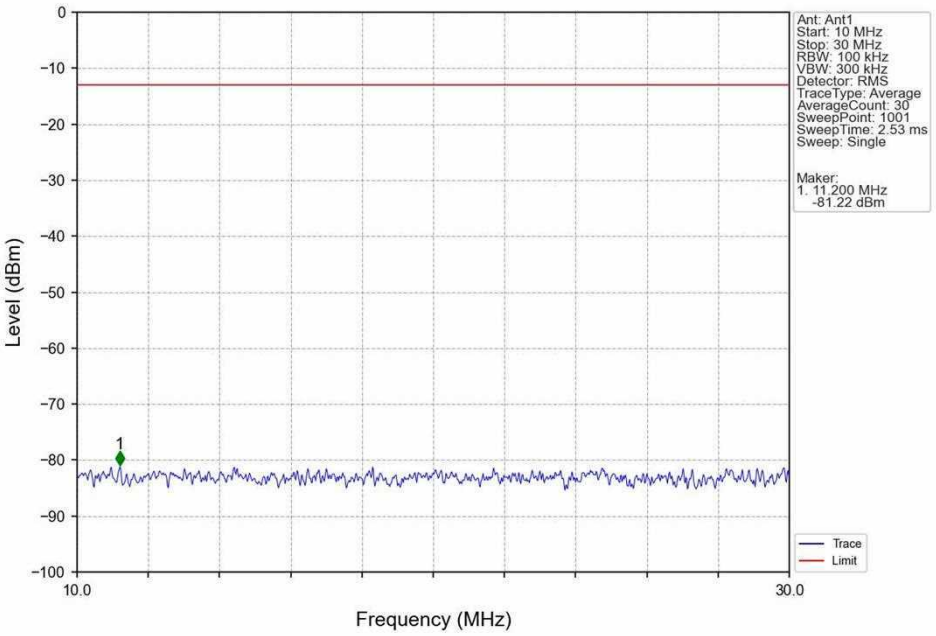

Band2_3MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

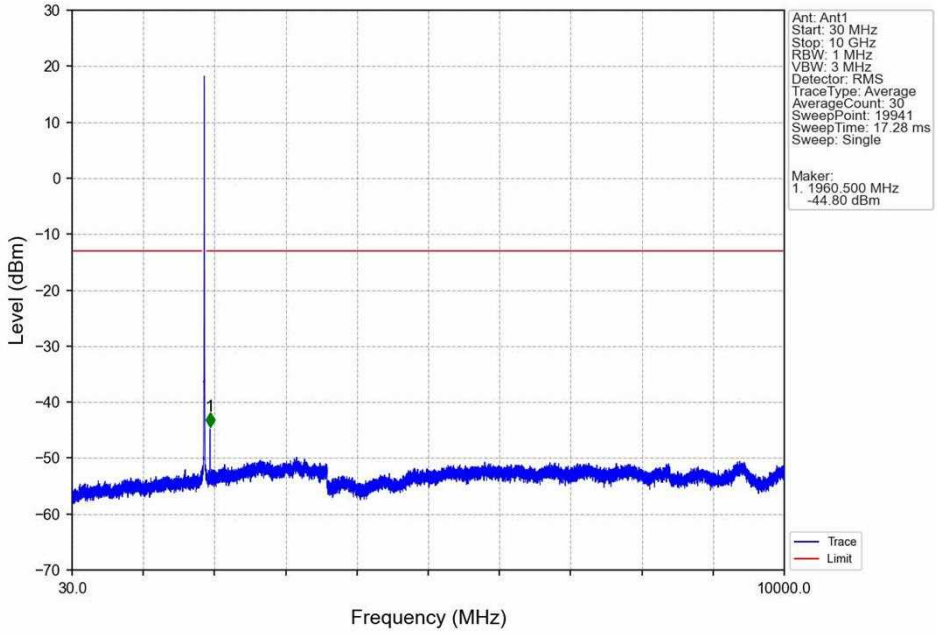

Band2_3MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

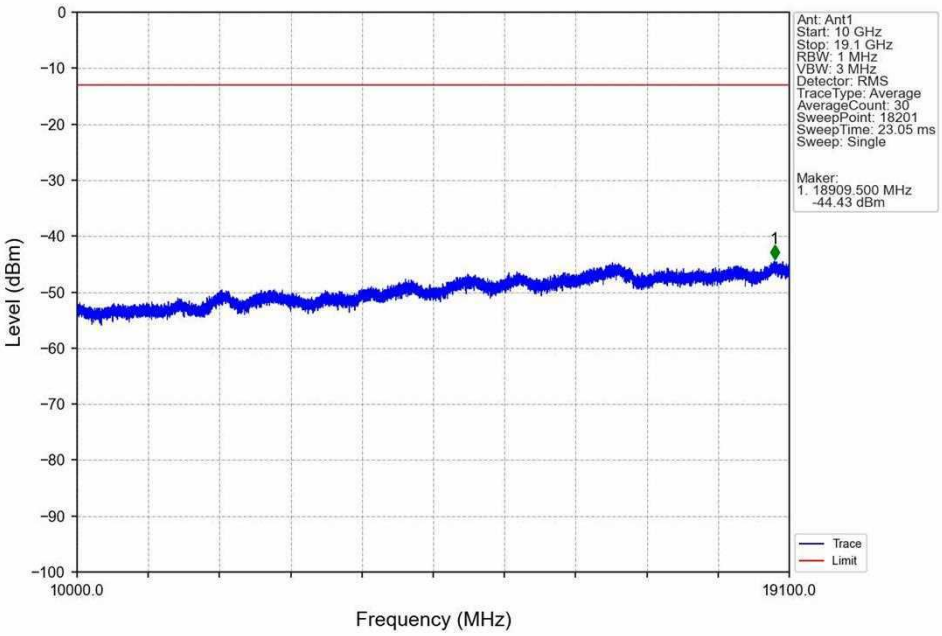

Band2_3MHz_16QAM_HCH_1908.5MHz_RB_1_0_NTNV

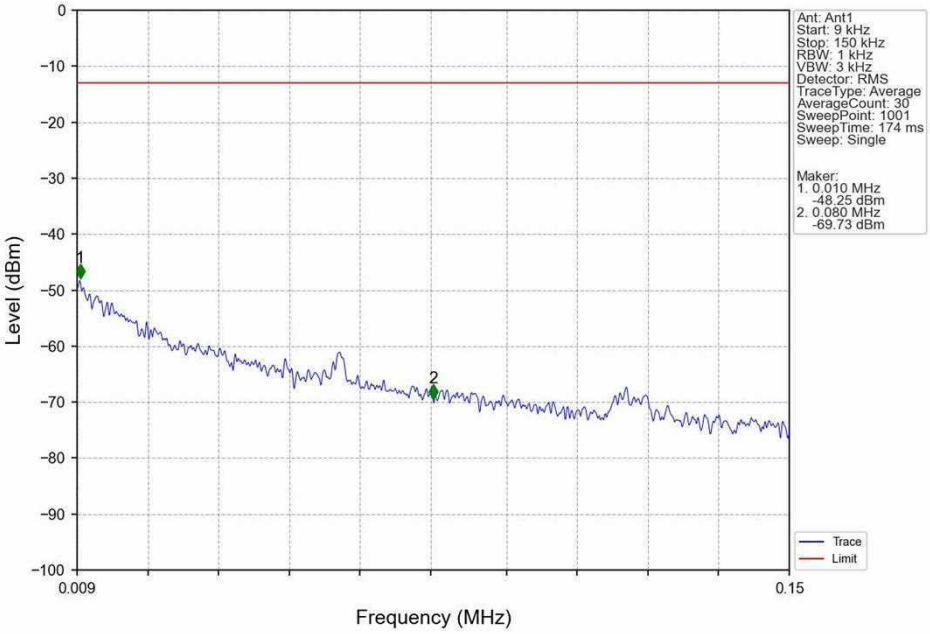

Band2_3MHz_16QAM_HCH_1908.5MHz_RB_1_0_NTNV

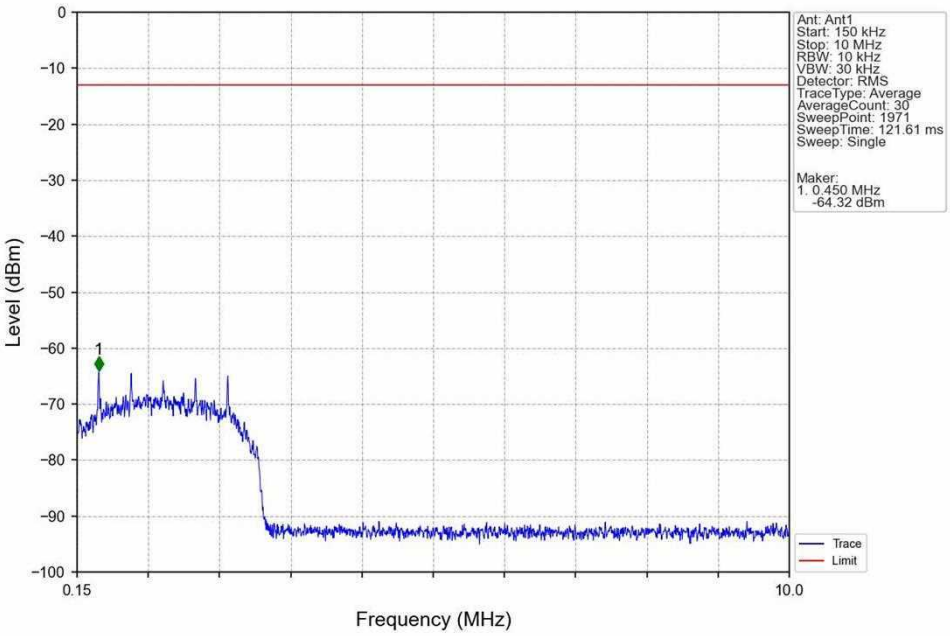

Band2_3MHz_16QAM_HCH_1908.5MHz_RB_1_0_NTNV

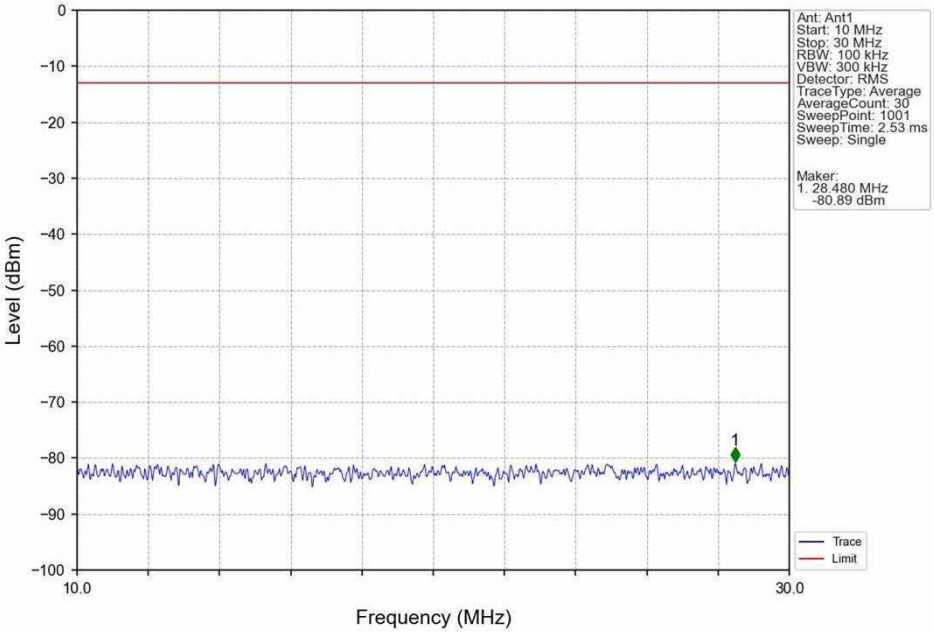

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_3MHz_16QAM_HCH_1908.5MHz_RB_1_0_NTNV

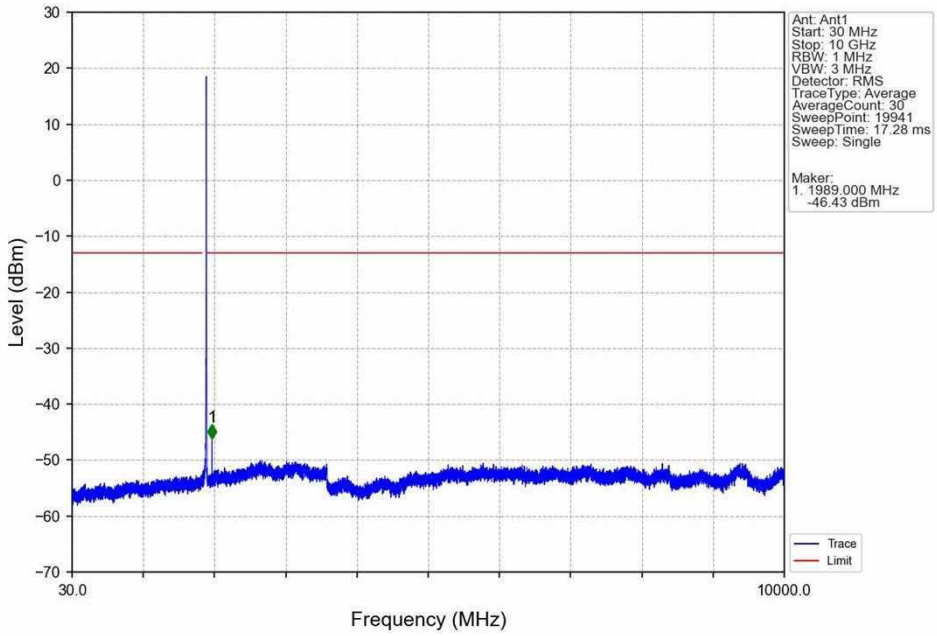

Band2_3MHz_16QAM_HCH_1908.5MHz_RB_1_0_NTNV

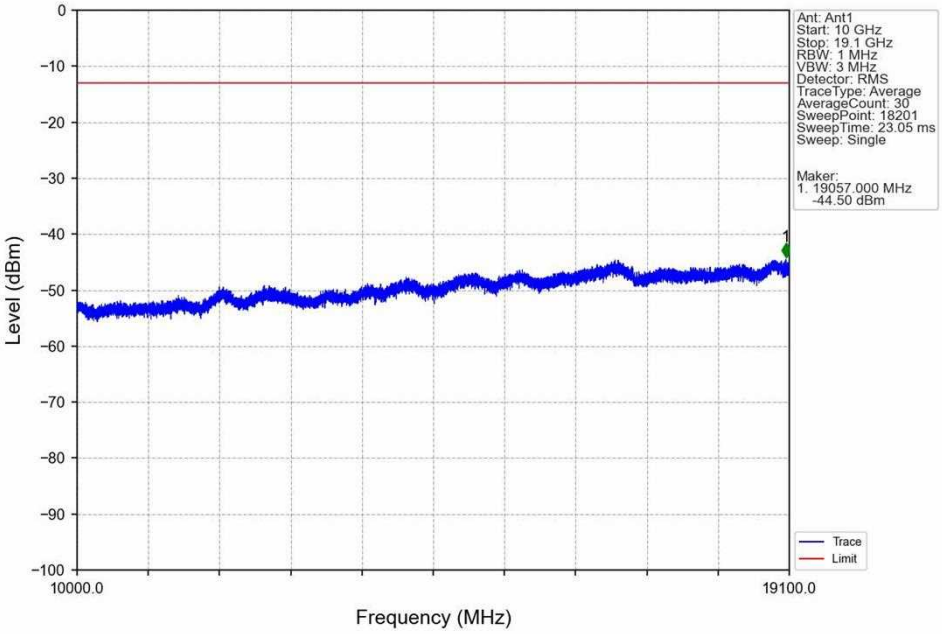

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_3MHz_16QAM_HCH_1908.5MHz_RB_1_14_NTNV

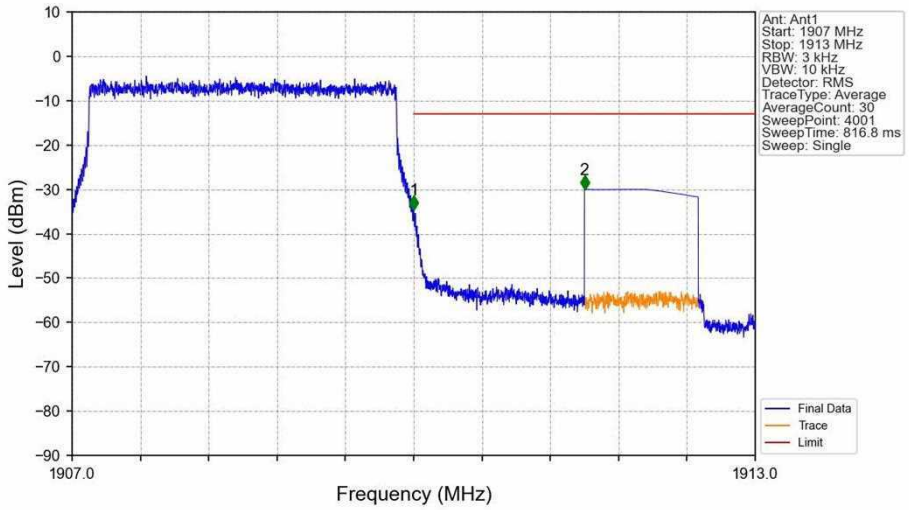

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1907	1910	0.003	/	/	/	/	/	/
1910	1911	0.003	/	1	1910.002	-34.63	-13	Pass
1911	1913	1	CHP	2	1911.500	-30.01	-13	Pass

Band2_3MHz_16QAM_HCH_1908.5MHz_RB_15_0_NTNV

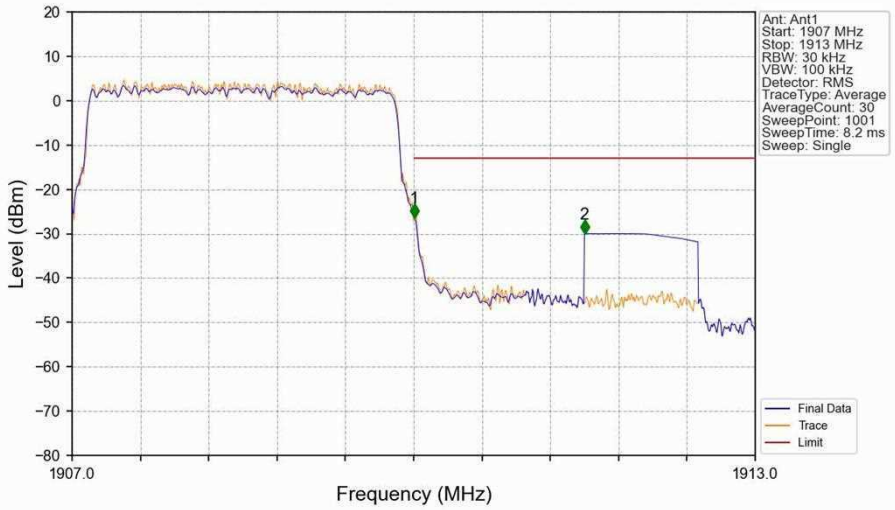

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1907	1910	0.031	CHP	/	/	/	/	/
1910	1911	0.031	CHP	1	1910.006	-26.33	-13	Pass
1911	1913	1	CHP	2	1911.500	-29.95	-13	Pass

6.2.3 B2_5MHz

Band2_5MHz_QPSK_LCH_1852.5MHz_RB_1_0_NTNV

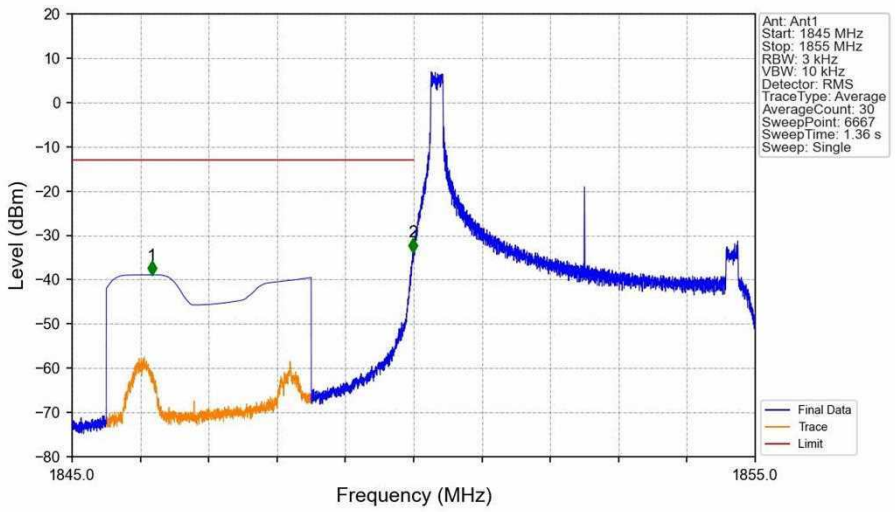

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1845	1849	1	CHP	1	1846.169	-38.92	-13	Pass
1849	1850	0.003	/	2	1849.989	-33.77	-13	Pass
1850	1855	0.003	/	/	/	/	/	/

Band2_5MHz_QPSK_LCH_1852.5MHz_RB_1_0_NTNV

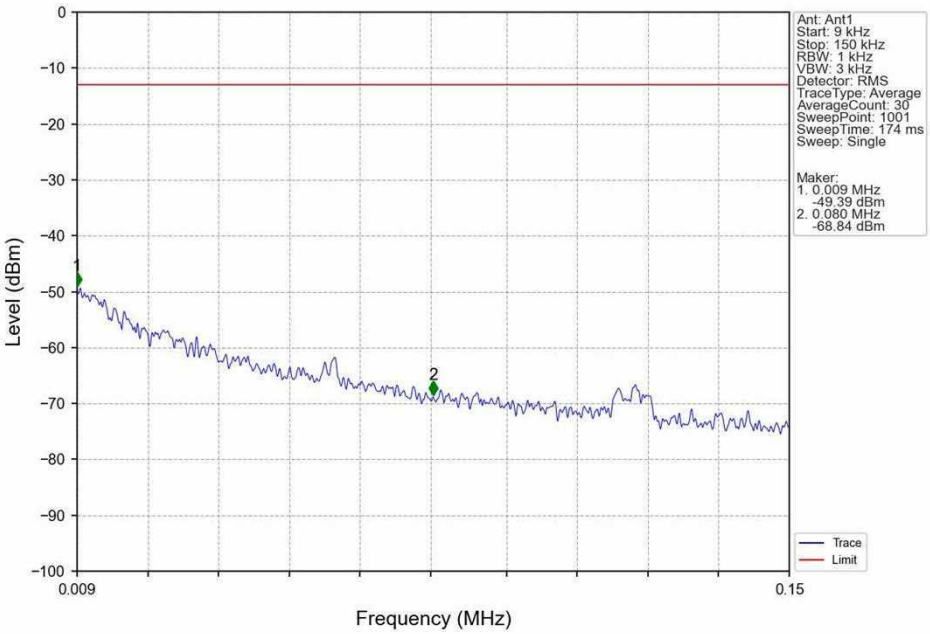

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_5MHz_QPSK_LCH_1852.5MHz_RB_1_0_NTNV

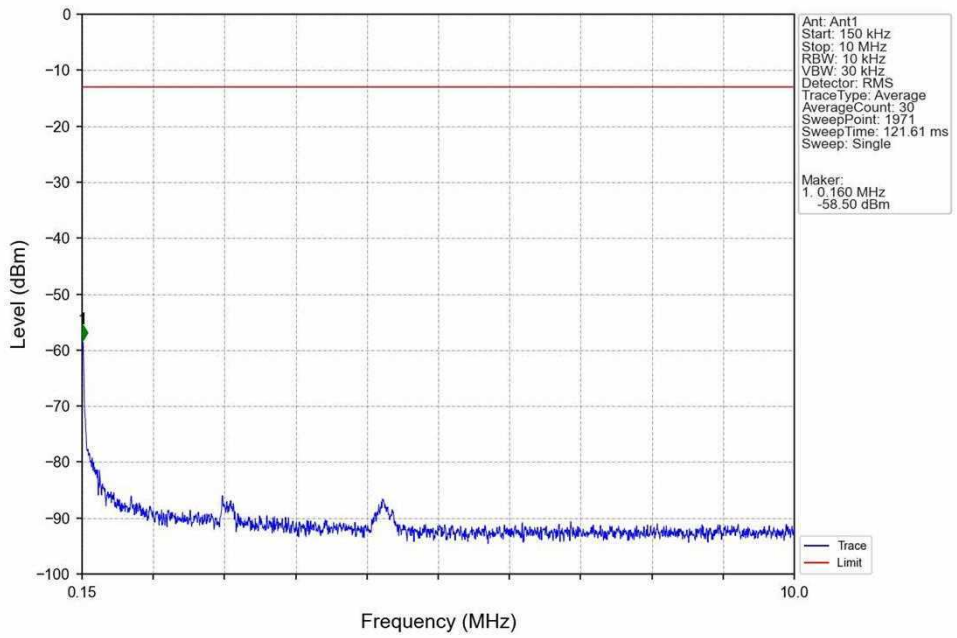

Band2_5MHz_QPSK_LCH_1852.5MHz_RB_1_0_NTNV

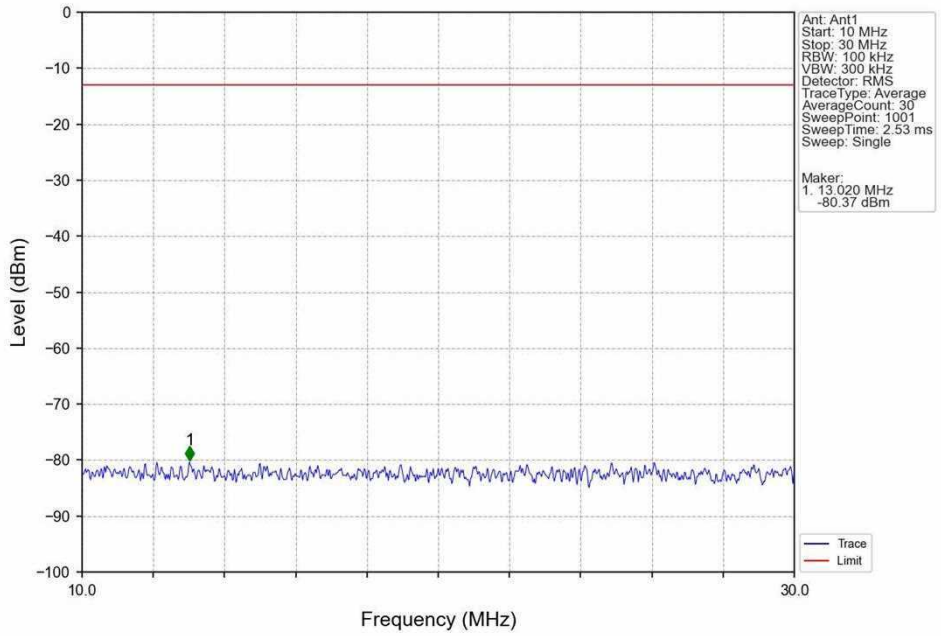

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_5MHz_QPSK_LCH_1852.5MHz_RB_1_0_NTNV

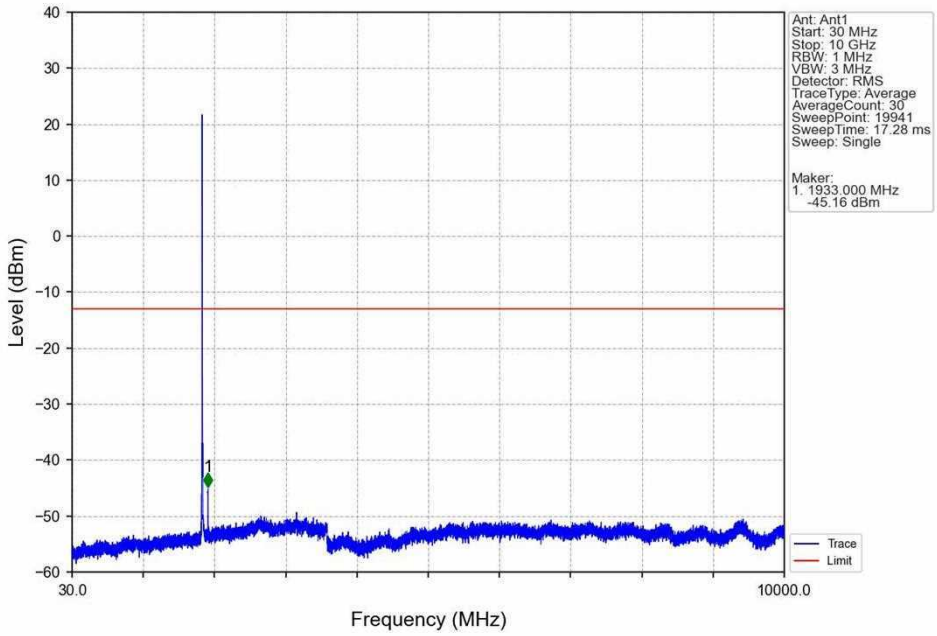

Band2_5MHz_QPSK_LCH_1852.5MHz_RB_1_0_NTNV

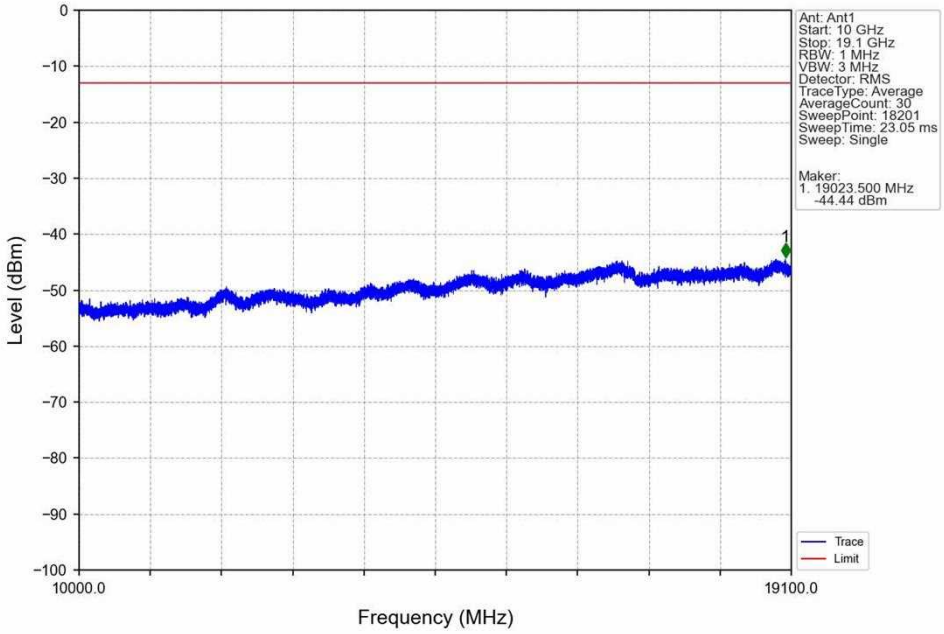

Band2_5MHz_QPSK_LCH_1852.5MHz_RB_25_0_NTNV

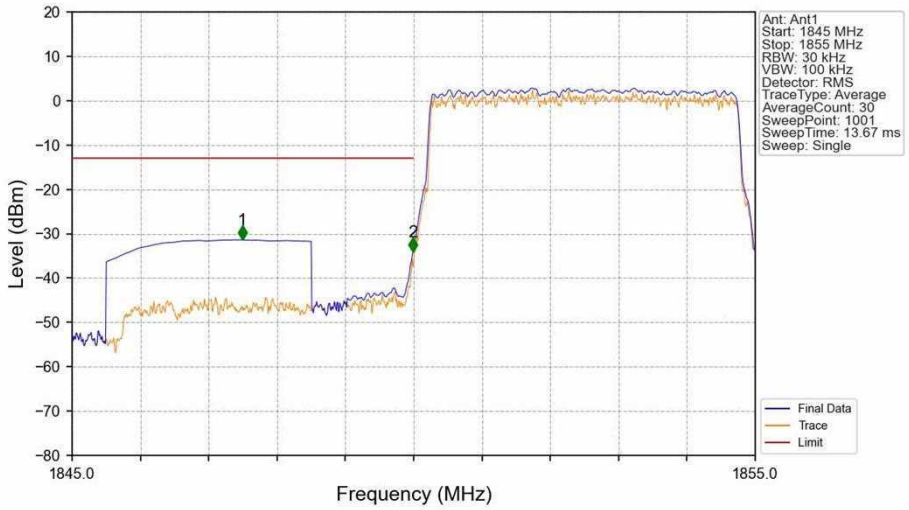

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1845	1849	1	CHP	1	1847.490	-31.38	-13	Pass
1849	1850	0.05	CHP	2	1849.990	-34.03	-13	Pass
1850	1855	0.05	CHP	/	/	/	/	/

Band2_5MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

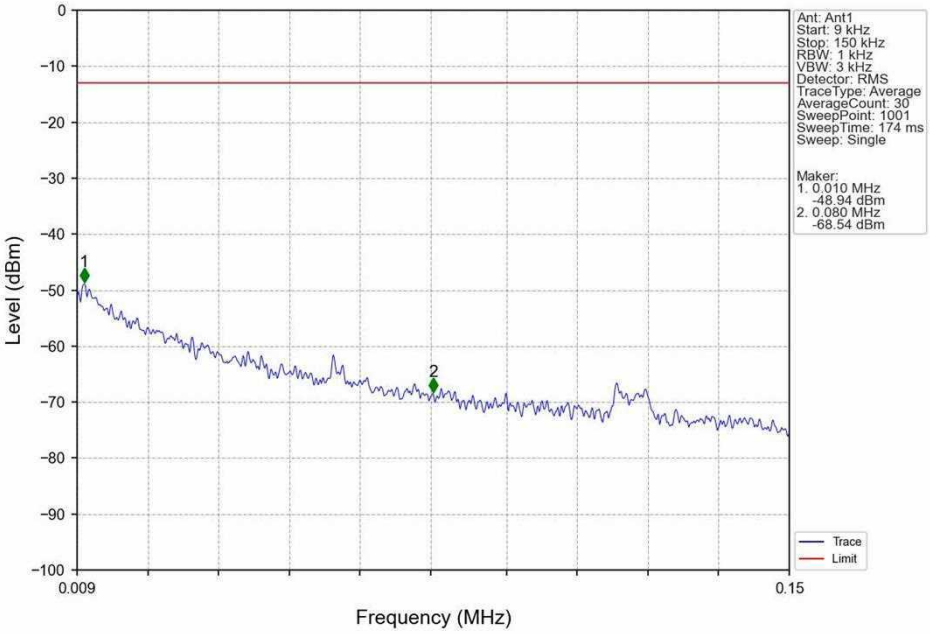

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_5MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

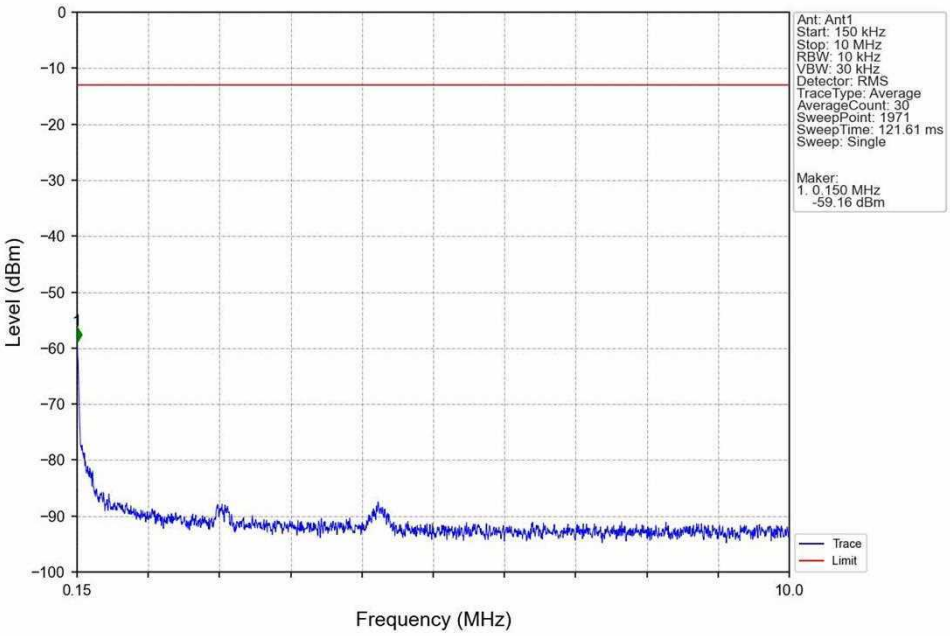

Band2_5MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

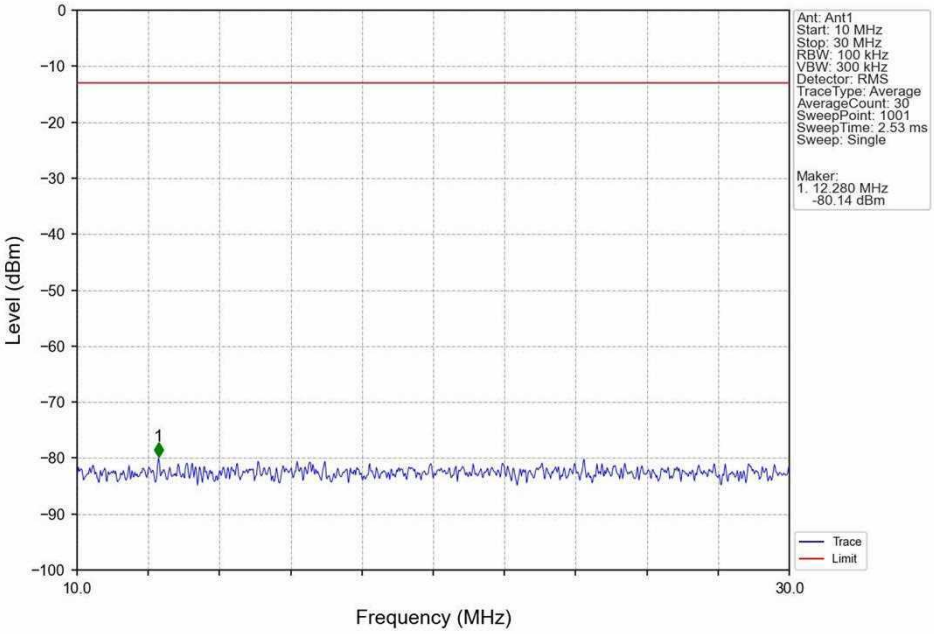

Band2_5MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

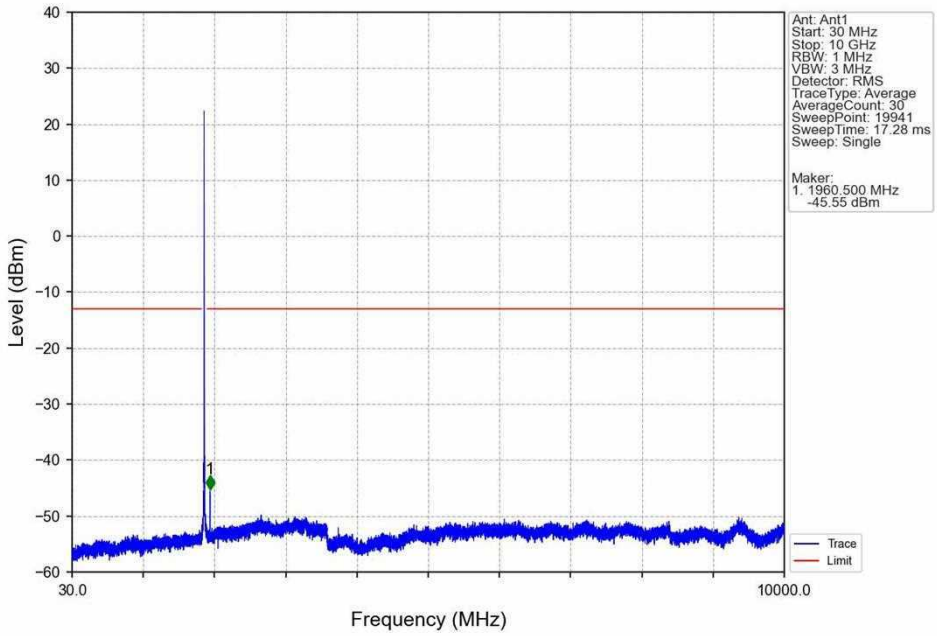

Band2_5MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

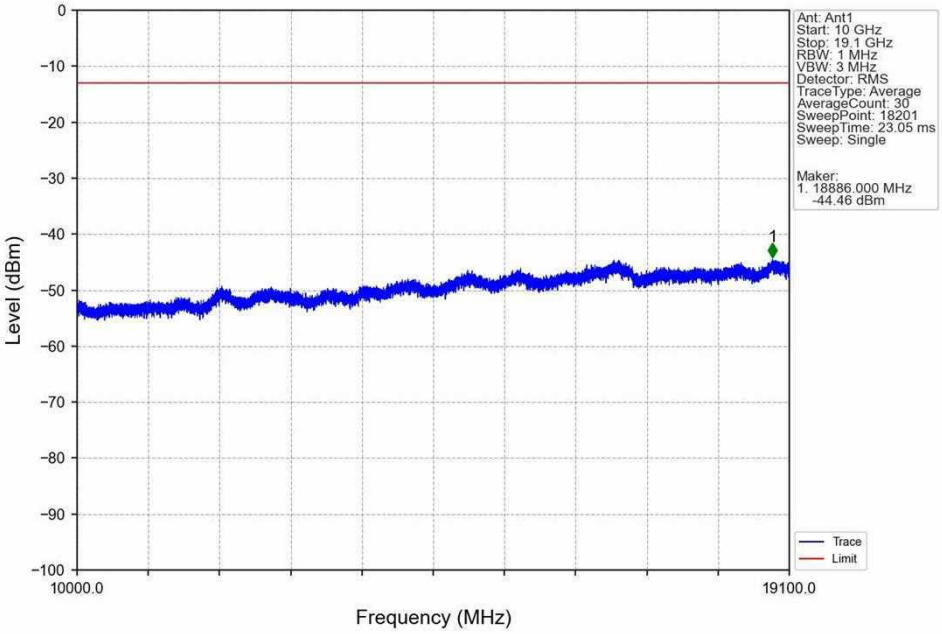

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_5MHz_QPSK_HCH_1907.5MHz_RB_1_0_NTNV

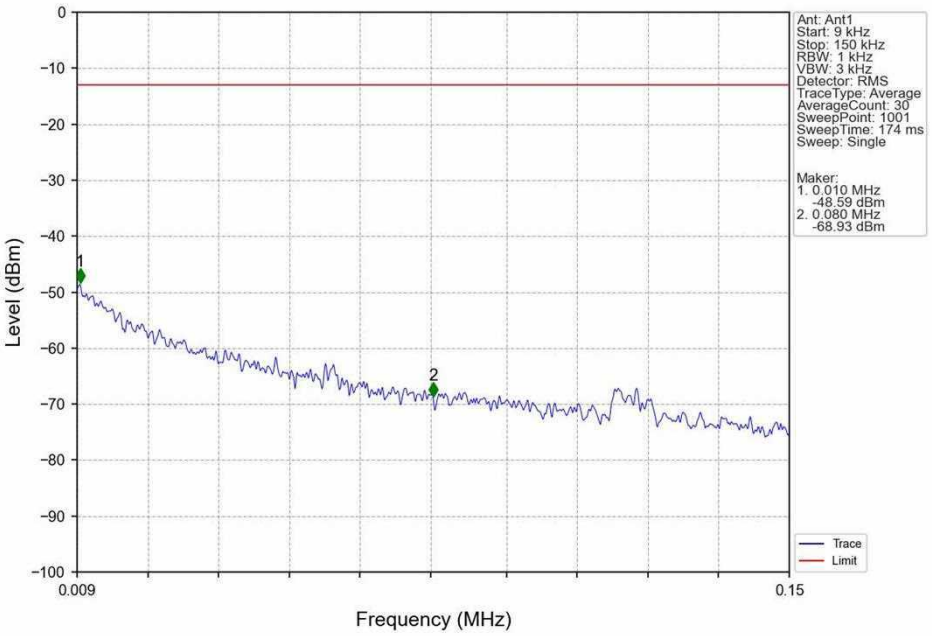

Band2_5MHz_QPSK_HCH_1907.5MHz_RB_1_0_NTNV

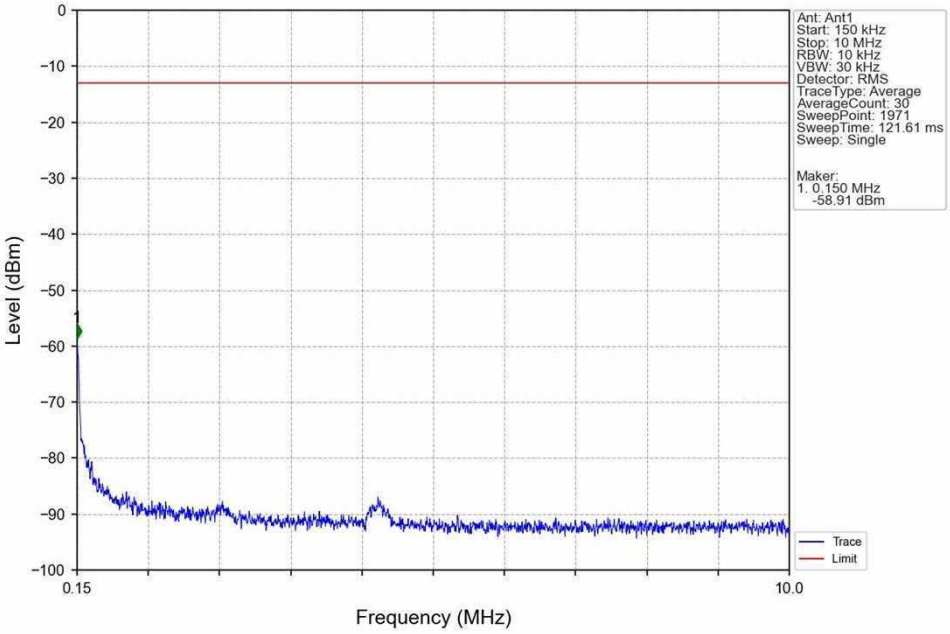

Band2_5MHz_QPSK_HCH_1907.5MHz_RB_1_0_NTNV

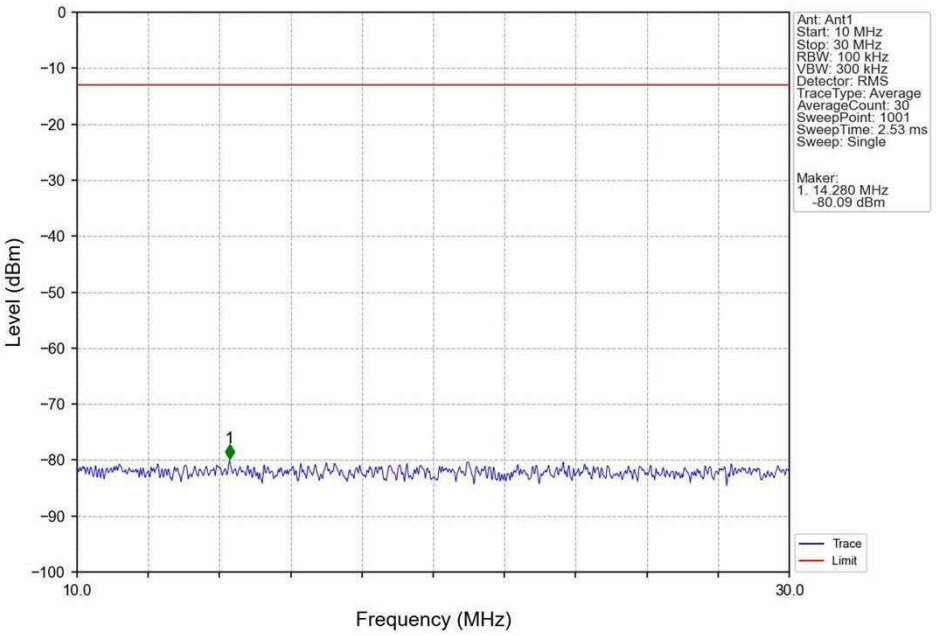

Band2_5MHz_QPSK_HCH_1907.5MHz_RB_1_0_NTNV

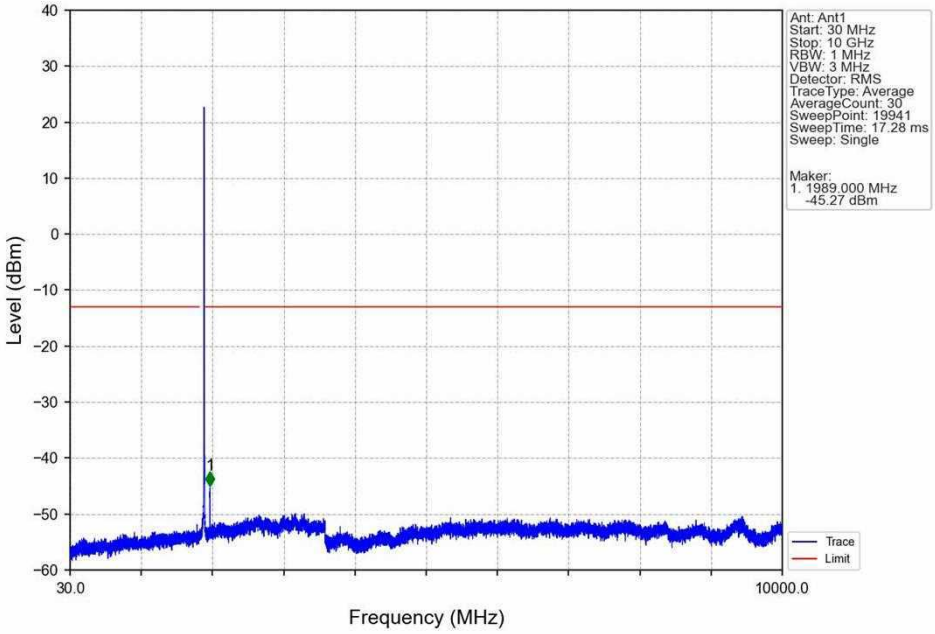

Band2_5MHz_QPSK_HCH_1907.5MHz_RB_1_0_NTNV

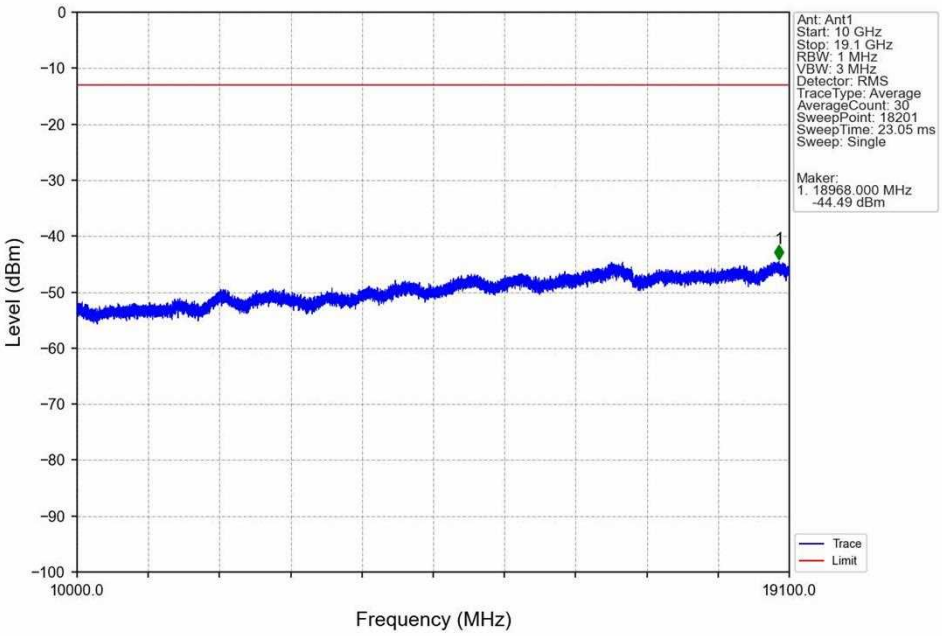

Band2_5MHz_QPSK_HCH_1907.5MHz_RB_1_24_NTNV

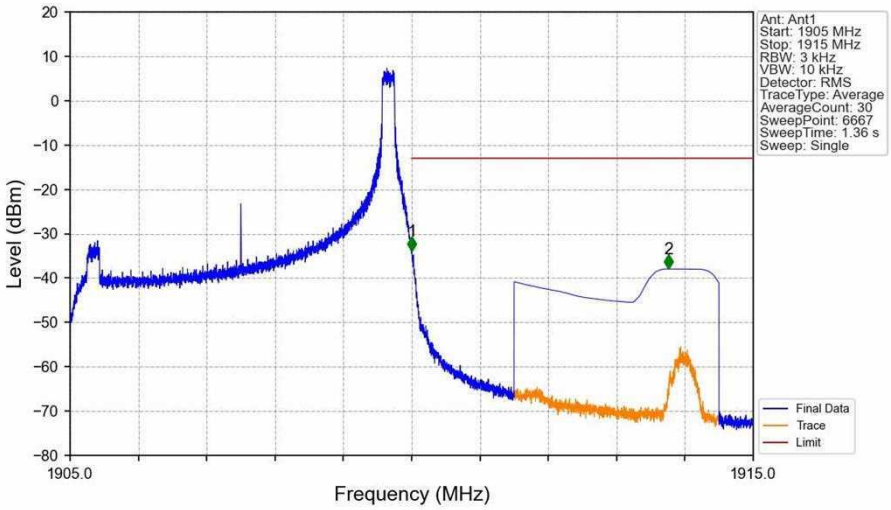

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1905	1910	0.003	/	/	/	/	/	/
1910	1911	0.003	/	1	1910.002	-33.89	-13	Pass
1911	1915	1	CHP	2	1913.762	-37.95	-13	Pass

Band2_5MHz_QPSK_HCH_1907.5MHz_RB_25_0_NTNV

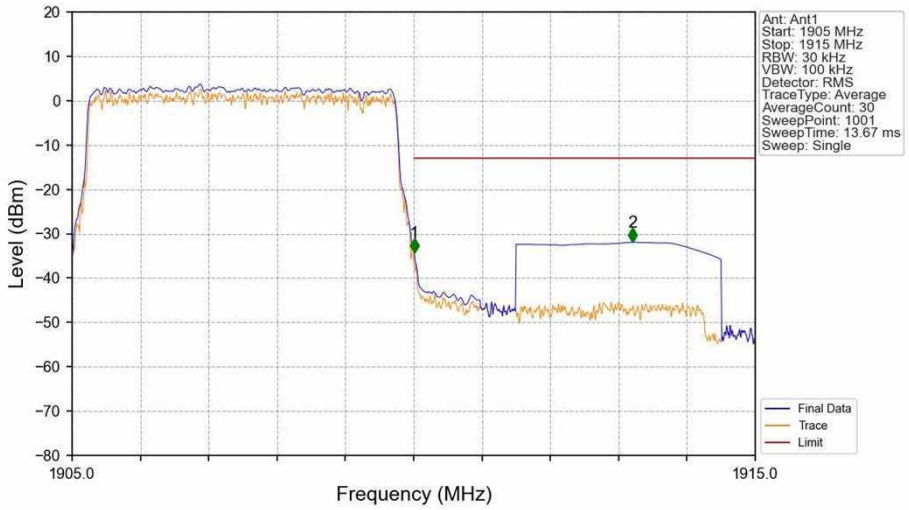

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1905	1910	0.051	CHP	/	/	/	/	/
1910	1911	0.051	CHP	1	1910.010	-34.27	-13	Pass
1911	1915	1	CHP	2	1913.200	-31.93	-13	Pass

Band2_5MHz_16QAM_LCH_1852.5MHz_RB_1_0_NTNV

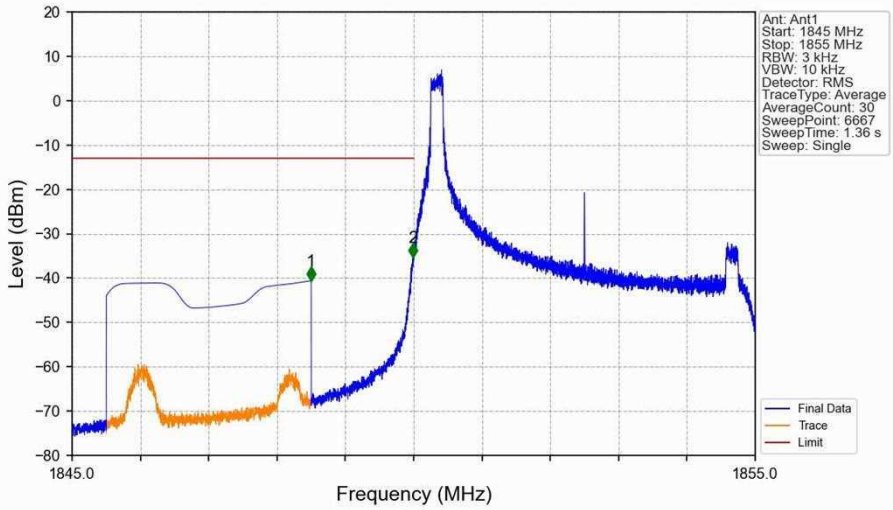

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1845	1849	1	CHP	1	1848.498	-40.61	-13	Pass
1849	1850	0.003	/	2	1849.989	-35.40	-13	Pass
1850	1855	0.003	/	/	/	/	/	/

Total or partial reproduction of this document without permission of the Laboratory is not allowed.

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_5MHz_16QAM_LCH_1852.5MHz_RB_1_0_NTNV

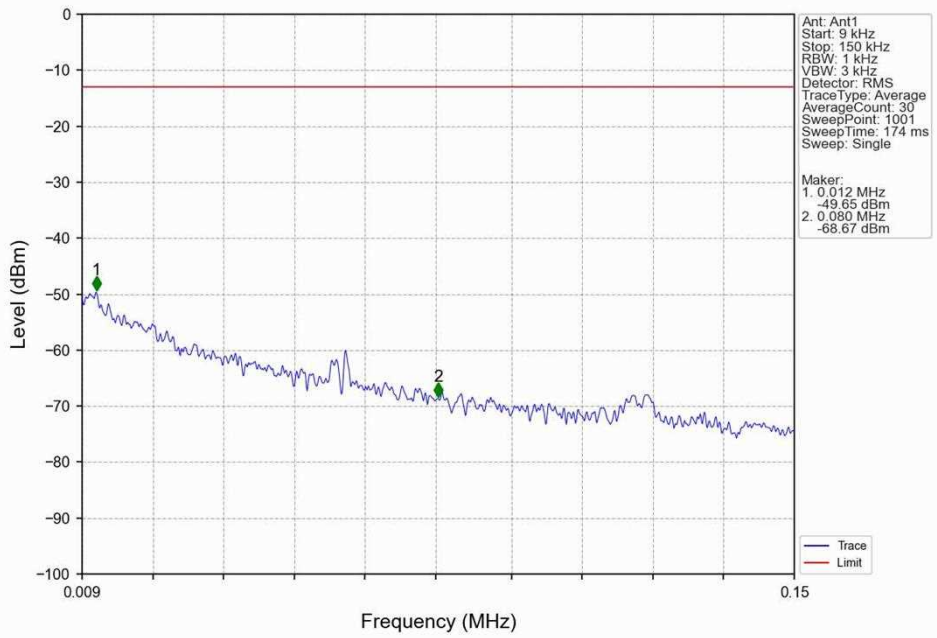

Band2_5MHz_16QAM_LCH_1852.5MHz_RB_1_0_NTNV

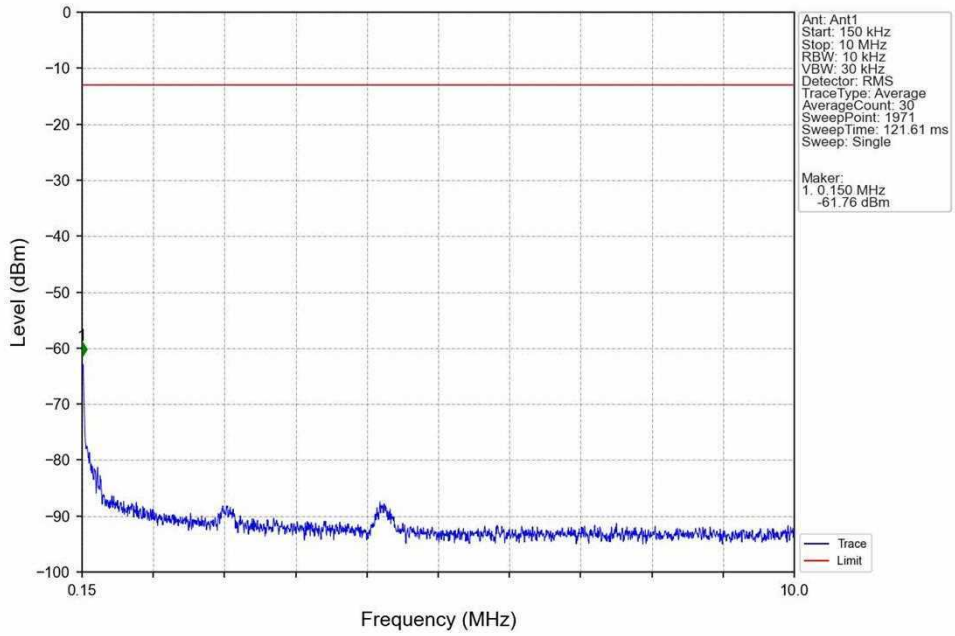

Band2_5MHz_16QAM_LCH_1852.5MHz_RB_1_0_NTNV

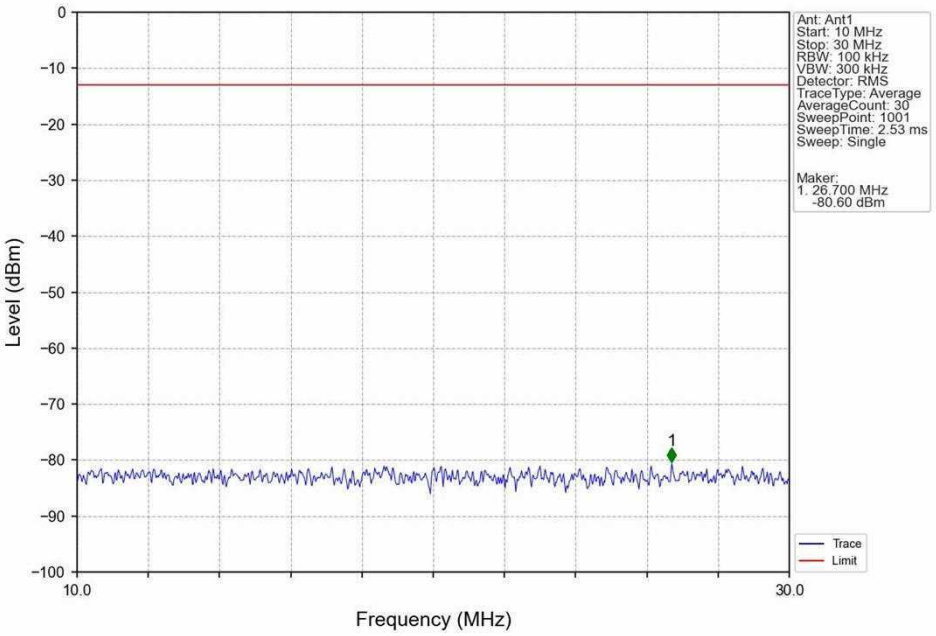

Band2_5MHz_16QAM_LCH_1852.5MHz_RB_1_0_NTNV

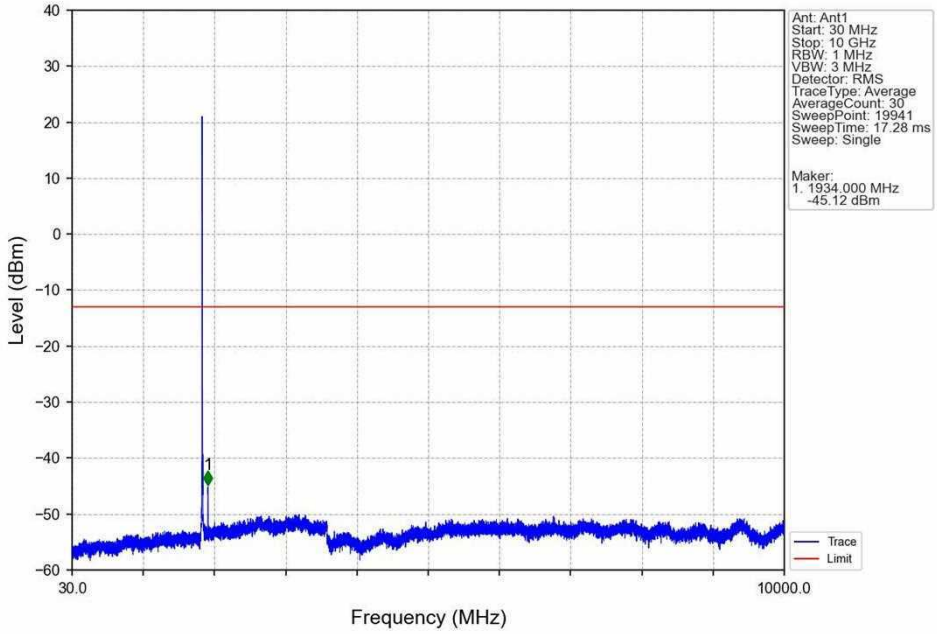

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_5MHz_16QAM_LCH_1852.5MHz_RB_1_0_NTNV

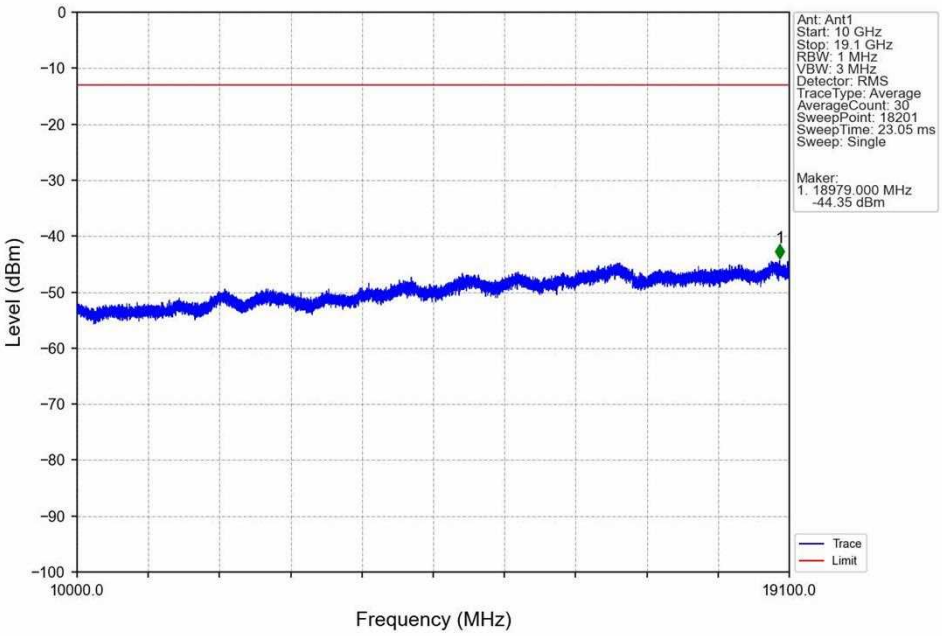

Band2_5MHz_16QAM_LCH_1852.5MHz_RB_25_0_NTNV

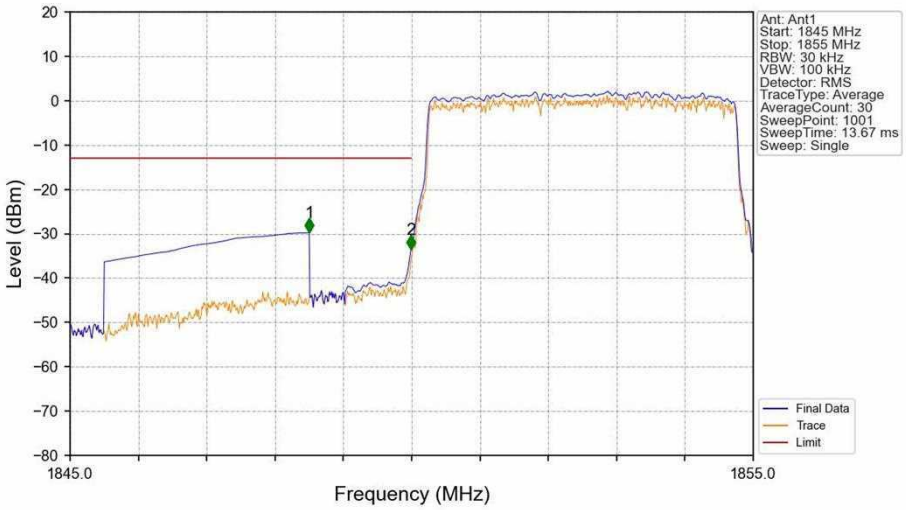

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1845	1849	1	CHP	1	1848.500	-29.74	-13	Pass
1849	1850	0.05	CHP	2	1849.990	-33.43	-13	Pass
1850	1855	0.05	CHP	/	/	/	/	/

Band2_5MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

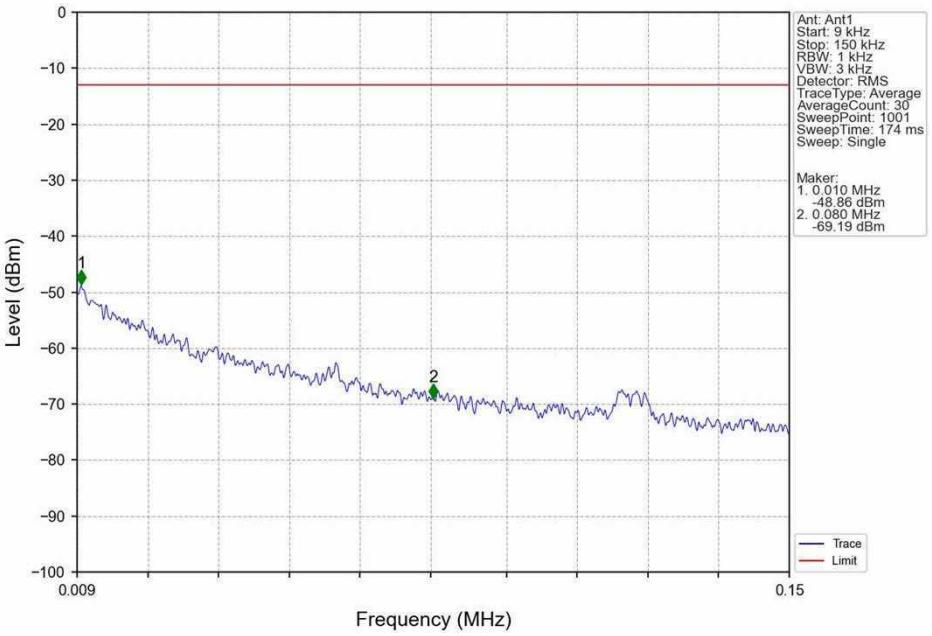

Band2_5MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

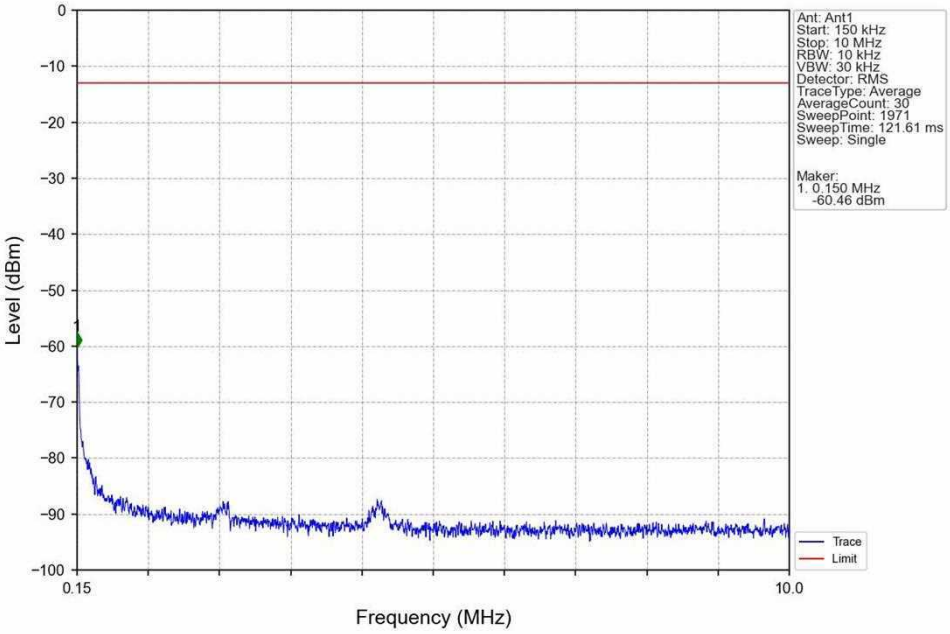

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_5MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

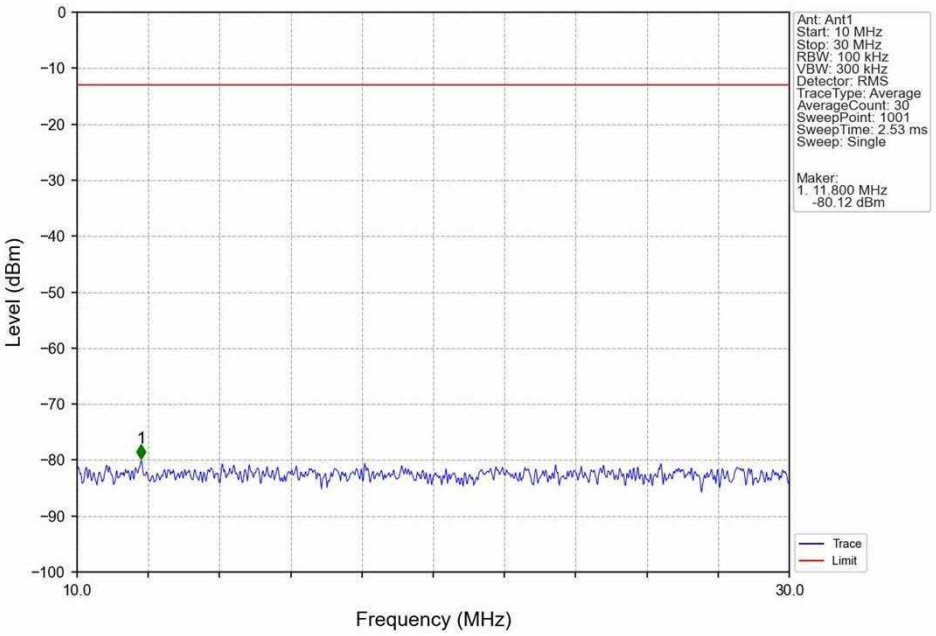

Band2_5MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

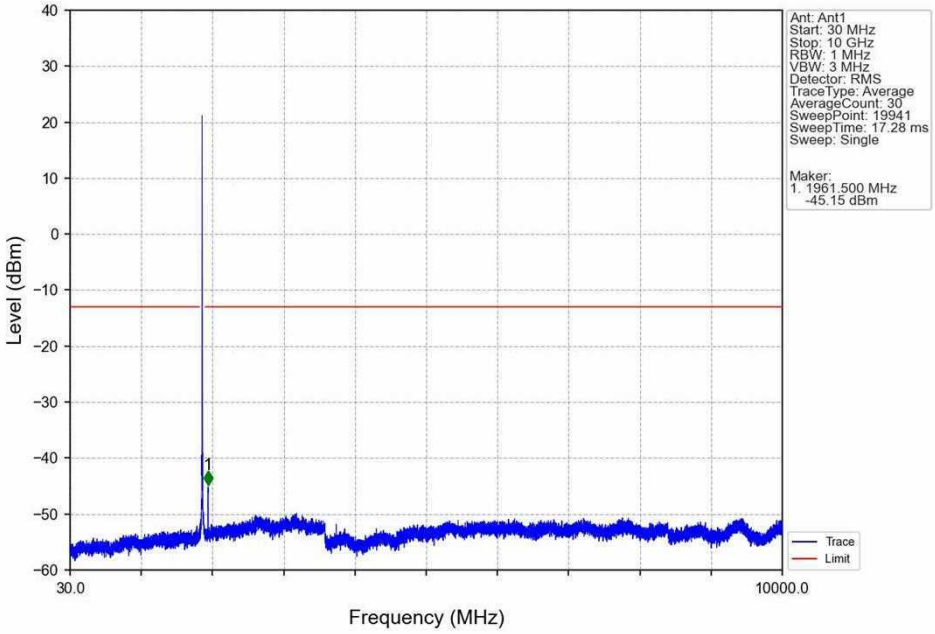

Band2_5MHz_16QAM_MCH_1880MHz_RB_1_0_NTNV

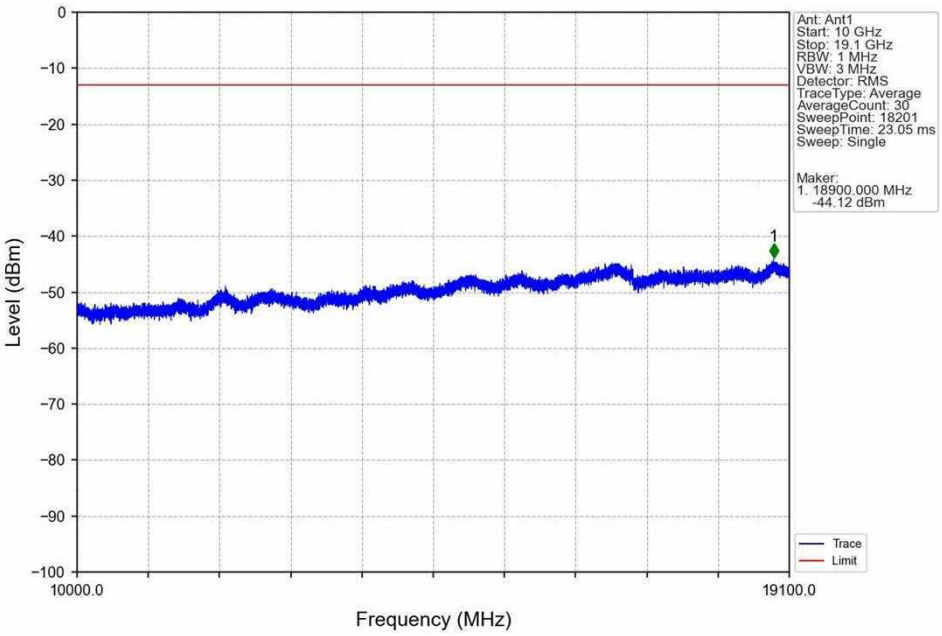

Band2_5MHz_16QAM_HCH_1907.5MHz_RB_1_0_NTNV

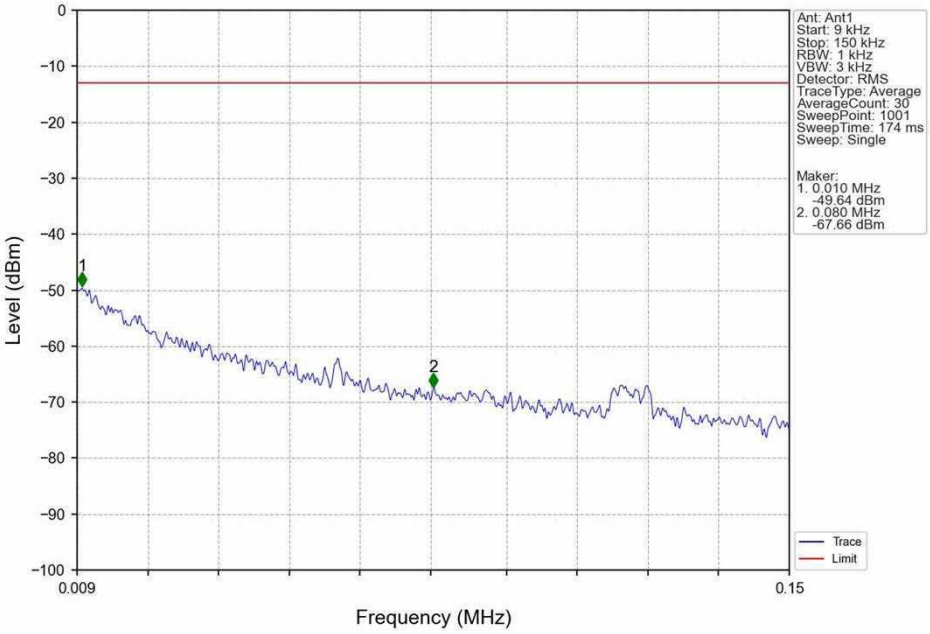

Band2_5MHz_16QAM_HCH_1907.5MHz_RB_1_0_NTNV

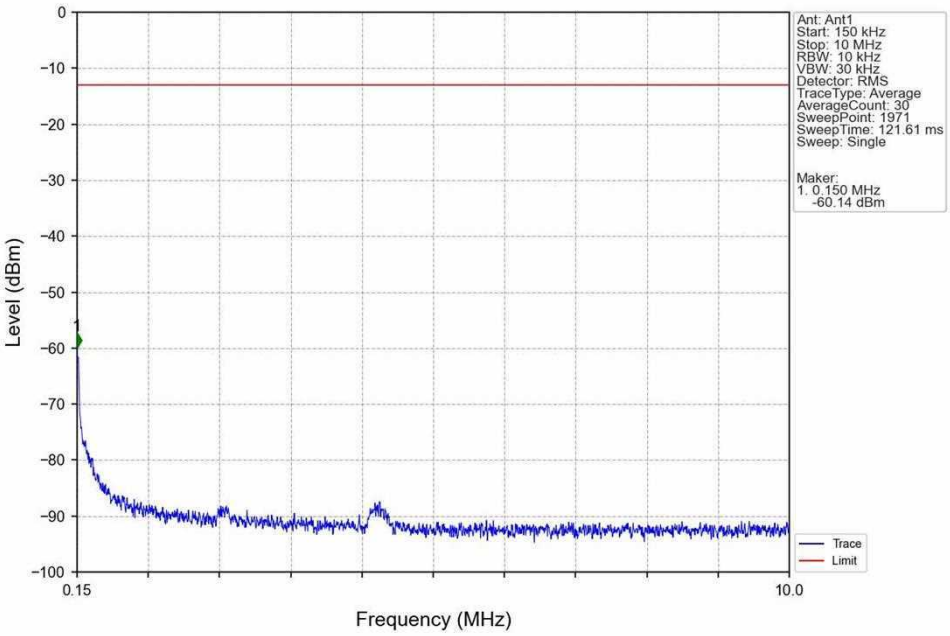

Band2_5MHz_16QAM_HCH_1907.5MHz_RB_1_0_NTNV

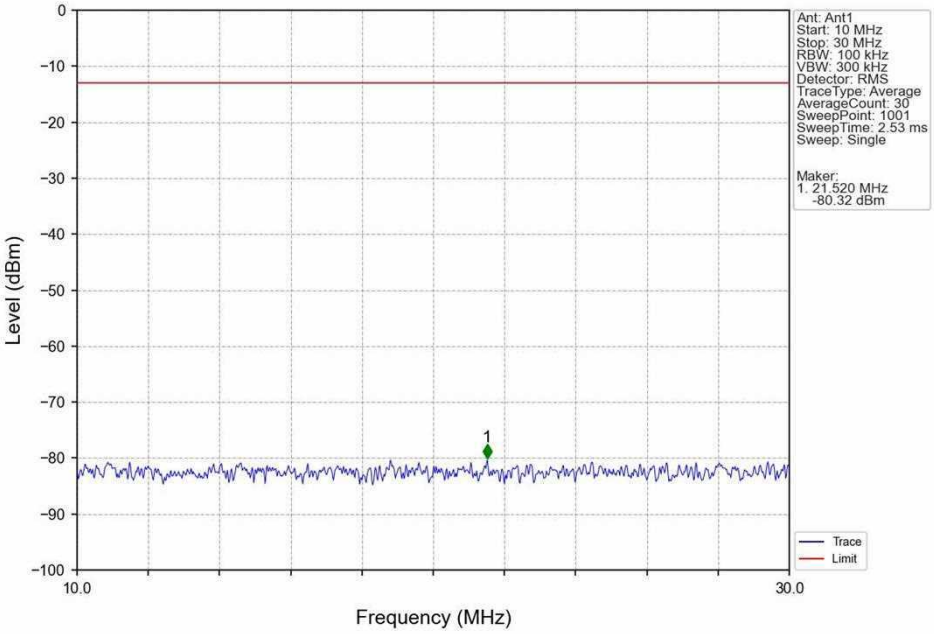

Band2_5MHz_16QAM_HCH_1907.5MHz_RB_1_0_NTNV

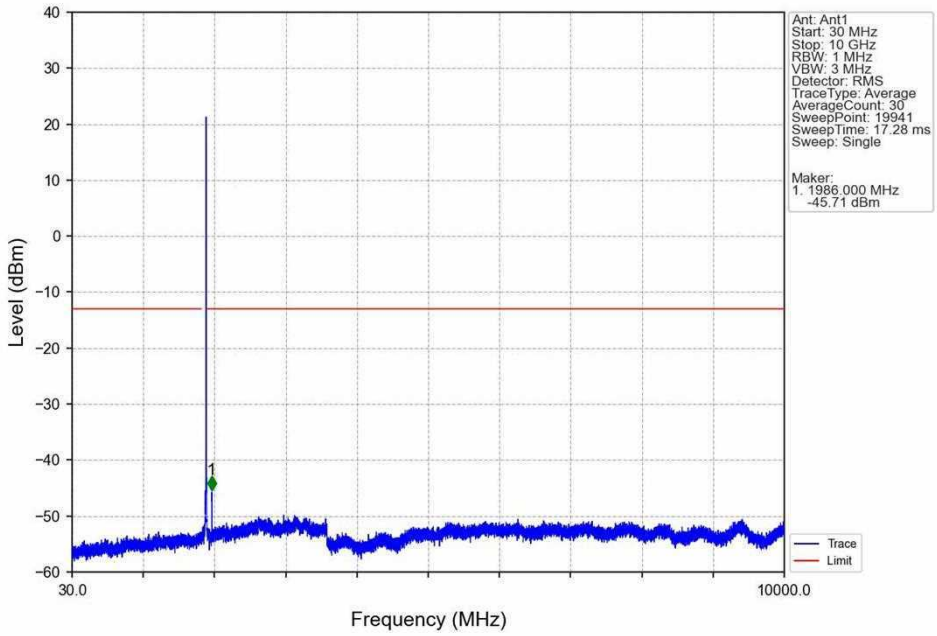

Band2_5MHz_16QAM_HCH_1907.5MHz_RB_1_0_NTNV

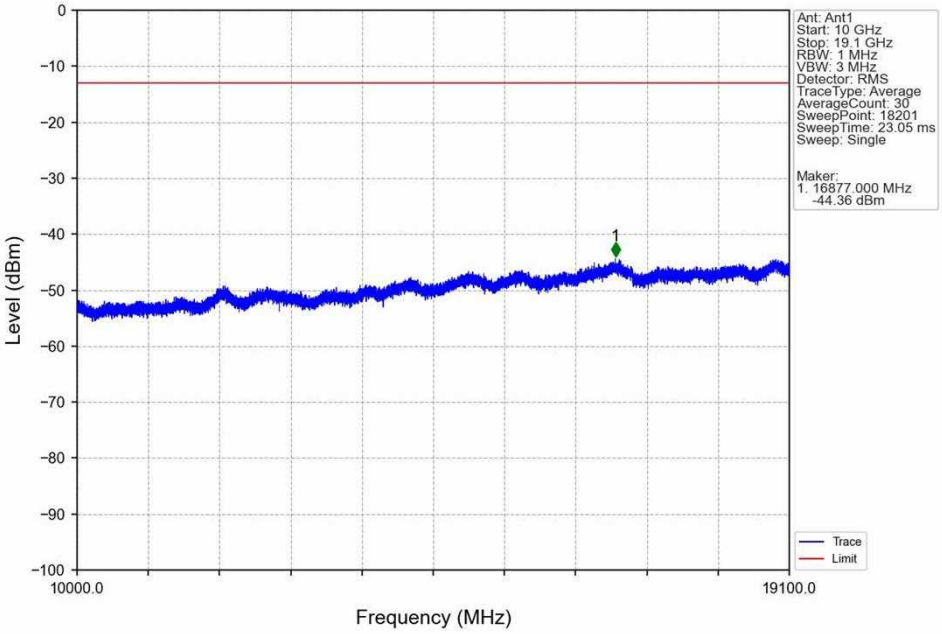

Band2_5MHz_16QAM_HCH_1907.5MHz_RB_1_24_NTNV

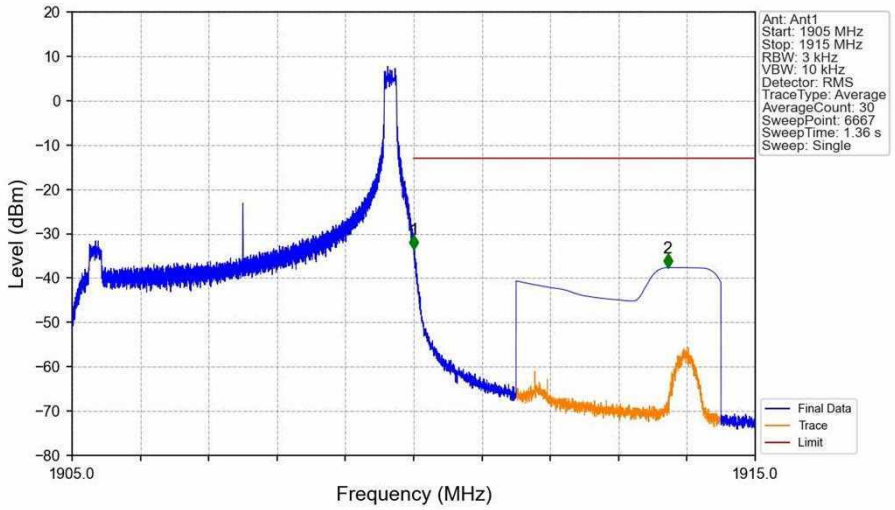

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1905	1910	0.003	/	/	/	/	/	/
1910	1911	0.003	/	1	1910.002	-33.47	-13	Pass
1911	1915	1	CHP	2	1913.719	-37.65	-13	Pass

Band2_5MHz_16QAM_HCH_1907.5MHz_RB_25_0_NTNV

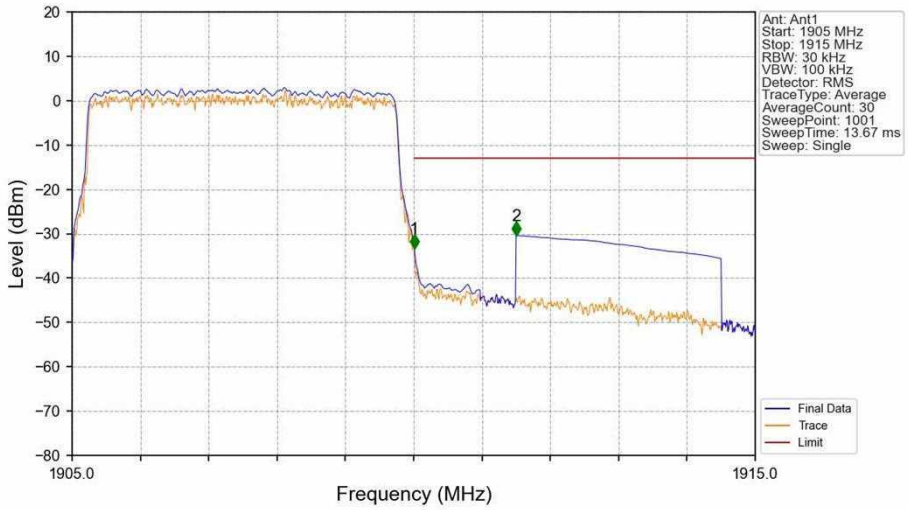

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1905	1910	0.051	CHP	/	/	/	/	/
1910	1911	0.051	CHP	1	1910.010	-33.30	-13	Pass
1911	1915	1	CHP	2	1911.500	-30.41	-13	Pass

6.2.4 B2_10MHz

Band2_10MHz_QPSK_LCH_1855MHz_RB_1_0_NTNV

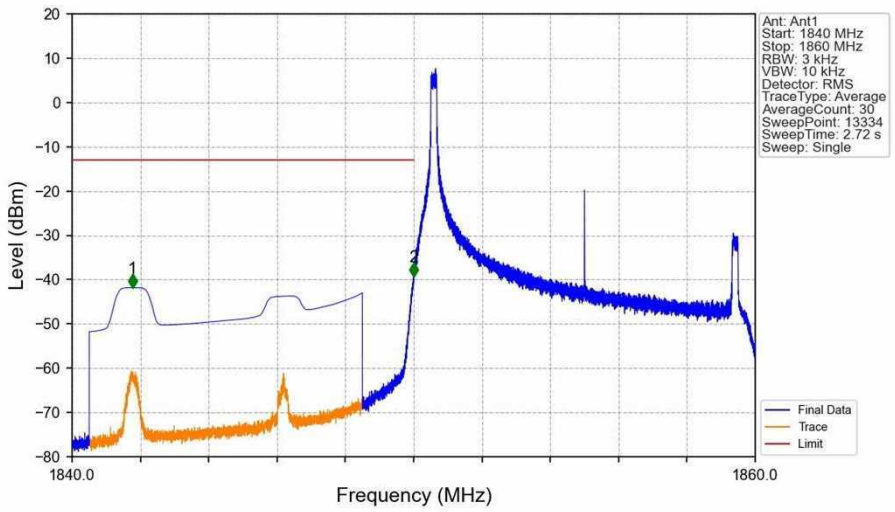

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1840	1849	1	CHP	1	1841.763	-41.82	-13	Pass
1849	1850	0.003	/	2	1849.999	-39.25	-13	Pass
1850	1860	0.003	/	/	/	/	/	/

Band2_10MHz_QPSK_LCH_1855MHz_RB_1_0_NTNV

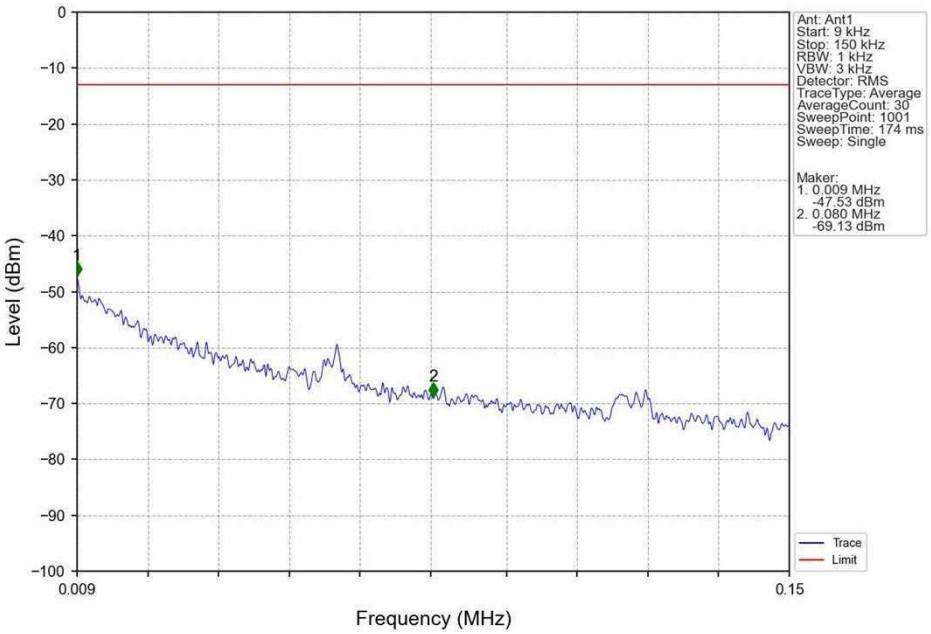

Band2_10MHz_QPSK_LCH_1855MHz_RB_1_0_NTNV

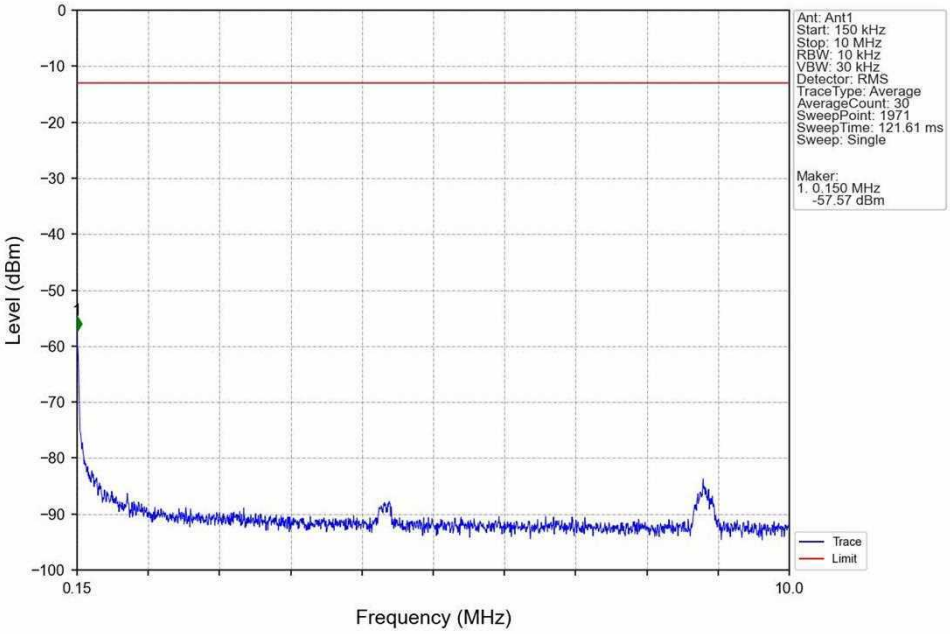

Band2_10MHz_QPSK_LCH_1855MHz_RB_1_0_NTNV

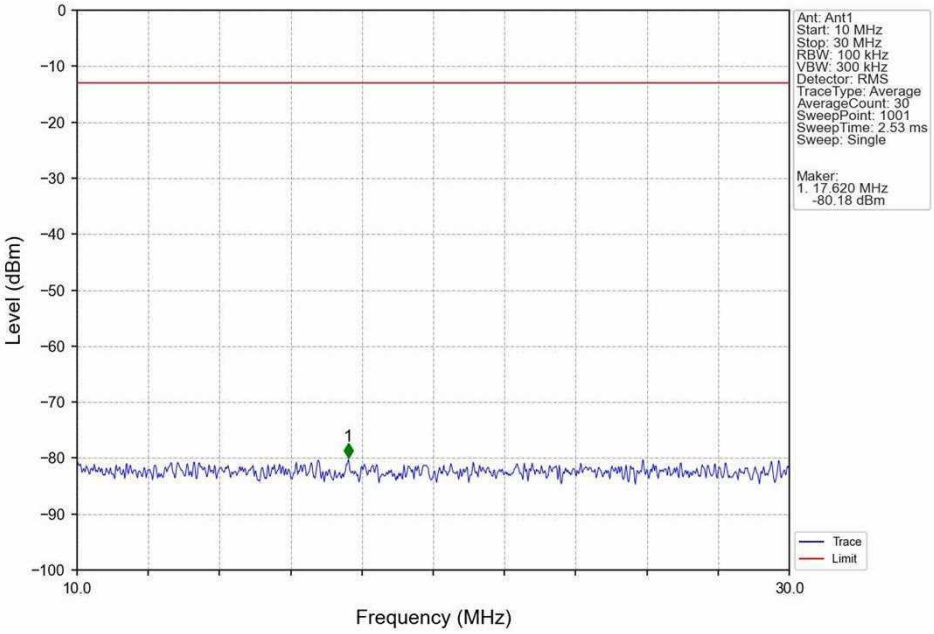

Band2_10MHz_QPSK_LCH_1855MHz_RB_1_0_NTNV

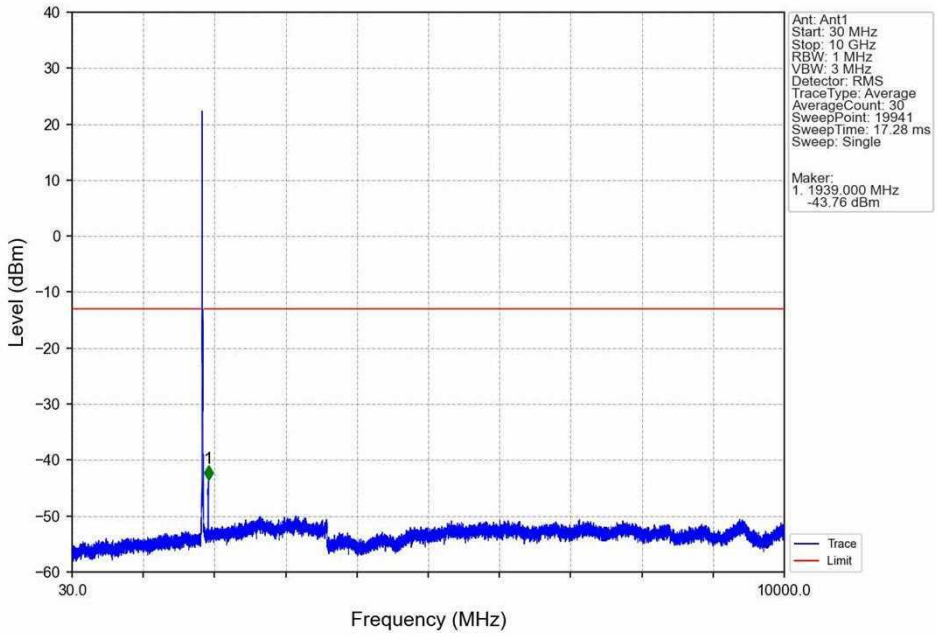

Band2_10MHz_QPSK_LCH_1855MHz_RB_1_0_NTNV

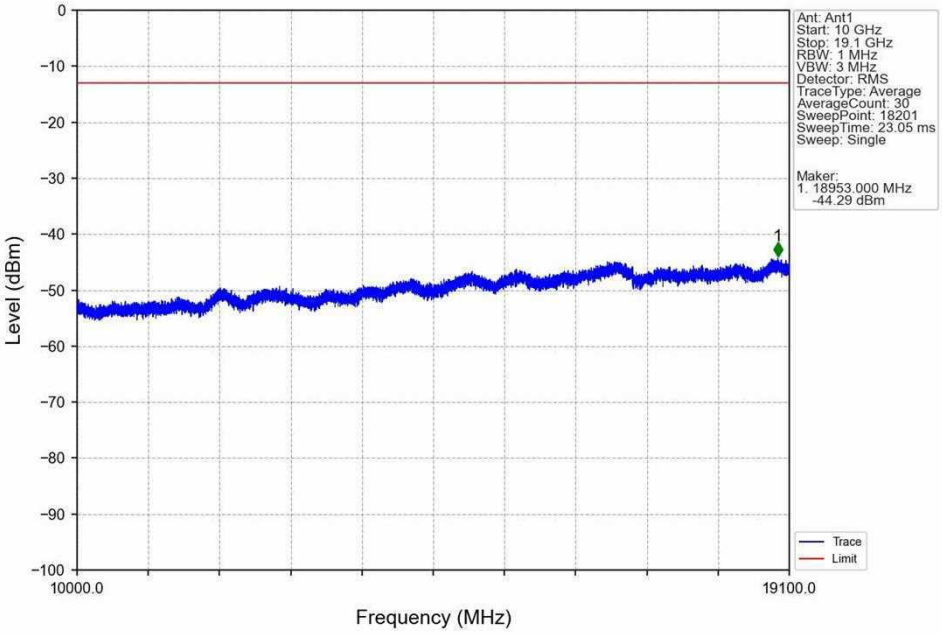

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_10MHz_QPSK_LCH_1855MHz_RB_50_0_NTNV

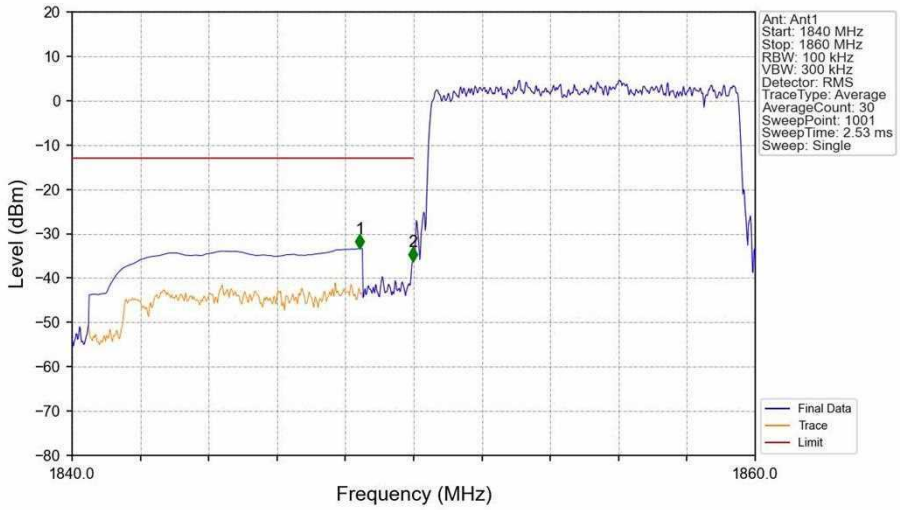

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1840	1849	1	CHP	1	1848.420	-33.34	-13	Pass
1849	1850	0.1	/	2	1849.980	-36.23	-13	Pass
1850	1860	0.1	/	/	/	/	/	/

Band2_10MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

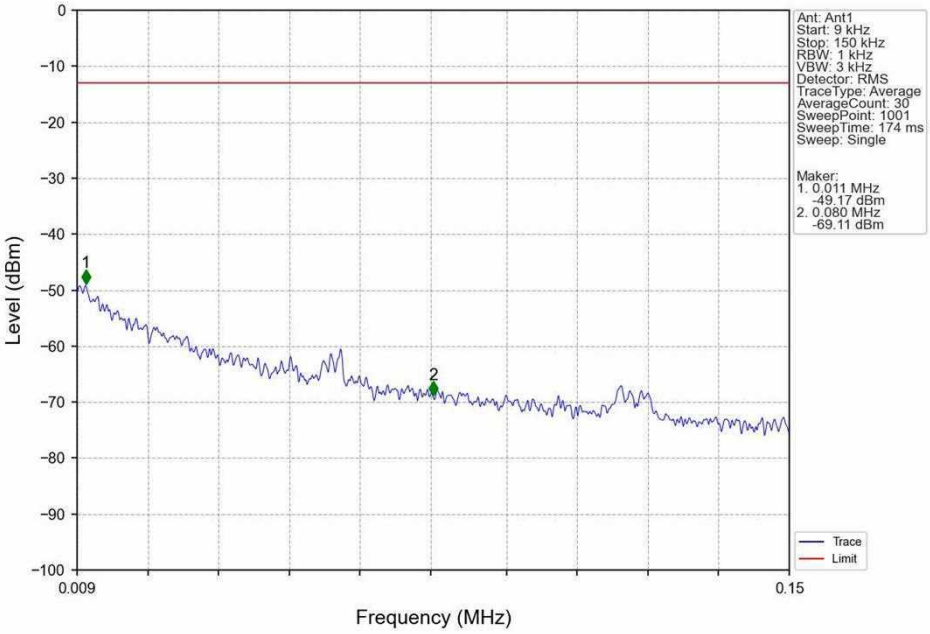

Band2_10MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

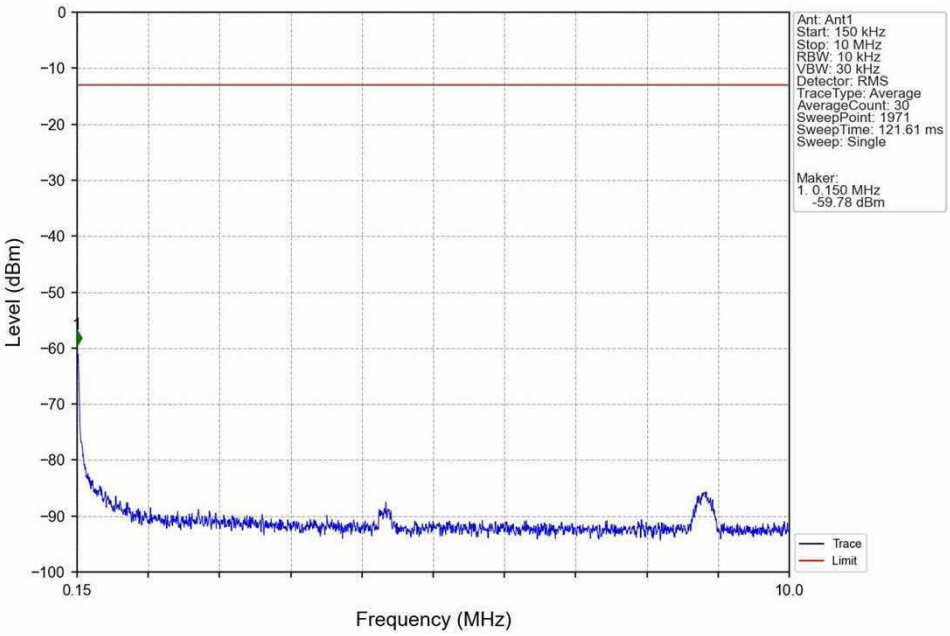

Band2_10MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

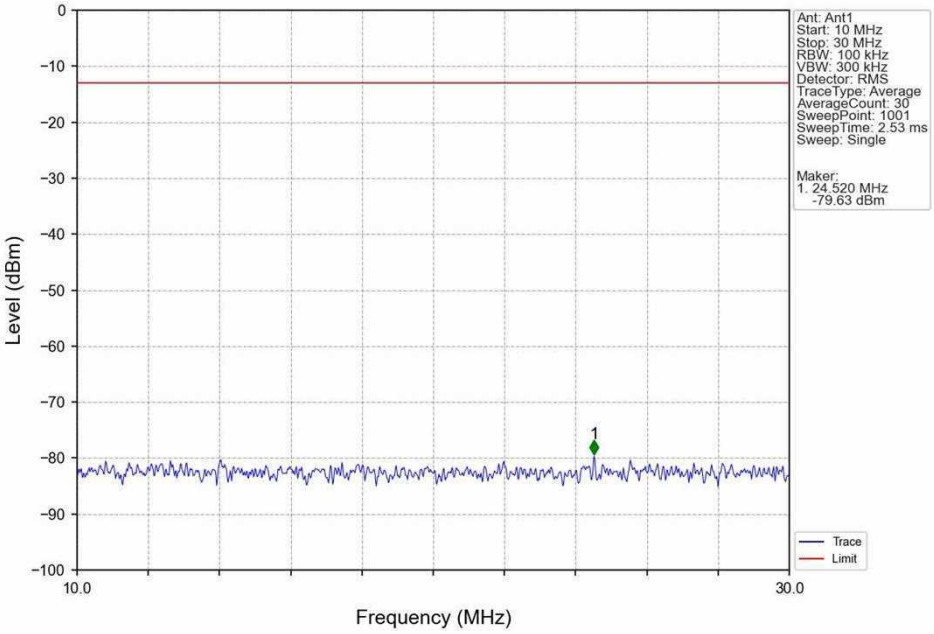

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_10MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

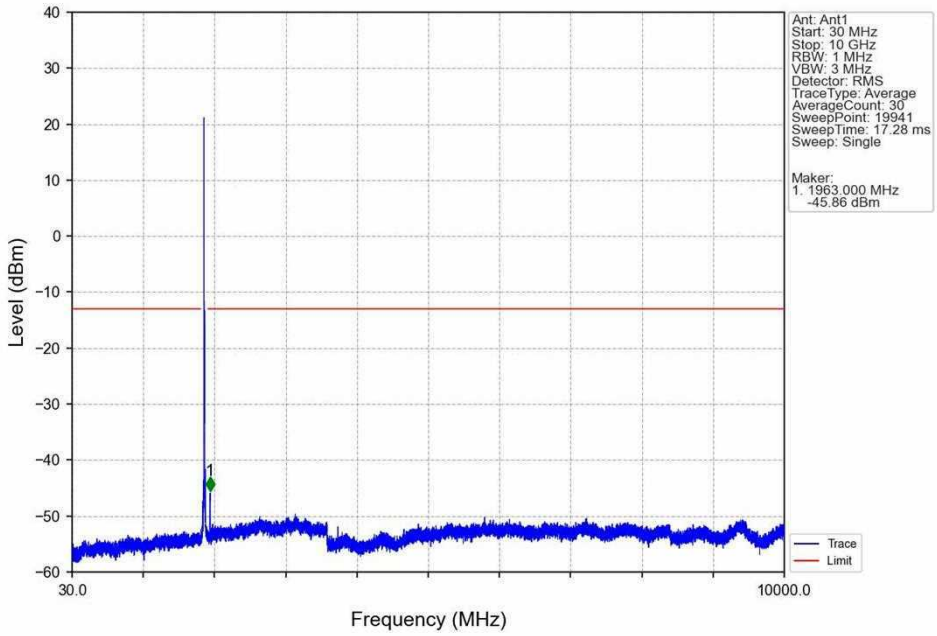

Band2_10MHz_QPSK_MCH_1880MHz_RB_1_0_NTNV

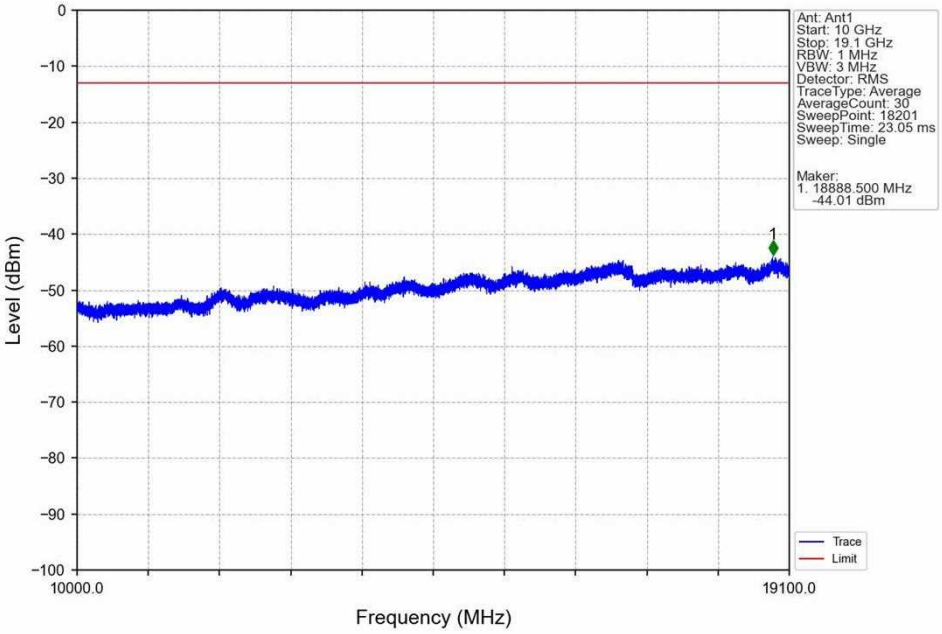

Band2_10MHz_QPSK_HCH_1905MHz_RB_1_0_NTNV

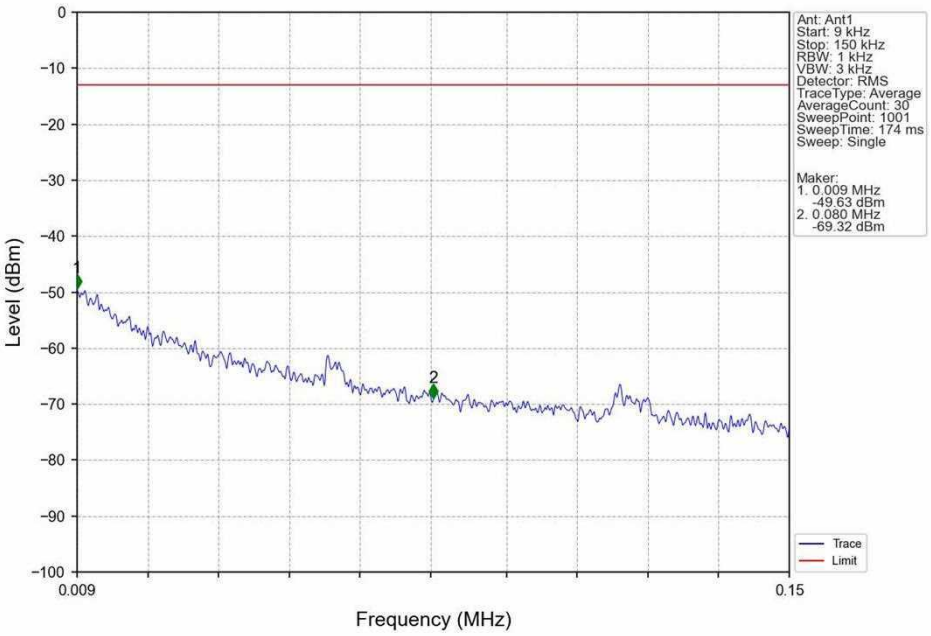

Band2_10MHz_QPSK_HCH_1905MHz_RB_1_0_NTNV

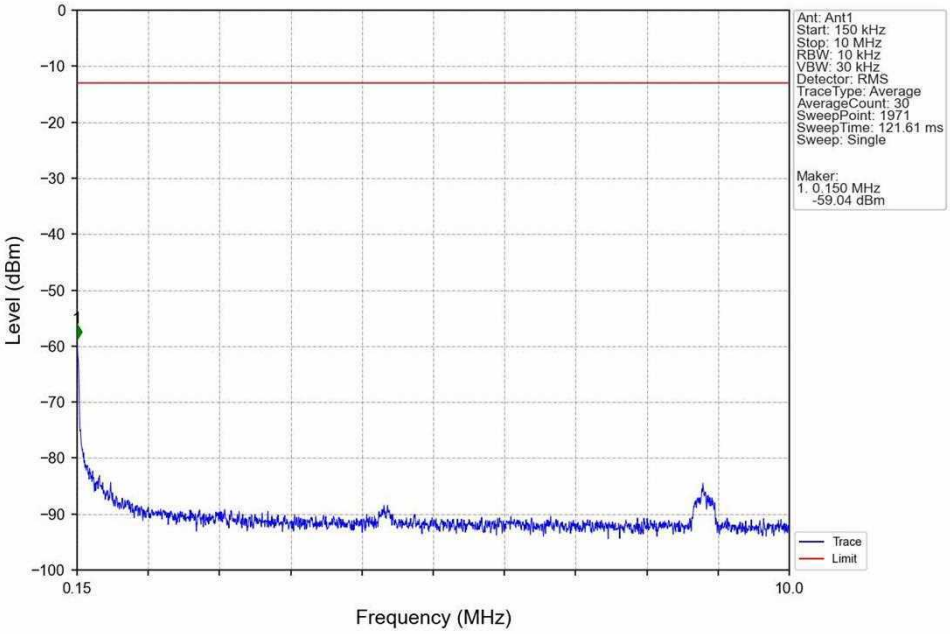

Band2_10MHz_QPSK_HCH_1905MHz_RB_1_0_NTNV

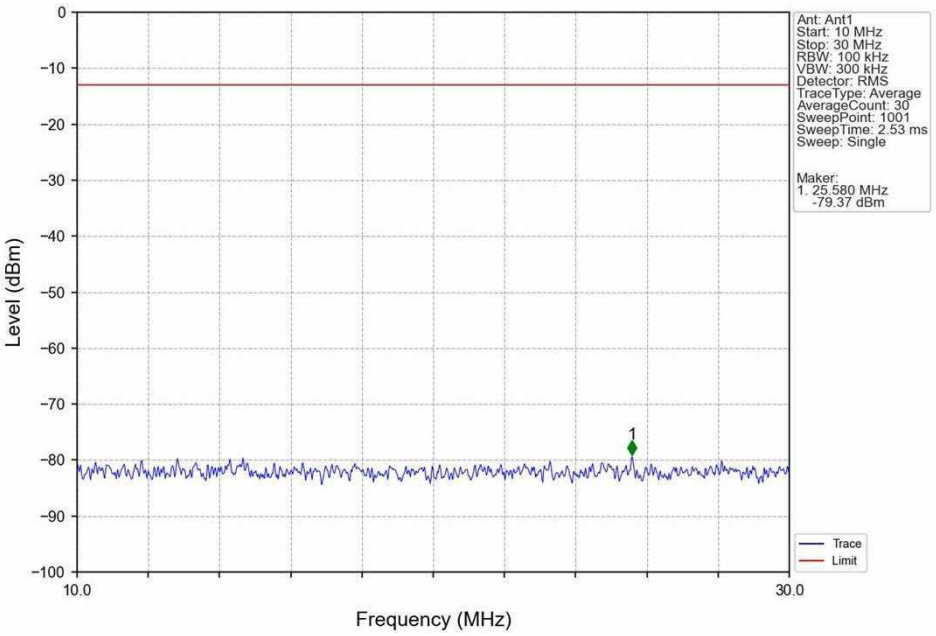

Band2_10MHz_QPSK_HCH_1905MHz_RB_1_0_NTNV

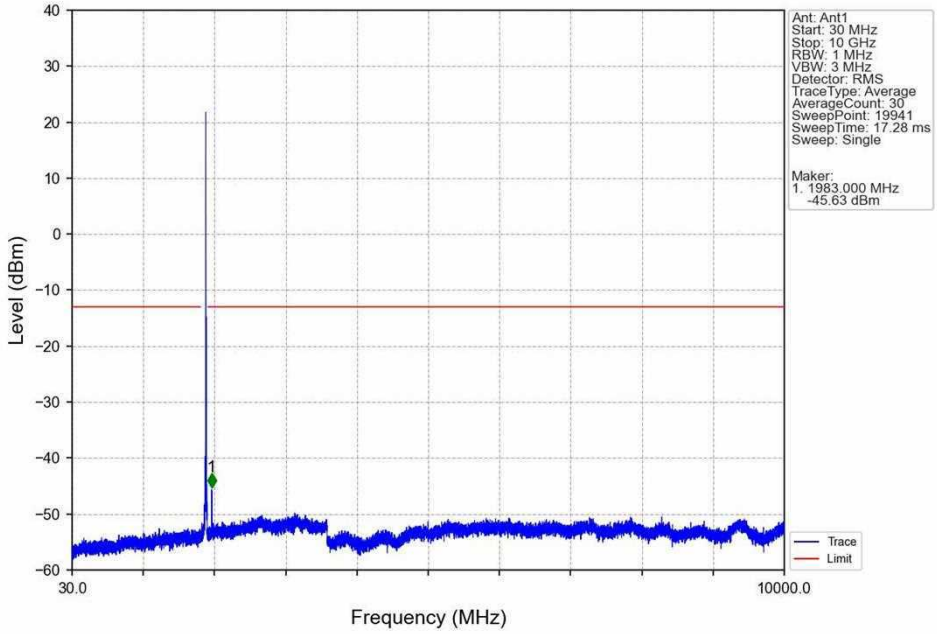

Band2_10MHz_QPSK_HCH_1905MHz_RB_1_0_NTNV

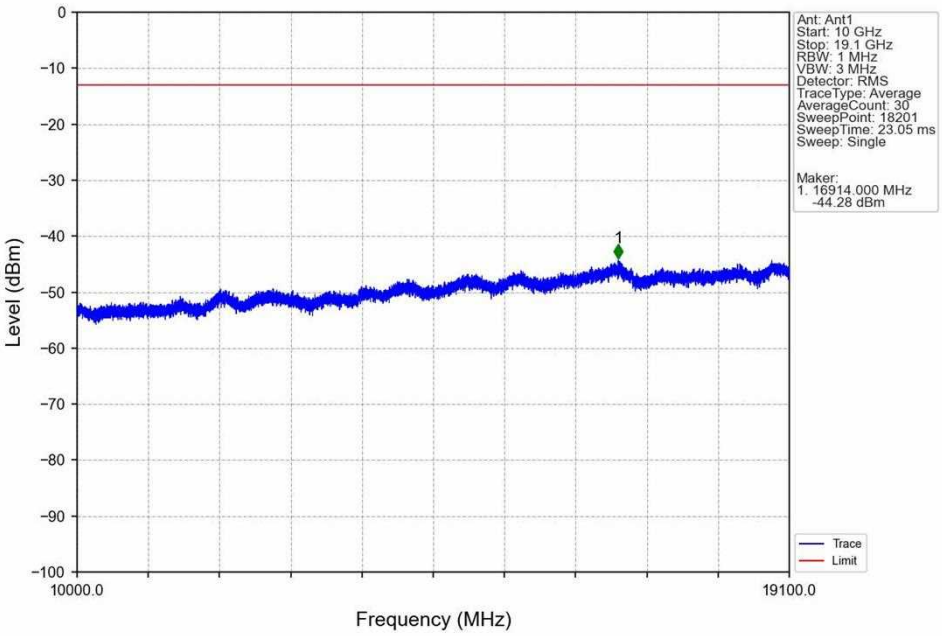

Band2_10MHz_QPSK_HCH_1905MHz_RB_1_49_NTNV

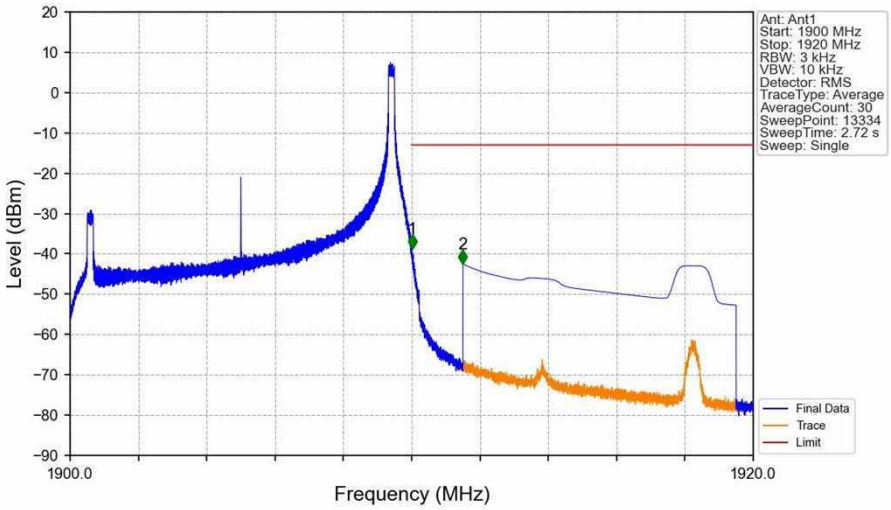

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1900	1910	0.003	/	/	/	/	/	/
1910	1911	0.003	/	1	1910.013	-38.58	-13	Pass
1911	1920	1	CHP	2	1911.501	-42.52	-13	Pass

Band2_10MHz_QPSK_HCH_1905MHz_RB_50_0_NTNV

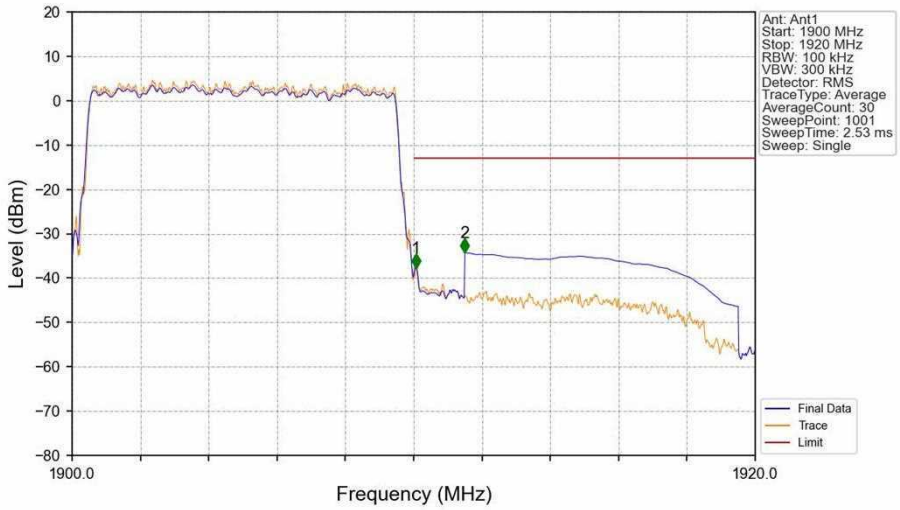

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1900	1910	0.101	CHP	/	/	/	/	/
1910	1911	0.101	CHP	1	1910.060	-37.68	-13	Pass
1911	1920	1	CHP	2	1911.500	-34.31	-13	Pass

Band2_10MHz_16QAM_LCH_1855MHz_RB_1_0_NTNV

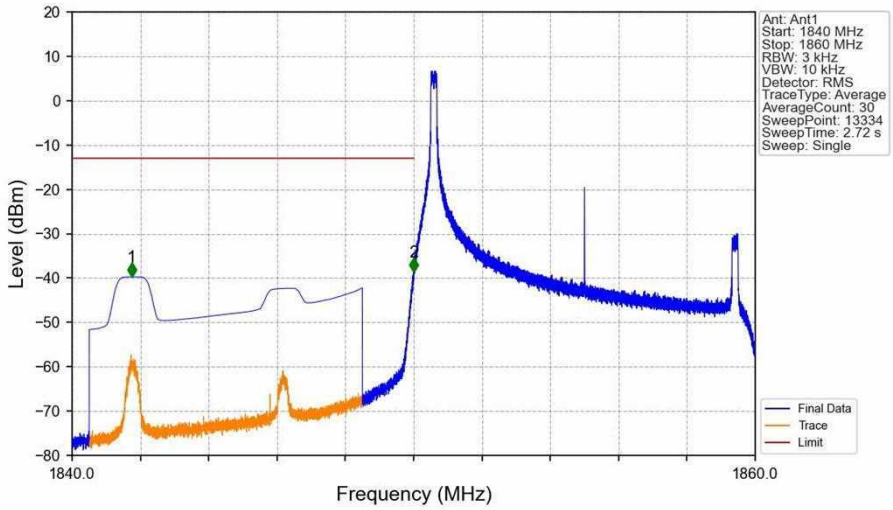

Start (MHz)	Stop (MHz)	RBW (MHz)	Method	Marker No.	Freq (MHz)	Level (dBm)	Limit (dBm)	Result
1840	1849	1	CHP	1	1841.745	-39.74	-13	Pass
1849	1850	0.003	/	2	1849.999	-38.65	-13	Pass
1850	1860	0.003	/	/	/	/	/	/

Total or partial reproduction of this document without permission of the Laboratory is not allowed.

BTF Testing Lab (Shenzhen) Co., Ltd.
Plant 101, 201 and 301, Building 1, Block 2, Tantou Industrial Park, Tantou Community, Songgang Street, Bao'an District, Shenzhen, Guangdong, China
Email: info@btf-lab.com Tel: +86-755-23146130 http://www.btf-lab.com

Band2_10MHz_16QAM_LCH_1855MHz_RB_1_0_NTNV

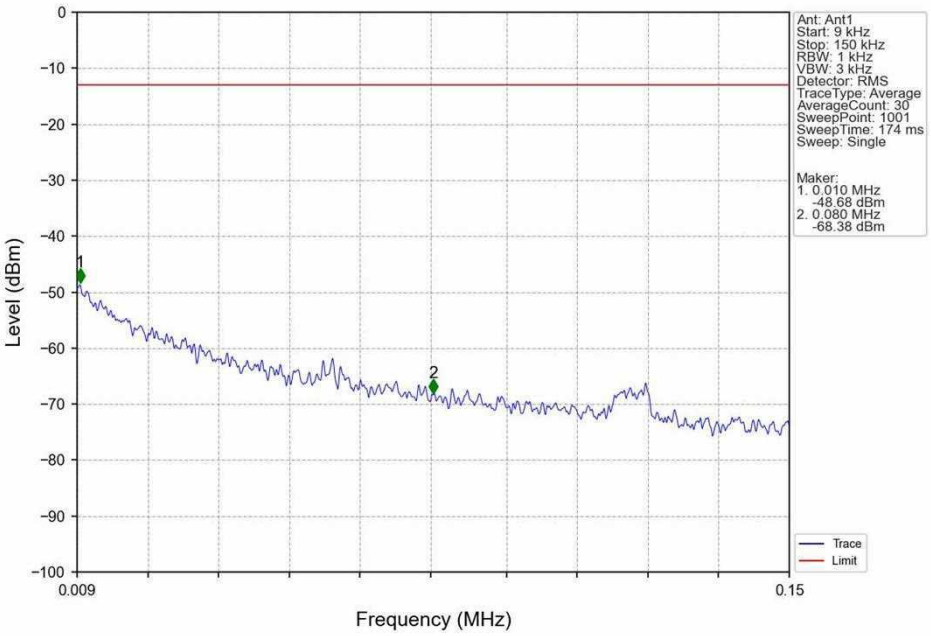

Band2_10MHz_16QAM_LCH_1855MHz_RB_1_0_NTNV

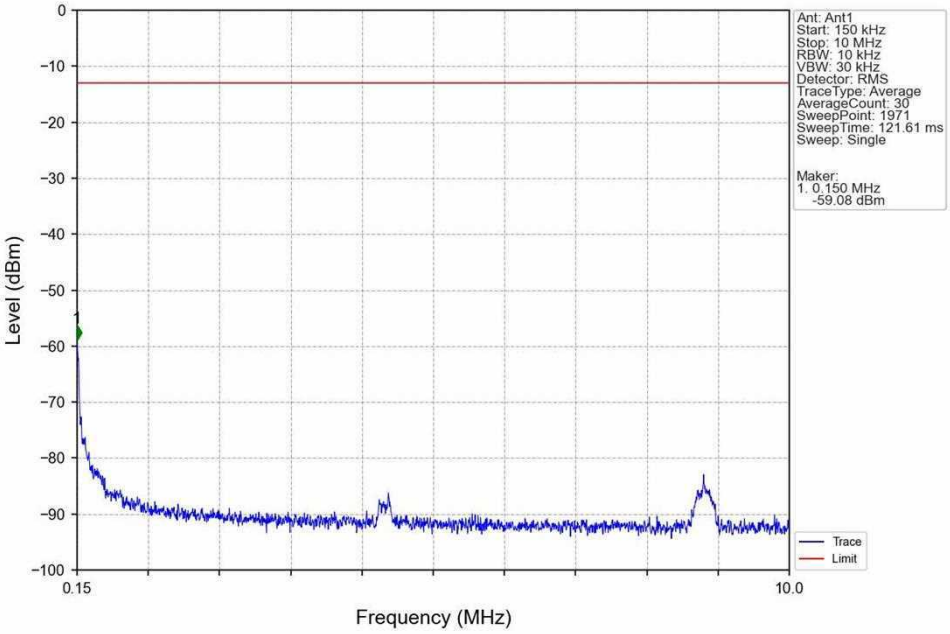

Band2_10MHz_16QAM_LCH_1855MHz_RB_1_0_NTNV

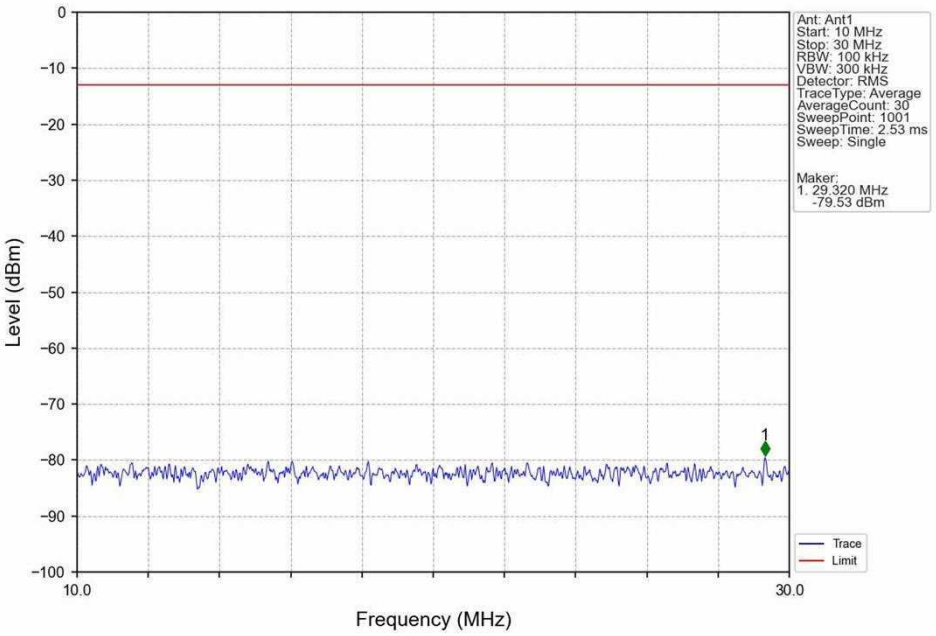
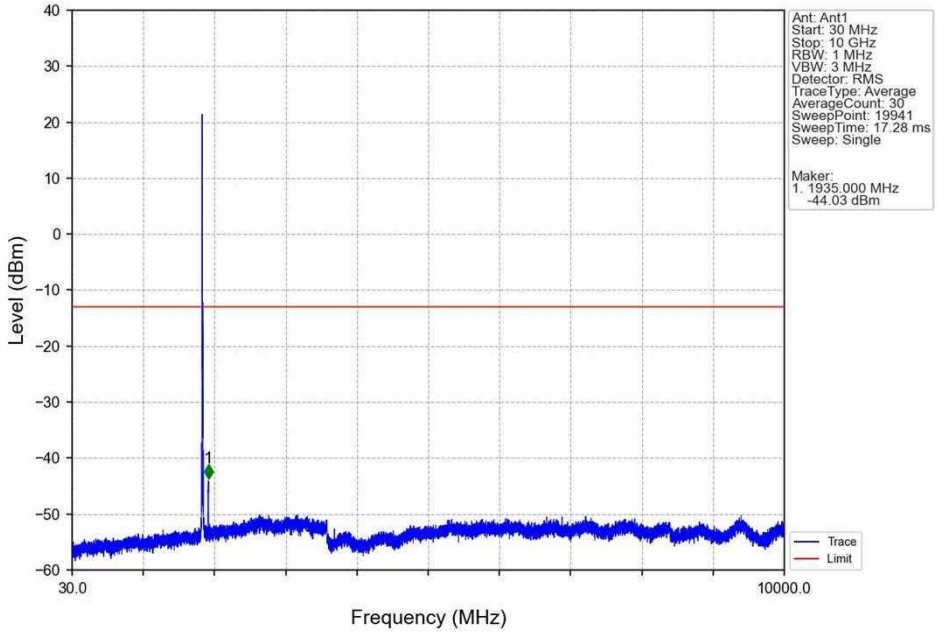
Band2_10MHz_16QAM_LCH_1855MHz_RB_1_0_NTNV