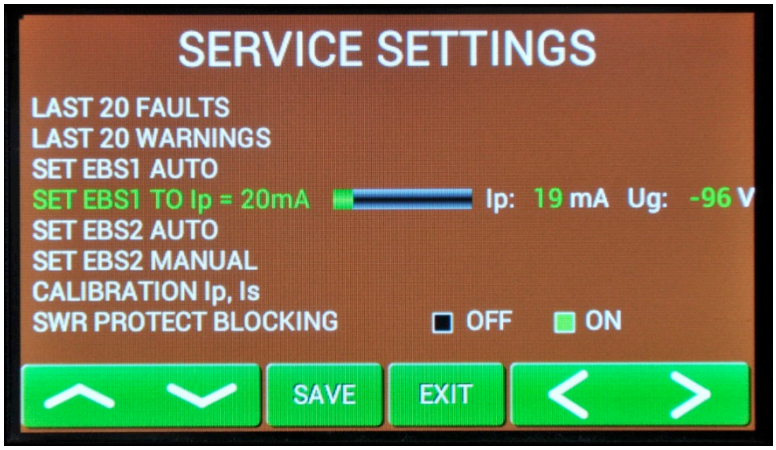

Use left/right button to set 20mA or as close as possible value and press **SAVE**.

Similar ways **EBS2** can be preprogrammed (250mA).

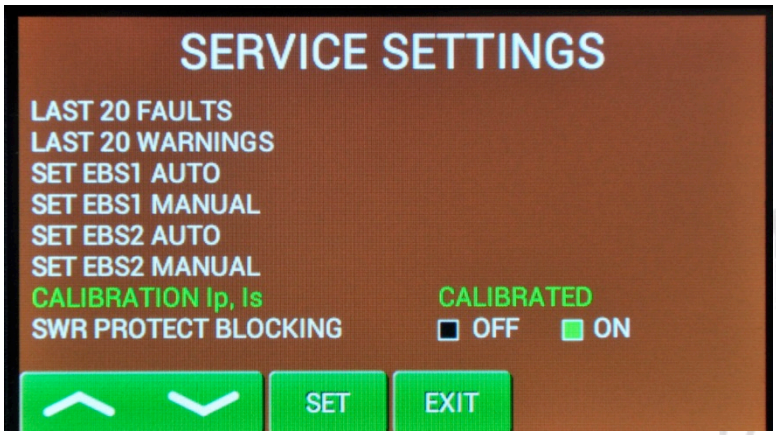

Scroll to **CALIBRATION Ip, Is** and press **SET**. Calibration will be done automatically.

Go to the bottom line.

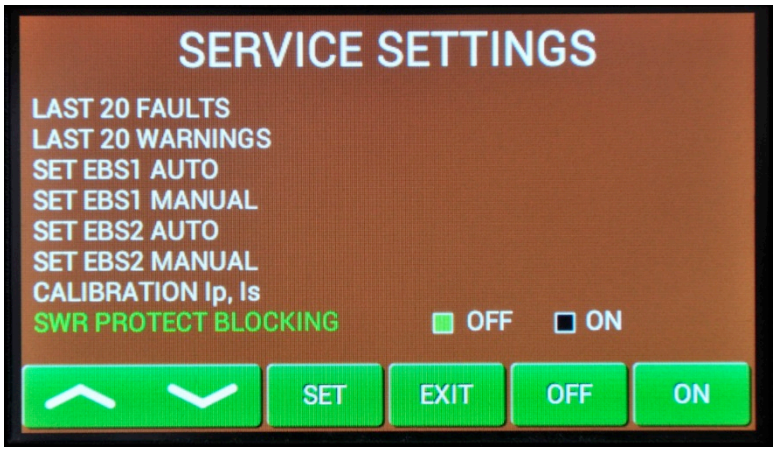

This feature allows user to switch OFF the SWR protection.

We recommend to set it **ON** (SWR protection circuit will stay active, max. allowed SWR is 3:1). If **OFF** is selected, higher SWR is allowed, but reflected power is measured. If it exceeds 350W, transmit will be blocked.

Press EXIT.

5.4. Operation mode

Before switching to operation mode, check all connections between PA and TCVR.

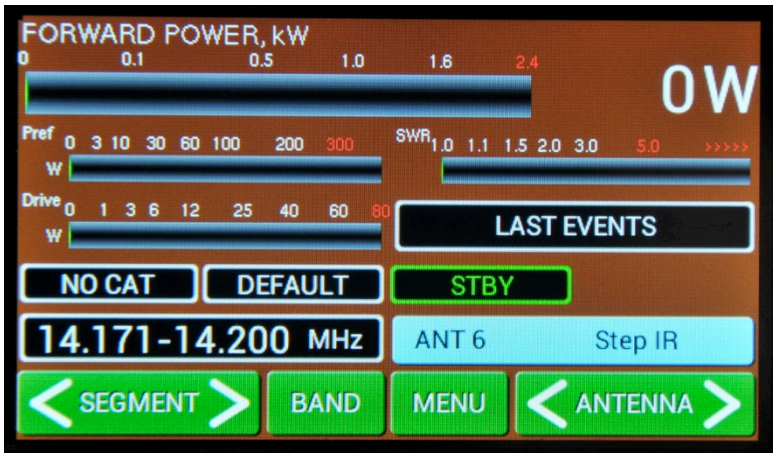

We are back in the **Main display**, bar graphs were defined, antennas were preprogrammed, CAT was set. We are ready to go to the operation mode.

Press shortly black **STBY/OPER** button on the front panel.

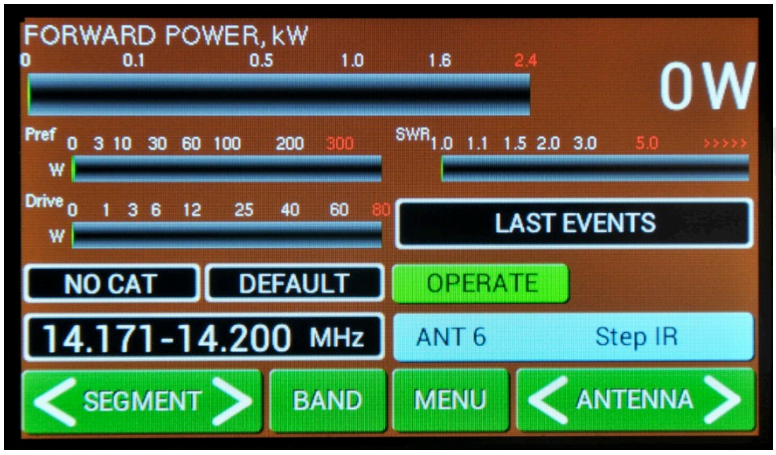

We are in the operation mode.

Press **MENU**.

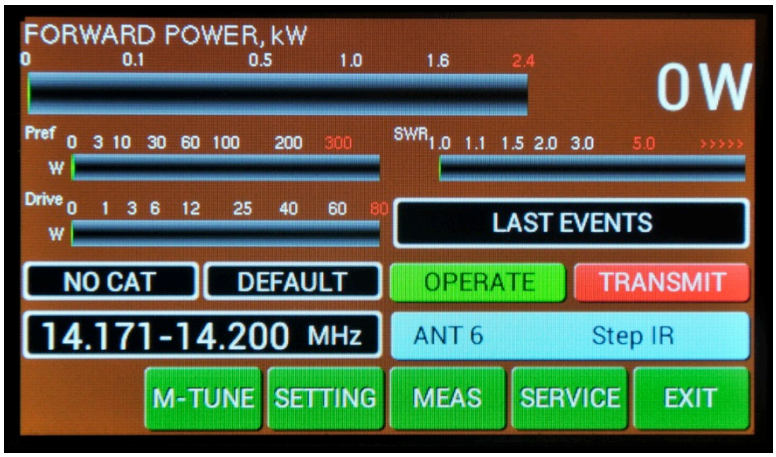

Now try to press PTT (foot switch for example).

We are in the transmit mode (without RF).

We have new button here. **M-TUNE**.