802.11n(HT20)_HCH_5825MHz_Ant2_NTNV

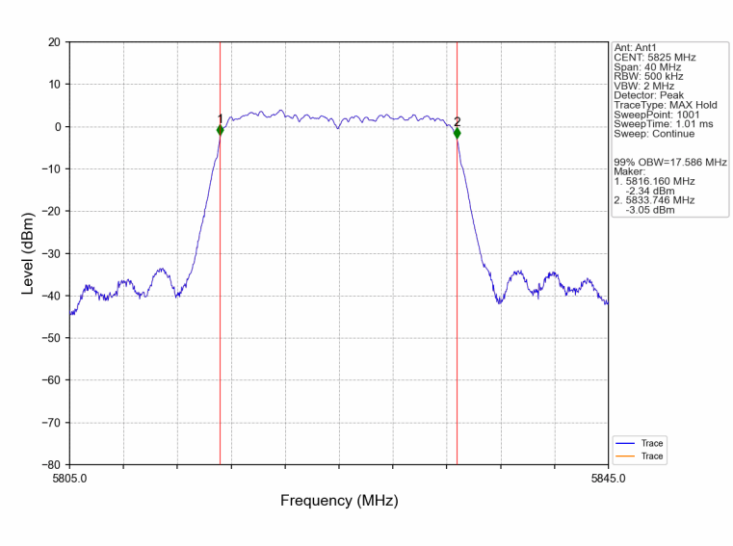

802.11n(HT20)_HCH_5720MHz_Ant2_NTNV

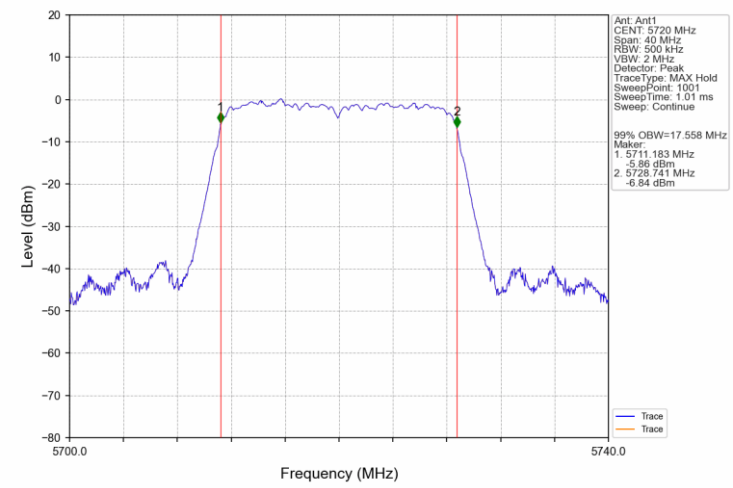

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_LCH_5180MHz_Ant2_NTNV

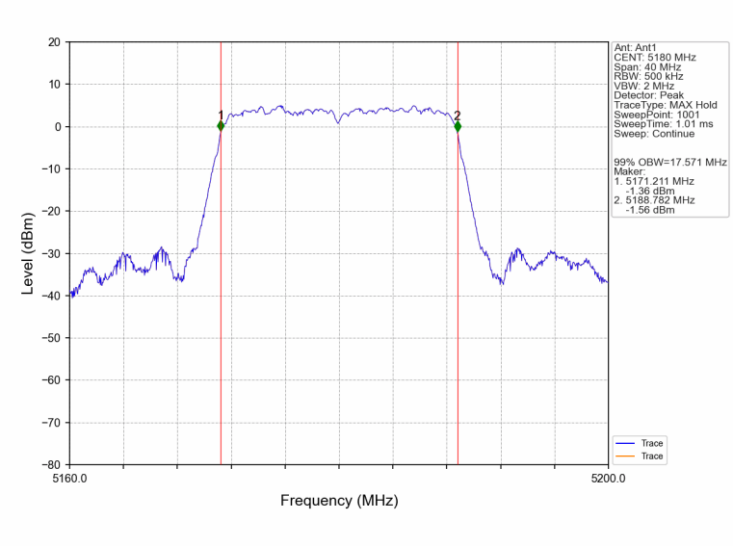

802.11ac(VHT20)_MCH_5200MHz_Ant2_NTNV

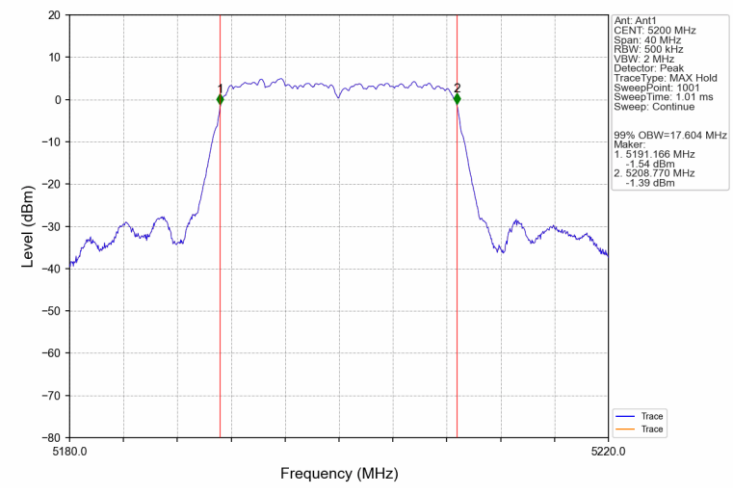

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_HCH_5240MHz_Ant2_NTNV

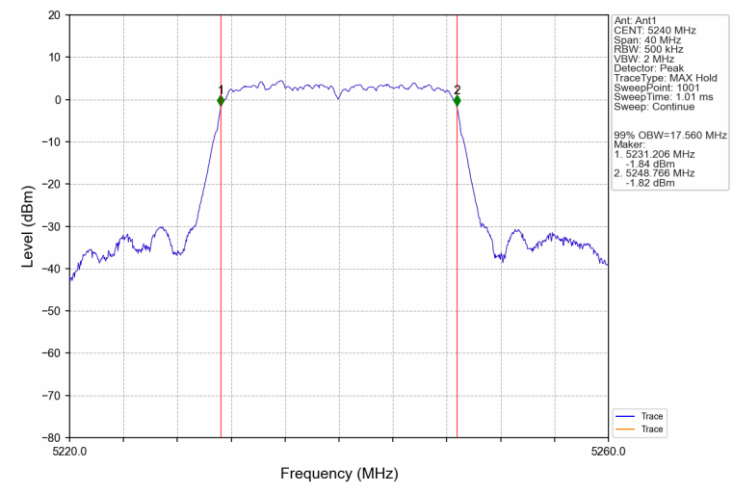

802.11ac(VHT20)_LCH_5260MHz_Ant2_NTNV

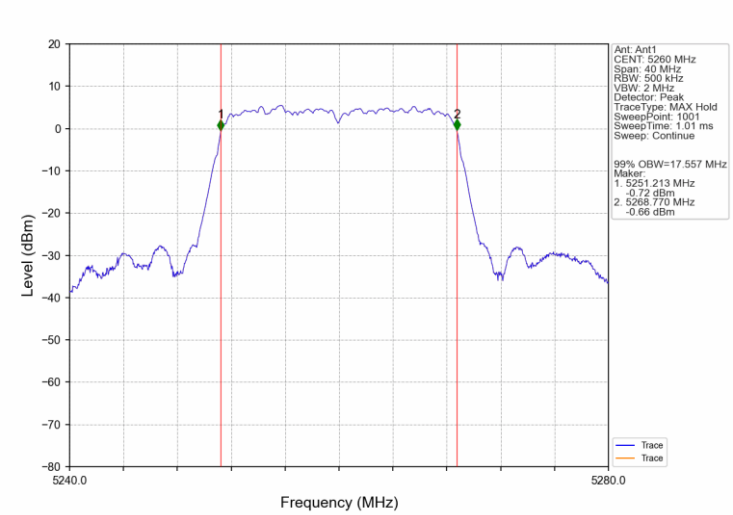

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_MCH_5300MHz_Ant2_NTNV

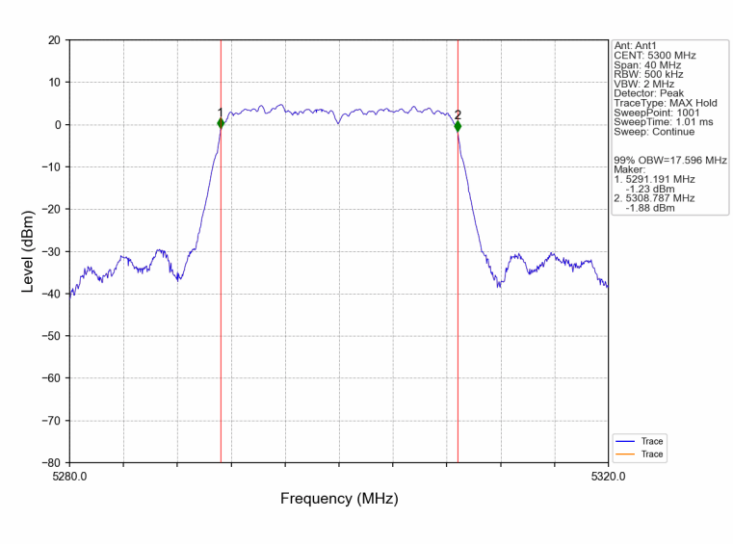

802.11ac(VHT20)_HCH_5320MHz_Ant2_NTNV

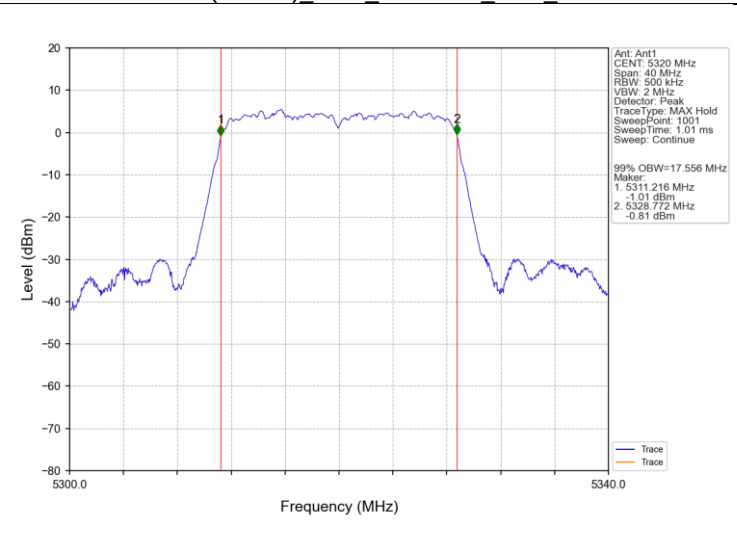

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_LCH_5500MHz_Ant2_NTNV

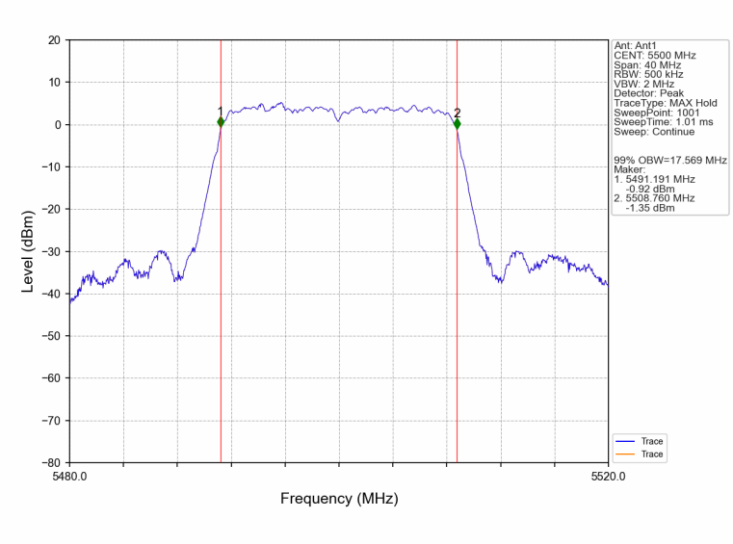

802.11ac(VHT20)_MCH_5580MHz_Ant2_NTNV

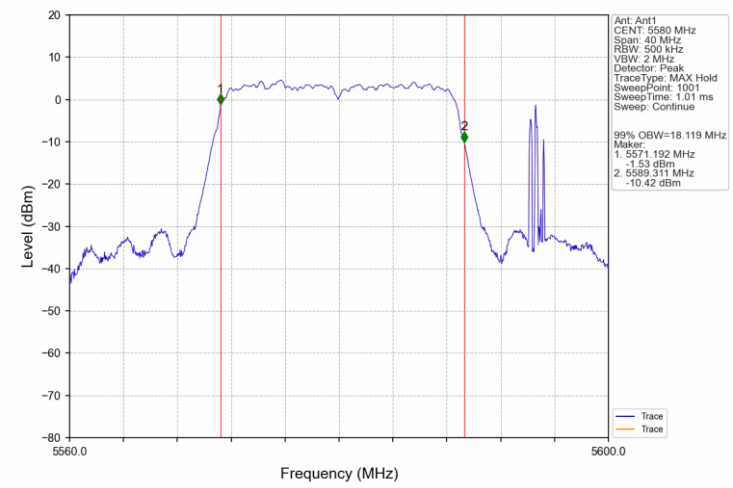

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_HCH_5700MHz_Ant2_NTNV

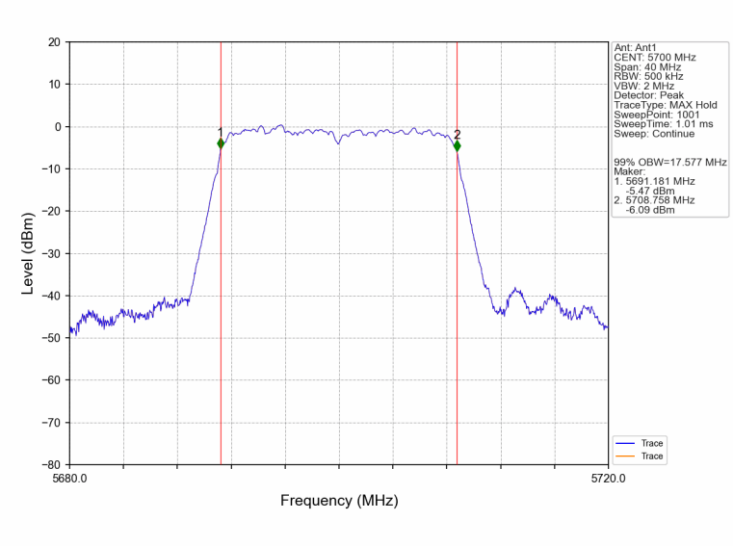

802.11ac(VHT20)_LCH_5745MHz_Ant2_NTNV

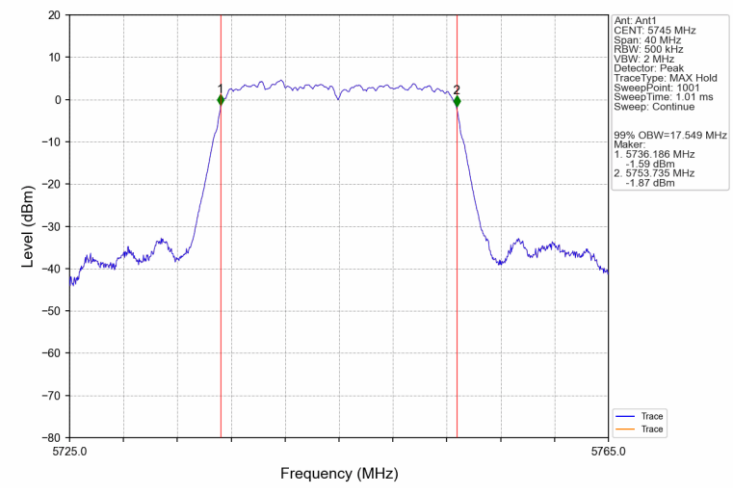

802.11ac(VHT20)_MCH_5785MHz_Ant2_NTNV

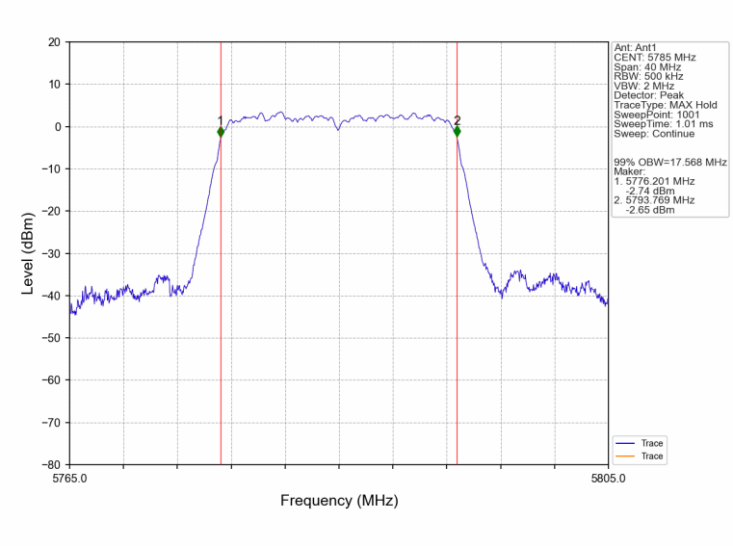

802.11ac(VHT20)_HCH_5825MHz_Ant2_NTNV

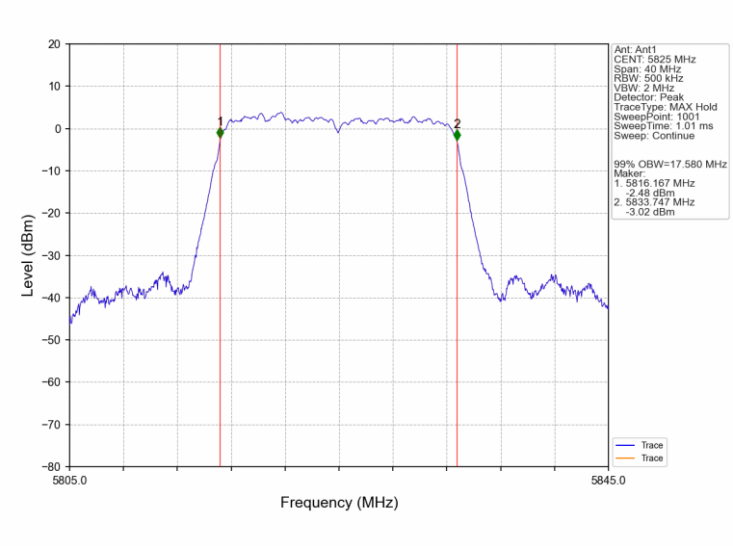

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_HCH_5720MHz_Ant2_NTNV

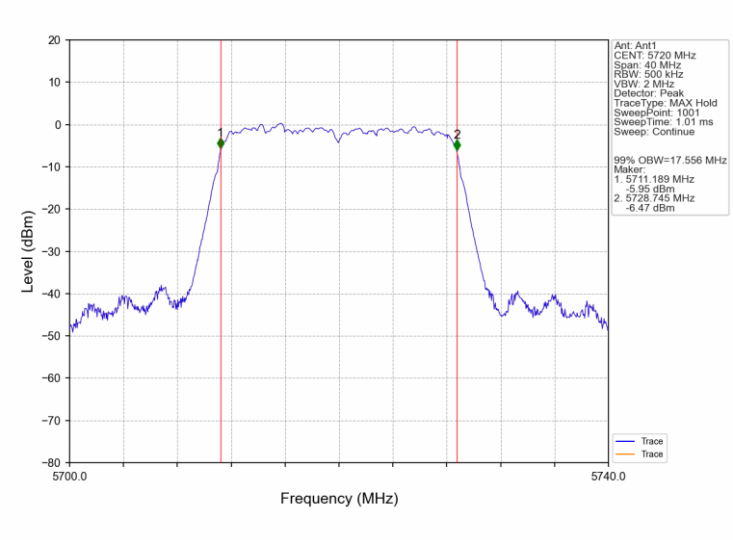

802.11ax(HEW20)_LCH_5180MHz_RU242_Left_Ant2_NTNV

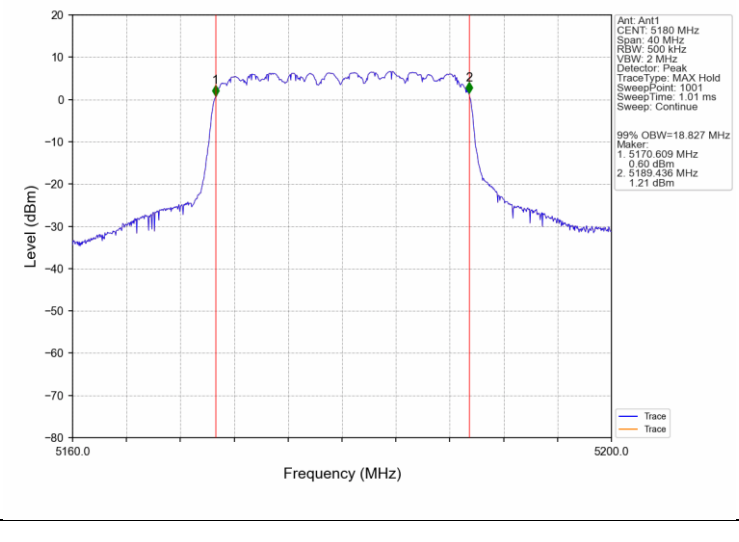

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_MCH_5200MHz_RU242_Left_Ant2_NTNV

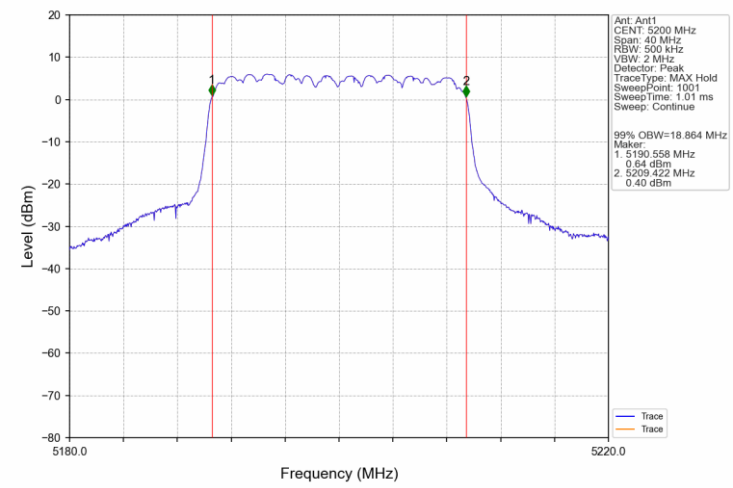

802.11ax(HEW20)_HCH_5240MHz_RU242_Left_Ant2_NTNV

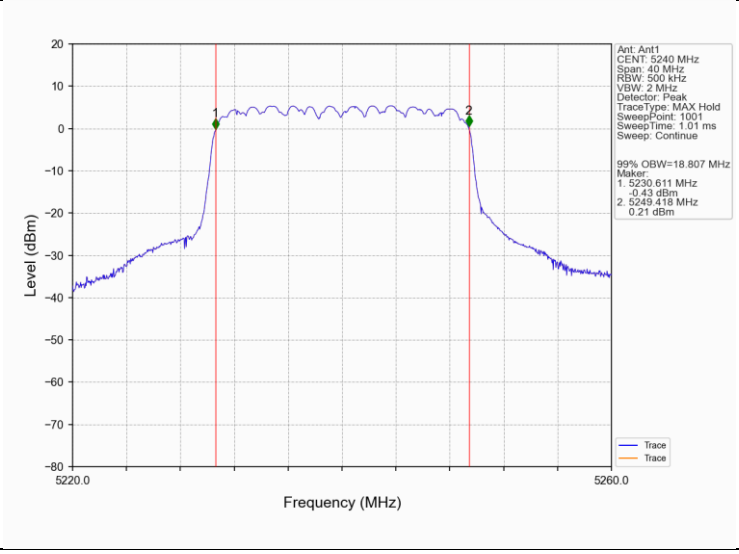

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_LCH_5260MHz_RU242_Left_Ant2_NTNV

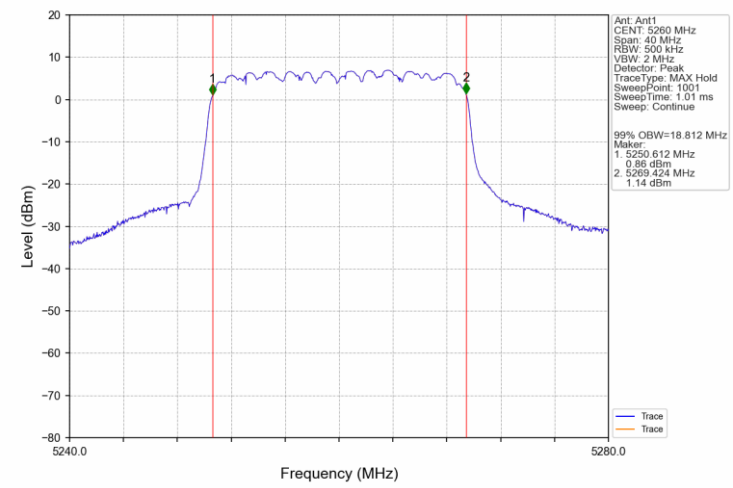

802.11ax(HEW20)_MCH_5300MHz_RU242_Left_Ant2_NTNV

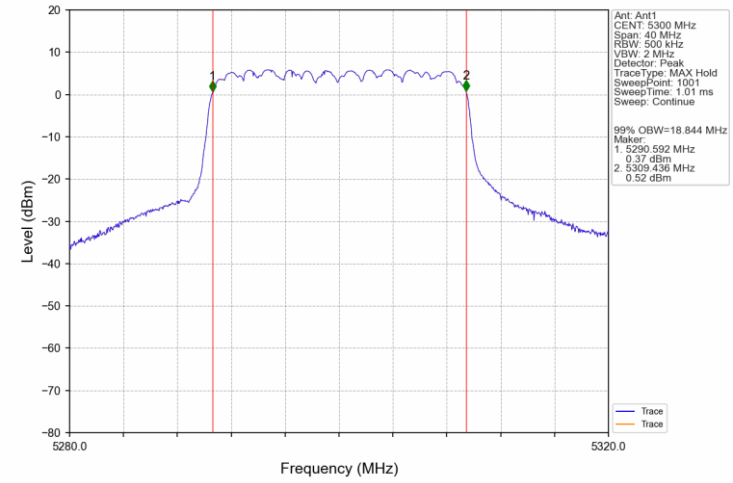

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_HCH_5320MHz_RU242_Left_Ant2_NTNV

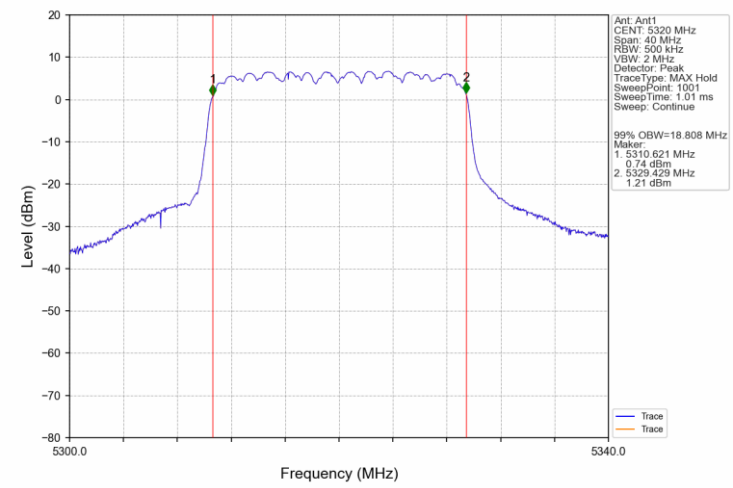

802.11ax(HEW20)_LCH_5500MHz_RU242_Left_Ant2_NTNV

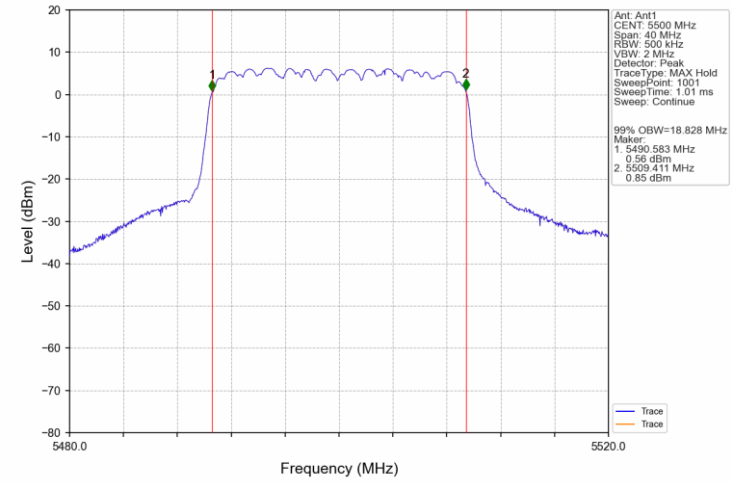

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_MCH_5580MHz_RU242_Left_Ant2_NTNV

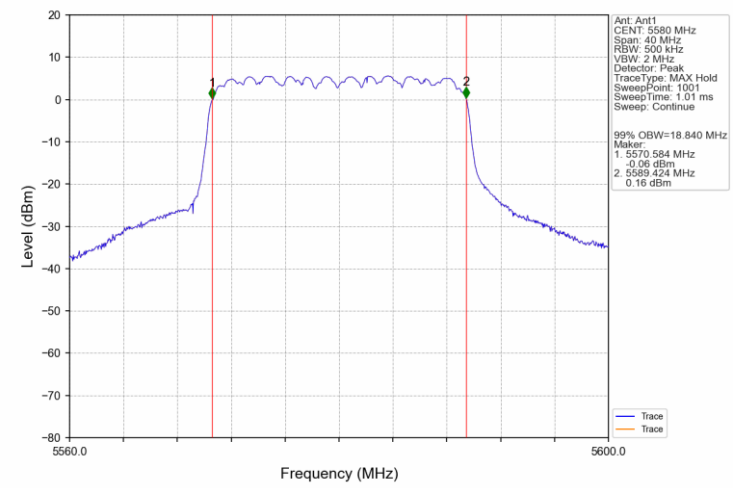

802.11ax(HEW20)_HCH_5700MHz_RU242_Left_Ant2_NTNV

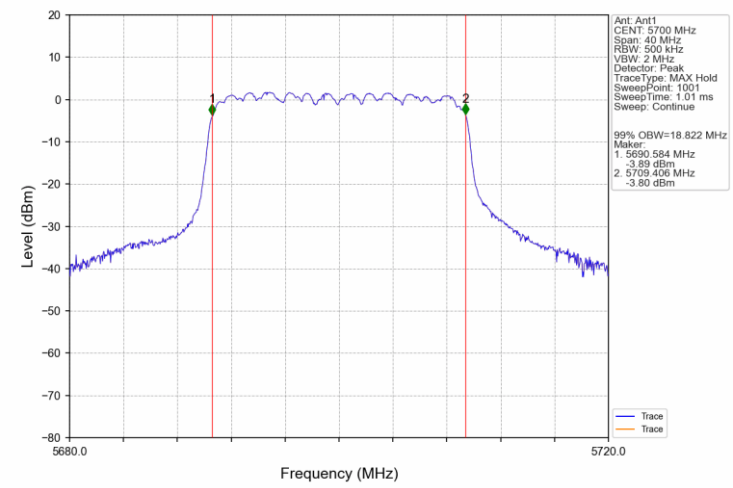

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_LCH_5745MHz_RU242_Left_Ant2_NTNV

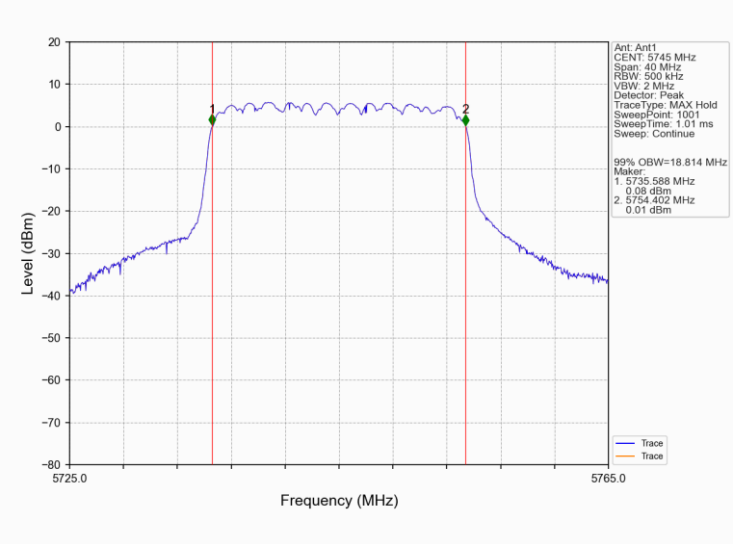

802.11ax(HEW20)_MCH_5785MHz_RU242_Left_Ant2_NTNV

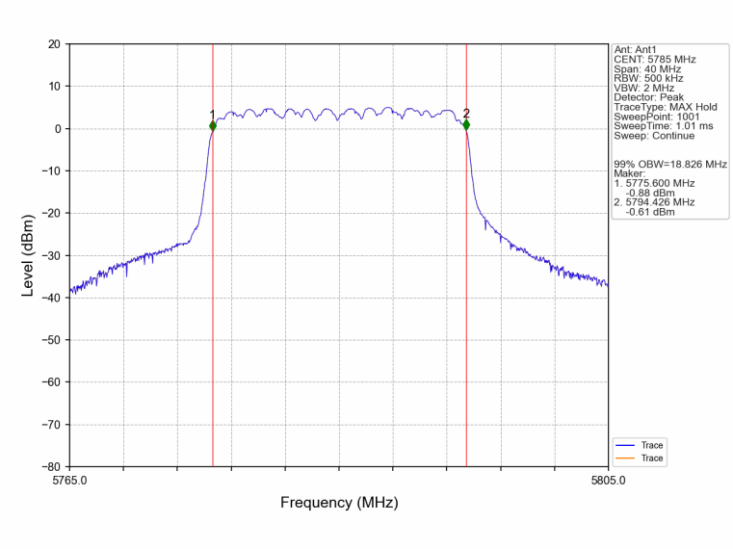

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_HCH_5825MHz_RU242_Left_Ant2_NTNV

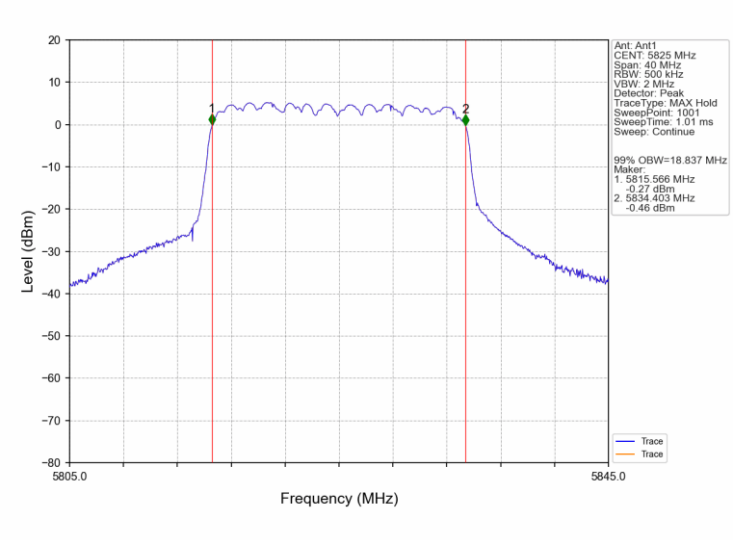

802.11ax(HEW20)_HCH_5720MHz_RU242_Left_Ant2_NTNV

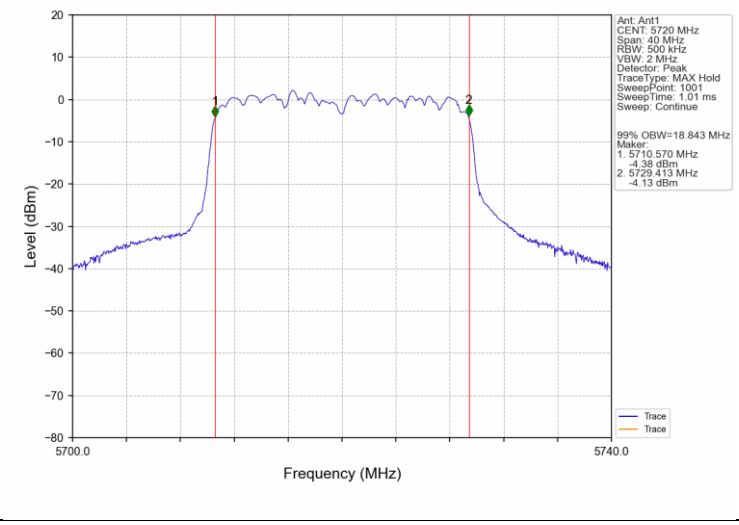

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_MCH_5200MHz_RU106_Left_Ant1_NTNV

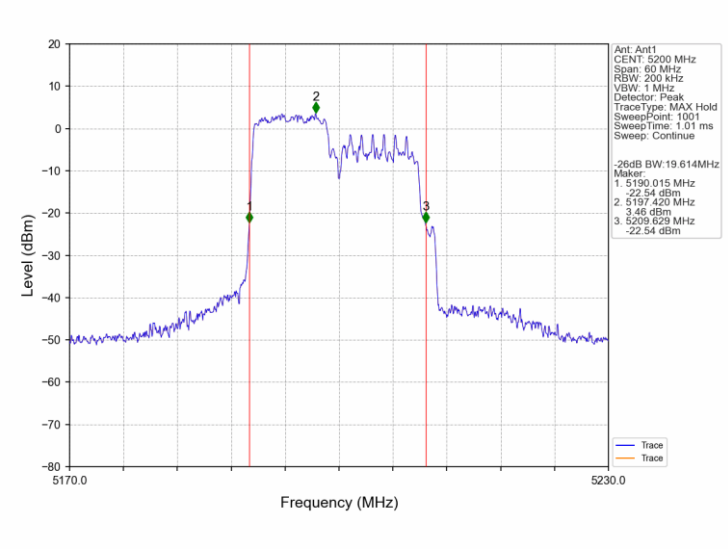

802.11ax(HEW20)_HCH_5240MHz_RU106_Left_Ant1_NTNV

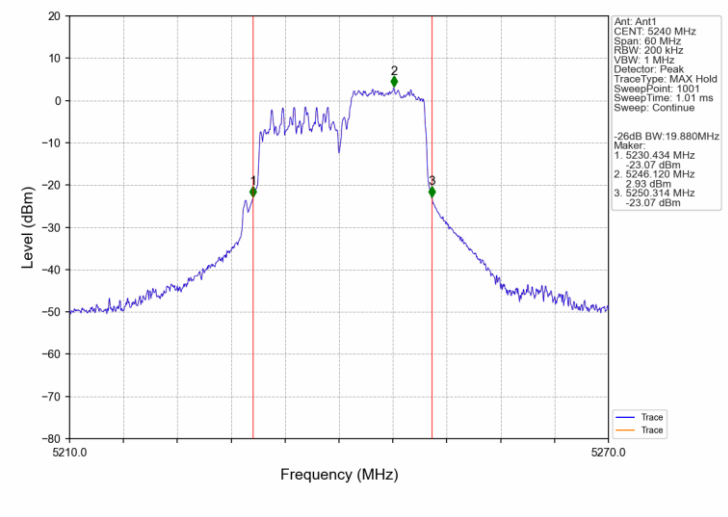

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

6dB bandwidth Test result:

Mode	TX Type	Frequency (MHz)	RU	RU Pos	ANT	6dB Bandwidth (MHz)		Verdict
						Result	Limit	
802.11a	SISO	5745	/	/	1	16.342	>=0.5	Pass
		5785	/	/	1	16.350	>=0.5	Pass
		5825	/	/	1	16.347	>=0.5	Pass
802.11n (HT20)	SISO	5745	/	/	1	17.420	>=0.5	Pass
		5785	/	/	1	17.562	>=0.5	Pass
		5825	/	/	1	17.423	>=0.5	Pass
802.11ac (VHT20)	SISO	5745	/	/	1	17.417	>=0.5	Pass
		5785	/	/	1	17.566	>=0.5	Pass
		5825	/	/	1	17.422	>=0.5	Pass
802.11ax (HEW20)	SISO	5745	RU26	Left	1	2.038	>=0.5	Pass
		5745	RU242	Left	1	18.932	>=0.5	Pass
		5785	RU26	Left	1	2.666	>=0.5	Pass
		5785	RU242	Left	1	18.989	>=0.5	Pass
		5825	RU26	Left	1	2.078	>=0.5	Pass
		5825	RU242	Left	1	18.965	>=0.5	Pass

Mode	TX Type	Frequency (MHz)	RU	RU Pos	ANT	6dB Bandwidth (MHz)		Verdict
						Result	Limit	
802.11a	SISO	5745	/	/	2	16.340	>=0.5	Pass
		5785	/	/	2	16.353	>=0.5	Pass
		5825	/	/	2	16.348	>=0.5	Pass
802.11n (HT20)	SISO	5745	/	/	2	17.423	>=0.5	Pass
		5785	/	/	2	17.560	>=0.5	Pass
		5825	/	/	2	17.426	>=0.5	Pass
802.11ac (VHT20)	SISO	5745	/	/	2	17.417	>=0.5	Pass
		5785	/	/	2	17.579	>=0.5	Pass
		5825	/	/	2	17.424	>=0.5	Pass
802.11ax (HEW20)	SISO	5745	RU26	Left	2	18.960	>=0.5	Pass
		5745	RU242	Left	2	2.038	>=0.5	Pass
		5785	RU26	Left	2	18.974	>=0.5	Pass
		5785	RU242	Left	2	2.675	>=0.5	Pass
		5825	RU26	Left	2	18.938	>=0.5	Pass
		5825	RU242	Left	2	2.078	>=0.5	Pass

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

6dB Bandwidth Test Graphs

802.11a_LCH_5745MHz_Ant1_NTNV

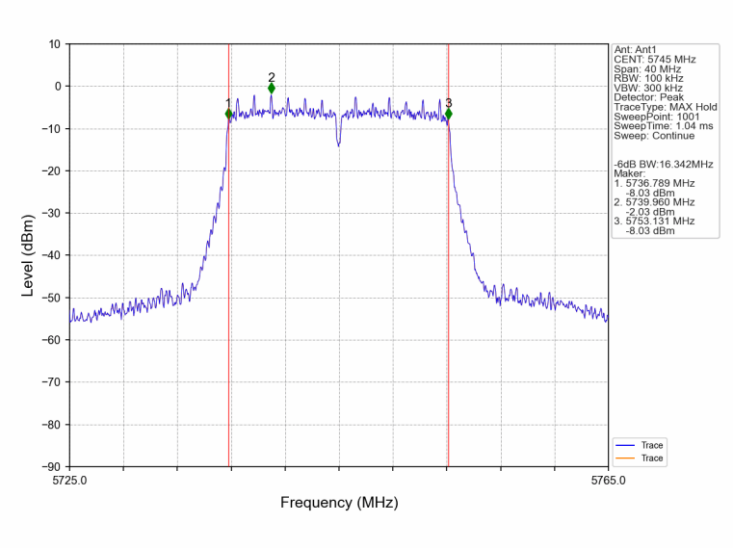

802.11a_MCH_5785MHz_Ant1_NTNV

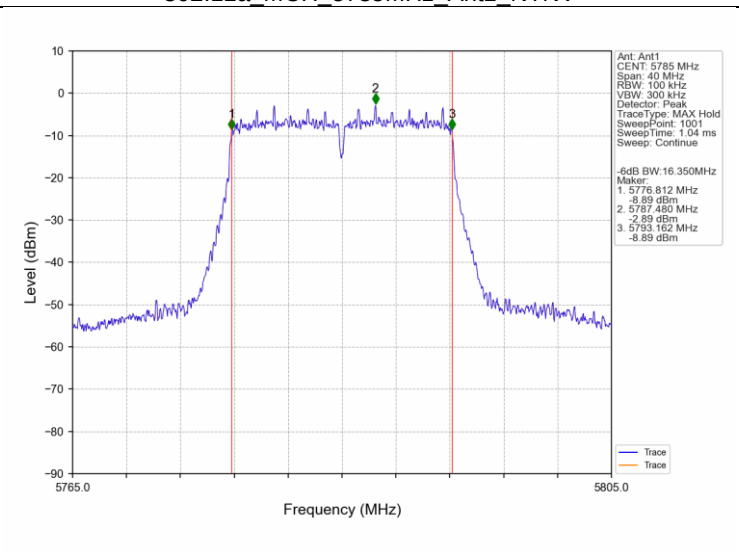

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11a_HCH_5825MHz_Ant1_NTNV

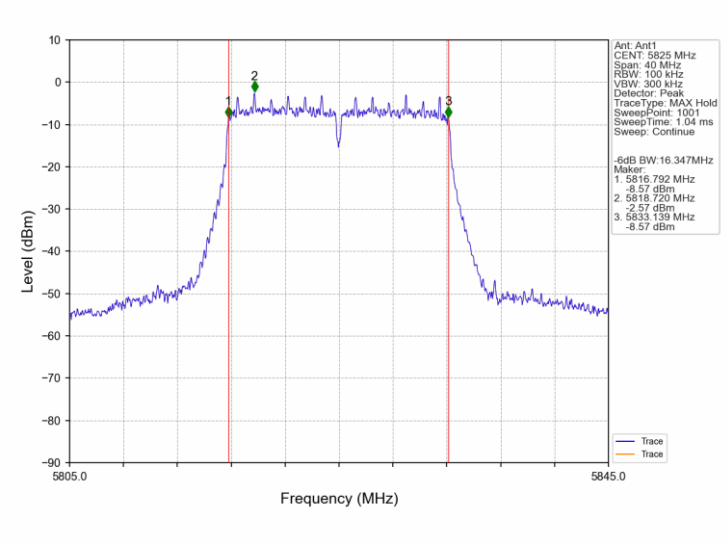

802.11n(HT20)_LCH_5745MHz_Ant1_NTNV

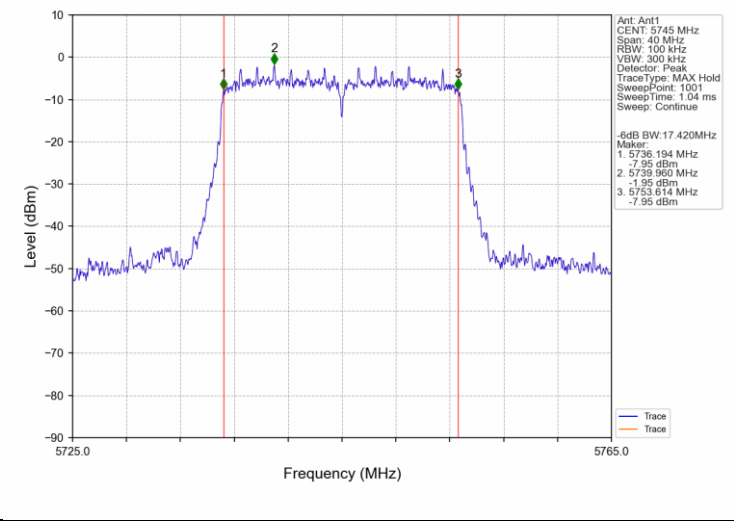

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11n(HT20)_MCH_5785MHz_Ant1_NTNV

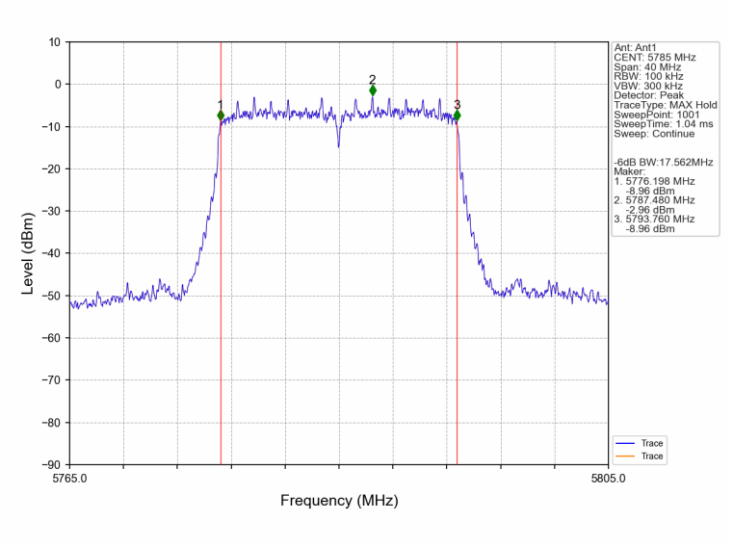

802.11n(HT20)_HCH_5825MHz_Ant1_NTNV

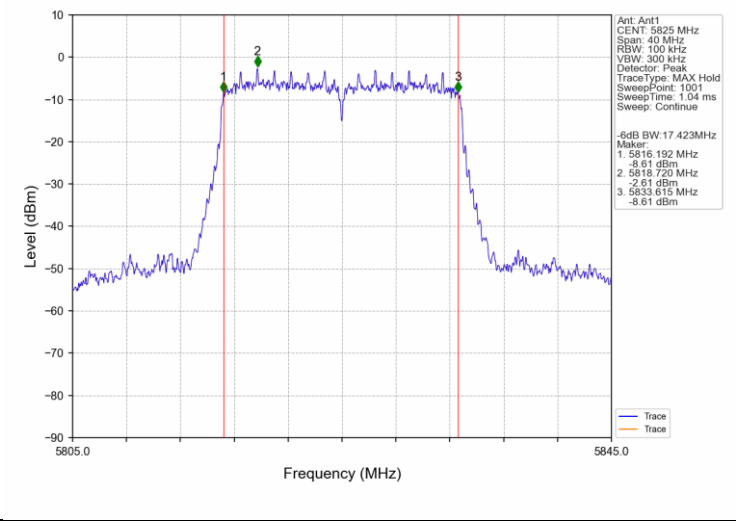

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_LCH_5745MHz_Ant1_NTNV

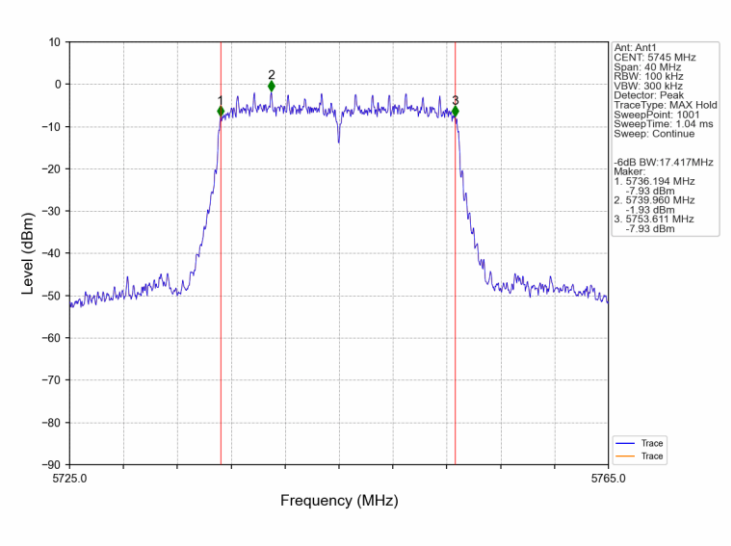

802.11ac(VHT20)_MCH_5785MHz_Ant1_NTNV

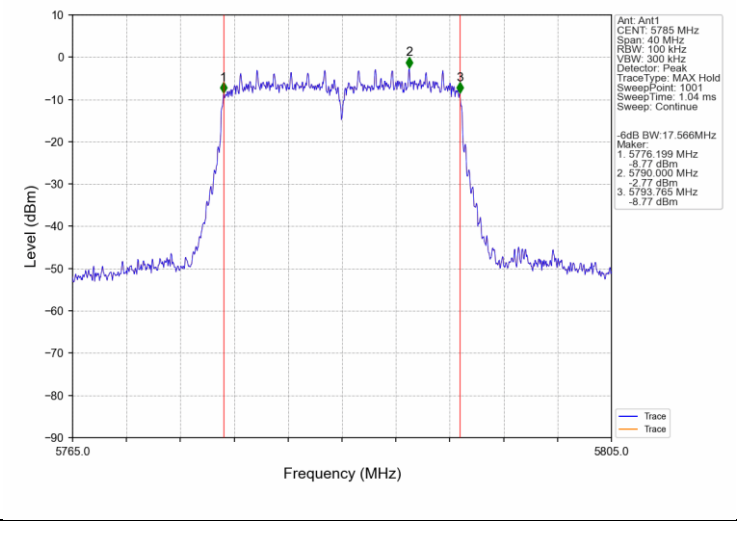

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_HCH_5825MHz_Ant1_NTNV

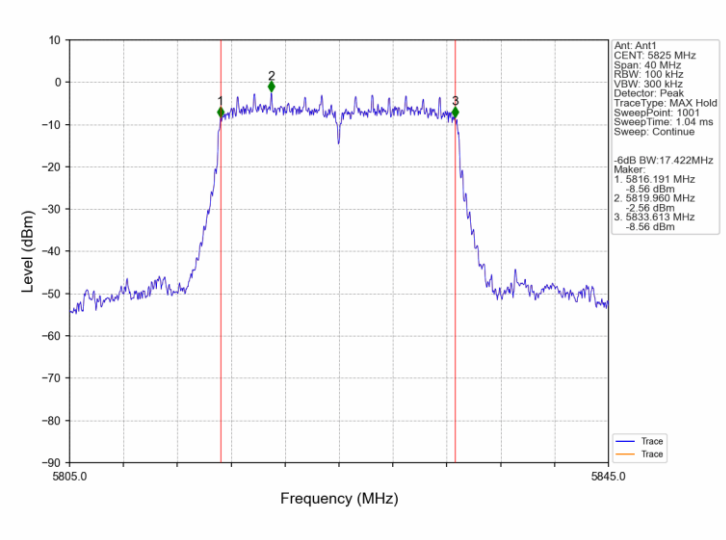

802.11ax(HEW20)_LCH_5745MHz_RU242_Left_Ant1_NTNV

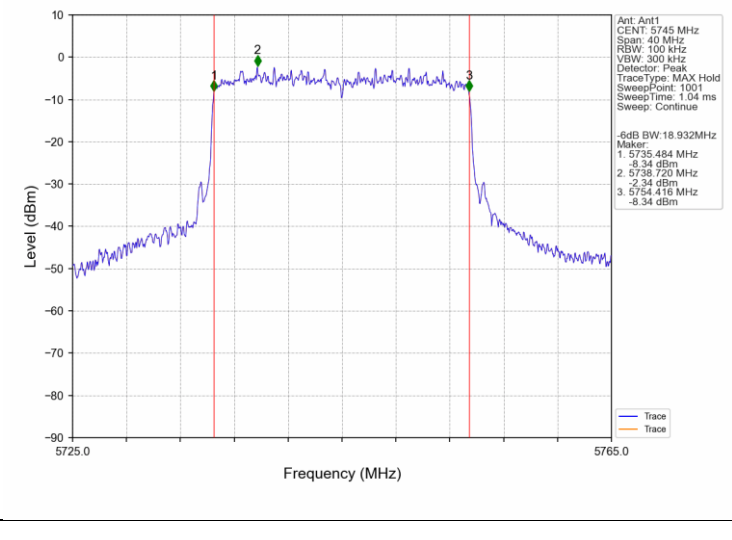

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_MCH_5785MHz_RU242_Left_Ant1_NTNV

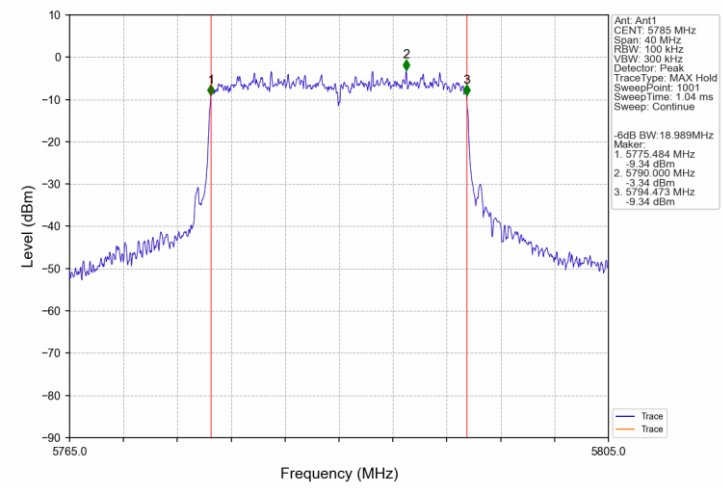

802.11ax(HEW20)_HCH_5825MHz_RU242_Left_Ant1_NTNV

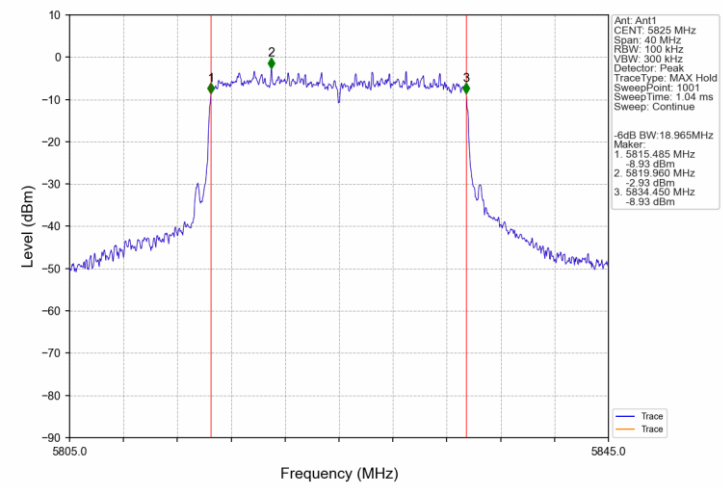

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_MCH_5745MHz_RU26_Left_Ant1_NTNV

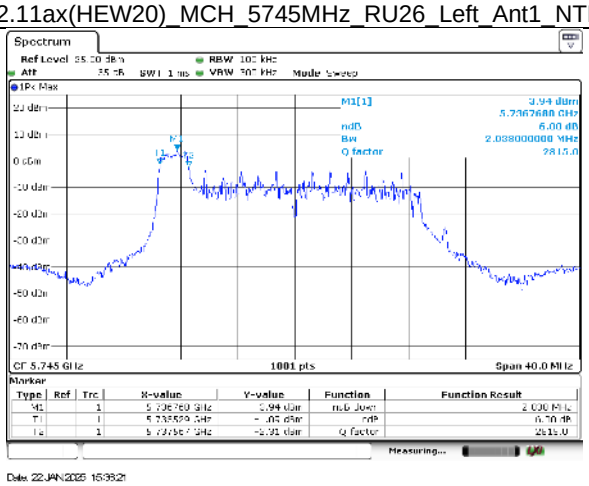

802.11ax(HEW20)_HCH_5745MHz_ RU26_Left_Ant1_NTNV

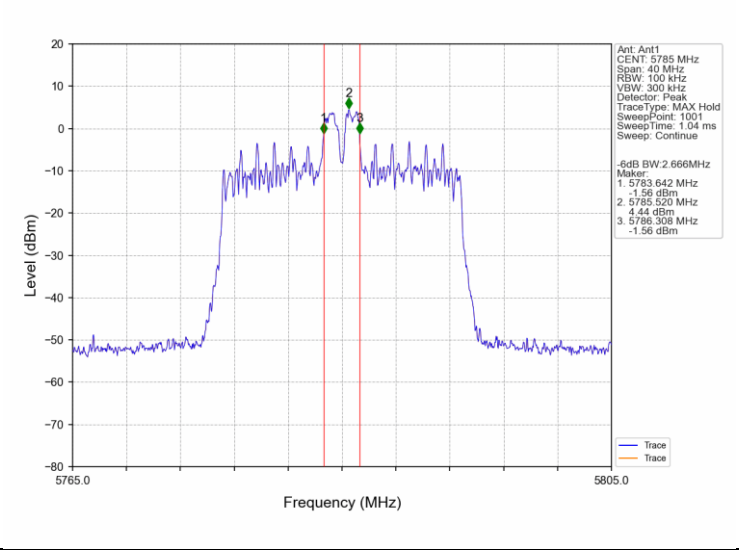

802.11ax(HEW20)_HCH_5825MHz_ RU26_Left_Ant1_NTNV

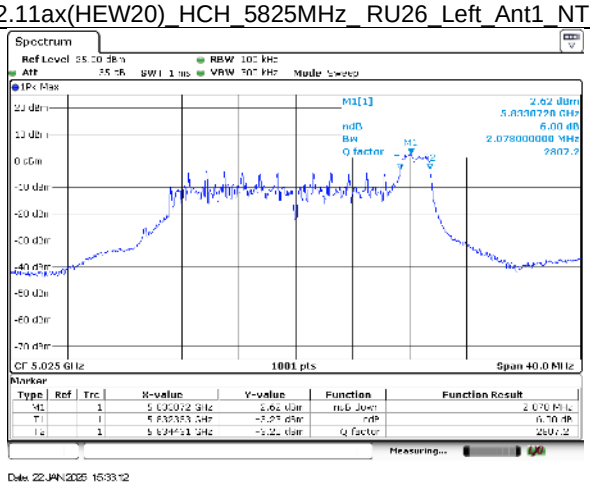

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11a_LCH_5745MHz_Ant2_NTNV

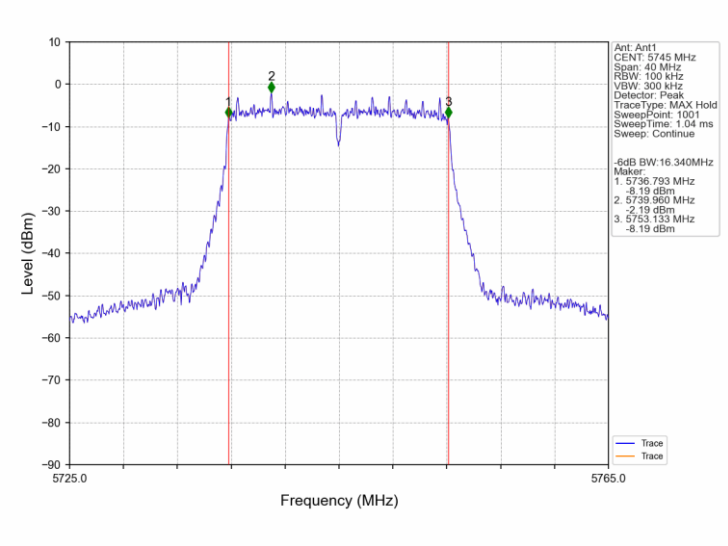

802.11a_MCH_5785MHz_Ant2_NTNV

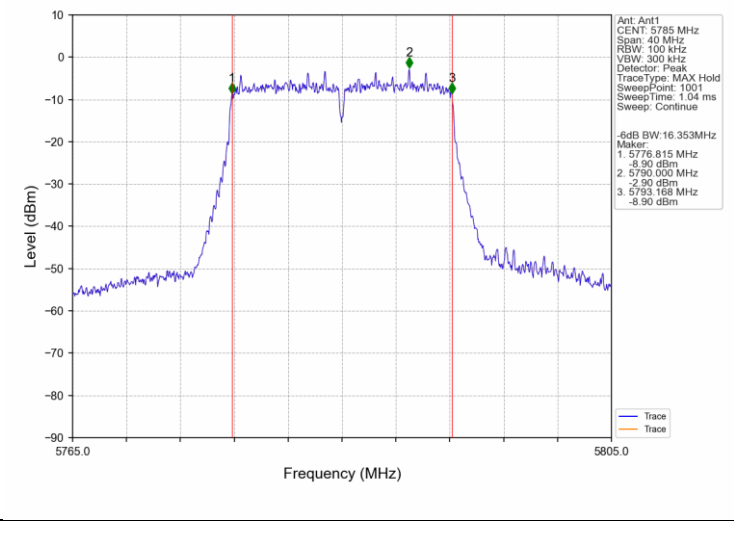

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11a_HCH_5825MHz_Ant2_NTNV

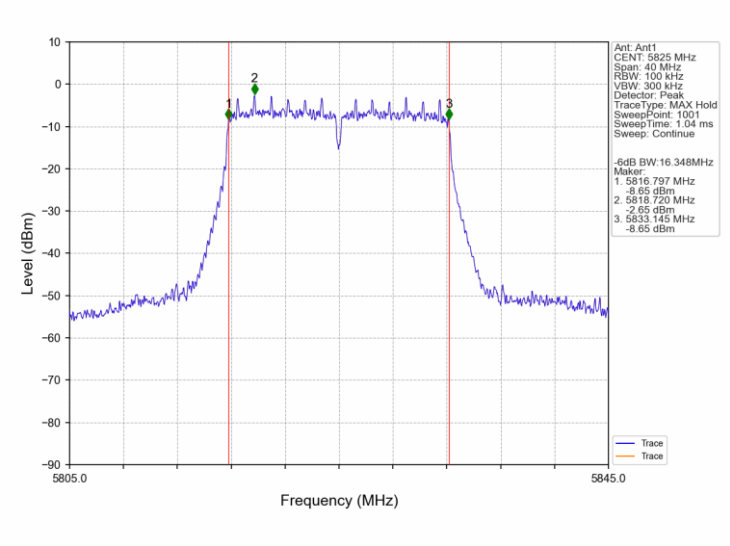

802.11n(HT20)_LCH_5745MHz_Ant2_NTNV

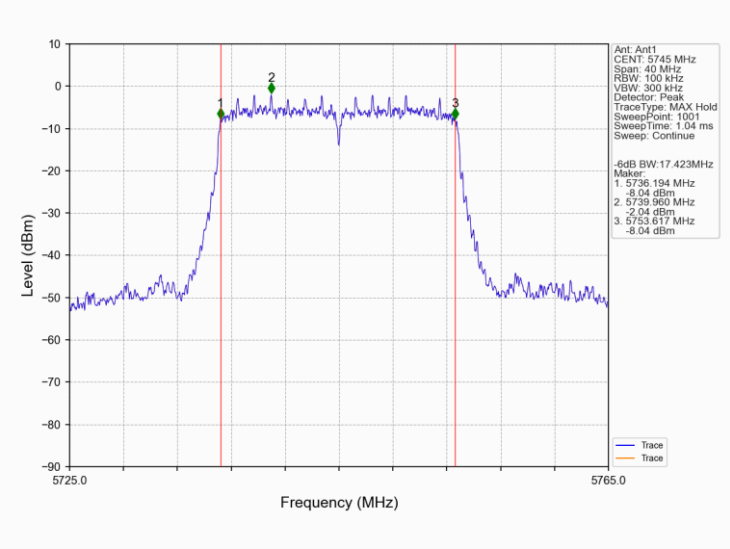

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11n(HT20)_MCH_5785MHz_Ant2_NTNV

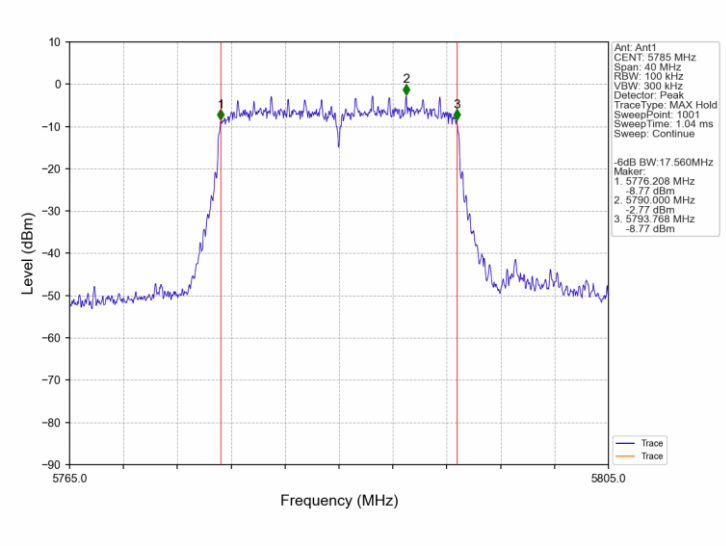

802.11n(HT20)_HCH_5825MHz_Ant2_NTNV

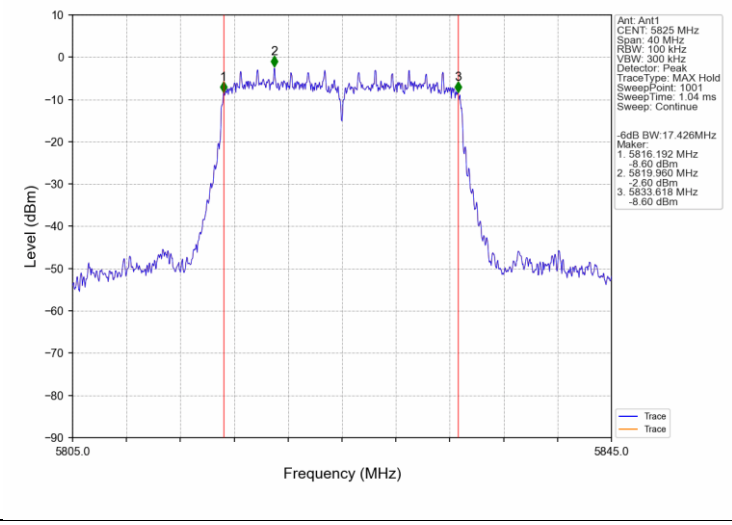

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_LCH_5745MHz_Ant2_NTNV

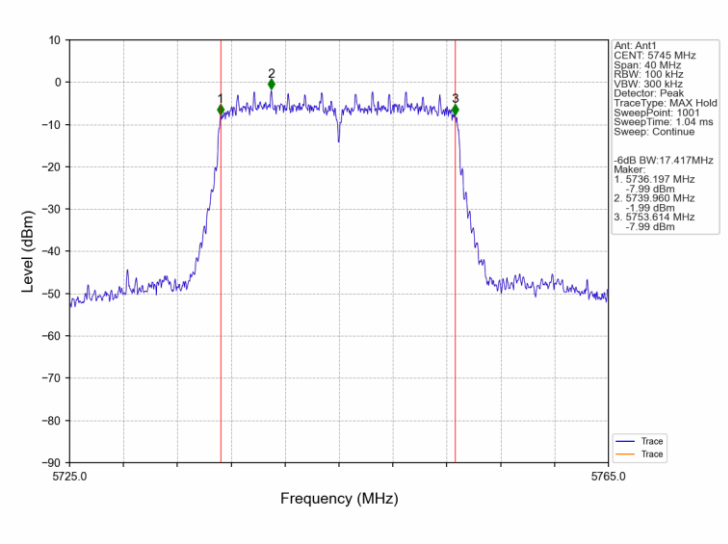

802.11ac(VHT20)_MCH_5785MHz_Ant2_NTNV

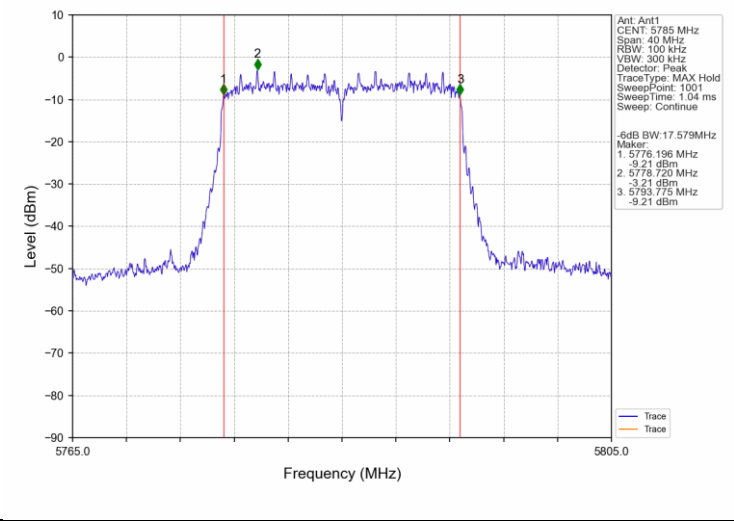

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ac(VHT20)_HCH_5825MHz_Ant2_NTNV

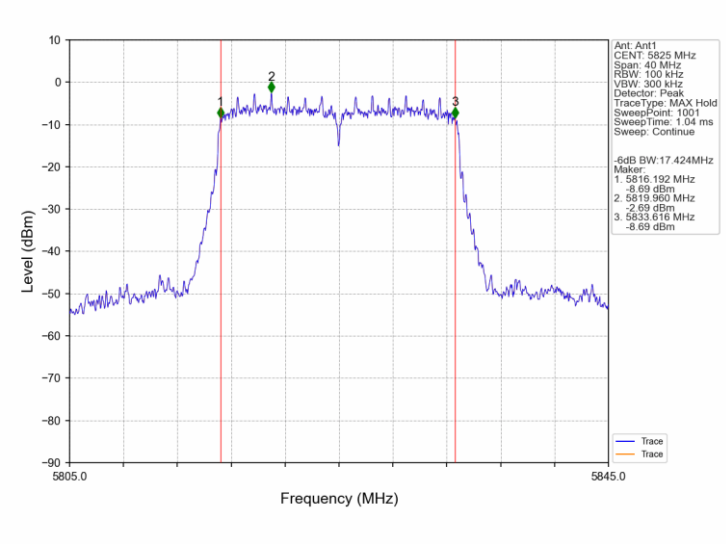

802.11ax(HEW20)_LCH_5745MHz_RU242_Left_Ant2_NTNV

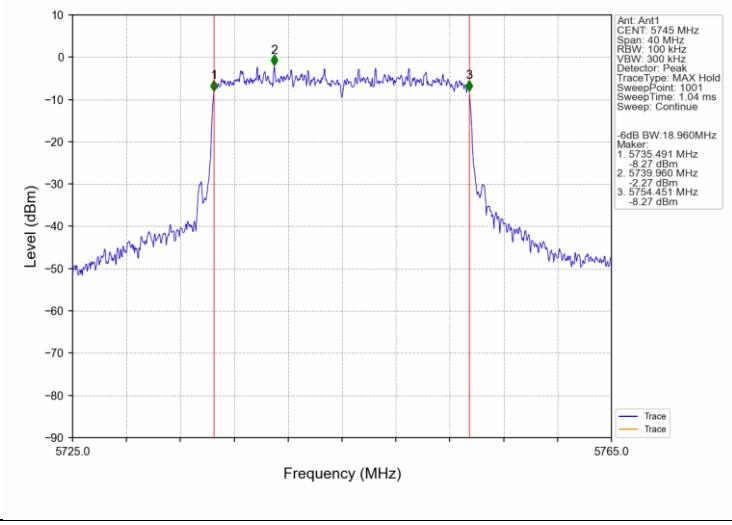

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_MCH_5785MHz_RU242_Left_Ant2_NTNV

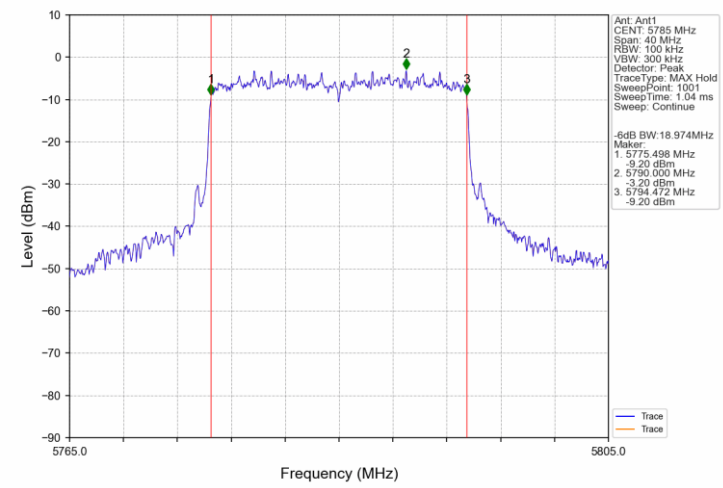

802.11ax(HEW20)_HCH_5825MHz_RU242_Left_Ant2_NTNV

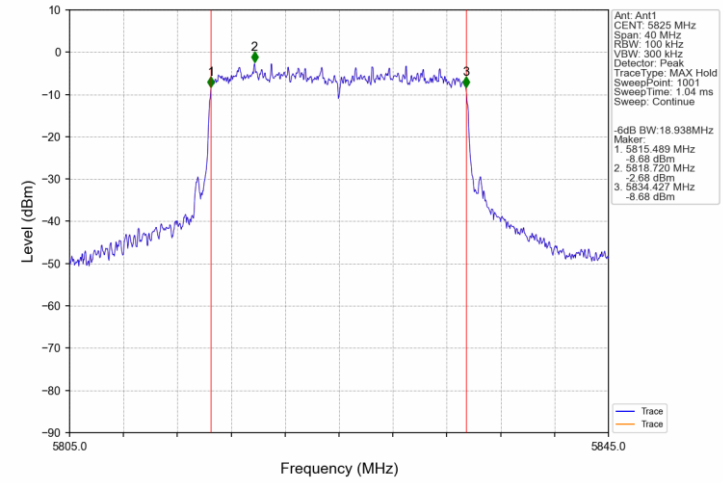

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11ax(HEW20)_MCH_5745MHz_RU26_Left_Ant2_NTNV

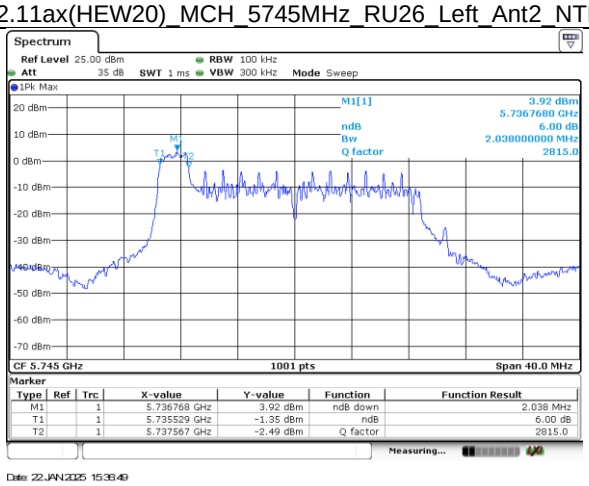

802.11ax(HEW20)_HCH_5745MHz_ RU26_Left_Ant2_NTNV

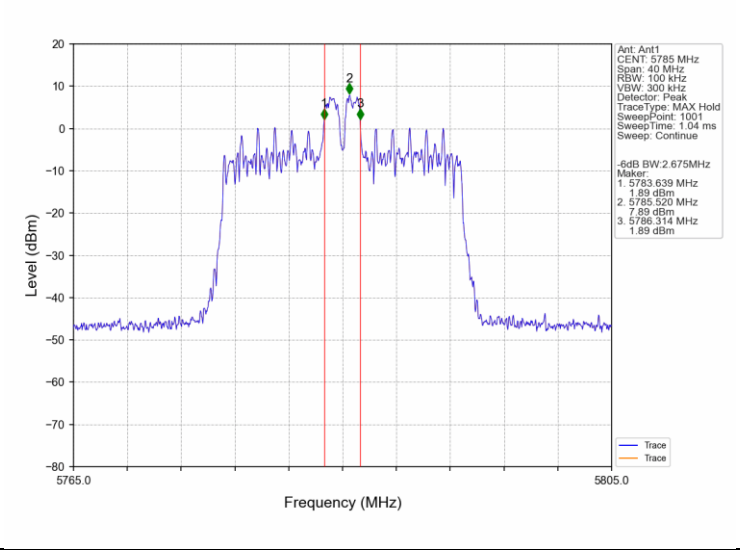

802.11ax(HEW20)_HCH_5825MHz_ RU26_Left_Ant2_NTNV

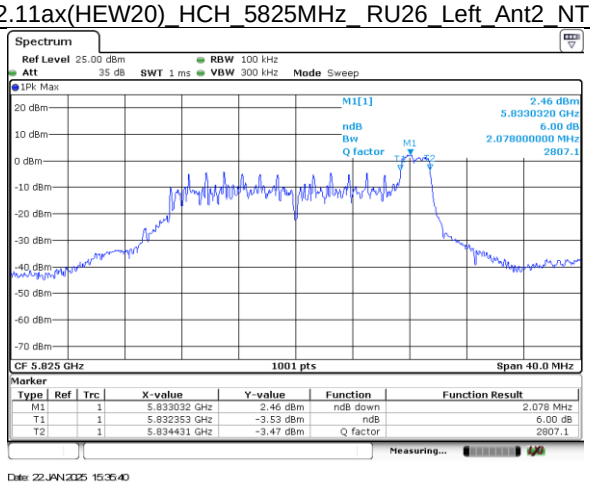

99% Bandwidth Test Result

Mode	TX Type	Frequency (MHz)	RU	RU Pos	ANT	99% Occupied Bandwidth (MHz)		Verdict
						Result	Limit	
802.11a	SISO	5180	/	/	1	16.802	/	Pass
		5200	/	/	1	16.743	/	Pass
		5240	/	/	1	16.730	/	Pass
		5260	/	/	1	16.684	/	Pass
		5300	/	/	1	16.652	/	Pass
		5320	/	/	1	16.650	/	Pass
		5500	/	/	1	16.655	/	Pass
		5580	/	/	1	16.637	/	Pass
		5700	/	/	1	16.658	/	Pass
		5720	/	/	1	16.657	/	Pass
		5745	/	/	1	16.667	/	Pass
		5785	/	/	1	16.641	/	Pass
		5825	/	/	1	16.665	/	Pass
802.11n (HT20)	SISO	5180	/	/	1	17.846	/	Pass
		5200	/	/	1	17.779	/	Pass
		5240	/	/	1	17.756	/	Pass
		5260	/	/	1	17.678	/	Pass
		5300	/	/	1	17.636	/	Pass
		5320	/	/	1	17.648	/	Pass
		5500	/	/	1	17.586	/	Pass
		5580	/	/	1	17.575	/	Pass
		5700	/	/	1	17.603	/	Pass
		5720	/	/	1	17.585	/	Pass
		5745	/	/	1	17.589	/	Pass
		5785	/	/	1	17.559	/	Pass
		5825	/	/	1	17.579	/	Pass
802.11ac (VHT20)	SISO	5180	/	/	1	17.869	/	Pass
		5200	/	/	1	17.782	/	Pass
		5240	/	/	1	17.781	/	Pass
		5260	/	/	1	17.680	/	Pass
		5300	/	/	1	17.638	/	Pass
		5320	/	/	1	17.631	/	Pass
		5500	/	/	1	17.592	/	Pass
		5580	/	/	1	17.571	/	Pass
		5700	/	/	1	17.600	/	Pass
		5720	/	/	1	17.593	/	Pass
		5745	/	/	1	17.587	/	Pass
		5785	/	/	1	17.557	/	Pass
		5825	/	/	1	17.577	/	Pass
802.11ax (HEW20)	SISO	5180	RU242	Left	1	18.991	/	Pass
		5200	RU242	Left	1	18.953	/	Pass
		5240	RU242	Left	1	18.932	/	Pass
		5260	RU242	Left	1	18.889	/	Pass
		5300	RU242	Left	1	18.824	/	Pass
		5320	RU242	Left	1	18.857	/	Pass
		5500	RU242	Left	1	18.841	/	Pass
		5580	RU242	Left	1	18.849	/	Pass
		5700	RU242	Left	1	18.844	/	Pass
		5720	RU242	Left	1	18.994	/	Pass
		5745	RU242	Left	1	18.853	/	Pass
		5785	RU242	Left	1	18.801	/	Pass
		5825	RU242	Left	1	18.823	/	Pass

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

Mode	TX Type	Frequency (MHz)	RU	RU Pos	ANT	99% Occupied Bandwidth (MHz)		Verdict
						Result	Limit	
802.11a	SISO	5180	/	/	2	16.788	/	Pass
		5200	/	/	2	16.757	/	Pass
		5240	/	/	2	16.712	/	Pass
		5260	/	/	2	16.658	/	Pass
		5300	/	/	2	16.667	/	Pass
		5320	/	/	2	16.643	/	Pass
		5500	/	/	2	16.633	/	Pass
		5580	/	/	2	16.644	/	Pass
		5700	/	/	2	16.644	/	Pass
		5720	/	/	2	16.658	/	Pass
		5745	/	/	2	16.662	/	Pass
		5785	/	/	2	16.656	/	Pass
		5825	/	/	2	16.644	/	Pass
802.11n (HT20)	SISO	5180	/	/	2	17.803	/	Pass
		5200	/	/	2	17.790	/	Pass
		5240	/	/	2	17.749	/	Pass
		5260	/	/	2	17.661	/	Pass
		5300	/	/	2	17.679	/	Pass
		5320	/	/	2	17.610	/	Pass
		5500	/	/	2	17.582	/	Pass
		5580	/	/	2	17.598	/	Pass
		5700	/	/	2	17.570	/	Pass
		5720	/	/	2	18.198	/	Pass
		5745	/	/	2	17.595	/	Pass
		5785	/	/	2	17.577	/	Pass
		5825	/	/	2	17.567	/	Pass
802.11ac (VHT20)	SISO	5180	/	/	2	17.826	/	Pass
		5200	/	/	2	17.812	/	Pass
		5240	/	/	2	17.763	/	Pass
		5260	/	/	2	17.668	/	Pass
		5300	/	/	2	17.672	/	Pass
		5320	/	/	2	17.610	/	Pass
		5500	/	/	2	17.582	/	Pass
		5580	/	/	2	17.607	/	Pass
		5700	/	/	2	17.572	/	Pass
		5720	/	/	2	17.597	/	Pass
		5745	/	/	2	17.590	/	Pass
		5785	/	/	2	17.575	/	Pass
		5825	/	/	2	17.555	/	Pass
802.11ax (HEW20)	SISO	5180	RU242	Left	2	18.953	/	Pass
		5200	RU242	Left	2	18.943	/	Pass
		5240	RU242	Left	2	18.924	/	Pass
		5260	RU242	Left	2	18.882	/	Pass
		5300	RU242	Left	2	18.887	/	Pass
		5320	RU242	Left	2	18.850	/	Pass
		5500	RU242	Left	2	18.824	/	Pass
		5580	RU242	Left	2	18.851	/	Pass
		5700	RU242	Left	2	18.830	/	Pass
		5720	RU242	Left	2	18.853	/	Pass
		5745	RU242	Left	2	18.833	/	Pass
		5785	RU242	Left	2	18.821	/	Pass
		5825	RU242	Left	2	18.820	/	Pass

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

99% Bandwidth Test Graphs

802.11a_LCH_5180MHz_Ant1_NTNV

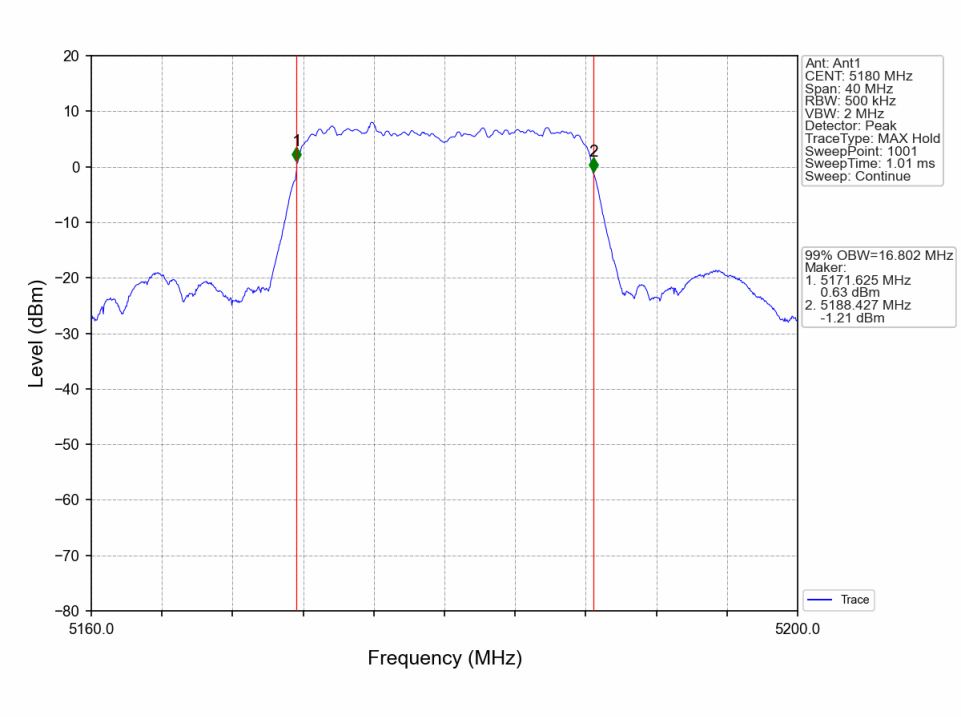

802.11a_MCH_5200MHz_Ant1_NTNV

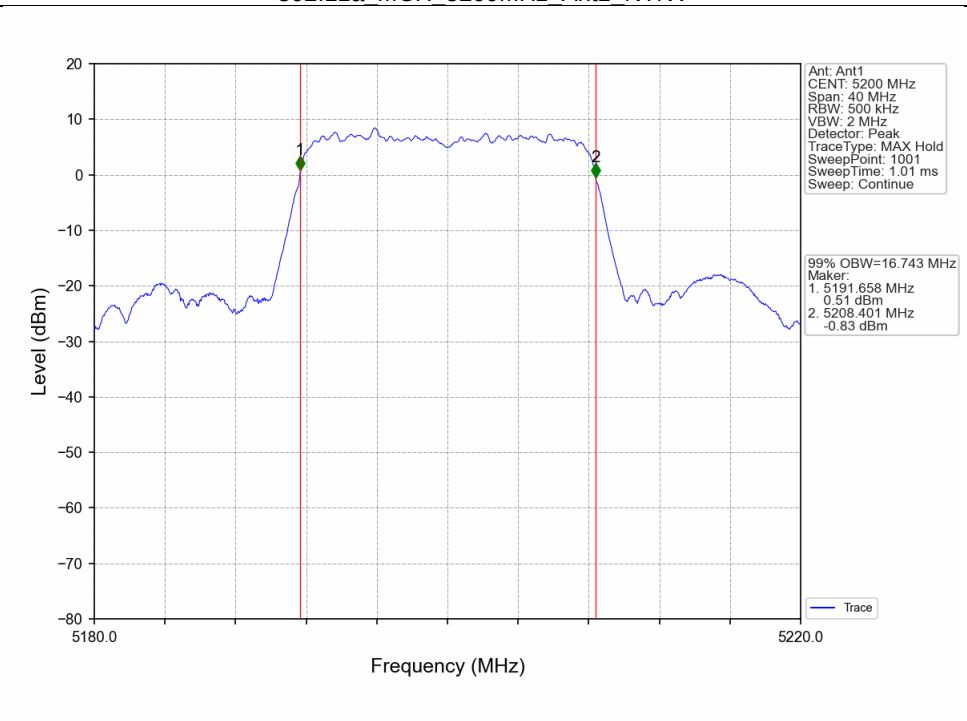

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11a_HCH_5240MHz_Ant1_NTNV

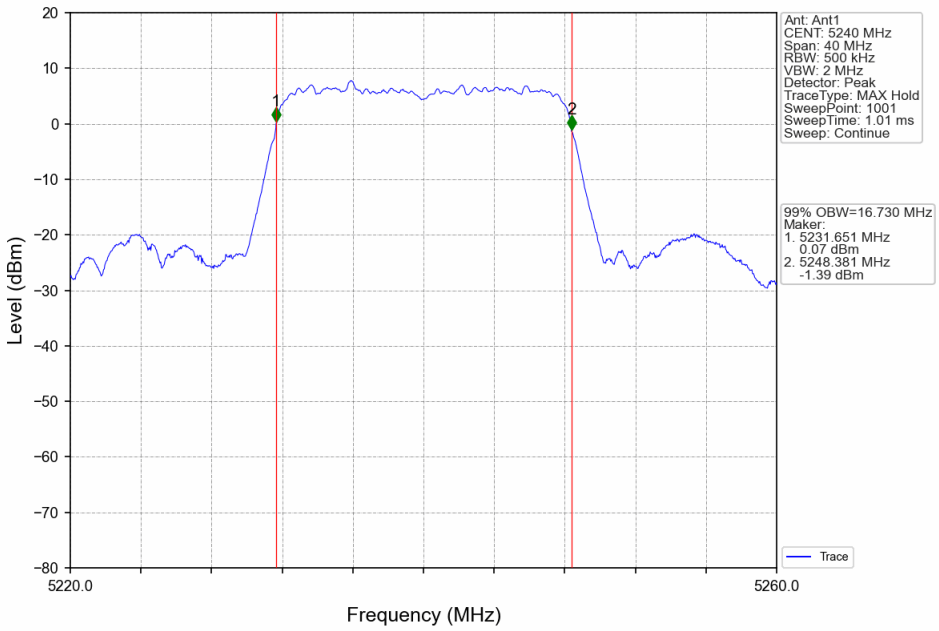

802.11a_LCH_5260MHz_Ant1_NTNV

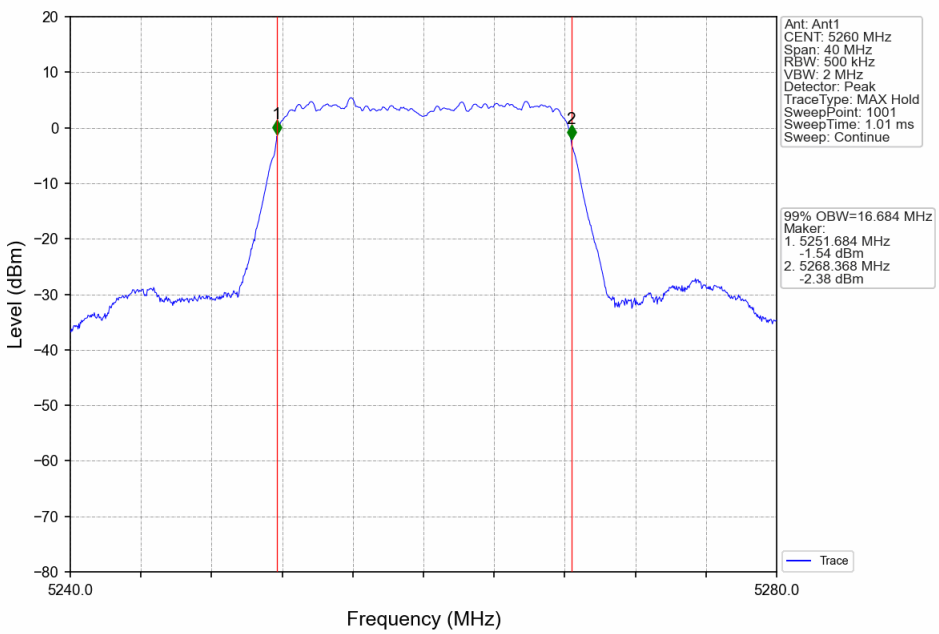

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11a_MCH_5300MHz_Ant1_NTNV

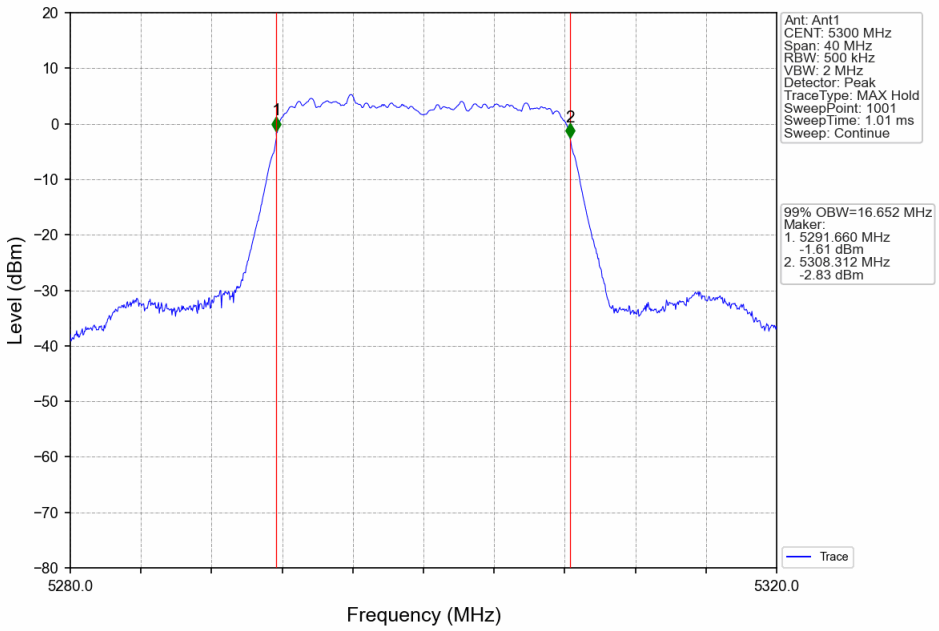

802.11a_HCH_5320MHz_Ant1_NTNV

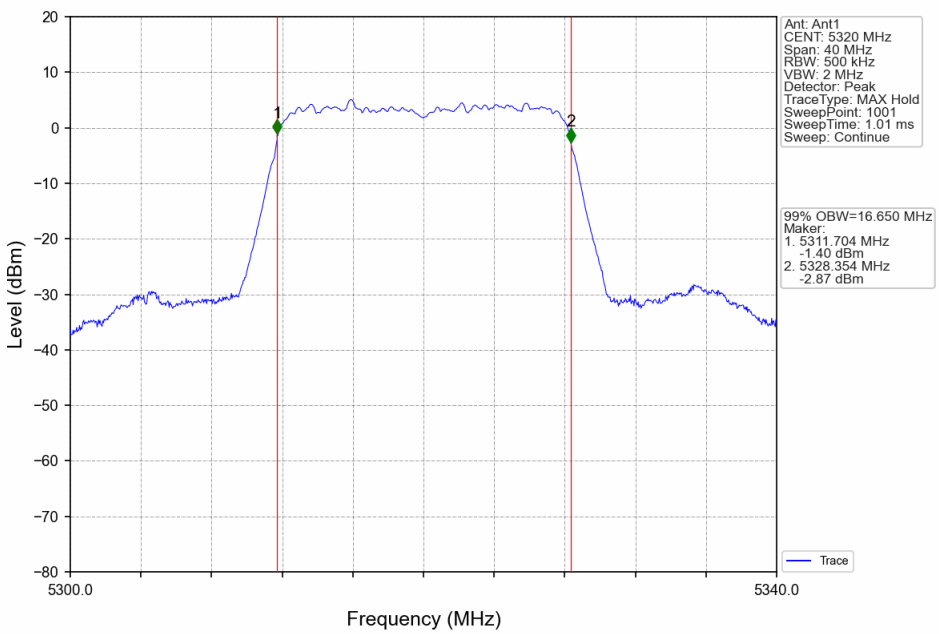

802.11a_LCH_5500MHz_Ant1_NTNV

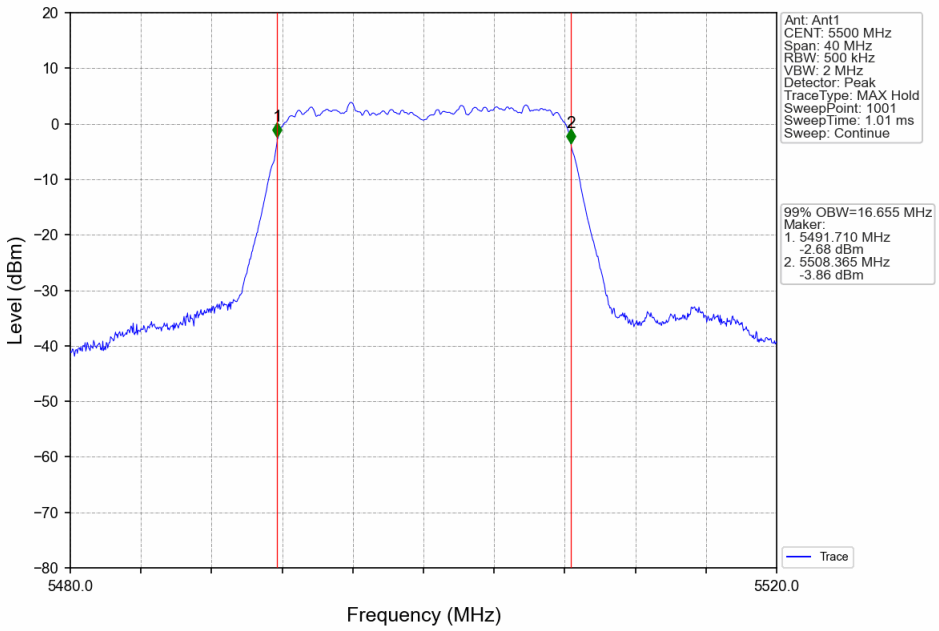

802.11a_MCH_5580MHz_Ant1_NTNV

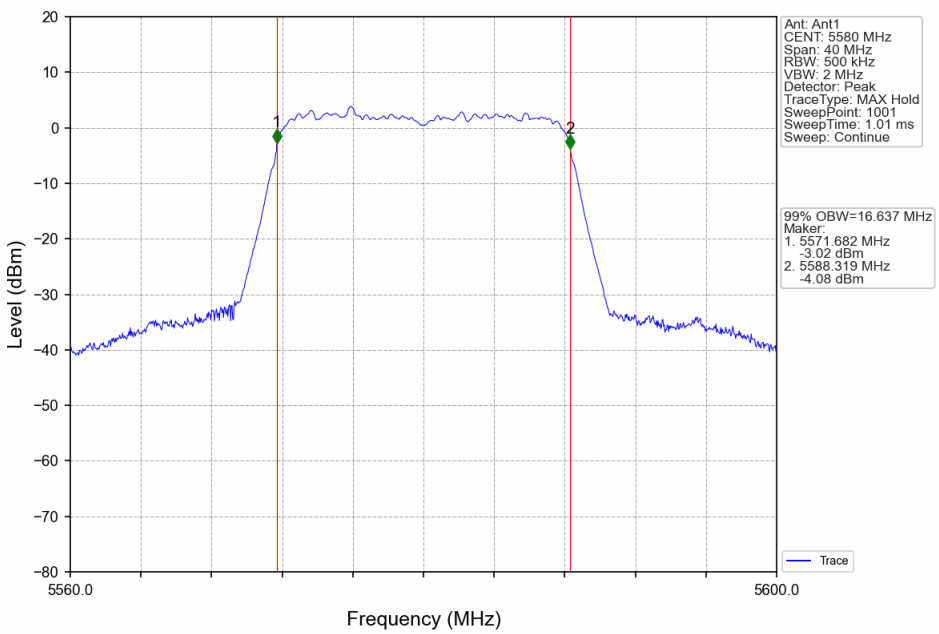

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11a_HCH_5700MHz_Ant1_NTNV

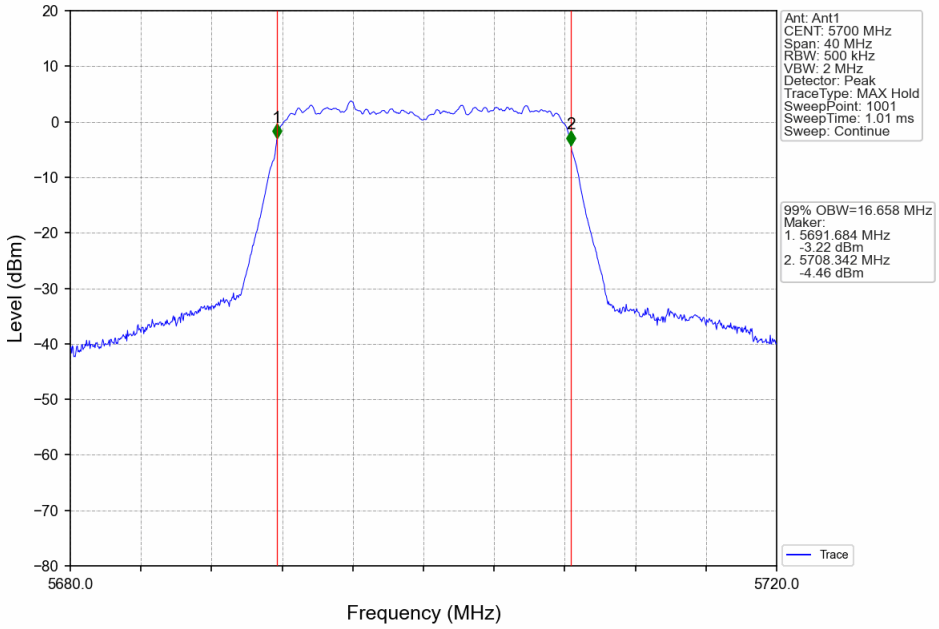

802.11a_HCH_5720MHz_Ant1_NTNV

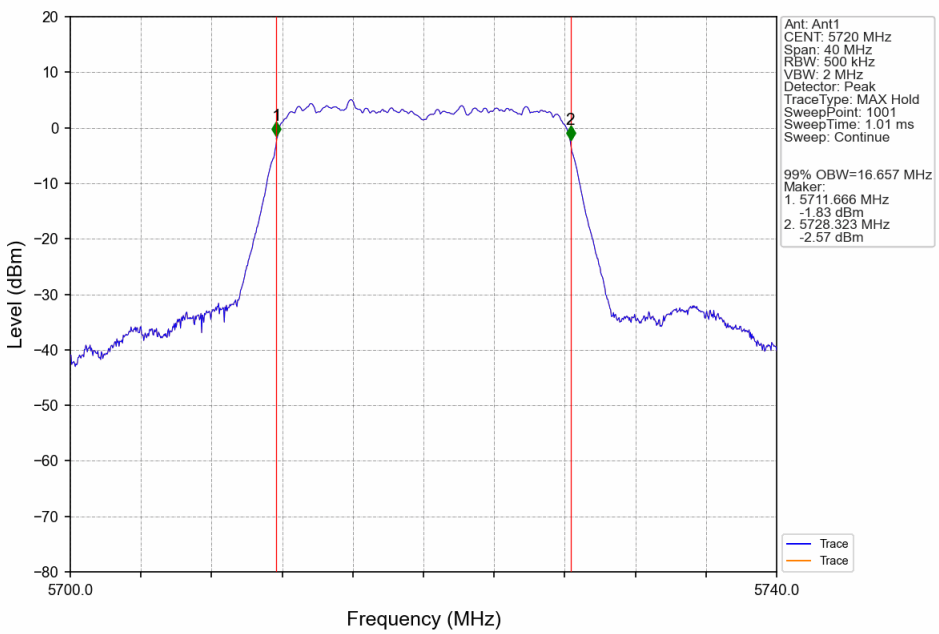

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11a_LCH_5745MHz_Ant1_NTNV

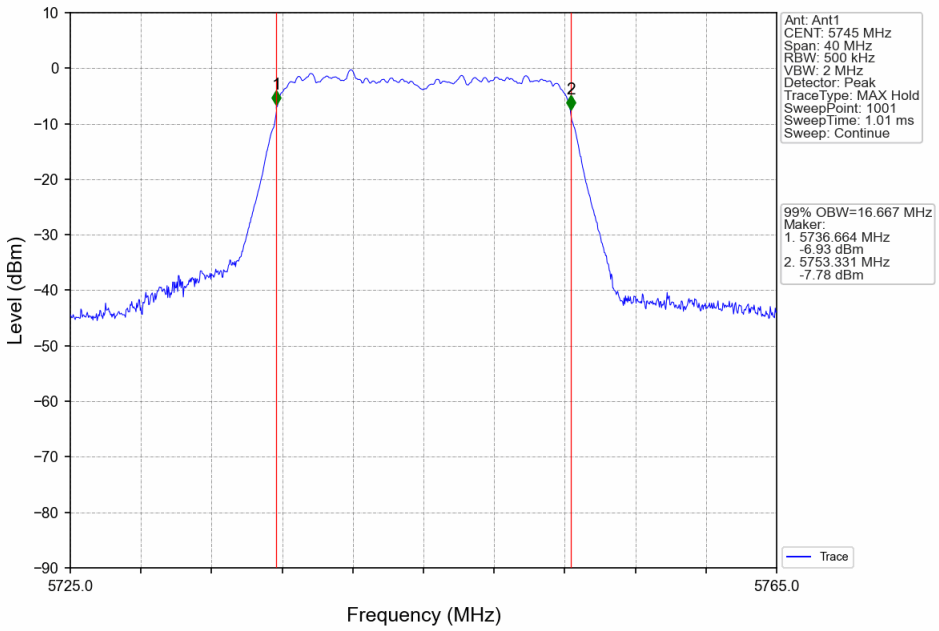

802.11a_MCH_5785MHz_Ant1_NTNV

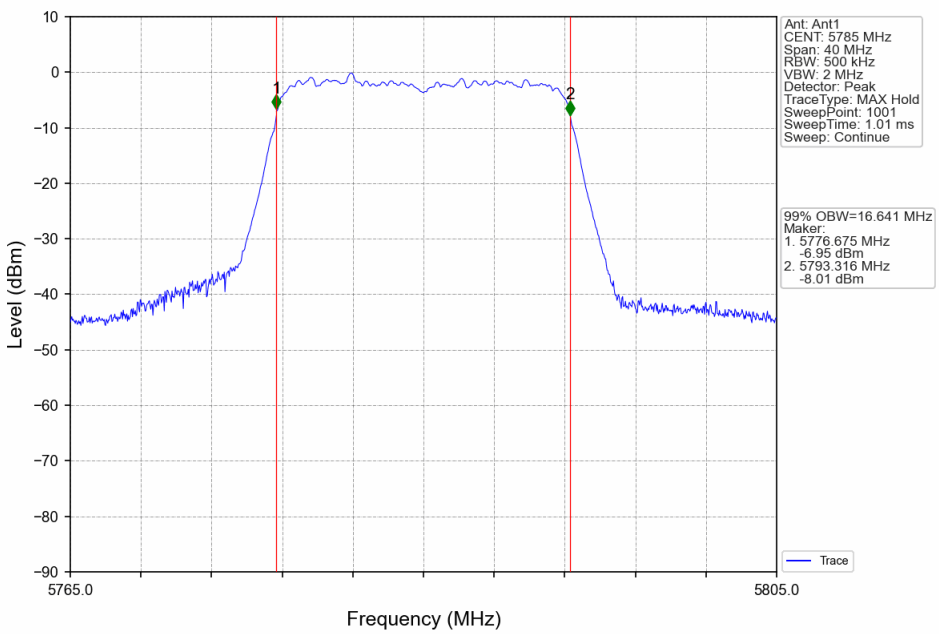

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11a_HCH_5825MHz_Ant1_NTNV

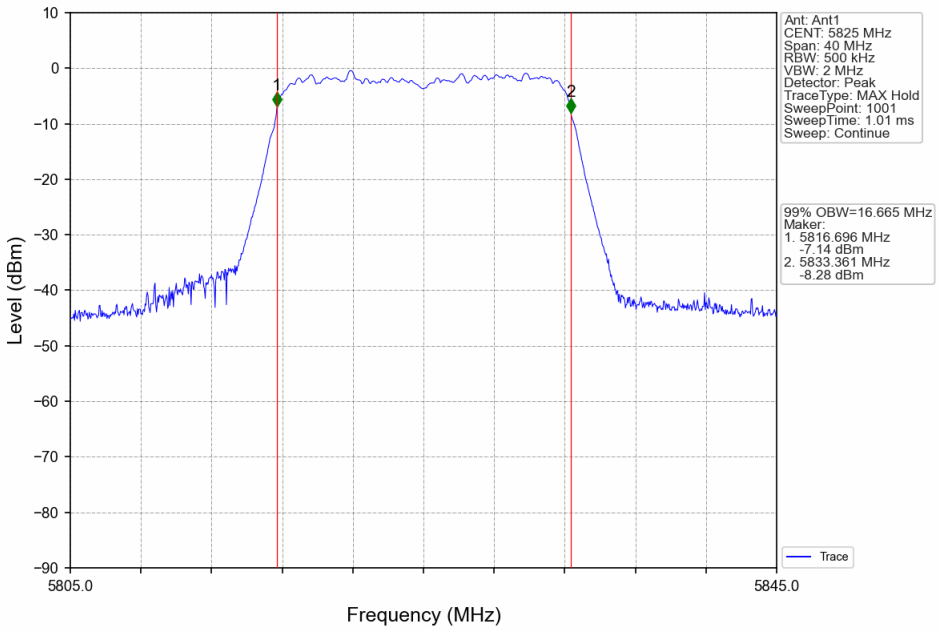

802.11n(HT20)_LCH_5180MHz_Ant1_NTNV

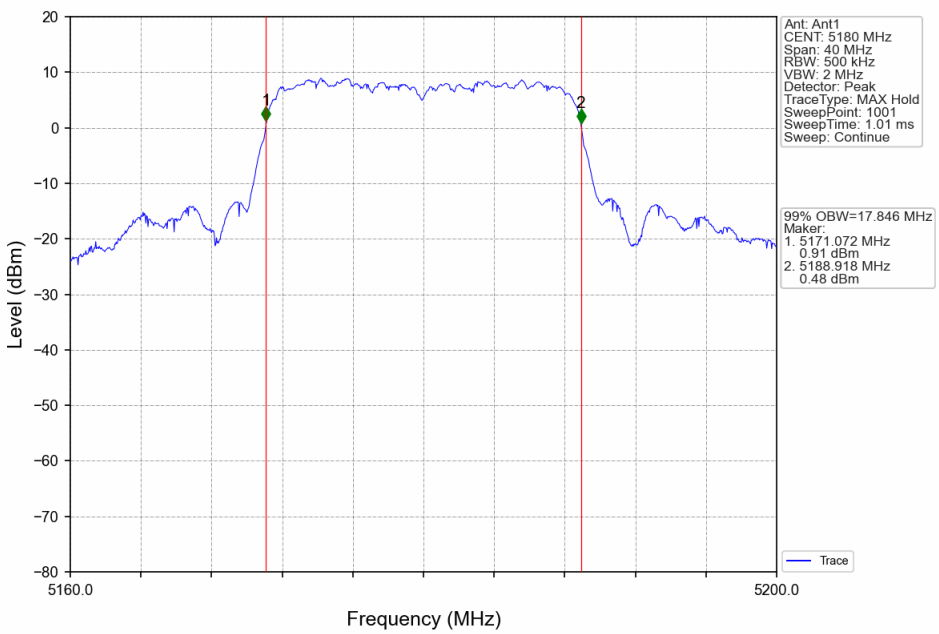

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299

802.11n(HT20)_MCH_5200MHz_Ant1_NTNV

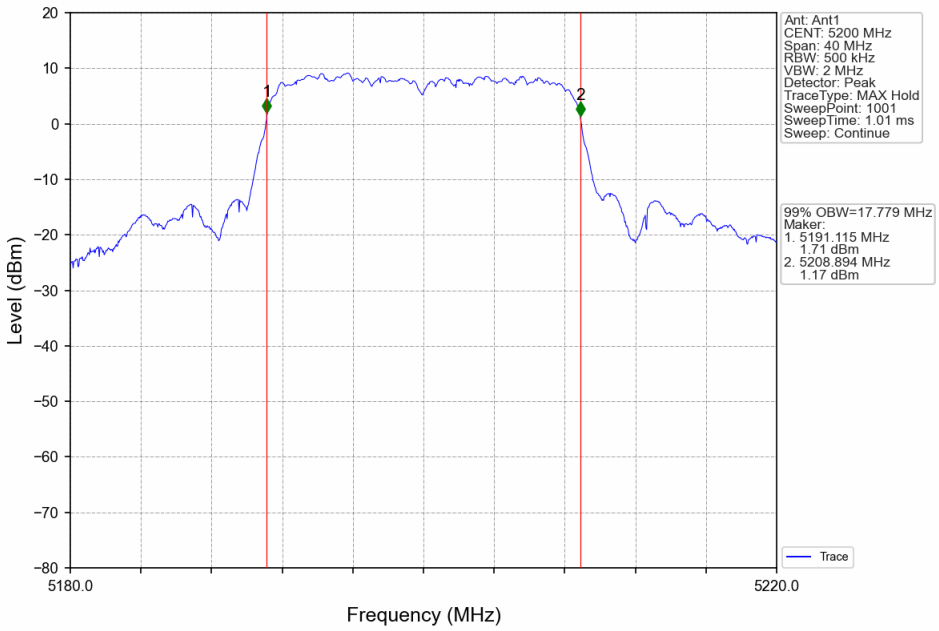

802.11n(HT20)_HCH_5240MHz_Ant1_NTNV

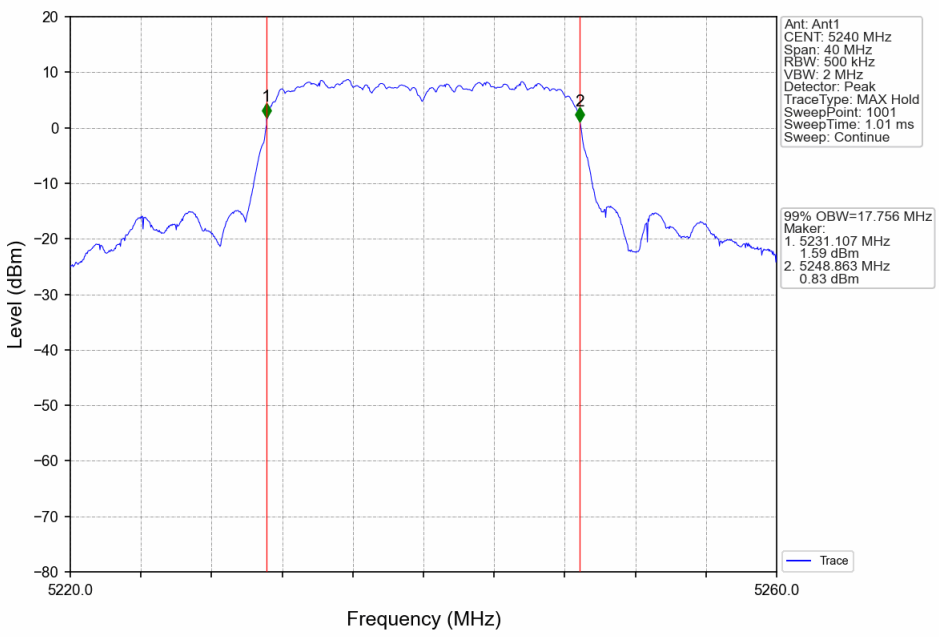

TÜV SÜD Certification and Testing (China) Co., Ltd. Shenzhen Branch
Building 12&13, Zhiheng Wisdomland Business Park, Guankou Erlu, Nantou, Nanshan District,
Shenzhen City, 518052, P. R. China Tel. +86 755 8828 6998, Fax: +86 755 8828 5299