Test Graphs

Freq. Stability NVNT a 5745MHz Ant0

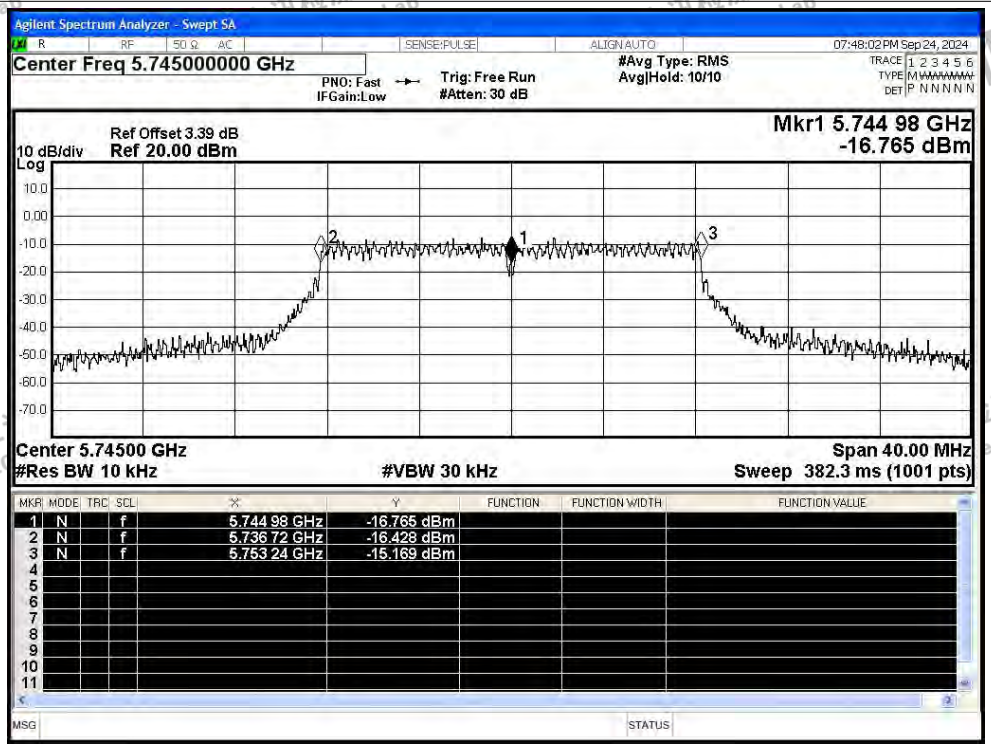

Freq. Stability NVNT a 5785MHz Ant0

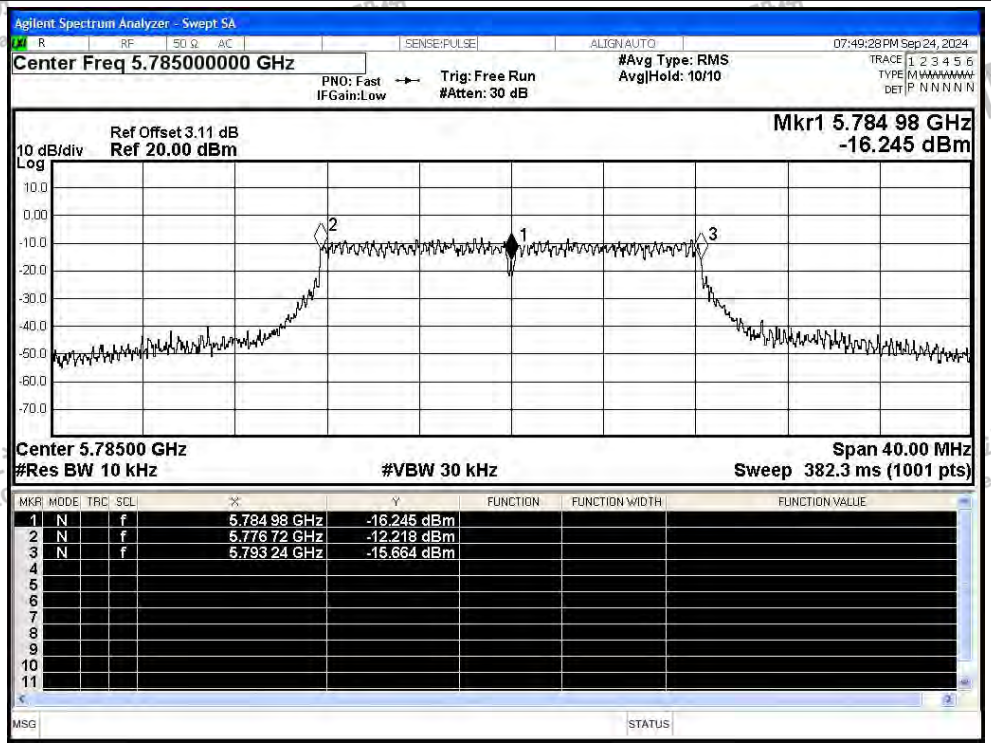

Freq. Stability NVNT a 5825MHz Ant0

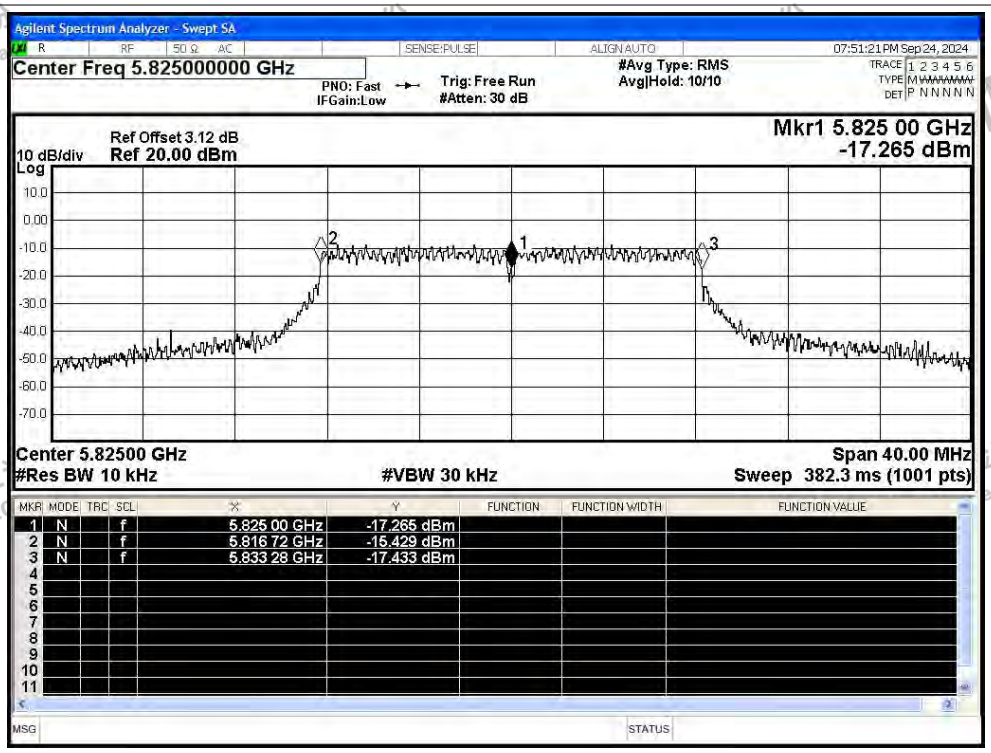

Freq. Stability NVNT n20 5745MHz Ant0

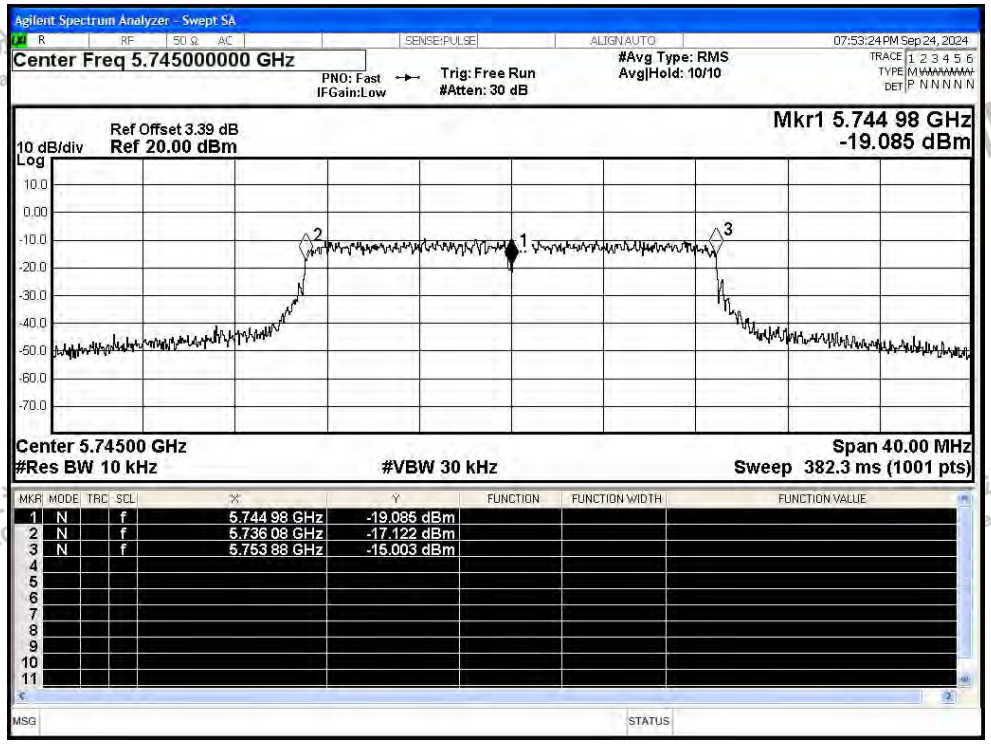

Freq. Stability NVNT n20 5785MHz Ant0

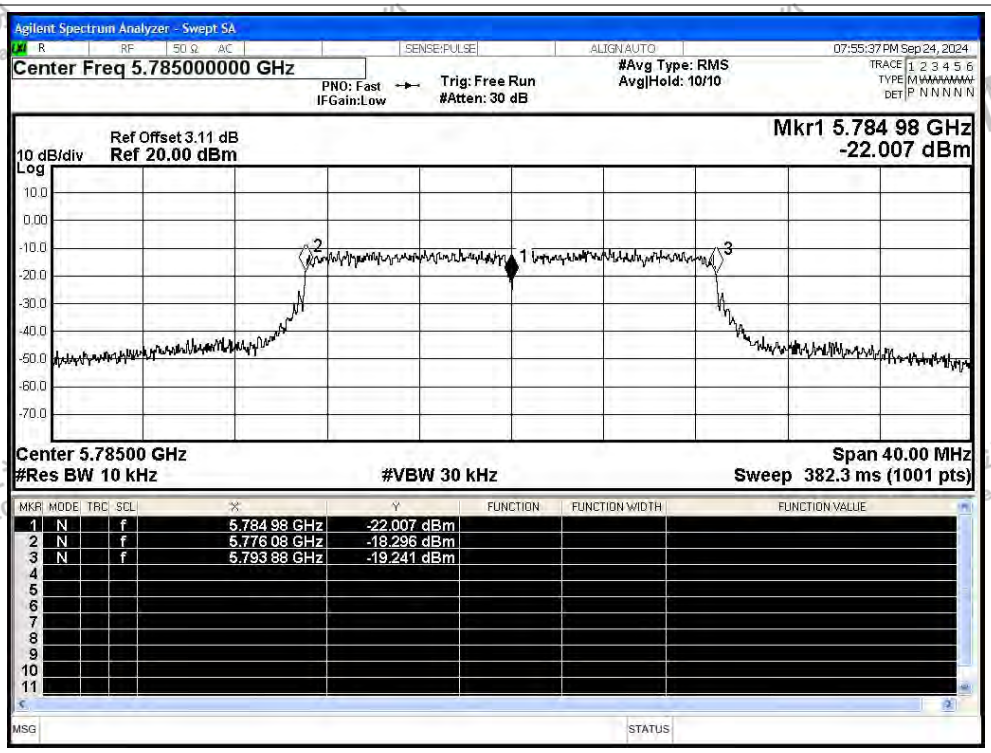

Freq. Stability NVNT n20 5825MHz Ant0

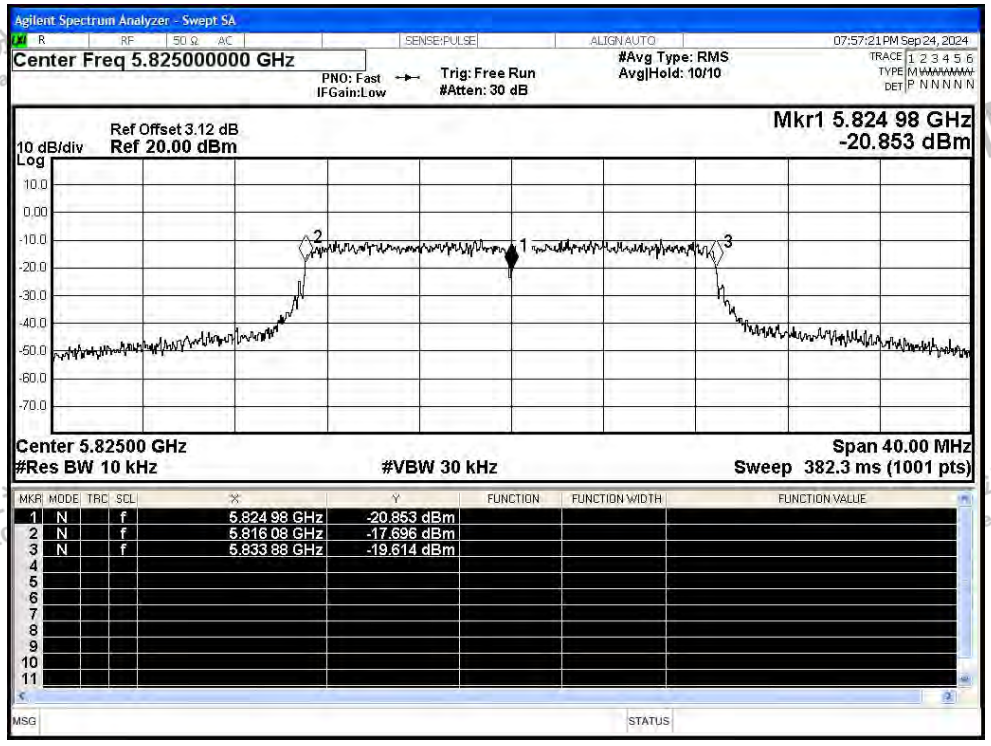

Freq. Stability NVNT n40 5755MHz Ant0

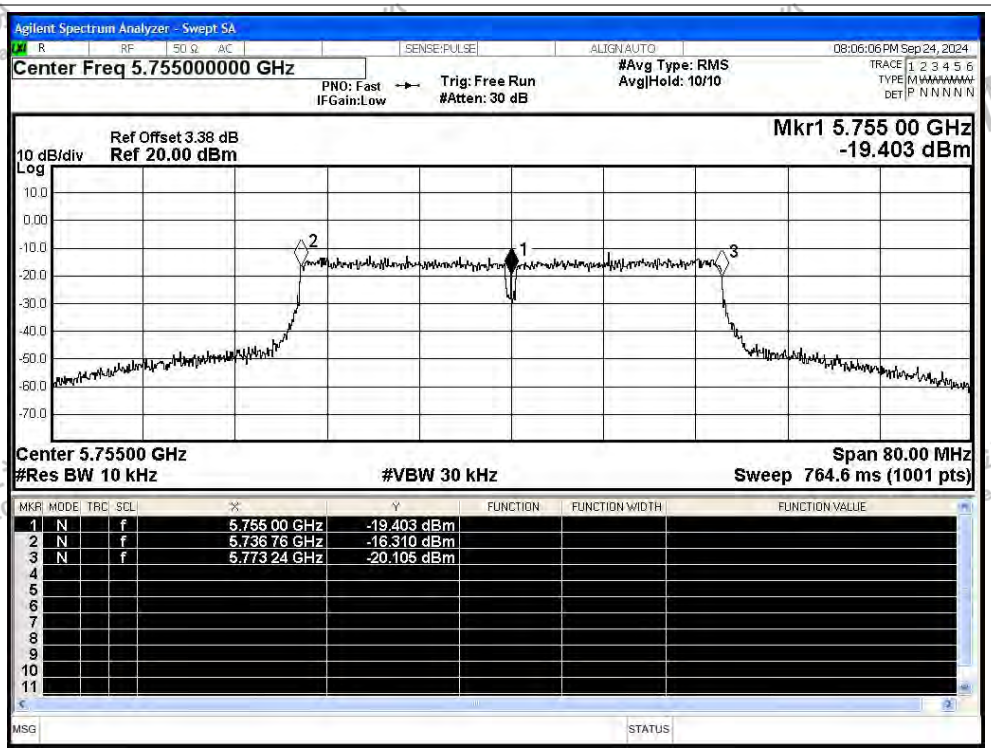

Freq. Stability NVNT n40 5795MHz Ant0

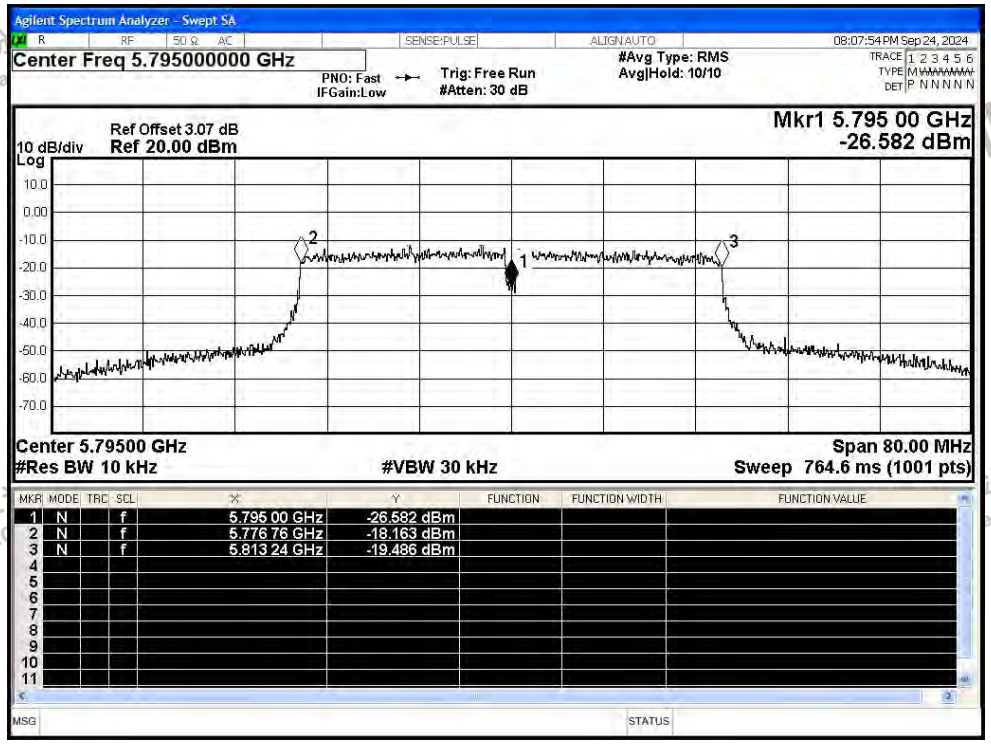

Freq. Stability NVNT ac20 5745MHz Ant0

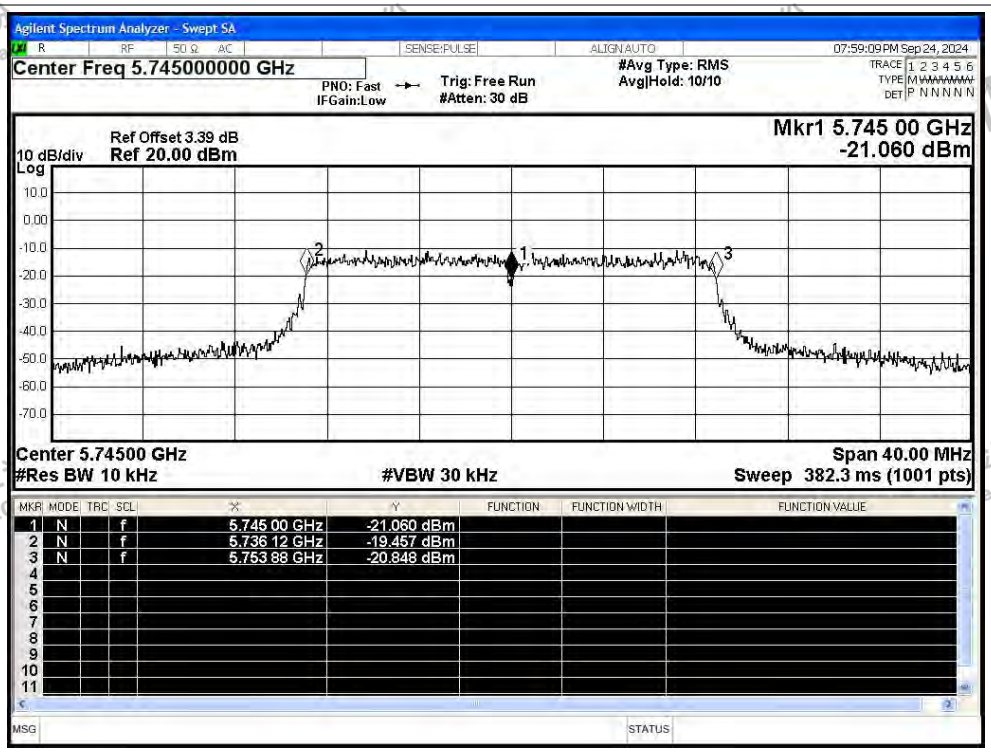

Freq. Stability NVNT ac20 5785MHz Ant0

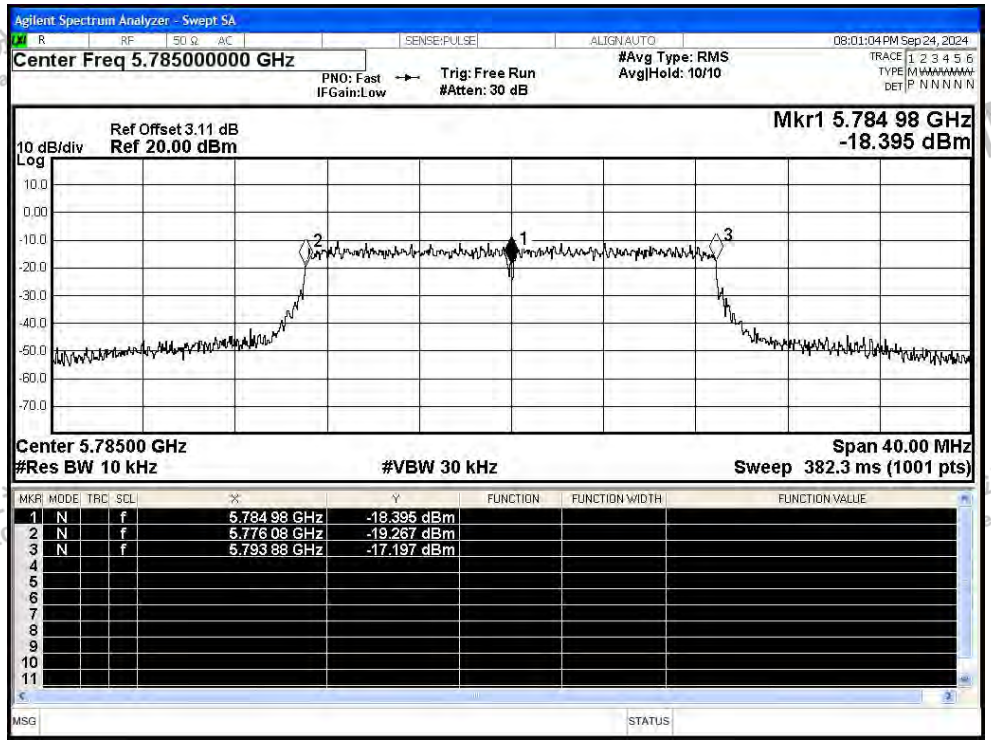

Freq. Stability NVNT ac20 5825MHz Ant0

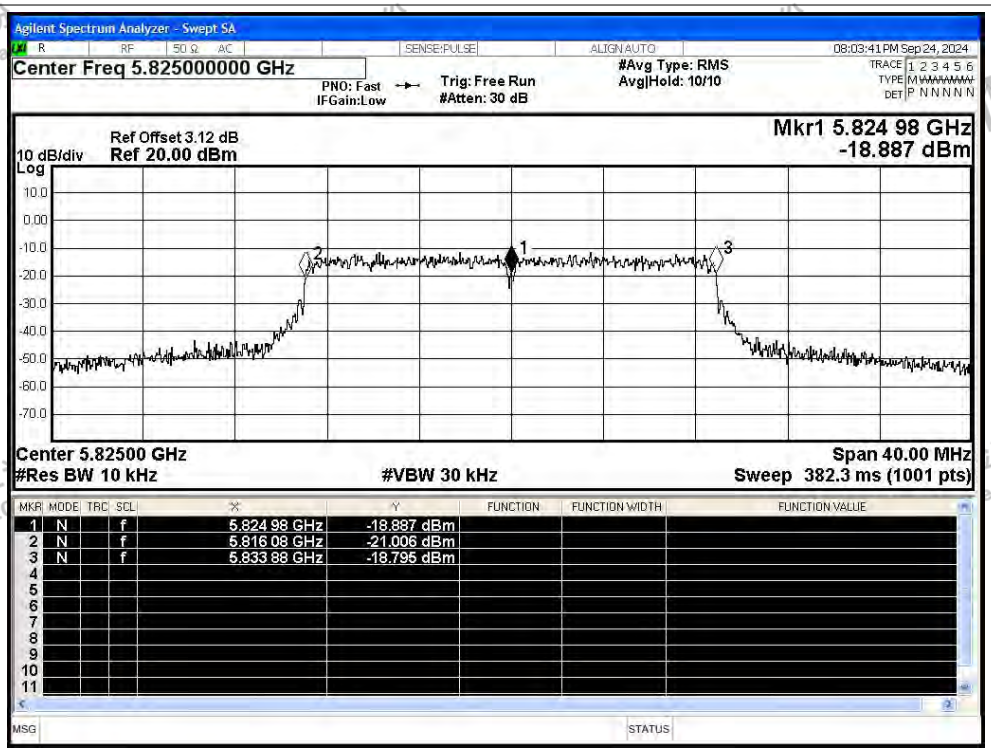

Freq. Stability NVNT ac40 5755MHz Ant0

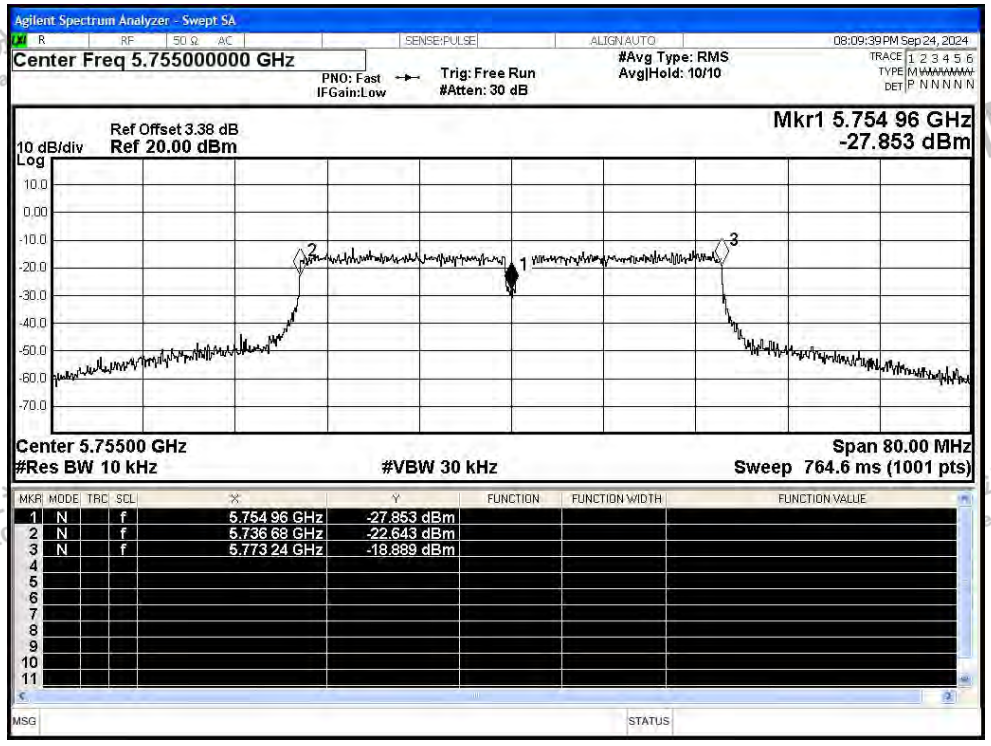

Freq. Stability NVNT ac40 5795MHz Ant0

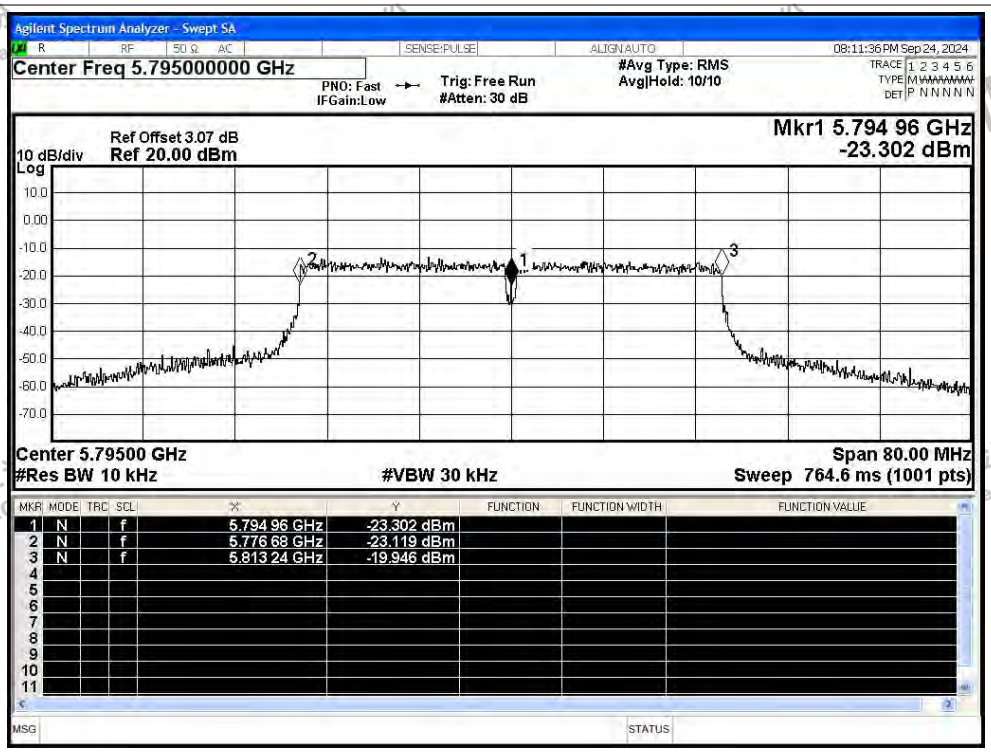

Freq. Stability NVNT ac80 5775MHz Ant0

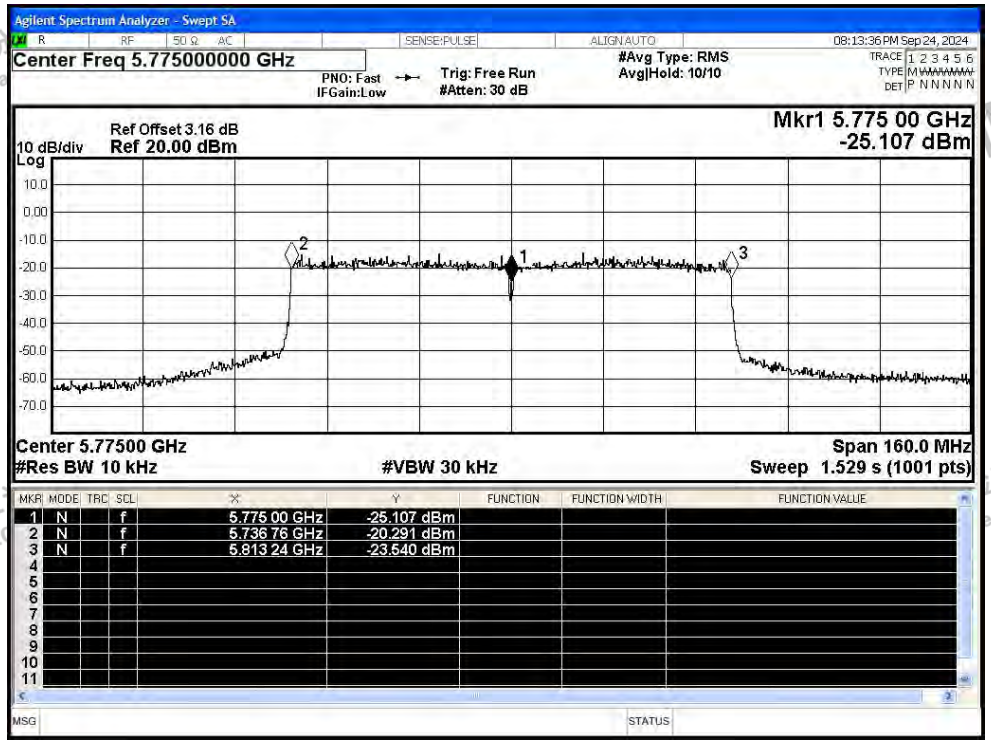

Condition	Mode	Frequency (MHz)	Antenna	Measured Frequency (MHz)	Frequency Error (Hz)	Deviation (ppm)	Limit (ppm)	Verdict
NVNT	a	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	a	5785	Ant1	5785	0	0	25	Pass
NVNT	a	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	n20	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	n20	5785	Ant1	5784.98	-20000	-3.46	25	Pass
NVNT	n20	5825	Ant1	5825	0	0	25	Pass
NVNT	n40	5755	Ant1	5755	0	0	25	Pass
NVNT	n40	5795	Ant1	5794.96	-40000	-6.9	25	Pass
NVNT	ac20	5745	Ant1	5744.98	-20000	-3.48	25	Pass
NVNT	ac20	5785	Ant1	5785	0	0	25	Pass
NVNT	ac20	5825	Ant1	5824.98	-20000	-3.43	25	Pass
NVNT	ac40	5755	Ant1	5754.96	-40000	-6.95	25	Pass
NVNT	ac40	5795	Ant1	5795	0	0	25	Pass
NVNT	ac80	5775	Ant1	5775	0	0	25	Pass

Test Graphs

Freq. Stability NVNT a 5745MHz Ant1

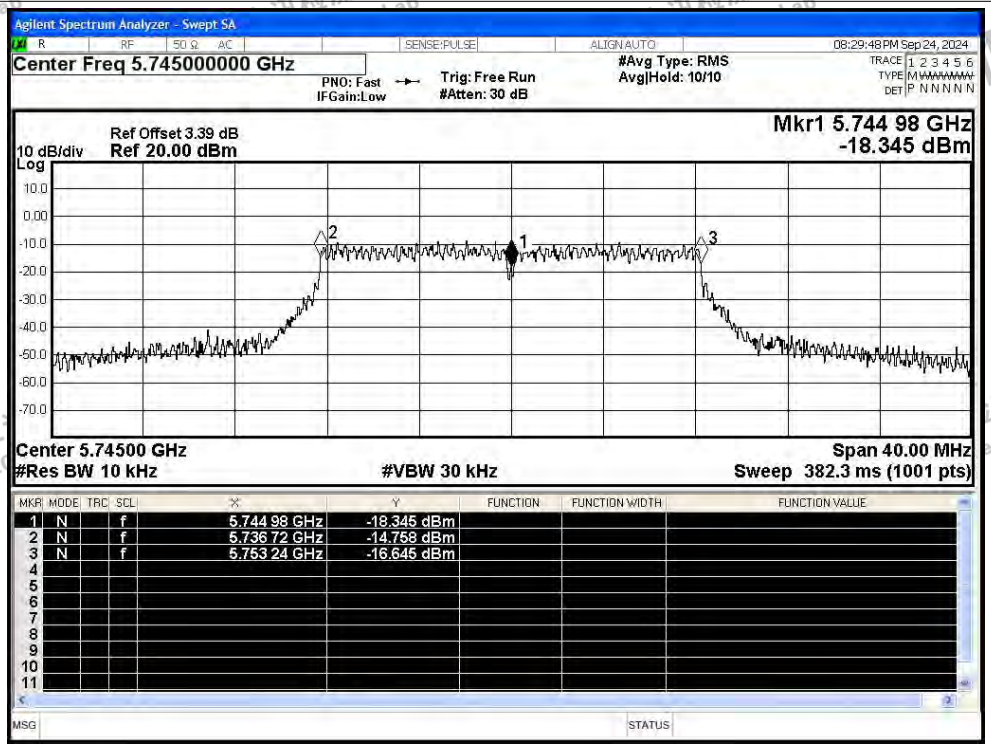

Freq. Stability NVNT a 5785MHz Ant1

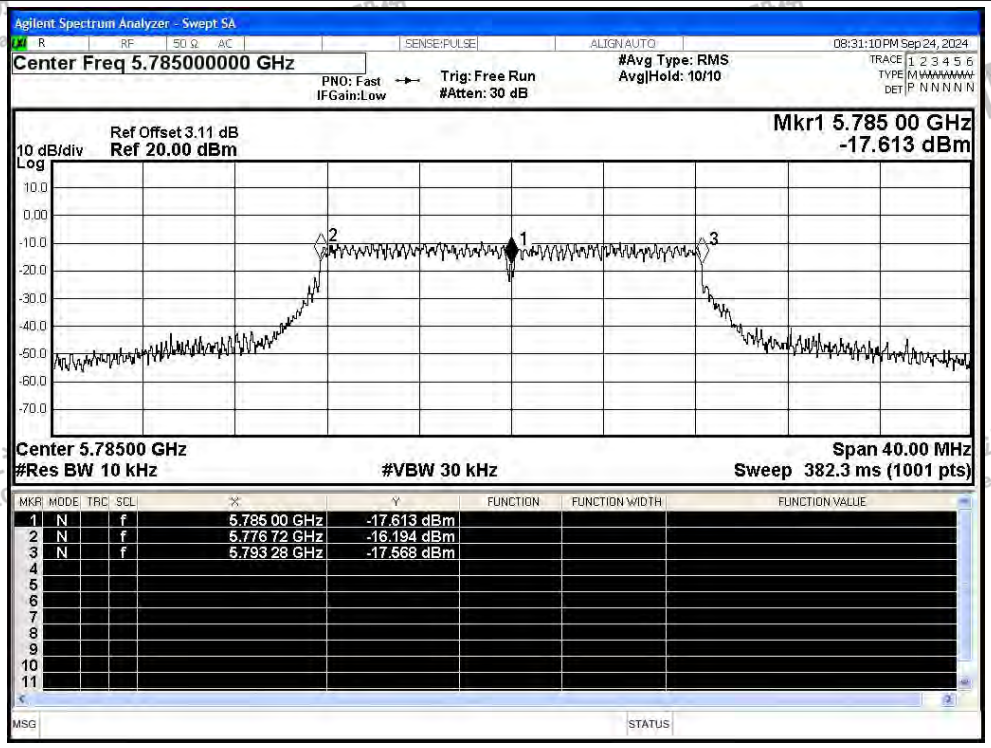

Freq. Stability NVNT a 5825MHz Ant1

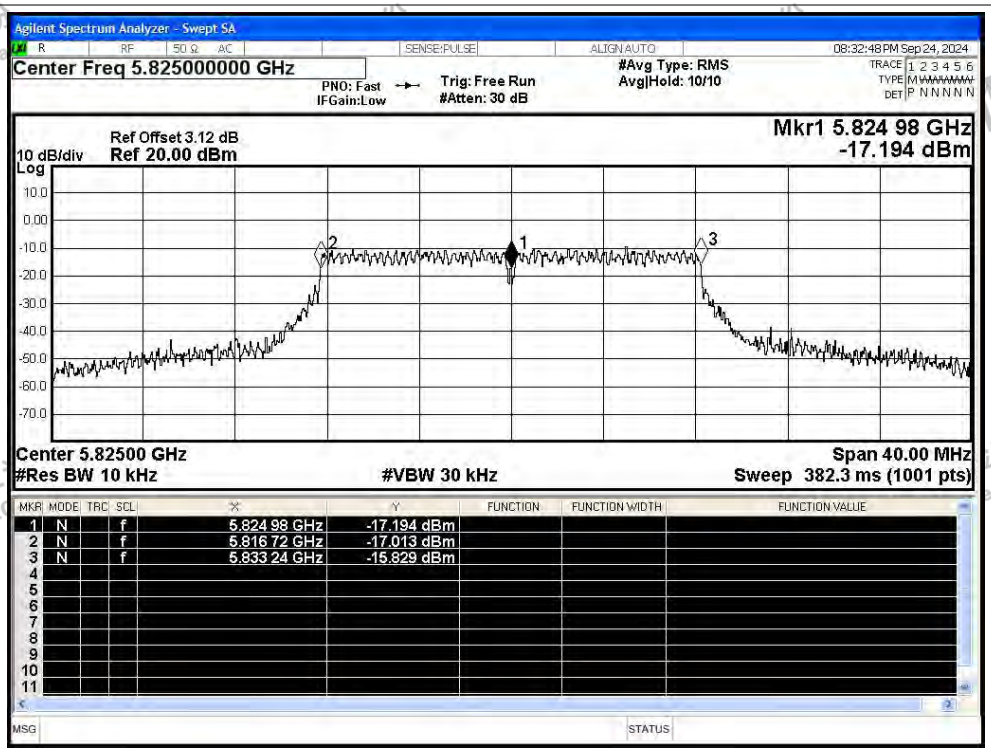

Freq. Stability NVNT n20 5745MHz Ant1

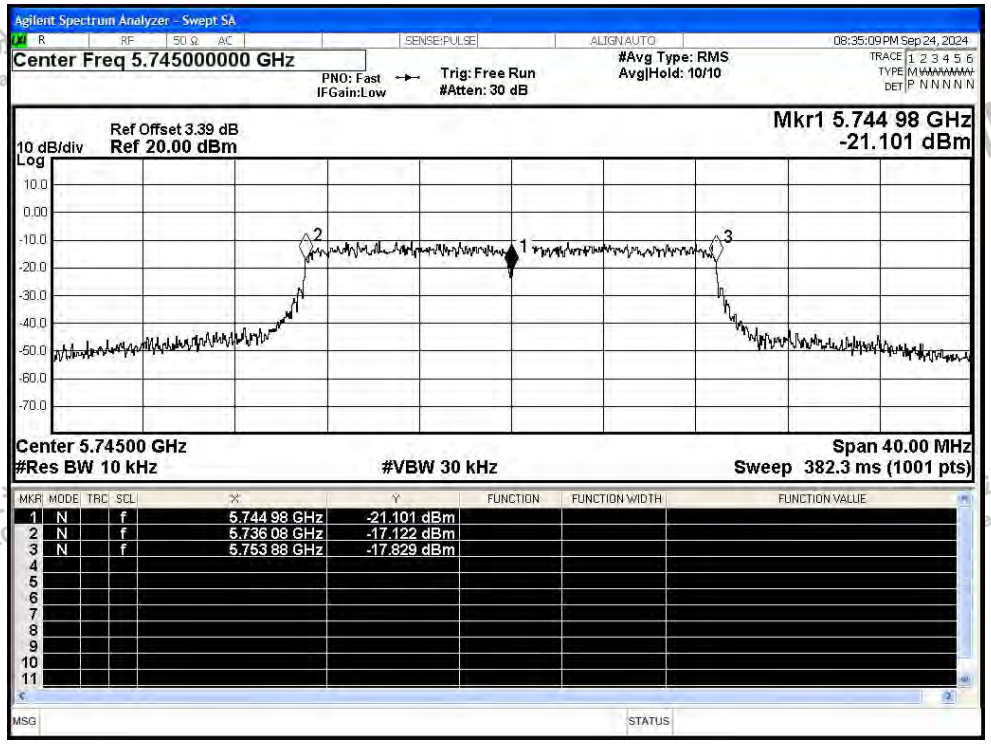

Freq. Stability NVNT n20 5785MHz Ant1

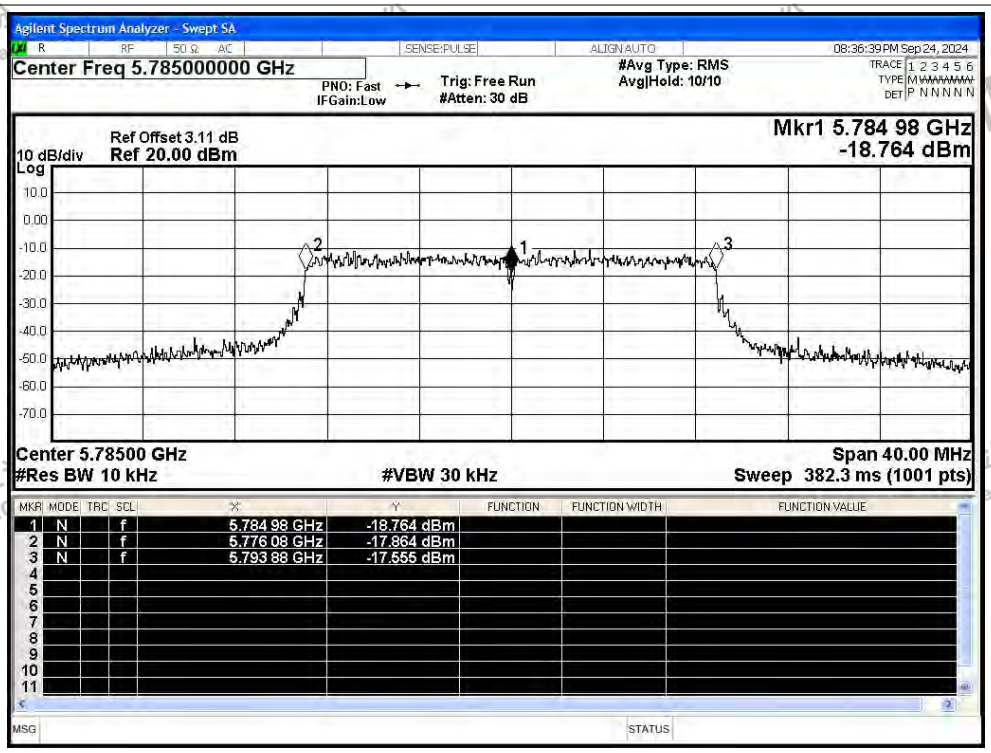

Freq. Stability NVNT n20 5825MHz Ant1

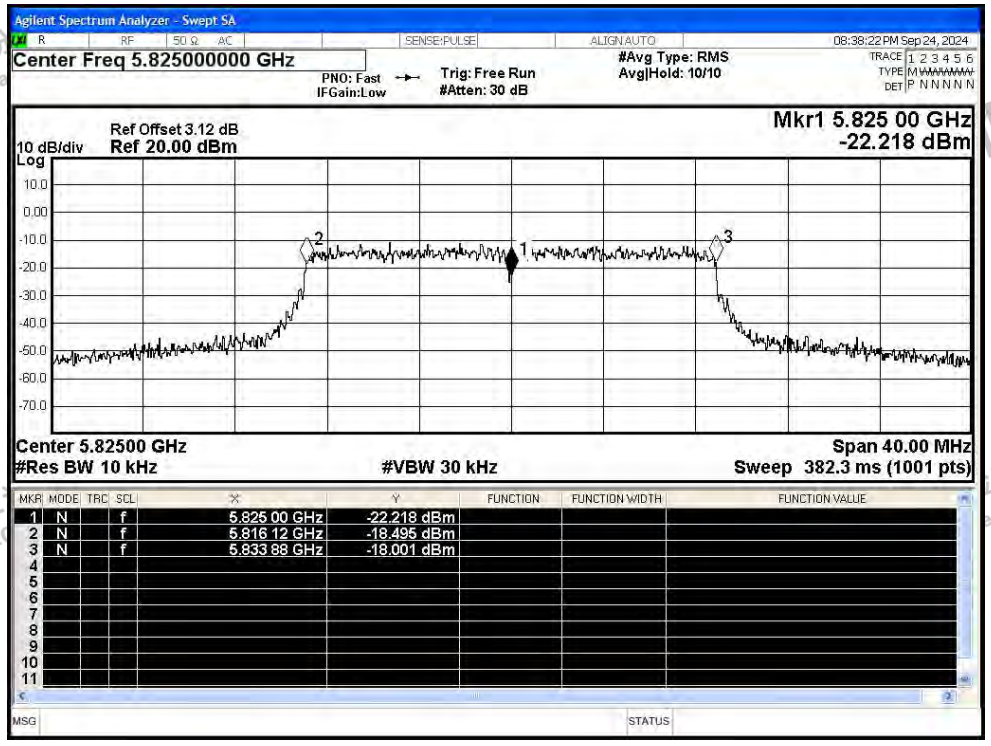

Freq. Stability NVNT n40 5755MHz Ant1

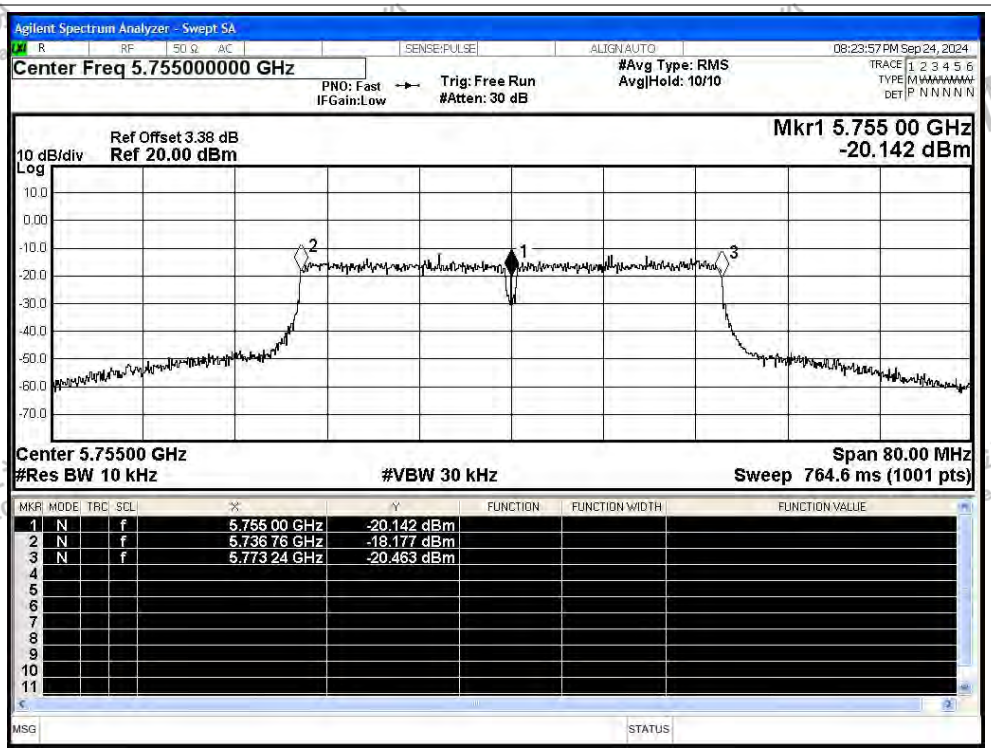

Freq. Stability NVNT n40 5795MHz Ant1

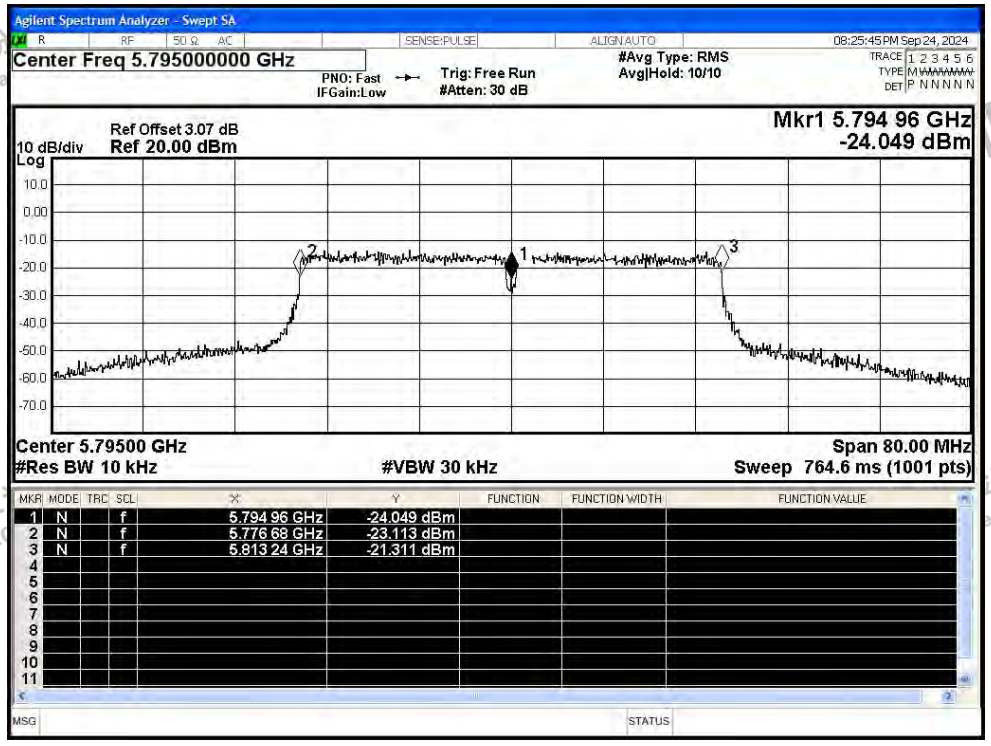

Freq. Stability NVNT ac20 5745MHz Ant1

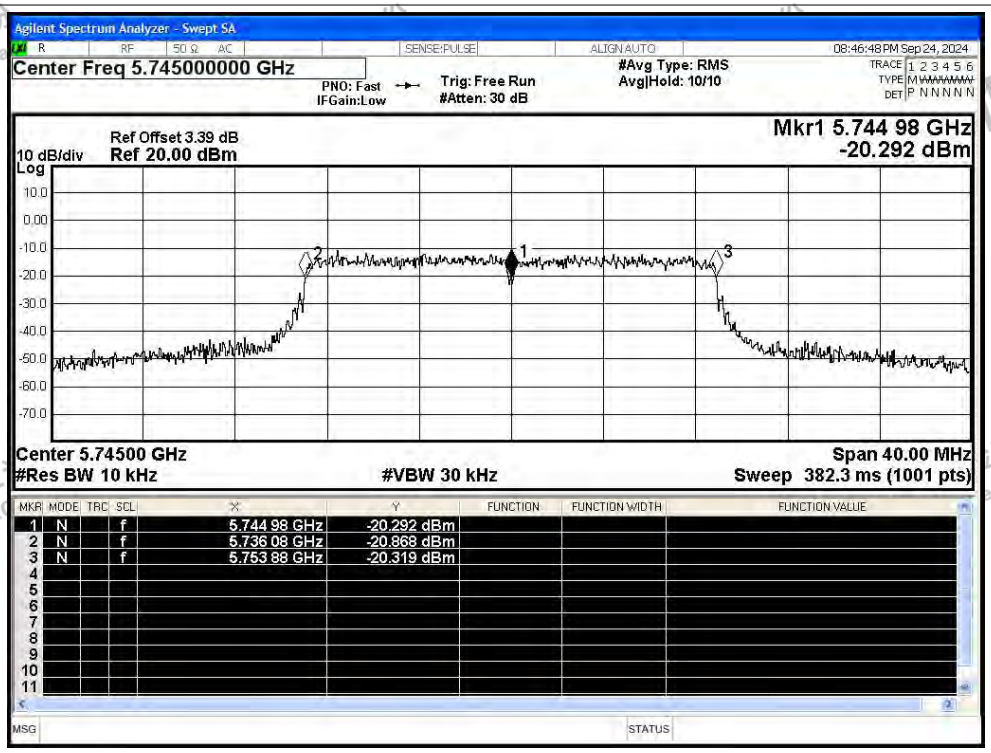

Freq. Stability NVNT ac20 5785MHz Ant1

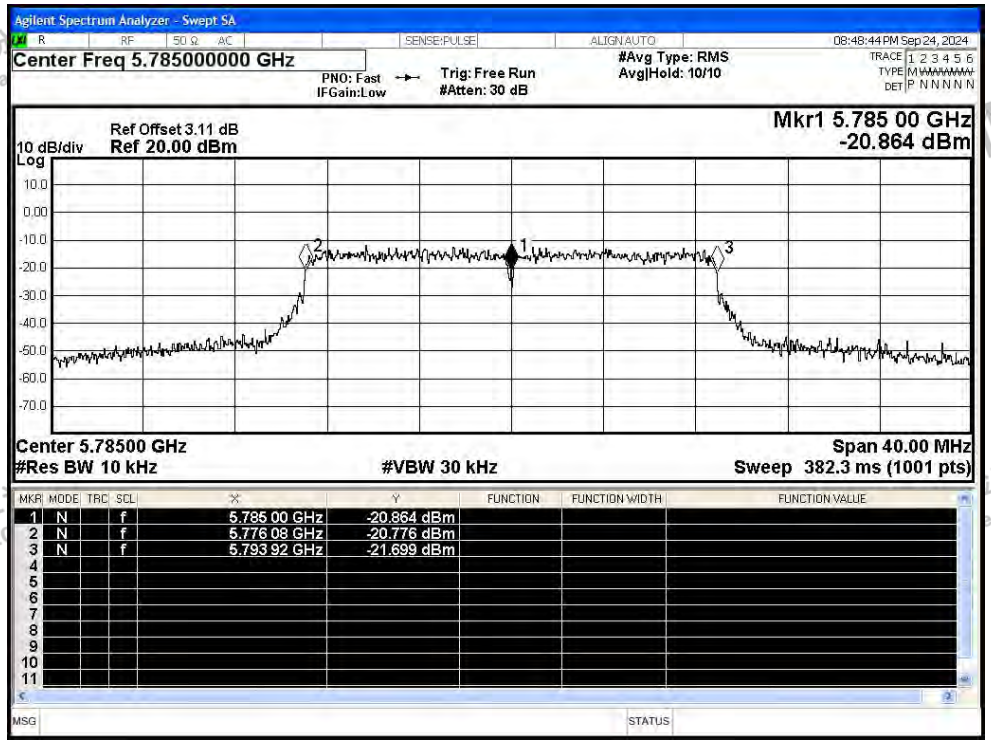

Freq. Stability NVNT ac20 5825MHz Ant1

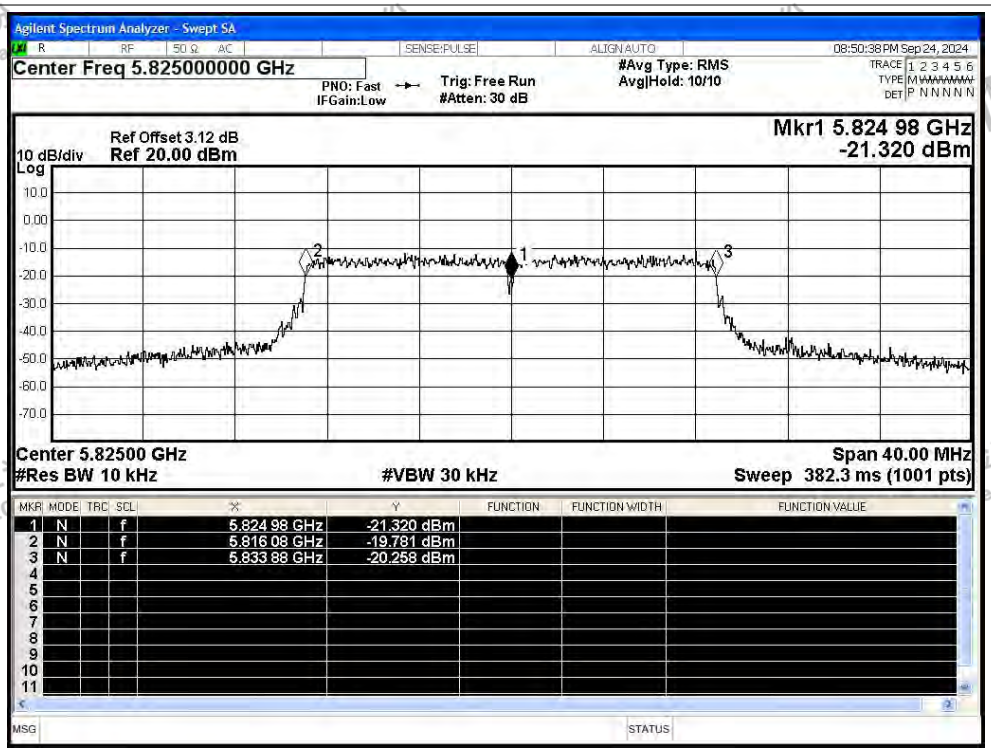

Freq. Stability NVNT ac40 5755MHz Ant1

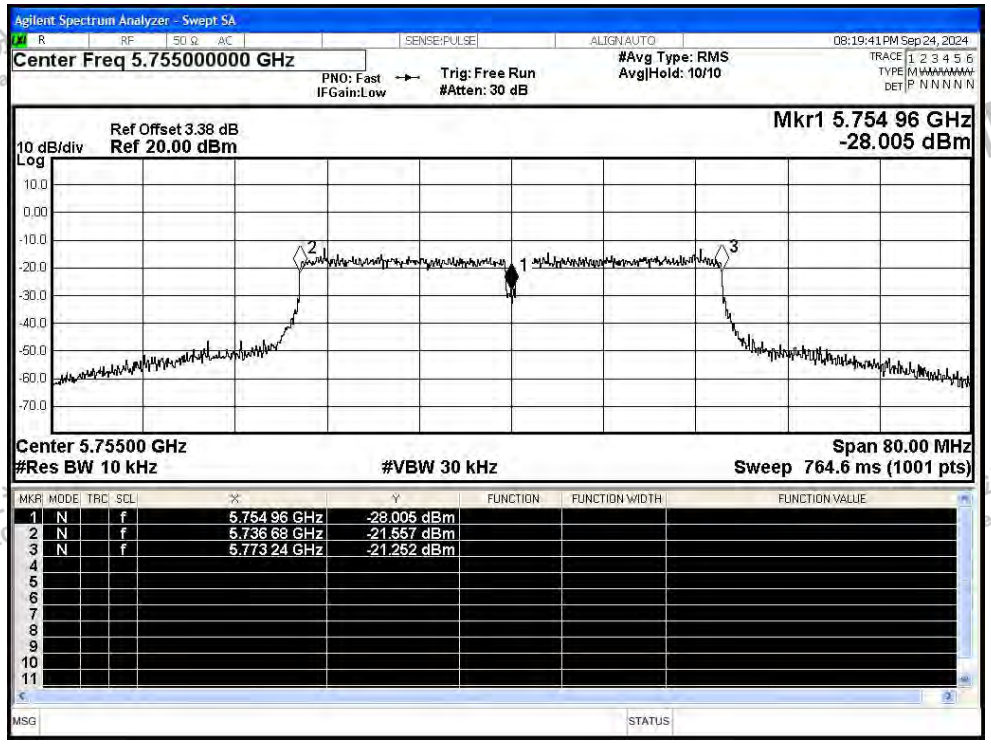

Freq. Stability NVNT ac40 5795MHz Ant1

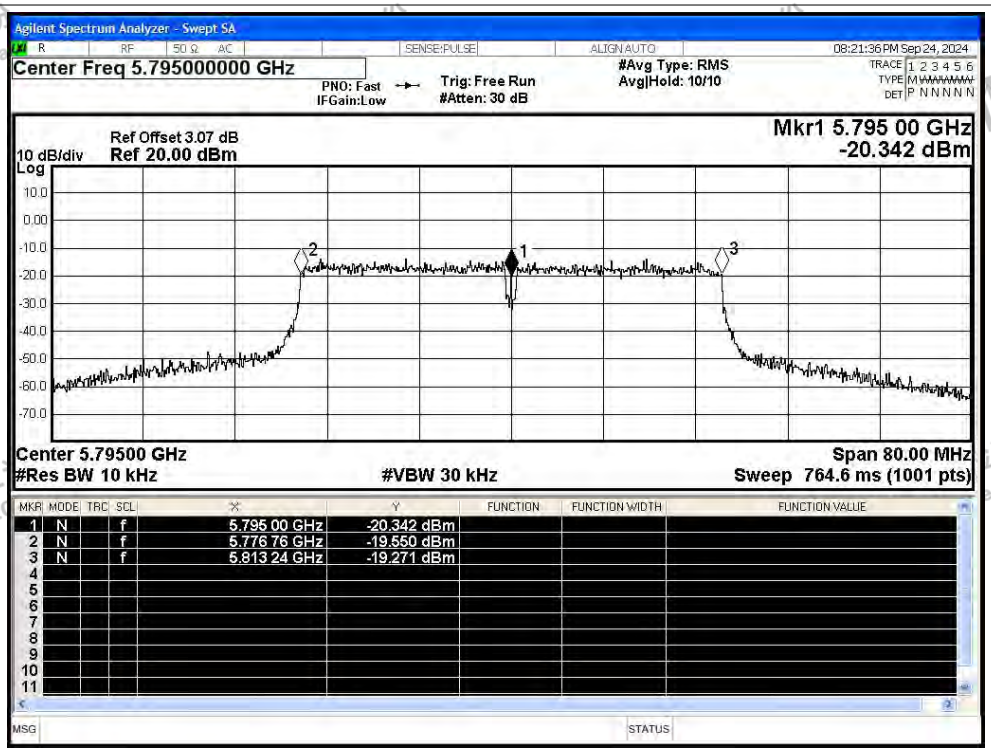

Freq. Stability NVNT ac80 5775MHz Ant1

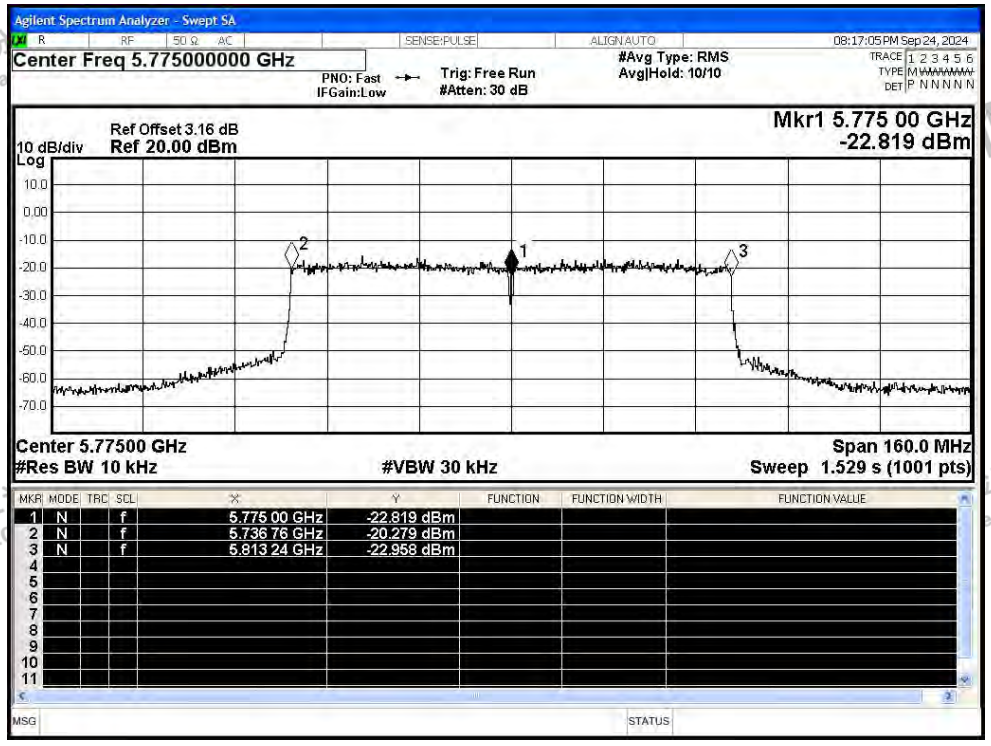

E.6 Duty Cycle

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant0	94.56	0.24	0.91
NVNT	a	5785	Ant0	94.56	0.24	0.91
NVNT	a	5825	Ant0	94.65	0.24	0.91
NVNT	n20	5745	Ant0	97.29	0.12	0.44
NVNT	n20	5785	Ant0	97.29	0.12	0.44
NVNT	n20	5825	Ant0	97.29	0.12	0.44
NVNT	n40	5755	Ant0	97.23	0.12	0.46
NVNT	n40	5795	Ant0	97.18	0.12	0.46
NVNT	ac20	5745	Ant0	97.34	0.12	0.44
NVNT	ac20	5785	Ant0	97.3	0.12	0.44
NVNT	ac20	5825	Ant0	97.34	0.12	0.44
NVNT	ac40	5755	Ant0	97.24	0.12	0.46
NVNT	ac40	5795	Ant0	97.19	0.12	0.46
NVNT	ac80	5775	Ant0	94.41	0.25	0.97

Test Graphs

Duty Cycle NVNT a 5745MHz Ant0

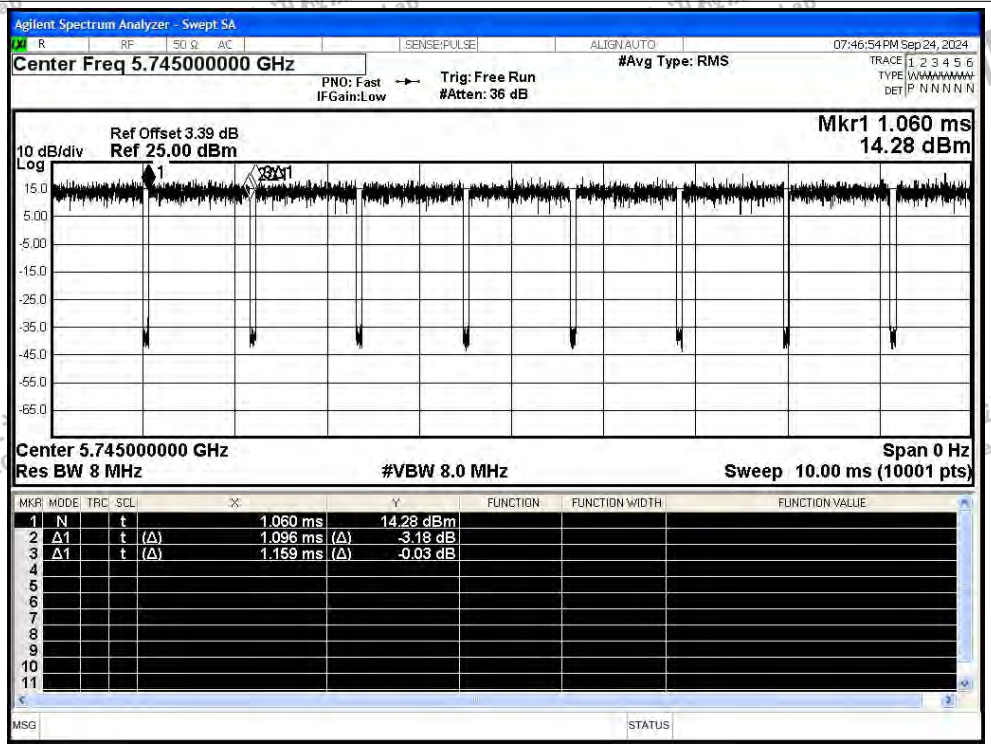

Duty Cycle NVNT a 5785MHz Ant0

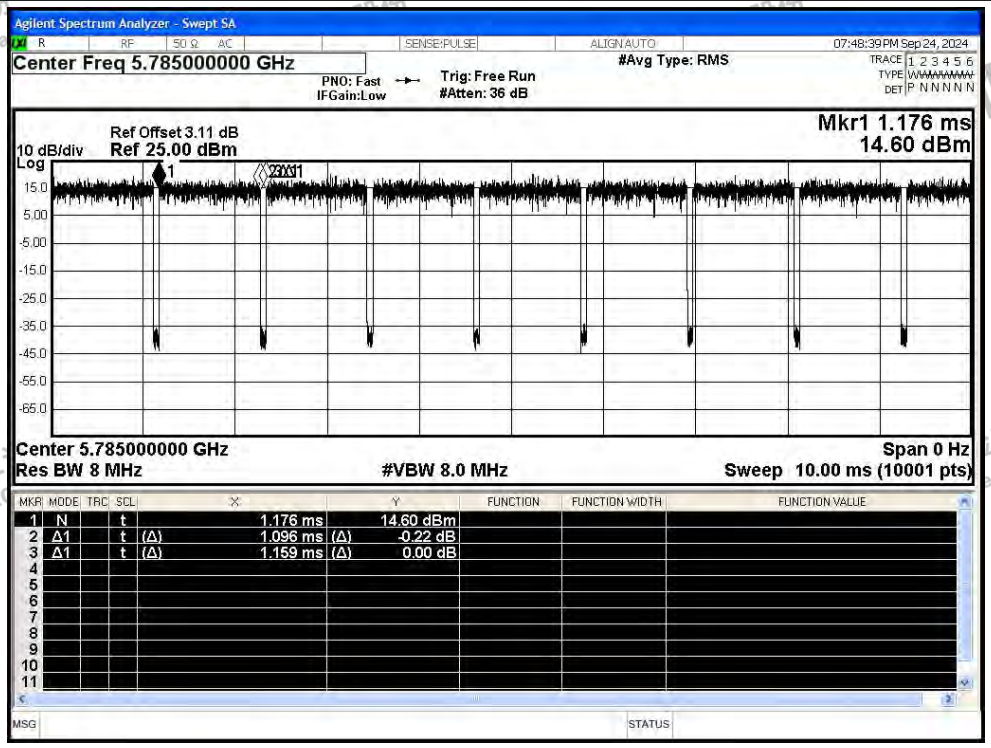

Duty Cycle NVNT a 5825MHz Ant0

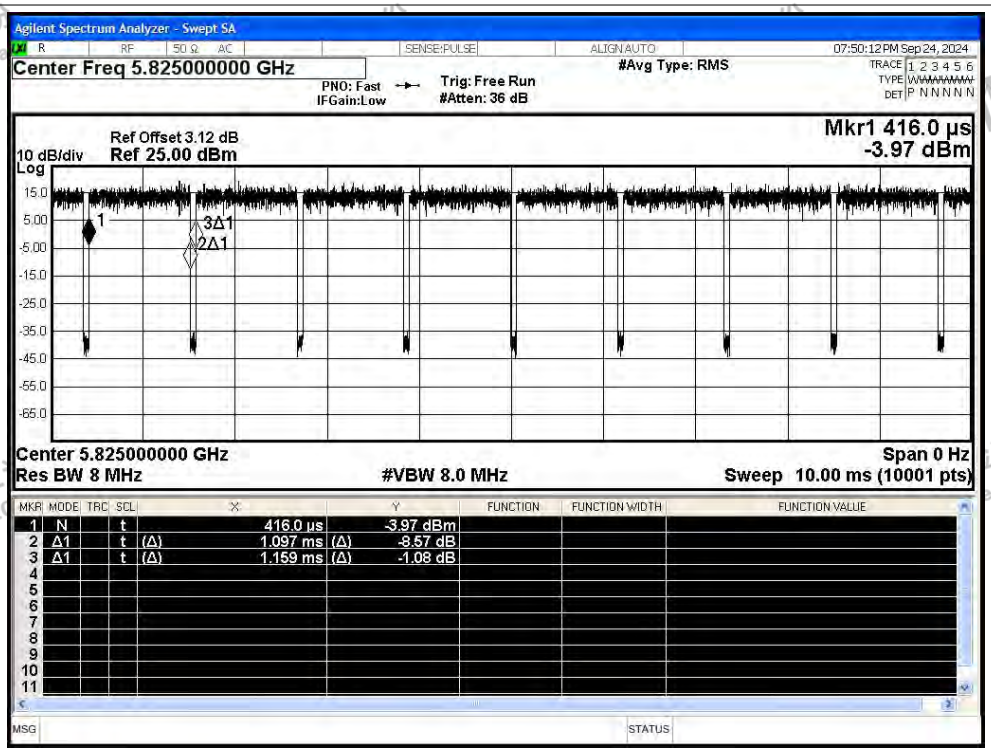

Duty Cycle NVNT n20 5745MHz Ant0

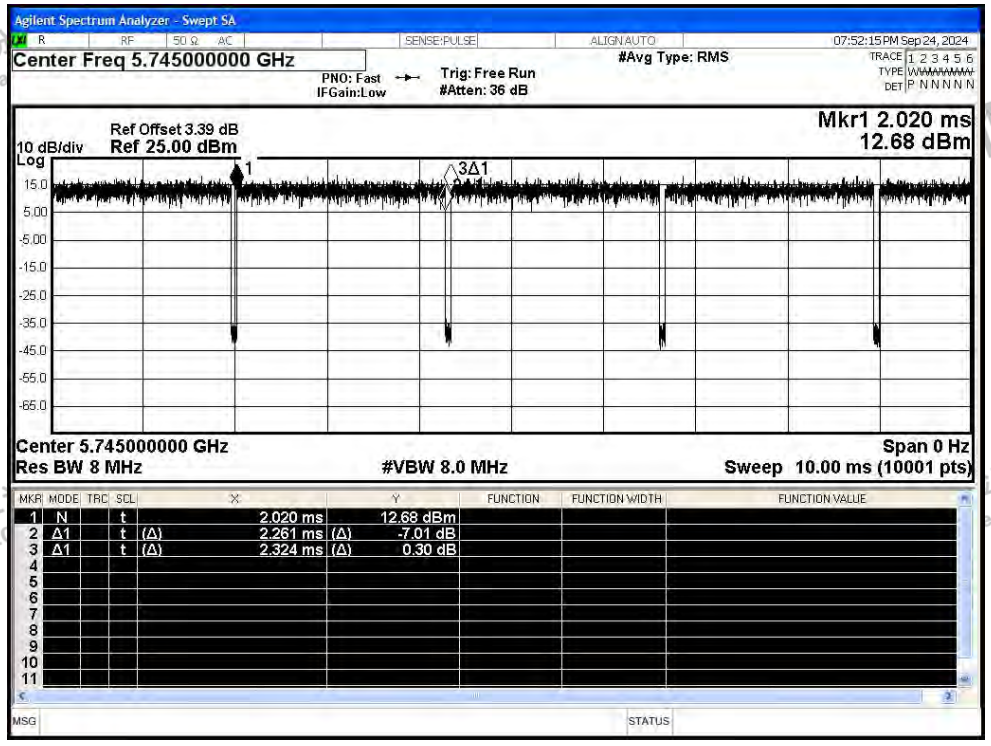

Duty Cycle NVNT n20 5785MHz Ant0

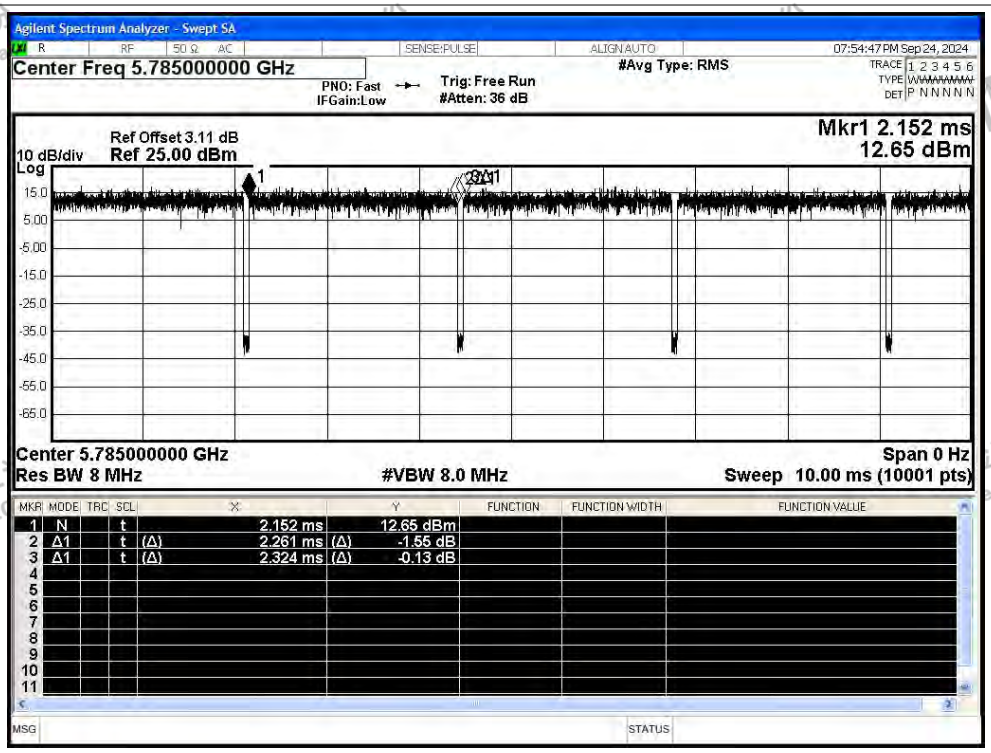

Duty Cycle NVNT n20 5825MHz Ant0

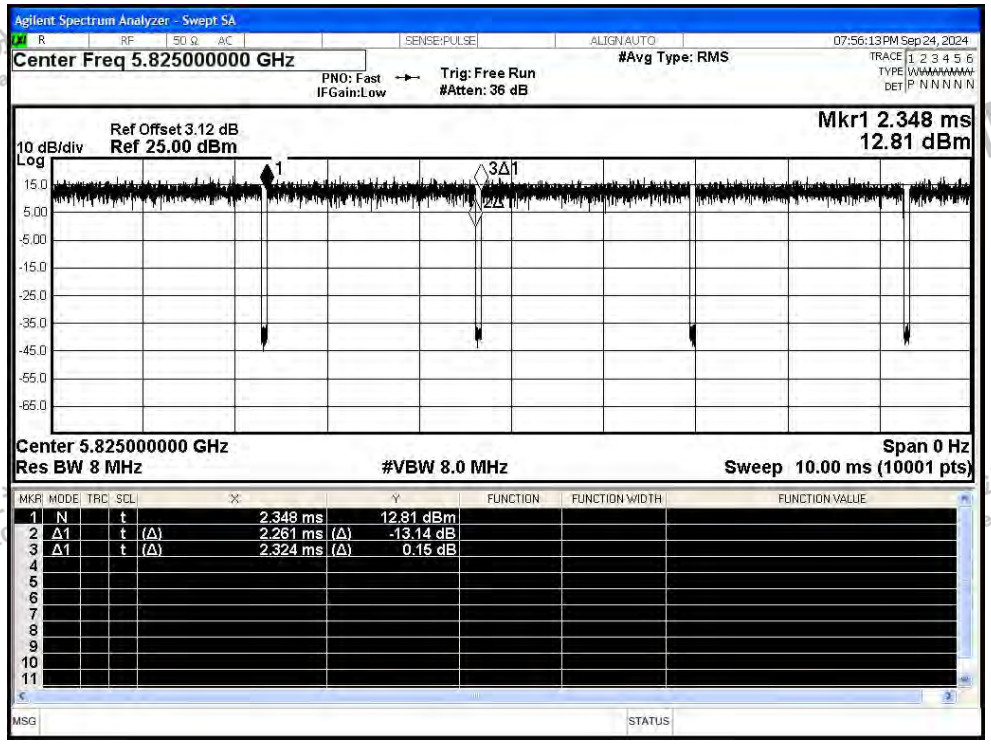

Duty Cycle NVNT n40 5755MHz Ant0

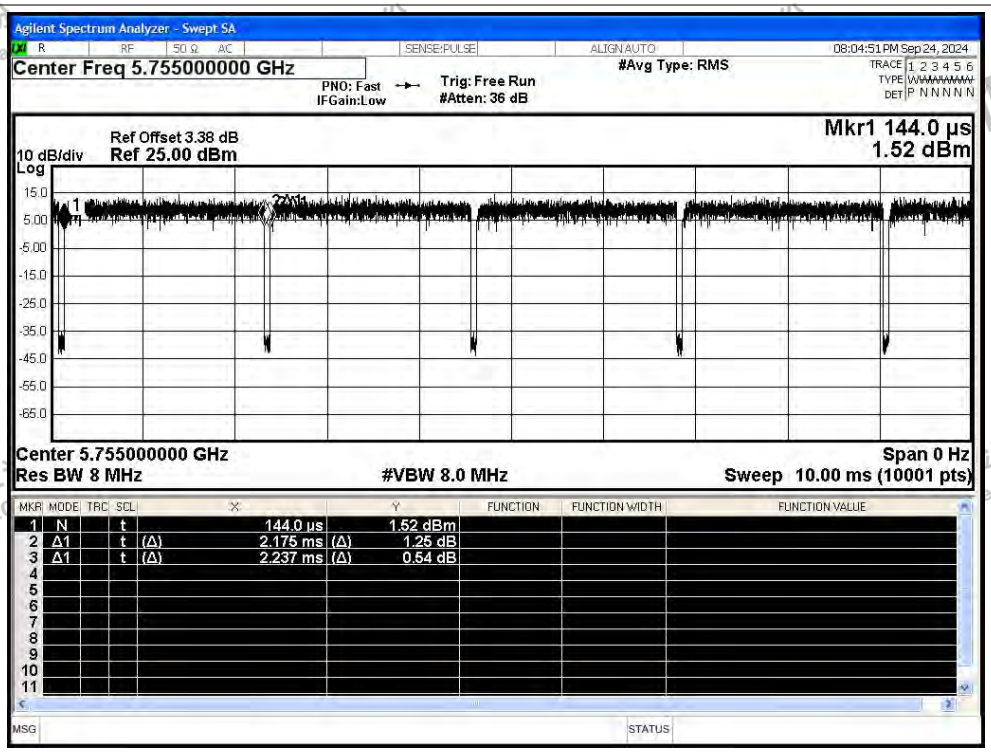

Duty Cycle NVNT n40 5795MHz Ant0

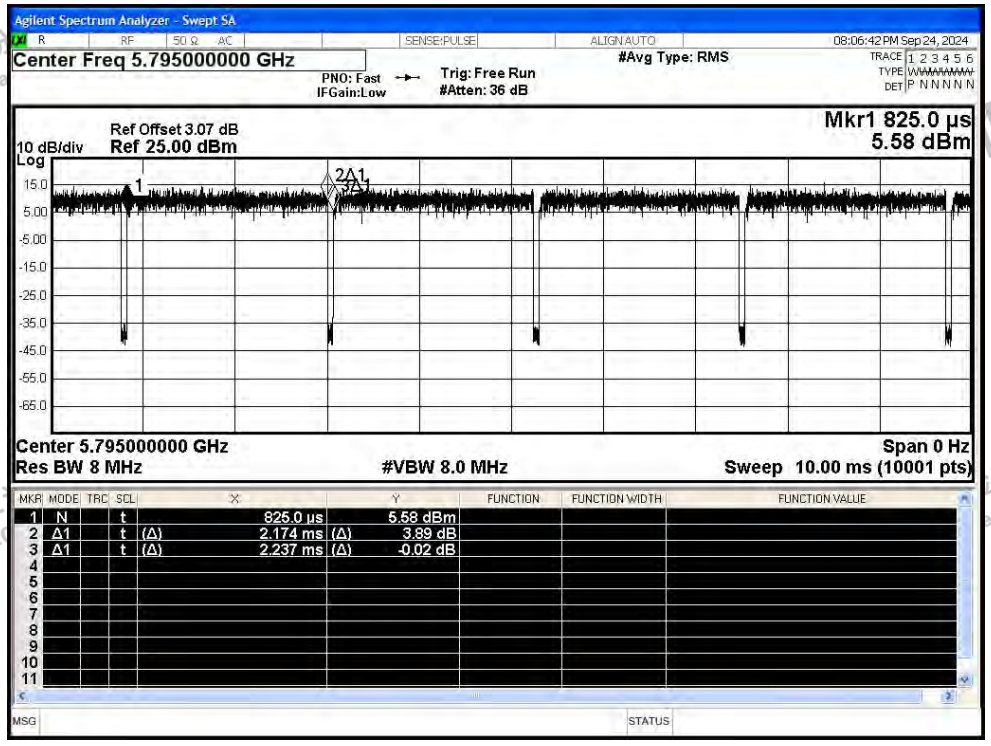

Duty Cycle NVNT ac20 5745MHz Ant0

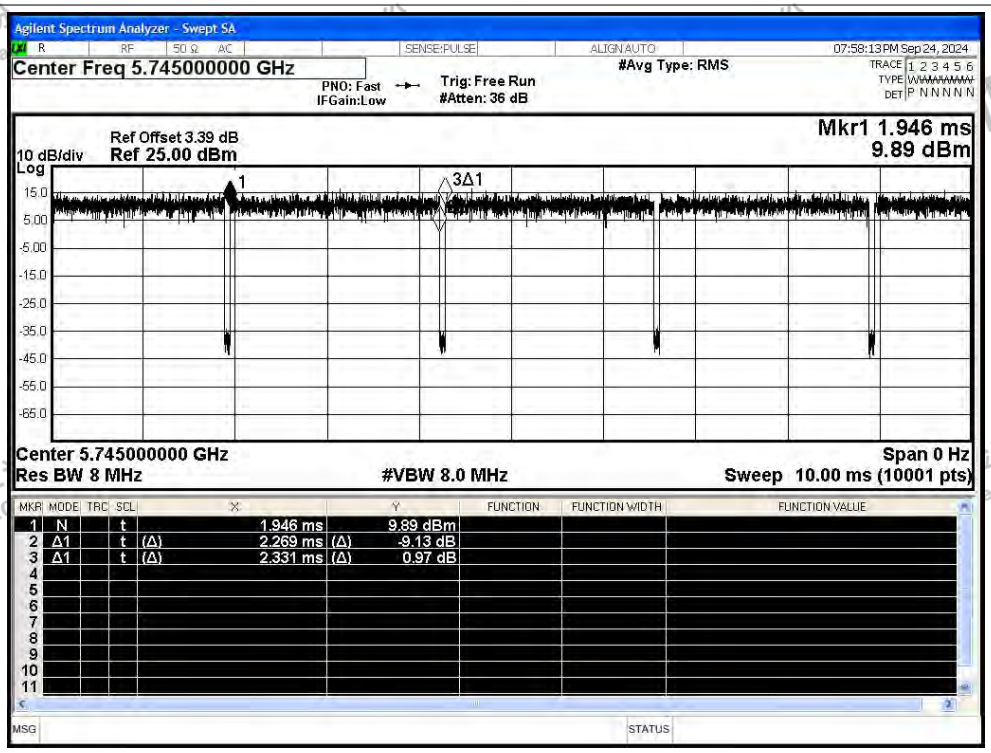

Duty Cycle NVNT ac20 5785MHz Ant0

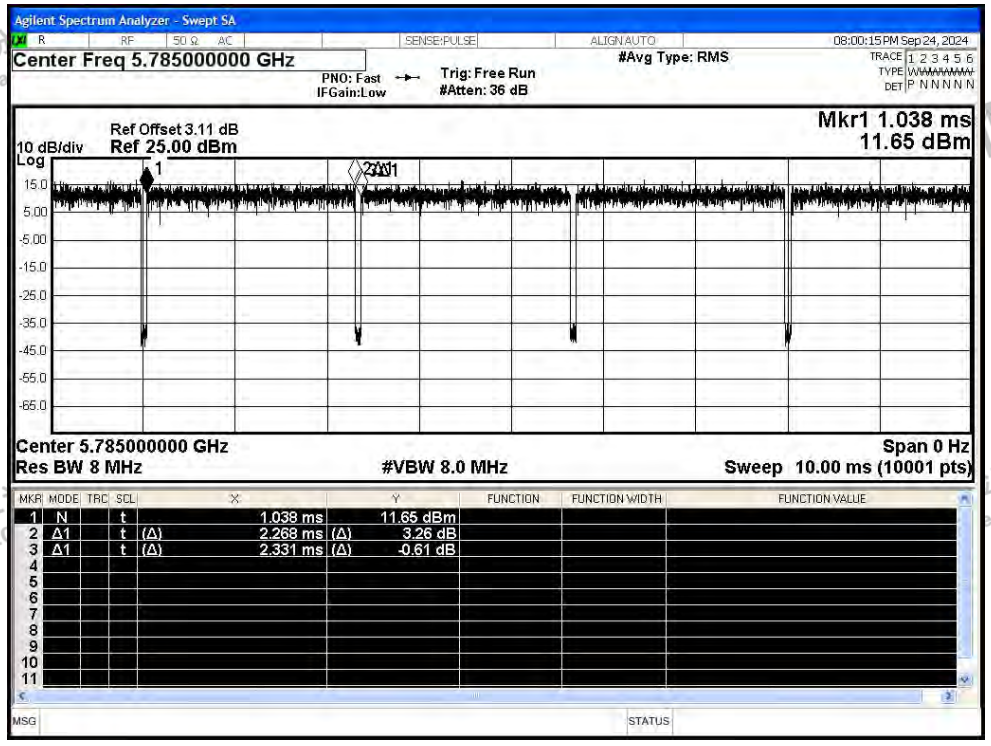

Duty Cycle NVNT ac20 5825MHz Ant0

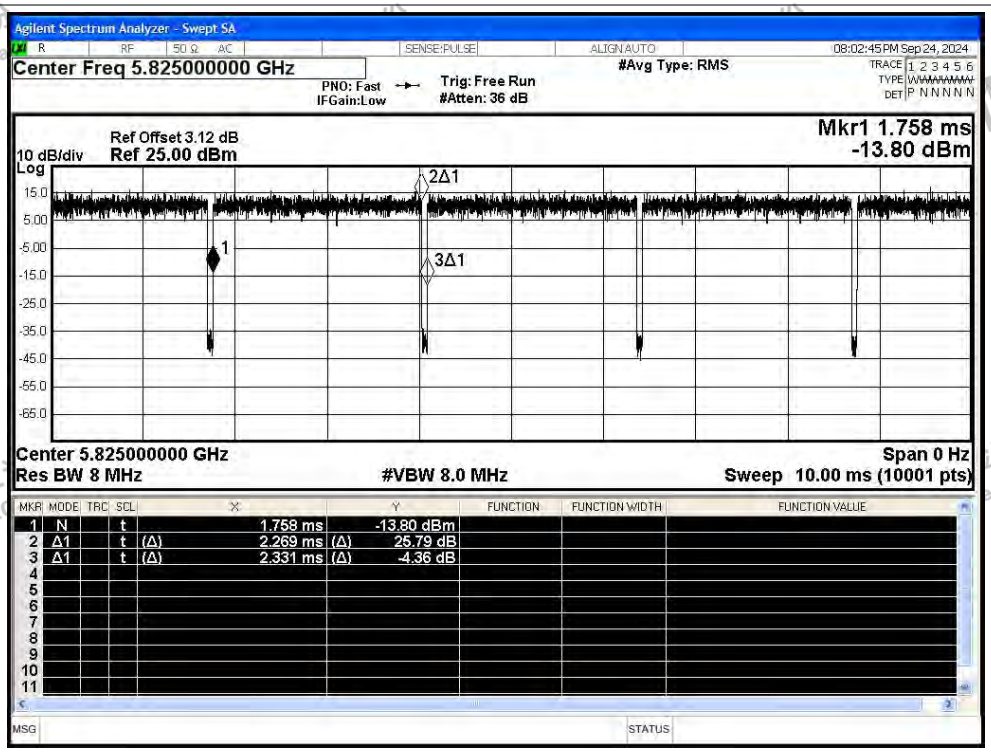

Duty Cycle NVNT ac40 5755MHz Ant0

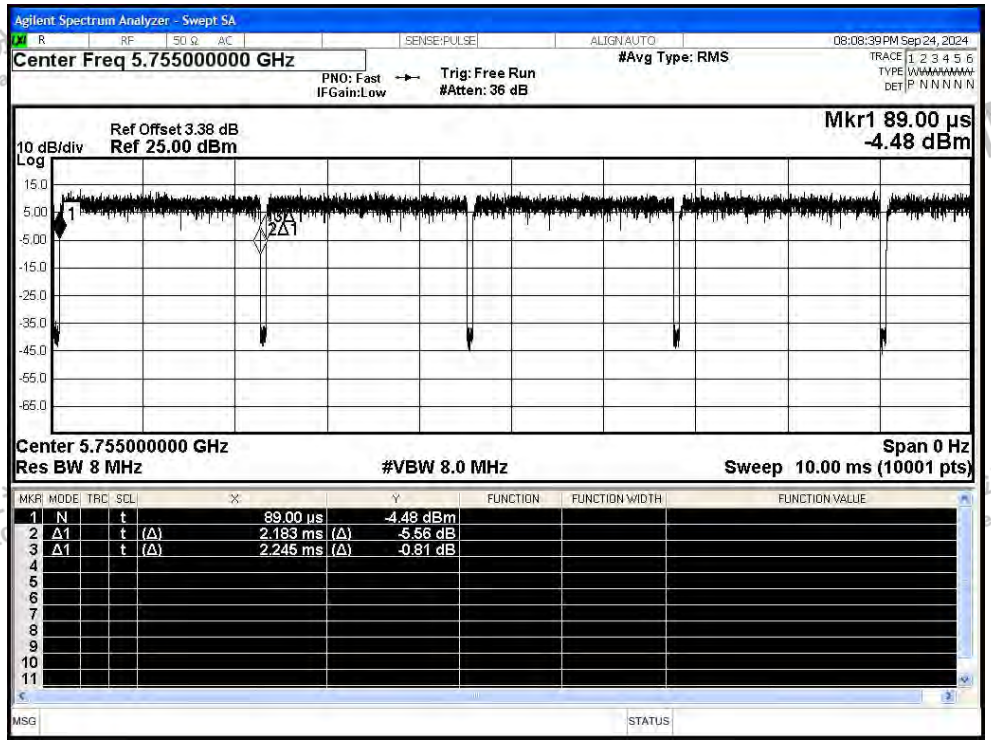

Duty Cycle NVNT ac40 5795MHz Ant0

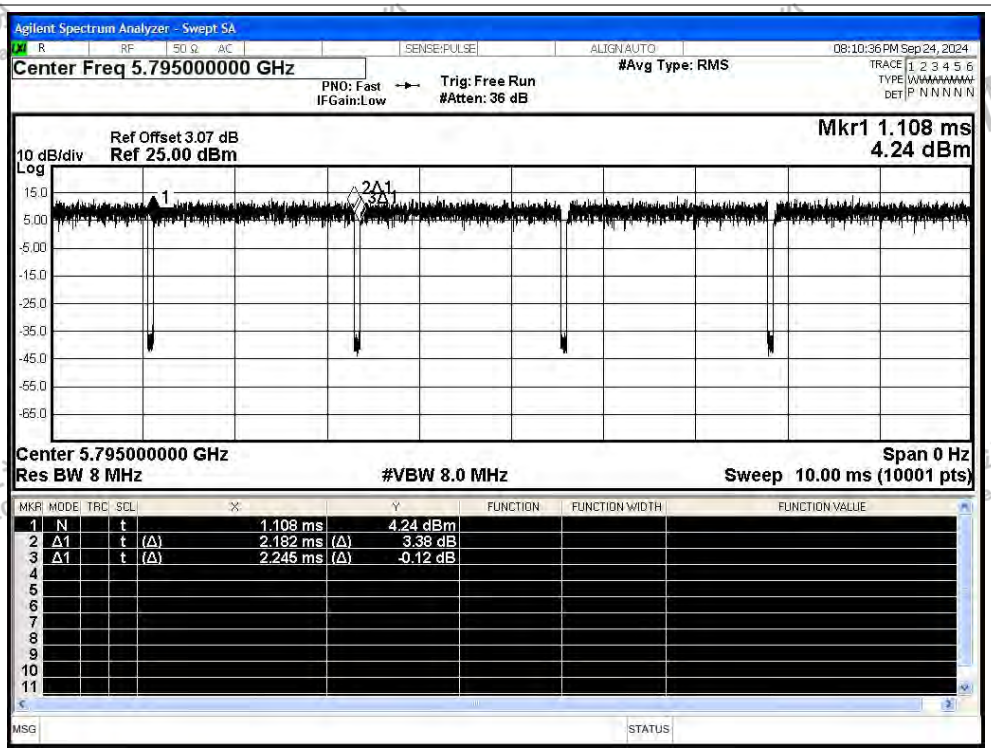

Duty Cycle NVNT ac80 5775MHz Ant0

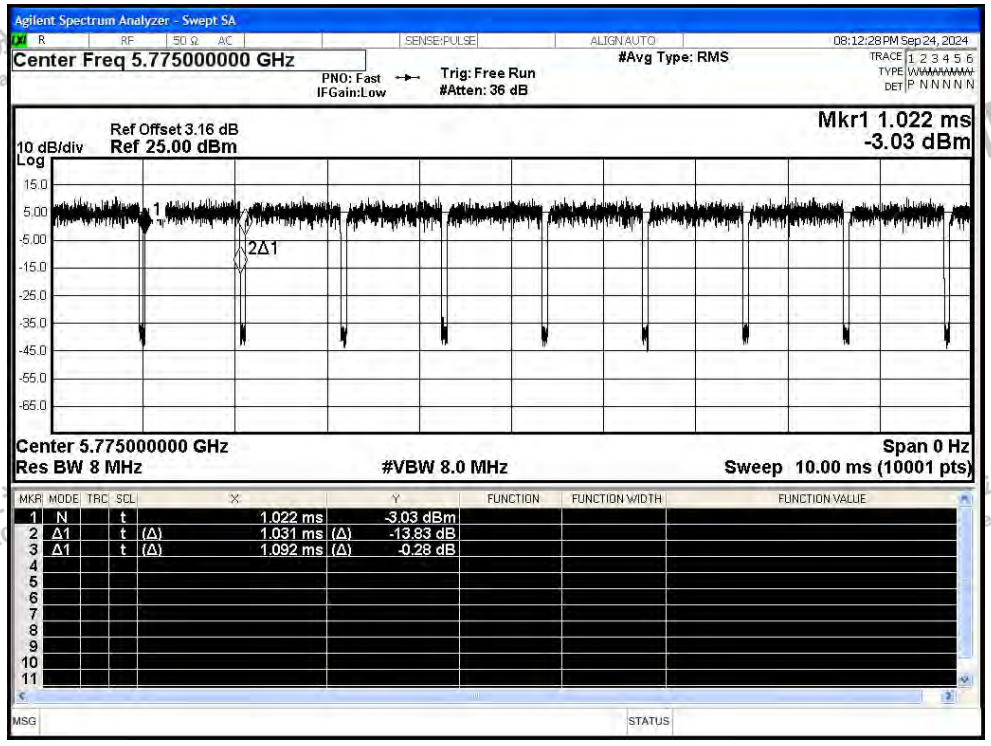

Condition	Mode	Frequency (MHz)	Antenna	Duty Cycle (%)	Correction Factor (dB)	1/T (kHz)
NVNT	a	5745	Ant1	94.65	0.24	0.91
NVNT	a	5785	Ant1	94.56	0.24	0.91
NVNT	a	5825	Ant1	94.56	0.24	0.91
NVNT	n20	5745	Ant1	97.33	0.12	0.44
NVNT	n20	5785	Ant1	97.29	0.12	0.44
NVNT	n20	5825	Ant1	97.29	0.12	0.44
NVNT	n40	5755	Ant1	97.23	0.12	0.46
NVNT	n40	5795	Ant1	97.23	0.12	0.46
NVNT	ac20	5745	Ant1	97.33	0.12	0.44
NVNT	ac20	5785	Ant1	97.29	0.12	0.44
NVNT	ac20	5825	Ant1	97.29	0.12	0.44
NVNT	ac40	5755	Ant1	97.19	0.12	0.46
NVNT	ac40	5795	Ant1	97.24	0.12	0.46
NVNT	ac80	5775	Ant1	94.32	0.25	0.97

Test Graphs

Duty Cycle NVNT a 5745MHz Ant1

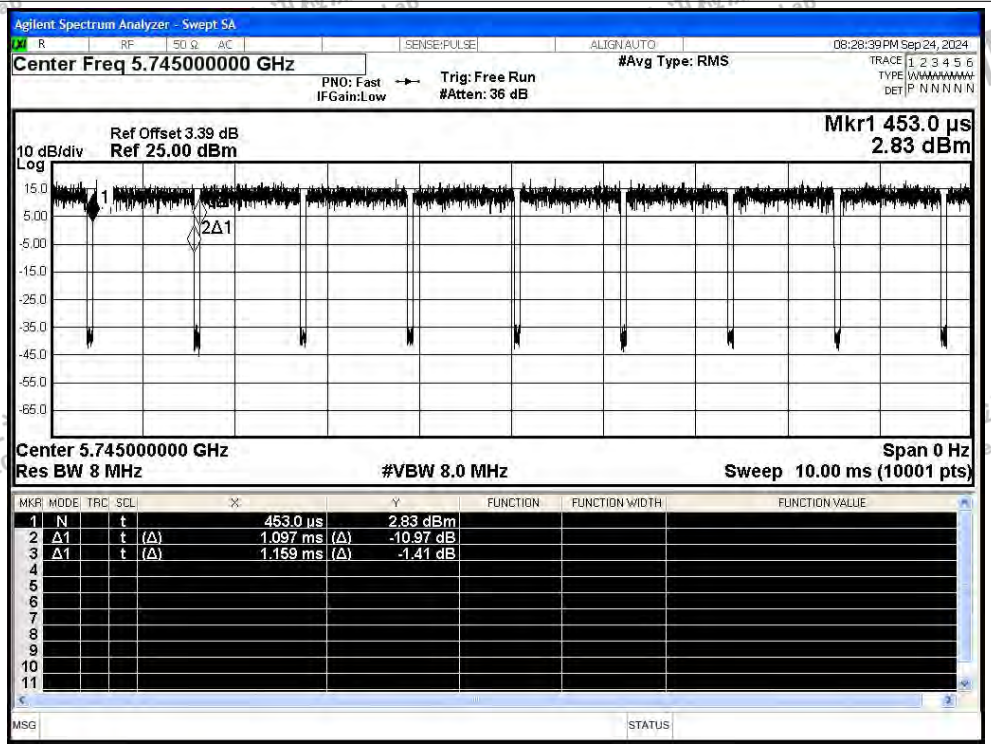

Duty Cycle NVNT a 5785MHz Ant1

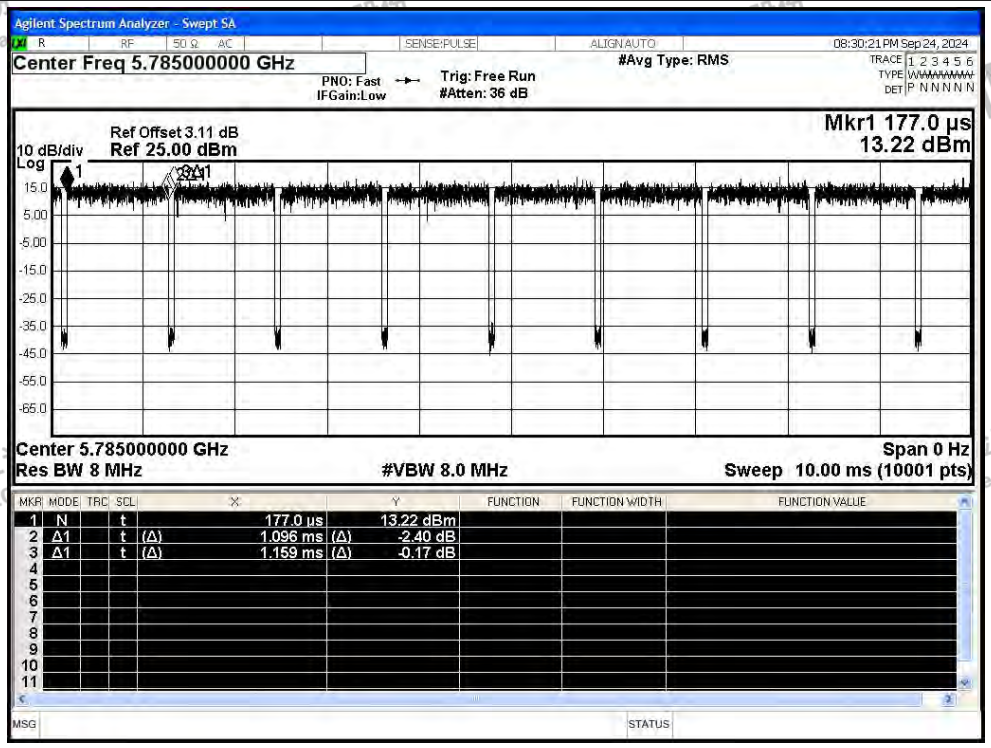

Duty Cycle NVNT a 5825MHz Ant1

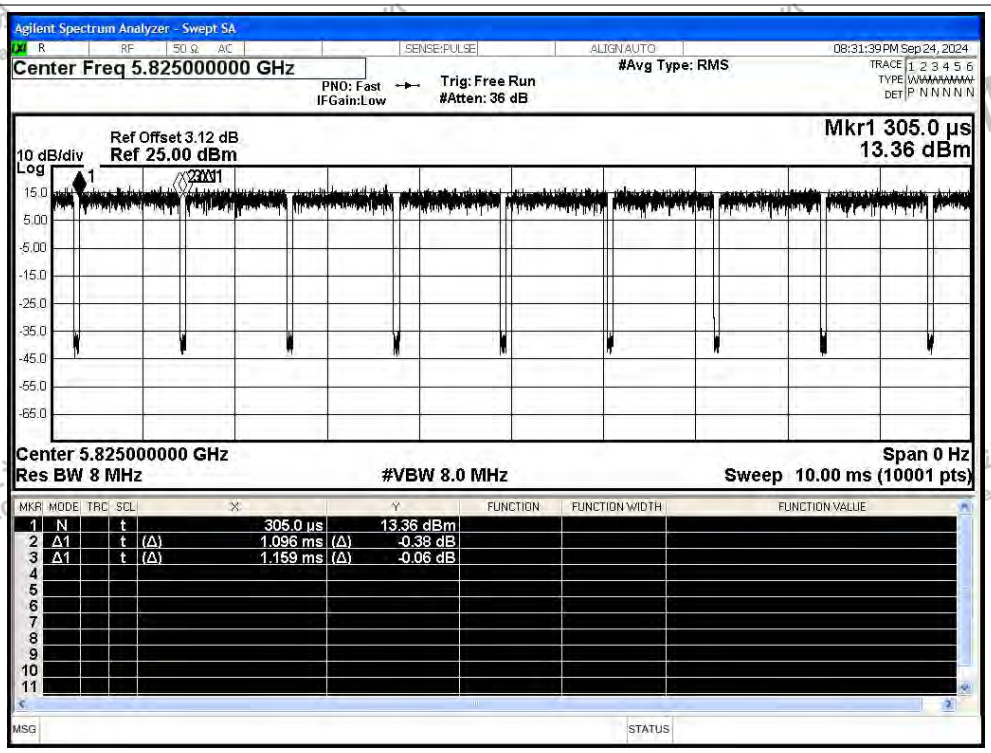

Duty Cycle NVNT n20 5745MHz Ant1

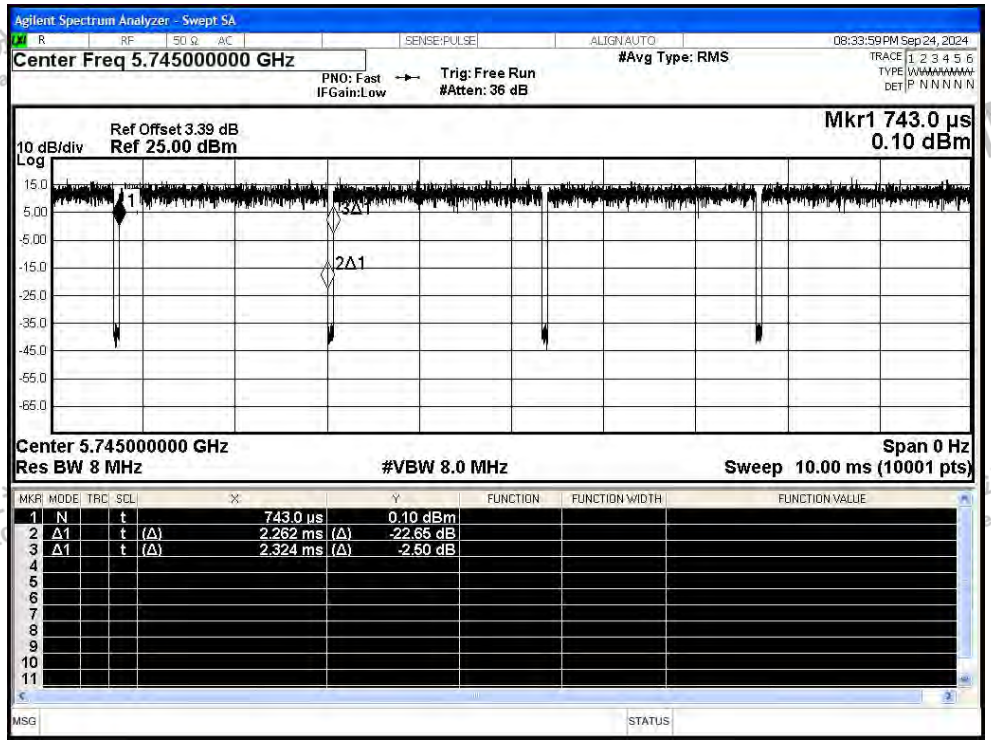

Duty Cycle NVNT n20 5785MHz Ant1

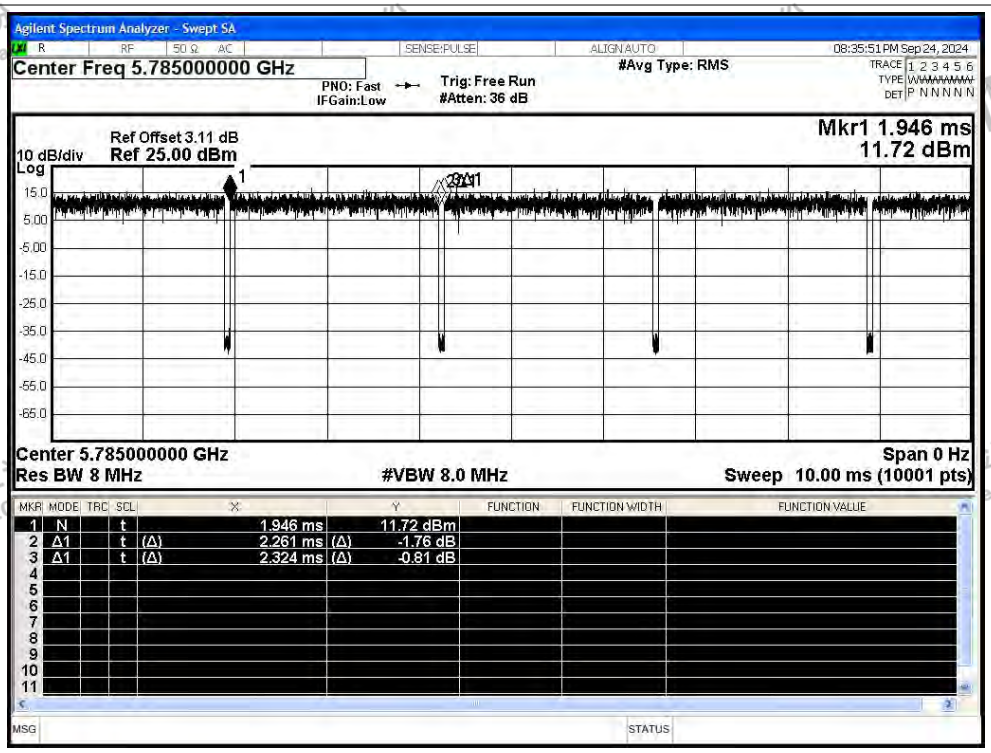

Duty Cycle NVNT n20 5825MHz Ant1

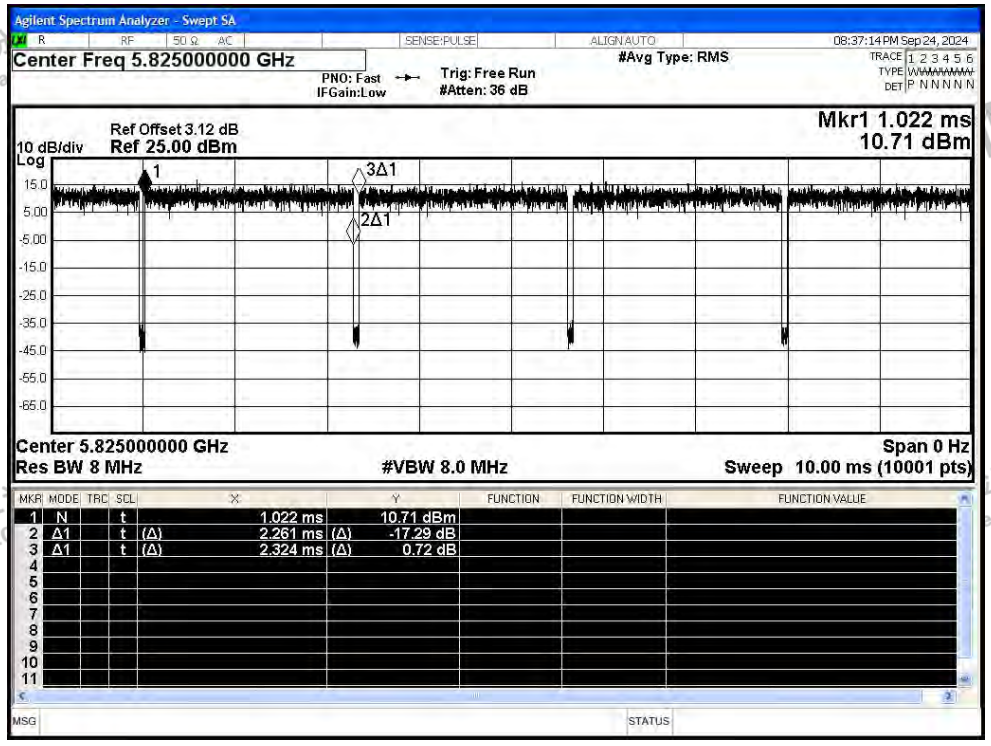

Duty Cycle NVNT n40 5755MHz Ant1

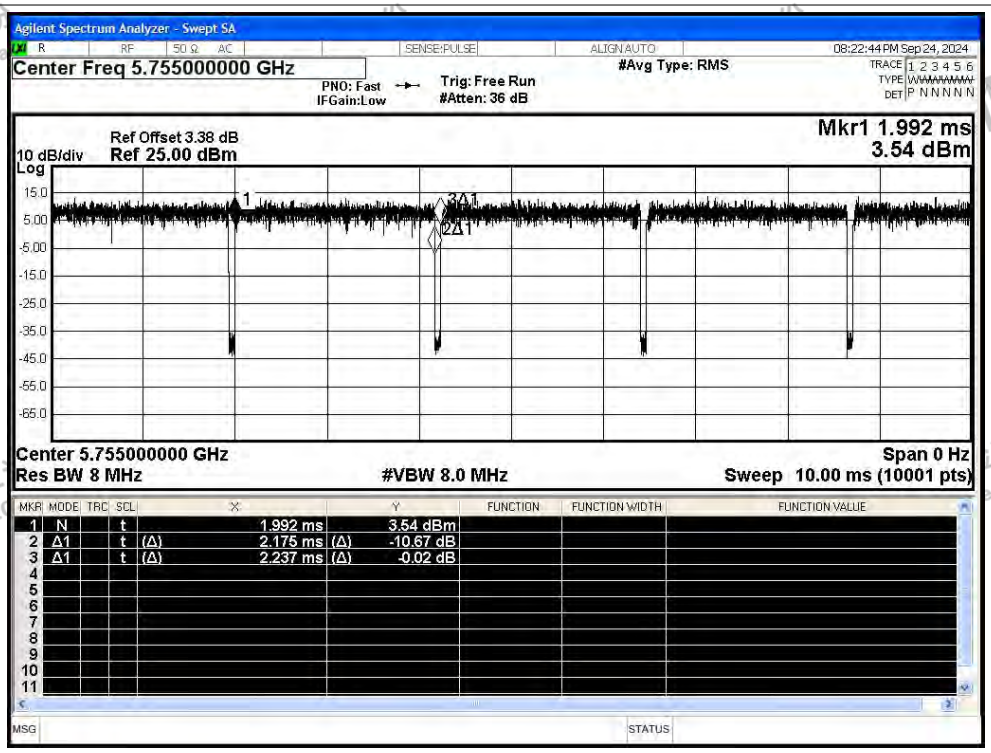

Duty Cycle NVNT n40 5795MHz Ant1

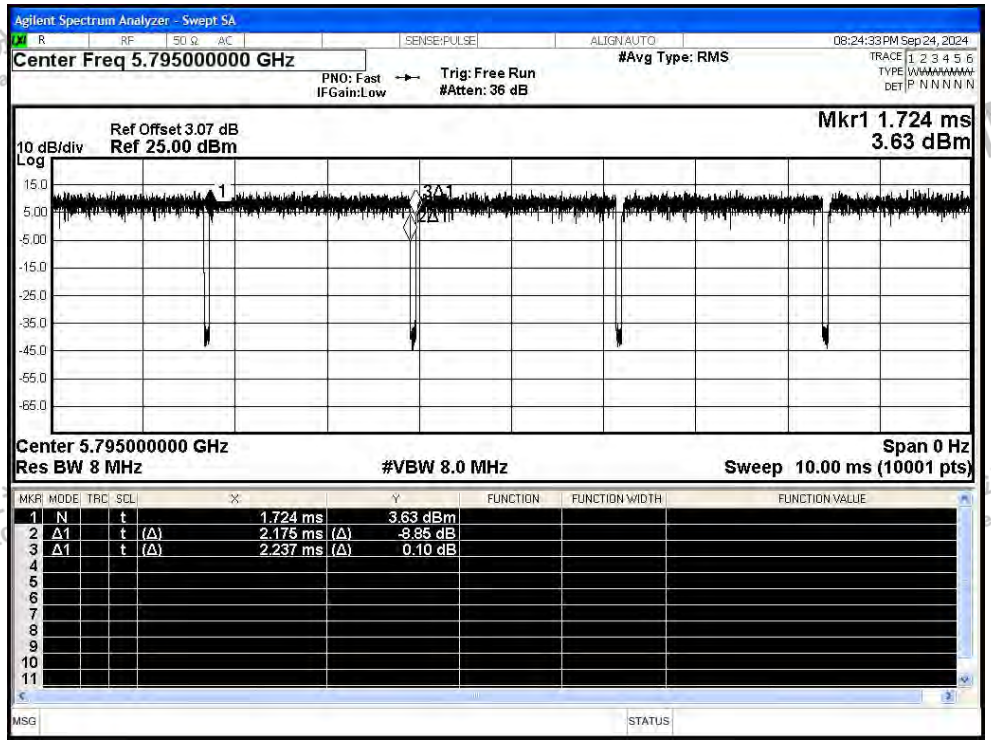

Duty Cycle NVNT ac20 5745MHz Ant1

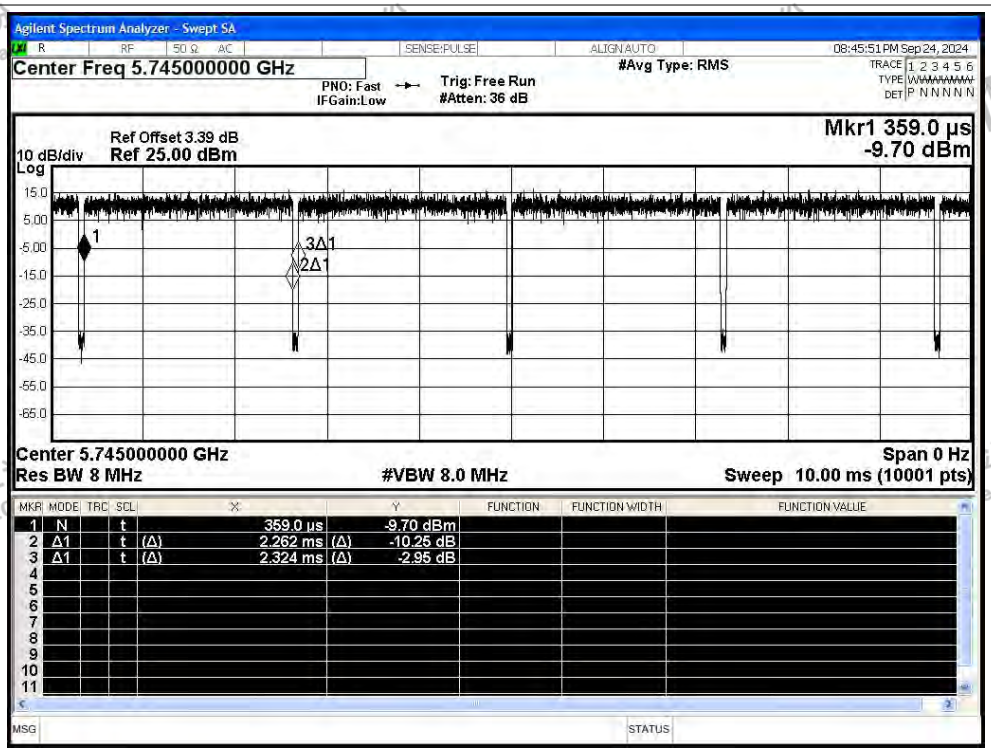

Duty Cycle NVNT ac20 5785MHz Ant1

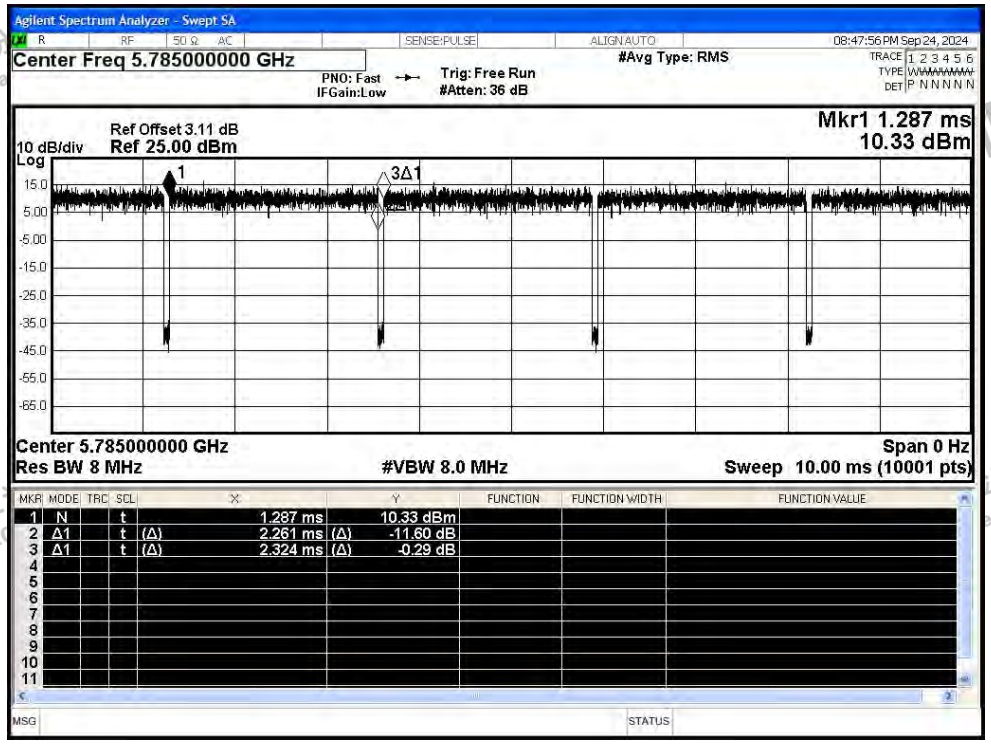

Duty Cycle NVNT ac20 5825MHz Ant1

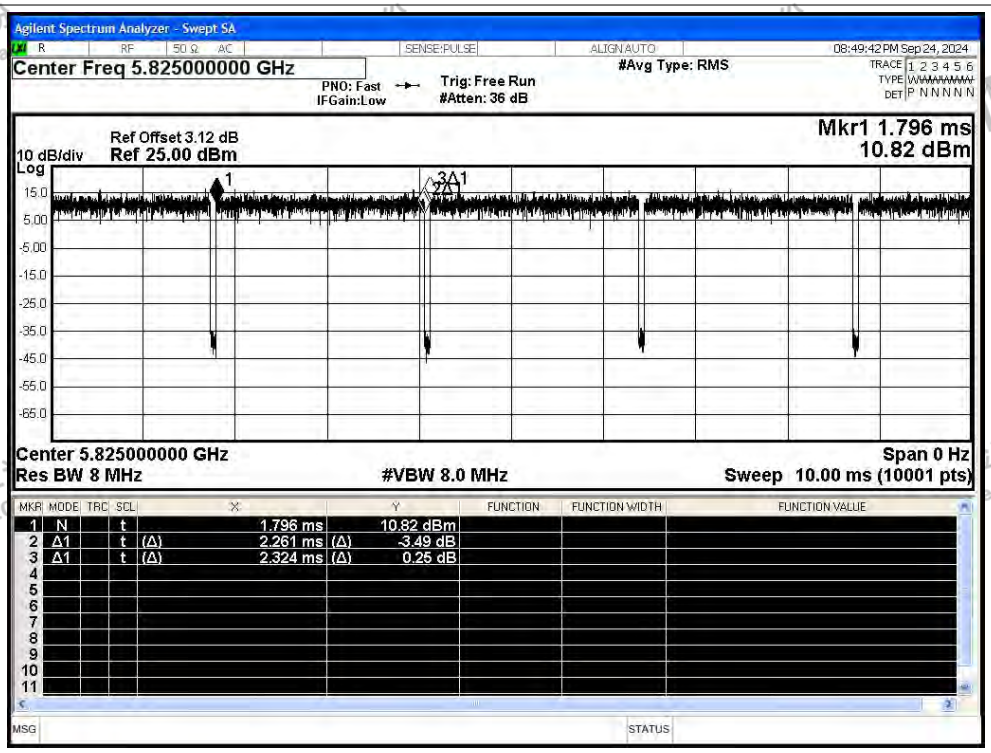

Duty Cycle NVNT ac40 5755MHz Ant1

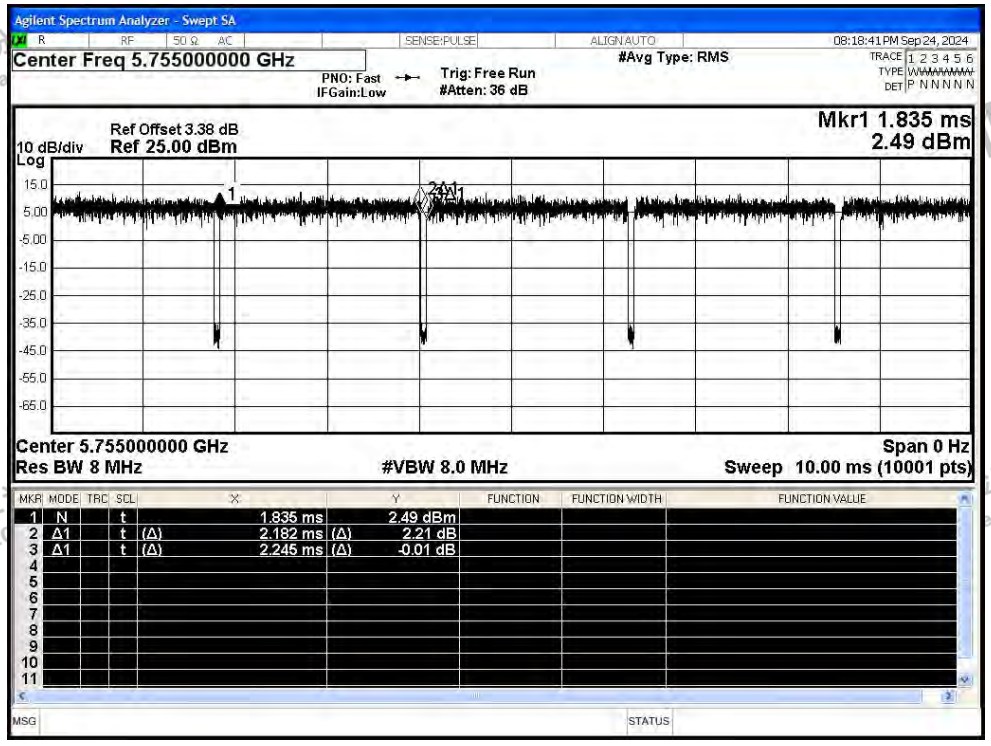

Duty Cycle NVNT ac40 5795MHz Ant1

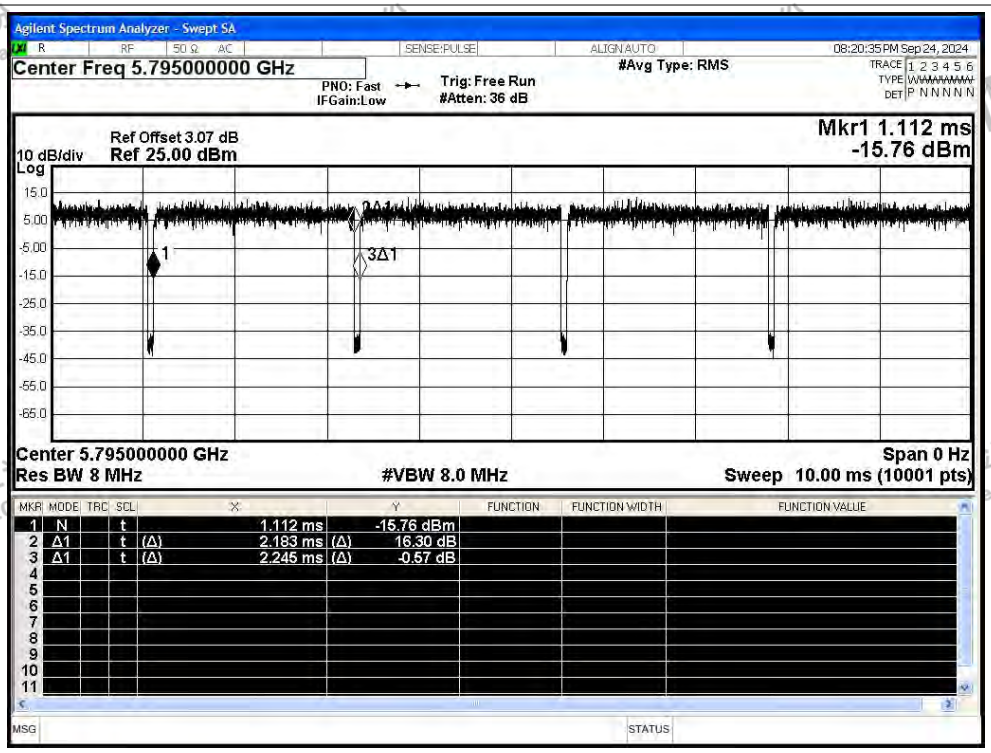
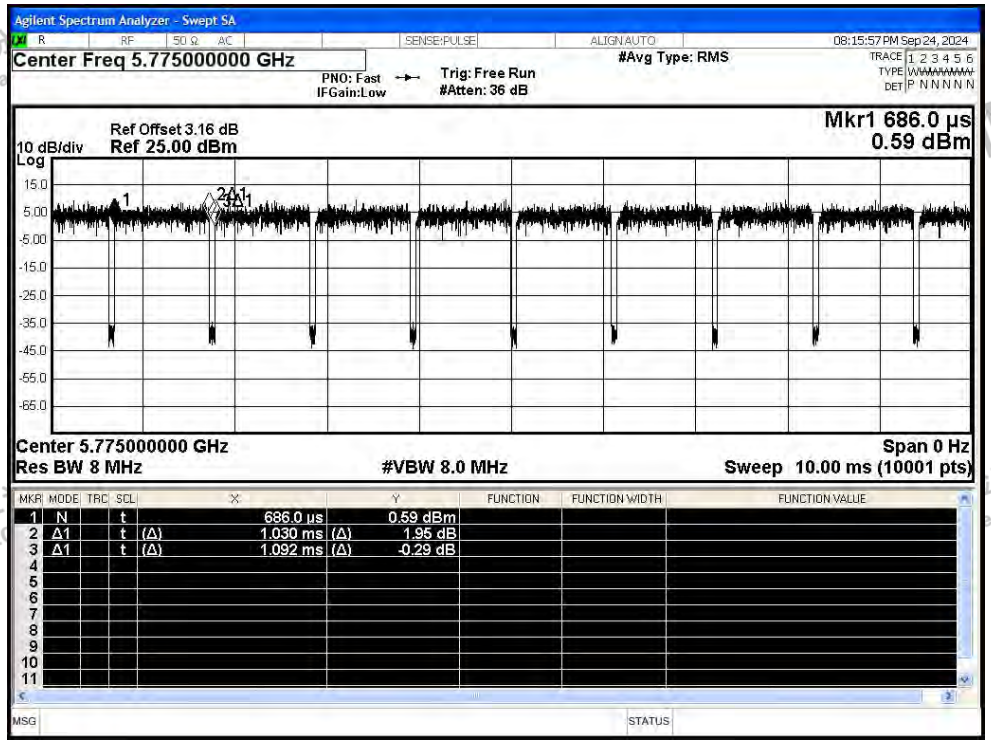
Duty Cycle NVNT ac80 5775MHz Ant1