


Product Manual

Aroma Diffuser

Please read the function introduction based on the product model.

- ☐ A-P521-K (Button Version— No APP function)
- ☐ A-P521-B (Button + Bluetooth Version — With APP)

- ☐ EU
- ☐ US
- ☐ UK
- ☐ AU

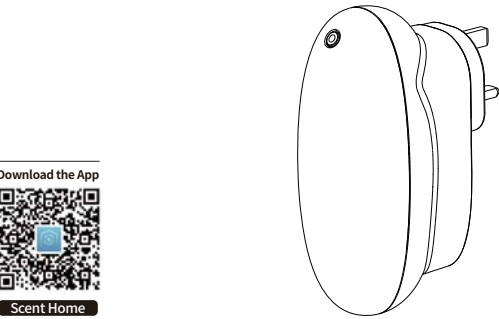

WARNING

Read all the instructions before using the product.

1. The appliance must only be used with the ultra-low voltage power supply unit provided with it.
2. To prevent malfunction, the appliance must only be powered by the safe extra-low voltage supply specified for it.
3. The appliance can only be powered by the specified voltage of the product; otherwise, there is a safety risk.
4. If the supply cord is damaged, it must be replaced by a special cord or assembly available from the manufacturer or its service agent.
5. This appliance is not intended for use by persons (including children) with reduced physical, sensory, or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning the use of the appliance by a person responsible for their safety.
6. Children should be supervised to ensure that they do not play with the appliance.
7. The appliance is only to be used with the recommended vaporizing medium. The use of other substances may give rise to a toxic or fire risk.
8. Use the product in an environment with a temperature between 20°C and 30°C for optimal performance. Do not expose the product to temperatures below -10°C or above 50°C; otherwise, the unit may be damaged. The product can only be used at altitudes below 2,000 m.
9. Do not tamper with the original operating device and function of the appliance.

This product is intended for sale and application in a business environment.

RED Article 10 (2)

-This product can be used across EU member states

RED Article 10 (10)

The RF distance between body and product is 20cm

Frequency Range: 2402-2480MHz

Max.RF Output Power: -1.92 dBm



Specification

【Model】	A-P521-K / A-P521-B
【Dimension】	60*118.6*142mm (EU) / 60*104*142mm (US/UK) 60*109.5*142mm (AU)
【Bottle Capacity】	30ml / 60ml
【Input】	100-240V~ 50/60Hz
【Power】	2 W
【Coverage】	20m ² / 60m ³ / 2118.8ft ³
【N.W.】	220g
【Material】	PP + POM



Bottle



Bottle Cap




Manual

【Verification Note】


After receiving the product, please check the above list. If any items are missing, contact the distributor.

Function Description

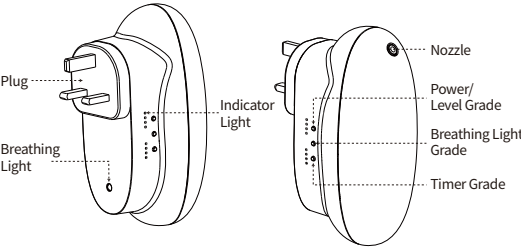


How to Add Essential Oil


ENSURE THE DEVICE IS POWERED OFF BEFORE REFILLING.

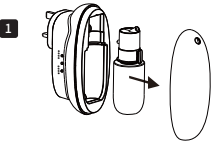


Open the cover on the side of the unit and remove the oil bottle.

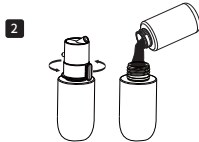

Unscrew the diffuser head from the bottle. Fill the bottle with essential oil, then tighten the cap.

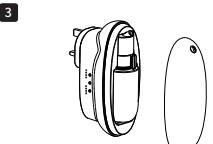

Align the bottle and diffuser head with the slots in the unit. Press until fully seated.

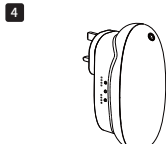

Ensure the bottle is properly installed, then close the cover.

Function Settings

Button Operations

Button	Operation	Function
Grade	Short press	A-P521-K Cycle through levels: 1→2→3→1... A-P521-B 1. 24h mode: cycle levels 1→2→3→1... 2. Smart scene: exit scene; short press Grade to revert to 1h / Level 1 3. Reset timer; disconnect Bluetooth if connected
	Long press	A-P521-K Power on / off A-P521-B Power on / off; disconnect Bluetooth if connected
	Extra-long press (5 sec)	A-P521-K Restore factory settings A-P521-B Restore all data (password, time settings) to factory defaults; disconnect Bluetooth
Light	Short press	A-P521-K/A-P521-B Cycle light modes: Breathe→On→Off→Breathe...
Timer	Short press	A-P521-K Cycle timer: 1h→3h→6h→12h→24h→1h... A-P521-B 1. 24h mode: cycle timer 1h→3h→6h→24h...; 2. Smart scene: exit scene; press Timer→return to 1h/Level 1 3. Reset timer; disconnect Bluetooth if connected

Factory default: Level 1 / 1-hour timer / Breathe light

Beep Signals

Sound	Scene
Short beep	Short-press command confirmed
Long beep	Power on / Power off / Factory reset completed

Indicator Lights

Light	Meaning
Off Light (Red/Yellow)	A-P521-K/A-P521-B Yellow : Standby. Corresponding Grade & Timer lights on. Red : Powered off (plugged in, not fault).
Grade Lights	A-P521-K/A-P521-B : Grade 1→Grade 2→Grade 3→Grade 1...
Timer Lights	A-P521-K Cycle timer: 1h→3h→6h→12h→All off→1h... A-P521-B Cycle timer: 1h→3h→6h→All off→1h...
Bluetooth Light	A-P521-B Blinks while connecting; lights solid after connection; turns off on key press.
Breathing Light	A-P521-K/A-P521-B : Steady on / Breathe / Off

First Use

1. Plug in. The unit powers on automatically.
2. Default: Grade 1 / 1-hour timer / Breathe light.
3. A long beep confirms it is ready.

How to Connect the App to the Device (For A-P521-B only)


Steps

[Download the App]

Open the Google Play Store or App Store, search for the "Scent Home" app, and download it. If you're unable to find it, scan the QR code on the first page of the product manual to download.

[Add Device & Log In (Make sure the machine is powered on)]

1. Open the app, register an account, and log in. Or enable Bluetooth on your phone and enter the app's Bluetooth mode (the machine must support Bluetooth mode).
2. Tap "Add Device" and follow the in-app prompts to complete device binding.

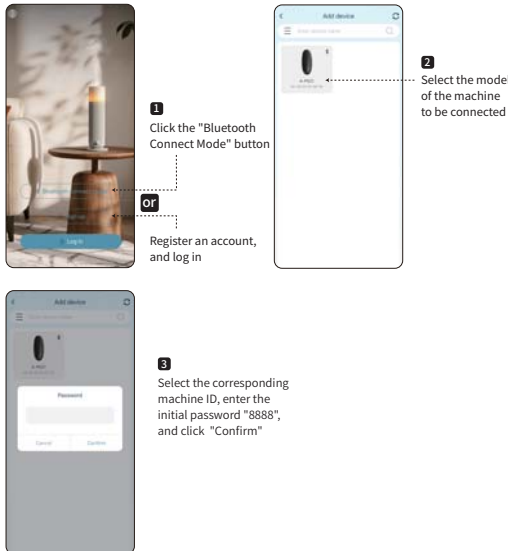

App Operation Guide

Standard Mode



Settings

Tap the "Breathing Light" button to turn the Breathing light on or off, or adjust its brightness.

Tap the "On/Off" button to power the device on or off



Click on "Customize Settings", then scroll up and down to select the working time and pause time



Quick Fragrance: It can achieve efficient fragrance diffusion in just 5 minutes

Scenario Usage Guide



Click the sliding button to start/stop the preset tasks and enter the intelligent scene mode.

Click to add preset tasks

Display the running tasks



Select the number of working days per week, the start time, the end time, the gear, and remember to click "Save"



Swipe left to display the option to delete this preset task. Click "Delete" to remove the task

Change Password



1 Tap "..." to enter the device settings page.



2 Tap "Change Password" to enter the password update interface.

3 Enter a new 4-digit password and tap Confirm.

[Note:]
If you forget the password, press and hold the reset button on the device to restore factory settings. Then enter the default password "8888" to re-add the device. The app is continuously updated and improved, so the interface and functions may vary depending on the version. Please refer to the actual interface for details.

Grade and Working Period

Grade	Work Time(s)	Stop Time(s)	Consumption(g/h)
G1	15s	300s	0.04g/h
G2	15s	135s	0.1g/h
G3	15s	40s	0.25 g/h
Customized	5-15s	40-300s	/

[Note]
The above data are derived from the internal laboratory of the enterprise. The data vary depending on the type of essential oil and environmental conditions. Please refer to the actual situation.


Cleaning & Maintenance

 **DISCONNECT POWER BEFORE CLEANING!**

[Cleaning and Maintenance]
When to Clean the Device.
Cleaning is required in the following situations:
1. When you change to a different essential oil.
2. When you notice a decrease in mist output performance.

[Tip: We recommend regular cleaning-about once every 3 months.]

[Cleaning Steps] You will need: alcohol

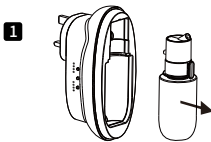


1

Remove the diffuser head and unscrew the bottle.



2

Pour an appropriate amount of alcohol into the bottle (30%-90% full), install it back onto the machine, and run the device at the highest setting for 15-30 minutes.



3

Discard any remaining alcohol and let the diffuser sit until the oil bottle, suction tube, and nozzle are completely dry. Cleaning is now complete.

[Caution] Do not use gasoline, acetone, or corrosive solvents.

Troubleshooting

Before requesting repair, please troubleshoot the issue by following the instructions below.

Issue	Possible Causes	Solutions
Device not working	Power supply disconnected	Check the power connection and ensure the plug is firmly inserted.
No mist or weak mist	The atomizing core is clogged.	Clean the atomizing core with a professional cleaner to remove internal residue or replace it with a new one (recommended cleaning every 1 month).
	The liquid tube is not securely attached	Check and tighten the loose parts.
Oil leakage	The gasket between diffuser head and bottle may be loose or damaged.	Secure the bottle properly or replace the gasket if damaged.
	The bottle is not properly secured.	Check and tighten the loose parts.
Liquid spray	The atomizing core is clogged.	Clean the atomizing core with a professional cleaner to remove internal residue or replace it with a new one (recommended cleaning every 1 month).
	The device is tilted.	Ensure the device remains upright during use.
	The essential oil level is too high.	Do not overfill the bottle-keep the essential oil level below 90% capacity.
Unusual noise	The air pump is not secured.	Inspect and re-secure the pump if it is loose.
	The essential oil level is too high.	Do not overfill the bottle-keep the essential oil level below 90% capacity.

FCC Statement

This device complies with part 15 of the Fcc Rules. Operation is subject to the following two conditions:
1. This device may not cause harmful interference, and
2. this device must accept any interference received, including interference that may cause undesired operation.
This equipment has been tested and found to comply with the limits for a Class B digital device pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

-Reorient or relocate the receiving antenna.
-Increase the separation between the equipment and receiver.
-Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
-Consult the dealer or an experienced radio/TV technician for help.

FCC Caution: Any changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter. Not applicable.

RF Exposure
This device complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body. be installed and operated with minimum distance 20cm between the radiator & your body.

ISED Statement

English: This device contains licence-exempt transmitter(s)/receiver(s) that comply with innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:
1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.
The digital apparatus complies with Canadian CAN ICES - 3 (B)/NMB - 3(B).

French: Cet appareil contient des émetteurs/récepteurs exempts de licence qui sont conformes aux RSS exemptés de licence d'Innovation, Sciences et Développement économique Canada. L'exploitation est soumise aux deux conditions suivantes :
1. Cet appareil ne doit pas provoquer d'interférences.
2. Cet appareil doit accepter toute interférence, y compris les interférences susceptibles de provoquer un fonctionnement indésirable de l'appareil.
L'appareil numérique du ciem conforme canadien peut- 3 (b) / nmb -3 (b).

This device meets the exemption from the routine evaluation limits in section 6.3 of RSS 102 and compliance with RSS 102 RF exposure, users can obtain Canadian information on RF exposure and compliance.
cet appareil est conforme à l'exemption des limites d'évaluation courante dans la section 6.3 du cnr- 102 et conforme avec rss 102 de l'exposition aux rf, les utilisateurs peuvent obtenir des données canadiennes sur l'exposition aux champs rf et la conformité.

This equipment complies with Canada radiation exposure limits set forth for an uncontrolled environment. Cet équipement est conforme aux limites d'exposition aux rayonnements du Canada établies pour un environnement non contrôlé.

This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.
Cet équipement doit être installé et utilisé à une distance minimale de 20 cm entre le radiateur et votre corps.

SAVE THESE INSTRUCTIONS WARNING