

User Manual of KUMI AI NOTE

I. Package List



KUMI AI NOTE x 1



User Manual x1




Magnetic Charging
Cable x 1



Magnetic Ring x 1

II. Product Introduction

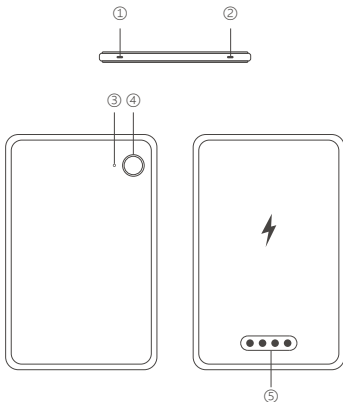

①、② Microphone Holes
④ Recording Button

③ Indicator Light
⑤ Charging Port


III. Function Operation

1. Power On / Binding LED Status

- ① Waiting for APP binding, battery $< 10\%$: Red light flashes for 30 seconds.
- ② Waiting for APP binding, battery $\geq 10\%$: White light flashes for 30 seconds.
- ③ APP binding successful, battery $< 10\%$: Red light stays on, turns off after 5 seconds.
- ④ APP binding successful, battery $\geq 10\%$: White light stays on, turns off after 5 seconds.




2. Power Off



Battery = 0%:
Automatically powers off.

3. Charging LED Status



- ① Battery $< 10\%$:
Red light flashes.
- ② $10\% \leq \text{Battery} < 99\%$:
Green light flashes.
- ③ Fully charged:
Green light stays on.

4. Recording LED Status

- ① Recording starts: Blue light stays on.
- ② Recording stops: Blue light turns off.
- ③ Charging + recording LED status: The indicator light is consistent with the recording status.



5. Touch Button



- ① Short press:
 - a. Wake up from non - recording state.
 - b. Mark important moments during recording.
- ② Long press for 1.5 seconds: The motor vibrates once; starts recording (can start recording in power - off state).
- ③ Long press again for 1.5 seconds: After stopping recording, the motor vibrates twice.
- ④ Long press for 8 seconds: System abnormal recovery.


6. Automatic Sleep

No recording, no charging, no file transfer for 8 seconds: Automatically sleeps, still has Bluetooth connection (can be woken up by clicking the touch button).

7. Deep Sleep


No recording, no file transfer, no charging for 24 hours: Can be reconnected by touching the button.

IV. APP Download


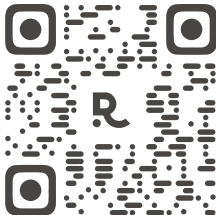


Scan the QR code to download and install the APP

V. Connect Recording Card




A short press of the recording button can turn on your AI recording card. When the red or white light is on and flashing, it indicates that your AI recording card is ready to be bound to your account.

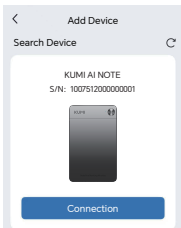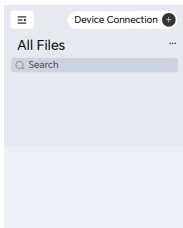

VI. Recording Operation

1. Start Recording

Long press the recording button and hold for 1.5 seconds until you feel a vibration and the blue light is on, indicating that recording has started.



2. Recording Tag


When the blue light is on during recording, short press the recording button for 0.5 seconds (the blue light turns off briefly) to mark important moments of the recording.

* In the recording file in the APP,  is the important moment mark



3. End Recording


Long press the recording button for 1.5 seconds until you feel two vibrations and the blue light goes out, indicating that the recording has ended.



4. Export Recording by Connecting Device After Recording

Wireless transmission (supported by some models):
Turn on Bluetooth and WiFi, pair the device through the official NebulaRec APP (such as KUMI AI NOTE), and synchronize the device recording to the mobile phone.

VII. Specifications for Using Magnetic Ring

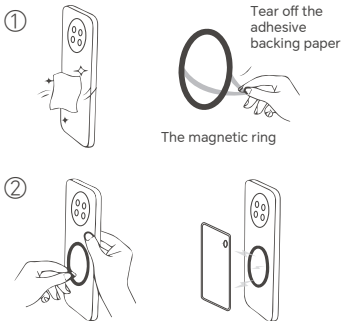

Note:

Once the magnetic ring is stuck on the phone, it is difficult to remove. Please confirm the position before sticking.

VIII. Legal Statement:

- All rights reserved. Shenzhen Tenxinbona Technology Co., Ltd. reserves all rights.
- The company has the right to modify any information in this manual at any time without notifying any third party, and shall not be liable to any third party for such modification.
- Without the company's written consent, no unit or individual shall excerpt, copy or use the contents of this manual in any other way, and shall not disseminate it in any form.
- This guide is for reference only and does not constitute any form of commitment. The product (including but not limited to color, size, etc.) shall be subject to the actual product.
- Due to software version upgrades and updates, the content introduced in this guide is for reference only. Please refer to the actual product.

IX. FCC Statement

This device has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Caution: Any changes or modifications to this device not explicitly approved by manufacturer could void your authority to operate this equipment.

This device complies with part 15 of the FCC Rules.

Operation is subject to the following two conditions:

This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Specific Absorption Rate (SAR) information:

This device meets the government's requirements for exposure to radio waves. The guidelines are based on standards that were developed by independent scientific organizations through periodic and thorough evaluation of scientific studies. The standards include a substantial safety margin designed to assure the safety of all persons regardless of age or health. FCC RF Exposure Information and Statement the SAR limit of USA (FCC) is 1.6 W/kg averaged over one gram of tissue. Device types: This device has also been tested against this SAR limit.

This device was tested for typical body-worn operations with the back of the This device kept 0mm from the body. To maintain compliance with FCC RF exposure requirements, use accessories that maintain an 0mm separation distance between the user's body and the back of the This device. The use of belt clips, holsters and similar accessories should not contain metallic components in its assembly. The use of accessories that do not satisfy these requirements may not comply with FCC RF exposure requirements, and should be avoided.

FCC ID: 2BGPH-NOTE02

KUMI

Shenzhen Tenxinbona Technology Co., Ltd.

Address:

405, 4th Floor, Building A, Chuanglingtong Technology Building, Shihua Road, Fubao Community, Fubao Street, Futian District, Shenzhen(405, Building A, Financial Technology Innovation Center, No. 1 Shihua Road, Hetao Sci-Tech Innovation Center) P. R. China

Made in China