



Bluetooth ring

User Guide

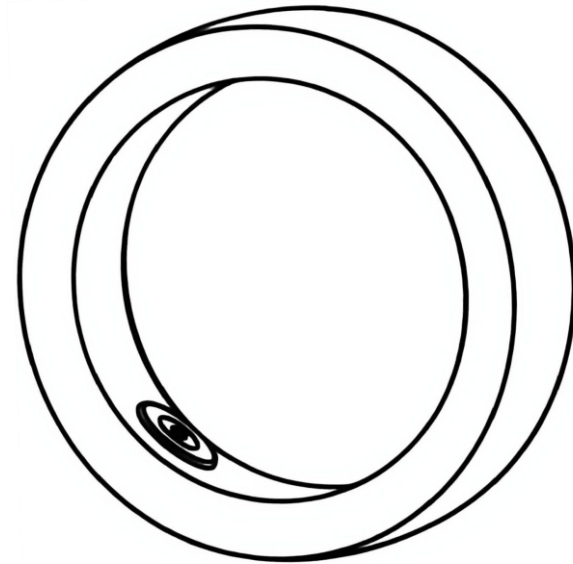


Overview and Package Contents Ring, charging cable, user guide

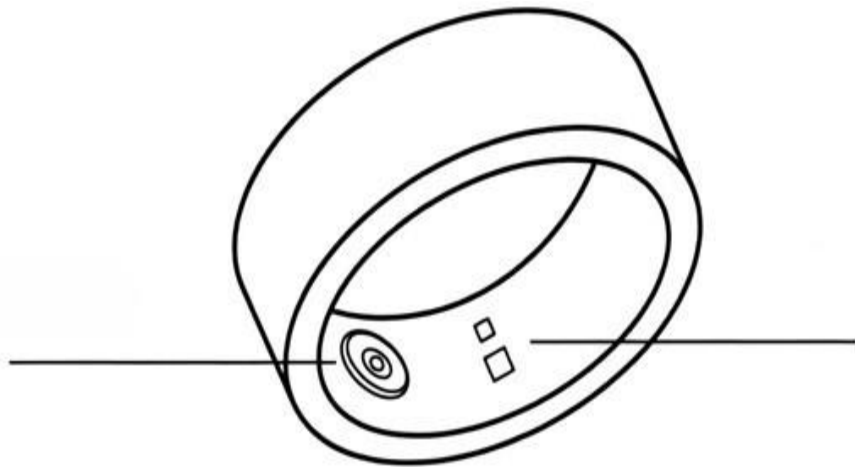


magnetic charging port

sensor

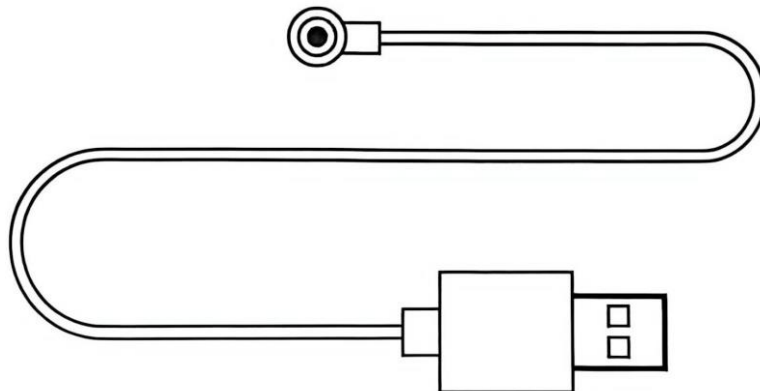

Power On

Connect the charging cable to the ring
to power on

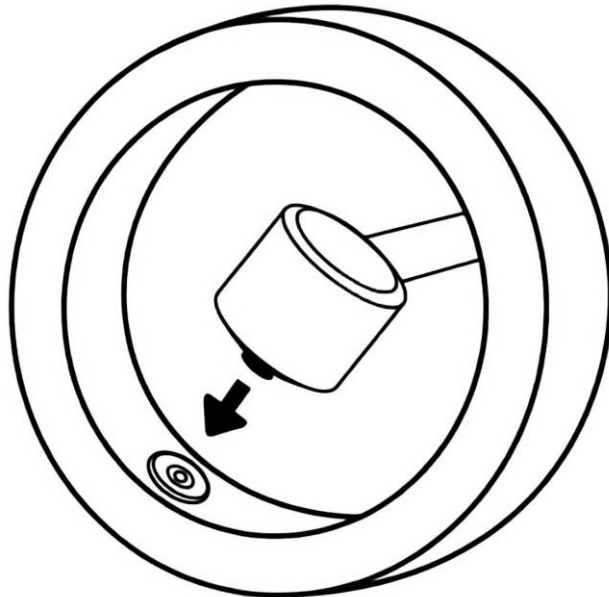


Connection

Scan the QR code to download and install the app, then open and connect the ring



Charging Instructions

Red light flashes when charging, green light flashes when fully charged

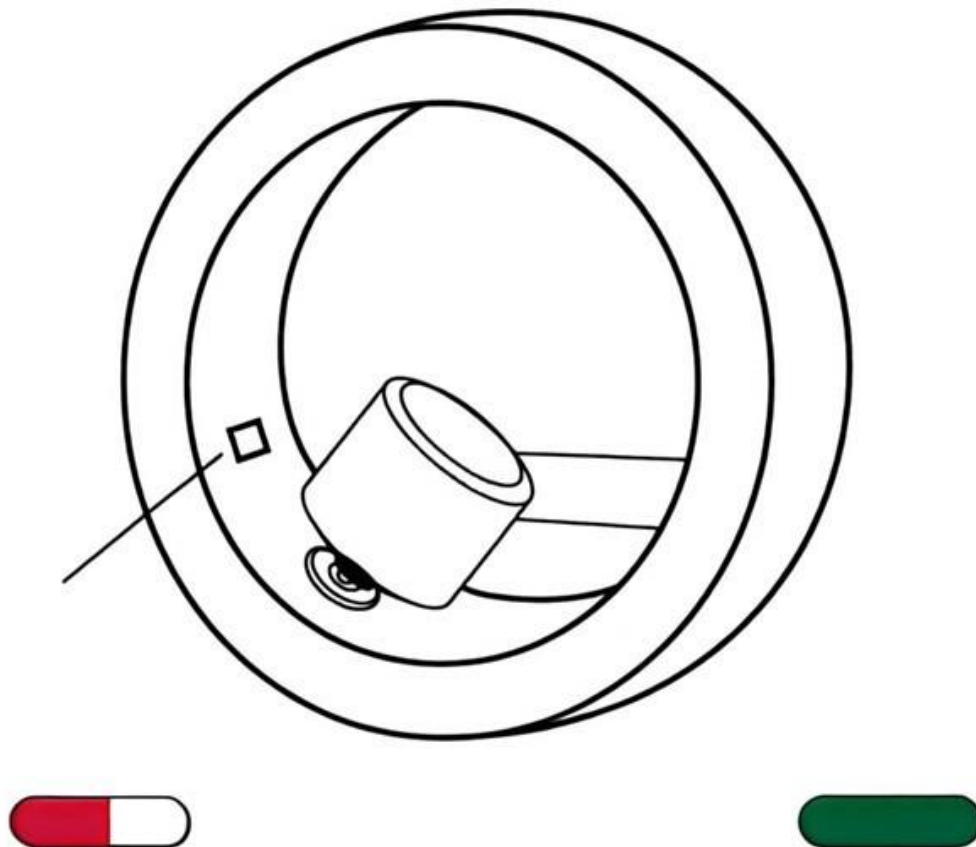


Charging: Red light flashing

Fully charged: Green light flashing

Wearing Method

Choose a comfortable size and wear it on your finger

It is recommended to wear on the index finger, middle finger, or ring finger for better data detection

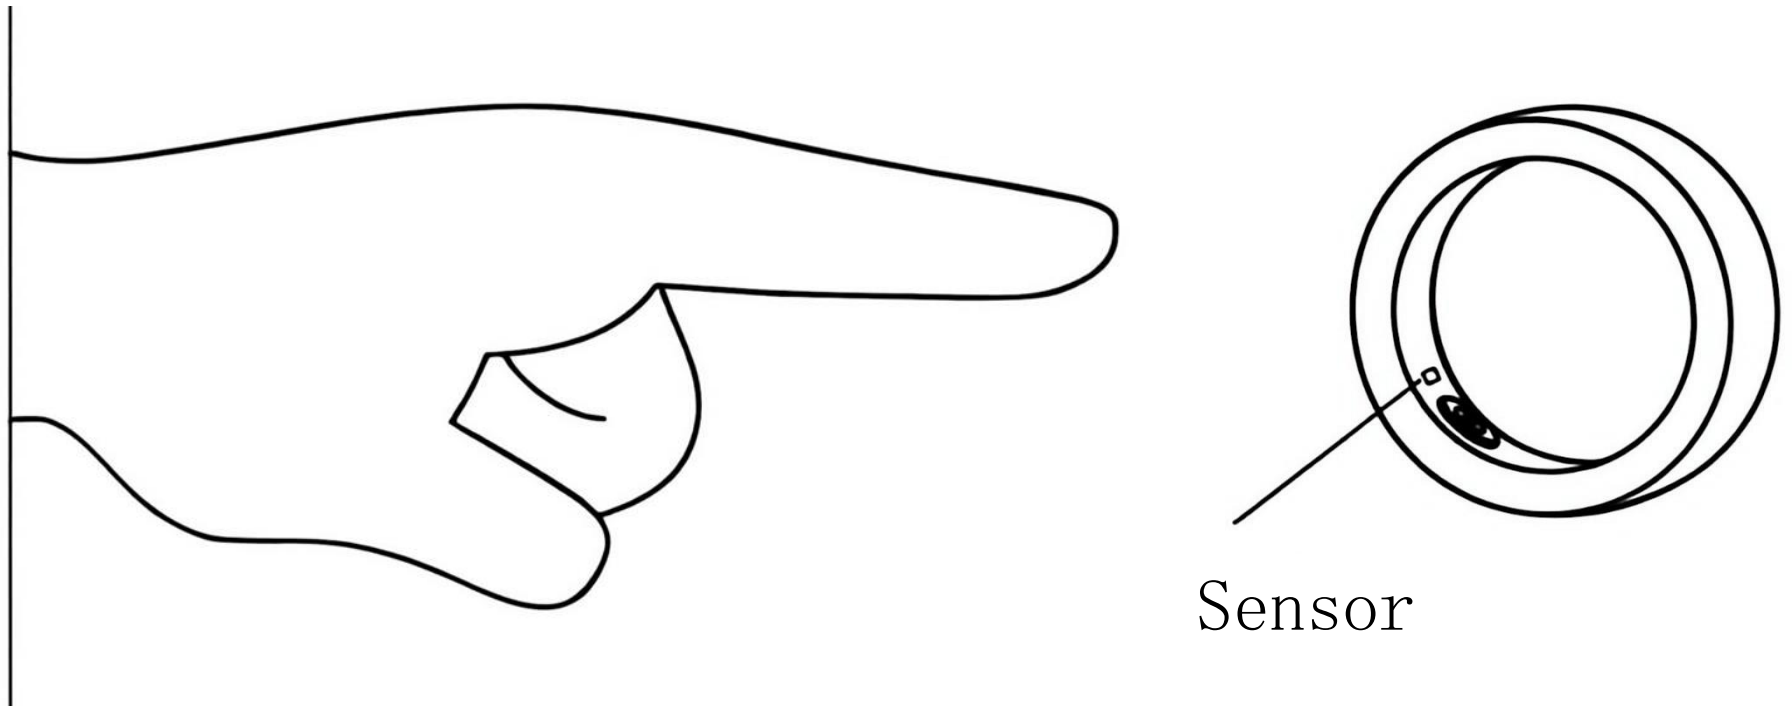

Sensor

Please wear the sensor on the inner side of your finger for more accurate detection results

Precautions

Before using and operating the device, please read and follow the precautions below to ensure optimal device performance and avoid dangerous or illegal situations.

In daily use, please choose a size that fits your finger, avoid wearing it too tight. Please keep the ring contact area dry. If it gets wet, please wipe it dry promptly. If symptoms such as redness or swelling appear on the contact area, please stop using immediately and consult a doctor.

Safety

When charging, please keep the charging cable and device in a dry environment. Do not touch the charging cable with wet hands, and avoid the charging cable being immersed in water or other liquids.

Do not disassemble or modify the battery, insert foreign objects, or immerse it in water or other liquids, as this may cause battery leakage, overheating, fire or explosion.

Do not drop, crush, or puncture the battery. Avoid subjecting the battery to excessive external pressure, which could lead to internal short circuits and overheating.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

FCC Radiation Exposure statement

The device has been evaluatec to meel general RF exposure requirement. The device can be used in portable exposure condition without restriction.