


# **D-MOMETER<sup>®</sup> Pager**

Ensuring Food Safety through Technology

## **USER'S Guide**

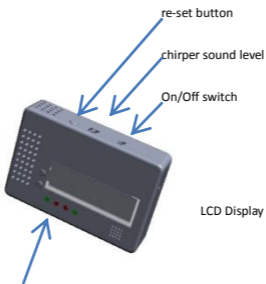

Power indicator led , first stage violation led , second stage violation led , communication led

## **Installation and Use**

. Please follow the FDA Food Code and your local Health departments rules and regulations when installing any device in your establishment. When installing your D-Mometer® Pager please follow all of the recommendations:

- 1) Place on a clean, dry and level surface. ( not closer than 12 inches from the floor) Do Not place on floor.
- 2) Surface of shelf must be of approved surface and construction by FDA Food Code and your local Health Department's rules and regulations.
- 3) Place in an area that can have a clear unobstructed view of the D-Mometer ® Pager front, top and sides.
- 4) Do Not place on door, moving parts, moving shelves, on top of food or food container.
- 5) Turn pager On and adjust the chirper to desired setting . allow 30 minutes for communication to system . The Pager with automatically start communicating to the D-Mometer 232T device and D-Mometer repeater if installed . The pager will display temperature violations of your system and you can be informed promptly if you refrigeration units are operating according to guidelines and if any temperature violations have occurred .

## **Care and Maintenance**

For proper use and function of your D-Mometer Repeater please follow the manufacturer's guidelines.

- 1) Make sure device is clean and dry. Do not expose to liquids. Do not expose to humidity.
- 2) Make sure there are no liquid or solid materials on or near device.
- 3) Wipe with soft towel and keep level.
- 4) Do not drop, or hit with any objects or cause damage to the D-Mometer ® Repeater.
- 5) Do not tamper with device, or open casing, remove or replace labels, stickers, wires or components. This will void warranty.

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

This equipment has been tested and found to comply with the limits of a class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the device.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## **Limited Warranty**

If within 30 days of original purchase, this device is defective or does not work properly, RMD Technologies, LLC will repair or replace the device providing customer has registered the device within 30 days of original purchase, has original purchase documents and has a confirmed registration of warranty. Please visit [www.D-Mometer.com](http://www.D-Mometer.com) for additional details and product warranty information request form and submittal. Address for returning your device: RMD Technologies, LLC, 635 West Michigan Street, Orlando FL. 32805 Attention returns department

Preparation for shipping your product:

Please repack your device in a durable box, preferably in the original carton, and send it prepaid and adequately insured. Include the original invoice and documentation of product registration along with description of issue, or a copy of the product return form from our website. For further information please send all inquiries to [customerservice@D-mometer.com](mailto:customerservice@D-mometer.com). The D-Mometer ® Pager has a 1 year Limited Warranty.

The 1 year Limited Warranty of this product is from date of its original purchase. This warranty does not cover: damage or failure caused by or attributable to abuse, misuse, water or moisture damage, failure to follow instructions in the user's guide, failure to adhere to manufacturers recommendation's for placement and use, failure to adhere to manufacturer's recommendation's improper installation or maintenance,

any alteration or accidental damage, Acts of God (such as floods, or lightning) or excess voltage or current. damage due to any type of liquid or solid material, consumables such as batteries, wear and tear, or cosmetic damage, transportation, shipping or insurance costs, costs of product removal, installation, set-up service, adjustments or reinstallation, and claims by any other person other than original purchaser.

Should a problem occur that is covered by this limited warranty, RMD Technologies, LLC will, at its option, repair or replace the device.

RMD Technologies, LLC Expressly disclaims all warranties and conditions not stated in this limited warranty. Any implied warranties that may be imposed by law, including the implied warranty of merchantability and, if applicable, the implied warranty of fitness for a particular purpose, shall expire on the expiration of the stated warranty period. Except as described above, RMD Technologies, LLC shall have no liability or responsibility to the purchaser of the product or any other person or entity with respect to any liability, loss or damage caused directly or indirectly by use or performance of the product or arising out of any breach of this warranty, including, but not limited to, any damages resulting from inconvenience and any loss of time, data, property, revenue, or profit and any indirect, special, incidental, or consequential damages, even if RMD Technologies, LLC has been advised of the possibility of such damages.

This Limited warranty does not cover normal wear of parts, or damage resulting from any of the following negligent use or misuse of the product, use on improper voltage or current use contrary to the operating instructions, disassembly, repair or alteration by anyone other than RMD Technologies, LLC or an un-authorized service center, further the warranty does not cover damage from moisture, water, fire, flood, hurricanes and tornadoes, being dropped, crushed or damage from abuse.

RMD Technologies, LLC  
Headquarters Orlando Florida 32805  
[www.D-Mometer.com](http://www.D-Mometer.com)

RMD Technologies, LLC  
Headquarters Orlando Florida 32805  
[www.D-Mometer.com](http://www.D-Mometer.com)

## PRODUCT REGISTRATION

Customer Name \_\_\_\_\_

Customer Address \_\_\_\_\_

\_\_\_\_\_ Zip code \_\_\_\_\_

Customer Phone number \_\_\_\_\_ Customer Fax \_\_\_\_\_

Customer E-mail \_\_\_\_\_ Customer web site \_\_\_\_\_

Customer Shipping address \_\_\_\_\_

Model number \_\_\_\_\_ serial number \_\_\_\_\_

Model number \_\_\_\_\_ serial number \_\_\_\_\_

Model number \_\_\_\_\_ serial number \_\_\_\_\_

Model number \_\_\_\_\_ serial number \_\_\_\_\_

Model number \_\_\_\_\_ serial number \_\_\_\_\_

Model number \_\_\_\_\_ serial number \_\_\_\_\_

Please attach the proper information for additional products on separate papers.

Original date of purchase \_\_\_\_\_

Payment type (cash or credit card) \_\_\_\_\_

Customer Billing Name \_\_\_\_\_ phone # \_\_\_\_\_

Address \_\_\_\_\_ e-mail \_\_\_\_\_

Address products were installed \_\_\_\_\_

Please attach copy of original sales receipt or paid invoice.