



NEO J51-C8

INTEL MINI PC WITH

WINDOWS 11 PRO (64-bit) PRE-INSTALLED

English User Guide

Ultra Compact Jasper Lake Mini PC [Intel N5105 CPU]



Specifications

Processor	Intel N5105
GPU	Intel UHD Graphics
Memory	8GB DDR4 (upgradeable to 16GB)
Memory Slot	2 x SODIMM slot, support dual channel
Storage	Pre-installed 256GB NVMe SSD
Storage Expansion	1 x 2280 M.2 slot (M.2 PCIe Gen3)
Wireless Connectivity	Wi-Fi24G , Bluetooth 5.2
Operating System	Windows 11 Pro (64-bit)
Video Output	HDMI 2.0 (4K @ 60Hz), Mini DisplayPort (4K @ 60Hz), USB-C (4K @ 60Hz)
Digital Audio Output	HDMI 2.0, Mini DisplayPort
Analog Audio Output	3.5mm audio jack
Audio Input	3.5mm audio jack
Peripheral Interface	Dual RJ-45 2.5G Ethernet, USB 3.2 port x 2 (10Gbps), USB 2.0 x 1, USB-C port x 1, Kensington Lock ready
Power	DC 12V, 3A adapter (Included) or via USB-C input (DC 12V)


Contents



MINIX NEO J51-C8



12V (3A)
Power Adapter

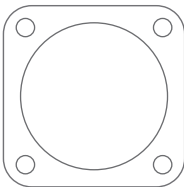

VESA Mount



HDMI Cable

Overview

Thank you for purchasing MINIX NEO J51-C8.

NEO J51-C8 is an ultra-compact mini desktop PC that packs an incredible amount of power, delivering optimal performance far beyond its small footprint.

Combining 256GB SSD pre-installed storage, 8GB of DDR4 memory and Windows 11 Pro (64-bit) ensures NEO J51-C8 is ready to run out of the box.

A small solution packed full of big ideas.

NEO J51-C8 can be easily mounted to a VESA compatible monitor, no tools are required for mounting once the included bracket has been installed.

More hints, tips and useful information can be found on the official MINIX Forum: www.theminixforum.com

Overview

Power LED - The LED glows blue when NEO J51-C8 is on.

Power Button - To power on the NEO J51-C8, press and hold the power button for 1-2 seconds until the power LED glows. To power off the NEO J51-C8, press and hold the power button for 8 seconds.

3.5mm Audio Jack - Connect an external audio input/output device such as microphone.

Dual 2.5G RJ-45 Ethernet Port - Connect an Ethernet cable for wired internet access up to 2.5Gbps.

DC 12V Power-in Jack - Connect the included 12V power adapter. NEO J51-C8 requires approx. 1A to operate, however the included power adapter provides 3A to ensure support for other external devices attached to NEO J51-C8, such as an external hard drive.

Overview

USB 3.2 Ports - Connect an external USB device to the NEO J51-C8 such as webcam, wired mouse or external hard drive.

HDMI Port - Connect the NEO J51-C8 via HDMI to a TV or PC monitor using included HDMI cable.

Mini DP Port - Connect the NEO J51-C8 via Mini DP to a PC monitor. Please note, an active adapter is required to convert Mini DisplayPort output to HDMI/DVI output.

USB-C Port - Connect the NEO J51-C8 via USB-C to a PC monitor. Please note, the USB-C port only supports video output, not audio output. The USB-C port does not support '*hot plugging*', a USB-C cable or adapter should only be connected/disconnected when NEO J51-C8 is powered off.

Control

You may control NEO J51-C8 via one of the following input methods:

1. Wired mouse and keyboard
2. Wireless/Bluetooth mouse and keyboard

We recommend using MINIX NEO W2.

Basic Setup

NEO J51-C8 connects to your TV or PC monitor via either a Mini DP, HDMI or USB-C port.

Mini DP and HDMI support both audio and video, USB-C only supports video output.

Step 1 (if required): Place VESA mount bracket onto monitor.

1. Insert screws and secure.
2. Safely attach NEO J51-C8 in any direction.

Step 2: Connect the HDMI cable.

Connect one end of the HDMI cable to the HDMI port on your TV or PC monitor, and the other end to the HDMI port on NEO J51-C8.

The HDMI, Mini DP and USB-C ports may be used separately or simultaneously; NEO J51-C8 supports up to 3 displays.

Basic Setup

Step 3: Connect to power supply.

Connect the 12V power adapter supplied in the package to NEO J51-C8.

Alternatively, NEO J51-C8 can be powered via the USB-C port. Compatible with certain USB-C equipped monitors. After connecting USB-C cable, wait approx. 5 seconds before powering on the NEO J51-C8.

Step 4: Power on.

Press and hold the power button for 1-2 seconds to power on NEO J51-C8, the blue power LED should then glow.

Step 5: Turn on TV/PC monitor and select the input.

Simply turn on your TV or PC monitor, and select the corresponding port connected to the NEO J51-C8.

USB-C Notes

The USB-C port supports 9V/2A, 12V/5A and 15V/3A power input. It does not support 20V/3.25A power input.

The USB-C port only supports 5V/3A power output.

ASUS MX27U and LG 27UD88 monitors are fully compatible with NEO J51-C8, a full list of compatible USB-C equipped monitors can be found on the MINIX Forum – www.theminixforum.com.

NEO J51-C8 is fully compatible with our range of USB-C accessories, including USB-C to USB-C cable [NEO C-MUC] and USB-C to 4K @ 60Hz HDMI cable [NEO C-4K].

Copyright © 2020 MINIX Technology Limited. All rights reserved.

No part of this guide, including the products and software described in it, may be reproduced, transmitted, transcribed, stored in a retrieval system, or translated into any language in any form or by any means, except documentation kept by the purchaser for backup purposes, without the express written permission of MINIX Technology Limited.

MINIX and the MINIX logo are trademarks of MINIX Technology Limited. All other marks and trademarks are properties of their respective owners.

The content of this guide may differ in some details from the product or its software.

All information in this documentation is subject to change without notice.



FCC warning:

Any Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.

- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. This equipment should be installed and operated with minimum distance 20cm between the radiator & your body.

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Contact Us

EMAIL: support@minix.com.hk

WEBSITE: www.minix.com.hk

MINIX FORUM: www.theminixforum.com

FACEBOOK: www.facebook.com/minixtech



<http://www.facebook.com/minixtech>

