

PASSIVE INFRARED and MICROWAVE COMBINATION DETECTOR

With PET IMMUNITY

With PET IMMUNITY&TAMPER

CE08910

N219

MX-40QZ MX-50QZ MX-40PI MX-40PT

FEATURES

- 40ft.x40ft.(12mX12m)Wide Angle [MX-40 Series]
- 50ft.x50ft.(15mX15m)Wide Angle [MX-50 Series]
- QUAD Zone Logic
- Patented Multi-focus Lens
- Improved Sealed Optics
- Temperature Compensation Logic
- Pet Immunity [MX-40PI/PT Only]
- (See Section 5 for Pet Immunity)

EASY INSTALLATION

- Easy Wiring Knockout
- Wiring Guide
- Spare Terminal [MX-40QZ/50QZ/40PT Only]
- Tamper Terminal [MX-40QZ/50QZ/40PT Only]
- D.L. Terminal [MX-40QZ(BE)/50QZ(BE) Only]
- Wide Wiring Space


FUNCTION

- Selectable Pulse Count(2 or 4)
- LED ON/OFF
- Tamper Switch [MX-40QZ/50QZ/40PT Only]
- Microwave Range Selector(LONG or SHORT)


OPTION

- FA-3 Wall & Ceiling Mount Bracket
- (Horizontally $\pm 45^\circ$ & Vertically 0° to 15°)

1. INSTALLATION HINTS

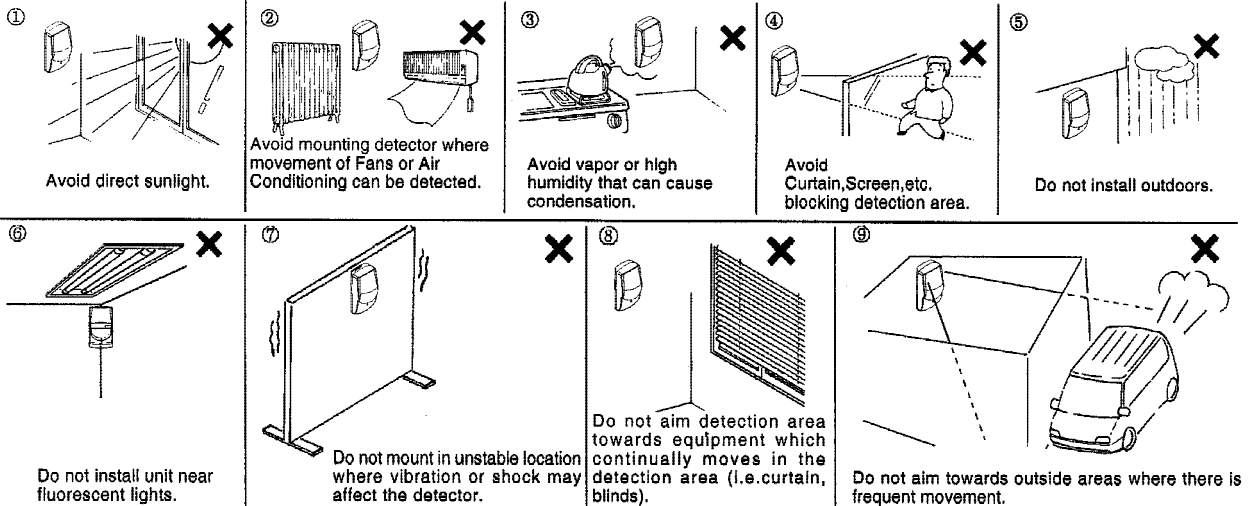

2. DESCRIPTION, OPERATION and DIMENSIONS

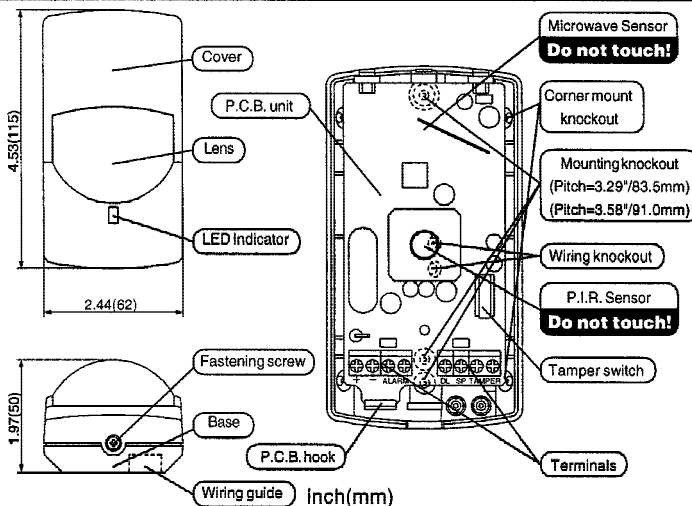


LED ON/OFF Use the pin switch for LED ON/OFF. 	PULSE COUNT Use the pin switch for Pulse Count Selection (2 or 4). 	EASY WIRING KNOCKOUTS Press firmly with a screwdriver to open. Enlarge the hole according to size of wire. 	MICROWAVE RANGE Select RANGE SELECTOR according to the room size. (SHORT or LONG)
D.L. TERMINAL (MX-40QZ(BE), MX-50QZ(BE) Only) LED can be enabled or disabled remotely from control panel by D.L. terminal. Place jumper pin switch in OFF position.			
LED Enabled 	Connect D.L. terminal to common ground (with detector).		
LED Disabled 	No ground to D.L. terminal (open circuit).		


3. DETECTION AREA

WIDE ANGLE

TOP VIEW

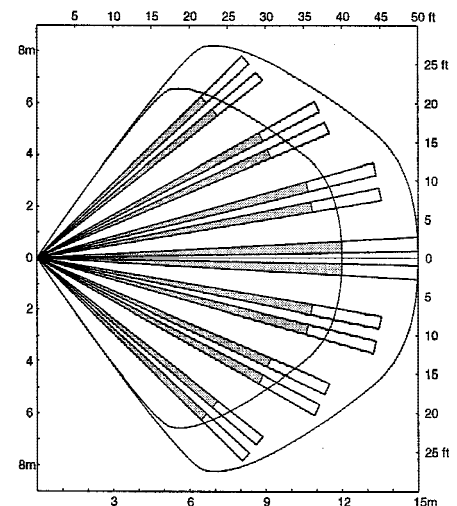


SIDE VIEW

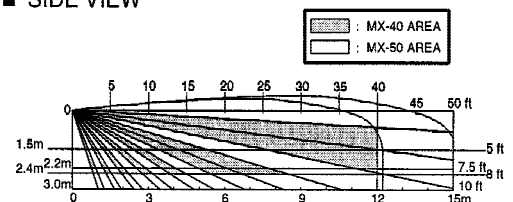

4. INSTALLATION

- Loosen fastening screw and remove cover.
- Release hook at bottom of P.C.B. unit. Remove P.C.B. unit from base.
- Route wires through knockouts along the wiring guide on the rear side of base. Mount base with supplied screws. When small animal immunity is required, refer to Section 5. When using a bracket, check matching knockout position before opening mounting hole.
- Wire according to Section 6.

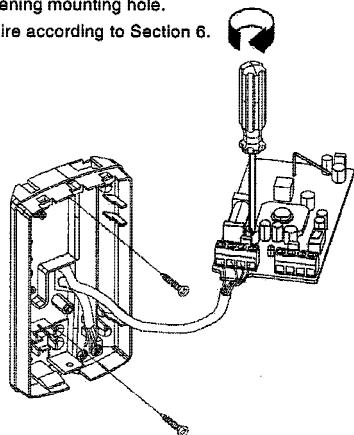


- Fix P.C.B. unit into base. Supply power. Allow 1 min. to warm up.
- Conduct walktest and make adjustments. (Section 2) Fit cover using fastening screw.

5. PET IMMUNITY (MX-40PI/40PT Only)

- Pet immunity is most effective on the following sized animals: Rodents = 0 to 4 inches high
Cats and small to medium sized dogs = 0 to 16 inches high at normal room temperature.
- Installation Instructions
 - Mount between 7 and 8 ft. (For better immunity, especially for medium sized dogs, mount as close to 8ft. as possible.)
 - Do not angle detector towards the ground or use the angle bracket. Mount flat on the wall or in the corner.
 - For best pet immunity, limit the detectors field of view to 30 ft. maximum in any direction.
 - For rodents
If any shelves within 15 ft. of the detector have a height that comes within 2.5 ft. below the mounting height of the detector and rodents can access these areas, pet immunity will be reduced. Please select mounting location of detectors carefully to avoid this situation.
 - For cats and dogs (16 inches in height or less at normal room temperature) When a dog jumps up on desks, the detector may detect it. Adjust detection area to avoid such places.
 - For cats
If there are cats, any shelves in the detection area will reduce pet immunity.
 - Pulse Count 4 is not required for Pet Immunity applications. Use 4 pulse only in harsh environment.

*These features have been tested by Underwriters Laboratories.

6. WIRING

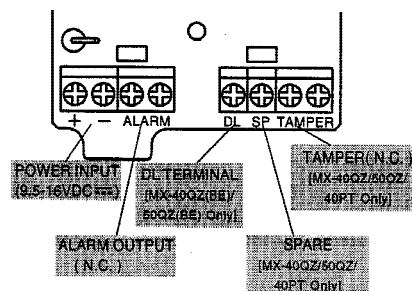

Power wires should not exceed the following lengths.

WIRE GAUGE	12VDC	14VDC
AWG 22 (0.33mm ²)	1070' (320m)	2140' (650m)
AWG 20 (0.52mm ²)	1700' (510m)	3400' (1020m)
AWG 18 (0.83mm ²)	2700' (820m)	5300' (1600m)

When using two or more units on one wire, the maximum length is obtained by dividing the maximum wire length listed above by the number of units used.

*UL requires MX-40QZ, 50QZ, 40PI, 40PT to be connected to a UL listed power supply capable of providing a nominal input of 12VDC, 20mA(max.) (at 12VDC) and battery standby time of 4 hours.

*The equipment shall be installed in accordance with the National Electrical Code, NFPA 70.

7. TROUBLE SHOOTING AND MAINTENANCE

PROBLEM	PROBABLE CAUSE	REMEDY
LED does not light.	Incorrect power supply voltage. (disconnection, low voltage)	Correct the voltage supply to 9.5-16VDC.
	Incorrect detection area.	See Section 3.
	LED switch is OFF.	Turn on the Switch. (See Section 2)
LED lights even though no person is within area.	Moving object within area. (curtain, wall hanging, etc.)	Remove object from detection area, or change location of detector.
	Rapid temperature changes within area. (heater, air-conditioner, etc.)	Remove the source from area, or change location of detector.
LED lights but signal is not sent.	Relay contact is stuck or damaged due to overloading.	Check load of output.
	Faulty wiring.	The unit needs repair or replacement. Wire correctly.

8. SPECIFICATIONS

MODEL	MX-40QZ/PI/PT	MX-50QZ
Detection method	Passive Infrared and Microwave	
Coverage	40ftx40ft (12mx12m) 85° wide	50ftx50ft (15mx15m) 85° wide
Detection zones	78 zones (PIR)	
Mounting Height	5-8ft (1.5-2.4m)	7.5-10ft (2.2-3.0m)
Sensitivity	3.6°F (2°C) at 2ft/sec (0.6m/sec)	
Detection speed	1-5ft/sec (0.3-1.5m/sec)	
LED Alarm Indicator	Switch-able ON/OFF	
Alarm period	Approx. 2.5 sec	
Alarm output	N.C., 28VDC, 0.2A max.	
Tamper switch	N.C., Open when cover is removed. (N.C., 28VDC, 0.1A max.)	
Pulse Count	Approx. 20 sec 2 or 4	
Warm-up period	Approx. 1 min	
Power input	9.5-16VDC	
Current draw	20mA (max.) at 12VDC	
Weight	3.9 oz (110g)	
Operating temperature	-14°F - +131°F (-10 - +55°C)	
Environmental humidity	95% max.	
Microwave Frequency	2.45GHz	
RF interference	No Alarm 20V/m	
D.L. Terminal	See Section 2	

*Specifications and design are subject to change without prior notice.

NOTE

This unit is designed to detect movement of an intruder and activate an alarm control panel. Being only a part of a complete system, we cannot accept responsibility for any damages or other consequences resulting from an intrusion. The following statement will be provided with the equipment as required by Article 6.3 of the R&TTE Directive, 1999/5/EC.

The Optex MX-40 and MX-50 are in conformity with all essential requirements of the R&TTE Directive (1999/5/EC). This equipment has been assessed to the following standards:

I-ETS 300 440: December 1995

ETS 300 683: June 1997

EN 60950: 1992, Incl Amdt 1-4, 11

This product is marked with **CE 08910** which signifies conformity with Class II product requirements specified in the R&TTE Directive.

The following table indicates the areas of intended use of the equipment and any known restrictions. For countries not included in this list, please consult the responsible Spectrum Management Agency.

Country of intended use	Restrictions
Austria	2.450GHz
Belgium	
Denmark	
Finland	
France	
Germany	
Greece	
Ireland	
Italy	
Luxembourg	
The Netherlands	
Spain	
Sweden	
United Kingdom	
Other non EU: Iceland	
Norway	
Switzerland	



OPTEX CO., LTD. (ISO 9001 Certified by LRQA)
4-2-6 Honshu-chu, 520-0801 Japan
TEL: (07)752-0447 FAX: (07)752-0022

OPTEX INCORPORATED
1640W, 20th Street Torrance, CA 90501-1510 U.S.A.
TEL: (310)930-1500 FAX: (310)933-9910

OPTEX (EUROPE) LTD. (ISO 9002 Certified by NQA)
Chiswell Road, Coddle's Park, Maidenhead, Berkshire, SL6 7BU U.K.
TEL: (01628)631000 FAX: (01628)630211

FCC Notice: This equipment has been tested and found to comply with the limits for a field disturbance sensor, pursuant to Part 15 of the FCC Rules. The user is cautioned that changes or modifications not expressly approved by OPTEX could void the user's authority to operate this equipment.