


15"

TFT LCD MONITEUR

HLM151XAR

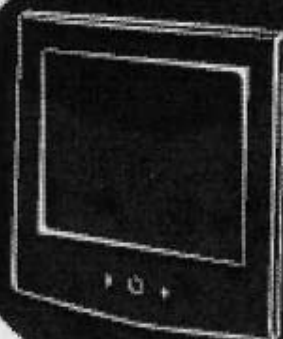

WOO YOUNG Telecom CO.,LTD.

FCC RF INTERFERENCE STATEMENT

NOTE :

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.


This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures.

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio, TV technical for help.
- Only shielded interface cable should be used.

Finally, any changes or modifications to the equipment by the user not expressly approved by the grantee or manufacturer could void the users authority to operate such equipment,


Contents



Before Setting up	3
Brief Specification of LCD Monitor	3
Precautions	4
Items	6
Setting up the LCD monitor	8
Where is a good place to position the monitor?	8
Check before connecting the power cord and the signal cable !!	8
How to connect the power cord and the signal cable to the LCD monitor.	9
Connecting Your LCD Monitor	9
Plug & Play	9
Warm-up Time	9
Adjusting The Monitor	10
The Function Control Buttons	10
How to use function control button	10
How to use the Hot Key.	11
Main OSD Menu	12
COLOR	13
USER COLOR	13
OSD POSITION	14

VIDEO	15
Appendix	17
Appendix A. Display Modes	17
Appendix B. 15-pin D-Sub Connector	17
Appendix C. DPMS Power Saving Mode	18
Troubleshooting	19

1 Before Setting up



This is 15 inch TFT-LCD monitor. Before Setting up the LCD Monitor, Please this manual read help your understanding ok.


Brief Specification of LCD Monitor

- Resolution : 15 inch XGA (1024 X 768 @60Hz)
- Color display : 16,777,216 colors
- DPMS (Display Power Management Signaling)
- OSD (On Screen Display)
- Auto Configuration : Hot key
- DDC 1/2B : Plug & Play
- Speaker : Max 4W [2W X 2W]


Notice

According to PC system, DDC 1/2B may not be supported. If you meet Display Error message, check your video card which compatibility with DDC. If you want to know more information, please contact our service center.


Precautions

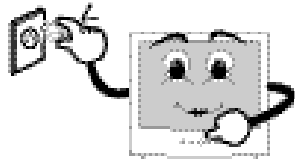


Check the voltage corresponds to the local electrical supply before connecting the AC power cord,

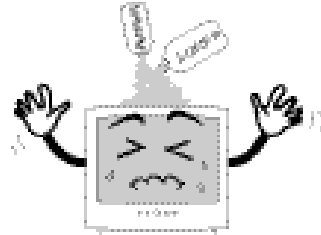


Do not use Ketone type material (ex. Acetone), Ethyl Alcohol, Toluene, Ethyl Acid or Methyl chloride, to clear the panel. It might permanently damage the panel.

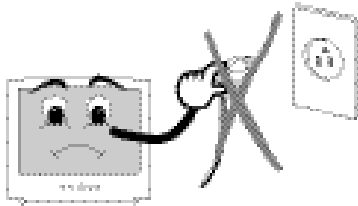

Never use the damaged AC power cord.

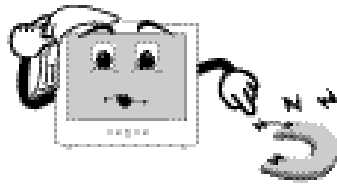


Keep it away from stoves, heaters, fireplaces and other sources of heat and magnets.

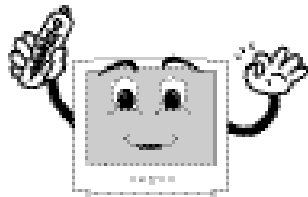


Don't put your LCD monitor in a location with high humidity and dust.
Temperature : 0~40 °C
Humidity : 90% less




Place the LCD monitor on a solid surface. If dropped, the screen can be damaged easily.

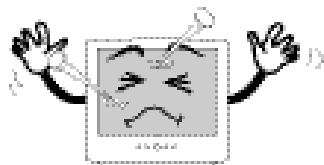

Don't touch the screen with a acute nail and pin

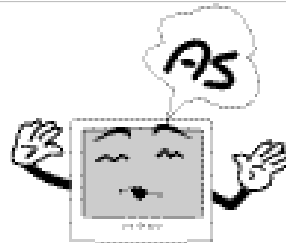


The LCD monitor consists of electrical devices.
If the LCD monitor is damaged, contact immediately
our service center.

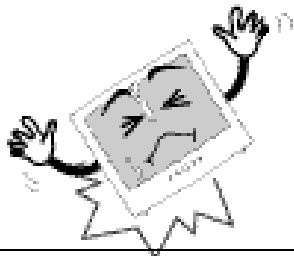

The LCD monitor can be damaged easily by shock.




If you don't use the LCD monitor for a long time,
unplug the LCD monitor.

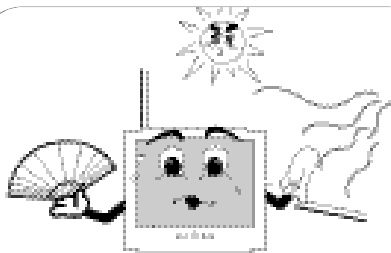

Don't use your LCD monitor in under direct sunlight.


2 Items

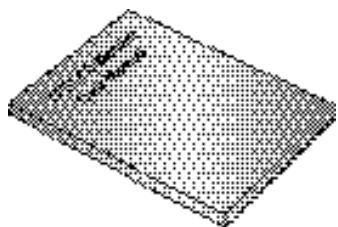

User Manual



LCD Monitor

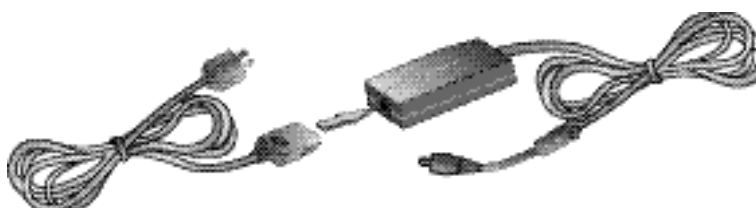

DC Adapter



15-pin D-Sub Signal Cable

Notice

Please make sure the following items are included with your monitor.

If any items are missing, contact your dealer.




RCA Cable




Audio Cable

3 Setting up the LCD monitor



Where is a good place to position the monitor? _____


Place the LCD monitor on a solid and flat surface. If dropped, the screen can be damaged easily.

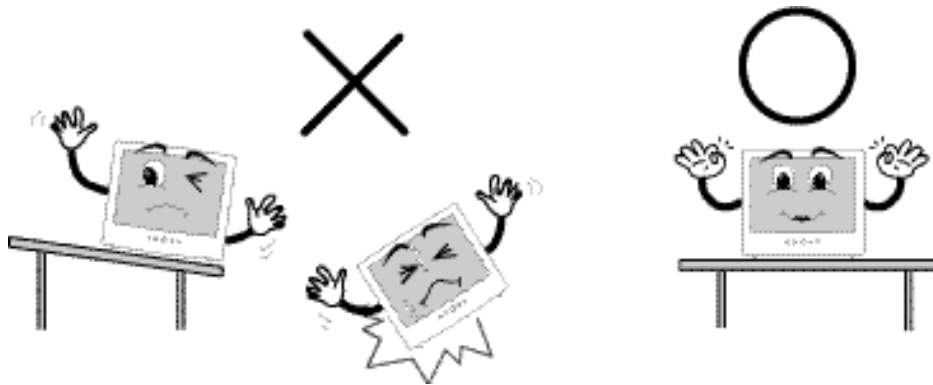

Check before connecting the power cord and the signal cable !! _____

Turn off the PC power before connecting power cord and signal cable to the LCD monitor.

How to connect the power cord and the signal cable to the LCD monitor.

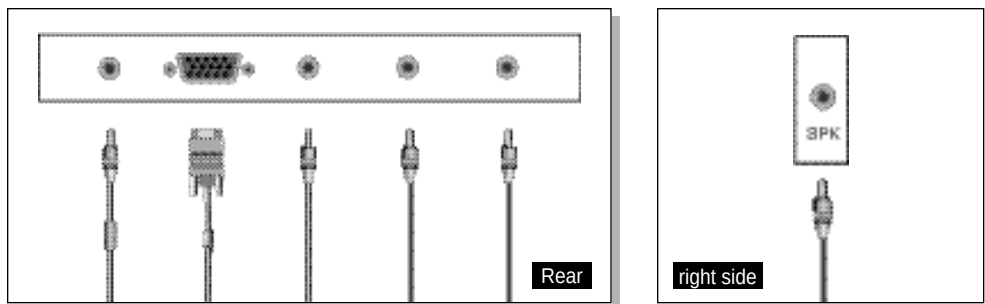

Connecting Your LCD Monitor

1. First, you can connect the power cord to the LCD monitor and AC outlet.
2. You can connect the signal cable to the LCD monitor and the PC system.
3. Connect with the audio cable from PC'S sound card to monitor's SPK jack.
4. Connect DVD or VCR cable to Video Jack (Video).
5. Connect the Audio cable to Audio Jack (Audio(R), Audio(L)).


Plug & Play

The adoption of the new VESA(Plug and Play solution eliminates complicated and time consuming setup. It allows you to install your monitor in a Plug and Play compatible system without the usual hassles and confusion. Your PC system can easily identify and configure itself for use with your display. This monitor automatically tells the PC system its Extended Display Identification Data (EDID) using Display Data Channel (DDC) protocols so the PC system can automatically configure itself to use the flat panel display.

Warm-up Time


All LCD monitors need time to become thermally stable whenever you turn on the monitor. Therefore, to achieve more accurate adjustments for parameters, allow the LCD monitor to be warmed up for at least 20 minutes before making any screen adjustments.

4 Adjusting The Monitor




The Function Control Buttons

The function control buttons for monitor are located on the bottom side of the LCD monitor.

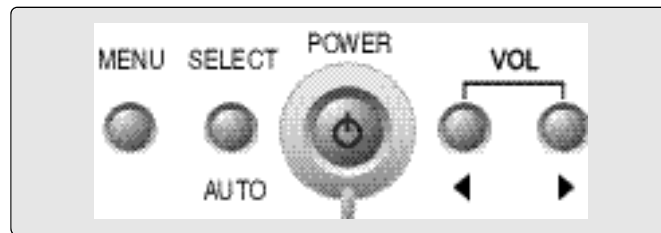

How to use the function control button.

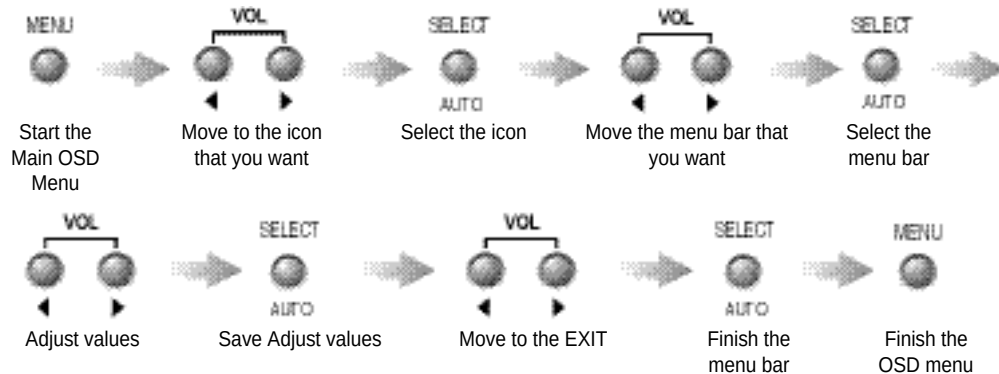


How to use the Hot Key. _____



AUTO

: When you push Auto button, this will optimize image quality automatically.



VOLUME


: When you push the Left/Right button, you can adjust the volume.

Notice

While menu displays on the screen, don't use hot key.
If you want to use hot key, you must finish the menu status.

Main OSD Menu


When you push the menu button, you can see below main OSD menu.

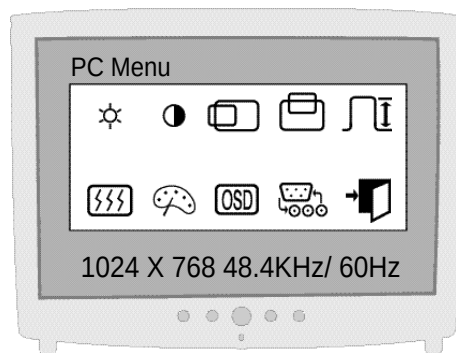

	Brightness : Adjusting Brightness
	Contrast : Adjusting Contrast
	H-Position : Adjusting Horizontal position
	V-Position : Adjusting Vertical position
	Clock : Adjusting Clock
	Phase : Adjusting Phase
	Color : Adjusting Color
	OSD function : H, V-Position, Language, off timer
	Select input : Select, Video1→Video2→S-Video→PC
	Exit Menu


COLOR

- The tone of color can be changed from bluish white to reddish white.
- Color1 - Blue type
- Color2 - Red type
- User Color - You can select the color.

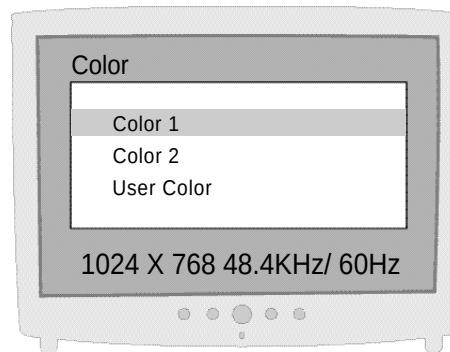


USER COLOR

- Red Gain / Green Gain / Blue Gain : You can adjust red, green and blue values that you want

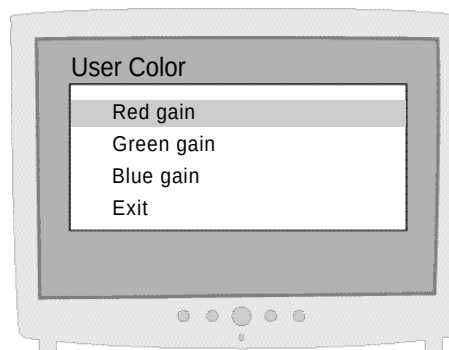


OSD FUNCTION

- Sets the OSD menu display position.
- H-Position : Moves the OSD menu to the horizontal direction.
- V-Position : Moves the OSD menu to the vertical direction.
- Language : Select OSD language. (English, Espanol, Francais, Deutsch, Italiano)
- Off timer : OSD display time.

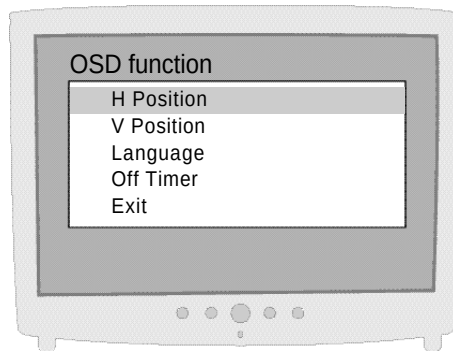


VIDEO

- Apply Video function to Monitor.

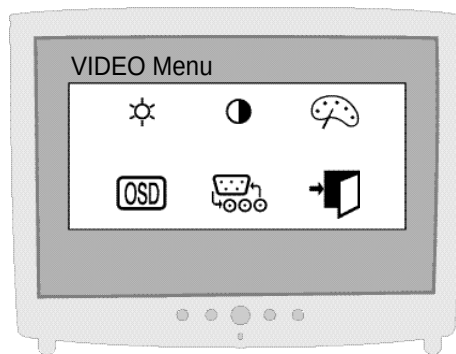

	Brightness : Adjusting Brightness
	Contrast : Adjusting Contrast
	Color : Adjusting Color
	OSD function : H, V-Position, Language, off timer
	Select input : Select, Video1→Video2→S-Video→PC
	Exit Menu

COLOR

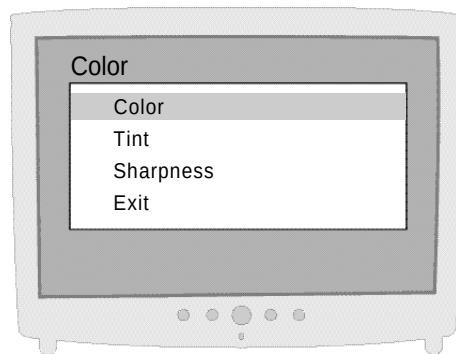


COLOR : Adjust color intensity of the VIDEO.

TINT : Adjust a color tone of the VIDEO.

SHARPNESS : Make image of the VIDEO looked sharper.

5 Appendix



Appendix A. Display Modes


Mode	Resolution	Horizontal Frequency (KHz)	Vertical Frequency (Hz)	Pixel Clock Frequency (MHz)	Sync Polarity (H/V)
VGA	720 x 400	31.468	70.087	28.322	-/+
	640 x 480	31.468	59.940	25.175	-/-
		35.000	66.670	30.240	-/-
		37.500	75.000	31.500	-/-
SVGA	800 x 600	37.879	60.300	40.000	+/+
		48.077	72.188	50.000	+/+
		46.875	75.000	49.500	+/+
XGA	1024 x 768	48.363	60.004	65.000	-/-
		56.476	70.000	75.000	-/-
		60.023	75.029	78.750	+/+

Appendix B. 15-pin D-Sub Connector

* Input signal : Analog RGB

* 15-pin D-Sub connector

Pin No.	Signal Name	Pin No.	Signal Name	Pin No.	Signal Name
1	Analog Red Input	6	Analog Red Ground	11	Ground
2	Analog Green Input	7	Analog Green Ground	12	DDC Data
3	Analog Blue Input	8	Analog Blue Ground	13	Horizontal Sync
4	Ground	9	No Connect	14	Vertical Sync
5	DDC Ground	10	Sync Ground	15	DDC Clock

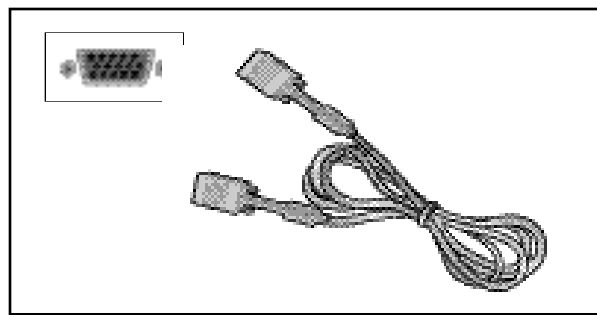


D-Sub

Appendix C. DPMS Power Saving Mode

This monitor has a built-in power management system called DPMS Power Saving Mode. This system saves energy by switching your monitor into a low-power mode when it has not been used for a certain period of time. The available modes are “ON”, “Standby”, “Suspend”, and “OFF”.

State	Signal			Power Consumption	Recovery Time	LED Color and Operating status
	H-sync	V-sync	RGB			
ON	Active	Active	Active	Under 30Watt	-	Green
Standby mode	Inactive	Active	Blanked	Less than 3Watt	Within 2 Sec	Amber
Suspend mode	Active	Inactive	Blanked			Amber
OFF	Inactive	Inactive	Blanked			Amber

6 Troubleshooting



What you see...	Suggested Actions
Screen is blank and power indicator is off	Ensure that the power cord is firmly connected and the LCD monitor is on.
"out of range" message	Check the maximum resolution and the frequency of the video adaptor. Compare these values with the data in the Display Modes Timing Chart.
"No signal input" message	Ensure that the signal cable is firmly connected to the PC or video sources. Ensure that the PC or video sources are turned on.
Image is not stable and may appear to vibrate	Check that the display resolution and frequency from your PC or video board is an available mode for your monitor. On your computer check : Control Panel, Display, Settings Note : Your monitor supports multiscan display functions within the following frequency domain: Horizontal frequency : 31~60KHz Vertical frequency : 55~75Hz Maximum refresh rate : 1024 X 768 @75Hz
The image is too light or too dark	Adjust the Brightness and Contrast. Refer to the Brightness/Contrast
The image color is not good	Adjust the Color Refer to the Color
Image is not centered on the screen	Executes Auto Configuration.
Screen is blank and power indicator light is steady amber or blinks every 0.5 or 1 seconds	The monitor is using its power management system. Move the computer's mouse or press a key on the keyboard.

MEMO

