



QT-AD10A15Transmitter

Description

This document describes the use of the QT-AD10A15A/C transmitter.

History

Rev 1	Original

QT-AD10A15TRANSMITTERFAMILY

Contents

QT-AD10A15 Transmitter Family	1
FCC Notices:	3
AD10 Transmitter Family	5
Introduction	5
Features	7
Performance.....	7
Design.....	7
Working with the AD10 Family	7
Out-of-the-Box Setup.....	7
Storage Mode.....	7
Standby Mode.....	8
Run Mode.....	8
Control and Configuration of Family	8
Adjusting Transmitter Parameters.....	8
Specifications	11
Input Connector Diagrams	11
Frequency Bands and Transmitter RF Power.....	12
LICENSING INFORMATION	12
Certifications	12

FCC Notices:

- **Information to users:**

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1.) This device may not cause harmful interference, and
- (2.) This device must accept any interference received, including interference that may cause undesired operation.

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: Wireless microphone users shall rely on the white space databases in part 15, Subpart H to determine that their intended operating frequencies are available for unlicensed wireless microphone operation at the location where they will be used. Wireless microphone users must register with and check a white space database to determine available channels prior to beginning operation at a given location. A user must re-check the database for available channels if it moves to another location.

Warning: Changes or modifications not expressly approved by Quantum5X Systems Inc, could void the user's authority to operate the equipment.

Warning: This Transmitter has been designed to operate with only the supplied integrated antenna or the supplied SSMA antenna for the 802.15.4 Radio. Replacing or modifying these antennas is strictly prohibited.

Innovation, Science and Economic Development Canada (ISED)

This device contains licence-exempt transmitter(s)/receiver(s) that comply with Innovation, Science and Economic Development Canada's licence-exempt RSS(s). Operation is subject to the following two conditions:

1. This device may not cause interference.
2. This device must accept any interference, including interference that may cause undesired operation of the device.

L'émetteur/récepteur exempt de licence contenu dans le présent appareil est conforme aux CNR d'Innovation, Sciences et Développement économique Canada applicables aux appareils radio exempts de licence.

L'exploitation est autorisée aux deux conditions suivantes :

1. L'appareil ne doit pas produire de brouillage;
2. L'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

Approved antenna and connectors

This radio transmitter IC:4614A-QTAD10A / IC:4614A-QTAD10C has been approved by Innovation, Science and Economic Development Canada to operate with the antenna types listed below, with the maximum permissible gain indicated. Antenna types not included in this list that have a gain greater than the maximum gain indicated for any type listed are strictly prohibited for use with this device.

Le présent émetteur radio IC:4614A-QTAD10A / IC:4614A-QTAD10C a été approuvé par Innovation, Sciences et Développement économique Canada pour fonctionner avec les types d'antenne énumérés ci-dessous et ayant un gain admissible maximal. Les types d'antenne non inclus dans cette liste, et dont le gain est supérieur au gain maximal indiqué pour tout type figurant sur la liste, sont strictement interdits pour l'exploitation de l'émetteur.

This device operates on a no-interference, no-protection basis. Should the user seek to obtain protection from other radio services operating in the same TV bands, a radio licence is required. For further details, consult Innovation, Science and Economic Development Canada's Client Procedures Circular CPC-2-1-28, [Voluntary Licensing of Licence-Exempt Wireless Microphones in the TV Bands](#).

Ce dispositif fonctionne selon un régime de non-brouillage et de non-protection. Si l'utilisateur devait chercher à obtenir une certaine protection contre d'autres services radio fonctionnant dans les mêmes bandes de télévision, une licence radio serait requise. Pour en savoir plus, veuillez consulter la Circulaire des procédures concernant les clients CPC-2-1-28, [Délivrance de licences sur une base volontaire pour les microphones sans fil exempts de licence exploités dans les bandes de télévision](#) d'Innovation, Sciences et Développement économique Canada.

Antenna / Connector Type	Manufacture	Connector Type	Max Gain
$\frac{1}{4}\lambda$ Wire Antenna	Q5X	MHF-4L	UHF 0 dBi, 2.45GHz 2dBi
SSMA $\frac{1}{4}\lambda$ Whip Antenna	Sam Woo Electronics	MHF-4L -SSMA	UHF 0 dBi, 2.45GHz 2dBi

AD10 Transmitter Family

Introduction

The AD10 transmitter family is made up of the following models;

QT-AD10 PlayerMic S

QT-AD10 PlayerMic

QT-AD10 AquaMic

QT-AD10 AquaMic L

QT-AD10 CoachMic

QT-AD10 RefMic

QT-AD10 RefMic HD

QT-AD10 BeltMic

QT-AD10 Incognito

QT-AD10 GolfCupMic

QT-AD10 tapshoeMic

QT-AD10 BouyMic

QT-AD10A15 Transmitter Family

AD10 series bodypack transmitters deliver impeccable audio quality and RF performance with wide-tuning, High Density (HD) mode, and encryption. The transmitter features durable metal construction, and single pin Lemo connector.

The Q5X remote control system is referred to as **RCAS, Remote Control Audio System**. Q5X pioneered wireless remote control for transmitters in 2009. Since this is a wireless control system, it will work through walls, clothing, uniforms, costumes, etc. and over longer distances than non-RF types of transmitter control systems on the market. RCAS consists of 4 main components;

- 1) a QT-AD10A15 series transmitter,
- 2) the MicControl software,
- 3) the QG-N3 MicCommander, a network enabled controller,
- 4) the QG-H2 MicCommander, a hand held remote control, with USB connectivity

The **QG-H2** MicCommander is a handheld, stand alone device used to control the QT-AD10A15 series of Q5X audio transmitters, such as the QT-AD10A15 PlayerMic. It can also control legacy QT-5000 transmitters. The QG-H2 allows the user to view, monitor and make adjustments to any QT-AD10A15 transmitter within the control range. It can monitor and/or adjust; the transmitter power state ON or OFF, RF power, UHF frequency, microphone muting and mic gain, groups, transmitter naming, and other operational parameters can be remotely configured using the QG-H2 without physical access to the transmitter.

The **QG-H2** can control up to 32 transmitters as a stand-alone device.

USB connectivity allows the **QG-H2** to be connected to a laptop or PC running Windows 7 and above. This connection allows the use of the **MicControl** software on the PC to control enhanced features of the transmitters including the ability to name transmitters. Naming transmitters makes it much easier to manage the system, for example instead of looking at a list of serial numbers like 10223 or 20567 you can now name them Player1 or Actor 2 or Joes Mic.

The **RCAS** system can also be networked and uses the network enabled **QG-N3** to remotely control the **QT-AD10A15** series of transmitters via **MicControl** software which can be installed on a Windows PC or laptop. Multiple QG-N3 units can be added to a network to manage large area installations. The **MicControl** software can control over 300 transmitters for larger installations.

The **QG-H2 MicCommander** operates independently from any other gateway or computer. It communicates one-to-one with each transmitter and allows access to all necessary settings through a simple interface. It can override any setting made by the **MicControl** software and vice versa.

The **QG-H2 and QG-N3** offer the following benefits:

- Eliminates the need to physically handle the transmitters after they are installed on the user.
- Remotely turn the transmitter's On/Off to conserve battery life when not in use.
- Provides the ability to change the frequency in the event of RF interference.
- Provides the ability to change the microphone's gain if the audio is too loud or soft.

Features

Performance

- 20 Hz to 20 kHz range with flat frequency response
- Automatic input staging optimizes gain setting
- AES 256-bit encryption-enabled for secure transmission
- >120 dB dynamic range
- 100 meter (300 feet) line-of-sight operating range
- Selectable modulation modes optimize performance for spectral efficiency
 - o Standard – optimal coverage, low latency
 - o High density – dramatic increase in max system channel count
- Built-in tone generator and RF markers to facilitate walk-testing
- Switchable Power Levels = 2/10/20mW (region dependent)

Design

- Single pin Lemo audio connector
- Rugged metal construction
- Flexible ¼ wave antenna

Working with the AD10

Out-of-the-Box Setup

Ensure the QT-AD10A15 has a sufficient charge level by first connecting a micro USB charger and check for charge level with a QG-N3 gateway or QG-H2MicCommander remote that the charge level is adequate for your intended use.

Storage Mode

When the AD10 Transmitter is in Storage mode the transmitter will be completely off and will not respond to any commands from the QG-H1 remote or QG-N3 gateway. If the transmitter was set to Storage mode, the only way to bring it out of storage mode is to connect the Transmitter to a usb charger to bring it out of storage mode.

If it was in this mode, as opposed to a battery run down condition, when you insert the charger it will wake up and report the battery level via the <Charge> LED. Depending on the charge level and how long it's been in storage it may be ready to use or may require some time on the charger if it's below your required battery level.

Standby Mode

In this mode the AD10 Transmitter is transmitting a 2.4 GHz heart beat every 1.5 second, and the Transmitter is not transmitting UHF audio. The Heart beat contains configuration data, such as current RF frequency, Output power, and Mic Off-set, and the heart beat also contains current status information such as battery level, Mute status and 2.4 GHz channel.

In standby Mode the Transmitter will respond to commands to change parameters, and to turn to the On or Run mode or Storage mode.

Run Mode

In this state the TX is transmitting UHF audio, and continuing to send 2.4 GHz heart beats every 1.5 seconds. In this state the Transmitter will respond to commands to change parameters, and to turn to the standby mode or storage mode.


Control and Configuration of AD10 Family of Transmitters

The QG-H2 is required to view, monitor and make adjustments to any QT-AD10A15 transmitter within the control range. It can monitor and/or adjust; the transmitter power state ON or OFF, RF power, UHF frequency, microphone muting and mic gain, groups, transmitter naming, and other operational parameters can be remotely configured using the QG-H2 without physical access to the Transmitter. Below is a brief outline of the basic functions and method for setting up and configuring the AD10 Transmitter. For a complete set of instructions please see the user guide for the QG-H2 Miccommander.


Adjusting Transmitter Parameters

The MicCommander is the user interface of the QT-AD10A15Transmitter. All user functions are controllable by the MicCommander or MicControl software. Below are the steps to control the Transmitter with the MicCommander. For details on how to control the Transmitter with the MicControl software please see the QG-N3 Network Gateway user manual.

To get started select a transmitter with the "ENTER" button to view or edit its setting. When selected, the menu on the left will appear, the menu on the right is accessed by selecting **Next>**

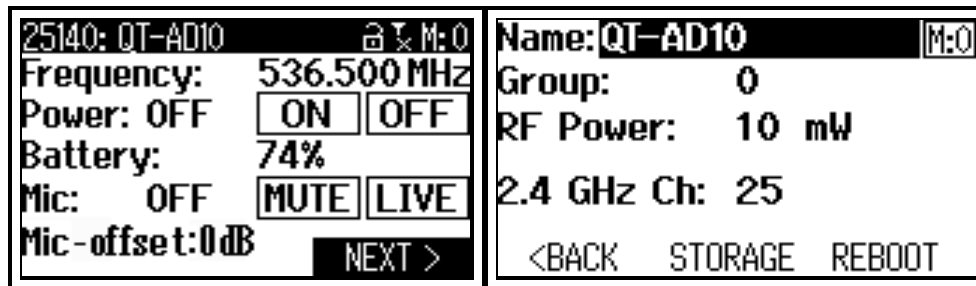

- Power either ON or OFF, this is the transmitter's power state and can be changed here.
- Frequency can be adjusted by moving the cursor to the value using the navigational arrows then pressing "ENTER" button. This will bring up the screen shown below on the left. To change the MHz values use the UP/DOWN arrows. To edit the frequency's kHz, press the "RIGHT" button to highlight them then use the "UP/DOWN" arrows again. The "ENTER" or "BACK" button can be used to save changes. Select "Save" to confirm or "Cancel" to cancel.




- Battery is the percentage of battery life remaining. The "CHG" to the left of the percentage denotes that the device is currently charging.
- Mic is the microphone state, either Live or Mute. Muting will turn the audio off and leave the transmitter on. This function can be used to override a muted mic such as the QT-AD10A15 RefMic with its integrated mute switch or to remotely mute a mic whenever required
- Mic Gain offset is used to match Audio Levels of different types of Microphones

When pairing two or more transmitters to a single receive channel, there may be a difference in volume levels between microphones or instruments. If this occurs, use the Offset function to match the audio levels and eliminate audible volume differences between transmitters. If using a single transmitter, set Offset to 0 dB.

Setting Gain off Set if needed

1. Turn on the first transmitter and perform a sound check to test the audio level. Turn off the transmitter when finished.
2. Turn on the second transmitter and perform a sound check to test the audio level. Repeat for any additional transmitters.
3. If there is an audible difference in the sound level between the transmitters, navigate to the Offset menu (Audio>Offset) in the transmitter to increase or decrease the Offset in realtime to match the audio levels.

- **Group** is the group number (1-16) to which the transmitter belongs, allowing it to be controlled with group commands (see **Group Commands** below). To change the group that the transmitter belongs to, select the transmitter, then the add it to the desired Group number. From here the number can be adjusted using the “UP/DOWN” arrows. Once satisfied, press “ENTER” or “BACK” button and select “Save” when prompted.
- **RF Power** is the power setting of the RF output of the transmitter. This can be adjusted by bringing up the menu below and selecting the desired value. A lower power level will conserve battery life.

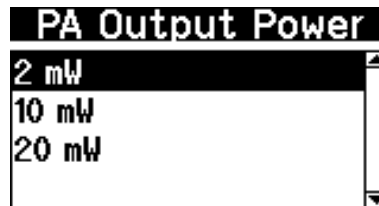

- **2.4 GHz Ch** the RCAS control channel default is 25, change this on the transmitter only if you are having control issues that can be seen when you have completed a 2.4GHz Spectrum scan. See **Device Configuration**, the **2.4 GHz Telemetry** section below for detailed instructions.
- **Storage Mode**, Will configure the QT-AD10 to it's off mode. This means none of the functions of the unit are running, and the unit is in effect off. To return the QT-AD10A15 to standby mode the on/off button needs to be pressed for 3 seconds or connected to a charger.
- **Reboot**, Will remotely cause the transmitter to do a power on reset. This will return the transmitter to a known state of operation.


Specifications

Encryption	AES 256 Encryption
Audio Frequency Response	20 Hz – 20 KHz
Mic Offset Gain Range	-12 to 21 dB (in 1 dB steps)
Pre-amplifier Equivalent Input Noise (EIN) System Gain Setting $\geq +20$	-115 dBV, A-weighted, typical
Maximum Input Level	1 kHz at 1% THD, 3dBv (5.0V)
Input Impedance:	8.2K with 5V Mic Bias
Audio Input Connector	Single pin Lemo connector, Lemo part number PCS.01.250.DLLE24Y
Occupied Bandwidth	<200 kHz
Channel-to-Channel Spacing	Standard Mode - 350 KHz High Density Mode - 125 KHz
Modulation Type	Shure Axient Digital Proprietary
RF Output Power	2 mw, 10 mw, 20 mw (Avg)
Antenna Type	1/4 wave
Antenna Impedance	50 Ohm
Housing	Machined Aluminum
Operating Temperature Range	-20°C to 50°C
Storage Temperature Range	-20°C to 45°C

Package Size

	Dimensions [HxWxD]	Weight
PlayerMic S	11.5 mm $\times$ 41.5 mm $\times$ 74.5 mm (.45 in $\times$ 1.6 in $\times$ 2.9 in)	48.7 g (1.72 oz.)
PlayerMic	11.5 mm $\times$ 41.5 mm $\times$ 93.5 mm (.45 in $\times$ 1.6 in $\times$ 3.68 in)	60.6 g (2.14 oz.)
AquaMic	19.0 mm $\times$ 46.0 mm $\times$ 65.0 mm (.75 in $\times$ 1.8 in $\times$ 2.55 in)	104 g (3.67 oz.)
AquaMic L	23.0 mm $\times$ 46.0 mm $\times$ 65.0 mm (.90 in $\times$ 1.8 in $\times$ 2.55 in)	116.5 g (4.10 oz.)

Input Connector Diagrams

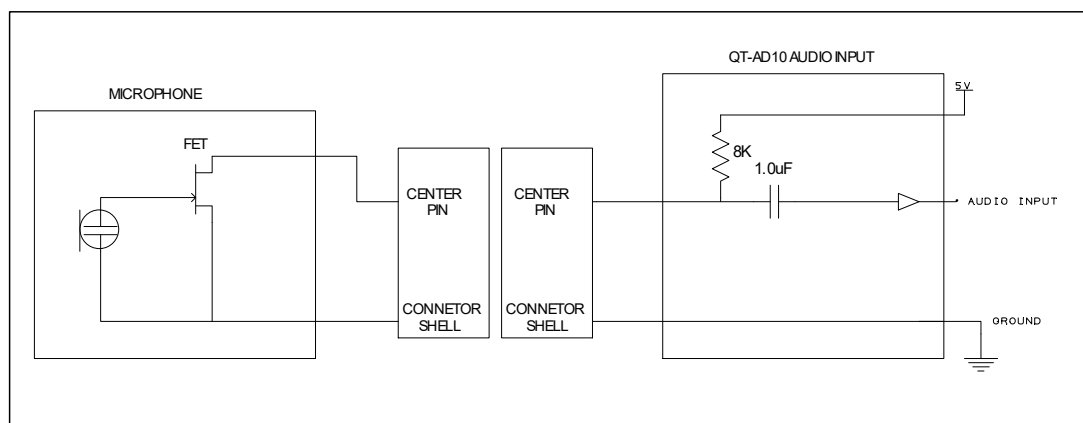

Frequency Bands (Depends on model)

Band	Frequency Range (MHz)
G56	470 to 636
G57	470 to 616*
K55	606 to 694
X55	941 to 960

*with a gap between 608 to 614 MHz.

**with a gap between 608 to 614 MHz and a gap between 616 to 653 MHz.

*** Refer to the corresponding FCC/ISED Grants for details of frequencies authorized for use.

LICENSING INFORMATION

Licensing: A ministerial license to operate this equipment may be required in certain areas. Consult your national authority for possible requirements. Changes or modifications not expressly approved by Q5X could void your authority to operate the equipment. Licensing of Q5X wireless microphone equipment is the user's responsibility, and listenability depends on the user's classification and application, and on the selected frequency. Q5X strongly urges the user to contact the appropriate telecommunications authority concerning proper licensing, and before choosing and ordering frequencies.

Certifications

Certified under

[FCC Part 15, Subpart C, section 15.247](#)

Certified by ISED in Canada under.

RSS-210 and RSS-247 *IC:4614A-QTAD10A*

Meets essential requirements of the following European Directives:

- WEEE Directive 2012/19/EU, as amended by 2008/34/EC
- RoHS Directive EU 2015/863

NOTE: Note: Please follow your regional recycling scheme for batteries and electronic waste

This product meets the Essential Requirements of all relevant European directives and is eligible for CE marking.