


Front / Rear / Side View

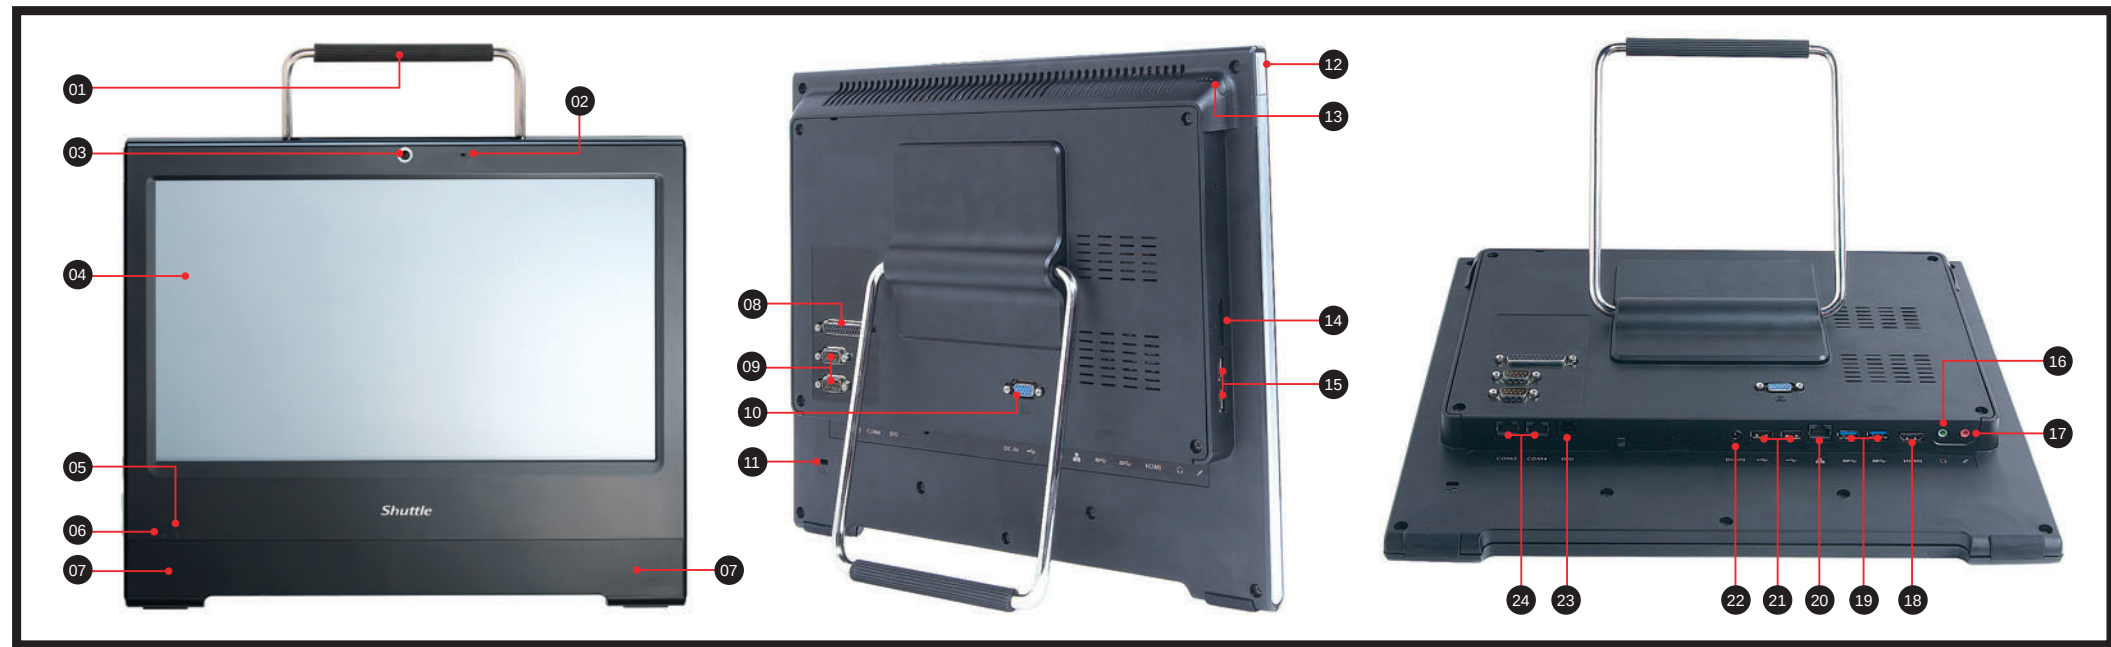

- 01 Stand / Handle

02 Microphone

03 Webcam

04 LCD Display (Single Touch)

05 Hard Disk Drive LED

06 Power LED

07 Stereo Speakers

08 Printer Port (Optional)
- 09 COM1 and COM2 Ports (Optional)

10 VGA Port

11 Kensington® Lock Port

12 Power Button

13 Stylus Pen

14 SD Card Reader

15 USB 2.0 Ports

16 Headphone / Line-out Jack
- 17 Microphone Jack

18 HDMI Port

19 USB 3.0 Ports

20 LAN Port

21 USB 2.0 Ports


22 DC In

23 RJ11 DIO Port for Cash Drawer (Optional)

24 COM3, COM4 over RJ45 (Optional)


Placing on the desk

- To place the machine on the desk and to carry it, do the following:
Place the X50V5 on a flat surface such as a table (Picture 1), and pull the stand upwards to an angle of 30° (Picture 2). To carry or move your X50V5 fully extend the angle to 180° (Picture 3).

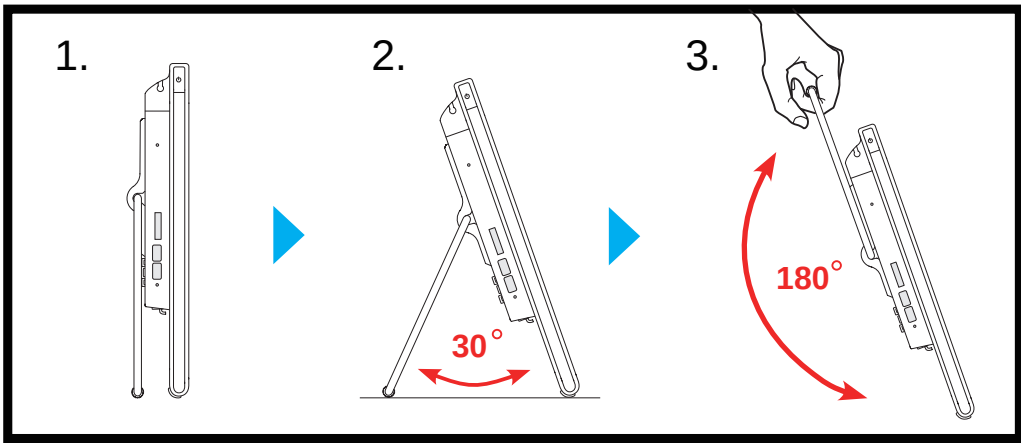

Powering on the system

- Follow the steps (1~3) below to connect the AC adapter to the "DC-IN jack". Press the "Power Button" to turn on the system.

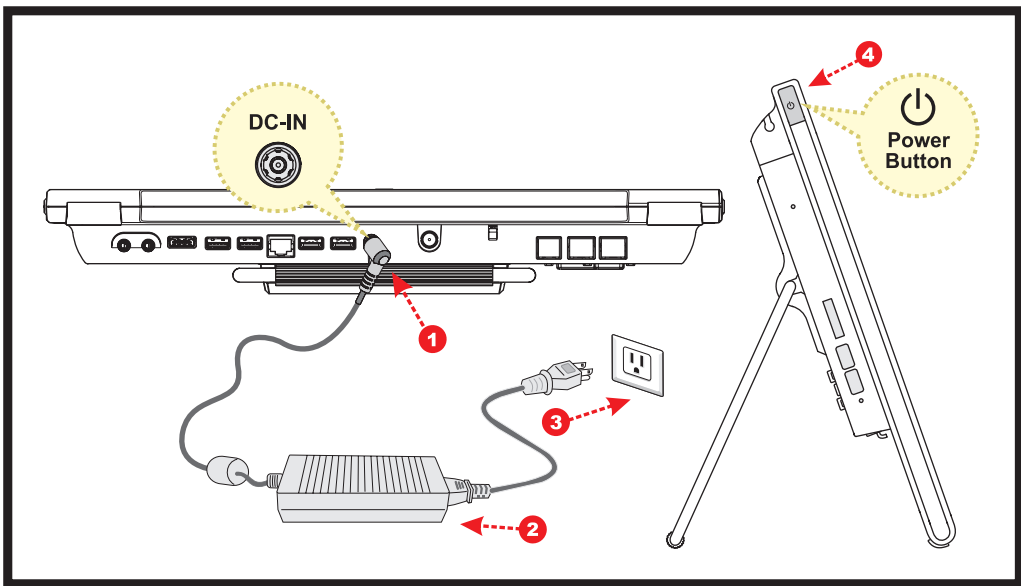


Cleaning the screen

- Follow these guidelines for cleaning the outside and handling the screen of the computer:
Turn off the system and disconnect all cables.
Use a damp, or cleaning cloth, soft, lint-free cloth with gentle water only and gently wipe the screen surface.


How to use the Touch Panel

- X50V5 brings digital life for an easy touch experience. Experience the ease of managing your digital life with a few touches or the use of the stylus pen. The touch of your finger replaces the mouse and is all you need to interact with the X50V5.

- Touch = left-click on the mouse
- Touch and hold = right-click on the mouse

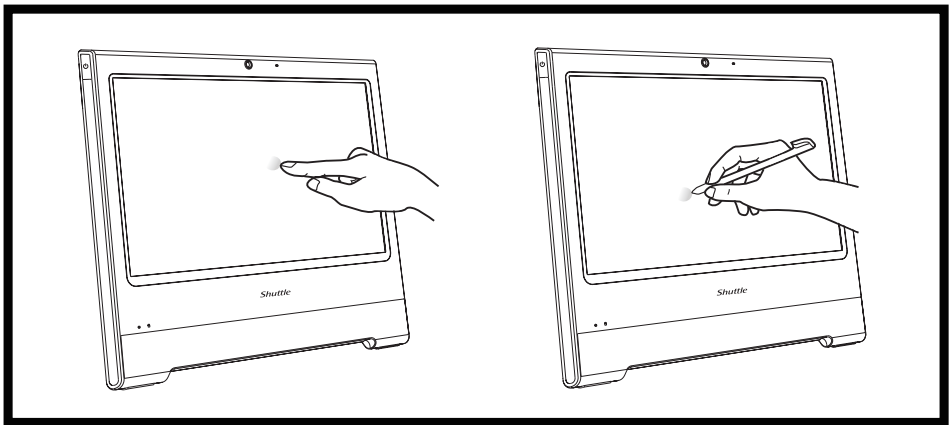


VESA mounting it to the wall

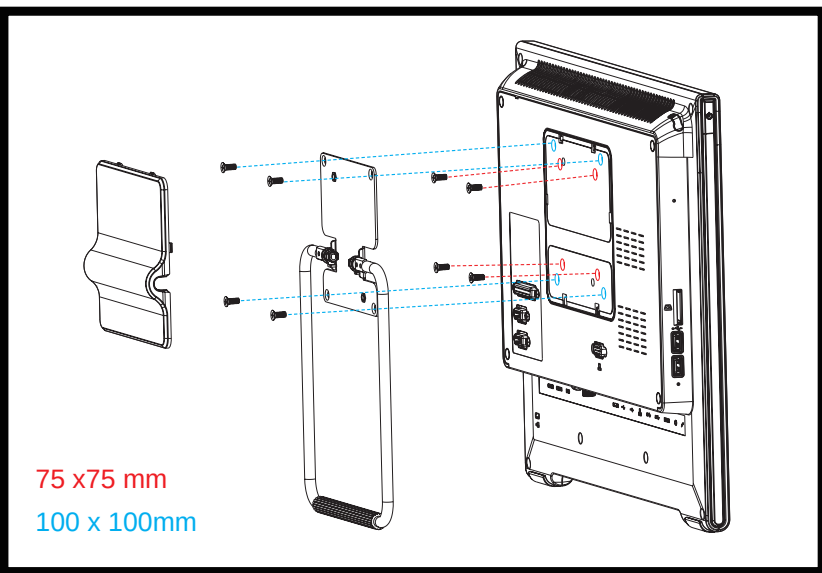

- If you are mounting your X50V5 to the wall, remove the cover on the back of the X50V5 first.
Unscrew four screws of the stand mount and remove the stand.
The VESA standard lets users mount it on to walls easily.
Please refer to the user guide of the wall/arm mount kit you bought to install it.
Note : The X50V5 can be mounted to a wall using a VESA compatible 75 x 75 mm or 100 x 100mm wall/arm bracket.


A. Begin Installation

- For safety reasons, please ensure that the power cord is disconnected before opening the case.
- 1. Remove the cover on the back of the X50V5 first, unscrew four screws of the stand mount and remove the stand.

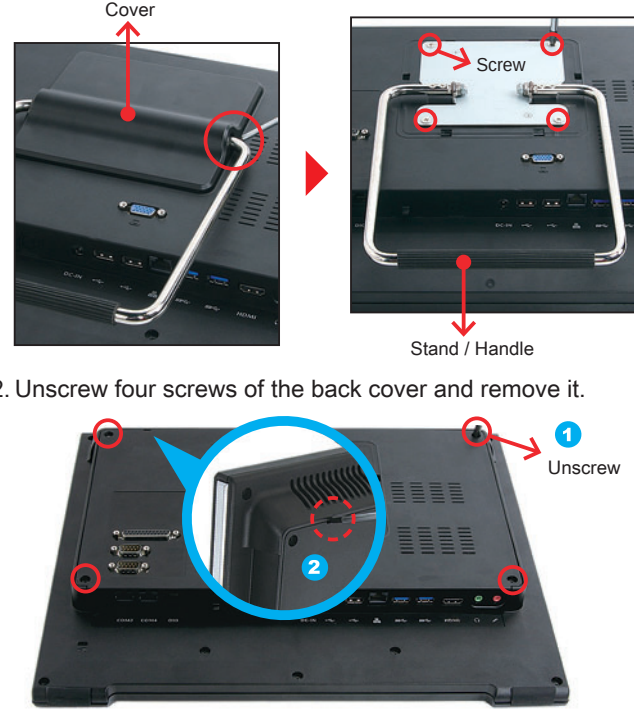


B. HDD or SSD Installation

- Unscrew four screws of the bracket and remove it.
- Mount the HDD or SSD into the bracket with four screws.

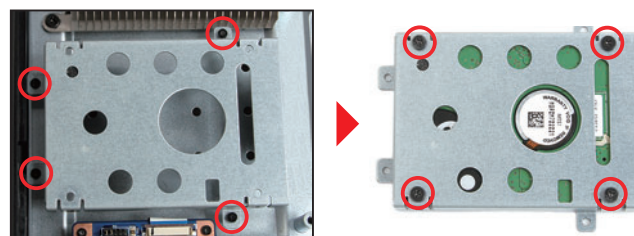


- Connect the Serial ATA and power cable to the HDD or SSD.

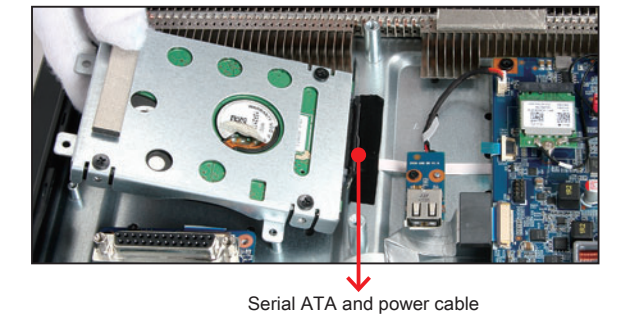

4 Point Calibration (CD-ROM drive install)


- Run the screen calibration program and correct 4 point locations on screen with the panel.
Click Start / All Programs / eGalax Touch / Configure Utility
Select [Tools] tab and click [4 Points Calibration]

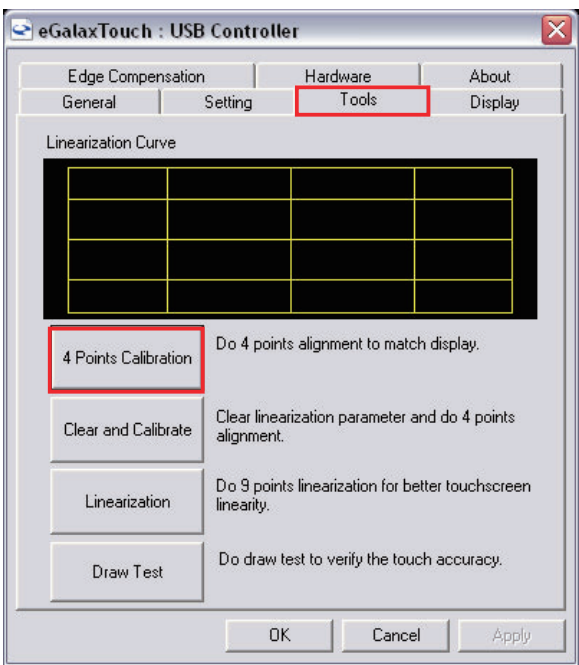

Safety Information

- Read the following precautions before setting up a Shuttle X50V5.
CAUTION
Do not walk on the power cord or allow anything to rest on it.
Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type recommended by the manufacturer.
Dispose of used batteries according to the manufacturer's instructions.

- Install the HDD or SSD & bracket in the chassis and tighten the HDD or SSD & bracket with four screws.

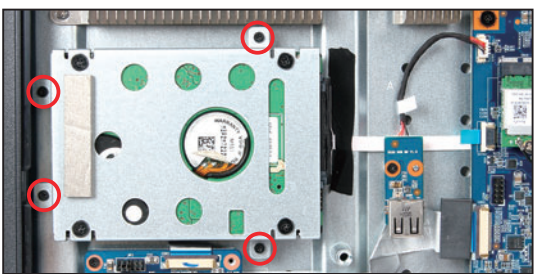


C. Memory Module Installation

- This mainboard does only support 1.35V DDR3L memory modules.


- Locate the SO-DIMM slot on the mainboard.
- Align the notch of the memory module with the one of the memory slot.
Use DDR3L SO-DIMM
- Gently insert the module into the slot in a 45-degree angle.
- Carefully push down the memory module until it snaps into the locking mechanism.

D. Component Installation

- As shown, unfasten the screw first.

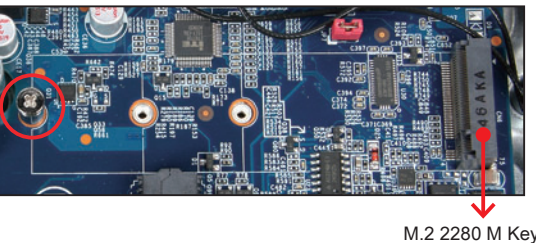


- Install the M.2 device into the M key slot and secure with the screw.

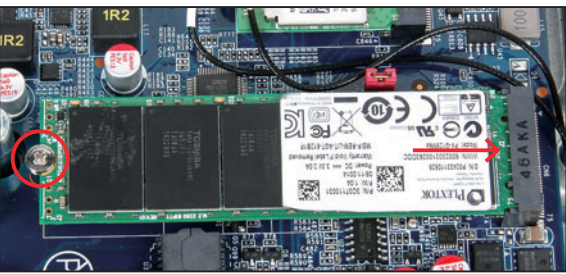


E. Complete

- Replace the back cover.

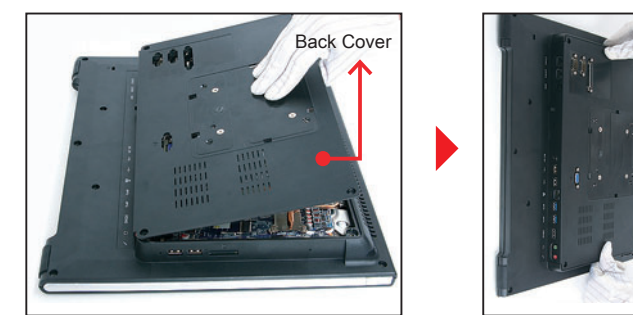


- Refasten the stand and the back cover with eight screws.

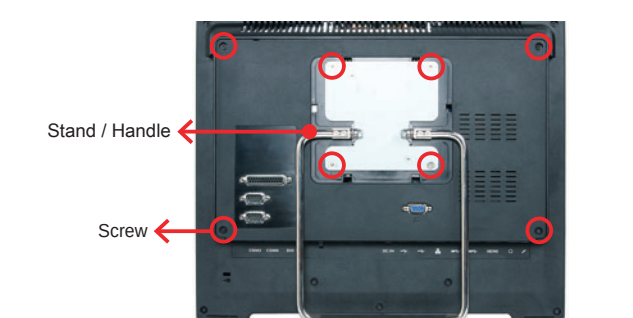

- Replace the cover, complete.



- Touch and hold the center of the target.
Repeat on four corners and the screen will adjust automatically.
When the 4 points calibration completed, press "OK" to continue.

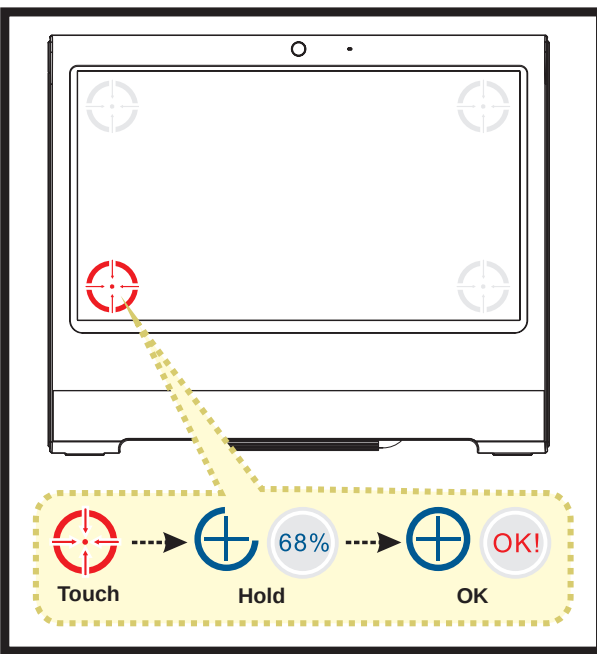

Model: X50V5 FCC ID : S8C-X50V5
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES.
OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS:
(1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE AND
(2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED,
INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.
Made in Taiwan Brand Name: Shuttle