


With time 2.4G/Bluetooth Wireless Barcode Scanner

User 's manual

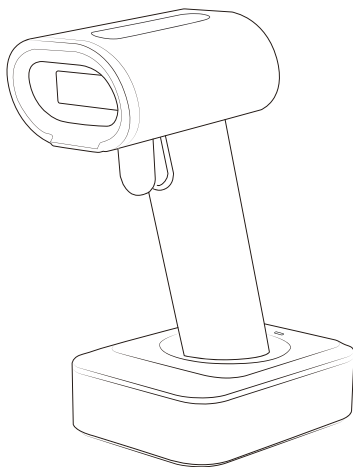

BROCHURE

Notices

1. Please read the user manual carefully before using this product.
2. The working voltage of this barcode scanner is 3.3V, charging voltage 5V. Please use our original USB cable to ensure the scanner work properly.

3. Copyright and Patent Right

Our company has applied for patent rights, copyrights and software copyrights for this product and its accessories(including hardware, setting software, documentations,appearance,etc.)

4. OThe company reserves all rights and the company reserves the right to make any changes to the product to improve its reliability, improve its function or design. The company shall not be responsible for any product liability related to or arising from the application or use of any products, circuits, or other applications described herein.

5. Package Includes:

Standard Package: : Barcode scanner (1 piece),
WIFI dongle (1 piece),
USB cable (1 piece),
User manual (1 piece).

Optional Accessory: Base

Optional Function: Vibration

6. The contents of this manual are subject to change without prior notice.

Contents

1.Notices.....	1
2.Introduction&Features.....	3
3.Application&Parameters.....	4
4.Working Environment&Related Regulations.....	5
5.Outside Introduction.....	6-8
6.Connections Introductions.....	9-10
7.Initialization Settings&Version Information.....	11
8.BluetoothPairing Method.....	11
9.Pull up/Hide keyboard(IOS system)&Caps Lock Switch&Caps Lock Switch..	12
10.2.4G Wireless Pairing Method.....	13
11.Sound/Vibration Setting.....	14
12.Sleep Time Setting.....	14
13.Ending Character Setting.....	15
14.Keyboard Language Setting.....	16-17
15.Transmission Speed Setting&Bluetooth Protocol.....	18
16.Working Modes.....	19-20
17.Change Bluetooth Name.....	21
18.Hide Pre-characters/Post-characters.....	22-23
19.Add Time As Prefix or Suffix&Update Time.....	24-25
20.Prefix/Suffix Setting.....	26-27
21.2.4G Wireless COM-Port Mode Setting.....	28
22.Enable/Disable HID Searching by Pressing Scan Button 8S Settings.....	28
23.2.4GHz Wireless Transfer Speed Settings.....	29
24.AppendixA:Controlled Characters.....	30-32
25.AppendixB:Displayable Characters.....	33-36
26.FAQ (Frequently Asked Questions)	37
27.Buzzer description.....	38
28.LED indicator.....	38

Introduction

Our company's barcode scanner series are with strong scanning light source and enhanced long distance scanning technology, making it possible for long distance fast scanning capability for damage, dirty and poor quality printed barcodes under various ambient light conditions.

It is durable in use, since it is protected by the industrial safety technique. High volume buzzer is another hint of success scanning besides LED light.

Features

Wired , wireless and bluetooth triple-mode freely switching.

Large capacity storage, safe and reliable.

Stores barcodes more than 50000pcs off-line scanning.

Unique power management system, ultra-long standby time.

Rich symbologies supported Adopting imported trigger button, long lifespan, fitting perfectly in your hand for comfortable use.

Support Android/IOS devices/Windows Support HID、SPP、BLE protocol.

Mini size, fashion design, and portable.

Ultra low power consumption and standby time setup available.

2.4G transmission distance: up to 100 meters in open areas

Bluetooth transmission distance: indoor transmission distance up to 15 meters.

Support upload data and charge the battery via USB cable at the same time.

Application

- * Applicable to Business (electrical, book, clothing, medicine, cosmetics, etc.), retail industry, postal service, telecommunications industry, warehousing, logistics industry, public security system, customs systems, banking system, medical system.
- * Compatible with Microsoft, Android, Linux and other operating systems.
- * Multi-national keyboard language

Parameters

Wireless protocol: bluetooth 2.4G

Memory: 16Mb

Processor: ARM Cortex 32bits

Bluetooth version: Bluetooth 4.1Module

Supported symbologies: 1D: Codabar, Code 11,

Code93, MSI, Code 128, UCC/EAN-128, Code 39, EAN-8,

EAN-13, UPC-A, ISBN, Industrial 25, Interleaved 25,

Standard 25, 2/5 Matrix,

2D: QR, DataMatrix, PDF417, Aztec, Hanxin ,

Micro PDF417(option)

Indicator: Led、 Buzzer、 Vibrator(option)

Battery capacity: 1800mA

Charging voltage/current: 5V/1A

Endurance: 1D ≤ 24H 2D ≤ 16H (5seconds/scan)

Charge time: ≤ 4hours

Standby: >30days

Working Environment

Working Temperature: 32° F to 104° F / 0° C to 40° C

Storage Temperature: -40° F to 140° F / -40° C to 60° C

Humidity: 5% to 95% relative humidity (no condensation)

Ruggedness: Resist about 6 times drops from 1.5m to concrete ground

Ambient Light Immunity: Under normal office and factory ambient lighting conditions, or exposed to the sun won't take any effect to it.


Electrostatic discharge: In line with 15KV air discharge and 8KV contact discharge requirements

Related Regulations

Electrical safety: In accordance with UL1950、CSA C22.2 No.950、EN60950/IEC950 EMI/RFI:FCC Part 15 Class B、European Union EMC Directive、Taiwan EMC、

Environment Terms: In accordance with RoHS directive 2002/95/EEC

Outside Introduction

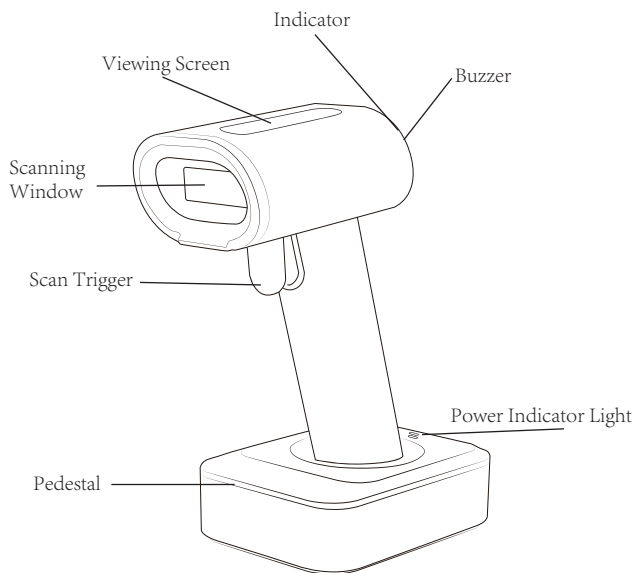

Discription of Viewing Screen



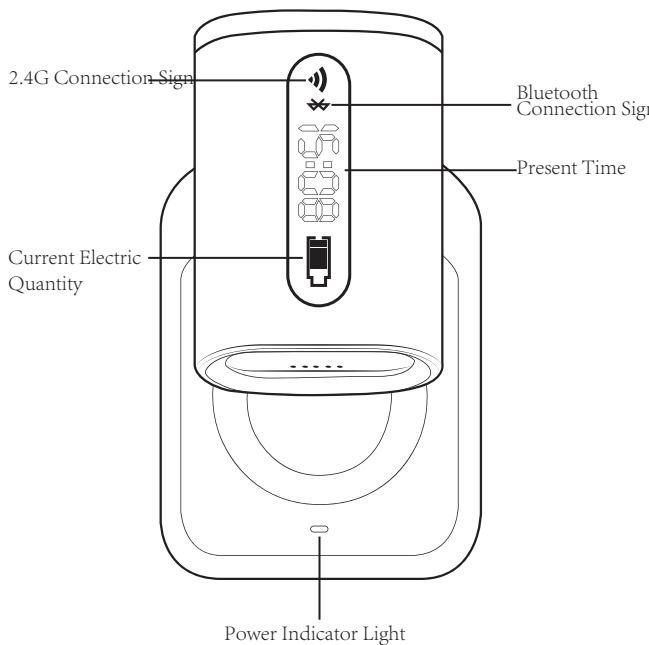


diagram of base side(Option)

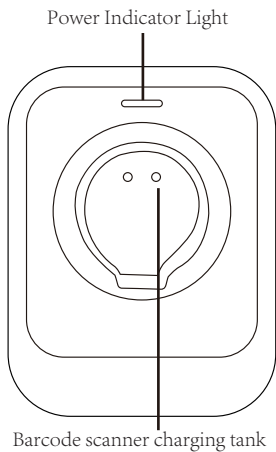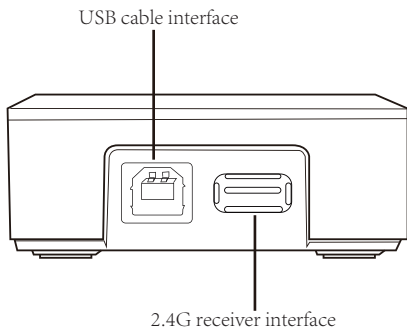


Connections Introductions

Use scanner alone :


A: When using 2.4G feature,you can match desktop PCs or PC terminals that do not support Bluetooth.Scanner supports systems such as XP, Win7, Win8, Win10,etc.

(Please refer to page 13th for specific pairing steps)

B: When using Bluetooth, you can match Android, IOS mobile phones, or PC terminals with bluetooth capabilities.(Please refer to page 11th for specific pairing steps)

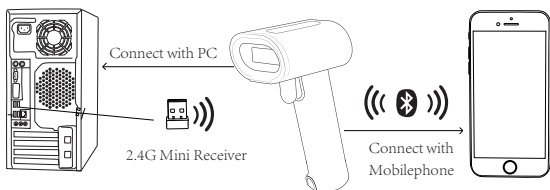


C: Plug in the data cable with the USB end connected to the computer, you can charge the scanner and use it as wired scanner synchronously

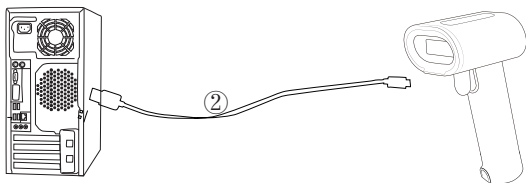

Use scanner with pedestal together :


A: A:Charge the base: Connect base with PC via USB cable, the base will work as a charger. When turn off the scanner and put it on the base, the base can charge the scanner. (Bluetooth and 2.4G mode available)

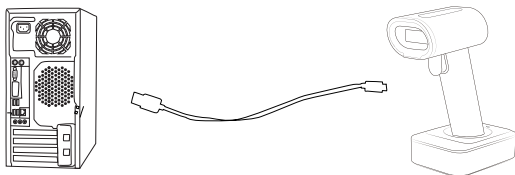

B: Base charges and transfers data synchronously: When base connected to USB cable, the other end is plugged into computer,

①. Plug the mini receiver into computer USB port, so that it can pair with computer and upload the data to computer. The base is used as charger

②. Plug the mini receiver into base USB port, so that it can pair with computer and upload the data to computer. The base is used as charger and data transmission tool. This method can solve the problem of lack computer USB interfaces. (Apply for 2.4G mode only)

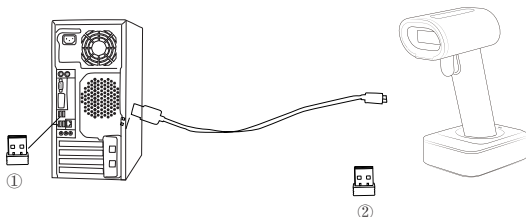

Initialization Settings&Version Information

A: You can scan the setting code “Initialization Settings” to make the scanner back to factory default settings

B: If you have after-sales problems and need to contact our customer service staff, please provide version information by scanning setting code “Version Information”



Initialization Settings



Version Information

BluetoothPairing Method

A: Long press the trigger for 8 seconds or scan the HID Pairing Setting Code to make the scanner entering Bluetooth pairing state, then the two blue lights flash alternately left and right.



Bluetooth Pairing Setup Code

B: Turn on Bluetooth searching in the user's device, find Bluetooth scanner 'Barcode scanner HID' and click on to start the pairing state. After a beep prompt sound, the scanner is paired successfully, and the blue light on the right is always on.

Notes: When the scanner is entered bluetooth pairing status and it does not get connected with your device within 1 minutes,it will beep twice lowly and longly.You need to repeat above-mentioned 3 steps to make it connect with you device.(When the scanner is in the bluetooth pairing status, double-click can make it exit the pairing mode).

Pull up/Hide keyboard(IOS system)& Caps Lock Switch



Pull up/Hide IOS keyboard



Double-Click to Pull up IOS keyboard



Double-Click to Hide IOS keyboard

Caps Lock Switch



All Lowercase



All Uppercase



Do not convert case



Case Interchange

2.4G Wireless Pairing Method:

A: Scan the setting code of Dongle.



B: Scan the setting code Forced Pairing with Dongle, The scanner will enter pairing state, and the blue light on the left flashes quickly.



C: Insert Dongle into the device, after a beep prompt sound, the scanner is paired successfully, and the blue light on the right is always on.

Notes: When the scanner is entered 2.4G pairing status and it does not get connected with your device within 1 minutes, it will beep twice lowly and longly. You need to repeat above-mentioned 3 steps to make it connect with you device. (When the scanner is in the 2.4G pairing status, double-click can make it exit the pairing mode).

Sound/Vibration Setting



Sound OFF



Sound ON



Vibration OFF(optional)



Vibration ON(optional)

Sleep Time Setting



1 min



5 min



10 min



30 min



Never Sleep



Sleep Immediately

Ending Character Setting



Add CR(Carriage Return)



Add LF(Linefeed)



Add CR+LF



Cancel CR+LF



Add TAB

Keyboard Language Setting



English(USA)



French



Italian



International Universal Keyboard



Portuguese



Portuguese(Brazil)



German



Spanish



Japanese



Belgian



English(UK)



French(Switzerland)



Russian



Czech



French(Canada)



Hungarian



Polish



Sweden / Finland



Spanish(Mexico)



Argentine(Latin America)



Norwegian



German(Switzerland)

Transmission Speed Setting

Choosing the transmission speed according to the receiving speed of the device



Fast



Middle



Slow



Super Slow

Bluetooth Protocol



Bluetooth HID



Bluetooth SPP



Bluetooth BLE

Notes: Scanning any one of above 3 setting codes can make the scanner enter bluetooth pairing status.

Working Modes

Under “Normal Mode”, the data of the code you scanned will be transferred to your device via bluetooth, 2.4G or USB. A short and low beep shows the data is transferred successfully. If not, the scanner will beep 3 times shortly and lowly.

Under “Normal Mode”, if scans failure, the data you just scanned will be lost.



Normal Mode

Under “Storage Mode”, the data of the code you just scanned will be stored in the scanner. And scanner beeps once shortly and slowly after each scanning. Scanner will beep 3 times after scanning a code if its storage space is full.



Storage Mode

You can check the storage data amount by scanning the following setting code.



Storage Data Amount

Scanning following setting code to upload the data you have scanned to your device via bluetooth, 2.4G wireless or USB.

Notes: Making sure that scanner is got connected with your device.
After uploading data, the data which have been stored in the scanner will not be deleted from the scanner



Upload Data

Scanning following setting code to clear all the data which is stored in the scanner. All data will be deleted after scanning setting code "Clear Data", so please confirm that you have uploaded those data to your device if you need them.



Clear Data



Entering No Loss Mode

Note: The no loss mode can ensure no loss under 2.4G and virtual Bluetooth, Bluetooth HID/SPP/BLE is not recommended to use the no loss mode as the receiving end is not controlled.

Change Bluetooth Name

1st: Scanning following setting code” Change BT Name”



Change BT Name

2nd: Scanning a customized codes which its data is the name you want. You can generate a customized code via barcode generator, like label shop. Or you also can contact with us to generate a code for you. For example: Following barcode's data is "Scanner123", after you scanned it, the bluetooth name of your scanner will be changed to "Scanner123".



Scanner123

3rd: Scanning following setting code to set the name as default.



Save Setting

Hide Pre-characters/Post-characters

1st: Scanning following setting code “Hide Pre-characters” or “Hide Post-characters”



Hide Pre-characters



Hide Post-characters

2nd: Choosing how many characters you need to hide.



1



2



3



4



5



6



7



8



9



11



13



15



10



12



14



16

Notes: If you need to cancel hiding characters setting, you can scan following setting code



Cancel Hiding Pre-characters



Cancel Hiding Post-characters

Add Time As Prefix or Suffix

A. Scanning setting code “Add Time as Prefix” , then there is scanning time in front of barcode data.



Add Time as Prefix

B. Scanning setting code “Add Time as Suffix” , then there is scanning time behind barcode data.



Add Time as Suffix

C. If you do not need scanning time as prefix or suffix, you can scan following setting code “Cancel Setting” .



Cancel Setting

Update Time

1. Run the Web as below:

 jquery.min	2020-06-03 3:04 PM
 jquery.qrcode.min	2020-06-03 3:04 PM
 JsBarcode.all.min	2020-06-03 3:04 PM
 Scanner QR and BarCode Time Adjust	2020-06-03 3:12 PM

2. Scan Below codes to Calibrate Time of Scanner.



Notes: “Scanner Time Setting Offline Web Version” program can be downloaded in website:

<https://symcode.cn/public/upload/Scanner%20Time%20Setting%20Offline%20Web%20Version.rar>

or scan QR-code below



Prefix/Suffix Setting

The setting prefix and suffix is divided into two parts, displayable characters and controlled characters

1st Part: Displayable characters

Step1: Scanning following setting code “Add Prefix” or “Add Suffix”



Add Prefix



Add Suffix

Step2: Finding the character which you need to add as prefix or suffix in appendix B, and scanning the barcode corresponding to the character.

2nd Part: Controlled Characters

Step1: Finding the character which you need to add as prefix or suffix in appendix A, and scanning the barcode corresponding to the character set.



Character Set 0



Character Set 1

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation

NOTE: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Warning: changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment

The devices has been evaluated to meet general RF exposure requirement, the device can be used in portable exposure condition without restriction



Character Set 2



Character Set 3



Character Set 4

Step2: Scanning following setting code “Add Prefix” or “Add Suffix”



Add Prefix



Add Suffix

Step3: Finding the character which you need to add as prefix or suffix in appendix A, and scanning the barcode corresponding to the character.

Notes: Scanning following setting code if you need to cancel prefix and suffix setting



Cancel Prefix Setting



Cancel Suffix Setting

2.4G Wireless COM-Port Mode Setting

Step1: Scanning setting code “COM-Port Mode”



COM-Port Mode

Step2: Scanning setting code “Enter Pairing Mode”



Enter Pairing Mode

Step3: Insert the 2.4G wireless receiver into USB port in your device. One beep show that scanner and receiver connected. And it will generate a COM port in your device.

Notes: When the scanner is entered 2.4G COM-Port Mode pairing status and it does not get connected with your device within 1 minutes, it will beep twice lowly and longly. You need to repeat above-mentioned 3 steps to make it connect with you device. (When the scanner is in the 2.4G COM-Port pairing status, double-click can make it exit the pairing mode).

Once you scan 2.4G COM mode, the scanner is under virtual COM port even it is connected by USB cable.

Enable/Disable HID Searching by Pressing Scan Button 8S Settings



Enable



Disable

2.4GHz Wireless Transfer Speed Settings

Select the corresponding delay time interval according to the receiving speed of the device.



Turn on delay



Turn off delay

Delay time interval setting:



5ms



10ms



20ms



30ms



40ms



50ms

AppendixA:Controlled Characters

Decimal	ASCII	Character Set 0	Character Set 1	Character Set 2	Character Set 3	Character Set 4	Setting Code
1	SOH	NULL	Home	Ctrl+A	Alt+001	CR	
2	STX	Ctrl+B	End	Ctrl+B	Alt+002	Cap Lock	
3	ETX	Ctrl+C	Up Arrow	Ctrl+C	Alt+003	Right Arrow	
4	EOT	NULL	Down Arrow	Ctrl+D	Alt+004	Up Arrow	
5	ENQ	NULL	Left Arrow	Ctrl+E	Alt+005	NULL	
6	ACK	NULL	Right Arrow	Ctrl+F	Alt+006	NULL	
7	BEL	NULL	Shift+Tab	Ctrl+G	Alt+007	Enter	
8	BS	Back Space	Back Space	Back Space	Alt+008	Left Arrow	
9	HT	Tab	Tab	Tab	Alt+009	Tab	
10	LF	Enter	Enter	Ctrl+P	Alt+010	Down Arrow	
11	VT	NULL	NULL	Ctrl+Q	Alt+011	Tab	
12	FF	NULL	NULL	Ctrl+R	Alt+012	delete	
13	CR	Enter	Enter	Enter	Alt+013	Enter	

Decimal	ASCII	Character Set 0	Character Set 1	Character Set 2	Character Set 3	Character Set 4	Setting Code
14	S0	F1	Page Up	Ctrl+N	Alt+014	Insert	
15	S1	F2	Page Down	Ctrl+O	Alt+015	Esc	
16	DLE	F3	F11	Ctrl+P	Alt+016	F11	
17	DC1	F4	NULL	Ctrl+Q	Alt+017	Home	
18	DC2	F5	NULL	Ctrl+R	Alt+018	Print Screen	
19	DC3	F6	NULL	Ctrl+S	Alt+019	Back Space	
20	DC4	F7	NULL	Ctrl+T	Alt+020	Shift tab	
21	NAK	F8	F12	Ctrl+U	Alt+021	F12	
22	SYN	F9	F1	Ctrl+V	Alt+022	F1	
23	TB	F10	F2	Ctrl+W	Alt+023	F2	
24	CAN	F11	F3	Ctrl+X	Alt+024	F3	
25	EM	F12	F4	Ctrl+Y	Alt+025	F4	
26	SUB	NULL	F5	Ctrl+Z	Alt+026	F5	
27	Esc	Esc	F6	Ctrl+[	Alt+027	F6	

[illegible]

Appendix B: Displayable Characters

Decimal	ASCII	Setting Code
32	空格	
33	!	
34	"	
35	#	
36	\$	
37	%	
38	&	
39	'	
40	(	
41	)	
42	*	
43	+	
44	,	

Decimal	ASCII	Setting Code
45	-	
46	.	
47	/	
48	0	
49	1	
50	2	
51	3	
52	4	
53	5	
54	6	
55	7	
56	8	
57	9	

Decimal	ASCII	Setting Code
---------	-------	--------------

58	:	
59	;	
60	<	
61	=	
62	>	
63	?	
64	@	
65	A	
66	B	
67	C	
68	D	
69	E	
70	F	
71	G	

Decimal	ASCII	Setting Code
---------	-------	--------------

72	H	
73	I	
74	J	
75	K	
76	L	
77	M	
78	N	
79	O	
80	P	
81	Q	
82	R	
83	S	
84	T	
85	U	

Decimal	ASCII	Setting Code
---------	-------	--------------

86	V	
87	W	
88	X	
89	Y	
90	Z	
91	[	
92	\	
93	]	
94	^	
95	_	
96	`	
97	a	
98	b	
99	c	

Decimal	ASCII	Setting Code
---------	-------	--------------

100	d	
101	e	
102	f	
103	g	
104	h	
105	i	
106	j	
107	k	
108	l	
109	m	
110	n	
111	o	
112	p	
113	q	

Decimal	ASCII	Setting Code
114	r	
115	s	
116	t	
117	u	
118	v	
119	w	
120	x	
121	y	
122	z	
123	{	
124		
125	}	
126	~	
127	DEL	

[illegible]

FAQ (Frequently Asked Questions)

- ▶ What should I do if the scanner can not pair with my bluetooth device?
 - A.Making sure the scanner is in the pairing state under the required Bluetooth protocol
 - B.If the devices has connected successfully with other barcode scanner via bluetooth,or other devices.Please delete the bluetooth connection record before connecting
 - C.The wireless module has been damaged
- ▶ Why can not the scanner read some codes?
 - A.The scan engine does not support that code type or disabled defaultly
You can contact with us to enable it.
- ▶ Why can not the scanner transfer data to my device when they are connected?
 - A.Please confirm if the scanner is under “Storage Mode”,you need to turn it to “Normal Mode” or scanning setting code “Upload Data” to transfer data to your device.
 - B.The wireless module may has been damaged.
- ▶ Why does the data which show in my device is not the same as code?
 - A.Please confirm that if the keyboard language of the scanner is the same as your devices’ .
- ▶ Why can not the scanner charge?
 - A.Please choose the correct charge head and charge cable.
 - B.Charging circuit or battery may has been damaged.
- ▶ How to make more settings?
 - Please contact with us for more settings.