

Dell™ Cloud Multifunction Printer | H815dw Dell™ Smart Multifunction Printer | S2815dn User's Guide



Contents

Before Beginning	23
Notes, Cautions, and Warnings	25
About License.	25
As for RSA BSAFE.	25
ICC Profile Header	25
JPEG Library	26
Math Library.	26
libtiff	26
Zlib.	27
1 Dell™ Cloud Multifunction Printer H815dw Dell Smart Multifunction Printer S2815dn User's Guide	29
Conventions.	29
2 Finding Information	31
3 Product Features	33
4 About the Printer	35
Front and Rear Views.	35
Front View	35
Rear View	36
Duplex Automatic Document Feeder (DADF)	37
Space Requirements	38
Operator Panel	38
Additional Components.	39
Optional Accessories	39
Non-bundled Items	39

Securing the Printer	39
Ordering Supplies.	40
Setting Up the Printer (Printer Setup)	41
5 Overview of the Printer Setup	43
6 Installing Optional Accessory	45
Installing the Optional 550-Sheet Feeder.	45
Updating Your Driver to Detect 550-Sheet Feeder.	49
7 Connecting and Setting Up Your Printer	53
Turning on the Printer.	54
Configuring Initial Settings on the Operator Panel	54
Connecting to a Computer or a Network.	61
Connecting to a Computer Using the USB Cable (Direct Connection)	61
Connecting to a Network Using the Ethernet Cable.	62
Connecting to a Wireless Network	62
Connecting to the Telephone Line	62
Setting Up the Printer Using Dell Printer Easy Install (Windows® Only)	64
Basic Setup	64
Setting Up the Printer in Another Connection Method	65
Configuring the Wireless Settings	66
Determining the Wireless Network Settings	67
Configuring the Wireless Settings Using Dell Printer Easy Install	68
Configuring the Wireless Settings Without Using Dell Printer Easy Install	70
Reconfiguring the Wireless Settings	73
8 Setting the IP Address	75
Assigning an IP Address	75
When Using the Dell Printer Easy Install	75
When Using the Operator Panel.	76
When Using the Tool Box	77
Verifying the IP Settings	77

Verifying the Settings Using Operator Panel	77
Verifying the Settings Using System Settings Report.	78
Verifying the Settings Using Ping Command	78
9 Loading Paper	79
10 Installing Printer Drivers on Windows® Computers	83
Identifying Printer Driver Pre-install Status	83
Changing the firewall settings before installing your printer	83
Starting Dell Printer Easy Install	83
USB Cable Connection Setup	84
Network Connection Setup	87
Setting Up for Shared Printing	92
Enabling Shared Printing from the Computer	93
Checking the Shared Printer	94
11 Installing Printer Drivers on Macintosh Computers	95
Installing the Drivers and Software	95
Adding a Printer on Mac OS X 10.5, Mac OS X 10.6, OS X 10.7, OS X 10.8, OS X 10.9, or OS X 10.10	95
Configuring Settings.	97
12 Installing Printer Drivers on Linux Computers (CUPS)	99
Operation on Red Hat Enterprise Linux 6 Desktop.	99
Setup Overview	99
Installing the Printer Driver	99
Setting Up the Queue	99
Setting the Default Queue.	100
Specifying the Printing Options	100
Uninstalling the Printer Driver.	100
Operation on SUSE Linux Enterprise Desktop 11	101
Setup Overview	101
Installing the Printer Driver	101
Setting Up the Queue	102
Setting the Default Queue.	103
Specifying the Printing Options	103
Setting the Password for Authority as the Printer Administrator.	104

Uninstalling the Printer Driver	104
Operation on Ubuntu 12.04 LTS	104
Setup Overview	104
Installing the Printer Driver	104
Setting Up the Queue	105
Setting the Default Queue	106
Specifying the Printing Options	106
Uninstalling the Printer Driver	106

Using Your Printer 107

13 Operator Panel 109

About the Operator Panel	109
Dell™ Cloud Multifunction Printer H815dw	109
Dell Smart Multifunction Printer S2815dn	109
Basic Operations on the Touch Panel	111
To Select the Item on the Screen	111
To Scroll the Screen or the Listed Items.	111
About the Home Screen.	112
Notification Bar	112
Lock Icon.	112
Envelope Mode Icon.	112
Wi-Fi Direct Connection Status Icon	112
Wireless LAN Connection Status Icon	112
Time/Network Information.	113
Account Name.	113
Tiles	113
Moving, Adding or Deleting the Tiles	113
To Move the Tiles	113
To Add the Tiles	113
To Delete the Tiles	114
Using the Keyboard Displayed on the Touch Panel	114
To Change the Keyboard Layout.	114
Using the Number Pad	115
Number Pad Numbers.	115
Changing Numbers	115
Inserting a Pause	115
Printing a Panel Settings Report	115

Changing the Language	115
When Using the Operator Panel	116
When Using the Tool Box	116
Setting the Power Saver Timer Option	116
About the Concurrent Jobs Feature	116
 14 Dell™ Printer Configuration Web Tool	 117
Overview	117
Setting Up the Dell Printer Configuration Web Tool	118
Setting Up From Web Browser	118
Setting Up From Operator Panel	118
Starting the Dell Printer Configuration Web Tool	119
Overview of the Menu Items	119
Printer Status	119
Printer Jobs	119
Printer Settings	119
Print Server Settings	119
Copy Printer Settings	120
Print Volume	120
Address Book	120
Printer Information	120
Tray Management	120
E-Mail Server Settings Overview	120
Set Password	120
Online Help	120
Order Supplies at:	120
Contact Dell Support at:	120
Dell Document Hub at:	120
Page Display Format	121
Top Frame	121
Left Frame	122
Right Frame	122
Changing the Settings of the Menu Items	123
Details of the Menu Items	123
Printer Status	126
Printer Jobs	127
Printer Settings	128
Print Server Settings	143
Copy Printer Settings	162

Print Volume	162
Address Book	163
Tray Management	170

15 Understanding the Printer Menus 171

Report / List	171
System Settings	171
Panel Settings	171
PCL Fonts List	171
PCL Macros List	171
PS Fonts List	171
PDF Fonts List	171
Job History.	171
Error History	171
Print Meter.	172
Demo Page.	172
Protocol Monitor.	172
Speed Dial	172
Address Book	172
Server Address	172
Fax Activity.	172
Fax Pending	172
Stored Documents.	172
Printing a Report/List Using the Operator Panel	173
Printing a Report/List Using the Tool Box	173
Wi-Fi WPS	173
Wi-Fi	173
Wi-Fi Direct	173
WPS (Connect via PBC)	173
WPS (Connect via PIN)	173
Paired Device	174
Admin Settings	174
Phone Book	174
PCL.	174
PS	181
PDF.	182
Network	184
Fax Settings	191
System Settings	199
Maintenance.	209
Secure Settings	214
USB Settings.	218

Default Settings	219
Copy Defaults	219
Fax Defaults	219
Scan Defaults	219
Direct Print Defaults (available on the Dell Cloud Multifunction Printer H815dw only) USB Direct Print Defaults (available on the Dell Smart Multifunction Printer S2815dn only)	220
Tray Management	220
Tray Settings	220
Tray Priority	226
Language Settings	226
Panel Language	226
Keyboard Layout	226
Print	227
Private Mailbox	227
Public Mailbox	227
Proof Print	228
Secure Print	228
Secure Fax Receive	228
Tile Settings	229
Copy	229
Quantity	229
Darken / Lighten	229
Select Tray	229
2 Sided Copying	231
Sharpness	232
Reduce/Enlarge	232
Original Size	232
Original Type	233
Collation	233
2-Up	234
Margin	234
Auto Exposure	234
Save Settings	234
ID Copy	234
Save Settings	235
Scan	235
Scan to Email	235
Scan to Network Folder	235
Scan to USB	235
Scan to WSD	236

Scan to PC	236
Scan Settings	236
Save Settings	239
Tile Settings	239
Fax	240
Fax Settings	240
Save Settings	241
Print PDF/TIFF	242
Print JPEG	242
Print Settings.	242
Save Settings	245
Dell Document Hub	245
Search for Files	245
Browse for Files	245
Scan	246
Smart OCR Scan	246
E-mail Me	248
Business Card Reader	250
Add Apps	250
Panel Lock	250
Enabling the Panel Lock	250
Disabling the Panel Lock	250
Resetting Defaults	251
When Using the Operator Panel.	251
 16 Print Media Guidelines	 253
Paper	253
Recommended Paper	253
Unacceptable Paper.	253
Selecting Paper	254
Selecting Pre-Printed Media and Letterheads	254
Selecting Pre-Punched Paper.	254
Envelopes	255
Labels	256
Storing Print Media	256
Identifying Print Media and Specifications	257
Supported Paper Sizes	257

Supported Paper Types	258
Paper Type Specifications	258
17 Loading Print Media	259
Capacity.	259
Print Media Dimensions	259
Loading Print Media in Tray1 and the Optional 550-Sheet Feeder	259
Loading Letterhead (Pre-Printed and Pre-Punched Paper)	259
Loading Print Media in the MPF	260
Loading Small Print Media in the MPF	262
Printing on Envelopes – Envelope Mode.	264
To Set the Printer to the Envelope Mode	264
To Cancel the Envelope Mode.	266
Loading Envelopes in the MPF	268
Envelope #10, DL.	268
Monarch.	268
C5	269
Loading Letterhead in the MPF	269
Using the MPF	269
Linking Trays	270
 Printing, Copying, Scanning, Faxing, and Dell Document Hub	 271

18 Printing	273
Tips for Successful Printing	273
Tips on Storing Print Media	273
Avoiding Paper Jams	273
Sending a Job to Print	273
Canceling a Print Job.	274
Canceling a Job From the Operator Panel	274
Canceling a Job From a Computer Running Windows® Operating System	274
Duplex Printing	275
Duplex Printing With Duplex Unit	275

Using Booklet Print	275
Using the Stored Print Feature	276
Overview	276
Procedures for Printing Stored Print	278
Printing from USB Memory (USB Direct Print)	279
Supported File Formats	280
Inserting and Removing a USB Memory	280
Printing a PDF/TIFF File in a USB Memory	280
Printing a JPEG File in a USB Memory	281
Printing With Web Services on Devices (WSD)	281
Adding Roles of Printer Services	281
Printer Setup	282
Installing a Printer Driver Using the Add Printer Wizard	282
Printing With Wi-Fi Direct	283
Setting Up Wi-Fi Direct	283
Printing via Wi-Fi Direct	285
Disconnecting Wi-Fi Direct Network	285
Resetting the Passphrase	285
Resetting the PIN	286
Mobile Printing	286
Android OS	286
Apple iOS	286
Printing With AirPrint	287
Setting Up AirPrint on Your Printer	287
Printing via AirPrint	287
Printing With Google Cloud Print	287
Preparing to Use the Printer with Google Cloud Print	287
Enabling Google Cloud Print on the Printer	288
Selecting the Version of the Google Cloud Print Service	288
Registering the Printer to the Google Cloud Print Service	289
Sharing the Printer Using the Google Cloud Print Service	290
Canceling Registration to Google Cloud Print	290
Printing via Google Cloud Print	290
Tap to Print	291
Preparations	291
Adding the Printer to the Mobile Device	292
Starting Printing or Scanning	293
Printing a Report Page	293
Printer Settings	293

Using the Operator Panel to Change the Printer Settings	293
Using the Dell Printer Configuration Web Tool to Change the Printer Settings	294
19 Copying	295
Loading Paper for Copying	295
Selecting Paper Tray	295
Preparing a Document	295
Making Copies From the Document Glass	296
Making Copies From the DADF	297
Setting Copy Options	298
Quantity	298
Darken / Lighten	298
Select Tray.	299
2 Sided Copying	299
Sharpness	300
Reduce / Enlarge	300
Original Size	301
Original Type.	301
Collation	302
2-Up	303
Margin.	304
Auto Exposure.	304
Using the ID Copy.	304
Changing the Default Settings	305
20 Scanning	307
Scanning Overview.	307
Tips for Easy Network Scanning	307
Scanning - With scanner driver.	307
Scanning - Without scanner driver	308
Scanning From the Operator Panel - Scan to PC	308
Scanning From the Operator Panel - Scan to WSD	310
Printer Setup for Scan to Web Services on Devices (WSD)	310
Scanning and Sending Images to the Computer Using Web Services on Devices (WSD)	310
Scanning From a Computer Using Web Services on Devices (WSD)	311

Preparations for scanning from the computer	311
Scanning from the computer	311
Scanning Using the TWAIN Driver	313
Scan Settings Tool	314
IP Address Settings	315
Password Setting	316
Scanning Using the Windows Image Acquisition (WIA) Driver	317
Scanning to a PC or Server via SMB/FTP	318
Overview	318
Procedures.	319
Setting a Login Name and a Password (SMB Only).	320
Creating a Shared Folder (SMB Only)	321
Adding a Scanning Destination to the Printer's Address Book	323
Sending the Scanned File on the Network Folder.	329
Scanning to a USB Memory	329
Types of a USB Memory	329
Procedures.	329
Specifying a Folder to Save the Scanned Image	330
Sending an E-Mail With the Scanned Image.	330
Preparing the Printer to Send the E-Mail	330
Setting the DNS Server Address	331
Setting the Information Necessary to Access the Mail Server.	331
Setting the Administrator's E-mail Address	332
Adding a New E-Mail Address to the Printer's Address Book	333
Sending an E-mail With the Scanned File	333
21 Faxing	335
Specifying the Fax Initial Settings Using the Dell Printer Easy Install	335
Setting Your Country	337
Setting the Printer ID	337
Setting the Time and Date	337
Changing the Clock Mode	338
Setting Sounds	338
Speaker Volume	338
Ringer Volume	338
Specifying the Fax Settings Options	339

Changing the Fax Settings Options	339
Available Fax Settings Options	339
Advanced Fax Settings	343
Sending a Fax.	345
Loading an Original Document	345
Adjusting the Document Resolution.	346
Adjusting the Document Contrast.	347
Sending a Fax From Memory	347
Sending a Fax Manually.	348
Confirming Transmissions.	348
Automatic Redialing.	349
Sending a Delayed Fax.	349
Sending a Fax from the Driver (Direct Fax)	350
Example	350
Receiving a Fax.	354
About Receiving Modes.	354
Loading Paper for Receiving Faxes	354
Receiving a Fax Automatically in the Fax Mode	355
Receiving a Fax Manually in the Telephone Mode	355
Receiving a Fax Automatically in the Telephone / Fax or Ans Machine/Fax	355
Receiving a Fax Manually Using an External Telephone (Remote Receive)	355
Receiving Faxes Using the DRPD	356
Receiving Faxes in the Memory.	356
Polling Receive	356
Automatic Dialing	356
Speed Dialing	356
Setting Speed Dial.	357
Sending a Fax Using Speed Dial	357
Group Dialing	358
Setting Group Dial.	358
Editing Group Dial	358
Sending a Fax Using Group Dial (Multi-address Transmission)	359
Printing a Speed Dial List	359
Phone Book.	359
Other Ways to Fax	360
Using the Secure Receiving Mode	360
Using an Answering Machine.	361
Using a Computer Modem.	361

Printing a Report	362
Changing Setting Options	362
22 Dell™ Document Hub	363
Registering the User and Signing In to the Dell Document Hub	363
Registering a New User to the Dell Document Hub	363
Signing In to the Dell Document Hub	364
When the Favorite List Screen is Displayed When You Tap the Tile on the Dell Document Hub Screen	364
Returning to the Home Screen	364
Logging Out From the Printer	364
Searching for and Printing Files	365
Browsing and Printing Files	366
Searching for the Files in the Selected Cloud Service	367
Scanning	367
Searching for the Location Across the Cloud Services	368
Searching for the Location in the Selected Cloud Service	368
Scanning the Document Using Optical Character Recognition (OCR)	369
Receiving the Scanned File as an E-Mail	370
Receiving the Scanned Image of the Business Card as an E-Mail	371
Know Your Printer	373
23 Understanding Your Printer Software	375
Printer Utility Software	376
Status Window	377
Tool Box	377
Updater	377
Troubleshooting	377
Address Book Editor	377
ScanButton Manager	377
Address Books	377
Types of Address Books	377
Adding and Editing Entries to the Address Books	378
App Manager	381

Preparing to use the App Manager - Dell H815dw	381
Using the App Manager - Dell H815dw	381
Status Monitor Widget for Macintosh	382
Status Monitor Widget Feature	382
Before Installing the Status Monitor Widget	382
Installing the Status Monitor Widget	382
Opening and Closing the Status Monitor Widget	383
Printer Status Window	383
Order Window	385
Preferences	386
Status Monitor Console for Linux	386
Status Monitor Console Feature	386
Before Installing the Status Monitor Console.	387
Installing the Status Monitor Console.	387
Starting the Status Monitor Console	387
Printer Selection Window.	388
Printer Status Window	388
Dell Supplies Management System Window	390
Service Tag Window	391
Settings Window	391
 24 User Authentication	 393
Creating and Editing the User Accounts	393
Creating a New User Account	393
Editing the User Account	394
Deleting the User Account	394
Logging In to the User Account on the Dell Cloud Multifunction Printer H815dw	394
Logging In Using the Touch Panel.	394
Logging In Using the NFC Authentication Card	395
Logging Out	395
Logging In to the User Account on the Dell Smart Multifunction Printer S2815dn	395
Specifying the User Authentication Method	395
Preparations for Remote Authentication	395
Logging In for Remote Authentication	395
Logging In for Local Authentication.	396
Logging Out	396

25 Tile Customization	397
Adding a New Tile	397
Selecting From the Pre-defined Tiles	397
Creating a New Tile Including the Job Settings.	397
26 Using the Server Address Book and Server Phone Book	399
Preparing the Printer to Access the External LDAP Server	399
Starting the Dell Printer Configuration Web Tool	399
Setting Authentication Type	399
Setting LDAP Server	400
Setting LDAP User Mapping.	401
Sending an E-mail With the Scanned File Using the E-mail Server Address Book	402
Sending a Fax Using the Fax Server Phone Book	402
27 Using Digital Certificates	403
Managing Certificates	403
Preparing to Manage Certificates.	403
Creating and Downloading a Certificate Signing Request (CSR)	404
Importing a Digital Certificate	404
Setting a Digital Certificate	405
Confirming the Settings of a Digital Certificate	406
Deleting a Digital Certificate.	406
Exporting a Digital Certificate	407
Setting the Features.	407
Setting the SSL-use Server Certificate (HTTP/IPP)	408
Setting SMTP-SSL/TLS Communication.	408
Setting LDAP-SSL/TLS Communication	408
Setting for Wireless LAN WPA-Enterprise (EAP-TLS).	408
Setting for Wireless LAN WPA-Enterprise (PEAPV0-MS-CHAPV2, EAP-TTLS PAP, EAP-TTLS CHAP)	410
28 Understanding Printer Messages	413
Status Codes	413
Error Messages	420

29 Specifications	423
Operating System Compatibility	423
Power Supply	423
Dimensions	423
Memory	423
Page Description Language (PDL)/Emulation, Operating System, and Interface	424
MIB Compatibility	424
Environment	424
Operation	424
Print Quality Guarantee	424
Storage	424
Altitude	424
Cables	425
Print Specifications	425
Copy Specifications	426
Scanner Specifications	426
Facsimile Specifications	427
Wireless Connection Specifications	427

Maintaining Your Printer 429

30 Maintaining Your Printer	431
Determining the Status of Supplies	431
Conserving Supplies	431
Ordering Supplies	431
Storing Print Media	432
Storing Consumables	432
Replacing the Toner Cartridge	433
Removing the Toner Cartridge	433
Installing a Toner Cartridge	434
Replacing the Drum Cartridge	436

Removing the Drum Cartridge	436
Installing a Drum Cartridge	437
Replacing the Fusing Unit, the Transfer Unit, and the Retard Roller	440
Removing the Fusing Unit	440
Installing a Fusing Unit.	441
Removing the Transfer Unit	442
Installing a Transfer Unit.	442
Removing the Retard Roller in Tray1.	443
Installing a Retard Roller in Tray1	444
Cleaning the Scanner	446
Cleaning the DADF Feed Roller.	447
Cleaning Inside the Printer	447
Moving the Printer	450
Removing the Optional 550-Sheet Feeder	452
31 Clearing Jams.	457
Avoiding Jams	457
Identifying the Location of Paper Jams	458
Clearing Paper Jams From the DADF.	459
Clearing Paper Jams From the MPF	461
Clearing Paper Jams From Tray1	465
Clearing Paper Jams From the Fusing Unit.	468
If status code: 050-130 appears:.	468
Clearing Paper Jams From the Duplexer.	471
If status code: 050-131 appears:.	471
Clearing Paper Jams From the Regi Roll	472
If status code: 050-142 appears:.	472
If status code: 050-132 appears:.	475
Clearing Paper Jams From the Optional 550-Sheet Feeder	479
Clearing Paper Jams From the Trays	482
When status code 050-134 appears:.	482
When status code 050-133 appears:.	484

Troubleshooting	487
---------------------------	-----

32 Troubleshooting Guide	489
------------------------------------	-----

Basic Printer Problems.	489
Display Problems.	489
Printing Problems	489
Print Quality Problems	490
The output is too light	491
Toner smears or print comes off	493
Random spots/Blurred images	494
The entire output is blank	494
Streaks appear on the output	496
Pitched dots	497
Vertical blanks.	498
Mottle	499
Ghosting	500
Light-induced fatigue	501
Fog.	501
Bead-Carry-Out (BCO).	502
Jagged characters	503
Banding	504
Auger mark	504
Wrinkled/Stained paper.	505
Damage on the leading edge of paper	505
Jam/Alignment Problems	506
The top and side margins are incorrect.	506
Images are skewed	507
Tray1/Optional 550-Sheet Feeder Misfeed Jam.	507
MPF Misfeed Jam	508
Regi Jam (Exit Sensor On JAM).	509
Exit Jam (Exit Sensor Off JAM)	509
Tray1/Optional 550-Sheet Feeder Multi-feed Jam	509
MPF Multi-feed Jam.	510
Noise	510
Copy Problems	511
Fax Problems	511
Scanning Problems.	512
Digital Certificate Problems	515

Problems With Installed Optional Accessory	516
Wi-Fi Direct Problems	516
Scanner Driver/Printer Utility Problems	516
Other Problems	517
Contacting Service	517

Appendix	519
---------------------------	------------

Appendix	521
Dell™ Technical Support Policy	521
Online Services	521
Warranty and Return Policy	522
Recycling Information	522
Contacting Dell	522

Before Beginning

- Notes, Cautions, and Warnings 25
- 1 Dell™ Cloud Multifunction Printer | H815dw
Dell Smart Multifunction Printer | S2815dn User's Guide 29
- 2 Finding Information 31
- 3 Product Features 33
- 4 About the Printer 35

Notes, Cautions, and Warnings



NOTE: A NOTE indicates important information that helps you make better use of your printer.



CAUTION: A CAUTION indicates potential damage to hardware or loss of data if instructions are not followed.



WARNING: A WARNING indicates a potential for property damage, personal injury, or death.

Information in this document is subject to change without notice.

© 2015 Dell Inc. All rights reserved.

Reproduction of these materials in any manner whatsoever without the written permission of Dell Inc. is strictly forbidden.

Trademarks used in this text: *Dell* and the *DELL* logo are trademarks of Dell Inc.; *Microsoft*, *Windows*, *Windows Server*, *Windows Vista*, and *Active Directory* are either trademarks or registered trademarks of Microsoft Corporation in the United States and/or other countries; *Apple*, *Bonjour*, *iPad*, *iPhone*, *iPod touch*, *Macintosh*, *Mac OS*, *OS X*, and *TrueType* are trademarks of Apple Inc., registered in the U.S. and other countries. *AirPrint* and the *AirPrint* logo are trademarks of Apple Inc.; *Android*, *Google Chrome*, *Gmail*, *Google*, *Google Cloud Print*, *Google Drive*, and *Google Play* are either registered trademarks or trademarks of Google Inc.; *Adobe*, *PostScript* and *Photoshop* are either registered trademarks or trademarks of Adobe Systems Incorporated in the United States and/or other countries; *Wi-Fi* and *Wi-Fi Direct* are registered trademarks of the Wi-Fi Alliance; *Wi-Fi Protected Setup*, *WPA*, and *WPA2* are trademarks of the Wi-Fi Alliance; *Red Hat* and *Red Hat Enterprise Linux* are registered trademarks of Red Hat, Inc. in the U.S. and other countries; *SUSE* is a registered trademark of Novell, Inc., in the United States and other countries; *MIFARE* is a trademark of NXP Semiconductors; *Thinstream* is a trademark of Thinstream Technologies Pte. Ltd.; *QR Code* is a registered trademark of Denso Wave Incorporated; *Dropbox* is a trademark or registered trademark of Dropbox Inc.; *Box* and the *Box* logo are including without limitation, either trademarks, service marks or registered trademarks of Box, Inc. *RSA* and *BSAFE* are either registered trademarks or trademarks of EMC Corporation in the United States and/or other countries.

Other trademarks and trade names may be used in this document to refer to either the entities claiming the marks and names or their products. Dell Inc. disclaims any proprietary interest in trademarks and trade names other than its own.

About License

XML Paper Specification (XPS): This product may incorporate intellectual property owned by Microsoft Corporation. The terms and conditions upon which Microsoft is licensing such intellectual property may be found at <http://go.microsoft.com/fwlink/?LinkId=52369>; *DES*: This product includes software developed by Eric Young (ey@mincom.oz.au); *AES*: Copyright (c) 2003, Dr Brian Gladman, Worcester, UK. All rights reserved. This product uses published AES software provided by Dr Brian Gladman under BSD licensing terms; *ICC Profile (Little cms)*: Copyright (c) 1998-2004 Marti Maria.

As for RSA BSAFE



This printer includes RSA® BSAFE® Cryptographic software from EMC Corporation.

ICC Profile Header

Copyright (c) 1994-1996 SunSoft, Inc.

Rights Reserved

Permission is hereby granted, free of charge, to any person obtaining a copy of this software and associated documentation files (the "Software"), to deal in the Software without restriction, including without limitation the rights to use, copy, modify, merge, publish distribute, sublicense, and/or sell copies of the Software, and to permit persons to whom the Software is furnished to do so, subject to the following conditions:

The above copyright notice and this permission notice shall be included in all copies or substantial portions of the Software.

THE SOFTWARE IS PROVIDED "AS IS", WITHOUT WARRANTY OF ANY KIND, EXPRESS OR IMPLIED, INCLUDING BUT NOT LIMITED TO THE WARRANTIES OF MERCHANTABILITY, FITNESS FOR A PARTICULAR PURPOSE AND NON-INFRINGEMENT. IN NO EVENT SHALL SUNSOFT, INC. OR ITS PARENT COMPANY BE LIABLE FOR ANY CLAIM, DAMAGES OR OTHER LIABILITY, WHETHER IN AN ACTION OF CONTRACT, TORT OR OTHERWISE, ARISING FROM, OUT OF OR IN CONNECTION WITH THE SOFTWARE OR THE USE OR OTHER DEALINGS IN THE SOFTWARE.

Except as contained in this notice, the name of SunSoft, Inc. shall not be used in advertising or otherwise to promote the sale, use or other dealings in this Software without written authorization from SunSoft Inc.

JPEG Library

Independent JPEG Group's free JPEG software

This package contains C software to implement JPEG image encoding, decoding, and transcoding. JPEG is a standardized compression method for full-color and gray-scale images.

The distributed programs provide conversion between JPEG "JFIF" format and image files in PBMPLUS PPM/PGM, GIF, BMP, and Targa file formats. The core compression and decompression library can easily be reused in other programs, such as image viewers. The package is highly portable C code; we have tested it on many machines ranging from PCs to Crays.

We are releasing this software for both noncommercial and commercial use. Companies are welcome to use it as the basis for JPEG-related products. We do not ask a royalty, although we do ask for an acknowledgement in product literature (see the README file in the distribution for details). We hope to make this software industrial-quality --- although, as with anything that's free, we offer no warranty and accept no liability.

For more information, contact jpeg-info@jpegclub.org.

Contents of this directory

jpegsrc.vN.tar.gz contains source code, documentation, and test files for release N in Unix format.

jpegsrcN.zip contains source code, documentation, and test files for release N in Windows format.

jpegaltui.vN.tar.gz contains source code for an alternate user interface for cjpeg/djpeg in Unix format.

jpegaltuiN.zip contains source code for an alternate user interface for cjpeg/djpeg in Windows format.

wallace.ps.gz is a PostScript file of Greg Wallace's introductory article about JPEG. This is an update of the article that appeared in the April 1991 Communications of the ACM.

jpeg.documents.gz tells where to obtain the JPEG standard and documents about JPEG-related file formats.

jfif.ps.gz is a PostScript file of the JFIF (JPEG File Interchange Format) format specification.

jfif.txt.gz is a plain text transcription of the JFIF specification; it's missing a figure, so use the PostScript version if you can.

TIFFTechNote2.txt.gz is a draft of the proposed revisions to TIFF 6.0's JPEG support.

pm.errata.gz is the errata list for the first printing of the textbook "JPEG Still Image Data Compression Standard" by Pennebaker and Mitchell.

jdosaobj.zip contains pre-assembled object files for JMEMDOS.ASM. If you want to compile the IJG code for MS-DOS, but don't have an assembler, these files may be helpful.

Math Library

Copyright (C) 1993 by Sun Microsystems, Inc. All rights reserved.

Developed at SunPro, a Sun Microsystems, Inc. business.

Permission to use, copy, modify, and distribute this software is freely granted, provided that this notice is preserved.

=====

copysignf.c: * Copyright (C) 1993 by Sun Microsystems, Inc. All rights reserved.

math_private.h: * Copyright (C) 1993 by Sun Microsystems, Inc. All rights reserved.

powf.c: * Copyright (C) 1993 by Sun Microsystems, Inc. All rights reserved.

scalbnf.c: * Copyright (C) 1993 by Sun Microsystems, Inc. All rights reserved.

libtiff

Copyright (c) 1988-1997 Sam Leffler

Copyright (c) 1991-1997 Silicon Graphics, Inc.

Permission to use, copy, modify, distribute, and sell this software and its documentation for any purpose is hereby granted without fee, provided that (i) the above copyright notices and this permission notice appear in all copies of the software and related documentation, and (ii) the names of Sam Leffler and Silicon Graphics may not be used in any advertising or publicity relating to the software without the specific, prior written permission of Sam Leffler and Silicon Graphics.

THE SOFTWARE IS PROVIDED "AS-IS" AND WITHOUT WARRANTY OF ANY KIND, EXPRESS, IMPLIED OR OTHERWISE, INCLUDING WITHOUT LIMITATION, ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

IN NO EVENT SHALL SAM LEFFLER OR SILICON GRAPHICS BE LIABLE FOR ANY SPECIAL, INCIDENTAL, INDIRECT OR CONSEQUENTIAL DAMAGES OF ANY KIND, OR ANY DAMAGES WHATSOEVER RESULTING FROM LOSS OF USE, DATA OR PROFITS, WHETHER OR NOT ADVISED OF THE POSSIBILITY OF DAMAGE, AND ON ANY THEORY OF LIABILITY, ARISING OUT OF OR IN CONNECTION WITH THE USE OR PERFORMANCE OF THIS SOFTWARE.

Zlib

zlib.h -- interface of the 'zlib' general purpose compression library version 1.2.8, April 28th, 2013

Copyright (C) 1995-2013 Jean-loup Gailly and Mark Adler

This software is provided 'as-is', without any express or implied warranty. In no event will the authors be held liable for any damages arising from the use of this software.

Permission is granted to anyone to use this software for any purpose, including commercial applications, and to alter it and redistribute it freely, subject to the following restrictions:

1. The origin of this software must not be misrepresented; you must not claim that you wrote the original software. If you use this software in a product, an acknowledgment in the product documentation would be appreciated but is not required.
2. Altered source versions must be plainly marked as such, and must not be misrepresented as being the original software.
3. This notice may not be removed or altered from any source distribution.

Jean-loup Gailly	Mark Adler
jloup@gzip.org	madler@alumni.caltech.edu

UNITED STATES GOVERNMENT RESTRICTED RIGHTS

This software and documentation are provided with RESTRICTED RIGHTS. Use, duplication or disclosure by the Government is subject to restrictions as set forth in subparagraph (c)(1)(ii) of the Rights in Technical Data and Computer Software clause at DFARS 252.227-7013 and in applicable FAR provisions: Dell Inc., One Dell Way, Round Rock, Texas, 78682, USA.

October 2015 Rev. A00

Dell™ Cloud Multifunction Printer | H815dw

Dell Smart Multifunction Printer | S2815dn

User's Guide

Click the links to the left for information on the features, options, and operation of your Dell Cloud Multifunction Printer | H815dw and Dell Smart Multifunction Printer | S2815dn. For information on other documentation included with your printer, see "Finding Information."



NOTE: In this manual, Dell Cloud Multifunction Printer | H815dw and Dell Smart Multifunction Printer | S2815dn are referred to as the "printer."



NOTE: In this manual, the procedures for the computer are explained using Microsoft® Windows® 7 unless stated otherwise.

Conventions


The following describe the meaning of the symbols and fonts used in this manual:

- | | | |
|--|---|--|
| Bold texts | : | <ul style="list-style-type: none"> Names of hardware button on the operator panel. Screen names on the touch panel. Menus, commands, windows, or dialog boxes displayed on the computer screen. |
| Texts in <code>Courier New</code> font | : | <ul style="list-style-type: none"> Menus and messages displayed on the touch panel. Characters entered from the computer. Directory paths. |
| < > | : | <ul style="list-style-type: none"> Key on the keyboard of the computer. |
| → | : | <ul style="list-style-type: none"> Indicates a path to a certain item within a procedure on a computer. |
| " " | : | <ul style="list-style-type: none"> Cross references in this manual. Characters entered from the operator panel. Messages displayed on the computer screen. |

Finding Information

 **NOTE:** The images used in this manual are those of the Dell™ Cloud Multifunction Printer | H815dw unless otherwise mentioned.

What are you looking for?	Find it here
• Drivers for my printer • My <i>User's Guide</i>	<i>Software and Documentation</i> disc The <i>Software and Documentation</i> disc contains setup video, documentation, and drivers for your printer. You can use the <i>Software and Documentation</i> disc to install drivers or access your setup video and documentation. Readme files may be included on your <i>Software and Documentation</i> disc to provide last-minute updates about technical changes to your printer or advanced technical reference material for experienced users or technicians.
• How to set up my printer • How to use my printer	<i>Setup Guide</i>
• Safety information • Warranty information	<i>Important Information</i>  WARNING: Read and follow all safety instructions in the <i>Important Information</i> prior to setting up and operating your printer.
• Express Service Code and Service Tag	

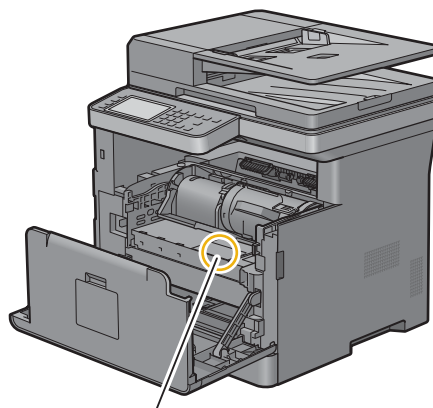

Service Tag
ABCD123
Express Service Code
01234567890

The Express Service Code and Service Tag are located inside the front cover of your printer.


• Latest drivers for my printer • Documentation for my printer	Go to dell.com/support .
---	--

What are you looking for?	Find it here
• Answers to technical service and support questions	dell.com/support provides several online tools, including: • Solutions — Troubleshooting hints and tips, articles from technicians, and online courses • Upgrades — Upgrade information for components, such as the printer drivers • Customer Care — Contact information, order status, warranty, and repair information • Downloads — Drivers • Manuals— Printer documentation and product specifications Go to dell.com/support. Select your region, and fill in the requested details to access help tools and information.

Product Features


This chapter describes the product features and indicates their links.

Converting and storing with Dell™ Document Hub (Dell Cloud Multifunction Printer | H815dw Only)

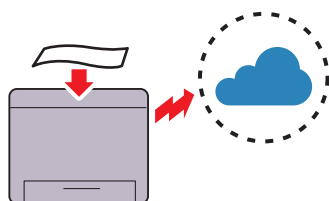


With the Dell Document Hub, you can scan hard copy documents and store them directly in your preferred cloud storage service. You can also convert hard copy documents into editable digital content before sending them to the cloud storage.

Printing with Dell Document Hub (Dell Cloud Multifunction Printer | H815dw Only)

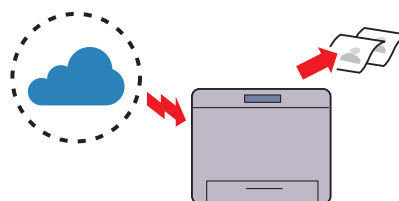


With the Dell Document Hub, you can easily locate and print documents stored in cloud storage. You can also search for files across multiple cloud storage services simultaneously.

Printing from USB Memory (USB Direct Print) (USB Direct Print)

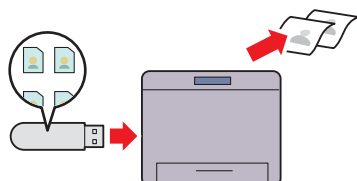


The USB Direct Print feature enables you to print files directly from a USB memory without requiring you to start your computer and an application.

Printing With Web Services on Devices (WSD)

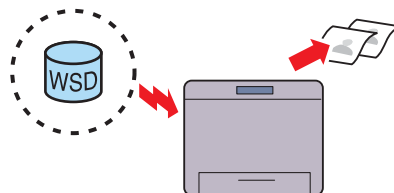


When the printer is connected to a computer via network using Web Services on Devices (WSD), you can print documents from the computer using the Web Services on Devices (WSD) Print function.

Using the ID Copy (ID Copy)

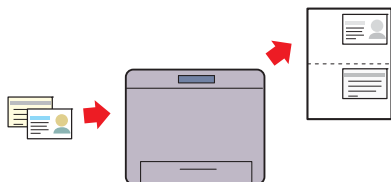


You can copy both sides of an ID card on one side of a single sheet of paper in its original size by tapping ID Copy on the touch panel.

Sending an E-Mail With the Scanned Image (Scan to Email)

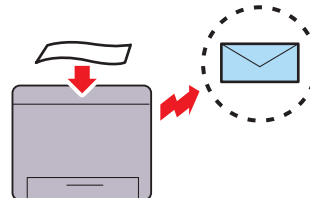


When you want to send scanned data by e-mail, use the Scan to Email feature. You can directly send the data scanned as an e-mail attachment. You can choose destination e-mail addresses from the address book on the printer or server. Or, you can enter the address from the touch panel on the printer's operator panel.

Scanning From the Operator Panel - Scan to WSD

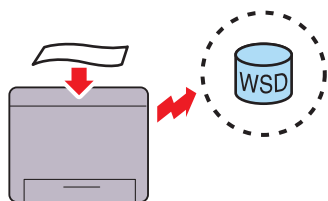


When the printer is connected to a computer via network using Web Services on Devices (WSD), you can scan and send the images to a computer using the Scan to Web Services on Devices (WSD) function.

Scanning to a PC or Server via SMB/FTP (Scan to Network Folder)

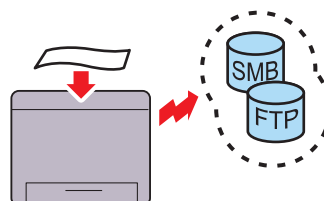


You can transfer data scanned to a PC or a server via SMB or FTP without service software. Although prior registration of the destination FTP server or PC on the address book is required, it helps save your time.

Scanning to a USB Memory (Scan to USB)

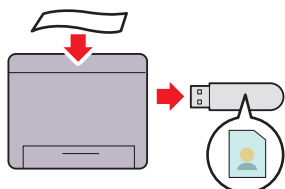

With the Scan to USB feature, you don't need a PC to connect a USB memory. You can specify the USB memory inserted into the printer's port as a data saving location when you scan data.

Making Copies From the Document Glass (Scan From Document Glass)

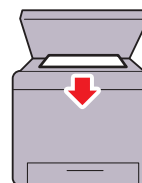


You can scan the pages of a book or a brochure from the document glass. When you scan documents using the document glass, place them facing down.

Making Copies From the DADF (Scan From DADF)



You can scan pieces of unbound paper using the duplex automatic document feeder (DADF). When you scan documents using the DADF, load them facing up.

Remote Authentication Using the LDAP or Kerberos Server (Dell Smart Multifunction Printer | S2815dn Only)

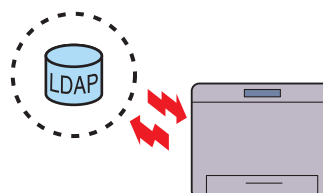

The user authentication using the LDAP or Kerberos server is available to control the user's login to the printer. Only users who can access the specified server are allowed to log in to the printer.


About the Printer

This chapter provides an overview of your printer.

 **NOTE:** The images used in this manual are those of the Dell Cloud Multifunction Printer | H815dw unless otherwise mentioned.

Front and Rear Views

Front View

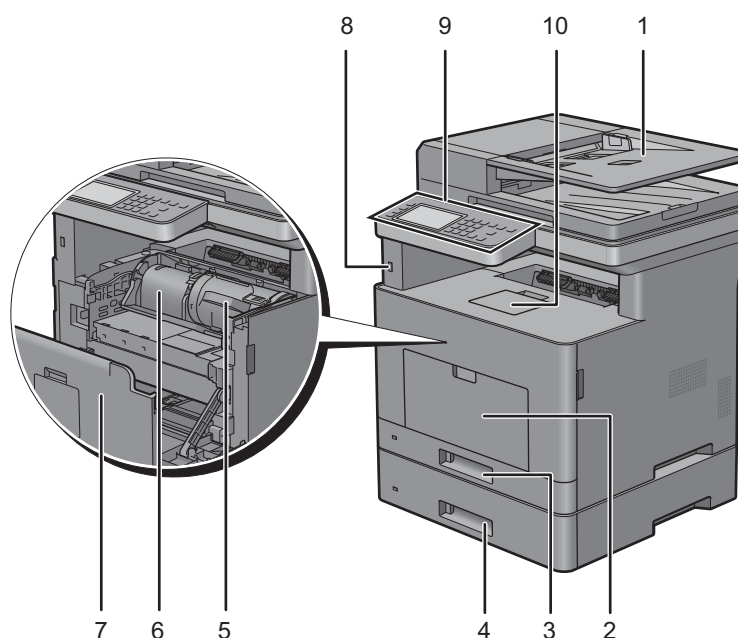


1	Duplex Automatic Document Feeder (DADF)	6	Drum Cartridge
2	Multipurpose Feeder (MPF)	7	Front Cover
3	Tray1	8	Front USB Port
4	Optional 550-Sheet Feeder (Tray2)	9	Operator Panel
5	Toner Cartridge	10	Output Tray Extension

 **NOTE:** Extend the output tray extension to prevent the printed paper from falling off the printer.


 **NOTE:** The operator panel can be flipped up until it clicks to make it easier to take out the printed paper or the drum cartridge.

Rear View

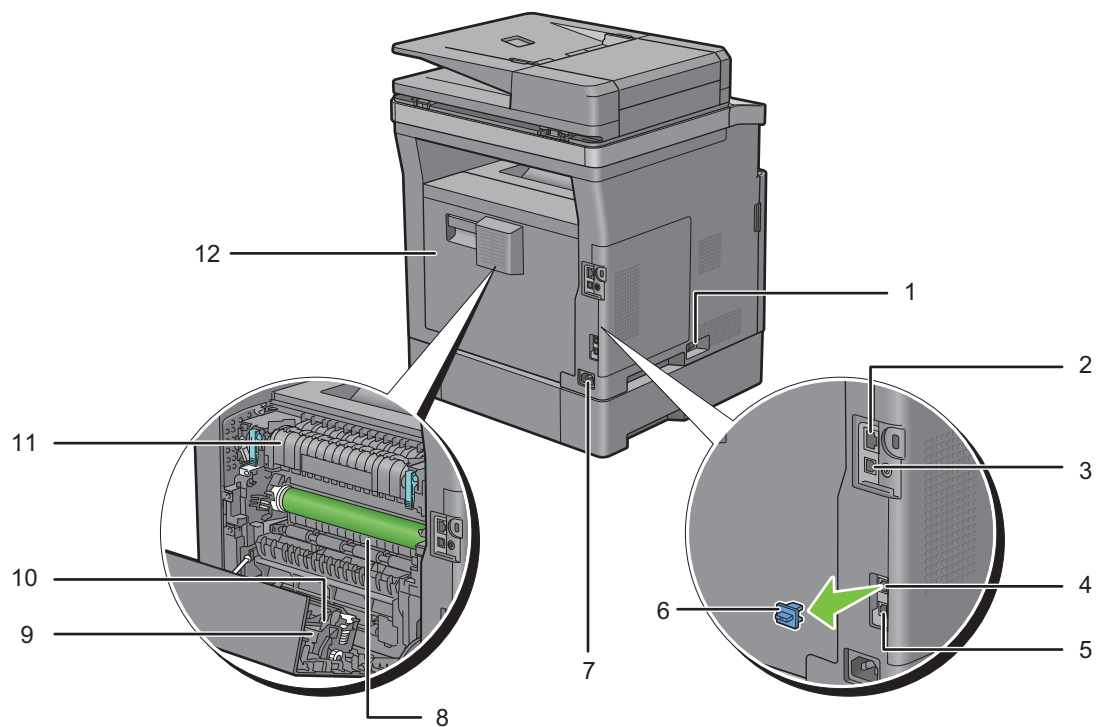

1	Power Switch	7	Power Connector
2	Ethernet Port	8	Chute
3	USB Port	9	Duplex Unit
4	Phone Connector	10	Transfer Unit
5	Wall Jack Connector	11	Fusing Unit
6	"Blue" Plug	12	Rear Cover

Duplex Automatic Document Feeder (DADF)

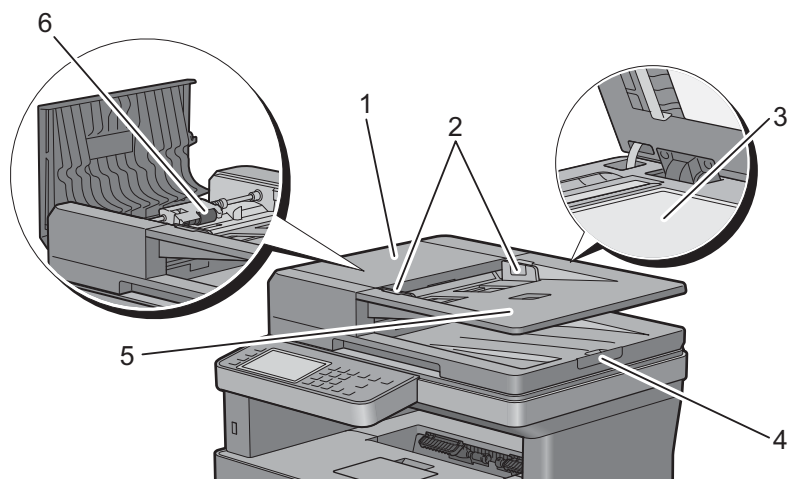

1 DADF Cover

2 Document Guides

3 Document Glass

4 Document Stopper

5 Document Feeder Tray


6 DADF Feed Roller



NOTE: Pull out the document stopper to prevent the document from falling off the printer.

Space Requirements

Provide enough room to open the printer trays, covers, and optional accessories, and for proper ventilation.

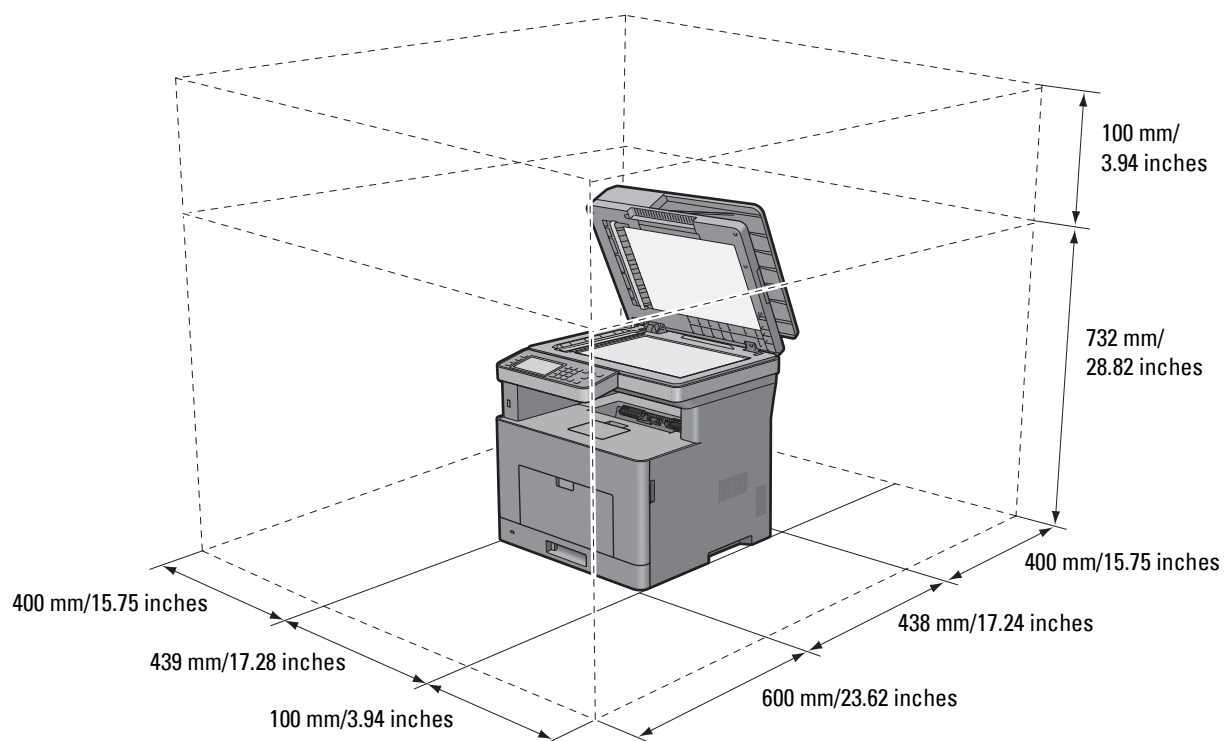

Operator Panel



For more information on the operator panel, see "About the Operator Panel."

Additional Components

Optional Accessories

The following optional accessory is available for the printer.

- Optional 550-sheet feeder

Non-bundled Items


The following items are required for connecting the printer to a computer or a network. Please purchase them as needed.

- USB cable
- Ethernet cable

Securing the Printer

To protect your printer from theft, you can use the optional Kensington lock.

Attach the Kensington lock to the security slot on your printer.

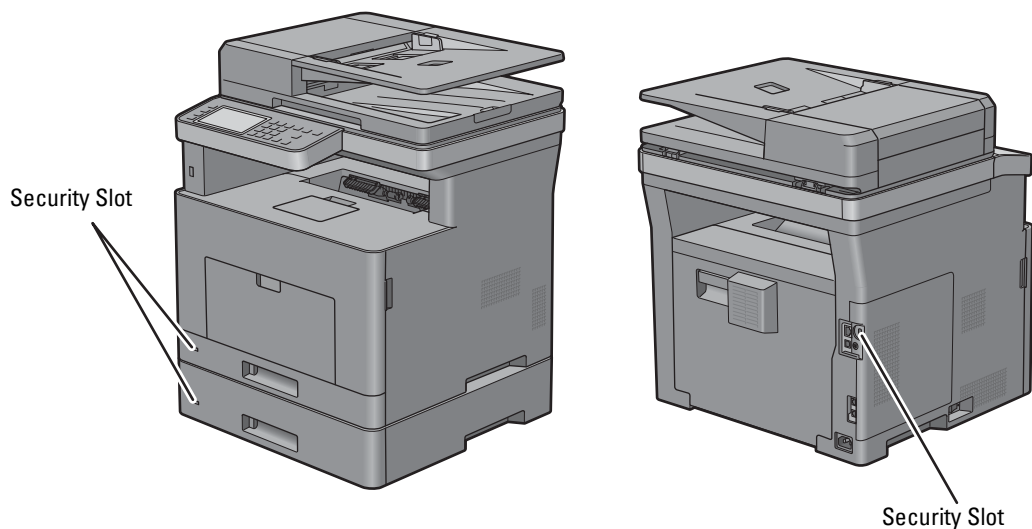

For details, see the operating instructions supplied with the Kensington lock.

Ordering Supplies

You can order consumables from Dell online when using a networked printer. Enter the IP address of your printer in your web browser, launch the **Dell Printer Configuration Web Tool**, and click the web address under **Order Supplies at**: to order toner or supplies for your printer.

You can also order replacement toner cartridges or supplies from Dell by using the **Dell Supplies Management System**:

 **NOTE:** For Macintosh, start the Status Monitor Widget, and then select **Order Supplies** button to open **Order** window.

- 1 Double-click the icon on your desktop.



If you cannot find the icon on your desktop:

- a Right-click **DLRMM.EXE** under `x:\abc\Dell Printers\Additional Color Laser Software\Reorder`, where `x:\abc` is the location where the printer software is installed.
- b Choose **Send To** from the drop-down menu, and then click **Desktop (create shortcut)** on the submenu.

The **Dell Supplies Management System** window appears.

You can also launch the Dell Supplies Management System by clicking **Start → All Programs → Dell Printers → Dell Cloud Multifunction Printer - H815dw** or **Dell Smart Multifunction Printer - S2815dn → Dell Supplies Management System**.

- 2 Click the **Visit Dell printer supplies ordering web site** link (www.dell.com/supplies), or order Dell printer supplies by phone.

To ensure that you get the best service, have your Dell printer's Service Tag ready.


For the location of your Service Tag, see "Express Service Code and Service Tag."

Setting Up the Printer (Printer Setup)

5	Overview of the Printer Setup.....	43
6	Installing Optional Accessory.....	45
7	Connecting and Setting Up Your Printer	53
8	Setting the IP Address	75
9	Loading Paper.....	79
10	Installing Printer Drivers on Windows® Computers	83
11	Installing Printer Drivers on Macintosh Computers.....	95
12	Installing Printer Drivers on Linux Computers (CUPS)	99

Overview of the Printer Setup

The following are the procedures necessary to set up the printer.

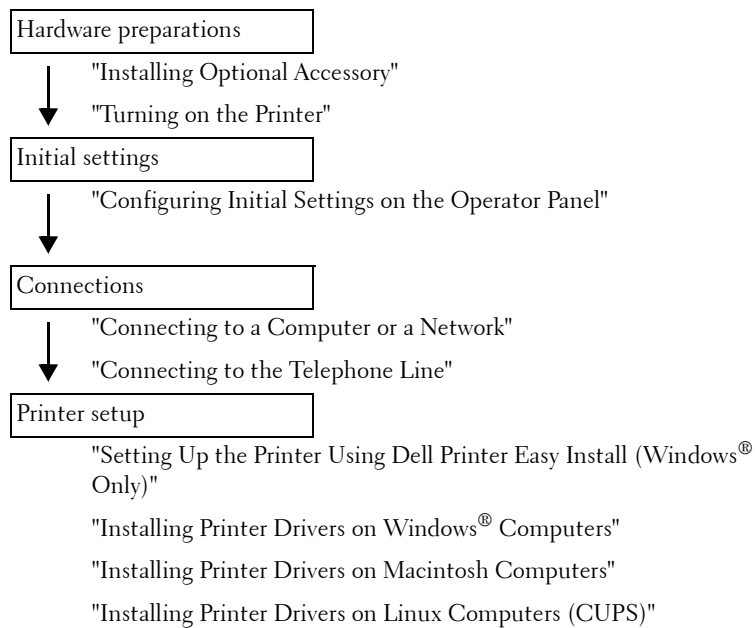

Installing Optional Accessory

This chapter describes how to install the optional 550-sheet feeder (tray2).

 **NOTE:** The images used in this manual are those of the Dell™ Cloud Multifunction Printer | H815dw unless otherwise mentioned.

Installing the Optional 550-Sheet Feeder


 **WARNING:** If you install the optional 550-sheet feeder after setting up the printer, be sure to turn off the printer, unplug the power cable, and disconnect all cables from the rear of the printer before starting this task.

 **NOTE:** The *Software and Documentation* disc also contains video instructions. In the main menu window of **Dell Printer Easy Install**, click **Installation Video**.


- 1 Ensure that the printer is turned off, and then disconnect all cables from the rear of the printer.
- 2 Remove the tape and the bag holding the screws.

 **NOTE:** Save the screws as you will need them later.


- 3 Place the optional 550-sheet feeder in the same location that the printer is located.
- 4 Gently pull open the MPF cover.

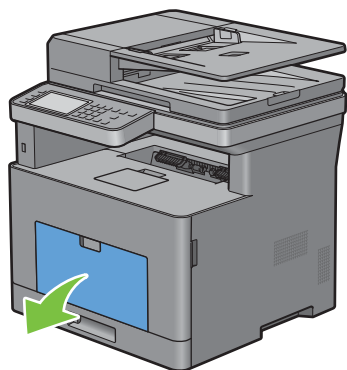


- 5 Grasp both sides of the MPF, and then pull the MPF from the printer.

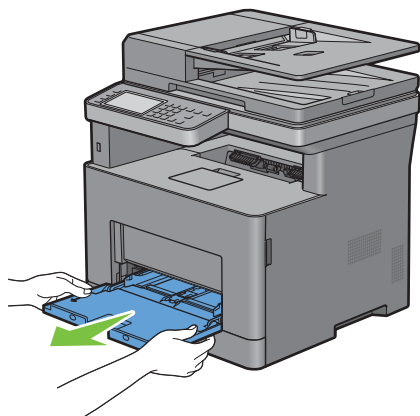

- 6** Pull tray1 out of the printer about 200 mm.

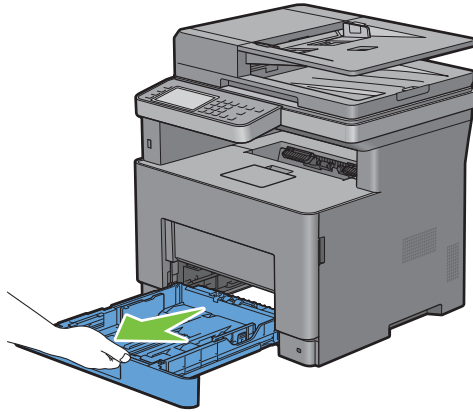

- 7** Hold tray1 with both hands, and remove it from the printer.

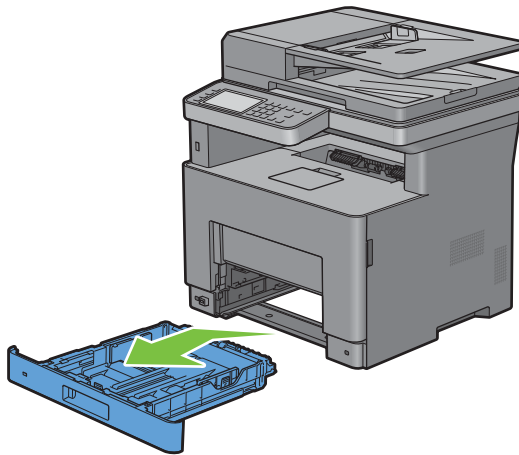


- 8 Lift the printer and align the five guide pins of the optional 550-sheet feeder with the holes at the bottom of the printer. Gently lower the printer onto the optional 550-sheet feeder.




WARNING: Two people are required to lift the printer.




WARNING: Be careful not to pinch your fingers when lowering the printer onto the optional 550-sheet feeder.

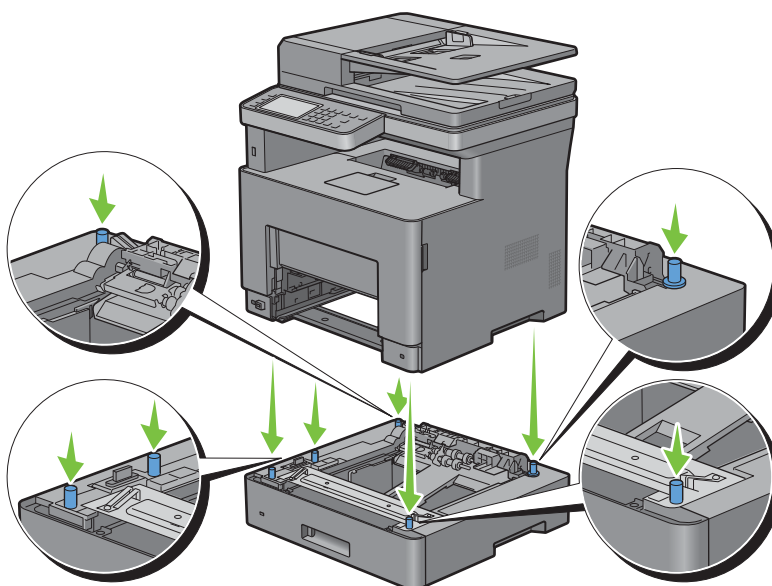


- 9 Secure the optional 550-sheet feeder to the printer by tightening the two screws provided with the feeder, using a coin or similar object.

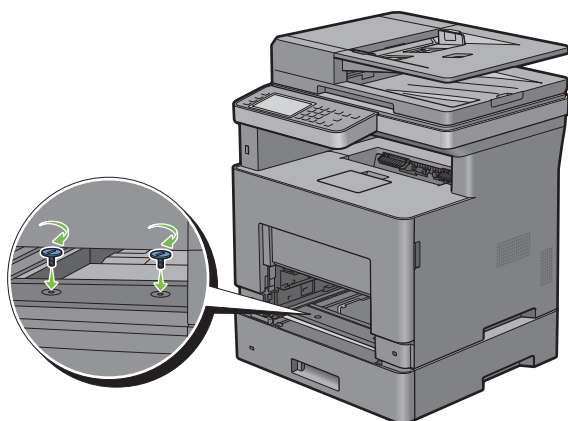

- 10 Insert tray1 into the printer, and push until it stops.

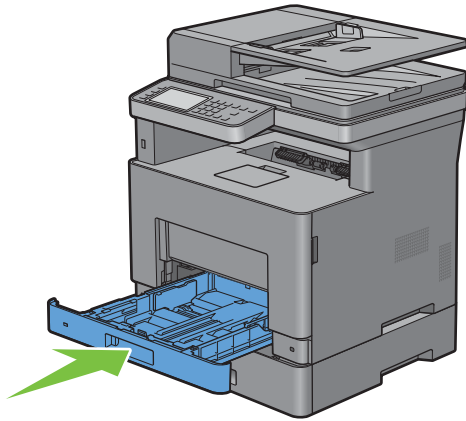

- 11 Insert the MPF into the printer, push until it stops, and close the MPF cover.

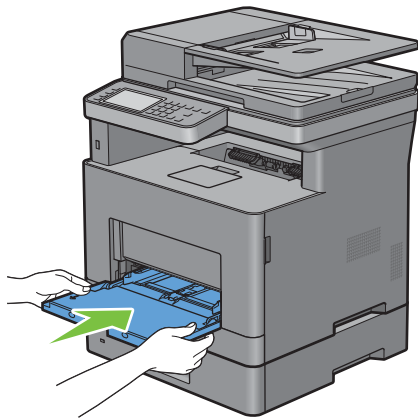

- 12 Re-connect all cables into the rear of the printer, and turn on the printer.
-  **NOTE:** The printer will automatically detect the attached tray but will not detect the paper type.
- 13 Print the system settings report to confirm that the optional 550-sheet feeder is installed correctly.
For details about how to print a system settings report, see "Report / List."
- 14 Confirm **Tray2 (550 Sheet Feeder)** is listed in the system settings report under **Printer Options**.
If the feeder is not listed, turn off the printer, unplug the power cable, and re-install the optional 550-sheet feeder.
- 15 After loading paper in the optional 550-sheet feeder, specify the paper type from the printer touch panel.
- a Press the  (**Information**) button.
 - b Tap the **Tools** tab, and then tap **Tray Management**.
 - c Tap **Tray Settings**.
 - d Tap **Tray2**.
 - e Tap **Type**.
 - f Tap  until the desired paper type appears, and then tap the desired paper type.
 - g Tap **OK**.
- 16 If you installed the optional 550-sheet feeder after installing the printer driver, update your driver by following the instructions for each operating system. If the printer is on a network, update the driver for each client.

Updating Your Driver to Detect 550-Sheet Feeder

When Using PCL Driver

Microsoft® Windows® 8/ Windows® 8 x64/ Windows® 8.1/ Windows® 8.1 x64/ Windows Server® 2012/ Windows Server® 2012 R2	1 On the Desktop screen, right-click the bottom left corner of the screen, and then click Control Panel → Hardware and Sound (Hardware for Windows Server® 2012/Windows Server® 2012 R2) → Devices and Printers. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Printer properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Devices and Printers dialog box.
Windows® 7/ Windows® 7 x64/ Windows Server® 2008 R2 x64	1 Click Start → Devices and Printers. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Printer properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Devices and Printers dialog box.
Windows Vista®/ Windows Vista® x64	1 Click Start → Control Panel → Hardware and Sound → Printers. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Printers dialog box.
Windows Server® 2008/ Windows Server® 2008 x64	1 Click Start → Control Panel → Printers. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Printers dialog box.
Windows Server® 2003/ Windows Server® 2003 x64	1 Click start → Printers and Faxes. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Printers and Faxes dialog box.

If the printer information is not updated automatically after clicking **Get Information from Printer**, follow these steps:

- 1 Click the **Configuration** tab, and then select **Installable Options**.
- 2 Select **Paper Tray Configuration** in the **Items** list box.
- 3 Select **2 Trays** in the **Paper Tray Configuration** drop-down menu in **Setting** for.
- 4 Click **OK**.

- 5 Close the **Devices and Printers**(**Printers**, or **Printers and Faxes**) dialog box.

When Using PS Driver

Windows® 8/ Windows® 8 x64/ Windows® 8.1/ Windows® 8.1 x64/ Windows Server® 2012/ Windows Server® 2012 R2	1 On the Desktop screen, right-click the bottom left corner of the screen, and then click Control Panel → Hardware and Sound (Hardware for Windows Server® 2012/Windows Server® 2012 R2) → Devices and Printers. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Printer properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Devices and Printers dialog box.
Windows® 7/ Windows® 7 x64/ Windows Server® 2008 R2 x64	1 Click Start → Devices and Printers. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Printer properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Devices and Printers dialog box.
Windows Vista®/ Windows Vista® x64	1 Click Start → Control Panel → Hardware and Sound → Printers. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Printers dialog box.
Windows Server® 2008/ Windows Server® 2008 x64	1 Click Start → Control Panel → Printers. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Printers dialog box.
Windows Server® 2003/ Windows Server® 2003 x64	1 Click Start → Printers and Faxes. 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn, and then select Properties. 3 Click the Configuration tab, and then select Bi-Directional Setup. 4 Select Get Information from Printer and then click OK. 5 Click Apply, and then click OK. 6 Close the Printers and Faxes dialog box.

If the printer information is not updated automatically after clicking **Get Information from Printer**, follow these steps:

- 1 Click the **Configuration** tab, and then select **Installable Options**.
- 2 Select **Paper Tray Configuration** in the **Items** list box.
- 3 Select **2 Trays** in the **Paper Tray Configuration** drop-down menu in **Setting** for.
- 4 Click **OK**.

5 Close the **Devices and Printers**(**Printers**, or **Printers and Faxes**) dialog box.

OS X 10.9.x/OS X 10.10.x	1 Select Printers & Scanners in System Preferences . 2 Select the printer in the Printers list, and click Options & Supplies . 3 Select Options , select the options that have been installed on the printers, and then click OK .
OS X 10.7.x/OS X 10.8.x	1 Select Print & Scan in System Preferences . 2 Select the printer in the Printers list, and click Options & Supplies . 3 Select Driver , select the options that have been installed on the printers, and then click OK .
Mac OS X 10.5.x/Mac OS X 10.6.x	1 Select Print & Fax in System Preferences . 2 Select the printer in the Printers list, and click Options & Supplies . 3 Select Driver , select the options that have been installed on the printers, and then click OK .

When Using XML Paper Specification (XPS) Driver



NOTE: The XML Paper Specification (XPS) driver does not support Windows Server® 2003 and Windows Server® 2003 x64.

Windows® 8/ Windows® 8 x64/ Windows® 8.1/ Windows® 8.1 x64/ Windows Server® 2012/ Windows Server® 2012 R2	1 On the Desktop screen, right-click the bottom left corner of the screen, and then click Control Panel → Hardware and Sound (Hardware for Windows Server® 2012/Windows Server® 2012 R2) → Devices and Printers . 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn , and then select Printer properties . 3 Click the Device Setting tab, and then select Available in Tray2 drop-down menu. 4 Click Apply , and then click OK . 5 Close the Devices and Printers dialog box.
Windows® 7/ Windows® 7 x64/ Windows Server® 2008 R2 x64	1 Click Start → Devices and Printers . 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn , and then select Printer properties . 3 Click the Device Setting tab, and then select Available in Tray2 drop-down menu. 4 Click Apply , and then click OK . 5 Close the Devices and Printers dialog box.
Windows Vista®/ Windows Vista® x64	1 Click Start → Control Panel → Hardware and Sound → Printers . 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn , and then select Properties . 3 Click the Device Setting tab, and then select Available in Tray2 drop-down menu. 4 Click Apply , and then click OK . 5 Close the Printers dialog box.
Windows Server® 2008/ Windows Server® 2008 x64	1 Click Start → Control Panel → Printers . 2 Right-click the printer icon of the Dell MFP H815dw or Dell MFP S2815dn , and then select Properties . 3 Click the Device Setting tab, and then select Available in Tray2 drop-down menu. 4 Click Apply , and then click OK . 5 Close the Printers dialog box.


Connecting and Setting Up Your Printer

To connect your printer to a computer or device, the following specification must be met for each of the connection type:

Connection type	Connection specifications
Wireless	IEEE 802.11b/802.11g/802.11n (Dell Cloud Multifunction Printer H815dw only)
Ethernet	10 Base-T/100 Base-TX/1000 Base-T
USB	USB 2.0
Phone connector	RJ11
Wall jack connector	RJ11



NOTE: The images used in this manual are those of the Dell Cloud Multifunction Printer | H815dw unless otherwise mentioned.

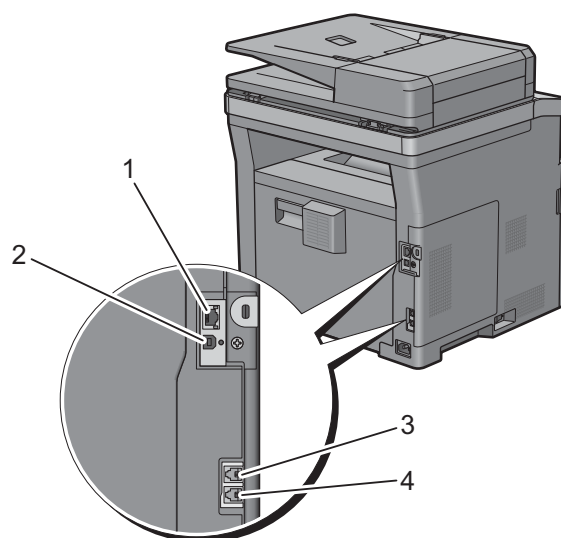

1 Ethernet port



2 USB port



3 Phone connector

PHONE



4 Wall jack connector

LINE



Turning on the Printer



WARNING: Do not use extension cords or power strips.




WARNING: The printer should not be connected to an Uninterruptible Power Supply (UPS) system.



NOTE: The *Software and Documentation* disc also contains video instructions. In the main menu window of **Dell Printer Easy Install**, click **Installation Video**.

- 1 Connect the power cable to the power connector on the rear of the printer, and then to a power source.

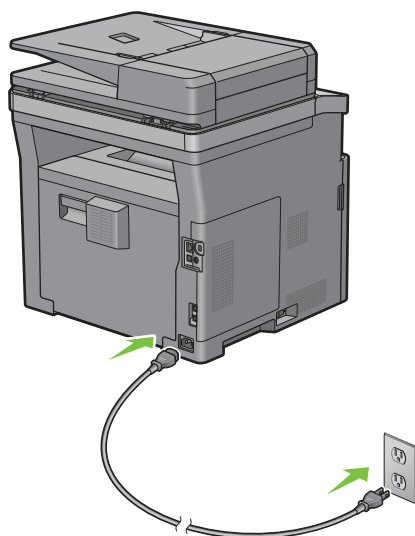

- 2 Turn on the printer.

Configuring Initial Settings on the Operator Panel

You need to set the printer language, country, clock date, time, and fax settings when you turn on the printer for the first time.

When you turn the printer on, the wizard screen to perform the initial setup appears on the touch panel. Follow the steps below to set the initial settings.



NOTE: If you do not start configuring the initial settings, the printer automatically restarts in 3 minutes, and the **Home** screen appears on the touch panel. After that, you can set the following initial setup by enabling **Power on Wizard** on the touch panel or **Dell Printer Configuration Web Tool** if needed.

For more information on operator panel, see "Operator Panel."

For more information on **Dell Printer Configuration Web Tool**, see "Dell™ Printer Configuration Web Tool."

- 1 The **Select Your Language** screen appears.
 - a Tap  until desired language appears, and then tap the desired language.

English
Français
Italiano
Deutsch
Español

Dansk
Nederlands
Norsk
Svenska

b Tap **Next**.

2 The **Date & Time** screen appears.

a Tap **Time Zone**.

b Tap ▼ until the desired geographic region appears, and then tap the desired geographic region.

c Tap ▼ until the desired time zone appears, and then tap the desired time zone.

Geographic Region	Time Zone
Africa	(UTC) Accra, Bamako, Dakar, Nouakchott
	(UTC) Casablanca
	(UTC +01:00) Algiers, Douala, Libreville, Luanda
	(UTC +01:00) Tunis
	(UTC +01:00) Windhoek
	(UTC +02:00) Cairo
	(UTC +02:00) Harare, Johannesburg, Kinshasa, Tripoli
	(UTC +03:00) Addis Ababa, Khartoum, Mogadishu, Nairobi

Geographic Region	Time Zone
Americas	(UTC -10:00) Adak
	(UTC -09:00) Alaska
	(UTC -08:00) Pacific Time (US & Canada)
	(UTC -08:00) Tijuana
	(UTC -07:00) Arizona, Dawson Creek, Sonora
	(UTC -07:00) Chihuahua, Mazatlan
	(UTC -07:00) Mountain Time (US & Canada)
	(UTC -06:00) Cancun, Mexico City, Monterrey
	(UTC -06:00) Central America
	(UTC -06:00) Central Time (US & Canada)
	(UTC -06:00) Saskatchewan
	(UTC -05:00) Atikokan, Resolute
	(UTC -05:00) Bogota, Lima, Panama, Quito
	(UTC -05:00) Cayman Islands, Jamaica, Port-au-Prince
	(UTC -05:00) Eastern Time (US & Canada)
	(UTC -05:00) Grand Turk
	(UTC -05:00) Havana
	(UTC -04:30) Caracas
	(UTC -04:00) Asuncion
	(UTC -04:00) Atlantic Time (Canada)
	(UTC -04:00) Blanc-Sablon
	(UTC -04:00) Caribbean Islands
	(UTC -04:00) Cuiaba
	(UTC -04:00) Georgetown, La Paz, Manaus
	(UTC -04:00) Thule
	(UTC -03:30) St. John's
	(UTC -03:00) Brasilia, Cayenne, Paramaribo
	(UTC -03:00) Buenos Aires
	(UTC -03:00) Greenland
	(UTC -03:00) Miquelon
	(UTC -03:00) Montevideo
	(UTC -02:00) Noronha
Antarctica	(UTC -04:00) Palmer Archipelago, Santiago
	(UTC -03:00) Rothera
	(UTC +03:00) Syowa
	(UTC +06:00) Mawson, Vostok
	(UTC +07:00) Davis
	(UTC +08:00) Casey
	(UTC +10:00) Dumont d'Urville
	(UTC +12:00) McMurdo

Geographic Region	Time Zone
Asia	(UTC +02:00) Amman
	(UTC +02:00) Beirut
	(UTC +02:00) Damascus
	(UTC +02:00) Jerusalem
	(UTC +02:00) Nicosia
	(UTC +02:00) Palestine
	(UTC +03:00) Aden, Baghdad, Qatar, Riyadh
	(UTC +03:30) Tehran
	(UTC +04:00) Baku
	(UTC +04:00) Dubai, Muscat, Tbilisi
	(UTC +04:00) Yerevan
	(UTC +04:30) Kabul
	(UTC +05:00) Aqtau, Aqtobe, Ashgabat, Samarkand
	(UTC +05:00) Ekaterinburg
	(UTC +05:00) Karachi
	(UTC +05:30) Colombo, Kolkata
	(UTC +05:45) Kathmandu
	(UTC +06:00) Almaty, Bishkek, Dhaka, Thimphu
	(UTC +06:00) Novosibirsk, Omsk
	(UTC +06:30) Yangon (Rangoon)
	(UTC +07:00) Bangkok, Ho Chi Minh, Hovd, Jakarta
	(UTC +07:00) Krasnoyarsk
	(UTC +08:00) Chongqing, Hong Kong, Shanghai
	(UTC +08:00) Irkutsk
	(UTC +08:00) Kuala Lumpur, Makassar, Manila, Singapore
	(UTC +08:00) Taipei
	(UTC +08:00) Ulaan Baatar
	(UTC +09:00) Dili, Jayapura
	(UTC +09:00) Pyongyang
	(UTC +09:00) Seoul
	(UTC +09:00) Tokyo
	(UTC +09:00) Yakutsk
	(UTC +10:00) Sakhalin, Vladivostok
	(UTC +11:00) Magadan
	(UTC +12:00) Anadyr, Kamchatka
Atlantic Ocean	(UTC -04:00) Bermuda
	(UTC -04:00) Stanley
	(UTC -02:00) South Georgia Island
	(UTC -01:00) Azores, Scoresbysund
	(UTC -01:00) Cape Verde
	(UTC) Reykjavik

Geographic Region	Time Zone
Australia	(UTC +08:00) Perth
	(UTC +08:45) Eucla
	(UTC +09:30) Adelaide
	(UTC +09:30) Darwin
	(UTC +10:00) Brisbane, Lindeman
	(UTC +10:00) Hobart, Melbourne, Sydney
	(UTC +10:30) Lord Howe Island
Europe	(UTC) Dublin, Edinburgh, Lisbon, London
	(UTC +01:00) Amsterdam, Berlin, Rome, Stockholm, Vienna
	(UTC +01:00) Belgrade, Bratislava, Budapest, Prague
	(UTC +01:00) Brussels, Copenhagen, Madrid, Paris
	(UTC +01:00) Sarajevo, Skopje, Warsaw, Zagreb
	(UTC +02:00) Athens, Bucharest, Istanbul
	(UTC +02:00) Helsinki, Kiev, Riga, Sofia
	(UTC +02:00) Kaliningrad, Minsk
	(UTC +03:00) Moscow
Indian Ocean	(UTC +04:00) Samara
	(UTC +03:00) Antananarivo, Comoro Islands, Mayotte
	(UTC +04:00) Mahe, Reunion
	(UTC +04:00) Mauritius
	(UTC +05:00) Kerguelen, Maldives
	(UTC +06:00) Chagos
	(UTC +06:30) Cocos Islands
Pacific Ocean	(UTC +07:00) Christmas Island
	(UTC -11:00) Midway Island, Niue, Samoa
	(UTC -10:00) Cook Islands, Hawaii, Tahiti
	(UTC -09:30) Marquesas Islands
	(UTC -09:00) Gambier Islands
	(UTC -08:00) Pitcairn Islands
	(UTC -06:00) Easter Island
	(UTC -06:00) Galapagos Islands
	(UTC +09:00) Palau
	(UTC +10:00) Guam, Port Moresby, Saipan
	(UTC +11:00) Efate, Guadalcanal, Kosrae
	(UTC +11:30) Norfolk Island
	(UTC +12:00) Auckland
	(UTC +12:00) Fiji, Marshall Islands
	(UTC +12:45) Chatham
	(UTC +13:00) Tongatapu
	(UTC +14:00) Kiritimati

- d** Tap OK.
- e** Tap Date.
- f** Select a date format from the menu displayed by selecting Format.

YYYY/MM/DD
DD/MM/YYYY
MM/DD/YYYY

- g** After tapping the box under Year, tap - or +, or use the number pad to enter the desired value. Repeat this step to enter the desired value for Month and Day.
- h** Tap OK.
- i** Tap Time.
- j** Select the time format from 12 Hour or 24 Hour. If you select 12 Hour, select AM or PM.
- k** After tapping the box under Hour, use the number pad to enter the desired value. Repeat this step to enter the desired value for Minute.
- l** Tap OK.
- m** Tap Next.

3 The Fax (Do you want to setup Fax Now?) screen appears.

To set Fax settings, select Yes, Setup FAX and follow the procedure below. To end the settings, select No, I'll Do It Later and proceed to Step 4.

- a** Enter the fax number of the printer using the number pad.
 - b** Tap Country.
 - c** Tap ▼ until the desired country appears, and then tap the desired country.
- The default paper size is automatically set when you select a country.

Australia	A4
Austria	A4
Belgium	A4
Canada	Letter
Colombia	Letter
Denmark	A4
France	A4
Germany	A4
Ireland	A4
Italy	A4
Luxembourg	A4
Malaysia	A4
Mexico	Letter
Netherlands	A4
New Zealand	A4
Norway	A4
Singapore	A4

South Africa	A4
Spain	A4
Sweden	A4
Switzerland	A4
Thailand	A4
United Kingdom	A4
United States	Letter
Unknown	Letter

d Tap **Next**.

4 The **Setup Complete (Congratulations, setup is complete.)** screen appears.

5 Tap **OK**.

The printer automatically restarts after tapping **OK**.

Connecting to a Computer or a Network


 **NOTE:** The *Software and Documentation* disc also contains video instructions. In the main menu window of **Dell Printer Easy Install**, click **Installation Video**.

 **NOTE:** Before making connections, be sure to turn off the printer.

Connecting to a Computer Using the USB Cable (Direct Connection)

A local printer is a printer which is directly connected to your computer using the USB cable. If your printer is connected to a network instead of your computer, skip this section and go to "Connecting to a Network Using the Ethernet Cable."

- 1 Connect the smaller USB connector into the USB port at the rear of the printer.

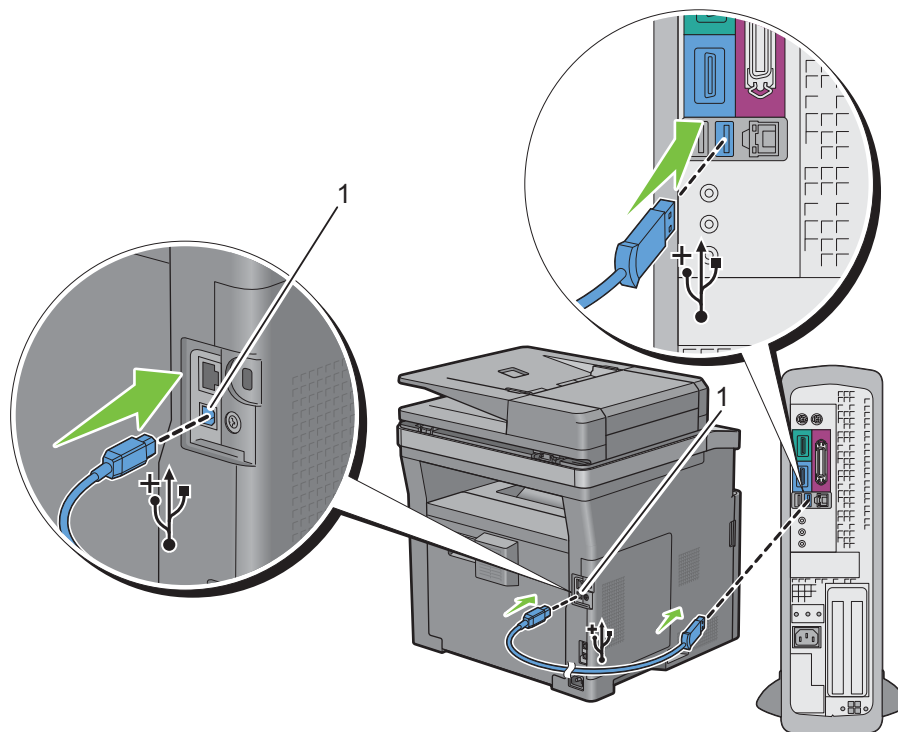

1 USB port


 **NOTE:** Ensure that you match the USB symbol on the cable to the USB symbol on the printer.

- 2 Connect the other end of the cable into a USB port of the computer.

 **CAUTION:** Do not connect the printer USB cable to a USB port located on the keyboard.

Connecting to a Network Using the Ethernet Cable

- 1 Connect the Ethernet cable.

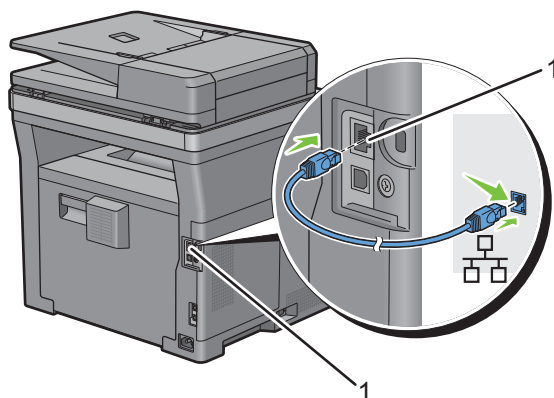

1 Ethernet port

To connect the printer to the network, connect one end of an Ethernet cable into the Ethernet port on the rear of the printer, and the other end to a LAN drop or hub.

Connecting to a Wireless Network

 **NOTE:** The wireless network connection feature is available on the Dell Cloud Multifunction Printer | H815dw only.

You can connect the Dell Cloud Multifunction Printer | H815dw to a wireless network, using the built-in wireless network function.

For a wireless connection setup, see "Configuring the Wireless Settings."

 **NOTE:** To use the Dell Cloud Multifunction Printer | H815dw through wireless connection, be sure to disconnect the Ethernet cable.

Connecting to the Telephone Line




CAUTION: Do not connect your printer directly to a Digital Subscriber Line (DSL). This may damage the printer. To use a DSL, you will need to use an appropriate DSL filter. Contact your service provider for the DSL filter.




NOTE: The *Software and Documentation* disc also contains video instructions. In the main menu window of **Dell Printer Easy Install**, click **Installation Video**.


- 1 Connect one end of a telephone line cord into the wall jack connector and the other end into an active wall jack.

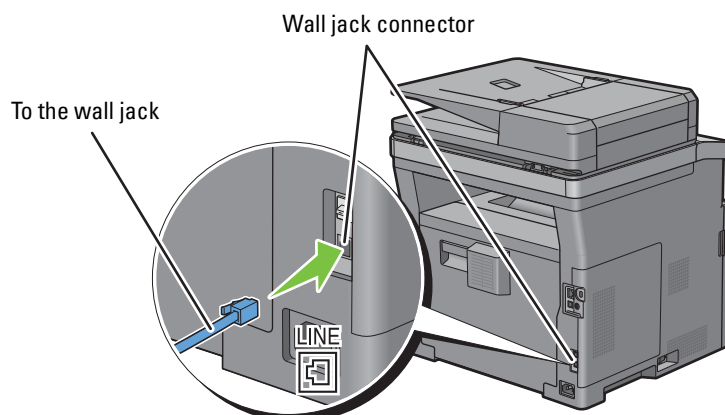


- 2 If the "Blue" plug is attached to the phone connector, remove it.

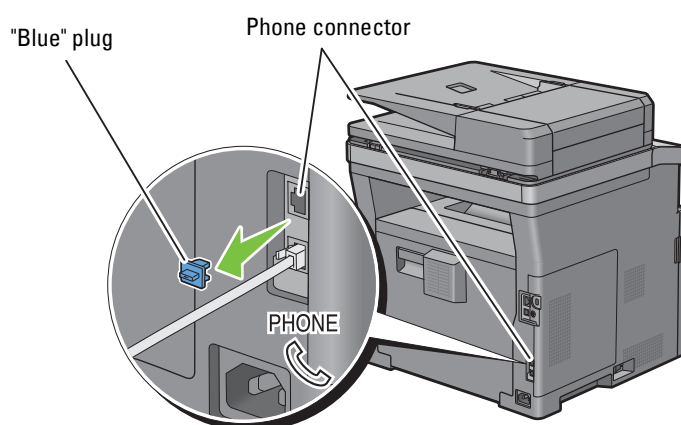

- 3 To connect a telephone and/or answering machine to your printer, connect the telephone or answering machine line cord into the phone connector (PHONE).

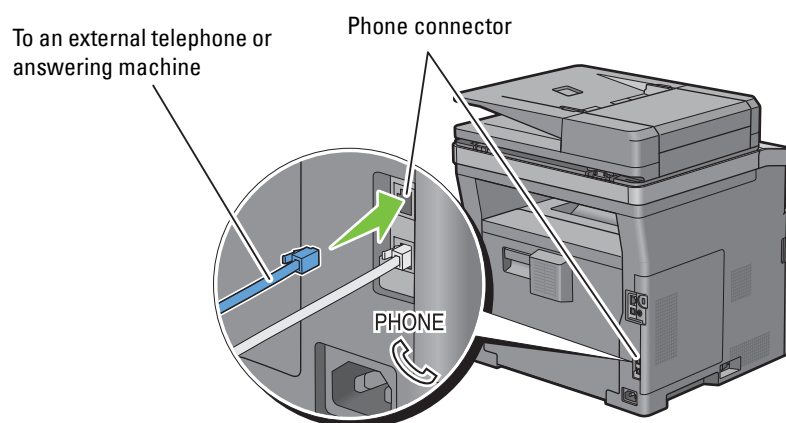

If the phone communication is serial in your country (such as Germany, Sweden, Denmark, Austria, Belgium, Italy, France and Switzerland), and that you are supplied with a "Yellow" terminator, insert the "Yellow" terminator into the phone connector (PHONE).

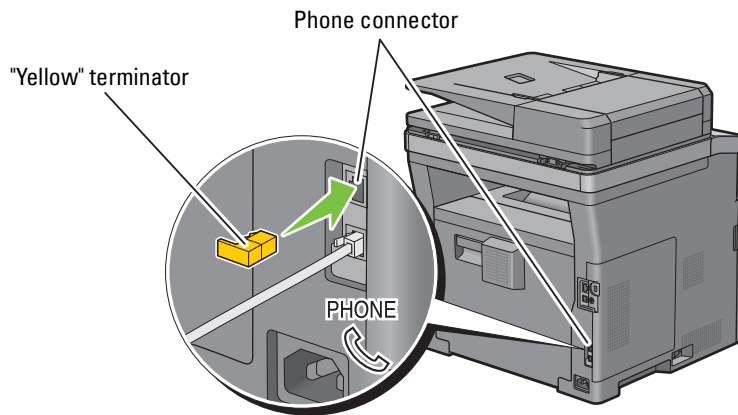

Setting Up the Printer Using Dell Printer Easy Install (Windows® Only)

NOTE: To set up the printer connected with Macintosh computers or Linux computers, see "Installing Printer Drivers on Macintosh Computers" or "Installing Printer Drivers on Linux Computers (CUPS)" respectively.

Basic Setup

To set up the printer, you can use the **Dell Printer Easy Install** program on the computer running a Microsoft® Windows® operating system.

The program first searches for the printer and grasps how the printer is connected to the computer. Based on that information, the program will automatically try to configure the printer, and install the drivers and software to your computer.

Before starting this basic setup, make sure that the printer is turned off, and ensure the cable connections as follows:

To set up the Dell Cloud Multifunction Printer | H815dw as a wireless printer, disconnect the Ethernet cable from the printer. The printer will be connected to the same wireless network that the computer used is currently connected.


To set up the printer as a network (wired) printer, connect the Ethernet cable to the printer.

To set up the printer as a USB printer, connect the USB cable to the printer.

NOTE: Where the wireless network connection is available, you cannot set up the Dell Cloud Multifunction Printer | H815dw as a USB printer in the basic setup. In this case, set up the printer following the procedures described in "Setting Up the Printer in Another Connection Method."

NOTE: For Windows Vista®, you cannot set up the Dell Cloud Multifunction Printer | H815dw automatically as a wireless printer in the basic setup. In this case, set up the printer manually following the procedures described in "Setting Up the Printer in Another Connection Method."

- 1 Insert the *Software and Documentation* disc provided with the printer into your computer.
The **Dell Printer Easy Install** program launches automatically.

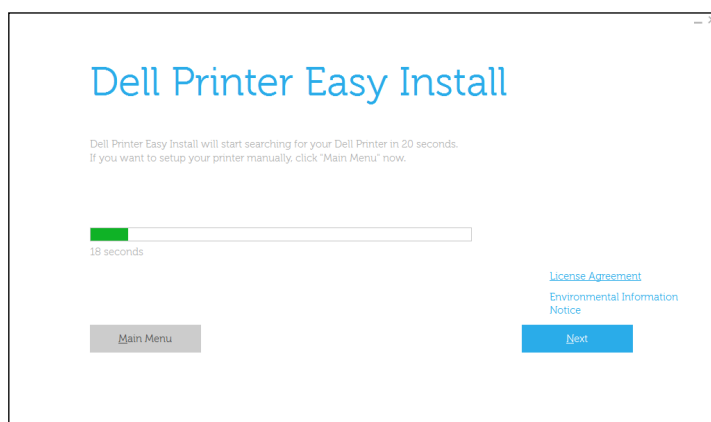

 **NOTE:** If the **Dell Printer Easy Install** program does not launch automatically, follow the procedure below.

For Windows Server® 2008 and Windows Server® 2008 R2

Click **start** → **Run**, enter `D:\setup_assist.exe` (where D is the drive letter of the optical drive) in the Run dialog box, and then click **OK**.

For Windows Vista® and Windows® 7

Click **Start** → **All Programs** → **Accessories** → **Run**, enter

`D:\setup_assist.exe` (where D is the drive letter of the optical drive) in the Run dialog box, and then click **OK**.

For Windows® 8, Windows® 8.1, Windows Server® 2012, and Windows Server® 2012 R2

Point to the top or bottom right corner of the screen, and then click **Search** → Type **Run** in the search box, click **Apps** (for Windows® 8 and Windows Server® 2012 only), and then click **Run** → Type `D:\setup_assist.exe` (where D is the drive letter of the optical drive), and then click **OK**.

- 2 Turn on the printer.
- 3 Wait until the screen changes or click **Next**.
Follow the instructions displayed on the screen.
- 4 Click **Finish** to exit the wizard when the **Ready to Print!** screen appears.
- 5 Eject the *Software and Documentation* disc.

If the Main Menu of Dell Printer Easy Install Appears Without Starting or Completing the Basic Setup


Proceed to step 4 in "Setting Up the Printer in Another Connection Method," and set up the printer manually following the on-screen instructions.

Setting Up the Printer in Another Connection Method

You can set up the printer, specifying the connection method other than the one used in the basic setup.


Before starting the setup procedure below, make sure that the printer is turned off, and ensure the cable connection as described in "Basic Setup."

- 1 Insert the *Software and Documentation* disc provided with the printer into your computer.
The **Dell Printer Easy Install** program launches automatically.
- 2 Click **Main Menu**.

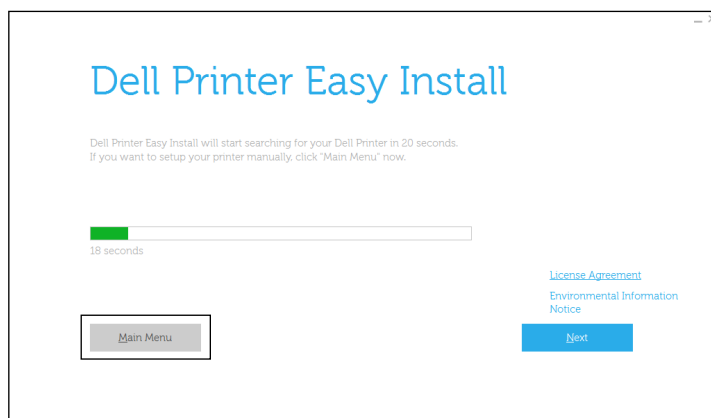

The Main Menu screen appears.

- 3 Turn on the printer.
- 4 Click **Setup**.

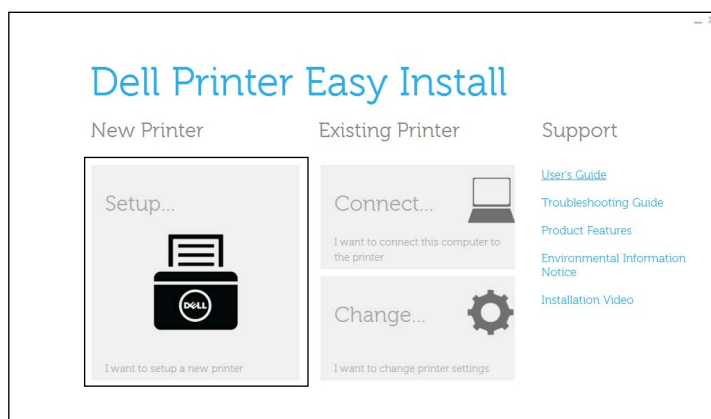

Follow the instructions displayed on the screen.

- 5 Click **Finish** to exit the wizard when the **Ready to Print!** screen appears.
- 6 Eject the *Software and Documentation* disc.

Configuring the Wireless Settings

NOTE: The wireless network connection feature is available on the Dell Cloud Multifunction Printer | H815dw only.

This section describes how to configure the wireless connection on Dell Cloud Multifunction Printer | H815dw. The specifications of the wireless connection are described below.

Item	Specification
Connectivity Technology	Wireless
Compliant Standards	IEEE 802.11b, 802.11g, and 802.11n

Item	Specification
Bandwidth	2.4 GHz
Data Transfer Rate	IEEE 802.11n: 65 Mbps IEEE 802.11g: 54, 48, 36, 24, 18, 12, 9, and 6 Mbps IEEE 802.11b: 11, 5.5, 2, and 1 Mbps
Security	64 (40-bit key)/128 (104-bit key) WEP, WPA-PSK (TKIP, AES), WPA2-PSK (AES), WPA-Enterprise (TKIP, AES) ^{*1} , WPA2-Enterprise (AES) ^{*1}
Wi-Fi Protected Setup (WPS) ^{*2}	Push-Button Configuration (PBC), Personal Identification Number (PIN)

^{*1} EAP method supports PEAPv0, EAP-TLS, EAP-TTLS PAP, and EAP-TTLS CHAP.

^{*2} WPS 2.0 compliant. WPS 2.0 works on access points with the following encryption types: Mixed mode PSK, WPA-PSK AES, WPA2-PSK AES, WPA-PSK TKIP, Open (No Security)

Determining the Wireless Network Settings

You need to know the settings for the wireless network to set up the wireless printer. For details of the settings, contact your network administrator.

Wireless Settings	SSID	Specifies the name that identifies the wireless network with up to 32 alphanumeric characters.
	Network Mode	Specifies the network mode from Ad-hoc or Infrastructure.
Security Settings	Security	Selects the encryption type from No Security, Mixed mode PSK [*] , WPA-PSK-TKIP, WPA2-PSK-AES, and WEP.
	Transmit Key	Specifies the transmit key from the list.
	WEP Key	Specifies the WEP key used through the wireless network only when WEP is selected as the encryption type.
	Passphrase	Specifies the passphrase of alphanumeric characters from 8 to 63 bytes long and the hexadecimal characters of 64 bytes long only when Mixed mode PSK [*] , or WPA2-PSK-AES is selected as the encryption type.

^{*} Mixed mode PSK automatically selects an available encryption type from WPA-PSK-TKIP, WPA-PSK-AES, or WPA2-PSK-AES.

You can select a method to configure the Wireless Connection from the following:

- Wizard Setup through Dell Printer Easy Install
- WPS-PBC^{*1*3}
- WPS-PIN^{*2*3}
- Auto SSID Setup
- Manual SSID Setup
- Dell Printer Configuration Web Tool

*1 WPS-PBC (Wi-Fi Protected Setup-Push Button Configuration) is a method to authenticate and register devices required for wireless configuration, by pressing the button provided on the access point via wireless routers, and then performing WPS-PBC setting on the operator panel. This setting is available only when the access point supports WPS.

*2 WPS-PIN (Wi-Fi Protected Setup-Personal Identification Number) is a method to authenticate and register devices required for wireless configuration, by entering PIN assignments in the printer and computer. This setting, performed through access point, is available only when the access points of your wireless router supports WPS.


*3 WPS 2.0 compliant. WPS 2.0 works on access points with the following encryption types: Mixed mode PSK, WPA-PSK AES, WPA2-PSK AES, WPA-PSK TKIP, Open (No Security)

 **NOTE:** If Panel Lock Control is set to Enable, you need to enter the four-digit password to enter the Admin Settings menu.


 **NOTE:** For details about using WPA-Enterprise-AES or WPA2-Enterprise-AES, see "Using Digital Certificates."

Configuring the Wireless Settings Using Dell Printer Easy Install


- 1 Insert the *Software and Documentation* disc provided with the printer into your computer. The **Dell Printer Easy Install** program launches automatically.
- 2 Click **Main Menu**.

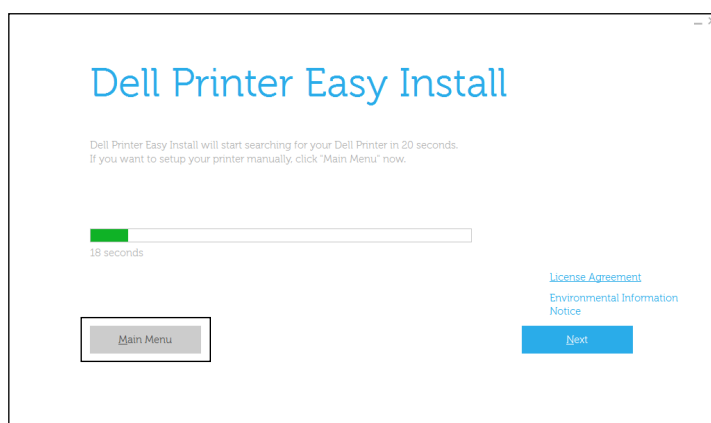

- 3** Click **Change**.

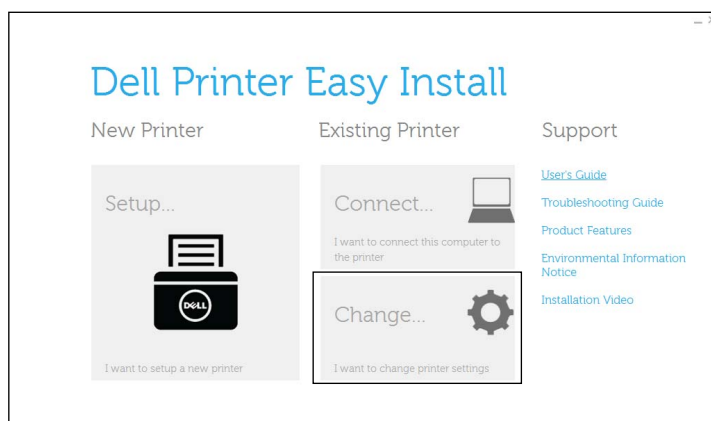

- 4** Select **Configure the Wi-Fi settings**, and then click **Next**.

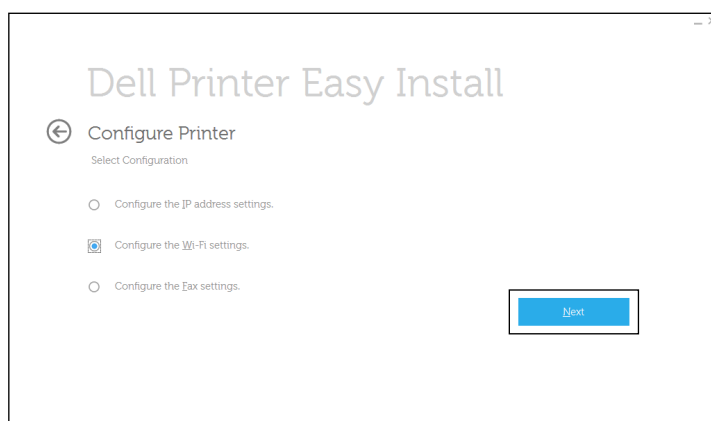

- 5** Follow the on-screen instructions, and configure the wireless settings of the printer.

For **WPS-PBC**, **WPS-PIN**, **Auto SSID Setup**, **Manual SSID Setup**, and **Dell Printer Configuration Web Tool**, see the following instructions.

Configuring the Wireless Settings Without Using Dell Printer Easy Install

WPS-PBC

You can start Push Button Configuration only from the operator panel.

 **NOTE:** WPS-PBC (Wi-Fi Protected Setup-Push Button Configuration) is a method to authenticate and register devices required for wireless configuration by pressing the button provided on the access point via wireless routers, and then performing WPS-PBC setting on the operator panel. This setting is available only when the access point supports WPS.

 **NOTE:** Before starting WPS-PBC, confirm the position of the WPS button (button name may vary) on the wireless LAN access point. For information about WPS operation on the wireless LAN access point, refer to the manual supplied with the wireless LAN access point.

- 1 Press the  (Information) button.
- 2 Tap the Tools tab, and then tap Admin Settings.
- 3 Tap Network.
- 4 Tap Wi-Fi.
- 5 Tap WPS Setup.
- 6 Tap Push Button Configuration.
- 7 Tap Start Configuration.

Ensure that the message Push WPS Button on router is displayed, and start the WPS-PBC on the wireless LAN access point (Registrar) within 2 minutes.

- 8 When the WPS operation is successful and the printer is rebooted, wireless LAN connection setting is completed.

WPS-PIN

The PIN code of WPS-PIN can only be configured from the operator panel.

 **NOTE:** WPS-PIN (Wi-Fi Protected Setup-Personal Identification Number) is a method to authenticate and register devices required for wireless configuration by entering PIN assignments to a printer and computer. This setting, performed through an access point, is available only when the access points of your wireless router support WPS.

- 1 Press the  (Information) button.
- 2 Tap the Tools tab, and then tap Admin Settings.
- 3 Tap Network.
- 4 Tap Wi-Fi.
- 5 Tap WPS Setup.
- 6 Tap PIN Code.
- 7 Write down the displayed 8-digit PIN code or tap Print PIN Code. The PIN code is printed.
- 8 Tap Start Configuration.
- 9 Ensure that the message Operate Wireless Router is displayed, and enter the PIN code displayed on step 7 into the wireless LAN access point (Registrar).

 **NOTE:** For WPS operation on the wireless LAN access point, refer to the manual supplied with the wireless LAN access point.

- 10 When the WPS operation is successful and the printer is rebooted, wireless LAN connection setting is completed.

Auto SSID Setup

- 1 Press the  (Information) button.
- 2 Tap the Tools tab, and then tap Admin Settings.
- 3 Tap Network.
- 4 Tap Wi-Fi.
- 5 Tap Wi-Fi Setup Wizard.
The printer automatically searches the access points on wireless network.
- 6 Tap  until the desired access point appears, and then select the access point.
If the desired access point does not appear, go to "Manual SSID Setup."

 **NOTE:** Some hidden SSID may not be displayed. If the SSID is not detected turn on SSID broadcast from the router.

- 7 Tap Next.
- 8 Enter the WEP key or passphrase.
When the encryption type of the selected access point is WEP in step 6:
 - a Tap the WEP Key text box, and then enter the WEP key.
 - b Tap OK.When the encryption type of the selected access point is WPA, WPA2 or Mixed in step 6:
 - a Tap the Passphrase text box, and then enter the passphrase.
 - b Tap OK.
- 9 The **Restart System** screen appears.
- 10 Turn off the printer, and turn it on again to apply the settings.
Wireless LAN connection setting is complete.

Manual SSID Setup

- 1 Press the  (Information) button.
- 2 Tap the Tools tab, and then tap Admin Settings.
- 3 Tap Network.
- 4 Tap Wi-Fi.
- 5 Tap Wi-Fi Setup Wizard.
- 6 Tap the Manual SSID Setup check box, and then tap Next.
- 7 Enter the SSID, and then tap Next.
- 8 Select the network mode from Infrastructure and Ad-hoc depending on your environment, and then tap Next.
If you select Infrastructure, proceed to step 9.
If you select Ad-hoc, proceed to step 10.

- 9 Select the encryption type from **No Security**, **Mixed mode PSK**, **WPA2-PSK-AES**, or **WEP**.

If you do not set security for your wireless network:

- a Tap ▼ until **No Security** appears, and then tap **No Security**.
- b Tap **OK**.

To use **Mixed mode PSK** or **WPA2-PSK-AES** encryption:

- a Tap ▼ until **Mixed mode PSK**, or **WPA2-PSK-AES** appears, and then tap the desired encryption type.
- b Tap the **Passphrase** text box, and then enter the passphrase.
- c Tap **OK**.

To use **WEP** encryption:

- a Tap ▼ until **WEP** appears, and then tap **WEP**.
- b Tap the **WEP Key** text box, and then enter the WEP key.
- c Tap **Transmit Key**, and then select the desired transmit key from **Auto** or **WEP Key 1** to **WEP Key 4**.
- d Tap **OK**.

Proceed to step 11.

- 10 Select the encryption type from **No Security** or **WEP**.

If you do not set security for your wireless network:

- a Tap ▼ until **No Security** appears, and then tap **No Security**.
- b Tap **OK**.

To use **WEP** encryption:

- a Tap ▼ until **WEP** appears, and then tap **WEP**.
- b Tap the **WEP Key** text box, and then enter the WEP key.
- c Tap **Transmit Key**, and then select the desired transmit key from **Auto** or **WEP Key 1** to **WEP Key 4**.
- d Tap **OK**.

- 11 The **Restart System** screen appears.

- 12 Turn off the printer, and turn it on again to apply the settings.

Wireless LAN connection setting is complete.

Dell Printer Configuration Web Tool



NOTE: For details about using **WPA-Enterprise-AES** or **WPA2-Enterprise-AES**, see "Using Digital Certificates."

- 1 Ensure that the printer is turned off.
- 2 Connect the printer to the network with an Ethernet cable.
For details about how to connect the Ethernet cable, see "Connecting to a Computer or a Network."
- 3 Turn on the printer.
- 4 Launch the **Dell Printer Configuration Web Tool** by entering the IP address of the printer in your web browser.
- 5 Click **Print Server Settings**.
- 6 Click **Print Server Settings** tab.
- 7 Click **Wi-Fi**.
- 8 Enter the SSID in the **SSID** text box.
- 9 Select **Ad-Hoc** or **Infrastructure** in the **Network Type** drop-down list box.

- 10 Select the encryption type from No Security, WEP, WPA-PSK-AES/WEP2-PSK AES, and Mixed Mode PSK in the Encryption drop-down list box, and then set each item for the encryption type selected.

 **NOTE:** For details on each item, see "Dell™ Printer Configuration Web Tool."

- 11 Click Apply New Settings to apply the settings.
- 12 Turn off the printer, disconnect the Ethernet cable and turn it on again.
Wireless LAN connection setting is complete.

Reconfiguring the Wireless Settings


To change the wireless settings from your computer, perform the following.

 **NOTE:** To change the wireless settings through wireless connection, ensure that the wireless connection setting is completed in "Configuring the Wireless Settings."

Reconfiguring the Wireless Settings Using Dell Printer Configuration Web Tool

 **NOTE:** The following settings are available when the network mode is set to infrastructure in "Configuring the Wireless Settings."

- 1 Check the IP address of the printer.
 - a Press the  (Information) button.
 - b Tap About This MFP.
 - c Tap the Network tab.
 - d Tap  button until IP (v4) Address appears, and then check the IP address displayed in the IP (v4) Address.
- 2 Launch the Dell Printer Configuration Web Tool by entering the IP address of the printer in your web browser.

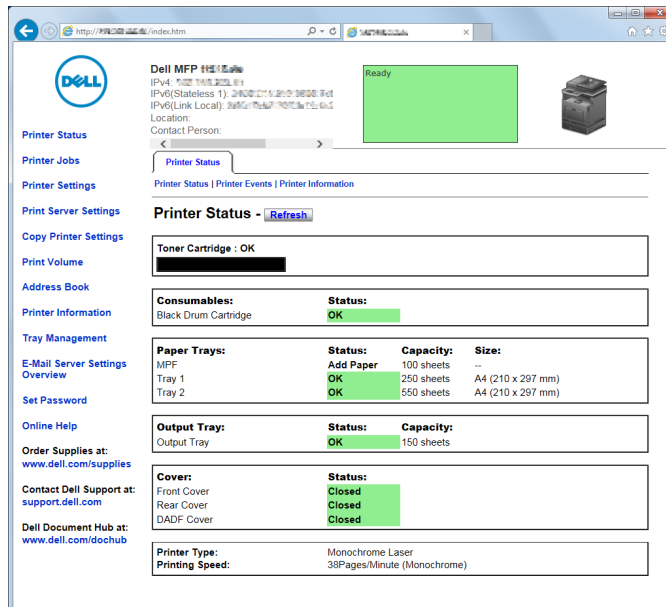

- 3 Click Print Server Settings.
- 4 Click Print Server Settings tab.
- 5 Click Wi-Fi.
- 6 Change the wireless settings of the printer.


- 7 Reboot the printer.
- 8 Change the wireless settings on your computer or access point accordingly.



NOTE: To change the wireless settings on your computer, refer to the manuals provided with the wireless adapter or if your computer provides a wireless adapter tool, change the wireless settings using that tool.

Reconfiguring the Wireless Settings Using Dell Printer Easy Install

- 1 Insert the *Software and Documentation* disc provided with the printer into your computer. The **Dell Printer Easy Install** program launches automatically.
- 2 Click **Main Menu**.
- 3 Click **Change**.
The **Configure Printer** window appears.
- 4 Select **Configure the Wi-Fi settings**, and then click **Next**.

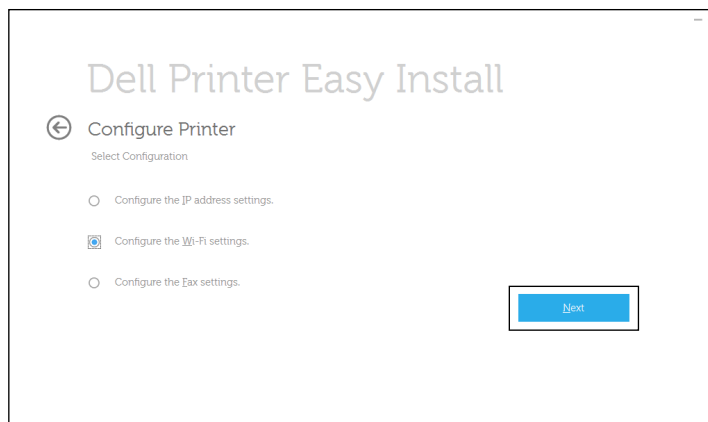

- 5 Follow the on-screen instructions, and change the wireless settings of the printer.

Reconfiguring the Wireless Settings Using Configuration Tool

- 1 Click **Start → All Programs → Dell Printers → Dell Cloud Multifunction Printer - H815dw** or **Dell Smart Multifunction Printer - S2815dn → Configuration Tool**.
The **Configure Printer** window of the **Dell Printer Easy Install** program appears.
- 2 Select **Configure the wireless network settings**, and click **Next**.
- 3 Follow the on-screen instructions, and change the wireless settings of the printer.

Setting the IP Address

 **NOTE:** The images used in this manual are those of the Dell™ Cloud Multifunction Printer | H815dw unless otherwise mentioned.

Assigning an IP Address

An IP address is a unique number that consists of four sections that are delimited by a period and can include up to three digits in each section, for example, 111 . 222 . 33 . 44.

You can select the IP mode from Dual Stack, IPv4, and IPv6. If your network supports both IPv4 and IPv6, select Dual Stack.

Select the IP mode of your environment, and then set IP address, subnet mask (for IPv4 only), and gateway address.

 **CAUTION:** Assigning an IP address that is already in use can cause network performance issues.


 **NOTE:** Assigning an IP address is considered as an advanced function and is normally done by a system administrator.

 **NOTE:** When you assign an IP address manually in IPv6 mode, use the **Dell Printer Configuration Web Tool**. To display the **Dell Printer Configuration Web Tool**, use the link-local address. To confirm the link-local address, print a system settings report and check the **Link-Local Address** under **Network (Wired)** or **Network (Wireless)**. For details about how to print a system settings report, see "Report / List."


 **NOTE:** If Panel Lock Control is set to Enable, you need to enter the four-digit password to enter the Admin Settings menu.

When Using the Dell Printer Easy Install

- 1 Insert the *Software and Documentation* disc provided with the printer into your computer. The **Dell Printer Easy Install** program launches automatically.
- 2 Click **Main Menu**.

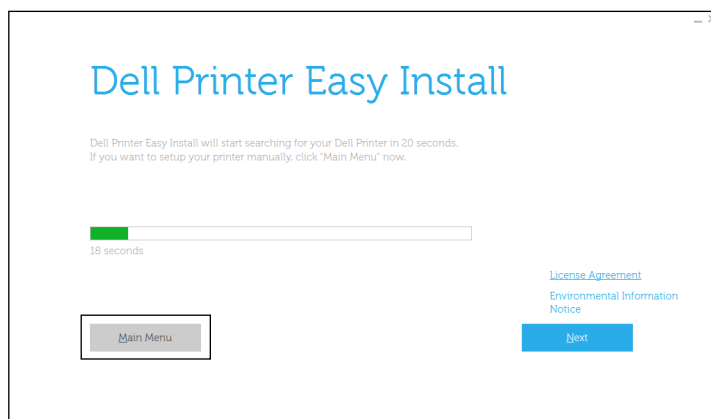


- 3 Click **Change**.

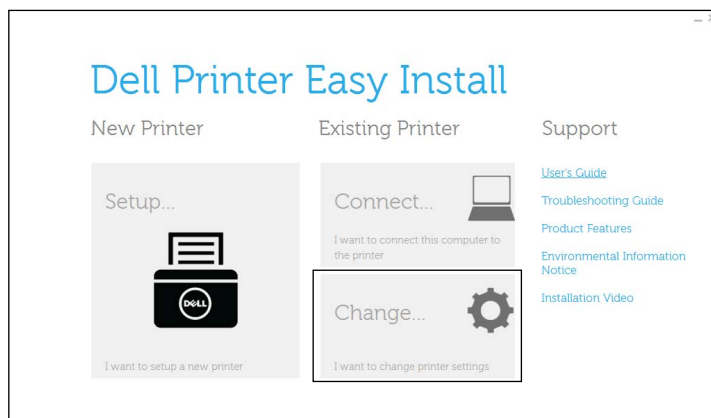

The **Configure Printer** window appears.

- 4 Select **Configure the IP address settings**, and then click **Next**.

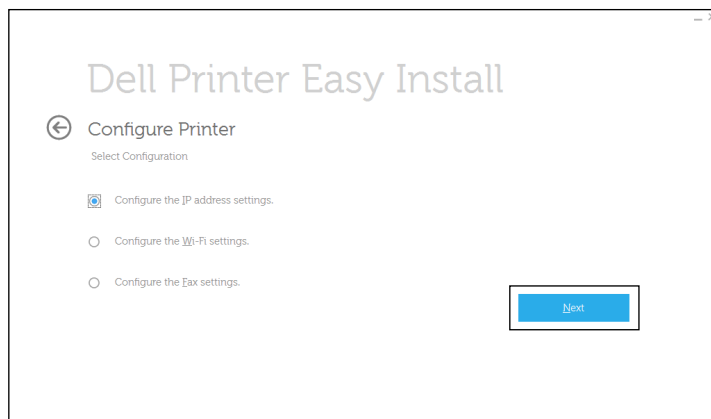

- 5 Follow the instructions displayed on the screen.

When Using the Operator Panel

For more information on using the operator panel, see "Operator Panel."

- 1 Press the **i** (**Information**) button.
- 2 Tap the **Tools** tab, and then tap **Admin Settings**.
- 3 Tap **Network**.
- 4 Do either of the following:

When connecting to network with the Ethernet cable:

Tap **Ethernet**.

When connecting to network through wireless connection (Dell Cloud Multifunction Printer / H815dw only):

Tap **Wi-Fi**.

- 5 Tap **IP Mode**.
- 6 Tap **IPv4 Mode**, and then tap **OK**.

- 7 Tap  until TCP / IP appears, and then tap TCP / IP.
- 8 Tap Get IP Address.
- 9 Tap Panel, and then tap OK.
- 10 Tap IP Address.
The cursor is located at the first octet of the IP address.
- 11 Use the number pad to enter the first octet of the IP address, and then tap .
The cursor moves to the next digit.
-  **NOTE:** You can only enter one octet at a time and must tap  after entering each octet.
- 12 Enter the rest of the octets, and then tap OK.
- 13 Tap Subnet Mask.
- 14 Repeat steps 11 and 12 to set Subnet Mask.
- 15 Tap Gateway Address.
- 16 Repeat steps 11 and 12 to set Gateway Address.
- 17 Turn off the printer, and then turn it on again.

When Using the Tool Box

- 1 Click Start→ All Programs→ Dell Printers→ Dell Cloud Multifunction Printer - H815dw or Dell Smart Multifunction Printer - S2815dn → Tool Box.
The Tool Box opens.
- 2 Click the Printer Maintenance tab.
- 3 Select TCP/IP Settings from the list at the left side of the page.
The TCP/IP Settings page appears.
- 4 Select the mode from IP Address Mode, and then enter the values in IP Address, Subnet Mask, and Gateway Address.
- 5 Click Apply New Settings to take effect.

You can also assign the IP address to the printer when installing the printer drivers with the installer. When you use the **Wireless or Ethernet Connection** feature, and the Get IP Address is set to AutoIP or DHCP on the printer, you can set the IP address from 0.0.0.0 to the desired IP address on the printer selection window.

Verifying the IP Settings

You can confirm the settings by using the operator panel, printing the system settings report, or using the ping command.

Verifying the Settings Using Operator Panel

- 1 Press the  (Information) button.
- 2 Tap About This MFP.
- 3 Tap the Network tab.
- 4 Verify the IP address displayed in IP (v4) Address.

Verifying the Settings Using System Settings Report

- 1 Print the system settings report.

For details about how to print a system settings report, see "Report / List."

- 2 Verify the correct IP address, subnet mask, and gateway address are listed in the system settings report under **Network (Wired)** or **Network (Wireless)**.

If the IP address shows 0 . 0 . 0 . 0 (the factory default), an IP address has not been assigned. To assign one for your printer, see "Assigning an IP Address."

Verifying the Settings Using Ping Command

Send a ping request to the printer and verify that it responds. For example, at a command prompt on a network computer, type "ping" followed by the new IP address (for example, 192.168.0.11):

```
ping 192.168.0.11
```

If the printer is active on the network, you will receive a reply.


Loading Paper

 **NOTE:** The images used in this manual are those of the Dell™ Cloud Multifunction Printer | H815dw unless otherwise mentioned.


 **NOTE:** To avoid paper jams, do not remove the tray while printing is in progress.

 **NOTE:** The *Software and Documentation* disc also contains video instructions. In the main menu window of **Dell Printer Easy Install**, click **Installation Video**.


- 1 Pull the tray out of the printer about 200 mm.

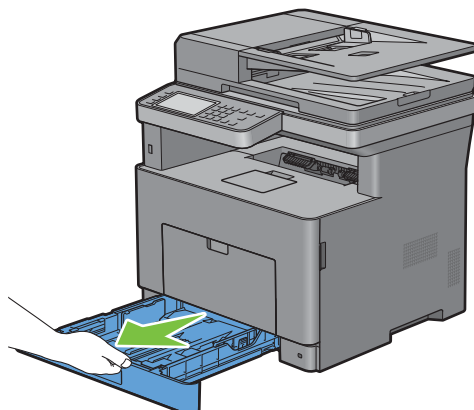

- 2 Hold the tray with both hands, and remove it from the printer.

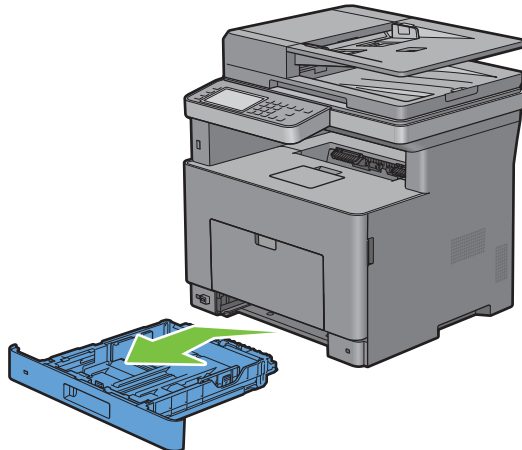


- 3 Adjust the paper guides.

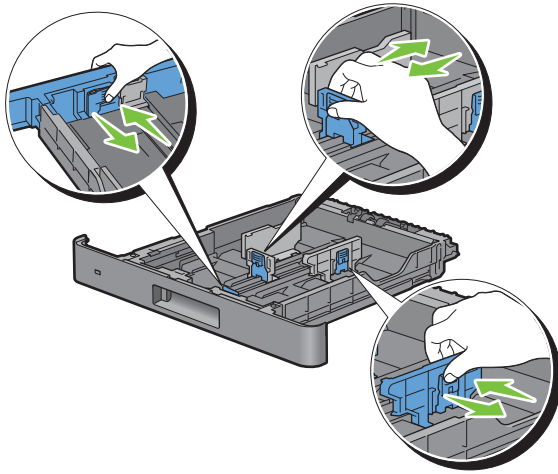

 **NOTE:** Extend the front side of the tray when you load Legal-size paper.


- 4 Before loading the print media, flex the sheets and fan them. Straighten the edges of the stack on a level surface.

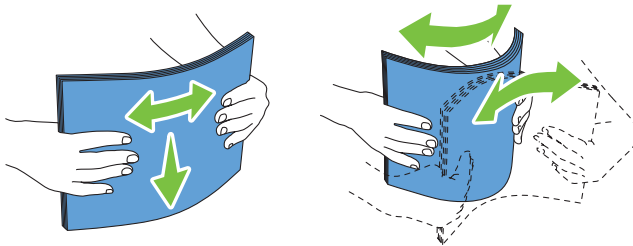

- 5 Load the print media into the tray with the recommended print side facing up.


 **NOTE:** Do not exceed the maximum fill line in the tray. Overfilling the tray may cause paper jams.

- 6 Align the width guides against the edges of the paper.

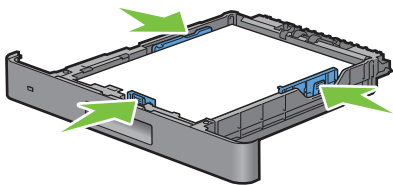


 **NOTE:** When loading user-specified print media, adjust the width guides and slide the extendable part of the tray by pinching the length guide and sliding it until it rests lightly against the edge of the paper.


- 7 After confirming that the guides are securely adjusted, insert the tray into the printer.

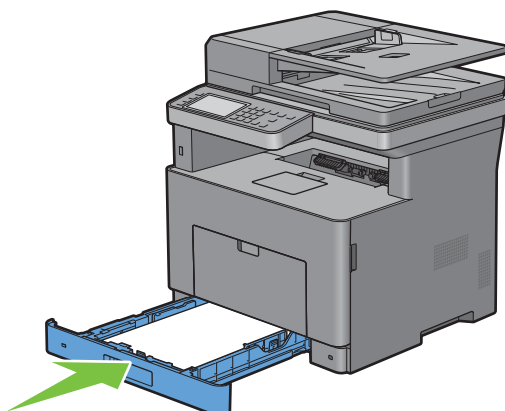

 **NOTE:** If the front side of the tray is extended, the tray protrudes when it is inserted into the printer.

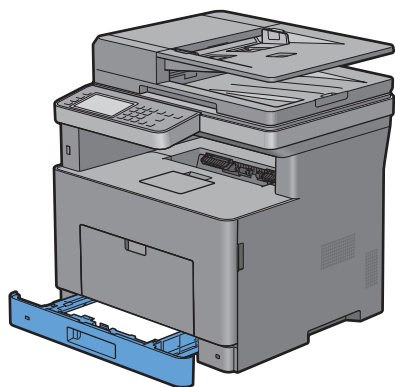

- 8 On the touch panel, tap Size.

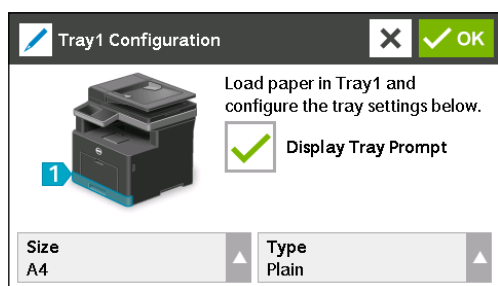

 **NOTE:** Set the same paper size and type as the actual paper being loaded. An error may occur if the paper size or type setting is different from the loaded paper.

- 9 Select  until the desired paper size appears, and then select the desired paper size.
- 10 Tap Type.
- 11 Select  until the desired paper type appears, and then select the desired paper type.
- 12 Select OK.

Installing Printer Drivers on Windows® Computers

 **NOTE:** The images used in this manual are those of the Dell™ Cloud Multifunction Printer | H815dw unless otherwise mentioned.

Identifying Printer Driver Pre-install Status

Before installing the printer driver on your computer, check the IP address of your printer by performing one of the procedures in "Verifying the IP Settings."

Changing the firewall settings before installing your printer

If you are running one of the following operating systems, you must change the firewall settings before installing the Dell™ printer software:

- Microsoft® Windows Vista®
- Windows® 7
- Windows® 8
- Windows® 8.1
- Windows Server® 2008
- Windows Server® 2008 R2
- Windows Server® 2012
- Windows Server® 2012 R2

The following procedure uses Windows® 7 as an example.

- 1 Insert the *Software and Documentation* disc into your computer.
- 2 Click **Start** → **Control Panel**.
- 3 Select **System and Security**.
- 4 Click **Allow a program through Windows Firewall**.
- 5 Click **Change settings** → **Allow another program**.
- 6 Check **Browse**.
- 7 Type `D:\setup_assist.exe` (where D is the drive letter of the optical drive) in the **File name** text box, and then click **Open**.
- 8 Click **Add**, and then click **OK**.

Starting Dell Printer Easy Install

- 1 Insert the *Software and Documentation* disc provided with the printer into your computer. The **Dell Printer Easy Install** program launches automatically.

 **NOTE:** If the **Dell Printer Easy Install** program does not launch automatically, follow the procedure below.

For Windows Server® 2008 and Windows Server® 2008 R2

Click **start** → **Run**, enter `D:\setup_assist.exe` (where D is the drive letter of the optical drive) in the Run dialog box, and then click **OK**.


For Windows Vista® and Windows® 7

Click **Start** → **All Programs** → **Accessories** → **Run**, enter `D:\setup_assist.exe` (where D is the drive letter of the optical drive) in the Run dialog box, and then click **OK**.

For Windows® 8, Windows® 8.1, Windows Server® 2012, and Windows Server® 2012 R2

Point to the top or bottom right corner of the screen, and then click **Search** → Type **Run** in the search box, click **Apps** (for Windows® 8 and Windows Server® 2012 only), and then click **Run** → Type `D:\setup_assist.exe` (where D is the drive letter of the optical drive), and then click **OK**.

2 Click Main Menu.

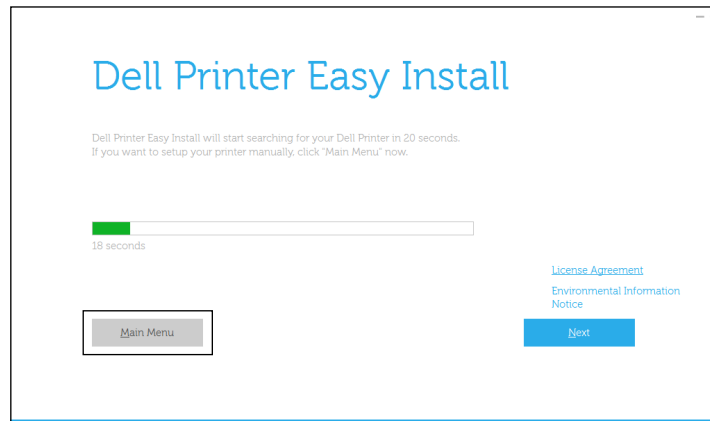


The main menu window appears.

USB Cable Connection Setup


 **NOTE:** If you are connecting the printer to a network, see "Network Connection Setup."

For installing PCL, PS and Fax printer driver

- 1 Start the **Dell Printer Easy Install** program, following the procedures shown in "Starting Dell Printer Easy Install."
- 2 In the main menu window of **Dell Printer Easy Install**, click **Connect**.

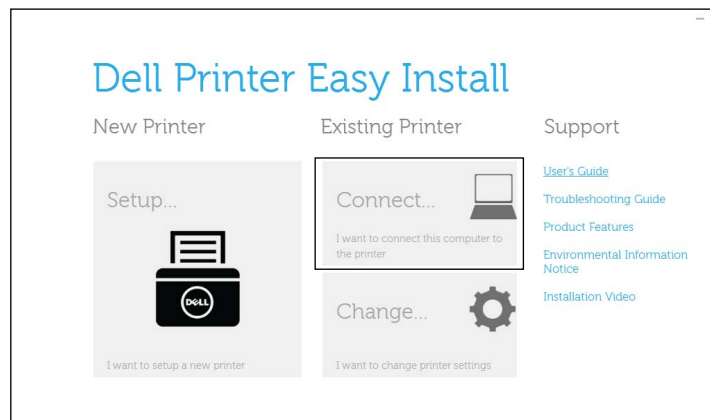

- 3 Select **USB Cable Connection**, and then click **Next**.

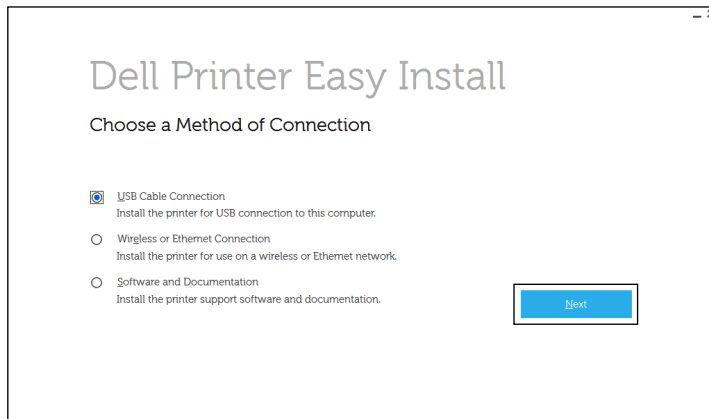

- 4 Follow the on-screen instructions to connect the computer and the printer with a USB cable, and then turn the printer on.
The Plug and Play installation starts and the installation software proceeds to the next page automatically.
- 5 Select either **Typical Installation (recommended)** or **Custom Installation** from the installation wizard, and then click **Next**. If you select **Custom Installation**, you can select the specific software you want to install.
- 6 Click **Finish** to exit the wizard when the **Ready to Print!** screen appears.
If you want to verify installation, click **Print Test Page** before clicking **Finish**.

For installing XML Paper Specification (XPS) printer driver

 **NOTE:** XML Paper Specification (XPS) driver is supported on the following operating systems: Windows Vista®, Windows Vista® 64-bit Edition, Windows Server® 2008, Windows Server® 2008 64-bit Edition, Windows Server® 2008 R2, Windows® 7, Windows® 7 64-bit Edition, Windows® 8, Windows® 8 64-bit Edition, Windows® 8.1, Windows® 8.1 64-bit Edition, Windows Server® 2012, and Windows Server® 2012 R2.

 **NOTE:** If you are using Windows Vista® or Windows Server® 2008, you need to install Service Pack 2 or later, and then the Windows® Platform Update (KB971644). The update (KB971644) is available for download from Windows Update.

Windows Vista® or Windows Vista® 64-bit Edition

- 1 Extract the following zip file to your desired location.
D:\Drivers\XPS\Win_7Vista\XPS-V3_H815dw_S2815dn.zip (where D is the drive letter of the optical drive)
- 2 Click **Start**→**Control Panel**→**Hardware and Sound**→**Printers**.
- 3 Click **Add a printer**.
- 4 Click **Add a local printer**.
- 5 Select the port connected to this product, and then click **Next**.
- 6 Click **Have Disk** to display the **Install From Disk** dialog box.
- 7 Click **Browse**, and then select the extracted folder in step 1.
- 8 Click **OK**.
- 9 Select your printer name and click **Next**.
- 10 To change the printer name, enter the printer name in the **Printer name** box, and then click **Next**. To use this printer as the default printer, select the check box displayed under the **Printer name**, and then click **Next**.
Installation starts.

If the User Account Control dialog box appears, click **Continue**.



NOTE: If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to continue the desired action.

- 11 As the driver installation is completed, click **Print a test page** to verify installation.
- 12 Click **Finish**.

Windows Server® 2008 or Windows Server® 2008 64-bit Edition



NOTE: You must log in as an administrator.

- 1 Extract the following zip file to your desired location.
D:\Drivers\XPS\Win_7Vista\XPS-V3_H815dw_S2815dn.zip (where D is the drive letter of the optical drive)
- 2 Click **Start**→**Control Panel**→**Hardware and Sound**→**Printers**.
- 3 Click **Add a printer**.
- 4 Click **Add a local printer**.
- 5 Select the port connected to this product, and then click **Next**.
- 6 Click **Have Disk** to display the **Install From Disk** dialog box.
- 7 Click **Browse**, and then select the extracted folder in step 1.
- 8 Click **OK**.
- 9 Select your printer name and click **Next**.
- 10 To change the printer name, enter the printer name in the **Printer name** box, and then click **Next**.
To use this printer as the default printer, select the **Set as the default printer** check box, and then click **Next**.
- 11 If you do not share your printer, select **Do not share this printer**. If you share your printer, select **Share this printer so that others on your network can find and use it**.
- 12 Click **Next**.
Installation starts.
- 13 As the driver installation is completed, click **Print a test page** to verify installation.
- 14 Click **Finish**.

Windows® 7, Windows® 7 64-bit Edition, or Windows Server® 2008 R2

- 1 Extract the following zip file to your desired location.
D:\Drivers\XPS\Win_7Vista\XPS-V3_H815dw_S2815dn.zip (where D is the drive letter of the optical drive)
- 2 Click **Start**→**Devices and Printers**.
- 3 Click **Add a printer**.

When you use Windows Server® 2008 R2, click **Add a local or network printer as an administrator**.

If the User Account Control dialog box appears, click **Yes**.



NOTE: If you are an administrator on the computer, click **Yes**; otherwise, contact your administrator to continue the desired action.

- 4 Click **Add a local printer**.
- 5 Select the port connected to this product, and then click **Next**.
- 6 Click **Have Disk** to display the **Install From Disk** dialog box.
- 7 Click **Browse**, and then select the extracted folder in step 1.

- 8 Click **OK**.
- 9 Select your printer name and click **Next**.
- 10 To change the printer name, enter the printer name in the **Printer name** box, and then click **Next**.
To use this printer as the default printer, select the **Set as the default printer** check box, and then click **Next**.
- 11 If you do not share your printer, select **Do not share this printer**. If you share your printer, select **Share this printer so that others on your network can find and use it**.
- 12 Click **Next**.
Installation starts.
- 13 As the driver installation is completed, click **Print a test page** to verify installation.
- 14 Click **Finish**.

Windows® 8, Windows® 8 64-bit Edition, Windows® 8.1, Windows® 8.1 64-bit Edition, Windows Server® 2012, or Windows Server® 2012 R2

- 1 Extract the zip file you downloaded to your desired location.
D:\Drivers\XPS\Win_8\XPS-V4_H815dw_S2815dn.zip (where D is the drive letter of the optical drive)
- 2 On the Desktop screen, right-click the bottom left corner of the screen, and then click **Control Panel**.
- 3 Click **Hardware and Sound** (Hardware for Windows Server® 2012/Windows Server® 2012 R2) → **Devices and Printers** → **Add a printer**.
- 4 Click **The printer that I want isn't listed**.
- 5 Select **Add a local printer or network printer with manual settings**, and then click **Next**.
- 6 Select the port connected to your printer, and then click **Next**.
- 7 Click **Have Disk** to display the **Install From Disk** dialog box.
- 8 Click **Browse**, and then select the extracted folder in step 1.
- 9 Click **OK**.
- 10 Select your printer name and click **Next**.
- 11 To change the printer name, enter the printer name in the **Printer name** box, and then click **Next**. Installation starts.
- 12 If you do not share your printer, select **Do not share this printer**. If you share your printer, select **Share this printer so that others on your network can find and use it**. Click **Next**.
- 13 As the driver installation is completed, click **Print a test page** to verify installation. To use this printer as the default printer, select the **Set as the default printer** check box.
- 14 Click **Finish**.


Network Connection Setup




NOTE: To use this printer in a Linux environment, you need to install a Linux driver. For more information on how to install and use these, see "Installing Printer Drivers on Linux Computers (CUPS)."

For installing PCL, PS and Fax printer driver

- 1 Start the **Dell Printer Easy Install** program, following the procedures shown in "Starting Dell Printer Easy Install."
- 2 In the main menu window of **Dell Printer Easy Install**, click **Connect**.

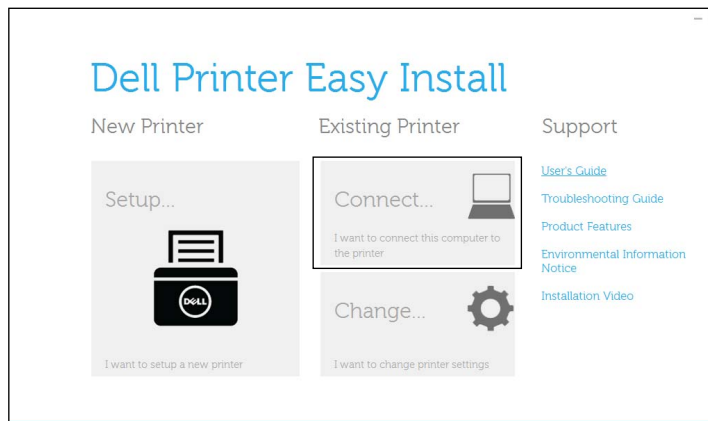

- 3 Select **Wireless or Ethernet Connection**, and then click **Next**.

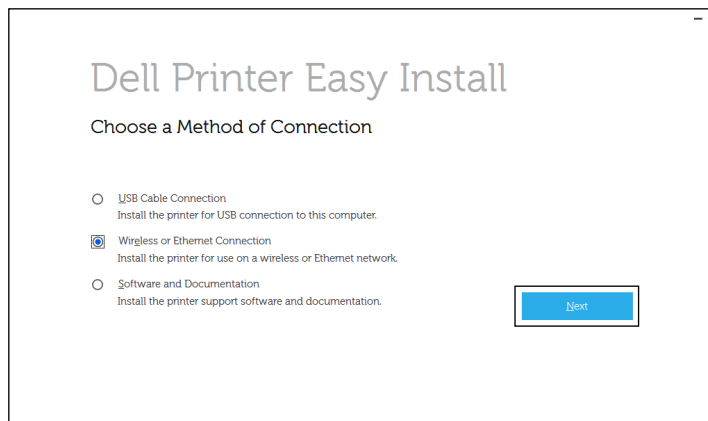

- 4 Select the printer you want to install from the printer list, and then click **Next**. If the target printer is not displayed on the list, click the  (Refresh) button to refresh the list or click **add printer manually** to add a printer to the list manually. You may specify the IP address and port name at this point.

If you have installed this printer on the server computer, select the **I am setting up this printer on a server** check box.

 **NOTE:** When using AutoIP, 0 . 0 . 0 . 0 is displayed in the installer. Before you can continue, you must enter a valid IP address.

 **NOTE:** In some cases, **Windows Security Alert** is displayed in this step when you use Windows Vista®, Windows Vista® 64-bit Edition, Windows Server® 2008, Windows Server® 2008 64-bit Edition, Windows Server® 2008 R2, Windows® 7, Windows® 7 64-bit Edition, Windows® 8, Windows® 8 64-bit Edition, Windows® 8.1, Windows® 8.1 64-bit Edition, Windows Server® 2012, and Windows Server® 2012 R2. In this case, select **Unblock** (Allow access for Windows Server® 2008 R2 and Windows® 7), and then continue the procedure.

- 5 Specify the printer settings, and then click **Next**.
 - a Enter the printer name.
 - b If you want to set the printer as the default printer, select the **Set this printer as default** check box.
 - c If you want to install the PostScript 3 Compatible printer driver, select the **PS Driver** check box.
If you want to install the Fax Driver, select the **Fax Driver** check box.
 - d If you want other users on the network to access the printer, select **Share this printer with other computers on the network**, and then enter a share name that users can identify.

- 6 Select the software and documentation you want to install, and then click **Install**. If you want to change the installation destination, click **Change Destination Folder** and specify a new location.
- 7 Click **Finish** to exit the wizard when the **Ready to Print!** screen appears.
If you want to verify installation, click **Print Test Page** before clicking **Finish**.

For installing XML Paper Specification (XPS) printer driver

 **NOTE:** XML Paper Specification (XPS) driver is supported on the following operating systems: Windows Vista®, Windows Vista® 64-bit Edition, Windows Server® 2008, Windows Server® 2008 64-bit Edition, Windows Server® 2008 R2, Windows® 7, Windows® 7 64-bit Edition, Windows® 8, Windows® 8 64-bit Edition, Windows® 8.1, Windows® 8.1 64-bit Edition, Windows Server® 2012, and Windows Server® 2012 R2.

Windows Vista® or Windows Vista® 64-bit Edition

- 1 Extract the following zip file to your desired location.
D:\Drivers\XPS\Win_7Vista\XPS-V3_H815dw_S2815dn.zip (where D is the drive letter of the optical drive)
- 2 Click **Start**→**Control Panel**→**Hardware and Sound**→**Printers**.
- 3 Click **Add a printer**.
- 4 Click **Add a network, wireless or Bluetooth printer**.
- 5 Select printer or click **The printer that I want isn't listed**.
- 6 Select **Add a printer using a TCP/IP address or host name**, and then click **Next**.
- 7 Select **TCP/IP Device** from **Device type**, and enter the IP address for **Hostname or IP address**, and then click **Next**.

If the **User Account Control** dialog box appears, click **Continue**.

 **NOTE:** If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to continue the desired action.

- 8 Click **Have Disk** to display the **Install From Disk** dialog box.
- 9 Click **Browse**, and then select the extracted folder in step 1.
- 10 Click **OK**.
- 11 Select your printer name and click **Next**.
- 12 To change the printer name, enter the printer name in the **Printer name** box, and then click **Next**.
To use this printer as the default printer, select the **Set as the default printer** check box, and then click **Next**.

Installation starts.

- 13 As the driver installation is completed, click **Print a test page** to verify installation.
- 14 Click **Finish**.

Windows Server® 2008 or Windows Server® 2008 64-bit Edition

 **NOTE:** You must log in as an administrator.

- 1 Extract the following zip file to your desired location.
D:\Drivers\XPS\Win_7Vista\XPS-V3_H815dw_S2815dn.zip (where D is the drive letter of the optical drive)
- 2 Click **Start**→**Control Panel**→**Hardware and Sound**→**Printers**.
- 3 Click **Add a printer**.
- 4 Click **Add a network, wireless or Bluetooth printer**.

- 5 Select printer or click **The printer that I want isn't listed**.

When you select your printer, go to step 8.

When you click **The printer that I want isn't listed**, go to step 6.

- 6 Select **Add a printer using a TCP/IP address or host name**, and then click **Next**.
- 7 Select **TCP/IP Device** from **Device type**, and enter the IP address for **Hostname or IP address**, and then click **Next**.

If the **User Account Control** dialog box appears, click **Continue**.

 **NOTE:** If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to continue the desired action.

- 8 Click **Have Disk** to display the **Install From Disk** dialog box.
- 9 Click **Browse**, and then select the extracted folder in step 1.
- 10 Click **OK**.
- 11 Select your printer name and click **Next**.
- 12 To change the printer name, enter the printer name in the **Printer name** box, and then click **Next**.
To use this printer as the default printer, select the **Set as the default printer** check box, and then click **Next**.
- 13 If you do not share your printer, select **Do not share this printer**. If you share your printer, select **Share this printer so that others on your network can find and use it**.
- 14 Click **Next**.
Installation starts.
- 15 As the driver installation is completed, click **Print a test page** to verify installation.
- 16 Click **Finish**.

Windows Server® 2008 R2

- 1 Extract the following zip file to your desired location.
D:\Drivers\XPS\Win_7Vista\XPS-V3_H815dw_S2815dn.zip (where D is the drive letter of the optical drive)
- 2 Click **Start**→**Devices and Printers**.
- 3 Click **Add a printer**.
- 4 Click **Add a network, wireless or Bluetooth printer**.
- 5 Select printer or click **The printer that I want isn't listed**.

 **NOTE:** When you click **The printer that I want isn't listed**, **Find a printer by name or TCP/IP address** screen appears. Find your printer on the screen.

If the **User Account Control** dialog box appears, click **Continue**.

 **NOTE:** If you are an administrator on the computer, click **Continue**; otherwise, contact your administrator to continue the desired action.

- 6 Click **Have Disk** to display the **Install From Disk** dialog box.
- 7 Click **Browse**, and then select the extracted folder in step 1.
- 8 Click **OK**.
- 9 Select your printer name and click **Next**.
- 10 To change the printer name, enter the printer name in the **Printer name** box, and then click **Next**.
To use this printer as the default printer, select the **Set as the default printer** check box, and then click **Next**.

- 11** If you do not share your printer, select **Do not share this printer**. If you share your printer, select **Share this printer so that others on your network can find and use it**.
- 12** Click **Next**.
Installation starts.
- 13** As the driver installation is completed, click **Print a test page** to verify installation.
- 14** Click **Finish**.

Windows® 7 or Windows® 7 64-bit Edition

- 1** Extract the following zip file to your desired location.
D:\Drivers\XPS\Win_7Vista\XPS-V3_H815dw_S2815dn.zip (where D is the drive letter of the optical drive)
 - 2** Click **Start→ Devices and Printers**.
 - 3** Click **Add a printer**.
 - 4** Click **Add a network, wireless or Bluetooth printer**.
 - 5** Select printer or click **The printer that I want isn't listed**.
When you select your printer, go to step 8.
When you click **The printer that I want isn't listed**, go to step 6.
 - 6** Select **Add a printer using a TCP/IP address or host name**, and then click **Next**.
 - 7** Select **TCP/IP Device** from **Device type**, and enter the IP address for **Hostname or IP address**, and then click **Next**.
If the **User Account Control** dialog box appears, click **Yes**.
-  **NOTE:** If you are an administrator on the computer, click **Yes**; otherwise, contact your administrator to continue the desired action.
- 8** Click **Have Disk** to display the **Install From Disk** dialog box.
 - 9** Click **Browse**, and then select the extracted folder in step 1.
 - 10** Click **OK**.
 - 11** Select your printer name and click **Next**.
 - 12** To change the printer name, enter the printer name in the **Printer name** box, and then click **Next**.
To use this printer as the default printer, select the **Set as the default printer** check box, and then click **Next**.
 - 13** If you do not share your printer, select **Do not share this printer**. If you share your printer, select **Share this printer so that others on your network can find and use it**.
 - 14** Click **Next**.
Installation starts.
 - 15** As the driver installation is completed, click **Print a test page** to verify installation.
 - 16** Click **Finish**.

Windows® 8, Windows® 8 64-bit Edition, Windows® 8.1, Windows® 8.1 64-bit Edition, Windows Server® 2012, or Windows Server® 2012 R2

- 1** Extract the zip file you downloaded to your desired location.
D:\Drivers\XPS\Win_8\XPS-V4_H815dw_S2815dn.zip (where D is the drive letter of the optical drive)
- 2** On the Desktop screen, right-click the bottom left corner of the screen, and then click **Control Panel**.

- 3 Click **Hardware and Sound** (**Hardware** for Windows Server® 2012/Windows Server® 2012 R2) → **Devices and Printers** → **Add a printer**.
- 4 Click **The printer that I want isn't listed**.
- 5 Select **Add a printer using a TCP/IP or host name**, and then click **Next**.
- 6 Select **TCP/IP Device** from **Device Type**, enter the IP address in the **Hostname or IP address** box, and then click **Next**.
- 7 Click **Have Disk** to display the **Install From Disk** dialog box.
- 8 Click **Browse**, and then select the extracted folder in step 1.
- 9 Click **OK**.
- 10 Select your printer name and click **Next**.
- 11 To change the printer name, enter the printer name in the **Printer name** box, and then click **Next**. Installation starts.
- 12 If you do not share your printer, select **Do not share this printer**. If you share your printer, select **Share this printer so that others on your network can find and use it**. Click **Next**.
- 13 As the driver installation is completed, click **Print a test page** to verify installation. To use this printer as the default printer, select the **Set as the default printer** check box.
- 14 Click **Finish**.

Use the **Dell Printer Configuration Web Tool** to monitor the status of your network printer without leaving your desk. You can view and/or change the printer settings, monitor toner level, and acknowledge the timing of ordering replacement consumables. You can click the Dell supplies link for ordering supplies.

 **NOTE:** The **Dell Printer Configuration Web Tool** is not available when the printer is directly connected to a computer or a print server.

To launch the **Dell Printer Configuration Web Tool**, type the printer's IP address in your web browser. The printer configuration appears on the screen.

You can set up the **Dell Printer Configuration Web Tool** to send you an e-mail when the printer needs supplies or intervention.

To set up e-mail alerts:

- 1 Launch the **Dell Printer Configuration Web Tool**.
- 2 Click **E-Mail Server Settings Overview** link.
- 3 Under **E-Mail Server Settings**, enter the **Primary SMTP Gateway**, **Reply Address**, and your or key operator's e-mail address in the e-mail list box.
- 4 Click **Apply New Settings**.

 **NOTE:** **Connection pending until printer sends an alert** is displayed on the SMTP server until an error occurs.

Setting Up for Shared Printing

You can share your USB connected printer with other computers (clients) on the same network.

To share your USB connected printer, enable shared printing when installing the printer driver. You can also enable shared printing by following the procedures below.

 **NOTE:** Printer utilities such as Status Monitor cannot be used from a network client.

Enabling Shared Printing from the Computer

Windows Server® 2003 or Windows Server® 2003 x64 Edition

- 1 Click start→ Printers and Faxes.
- 2 Right-click the printer icon and select **Properties**.
- 3 On the **Sharing** tab, select the **Share this printer** check box, and then type a name in the **Share name** text box.
- 4 Click **Additional Drivers** and select the operating systems of all network clients that print to the printer.
- 5 Click **OK**.

If you are missing files, you are prompted to insert the server operating system CD.

Windows Vista® or Windows Vista® 64-bit Edition

- 1 Click Start→ Control Panel→ Hardware and Sound→ Printers.
- 2 Right-click the printer icon and select **Sharing**.
- 3 Click **Change sharing options**.
The message **Windows needs your permission to continue** appears.
- 4 Click **Continue**.
- 5 Select the **Share this printer** check box, and then type a name in the **Share name** text box.
- 6 Click **Additional Drivers** and select the operating systems of all network clients that print to the printer.
- 7 Click **OK**.

Windows Server® 2008 or Windows Server® 2008 64-bit Edition

- 1 Click Start→ Control Panel→ Printers.
- 2 Right-click the printer icon and select **Sharing**.
- 3 Click **Change Sharing Options** if exists.
- 4 Select the **Share this printer** check box, and then type a name in the **Share name** text box.
- 5 Click **Additional Drivers** and select the operating systems of all network clients that print to the printer.
- 6 Click **OK**.

Windows® 7, Windows® 7 64-bit Edition, or Windows Server® 2008 R2

- 1 Click Start→ Devices and Printers.
- 2 Right-click the printer icon and select **Printer properties**.
- 3 On the **Sharing** tab, click **Change Sharing Options** if exists.
Select the **Share this printer** check box, and then type a name in the **Share name** text box.
- 4 Click **Additional Drivers** and select the operating systems of all network clients that print to the printer.
- 5 Click **Apply**, and then click **OK**.

Windows® 8, Windows® 8 64-bit Edition, Windows® 8.1, Windows® 8.1 64-bit Edition, Windows Server® 2012, or Windows Server® 2012 R2

- 1 On the Desktop screen, right-click the bottom left corner of the screen, and then click **Control Panel → Hardware and Sound (Hardware for Windows Server® 2012/Windows Server® 2012 R2) → Devices and Printers**.
- 2 Right-click the printer icon and select **Printer properties**.
- 3 On the **Sharing** tab, click **Change Sharing Options** if exists.

- 4 Select the **Share this printer** check box, and then type a name in the **Share name** text box.
- 5 Click **Additional Drivers** and select the operating systems of all network clients using this printer.
- 6 Click **Apply**, and then click **OK**.

Checking the Shared Printer

To confirm that the printer is properly shared:

- Ensure that the printer object in the **Printers**, **Printers and Faxes**, or **Devices and Printers** folder is shared. The shared icon is shown under the printer icon.
- From a network client, browse **Network** or **My Network Places**. Find the host name of the server and the shared name you assigned to the printer.

After you have checked that the printer is shared, use methods such as Windows® **Point and Print** to use the shared printer from a network client.



NOTE: If the OS bit editions (32/64 bit edition) differ between a print server and a client computer, you need to manually add the printer driver for the client computer edition on the server. Otherwise, the printer driver cannot be installed on the client computer using methods such as **Point and Print**. For example, if the print server runs on Windows Vista® 32-bit edition, while the client computer runs on Windows® 7 64-bit edition, follow the procedures below to additionally install the printer driver for 64-bit client on the 32-bit server.

- a Click **Additional Drivers** on the screen for sharing printers.

For details about how to display this screen, see "Enabling Shared Printing from the Computer."

- b Select the **x64** check box, and then click **OK**.
- c Insert the *Software and Documentation* disc into your computer.
- d Click **Browse** to specify the folder that contains the 64-bit OS driver, and then click **OK**.
Installation starts.

Installing Printer Drivers on Macintosh Computers

Installing the Drivers and Software

- 1 Run the *Software and Documentation* disc on the Macintosh computer.
- 2 For Dell™ Cloud Multifunction Printer | H815dw, double-click the **Dell MFP H815dw Installer** icon, and then click **Continue**.
For Dell Smart Multifunction Printer | S2815dn, double-click the **Dell MFP S2815dn Installer** icon, and then click **Continue**.
- 3 When the popup dialog box prompts you for confirming the program included in the installation package, click **Continue**.
- 4 Click **Continue** on the **Important Information** screen.
- 5 Select a language for the **Software License Agreement** screen.
- 6 After reading the **Software License Agreement**, click **Continue**.
- 7 If you agree to the terms of the **Software License Agreement**, click **Agree** to continue the installation process.
- 8 Confirm the installation location.
- 9 Click **Install** to perform the standard installation.
If you want to select a custom installation, click **Customize** to select items that you want to install.
 - Dell MFP H815dw Printer Driver or Dell MFP S2815dn Printer Driver
 - Dell MFP H815dw Fax Driver or Dell MFP S2815dn Fax Driver
 - Dell MFP H815dw Scan Driver or Dell MFP S2815dn Scan Driver
 - Dell Printer Status Monitor
- 10 Type the administrator's name and password, and then click **Install Software**.
- 11 Click **Continue Installation** to continue the installation.
- 12 When the message **The installation was successful.** appears, click **Log Out** to complete installation.

Adding a Printer on Mac OS X 10.5, Mac OS X 10.6, OS X 10.7, OS X 10.8, OS X 10.9, or OS X 10.10

When Using a USB connection

- 1 Turn on the printer.
- 2 Connect the USB cable between the printer and the Macintosh computer.
The printer is automatically added to your Macintosh computer.

When Using IP Printing

- 1 Turn on the printer.
- 2 Ensure that Macintosh computer and the printer are connected via network.
If you use wired connection, connect the LAN cable between the printer and the network.
If you use wireless connection on the Dell Cloud Multifunction Printer | H815dw, ensure that wireless connection is configured properly on your Macintosh computer and the printer.

- 3 For Mac OS X 10.5 and Mac OS X 10.6: Open the **System Preferences**, and click **Print & Fax**.
For OS X 10.7 and OS X 10.8: Open the **System Preferences**, and click **Print & Scan**.
For OS X 10.9 and OS X 10.10: Open the **System Preferences**, and click **Printers & Scanners**.
 - 4 Click the Plus (+) sign, select **Add Printer or Scanner** (**Add Other Printer or Scanner** for OS X 10.7), and select **IP**.
For Mac OS X 10.5 and Mac OS X 10.6, just click the Plus (+) sign and select **IP**.
 - 5 Select **Line Printer Daemon - LPD** for **Protocol**.
 - 6 Type the IP address for the printer in the **Address** area.
 - 7 For Mac OS X 10.5, Mac OS X 10.6, and OS X 10.7: Select **Dell MFP H815dw v3012 PS vX.X** or **Dell MFP S2815dn v3012 PS vX.X** for **Print Using**.
For OS X 10.8, OS X 10.9, and OS X 10.10: Select **Dell MFP H815dw v3012 PS vX.X** or **Dell MFP S2815dn v3012 PS vX.X** for **Use**.
-  **NOTE:** When printing is set up using IP printing, the queue name is displayed as blank. You do not need to specify it.
- 8 Click **Add**.
 - 9 Specify the options that have been installed on the printer, and then click **Continue**.
 - 10 For Mac OS X 10.5 and Mac OS X 10.6: Confirm that the printer is displayed in the **Print & Fax** dialog box.
For OS X 10.7 and OS X 10.8: Confirm that the printer is displayed in the **Print & Scan** dialog box.
For OS X 10.9 and OS X 10.10: Confirm that the printer is displayed in the **Printers & Scanners** dialog box.

When Using Bonjour

- 1 Turn on the printer.
 - 2 Ensure that Macintosh computer and the printer are connected via network.
If you use wired connection, connect the LAN cable between the printer and the network.
If you use wireless connection on the Dell Cloud Multifunction Printer | H815dw, ensure that wireless connection is configured properly on your Macintosh computer and the printer.
 - 3 For Mac OS X 10.5 and Mac OS X 10.6: Open the **System Preferences**, and click **Print & Fax**.
For OS X 10.7 and OS X 10.8: Open the **System Preferences**, and click **Print & Scan**.
For OS X 10.9 and OS X 10.10: Open the **System Preferences**, and click **Printers & Scanners**.
 - 4 Click the Plus (+) sign, select **Add Printer or Scanner** (**Add Other Printer or Scanner** for OS X 10.7), and select **Default**.
For Mac OS X 10.5 and Mac OS X 10.6, just click the Plus (+) sign and select **Default**.
 - 5 Select the printer connected via Bonjour from the **Name** (**Printer Name** for Mac OS X 10.5, Mac OS X 10.6, and OS X 10.7) list.
 - 6 For Mac OS X 10.5, Mac OS X 10.6, and OS X 10.7: **Name** and **Print Using** are automatically entered.
For OS X 10.8, OS X 10.9, and OS X 10.10: **Name** and **Use** are automatically entered.
-  **NOTE:** If **AirPrint Printer** is automatically selected for **Print Using** (or **Use**), select **Dell MFP H815dw v3012 PS vX.X** or **Dell MFP S2815dn v3012 PS vX.X** manually.
- 7 Click **Add**.
 - 8 Specify the options that have been installed on the printer, and then click **Continue**.

- 9** For Mac OS X 10.5 and Mac OS X 10.6: Confirm that the printer is displayed in the **Print & Fax** dialog box.
For OS X 10.7 and OS X 10.8: Confirm that the printer is displayed in the **Print & Scan** dialog box.
For OS X 10.9 and OS X 10.10: Confirm that the printer is displayed in the **Printers & Scanners** dialog box.

Configuring Settings

Configure the options available for the printer.

- 1** For Mac OS X 10.5 and Mac OS X 10.6: Open the **System Preferences**, and click **Print & Fax**.
For OS X 10.7 and OS X 10.8: Open the **System Preferences**, and click **Print & Scan**.
For OS X 10.9 and OS X 10.10: Open the **System Preferences**, and click **Printers & Scanners**.
- 2** Select the printer in the **Printers** list, and click **Options & Supplies**.
- 3** For Mac OS X 10.5, Mac OS X 10.6, OS X 10.7, and OS X 10.8: Select **Driver**, select the options that can be configured for the printer, and then click **OK**.
For OS X 10.9 and OS X 10.10: Select **Options**, select the options that can be configured for the printer, and then click **OK**.

Installing Printer Drivers on Linux Computers (CUPS)

This section provides information for installing or setting up the printer driver with CUPS (Common UNIX Printing System) on Red Hat Enterprise Linux 6 (32/64bit), SUSE Linux Enterprise Desktop 11 (32/64bit), or Ubuntu 12.04 LTS (32/64bit).

Operation on Red Hat Enterprise Linux 6 Desktop

Setup Overview

- 1 Install the printer driver.
- 2 Set up the print queue.
- 3 Specify the default queue.
- 4 Specify the printing options.

Installing the Printer Driver

- 1 Select Applications → System Tools → Terminal.
- 2 Type the following command in the terminal window.

For the 32-bit architecture

```
su
(Type the administrator password)
rpm -ivh (Type the file path)/Dell-MFP-H815dw-S2815dn-*.i686.rpm
```

For the 64-bit architecture

```
su
(Type the administrator password)
rpm -ivh (Type the file path)/Dell-MFP-H815dw-S2815dn-*.x86_64.rpm
```

The printer driver is installed.

Setting Up the Queue

To execute printing, you must set up the print queue on your workstation.

- 1 Open the URL "http://localhost:631" using a web browser.
- 2 Click Administration.
- 3 Click Add Printer.
- 4 Type root as the user name, type the administrator password, and click OK.
For network connections:
 - a Select LPD/LPR Host or Printer from the Other Network Printers menu, and click Continue.

- b** Type the IP address of the printer in **Connection**, and click **Continue**.

Format: `lpd://xxx.xxx.xxx.xxx` (the IP address of the printer)

For USB connections:

- a** Select **Dell MFP H815dw** or **Dell MFP S2815dn** from the **Local Printers** menu, and click **Continue**.
- 5** Type the name of the printer in the **Name** box in the **Add Printer** window, and click **Continue**.
You can optionally specify the location and description of the printer for further information.
If you want to share the printer, select the **Share This Printer** check box.
- 6** Select **Dell** from the **Make** menu, and click **Continue**.
- 7** Select **Dell MFP H815dw vXXXX PS** or **Dell MFP S2815dn vXXXX PS** from the **Model** menu, and click **Add Printer**.

The setup is complete.

Printing From the Applications

When you have finished setting up the queue, you can print jobs from the applications. Start the print job from the application, and specify the queue in the print dialog box.

However, sometimes you can print only from the default queue depending on the application (for example Mozilla). In these cases, before you start printing, set queue you want to print to as the default queue. For information on specifying the default queue, see "Setting the Default Queue."

Setting the Default Queue

- 1** Select **Applications**→ **System Tools** → **Terminal**.
- 2** Type the following command in the terminal window.

```
su
(Type the administrator password)
lpadmin -d (Type the queue name)
```

Specifying the Printing Options

You can specify the printing options such as 2-sided printing.

- 1** Open the URL "<http://localhost:631>" using a web browser.
- 2** Click **Administration**.
- 3** Click **Manage Printers**.
- 4** Click the queue name for which you want to specify the printing options.
- 5** Select **Set Default Options** from the **Administration** menu.
- 6** Click the desired setting item, specify the required settings, and click **Set Default Options**.

The message **Printer xxx default options have been set successfully.** appears.

The setting is complete.

Uninstalling the Printer Driver

- 1** Select **Applications**→ **System Tools**→ **Terminal**.
- 2** Type the following command in the terminal window to delete the print queue.

```
su
(Type the administrator password)
/usr/sbin/lpadmin -x (Type the print queue name)
```

- 3 Repeat the command above for all queues for the same model.
- 4 Type the following command in the terminal window.

```
su
(Type the administrator password)
rpm -e Dell-MFP-H815dw-S2815dn
```

The printer driver is uninstalled.

Operation on SUSE Linux Enterprise Desktop 11

Setup Overview

- 1 Install the printer driver.
- 2 Set up the print queue.
- 3 Specify the default queue.
- 4 Specify the printing options.

Installing the Printer Driver

- 1 Select **Computer**→**More Applications...** and select **GNOME Terminal** on the Application Browser.
- 2 Type the following command in the terminal window.

For the 32-bit architecture

```
su
(Type the administrator password)
rpm -ivh (Type the file path)/ Dell-MFP-H815dw-S2815dn-*.i686.rpm
```

For the 64-bit architecture

```
su
(Type the administrator password)
rpm -ivh (Type the file path)/ Dell-MFP-H815dw-S2815dn-*.x86_64.rpm
```

The printer driver is installed.

Setting Up the Queue

To execute printing, you must set up the print queue on your workstation.

- 1 Select **Computer**→**More Applications...**, and select **YaST** on the Application Browser.

- 2 Type the administrator password, and click **Continue**.

YaST Control Center is activated.

- 3 Select **Hardware** on **YaST Control Center**, and select **Printer**.

The **Printer Configurations** dialog box opens.

For network connections:

- a Click **Add**.

The **Add New Printer Configuration** dialog box opens.

- b Click **Connection Wizard**.

The **Connection Wizard** dialog box opens.

- c Select **Line Printer Daemon (LPD) Protocol** from **Access Network Printer or Printserver Box** via.

- d Type the IP address of the printer in **IP Address or Host Name**.

- e Select **Dell** in the **Select the printer manufacturer**: drop-down menu.

- f Click **OK**.

The **Add New Printer Configuration** dialog box appears.

- g For **Dell Cloud Multifunction Printer | H815dw**, select **Dell MFP H815dw vXXXX PS [Dell/Dell_MFP_H815dw.ppd.gz]** from the **Assign Driver** list.

For **Dell Smart Multifunction Printer | S2815dn**, select **Dell MFP S2815dn vXXXX PS [Dell/Dell_MFP_S2815dn.ppd.gz]** from the **Assign Driver** list.



NOTE: You can specify the printer name in **Set Name**.

- h Confirm the settings, and click **OK**.

For USB connections:

- a Click **Add**.

The **Add New Printer Configuration** dialog box opens.

The printer name is displayed in the **Determine Connection** list.

- b For **Dell Cloud Multifunction Printer | H815dw**, select **Dell MFP H815dw vXXXX PS [Dell/Dell_MFP_H815dw.ppd.gz]** from the **Assign Driver** list.

For **Dell Smart Multifunction Printer | S2815dn**, select **Dell MFP S2815dn vXXXX PS [Dell/Dell_MFP_S2815dn.ppd.gz]** from the **Assign Driver** list.



NOTE: You can specify the printer name in **Set Name**.

- c Confirm the settings, and click **OK**.

Printing From the Applications

When you have finished setting up the queue you can print jobs from the applications. Start the print job from the application, and specify the queue in the print dialog box.

However, sometimes you can print only from the default queue depending on the application (for example Mozilla). In these cases, before you start printing, set queue you want to print to as the default queue. For information on specifying the default queue, see "Setting the Default Queue."

Setting the Default Queue

You can set the default queue when you add the printer.

- 1 Select **Computer**→**More Applications...**, and select **YaST** on the Application Browser.
- 2 Type the administrator password, and click **Continue**.
YaST Control Center is activated.
- 3 Select **Hardware** on **YaST Control Center**, and select **Printer**.
The **Printer Configurations** dialog box opens.
- 4 Click **Edit**.
A dialog box to modify the specified queue opens.
- 5 Confirm that the printer you want to set is selected in the **Connection** list.
- 6 Select the **Default Printer** check box.
- 7 Confirm the settings, and click **OK**.

Specifying the Printing Options

You can specify the printing options such as 2-sided printing.

- 1 Open a web browser.
- 2 Type `http://localhost:631/admin` in **Location**, and press <Enter>.
- 3 Click **Manage Printers**.
- 4 Click **Set Printer Options** of the printer for which you want to specify the printing options.
- 5 Specify the required settings, and click **Set Printer Options**.
- 6 Type `root` as the user name, type the administrator password, and click **OK**.



NOTE: Set the password for authority as the printer administrator before setting the printer queue. If you have not set it, go to "Setting the Password for Authority as the Printer Administrator."

The message **Printer xxx has been configured successfully.** appears.

The setting is complete. Execute printing from the application.

Setting the Password for Authority as the Printer Administrator

You must set the password for authority as the printer administrator to do operations as the printer administrator.

- 1 Select **Computer**→**More Applications...** and select **GNOME Terminal** on the Application Browser.
- 2 Type the following command in the terminal window.

```
su
(Type the administrator password)
lppasswd -g sys -a root
(Type the password for authority as the printer administrator after
the Enter password prompt.)
(Retype the password for authority as the printer administrator after
the Enter password again prompt.)
```

Uninstalling the Printer Driver

- 1 Select **Computer**→**More Applications...** and select **GNOME Terminal** on the Application Browser.
- 2 Type the following command in the terminal window to delete the print queue.

```
su
(Type the administrator password)
/usr/sbin/lpadm -x (Type the printer queue name)
```

- 3 Repeat the command above for all queues for the same model.
- 4 Type the following command in the terminal window.

```
su
(Type the administrator password)
rpm -e Dell-MFP-H815dw-S2815dn
```

The printer driver is uninstalled.

Operation on Ubuntu 12.04 LTS

Setup Overview

- 1 Install the printer driver.
- 2 Set up the print queue.
- 3 Specify the default queue.
- 4 Specify the printing options.

Installing the Printer Driver

- 1 Click **Dash Home**, and enter `terminal` in the **Search** text box.
- 2 Click **Terminal** in the **Applications** category of the search results.

- 3 Type the following command in the terminal window.

For the 32-bit architecture

```
sudo dpkg -i (Type the file path)/dell-mfp-S2815dn-  
H815dw-*. *-*_i386.deb  
(Type the administrator password)
```

For the 64-bit architecture

```
sudo dpkg -i (Type the file path)/dell-mfp-S2815dn-  
H815dw-*. *-*_amd64.deb  
(Type the administrator password)
```

The printer driver is installed.

Setting Up the Queue

To execute printing, you must set up the print queue on your workstation.

- 1 Open the URL "<http://localhost:631>" using a web browser.
- 2 Click **Administration**.
- 3 Click **Add Printer**.
- 4 Type the user name and the administrator password, and click **OK**.
- 5 Select either of the following according to the type of your printer connection.

For network connections:

- a Select **LPD/LPR Host or Printer** from the **Other Network Printers** menu, and click **Continue**.
- b Type the IP address of the printer in **Connection**, and click **Continue**.
Format: `lpd://xxx.xxx.xxx.xxx` (the IP address of the printer)

For USB connections:

- a Select **Dell MFP H815dw** or **Dell MFP S2815dn** from the **Local Printers** menu, and click **Continue**.
- 6 Type the name of the printer in the **Name** box in the **Add Printer** window, and click **Continue**.
You can optionally specify the location and description of the printer for further information.
If you want to share the printer, select the **Share This Printer** check box.
 - 7 Select **Dell** from the **Make** menu, and click **Continue**.
 - 8 Select **Dell MFP H815dw vXXXX PS** or **Dell MFP S2815dn vXXXX PS** from the **Model** menu, and click **Add Printer**.

The setup is complete.

Printing From the Applications

When you have finished setting up the queue, you can print jobs from the applications. Start the print job from the application, and specify the queue in the print dialog box.

However, sometimes you can print only from the default queue depending on the application (for example Mozilla). In these cases, before you start printing, set queue you want to print to as the default queue. For information on specifying the default queue, see "Setting the Default Queue."

Setting the Default Queue

- 1 Click **Dash Home**, and enter `terminal` in the **Search** text box.
- 2 Click **Terminal** in the **Applications** category of the search results.
- 3 Type the following command in the terminal window.

```
sudo lpadmin -d (Type the queue name)
(Type the administrator password)
```

Specifying the Printing Options

You can specify the printing options such as 2-sided printing.

- 1 Open the URL "<http://localhost:631>" using a web browser.
- 2 Click **Administration**.
- 3 Click **Manage Printers**.
- 4 Click the queue name for which you want to specify the printing options.
- 5 Select **Set Default Options** from the **Administration** menu.
- 6 Click the desired setting item, specify the required settings, and click **Set Default Options**.

The message **Printer xxx default options have been set successfully.** appears.

The setting is complete.

Uninstalling the Printer Driver

- 1 Click **Dash Home**, and enter `terminal` in the **Search** text box.
- 2 Click **Terminal** in the **Applications** category of the search results.
- 3 Type the following command in the terminal window to delete the print queue.

```
sudo /usr/sbin/lpadmin -x (Type the print queue
name)
(Type the administrator password)
```

- 4 Repeat the command above for all queues for the same model.
- 5 Type the following command in the terminal window.

```
sudo dpkg -r Dell-MFP-H815dw-S2815dn
(Type the administrator password)
```

The printer driver is uninstalled.

Using Your Printer

- 13 Operator Panel 109
- 14 Dell™ Printer Configuration Web Tool..... 117
- 15 Understanding the Printer Menus..... 171
- 16 Print Media Guidelines..... 253
- 17 Loading Print Media 259


Operator Panel

About the Operator Panel


The operator panel has a touch panel, a ready/error LED, control buttons, and a number pad, which allows you to control the printer.

 **NOTE:** The images used in this manual are those of the Dell™ Cloud Multifunction Printer | H815dw unless otherwise mentioned.

Dell™ Cloud Multifunction Printer | H815dw

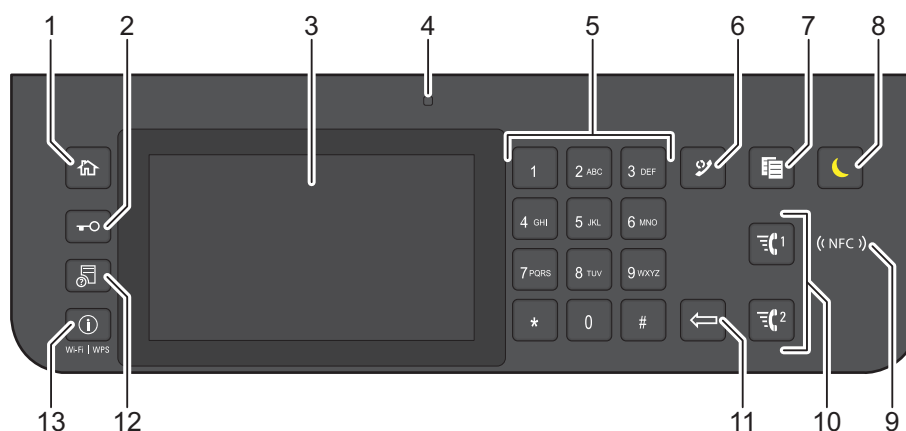

Dell Smart Multifunction Printer | S2815dn

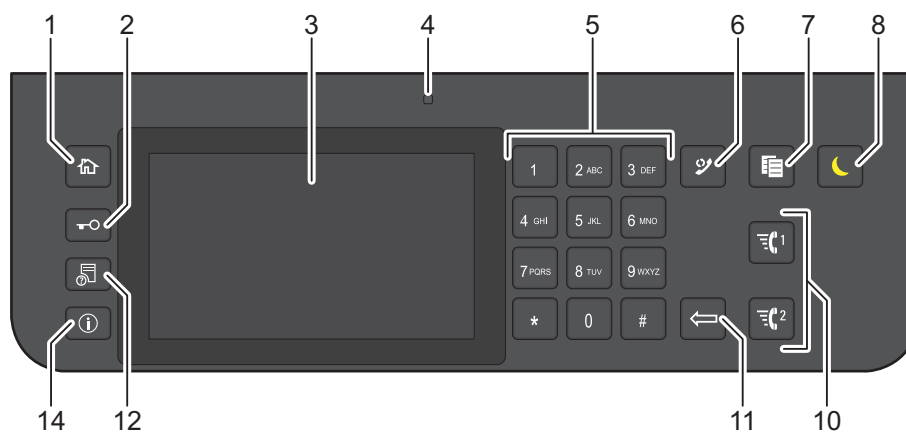

- 1  (Home) button
 - Moves to the **Home** screen.
- 2  (Login/Logout) button
 - Allows the user to log out.

3 Touch Panel

- Specifies the settings by directly tapping the screen.
- Displays various settings, instructions, and error messages.

4 Ready / Error LED

- Shows a green light when the printer is ready and a blinking green light when data is being received.
- Shows an amber light when an error occurs and a blinking amber light when an unrecoverable print error occurs.

5 Number Pad

- Enters numbers and characters.

6 (Redial / Pause) button

- Calls up the last called number.
- Inserts a pause into a telephone number.

7 (Copy) button

- Starts copying the document. Effective only from the **Home** screen while you are logged in to the printer.

8 (Power Saver) button

- Enters or exits the Power Saver mode. When the printer is not used for a while, it enters the Power Saver mode to reduce power consumption. When the Power Saver mode is active, the  (Power Saver) button blinks.

9 (NFC) (NFC) reader

- Starts communication between the printer and an NFC card or a mobile device with the NFC function when the card or the device is tapped to the reader.

10 1 / 2 (Speed Dial 1 / Speed Dial 2) button

- Starts faxing the document to the number registered as "001" and "002" respectively of the FAX Speed Dial. Effective only when the **Home** screen is displayed.

11 (Delete) button

- Deletes numbers and characters.

12 (Job Status) button

- Moves to the **Job Status** screen. From this screen, you can check or cancel active jobs.

13 (Information) Wi-Fi|WPS button

- Moves to the **Information** screen. You can access various information and settings menu including Wi-Fi and Wi-Fi Direct features, check the name of the connected device via Wi-Fi Direct, check consumable levels and network status, and print various types of reports and lists.

14 (Information) button

- Moves to the **Information** screen. You can access various information and settings menu, check consumable levels and network status, and print various types of reports and lists.


 **NOTE:** Moving to a different menu or returning to a previous screen cancels the current entry or setting. Be sure to select **OK** to save the current entry or setting.

Basic Operations on the Touch Panel

You can operate the touch panel as with a smart phone or a tablet.


To Select the Item on the Screen

Tap the item.

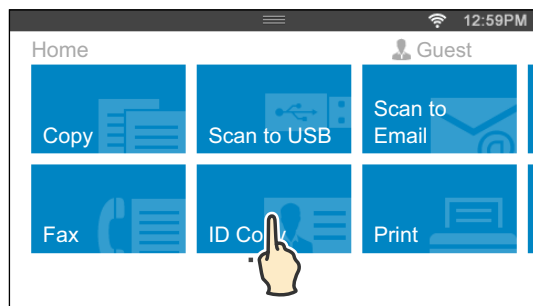


To Scroll the Screen or the Listed Items

Swipe the screen by dragging your finger on the screen.

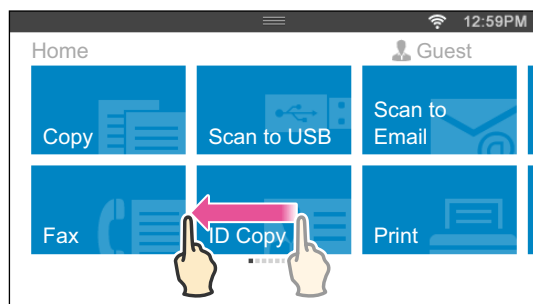

To scroll faster, flick the screen.

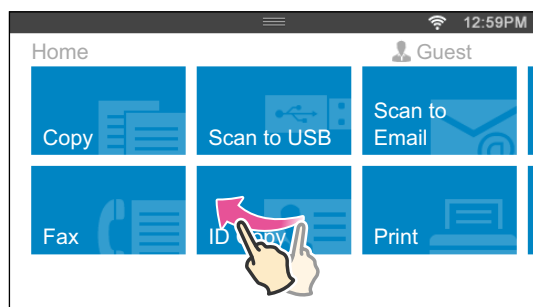


NOTE: You cannot swipe or flick on some screens depending on the screen design and specifications. In this case, operate by tapping the buttons shown on the screen.

About the Home Screen

This section describes the fields and buttons on the **Home** screen which is displayed by pressing the  (**Home**) button while the user is logged in to the printer. As the factory default setting, the **Home** screen is displayed when the printer is turned on.

 **NOTE:** To display the **Home** screen, the user must be registered beforehand and log in to the printer. For more information, see "User Authentication."

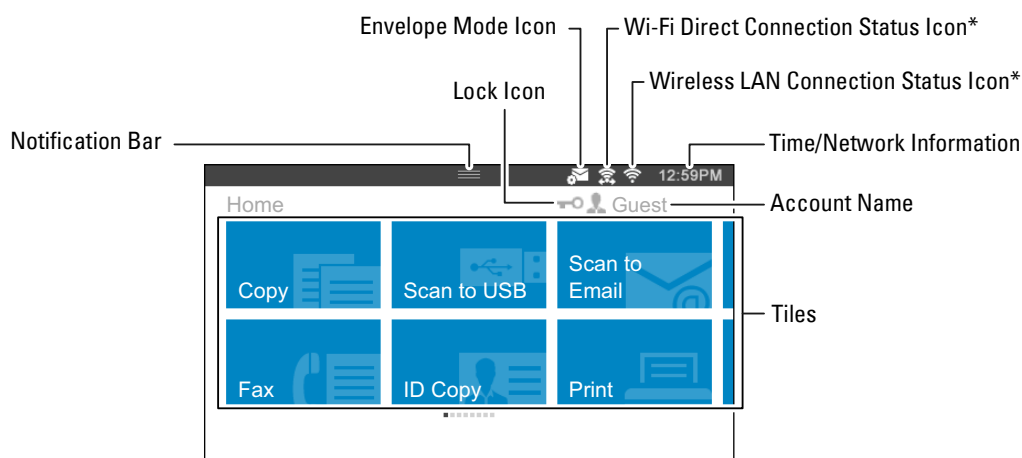

* Available on the Dell Cloud Multifunction Printer | H815dw only

Notification Bar

Displays the status of the printer when the handle  is dragged down. To close, drag up the handle.

You can adjust the screen brightness, see the toner information, or monitor the jobs currently progressing. Warnings are displayed in this area, too.

To adjust the screen brightness, drag the slider in **Screen Brightness**.

To see the **Toner Information**, tap **Supplies**.

The information of the toner is displayed.

Lock Icon

Shows that any of the functions controlled by the **Functions Control** setting has been enabled. While the Lock icon is displayed on the left to the account name, you can access the password-locked functions without entering the password.

Envelope Mode Icon

Appears when the printer is set to the envelope mode.

Wi-Fi Direct Connection Status Icon

Displays the Wi-Fi Direct connection status. This icon is displayed only when Wi-Fi Direct is enabled.
(Dell Cloud Multifunction Printer | H815dw only)

Wireless LAN Connection Status Icon

Displays the intensity of wireless signal when the printer is connected to a wireless network.
(Dell Cloud Multifunction Printer | H815dw only)

Time/Network Information

Displays the current time or the network information (IPv4 address or host name).

Account Name

Displays the name of the user currently logging in to the printer.

Tiles

Displays the tiles of the functions you can select from.

When the tile color is pale and disabled, you cannot select the function.

When the Lock icon is displayed on the tile, the function is controlled by the Functions Control setting and you will need to enter the password to enable the function.

For more information about Functions Control, see "Functions Control."


Moving, Adding or Deleting the Tiles

To Move the Tiles

Tap and hold the tile you want to move, and drag it to the desired place.

The short orange bar appears between the tiles to show the nearest drop point when you are dragging the tile.

You can move the tile between pages as well.

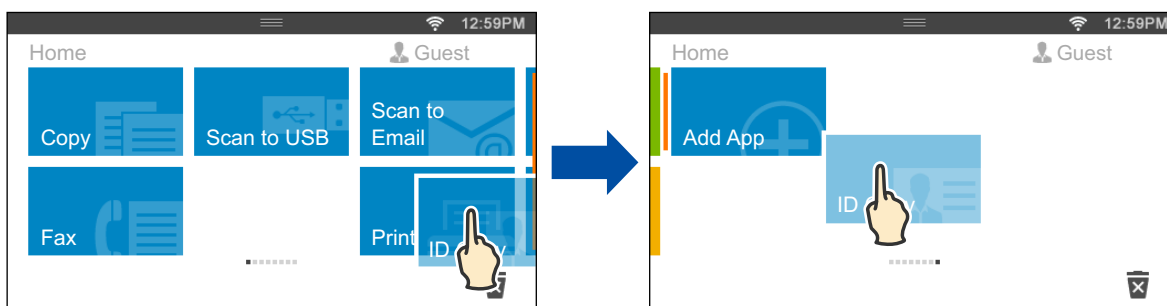

To Add the Tiles


Find the Add App tile in the last page of the **Home** screen, and tap it.

The **Apps List** screen appears.

Tap the tile you want to add to the **Home** screen.

To Delete the Tiles


Tap and hold the tile you want to delete.
✕ appears. Drag the tile to the icon.

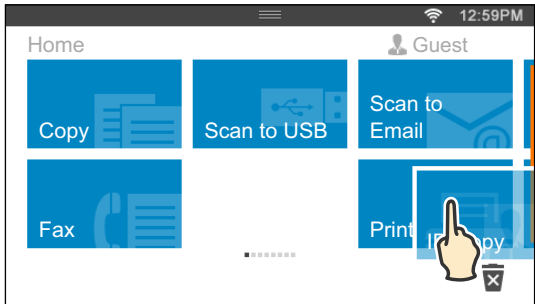

The confirmation screen is displayed.
Tap OK to delete the tile.

Using the Keyboard Displayed on the Touch Panel

During operations, a keyboard for entering text sometimes appears. The following describes how to enter text.

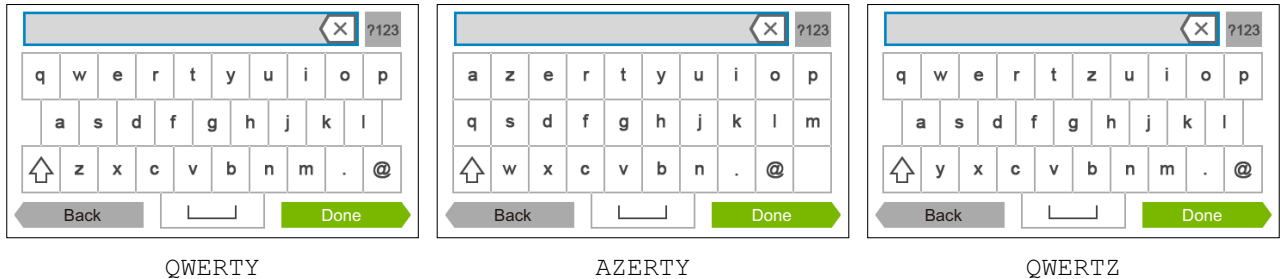

You can enter the following characters: numbers, alphabets, and symbols.

Item	Description
Entering alphabets	To enter uppercase letters, tap . To return to the lowercase letters, tap again. To lock to the uppercase letters, double-tap .
Entering numbers and symbols	Tap .
Entering a space	Tap .
Deleting characters	Tap to delete one character at a time.

To Change the Keyboard Layout

- 1 Press the ⓘ (Information) button.
- 2 Tap the Tools tab, and then tap Language Settings.
- 3 Tap Keyboard Layout.
- 4 Tap the desired keyboard layout.
- 5 Tap OK.

Using the Number Pad

As you perform various tasks, you may need to enter numbers. For example, when you enter fax number directly.



Number Pad Numbers

1
2
3
4
5
6
7
8
9
0
*
#

Changing Numbers

If you make a mistake while entering a number, press the  (Delete) button to delete the last digit. Then enter the correct number.

Inserting a Pause

For some telephone systems, it is necessary to dial an access code and listen for a second dial tone. A pause must be entered in order for the access code to function. For example, enter the access code 9 and then press the  (Redial/Pause) button before entering the telephone number. "-" appears on the display when a pause is entered.

Printing a Panel Settings Report

The panel settings report shows current settings for the printer menus. For details about how to print a panel settings report, see "Report / List."

Changing the Language

To change the language used on the touch panel:

When Using the Operator Panel

- 1 Press the  (Information) button.
- 2 Tap the Tools tab, and then tap Language Settings.
- 3 Tap Panel Language.
- 4 Tap  until the desired language appears, and then tap the desired language.
- 5 Tap OK.

When Using the Tool Box

- 1 Click Start→ All Programs→ Dell Printers→ Dell Cloud Multifunction Printer - H815dw or Dell Smart Multifunction Printer - S2815dn→ Tool Box.
The Tool Box opens.
- 2 Click the Printer Maintenance tab.
- 3 Select Panel Language from the list at the left side of the page.
The Panel Language page appears.
- 4 Select the desired language from Panel Language, and then click Apply New Settings.

Setting the Power Saver Timer Option

You can set the power saver timer for the printer. The printer enters the power saver mode when the printer is not used for a certain period of time.



NOTE: If Panel Lock Control is set to Enable, you need to enter the four-digit password to enter the Admin Settings menu.

To set the power saver timer:

- 1 Press the  (Information) button.
- 2 Tap the Tools tab, and then tap Admin Settings.
- 3 Tap System Settings.
- 4 Tap General.
- 5 Tap Power Saver Timer.
- 6 Tap Sleep or Deep Sleep.
- 7 Tap – or +, or use the number pad to enter the desired value.
You can specify from 1 to 60 minutes for Sleep or 1 to 60 minutes for Deep Sleep.
- 8 Tap OK.

About the Concurrent Jobs Feature

This feature enables you to start a concurrent job while a fax job is running. This is done by temporarily displaying the Home screen and switching to a different function that can be run concurrently such as copy or scan.

- 1 While the printer is sending or receiving a fax, press the  (Home) button.
- 2 Tap Copy or Scan.
- 3 After setting the copy or scan settings, tap OK.
For details about Copy or Scan, see "Copying" or "Scanning."


Dell™ Printer Configuration Web Tool

Overview

 **NOTE:** This web tool is available only when the printer is connected to a network using an Ethernet cable or the built-in wireless network function.

 **NOTE:** The images used in this manual are those of the Dell Cloud Multifunction Printer | H815dw unless otherwise mentioned.

One of the features of the **Dell Printer Configuration Web Tool** is E-Mail Alert Setup, which sends e-mail to you or the key operator when the printer needs supplies or intervention.

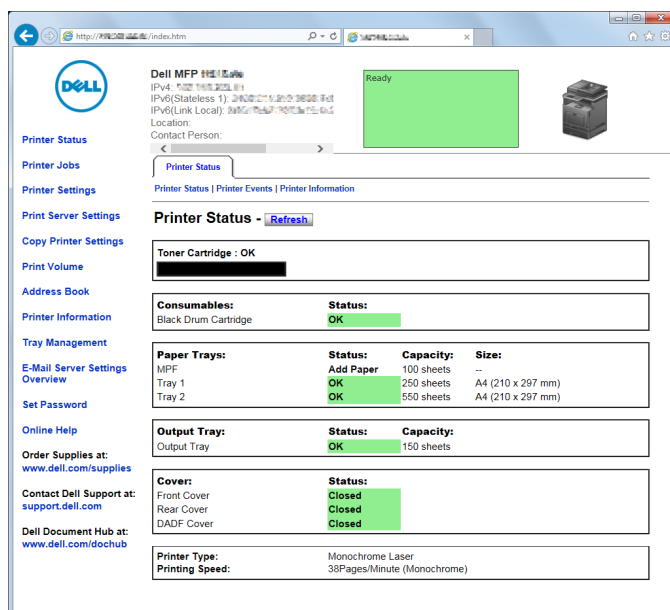

To fill out printer inventory reports requiring the asset tag number of all the printers in your area, use the **Printer Information** feature in the **Dell Printer Configuration Web Tool**. Enter the IP address of each printer on the network to display the asset tag number.

The **Dell Printer Configuration Web Tool** feature also allows you to change the printer settings and keep track of printing trends. If you are a network administrator, you can copy the printer settings to one or all printers on the network using your web browser.

Setting Up the Dell Printer Configuration Web Tool

Ensure that you activate JavaScript in your browser before using the Dell Printer Configuration Web Tool.

Follow the procedures below to configure both the environment settings of your web browser and the operator panel before using the Dell Printer Configuration Web Tool.



NOTE: The Dell Printer Configuration Web Tool pages may be displayed unreadable if the pages were configured by the language different from the language of your web browser.

Setting Up From Web Browser

For Internet Explorer®

Setting Up the Display Language

- 1 Select **Internet Options** from **Tools** on the menu bar.
- 2 Select **Languages** in the **General** tab.
- 3 Specify the display language in order of preference in the **Language** list.

For example:

- Italian (Italy) [it-IT]
- Spanish (Traditional Sort) [es-ES tradnl]
- German (Germany) [de-DE]
- French (France) [fr-FR]
- English (United States) [en-US]
- Danish [da-DK]
- Dutch (Netherlands) [nl-NL]
- Norwegian (Bokmal) [no]
- Swedish [sv-SE]

Setting the IP Address of the Printer to Non-Proxy


- 1 Select **Internet Options** from the **Tools** menu.
- 2 Click **LAN Settings** under **Local Area Network (LAN) Settings** in the **Connections** tab.
- 3 Do either of the following:
 - Clear the **Use a proxy server for your LAN** check box under **Proxy server**.
 - Click **Advanced**, and then specify the IP address of the printer in the **Do not use proxy server for addresses beginning with** field under **Exceptions**.

Setting Up From Operator Panel

You can launch the Dell Printer Configuration Web Tool only when the operator panel setting is set to **Enable**. Confirm the operator panel setting if you cannot launch the Dell Printer Configuration Web Tool. For more information, see "Understanding the Printer Menus."

Starting the Dell Printer Configuration Web Tool

To launch the Dell Printer Configuration Web Tool, enter the IP address of your printer in your web browser.



If you do not know the IP address of your printer, print the system settings report or display the TCP/IP settings page, which lists the IP address. For details about how to find your printer's IP address, see "Verifying the IP Settings."

Overview of the Menu Items

The Dell Printer Configuration Web Tool consists of the following menus:

- Printer Status
- Printer Jobs
- Printer Settings
- Print Server Settings
- Copy Printer Settings
- Print Volume
- Address Book
- Printer Information
- Tray Management
- E-Mail Server Settings Overview
- Set Password
- Online Help
- Order Supplies at:
- Contact Dell Support at:
- Dell Document Hub at: ^{*1}

^{*1} This item is available only on the Dell Cloud Multifunction Printer | H815dw.

Printer Status

Use the **Printer Status** menu to get immediate feedback on the printer supply status. When the toner cartridge is running low, click the order supplies link on the first screen to order a new toner cartridge.

Printer Jobs

Use the **Printer Jobs** menu to contain information on the **Job List** page and **Completed Jobs** page.

These pages show the details of the status regarding each protocol or job.

Printer Settings

Use the **Printer Settings** menu to change the printer settings and to view the settings in the operator panel remotely.

Print Server Settings

Use the **Print Server Settings** menu to change the type of printer interface and the necessary conditions for communications.

Copy Printer Settings

Use the **Copy Printer Settings** menu to copy the printer settings to another printer or printers on the network by typing the IP address of each printer.

 **NOTE:** You must log in as an administrator to use this feature.

Print Volume

Use the **Print Volume** menu to check the history of printing, such as paper usage or the types of jobs being printed.

Address Book

Use the **Address Book** menu to view or edit the e-mail address, server address, and fax number entries in the Address Book, or to register new entries.

 **NOTE:** You must log in as an administrator to use this feature.

Printer Information

Use the **Printer Information** menu to get information on service calls, inventory reports, or the status of current memory and engine code levels.

Tray Management

Use the **Tray Management** menu to get information about the paper type and size for each tray.

E-Mail Server Settings Overview

Use the **E-Mail Server Settings Overview** menu to configure **E-Mail Server** settings for Scan to Email, e-mail alert and forwarding fax to email features. Job history reports, job statistics reports, and print volume reports can also be received by e-mail. To receive alerts or reports, specify your e-mail address or the e-mail address of the key operator in the **E-Mail Server** menu.

Set Password

Use the **Set Password** menu to lock the **Dell Printer Configuration Web Tool** with a password so that other users do not inadvertently change the printer settings that you have selected.

 **NOTE:** You must log in as an administrator to use this feature.

Online Help

Click **Online Help** to visit the Dell Support website.

Order Supplies at:

www.dell.com/supplies

Contact Dell Support at:

support.dell.com

Dell Document Hub at:

www.dell.com/dochub

Page Display Format


The layout of the page is divided into three sections listed below:

- Top Frame
- Left Frame
- Right Frame

Top Frame

The top frame is located at the top of all pages. When the **Dell Printer Configuration Web Tool** is activated, the current status and specifications of the printer are displayed in the top frame on every page.

The following items are displayed in the top frame.

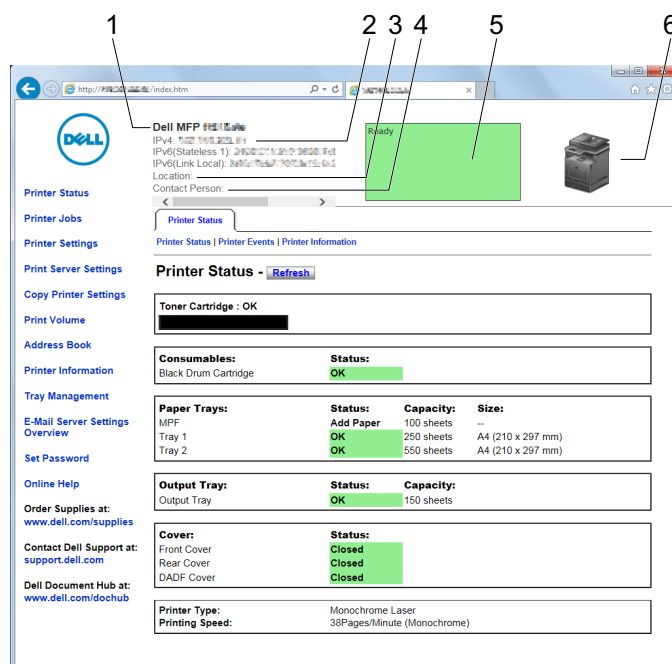


1	Product Name	Displays the product name of the printer.
2	IPv4 IPv6	Displays the IP address of the printer.
3	Location	Displays location of the printer. The location can be changed in the Basic Information section on the Print Server Settings page.
4	Contact Person	Displays the name of the printer administrator. The name can be changed in the Basic Information section on the Print Server Settings page.
5	Event Panel	Displays the indicator for the condition of the printer.
6	Machine image	Shows the bitmap image of the printer. The Printer Status menu appears in the right frame when you click the image.

Left Frame

The left frame is located on the left side of all the pages. The menu titles displayed in the left frame are linked to corresponding menus and pages. You can go to the corresponding page by clicking their characters.

The following menus are displayed in the left frame.

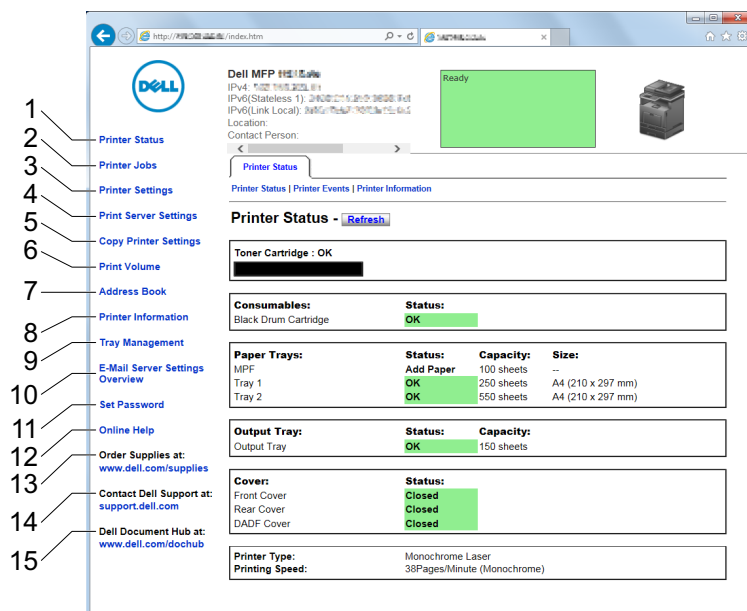


1	Printer Status	Links to the Printer Status menu.
2	Printer Jobs	Links to the Printer Jobs menu.
3	Printer Settings	Links to the Printer Settings Report menu.
4	Print Server Settings	Links to the Print Server Reports menu.
5	Copy Printer Settings	Links to the Copy Printer Settings menu.
6	Print Volume	Links to the Print Volume menu.
7	Address Book	Links to the E-Mail Address menu.
8	Printer Information	Links to the Printer Status menu.
9	Tray Management	Links to the Tray Management menu.
10	E-Mail Server Settings Overview	Links to the Print Server Settings menu.
11	Set Password	Links to the Security menu.
12	Online Help	Links to the Dell Support website.
13	Order Supplies at:	Links to the Dell web page.
14	Contact Dell Support at:	Links to the Dell Support website.
15	Dell Document Hub at: ^{*1}	Links to the Dell Document Hub website.

^{*1} This item is available only on the Dell Cloud Multifunction Printer | H815dw.

Right Frame

The right frame is located on the right side of all the pages. The contents of the right frame correspond to the menu that you select in the left frame. For details on the items displayed in the right frame, see "Details of the Menu Items."

Buttons in the Right Frame

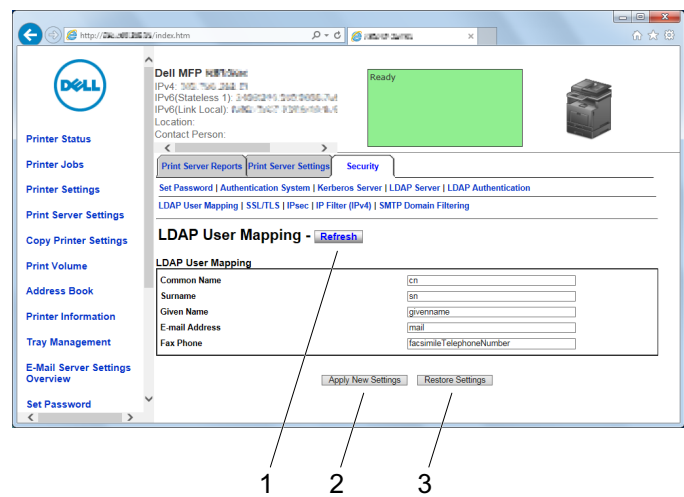

1	Refresh Button	Receives the current printer configuration and updates the latest information in the right frame.
2	Apply New Settings Button	Submits new settings made on the Dell Printer Configuration Web Tool to the printer. The new settings replace the old settings of the printer.
3	Restore Settings Button	Restores the old settings that existed before any changes were made. New settings will not be submitted to the printer.

Changing the Settings of the Menu Items

Some menus allow you to change the printer settings through the **Dell Printer Configuration Web Tool**. When you access these menus, the authentication window appears on the screen. Type a user name and password for the printer administrator by following the prompts displayed in the dialog box.

The default user name is **admin**, and the default password is left blank (NULL). You can change only the password in the **Set Password** page in the **Security** menu. The user name cannot be changed. See "Set Password" for more information.

Details of the Menu Items

"Printer Status"	"Printer Status"	"Printer Status"
		"Printer Events"
		"Printer Information"
"Printer Jobs"	"Printer Jobs"	"Job List"
		"Completed Jobs"

"Printer Settings"	"Printer Settings Report"	"Menu Settings"
		"Reports"
	"Printer Settings"	"System Settings"
		"Network Settings"
		"USB Settings"
		"PCL Settings"
		"PS Settings"
		"PDF Settings"
		"Secure Settings"
		"Copy Defaults"
		"Copy Settings"
		"Fax Defaults"
		"Fax Settings"
		"Scan Defaults"
		"Direct Print Defaults/USB Direct Print Defaults"
		"MIFARE Customized Card"*1
	"Printer Maintenance"	"Paper Density"
		"Adjust Transfer Unit"
		"Adjust Fusing Unit"
		"Adjust Density"
		"Chart"
		"Clean Developer"
		"Clean Transfer Unit"
		"Reset Defaults"
		"Initialize PrintMeter"
		"Storage"*2
		"Non-Dell Toner"
		"Adjust Altitude"
		"Decrease Electrostatic Memory"
		"Decrease Ghosting"
		"Clock Settings"
		"Web Link Customization"

"Print Server Settings"	"Print Server Reports"	"Print Server Setup Page"
		"E-Mail Server Setup Page"
	"Print Server Settings"	"Basic Information"
		"Port Settings"
		"TCP/IP"
		"SMB"
		"E-Mail Server"
		"Bonjour (mDNS)"
		"SNMP"
		"Scan to Network Folder"
		"SNTP"
		"AirPrint"
		"Google Cloud Print"
		"Dell Document Hub"*1
		"Proxy Server"
		"Wi-Fi"*1, *3
		"Wi-Fi Direct"*1, *3
		"Reset Print Server"
	"Security"	"Set Password"
		"Authentication System"
		"Kerberos Server"
		"LDAP Server"
		"LDAP Authentication"
		"LDAP User Mapping"
		"SSL/TLS"
		"IPsec"
		"802.1x"*4
		"IP Filter (IPv4)"
		"SMTP Domain Filtering"
"Copy Printer Settings"	"Copy Printer Settings"	"Copy Printer Settings"
		"Copy Printer Settings Report"
"Print Volume"	"Print Volume"	"Print Volume"
		"Dell AccessControl"
"Address Book"	"E-Mail Address"	"E-Mail Address"
		"E-Mail Group"
		"Default Setup"
	"Server Address"	"Server Address"
	"Phone Book"	"FAX Speed Dial"
		"FAX Group"
"Tray Management"	"Tray Management"	

-
- *1 This item is available only on the Dell Cloud Multifunction Printer | H815dw.
- *2 This item is available only when **RAM Disk** is enabled.
- *3 This item is available only when the printer is connected using the wireless network.
- *4 This item is available only when the printer is connected using an Ethernet cable.
-

Printer Status

Use the **Printer Status** menu to check the status of consumables, hardware, and specifications of the printer. The following pages are displayed in the **Printer Status** menu.

Printer Status

Purpose:

To check the status of the consumables, trays, and covers.

Values:

Toner Cartridge		OK	Indicates that there is enough amount of toner for use.
		Replace Soon	Indicates that the toner needs to be replaced soon.
		Replace Now	Indicates that the toner needs to be replaced now.
Consumables	Status	OK	Indicates that the status of the drum cartridge is OK for use.
		Replace Soon	Indicates that the drum cartridge needs to be replaced soon.
		Replace Now	Indicates that the drum cartridge needs to be replaced now.
Paper Trays	Status	OK	Indicates that there is some paper in the tray but the quantity is unknown.
		Add Paper	Indicates that there is no paper in the tray.
	Capacity	Displays the maximum capacity of the paper tray.	
	Size	Displays the size of paper in the tray.	
Output Tray	Status	OK	Indicates that the tray is available.
	Capacity	Displays the maximum capacity of the paper tray.	
Cover	Status	Closed	Indicates that the cover is closed.
		Open	Indicates that the cover is open.
Printer Type			Displays the type of the printer. Laser is displayed normally.
Printing Speed			Displays the printing speed.

Printer Events

Purpose:

To check the details of all alerts or indications of faults displayed in the **Printer Events** page when any faults such as *Out of Paper* or *Cover is Open* occur.

Values:

Location	Displays the location where a fault occurred.
Details	Displays the details of the fault.

Printer Information

Purpose:

To verify the printer details such as the hardware configuration and software version. This page can also be displayed by clicking **Printer Information** in the left frame.

Values:

Dell Service Tag Number		Displays Dell service tag number.
Express Service Code		Displays Dell express service code.
Asset Tag Number		Displays the asset tag number of the printer.
Printer Serial Number		Displays the serial number of the printer.
Memory Capacity		Displays the memory capacity.
Processor Speed		Displays the processing speed.
Printer Revision Levels	Firmware Version	Displays the revision date (revision level).

Printer Jobs

The **Printer Jobs** menu contains information on the **Job List** and **Completed Jobs** pages. These pages show the details of the status regarding each protocol or job.

Job List

Purpose:

To confirm the jobs that are being processed. Click the **Refresh** button to update the screen.

Values:

ID	Displays the job ID.
Job Name	Displays the file name of the job being processed.
Owner	Displays the name of the job owner.
Host Name	Displays the name of the host computer.
Job Status	Displays the status of the job being processed.
Job Type	Displays the type of the job.
Host I/F	Displays the status of the host interface.
Job Submitted Time	Displays the date when the job was submitted.

Completed Jobs

Purpose:

To check the completed jobs. Up to the last 20 jobs are displayed. Click the **Refresh** button to update the screen.

Values:

ID	Displays the job ID.
Job Name	Displays the file name of the completed job.
Owner	Displays the name of the job owner.
Host Name	Displays the name of the host computer.
Output Result	Displays the status of the completed job.
Job Type	Displays the type of the job.
Impression Number	Displays the total number of pages for the job.
No. of Sheets	Displays the total number of sheets for the job.
Host I/F	Displays the status of the host interface.
Job Submitted Time	Displays the date when the job was submitted.

Printer Settings

Use the **Printer Settings** menu to display the **Printer Settings Report**, **Printer Settings**, and **Printer Maintenance** tabs and to configure the printer settings.

The following tabbed pages are displayed at the top of the right frame.

Printer Settings Report

The **Printer Settings Report** tab includes the **Menu Settings** and **Reports** pages.

Menu Settings

Use the **Menu Settings** page to display the current settings of the printer menus.

Reports

Purpose:

To print various types of reports and lists.

Values:

System Settings	Click Start to print the System Settings report.
Panel Settings	Click Start to print the Panel Settings report.
PCL Fonts List	Click Start to print the PCL (Hewlett-Packard Printer Control Language) Fonts List.
PCL Macros List	Click Start to print the PCL Macro List.
PS Fonts List	Click Start to print the PS Fonts List.
PDF Fonts List	Click Start to print the PDF Fonts List.
Job History	Click Start to print the Job History report.
Error History	Click Start to print the Error History report.
Print Meter	Click Start to print the Print Meter report.
Demo Page	Click Start to print the Demo Page.
Protocol Monitor	Click Start to print the Protocol Monitor report.

Speed Dial	Click Start to print the Speed Dial report.
Address Book	Click Start to print the Address Book list.
Server Address	Click Start to print the Server Address list.
Fax Activity	Click Start to print the Fax Activity report.
Fax Pending	Click Start to print the Fax Pending list.
Stored Documents ^{*1}	Click Start to print the Stored Documents list.

^{*1} This item is available only when **RAM Disk** is enabled.

Printer Settings

The Printer Settings tab includes System Settings, Network Settings, USB Settings, PCL Settings, PS Settings, PDF Settings, Secure Settings, Copy Defaults, Copy Settings, Fax Defaults, Fax Settings, Scan Defaults, Direct Print Defaults/USB Direct Print Defaults^{*1}, and MIFARE Customized Card pages.

^{*1} Direct Print on the Dell Cloud Multifunction Printer | H815dw; USB Direct Print on the Dell Smart Multifunction Printer | S2815dn

System Settings

Purpose:

To configure the basic printer settings.

Values:

Power Saver Time - Sleep	Sets the time taken by the printer to enter Sleep mode after it finishes a job.
Power Saver Time - Deep Sleep	Sets the time taken by the printer to enter Deep Sleep mode after it has entered Sleep mode.
mm / inch	Sets the measurement unit to be used on the touch panel as either mm or inches.
Screen Brightness	Sets the brightness level of the touch panel screen.
Control Panel Tone	Sets the volume of the tone that is emitted when the operator panel input is correct, or disables the tone.
Invalid Key Tone	Sets the volume of the tone that is emitted when the operator panel input is incorrect, or disables the tone.
Machine Ready Tone	Sets the volume of the tone that is emitted when the printer becomes ready, or disables the tone.
Copy Completed Tone	Sets the volume of the tone that is emitted when a copy job is complete, or disables the tone.
Job Completed Tone	Sets the volume of the tone that is emitted when a job other than a copy job is complete, or disables the tone.
Fault Tone	Sets the volume of the tone that is emitted when a job ends abnormally, or disables the tone.
Alert Tone	Sets the volume of the tone that is emitted when a problem occurs, or disables the tone.
Out of Paper Tone	Sets the volume of the tone that is emitted when the printer runs out of paper, or disables the tone.
Low Toner Alert Tone	Sets the volume of the tone that is emitted when the toner is low, or disables the tone.
Auto Clear Alert Tone	Sets the volume of the tone that is emitted 5 seconds before the printer performs auto clear, or disables the tone.

NFC Authentication Tone ^{*1}	Sets the volume of the tone that is emitted when an NFC card is placed on the NFC reader for authentication, or disables the tone.
All Tones	Sets the volume of all the alert tones, or disables all the tones.
Low Toner Alert Message	Alerts you if the toner is low.
OffHook Wake Up	Sets whether to wake up from Sleep or Deep Sleep mode when you pick up the handset of the external telephone.
Auto Log Print	Sets if a job history needs to be printed after every 20 jobs.
RAM Disk	Sets whether to allocate RAM for the file system for the Secure Print, Proof Print, Private Mail Box Print, and Public Mail Box Print features.
Panel Language	Used to set the language on the touch panel.
Max E-mail Size	Sets the maximum size of e-mail that can be sent. The available range is from 50 to 16384 (KB) (Default: 2048).
Auto Reset	Sets the amount of time before the printer automatically resets its settings to the defaults when no additional settings are made.
Fault Time-out	Sets the amount of time the printer waits before canceling a job that stops abnormally.
Default Paper Size	Sets the default print paper size.
Print ID	Sets where to print the user ID on the output paper.
Print Text	Sets whether the printer outputs PDL data (which is not supported by the printer) as text when the printer receives it.
Banner Sheet Insert Position	Sets where to insert a banner sheet in the output.
Banner Sheet Specify Tray	Sets from which tray a banner sheet is fed.
Substitute Tray	Sets whether to use another size paper when the paper that is loaded in the specified tray does not match the paper size settings for the current job.
Letterhead 2 Sided	Sets whether to print on both sides of letterhead.
A4<>Letter Switch	Sets whether to print A4 size jobs on Letter size paper if A4 is not available in the paper trays and vice versa (Letter size job on A4 size paper).
A5<>Statement Switch	Sets whether to print A5 size jobs on Statement size paper if A5 is not available in the paper trays and vice versa (Statement size job on A5 size paper).
Report 2 Sided Print	Sets whether to print reports on both sides a sheet of paper.
Use Another Tray	Sets whether to show a message to select another tray when the specified paper is not available in the paper tray.
Envelope Mode Mismatch	Sets whether to display the alert window when the print job is started without setting to the envelope mode.
Tap To Print ^{*1}	Sets whether to add the printer to a mobile device such as a tablet or a notebook computer by tapping the device to (NFC) of the printer.
^{*1} This item is available only on the Dell Cloud Multifunction Printer H815dw.	

Network Settings

Purpose:

To Specify the PostScript 3 Compatible communication protocol for this printer.

Values:

PS Data Format	Sets PostScript 3 Compatible communication protocol.
----------------	--

USB Settings

Purpose:

To change USB settings on your printer.

Values:

USB Port	Enables the USB interface on your printer.
PS Data Format	Sets PostScript 3 Compatible communication protocol.
Job Time-out	Sets the amount of time the printer waits for data to arrive from the computer.

PCL Settings

Purpose:

To change the PCL settings.

Values:

Paper Tray	Sets the paper input tray.
Paper Size	Sets the paper size.
Custom Paper Size - Y	Sets the length of custom size paper. The available range is from 127 mm (5.0 inch) to 355 mm (14.0 inch).
Custom Paper Size - X	Sets the width of custom size paper. The available range is from 77 mm (3.0 inch) to 215 mm (8.5 inch).
Orientation	Sets how text and graphics are oriented on the page.
2 Sided Print	Sets duplexing as the default for all print jobs.
Font	Sets the font from the list of registered fonts.
Symbol Set	Sets a symbol set for the specified font.
Font Size	Sets the font size for scalable typographic fonts.
Font Pitch	Sets the font pitch for scalable mono spaced fonts.
Form Line	Sets the number of lines in a page.
Quantity	Sets the number of copies to print.
Image Enhance	Sets whether to enable the Image Enhancement feature.
Hex Dump	Sets whether to help isolate the source of a print job problem. With Hex Dump selected, all data sent to the printer is printed in hexadecimal and character representation. Control codes are not executed.
Draft Mode	Sets whether to print in the draft mode.
Line Termination	Sets how to handle line terminations.
Ignore Form Feed	Sets whether to ignore blank pages that only contain Form Feed control codes.
A4 Wide	Sets whether to expand the printable area width.
Barcode Mode	Sets whether to enable the barcode mode, which is suitable for barcode printing.

PS Settings

Purpose:

To change printer settings that only affect jobs using the PostScript 3 Compatible emulation printer language.

Values:

PS Error Report	Sets whether the contents of the errors concerning PostScript 3 Compatible page description language are printed.
PS Job Time-out	Sets the execution time for one PostScript 3 Compatible job.
Paper Select Mode	Sets the way to select the tray for the PostScript 3 Compatible mode.

PDF Settings

Purpose:

To change the PDF settings.

Values:

Quantity	Sets the number of copies.
2 Sided Print	Sets whether to print on both sides of a sheet of paper.
Print Mode	Sets a print mode.
PDF Password	Sets a password.
Re-enter PDF Password	Confirms the set password.
Collation	Sets whether to sort the output.
Output Size	Sets the output paper size.
Layout	Sets the output layout.
Detect Job Separator	Sets whether to detect the end of the job in printing PDF files successively from the USB memory.

Secure Settings

Panel Lock

Purpose:

To set a limited access to Admin Settings with a password, and to set or change the password.

Values:

Panel Lock Control ^{*1}	Enables/Disables password protection for the Admin Settings.
New Password	Sets a password that is required to access the Admin Settings.
Re-enter Password	Confirms the set password.
^{*1} Some setting items in the Secure Settings are displayed only when this setting item is enabled.	



NOTE: You can set the password for the **Dell Printer Configuration Web Tool** from **Set Password** in **Print Server Settings**.

Functions Control

Purpose:

To specify whether to lock the Copy, Scan, Fax, and Print functions with a password, and to set or change the password.

Values:

Copy	Sets whether to lock the Copy function with a password.
Scan to E-mail	Sets whether to lock the Scan to Email function with a password.
Fax	Sets whether to lock the Fax function with a password.
Fax Driver	Sets whether to enable or disable the Fax Driver function.
Scan to Network Folder	Sets whether to lock the Scan to Network Folder function with a password.
Scan to PC	Sets whether to lock the Scan to PC function with a password.
PC Scan	Sets whether to lock the PC Scan function with a password.
Scan to USB	Sets whether to lock the Scan to USB function with a password.
USB Direct Print	Sets whether to lock the USB Direct Print function with a password.
ID Copy	Sets whether to enable or disable the ID Copy function.
USB Services - Show When Inserted	Sets whether to show a USB Drive Detected screen when a USB memory is inserted into the printer.
New Password	Sets a password that is required to access the Copy, Scan, Fax, and Print functions.
Re-enter Password	Confirms the set password.



NOTE: You can set the password for the **Dell Printer Configuration Web Tool** from **Set Password** in **Print Server Settings**.

Secure Receive

Purpose:

Allows you to password protect all the incoming faxes. When the Secure Receive feature is enabled, the printer stores incoming faxes and prints them when the correct password is entered on the operator panel.

Values:

Secure Receive Set	Enables/Disables password protection for all incoming faxes.
New Password	Sets a password for incoming faxes.
Re-enter Password	Confirms the set password.

 **NOTE:** You can set the password for the **Dell Printer Configuration Web Tool** from **Set Password** in **Print Server Settings**.

Desktop Login

 **NOTE:** This Desktop Login feature is available on the Dell Smart Multifunction Printer | S2815dn only.

Purpose:

Select the user authentication method from either local authentication or remote authentication. To use the remote authentication method, the LDAP server or the Kerberos server is required to authenticate the user.

Values:

Desktop Authentication	Sets the authentication method.	
	Local Authentication*	Use the local authentication method.
	Remote Authentication	Use the remote authentication method.
Authentication System	Click to display the Authentication System page and to specify the authentication system settings.	

Edit E-mail From Fields

Purpose:

To set whether to enable editing of the transmission source when you use the Scan to Email function.

Reconfirm Recipients

Purpose:

To set whether to reconfirm before sending fax or scan jobs.

Software Download

Purpose:

To set whether to enable download of firmware updates.

Display of Network Information

Purpose:

To set whether to show network information in the message field of the **Home** screen.

Login Error

Purpose:

To specify how many times an administrator can attempt to log in to **Panel Lock**, **Functions Control**, and **Secure Receive**.

NFC Authentication

 **NOTE:** NFC Authentication feature is available on the Dell Cloud Multifunction Printer | H815dw only.

Purpose:

To set whether to enable the authentication using the NFC authentication card.

Set Available Time - Copy/Scan/Fax/Print

Purpose:

To specify the time to enable the secure setting for the Copy, Scan, Fax, and Print functions.

Values:

Set Available Time	Allows you to set the available time period for the Copy, Scan, Fax, and Print functions.
Start Time	Sets the start time of the available time period for the Copy, Scan, Fax, and Print functions.
End Time	Sets the end time of the available time period for the Copy, Scan, Fax, and Print functions.

Recurrence	Sets the day of the week to repeat the setting.
------------	---

Secure Job Expiration



NOTE: Secure Job Expiration feature is available only when **RAM Disk** is enabled.

Purpose:

To specify the date and time to delete the files stored as Secure Print in the RAM disk.

Values:

Expiration Mode	Allows you to set the date to delete the files stored as Secure Print in the RAM disk.
Expiration Time	Sets the time to delete the files stored as Secure Print in the RAM disk.
Recurrence	Sets the period to repeat the setting.
Weekly Settings	Sets the day of the week to repeat the setting.
Monthly Settings	Sets the day of the month to repeat the setting.

Copy Defaults

Purpose:

To create your own default Copy settings.

Values:

Select Tray	Sets the default input tray.
Collation	Sets whether to sort a copy job.
Reduce/Enlarge	Sets the default reduction/enlargement ratio.
Custom Reduce/Enlarge	Sets the custom reduction/enlargement ratio.
Original Size	Sets the paper size of the original.
Original Type	Sets the type of the original.
Darken/Lighten	Sets the default copy density.
Sharpness	Sets the default sharpness level.
Auto Exposure	Sets whether to suppress the background of the original to enhance text on the copy.
Auto Exposure Level	Sets the background suppression level.

Copy Settings

Purpose:

To configure the Copy settings.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Values:

2 Sided Copying	Sets whether to print on both sides of a sheet of paper.	
Binding of Original	Sets the binding position for the 2-sided copying.	
2-Up	Off*	Does not perform multiple-up printing.
	Auto	Automatically reduces the original pages to fit onto one sheet of paper.
	Manual	Prints the original pages onto one sheet of paper in the size specified for Reduce/Enlarge.

Margin Top/Bottom	Sets the value of the top and bottom margins within the range of 0 mm (0.0 inch) to 50 mm (2.0 inch).
Margin Left/Right	Sets the value of the left and right margins within the range of 0 mm (0.0 inch) to 50 mm (2.0 inch).
Margin Middle	Sets the value of the middle margin within the range of 0 mm (0.0 inch) to 50 mm (2.0 inch).

Fax Defaults

Purpose:

To create your own default Fax settings.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Values:

Resolution	Standard*	Suitable for documents with normal sized characters.
	Fine	Suitable for documents containing small characters or thin lines or documents printed using a dot-matrix printer.
	Super Fine	Suitable for documents containing extremely fine detail. The super fine mode is enabled only if the remote machine also supports the Super Fine resolution.
	Photo	Suitable for documents containing photographic images.
2 Sided Scanning	Sets whether to scan both sides of a document.	
Binding of Original	Sets the binding position for the 2-sided scanning.	
Darken/Lighten	Sets the default density to fax your documents lighter or darker.	
Delayed Send	Sets the fax transmission start time when sending a fax at a specified time.	

Fax Settings

Purpose:

To configure the Fax settings.



NOTE: You cannot set up the items on the **Fax Settings** page unless you set up the country code under **Country**.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Values:

Fax Number	Allows you to enter the fax number of the printer, which will be printed on the header of faxes.
Country	Sets the country where the printer is used.
Fax Header Name	Allows you to enter a name that will be printed on the header of faxes.
Line Type	Sets the default line type; PSTN or PBX.
Line Monitor	Sets the volume of the line monitor, which audibly monitors a transmission through the internal speaker until a connection is made.
DRPD Pattern	Sets the Distinctive Ring Pattern Detection (DRPD) setting from Pattern1 to Pattern7 . DRPD is a service provided by some telephone companies.

Receive Mode	Telephone	Automatic fax reception is turned off. You can receive a fax by picking up the handset of the external telephone and then pressing a remote receive code, or by tapping Receive in On Hook and then tapping Receive . For details about Manual Receive , see "Receiving a Fax Manually in the Telephone Mode."
	Fax*	Automatically receives faxes.
	Telephone/Fax	When the printer receives an incoming fax, the external telephone rings for the time specified in Auto Receive Tel/Fax , and then the printer automatically receives a fax. If an incoming call is not a fax, the printer beeps from the internal speaker indicating that the call is a telephone call.
	Ans Machine/Fax	The printer can share a telephone line with an answering machine. In this mode, the printer will monitor the fax signal and pick up the line if there are fax tones. If the telephone communication in your country is serial, this mode is not supported.
	DRPD	Before using the Distinctive Ring Pattern Detection (DRPD) option, a distinctive ring service must be installed on your telephone line by the telephone company. After the telephone company has provided a separate number for faxing with a distinctive ring pattern, configure the fax setup to monitor for that specific ring pattern.
Ring Tone Volume	Sets the volume of the ring tone, which indicates that an incoming call is a telephone call through the internal speaker when Receive Mode is set to Telephone/Fax .	
Auto Receive Fax	Sets the interval at which the printer goes into the fax receive mode after answering an incoming call.	
Auto Receive Tel/Fax	Sets the interval at which the printer goes into the fax receive mode after the external telephone receives an incoming call.	
Auto Receive Answer/Fax	Sets the interval at which the printer goes into the fax receive mode after the external answering machine receives an incoming call.	
Junk Fax Setup	Sets whether to reject unwanted faxes by accepting only the faxes from the numbers registered in the Phone Book	
2 Sided Printing	Sets whether to print on both sides of a sheet of paper.	
Remote Receive	Sets whether to receive a fax by pressing a remote receive code on the external telephone.	
Remote Receive Tone	Sets a 2-digit remote receive code when Remote Receive is On .	
Discard Size	Sets whether to delete text or images at the bottom of a fax page when the entire page does not fit onto the output paper. Selecting Auto Reduction automatically reduces the fax page to fit it onto the output paper, and does not discard any images or text at the bottom of the page.	
Received Fax Forward	Sets whether to forward incoming faxes to a specified destination.	
Forwarding Number	Allows you to enter the fax number of the destination to which incoming faxes will be forwarded.	
Forwarding E-mail Address 1	Allows you to enter the e-mail address to which incoming faxes are to be forwarded.	
Forwarding E-mail Address 2	Allows you to enter the e-mail address to which incoming faxes are to be forwarded.	
Forwarding E-mail Address 3	Allows you to enter the e-mail address to which incoming faxes are to be forwarded.	
Forwarding E-mail Address 4	Allows you to enter the e-mail address to which incoming faxes are to be forwarded.	
Forwarding E-mail Address 5	Allows you to enter the e-mail address to which incoming faxes are to be forwarded.	
Server Type	Sets the server type.	
Server Address	Sets the server address registered under the server ID.	
Server Port Number	Sets the server port number.	

Login Name	Sets the login name.
Login Password	Sets the login password.
Re-enter Password	Enter the password again to confirm it.
Share Name	Sets the shared name.
Server Path	Sets the server path.
Redial Attempts	Sets the number of redial attempts (0–13) to make if the destination fax number is busy. If you enter 0, the printer will not redial.
Interval of Redial	Sets the interval (1–15 minutes) between redial attempts.
Resend Delay	Sets the interval (3–255 seconds) between re-send attempts.
Tone/Pulse	Sets whether to use tone or pulse dialing.
Prefix Dial	Sets whether to set a prefix dial number.
Prefix Dial Number	Sets a prefix dial number of up to five digits. This number dials before any auto dial number is started. It is useful for accessing the Private Automatic Branch Exchange (PABX).
Fax Cover Page	Sets whether to attach a cover page to faxes.
Fax Header ^{*1}	Sets whether to print the information of the sender on the header of faxes.
ECM	Sets whether to enable the Error Correction Mode (ECM). To use the ECM, the remote machines must also support the ECM.
Modem Speed	Allows you to adjust the fax modem speed when a fax transmission or reception error occurs.
Display Manual Fax Recipients	Sets whether to show the fax number of the recipient on the Sending Fax screen when manually sending a fax.
Fax Activity	Sets whether to automatically print a fax activity report after every 50 incoming and outgoing fax communications.
Fax Transmit	Sets whether to print a transmission report after every fax transmission or only when an error occurs.
Fax Broadcast	Sets whether to print a transmission report after every fax transmission to multiple destinations or only when an error occurs.
Fax Protocol	Sets whether to print the protocol monitor report after every fax transmission or only when an error occurs.
^{*1} This item is not available when Country is set to United States .	

Scan Defaults

Purpose:

To create your own default Scan settings.

Values:

File Format	Sets the file format in which scanned documents are to be saved.
Output Color	Sets whether to scan in color or in black and white.
Resolution	Sets the default scan resolution.
Original Size	Sets the paper size of the original.
2 Sided Scanning	Sets whether to scan both sides of a document.
Binding of Original	Sets the binding position for the 2-sided scanning.
Darken/Lighten	Sets the default scan density.
Sharpness	Sets the default sharpness level.
Contrast	Sets the default contrast level.
Auto Exposure	Sets whether to suppress the background of the original to enhance text on the copy.

Auto Exposure Level	Sets the default background suppression level.
Margin Top/Bottom	Sets the value of the top and bottom margins within the range of 0 mm (0.0 inch) to 50 mm (2.0 inch).
Margin Left/Right	Sets the value of the left and right margins within the range of 0 mm (0.0 inch) to 50 mm (2.0 inch).
Margin Middle	Sets the value of the middle margin within the range of 0 mm (0.0 inch) to 50 mm (2.0 inch).
TIFF File Format	Sets the TIFF file format to TIFF V6 or TTN2.
Image Compression	Sets the image compression level.
File Naming Mode	Sets the detailed settings of File Naming Mode to Auto , Add Prefix or Add Suffix .
Prefix/Suffix String	Sets the texts that are added when Add Prefix or Add Suffix are selected.
Create Folder	Sets whether to create a folder when saving scanned documents.

Direct Print Defaults/USB Direct Print Defaults



NOTE: Direct Print Defaults feature is available on the Dell Cloud Multifunction Printer | H815dw; USB Direct Print Defaults feature is available on the Dell Smart Multifunction Printer | S2815dn.

Purpose:

To create your own **Direct Print Defaults/USB Direct Print Defaults** setting.

Values:

Select Tray	Sets the default input tray.
2 Sided Printing	Sets whether to print on both sides of a sheet of paper.
Layout	Sets the default paper layout when Layout is selected.
Image Types	Sets the print image quality when printing documents.
Collation	Sets whether to sort the output.
PDF Password	Sets a password.
Re-enter PDF Password	Confirms the set password.

MIFARE Customized Card



NOTE: MIFARE Customized Card feature is available on the Dell Cloud Multifunction Printer | H815dw only.

Purpose:

To register SSFC formatted NFC ID cards.

Values:

User ID Block 1	Allows you to register the MIFARE Customized Card.
User ID Block 2	Allows you to register the MIFARE Customized Card.
User ID Block 3	Allows you to register the MIFARE Customized Card.

Printer Maintenance

The **Printer Maintenance** tab includes the **Paper Density**, **Adjust Transfer Unit**, **Adjust Fusing Unit**, **Adjust Density**, **Chart**, **Clean Developer**, **Clean Transfer Unit**, **Reset Defaults**, **Initialize PrintMeter**, **Storage**, **Non-Dell Toner**, **Adjust Altitude**, **Decrease Electrostatic Memory**, **Decrease Ghosting**, **Clock Settings**, and **Web Link Customization** pages.

Paper Density

Purpose:

To specify the paper density.

Values:

Plain	Sets the density of plain paper to Light or Normal .
-------	--

Adjust Transfer Unit

Purpose:

To specify the optimum voltage settings for printing for the transfer unit. To lower the voltage, set negative values. To increase, set positive values.

The default settings may not give the best output quality on all paper types. If you see mottles on the printed paper, try to increase the voltage. If you see white spots on the printed paper, try to decrease the voltage.



CAUTION: The print quality changes depending on the setting values you select for this item.

Values:

Plain	Sets the reference voltage setting for the transfer unit for plain paper within the range of -5 to 10.
Plain Thick	Sets the reference voltage setting for the transfer unit for thick plain paper within the range of -5 to 10.
Covers (106-163 g/m ²)	Sets the reference voltage setting for the transfer unit for cover paper within the range of -5 to 10.
Covers Thick (164-216 g/m ²)	Sets the reference voltage setting for the transfer unit for thick cover paper within the range of -5 to 10.
Rough Surface	Sets the reference voltage setting for the transfer unit for rough surface paper within the range of -5 to 10.
Label	Sets the reference voltage setting for the transfer unit for labels within the range of -5 to 10.
Envelope	Sets the reference voltage setting for the transfer unit for envelopes within the range of -5 to 10.
Japanese Postcard	Sets the reference voltage setting for the transfer unit for Japanese postcards within the range of -5 to 10.

Adjust Fusing Unit

Purpose:

To specify the optimum temperature settings for printing for the fusing unit. To lower the temperature, set negative values. To increase, set positive values.

The default settings may not give the best output on all paper types. When the printed paper has curled, try to lower the temperature. When the toner does not fuse on the paper properly, try to increase the temperature.



NOTE: The print quality changes depending on the setting values you select for this item.

Values:

Plain	Sets the temperature settings for the fusing unit for plain paper within the range of -3 to 3.
Plain Thick	Sets the temperature settings for the fusing unit for thick plain paper within the range of -3 to 3.
Covers (106-163 g/m ²)	Sets the temperature settings for the fusing unit for cover paper within the range of -3 to 3.
Covers Thick (164-216 g/m ²)	Sets the temperature settings for the fusing unit for thick cover paper within the range of -3 to 3.
Rough Surface	Sets the temperature settings for the fusing unit for rough surface paper within the range of -3 to 3.

Label	Sets the temperature settings for the fusing unit for labels within the range of -3 to 3.
Envelope	Sets the temperature settings for the fusing unit for envelopes within the range of -3 to 3.
Japanese Postcard	Sets the temperature settings for the fusing unit for Japanese postcards within the range of -3 to 3.

Adjust Density

Purpose:

To adjust the density level.

Values:

Darker3	Adjusts the density level darker than the normal setting.
Darker2	
Darker1	
Normal	Works well with standard typed or printed documents.
Lighter1	Adjusts the density level lighter than the normal setting.
Lighter2	
Lighter3	

Chart

Purpose:

To print various charts that can be used for diagnosis of the printer.

Values:

Pitch Chart	Print	Prints a full halftone page. Also prints a page to check the pitch. A total of two pages are printed.
Full Page Solid	Print	Prints a chart of the full page solid. 1-Sided Prints a chart on one side of the paper. 2-Sided Prints a chart of the full page solid on both sides of the paper.
Alignment Chart	Print	Prints a chart to check for proper alignment of the print image on the paper.

Clean Developer

Purpose:

To stir the developer in the drum cartridge.

Values:

Clean Developer	Start	Stirs the developer in the drum cartridge.
Toner Refresh	Start	Expels the toner in the drum cartridge, and supplies the fresh toner from the toner cartridge.

Clean Transfer Unit

Purpose:

To clean the transfer unit.

Values:

Clean Transfer Unit	Start	Cleans the transfer unit.
---------------------	-------	---------------------------

Reset Defaults

Purpose:

To initialize the non-volatile (NV) memory. After executing this function and rebooting the printer, all the menu parameters are reset to their default values.

Values:

Reset Defaults	Reset Defaults User Fax Section and restart printer.	Click Start to reset the fax number entries in the Address Book.
	Reset Defaults User Scan Section and restart printer.	Click Start to reset the e-mail and server address entries in the Address Book.
	Reset Defaults User Account Section and restart printer.* ¹	Click Start to reset the user account entries.
	Reset Defaults User App Section and restart printer* ¹	Click Start to reset the user application entries.
	Reset Defaults System Section and restart printer.	Click Start to reset the system parameters.
Power On Wizard	Power On Wizard	Click Start to perform the initial setup for the printer.
* ¹ This item is available on the Dell Cloud Multifunction Printer H815dw only.		

Initialize PrintMeter

Purpose:

To initialize the print meter of the printer. When the print meter is initialized, the meter count is reset to 0.

Storage



NOTE: Storage feature is available only when **RAM Disk** is enabled.

Purpose:

To clear all files stored in the RAM disk.

Values:

Clear Storage* ¹	All Clear	Click Start to clear all files stored as Secure Print, Proof Print, Private Mail Box Print, and Public Mail Box Print in the RAM disk.
	Secure Document	Click Start to clear all files stored as Secure Print, Proof Print, Private Mail Box Print, and Public Mail Box Print in the RAM disk.
	Stored Document	Click Start to clear all files stored in the RAM disk.
* ¹ This item is available only when RAM Disk is enabled.		

Non-Dell Toner

Purpose:

To use toner cartridge of another manufacturer.



WARNING: Using a non-Dell toner cartridge may severely damage your printer. The warranty does not cover damages caused by using non-Dell toner cartridges.

Adjust Altitude

Purpose:

To specify the altitude of the location where the printer is installed.

The discharge phenomenon for charging the photo conductor varies with barometric pressure. Adjustments are performed by specifying the altitude of the location where the printer is being used.

Decrease Electrostatic Memory

Purpose:

To widen the print gap not to leave toner streak on the next page.



NOTE: When **Decrease Electrostatic Memory** is set to **On**, the print speed will be slowed.

Decrease Ghosting

Purpose:

To reduce negative ghost.

Clock Settings

Purpose:

To specify the clock settings.

Values:

Date Format	Sets the date format; YYYY/MM/DD, MM/DD/YYYY, or DD/MM/YYYY.
Time Format	Sets the time format; 24 Hour Clock or 12 Hour Clock.
Time Zone	Sets the time zone.
Set Date	Sets the current date.
Set Time	Sets the current time.

Web Link Customization

Purpose:

To specify a link used for ordering consumables, which can be accessed from **Order Supplies at:** in the left frame.

Values:

Select Reorder URL	Sets a URL to be linked to Order Supplies at:
Regular	Displays the regular URL (http://accessories.us.dell.com/sna) that can be linked to Order Supplies at: .
Premier	Displays the premier URL (http://premier.dell.com) that can be linked to Order Supplies at: .

Print Server Settings

Use the **Print Server Settings** menu to set the type of printer interface and the necessary conditions for communication.

The following tabbed pages are displayed in the top of the right frame.

Print Server Reports

The **Print Server Reports** tab includes the **Print Server Setup Page** and the **E-Mail Server Setup Page**.

Print Server Setup Page

Displays the current settings of TCP/IP (Transmission Control Protocol/Internet Protocol) and printing ports.

E-Mail Server Setup Page

Displays the current settings of the e-mail server.

Print Server Settings

The Print Server Settings tab includes the **Basic Information**, **Port Settings**, **TCP/IP**, **SMB**, **E-Mail Server**, **Bonjour (mDNS)**, **SNMP**, **Scan to Network Folder**, **SNTP**, **AirPrint**, **Google Cloud Print**, **Dell Document Hub**^{*1}, **Proxy Server**, **Wi-Fi**^{*1}, **Wi-Fi Direct**^{*1}, and **Reset Print Server** pages.

^{*1} This item is available only on the Dell Cloud Multifunction Printer | H815dw.

Basic Information

Purpose:

To configure basic information of the printer.

Values:

System Settings	Printer Name	Sets the name of the printer.
	Location	Sets the location of the printer.
	Contact Person	Sets the contact name, number, and other information of the printer administrator and service center.
	Administrator E-Mail Address	Sets the contact address of the printer administrator and service center.
	Asset Tag Number	Enters the asset tag number for the printer.
Dell Printer Configuration Web Tool Settings	Auto Refresh	Automatically refreshes the contents of the status display pages.
	Auto Refresh Interval	Sets the time interval for refreshing the contents of the status display pages automatically from 15 to 600 seconds.



NOTE: The **Auto Refresh** feature is effective for the contents of the top frame, **Printer Status** page, **Job List** page, and **Completed Jobs** page.

Port Settings

Purpose:

To enable or disable printing ports and management protocol features.

Values:

Ethernet ^{*1}	Ethernet Settings	Auto	Detects the Ethernet transmission rate and the duplex settings automatically.
		10Base-T Half-Duplex	Selects 10Base-T Half-Duplex as the default value.
		10Base-T Full-Duplex	Selects 10Base-T Full-Duplex as the default value.
		100Base-TX Half-Duplex	Selects 100Base-TX Half-Duplex as the default value.
		100Base-TX Full-Duplex	Selects 100Base-TX Full-Duplex as the default value.
		1000Base-T Full-Duplex	Selects 1000Base-T Full-Duplex as the default value.
	Current Ethernet Settings		Displays the current settings of the Ethernet.
	MAC Address		Displays the MAC address of the printer.
	Energy Efficient Ethernet		Sets whether to enable the Energy Efficient Ethernet feature.
Port Status	LPD	Sets whether to enable LPD.	
	Port9100	Sets whether to enable Port9100.	
	IPP	Sets whether to enable IPP.	
	WSD Print	Sets whether to enable Web Services on Devices (WSD) Print.	
	WSD Scan	Sets whether to enable Scan to Web Services on Devices (WSD).	
	Network TWAIN	Sets whether to enable Network TWAIN	
	FTP	Sets whether to enable FTP.	
	SMB	Sets whether to enable SMB.	
	Bonjour (mDNS)	Sets whether to enable Bonjour (mDNS).	
	E-Mail Alert	Sets whether to enable E-Mail Alert.	
	Telnet	Sets whether to enable Telnet.	
	SNMP	Sets whether to enable SNMP.	
	Update Address Book	Sets whether to enable Update Address Book.	
	SNTP	Sets whether to enable SNTP.	
	Google Cloud Print	Sets whether to enable Google Cloud Print.	
	Print from Dell Document Hub ^{*2}	Sets whether to enable Print from Dell Document Hub.	
	Scan to Dell Document Hub ^{*2}	Sets whether to enable Scan to Dell Document Hub.	

^{*1} This item is available only when the printer is connected using an Ethernet cable.

^{*2} This item is available only on the Dell Cloud Multifunction Printer | H815dw.



NOTE: The settings in the **Port Settings** page will be valid only when the printer is rebooted. When you change or configure the settings, click the **Apply New Settings** button to apply the new settings.

TCP/IP

Purpose:

To configure the IP address, subnet mask, and gateway address of the printer.

Values:

TCP/IP Settings	IP Mode	Sets the IP mode.	
	Host Name	Sets the host name.	
	IPv4	IP Address Mode	Sets the method for acquiring the IP address.
		Manual IP Address	When an IP address is being set manually, the IP is allocated to the printer using the format nnn.nnn.nnn.nnn. Each octet that makes up nnn.nnn.nnn.nnn is a value in the range of 0 to 255.
		Manual Subnet Mask	When an IP address is being set manually, the subnet mask is specified using the format nnn.nnn.nnn.nnn. Each octet that makes up nnn.nnn.nnn.nnn is a value in the range of 0 to 255. 255.255.255.255 cannot be specified as the subnet mask.
		Manual Gateway Address	When an IP address is being set manually, the gateway address is specified using the format nnn.nnn.nnn.nnn. Each octet that makes up nnn.nnn.nnn.nnn is a value in the range of 0 to 255. 127 and any value in the range of 224 to 254 cannot be specified for the first octet of a gateway address.
	IPv6	Enable Stateless Address	Select the check box to enable the stateless address.
		Use Manual Address	Select the check box to set the IP address manually.
		Get IP Address from DHCP	Allows you to enable or disable the automatic setting of the IP address via DHCP.
		Manual Address	Sets the IP address. To specify an IPv6 address, enter the address followed by a slash (/) and then "64". For details, consult your system administrator.
		Manual Gateway Address	Sets the gateway address.
DNS	DNS Domain Name	Sets the DNS domain name.	
	IPv4	Get DNS Server Address from DHCP	Allows you to enable or disable the automatic setting of the DNS server address via DHCP.
		Manual DNS Server Address	Manually sets the DNS server address in xxx.xxx.xxx.xxx format when Get DNS Server Address from DHCP is not selected.
	IPv6	Get DNS Server Address from DHCPv6-lite	Select the check box to get the DNS server address automatically from the DHCPv6-lite server.
		Manual DNS Server Address	Sets the DNS server address.
	DNS Dynamic Update (IPv4)	Select the check box to enable dynamic updates to DNS.	
	DNS Dynamic Update (IPv6)	Select the check box to enable dynamic updates to DNS.	

	Auto Generate Search List	Select the check box to automatically generate the search list.
	Search Domain Name	Sets the search domain name. Up to 255 alphanumeric characters, periods, and hyphens can be used. If you need to specify more than one domain name, separate them using a comma or semicolon.
	Time-out	Sets the time-out period between 1 and 60 seconds.
	Priority to IPv6 DNS Name Resolution	Select the check box to enable the DNS Name Resolution feature.
WINS	WINS Mode	Allows you to enable or disable the automatic setting of the primary and secondary WINS server addresses via DHCP.
	WINS Primary Server	Manually sets the primary WINS server address in xxx.xxx.xxx.xxx format when WINS Mode is not selected.
	WINS Secondary Server	Manually sets the secondary (backup) WINS server address in xxx.xxx.xxx.xxx format when WINS Mode is not selected.
LPD	Connection Time-Out	Sets the connection time-out period from 1 to 3,600 seconds.
	IP Filter (IPv4)	Click IP Filter (IPv4) to set the IP Filter settings on the IP Filter (IPv4) page.
Port9100	Port Number	Sets the port number from 9000 to 9999.
	Connection Time-Out	Sets the connection time-out period between 1 and 3,600 seconds.
	IP Filter (IPv4)	Click IP Filter (IPv4) to set the IP filter settings on the IP Filter (IPv4) page.
IPP	Printer URI	Displays the printer URI.
	Connection Time-Out	Sets the connection time-out period from 1 to 1,000 seconds.
	Port Number	Displays the port number for receiving requests from the client.
	Maximum Sessions	Displays the maximum number of connections received simultaneously by the client.
WSD	Port Number	Sets the port number to 80 or from 8000 to 9999.
	Receive Time-Out	Sets the receive time-out period from 1 to 65,535 seconds.
	Notification Time-Out	Sets the notification time-out period from 1 to 60 seconds.
	Maximum Number of TTL	Sets the maximum number of TTL from 1 to 10.
	Maximum Number of Notification	Sets the maximum number of notifications from 10 to 20.
Network TWAIN	Connection Time-Out	Sets the connection time-out period between 1 and 65,535 seconds.
FTP	Password	Sets the password for FTP.
	Re-enter Password	Enter the password again to confirm it.
	Connection Time-Out	Sets the connection time-out period from 1 to 1,000 seconds.

HTTP	Port Number	Sets the port number to 80 or from 8000 to 9999.
	Simultaneous Connections	Displays the maximum number of simultaneous connections.
	CSRF Protection	Select the check box to enable the CSRF Protection.
	Connection Time-Out	Sets the connection time-out period from 1 to 255 seconds.
Telnet	Password	Sets the password for Telnet.
	Re-enter Password	Confirms the set password.
	Connection Time-Out	Sets the connection time-out period from 1 to 1,000 seconds.
Update Address Book	Connection Time-Out	Sets the connection time-out period from 1 to 65,535 seconds.

SMB

Purpose:

To specify the setting of the Server Message Block (SMB) protocol.

Values:

Host Name	Sets the host name of the server computer.
Workgroup	Sets the workgroup.
Maximum Sessions	Sets the maximum number of sessions.
Unicode Support	Sets whether to notify the host name and workgroup name in Unicode characters during SMB transmission.
Auto Master Mode	Sets whether to enable the Auto Master Mode.
Encrypt Password	Sets whether to encrypt the password.
Job Time-Out	Sets the job time-out period between 60 and 3,600 seconds.
Connection Time-Out	Sets the connection time-out period between 60 and 3,600 seconds.

E-Mail Server

Purpose:

To configure detailed settings of E-Mail Server, E-Mail Alert and E-Mail Report. This page can also be displayed by clicking **E-Mail Server Settings Overview** in the left frame.

Values:

E-Mail Server Settings	Primary SMTP Gateway	Sets the primary SMTP gateway.
	SMTP Port Number	Sets the SMTP port number. This must be between 1 and 65535.
	E-Mail Send Authentication	Sets the authentication method for outgoing e-mail.
	SMTP Login User	Sets the SMTP login user. Up to 63 alphanumeric characters, periods, hyphens, underscores, and at symbols (@) can be used. If specifying more than one address, separate them using commas.
	SMTP Login Password	Sets the SMTP account password using up to 31 alphanumeric characters.
	Re-enter SMTP Login Password	Confirms the set SMTP account password.

	POP3 Server Address ^{*1}	Sets the POP3 server address in IP address format of "aaa.bbb.ccc.ddd" or as a DNS host name using up to 63 characters.	
	POP3 Port Number ^{*1}	Sets the POP3 server port number. This must be between 1 and 65535.	
	POP User Name ^{*1}	Sets the POP3 account user name. Up to 63 alphanumeric characters, periods, hyphens, underscores, and at symbols (@) can be used. If specifying more than one address, separate them using commas.	
	POP User Password ^{*1}	Sets the POP3 account password using up to 31 alphanumeric characters.	
	Re-enter POP User Password ^{*1}	Confirms the set password.	
	Reply Address	Designates the reply e-mail address sent with each E-mail Alert.	
	SMTP Server Connection	Displays the status of the SMTP server connection.	
E-Mail Alert Settings	E-Mail List 1	Sets acceptable e-mail addresses for the E-Mail Alert feature using up to 255 alphanumeric characters.	
	Select Alerts for List 1	Supplies Alerts	Select the check box to receive an E-Mail Alert for consumables.
		Paper Handling Alerts	Select the check box to receive an E-Mail Alert for paper handling.
		Service Call	Select the check box to receive an E-Mail Alert for Service Calls.
	E-Mail List 2	Sets acceptable e-mail addresses for the E-Mail Alert feature using up to 255 alphanumeric characters.	
	Select Alerts for List 2	Supplies Alerts	Select the check box to receive an E-Mail Alert for consumables.
		Paper Handling Alerts	Select the check box to receive an E-Mail Alert for paper handling.
		Service Call	Select the check box to receive an E-Mail Alert for Service Calls.
	E-Mail Report Settings	History Report	Sets whether to receive the job history report by e-mail after every 20 print, copy, scan, and fax jobs.
Statistics Report		Sets whether to receive the statistic report by e-mail on the use of print, copy, scan, and fax.	
Volume Report		Sets whether to receive the print volume report by e-mail.	
Transmission Time		Sets what time the reports are sent.	
Recurrence		Sets at what recurrence the reports are sent.	
Weekly Settings (for Weekly only)		Sets the day of the week the reports are sent.	
Monthly Settings (for Monthly only)		Sets the day of the month the reports are sent.	
Destination E-Mail Address 1		Allows you to enter the e-mail address to which the reports are sent to.	
Destination E-Mail Address 2		Allows you to enter the e-mail address to which the reports are sent to.	

^{*1} This item is available only when **POP before SMTP (Plain)** or **POP before SMTP (APOP)** for **E-Mail Send Authentication** is selected.

^{*1} This item is available only when **POP before SMTP (Plain)** or **POP before SMTP (APOP)** for **E-Mail Send Authentication** is selected.

Bonjour (mDNS)

Purpose:

To configure the detailed settings of Bonjour.

Values:

Host Name	Sets the host name up to 63 alphanumeric characters and "-" (dash).
Printer Name	Sets the printer name up to 63 alphanumeric characters and symbol sets.
Wide-Area Bonjour	Select the check box to enable the Wide-Area Bonjour protocol.

SNMP

Purpose:

To configure the detailed settings of SNMP.

Values:

SNMP Configuration	Enable SNMP v1/v2c Protocol	Select the check box to enable the SNMP v1/v2c protocol.
	Edit SNMP v1/v2c Properties	Click to display the SNMP v1/v2c page and to edit the setting of SNMP v1/v2c protocol from the page.
	Enable SNMP v3 Protocol	Select the check box to enable the SNMP v3 protocol.
	Edit SNMP v3 Properties	Click to display the SNMP v3 page and to edit the setting of SNMP v3 protocol from the page. You can click this item only when SSL communication is enabled.

SNMP v1/v2c

Purpose:

To edit the detailed settings of SNMP v1/v2c protocol.

To enter this page, click **Edit SNMP v1/v2c Properties** in the **SNMP** page.

Values:

Community Name	Community Name (Read only) ^{*1}	Sets the community name to access (read only) data using up to 31 alphanumeric characters. The default Read Community is public.
	Re-enter Community Name (Read only) ^{*1}	Enters the community name to access (read only) data again to confirm it.
	Community Name (Read/Write) ^{*1}	Sets the community name to access (read and write) data using up to 31 alphanumeric characters. The default Read/Write Community is private.
	Re-enter Community Name (Read/Write) ^{*1}	Enters the community name to access (read and write) data again to confirm it.
	Community Name (Trap) ^{*1}	Sets the community name used for trap up to 31 alphanumeric characters. The default Trap Community is "" (NULL).
	Re-enter Community Name (Trap) ^{*1}	Enters the community name used for trap again to confirm it.

Trap Notification 1-4	Trap Address Type	Select the check boxes to notify trap occurrence. In this case, specify the IP address and IP socket in the following format:
	Trap Address	
	Port Number	IPv4
	Notify Network ^{*2}	Specify the IP address and IP socket in the nnn.nnn.nnn.nnn:mmmmmm format. Each section of "nnn" is a variable value between 0 and 255. Note that values 127 and 224-254 are not valid for the first three-digits only. IP socket mmmmm is a variable value between 0 and 65535.
		IPv6
		Specify the IP address and IP socket in the xxxx:xxxx:xxxx:xxxx:xxxx:xxxx:mmmmmm format. Each section of "xxxx" is a hexadecimal variable value between 0 and ffff. IP socket mmmmm is a variable value between 0 and 65535.
	Authenticate Error Trap	Select the check box to notify Authenticate Error Trap.

^{*1} The default value can be changed by using **Dell Printer Configuration Web Tool**.

^{*2} This item is available only when **Wi-Fi Direct** is set to **Enable**.

SNMP v3

Purpose:

To edit the detailed settings of SNMP v3 protocol.

To enter this page, click **Edit SNMP v3 Properties** in the **SNMP** page.

Values:

Administrator Account	Account Enabled	Select the check box to enable the administrator account.
	User Name	Enters the user name of the administrator account.
	Authentication Password	Sets the authentication password of the administrator account using 8 to 32 alphanumeric characters.
	Re-enter Authentication Password	Confirms the set password.
	Privacy Password	Sets the privacy password of the administrator account using 8 to 32 alphanumeric characters.
	Re-enter Privacy Password	Confirms the set password.
Print Drivers / Remote Client Account	Account Enabled	Select the check box to enable the print drivers and remote client account.
	Reset to default Password	Click to reset the password for the print drivers and remote client account to default.

Scan to Network Folder

Purpose:

To specify the client when scanning data.

Values:

FTP Client	Connection Time-Out	Sets the connection time-out period from 1 to 60 seconds.
	FTP Passive	Sets whether to enable the FTP Passive mode.
SMB Client	Connection Time-Out	Sets the connection time-out period from 1 to 60 seconds.
	SMB Protocol	Sets the SMB protocol.

SNTP

Purpose:

To configure the SNTP server settings in order to perform time synchronization through SNTP.

Values:

SNTP	IP Address / Host Name	Sets the IP address or the host name of the SNTP server.
	Connection Time-Out	Sets the connection time-out period from 1 to 120 seconds.
	Time Synchronization Interval	Sets the interval for performing time synchronization using SNTP.
	Last Connection Time	Displays the last date and time when your printer was connected to the SNTP server.
	Connection Status	Displays the status of the connections between the SNTP server and your printer.

AirPrint

Purpose:

To configure the detailed setting of AirPrint.

Values:

AirPrint	Enable AirPrint	Select the check box to enable the printer for AirPrint.
Bonjour	Name	Enter the name that is to be displayed as an AirPrint printer.
	Location	Enter the location of the printer.
	Geo-Location	Enter the physical location of the printer.
IPP Authentication	Basic Authentication	Select the check box to enable the basic authentication scheme.
	User Name	Enter the user name.
	Password	Enter the user password.
	Re-enter Password	Re-enter the user password for confirmation.
SSL/TLS	SSL/TLS	Click Settings to display the SSL/TLS page.
Supply Levels	Toner Cartridge	Displays the toner level.

Google Cloud Print

Purpose:

To register the printer to Google Cloud Print.

Values:

Google Cloud Print ^{*1}	(Registration state)	Displays the Google Cloud Print registration state.
	Register This Device to Google Cloud Print	Click to register the printer to Google Cloud Print.
	Cancel Registration	Click to cancel to register the printer to Google Cloud Print.

^{*1} Google Cloud Print can only be used when the machine is using IPv4.

Dell Document Hub

 **NOTE:** Dell Document Hub feature is available on the Dell Cloud Multifunction Printer | H815dw only.

Purpose:

To configure the connections to the Dell Document Hub Server.

Values:

Dell Document Hub	Connection Time-Out	Sets the time duration until the connection becomes time-out.
	Polling Interval	Sets the interval time for polling.

Proxy Server

Purpose:

To configure the Proxy Server settings.

Values:

Proxy Server	Use Proxy Server	Sets whether to enable the use of a proxy server.
	Address to Bypass Proxy Server	Sets the address to bypass proxy server.
	Server Name	Sets the name of the proxy server.
	Port Number	Sets the port number from 1 to 65535.
	Authentication	Sets whether to enable authentication.
	Login Name	Sets the login name for the proxy server.
	Password	Sets the login password for the proxy server.
	Re-enter Password	Confirms the set password.

Wi-Fi

 **NOTE:** Wi-Fi feature is available only on the Dell Cloud Multifunction Printer | H815dw, when the printer is connected using the wireless network.

Purpose:

To configure the detailed setting for the wireless network.

To use the printer through wireless connection, be sure to disconnect the Ethernet cable.

 **NOTE:** Once wireless LAN is activated, wired LAN protocol will be disabled.

Values:

Wi-Fi Settings	Wi-Fi	Sets whether to enable the wireless network connections.
	SSID	Sets the name that identifies the wireless network. Up to 32 alphanumeric characters can be entered.
	Network Type	Sets the network type from either Ad-Hoc or Infrastructure .
	MAC Address	Displays the MAC address of the printer.
	Link Channel	Displays the channel number of the wireless connection for the printer.
	Link Quality	Displays the quality of the wireless network connection for the printer.
Security Settings	Encryption	Select the encryption type from the list.

	No Security	Sets No Security to configure the wireless settings without specifying an encryption type from WEP, WPA-PSK, and WPA-Enterprise.
	WEP	Sets the WEP to use through the wireless network.
	WPA-PSK AES/WPA2-PSK AES ^{*1, 2}	Sets the WPA-PSK AES/WPA2-PSK AES to use through the wireless network.
	WPA-Enterprise AES/WPA2-Enterprise AES ^{*2, 3}	Sets the WPA-Enterprise AES/WPA2-Enterprise AES to use through the wireless network.
	Mixed Mode PSK ^{*1, 2}	Sets the Mixed Mode PSK to use through the wireless network. Mixed Mode PSK automatically selects the encryption type from either WPA-PSK TKIP, WPA-PSK AES, or WPA2-PSK AES.
	Mixed Mode Enterprise ^{*2, 3}	Sets the Mixed Mode Enterprise to use through the wireless network. Mixed Mode Enterprise automatically selects the encryption type from either WPA-Enterprise TKIP, WPA-Enterprise AES, or WPA2-Enterprise AES.
WEP	Encryption	Select the WEP key code from either Hex or Ascii .
	WEP Key 1	Sets the WEP key set used through the wireless network only when WEP 128bit or WEP 64bit is selected for Encryption .
	Re-enter WEP Key 1	Enters the WEP key 1 again to confirm it.
	WEP Key 2	Sets the WEP key set used through the wireless network only when WEP 128bit or WEP 64bit is selected for Encryption .
	Re-enter WEP Key 2	Enters the WEP key 2 again to confirm it.
	WEP Key 3	Sets the WEP key set used through the wireless network only when WEP 128bit or WEP 64bit is selected for Encryption .
	Re-enter WEP Key 3	Enters the WEP key 3 again to confirm it.
	WEP Key 4	Sets the WEP key set used through the wireless network only when WEP 128bit or WEP 64bit is selected for Encryption .
	Re-enter WEP Key 4	Enters the WEP key 4 again to confirm it.
WPA-PSK	Transmit Key ^{*5}	Sets the transmit key type from the list.
	Passphrase/Key	Sets the passphrase.
WPA-Enterprise ^{*4}	Re-enter Passphrase/Key	Enters the passphrase again to confirm it.
	EAP-Identity	Sets the EAP-Identity for the authentication.
	Authentication Method	Shows the authentication method.
	Login Name	Sets the login name for the authentication.
	Password	Sets the password.
	Re-enter Password	Enters the password again to confirm it.

- *1 For encryption, AES or TKIP method is used.
- *2 This item is available only when **Infrastructure** is selected for **Network Type**.
- *3 For authentication and encryption by digital certificate, AES or TKIP method is used.
- *4 To activate the setting, import a certificate which supports wireless LAN (server/client) on the **SSL/TLS** pages, and enable the relevant certificate in advance.
- *5 When **Auto** is selected for **Transmit Key**, the key set specified for **WEP Key 1** is used.

Wi-Fi Direct



NOTE: Wi-Fi Direct feature is available on the Dell Cloud Multifunction Printer | H815dw only.

Purpose:

To configure the detailed setting of the Wi-Fi Direct connection.

Values:

Wi-Fi Direct	Wi-Fi Direct	Sets whether to enable the Wi-Fi Direct connection.
	Group Role	Sets the group role of the printer.
	Device Name	Specifies the printer name that identifies the Wi-Fi Direct network with up to 32 alphanumeric characters. Confirm it when selecting the printer name on your Wi-Fi mobile device.
	WPS Setup	Configures the Wi-Fi Direct network using WPS.
Group Owner	SSID (Character string following "DIRECT-**")	Specifies a name to identify the Wi-Fi Direct network. Up to 32 alphanumeric characters can be entered. "DIRECT-**" cannot be changed.
	Passphrase	Displays the passphrase. Confirm it when entering the passphrase into your Wi-Fi mobile device.
	IP Address	Displays the IP address of the Wi-Fi Direct.
	Subnet Mask	Displays the subnet mask.
Status	Paired Device	Displays the mobile name currently connected.
	Current Role	Displays the current group role of the printer.
	Current SSID	Displays the current SSID. Confirm it selecting the Wi-Fi Direct network name on your Wi-Fi mobile device.

Reset Print Server

Purpose:

To initialize NVRAM (non-volatile RAM) for the network feature and reboot the printer. You can also initialize NVRAM of the printer from **Reset Defaults** in the **Printer Settings** menu.

Values:

Initialize NIC NVRAM Memory and restart printer.	Click Start to initialize NVRAM, revert network settings to the factory default settings, and reboot the network capability.
Restart Printer	Click Start to reboot the printer.

Security

The Security tab includes Set Password, Authentication System, Kerberos Server, LDAP Server, LDAP Authentication, LDAP User Mapping, SSL/TLS, IPsec, 802.1x, IP Filter (IPv4), and SMTP Domain Filtering.

Set Password

Purpose:

To set or change the password that is required to access the setup parameters of the printer from the **Dell Printer Configuration Web Tool**. This page can also be displayed by clicking **Set Password** in the left frame.



NOTE: To restore the password to the default (NULL), initialize the non-volatile memory (NVM).



NOTE: You can set the password for access to Admin Settings from **Panel Lock** in **Printer Settings**.

Values:

Administrator Password	Sets the password using up to 128 alphanumeric characters.
Re-enter Administrator Password	Confirms the set password.
Access denial by the authentication failure of the Administrator	Sets how many times the failure in administrator authentication is allowed in total. Sets the number from 5 to 255. If you set 0, this mode is disabled.

Authentication System

Purpose:

To specify the server authentication type, the server response time-out, or the search time-out.

Values:

Authentication Type	Authentication System Settings	Select the authentication system from the list.
Optional Information	Server Response Time-Out	Sets the amount of time the printer should wait for response from the server. Sets the time period from 1 to 75 seconds.
	Search Time-Out	Sets the amount of time the printer should wait for searching for the server. Sets the time period from 5 to 120 seconds.

Kerberos Server

Purpose:

To specify the settings for the Kerberos server.

Values:

Kerberos Server	IP Address / Host Name & Port	Sets the IP address or host name, and the port address. The port address must be 88 or between 5000 and 65535.
	Domain Name	Enter the domain name.

LDAP Server

Purpose:

To specify the settings of the LDAP server.

Values:

Server Information	IP Address / Host Name & Port	Sets IP address or the host name, and the port address. The port address must be 389, 636, 3268, 3269, or between 5000 and 65535.
	LDAP Server	Displays the current software information of the LDAP server.
Optional Information (for Server Address/ Phone Book)	Search Directory Root	Enters the search directory root.
	Login Credentials to Access LDAP Server	Select credential used to access the LDAP server.
	Login Name	Enters the login name.
	Password	Enters the login password using 1 to 127 alphanumeric characters. If the password is left blank (NULL), you cannot log in to a server.
	Re-enter Password	Enters the login password again to confirm it.
	Search Time-Out	Select Wait LDAP Server Limit to follow the time specified by the LDAP server. Select Wait to specify the time between 5 and 120 seconds.
	Search Name Order	Sets the search order.
	Server Address Book	Select the check box to enable the server address book.
	Server Phone Book	Select the check box to enable the server phone book.

 **NOTE:** Server Address Book must be set to **On** before you can use the server address book for the Scan to Email feature.

 **NOTE:** Server Phone Book must be set to **On** before you can use the server phone book for the Fax function.

LDAP Authentication

Purpose:

To specify the LDAP server authentication method.

Values:

LDAP Authentication	Authentication Method	Shows the authentication method.
	Use Added Text String	Select whether to use the added text string from the list.
	Text String Added to User Name	Enter the added text string.

LDAP User Mapping

Purpose:

To specify the settings of the LDAP user mapping.

Values:

Common Name	Sets the attribute type of the common name set for the LDAP server.
Surname	Sets the attribute type of the surname set for the LDAP server.
Given Name	Sets the attribute type of the given name set for the LDAP server.
E-mail Address	Sets the attribute type of the e-mail address set for the LDAP server.
Fax Phone	Sets the attribute type of the fax phone number set for the LDAP server.

SSL/TLS

Purpose:

To specify the settings for the SSL encryption communication to the printer, and set/delete the certificate used for IPsec, LDAPS, or Wireless LAN.

Values:

SSL/TLS Settings	HTTP-SSL/TLS Communication ^{*1}	Select the check box to enable the HTTP-SSL/TLS Communication.
	HTTP-SSL/TLS Communication Port Number	Sets the port number, which is not identical with that of HTTP. This must be 443 or between 8000 and 9999.
	LDAP-SSL/TLS Communication ^{*1}	Select the check box to enable the LDAP, and access is established using SSL/TLS communication.
	SMTP-SSL/TLS Communication	Sets the type of SSL/TLS used to communicate with the SMTP server.
Machine Digital Certificate	Generate Self-Signed Certificate ^{*2}	Click to display the Generate Self-Signed Certificate page and to create a security certification from the page. The Generate Self-Signed Certificate button is available only when the self-signed certificate is not generated.
	Certificate Signing Request (CSR) ^{*2}	Click to display the Certificate Signing Request (CSR) page and to create a certificate signing request from the page.
	Upload Signed Certificate ^{*2}	Click to display the Upload Signed Certificate page and to upload the certificate file to the device from the page.
	Certificate Management ^{*2}	Click to display the Certificate Management page and to manage a security certification from the page.
	Delete All Certificates	Click to delete all the certificates.
Generate Self-Signed Certificate	Public Key Method	Select the public key method of the self-signed certificate.
	Size of Public Key	Select the size of public key.
	Issuer	Enter the issuer of SSL self-signed certificate.
	Validity	Enter the valid days from 1 to 9999 days.
	Generate Signed Certificate	Click to generate the SSL self-signed certificate.
Certificate Signing Request (CSR)	Digital Signature Algorithm	Select the digital signature algorithm.
	Public Key Size	Select the public key size.
	2 Letter Country Code (Required)	Enter the 2-letter country code.
	State / Province Name	Enter the state or province name up to 16 bytes.
	Locality Name	Enter the locality name up to 32 bytes.
	Organization Name (Required)	Enter the organization name up to 32 bytes.
	Organization Unit (Required)	Enter the organization unit up to 32 bytes.
	Common Name	Enter the common name.
	E-mail Address	Enter the e-mail address.

Upload Signed Certificate ^{*2}	Password	Enter the password to upload the certificate file.
	Re-enter Password	Enter the password again for confirmation.
	File Name	Click Browse to browse the file name to upload to the device.
	Import	Click Import to upload the certificate file to the device.
Certificate Management ^{*2}	Category	Select the device to certificate.
	Certificate Order	Select the order to certificate.
	Display the List	Click to display the Certificate List page.
Certificate List ^{*2}	Category	Displays the device to certificate selected at the Certificate Management page.
	Certificate Purpose	Displays the connection to certificate selected at the Certificate Management page.
	Issued To	Displays the list of certificate order.
	Validity	Displays whether certificate is valid or not.
	Certificate Details	Click to display the Certificate Details page. The SSL/TLS page is displayed when no item in the Issued To column is selected.
Certificate Details ^{*2}	Category	Displays the device to certificate selected at the Certificate Management page or SSL/TLS page.
	Issued To	Displays the device to certificate.
	Issuer	Displays the issuer to certificate.
	Serial Number	Displays the serial number of the device.
	Public Key Method	Displays the public key method.
	Size of Public Key	Displays the size of public key.
	Valid From	Displays the time the certificate is valid.
	Valid Until	Displays the time the certificate is invalid.
	Status	Displays whether certificate is valid or not.
	Certificate Purpose	Displays the purpose of certificate.
	Certificate Selection Status	Displays the type of device certificate you selected.
	E-mail Address	Displayed only when an e-mail address is specified in the certificate.
	Use this certificate	Click to apply this certificate to the device.
	Delete	Click to delete this certificate.
	Export This Certificate	Click to export the certificate to the other device.

^{*1} This item is available only when the self-signed certificate has been generated.

^{*2} This item is effective only when connected via SSL/TLS (https). Only the administrator is allowed to display the pages.

IPsec

Purpose:

To specify the Security Architecture settings for Internet Protocol (IPsec) for encrypted communication to the printer.

Values:

IPsec Settings	Protocol	Select the check box to enable the protocol.
	IKE	"Pre-Shared Key" is displayed for IKE.

Pre-Shared Key	Sets a shared key. Up to 255 alphanumeric characters, periods, and hyphens can be used.
Re-enter Pre-Shared Key	Enters the shared key again to confirm it.
IKE SA Lifetime	Sets the lifetime for IKE SA from 5 to 28,800 minutes.
IPsec SA Lifetime	Sets the lifetime for IPsec SA from 5 to 2,880 minutes.
DH Group	Sets the DH group.
PFS	Select the check box to enable the PFS setting.
Remote peers IPv4 address	Sets the IP address to connect to.
Remote peers IPv6 address	Sets the IP address to connect to.
Non IPsec communication policy	Allows communication with a device which does not support IPsec.

 **NOTE:** If IPsec is enabled with incorrect settings, you must disable it using the **IPsec** menu on the operator panel.

802.1x

Purpose:

To specify the settings for IEEE 802.1x authentication for encrypted communication to the printer.

Values:

Configure 802.1x	Enable IEEE 802.1x	Select the check box to enable IEEE 802.1x authentication.
	Authentication Method	EAP-MD5
		EAP-MS-CHAPv2
		PEAP/MS-CHAPv2
	Login Name: (Device Name)	Sets the login name (device name) for IEEE 802.1x authentication using up to 128 alphanumeric characters.
	Password	Sets the login password for IEEE 802.1x authentication using up to 128 alphanumeric characters.
	Re-enter Password	Confirms the set login password.

IP Filter (IPv4)

Purpose:

To specify the IP address and subnet mask to be permitted or denied access to the printer.

Values:

Access List	Address	Sets the IP addresses that are permitted or denied access to the printer. Enter a numeric value between 0 and 255 in each field.	
	Address Mask	Sets the subnet mask that are permitted or denied access to the printer. Enter a numeric value between 0 and 255 in each field.	
	Active Mode	Reject	Rejects printing from specified network address.
		Accept	Permits printing from specified network address.
		Off	Disables the IP Filter feature for the specified IP address.

To configure the IP Filter feature, enter an IP address to be filtered in the Address field and the subnet mask in the Address Mask field. Enter a numeric value between 0 and 255 in each field. "*" is appended to the current value.

IP Filter Setup Procedure

You can set up to a maximum of five items and the first item set takes priority. When setting multiple filters, enter the shortest address first followed by a slightly longer address, a longer address and so on.

Enabling Printing From a Specified User

The following describes the procedure to enable printing only from the "192.168.100.10" IP address.

- 1 Click the first column of the **Access List** row 1.
- 2 Enter "192.168.100.10" in the **Address** field and "255.255.255.255" in the **Address Mask** field.
- 3 Select **Accept**.
- 4 Click **Apply New Settings**.

Disabling Printing From a Specified User

The following describes the procedure to disable printing only from the "192.168.100.10" IP address.

- 1 Click the first column of the **Access List** row 1.
- 2 Enter "192.168.100.10" in the **Address** field and "255.255.255.255" in the **Address Mask** field.
- 3 Select **Reject**.
- 4 Click the first column of the **Access List** row 2.
- 5 Enter "0.0.0.0" in the **Address** field and "0.0.0.0" in the **Address Mask** field.
- 6 Select **Accept**.
- 7 Click **Apply New Settings**.

Enabling and Disabling Printing from Network Addresses

You can enable printing from the "192.168" network address and disable printing from the "192.168.200" network address.

The example below describes how to enable printing from the "192.168.200.10" IP address.

- 1 Click the first column of the **Access List** row 1.
- 2 Enter "192.168.200.10" in the **Address** field and "255.255.255.255" in the **Address Mask** field.
- 3 Select **Accept**.
- 4 Click the first column of the **Access List** row 2.
- 5 Enter "192.168.200.0" in the **Address** field and "255.255.255.0" in the **Address Mask** field.
- 6 Select **Reject**.
- 7 Click the first column of the **Access List** row 3.
- 8 Enter "192.168.0.0" in the **Address** field and "255.255.0.0" in the **Address Mask** field.
- 9 Select **Accept**.
- 10 Click **Apply New Settings**.

SMTP Domain Filtering

Purpose:

To specify whether to restrict sending e-mails to specific domains only.



NOTE: This feature does not restrict sending e-mails through the E-Mail Alert feature.

Values:

SMTP Domain Filtering	Domain Filtering	Select the check box to enable Domain Filtering.
	Allow Domain List	Allows you to register up to five domains allowed for sending e-mails.

Copy Printer Settings

The Copy Printer Settings menu includes the Copy Printer Settings and Copy Printer Settings Report pages.

Copy Printer Settings

Purpose:

To copy the printer settings to one or more of the same model of the printer.

To copy the settings to another printer, specify the IP address and password of the printer to which the settings are copied in the **IP Address** text box and **Password** text box. Then, click the **Copy the settings to the Host in the above list** button. Copying the settings is complete. The connection time-out period is 60 seconds. After that, you can check whether the settings were copied to this page. And you need to check the **Copy the settings to the Host in the above list and reboot the printer** menu of the **Dell Printer Configuration Web Tool** in the destination printer to verify if the settings were actually copied or not.

If the settings can be copied but the printer configuration is different, the settings of only the same items are copied. Printer settings are simultaneously copied to printers of up to 10 IP addresses.



NOTE: You cannot copy the Address Book when the destination printer has a fax job.

Copy Printer Settings Report

Purpose:

To verify whether the printer setting is copied to other printers successfully.



NOTE: The history is cleared by turning off the printer.

Print Volume

The Print Volume menu includes the Print Volume and Dell AccessControl pages.

Print Volume

Purpose:

To verify the number of printed pages. This page can also be displayed by clicking **Print Volume** in the left frame.

Values:

Printer Page Count	Displays the total number of pages printed since the printer was shipped from the factory.
Paper Used	Displays the number of pages printed for each paper size.

Dell AccessControl

Purpose:

To specify which users have access to printing and to limit print volume per user.

Values:

AccessControl Mode	Off	Enables to print the data with no authentication information.
	On	Restricts printing based on the print user information registered in the internal server.
Non Registered User	Sets whether to permit the printing of data with no authentication information. To permit the printing for non-account user, select the check box.	
AccessControl Error Report	Sets whether to automatically print error-related information if printing using AccessControl results in an error.	
User Registration ^{*1}	Click Edit User Registration to display the Edit Print User Registration page. • To register a user, click Create to open the Print User Settings page. • To delete a user, click Delete to open the Delete User page. Clicking Back returns the screen to the status prior to deleting the user. • To confirm or change the registered user, click Confirm / Change to open the Print User Settings page.	
Print User Settings	User Registration No.	Displays the user registration number. The Delete User button is displayed when the user is already registered.
	User Name	Sets the user name.
	Password	Sets the user password using 4 to 12 alphanumeric characters.
	Re-enter password	Enter the password again to confirm it.
	Upper Limit for Monochrome Print	Sets the maximum number of pages allowed for monochrome printing.
	Cumulative Monochrome Page Count	Displays the cumulative number of pages printed for monochrome printing.

^{*1} This item is displayed only when **AccessControl Mode** is **On**.

Address Book

The **Address Book** menu includes the **E-Mail Address**, **Server Address**, and **Phone Book** pages.

E-Mail Address	E-Mail Address	Allows you to view, edit, or create e-mail address entries.
	E-Mail Group	Allows you to view, edit, or create e-mail group entries.
	Default Setup	Allows you to view, edit, or set the default e-mail subject and message.
Server Address	Server Address	Allows you to view, edit, or create server address entries.
Phone Book	FAX Speed Dial	Allows you to view, edit, or create speed dial entries.
	FAX Group	Allows you to view, edit, or create fax group entries.

E-Mail Address

The E-mail Address page includes the following subpages.

E-Mail Address	Allows you to view, edit, or create e-mail address entries.
E-Mail Group	Allows you to view, edit, or create e-mail group entries.
Default Setup	Allows you to view, edit, or set the default e-mail subject and message.

E-Mail Address

Purpose:

To view the e-mail address entries registered on the E-Mail Address page.

Values:

Address List to:	Selecting each button displays a list of entries for the group of user IDs indicated on the button.
ID	Displays the user ID.
Name	Displays the user name. (Not in Use) is displayed when there is no registration.
Address	Displays the e-mail address of the user.
Delete	Deletes the entry for the selected user ID.
Confirm / Change	Displays a dialog box where you can edit the entry of the selected user ID.
Create	Displays a dialog box where you can create a new entry under the selected user ID.

E-Mail Address (Confirm/Change, Create)

Purpose:

To view or edit the e-mail address entries on the E-Mail Address page, or create a new entry. The following items are in the dialog box that appears when you click **Confirm / Change** or **Create** on the E-Mail Address top page.

Values:

ID	Displays the selected user ID.
Name	Allows you to view or edit the name of the user registered under the user ID, or enter a name for the new entry.
Address	Allows you to view or edit the e-mail address of the user, or enter an e-mail address for the new entry.
Delete ^{*1}	Click this button to delete the selected user.
Apply New Settings	Click this button to apply the new settings.
Restore Settings	Click this button to restore the previous settings.
Back	Click this button to return to the top page.

^{*1} This item is available only when you click **Confirm / Change**.

E-Mail Address (Delete)

Purpose:

To delete the e-mail address entries registered on the E-Mail Address page. The following items are in the dialog box that appears when you click **Delete** on the E-Mail Address top page.

Values:

ID	Displays the selected user ID.
Name	Displays the name of the user registered under the selected user ID.

Address	Displays the e-mail address of the user.
Apply New Settings	Click this button to apply the new settings.
Back	Click this button to return to the top page.

E-Mail Group

Purpose:

To view the e-mail address entries registered on the **E-Mail Group** page.

Values:

GroupID	Displays the group ID.
Name	Displays the assigned group name. (Not in Use) is displayed when there is no registration.
Delete	Deletes the entry for the selected group ID.
Confirm / Change	Displays a dialog box where you can edit the entry for the selected group ID.
Create	Displays a dialog box where you can create a new entry under the selected group ID.

E-Mail Group (Confirm/Change, Create)

Purpose:

To view or edit the e-mail address group entries on the **E-Mail Group** page, or create a new entry. The following items are in the dialog box that appears when you click **Confirm / Change** or **Create** on the **E-Mail Group** top page.

Values:

E-Mail Group	ID	Displays the selected group ID.
	Name	Allows you to view or edit the name assigned for the group ID, or enter a new group name.
	Delete ^{*1}	Click this button to delete the current entry.
E-Mail Address	Address List to:	Selecting each button displays a list of entries for the group of IDs indicated on the button.
	ID	Displays the user ID. Select the check box on the left to create the group.
	Name	Displays the user name. (Not in Use) is displayed when there is no registration.
	Address	Allows you to view or edit the e-mail address of an entry registered under the selected user ID, or enter an e-mail address for the new entry.
	Apply New Settings	Click this button to apply the new settings.
	Restore Settings	Click this button to restore the previous settings.
	Back	Click this button to return to the top page.

^{*1} This item is available only when you click **Confirm / Change**.

E-Mail Group (Delete)

Purpose:

To delete the e-mail group entries registered on the **E-Mail Group** page. The following items are in the dialog box that appears when you click **Delete** on the **E-Mail Group** top page.

Values:

ID	Displays the selected group ID.
Name	Displays the name assigned for the group ID.
Apply New Settings	Click this button to apply the new settings.
Back	Click this button to return to the top page.

Default Setup

Purpose:

To set the default e-mail subject and message.

Values:

Default Subject	Allows you to enter the default e-mail subject.
Body Text	Allows you to enter the default e-mail message.
Apply New Settings	Click this button to apply the new settings.
Restore Settings	Click this button to restore the previous settings.

Server Address

Server Address

Purpose:

To view the server address entries registered on the **Server Address** page.

Values:

Address List to:	Selecting each button displays a list of entries for the group of IDs indicated on the button.
ID	Displays the server ID.
Name	Displays the file directory name. (Not in Use) is displayed when there is no registration.
Server Address	Displays the address of the file directory.
Delete	Deletes the entry for the selected server ID.
Confirm / Change	Displays a dialog box where you can edit the entry for the selected server ID.
Create	Displays a dialog box where you can create a new entry under the selected server ID.

Server Address (Confirm/Change, Create)

Purpose:

To view or edit the server address entries on the **Server Address** page, or create a new entry. The following items are in the dialog box that appears when you click **Confirm / Change** or **Create** on the **Server Address** top page.

Values:

ID	Displays the selected server ID.
Name	Allows you to view or change the server name assigned to the server ID, or enter a new server name.

Server Type	Allows you to view the server type if you click Confirm / Change . Allows you to edit the server type if you click Create .	
	FTP ^{*1}	Select this to store scanned documents on a server via the FTP protocol.
	SMB ^{*1}	Select this to store scanned documents on a computer via the Server Message Block (SMB) protocol.
Server Address	Allows you to view or edit the server address registered under the server ID, or enter a new server address.	
Share Name ^{*2}	Allows you to view or edit the assigned shared name, or enter a new shared name, when Server Type is set to SMB .	
Server Path	Allows you to view or edit the assigned server path, or enter a new path.	
Server Port Number	Allows you to view or edit the assigned server port number, or enter a new port number. If you leave the text box blank, the default port number (FTP: 21, SMB: 139) will be used.	
Login Name	Allows you to view or edit the login name that is required to access the selected protocol, or enter a new login name.	
Login Password	Allows you to view or edit the password that is required to access the selected protocol, or enter a new password.	
Re-enter Password	Confirms the set password.	
Delete ^{*3}	Click this button to delete the current entry.	
Apply New Settings	Click this button to apply the new settings.	
Restore Settings	Click this button to restore the previous settings.	
Back	Click this button to return to the top page.	
^{*1} You can edit this item only when you click Create .		
^{*2} This item is available only when Server Type is set to SMB .		
^{*3} This item is available only when you click Confirm / Change .		

Server Address (Delete)

Purpose:

To delete the server address entries registered on the **Server Address** page. The following items are in the dialog box that appears when you click **Delete** on the **Server Address** top page.

Values:

ID	Displays the selected server ID.
Name	Displays the name assigned for the server ID.
Server Address	Displays the server address registered under the server ID.
Apply New Settings	Click this button to apply the new settings.
Back	Click this button to return to the top page.

Phone Book

The **Phone Book** page includes the following subpages.

FAX Speed Dial	Allows you to view, edit, or create speed dial entries.
FAX Group	Allows you to view, edit, or create fax group entries.

FAX Speed Dial

Purpose:

To view the fax number entries registered on the **FAX Speed Dial** page.

Values:

Speed Dial List to:	Selecting each button displays a list of entries for the group of speed dial codes indicated on the button.
Speed Dial	Displays the speed dial ID.
Name	Displays the assigned name for a speed dial ID. (Not in Use) is displayed when there is no registration.
Phone Number	Displays the speed dial code.
Delete	Deletes the entry for the selected speed dial code.
Confirm / Change	Displays a dialog box where you can edit the entry for the selected speed dial code.
Create	Displays a dialog box where you can create a new entry under the selected speed dial code.

FAX Speed Dial (Confirm/Change, Create)

Purpose:

To view or edit the speed dial entries on the **FAX Speed Dial** page, or create a new entry. The following items are in the dialog box that appears when you click **Confirm / Change** or **Create** on the **FAX Speed Dial** top page.

Values:

Speed Dial	Displays the selected speed dial code.
Name	Allows you to view or edit the name of an entry registered under the speed dial code, or enter a name for the new entry.
Phone Number	Allows you to view or edit the fax number of an entry registered under the speed dial code, or enter a fax number for the new entry.
Delete ^{*1}	Click this button to delete the entry for the speed dial code. This button is available only on the dialog box for editing an existing entry.
Apply New Settings	Click this button to apply the new settings.
Restore Settings	Click this button to restore the previous settings.
Back	Click this button to return to the top page.

^{*1} This item is available only when you click **Confirm / Change**.

FAX Speed Dial (Delete)

Purpose:

To delete the speed dial entries registered on the **FAX Speed Dial** page. The following items are in the dialog box that appears when you click **Delete** on the **FAX Speed Dial** top page.

Values:

Speed Dial	Displays the selected speed dial code.
Name	Displays the name registered under the speed dial code.
Phone Number	Displays the fax number registered under the speed dial code.
Apply New Settings	Click this button to apply the new settings.
Back	Click this button to return to the top page.

FAX Group

Purpose:

To view the fax group entries registered on the **FAX Group** page.

Values:

ID	Displays a fax group ID.
Name	Displays the assigned group name. (Not in Use) is displayed when there is no registration.
Delete	Deletes the entry for the selected group ID.
Confirm / Change	Displays a dialog box where you can edit the entry for the selected group ID.
Create	Displays a dialog box where you can create a new entry under the selected group ID.

FAX Group (Confirm/Change, Create)

Purpose:

To view or edit the fax number group entries on the **FAX Group** page, or create a new entry. The following items are in the dialog box that appears when you click **Confirm / Change** or **Create** on the **FAX Group** top page.

Values:

FAX Group	ID	Displays the selected group ID.
	Name	Allows you to view or edit the name assigned for the group ID, or enter a new group name.
	Delete ^{*1}	Click this button to delete the current entry.
FAX Speed Dial	Speed Dial List to:	Selecting each button displays a list of entries for the group of speed dial codes indicated on the button.
	Speed Dial	Displays the speed dial code. Select the check box on the left to add the speed dial code in the group.
	Name	Displays the name registered for the speed dial code. (Not in Use) is displayed when there is no registration.
	Phone Number	Allows you to view or edit the fax number of an entry registered under the selected speed dial code, or enter a fax number for the new entry.
	Apply New Settings	Click this button to apply the new settings.
	Restore Settings	Click this button to restore the previous settings.
	Back	Click this button to return to the top page.

^{*1} This item is available only when you click **Confirm / Change**.

FAX Group (Delete)

Purpose:

To delete the fax number group entries registered on the **FAX Group** page. The following items are in the dialog box that appears when you click **Delete** on the **FAX Group** top page.

Values:

ID	Displays the selected group ID.
Name	Displays the name assigned for the group ID.
Apply New Settings	Click this button to apply the new settings.
Back	Click this button to return to the top page.

Tray Management

Use the **Tray Management** menu to set the paper size and type of paper loaded in tray1 and the optional 550-sheet feeder.

Values:

MPF Mode	Sets the MPF Mode.
MPF Paper Size ^{*1}	Sets the size of paper loaded in the MPF.
MPF Paper Type ^{*1}	Sets the type of paper loaded in the MPF.
MPF Custom Paper Size - Y ^{*1}	Sets the length of custom size paper loaded in the MPF.
MPF Custom Paper Size - X ^{*1}	Sets the width of custom size paper loaded in the MPF.
MPF Display Tray Prompt ^{*1}	Sets whether to display a popup message that prompts the user to set the paper size and type when the paper is loaded in the MPF.
Tray 1 Paper Size	Sets the size of paper loaded in tray1.
Tray 1 Paper Type	Sets the type of paper loaded in tray1.
Tray 1 Custom Paper Size - Y	Sets the length of custom size paper loaded in tray1.
Tray 1 Custom Paper Size - X	Sets the width of custom size paper loaded in tray1.
Tray 1 Display Tray Prompt	Sets whether to display a popup message that prompts the user to set the paper size and type when the paper is loaded in tray1.
Tray 2 Paper Size ^{*2}	Sets the size of paper loaded in the optional 550-sheet feeder.
Tray 2 Paper Type ^{*2}	Sets the type of paper loaded in the optional 550-sheet feeder.
Tray 2 Custom Paper Size - Y ^{*2}	Sets the length of custom size paper loaded in the optional 550-sheet feeder.
Tray 2 Custom Paper Size - X ^{*2}	Sets the width of custom size paper loaded in the optional 550-sheet feeder.
Tray 2 Display Tray Prompt ^{*2}	Sets whether to display a popup message that prompts the user to set the paper size and type when the paper is loaded in the optional 550-sheet feeder.
1st Priority	Sets the paper source to be used as the first priority.
2nd Priority	Sets the paper source to be used as the second priority.
3rd Priority ^{*2}	Sets the paper source to be used as the third priority.

^{*1} This item is available only when **Use Panel Settings** is selected in **MPF Mode**.

^{*2} This item is available only when the optional 550-sheet feeder is installed.

Understanding the Printer Menus

When your printer is connected to a network and available to a number of users, the access to the Admin Settings can be limited. This prevents other users from using the operator panel to inadvertently change a user default that has been set by the administrator.

However, you can use your printer driver to override user defaults and select settings for individual print jobs.

Report / List

Use the Report/List menu to print various types of reports and lists.

System Settings

Purpose:

To print a list of the current user default values, the installed options, the amount of installed print memory, and the status of printer supplies.

Panel Settings

Purpose:

To print a detailed list of all the settings of the printer menus.

PCL Fonts List

Purpose:

To print a sample of the available PCL fonts.

PCL Macros List

Purpose:

To print the information on the downloaded PCL macro.

PS Fonts List

Purpose:

To print a sample of the available PS fonts.

PDF Fonts List

Purpose:

To print a sample of the available PDF fonts.

Job History

Purpose:

To print a detailed list of the print, copy, fax, or scan jobs that have been processed. This list contains the last 20 jobs.

Error History

Purpose:

To print a detailed list of paper jams and fatal errors.

Print Meter

Purpose:

To print the reports for the total number of pages printed.

Demo Page

Purpose:

To print a Demo page.

Protocol Monitor

Purpose:

To print a detailed list of monitored protocols.

Speed Dial

Purpose:

To print the list of all members stored as speed dial numbers.

Address Book

Purpose:

To print the list of all addresses stored as **Address Book** information.

Server Address

Purpose:

To print the list of all members stored as **Server Address** information.

Fax Activity

Purpose:

To print the report of faxes you recently received or sent.

Fax Pending

Purpose:

To print the list of status of pending faxes.

Stored Documents



NOTE: Stored Documents feature is available only when RAM Disk under System Settings is enabled.

Purpose:

To print a list of all files stored for Secure Print, Private Mail Box Print, Public Mail Box Print, and Proof Print in the RAM disk.

Printing a Report/List Using the Operator Panel

- 1 Press the  (Information) button.
- 2 Tap Report/List.
- 3 Tap  until the desired report or list appears, and then select that report or list.
- 4 Tap Print.

The selected report or list is printed.

Printing a Report/List Using the Tool Box

- 1 Click Start→ All Programs→ Dell Printers→ Dell Cloud Multifunction Printer - H815dw or Dell Smart Multifunction Printer - S2815dn→ Tool Box.

The Tool Box opens.

- 2 Ensure that the **Printer Setting Reports** tab is open.
- 3 Select **Reports** from the list at the left side of the page.

The Reports page appears.

- 4 Click the button for the desired report or list.

The report or list is printed

Wi-Fi | WPS



NOTE: The Wi-Fi | WPS menu is available on the Dell Cloud Multifunction Printer | H815dw only.

Use the Wi-Fi | WPS menu to confirm or specify wireless network settings or connections.

Wi-Fi

Use the Wi-Fi menu to confirm or specify wireless network settings.

For details, see "Wi-Fi."

Wi-Fi Direct

Use the Wi-Fi Direct menu to confirm or specify Wi-Fi Direct network settings.

For details, see "Wi-Fi Direct."

WPS (Connect via PBC)

Use WPS (Connect via PBC) menu to start configurations of the Wi-Fi Direct network with WPS-PBC.

For details, see "WPS Setup."

WPS (Connect via PIN)

Use WPS (Connect via PIN) menu to start configurations of the Wi-Fi Direct network with WPS-PIN.

For details, see "WPS Setup."

Paired Device

 **NOTE:** The Paired Device menu is available on the Dell Cloud Multifunction Printer | H815dw only.

Use the Paired Device menu to confirm the device name in the Paired Device list, if there is any device connected to the printer via Wi-Fi Direct.

You can disconnect the paired device from this list. For details, see "Disconnecting Wi-Fi Direct Network."

Admin Settings

Use the Admin Settings menu to configure a variety of printer features.

Phone Book

Use the Phone Book menu to configure the speed dial and group dial settings.

Individuals

Purpose:
To store up to 200 frequently dialed numbers in speed dial locations.

Groups

Purpose:
To create a group of fax destinations and register it under a two-digit dial code. Up to six group dial codes can be registered.

PCL

Use the PCL menu to change printer settings that only affect jobs using the PCL emulation printer language.

 **NOTE:** Values marked by an asterisk (*) are the factory default menu settings.

Paper Tray

Purpose:
To specify the default paper tray.

Values:

Auto [*]
MPF
Tray1
Tray2 ^{*1}
^{*1} This item is available only when the optional 550-sheet feeder is installed.

Paper Size

Purpose:
To specify the default paper size.

Values:

mm series

A4
(210x297mm) ^{*1}
A5
(148x210mm)
B5
(182x257mm)
Letter
(8.5x11")
Folio
(8.5x13")
Legal
(8.5x14")
Statement
(5.5x8.5")
Executive
(7.3x10.5")
Envelope #10
(4.1x9.5")
Monarch Env.
(3.9x7.5")
DL Env.
(110x220mm)
C5 Env.
(162x229mm)
Postcard
(100x148mm)
Custom Paper Size
^{*1} Denotes country-specific factory default value.

inch series

Letter
(8.5x11") ^{*1}
Folio
(8.5x13")
Legal
(8.5x14")
Statement
(5.5x8.5")

A4
(210x297mm)
A5
(148x210mm)
B5
(182x257mm)
Executive
(7.3x10.5")
Envelope #10
(4.1x9.5")
Monarch Env.
(3.9x7.5")
DL Env.
(110x220mm)
C5 Env.
(162x229mm)
Postcard
(100x148mm)
Custom Paper Size
^{*1} Denotes country-specific factory default value.



NOTE: Selecting a custom size for the paper size prompts you to enter a custom length and width.

Orientation

Purpose:

To specify how text and graphics are oriented on the page.

Values:

Portrait [*]	Prints text and graphics parallel to the short edge of the paper.
Landscape	Prints text and graphics parallel to the long edge of the paper.

2 Sided Print

Purpose:

To specify whether to print on both sides of a sheet of paper.

Values:

1 Sided*		Does not print on both sides of a sheet of paper.
2 Sided	Flip on Long Edge*	Prints on both sides of a sheet of paper to be bound by long edge.
	Flip on Short Edge	Prints on both sides of a sheet of paper to be bound by short edge.

Font**Purpose:**

To specify the default font from the fonts registered in the printer.

Values:

CG Times	Albertus Md	Palatino Roman
CG Times It	Albertus XBd	Palatino It
CG Times Bd	Clarendon Cd	Palatino Bd
CG Times BdIt	Coronet	Palatino BdIt
Univers Md	Marigold	ITCBookman Lt
Univers MdIt	Arial	ITCBookman LtIt
Univers Bd	Arial It	ITCBookmanDm
Univers BdIt	Arial Bd	ITCBookmanDm It
Univers MdCd	Arial BdIt	HelveticaNr
Univers MdCdIt	Times New	HelveticaNr Ob
Univers BdCd	Times New It	HelveticaNr Bd
Univers BdCdIt	Times New Bd	HelveticaNr BdOb
AntiqueOlv	Times New BdIt	N C Schbk Roman
AntiqueOlv It	Symbol	N C Schbk It
AntiqueOlv Bd	Wingdings	N C Schbk Bd
CG Omega	Line Printer	N C Schbk BdIt
CG Omega It	Times Roman	ITC A G Go Bk
CG Omega Bd	Times It	ITC A G Go BkOb
CG Omega BdIt	Times Bd	ITC A G Go Dm
GaramondAntiqua	Times BdIt	ITC A G Go DmOb
Garamond Krsv	Helvetica	ZapfC MdIt
Garamond Hlb	Helvetica Ob	ZapfDingbats
GaramondKrsvHlb	Helvetica Bd	C39 Narrow
Courier*	Helvetica BdOb	C39 Regular
Courier It	CourierPS	C39 Wide
Courier Bd	CourierPS Ob	OCR-A
Courier BdIt	CourierPS Bd	OCR-B
LetterGothic	CourierPS BdOb	
LetterGothic It	SymbolPS	
LetterGothic Bd		

Symbol Set

Purpose:

To specify a symbol set for a specified font.

Values:

DESKTOP	MATH-8	WIN 3.0
DNGBTSMS	MC TEXT	WINBALT
ISO-11	MS PUB	WINGDINGS
ISO-15	PC-1004	WIN L1
ISO-17	PC-775	WIN L2
ISO-21	PC-8	WIN L5
ISO-4	PC-850	PC CYR
ISO-6	PC-852	PC-866U
ISO-60	PC-8 DN	ISO CYR
ISO-69	PC-8 TK	WIN CYR
ISO L1	PI FONT	GREEK-8
ISO L2	PS MATH	WIN-GRK
ISO L5	PS TEXT	PC-851
ISO L6	ROMAN-8*	PC8-GRK
LEGAL	SYMBOL	ISO-GRK

Font Size

Purpose:

To specify the font size for scalable typographic fonts.

Values:

12.00*	Sets the values in increments of 0.25.
Available Range: 4.00 – 50.00	

Font size refers to the height of the characters in the font. One point equals approximately 1/72 of an inch.



NOTE: The Font Size menu is only displayed for typographic fonts.

Font Pitch

Purpose:

To specify the font pitch for scalable mono spaced fonts.

Values:

10.00*	Sets the value in increments of 0.01.
Available Range: 6.00–24.00	

Font pitch refers to the number of fixed-space characters in a horizontal inch of type. For non-scalable mono spaced fonts, the pitch is displayed, but cannot be changed.



NOTE: The Font Pitch menu is only displayed for fixed or mono spaced fonts.

Form Line

Purpose:

To set the number of lines in a page.

Values:

mm series

64 ^{*1}	Sets the value in increments of 1.
------------------	------------------------------------

Available Range: 5–128

^{*1} Denotes country-specific factory default values.

inch series

60 ^{*1}	Sets the value in increments of 1.
------------------	------------------------------------

Available Range: 5–128

^{*1} Denotes country-specific factory default values.

The printer sets the amount of space between each line (vertical line spacing) based on the **Form Line** and **Orientation** menu items. Select the correct **Orientation** before changing **Form Line**.

See also:

"Orientation"

Quantity

Purpose:

To set the default print quantity. (Set the number of copies required for a specific job from the printer driver. Values selected from the printer driver always override values selected from the operator panel.)

Values:

1 [*]	Sets the value in increments of 1.
----------------	------------------------------------

Available Range: 1–999

Image Enhance

Purpose:

To specify whether to enable the Image Enhance feature, which makes the boundary line between black and white smoother to decrease jagged edges and enhance the visual appearance.

Values:

Off	Disables the Image Enhance feature.
-----	-------------------------------------

On [*]	Enables the Image Enhance feature.
-----------------	------------------------------------

Hex Dump

Purpose:

To help isolate the source of a print job problem. With Hex Dump selected, all data sent to the printer is printed in hexadecimal and character representation. Control codes are not executed.

Values:

Disable*	Disables the Hex Dump feature.
Enable	Enables the Hex Dump feature.

Draft Mode

Purpose:

To save toner by printing in the draft mode. The print quality is reduced when printing in the draft mode.

Values:

Disable*	Does not print in the draft mode.
Enable	Prints in the draft mode.

Line Termination

Purpose:

To add the line termination commands.

Values:

Off*	The line termination command is not added. CR=CR, LF=LF, FF=FF
Add-LF	The LF command is added. CR=CR-LF, LF=LF, FF=FF
Add-CR	The CR command is added. CR=CR, LF=CR-LF, FF=CR-FF
CR-XX	The CR and LF commands are added. CR=CR-LF, LF=CR-LF, FF=CR-FF

Ignore Form Feed

Purpose:

To specify whether to ignore blank pages that only contain Form Feed control codes.

Values:

Off*	Disables the Ignore Form Feed feature.
On	Enables the Ignore Form Feed feature.

A4 Wide

Purpose:

To expand the printable area width.

Values:

Off*	Disables A4 Wide.
On	Enables A4 Wide.

Barcode Mode

Purpose:

To specify whether to enable the barcode mode, which is suitable for barcode printing.

Values:

Disable*	Disables the barcode mode.
Enable	Enables the barcode mode.

 **NOTE:** Be sure to set to `Disable` after using the barcode mode.

PS

Use the PS menu to change printer settings that only affect jobs using the PostScript 3 Compatible emulation printer language.

 **NOTE:** Values marked by an asterisk (*) are the factory default menu settings.

PS Error Report

Purpose:

To specify whether the contents of the errors concerning PostScript 3 Compatible page description language are printed.

The change becomes effective after the printer is turned off and then on again.

Values:

Off	Discards the print job without printing an error message.
On*	Prints an error message before it discards the job.

 **NOTE:** Instructions from the PS driver override the settings specified on the operator panel.

PS Job Time-out

Purpose:

To specify the execution time for one PostScript 3 Compatible job. The change becomes effective after the printer is turned off and then on again.

Values:

Off*	Job time-out does not occur.	
On	1 minute*	An error concerning the PostScript 3 Compatible page description language occurs if processing is not completed after the specified time.
	Available Range: 1-900 minutes	

Paper Select Mode

Purpose:

To specify the way to select the tray for PostScript 3 Compatible mode. The change becomes effective after the printer is turned off and then on again.

Values:

Auto *	The tray is selected as the same setting as in the PCL mode.
Select From Tray	The tray is selected in a method compatible with regular PostScript 3 Compatible printers.

PDF

Use the PDF menu to change printer settings that only affect the PDF jobs.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Quantity

Purpose:

To specify the number of copies to print.

Values:

1 *	Sets the value in increments of 1.
Available Range: 1–999	

2 Sided Print

Purpose:

To specify whether to print on both sides of a sheet of paper.

Values:

1 Sided *	Does not print on both sides of a sheet of paper.	
2 Sided	Flip on Long Edge *	Prints on both sides of a sheet of paper to be bound by long edge.
	Flip on Short Edge	Prints on both sides of a sheet of paper to be bound by short edge.

Print Mode

Purpose:

To specify the print mode.

Values:

Normal *	For documents with normal sized characters.
High Quality	For documents with small characters or thin lines, or documents printed using a dot-matrix printer.
High Speed	Prints with the higher speed than the Normal mode, but the quality is less.

PDF Password

Purpose:

To specify the password to print a PDF file secured with a document open password (password to open the PDF file).

Values:

Enter PDF Password	Enter the document open password to print the secure PDF
--------------------	--

Collation

Purpose:

To specify whether to sort the job.

Values:

Collated	Sorts the job.
Uncollated*	Does not sort the job.

Output Size

Purpose:

To specify the output paper size for PDF.

Values:

A4* ¹
Letter* ¹
Auto
* ¹ The default paper size is displayed.

Layout

Purpose:

To specify the output layout.

Values:

Auto %*
100% (No Zoom)
Booklet
2 Pages Up
4 Pages Up

Detect Job Separator

Purpose:

To specify whether to detect the end of the job in printing PDF files successively.

Values:

Off	Disables the Detect Job Separator feature.
On*	Enables the Detect Job Separator feature.

Network

Use the **Network** menu to change the printer settings affecting jobs sent to the printer through the wired or wireless network.

 **NOTE:** Values marked by an asterisk (*) are the factory default menu settings.

Wi-Fi

 **NOTE:** The Wi-Fi feature is available on the Dell Cloud Multifunction Printer | H815dw only.

Purpose:

To confirm or specify wireless network settings.

Wi-Fi

Purpose:

To specify whether to enable the Wi-Fi feature.

Values:

Off	Disables the Wi-Fi feature.
On	Enables the Wi-Fi feature.

Wi-Fi Status

Purpose:

To confirm the wireless communication status.

Values:

Status	Good
	Acceptable
	Low
	No Reception
SSID	Displays the name that identifies the wireless network.
Encryption Type	Displays the encryption type.

Wi-Fi Setup Wizard

 **NOTE:** Wi-Fi Setup Wizard is available only when the printer is connected using the wireless network.

Purpose:

To configure the wireless network interface.

Values:

Select access point		Select the access point from the list.
	WEP Key	When you select an access point using WEP as the encryption type, enter the WEP key.
	Passphrase	When you select an access point using WPA, WPA2, or Mixed as the encryption type, enter the passphrase.
Manual SSID Setup	Enter SSID	Specifies a name to identify the wireless network. Up to 32 alphanumeric characters can be entered.

Infrastructure		Select when you configure the wireless settings through the access point such as a wireless router.
	No Security*	Specifies No Security to configure the wireless settings without specifying an encryption type.
	Mixed mode PSK	Select to configure the wireless settings with the encryption type of Mixed mode PSK. Mixed mode PSK automatically selects the encryption type from either WPA-PSK-TKIP, WPA-PSK-AES, or WPA2-PSK-AES.
	Passphrase	Specifies the passphrase of alphanumeric characters from 8 to 63.
	WPA2-PSK-AES	Select to configure the wireless settings with the encryption type of WPA2-PSK-AES.
	Passphrase	Specifies the passphrase of alphanumeric characters from 8 to 63. (hex: 0-9, a-f, A-F, 16 to 64 characters)
	WEP	Specifies the WEP key to use through the wireless network. For 64bit keys, 10 hexadecimal characters can be entered. For 128bit keys, 26 hexadecimal characters can be entered.
	Transmit Key	Specifies the transmit key from Auto* , WEP Key 1 , WEP Key 2 , WEP Key 3 , and WEP Key 4 .
Ad-hoc		Select to configure the wireless settings without the access point such as a wireless router.
	No Security*	Select to configure the wireless settings without specifying the encryption type from WEP.
	WEP	Specifies the WEP key to use through the wireless network. For 64bit keys, up to 10 hexadecimal characters can be entered. For 128bit keys, up to 26 hexadecimal characters can be entered.
	Transmit Key	Specifies the transmit key from WEP Key 1* , WEP Key 2 , WEP Key 3 , and WEP Key 4 .

WPS Setup

Purpose:

To configure the wireless network using WPS.

Values:

Push Button Configuration*	Start Configuration	Configures the wireless settings with WPS-PBC.
PIN Code	Start Configuration	Configures the wireless settings using the PIN code assigned automatically by the printer.
	Print PIN Code	Prints the PIN code. Confirm it when entering PIN assigned to the printer into your computer.

IP Mode

Purpose:

To configure the IP mode.

Values:

Dual Stack*	Uses both IPv4 and IPv6 to set the IP address.
IPv4 Mode	Uses IPv4 to set the IP address.
IPv6 Mode	Uses IPv6 to set the IP address.

TCP/IP

Purpose:

To configure TCP/IP settings.

Values:

Get IP Address	AutoIP*	Sets the IP address automatically. The printer will first try to get the IP address from the DHCP server. If the printer cannot get the IP address, then the printer uses the link local address. A random value in the range of 169.254.0.0 to 169.254.255.255 that is not currently in use on the network is set as the IP address. The subnet mask is set as 255.255.0.0.
	BOOTP	Sets the IP address using BOOTP.
	RARP	Sets the IP address using RARP.
	DHCP	Sets the IP address using DHCP.
	Panel	Use this option when you want to set the IP address manually on the operator panel.
IP Address	When an IP address is being set manually, the IP is allocated to the printer using the format nnn.nnn.nnn.nnn. Each octet that makes up nnn.nnn.nnn.nnn is a value in the range of 0 to 255.	
Subnet Mask	When an IP address is being set manually, the subnet mask is specified using the format nnn.nnn.nnn.nnn. Each octet that makes up nnn.nnn.nnn.nnn is a value in the range of 0 to 255. 255.255.255.255 cannot be specified as the subnet mask.	
Gateway Address	When an IP address is being set manually, the gateway address is specified using the format nnn.nnn.nnn.nnn. Each octet that makes up nnn.nnn.nnn.nnn is a value in the range of 0 to 255. 127 and any value in the range of 224 to 254 cannot be specified for the first octet of a gateway address.	

IPsec



NOTE: IPsec feature is available only when **IPsec** is enabled on the **Dell Printer Configuration Web Tool**.

Purpose:

Disables IPsec.

Reset Wi-Fi

Purpose:

To initialize wireless network settings. After executing this function and rebooting the printer, all wireless network settings are reset to their default values.

Wi-Fi Direct



NOTE: The Wi-Fi Direct feature is available on the Dell Cloud Multifunction Printer | H815dw only.

Purpose:

To configure the Wi-Fi Direct network settings.

Values:

Wi-Fi Direct	Disable*	Disables the Wi-Fi Direct network.
	Enable	Enables the Wi-Fi Direct network.
Group Role	Auto	Automatically resolves the group role for Wi-Fi Direct.
	Group Owner*	Sets the printer as the Group Owner when using Wi-Fi Direct. Setting the printer to become the group owner makes it possible for devices to discover this printer. The SSID of the printer will be then displayed in the list of wireless networks on your Wi-Fi mobile device.
Device Name	Specifies the printer name that identifies the Wi-Fi Direct network with up to 32 alphanumeric characters. Confirm it when selecting the printer name on your Wi-Fi certified device.	
Paired Device	Displays the status of the Wi-Fi Direct connections between the printer and up to 3 Wi-Fi mobile devices.	
	Disconnect All	Disconnects all the Wi-Fi Direct connections.
	Disconnect now	Disconnects all the Wi-Fi Direct connections right now.
	Disconnect and Reset Passphrase	Disconnects the Wi-Fi Direct connections and resets the passphrase.
SSID	Displays the name that identifies the Wi-Fi Direct network. You can also specify the name with up to 32 alphanumeric characters ("DIRECT-XY" cannot be changed). Confirm it when selecting the Wi-Fi Direct network name on the Wi-Fi mobile devices.	
Passphrase	Displays the passphrase. Confirm it when entering the passphrase into the Wi-Fi mobile devices.	
	Print Passphrase	Prints the passphrase. Confirm it when entering the passphrase into the Wi-Fi mobile devices.
	Reset Passphrase	Resets the passphrase.
WPS Setup	Configures the Wi-Fi Direct network using WPS.	
	Push Button Configuration*	Configures the Wi-Fi Direct network with WPS-PBC.
	PIN Code	Configures the Wi-Fi Direct network using PIN code assigned automatically by the printer.
	Print PIN Code	Prints the PIN code. Confirm it when entering PIN assigned to the printer into your Wi-Fi mobile device.
	Reset Code	Resets the PIN code.

Ethernet

 **NOTE:** When the Ethernet cable is connected, Ethernet is displayed.

Purpose:

To confirm or specify wired network settings.

IP Mode

Purpose:

To configure the IP mode.

Values:

Dual Stack*	Uses both IPv4 and IPv6 to set the IP address.
IPv4 Mode	Uses IPv4 to set the IP address.
IPv6 Mode	Uses IPv6 to set the IP address.

TCP/IP

Purpose:

To configure TCP/IP settings.

Values:

Get IP Address	AutoIP*	Sets the IP address automatically. The printer will first try to get the IP address from the DHCP server. If the printer cannot get the IP address, then the printer uses the link local address. A random value in the range of 169.254.0.0 to 169.254.255.255 that is not currently in use on the network is set as the IP address. The subnet mask is set as 255.255.0.0.
	BOOTP	Sets the IP address using BOOTP.
	RARP	Sets the IP address using RARP.
	DHCP	Sets the IP address using DHCP.
	Panel	Use this option when you want to set the IP address manually on the operator panel.
IP Address		When an IP address is being set manually, the IP is allocated to the printer using the format nnn.nnn.nnn.nnn. Each octet that makes up nnn.nnn.nnn.nnn is a value in the range of 0 to 255.
Subnet Mask		When an IP address is being set manually, the subnet mask is specified using the format nnn.nnn.nnn.nnn. Each octet that makes up nnn.nnn.nnn.nnn is a value in the range of 0 to 255. 255.255.255.255 cannot be specified as the subnet mask.
Gateway Address		When an IP address is being set manually, the gateway address is specified using the format nnn.nnn.nnn.nnn. Each octet that makes up nnn.nnn.nnn.nnn is a value in the range of 0 to 255. 127 and any value in the range of 224 to 254 cannot be specified for the first octet of a gateway address.

IPsec

 **NOTE:** IPsec feature is available only when IPsec is enabled on the **Dell Printer Configuration Web Tool**.

Purpose:

Disables IPsec.

Connection Speed

 **NOTE:** Connection Speed feature is available only when the printer is connected using the wired network.

Purpose:

To specify the communication speed and the duplex settings of Ethernet. The change becomes effective after the printer is turned off and then on again.

Values:

Auto *	Detects the Ethernet settings automatically.
10BASE-T Half	Uses 10BASE-T Half-duplex.
10BASE-T Full	Uses 10BASE-T Full-duplex.
100BASE-TX Half	Uses 100BASE-TX Half-duplex.
100BASE-TX Full	Uses 100BASE-TX Full-duplex.
1000BASE-T Full	Uses 1000BASE-T Full-duplex.

Protocols

Purpose:

To enable or disable each protocol. The change becomes effective after the printer is turned off and then on again.

Values:

LPD	Disable	Disables the Line Printer Daemon (LPD) port.
	Enable *	Enables the Line Printer Daemon (LPD) port.
Port9100	Disable	Disables the Port9100 port.
	Enable *	Enables the Port9100 port.
FTP	Disable	Disables FTP port.
	Enable *	Enables FTP port.
IPP	Disable	Disables IPP port.
	Enable *	Enables IPP port.
SMB TCP/IP	Disable	Disables SMB TCP/IP port.
	Enable *	Enables SMB TCP/IP port.
WSD Print	Disable	Disables Web Services on Devices (WSD) print.
	Enable *	Enables Web Services on Devices (WSD) print.
WSD Scan	Disable	Disables Web Services on Devices (WSD) scan.
	Enable *	Enables Web Services on Devices (WSD) scan.
Network TWAIN	Disable	Disables Network TWAIN.
	Enable *	Enables Network TWAIN.
SNMP UDP	Disable	Disables the Simple Network Management Protocol (SNMP) UDP port.
	Enable *	Enables the Simple Network Management Protocol (SNMP) UDP port.
E-mail Alert	Disable	Disables the E-mail Alert feature.
	Enable *	Enables the E-mail Alert feature.
Dell Printer Configuration Web Tool	Disable	Disables an access to Dell Printer Configuration Web Tool embedded in the printer.
	Enable *	Enables an access to Dell Printer Configuration Web Tool embedded in the printer.

Bonjour(mDNS)	Disable	Disables Bonjour (mDNS).
	Enable*	Enables Bonjour (mDNS).
Telnet	Disable	Disables Telnet.
	Enable*	Enables Telnet.
Update Address Book	Disable	Disables Update Address Book.
	Enable*	Enables Update Address Book.
HTTP-SSL/TLS	Disable*	Disables HTTP-SSL/TLS.
	Enable	Enables HTTP-SSL/TLS.
Google Cloud Print	Disable	Disables Google Cloud Print.
	Enable*	Enables Google Cloud Print.
Print from Dell Document Hub* ¹	Disable	Disables Print from Dell Document Hub.
	Enable*	Enables Print from Dell Document Hub.
Scan to Dell Document Hub* ¹	Disable	Disables Scan to Dell Document Hub.
	Enable*	Enables Scan to Dell Document Hub.

*¹ This item is available only on the Dell Cloud Multifunction Printer | H815dw.

Advanced Settings

Purpose:

To specify advanced network settings.

IP Filter



NOTE: IP Filter feature is available only for LPD or Port9100.

Purpose:

To block data received from certain IP addresses through the wired or wireless network. You can set up to five IP addresses. The change becomes effective after the printer is turned off and then on again.

Values:

n (n is 1-5)	IP Address		Sets the IP address for Filter n.
	Subnet Mask		Sets the address mask for Filter n.
	Mode	Off*	Disables the IP Filter feature for Filter n.
		Accept	Accepts an access from the specified IP address.
		Reject	Rejects an access from the specified IP address.

IEEE 802.1x



NOTE: IEEE 802.1x feature is available only when the printer is connected using Ethernet cable and it is available only when the IEEE 802.1x authentication is enabled.

Purpose:

To disable IEEE 802.1x authentication. The change becomes effective after the printer is turned off and then on again.

PS Data Format

Purpose:

To specify PostScript 3 Compatible communication protocol, you can configure the PS Data Format settings. The change becomes effective after the printer is turned off and then on again.

Values:

Auto*	Used when auto-detecting the PostScript 3 Compatible communication protocol.
Standard	Used when the communication protocol is in ASCII interface.
BCP	Used when the communication protocol is in binary format.
TBCP	Used when the communication protocol supports both ASCII and binary data to switch between them according to the specified control code.
Binary	Used when no special processing is required for data.

Reset LAN

Purpose:

To initialize wired network data stored in non-volatile memory (NVM). After executing this function and rebooting the printer, all wired network settings are reset to their default values.

Delete All Certificates

Purpose:

To delete all certificates of the printer. After executing this function and rebooting the printer, all certificates are deleted.

Fax Settings

Use the Fax Settings menu to configure the basic fax settings.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Fax Line Settings

Purpose:

To configure basic settings for the fax line.

Fax Number

Purpose:

To set the fax number of the printer, which will be printed on the header of a fax message.



NOTE: Ensure to specify Fax Number before using Junk Fax Setup.

Country**Purpose:**

To select the country where the printer is used.

Values:

Australia	Italy	Spain
Austria	Luxembourg	Sweden
Belgium	Malaysia	Switzerland
Canada	Mexico	Thailand
Colombia	Netherlands	United Kingdom
Denmark	New Zealand	United States
France	Norway	Unknown
Germany	Singapore	
Ireland	South Africa	

Fax Header Name**Purpose:**

To set the sender name to be printed on the header on faxes.

Line Type**Purpose:**

To select the default line type.

Values:

PSTN*	Uses PSTN.
PBX	Uses PBX.

Line Monitor**Purpose:**

To set the volume of the line monitor, which audibly monitors a transmission through the internal speaker until a connection is made.

Values:

Off	Turns off the volume of the line monitor.
Low	Sets the volume of the line monitor to Low.
Medium*	Sets the volume of the line monitor to Medium.
High	Sets the volume of the line monitor to High.

DRPD Pattern

Purpose:

To provide a separate number for faxing with a distinctive ring pattern.

Values:

Pattern1-7	DRPD is a service provided by some telephone companies. DRPD Patterns are specified by your telephone company. The patterns provided with your printer are shown below:
Pattern 1	
Pattern 2	
Pattern 3	
Pattern 4*	
Pattern 5	
Pattern 6	
Pattern 7	
Ask your telephone company which pattern you need to select to use this service. For example, Pattern 7 is the New Zealand FaxAbility distinctive ringing pattern: rings for 400 ms, stops for 800 ms, rings for 400 ms and stops for 1400 ms. This pattern is repeated over and over again. This printer only responds to Distinctive Alert cadence(s) DA4 in New Zealand.	

Incoming Defaults

Purpose:

To configure settings for incoming fax.

Receive Mode

Purpose:

To select the default fax receiving mode.

Values:

Telephone	Automatic fax reception is turned off. You can receive a fax by picking up the handset of the external telephone and then pressing the remote receive code, or by tapping Manual Receive in On Hook and then tapping Receive . For details about Manual Receive , see "Receiving a Fax Manually in the Telephone Mode."
Fax*	Automatically receives faxes.
Telephone / Fax	When the printer receives an incoming fax, the external telephone rings for the time specified in Auto Receive Tel/Fax , and then the printer automatically receives a fax. If an incoming call is not a fax, the printer beeps from the internal speaker indicating that the call is a telephone call.
Ans Machine/Fax	The printer can share a telephone line with an answering machine. In this mode, the printer will monitor the fax signal and pick up the line if there are fax tones. If the phone communication in your country is serial, this mode is not supported.
DRPD	Before using the Distinctive Ring Pattern Detection (DRPD) option, a distinctive ring service must be installed on your telephone line by the telephone company. After the telephone company has provided a separate number for faxing with a distinctive ring pattern, configure the fax setup to monitor for that specific ring pattern.

Ring Tone Volume

Purpose:

To set the volume of the ring tone, which indicates that an incoming call is a telephone call through the internal speaker when **Receive Mode** is set to **Telephone/Fax**.

Values:

Off	Turns off the volume of the ring tone.
Low	Sets the volume of the ring tone to Low.
Medium	Sets the volume of the ring tone to Medium.
High*	Sets the volume of the ring tone to High.

Auto Receive Setup

Purpose:

To configure settings for automatic fax reception.

Values:

Auto Receive Fax	0 second*	Sets the interval at which the printer goes into the fax receive mode after receiving an incoming call. The value is set in increments of 1 second.
	Available Range: 0-255 seconds	
Auto Receive Tel/Fax	6 seconds*	Sets the interval at which the printer goes into the fax receive mode after the external telephone receives an incoming call. The value is set in increments of 1 second.
	Available Range: 0-255 seconds	
Auto Receive Ans/Fax	21 seconds*	Sets the interval at which the printer goes into the fax receive mode after the external answering machine receives an incoming call. The value is set in increments of 1 second.
	Available Range: 0-255 seconds	

Junk Fax Setup

Purpose:

To reject unwanted faxes by accepting faxes only from the fax numbers registered in the Phone Book.

Values:

Off*	Does not reject faxes sent from unwanted numbers.
On	Rejects faxes sent from unwanted numbers.

Secure Receive



NOTE: Secure Receive feature is available only when Panel Lock Control is set to Enable.

Purpose:

To specify whether to require a password to receive faxes, and to set or change the password.

Values:

Secure Receive Set	Disable*	Does not require a password to receive faxes.
	Enable	Requires a password to receive faxes.
Change Password* ¹	0000–9999	Sets or changes the password required to receive faxes.

*¹ This item is available only when Secure Receive Set is set to Enable.

Received Fax Forward



NOTE: Forward to Email feature is available only when E-Mail Server information and Forwarding E-mail Address are registered. For information on e-mail server settings, see "E-Mail Server" and on forwarding e-mail address information, see "Fax Settings."

Purpose:

To set whether to forward incoming faxes to a specified destination.

Values:

Off*	Does not forward incoming faxes.
Forward	Forwards incoming faxes to a specified destination. Prints incoming faxes if an error occurs during the transfer.
	Forwarding Number Specifies the fax number of the destination to which incoming faxes will be forwarded.
Print and Forward	Prints incoming faxes and also forwards them to a specified destination.
	Forwarding Number Specifies the fax number of the destination to which incoming faxes will be forwarded.
Forward to Email	Forwards incoming faxes to specified e-mail addresses. Prints incoming faxes if an error occurs during the transfer.
Print and Forward to E-mail	Prints incoming faxes and also forwards them to specified e-mail addresses.
Forward to Server	Forwards incoming faxes to a specified server address. Prints incoming faxes if an error occurs during the transfer.
Print and Forward to Server	Prints incoming faxes and also forwards them to a specified server address.



NOTE: Depending on the e-mail server settings, the printer may not print incoming faxes when forwarding the incoming faxes to e-mail addresses is not successful.

2 Sided Print

To set the duplex printing for fax.

Values:

Off*	Does not perform duplex printing.
On	Performs duplex printing.

Remote Receive

Purpose:

To receive a fax by pressing a remote receive code on the external telephone after picking up the handset of the telephone.

Values:

Off*	Does not receive a fax by pressing a remote receive code on the external telephone.
On	Receives a fax by pressing a remote receive code on the external telephone.
	Remote Receive Tone Specifies the tone in two digits to start Remote Receive.

Discard Size

Purpose:

To set the printer to discard images or any text at the bottom of a fax page when the entire page does not fit the output paper.

Values:

Off*	Prints excess images or text at the bottom of a fax page without discarding it.
On	Discards any excess images or text.
Auto Reduction	Automatically reduces a fax page to fit it onto the appropriate paper size.

Transmission Defaults

Purpose:

To configure settings for transmitting fax.

Auto Redial Setup

Purpose:

To configure settings for automatic redial.

Values:

Redial Attempts	3*	Sets the number of redial attempts to make when the destination fax number is busy. If you enter 0, the printer will not redial. The value is set in increments of 1.
	Available Range: 0-13	
Interval of Redial	1 minute*	Sets the interval between redial attempts. The value is set in increments of 1 minute.
	Available Range: 1-15 minutes	

Resend Delay	8 seconds*	Sets the interval between re-send attempts. The value is set in increments of 1 second.
Available Range: 3-255 seconds		

Tone / Pulse

Purpose:

To select the dialing type.

Values:

Tone*	Uses tone dialing.
Pulse(10PPS)	Sets "DP (10PPS)" (Dial Pulse, 10 Pulse Per Second) as the dial type.
Pulse(20PPS)	Sets "DP (20PPS)" (Dial Pulse, 20 Pulse Per Second) as the dial type.

Prefix Dial

Purpose:

To select whether to set a prefix dial number.

Values:

Off*	Does not set a prefix dial number.
On	Sets a prefix dial number.
Prefix Dial Number	Sets a prefix dial number of up to five digits. This number dials before any auto dial number is started. It is useful for accessing the Private Automatic Branch Exchange (PABX).

Fax Cover Page

Purpose:

To set whether to attach a cover page to faxes.

Values:

Off*	Does not attach a cover page to faxes.
On	Attaches a cover page to faxes.

Fax Header

Purpose:

To print the information of the sender on the header of the faxes.

Values:

Off	Does not print the sender's information on the header of faxes.
On*	Prints the sender's information on the header of faxes.



NOTE: If `United States` is selected for the setting of `Country`, this option does not appear on the menu. The setting is fixed to `On` and cannot be changed. For information on the country setting, see "Setting Your Country."

ECM

Purpose:

To set whether to enable or disable the Error Correction Mode (ECM). To use the ECM, the remote machines must also support the ECM.

Values:

Off	Disables the ECM.
On*	Enables the ECM.

Modem Speed

Purpose:

To adjust the fax modem speed when a fax transmission or reception error occurs.

Values:

2.4 Kbps
4.8 Kbps
9.6 Kbps
14.4 Kbps
33.6 Kbps*

Display Manual Fax Recipients

Purpose:

To set whether to display the fax number of the recipient on the **Sending Fax** screen when manually sending a fax.

Values:

Off	Does not display the fax number when manually sending a fax.
On*	Displays the fax number when manually sending a fax.

Fax Reports

Purpose:

To configure settings for fax reports.

Fax Activity

Purpose:

To set whether to automatically print a fax activity report after every 50 incoming and outgoing fax communications.

Values:

Auto Print*	Automatically prints a fax activity report after every 50 incoming and outgoing fax communications.
No Auto Print	Does not automatically print a fax activity report after every 50 incoming and outgoing fax communications.

Fax Transmit

Purpose:

To set whether to print a transmission result after a fax transmission.

Values:

Print Always	Prints a transmission report after every fax transmission.
Print On Error*	Prints a transmission report only when an error occurs.
Print Disable	Does not print a transmission report after a fax transmission.

Fax Broadcast

Purpose:

To set whether to print a transmission result after a fax transmission to multiple destinations.

Values:

Print Always*	Prints a transmission report after every fax transmission.
Print On Error	Prints a transmission report only when an error occurs.
Print Disable	Does not print a transmission report after a fax transmission to multiple destinations.

Fax Protocol

Purpose:

To set whether to print the protocol monitor report, which helps you identify the cause of a communication problem.

Values:

Print Always	Prints a protocol monitor report after every fax transmission.
Print On Error	Prints the protocol monitor report only when an error occurs.
Print Disable*	Does not print the protocol monitor report.

System Settings

Use **System Settings** to configure the power saving mode, warning tones, time-out duration, display language, and job log auto print settings.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

General

Purpose:

To configure general settings for the printer.

Power Saver Timer

Purpose:

To specify the time for transition to power saver mode.

Values:

Sleep	7 minutes*	Specifies the time taken by the printer to enter Sleep mode after it finishes a job.
	Available Range: 1–60 minutes	

Deep Sleep	8 minutes*	Specifies the time taken by the printer to enter Deep Sleep mode after it has entered Sleep mode.
Available Range: 1–60 minutes		

When you specify 1 minute for Sleep, the printer enters power saver mode 1 minute after it finishes a job. This uses much less energy, but requires more warm-up time for the printer. Specify 1 minute if your printer shares an electrical circuit with room lighting and you notice lights flickering.

Select a high value if your printer is in constant use. In most circumstances, this keeps the printer ready to operate with minimum warm-up time.

Select a value between 1 and 60 minutes for the power saver mode if you want a balance between energy consumption and a shorter warm-up period.

The printer automatically returns to the standby mode from the power saver mode when it receives data from the computer or remote fax machine. You can also change the status of the printer to the standby mode by pressing the  (Power Saver) button on the operator panel.

Date & Time

Purpose:

To specify the date and time formats.

Values:

Time Zone			Sets the time zone.
Date	Sets the date depending on the Format settings.		
	Format	Sets the date format.	
Time	Sets the time.		
	Format	12 Hour	Sets the time in 12-hour format.
		24 Hour	Sets the time in 24-hour format.

mm / inch

Purpose:

To specify the default measurement unit displayed after the numeric value on the operator panel.

Values:

Millimeters(mm)*	Selects millimeter as the default measurement unit.
Inches(")	Selects inch as the default measurement unit.



NOTE: The default for mm / inch varies depending on other settings, such as Country and Document Size.

Screen Brightness

Purpose:

To adjust the screen brightness of the touch panel.

Values:

5*	Sets the brightness in ten levels, with ten being the brightest.
Available Range: 1-10	

Audio Tone

Purpose:

To configure settings for tones emitted by the printer during operation or when a warning message appears.

Values:

Control Panel	Off*	Does not emit a tone when the operator panel input is correct.
	Soft	Emits a tone when the operator panel input is correct.
	Normal	
	Loud	
Invalid Key	Off*	Does not emit a tone when the operator panel input is incorrect.
	Soft	Emits a tone when the operator panel input is incorrect.
	Normal	
	Loud	
Machine Ready	Off	Does not emit a tone when the printer is ready to process a job.
	Soft	Emits a tone when the printer is ready to process a job.
	Normal*	
	Loud	
Copy Completed	Off	Does not emit a tone when a copy job is complete.
	Soft	Emits a tone when a copy job is complete.
	Normal*	
	Loud	
Job Completed	Off	Does not emit a tone when a job other than a copy job is complete.
	Soft	Emits a tone when a job other than a copy job is complete.
	Normal*	
	Loud	
Fault Tone	Off	Does not emit a tone when a job ends abnormally.
	Soft	Emits a tone when a job ends abnormally.
	Normal*	
	Loud	
Alert Tone	Off	Does not emit a tone when a problem occurs.
	Soft	Emits a tone when a problem occurs.
	Normal*	
	Loud	
Out of Paper	Off	Does not emit a tone when the printer runs out of paper.
	Soft	Emits a tone when the printer runs out of paper.
	Normal*	
	Loud	
Low Toner Alert	Off	Does not emit a tone when the toner is low.
	Soft	Emits a tone when the toner is low.
	Normal*	
	Loud	

Auto Clear Alert	Off*	Does not emit a tone 5 seconds before the printer performs auto clear.
	Soft	Emits a tone 5 seconds before the printer performs auto clear.
	Normal	
	Loud	
NFC Authentication *1	Off	Does not emit a tone when an NFC card is placed on the NFC reader for authentication.
	Soft	Emits a tone when an NFC card is placed on the NFC reader for authentication.
	Normal*	
	Loud	
All Tones	Off	Disables all the alert tones.
	Soft	Sets the volume of all the alert tones at once.
	Normal*	
	Loud	

*1 This item is available only on the Dell Cloud Multifunction Printer | H815dw.

Low Toner Alert Message

Purpose:

To specify whether to show the alert message when the toner is low.

Values:

Off	Does not show the alert message when the toner is low.
On*	Shows the alert message when the toner is low.

OffHook Wake Up

Purpose:

To specify whether to wake up from Sleep or Deep Sleep mode when you pick up the handset of the external telephone.

Values:

Off*	Does not wake up from Sleep or Deep Sleep mode when you pick up the handset of the external telephone.
On	Wakes up from Sleep or Deep Sleep mode when you pick up the handset of the external telephone.

Auto Log Print

Purpose:

To automatically print a job history report after every 20 jobs.

Values:

Off*	Does not automatically print a job history report.
On	Automatically prints a job history report.

Print logs can also be printed using the Report/List menu.

RAM Disk

Purpose:

To allocate memory to the RAM disk file system for the Secure Print, Private Mail Box Print, Public Mail Box Print, and Proof Print features. The change becomes effective after the printer is turned off and then on again.

Values:

Off		Does not allocate memory to the RAM disk file system. Secure Print, Private Mail Box Print, Public Mail Box Print, and Proof Print jobs will abort and be recorded to the job log.
On *	260 MB Available Range: 20-300 MB	Sets the allocation of memory to the RAM disk file system in increments of 20 MB.



NOTE: Restart your printer when you change the settings for the RAM Disk menu.

Fax Server Phone Book

Purpose:

To specify whether to search the phone numbers from the phone book for the LDAP server.

Values:

Off*	Does not search the phone numbers from the phone book for the LDAP server.
On	Searches the phone numbers from the phone book for the LDAP server.



NOTE: You can search the phone numbers only from the local Phone Book when Fax Server Phone Book is set to Off.

E-mail Server Address Book

Purpose:

To specify whether to search the e-mail addresses from the address book for the LDAP server.

Values:

Off*	Does not search the e-mail addresses from the address book for the LDAP server.
On	Searches the e-mail addresses from the address book for the LDAP server.



NOTE: You can search the e-mail addresses only from the local Address Book when E-mail Server Address Book is set to Off.

Power On Wizard

Purpose:

To perform initial setup for the printer.

Max E-mail Size

Purpose:

To specify the maximum size of e-mail that can be sent.

Values:

4096 KB*	Sets the maximum size of e-mail that can be sent, in increments of 1 KB.
50-16384 KB	

Timers

Purpose:

To configure timer settings.

Auto Reset

Purpose:

To automatically reset the settings for Copy, Scan, Fax, E-mail, or Print to the default settings and return to the standby mode after you do not specify any settings for the specified time.

Values:

45sec*
1min
2min
3min
4min

Fault Time-out

Purpose:

To specify the amount of time the printer waits before canceling a job that stops abnormally. The print job is canceled if the time-out time is exceeded.

Values:

Off		Disables the fault time-out.
On*	60 seconds*	Sets the amount of time the printer waits before canceling a job that stops abnormally.
Available Range: 3-300 seconds		

Output Settings

Purpose:

To configure settings concerning output from the printer.

Default Paper Size

Purpose:

To specify the default paper size.

Values:

mm series

A4 (210x297mm) ^{*1}

Letter(8.5x11")

^{*1} Denotes country-specific factory default values.

inch series

A4 (210x297mm)

Letter(8.5x11") ^{*1}

^{*1} Denotes country-specific factory default values.

Print ID

Purpose:

To specify a location where the user ID is printed.

Values:

Off [*]	Does not print the user ID.
Top Left	Prints the user ID on the top left of the page.
Top Right	Prints the user ID on the top right of the page.
Bottom Left	Prints the user ID on the bottom left of the page.
Bottom Right	Prints the user ID on the bottom right of the page.



NOTE: When printing on DL size paper, a part of the user ID may not be printed correctly.

Print Text

Purpose:

To specify whether the printer outputs PDL (Page Description Language) data, which is not supported by the printer, as text when the printer receives it. Text data is printed on A4 or Letter size paper.

Values:

Off	Does not print the received data.
On [*]	Prints the received data as text data.

Banner Sheet

Purpose:

To specify the position of banner sheet, and also specify the tray in which the banner sheet is loaded.

Values:

Insert Position	Off [*]	Does not print the banner sheet.
	Front	Inserted before the first page of every copy.
	Back	Inserted after the last page of every copy.
	Front & Back	Inserted before the first page of every copy and after the last page of every copy.
Specify Tray	MPF	The banner sheet is loaded in the MPF.
	Tray1 [*]	The banner sheet is loaded in tray1.
	Tray2 ^{*1}	The banner sheet is loaded in the optional 550-sheet feeder.

^{*1} This item is available only when the optional 550-sheet feeder is installed.

Substitute Tray

Purpose:

Specifies whether to use paper of a different size when the paper that is loaded in the specified tray does not match the paper size settings for the current job.

Values:

Off	No tray size substitute accepted.
Larger Size	Substitutes paper of next largest size. When there is no larger paper size, the printer substitutes paper of nearest size.
Nearest Size [*]	Substitutes paper of nearest size.
Use MPF	Substitutes paper from the MPF.

Letterhead 2 Sided

Purpose:

To specify whether to print on both sides when using letterhead.

Values:

Disable [*]	Does not print on both sides of letterhead.
Enable	Prints on both sides of letterhead.

A4<>Letter Switch

Purpose:

To print A4 size jobs on Letter size paper if A4 size paper is not available or to print Letter size jobs on A4 size paper if Letter size paper is not available.

Values:

Off ^{*1}	Does not print A4 size jobs on Letter size paper or Letter size jobs on A4 paper.
On [*]	Prints A4 size jobs on Letter size paper if A4 is not available in the paper trays and vice versa (Letter size job on A4 size paper).

-
- ^{*1} Depending on the printer setting, the printer will continue to print on existing media of a different size or prompt the user to select from the following:
- Delete Job
 - Supply with correct media
-

A5<>Statement Switch

Purpose:

To print A5 size jobs on Statement size paper if A5 size paper is not available or to print Statement size jobs on A5 size paper if Statement size paper is not available.

Values:

Off ^{*1}	Does not print A5 size jobs on Statement size paper or Statement size jobs on A5 paper.
On [*]	Prints A5 size jobs on Statement size paper if A5 is not available in the paper trays and vice versa (Statement size job on A5 size paper).

^{*1} Depending on the printer setting, the printer will continue to print on existing media of a different size or prompt the user to select from the following:

- Delete Job
- Supply with correct media

Report 2 Sided Print

Purpose:

To specify to print reports on both sides a sheet of paper.

Values:

1 Sided [*]	Prints reports on one side of a sheet of paper.
2 Sided	Prints reports on both side of a sheet of paper.

Use Another Tray

Purpose:

To change to another paper tray when a paper size runs out in the specified paper tray.



NOTE: If you select another paper tray with paper size smaller than the paper size specified in the job, the parts that do not fit are not printed (print size is not adjusted automatically).

Values:

Off	Does not print on other paper sizes in other paper trays if the paper size specified in the job runs out.
On [*]	Shows a message to select another tray when the specified paper runs out in the paper tray.

Envelope Mode Mismatch

Purpose:

To specify whether to display the alert window when the print job is started without setting to the envelope mode.

Values:

Ignore	Does not display the alert window and continues the print job on the envelope even if a mismatch is detected in the printer's envelope mode settings.
Show Warning [*]	Displays the alert window to confirm whether to hold the print job and change to the envelope mode, or to continue the print job anyway without changing to the envelope mode.

Set Available Time

Purpose:

Sets the available time for the Copy, Scan, Fax, and Print functions.

Values:

Copy, Scan, Fax, Print	Set Available Time	Off*	Does not set the time when function is available.
		On	Sets the time when function is available.
	Start Time	Sets the start time of the available time.	
	End Time	Sets the end time of the available time.	
	Recurrence	Sets the day of the week to repeat the setting.	



NOTE: Set Available Time can be configured when Print, Copy, Scan, or Fax is set to On.

Secure Job Expiration



NOTE: Secure Job Expiration feature is available only when RAM Disk is set to On.

Purpose:

To specify the date and time to delete the files stored as Secure Print in the RAM disk.

Values:

Expiration Mode	Off*	Does not set the date and time to delete the files stored as Secure Print in the RAM disk.
	On	Sets the date and time to delete the files stored as Secure Print in the RAM disk.
Expiration Time	Sets the time to delete the files stored as Secure Print in the RAM disk.	
Recurrence	Daily	Sets the recurrence to delete the files stored as Secure Print in the RAM disk daily.
	Weekly*	Sets the recurrence to delete the files stored as Secure Print in the RAM disk weekly.
	Monthly	Sets the recurrence to delete the files stored as Secure Print monthly.
Weekly Setting	Monday	Sets the day of the week to delete the files stored as Secure Print.
	Tuesday	
	Wednesday	
	Thursday	
	Friday	
	Saturday	
	Sunday*	
Monthly Setting	1 Day*	Sets the day of the month to delete the files stored as Secure Print in the RAM disk.
	Available Range: 1-28 days	

AccessControl Mode

Purpose:

To specify who has access to printing.

Values:

Off*	Does not limit access to printing.
On	Limits access to printing. Authentication is done using user information registered on the printer.

Non Registered User

Purpose:

To specify whether to permit the printing of data without authentication information.

Values:

Off*	Does not permit non-account user to print the data.
On	Permits non-account user to print the data.

AccessControl Error Report

Purpose:

To specify whether to automatically print error-related information if printing with AccessControl results in an error.

Values:

Off*	Does not print the error report when printing with AccessControl results in an error.
On	Prints the error report when printing with AccessControl results in an error.

NFC - Tap to Print



NOTE: The Tap to Print feature is available on the Dell Cloud Multifunction Printer | H815dw only.

Purpose:

To specify whether to add the printer to a mobile device such as a tablet or a notebook computer by tapping the device to (NFC) of the printer.

Values:

Disable	Does not add the printer to a mobile device by tapping the device to the printer.
Enable*	Adds the printer to a mobile device by tapping the device to the printer.

Maintenance

Use the Maintenance menu to fine-tune the printer for optimal print quality, reset the print meter or the life counter of the replaced parts, or reset the default settings by initializing the printer's non-volatile memory.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Paper Density

Purpose:

To specify paper density settings.

Values:

Plain	Light (<100gsm)
	Normal*

Adjust Transfer Unit



NOTE: The print quality changes depending on the setting values you select for this item.

Purpose:

To specify the transfer unit voltage adjustment for each paper type.

Values:

Plain	0*	Sets the transfer unit voltage in increments of 1. The default settings may not give the best output on all paper types. If you see mottles on the printed paper, try to increase the voltage. If you see white spots on the printed paper, try to decrease the voltage.
	Available Range: -5 to +10	
Plain Thick	0*	
	Available Range: -5 to +10	
Covers (106-163g/m ²)	0*	
	Available Range: -5 to +10	
Covers Thick (164-216g/m ²)	0*	
	Available Range: -5 to +10	
Rough Surface	0*	
	Available Range: -5 to +10	
Label	0*	
	Available Range: -5 to +10	
Envelope	0*	
	Available Range: -5 to +10	
Japanese Postcard	0*	
	Available Range: -5 to +10	

Adjust Fusing Unit



NOTE: The print quality changes depending on the setting values you select for this item.

Purpose:

To adjust the temperature setting of the fusing unit for each paper type.

Values:

Plain	0*	Sets the fusing unit temperature in increments of 1. The default settings may not give the best output on all paper types. When the printed paper has curled, try to lower the temperature. When the toner does not fuse on the paper properly, try to increase the temperature.
	Available Range: -3 to +3	
Plain Thick	0*	
	Available Range: -3 to +3	
Covers (106-163g/m ²)	0*	
	Available Range: -3 to +3	
Covers Thick (164-216g/m ²)	0*	
	Available Range: -3 to +3	
Rough Surface	0*	
	Available Range: -3 to +3	
Label	0*	
	Available Range: -3 to +3	
Envelope	0*	
	Available Range: -3 to +3	
Japanese Postcard	0*	
	Available Range: -3 to +3	

Adjust Density

Purpose:

To adjust density level.

Values:

Darken	-3 to -1	Adjusts the density level darker than the normal setting.
Normal*	0	Works well with standard typed or printed documents.
Lighten	+1 to +3	Adjusts the density level lighter than the normal setting.

Chart

Purpose:

To print various charts that can be used for diagnosis of the printer.

Values:

Pitch Chart	Print	Prints a full halftone page. Also prints a page to check the pitch. A total of two pages are printed.
Full Page Solid	1-Sided	Specifies to print a chart of the full page solid on the paper.
	2-Sided	Specifies to print a chart of the full page solid on both sides of the paper.
	Print	Begins to print a full page solid.

Alignment Chart	Print	Prints a chart to check for proper alignment of the print image on the paper.
-----------------	-------	---

Clean Developer

Purpose:

To stir the developer in the drum cartridge.

Values:

Start	Stirs the developer in the drum cartridge.
-------	--

Clean Transfer Unit

Purpose:

To clean the transfer unit.

Values:

Start	Cleans the transfer unit.
-------	---------------------------

Toner Refresh

Purpose:

To clean the toner in the drum cartridge (and supply new toner from toner cartridge).



NOTE: Toner Refresh feature uses the toner, and shorten the life of the toner cartridge and the drum cartridge.

Values:

Start	Cleans the toner.
-------	-------------------

Reset Defaults

Purpose:

To initialize the non-volatile (NV) memory. After executing this function and rebooting the printer, all the menu parameters are reset to their default values.

Values:

User Fax Section	Initialize	Initializes the fax number entries in the Address Book.
User Scan Section	Initialize	Initializes the e-mail and server address entries in the Address Book.
User Account Section	Initialize	Initializes the user registration information.
User App Section	Initialize	Initializes the widget application information.
System Section	Initialize	Initializes the system parameters.

Initialize Print Meter

Purpose:

To initialize the print meter of the printer. When the print meter is initialized, the meter count is reset to zero.

Reset Transfer Belt Unit

Purpose:

To initialize the life counter of the transfer belt unit. After replacing the transfer belt unit, be sure to initialize its life counter.

Reset Fusing Unit

Purpose:

To initialize the life counter of the fusing unit. After replacing the fusing unit, be sure to initialize its life counter.

Clear Stored Jobs



NOTE: Clear Stored Jobs feature is available only when RAM Disk is set to On.

Purpose:

To clear all files stored as Secure Print, Private Mail Box Print, Public Mail box Print, Proof Print, and Stored Print in the RAM disk.

Values:

All	Clear	Deletes all files stored as Secure Print, Private Mail Box Print, Public Mail Box Print, and Proof Print in the RAM disk.
Secure Document	Clear	Deletes all files stored as Secure Print in the RAM disk.
Stored Document	Clear	Deletes all files stored as Stored Print in the RAM disk.

Non-Dell Toner

Purpose:

To use toner cartridge of another manufacturer.



CAUTION: Using a non-Dell™ toner cartridge may severely damage your printer. The warranty does not cover damages caused by using non-Dell toner cartridges.

Values:

Off*	Does not use toner cartridge of another manufacturer.
On	Uses toner cartridge of another manufacturer.

Adjust Altitude

Purpose:

To specify the altitude of the location where the printer is installed.

The discharge phenomenon for charging the photo conductor varies with barometric pressure. Adjustments are performed by specifying the altitude of the location where the printer is being used.



NOTE: An incorrect altitude setting leads to poor printing quality, incorrect indication of remaining toner, etc.

Values:

0m*	Sets the altitude of the location where the printer is installed.
1000m	
2000m	
3000m	

Decrease Electrostatic Memory

Purpose:

To widen the print gap not to leave toner streak on the next page.

Values:

Off*	Does not widen the print gap.
On	Widens the print gap.



NOTE: When **Decrease Electrostatic Memory** is set to **On**, the print speed will be slowed.

Decrease Ghosting

Purpose:

To reduce negative ghost.

Values:

Off*	Does not decrease negative ghosting.
On	Decreases negative ghosting.

Clear Job History

Purpose:

To clear the job history of all finished jobs.

Fax Line Test



NOTE: Fax Line Test feature is not available when the Fax function is disabled.

Purpose:

To test if the voltage supply from the fax line is sufficient.

Secure Settings

Use the **Secure Settings** menu to set a password to limit access to the menus. This prevents items from being changed accidentally.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

See also:

"Panel Lock"

Panel Lock

Purpose:

To set a limited access to **Admin Settings** with a password, and to set or change the password.

Values:

Panel Lock Control	Disable*	Disables password protection for Admin Settings .
	Enable	Enables password protection for Admin Settings .
Change Password* ¹	0000–9999	Sets or changes the password required to access Admin Settings .

^{*1} This item is available only when **Panel Lock Control** is set to **Enable**.

Functions Control



NOTE: Functions Control feature is available only when `Panel Lock Control` is set to `Enable`.

Purpose:

To specify whether to enable or disable each of the printer functions, or to require a password to use the functions.

Values:

Copy	On [*]	Enables the Copy function.
	On (Password)	Enables the Copy function, but requires a password to use the function.
	Off	Disables the Copy function.
Scan to E-mail	On [*]	Enables the Scan to Email function.
	On (Password)	Enables the Scan to Email function, but requires a password.
	Off	Disables the Scan to Email function.
Fax	On [*]	Enables the Fax function.
	On (Password)	Enables the Fax function but requires a password to send faxes (does not require a password to receive incoming faxes).
	Off	Disables the Fax function (the printer will not send or receive faxes).
Fax Driver	Enable [*]	Enables the Fax Driver function.
	Disable	Disables the Fax Driver function (the printer will not send faxes).
Scan To Network Folder	On [*]	Enables the Scan To Network Folder function.
	On (Password)	Enables the Scan To Network Folder function, but requires a password.
	Off	Disables the Scan To Network Folder function.
Scan To PC	On [*]	Enables the Scan To PC and Web Services on Devices (WSD) Scan function.
	On (Password)	Enables the Scan To PC function, but requires a password. Web Services on Devices (WSD) Scan is disabled since On (Password) is not supported by Web Services on Devices (WSD) Scan.
	Off	Disables the Scan To PC and Web Services on Devices (WSD) Scan function.
PC Scan	On [*]	Enables the PC Scan function.
	On (Password)	Enables the PC Scan function, but requires a password.
	Off	Disables the PC Scan function.
Scan To USB	On [*]	Enables the Scan To USB function.
	On (Password)	Enables the Scan To USB function, but requires a password.
	Off	Disables the Scan To USB function.

USB Direct Print	On [*]		Enables the USB Direct Print function.
	On (Password)		Enables the USB Direct Print function, but requires a password.
	Off		Disables the USB Direct Print function.
ID Copy	Enable [*]		Enables the ID Copy function.
	Disable		Disables the ID Copy function.
USB Service	Show When Inserted	Enable [*]	Shows a USB Drive Detected screen when a USB memory is inserted into the printer.
		Disable	Does not show a USB Drive Detected screen when a USB memory is inserted into the printer.
Change Password ^{*1}			Changes the password that is set under the Functions Control menu.
^{*1} This item is available only when On (Password) is enabled.			

Desktop Authentication



NOTE: The Desktop Authentication feature is available on the Dell Smart Multifunction Printer | S2815dn only.

Purpose:

To specify the Desktop Authentication method.

Values:

Local Authentication*	Use the local authentication method.
Remote Authentication	Use the remote authentication method.

Edit E-mail From Fields

Purpose:

To specify whether to enable editing of the transmission source when you use Scan to Email.

Values:

Disable	Disables editing of the transmission source.
Enable*	Enables editing of the transmission source.

Reconfirm Recipient

Purpose:

To specify whether to reconfirm the recipient before sending a fax or scan.



NOTE: If the **Reconfirm Recipient** menu is set to **Reconfirm Recipient**, recipients can only be selected from the phone book or the address book. You cannot directly enter an address or fax number.

Values:

No Confirmation*	Does not display a screen to reconfirm the recipient before the job is actually sent.
Reconfirm Recipient	Displays a screen to reconfirm the recipient before the job is actually sent.

Domain Filtering

Purpose:

To specify whether to only send e-mails to specified domains.



NOTE: Set the domains from **SMTP Domain Filtering** on the **Dell Printer Configuration Web Tool**.

Values:

Off*	Disables Domain Filtering.
Allow Domains	Only allows e-mails to be sent to specified domains.

Software Download

Purpose:

To enable or disable download of firmware updates.

Values:

Disable	Disables firmware updates.
Enable*	Enables firmware updates.

Display of Network Information

Purpose:

To show or hide network information in the message field of the **Home** screen.

Values:

Show IPv4 Address*	Shows the IPv4 address of the printer on the Home screen.
Show Host Name	Shows the host name of the printer on the Home screen.
Hide Network Information	Does not show network information on the Home screen.

Login Error



NOTE: Login Error feature is available only when **Panel Lock Control** is set to **Enable**.

Purpose:

To specify the number of error entry attempts allowed when you log in as an administrator in the **Admin Settings** and **Report/List** menu.

Values:

Off*	Does not allow an administrator to log in after one error entry attempt.
On	5*
Available Range: 1-10	

NFC Authentication

 **NOTE:** The NFC Authentication feature is available on the Dell Cloud Multifunction Printer | H815dw only.

Purpose:

To specify whether to enable the authentication using the NFC authentication card.

Values:

Disable	Does not permit the authentication using the NFC authentication card.
Enable*	Permits the authentication using the NFC authentication card.

USB Settings

Use the **USB Settings** menu to change printer settings affecting a USB port.

USB Port

 **NOTE:** USB Port feature is available only for the USB port on the rear of the printer.

Purpose:

To specify whether to enable the USB port. The change becomes effective after the printer is turned off and then on again.

Values:

Disable	Disables the USB interface.
Enable*	Enables the USB interface.

PS Data Format

Purpose:

To specify PostScript 3 Compatible communication protocol. You can configure the PS Data Format settings. The change becomes effective after the printer is turned off and then on again.

Values:

Auto	Used when auto-detecting the PostScript 3 Compatible communication protocol.
Standard	Used when the communication protocol is in ASCII interface.
BCP	Used when the communication protocol is in binary format.
TBCP*	Used when the communication protocol supports both ASCII and binary data to switch between them according to the specified control code.
Binary	Used when no special processing is required for data.

Job Time-out

Purpose:

To specify the amount of time the printer waits for data to arrive from the computer. The print job is canceled if the time-out time is exceeded.

Values:

Off	Disables the job time-out.
On*	30 seconds* Available Range: 5–300 seconds

Default Settings

Use **Default Settings** to modify the **Copy**, **Scan**, or **Fax** menu defaults.

Copy Defaults

Purpose:

To modify the **Copy** menu defaults.

Copy Defaults allows you to configure the following items in addition to the items under the **Copy** menu.

Auto Exposure Level

Purpose:

To specify the default background suppression level.

Values:

Normal*	Sets the background suppression level to Normal.
High	Sets the background suppression level to High.
Highest	Sets the background suppression level to Highest.

Fax Defaults

Purpose:

To modify the **Fax** menu defaults. See "Fax" for more details.

Scan Defaults

Purpose:

To modify the **Scan** menu defaults.

Scan Defaults allows you to configure the following items in addition to the items under the **Scan** menu.

Auto Exposure Level

Purpose:

To specify the default background suppression level.

Values:

Normal*	Sets the background suppression level to Normal.
High	Sets the background suppression level to High.
Highest	Sets the background suppression level to Highest.

TIFF File Format

Purpose:

To specify the default TIFF file format.

Values:

TIFF V6	Sets the default TIFF file format to TIFF V6.
TTN2*	Sets the default TIFF file format to TTN2.

Image Compression

Purpose:

To specify the image compression level.

Values:

High	Sets the image compression level to High.
Normal*	Sets the image compression level to Normal.
Low	Sets the image compression level to Low.

Direct Print Defaults (available on the Dell Cloud Multifunction Printer | H815dw only)

USB Direct Print Defaults (available on the Dell Smart Multifunction Printer | S2815dn only)

Purpose:

To modify the defaults for the Direct Print Defaults or USB Direct Print Defaults menu. See "Print PDF/TIFF" for more details.

Tray Management

Use the Tray Settings menu to define the print media loaded in tray1 and the optional 550-sheet feeder.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Tray Settings

To configure tray settings.

MPF

Purpose:

To specify the paper loaded in the MPF.

Values:

Display Tray Prompt		Enter a check to display a popup message that prompts to set Paper Type and Paper Size when paper is loaded in the MPF. The factory default is on (check).
MPF Mode	Use Panel Settings*	Uses the paper size and type specified on the operator panel.
	Use Printer Driver Settings	Use the paper size and type specified on the printer driver.
	Manual	When the print job is started, the printer pauses the job and shows the screen to prompt the user to load the paper of the specified size and type. To continue the job, check that the specified paper is loaded, and tap Continue in the screen on the touch panel.

Size ^{*1}	mm series	A4 (210x297mm) ^{*2} A5 (148x210mm) B5 (182x257mm) Letter (8.5x11") Folio (8.5x13") Legal (8.5x14") Statement (5.5x8.5") Executive (7.3x10.5") Envelope #10 (4.1x9.5") Monarch Env. (3.9x7.5") DL Env. (110x220mm) C5 Env. (162x229mm) Postcard (100x148mm) Custom
	inch series	Letter (8.5x11") ^{*2} Folio (8.5x13") Legal (8.5x14") Statement (5.5x8.5") A4 (210x297mm) A5 (148x210mm) B5 (182x257mm)

Type ^{*1}	Executive (7.3x10.5")
	Envelope #10 (4.1x9.5")
	Monarch Env. (3.9x7.5")
	DL Env. (110x220mm)
	C5 Env. (162x229mm)
	Postcard (100x148mm)
	Custom
	Plain [*]
	Plain Thick
	Covers (106-163g/m ²)
	Covers Thick (164-216g/m ²)
	Rough Surface
	Label
	Envelope
	Recycled
	Japanese Postcard
	Letterhead
	Preprinted
	Prepunched
	Color
^{*1} Available only when MPF Mode is set to Use Panel Settings. ^{*2} Denotes country-specific factory default value.	

Tray1

Purpose:

To specify the paper loaded in tray1.

Values:

Display Tray Prompt			Enter a check to display a popup message that prompts to set Paper Type and Paper Size when paper is loaded in tray1. The factory default is on (check).
Size	mm series	A4 (210x297mm) *1	
		A5 (148x210mm)	
		B5 (182x257mm)	
		Letter (8.5x11")	
		Folio (8.5x13")	
		Legal (8.5x14")	
		Statement (5.5x8.5")	
		Executive (7.3x10.5")	
		Postcard (100x148mm)	
		Custom	
	inch series	Letter (8.5x11") *1	
		Folio (8.5x13")	
		Legal (8.5x14")	
		Statement (5.5x8.5")	
		A4 (210x297mm)	
		A5 (148x210mm)	
		B5 (182x257mm)	

Type	Executive (7.3x10.5")
	Postcard (100x148mm)
	Custom
	Plain
	Plain Thick
	Covers (106-163g/m ²)
	Covers Thick (164-216g/m ²)
	Rough Surface
	Label
	Recycled
	Japanese Postcard
	Letterhead
	Preprinted
	Prepunched
	Color

*1 Denotes country-specific factory default value.

 **NOTE:** For more information on supported paper sizes, see "Supported Paper Sizes."

Tray2

 **NOTE:** Tray2 feature is available only when the optional 550-sheet feeder is installed.

Purpose:

To specify the paper loaded in the optional 550-sheet feeder.

Values:

Display Tray Prompt			Enter a check to display a popup message that prompts to set Paper Type and Paper Size when paper is loaded in the optional 550-sheet feeder. The factory default is on (check).
Size	mm series	A4 (210x297mm)*1	
		A5 (148x210mm)	
		B5 (182x257mm)	
		Letter (8.5x11")	

	Folio (8.5x13")
	Legal (8.5x14")
	Statement (5.5x8.5")
	Executive (7.3x10.5")
	Custom
inch series	Letter (8.5x11") ^{*1}
	Folio (8.5x13")
	Legal (8.5x14")
	Statement (5.5x8.5")
	A4 (210x297mm)
	A5 (148x210mm)
	B5 (182x257mm)
	Executive (7.3x10.5")
	Custom
Type	Plain
	Plain Thick
	Covers (106-163g/m ²)
	Covers Thick (164-216g/m ²)
	Rough Surface
	Label
	Recycled
	Letterhead
	Preprinted
	Prepunched
	Color

Tray Priority

Purpose:

To set the priority order of the paper trays for automatic tray selection. If paper trays loaded with the same paper size and type exists, the paper tray is selected according to this priority order.

Values:

First	MPF ^{*1}	Sets the MPF as the first priority.
	Tray1 [*]	Sets tray1 as the first priority.
	Tray2	Sets the optional 550-sheet feeder as the first priority.
Second	MPF [*]	Sets the MPF as the second priority.
	Tray1 ^{*1}	Sets tray1 as the second priority.
	Tray2	Sets the optional 550-sheet feeder as the second priority.
Third	MPF	Sets the MPF as the third priority.
	Tray1	Sets tray1 as the third priority.
	Tray2 ^{*1}	Sets the optional 550-sheet feeder as the third priority.

^{*1} The factory default when the optional 550-sheet feeder is installed.

Language Settings

Use the Language Settings menu to configure Panel Language, or Keyboard Layout.

Panel Language

Purpose:

To determine the language of the text on the touch panel.

Values:

English [*]
Français
Italiano
Deutsch
Español
Dansk
Nederlands
Norsk
Svenska

Keyboard Layout

Purpose:

To select the keyboard layout on the touch panel.

Values:

QWERTY

AZERTY

QWERTZ

Print

Use the **Print** menu to select and print a job stored by the Private Mailbox, Public Mailbox, Proof Print, Secure Print, and Secure Fax Receive features.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Private Mailbox



NOTE: Private Mailbox feature is available only when **RAM Disk** is set to **On**.

Purpose:

To specify whether and how to print the job stored in the Private Mailbox.

Values:

Select User ID	Enter the password you specified on the printer driver.	
	Select a Job	Selects a job to print.
	Select All	Selects all the documents stored for this User ID.
	Quantity	1*
	Available Range: 1-999	
	Use Driver Settings	Sets the quantity of prints specified on the printer driver.
	Print	Prints the selected job.
	Print and Delete*	Deletes the document after it is printed.
Delete	Deletes the specified document from print memory.	

Public Mailbox



NOTE: Public Mailbox feature is available only when **RAM Disk** is set to **On**.

Purpose:

To specify whether and how to print the job stored in the Public Mailbox.

Values:

Select User ID	Selects a job to print.	
	Select a Job	Selects a job to print.
	Select All	Selects all the documents stored for this User ID.
	Quantity	1*
	Available Range: 1-999	
	Use Driver Settings	Sets the quantity of prints specified on the printer driver.
	Print	Prints the selected job.
	Print and Delete	Deletes the document after it is printed.
Delete	Deletes the specified document from print memory.	

Proof Print

 **NOTE:** Proof Print feature is available only when RAM Disk is set to On.

Purpose:

To specify whether and how to print the job stored in the Proof Print. When the print job is sent from the printer driver on the computer, a single copy is printed for you to check the print result. If you do not have problems with the print result, you can choose to print more copies. This prevents a large number of misprinted copies from being printed at one time.

Values:

Select User ID	Select a Job	Selects a job to print.
	Select All	Selects all the documents stored for this User ID.
	Quantity	1*
		Available Range: 1-999
	Use Driver Settings	Sets the quantity of prints specified on the printer driver.
	Print	Prints the selected job.
	Print and Delete	Deletes the document after it is printed.
	Delete	Deletes the specified document from print memory.

Secure Print

 **NOTE:** Secure Print feature is available only when RAM Disk is set to On.

Purpose:

To print confidential jobs. The printer can hold the job in memory until you arrive at the printer and type the password on the operator panel.

Values:

Select User ID		Enter the password you specified on the printer driver.
	Select a Job	Selects a job to print.
	Select All	Selects all the documents stored for this User ID.
	Print	Prints the selected job.
	Print and Delete*	Deletes the document after it is printed.
	Delete	Deletes the specified document from print memory.

Secure Fax Receive

Purpose:

To print confidential faxes. The printer can hold the job in memory until you arrive at the printer and type the password on the operator panel.

Values:

Enter Password	Enter the password you specified in Secure Receive.
----------------	---

Tile Settings

The **Tile Settings** screen appears when  is tapped under the **Print** menu.

Use **Tile Settings** to create and edit custom tiles for **Print**.

Copy

You can configure a variety of copy features under the **Copy** menu.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Quantity

Purpose:

To specify the number of copies from 1 to 99.

Darken / Lighten

Purpose:

To make the copy darker or lighter than the original.

Values:

Darken 3	Works well with light documents or faint pencil markings.
Darken 2	
Darken 1	
Normal*	Works well with standard typed or printed documents.
Lighten 1	Works well with dark documents.
Lighten 2	
Lighten 3	

Select Tray

Purpose:

To specify the input tray.

Values:

MPF		The paper is fed from the MPF. When Use Printer Driver Settings is set in MPF of Tray Settings , Any is displayed for Size and Type . If you start the copy job with Any as the paper size and type, A4 or Letter is selected as the paper size and plain is selected as the paper type. If you want to specify the size and type of paper in the MPF, select MPF and specify the paper size and type.
Paper Size	mm series	A4 (210x297mm)* ¹
		A5 (148x210mm)
		B5 (182x257mm)

	Letter
	(8.5x11")
	Folio
	(8.5x13")
	Legal
	(8.5x14")
	Statement
	(5.5x8.5")
	Executive
	(7.3x10.5")
	Envelope #10
	(4.1x9.5")
	Monarch Env.
	(3.9x7.5")
	DL Env.
	(110x220mm)
	C5 Env.
	(162x229mm)
	Postcard
	(100x148mm)
inch series	Custom
	Letter
	(8.5x11") *1
	Folio
	(8.5x13")
	Legal
	(8.5x14")
	Statement
	(5.5x8.5")
	A4
	(210x297mm)
	A5
	(148x210mm)
	B5
	(182x257mm)
	Executive
	(7.3x10.5")
	Envelope #10
	(4.1x9.5")
	Monarch Env.
	(3.9x7.5")

Paper Type	DL Env. (110x220mm)
	C5 Env. (162x229mm)
	Postcard (100x148mm)
	Custom
	Plain
	Plain Thick
	Covers (106-163g/m ²)
	Covers Thick (164-216g/m ²)
	Rough Surface
	Labels
	Envelope
	Recycled
	Japanese Postcard
	Letterhead
	Preprinted
	Prepunched
	Color
Tray1 ^{*1}	The paper is fed from tray1.
Tray2 ^{*2}	The paper is fed from the optional 550-sheet feeder.
^{*1} Denotes country-specific factory default value.	
^{*2} This item is available only when the optional 550-sheet feeder is installed.	

2 Sided Copying

Purpose:

To specify whether to make duplex copy and select the binding position.

Values:

1 → 1 Sided [*]	Prints on one side of a sheet of paper.
1 → 2 Sided	Prints one sided originals on both sides of a sheet of paper.
	Long Edge Binding [*] Prints on both sides of a sheet of paper to be bound by long edge.
	Short Edge Binding Prints on both sides of a sheet of paper to be bound by short edge.
2 → 1 Sided	Prints two sided originals on one side of a sheet of paper.
	Long Edge Binding [*] Scans both sides of a document bound by long edge.
	Short Edge Binding Scans both sides of a document bound by short edge.
2 → 2 Sided	Prints two sided originals on both sides of a sheet of paper.
	Long Edge Binding [*] Scans both sides of a document bound by long edge.
	Short Edge Binding Scans both sides of a document bound by short edge.

Sharpness

Purpose:

To adjust the sharpness to make the copy sharper or softer than the original.

Values:

Sharpen	Makes the copy sharper than the original.
Normal*	Does not make the copy sharper or softer than the original.
Soften	Makes the copy softer than the original.

Reduce/Enlarge

Purpose:

To reduce or enlarge the size of a copied image.

Values:

Custom ratio	100 [*]	Sets a custom ratio in increments of 1 percent.
	25-400 %	
mm series	100% [*]	
	50%	
	70%	
	A4→A5	
	81%	
	B5→A5	
	122%	
	A5→B5	
	141%	
	A5→A4	
inch series	200%	
	100% [*]	
	50%	
	64%	
	Ledger→Letter	
	78%	
	Legal→Letter	
	129%	
	Statement→Letter	
	154%	
Statement→Legal		
	200%	

Original Size

Purpose:

To specify the default document size.

Values:

mm series	Auto ^{*1}
	A4 (210x297mm)
	A5 (148x210mm)
	B5 (182x257mm)
	Letter (8.5x11")
	Folio (8.5x13")
	Legal (8.5x14")
	Statement (5.5x8.5")
inch series	Executive (7.3x10.5")
	Auto ^{*1}
	Letter (8.5x11")
	Folio (8.5x13")
	Legal (8.5x14")
	Statement (5.5x8.5")
	A4 (210x297mm)
	A5 (148x210mm)
	B5 (182x257mm)
	Executive (7.3x10.5")

^{*1} Denotes country-specific factory default values.



NOTE: When **Auto** is selected, the printer assumes that the document size is the size of the print media loaded in tray1 or the MPF.

Original Type

Purpose:

To improve the image quality by selecting the type of the original document.

Values:

Photo & Text [*]	Used for documents with both text and photos.
Text	Used for documents with text.
Photo	Used for documents with photos.

Collation

Purpose:

To sort the copy job. For example, if you make two copies of three page documents, one complete set of three page documents is printed one by one.

Values:

Auto [*]	Automatically sorts a copy job only when you use the DADF.
Collated	Sorts a copy job.
Uncollated	Does not sort a copy job.

2-Up

Purpose:

To print two original pages to fit onto one sheet of paper.

Values:

Off*	Does not perform 2-up printing.
Auto	Automatically reduces the original pages to fit onto one sheet of paper.
Manual	Prints the original pages onto the one sheet of paper in the size specified in Reduce/Enlarge.

Margin

Purpose:

To specify the top, bottom, right, left, and middle margins of the copy.

Values:

Top/Bottom	0.2 inch* (4 mm*) Available Range: 0.0–2.0 inches (0–50 mm)	Sets the value in increments of 0.1 inch (1 mm).
Left/Right	0.2 inch* (4 mm*) Available Range: 0.0–2.0 inches (0–50 mm)	Sets the value in increments of 0.1 inch (1 mm).
Middle	0.0 inches* (0 mm*) Available Range: 0.0–2.0 inches (0–50 mm)	Sets the value in increments of 0.1 inch (1 mm).

Auto Exposure

Purpose:

To suppress the background of the original to enhance text on the copy.

Values:

Off	Does not suppress the background.
On*	Suppresses the background to enhance text.

Save Settings

The Save Settings screen appears when  is tapped under the Copy menu.

Use Save Settings to save a variety of copy features. And also use to create and edit custom tiles for Copy.

ID Copy

You can configure a variety of ID copy features under the ID Copy menu.

Values:

Quantity	For details about each menu, see "Copy."
Darken / Lighten	
Select Tray	
Sharpness	
Auto Exposure	

Save Settings

The **Save Settings** screen appears when  is tapped under the **ID Copy** menu.

Use **Save Settings** to save a variety of ID Copy features. And also use to create and edit custom tiles for ID Copy.

Scan

As a default setting, the printer provides the following scan feature tiles on the **Home** screen: Scan to Email, Scan to Network Folder, Scan to USB, Scan to WSD, and Scan to PC.

Scan to Email

Purpose:

To use the e-mail to send the scanned image. See "Scan Settings" for more details about the various scan options you can set for the scan.

Values:

Enter Recipient's Address		Enters the e-mail address of the recipient using the keyboard.
Address Book	Individuals	Selects an e-mail address from the local address book.
	Groups	Selects an e-mail group from the local address book.
	Network Address Book	Searches an e-mail address from the server address book.
Sender ^{*1}	Keyboard	Enters the e-mail address of the sender using the keyboard.
	Address Book	Selects an e-mail address of the sender from the local address book.
	Network Address Book	Searches an e-mail address of the sender from the server address book.

^{*1} The sender's e-mail address cannot be edited when the remote authentication is used as the user authentication method on the Dell Smart Multifunction Printer | S2815dn.

Scan to Network Folder

Purpose:

To store the scanned image on a network server or a computer. See "Scan Settings" for more details about the various scan settings you can set for the scan.

Values:

Address Book	Selects a FTP address or Server Message Block (SMB) protocol address from the local address book.
--------------	---

Scan to USB

Purpose:

To save the scanned image to a USB memory attached to the printer. See "Scan Settings" for more details about the various scan settings you can set for the scan.

Values:

Folder Name	Selects which folder the scanned image is saved to.
-------------	---

Scan to WSD

Purpose:

To save scanned data on a computer using Web Services on Devices (WSD).



NOTE: Scan to WSD is available when the OS of the client computer is Microsoft® Windows Vista® SP2 (or later), Windows® 7, Windows® 8, and Windows® 8.1.

Values:

<i>Computer Name</i>	Selects which computer the scanned image is saved to. Up to 20 computers will be listed.
<i>Scan</i>	Sends the scanned image to the computer according to the chosen event. Which application each event is associated with depends on the setting on the computer.
<i>ScanToPrint</i>	
<i>ScanToEmail</i>	
<i>ScanToFax</i>	
<i>ScanToOCR</i>	

Scan to PC

Purpose:

To save scanned data on a computer. The **Scan to PC** feature allows you to import scanned data from the printer to a computer connected via a USB cable. The computer must have **ScanButton Manager** installed to receive the data. See "Scan Settings" for more details about the various scan settings you can set for the scan.

Scan Settings

The **Scan Settings** screen appears when the  is tapped on the **Scan to Email**, **Scan to Network Folder**, or **Scan to USB** screen.

Use **Scan Settings** to configure a variety of scan features.



NOTE: Values marked by an asterisk (*) are the factory default menu settings.

Output Color

Purpose:

To select color or black and white scanning.

Values:

<i>Color*</i>	Scans in color mode. Works well with texts and photos.
<i>Black & White</i>	Scans in black and white mode. Works well with texts.
<i>Gray Scale</i>	Scans in grayscale mode. Works well with texts and photos.

Resolution

Purpose:

To specify the resolution of the scanned image.

Values:

<i>200 dpi*</i>
<i>300 dpi</i>
<i>400 dpi</i>

600 dpi

File Format

Purpose:

To specify the file format to save the scanned image.

Values:

PDF*

Multi-Page TIFF

TIFF (1 File per Page)

JPEG (1 File per Page)

2 Sided Scanning

Purpose:

To specify whether to scan both sides of a document.

Values:

1 Sided*		Scans one side of a document.
2 Sided	Long Edge Binding*	Scans both sides of a document bound by the long edge.
	Short Edge Binding	Scans both sides of a document bound by the short edge.

Darken / Lighten

Purpose:

To adjust the density to make the scanned image darker or lighter than the original.

Values:

Darken 3	Works well with light documents or faint pencil markings.
Darken 2	
Darken 1	
Normal*	Works well with standard typed or printed documents.
Lighten 1	Works well with dark documents.
Lighten 2	
Lighten 3	

Contrast

Purpose:

To adjust the amount of colors to make the contrast of colors darker or lighter than the original.

Values:

High	Adjusts the amount of colors to make the contrast of colors darker than the original.
Medium*	Does not adjust the amount of colors to make the contrast of colors darker or lighter than the original.
Low	Adjusts the amount of colors to make the contrast of colors lighter than the original.

Sharpness

Purpose:

To adjust the sharpness to make the scanned image sharper or softer than the original.

Values:

Sharpen	Makes the scanned image sharper than the original.
Normal*	Does not make the scanned image sharper or softer than the original.
Soften	Makes the scanned image softer than the original.

Auto Exposure

Purpose:

To suppress the background of the original to enhance text on the copy.

Values:

Off	Does not suppress the background.
On*	Suppresses the background to enhance text.

Original Size

Purpose:

To specify the default paper size.

Values:

mm series

A4 (210x297mm) *1
A5 (148x210mm)
B5 (182x257mm)
Letter (8.5x11")
Folio (8.5x13")
Legal (8.5x14")
Statement (5.5x8.5")
Executive (7.3x10.5")

*1 Denotes country-specific factory default values.

inch series

Letter (8.5x11") *1
Folio (8.5x13")
Legal (8.5x14")
Statement (5.5x8.5")
A4 (210x297mm)
A5 (148x210mm)
B5 (182x257mm)
Executive (7.3x10.5")

*1 Denotes country-specific factory default values.

Margin

Purpose:

To specify the top, bottom, right, left, and middle margins of the scanned image.

Values:

Top/Bottom	0.1 inch [*] (2 mm [*])	Sets the value in increments of 0.1 inch (1 mm).
	Available Range: 0.0–2.0 inches (0–50 mm)	
Left/Right	0.1 inch [*] (2 mm [*])	Sets the value in increments of 0.1 inch (1 mm).
	Available Range: 0.0–2.0 inches (0–50 mm)	
Middle	0.0 inches [*] (0 mm [*])	Sets the value in increments of 0.1 inch (1 mm).
	Available Range: 0.0–2.0 inches (0–50 mm)	

Create Folder



NOTE: Create Folder feature is available only for Scan to USB or Scan to Network Folder.

Purpose:

To specify whether to create a folder when saving scanned images.

Values:

Off	Does not create a folder when saving a scanned image.
On [*]	Creates a folder when saving a scanned image.

File Naming Mode

Purpose:

To specify the detailed setting of File Naming Mode.

Values:

Auto [*]	Sets the default file name.
Add Prefix	Adds texts in front of the file name.
	Prefix/Suffix String Specifies the texts that are added when Add Prefix is selected.
Add Suffix	Adds texts after the file name.
	Prefix/Suffix String Specifies the texts that are added when Add Suffix is selected.

Save Settings

The Save Settings screen appears when  is tapped on the Scan Settings screen of the Scan to Email, Scan to Network Folder, or Scan to USB feature, and on the Scan to PC screen.

Use Save Settings to save a variety of scan features. And also use to create and edit custom tiles for Scan.

Tile Settings

The Tile Settings screen appears when  is tapped on the Scan to WSD screen.

Use Tile Settings to edit the Scan to WSD tile.

Fax

Use the Fax menus to configure a variety of fax features.

 **NOTE:** The Fax function cannot be used unless you set up a country code under Country. If Country is not set up, a message Set the Country Code appears on the display.

 **NOTE:** Values marked by an asterisk (*) are the factory default menu settings.

Values:

Enter Number		Enters the fax number using the keyboard.
Speed Dial		Enters the speed dial number stored in the printer.
Phone Book	Individuals	Selects a fax number from the local address book.
	Groups	Selects a group dial number from the local address book.
	Network Phone Book	Searches a fax number from the server address book.
On Hook	Send*	Sends faxes manually.
	Receive	Receives faxes manually.
	Polling	Manually retrieves information from a remote machine.

Fax Settings

The Fax Settings screen appears when  is tapped on the Fax screen.

Use Fax Settings to configure a variety of fax features.

Darken / Lighten

Purpose:

To adjust the density to make the copy darker or lighter than the original.

Values:

Darken 3	Works well with light documents or faint pencil markings.
Darken 2	
Darken 1	
Normal*	Works well with standard typed or printed documents.
Lighten 1	Works well with dark documents.
Lighten 2	
Lighten 3	

2 Sided Scanning

Purpose:

To specify whether to scan both sides of a document.

Values:

1 Sided*	Scans one side of a document.	
2 Sided	Long Edge Binding*	Scans both sides of a document bound by the long edge.
	Short Edge Binding	Scans both sides of a document bound by the short edge.

Polling Receive

Purpose:

To receive faxes from the remote fax machine when you want to receive it.

Values:

Off*	Does not receive faxes using Polling Receive.
On	Receives faxes using Polling Receive.

Resolution

Purpose:

To specify the scan resolution to improve the output quality.

Values:

Standard*	Suitable for documents with normal sized characters.
Fine	Suitable for documents containing small characters or thin lines or documents printed using a dot-matrix printer.
Super Fine	Suitable for documents containing extremely fine detail. The Super Fine mode is enabled only if the remote machine also supports the Super Fine mode. See the notes below.
Photo	Suitable for documents containing photographic images.



NOTE: Faxes scanned in the Super Fine mode transmit at the highest resolution supported by the receiving device.

Fax Cover Page

Purpose:

To set whether to attach a cover page to faxes.

Values:

Off*	Does not attach a cover page to faxes.
On	Attaches a cover page to faxes.

Delayed Send

Purpose:

To send a fax at a later time.

Values:

Off*	Does not send a fax at a later time.
On	Sets the fax transmission start time when sending a fax at a specified time.



NOTE: A maximum of 19 delayed fax jobs can be stored.

Save Settings

The Save Settings screen appears when  icon is tapped on the Fax Settings screen.

Use Save Settings to save a variety of fax features. And also use to create and edit custom tiles for Fax.



NOTE: Up to 30 addresses can be stored on the printer. If you have the addresses of more than 31, you cannot save settings of fax features. In that case, please reduce to 30.

Print PDF/TIFF

 **NOTE:** Print PDF/TIFF function is available only when a USB memory is inserted in the front USB port.

Purpose:

To specify the document stored in the root, file, or folder in a USB memory. See "Print Settings" for more details about the various print settings you can set for the print.

Print JPEG

 **NOTE:** Print JPEG function is available only when a USB memory is inserted in the front USB port.

Purpose:

To specify the photos stored in the root, file, or folder in a USB memory. See "Print Settings" for more details about the various print settings you can set for the print.

Print Settings

The **Print Settings** screen appears when  is tapped on the **Print PDF/TIFF** or **Print JPEG** screen.
Use **Print Settings** to configure a variety of print features.

Quantity

Purpose:

To specify the number of copies from 1 to 99.

Select Tray

Purpose:

To specify the input tray.

Values:

MPF		The paper is fed from the MPF. When Use Driver Settings for Print Job is set in MPF of Tray Settings, Any is displayed for Size and Type. If you start the print job with Any as the paper size and type, A4 or Letter is selected as the paper size and plain is selected as the paper type. If you want to specify the size and type of paper in the MPF, select MPF and specify the paper size and type.
Size	mm series	A4 (210x297mm) ^{*1}
		A5 (148x210mm)
		B5 (182x257mm)
		Letter (8.5x11")
		Folio (8.5x13")

		Legal (8.5x14")
		Statement (5.5x8.5")
inch series		Letter (8.5x11") ^{*1}
		Folio (8.5x13")
		Legal (8.5x14")
		Statement (5.5x8.5")
		A4 (210x297mm)
		A5 (148x210mm)
		B5 (182x257mm)
		Plain
		Plain Thick
		Covers (106-163g/m ²)
Type		Covers Thick (164-216g/m ²)
		Rough Surface
		Labels
		Envelope
		Recycled
		Japanese Postcard
		Letterhead
		Preprinted
		Prepunched
		Color
Tray1 [*]		The paper is fed from tray1.
Tray2		The paper is fed from the optional 550-sheet feeder.
^{*1} Denotes country-specific factory default value.		

2 Sided Printing

Purpose:

To print on both sides of a sheet of paper.

Values:

1 Sided*		Does not print on both sides of a sheet of paper.
2 Sided	Long Edge Binding*	Prints on both sides of a sheet of paper to be bound by the long edge.
	Short Edge Binding	Prints on both sides of a sheet of paper to be bound by the short edge.

Layout

Purpose:

To specify the output layout.

Values:

1-Up*	Prints one page on one side of a sheet of paper.
2-Up	Prints two pages on one side of a sheet of paper.
4-Up	Prints four pages on one side of a sheet of paper.
Off(No Scaling)	Prints without scaling.

Image Types

Purpose:

To set the print image quality.

Values:

Auto*	Prints PDF/TIFF files in the Text mode and JPEG files in the Photos (Standard Quality) mode.
Photos (Standard Quality)	Prints the photographic images at the standard quality.
Photos (High Quality)	Prints the photographic images at the high quality.
Text	Prints the text document at the standard quality.

Collation

Purpose:

To specify whether to sort the job.

Values:

Collated	Sorts a job.
Uncollated*	Does not sort a job.

PDF Password

Purpose:

To enter the password when you print a PDF file secured with a document open password (password to open the PDF file).

Values:

Enter PDF Password	Enter the document open password to print the secure PDF job.
--------------------	---

Save Settings

The Save Settings screen appears when  is tapped on the **Print Settings** screen.

Use **Save Settings** to save a variety of print features. And also use to create and edit custom tiles for USB Direct Print.

Dell Document Hub



NOTE: The Dell Document Hub feature is available on the Dell Cloud Multifunction Printer | H815dw only.

Use the Dell Document Hub menus to configure a variety of Dell Document Hub features.

Search for Files

Purpose:

To search the files saved in the cloud services, and print them from the printer.

Values:

<i>Text Box</i>	Enters the keywords, such as the words including the file name.
	Sorts the searching results by selecting the sorting order.
	Sets the settings of the Print Settings.
	Displays the selected files. The first three pages of each file are displayed in the small previews.

Browse for Files

Purpose:

To browse and print the files saved in the selected cloud services.

Values:

<i>Text Box</i>	Enters the keywords, such as the words including the file name.
	Searches for the files in the current location or the selected cloud services.
	Sets the settings of the Print Settings.
	Displays the selected files. The first three pages of each file are displayed in the small previews.
	Sorts the searching results by selecting the sorting order.
	Saves the settings of the Print Settings as Favorite.

Scan

Purpose:

To scan the document and save the scanned file in the cloud service.

Values:

File Name	Enters the file name you want to use.
File Format	Selects the file format from the list to save the scanned image.
Tag	Enters the tag you want to use.
	Searches for the location to save the scanned file. You can search for the location across the cloud services.
	Sorts the searching results by selecting the sorting order.
	Sets the settings of the Scan Settings.
	Saves the settings of the Scan Settings as Favorite.

PDF Password

Purpose:

To enter the password when you print a PDF file secured with a document open password (password to open the PDF file).

Values:

Enter PDF Password	Enters the document open password to print the secure PDF job.
--------------------	--

File Name Option

Purpose:

To specify the way to name the scanned document.

Values:

Off	Adds no text in front of the file name or after the file name.
Add Prefix	Adds texts in front of the file name.
Prefix/Suffix String	Specifies the texts that are added when Add Prefix is selected.
Add Suffix	Adds texts after the file name.
Prefix/Suffix String	Specifies the texts that are added when Add Suffix is selected.

For more information on other settings, see "Scan Settings."

Smart OCR Scan

Purpose:

To scan the document using OCR and save it in the cloud service.

Values:

File Name	Enters the file name you want to use.
File Format	Selects the file format from the list to save the scanned image.

Tag	Enters the tag you want to use.
	Searches for the location to save the scanned file. You can search for the location across the cloud services.
	Sorts the searching results by selecting the sorting order.
	Sets the settings of the Scan Settings.
	Saves the settings of the Scan Settings as Favorite.

File Format

Purpose:

To specify the file format to save the scanned image.

Values:

PDF(Searchable)
RTF
DOC
DOCX
XLS
XLSX
PPTX

OCR Language

Purpose:

To specify the language for the OCR.

Values:

Auto
English
Français
Italiano
Deutsch
Español
Dansk
Nederlands
Norsk
Svenska

PDF Password

Purpose:

To enter the password when you print a PDF file secured with a document open password (password to open the PDF file).

Values:

Enter PDF Password	Enters the document open password to print the secure PDF job.
--------------------	--

Remove Blank Page

Purpose:

To specify whether to remove the blank pages.

Values:

Off [*]	Disables the Remove Blank Page feature.
On	Enables the Remove Blank Page feature.

File Name Option

Purpose:

To specify the way to name the scanned document.

Values:

Off	Adds no text in front of the file name or after the file name.
Add Prefix	Adds texts in front of the file name.
	Prefix/Suffix String Specifies the texts that are added when Add Prefix is selected.
Add Suffix	Adds texts after the file name.
	Prefix/Suffix String Specifies the texts that are added when Add Suffix is selected.

For more information on other settings, see "Scan Settings."

E-mail Me

Purpose:

To scan the document and send to you as an attached file of an e-mail.

Values:

File Format	Selects the file format from the list to save the scanned image.
Subject	Enters the subject you want to use.
	Sets the settings of the Scan Settings.
	Saves the settings of the Scan Settings as Favorite.

File Format

Purpose:

To specify the file format to save the scanned image.

Values:

PDF
PDF(Searchable)
RTF
DOC
DOCX

XLS
XLSX
PPTX
Multi-Page TIFF
TIFF
JPEG

OCR Language

Purpose:

To specify the language for the OCR.

Values:

Auto
English
Français
Italiano
Deutsch
Español
Dansk
Nederlands
Norsk
Svenska

PDF Password

Purpose:

To enter the password when you print a PDF file secured with a document open password (password to open the PDF file).

Values:

Enter PDF Password	Enter the document open password to print the secure PDF job.
--------------------	---

Remove Blank Page

Purpose:

To specify whether to remove the blank pages.

Values:

Off	Disables the Remove Blank Page feature.
On	Enables the Remove Blank Page feature.

For more information on other settings, see "Scan Settings."

Business Card Reader

Purpose:

To scan the business card and send to you as an attached file (vCard format) of an e-mail.

Values:

Subject	Enters the subject you want to use.
	Sets the settings of the Scan Settings.

Add Apps

Use the Add Apps menu to add a variety of tiles on the **Home** screen.

Panel Lock

This feature prevents unauthorized personnel from changing the settings made by the administrator. For regular printing, items can be selected from the menu and printer settings remain unchanged. For regular printing, items can be configured using the printer driver.



NOTE: Disabling the operator panel menus does not prevent access to the Stored Print and Tray Settings menus.

Enabling the Panel Lock

- 1 Press the  (**Information**) button.
- 2 Tap the **Tools** tab, and then tap **Admin Settings**.
- 3 Tap  until **Secure Settings** appears, and then tap **Secure Settings**.
- 4 Tap **Panel Lock**.
- 5 Tap **Panel Lock Control**.
- 6 Tap **Enable**, and then tap **OK**.
- 7 Enter the new password, and then tap **OK**.



CAUTION: Be sure to remember the password. The procedure described below allows you to reset the password, but the settings for **Address Book** and **Phone Book** are cleared.

- Turn off the printer. Then, while holding the  (**Information**) button, turn on the printer. Perform steps 7 and 8.
- 8 Re-enter the password to confirm the password that you entered, and then tap **OK**.

The password has been changed.

To change the password while **Panel Lock** is **Enable**, perform steps 1 to 4 above, and then tap **Change Password**. Perform steps 7 and 8 above to change the password.

Disabling the Panel Lock

- 1 Press the  (**Information**) button.
- 2 Tap the **Tools** tab, and then tap **Admin Settings**.
- 3 Tap  until **Secure Settings** appears, and then tap **Secure Settings**.
- 4 Tap **Panel Lock**.
- 5 Tap **Panel Lock Control**.
- 6 Tap **Disable**.

- 7 Enter the current password, and then tap OK.

The setting has been changed.

Resetting Defaults

After executing this function and rebooting the printer, the phone book, address book, or menu parameters are reset to their default values.

The following menu parameters are exceptions and are not reset.

- Network settings
- Panel Lock settings and password
- Functions Control settings (Copy, Scan to E-mail, Fax, Scan to Network Folder, Scan to PC, PC Scan, Scan to USB, USB Direct Print) and passwords
- Secure Receive settings and password
- Login Error settings
- Set Available Time settings
- Secure Job Expiration settings
- USB Port settings
- AccessControl Mode settings
- AccessControl Error Report settings
- Non Registered User settings
- NFC Authentication settings
- Tap to Print settings

When Using the Operator Panel

- 1 Press the  (Information) button.
- 2 Tap the Tools tab, and then tap Admin Settings.
- 3 Tap Maintenance.
- 4 Tap  until Reset Defaults appears, and then tap Reset Defaults.
- 5 Tap the desired setting, and then tap Initialize.

User Fax Section	Resets the phone book data.
User Scan Section	Resets the address book data.
User Account Section	Resets the user registration information.
System Section	Resets the system parameters.

- 6 Tap Yes, Reset.
The printer is restarted automatically.

Print Media Guidelines

Print media refers to paper, labels, envelopes, and coated paper among others. Your printer provides high-quality printing on a variety of print media. Selecting the appropriate print media for your printer helps avoid printing troubles. This section describes selecting and caring for print media.

 **NOTE:** Use only laser print media. Do not use ink jet paper in your printer.

Paper

For the best print quality, use 90 g/m² (24 lb) xerographic, grain long paper. It is recommended that you try a sample first before buying large quantities of any print media.

When loading paper, identify the recommended print side on the paper package, and load the paper accordingly. See "Loading Print Media in Tray1 and the Optional 550-Sheet Feeder" and "Loading Print Media in the MPF" for detailed loading instructions.

Recommended Paper

To ensure the best print quality and feed reliability, use 75 g/m² (20 lb) xerographic paper. Business paper designed for general business use also provides acceptable print quality. Only use paper able to withstand high temperatures without discoloring, bleeding, or releasing hazardous emissions. The laser printing process heats paper to high temperatures. Check with the manufacturer or vendor to determine whether the paper you have chosen is acceptable for laser printers.

It is recommended that you try a sample first before buying large quantities of any print media. When choosing any print media, you should consider the weight, fiber content, and color.

Unacceptable Paper

The following paper types are not recommended for use with the printer:

- Chemically treated paper used to make copies without carbon paper, also known as carbonless paper, carbonless copy paper (CCP), or no carbon required (NCR) paper.
- Preprinted paper with chemicals that may contaminate the printer.
- Preprinted paper that can be affected by the temperature in the fusing unit.
- Preprinted paper that requires a registration (the precise print location on the page) greater than ± 0.09 inches, such as optical character recognition (OCR) forms.

In some cases, you can adjust registration with your software program to successfully print on these forms.


- Coated paper (erasable bond), synthetic paper, and thermal paper.
- Rough-edged, rough or heavily textured surface paper, or curled paper.
- Recycled paper containing more than 25 % post-consumer waste that does not meet DIN 19 309.
- Multiple-part forms or documents.
- Print quality may deteriorate (blank spaces or blotches may appear in the text) when printing on talc or acid paper.

Selecting Paper

Proper paper selection helps prevent jams and ensures trouble-free printing.

To help avoid jams or poor print quality:

- Always use new, undamaged paper.
- Before loading the paper, identify the recommended print side of the paper. This information is usually indicated on the paper package.
- Do not use paper that you have cut or trimmed.
- Do not mix print media sizes, weights, or types in the same source. This may result in a paper jam.
- Do not remove the tray while printing is in progress.
- Ensure that the paper is properly loaded in the tray.
- Flex the paper back and forth, and then fan them. Straighten the edges of the stack on a level surface.

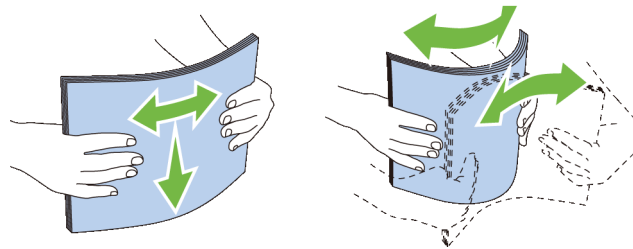

Selecting Pre-Printed Media and Letterheads

When selecting pre-printed and letterhead paper for the printer:

- Use grain long paper for best results.
- Use only forms and letterheads printed using an offset lithographic or engraved printing process.
- Select paper that absorb ink, but does not bleed.
- Avoid paper with rough or heavily textured surfaces.
- Use paper printed with heat-resistant inks designed for use in xerographic copying machines. The ink must withstand temperatures of 225 °C (437 °F) without melting or releasing hazardous emissions.
- Use inks that are not affected by the resin in the toner or the silicone in the fusing unit. Inks that are oxidation-set or oil-based should meet these requirements; latex inks might not. If you are in doubt, contact your paper supplier.

Selecting Pre-Punched Paper

When selecting pre-punched paper for the printer:

- Test paper from several manufacturers before ordering and using large quantities of pre-punched paper.
- Paper should be punched at the paper manufacturer and not drilled into paper already packaged in a ream. Drilled paper can cause jams when multiple sheets feed through the printer. This may result in a paper jam.
- Pre-punched paper can include more paper dust than standard paper. Your printer may require more frequent cleaning and feed reliability may not be as good as standard paper.
- Weight guidelines for pre-punched paper are the same as non-punched paper.

Envelopes

Depending on the envelopes, it is possible to expect variable levels of wrinkling. It is recommended that you try a sample first before buying large quantities of any print media. See "Loading Envelopes in the MPF" for instructions on loading envelopes.

When printing on envelopes:

- Use only high-quality envelopes that are designed for use in laser printers.
- Set the print media source to the MPF. Set the paper type to **Envelope**, and select the correct size of envelope from the printer driver.
- Use envelopes made from 75 g/m² (20 lb bond) paper. You can use up to 105 g/m² (28 lb bond) weight for the envelope feeder as long as the cotton content is 25 % or less. Envelopes with 100 % cotton content must not exceed 90 g/m² (24 lb bond) weight.
- Use only freshly unpackaged, undamaged envelopes.
- Use envelopes that can withstand temperatures of 205 °C (401 °F) without sealing, excessive curling, wrinkling, or releasing hazardous emissions. If you have any doubts about the envelopes you are considering, check with the envelope supplier.
- Adjust the guide to fit the width of the envelopes.
- To load an envelope into the MPF, insert the envelope with the flaps closed or open and the short-edge of the envelope facing into the printer. The print side must be facing up.
- See "Loading Envelopes in the MPF" for instructions on loading envelopes.
- Use one envelope size during a print job.
- Ensure that the humidity is low because high humidity (more than 60 %) and the high printing temperatures may seal the envelopes.
- For best performance, do not use envelopes that:
 - Have excessive curl or twist
 - Are stuck together or damaged in any way
 - Contain windows, holes, perforations, cutouts, or embossing
 - Use metal clasps, string ties, or metal folding bars
 - Have an interlocking design
 - Have postage stamps attached
 - Have any exposed adhesive when the flap is in the sealed or closed position
 - Have nicked edges or bent corners
 - Have rough, cockle, or laid finishes

Labels

Your printer can print on many labels designed only for use with laser printers.

When selecting labels:

- Label adhesives, face sheet (printable stock), and topcoats must be able to withstand temperatures of 205 °C (401 °F) and pressure of 25 pounds per square inch (psi).
- Use labels that can be without sealing, excessive curling, wrinkling, or releasing hazardous emissions.
- Do not use label sheets with a slick backing material.



CAUTION: Before buying large quantities of any print media, it is recommended that you try a sample first.

When printing on labels:

- Use labels that can withstand temperatures of 205 °C (401 °F) without sealing, excessive curling, wrinkling, or releasing hazardous emissions.
- Set the paper type to **Label** in the printer driver.
- Load labels in the MPF. Tray1 and the optional 550-sheet feeder do not support labels.
- Do not load labels together with paper in the MPF.
- Do not print within 1 mm (0.04 inches) of the die-cut.
- Do not print within 1 mm (0.04 inches) of the edge of the label, of the perforations, or between die-cuts of the label.
- Do not print a label through the printer more than once.
- Portrait orientation is preferred, especially when printing bar codes.
- Do not use labels that have exposed adhesive.
- Use full label sheets. Partial sheets may cause labels to peel off during printing, resulting in a jam.
- Do not use label sheets that have adhesive to the edge of the sheet. It is recommended that zone coating of the adhesive is done at least 1 mm (0.04 inches) away from edges. Adhesive material contaminates your printer and could void your warranty.



WARNING: Otherwise a jam occurs in the printer and contaminate your printer and your cartridge with adhesive. As a result, could void your printer and cartridge warranties.

Storing Print Media

For proper print media storage, the following guidelines will help to avoid media feeding problems and uneven print quality.

- Store print media in an environment where the temperature is approximately 21 °C (70 °F) and the relative humidity is 40 %.
- Store cartons of print media on a pallet or shelf, rather than directly on the floor.
- If you store individual packages of print media out of the original carton, ensure that they rest on a flat surface so that the edges do not buckle or curl.
- Do not place anything on top of the print media packages.

Identifying Print Media and Specifications

The following tables show print media information.

Supported Paper Sizes

Paper size	MPF	Tray1	Optional 550-sheet feeder	Duplex unit
A4 (210 x 297 mm)	Y	Y	Y	Y
B5 (182 x 257 mm)	Y	Y	Y	Y
A5 (148 x 210 mm)	Y	Y	Y	Y
Letter (8.5 x 11 in)	Y	Y	Y	Y
Folio (8.5 x 13 in)	Y	Y	Y	Y
Legal (8.5 x 14 in)	Y	Y	Y	Y
Statement (5.5 x 8.5 in)	Y	Y	Y	Y
Executive (7.25 x 10.5 in)	Y	Y	Y	Y
Envelope #10 (4.125 x 9.5 in)	Y	N	N	N
Monarch (3.875 x 7.5 in)	Y	N	N	N
DL (110 x 220mm)	Y	N	N	N
C5 (162 x 229mm)	Y	N	N	N
Postcard JPN	Y	Y	N	N
Custom ^{*1, 2}	Y	Y	Y	Y

^{*1} Custom: width: 76.2 mm (3.0 inches) to 215.9 mm (8.5 inches) for the MPF and tray1; 139.7 mm (5.5 inches) to 215.9 mm (8.5 inches) for the optional 550-sheet feeder
length: 127.0 mm (5.0 inches) to 355.6 mm (14.00 inches) for the MPF and tray1; 210 mm (8.27 inches) to 355.6 mm (14.00 inches) for the optional 550-sheet feeder

^{*2} XML Paper Specification (XPS) driver does not support custom size paper.

Supported Paper Types

Paper type	MPF		Tray1		Optional 550-sheet feeder		Duplex unit	
	Side 1	Side 2	Side 1	Side 2	Side 1	Side 2	Side 1	Side 2
Plain	Y	N	Y	N	Y	N	Y	N
Plain Thick	Y	N	Y	N	Y	N	Y	N
Covers	Y	N	Y	N	Y	N	Y	N
Covers Thick	Y	N	Y	N	Y	N	N	N
Rough surface	Y	N	Y	N	Y	N	N	N
Labels	Y	N	Y	N	Y	N	N	N
Envelope	Y	N	N	N	N	N	N	N
Recycled	Y	N	Y	N	Y	N	Y	N
Japanese Postcard	Y	N	Y	N	N	N	N	N
Letterhead	Y	N	Y	N	Y	N	Y	N
Preprinted	Y	N	Y	N	Y	N	Y	N
Prepunched	Y	N	Y	N	Y	N	Y	N
Color	Y	N	Y	N	Y	N	Y	N

 **NOTE:** For Plain paper, you can set the paper density by selecting the Paper Density (Light or Normal) under Maintenance from the operator panel, **Tool Box**, or **Dell™ Printer Configuration Web Tool**. Once you set the Paper Density settings, the printer uses the settings for Plain paper.

 **NOTE:** Rough Surface paper can only be fed one by one.

Paper Type Specifications

Paper type	Weight (g/m ²)	Remarks
Plain	60–90	-
Plain Thick	80/90–105	-
Covers	106–163	-
Covers Thick	164–216	-
Rough surface	106–163	Inkjet printer paper cannot be used.
Labels	106–163	Inkjet printer paper cannot be used.
Envelope	91–105	-
Recycled	60–105	-
Japanese Postcard	190	Inkjet printer paper cannot be used.
Letterhead	60–90	-
Preprinted	60–90	-
Prepunched	60–90	-
Color	60–90	-

Loading Print Media

Loading print media properly helps prevent jams and ensures trouble-free printing.

Before loading any print media, identify the recommended print side of the print media. This information is usually indicated on the print media package.

 **NOTE:** The images used in this manual are those of the Dell™ Cloud Multifunction Printer | H815dw unless otherwise mentioned.

Capacity

Tray1 can hold:

- 250 sheets of the standard paper.

The optional 550-sheet feeder (tray2) can hold:

- 550 sheets of the standard paper.

The multipurpose feeder (MPF) can hold:

- 50 sheets of the standard paper.

Print Media Dimensions

The maximum dimensions of print media that the MPF and tray1 can handle are:

- Width — 76.2 mm (3.00 inches) to 215.9 mm (8.5 inches)
- Length — 127 mm (5.00 inches) to 355.6 mm (14.00 inches)

The maximum dimensions of print media that the optional 550-sheet feeder can handle are:

- Width — 139.7 mm (5.5 inches) to 215.9 mm (8.5 inches)
- Length — 210 mm (8.27 inches) to 355.6 mm (14.00 inches)

Loading Print Media in Tray1 and the Optional 550-Sheet Feeder

This section describes how to load letterhead. For details about loading print media other than letterhead, see "Loading Paper."



 **NOTE:** To avoid paper jams, do not remove the tray while printing is in progress.

 **NOTE:** Use only laser print media. Do not use ink jet paper in the printer.

Loading Letterhead (Pre-Printed and Pre-Punched Paper)


The pre-printed paper such as letterhead and pre-punched paper must be inserted top edge first with the print side facing up as shown below.

 **NOTE:** Set Letterhead 2-Sided or Letterhead Duplex Mode to Enable and Paper Type to Letterhead, Preprinted, or Prepunched from the operator panel or the printer driver even when you print on a single side of letterhead, pre-printed, or pre-punched paper.

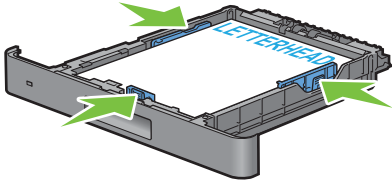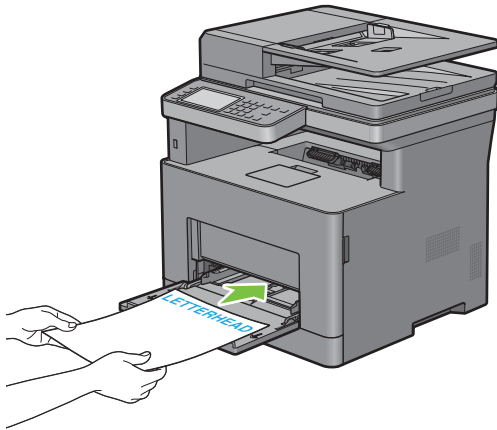
Print media source	Print side	Page orientation
Tray1 and optional 550-sheet feeder	Face up	Letterhead enters the printer first
		
MPF	Face up	Letterhead enters the printer first
		

Loading Print Media in the MPF

- 1 Gently pull open the MPF cover.

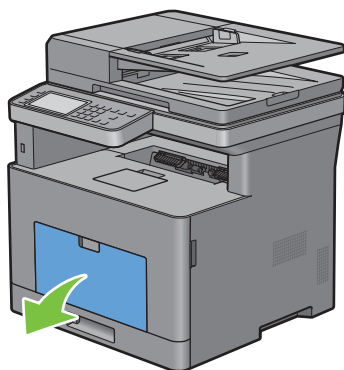


- 2 Slide the width guides to the edge of the tray. The width guides should be fully extended.

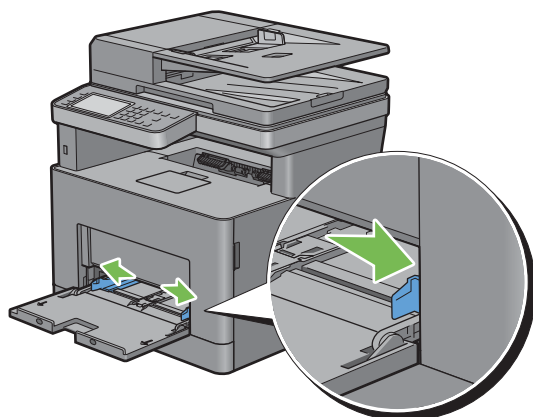


- 3 Insert all media face up and top edge first into the MPF.

 **NOTE:** Do not force the print media into the MPF.

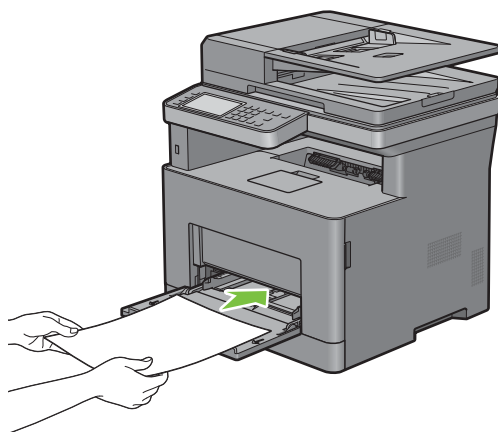

- 4 Slide both width guides until they rest lightly against the edge of the print media stack.

 **NOTE:** Do not force the print media into the MPF.

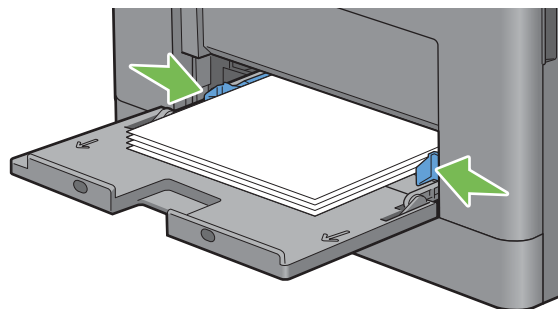


- 5 On the touch panel, tap **Size**.
6 Tap ▼ or ▲ until the desired paper size appears, and then select the size.
7 Tap **Type**.
8 Tap ▼ or ▲ until the desired paper type appears, and then select the type.
9 Tap **OK**.


Loading Small Print Media in the MPF

When loading small print media such as monarch envelope or the user-specified print media whose feed direction length is 191.6 mm or less in the MPF, remove the MPF from the printer.


- 1 Gently pull open the MPF cover.

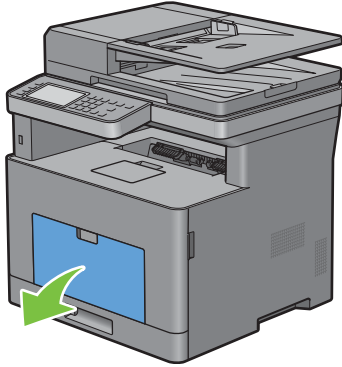


- 2 Grasp both sides of the MPF, and then pull the MPF from the printer.

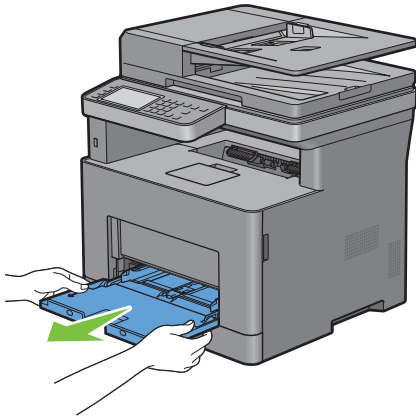


- 3 Slide the width guides to the edge of the tray. The width guides should be fully extended.

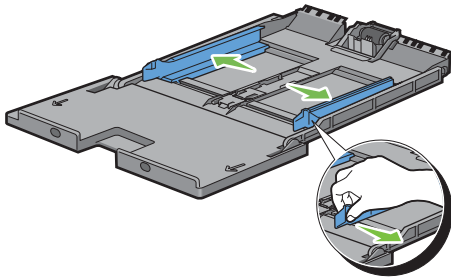


- 4** Pull up the length guide and slide it toward MPF cover until it stops.

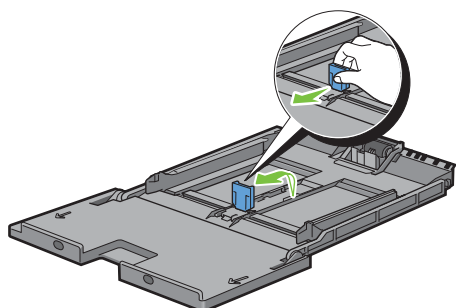


- 5** Load the print media into the MPF with the recommended print side facing up so that the top edge of the print media enters the printer first.

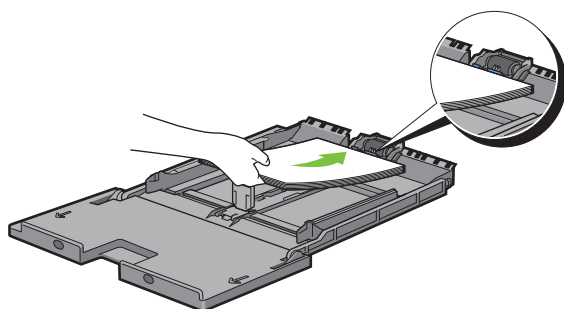

- 6** Align the paper guides against the edges of the print media.

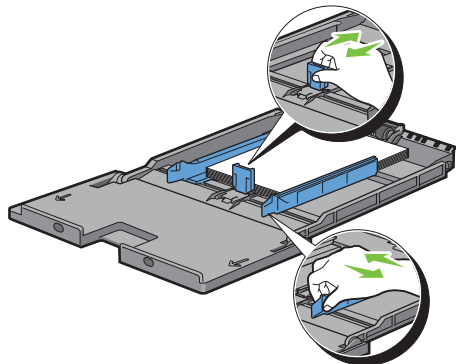

- 7 Insert the MPF into the printer.

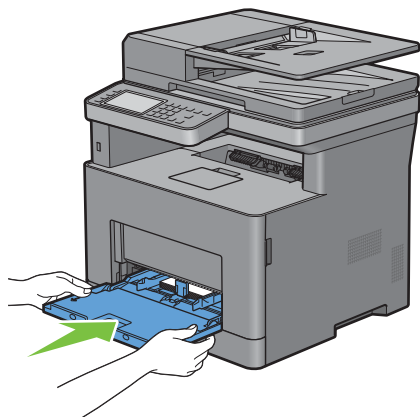

- 8 On the touch panel, tap **Size**.
- 9 Tap ▼ or ▲ until the desired paper size appears, and then select the size.
- 10 Tap **Type**.
- 11 Tap ▼ or ▲ until the desired paper type appears, and then select the type.
- 12 Tap **OK**.

Printing on Envelopes – Envelope Mode


To print on envelopes with better print quality, set the printer to the envelope mode.

 **NOTE:** Print jobs can be done on envelopes even when the printer is not set to the envelope mode. To get the better print results, set the printer to the envelope mode.


 **NOTE:** When the printer is in the envelope mode, print jobs cannot be done while the paper type is set to other than envelopes.

To Set the Printer to the Envelope Mode

- 1 Pull the rear cover handle to open the rear cover.

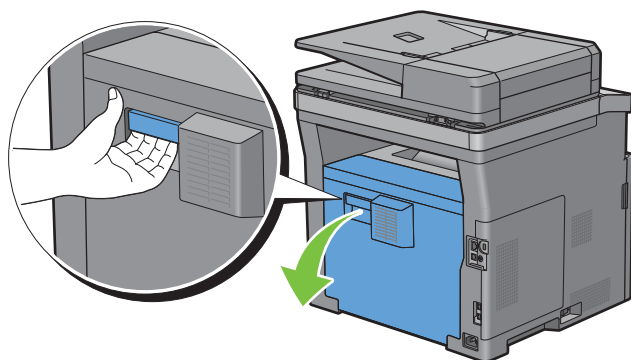


- 2 Lift the levers on both sides of the fusing unit.

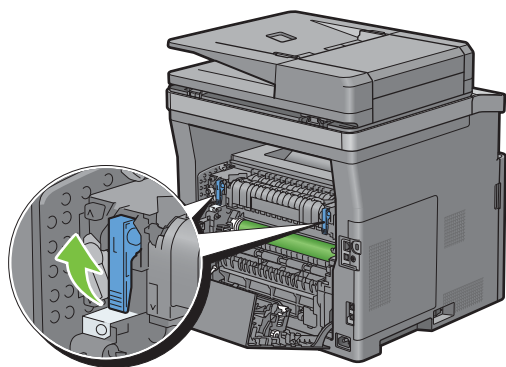


- 3 Slide the envelope switches on both sides of the fusing unit to the  position.


 **WARNING:** The fusing unit is hot. Do not touch it, doing so may cause burns.

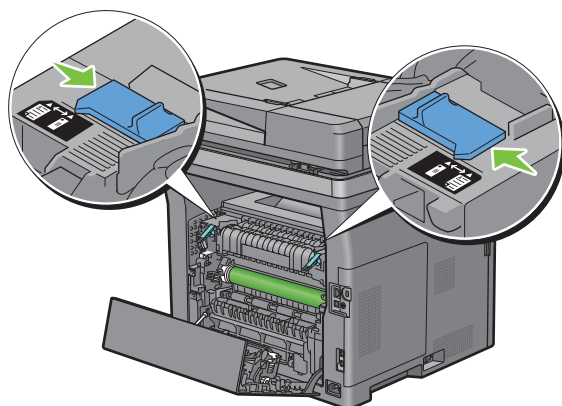

- 4 Press down the levers on both sides of the fusing unit.

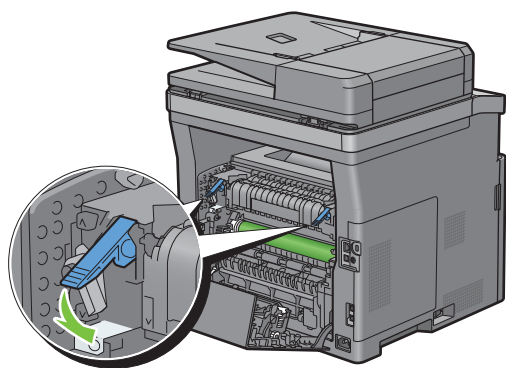


- 5 Close the rear cover.

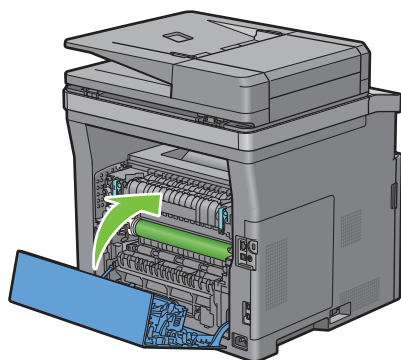


To Cancel the Envelope Mode

- 1 Pull the rear cover handle to open the rear cover.

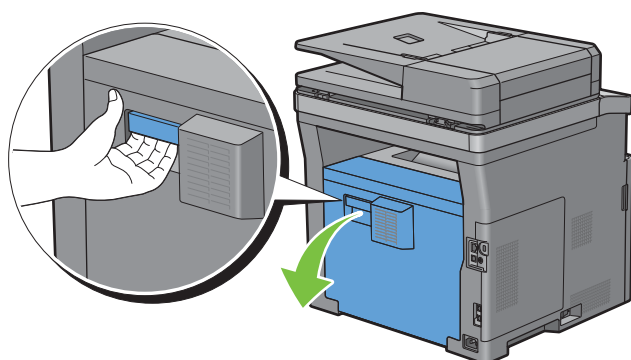


- 2 Lift the levers on both sides of the fusing unit.

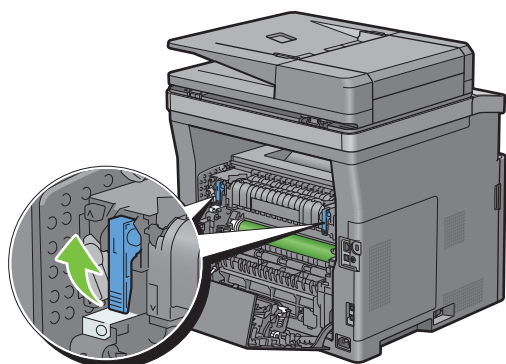


- 3 Slide the envelope switches on the both sides of the fusing unit to the  position.


 **WARNING:** The fusing unit is hot. Do not touch it, doing so may cause burns.

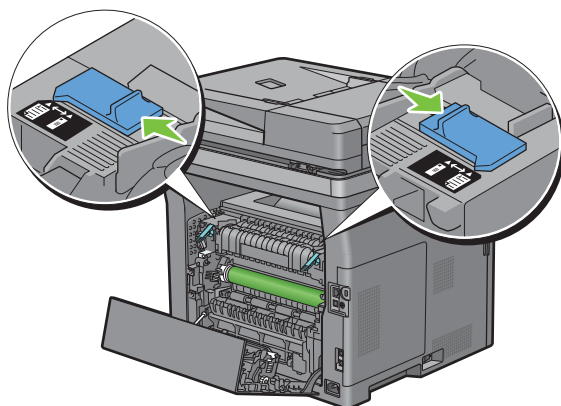

- 4 Press down the levers on both sides of the fusing unit.

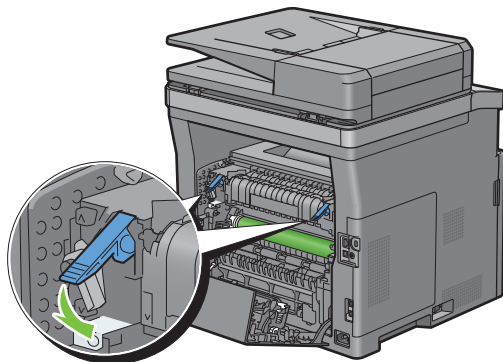

- 5 Close the rear cover.

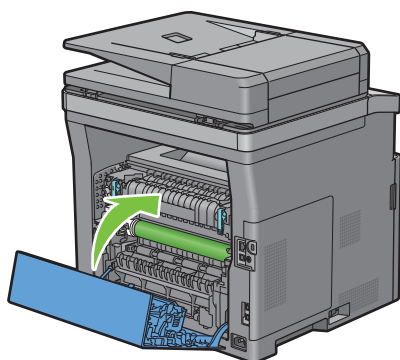

Loading Envelopes in the MPF


Use the following guidelines when loading envelopes in the MPF:



CAUTION: Never use envelopes with windows, coated linings, or self-stick adhesives. These lead to paper jams and can cause damage to the printer.




NOTE: If you do not load envelopes in the MPF right after they have been removed from the packaging, they may bulge. To avoid jams, press firmly across the whole envelopes to flatten them as shown below before loading the envelopes in the MPF.

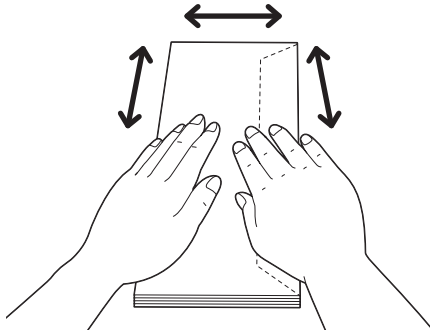

NOTE: The maximum height (quantity) of envelopes that can be loaded in the MPF is approximately 15 mm (0.59 inches) (15 envelopes).


Envelope #10, DL

Load the envelopes in the short edge feed orientation with the flaps closed and the print side up. Ensure that the flaps come at the right when you face towards the printer.

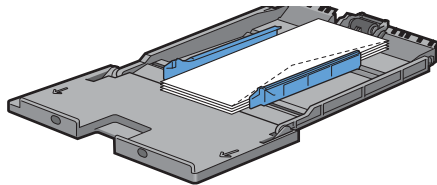

Monarch


You need to pull up and slide the length guide. Load the envelopes in the short edge feed orientation with the flaps closed and the print side up. Ensure that the flaps come at the right when you face towards the printer.

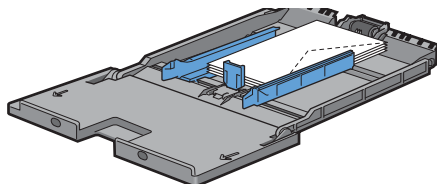

C5


Load the envelopes in the short edge feed orientation with the flaps open or closed and the print side up. Ensure that the flaps come at the bottom with the flaps open or at the top with the flaps closed when you face towards the printer.

When you print with the orientation of the 1, position of the envelopes may be distorted on the output tray. In this case, set the orientation of the 2.

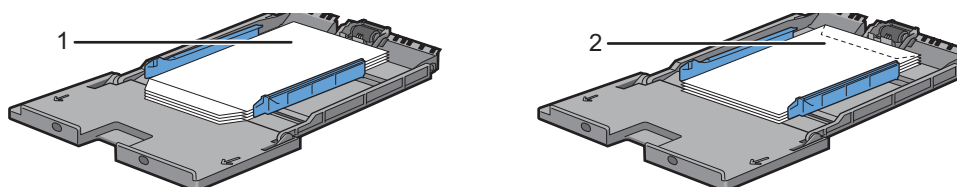

Loading Letterhead in the MPF

When you use the MPF, letterhead and hole punched paper must be inserted top edge first with the print side facing up.

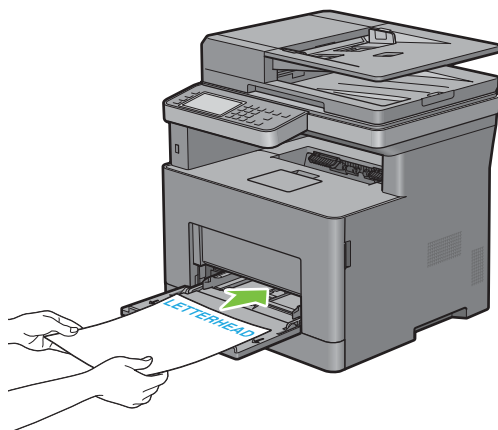

Using the MPF

- Load only one size and type of print media during a single print job.
- To achieve the best possible print quality, use only high-quality print media that is designed for use in laser printer. For more guidelines on print media, see "Print Media Guidelines."
- Do not add or remove print media when there is still print media in the MPF or when the printer is printing from the MPF. This may result in a paper jam.
- Print media should be loaded with the recommended print side up and the top of the print media going into the MPF first.
- Do not place objects on the MPF. Also, avoid pressing down or applying excessive force on it.
- The icons on the MPF show how to load the MPF with paper, and how to turn an envelope for printing.

Linking Trays

The printer automatically links the trays when you load the same size and type of print media in them. The first tray will be utilized until the media runs out, and then the next tray will be used.



NOTE: The print media should be the same size and type in each tray.
The MPF cannot be linked to any of the tray sources.

After loading the selected trays with the same size and type of print media, select the Paper Type setting in the Tray Settings component for each source (tray).

To disable tray linking change the paper type in one of the sources (trays) to a unique value.



NOTE: If different types of print media of the same size are loaded in each tray, the printer will automatically link them if the paper type is not specified in the printer driver properties/preferences.