



Manual for Ground Penetrating Radar model: ER500A

FCC ID: 2AJAHER500A

7-28-2017

FCC Class B Compliance

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

Warning: Changes or modifications to this unit not expressly approved by Easy Radar USA LLC can void your authority to operate this equipment under Federal Communications Commission rules.

Note: This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference when the equipment is operated in a commercial environment or residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the introduction manual, may cause harmful interference to radio communications. However, there is not guarantee that interference will not occur in a particular installation.

Shielded USB cable must be used with this unit to ensure compliance with the Class B FCC limits.

SOFTWARE INSTALLATION:

1. DISCONNECT THE GPR from the PC, AND SWITCH IT OFF (if switched ON and/or connected to the PC)
2. Please, download the software .zip packages
3. Unpack the DRIVER CP210x_VCP_Windows.zip package on your desktop, and the proper installer (for 32 or 64-bit Windows)
4. When finished with the installation of the drivers, plug the GPR's USB into the USB port of the PC
5. Open Device Manager and check in COM Ports Section for a device 'Silicon Labs CP210x USB to UART Bridge (COM?)', where '?' is the Com Port the GPR will use. If, for some reason, the number of the COM port is above 10 or higher, open COM port's properties, Port Settings Tab, Advanced, and change COM Port Number to a number below 10. Also, in rare cases (usually when there are Bluetooth units being used, or have been used on this PC), COM ports below 10 may be stated as 'in use'. Since we are not going to use a Bluetooth device and the GPR simultaneously, we intentionally change the COM port number of the Silicon Labs CP210x USB to UART Bridge to a number below 10. After that, we unplug the USB cable from the PC and plug it back in. This time, the COM port of Silicon Labs CP210x USB to UART Bridge should be changed to the desired COM Port Number (below 10).
6. Unpack the Main GPR Program's archive (EASYRAD_098_ENG_20130901.ZIP) on (for example) your Desktop, and start the GPR Program.

7. Upon start, the Program may show you some warnings about the COM Port it needs to use, but after you close these warnings messages, you will have to change the COM Port Number that your GPR Device will use.

8. Initially, the GPR Program starts in GPR Mode (I.e., it will use the GPR right away), but you may also switch to Demo Mode and train yourself working with the Program, using the Data File (EASYGPR.SGY) provided with the Program's package.

9. When you decide to use the GPR (GPR Mode), upon start working, you do the following steps:

Each time you want to work with the GPR, you do the steps from 9.1 to 9.8 in this very order.

9.1) Switch the GPR OFF

9.2) Plug the USB Cable in USB Port of the PC (you should hear a sound once the OS recognizes the GPR).

9.3) Start the GPR Program

9.4) Check (and change if needed) the COM Port you are about to use with the GPR

9.5) Switch the GPR ON

9.6) Click on Start (or press 'Z' on keyboard)

..... Work with the GPR

9.7) Switch the GPR OFF

9.8) Leave (exit) the GPR Program (Upon exit, the GPR Program will save all its settings, and next time you start the GPR Program, it will use them - COM Port, Gain Settings, Color Palette, etc.)


9.9) (Eventually) Shut the computer down (Not necessary, if you are about to do more with it).

CHAPTER 1



Installing USB-to-COM Port Serial Bridge

This chapter demonstrates how to install the GPR software drivers on your computer operating system. Although it depicts how you should do it on Windows 7 OS, it applies to Windows XP and Windows 8 as well.


1. When you have the drivers package downloaded on your computer, open the containing folder and do the following steps in order to install the drivers.

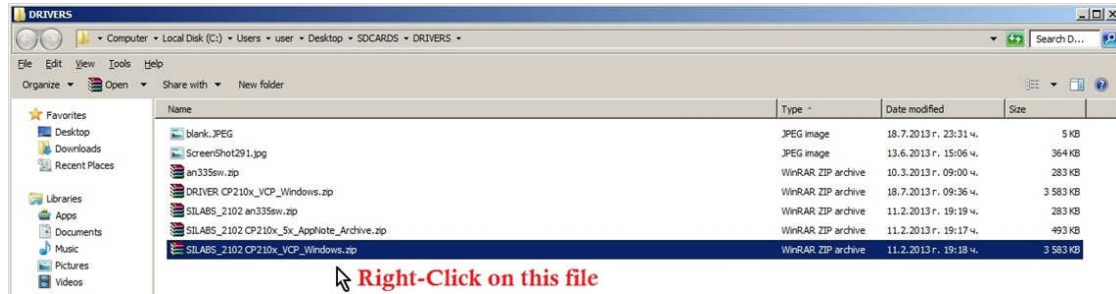


2. Extract the archive

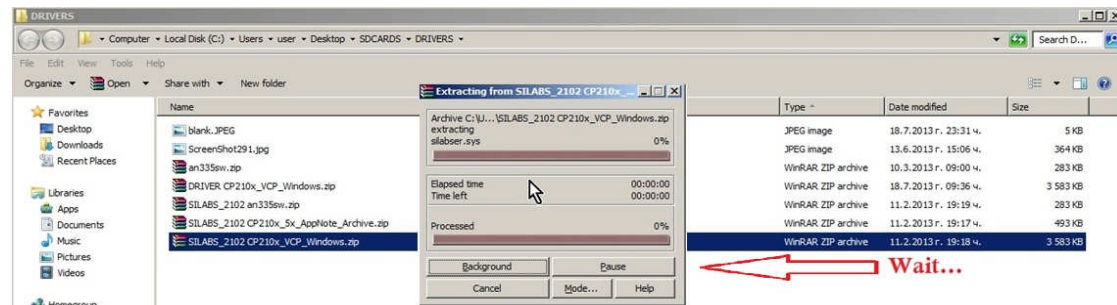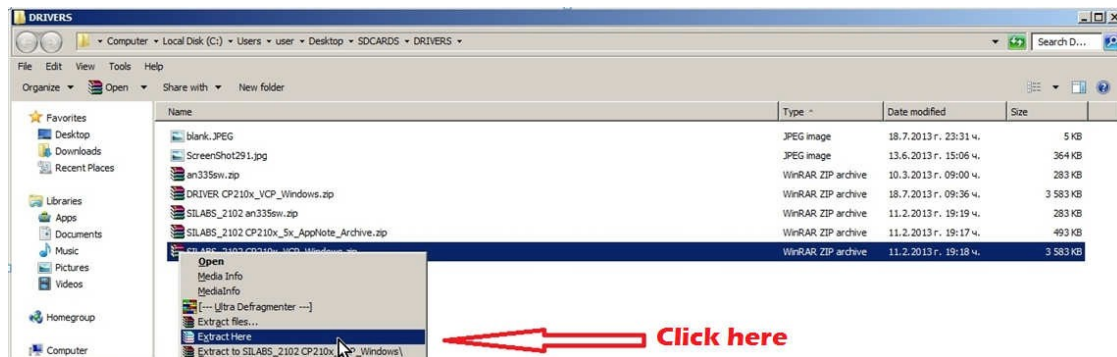




3. Open the subfolder, that contains the drivers

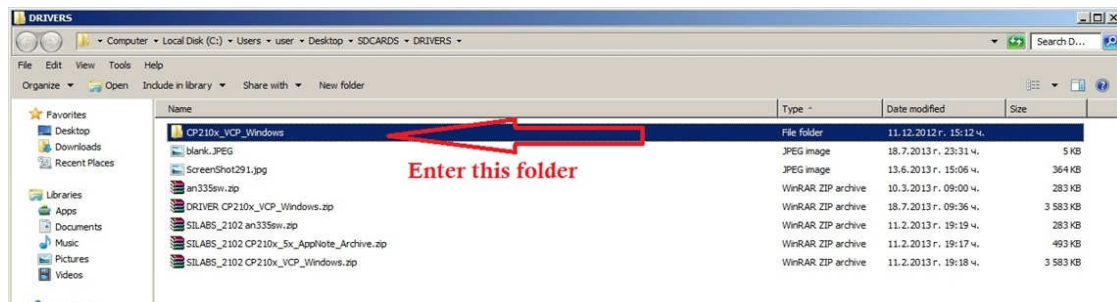


4. Start the installer, depending on your Operating System: 32 or 64-bit

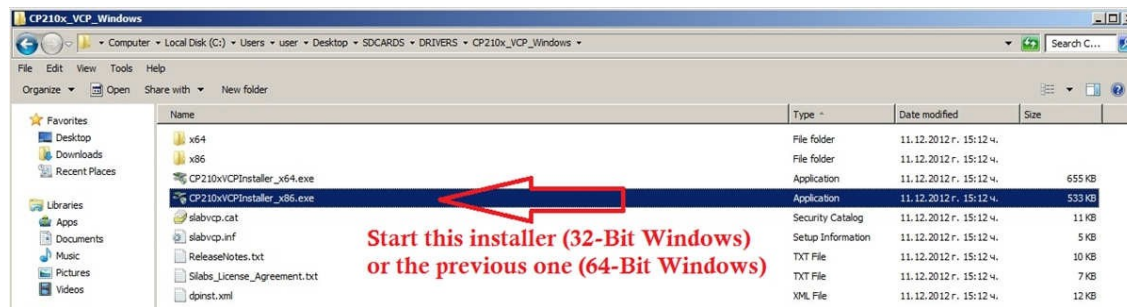


5. Follow the Installer's instructions

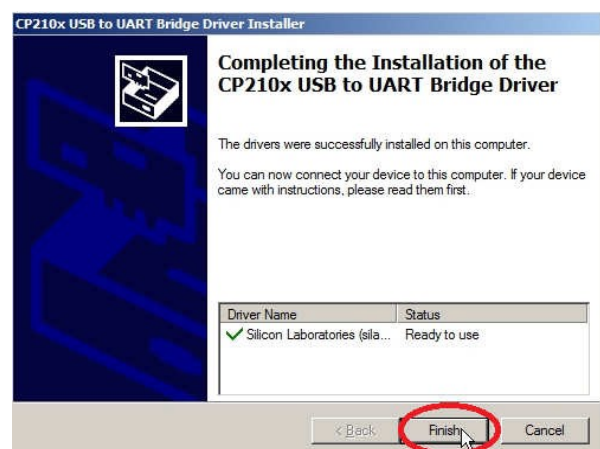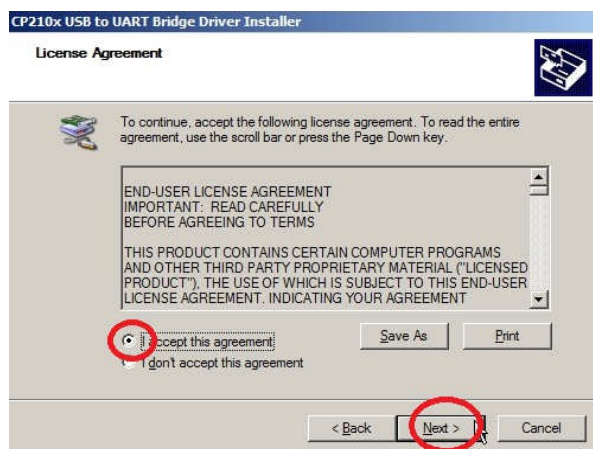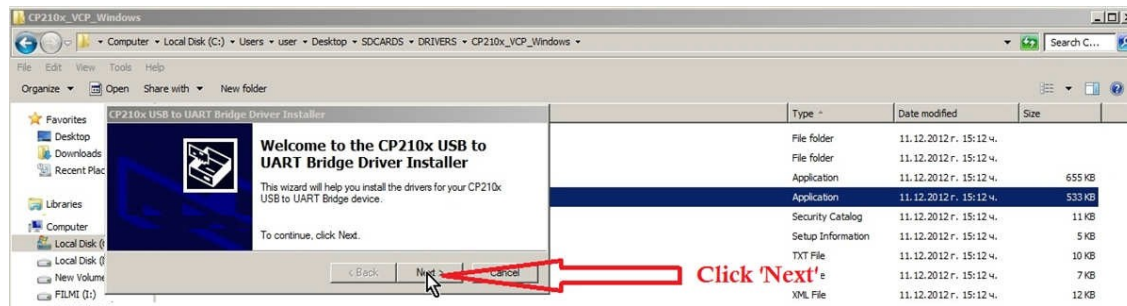

6. When Installer finished, go to Desktop and Right-Click My Computer and Click to select Manage.

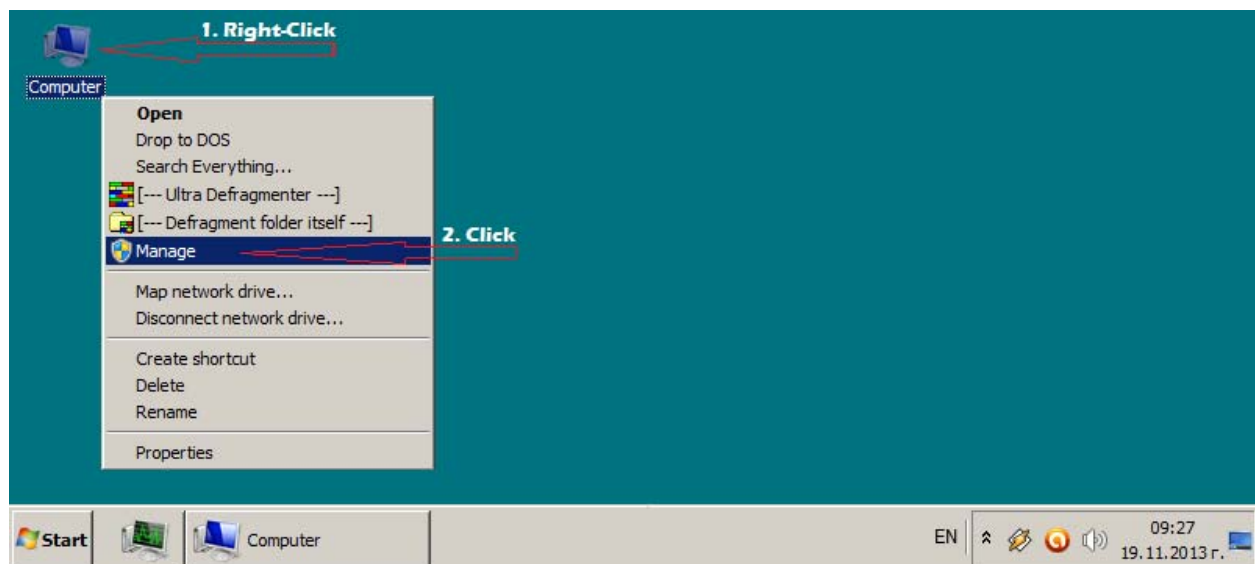

7. If GPR COM Port number is above 10, you need to change it to a number below 10. If its number is below 10, leave it as it is.

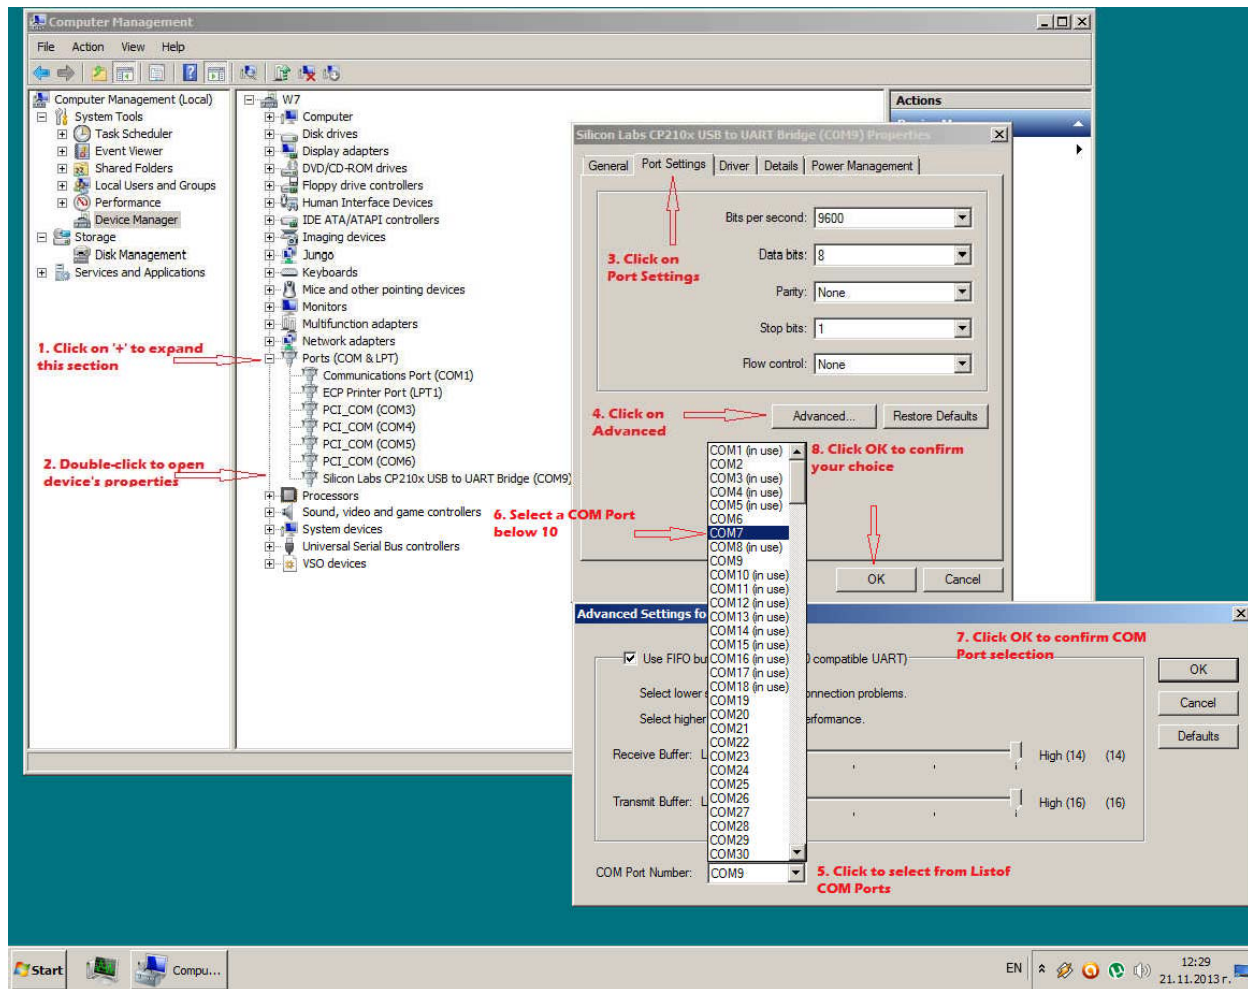

CHAPTER 2

In this chapter we will get to know how to work with the GPR program.

It is for the best if you have the GPR program on your computer's Desktop. The GPR program must be placed on a writable media (HDD/flash drive) and must not be placed on a non-writable media such as CD-ROM or DRV-ROM, because it would need to store information on the disk, where it has been started from.

The program consists of 3 (three) files:


1. The executable file (.EXE),
2. The Configuration File (.CFG) containing settings and parameters,
3. The demonstration File (a .SGY file, made while working with a GPR).

You should know that all the files you are going to create during working with the GPR and the program will be stored in the same folder (for example the Desktop and subfolders as 20130713, 20130714, etc.)

Providing we have already installed the communication drivers (USB-to-Serial Com port drivers) (See Chapter I – Installing the Device Driver), we may proceed to start working with the GPR. First we need to connect the GPR to the PC, i.e. we need to plug the GPR's USB cable into a free USB port on the PC. Note that at this moment the GPR may be switched ON or OFF, but still we recommend you at this very moment you better keep it switched OFF (in very rare occasions, the Operational system (Windows XP/7) may misrecognize the GPR as a mouse and would start acting weirdly).


After plugging the USB into the PC, we should hear a sound that indicates computer has recognized the GPR's USB communication dongle. Now we are ready to start the GPR program and work with the GPR. Find the GPR Program's icon on your Desktop (or where it is located) and double-click it.

Upon start, the GPR Program shows its Control Panel and the help window (describing the control keyboard keys). You may hide/show the help window using key ESC.

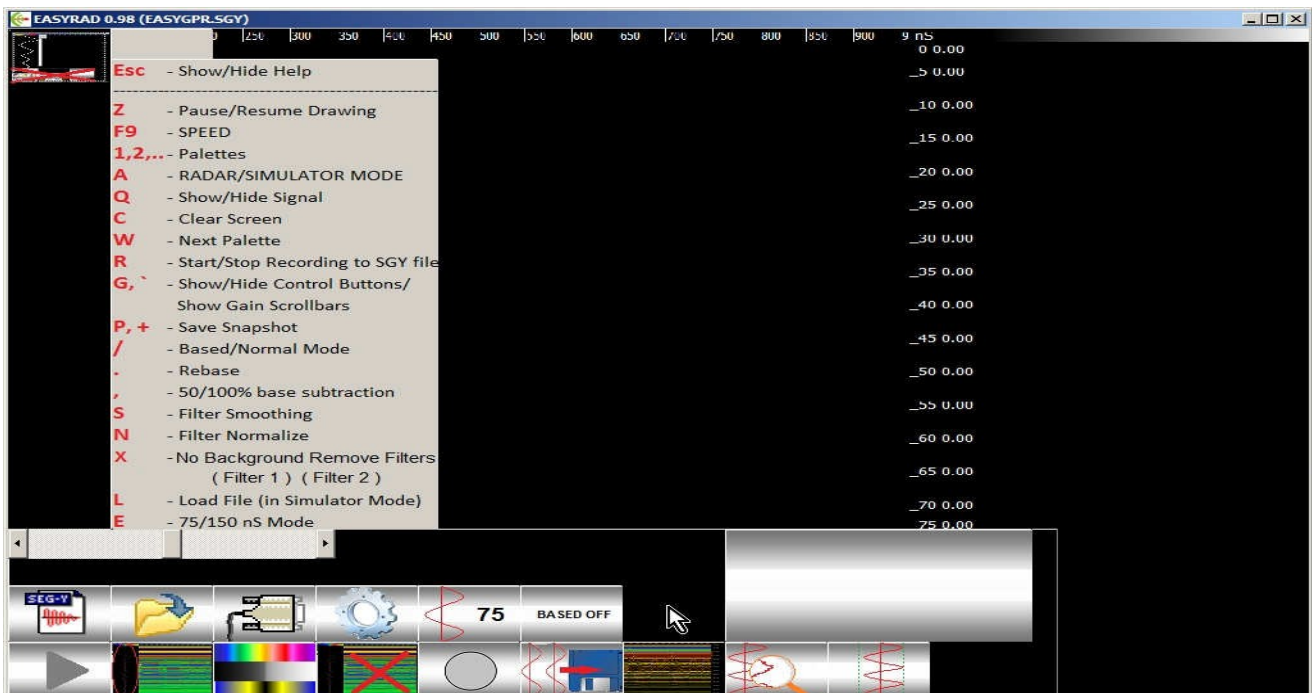

(fig. 1)


Sometimes, when you start the GPR Program, it shows messages, that it could not find the last COM port used:

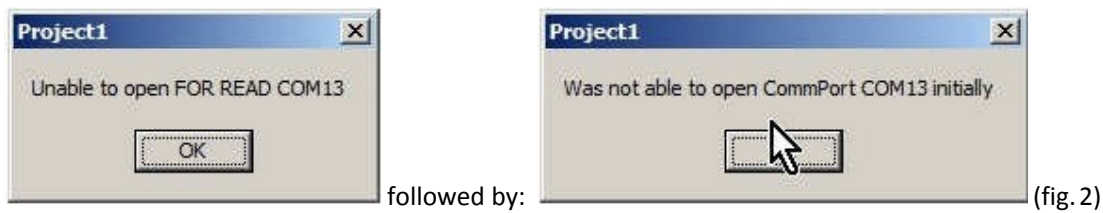

You click “OK”, and will have to manually select the COM port to work with (see Troubleshooting, fig. 13)

GPR Program’s window consists of 4 (four) regions:

1. Here is the Radar gram as a result of consecutive radar signals drawn;
2. Panel with Depth information;
3. Signal Curve Panel. Here the signal curve is shown;
4. Control Panel. Contains control buttons, scrollbars, settings, etc.

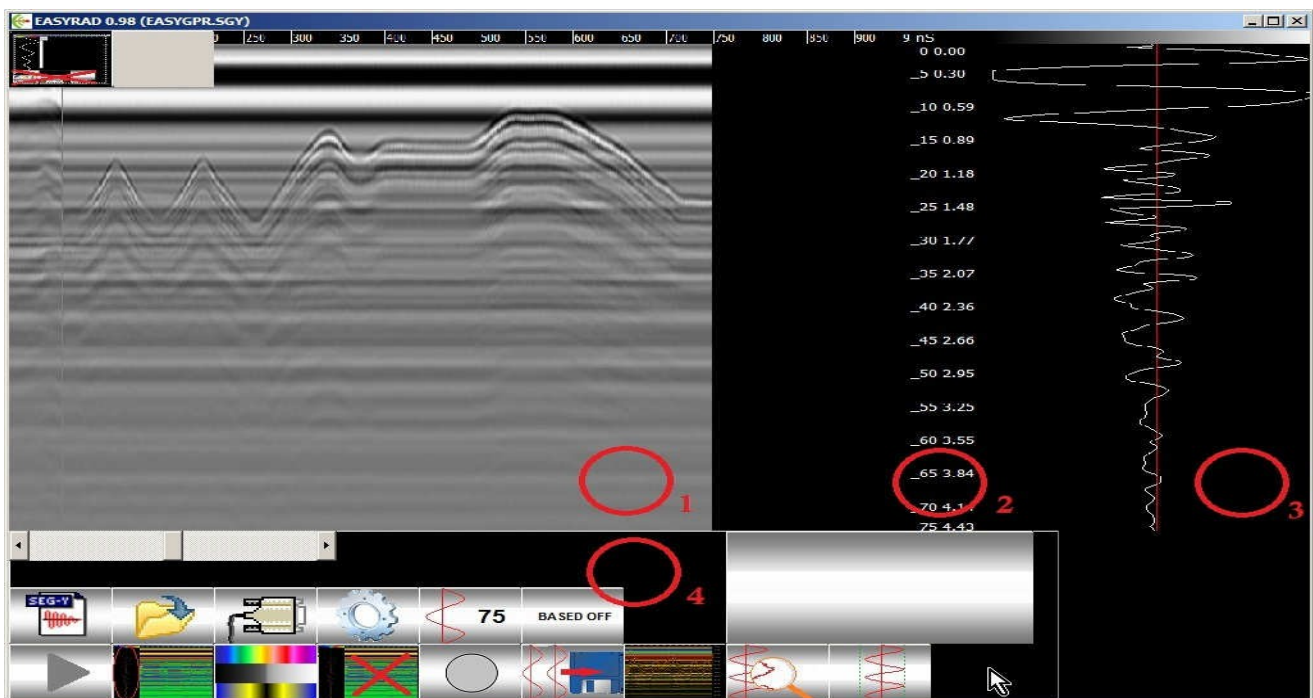

(fig. 3)

You may show/hide Panel 3 (one containing the signal curve) using the corresponding button in the Control Panel or by pressing ‘Q’ key on keyboard. Hiding the Signal Curve panel, you can see more of the Radargram Panel.

In panel 1 you see the radargram, i.e. the result of the latest incoming radar signal data. The radargram shows the incoming radar data, filtered and processed by the desired data processing filters and settings.

Control Panel: there are many buttons on the Control Panel. You may click on them and control GPR and Program’s actions, using filters, recording data, etc.

Almost every button on the Control Panel has its keyboard substitute, i.e. you may control Program’s actions by mouse clicking on screen buttons OR by pressing keys on keyboard.




The GPR Program's Control Panel is situated in the Bottom Pane. It contains several buttons, scrollbars, etc. which you may use to navigate the GPR Program, change settings, using filters, choosing files to simulate, choosing COM Ports to communicate with the GPR, etc.

You can interact with the Program by mouse-clicking on program's Control Panel buttons or pressing keys of the keyboard.




Button (A) MODE -(Key 'A'). Selects Mode of operation: Radar or Simulator Mode. This icon shows the selected operation mode you selected. In RADAR Mode, the program uses the GPR as data source; in SIMULATOR Mode it uses a pre-recorded data file to simulate. When using SIMULATOR, the **Load File (key 'L')**, is allowed in order to select a Radargram File (.SGY file) from your computer and simulate it.



Button COM Port - You may choose the COM Port the GPR communicates with the PC and the Program.




Button (Z) PAUSE -(Key 'Z'). Starts/Stops receiving data from the GPR (start/stop showing simulated data from file).




Button (Q) Signal -(Key 'Q'). Shows/Hides Signal Curve Panel on program's window.




Button [W] Palette -(Key 'W'). Changes Color Palette.



Button (C) Clear -(Key 'C'). Clears the radargram and starts receiving data from the GPR.




Button (R) Start/Stop Recording -(Key 'R'). Start/Stop recording the radar data to a file on the PC. Filenames are in the following format: year_month_day_hour_min_sec.SGY – the time of creation of the file. Ex: 20130710_231029.SGY – 10 July, 2013, 23:10:29h.



Buttons 75nS , 150nS -(Key 'E'). Using these buttons (or key 'E') you choose the 'length of the time window' (in nanoseconds) the GPR works on. This defines the depth of the scanning. In 150nS time window the GPR scans in FULL depth, as where as in 75nS time window it scans in HALF time window/half depth respectively.



Button Set Soil Type - You may choose the presumable soil type that the GPR works on. Different soils reflect, absorb, etc the radio-waves differently, and allow different depth of penetration of the GPR radio-waves in them. They also affect the signal's form/amplitude in different ways/degree. This way it is possible to determine presence of different layers of soils, voids, objects and their (presumable) depth.



Button 100%, Based - You choose Base Filter (and degree of applying it). The incoming data is being compared with a base signal, taken at the moment of start using the filter. Key '/' starts/stops using the filter.



Key '.' takes a new base signal to compare with. Key ',' changes the degree of applying the Base Filter (50%, 100%).



Button Open File



-(Key 'L'). In Simulator Mode, you may open a previously saved .SGY file and visualize/simulate.

FILTERS:





Normalize

-(Key 'N'). You should use this filter when you have weak Radar signals. This filter would enhance signal's amplitude for better presentation of signal changes of incoming signal/data.



Smooth

-(Key 'S'). „Smoothing” the incoming signal/data. When you apply this filter, it removes high frequency components of the signal/data.



Remover Filters (Off, 1, 2)


-(Key 'X'). These filters are probably the

most often used filters. When No Remover Filter is used, you will see the original Radar Signals drawn onto the Radargram. When Remover Filter 1 or 2 is selected, the software applies algorithmic and computational methods in order to clarify the Radargram's image and show as much as possible significant and useful information out of the GPR's data. When Remover Filter 1 or 2 is selected, the software applies 2 similar, yet different methods to remove the “carrying form” of the signal, and leaves only changes and differences between the consecutive scans and that way shows objects and layers beneath the ground surface. Remover Filter 1 and 2 give better results in combination with “Smooth” Filter and Normalize Filter.




Original / Modified Data

-(When recording the GPR data, you may choose to either save it 'as it is' or save it 'as it is shown', i.e. to either store the GPR data in its original form (despite the current settings of the Filters, Gain controls, etc.) OR after applying all the filters and settings selected. It is recommended you to store (record) the incoming data in its original form, in order to analyze/edit the data using other SGY data viewers/editors, etc..

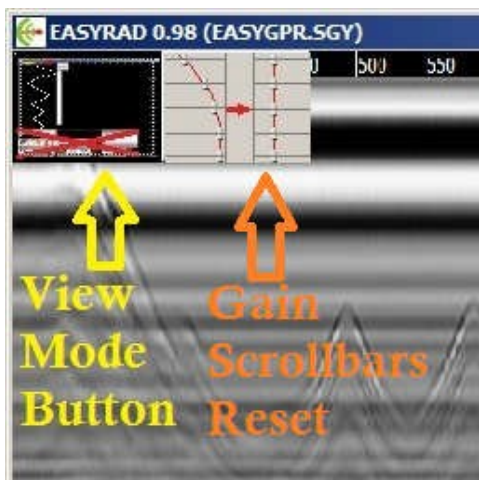


Gain Scrollbar Reset Button: Resets all the Scrollbars (Hardware Amplifier Scrollbar, Zonal Software Amplifier Scrollbars, and Contrast Scrollbar) to their Initial settings.

View Mode Button: Clicking on this button or using keyboard key "G" or " ` " you choose one of three possible views of the program's window: (fig. 4) (fig. 5) (fig. 6)

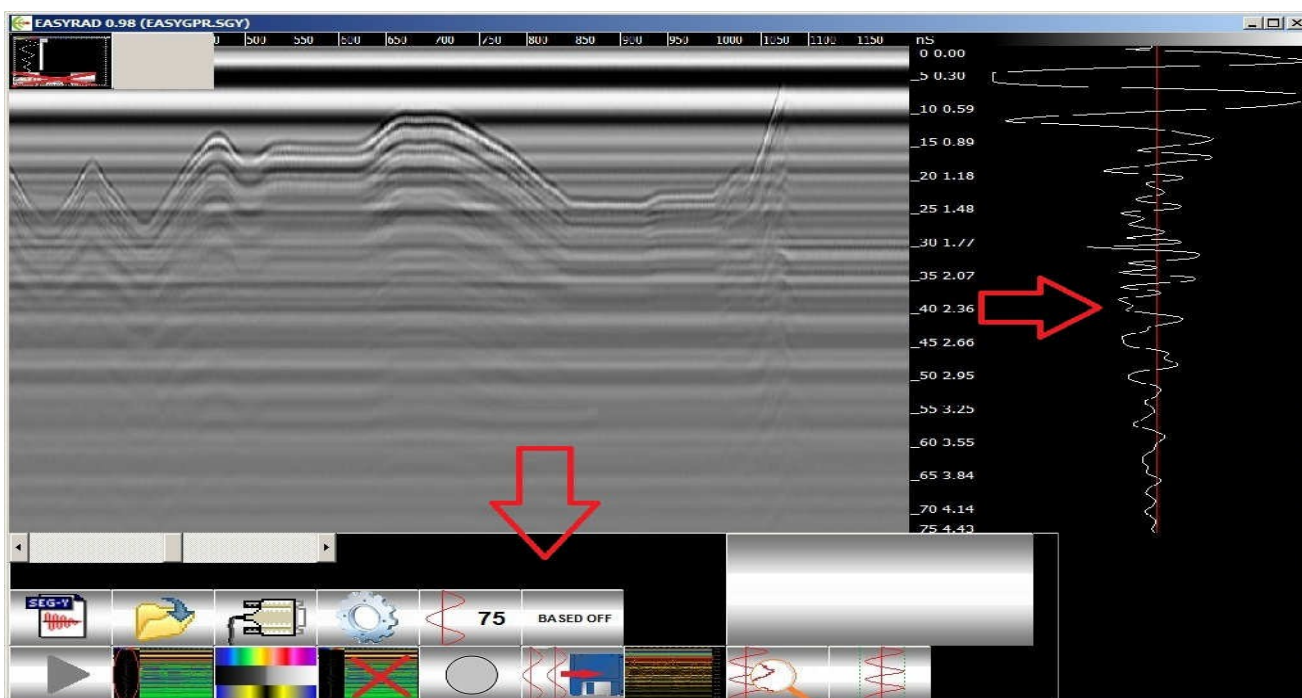


(fig. 4) With Control Panel and Curve Panel visible

Visualization Mode 1: When you press Key 'G' for a first time, you will see the Zonal Gain Control Scrollbars at the place of the Signal Pane . There are 5 Scrollbars, each controlling a subzone (from top to bottom of the signal) and are able to (Software) amplify the signal from 0% до 400%. There is also a Button **Gain=1**, which puts all 5 Zonal Gain Scrollbars in equal (100%) position. It also sets the Hardware Amplifier Scrollbar and Contrast Scrollbar to their default Initial settings.

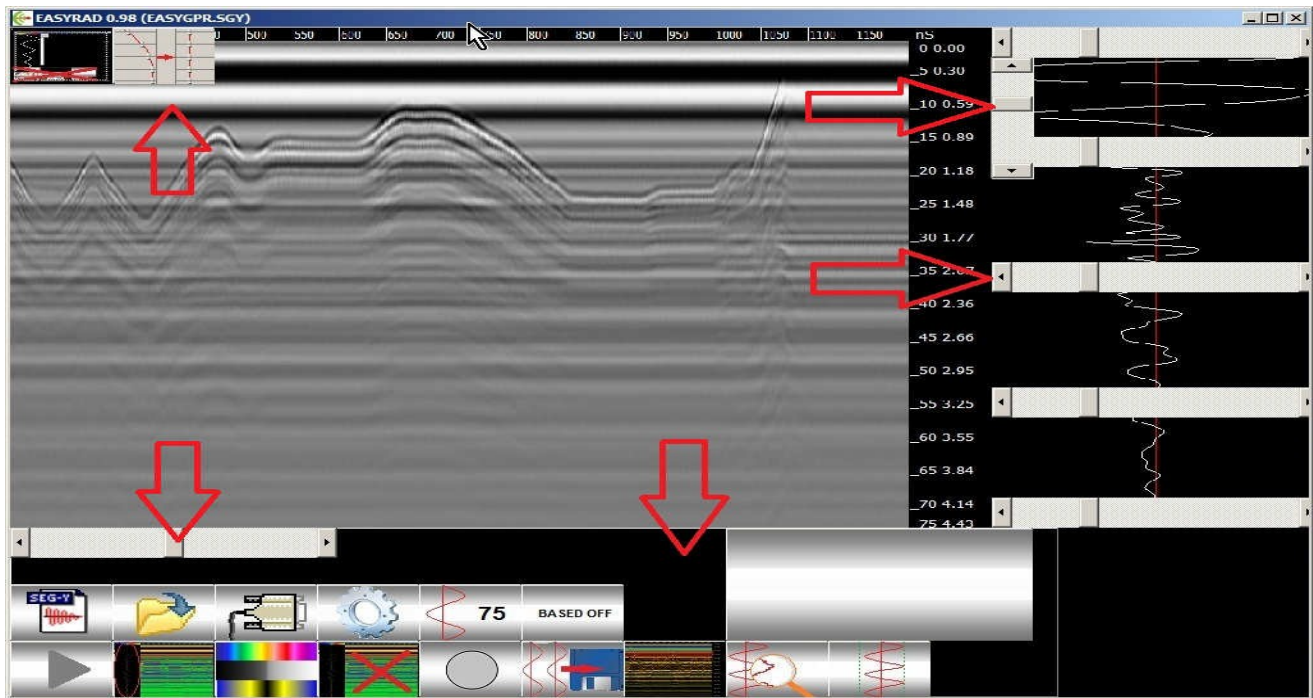

(fig. 5) With Control Panel, Curve Panel and Gain Scrollbars visible

Visualization Mode 2: When you press **Key 'G'** for a second time, the program hides the Zonal Gain Control Scrollbars and the Program Control Panel for a clean Radargram and/or Signal view.

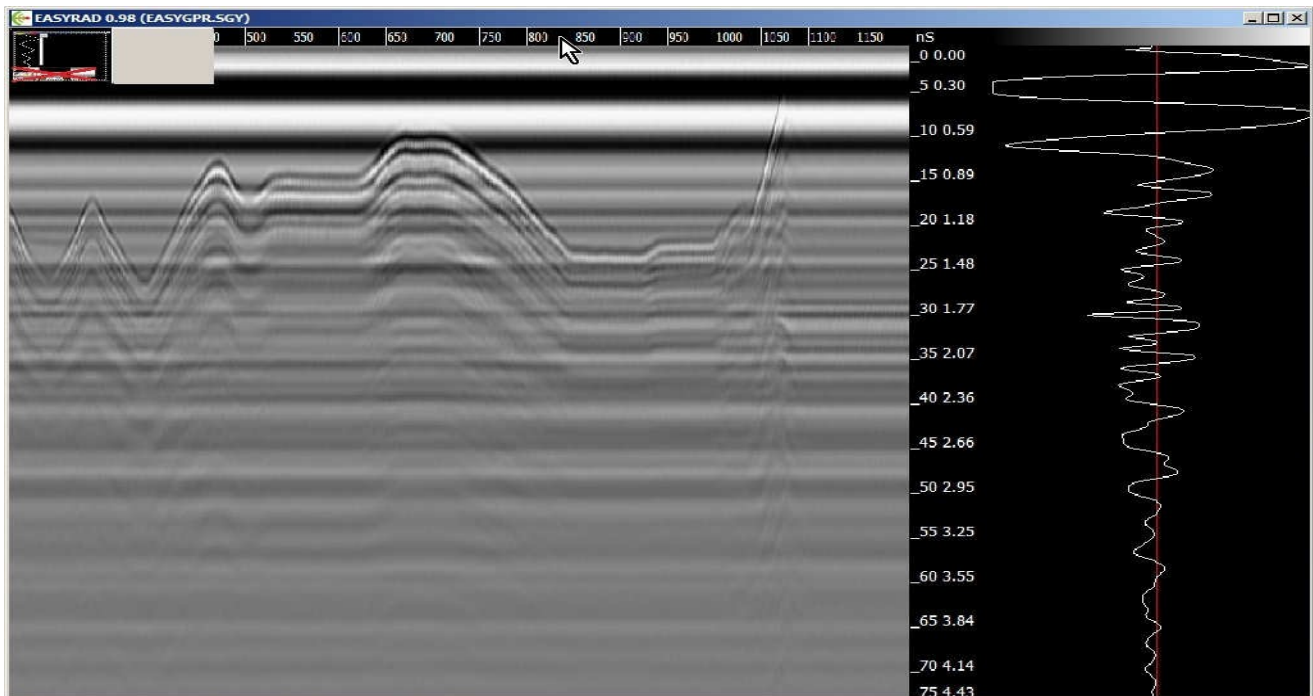


(fig. 6) With no Panels visible

Visualisation Mode 3: When you press **Key 'G'** for a third time, the program shows back the Control Panel.



Color Palette selection. By pressing **keys '1' to '9'** you choose one of 9 pre-defined color Palettes, used to represent the Radargram. There are color and black/white Palettes to choose from, and you may use one that suits you best. Black/White (Grey shade) Palettes are recommended, since they are easier to comprehend.


SCROLLBARS: Gain Scrollbars, Hardware Amplifier Scrollbar, Contrast Scrollbar

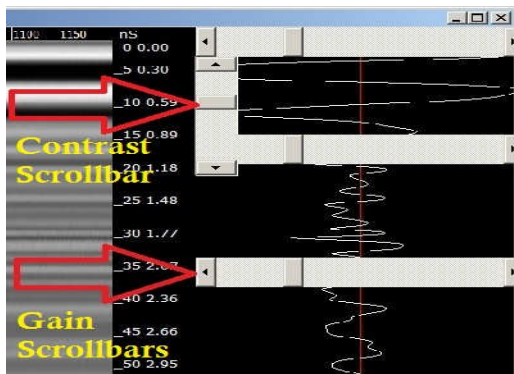


(fig. 7)

Contrast Scrollbar: It serves for Contrast Adjustment of the Radargram.


Zonal Gain Control Scrollbars: They serve for zonal (from top to bottom, 5 zonal) amplitude control (amplification) of the signal. You may amplify certain zones of the signal curve (usually the lower part of it, which corresponds to bigger depth) in order to emphasize the changes of underground content while doing a survey. Note, that you have 2 different sets of settings (Zonal Gain Control, Contrast, Hardware Amplifier) for half-depth scanning (75 ns) and full depth-scanning (150 ns). (fig. 8)

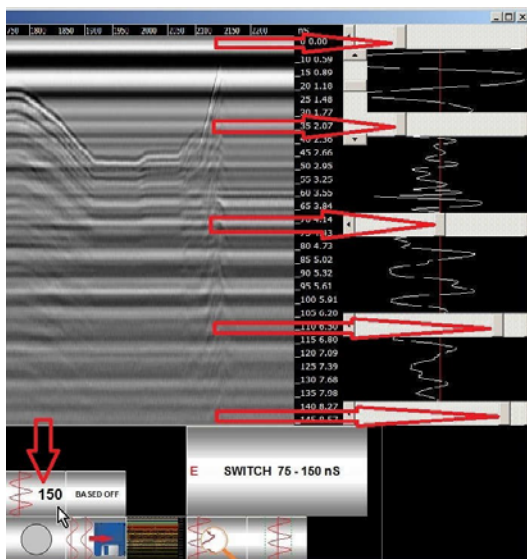


Zonal Gain (fig.8)

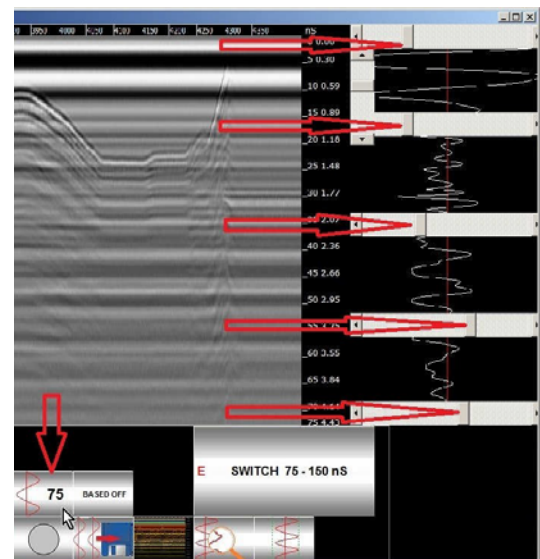

There is a Hardware Amplifier in upper left part of the Control Panel. It controls a hardware signal amplifier, built in the GPR. It has 5 degrees of amplification. Using the Button next to the Gain Scrollbar sets the hardware amplifier to its middle degree. (fig. 9)

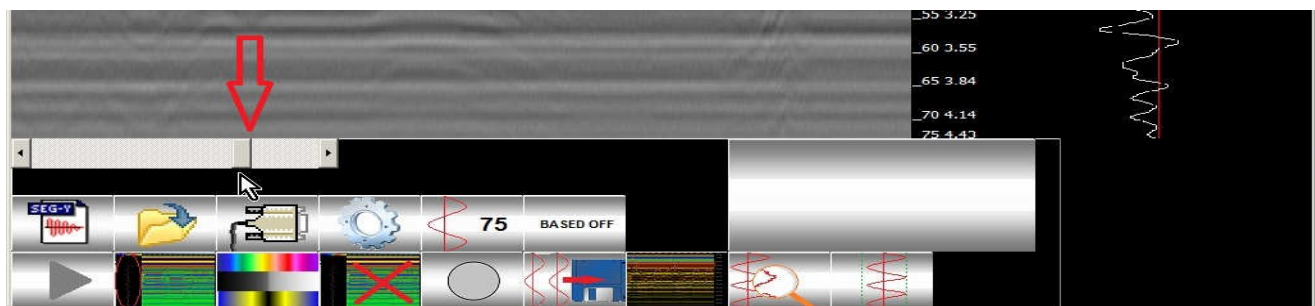

(fig. 9) Hardware Amplifier Scrollbar

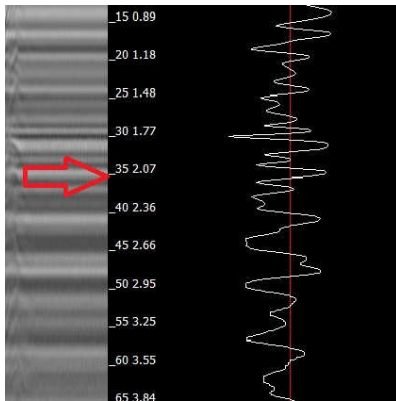


There is a Time/Depth Panel between the Radargram Panel and Signal Curve Panel. It shows a scale in nanoseconds and depth in meters (depending of soil setting and presumed soil conditions). You may mouse-click on the Radargram and see depth of the pointed object. (fig.10)

(fig. 10)



Making a snapshot of program's window:

Key 'P', Key '+' - Saves a snapshot of the current screen content as a .BMP (BitMap) file format in Current date's Folder. You should know that all the files you are going to create during working with the GPR and the program will be stored in the same folder (for example: the Desktop and subfolders as 20130713, 20130714, etc.)

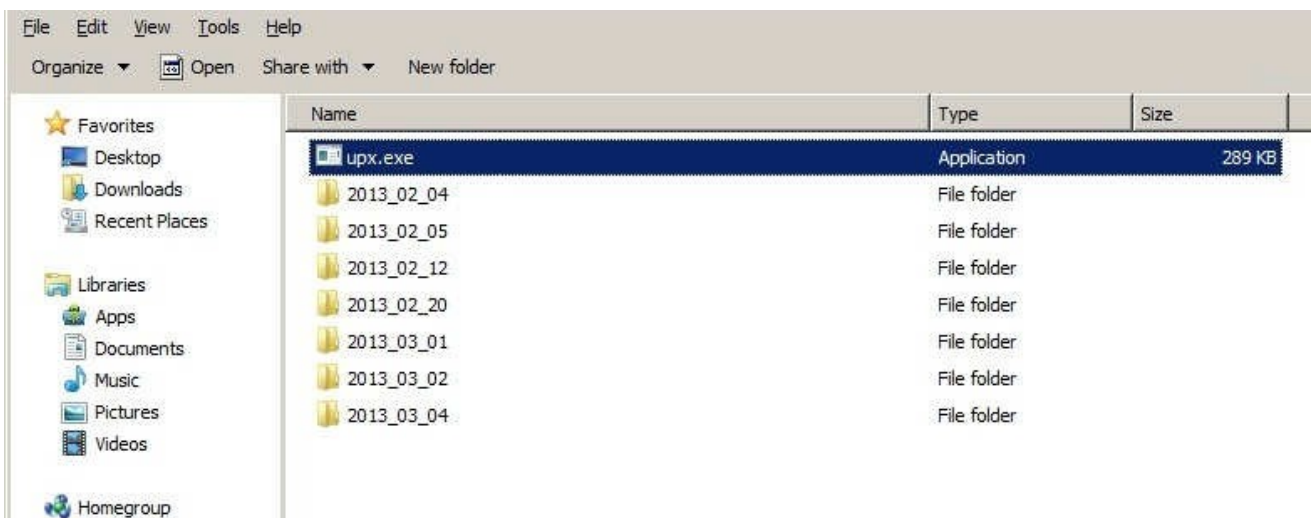

(fig. 11)


Selecting a Soil Type

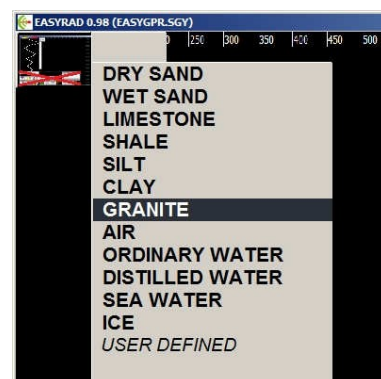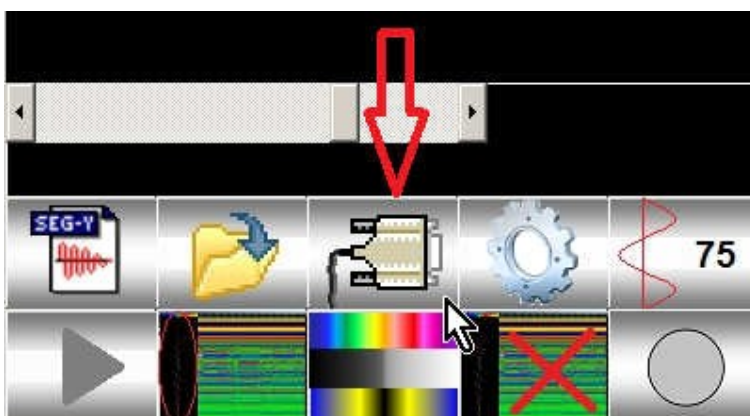

(fig.12)

If, for some reason, there is no COM Port List, or the Com Port you normally use is not listed, you may need to close the Program, unplug the USB Cable and do the following:

1. Turn the GPR OFF
2. Plug the USB cable into the PC (you should hear a sound when the PC recognizes the GPR)
3. Start the GPR Program again
4. Do Select a Com Port again

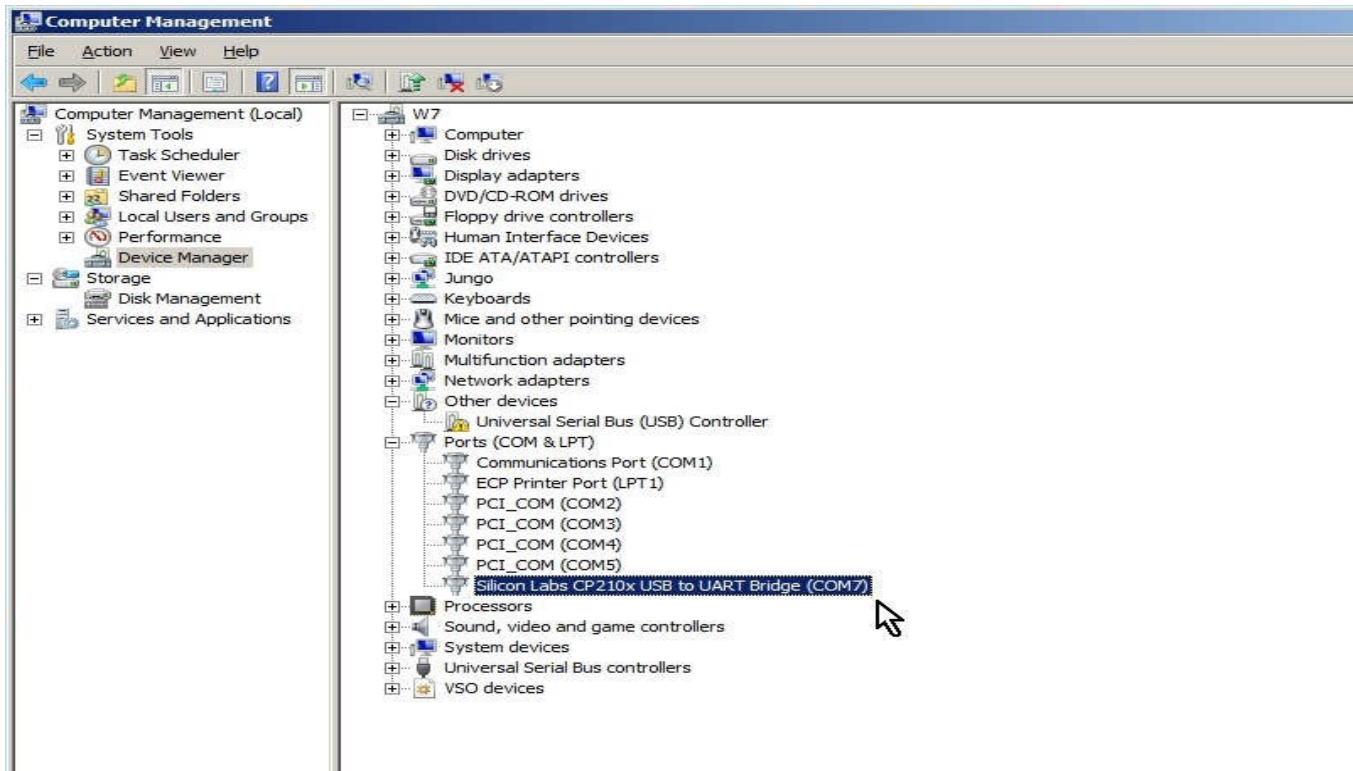

If you are unsure why the Program does find the Com Port, you may check its presence in the Computer Configuration by Opening PC's Control Panel (Manage):

1. Right-Click On My Computer's Icon on PC's Desktop
2. Click on Manage and click On Device Manager
3. Click On Ports
4. Check for USB-to-Serial Bridge Device

For more detailed information on how to set the GPR COM Port, see at the end of Chapter 1.

For U.S. Customers

Ground Penetrating Radar Coordination Notice and Equipment Registration

Note: This form is only for Domestic United States users. The Federal Communications Commission (FCC) requires that all users of GPR who purchased antennas after July 15th, 2002 register their equipment and areas of operation. If you have purchased any antennas after July 15th, 2002, you must fill out this form and fax or mail to the FCC.

1. **Date:**

2. **Company name:**

3. **Address:**

4. **Contact Information [contact name and phone number]:**

5. **Area of Operation [state(s)]:**

---Continued on next page.

6. Equipment Identification:

Brand Name: Easy Radar USA LLC

Model	Frequency	FCC ID (2AJAH followed by Model #)

7. Receipt Date of Equipment:

Fax this form to the FCC at: 202-418-1944

Or

Mail to:

Frequency Coordination Branch, OET Federal
Communications Commission 445 12th Street, SW
Washington, D.C. 20554

ATTN: UWB Coordination

Do not send this information to Easy Radar USA LLC.