



Astrel Instruments

AST-8300-B

User Manual

rev A

Getting started with the Astrel Instruments AST8300 camera

Thank you for purchasing an Astrel Instruments AST8300 CCD camera. Your new camera is a leading edge scientific instruments: please take your time to read carefully the following User's Manual to learn how to get the best out of your equipment.

The philosophy behind the AST8300 is the concept that the CCD camera could be the real brain of your astronomical equipment. This is possible thanks to the powerful microprocessor that is in charge of managing not only the camera itself but also, through the extended set of I/O available on-board, the other components of your system.

Regulatory Compliance

FCC Class B Information

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

FCC Caution: Any changes or modifications not expressly approved by Astrel Instruments could void the user's authority to operate this equipment.

IMPORTANT NOTE: FCC Radiation Exposure Statement

The device shall be installed and operated with minimum distance 20cm between the radiator & your body.

This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.


The availability of some specific channels and/or operational frequency bands are country dependent and are firmware programmed at the factory to match the intended destination. The firmware setting is not accessible by the end user.

Manufacturer's Declaration for CE Certification

Hereby, Astrel instruments declares that this device is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

Camera connections

The following picture shows the I/O interfaces available on the AST8300-B:

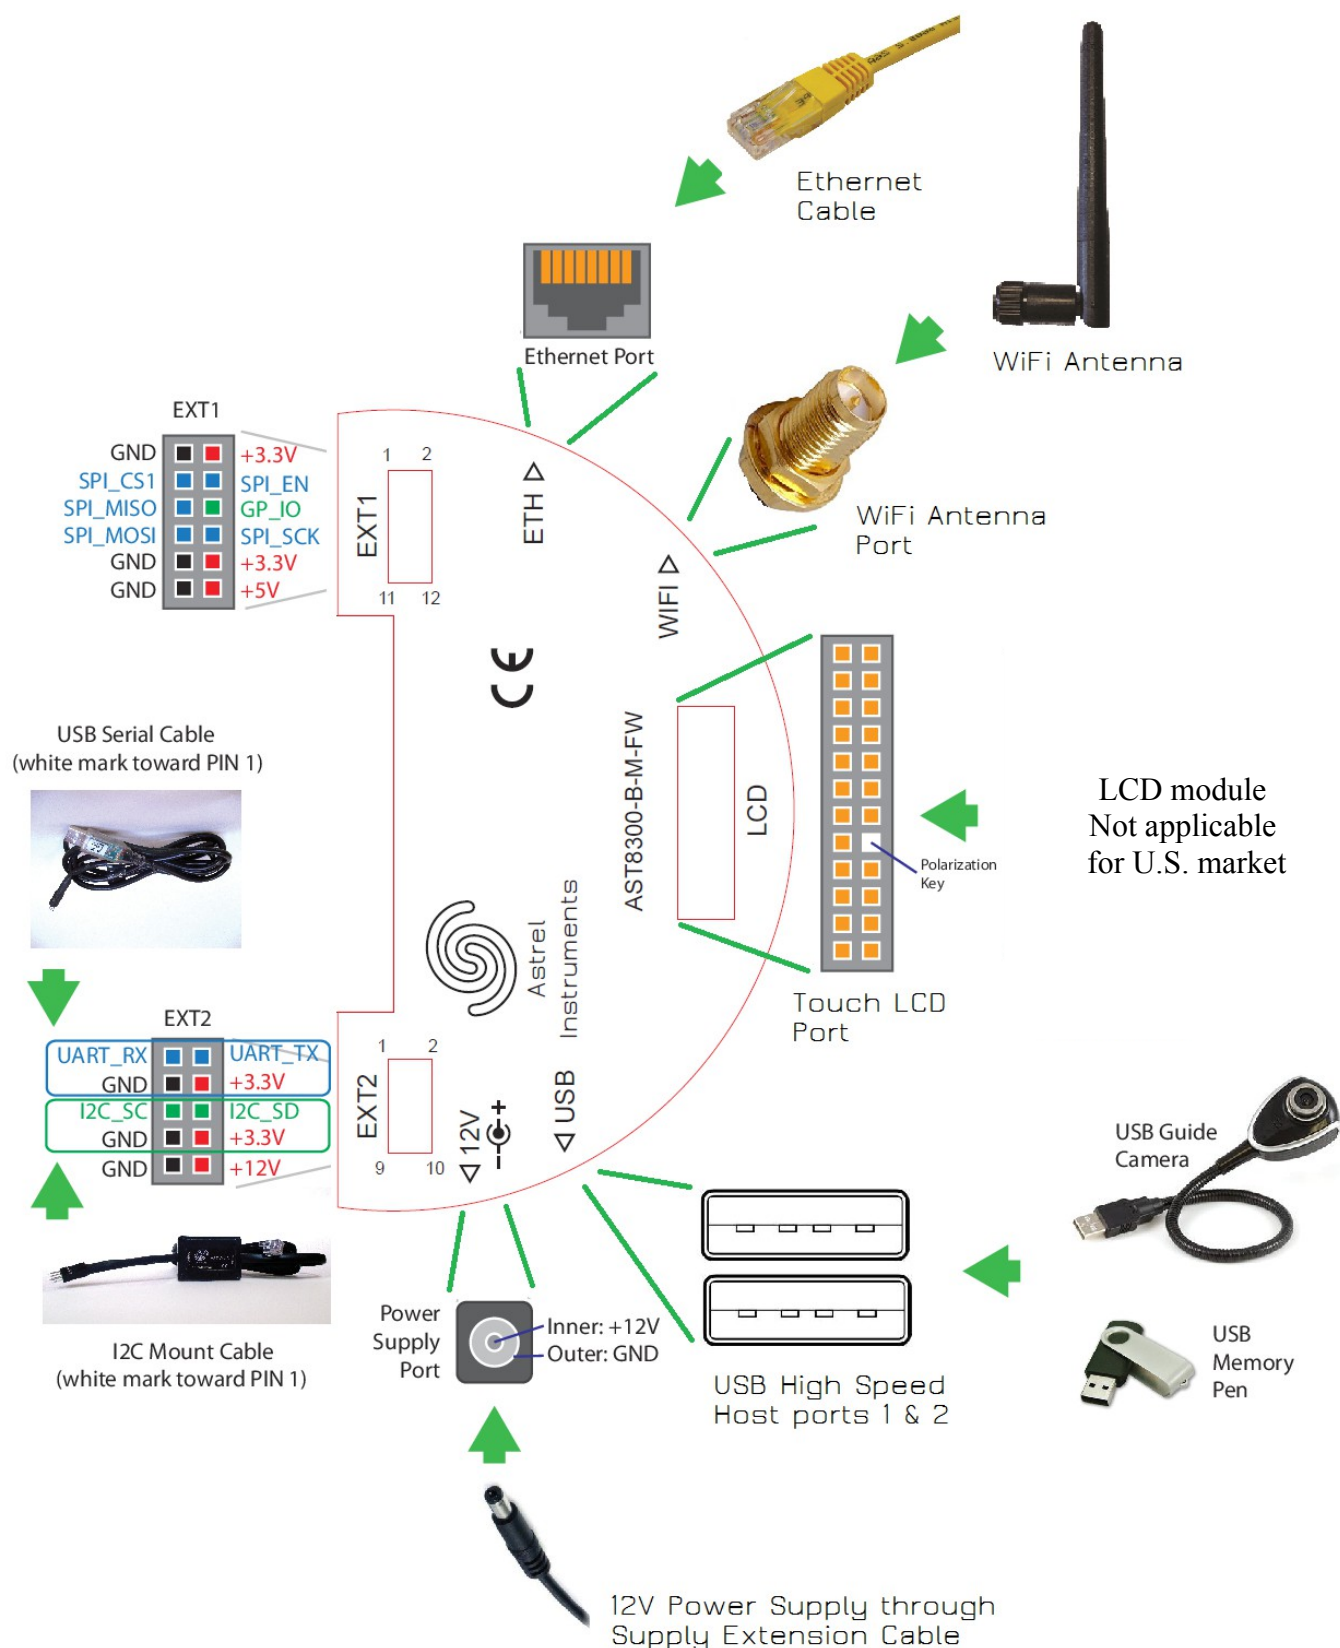

The following connectors are available on the camera:

- **12V:** the camera needs a 12V 3A power supply. The use of the included 3 meters cable with its filter box is strongly suggested to connect the camera to a car lighter receptacle using the included adapter, or to the optional 12V 3A power supply.
- **ETH:** the camera can be connected to a PC using a normal cat.5 Ethernet cable.
- **LCD:** not applicable for U.S. market
- **USB 1&2:** these two 480Mbit/sec hi speed USB connectors can be used to connect devices like USB dongles, guide cameras, keyboards and mice. USB hub can be used when multiple connections are needed. Each USB port can drive max 500 mA.
- **EXT1:** this is a 12 pin general purpose connector giving access to 3.3V and 5V power, an SPI interface and one general purpose I/O pin that can be used to trigger external devices.
- **EXT2:** this is a 10 pin general purpose connector giving access to 3.3V and 12V power, a UART (serial port) connection which can be used for bringing the Linux serial console to a PC, and an I2C port that can be used to connect the (not included) opto-coupled mount motors cable used for auto-guiding or any other I2C device.
- **WiFi:** this SMA connector is used for the included WiFi Antenna.

Powering up the camera

To correctly power up the camera, please follow this sequence:


- When needed, connect the Ethernet cable to the camera and to the PC.
- When needed, connect the WiFi Antenna.
- Cables other than USB, for example the mount motors cable or the serial cable, can be connected and disconnected at any time, but it's always a good rule to connect any needed device before power up.
- Connect the power supply cable.

After the power supply is connected, the camera boots the Linux operating system and then starts the Desktop application, from where all the camera's applications can be accessed.

Powering down the camera

WARNING: never power down the camera by simply disconnecting power supply: your camera has a true PC inside running Linux and, as any other PC, you should shut it down in the correct way. The Shutdown application in the main page of the Desktop will take care of all this sequence, so, before powering down the camera you must run the Shutdown application. At the end of this application the system can be safely powered down.

The Linux distribution inside the camera is stored into the internal 8Gb SD card, which is the main storage of the camera. In unlikely situations, removing the power supply while the operating system or any application is writing on the SD card could damage the files stored on it.

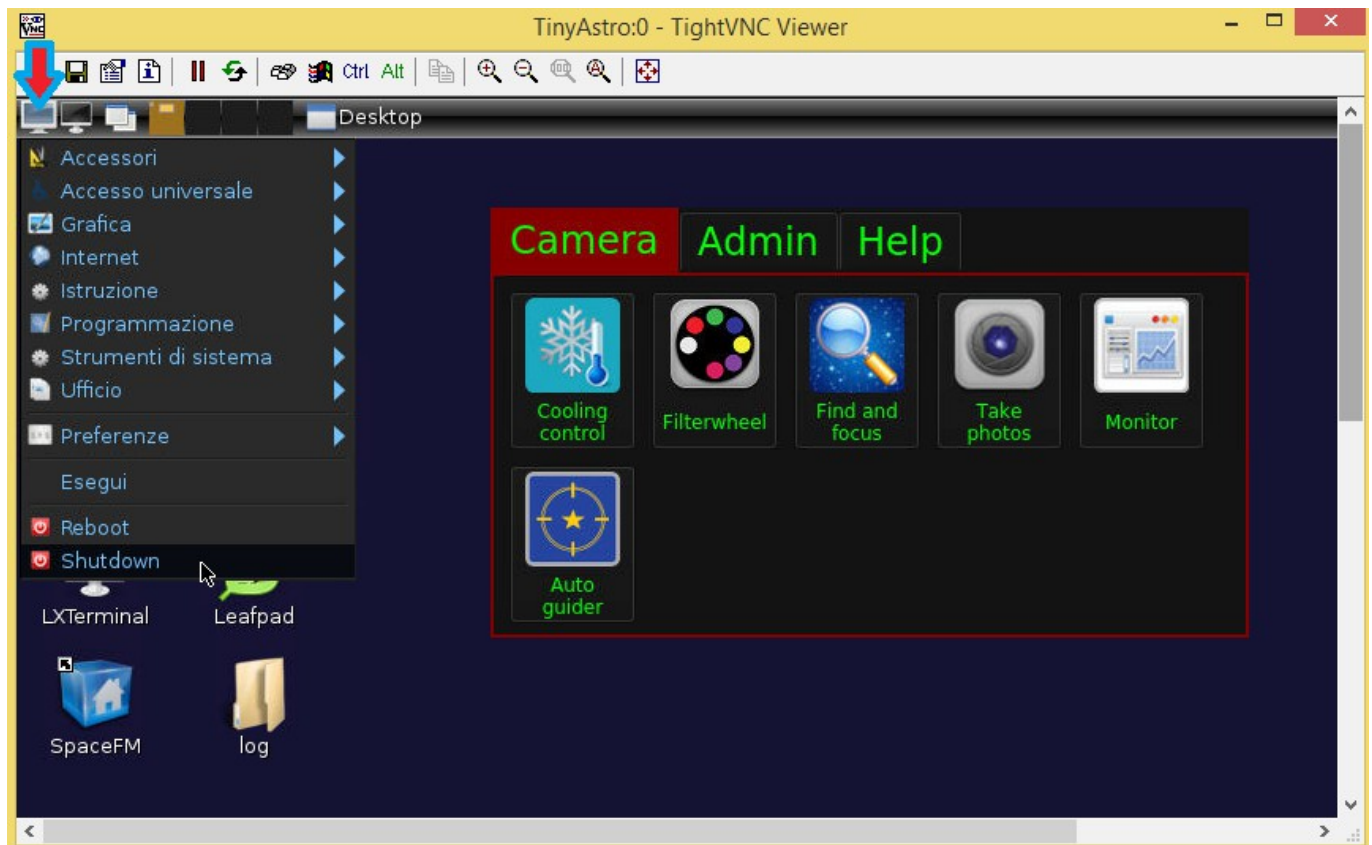

Wifi and Ethernet operations

When the **Wifi** antenna is mounted the camera acts as a WiFi access point, like a normal wifi router, that you can connect to using a PC/tablet/smartphone. The wifi connection is open, no password required, and by default the network name is **AST8300_** followed by the camera **s/n** while the ip address is **10.0.0.1**.

When the camera is connected using an **Ethernet** cable, the default ip address is **10.42.0.10**.

In order to connect to the Camera you also need to configure the PC LAN network accordingly, assigning for example the **10.42.0.1** IP address.

Your PC/smartphone/tablet should connect automatically when the camera powers up.

The network configuration can be modified using the corresponding application.


WARNING: remember to connect the WiFi antenna.

Once connected, you can operate the camera in Connected mode like described in the following paragraph.

PC / tablet / smartphone Connected modes

The AST8300 camera is operated using the collection of applications available on-board, which can be accessed in the using any **VNC** compatible remote desktop application on a PC/tablet/smartphone with Ethernet or wifi connection.

Astrel proprietary applications are collected on the Astrel Desktop, which is organized in pages of icons corresponding to applications. When choosing one tab, a different page of icons is displayed. The applications and tabs can be customized modifying the desktop.cfg file. Here follows a screenshot of the main Desktop page:

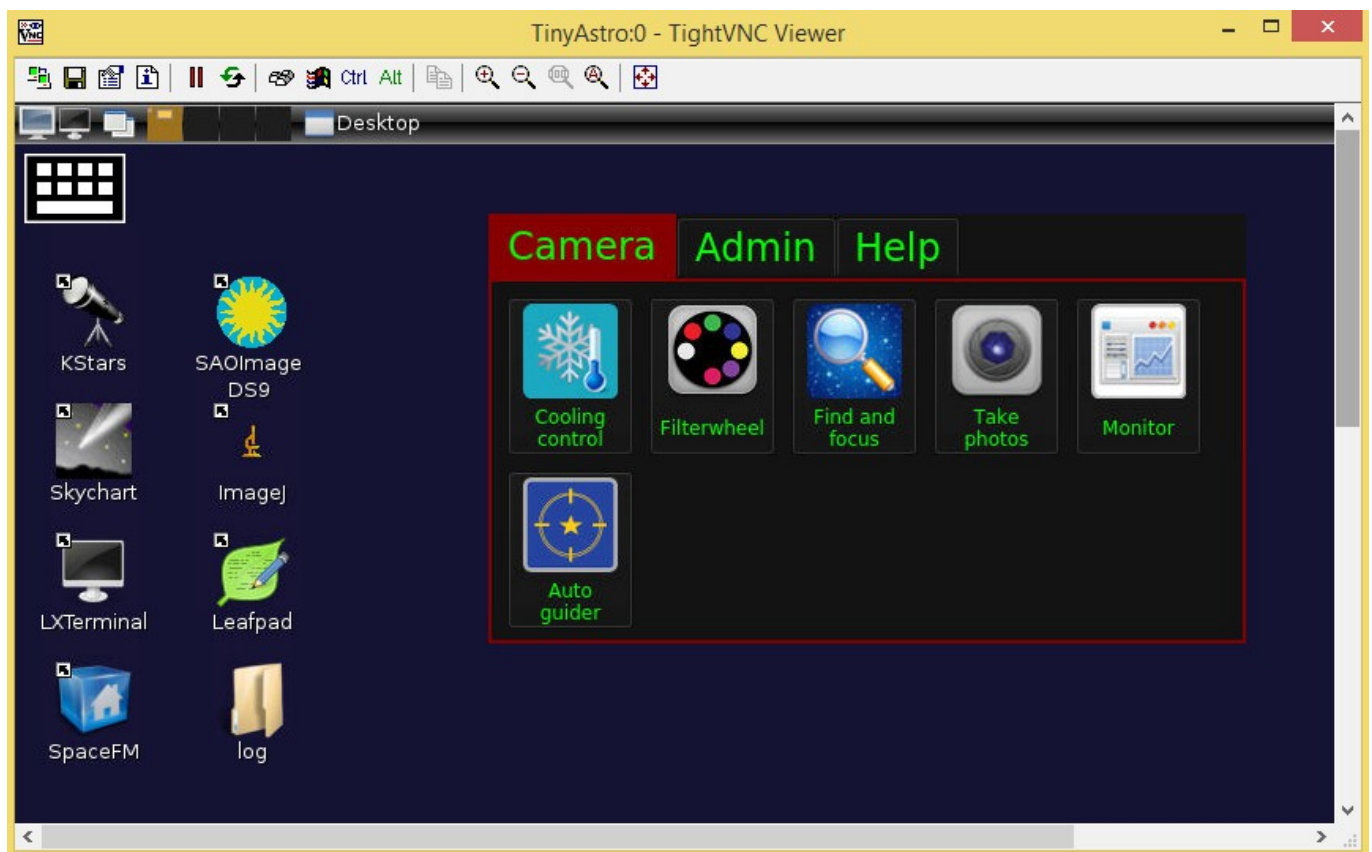

Other third-party applications are available on the Linux Desktop.

You only have to install a VNC client application on the PC/tablet/smartphone, which is an application used to show the camera Desktop in a window in the PC screen. There's no need to install any driver on the PC because the applications always run on the camera, not on the PC, and all the communications use Ethernet. This is why you can run the same applications even with a tablet/smartphone.

Many free VNC client are available for many architectures: here follows a brief list of the tested ones:

- PC/Windows: TightVNC (<http://www.tightvnc.com/>)
- PC/Linux: TightVNC (<http://www.tightvnc.com/>)
- Android: akRDC Free (available on the store)
- Windows Phone: TinyVNC (available on the store)

To install them just follows the steps indicated on their websites.

WARNING: closing the VNC client application doesn't shut down the camera: the VNC client only shows the camera applications on the PC screen. That means that you always have to run the Shutdown application before powering down the camera.

Accessing the camera storage

The camera main storage is the internal 8Gb SD card, where the operating system and the photos are stored. You can add more storage by simply connecting a USB dongle or even a USB hard disk to either USB connectors.

If you need to access other folders (for example a USB dongle or hard disk) or simply prefer to use a file-manager like application, you can use any remote file-manager application using the ssh protocol: here follows a brief list of the tested ones:

- PC/Windows: WinSCP (<http://winscp.net>)
- PC/Linux: any file manager opening the location `ssh://<camera ip address>`

The username is **astro** and the password is **astronomy**.

Using the vacuum pump

The AST8300 camera adopts a low vacuum approach to avoid frosting on the CCD glass, filters and optical window. Using the included vacuum pump, you can remove the air from inside the camera, so that there's no more water vapor to freeze on the CCD glass and filters. Moreover, reducing the air inside the camera minimizes the heat exchanges due to convection, so the optical window never get too cold due to the low CCD and cold finger temperature. The included pump is typically able to reach about **25-26 inHg** vacuum in less than a minute of operation, but anything above 24 inHg is enough. The vacuum pump gauges have a tolerance of about +/- 1 inHg, refer to the "Important Notice" sheet provided with the camera to get the proper vacuum level to be set before cooling the camera. The camera is tested to maintain a vacuum better than 24 inHg for at least two days and it's not unusual for cameras to last for weeks, so there's no need to operate the pump during a photo session.

Always keep the vacuum valve closed even when the camera is not working. When the camera is not used for long periods, it is advisable to put it into an air tight envelop.

WARNING: never get the camera below the freezing temperature without evacuating it to an acceptable vacuum level: you will run the risk of frost creation on the CCD glass and even produce a permanent damage to the camera.

Tutorial: from power up to the first photo

This tutorial will guide you in the process of making your first photo with the AST8300 camera. We will use Windows, most of the steps are the same also with Linux.

STEP 1: evacuate the camera

- Screw the pump connection tube to the valve on the camera
- Insert the vacuum pump on the other side of the tube
- Start pumping the air: if the vacuum level keeps going back to 0, push the pump nose as much as possible inside the tube and screw the tube as much as possible inside the valve, until the vacuum is retained: this means that the pump is correctly connected to the camera
- Open the vacuum valve (the handle should be perpendicular to the camera back)
- Pump the air until a level of 25-26 inHg vacuum is reached
- Close the valve
- Rotate the knob near the nose of the pump to release the vacuum remained inside the connecting tube, disconnect the pump and remove the tube
- The camera is now ready for being cooled below freezing temperature and the vacuum should be retained to an acceptable level for at least 2 days
- You can check the vacuum level connecting the pump to the camera, pumping the air until a level of 26.5 inHg vacuum is reached with the vacuum valve closed to remove the air inside the connecting tube, and then opening the vacuum valve and reading the vacuum level. **Remember to close the valve before disconnecting the pump**

STEP 2: power up the camera


- Plug the WiFi Antenna or connect the Ethernet cable to the camera and the PC
- If needed plug any USB device and hub to the USB ports
- Plug the power supply

After booting (usually after few seconds) the camera emits a sound and is ready for operation and waiting for VNC connection.


STEP 3: connect to the camera

Only for Connected mode:

- When using wifi, look for the camera access point name (the default one is ast8300ap) and connect to it.
- Windows will complain because the access is limited but this is normal because you don't have an internet connection, only a local LAN connection.
- Start the VNC viewer. When prompted, insert the camera IP address (**10.0.0.1** for wifi or **10.42.0.10** for cable) in the Remote Host field, like in the following screenshot:

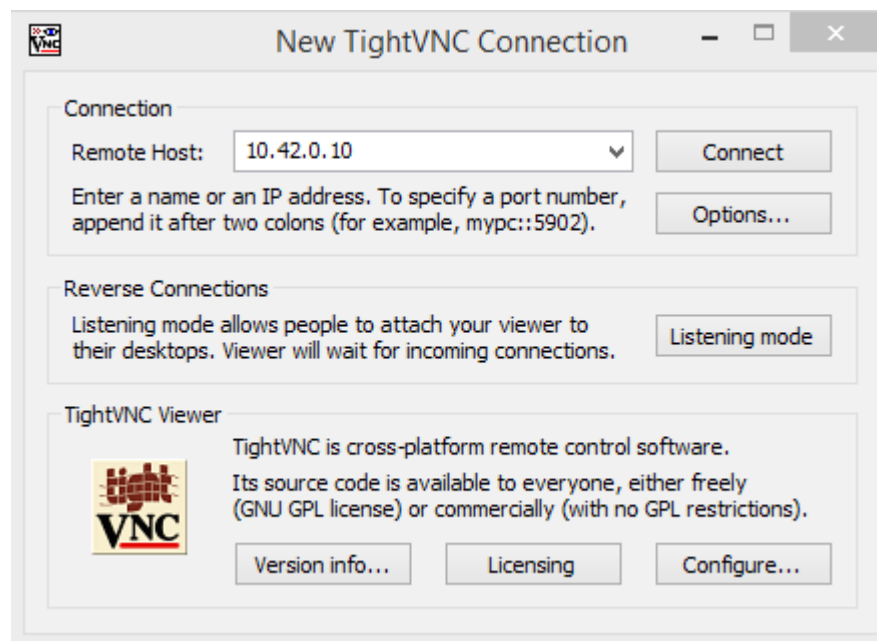


After connection, the TightVNC viewer window will display the Linux Desktop that includes the Astrel Desktop and the icons of the thid-party applications:

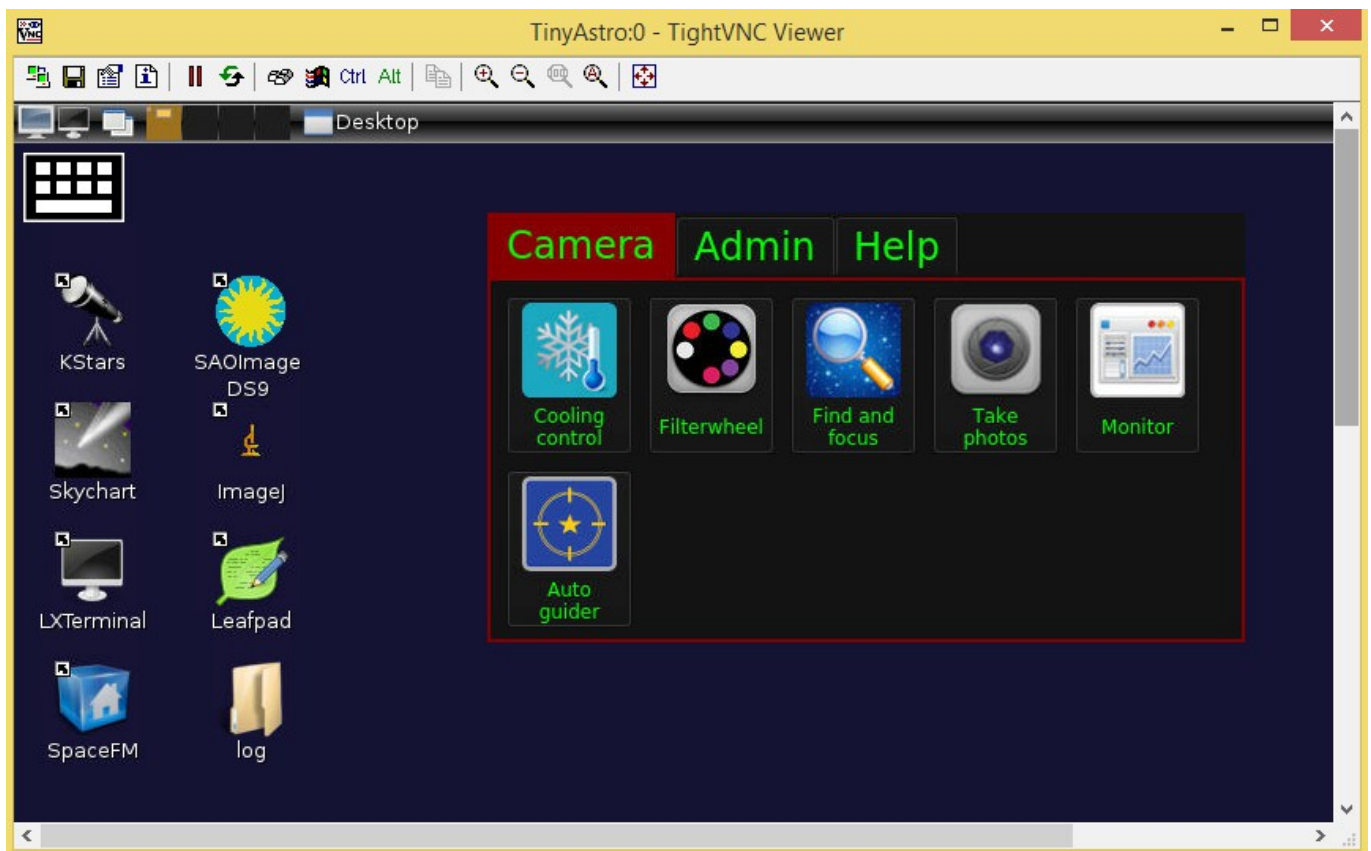

STEP 4: start the cooling process


- Start the Temperature Monitor application and insert the desired temperature set point, then push the **Start** button. The application will work in background maintaining the temperature set point with a $\pm 0.1^{\circ}\text{C}$ precision.

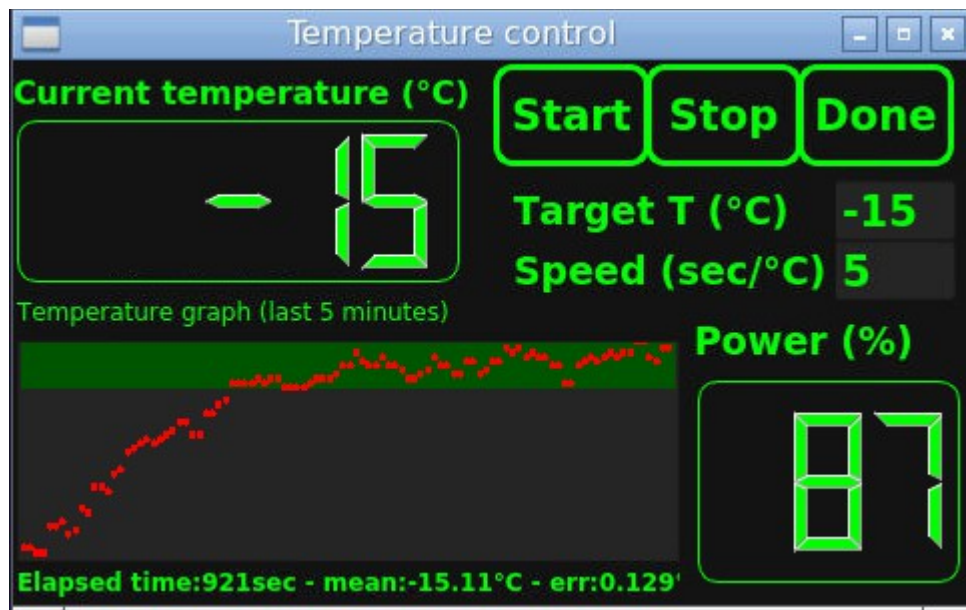

- Push **Done** to leave the application: leaving the application doesn't stop the cooling process. Next time you open the Temperature Monitor application it will display the current cooling process state, until you push the **Stop** button, which will ramp down and switch off the cooling process.
- The cooling process needs some time to reach a stable temperature set point, so we will use this time to find and focus the object to photograph.

STEP 5: select a filterwheel position

- Start the Filterwheel application by clicking/touching the icon on the desktop, then push the desired filter button and push **go**:

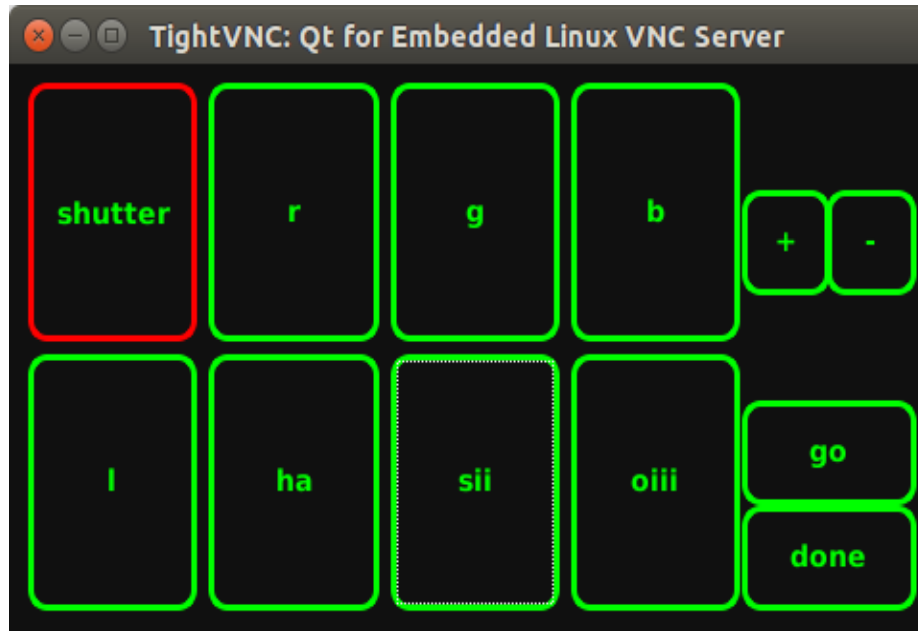


- Push **done** to leave the Filterwheel application.

STEP 6: find and focus

- Start the Find & Focus application to focus the camera and frame the object. Push **live** to start acquiring images. You can change the exposure time on the fly depending on your target brightness: remember that the value refers to tenth of seconds, so for 5 seconds exposure you have to write the value 50.



- When in liveview, frame a medium brightness star, push **focus** and you will be asked to select the star in the field. After you touch/click the selected star, the focus interface is started displaying an enlargement of a small portion of sky around the star. The refresh rate depends on the exposure time and can be as fast as nearly 3 frames per second

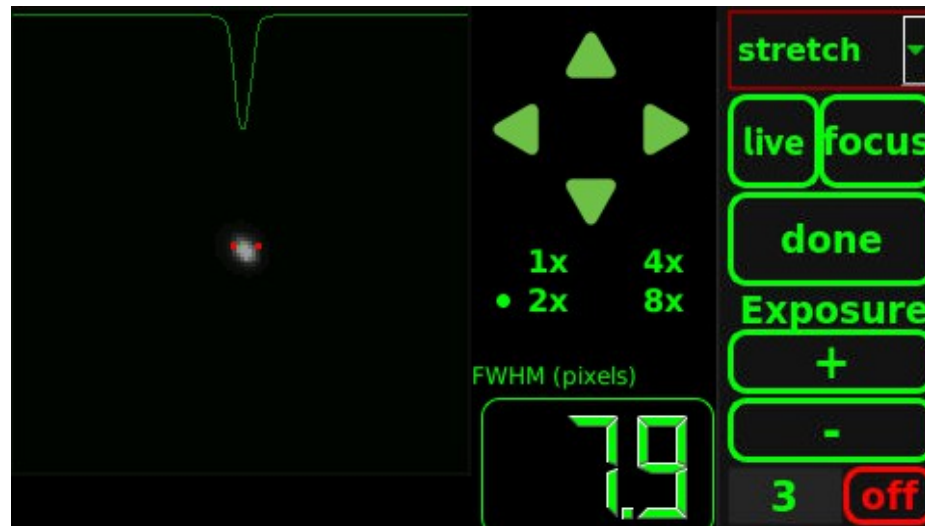

- The focus interface displays the star along with a measure of the Full Width Half Maximum and a plot of the intensity profile: use these parameters together with eye inspection to focus the camera. You can change the exposure time and the enlargement of the star field, as well as move around using the arrow buttons
- At the end of the focus process, in order to verify the focus accuracy, it could be useful, when permitted by the precision of the mount motors, to set the exposure time to 15-20 seconds to possibly show many stars of different brightness. This can also be done after framing the object to photograph.
- Push **live** again to come back to the liveview interface and frame your object. With liveview taking images in 9x10 binning mode, even an exposure of a few seconds easily reveals most deepsky objects, making the framing process as easy as doing a portrait with a conventional camera.

STEP 7: check temperature stability

- The cooling process should reach a stable set point temperature after 10-15 minutes depending on the environment. The time needed to reach the selected temperature set point may be shorter, but the algorithm needs some more time to calibrate in order to

maintain a temperature stable to less than 0.1°C . To check that the temperature is stable, start the Temperature Monitor application again and monitor the temperature variations for a while

- Push **Done** to leave the application and come back to the Desktop

STEP 8: set the exposure parameters and start photographing

- Start the **Take Photos** application.
- Using the tabs named as the filters you set in the Setup application, you can define for each filter the exposure time, the number of exposures and the binning level. Remember to check the enabled box in order to use the selected filter.
- Select the readout mode between 2 and 16 samples: the 2 samples readout has about 7.5e- readout noise and about 10 seconds download time, while the 16 samples readout has about 5e- readout noise and 35 seconds download time
- Choose a photo sequence name. If you omit a path before the name, the photo sequence will be stored in the default photo folder, which is the 'photos' folder. If you want the photo sequence to be saved in your external USB storage, browse to the 'usb/sda1' folder. Advanced user can use any existing path on the camera where they have the permission to write
- Each photo of a sequence can be identified using its name. For example, the third exposure with the second filter of the 'm31_lrgb' photo sequence will be saved as 'm31_lrgb_filt2_3.fits'



- Start the photo sequence pushing the **SHOT!** Button.

Note: During photo download from the ccd the camera turns off, the wifi, the ethernet and the fan in order to minimize read out noise. After the completion of the photo (buzzer sound signals it) all these functions turn on again. Your PC or Smartphone could need to reestablish the connection to the camera.

- Using the Monitor application you can monitor the sequence execution



- Push **Kill** to stop the photo sequence. You will be asked whether to stop only the current exposure or the whole sequence
- Push **Preview** to see a thumbnail of the last exposure
- Push the **Done** button to come back to the Desktop

STEP 9: download the images to a PC

- The camera saves the photos on its internal SD card or on an external USB storage. There's no need to download them on a PC during the observing session: you can copy/move the images to a PC in many ways, here follows the most common:
- Method 1: use WinSCP:
- Open WinSCP and create a new connection.
- Choose SFTP protocol and insert the camera ip address, port 22 and your user name and password
- Copy the files/folders as needed

- Method 2: If you stored the photo sequences in an external USB storage, you can of course disconnect it from the camera and plug it to the PC.

WARNING: never disconnect the USB storage before correctly unmount it using the Eject USB application.