

VBOX Indoor Positioning System User Guide

- [01 - VBOX IPS Introduction](#)
- [02 - VBOX IPS Hardware Installation](#)
- [03 - VBOX IPS Rover Connection to VBOX 3i](#)
- [04 - VBOX IPS Site Configuration](#)
- [05 - VBOX IPS Using with a VBOX 3i/Standalone](#)
- [06 - VBOX IPS Troubleshooting](#)
- [VBOX IPS - PIN OUTS](#)
- [VBOX IPS - Technical Specification](#)
- [VBOX IPS - Upgrading Firmware](#)
- [VBOX IPS - Regulatory Information](#)

01 - VBOX IPS Introduction

Overview

VBOX Indoor Positioning System uses a network of fixed beacons in set locations that communicate with a receiver mounted on the roof of a vehicle using Ultra Wideband (UWB), to measure position and speed where you cannot use GNSS signals. A minimum of eight beacons are required and a site survey must be carried out as part of the installation, to ensure the optimum accuracy. Doing so means the exact location of each beacon is known which can then be shared with the rover enabling it to calculate its location to centimetre level accuracy.

The rover features an integrated VBOX IMU04 (Inertial Measurement Unit) for precise pitch, roll and yaw angular data. It also connects directly to an IMU04 enabled VBOX 3i, enabling additional parameters from the vehicle's CAN bus to be logged. Offering seamless integration between indoor and outdoor environments, the system can be used for high dynamic applications and the rover will automatically connect to the nearest beacons in range.

Features

- Can be used indoors and outdoors, switching seamlessly between environments.
- Centimetre level accuracy in areas off limits to GPS based systems.
- Small, rugged and low powered.
- Only one rover is required, featuring an integrated VBOX IMU with Kalman filter to reduce noise and errors in the data.
- Connects directly to a VBOX 3i data logger using only one cable for simple configuration.
- A minimum of 8 and maximum of 250 beacons can be installed in each location allowing continuous coverage of tracks up to 3.5 km long.
- Simple one time configuration either by Bluetooth or serial cable (RS232).
- 100 Hz update and low latency for high dynamic applications.
- The rover automatically connects to the nearest beacons for optimum accuracy.
- Each beacon is numbered for simple installation.



Beacon



Power Port

Config Port

Rover



Power/Data Port

Config Port




02 - VBOX IPS Hardware Installation

Beacon (VIPS-B-V1) Installation

When first considering a VIPS installation or demonstration, it is important to understand the shape and size of the test area and thus the minimum number of beacons that will be required.

The VBOX IPS will need at least 6 beacons in view at any one time to compute a solution. For a simple installation, Racelogic recommend placing the beacons in a 'Square' formation with spacing between the beacons of around 25–30 m, as below.

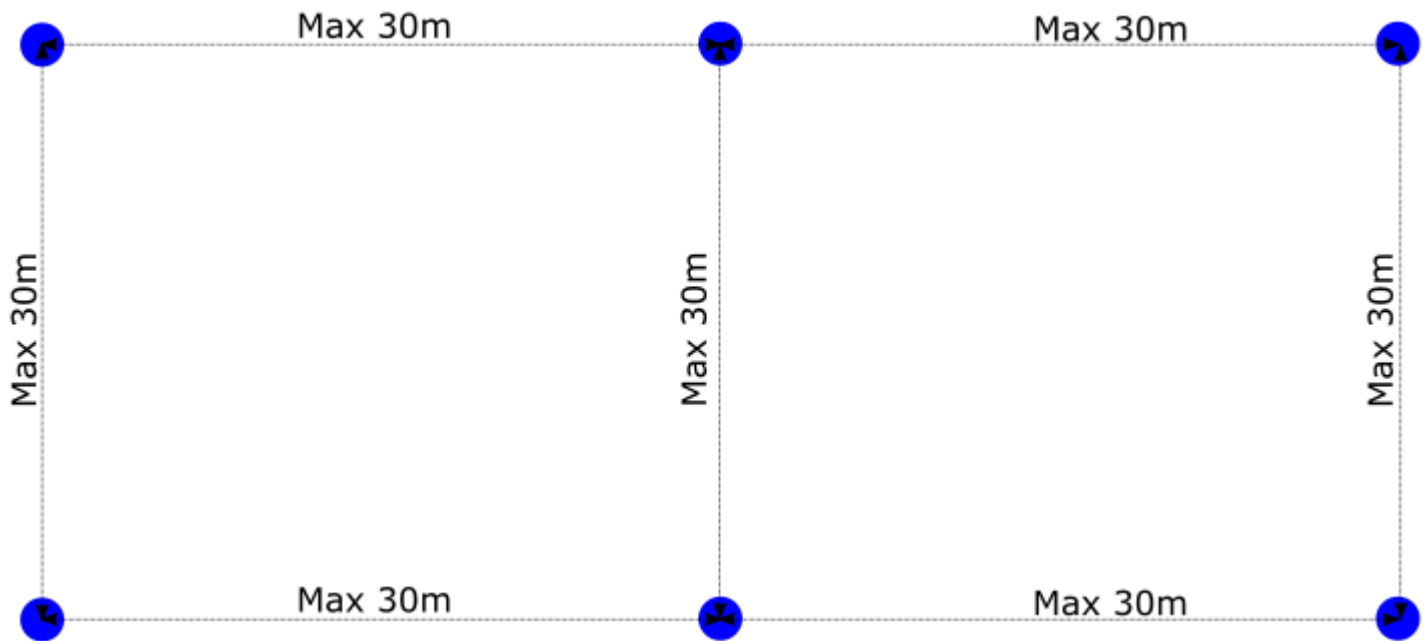

If operating in an outdoor/indoor mode, then the rover will not switch to use the VBOX IPS until 6 beacons are in view. This means that it is only the first 6 beacons that will need to be placed closer together to ensure that 6 beacons are in view before the vehicle enters the test area. The remaining beacons can be placed with a greater separation so long as



the vehicle is always within a 60 m radius of at least 6 beacons.



For greater accuracy, it is recommended that the beacons are placed between 3 – 5 m above ground (i.e. above the roof of the test vehicle) and that each beacon varies in height by at least 300 mm to the nearest beacons, alternating in a high-low pattern.

When mounting the VIPS beacons, there are a couple of considerations that need to be made. It is important when mounting the beacons that they are not mounted within at least 200 mm (or greater if possible) of an object, other than the surface the beacon is mounted to, that could cause reflections (e.g. a wall or metal structure) and that the beacons are mounted in the correct orientation in relation to the expected orientation of the Rover when in use.



The beacons require a **9 – 36 V power source** that is connected to the **2 way Lemo connector**. The **other Lemo connector** on the beacon is for Firmware upgrades and should be covered with the supplied splashproof plug to ensure waterproofness.

The VIPS beacons have 4 magnets on the base allowing for easy installation onto any ferrous surface, however Racelogic can supply metallic plates that can attach to a tripod for quick installations.


Suitable Beacon Orientations




Side by side




Side by side with small height difference



Side by side with large height difference, tops towards each other




X

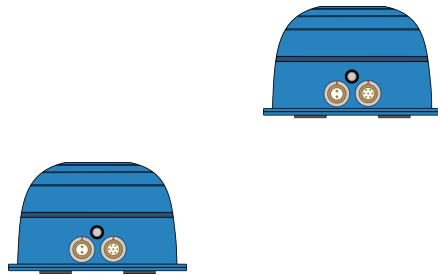


Side by side with large height difference

X

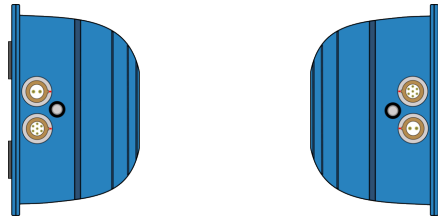


Tops together

X

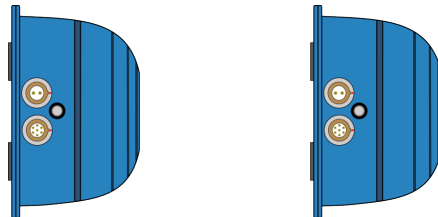


Tops to base

X

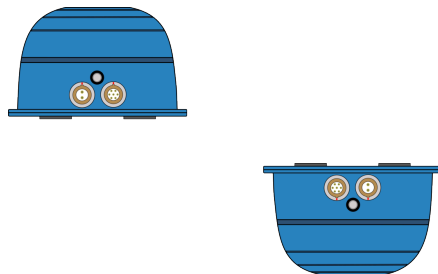


Base to base

X

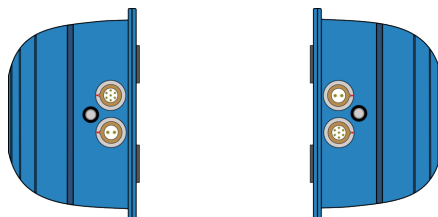

Side to base

X

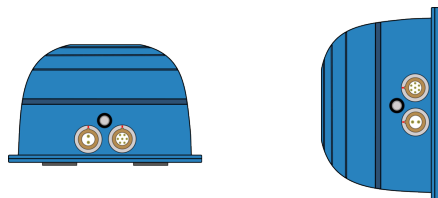

Side by side with large height difference, tops away from each other



Rover (VIPS-R-V2) Installation

The VIPS Rover looks similar to the Beacon, however the rover contains an internal IMU and so care should be taken to ensure that the Rover is mounted on a section of the roof that has the least vibration. This is usually towards the rear of the vehicle, just in front of the rear windshield. The rover should also be mounted in a way such that it has a clear view to the beacons and away from any objects that may block that view (Roof bars, radio antennas etc).



03 - VBOX IPS Rover Connection to VBOX 3i

The Rover unit can connect to a standard VBOX 3i and switches seamlessly between GPS and the indoor positioning system, allowing you to use your original hardware for both outdoor and indoor testing. As the VIPS is designed to be used with IMU integration enabled, the same [IMU Initialisation Process](#) should be performed as normal.

For indoor only use, it is important that the VBOX 3i does not have a GPS antenna connected. If the VBOX receives a satellite signal, even a poor one, the timing will change from the internal clock to GPS time, causing the VIPS system to fail. The VBOX 3i will function the same as when using GPS in terms of CAN In / Out, data logging (analogue, etc.) and VBOX Test Suite use.


When indoor/outdoor operation is selected, the VBOX IPS system will wait for GPS lock and IMU synchronisation before attempting to initialise the VIPS positioning.

Using Internal IMU

Connection between the Rover and VBOX 3i is via the supplied **RLCAB153** cable.

- Insert the 7 way Lemo connector in to the right hand connector on the Rover.
- Connect the 25 way connector to the **A IN** port on the VBOX 3i.
- Connect the 5 way Lemo connector to the **SER** port on the VBOX 3i.




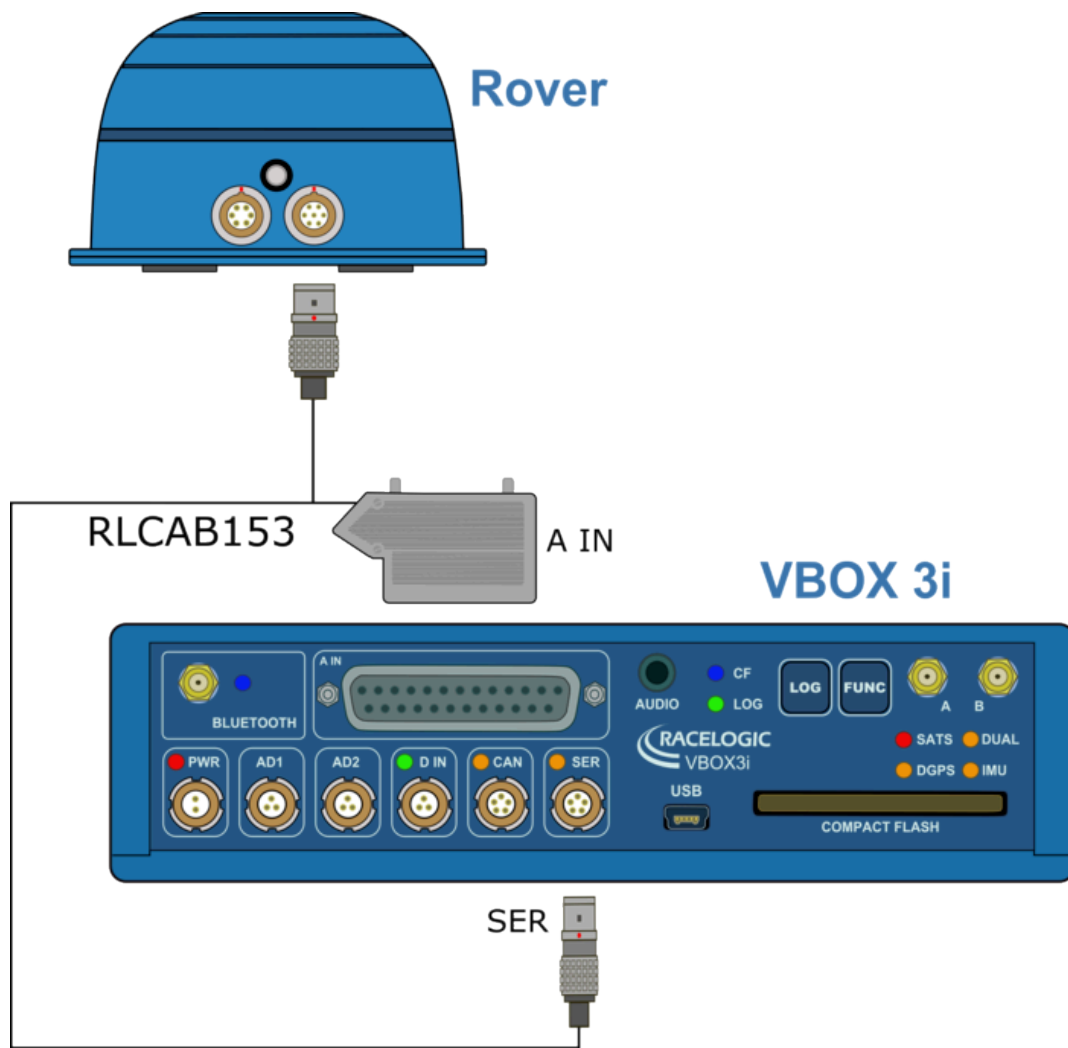

Using External IMU

Connection between the Rover and VBOX 3i is via the supplied **RLCAB153** cable.

- Insert the 7 way Lemo connector in to the right hand connector on the Rover.
- Connect the 25 way connector to the **A IN** port on the VBOX 3i.
- Connect the 5 way Lemo connector to the **SER** port on the VBOX 3i.
- Insert the 6 way Lemo connector in to the left hand connector on the Rover.
- Insert the other end of the cable in to the **CAN / KF** port on the IMU04.

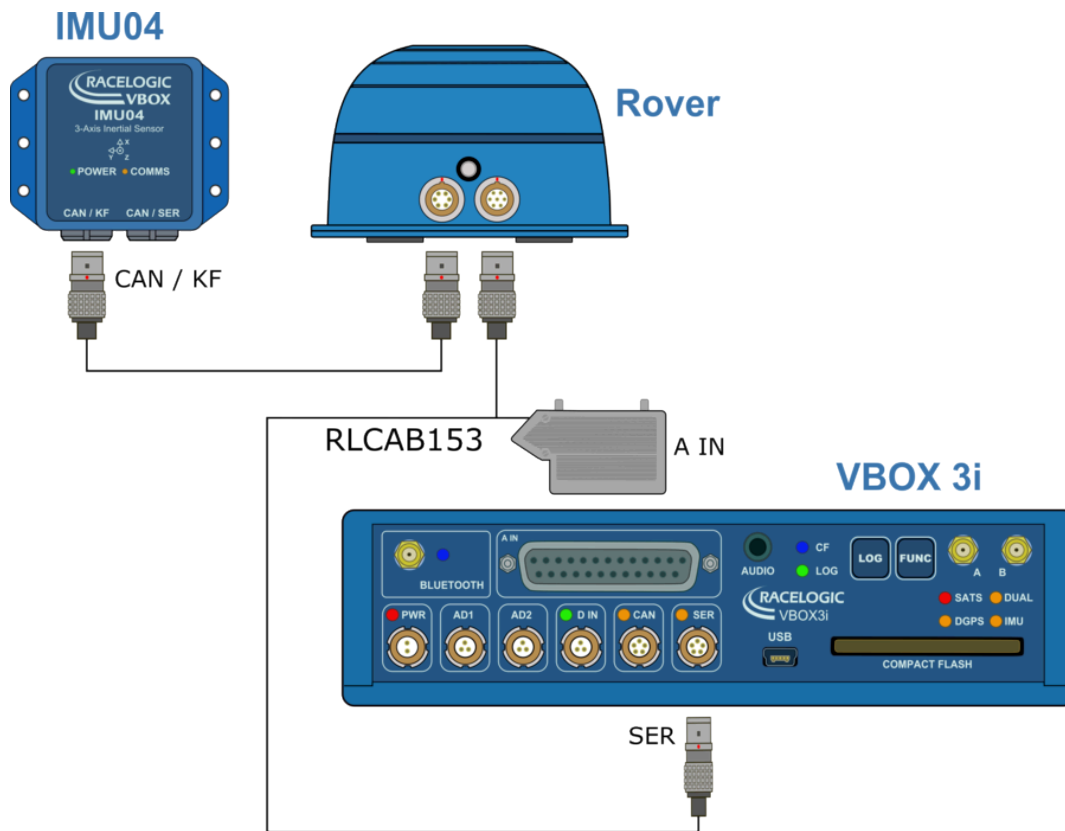


04 - VBOX IPS Site Configuration

For the VBOX IPS to work correctly, the rover needs to know the expected site configuration. This configuration informs the rover of the expected Beacon IDs it will be using and their locations. This information needs to be manually entered by the user using the **VIPS Site Configuration Software**.

Getting Started

On opening, the user is presented with the option to load a previously saved site configuration (.JSON file) or create a new configuration. On this screen, you can also choose to save the current settings.

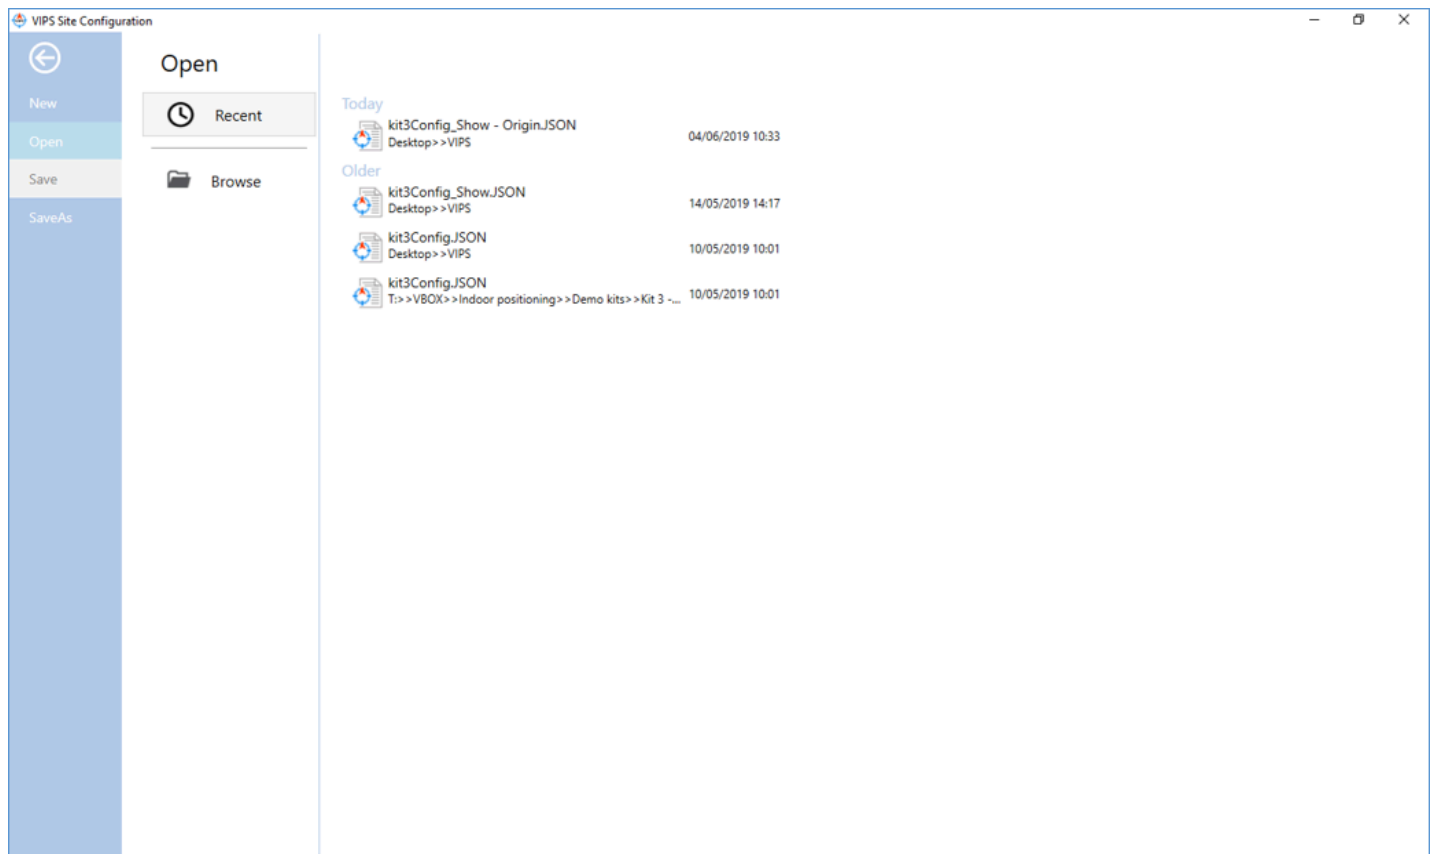

By selecting **New**, or a previously saved configuration file, you are then presented with options necessary for correct VIPS operation.

Site Settings



The first page the user is presented with is the **Site Settings** tab. Here you can configure how the Rover is expected to operate and also change the Radio Settings.

Note: The radio settings are for Racelogic development purposes only.

The screenshot shows the 'VIPS Site Configuration' application window. The 'Site' tab is selected in the left sidebar. The main area is divided into two sections: 'Site settings' and 'Radio settings'. In the 'Site settings' section, the 'Identifier' is set to 0. The 'Origin' is set to 0, 0, 0. The 'Rotation angle' is set to 0. The 'Indoor only' radio button is selected, and the 'Stand alone' radio button is also selected. In the 'Radio settings' section, the 'Channel number' is set to 4, 'Preamble number' is set to 18, 'PRF' is set to 64, 'SFD' is set to IEEE, 'Tx power mode' is set to Fixed, and 'Tx power level (dB)' is set to 27.0. The 'Leading edge time threshold' is set to 0. A 'Save' button is located in the top right corner of the window. The status bar at the bottom right shows the file path: C:\Users\Jake Durbin\Desktop\VIPS\kit3Config_Show - Origin.JSON.

Identifier

There may be multiple VBOX IPS operating within the same test ground and so to ensure the rover only uses the signals coming from the intended test site, a site identifier needs to be entered. This identifier will need to match the site identifier of the beacons that will be used.

For temporary installations, this identifier should be set to 0. For permanent installations a non-zero number should be used.



Origin

For indoor/outdoor use, it is important that the origin of the VBOX IPS matches a global coordinate system to ensure there is a smooth transition between GPS and VBOX IPS position.

The enter value of the origin should be a georeferenced location that is the 0,0 point from which all VBOX IPS beacon measurements are taken from.

Rotation Angle

As well as a georeferenced origin, it is also important that the VBOX IPS x/y measurements are rotated correctly into a 'North up' frame.

The entered value in the rotation angle should be the bearing of the track direction, in degrees from North.

For indoor use only, the rotation angle should be set to 0.

Indoor or Indoor/Outdoor

Choose whether the expected use will be indoors only, or indoors and outdoors.

VB3i or Stand alone

Although VBOX IPS can be connected to a VB3i, there is also the option to use the system without a VBOX, called 'stand alone'.


When in stand alone mode, the VBOX IPS will generate a 100 Hz PPS output that other equipment may use for synchronisation. When in VB3i mode, this pin becomes an input and should be connected to the PPS from the VBOX.

Beacons



Each VBOX IPS installation will contain a number of beacons. In this section of the software, it is possible to set the Beacon IDs that will be used as well as the x,y,z distances to the origin.



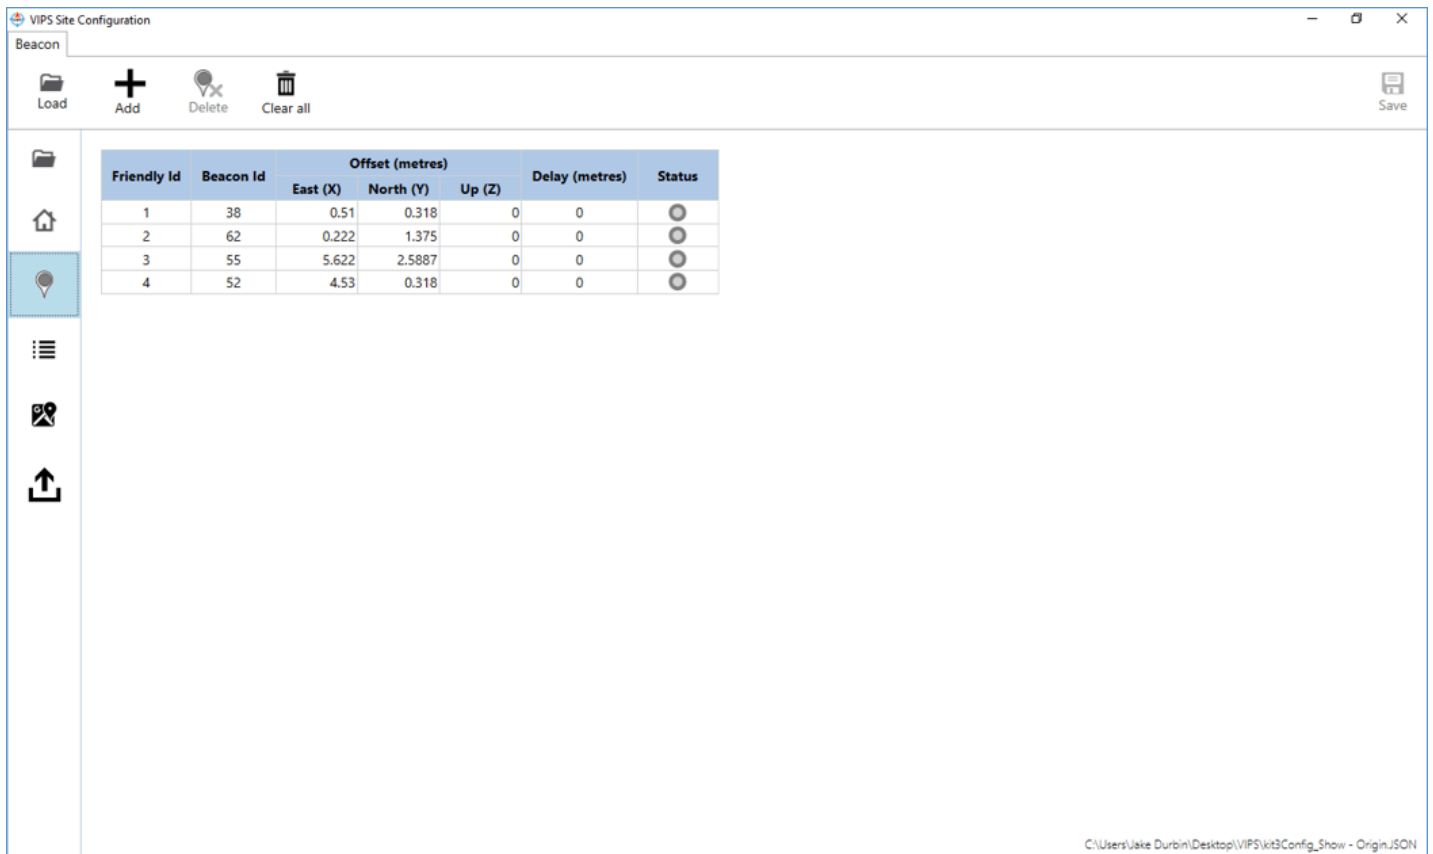

Load

The **Load Button** allows you to load the settings from previously surveyed installation.

Add

The **Add Button** allows you to add a new beacon into the system. Adding a new beacon will automatically increment the 'Friendly ID' by 1.

Delete

The **Delete Button** allows you to remove the selected beacon from the installation.

Note: There will be no negative effects of having beacons in the configuration that will not actually be present in the physical installation.

Clear all

The **Clear all** button will remove all beacons in the list.

Friendly ID

The **Friendly ID** is a user friendly ID that should match the sticker on the Beacon. The Friendly ID cannot be changed and will be a consecutive count up from 1.



Beacon ID

The **Beacon ID** is a unique identifier that is hard coded into the beacon, similar to a serial number. This ID number can be changed to match the Friendly ID as needed, allowing for replacement beacons to be easily swapped in and out.

Offset

The **Offset** is the distance between the beacon and the nominated origin location, with East, North and Up being positive values, West, South and Down being negative values (assuming a rotation angle of 0).

Delay

The **Delay** option allows for further calibration to the beacons if needed.

Status

The **Status** display gives a live display of whether the beacon is currently operating or not.

Ping Table



The VBOX IPS rover needs to know the expected order it will receive the 'Ping' signals from the beacons, based on whichever beacon is nearest. Once the Beacon Offsets have been entered, you should press the **Calculate** button to update the Ping Table. For sites with unusual layouts it may be necessary to manually edit this table, but for most sites the automatic calculation will be correct.

It is important that the Ping table correctly matches the expected number of beacons, with the addition of 'Beacon 0' which is always present.



VIPS Site Configuration

Ping table

Calculate Save

Friendly Id	Nearest beacon									
0	1	3	4	2	0	0	0	0	0	0
1	1	2	4	3	0	0	0	0	0	0
2	2	1	4	3	0	0	0	0	0	0
3	3	4	2	1	0	0	0	0	0	0
4	4	3	1	2	0	0	0	0	0	0

C:\Users\Jake Durbini\Desktop\VIPS\kit3\Config_Show - Origin.JSON

Upload to Beacon



Once the site configuration has been entered correctly, the information is needed to be uploaded to the Rover. This can be done via Bluetooth, however for the initial release it is recommended to use the supplied configuration cable.

To upload the configuration, a COM port will first need to be selected from the drop down list of available COM ports. If the required COM port is not displayed, pressing the **Refresh** button will refresh the COM port list.

Upload to beacon

COM3 COM Port

Refresh

Upload

5000 Timeout (mS)

LPC Enter LPC mode



When uploading to a Rover once a COM port is selected, the user will need to **Enter LPC mode**. This is only required once per power cycle. Once in 'LPC Mode' the user can then press the **Upload** button to upload the configuration to the beacon. The software will then inform the user whether the upload has been successful or not.

When uploading to a Beacon there is no need to first enter LPC mode, the configuration can be uploaded directly.



05 - VBOX IPS Using with a VBOX 3i/Standalone

Using VBOX IPS with a VBOX 3i

When set to **VB3i connected** within the [VIPS Site Configuration Software](#) and the correct [Site Configuration](#) uploaded to the Rover unit, it is now possible to start testing using a VB3i and VBOX IPS. The VBOX 3i will function the same as when using GPS in terms of CAN In/Out, data logging (analogue, etc.) and [VBOX Test Suite](#) use.

As the VIPS is designed to be used with IMU integration enabled, the same [IMU Initialisation Process](#) should be performed as normal. When indoor/outdoor operation is selected, the VBOX IPS system will wait for GPS lock and IMU synchronisation before attempting to initialise the VBOX IPS positioning.

Using VBOX IPS as Stand Alone

When set to **Stand alone** within the [VIPS Site Configuration Software](#) and the correct [Site Configuration](#) uploaded to the Rover unit, the VBOX IPS can be used without a VBOX by connecting the Rover unit via serial connection. In this mode, there is no Kalman filtering of the data, making the output data more noisy than the VBOX solution.

Site ID

When a rover powers up it searches for beacons. Once 1 or more beacons are found, it queries the closest beacon for its site ID and the checksum for its configuration information.

This site ID and checksum are then compared to the last 4 sites that the Rover has seen. If they match, the Rover will load the configuration from memory and start running.

If the ID and/or checksum don't match anything the Rover has seen before, it will then initiate a Bluetooth connection to the beacon and download the site configuration information. This means that only the beacons need to be configured, any rover can arrive at the site and will automatically work without further configuration.



Site Origin of 0

VBOX IPS normally outputs locations in degrees latitude and longitude, if however an origin of 0,0 is given, then the conversion to latitude/longitude is skipped and the VBOX IPS rover will output in meters X,Y. When operating with a VB3i, an origin is always needed, when operating in standalone mode, this is optional.




06 - VBOX IPS Troubleshooting


Upload Timeout

When uploading the VBOX IPS configuration, the process may time out. If this occurs, there are a number of things that can be changed to solve the issue, other than repeated attempts.

1. The first is to increase the **Timeout** number within the [VIPS Site Configuration Software](#). Increasing this number will increase the amount of time that passes before communication times out.

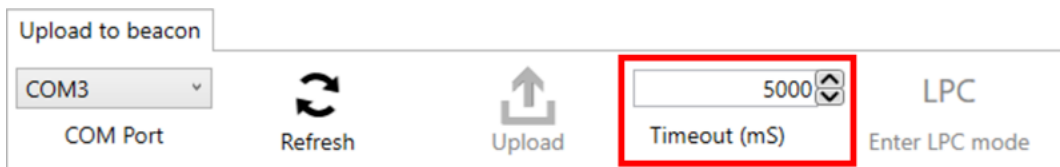


2. The second option is to ensure that the **USB transfer Sizes** are set to the maximum of 4096 on both receive and transmit. This is configured under the **Advanced** options of the **Port Settings**.

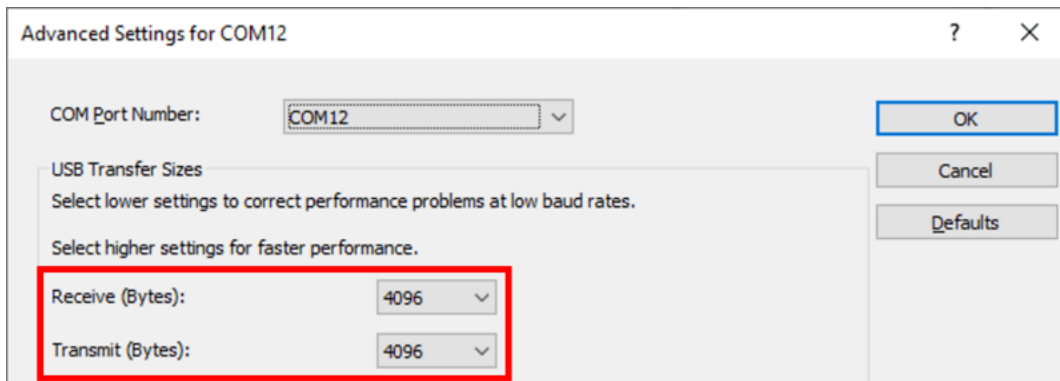

VBOX IPS - PIN OUTS


Beacon

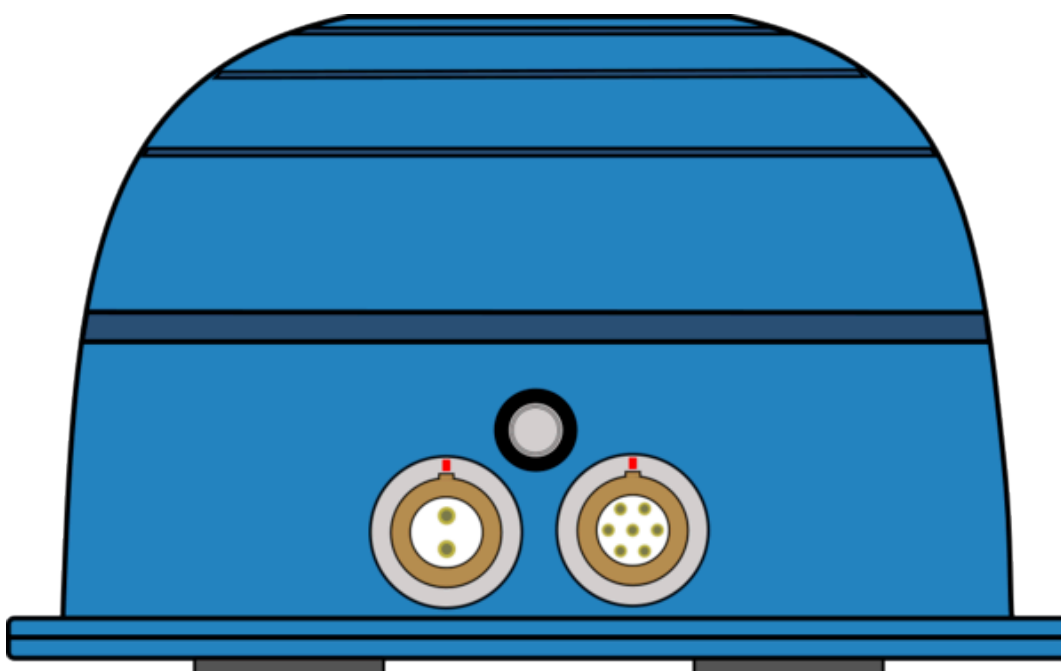

Beacon front view




Connector 1 - POWER (Lemo 2 PIN)

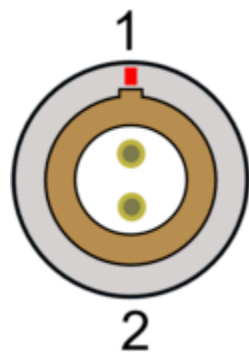

PIN	I/O	Function
1	I	+12 V Power
2	I	Ground

Connector 2 (Lemo 7 PIN)

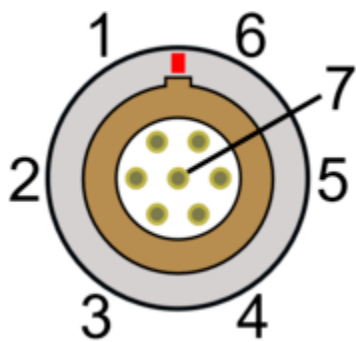


PIN	I/O	Function
1	N/A	N/C
2	N/A	N/C
3	O	VIPS Tx
4	I	VIPS Rx
5	N/A	N/C




PIN	I/O	Function
6	I	+12 V Power
7	I	Ground
Chassis	I	Shield

Rover

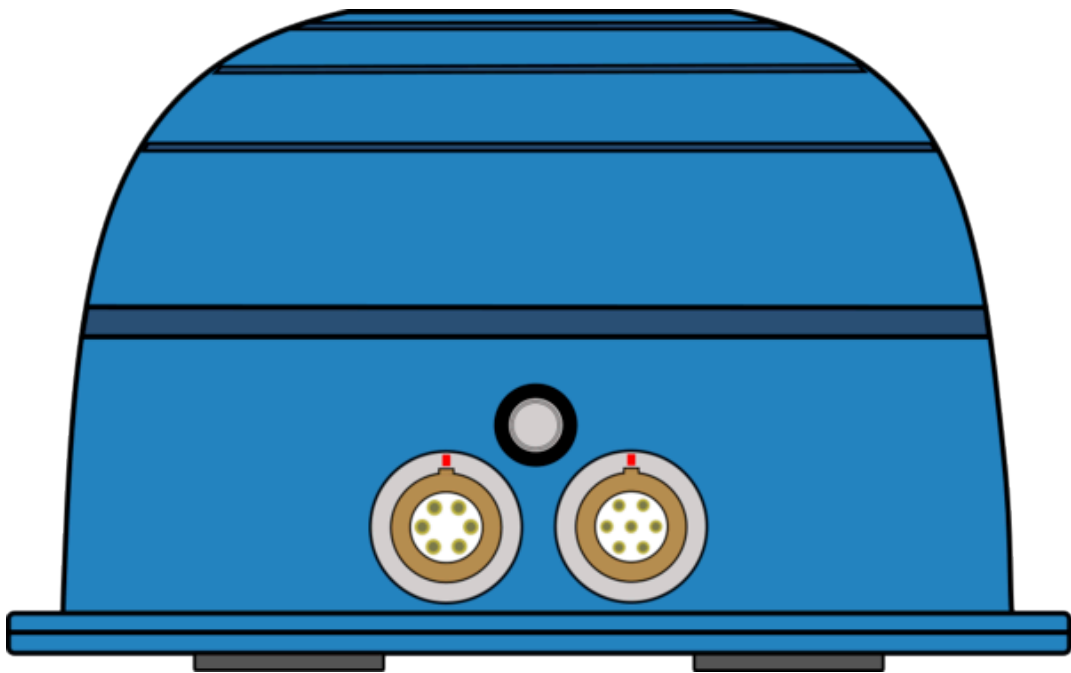


Rover front view

Connector 1 (Lemo 6 PIN)

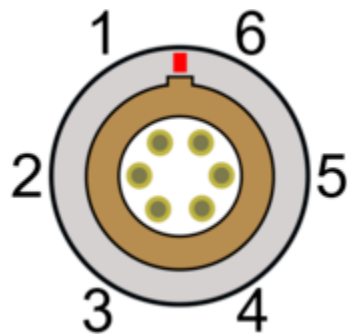

PIN	I/O	Function
1	N/A	Do not use
2	N/A	Do not use
3	I/O	CAN High
4	I/O	CAN Low
5	I	+12 V Power
6	I/O	PPS
Chassis	I	Ground

Connector 2 (Lemo 7 PIN)

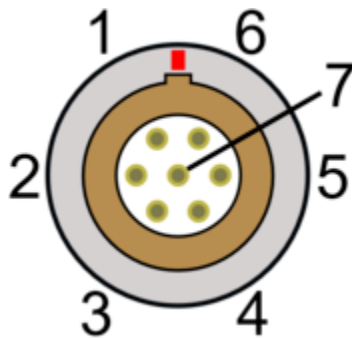

PIN	I/O	Function
1	I	IMU Rx
2	O	IMU Tx
3	O	VIPS Tx
4	I	VIPS Rx
5	I/O	PPS
6	I	+12 V Power
7	I	Ground



PIN	I/O	Function
Chassis	I	Shield



VBOX IPS - Technical Specification

Rover Specifications

Velocity	
Accuracy	0.1 km/h (averaged over 4 samples)
Update rate	100 Hz
Maximum velocity	300 km/h
Minimum velocity	0.1 km/h
Resolution	0.1 km/h
Latency	60 ms

Relative Positioning	
Horizontal accuracy	<10 cm (95 % CEP*)
Update rate	100 Hz
Height accuracy	1 m (95% CEP*)
Absolute position	<10 cm (95% CEP*)^



Distance	
Accuracy	0.05% (<50 cm per km)
Update rate	100 Hz
Resolution	1 cm

Acceleration	
Accuracy	0.5 %
Maximum	20 g
Resolution	0.01 g
Update rate	100 Hz

Heading	
Resolution	0.01°
Update rate	100 Hz

Time	
Resolution	0.01 s
Accuracy	30 ns



Brake Stop Accuracy (Trigger activated)	
Accuracy	5 cm**

Definitions

* Circle of Error Probable (CEP): 95 % of the time the position readings will fall within a circle of the stated diameter

** Based on <50 m brake stop distance

^ Subject to accurate site survey and installation

UWB Radio	
Frequency	4.0 – 5.0 GHz or 6.0 – 7.0 GHz
Transmit power (peak / average)	0 dBm / -41.3 dBm

Outputs

Rover

RS232 Output	
RS232 Port 1	Position and velocity
RS232 Port 2	IMU04 data
Output data rate	100 Hz



Digital Output	
Signal levels	5 V DC
Output type	1 PPS*

Beacon

RS232 Output	
RS232 Port 1	Configuration only

Inputs

Rover

Unit Power	
Input voltage range	6.5 – 30 V DC
Power consumption	2 W

Digital Input	
Input Function	1 PPS*



Beacon

Unit Power	
Input voltage range	6.5 – 30 V DC
Power consumption	2 W

Rover IMU Specifications

	Gyroscopes (Angular rate sensors)	Accelerometers
Dynamic range	$\pm 450^\circ/\text{s}$	$\pm 20 \text{ g}$
Nonlinearity	0.01 % of full scale	0.1 % of full scale
Resolution	16-bit ADC ($0.014^\circ/\text{s}$)	16-bit ADC (0.15 mg)
Bandwidth	50 Hz	50 Hz
Noise density	$0.01^\circ/\text{s}/\sqrt{\text{Hz}}$	$60 \mu\text{g}/\sqrt{\text{Hz}}$
Bias stability	$0.003^\circ/\text{s}$	15 μg
Bias repeatability (1 year)	$0.2^\circ/\text{s}$	0.005 g


Environmental and Physical

IP rating	IP 67
Operating temperature	-30°C to +60°C
Storage temperature	-40°C to +85°C
Size (of each beacon/rover)	124 x 124 x 74.5 mm (l x w x h)
Weight (of each beacon/rover)	350 g



Beacon/Rover Dimensions

Measured in mm.

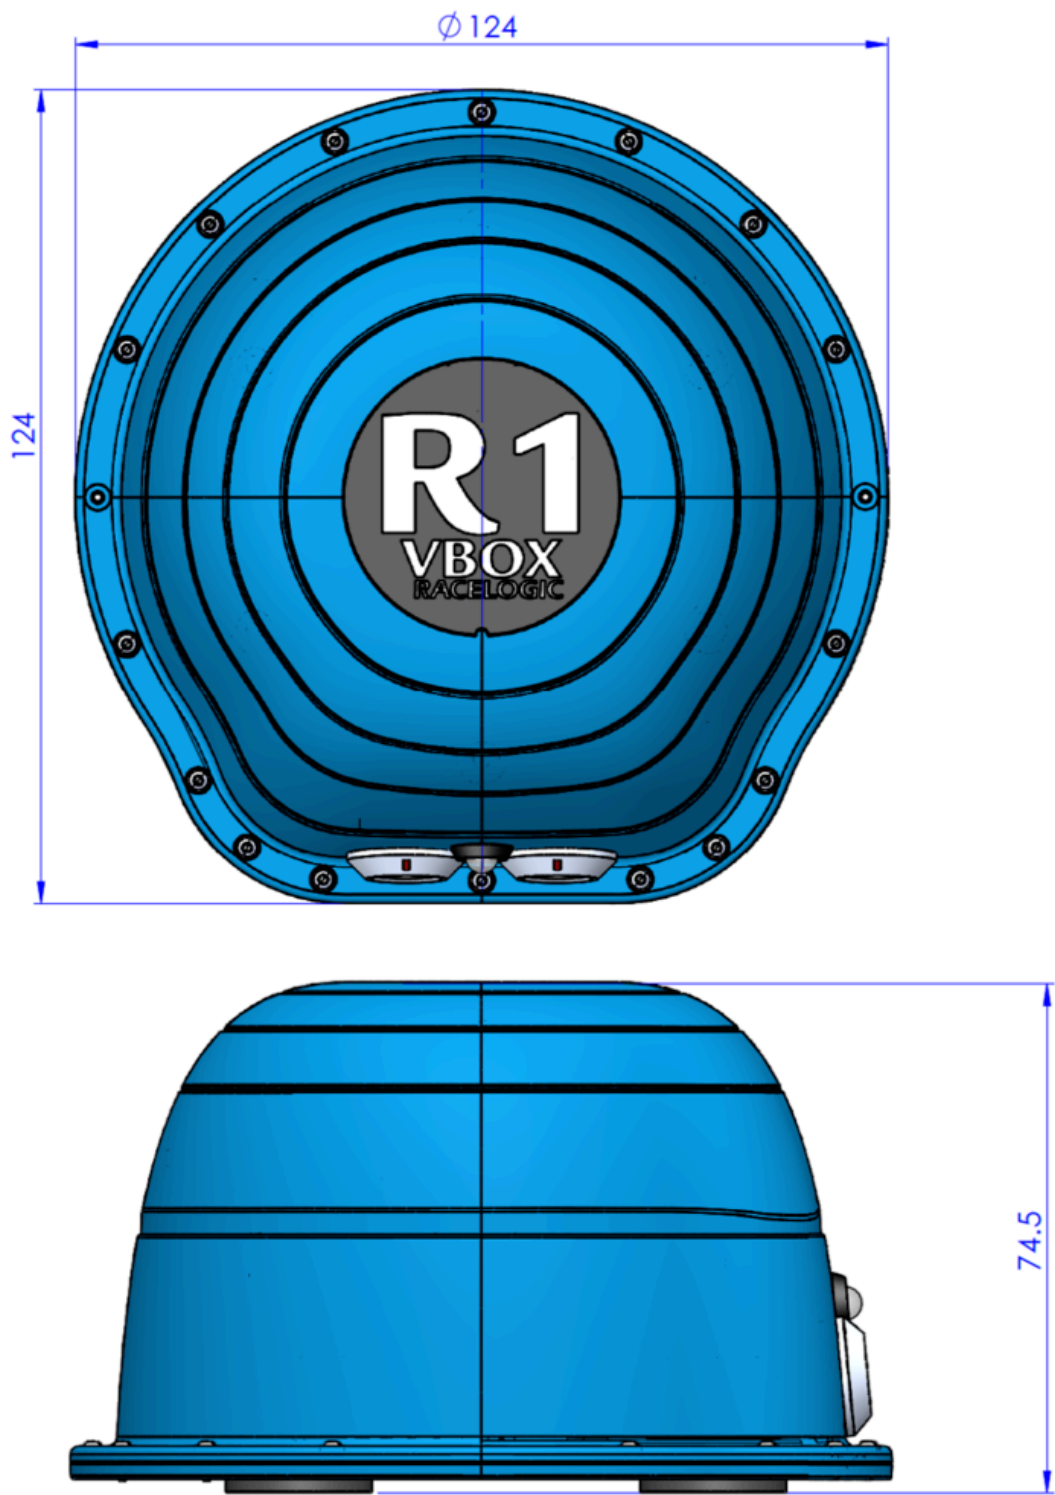

VBOX IPS - Upgrading Firmware

Firmware refers to the operating software inside the beacons and rover. Firmware is already installed within the VIPS units when purchased, however as more features are added in the future, the units may require updating from time to time.

The latest firmware will always be available in the [firmware section of the VBOX Automotive website](#).

To upgrade the VIPS firmware:

1. Download the **Latest VIPS Beacon and VIPS Rover Firmware Files** from the VBOX Automotive website and copy these files onto your computer.
2. Download the [Racelogic Upgrader Software](#) from the software section of the VBOX Automotive website.
Note: Please ensure that the latest version of Racelogic Upgrader is installed.
3. Connect the RLCAB151-L serial configuration cable, from the PC direct to the [Configuration Port](#) of the VIPS unit.
4. Connect the unit to power using the 2 pin power Lemo connector on the configuration cable.
5. Either '**double click**' on the '**.upgrade**' **firmware upgrade file**, which auto runs the Upgrader software, or **run the Upgrader software and load in the '.upgrade' firmware upgrade file**.
6. Ensure the correct **COM port** is selected within '**Options**' and press '**Upgrade**' to start the process.
7. Follow the onscreen instructions and the module firmware will be upgraded. At the end of the process, power down the module when prompted before further use.



VBOX IPS - Regulatory Information

For customers in the United States

This device complies with Part 15 of the FCC Rules:

Operation is subject to the following conditions:

1. This device may not cause harmful interference, and
2. This device must accept any interference received, Including interference that may cause undesired operation.

Changes and Modifications not expressly approved by RACELOGIC can void your authority to operate this equipment under Federal Communications Commissions rules.

For customers in Canada

This device complies with Industry Canada licence-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Le présent appareil est conforme aux CNR d'Industrie Canada applicables aux appareils radio exempts de licence. L'exploitation est autorisée aux deux conditions suivantes : (1) l'appareil ne doit pas produire de brouillage, et (2) l'utilisateur de l'appareil doit accepter tout brouillage radioélectrique subi, même si le brouillage est susceptible d'en compromettre le fonctionnement.

