

- Installation Manual -

Simple bracket solar street light 6.1 / 8.1



POWER 365

Ultimate Solar Lighting TECHNOLOGY BY FONROCHE

How does it work ?



The battery gets loaded during daytime with the electricity produced by the solar panel (PV).



Nighttime is detected by measuring the voltage of the solar panel :

- daytime $\rightarrow$ PV voltage $> 30V$
- nighttime $\rightarrow$ PV voltage $= 0V$



Avoid **any shadow** on the solar panel (trees, houses, traffic signs...). Shadows will considerably impact electricity production of the panel and hence reduce recharging of the battery.



Avoid **artificial light** on the solar panel during nighttime. This could hinder correct detection of sun fall by the panel and can, worst case, completely disable switching on of the light.

Transport

Do not depalletise the solar panels before arriving at the construction site. FONROCHE guarantee is voided if the modules are handled before.

All mechanical parts are collected together on a separate pallet. Do not disassemble the packages before arriving at construction site.

Reception

The delivery must be checked for completeness and possible transit damage immediately at receipt:

- Control if the parts have not been harmed during transport, otherwise please claim damage to the shipper within 48h after receipt (and inform FONROCHE Lighting).
- Likewise, control the right fit bracket/pole, if any operating problem is found, claim damage to FONROCHE Lighting.

Installation must comply with the installation manual; all items provided must be installed otherwise the guarantee is voided.

Long-term storage

Power365 system:

Batteries must be stored within their original packing in a dry location.



The installation of batteries should happen before the date indicated on the packing. Contact FONROCHE Lighting in case you need to store them longer.

Mechanical parts:

Mechanical parts must not be stored directly on the ground or near a storage place of powdery products. The storage area should be sufficiently ventilated to avoid any deterioration.

Poles strapping should be removed for storage periods longer than 3 weeks.

Maintenance - swap

The client is responsible for returning any defective part to FONROCHE Lighting for expertise. After receipt of the defective parts, FONROCHE Lighting will determine the guarantee validity. Depending on the result of the expertise, the defective spare part may be charged to the client if the guarantee period has expired or if the default is the result of an event out of FONROCHE Lighting responsibility (bumps, falls, unadapted handling...).

FCC Regulatory notices

Modification statement

“Fonroche Lighting” has not approved any changes or modifications to this device by the user. Any changes or modifications could void the user’s authority to operate the equipment.

Interference statement

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

Wireless notice

This equipment complies with FCC radiation exposure limits set forth for an uncontrolled environment. The antenna should be installed and operated with minimum distance of 20 cm between the radiator and your body. This transmitter must not be co-located or operating in conjunction with any other antenna or transmitter.

FCC Class B digital device notice

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

Reorient or relocate the receiving antenna.

Increase the separation between the equipment and receiver.

Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.

Consult the dealer or an experienced radio/TV technician for help.

Part list

N°	Réf. Ar	Désignation	Quantité
1	1100001	Universal tool disconnect MC4	1
2	1108025	Washer M08 Stainless steel A2-70-M	4
3	1108044	Screw TBCH M 10 x 70 Stainless steel A2-70	2
4	1108046	Washer M10 - M - Stainless steel A2-70	20
5	1108047	Grower Washer M10 - M - Stainless steel A2-70	10
6	1108048	Nut M10 Stainless steel A2-70	10
7	1108058	Grower Washer M08 - Stainless steel A2-70	2
8	1108063	Screw TBHC M10 x 25 Stainless steel A2 -70	8
9	1108066	Nut M08 Stainless steel A2-70	2
10	1108068	Screw TBHC M08 x 80 Stainless steel A2 -70	2
11	1108070	Black screw Hexa Head notched base HM06 x 20 - DIN 6921 - Stainless steel A2-70	4
12	1108384	Locknut M6 - DIN 6926 - Stainless steel A4-80	4
13	1999013	PV Module - 60 cells - 38mm - 3,2mm - Black	1
14	2301201	Plate Width=4 - battery support	1
15	2301203	Binding - POWER 365	2
16	2301209	Orientation flask Left	1
17	2301210	Orientation flask Right	1
18	2301212	High tube	1
19	2301250-2301251	Simple bracket D60 - with setscrews M10 and plastic plug	1
20	-	Pole with M10 setscrews	1
21	-	Box energy - Power 365	1
22	2309203-à-2309205	Led lantern - with cap	1




N° screw	Thread type	Tightening torque (Nm)
11	M6	> 10
10	M8	> 24
3, 8, setscrews	M10	> 47,7

M10 Setscrews	16
---------------	----

1 Assemble the luminary on the bracket


Use a draw wire (fish-tape) to draw the connector cable of the lantern through the bracket to the top.

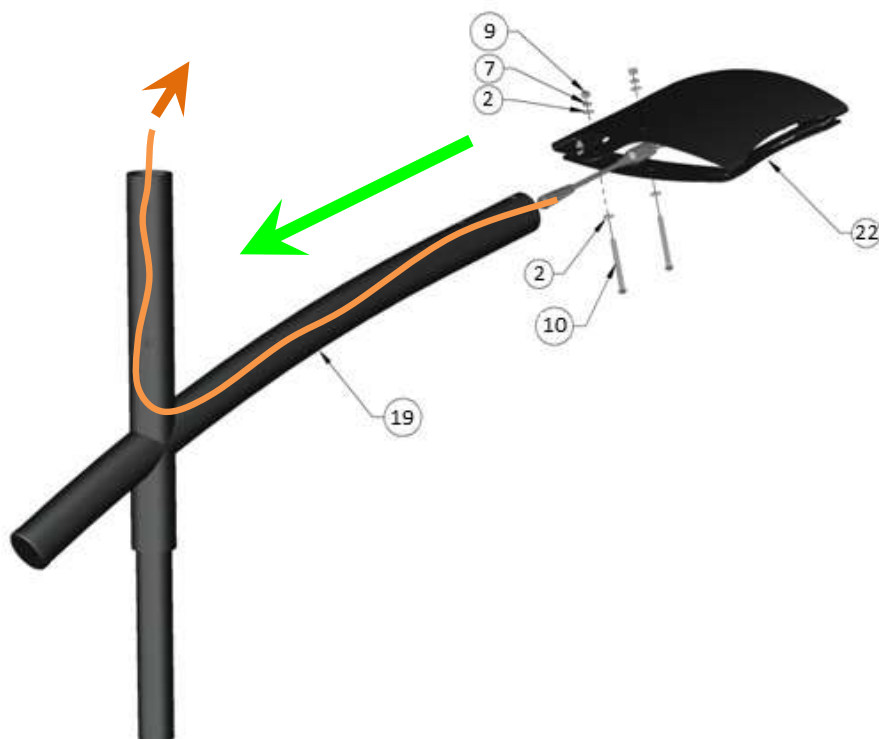

2 Set the luminary




*For all the setup, every screw/nut system must be tightened to the torque advocated by FONROCHE**

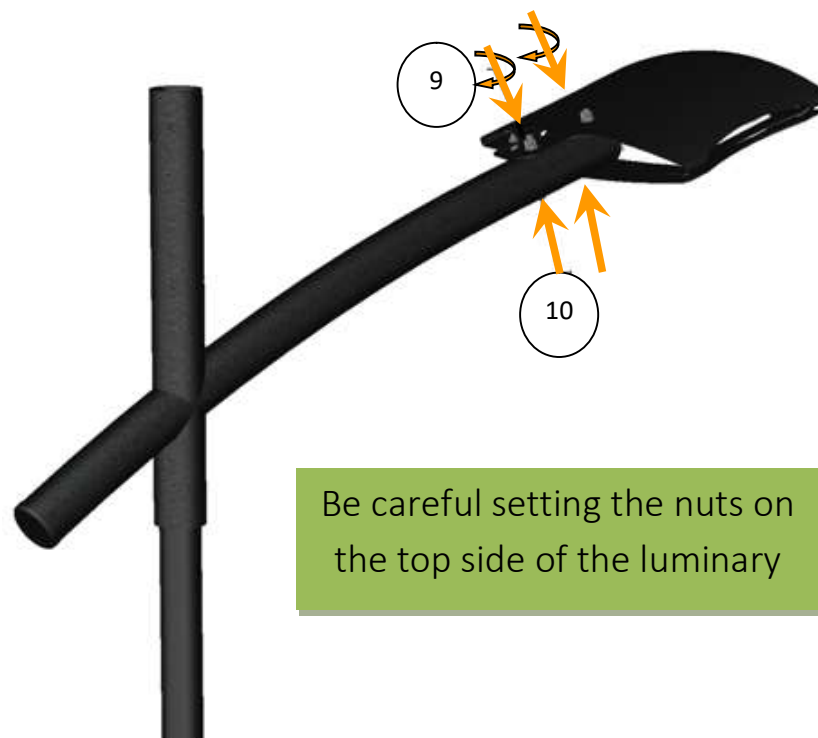

**See table on page 4*


3 Assemble the bracket on the pole and orientation

Orient the luminary, fasten slightly each setscrew, and then tighten them all.

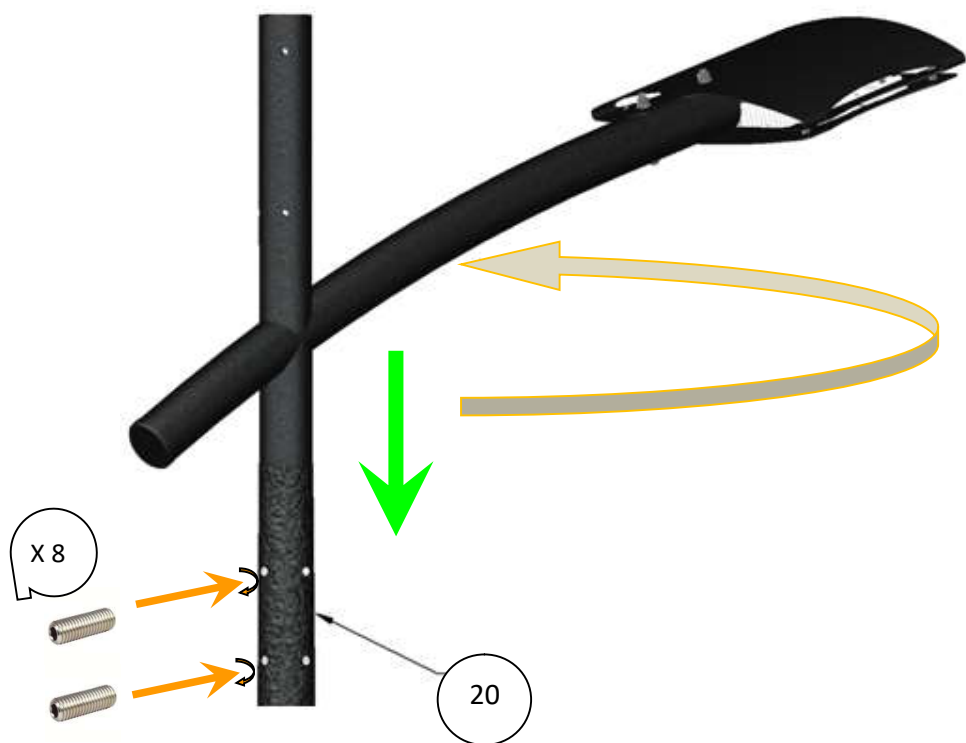

4 Insert the tube into the bracket


Insert the cable into the tube.

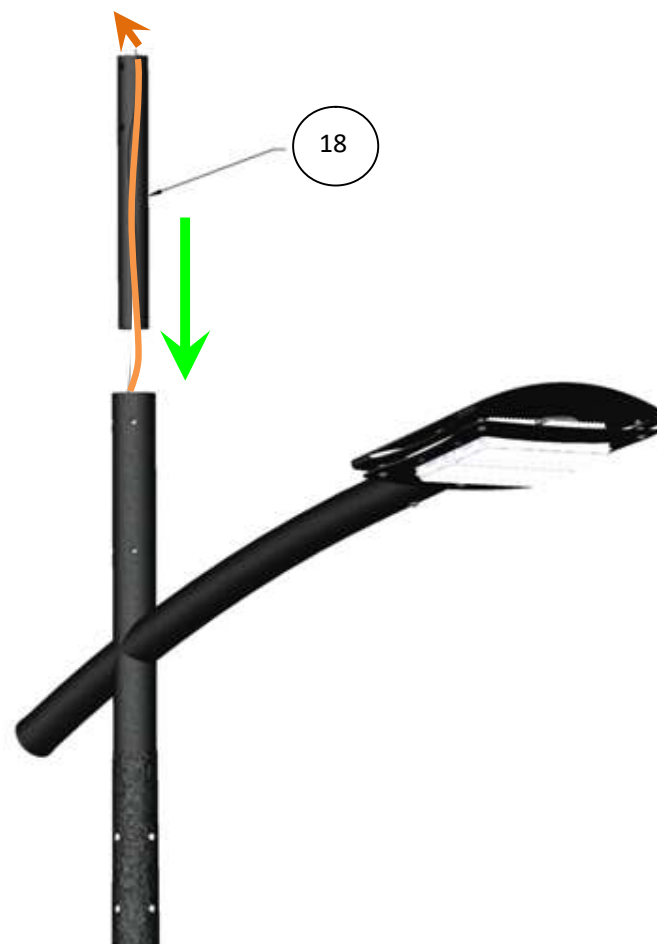


5

Assemble the base support

Set to 20° (unless otherwise stated).

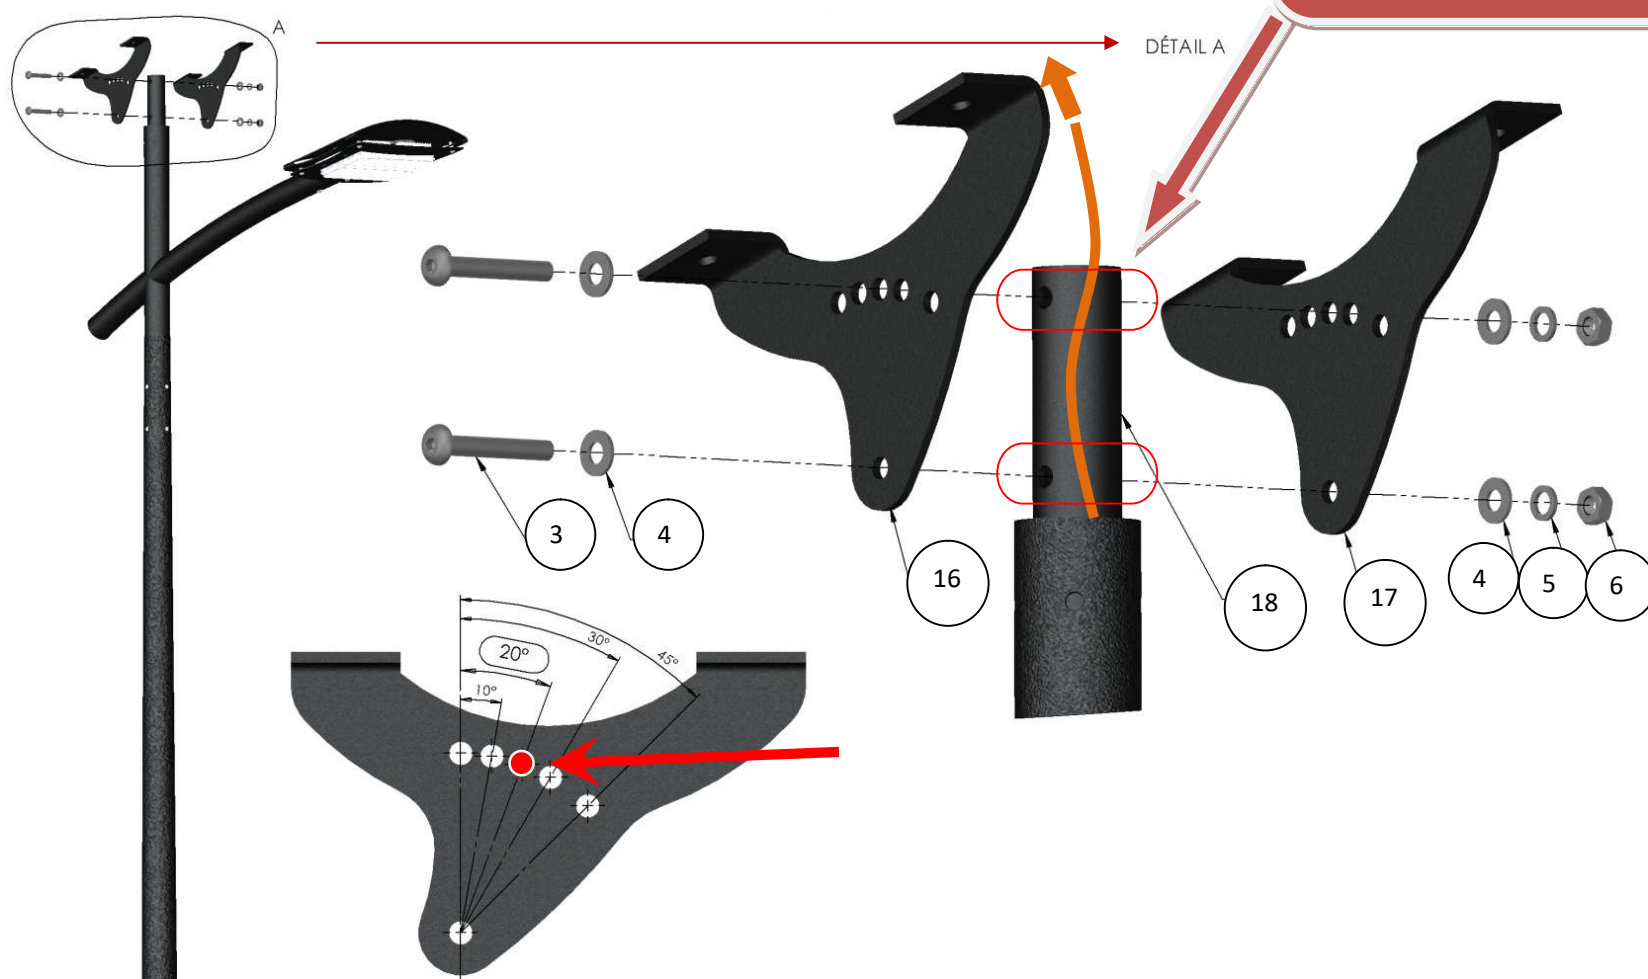


6 Assemble the support for PV modules

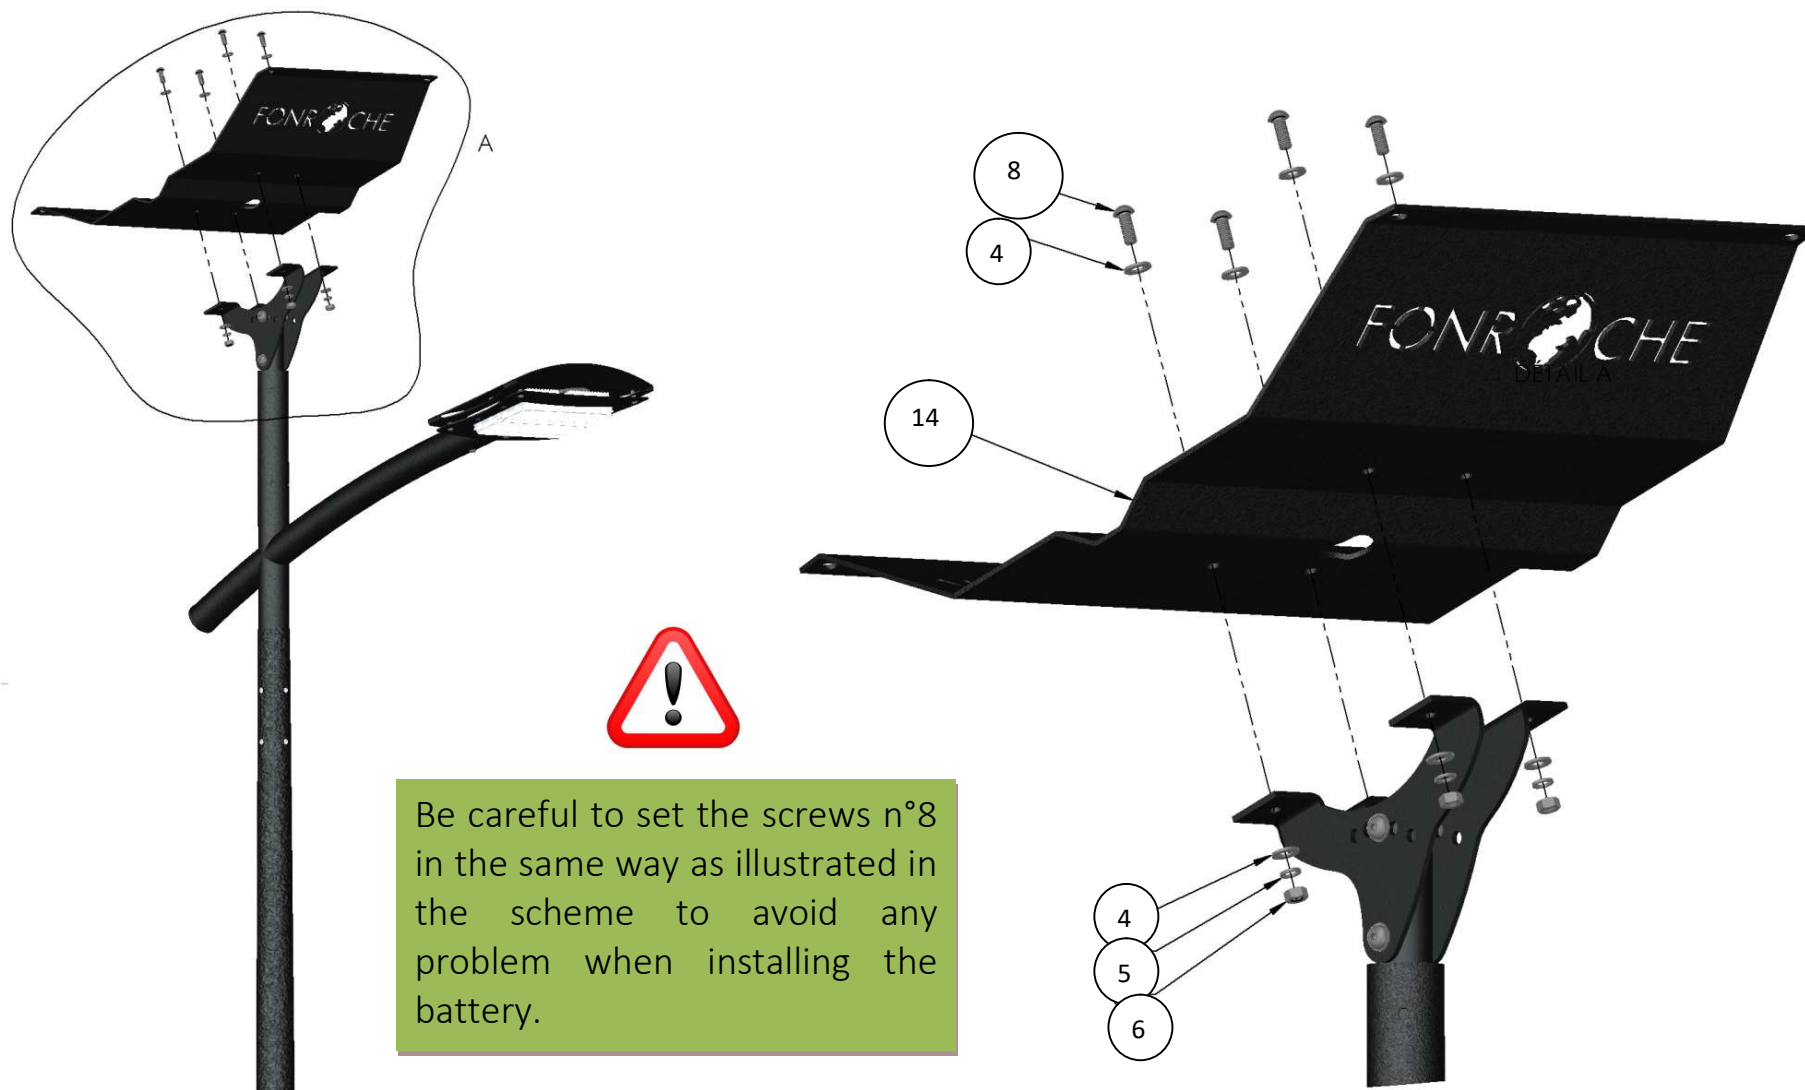


7 Install the first PV binding, on the ground

Install only one PV binding n°15 before erecting the pole

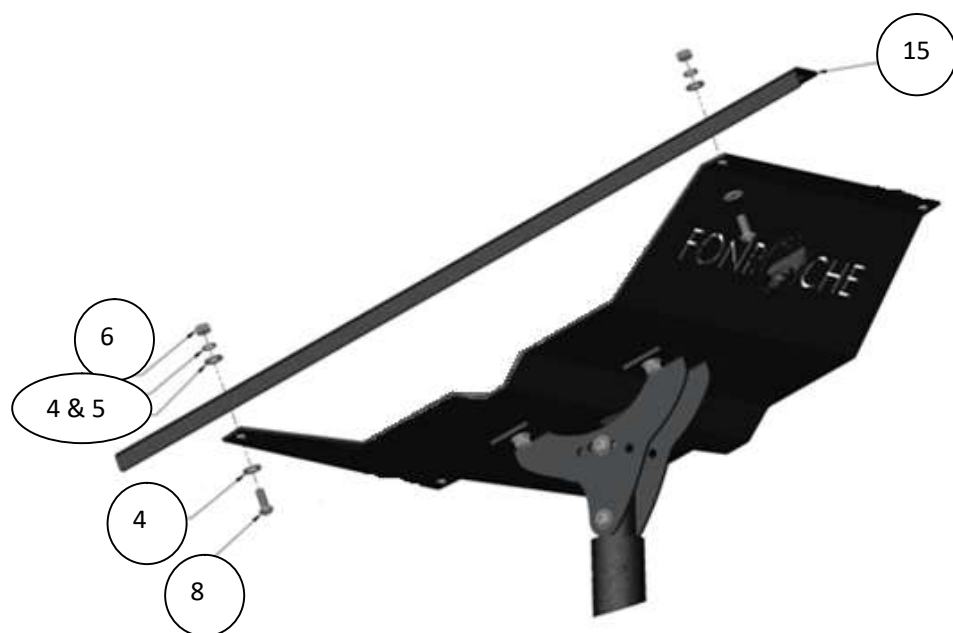


8 Erect the street light

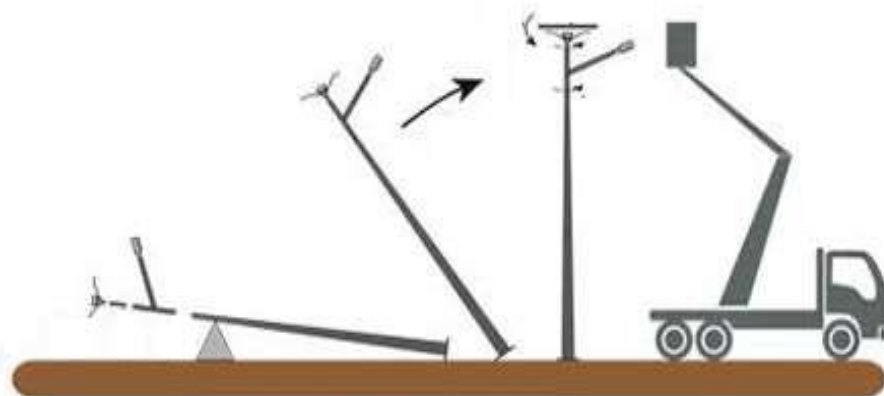

Once the street light erected, go to step 9.

9 Install the second binding, the battery and connect the luminary

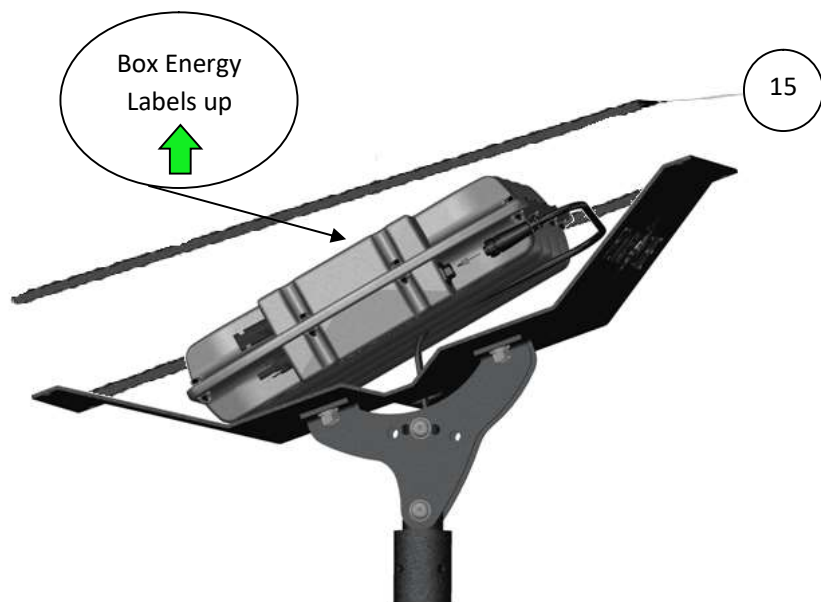

- Same steps as step 7.
- Pass the cable under the battery.
- Energy Box label should be positioned always to upside (direction to PV).

Do not leave the cable hanging under the support.




10 Assemble the PV




11

Orient the PV to the south

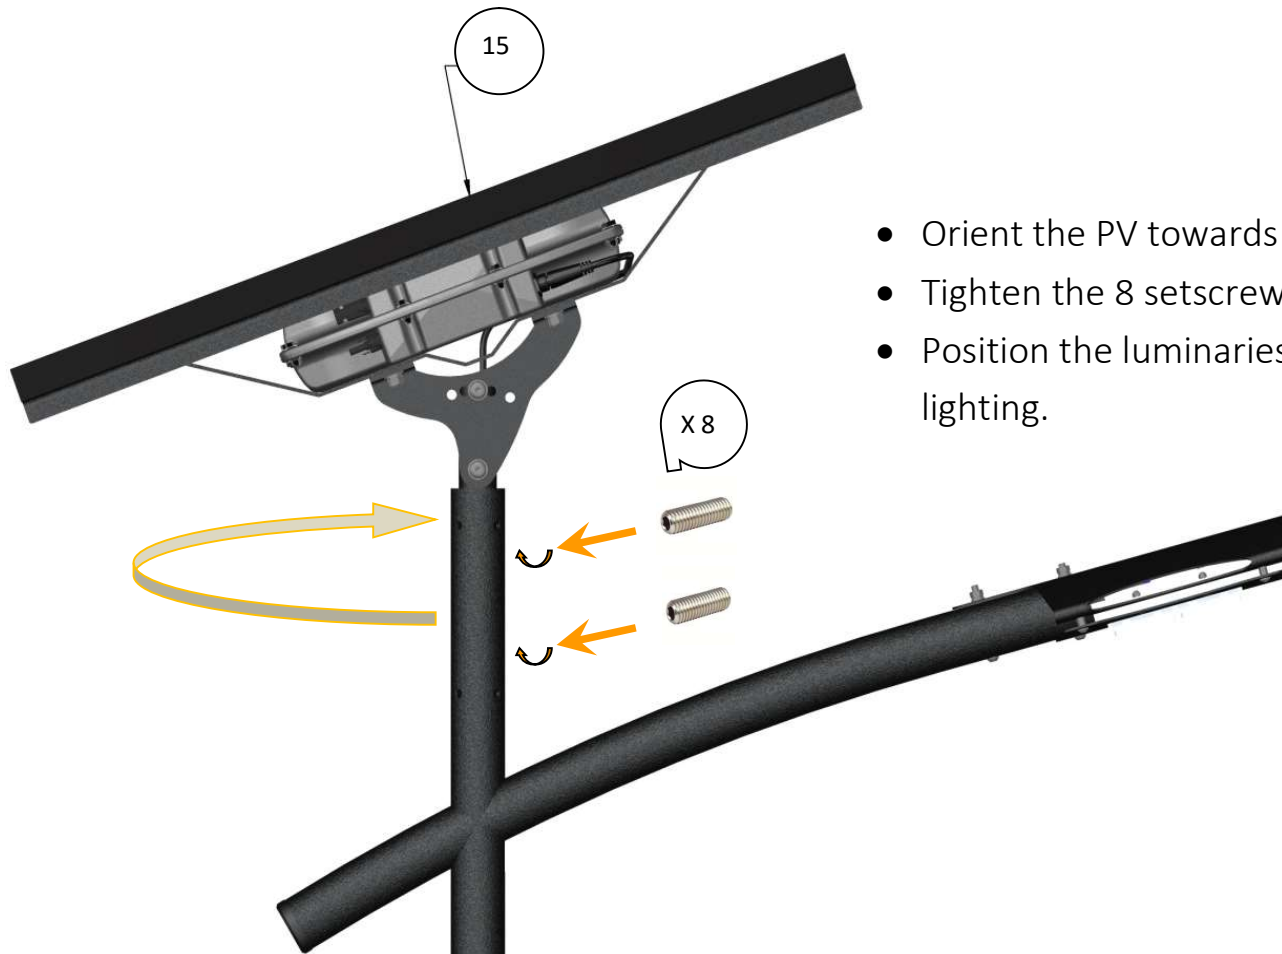

- Orient the PV towards the equator,
- Tighten the 8 setscrews,
- Position the luminaries straight in order to optimize the lighting.

12 Connect the PV to the battery

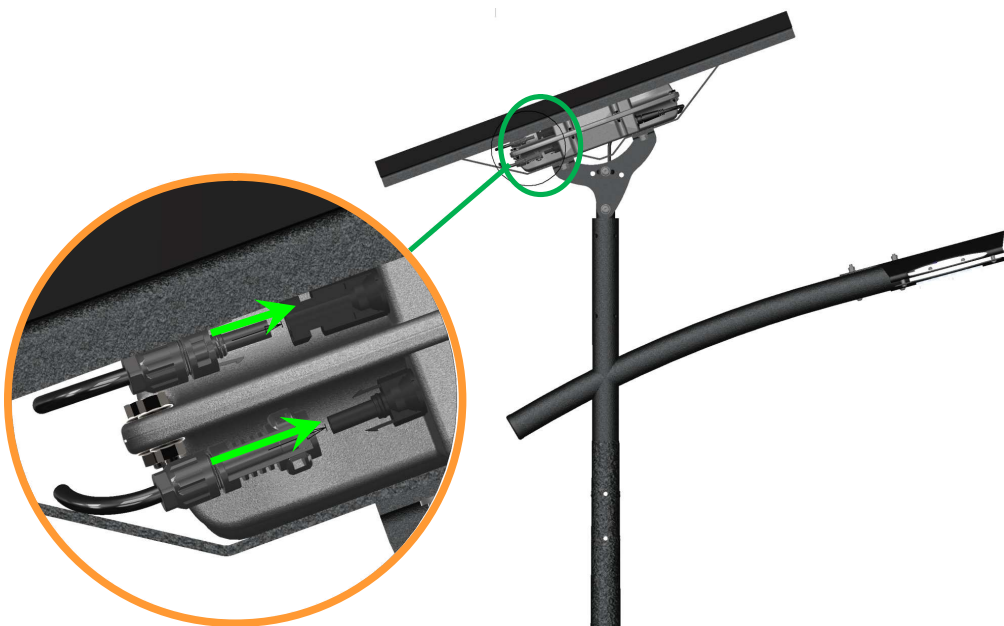

13 Initialize the battery




**Please wait 30
seconds**

*after plugging for system
activation*

14

Validate your installation

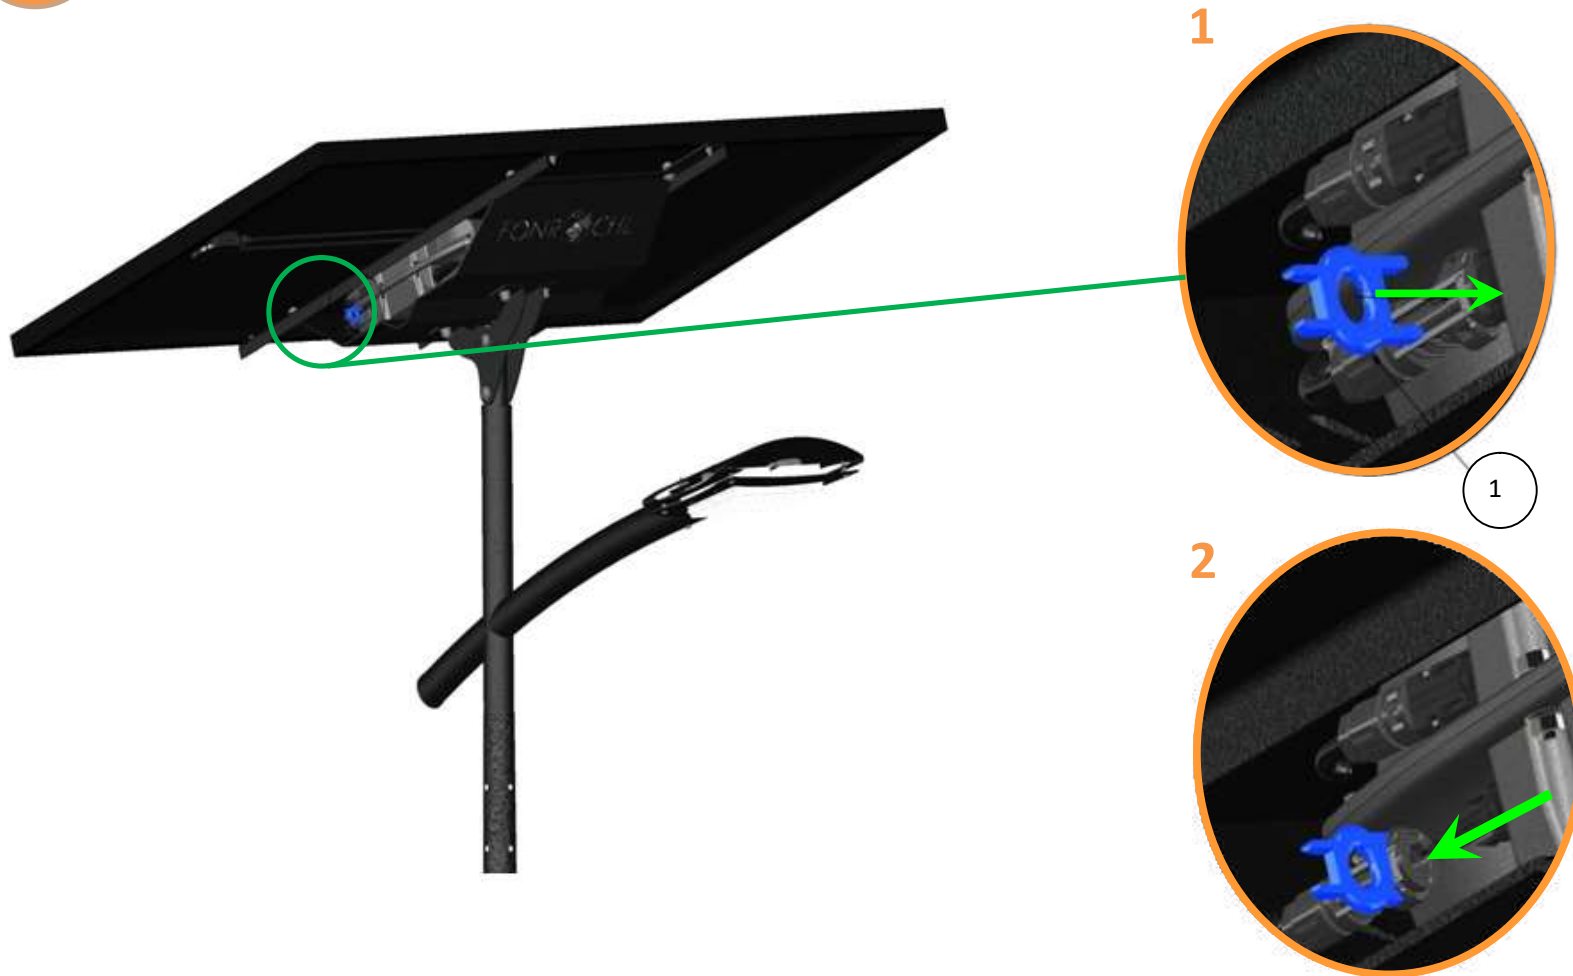

Detach one connector of each PV with the « Universal tool disconnect » n°1.

 **Wait 1 min max, light must switch ON**

Then you can reconnect the PV.



 **Wait another min max light must switch off**



If light switches OFF, installation is OK.


You can bind all the cables with cable ties.

15

Streetlight Labeling

Very Important

Box Energy serial number should be the same streetlight serial number




Streetlight pole label to be pasted and protected with a larger transparent film protection.



IMPORTANT

Degreasing and cleaning are **mandatory** on the place where the label will be affixed.

2 Meters

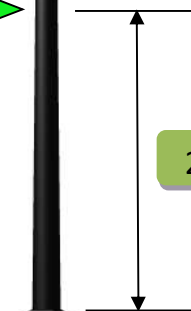

Last step of installation – Check-list

Check points	Installer check (write OK or no)
Are lanterns straight positioned to optimize the lighting?	
Are the 16 pressure screws installed and correctly tightened?	
Is the PV oriented to the south? If several solar street lights are installed, are the PVs oriented towards the same direction?	
Is the PV set to 20° tilt (unless otherwise stated)?	
Are all the cable ties installed (so that the cables will not hang anywhere)?	
Are all the parts installed on the solar streetlight? <i>If parts remain, please check on this manual to find out what has been forgotten and please be careful to install everything.</i>	
Have the nut-screws systems been correctly tightened according to the tightening torques recommended at page 4?	

Trouble shooting

Problems	Causes	Solutions
The light remains switched on during the day	Wrong connection of the PV	Check that the solar module is correctly connected to the Power 365 battery system unit.
	Defect of the solar module	Verify open circuit voltage on the cable towards the module. You should measure a voltage between 30 and 40 V. If not, the module is damaged.
The light doesn't work	Open circuit voltage during the night is higher than detection threshold for day/night detection	Check that the solar module doesn't catch stray light from the surrounding.
The light doesn't work during installation test	Bad cables connection	Check that all connectors are connected and correctly locked onto the Power 365 battery system unit.
	If the installation happens too late in the evening, the system unit doesn't detect the solar module and the system stays in low-power transport mode.	Wait until next day so that the output voltage of the solar module is high enough.
The light doesn't work after it has been working for several days	Batteries are discharged	- Check the connections of the solar module. - Check that there is no shadow on the solar module. - Check tilt angle and orientation of the solar module. - Wait some days if it is winter, if not call FONROCHE Lighting for further actions.

For any other problem, please contact FONROCHE Lighting:

sav@fonroche-lighting.com

+33 (0) 5 53 77 97 41